

CHAPTER

32

LANDING GEAR

CHAPTER 32
LANDING GEAR

CH-SC-SU	Schem	Page	Sheet	Date	CH-SC-SU	Schem	Page	Sheet	Date
32-EFFECTIVE PAGES		1 thru 2		Mar 07/2012	32-09-12 (cont.)		102.1		
32-CONTENTS								3	Oct 05/2011
		1		Oct 05/2011	32-30-00		101	1	May 09/2011
R		2		Mar 07/2012				2	May 09/2011
32-ALPHABETICAL INDEX					32-35-11		101		May 09/2011
		1		May 02/2008					
		2		BLANK	32-40-00		101		Jun 30/2009
32-00-00									
		101	1	May 09/2011	32-41-11		101		Mar 07/2012
			2	Jan 11/2006				1	Mar 07/2012
32-09-11								2	Mar 07/2012
		101	1	Jan 11/2006	32-42-11		101	1	Jun 30/2009
			2	Jan 11/2006				2	Jun 30/2009
			3	Jun 30/2009				3	Jan 11/2006
32-09-12					32-44-11		101		Jan 11/2006
		101	1	Jun 30/2009					
			2	Jan 11/2006	32-51-11		101		May 02/2008
			3	Jun 30/2009					
		102	1	Jun 30/2009	32-61-11		101		Jan 11/2006
			2	Jan 11/2006					
			3	Jun 30/2009			102		Jun 30/2009
		102.1	1	Oct 05/2011					
			2	Oct 05/2011					

A = Added, R = Revised, D = Deleted, O = Overflow

32-EFFECTIVE PAGES

Page 1
Mar 07/2012

D280A238

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

CHAPTER 32
LANDING GEAR

CH-SC-SU	Schem	Page	Sheet	Date	CH-SC-SU	Schem	Page	Sheet	Date
32-61-12		101		May 02/2008					
32-61-21		101	1	May 02/2008					
			2	Jun 30/2009					
			3	Jun 30/2009					
			4	Jun 30/2009					

A = Added, R = Revised, D = Deleted, O = Overflow

32-EFFECTIVE PAGES

Page 2
Mar 07/2012

D280A238

**CHAPTER 32
LANDING GEAR**

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
<u>LANDING GEAR</u>						
LANDING GEAR SYSTEMS- SIMPLIFIED	32-00-00		101	1	May 09/2011	ALL
				2	Jan 11/2006	ALL
<u>AIR/GROUND SYSTEM</u>						
AIR/GND SYSTEM 1 & LEVER LATCH	32-09-11		101	1	Jan 11/2006	YD001-YD007
				2	Jan 11/2006	YD001-YD007
				3	Jun 30/2009	YD001-YD007
AIR/GND SYSTEM 2 AND NOSE GEAR GROUND SENSING RELAYS	32-09-12		101	1	Jun 30/2009	YD001-YD005
				2	Jan 11/2006	YD001-YD005
				3	Jun 30/2009	YD001-YD005
			102	1	Jun 30/2009	YD006-YD007
				2	Jan 11/2006	YD006-YD007
				3	Jun 30/2009	YD006-YD007
			102.1	1	Oct 05/2011	YD006
				2	Oct 05/2011	YD006
				3	Oct 05/2011	YD006
<u>EXTENSION AND RETRACTION</u>						
LANDING GEAR EXTENSION AND RETRACTION	32-30-00		101	1	May 09/2011	ALL
				2	May 09/2011	ALL
<u>ALTERNATE EXTENSION</u>						
ALTERNATE LANDING GEAR EXTENSION SYSTEM	32-35-11		101		May 09/2011	ALL

CHAPTER 32 LANDING GEAR

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
<u>WHEELS AND BRAKES</u>						
BRAKE SYSTEM	32-40-00		101		Jun 30/2009	ALL
<u>ANTISKID BRAKE SYSTEM</u>						
ANTISKID SYSTEM	32-41-11		101	1	Mar 07/2012	ALL
				2	Mar 07/2012	ALL
<u>AUTOBRAKE SYSTEM</u>						
AUTOBRAKE SYSTEM	32-42-11		101	1	Jun 30/2009	ALL
				2	Jun 30/2009	ALL
				3	Jan 11/2006	ALL
<u>PARKING BRAKE SYSTEM</u>						
PARKING BRAKE SYSTEM	32-44-11		101		Jan 11/2006	ALL
<u>NOSE WHEEL STEERING SYSTEM</u>						
NOSE GEAR STEERING	32-51-11		101		May 02/2008	ALL
<u>LANDING GEAR POSITION INDICATING AND WARNING SYSTEM</u>						
LANDING GEAR POSITION INDICATION SYSTEM 1	32-61-11		101		Jan 11/2006	YD001-YD005
			102		Jun 30/2009	YD006-YD020
LANDING GEAR POSITION INDICATION SYSTEM 2	32-61-12		101		May 02/2008	YD001-YD007
LANDING GEAR WARNING	32-61-21		101	1	May 02/2008	YD001-YD007
				2	Jun 30/2009	YD001-YD007
				3	Jun 30/2009	YD001-YD007
				4	Jun 30/2009	YD001-YD007

32-CONTENTS

Page 2
Mar 07/2012

D280A238

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

CHAPTER 32 LANDING GEAR

CH-SC-SU	Title
32-09-11	AIR/GND SYSTEM 1 & LEVER LATCH
32-09-12	AIR/GND SYSTEM 2 AND NOSE GEAR GROUND SENSING RELAYS
32-35-11	ALTERNATE LANDING GEAR EXTENSION SYSTEM
32-41-11	ANTISKID SYSTEM
32-42-11	AUTOBRAKE SYSTEM
32-40-00	BRAKE SYSTEM
32-30-00	LANDING GEAR EXTENSION AND RETRACTION
32-61-11	LANDING GEAR POSITION INDICATION SYSTEM 1
32-61-12	LANDING GEAR POSITION INDICATION SYSTEM 2
32-00-00	LANDING GEAR SYSTEMS- SIMPLIFIED
32-61-21	LANDING GEAR WARNING
32-51-11	NOSE GEAR STEERING
32-44-11	PARKING BRAKE SYSTEM

CH-SC-SU	Title


32-ALPHABETICAL INDEX

D280A238

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 1
May 02/2008

 THIS PAGE INTENTIONALLY LEFT BLANK

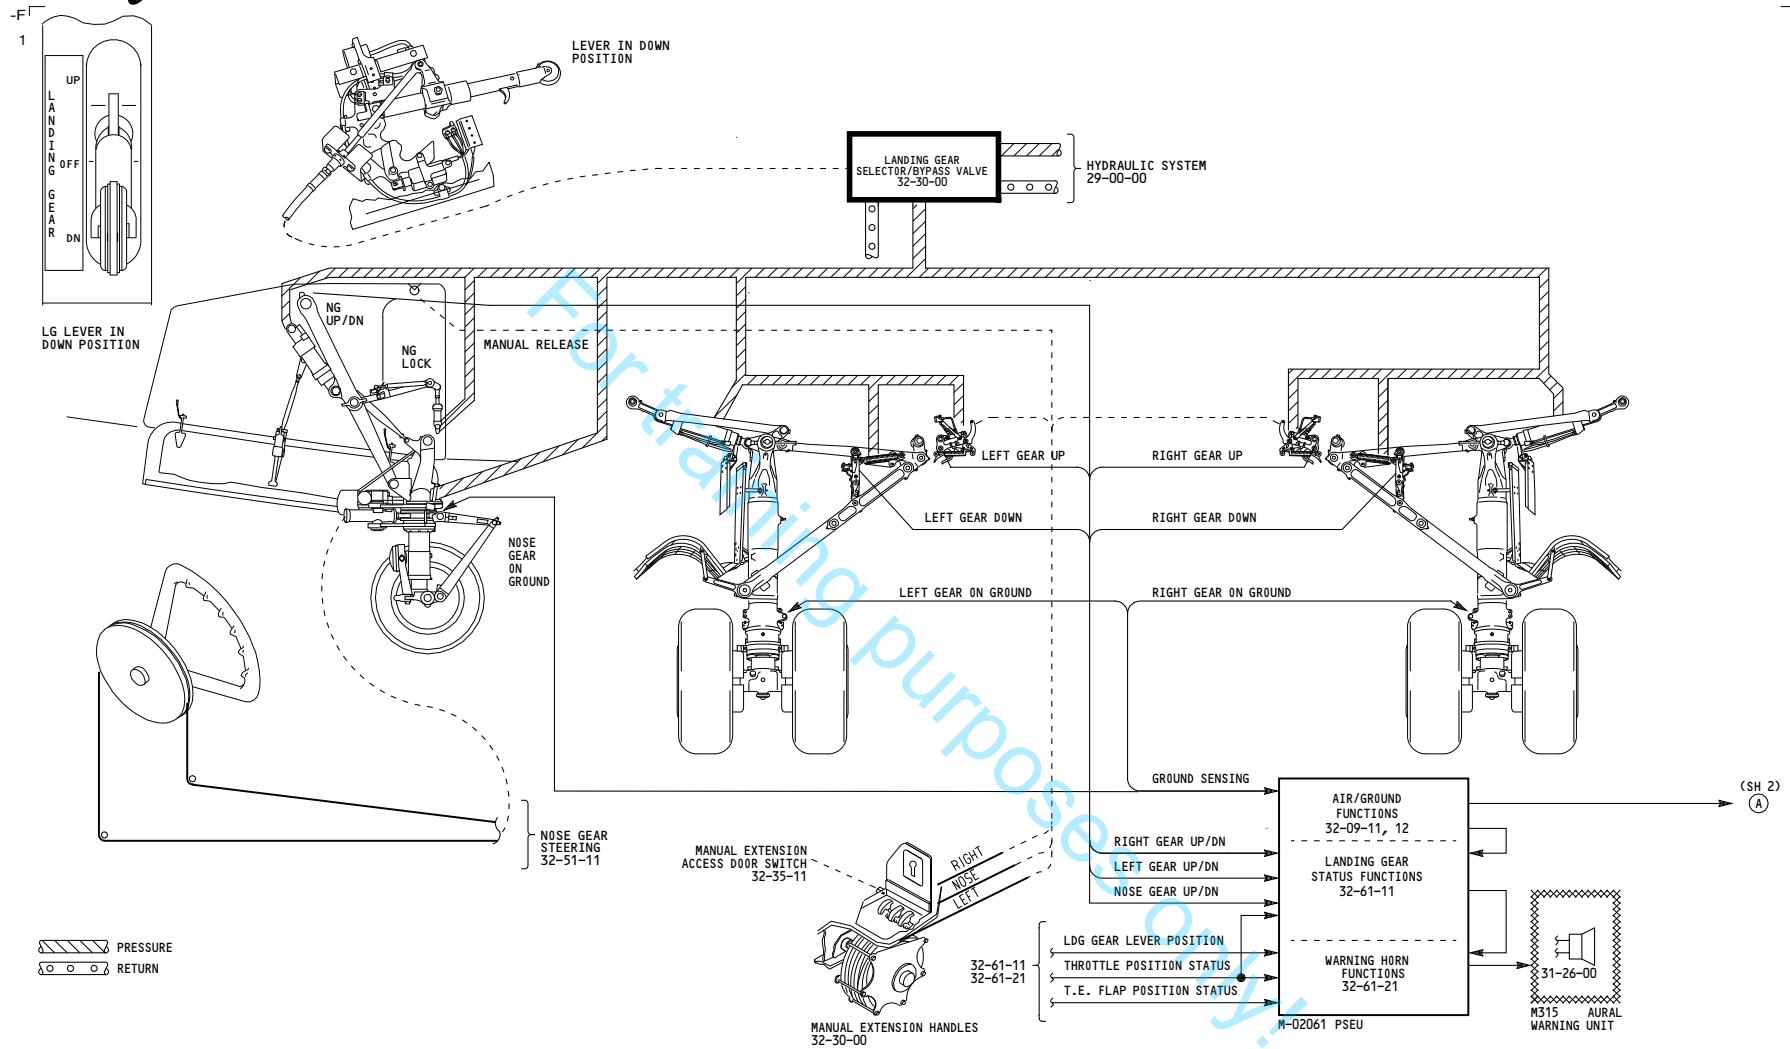


ALL	LANDING GEAR SYSTEMS- SIMPLIFIED
	D280A238

32-00-00

Page 101
 Sheet 1
 May 09/2011

 
-H
1

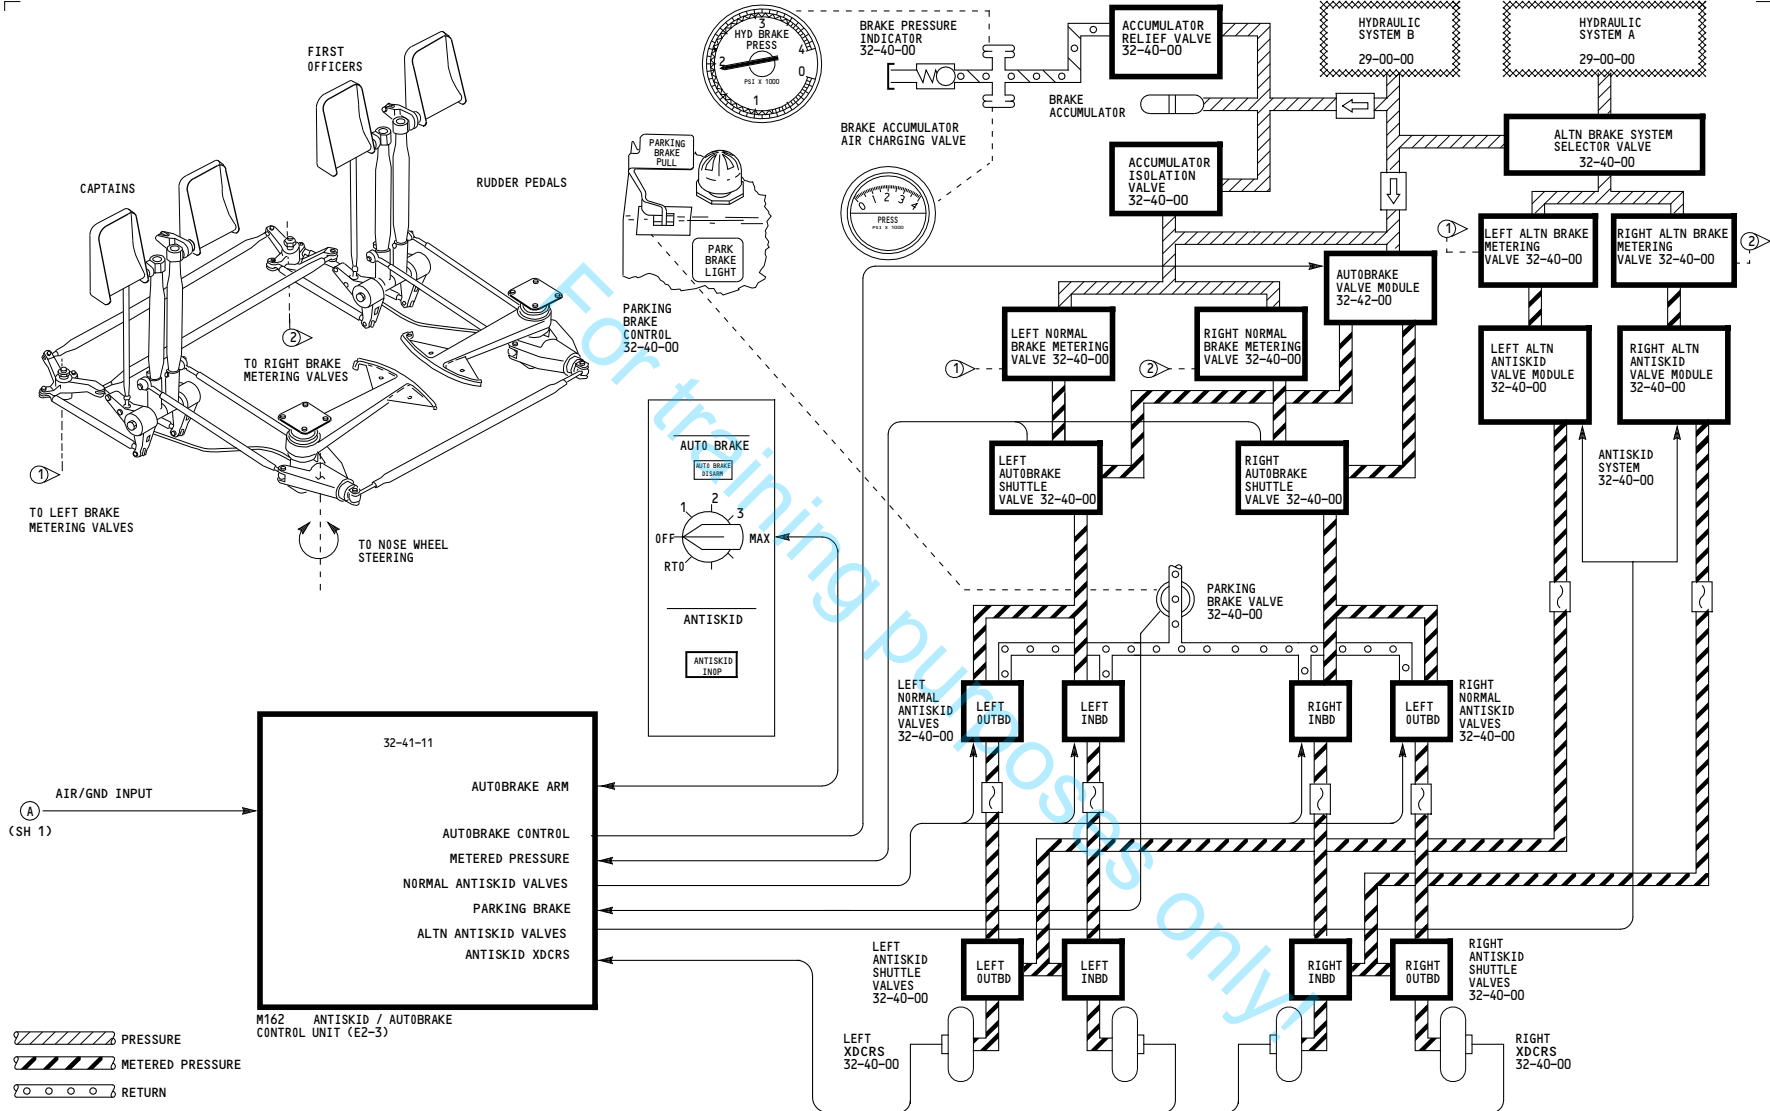

ALL	LANDING GEAR SYSTEMS- SIMPLIFIED
	D280A238

32-00-00

 Page 101
Sheet 2
Jan 11/2006

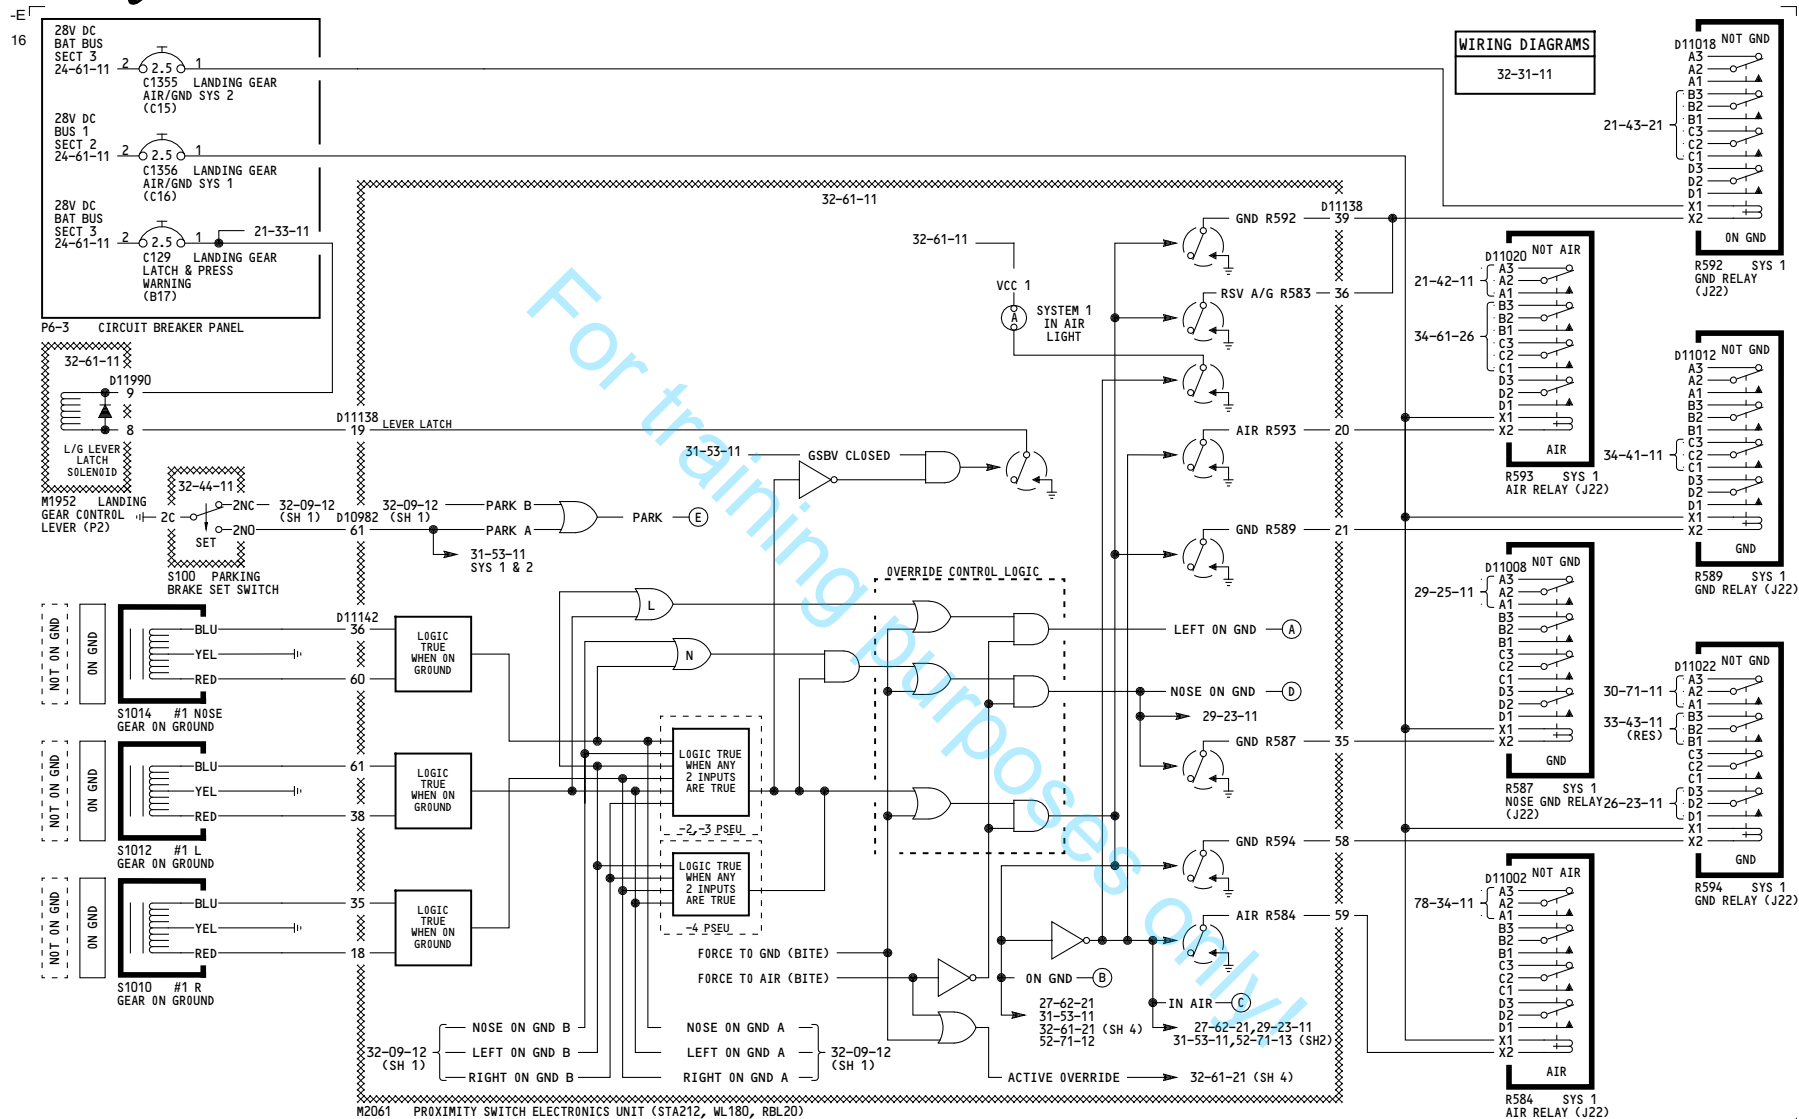


YD001-YD007

AIR/GND SYSTEM 1 & LEVER LATCH

D280A238

32-09-11

 Page 101
Sheet 1
Jan 11/2006

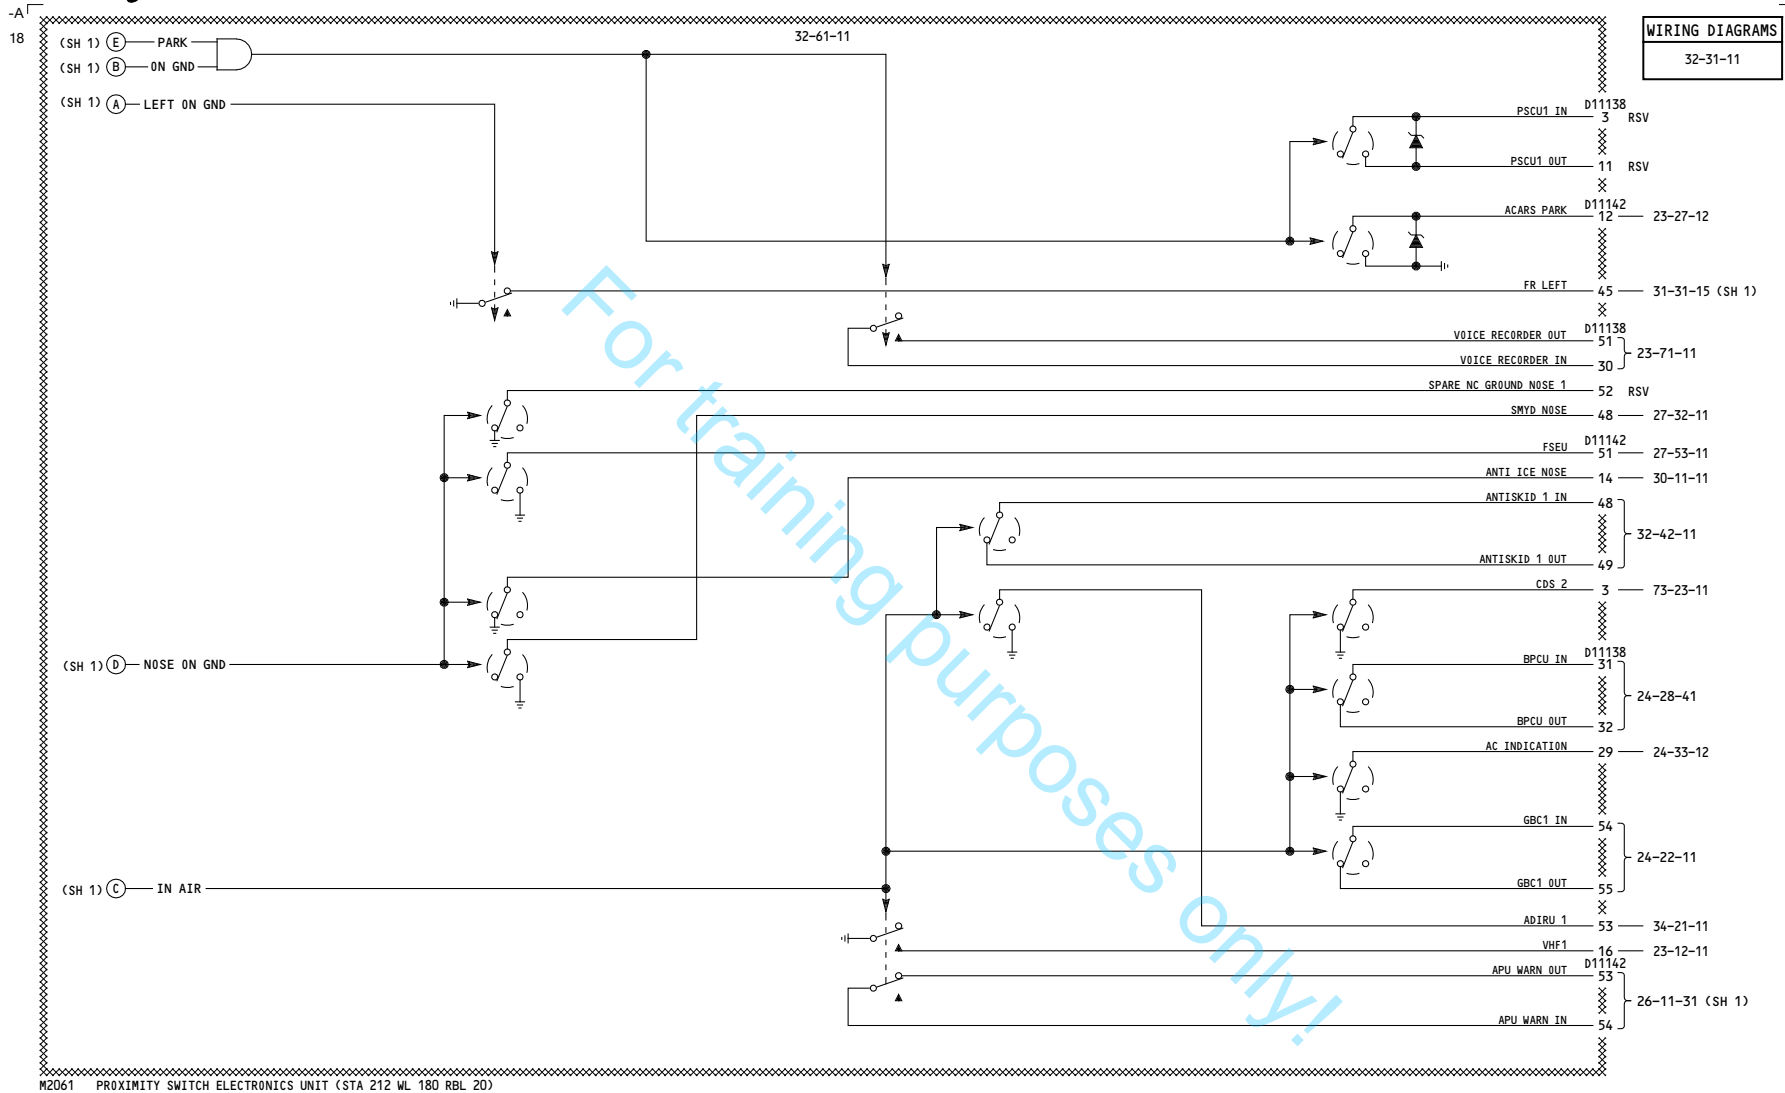


YD001-YD007

**AIR/GND SYSTEM 1 & LEVER
LATCH**

D280A238

32-09-11

 Page 101
Sheet 2
Jan 11/2006

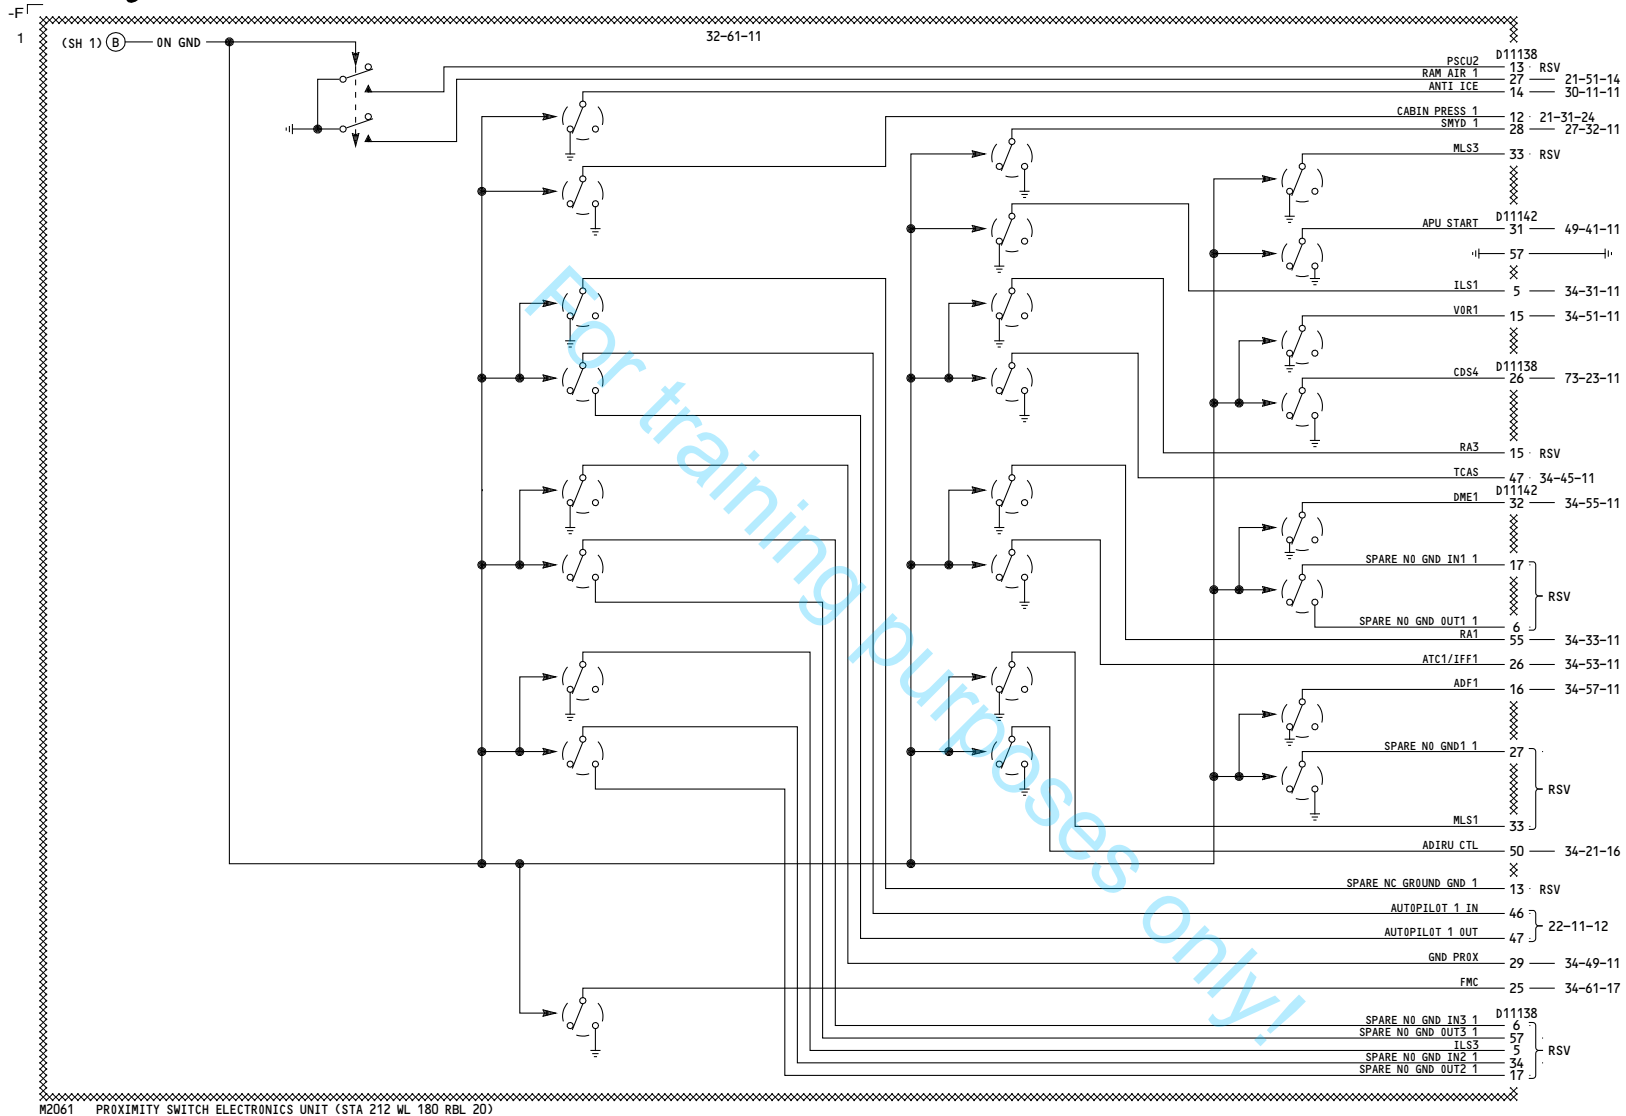

WIRING DIAGRAMS
32-31-11

YD001-YD007


**AIR/GND SYSTEM 1 & LEVER
LATCH**

D280A238

32-09-11

Page 101
Sheet 3
Jun 30/2009

 THIS PAGE INTENTIONALLY LEFT BLANK

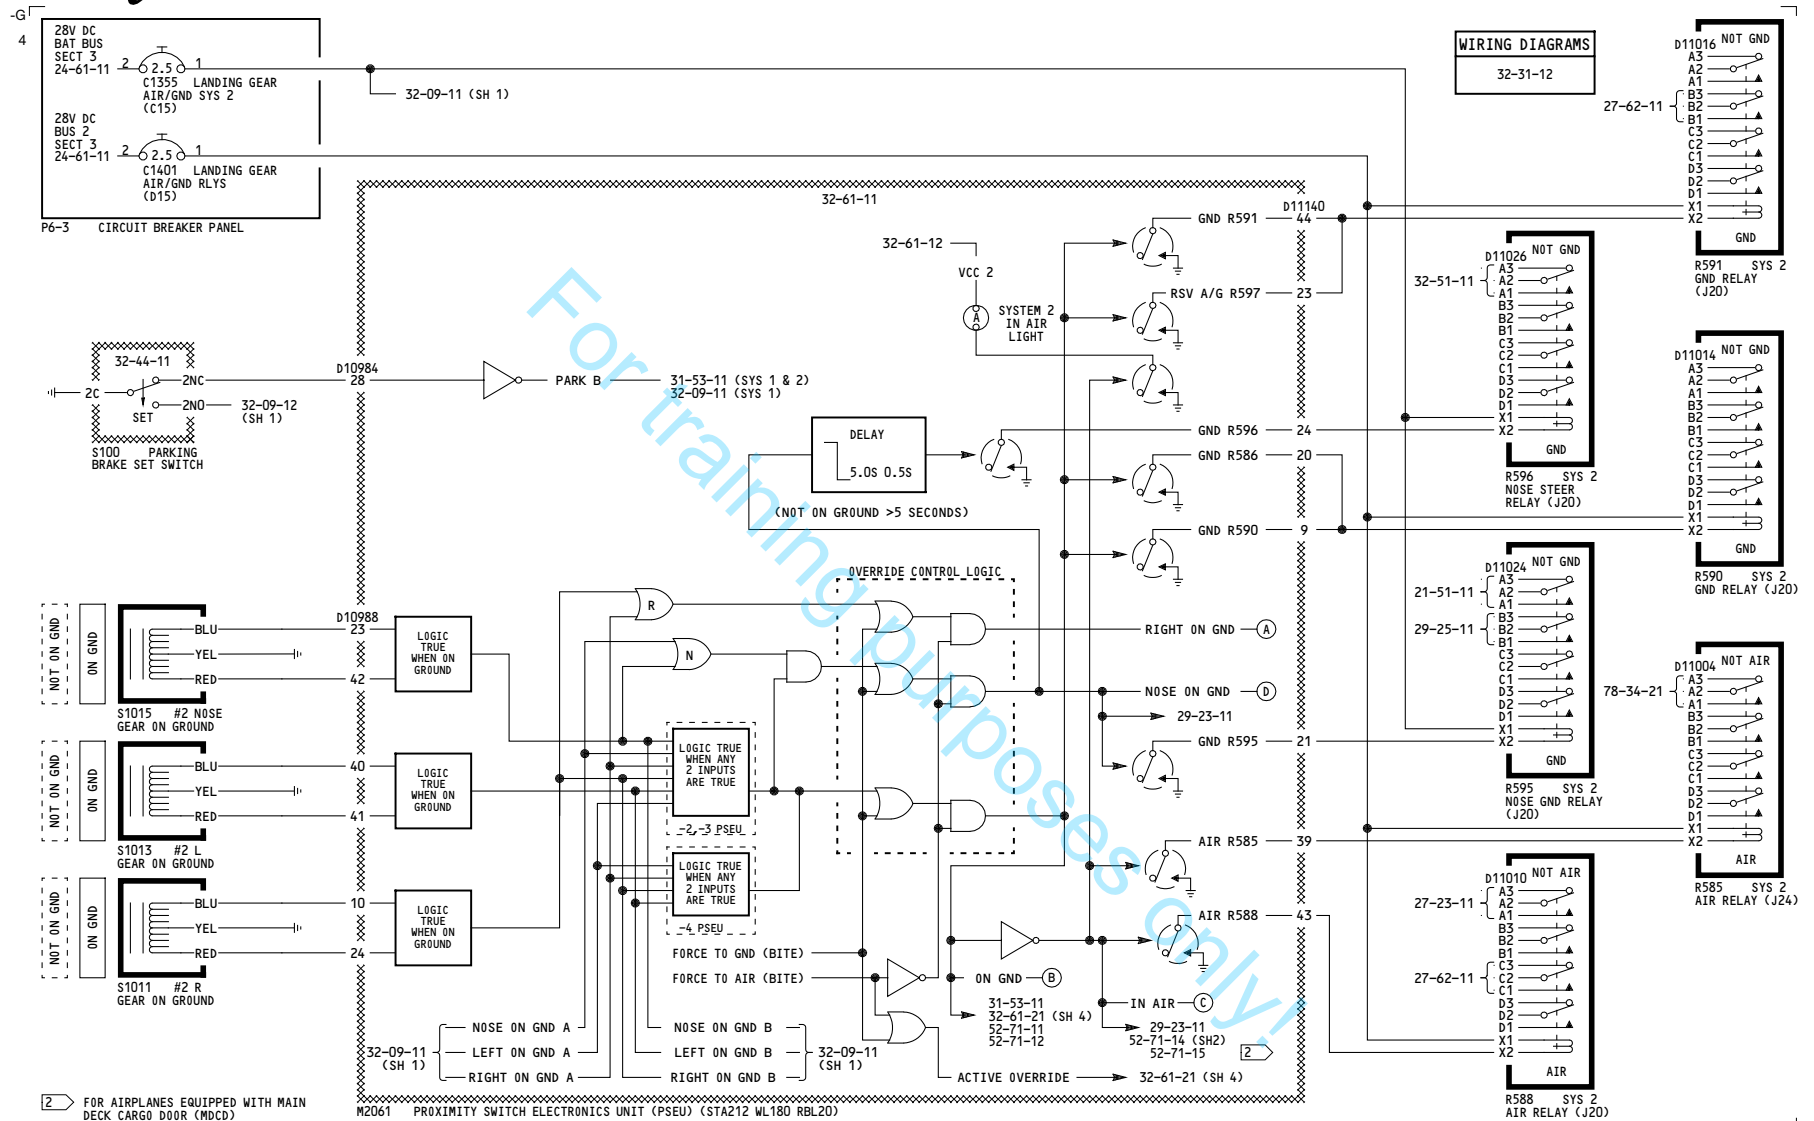


YD001-YD005

AIR/GND SYSTEM 2 AND NOSE GEAR GROUND SENSING RELAYS

D280A238

32-09-12

 Page 101
Sheet 1
Jun 30/2009

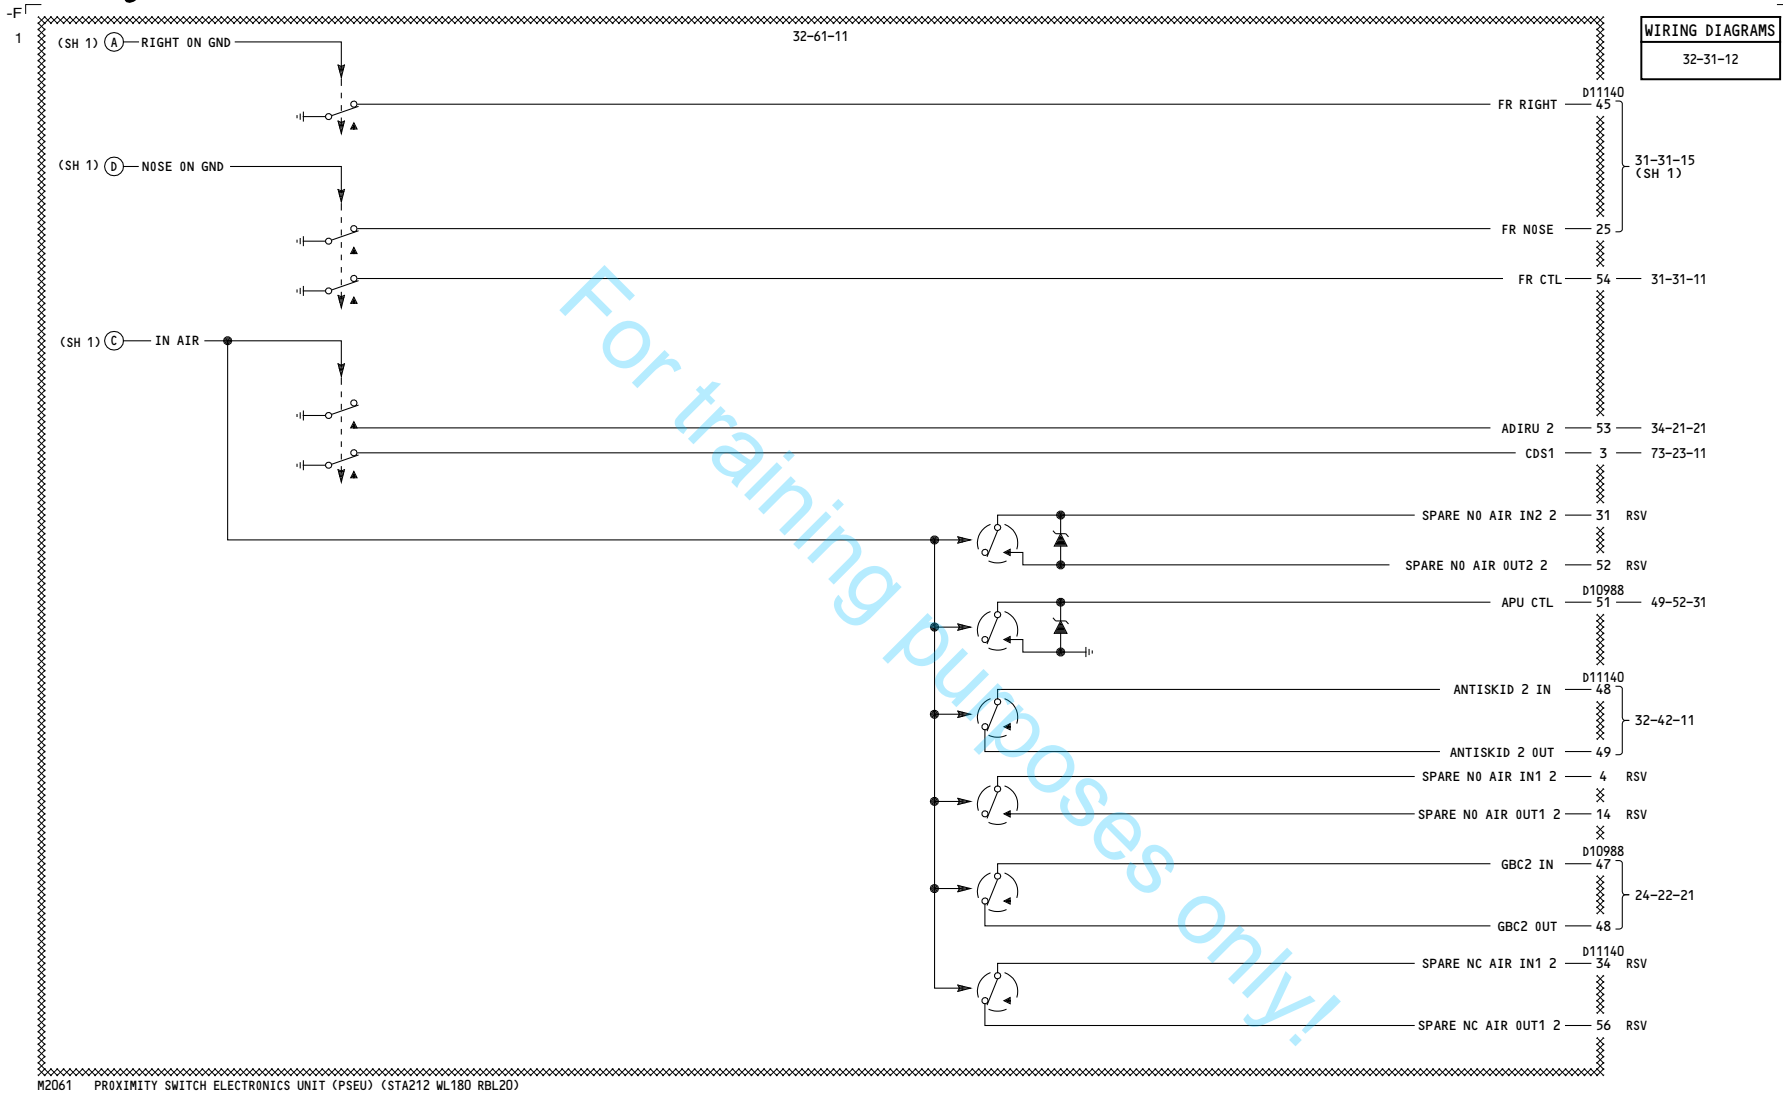


YD001-YD005

AIR/GND SYSTEM 2 AND
NOSE GEAR GROUND SENSING
RELAYS

D280A238

32-09-12

 Page 101
Sheet 2
Jan 11/2006

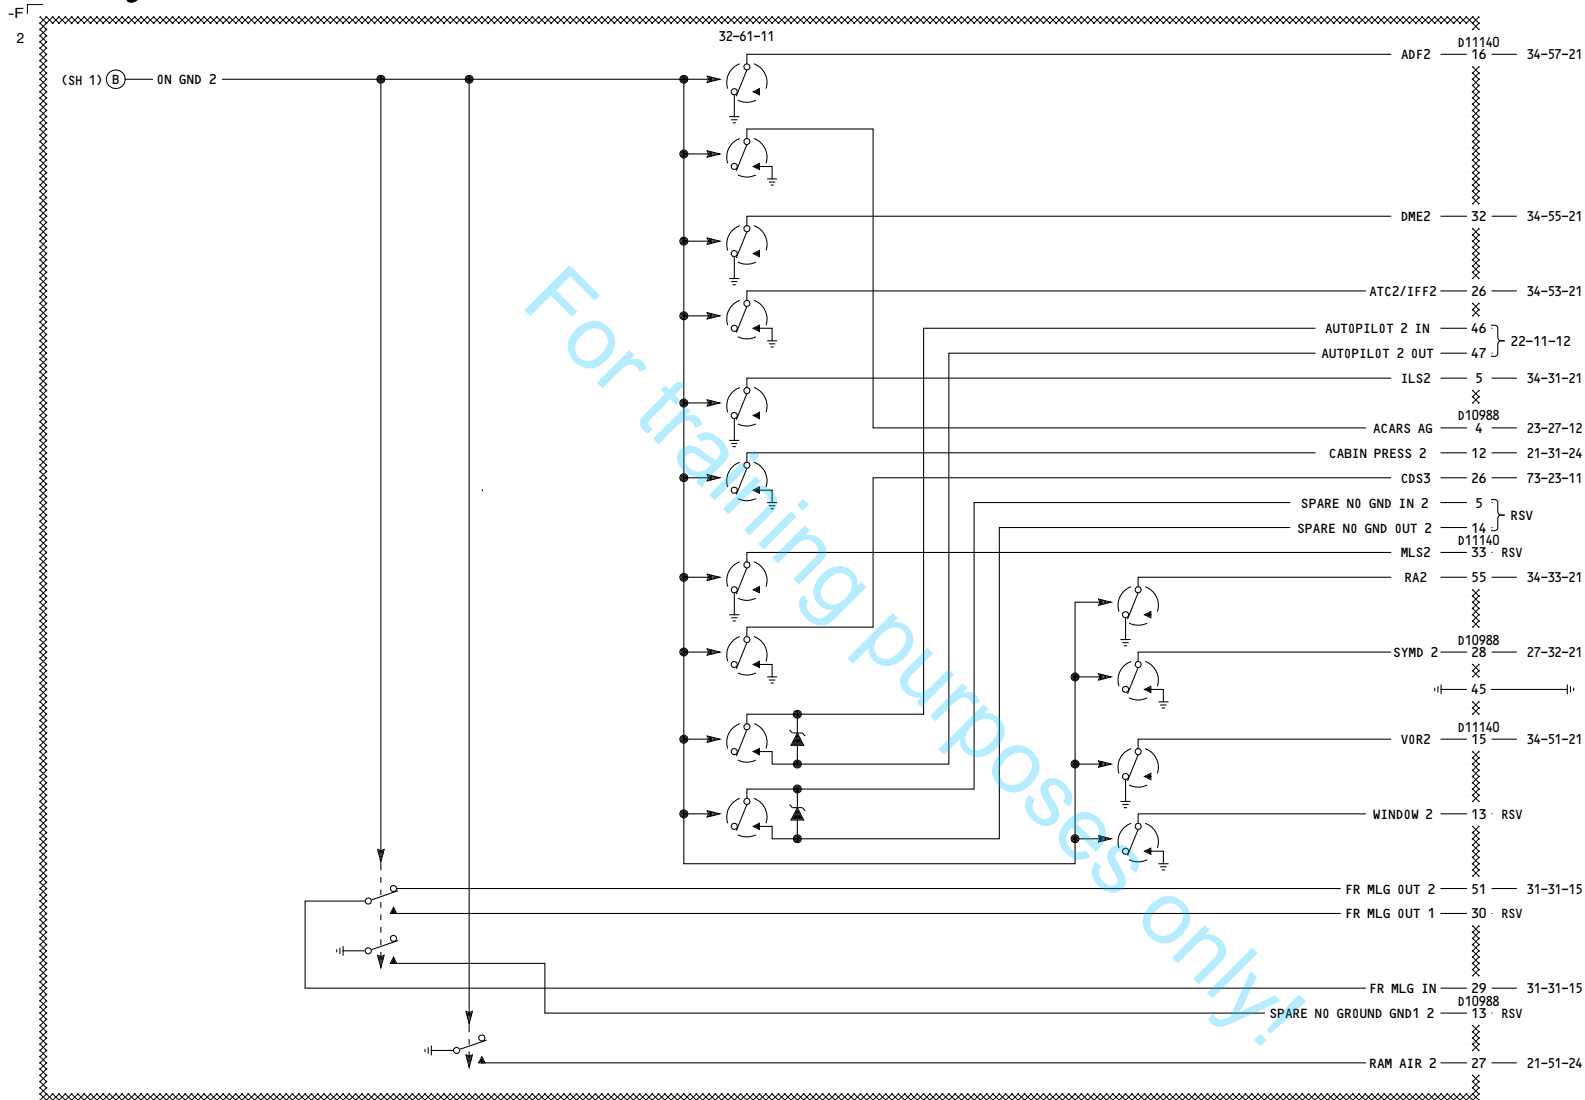

M2061 PROXIMITY SWITCH ELECTRONICS UNIT (PSEU) (STA212 WL180 RBL20)

YD001-YD005


AIR/GND SYSTEM 2 AND NOSE GEAR GROUND SENSING RELAYS

D280A238

32-09-12

Page 101
Sheet 3
Jun 30/2009

 THIS PAGE INTENTIONALLY LEFT BLANK

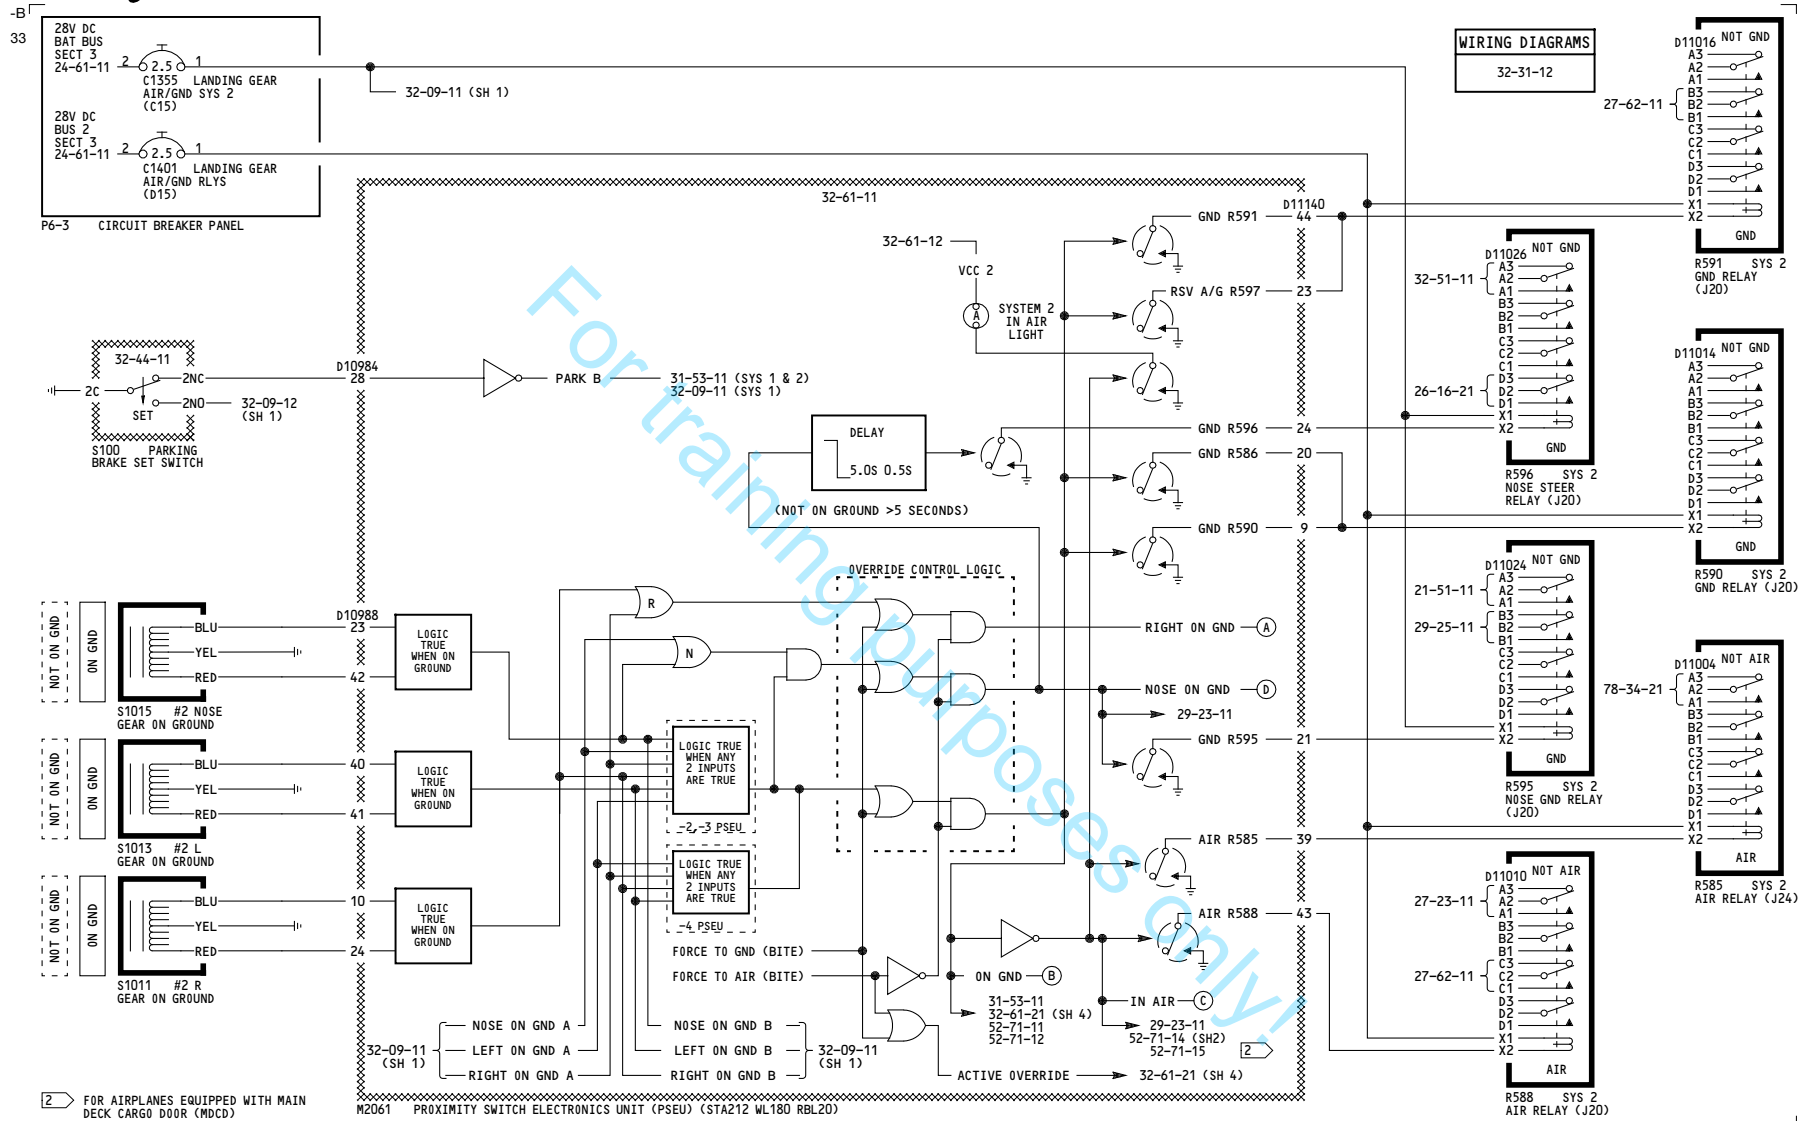


YD006-YD007

AIR/GND SYSTEM 2 AND NOSE GEAR GROUND SENSING RELAYS

D280A238

32-09-12

 Page 102
Sheet 1
Jun 30/2009

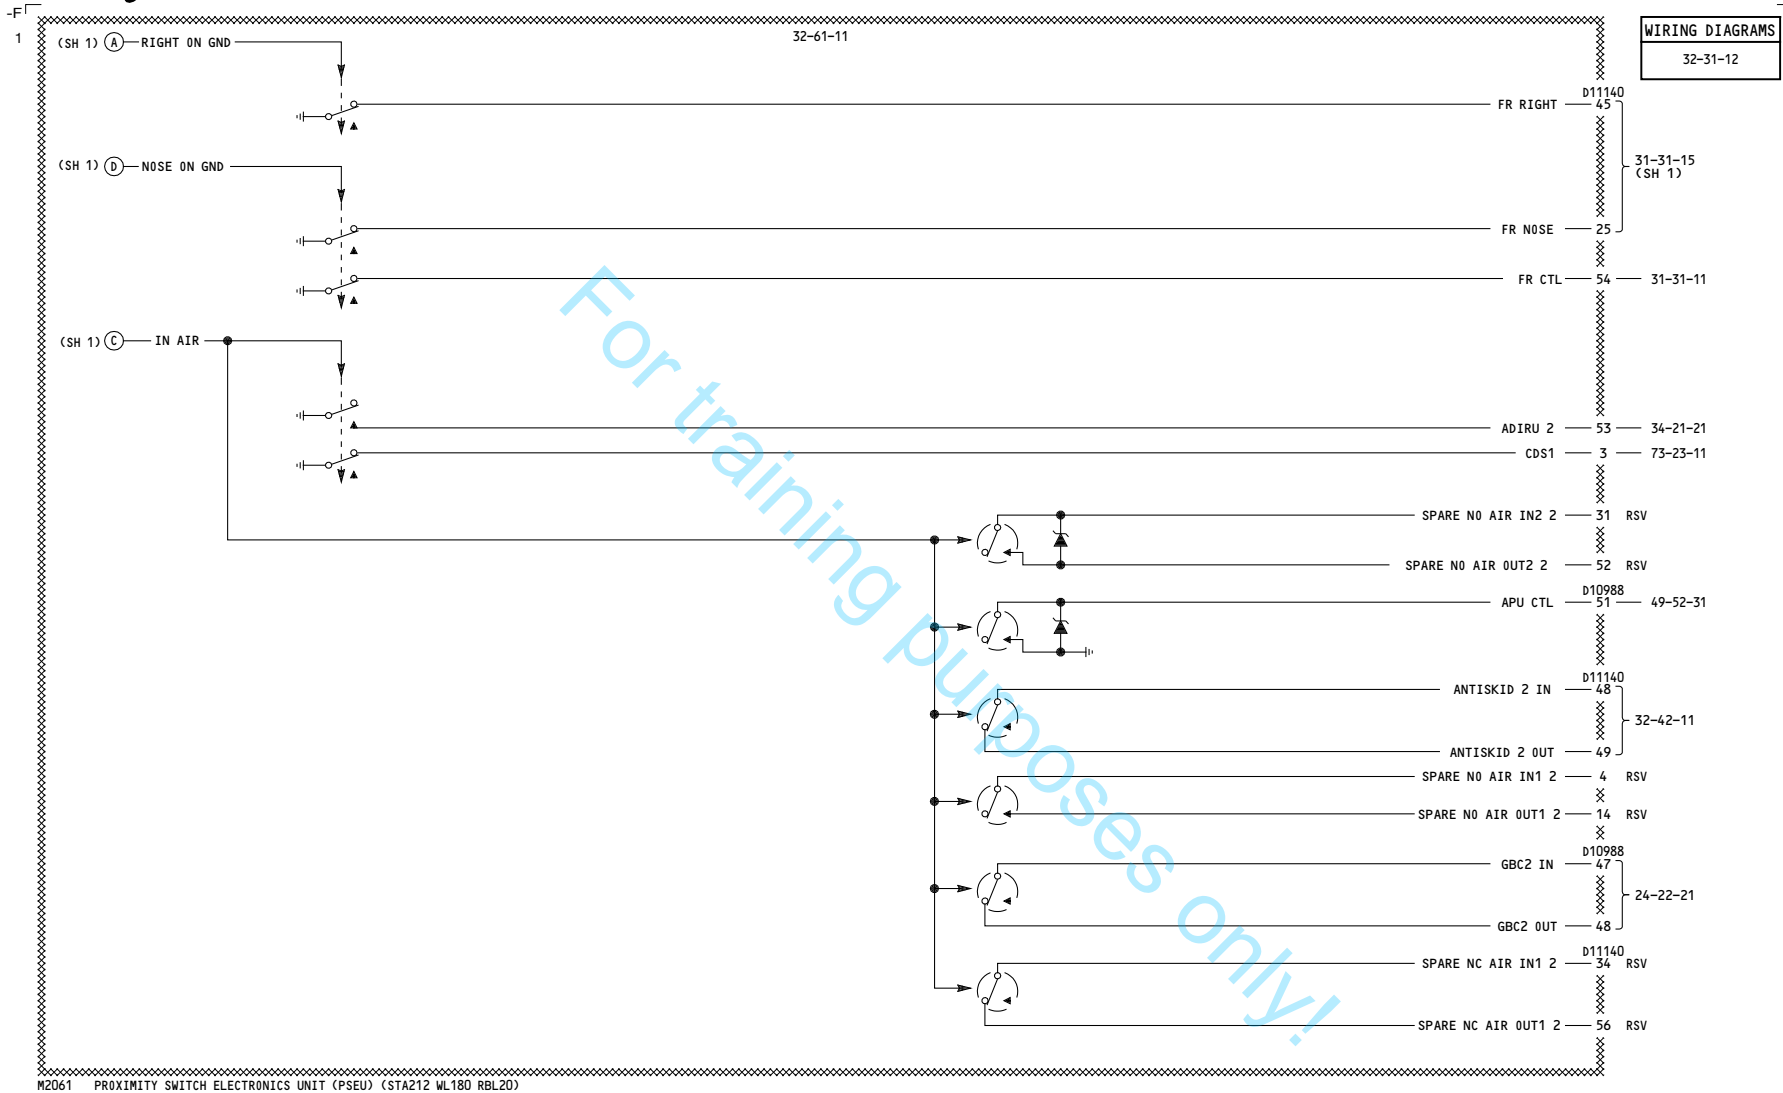


YD006-YD007

AIR/GND SYSTEM 2 AND
NOSE GEAR GROUND SENSING
RELAYS

D280A238

32-09-12

 Page 102
Sheet 2
Jan 11/2006

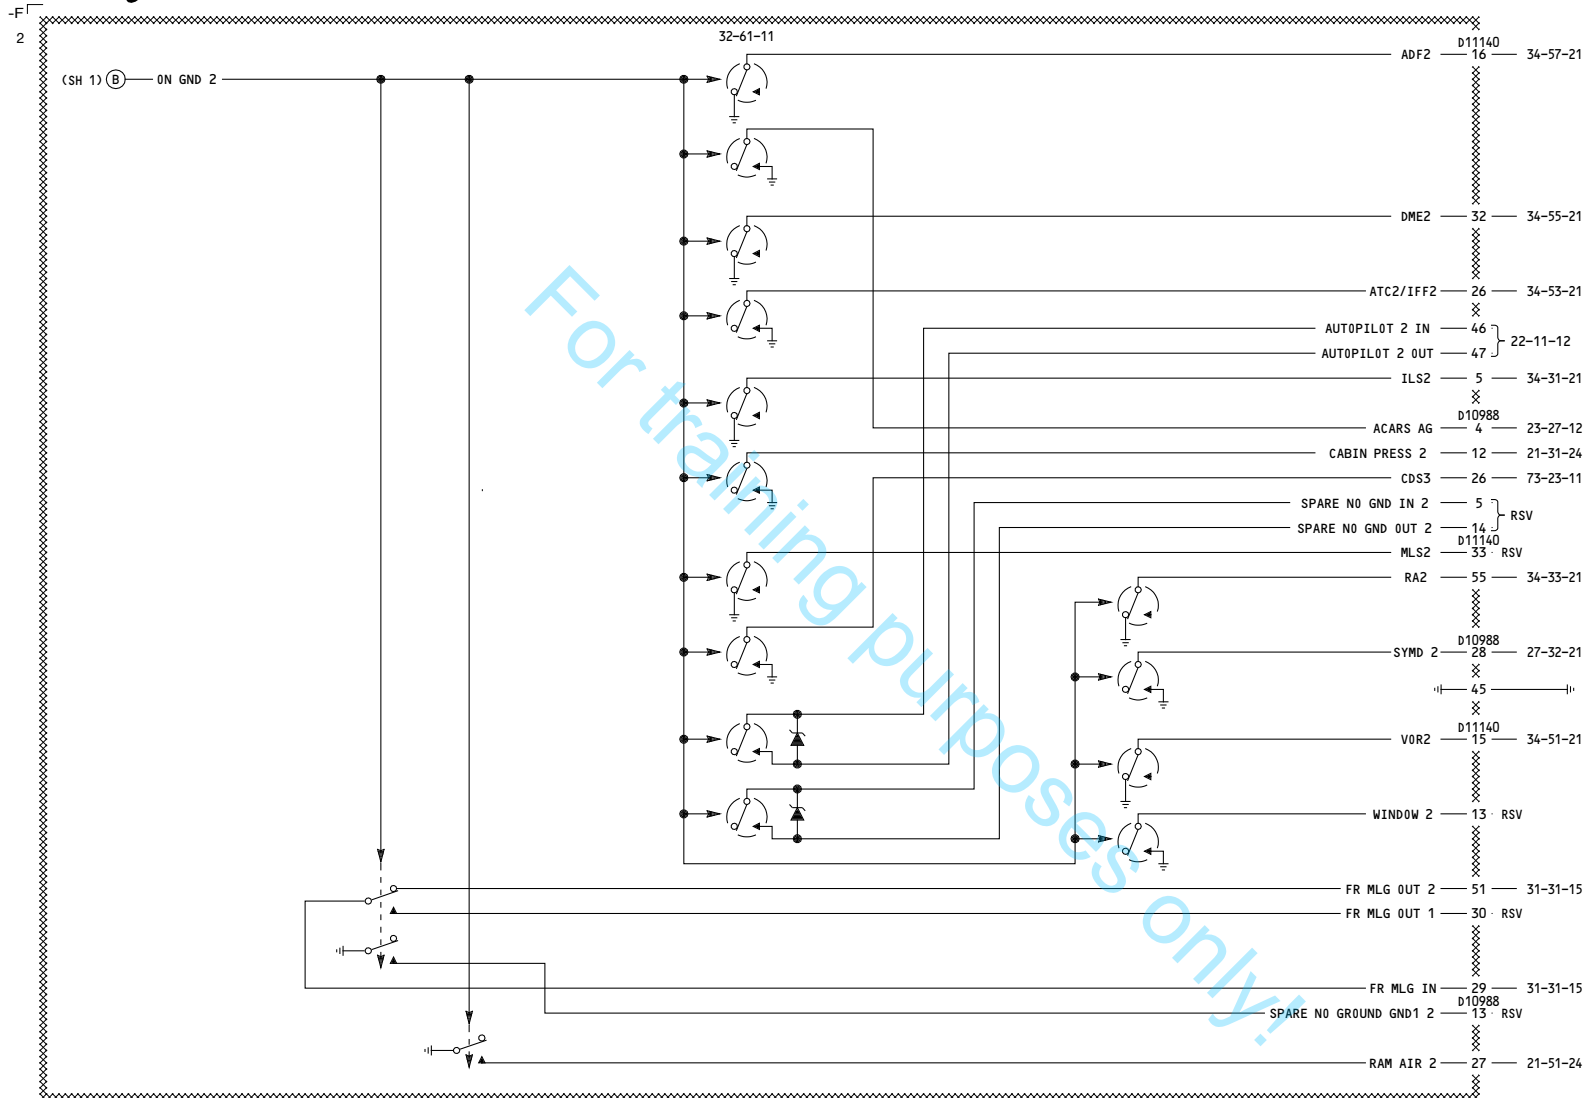

M2061 PROXIMITY SWITCH ELECTRONICS UNIT (PSEU) (STA212 WL180 RBL20)

YD006-YD007

AIR/GND SYSTEM 2 AND NOSE GEAR GROUND SENSING RELAYS

D280A238

32-09-12


Page 102
Sheet 3
Jun 30/2009

THIS PAGE INTENTIONALLY LEFT BLANK



D280A238

 Page 102.1
Sheet 1
Oct 05/2011

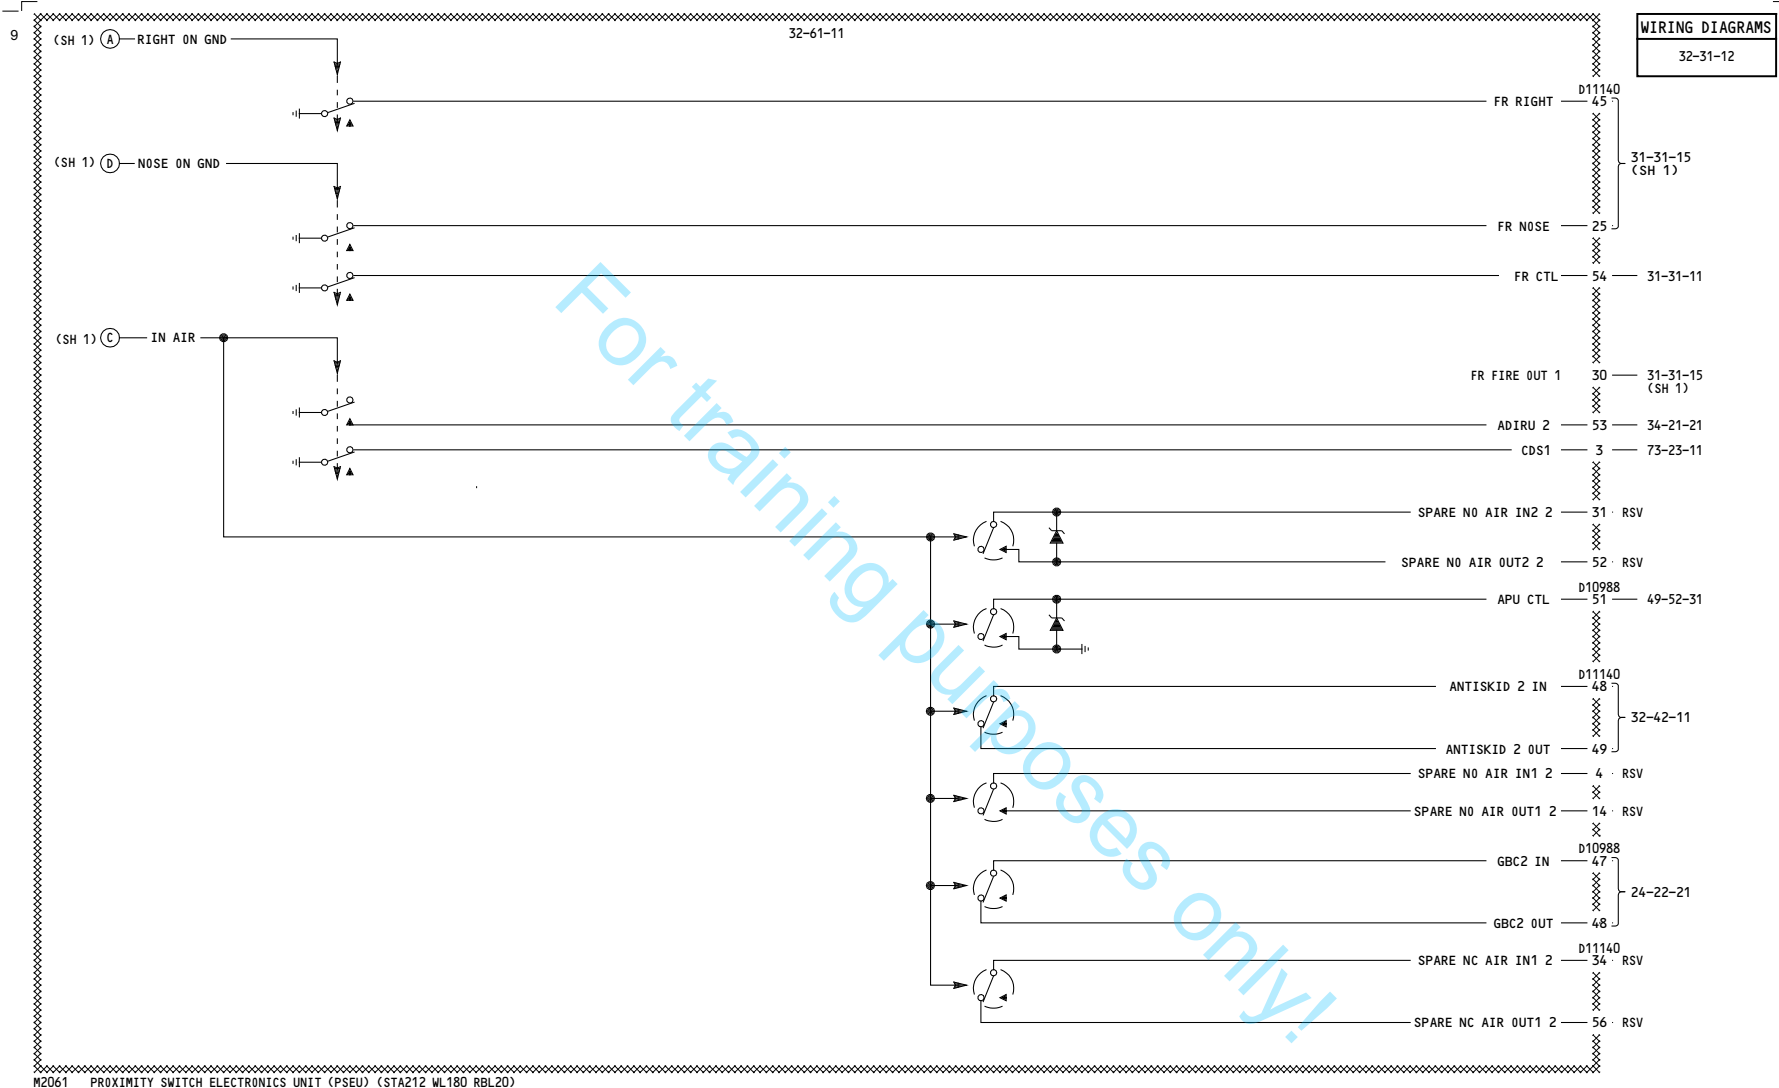

YD006


**AIR/GND SYSTEM 2 AND
NOSE GEAR GROUND SENSING
RELAYS**

D280A238

Incorporates
31-1449 R01

32-09-12

 Page 102.1
Sheet 2
Oct 05/2011

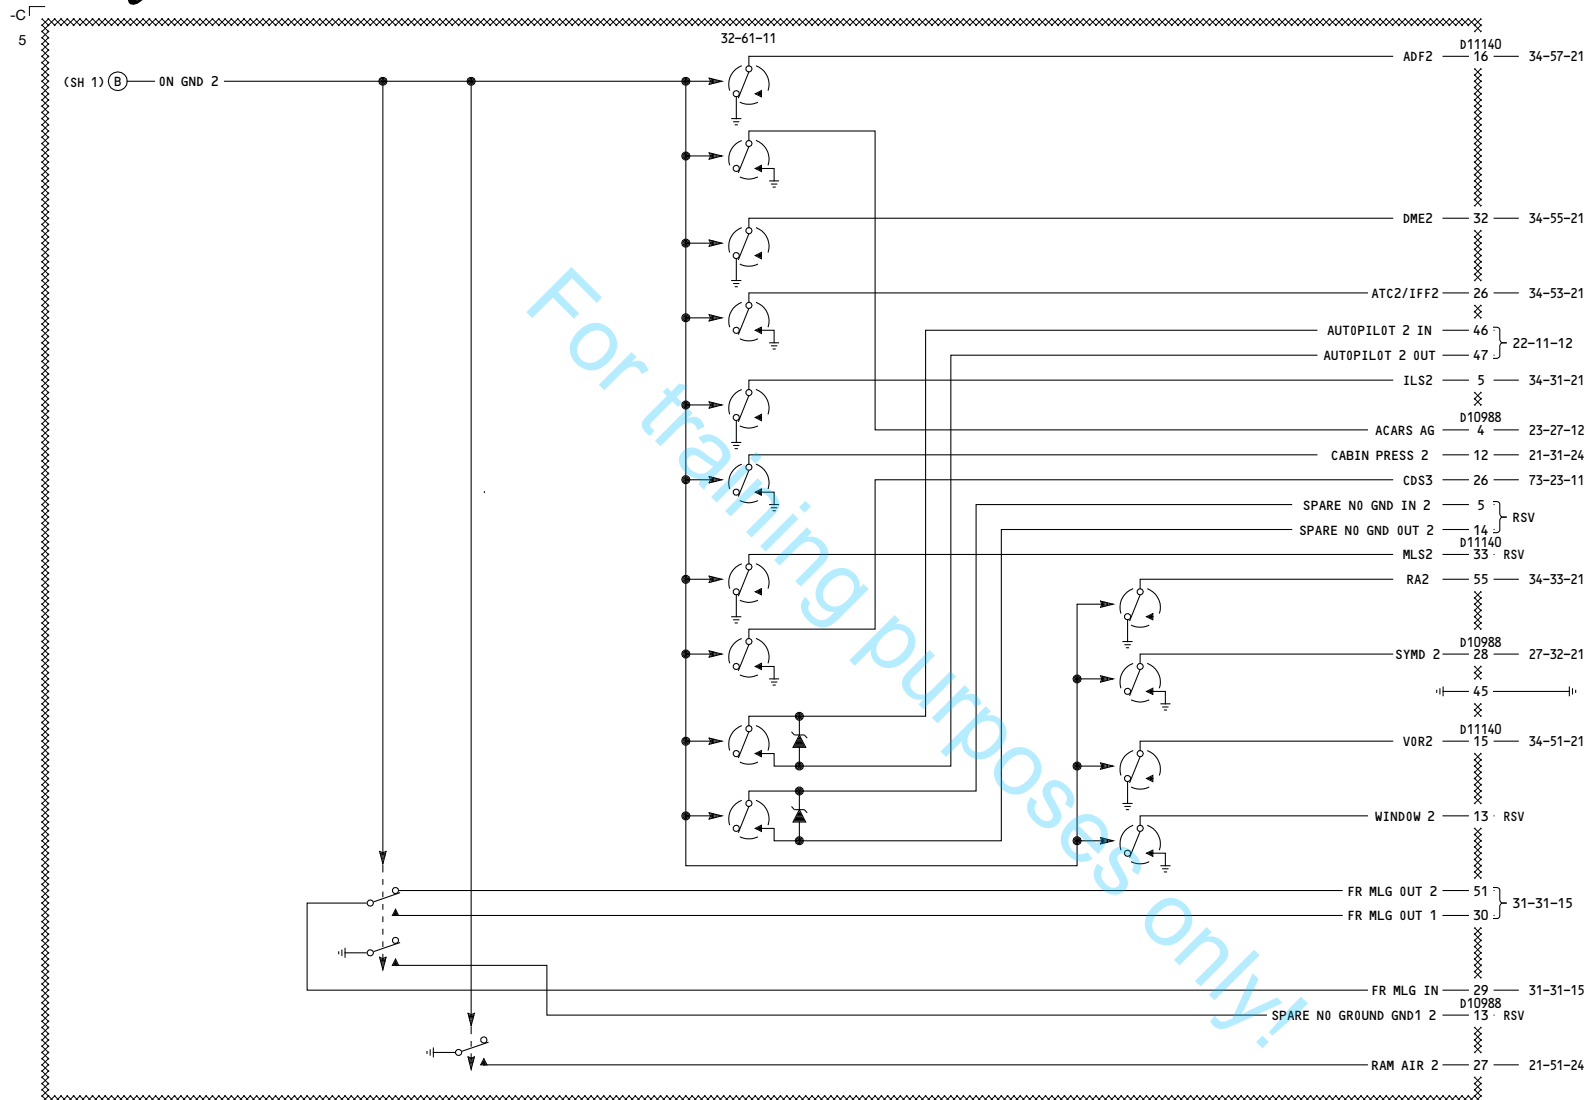

M2061 PROXIMITY SWITCH ELECTRONICS UNIT (PSEU) (STA212 WL180 RBL20)

YD006

AIR/GND SYSTEM 2 AND NOSE GEAR GROUND SENSING RELAYS


Incorporates
31-1449 R01

D280A238

32-09-12

Page 102.1
Sheet 3
Oct 05/2011

 THIS PAGE INTENTIONALLY LEFT BLANK
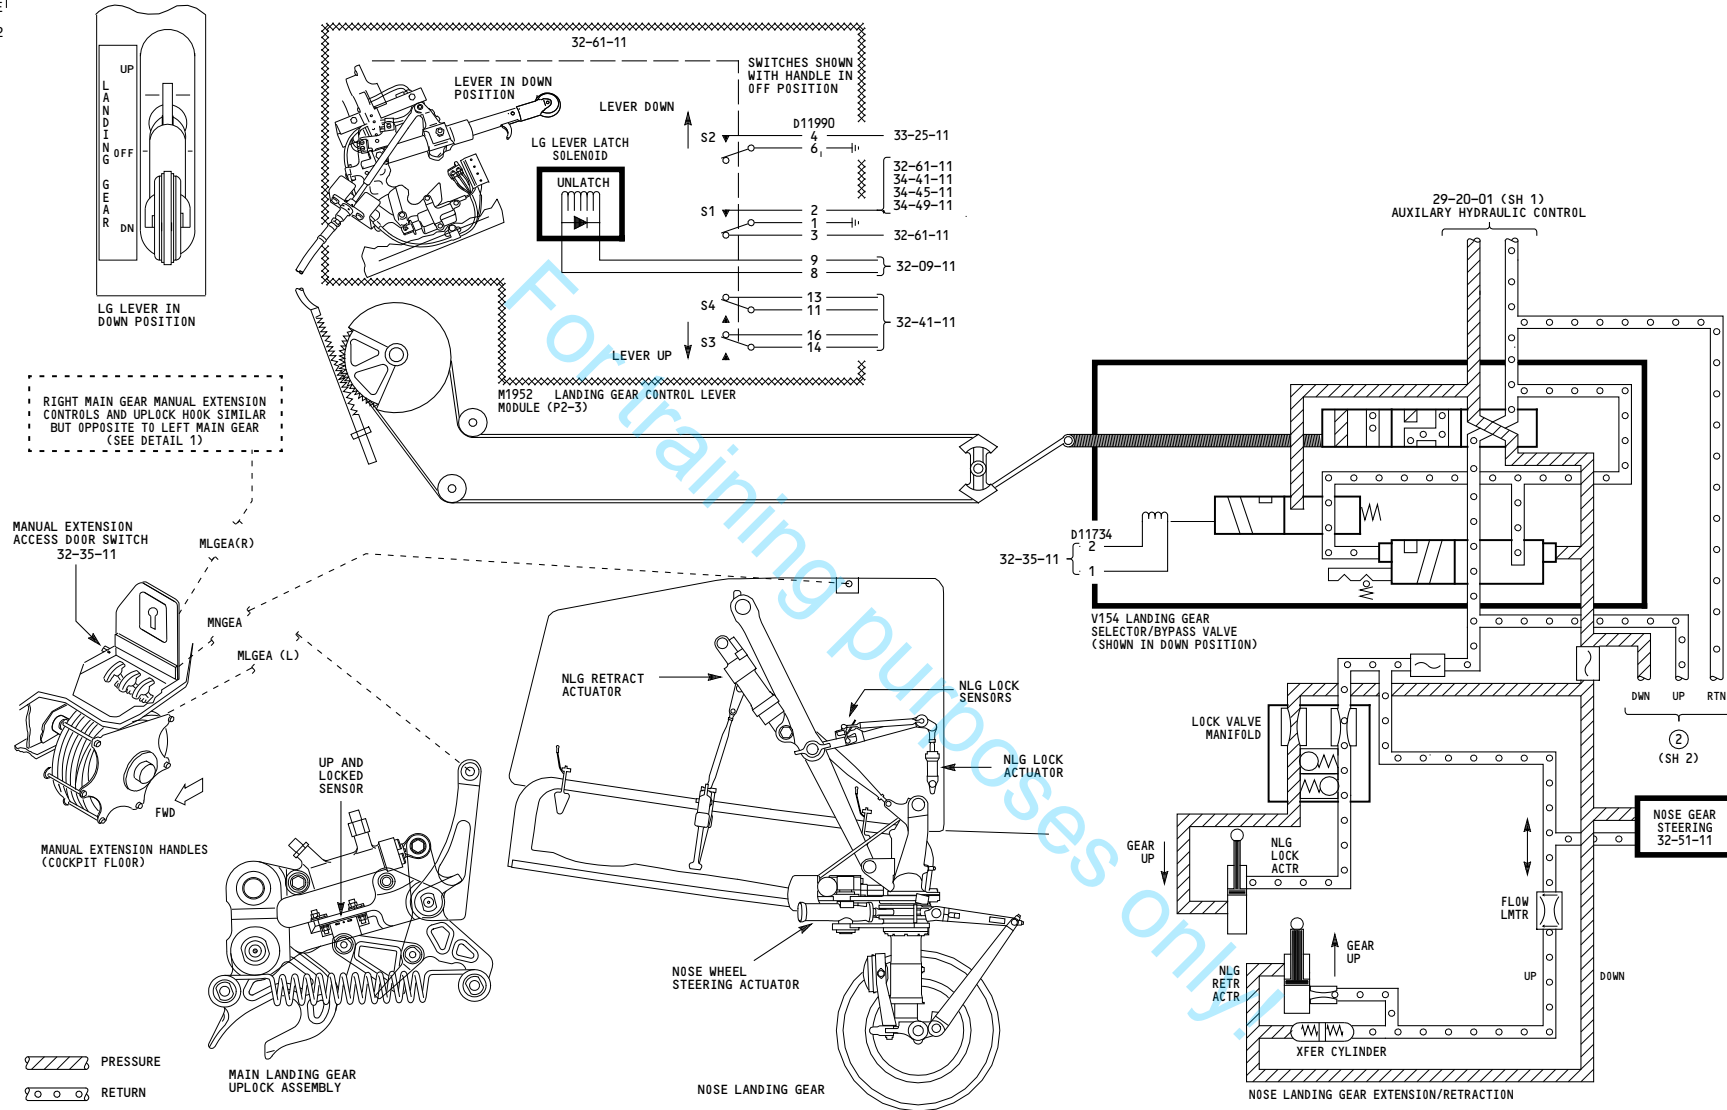
$$-\frac{E}{2}$$


ALL


LANDING GEAR EXTENSION AND RETRACTION

D280A238

32-30-00

Page 101
Sheet 1
May 09/2011

 -G-
1

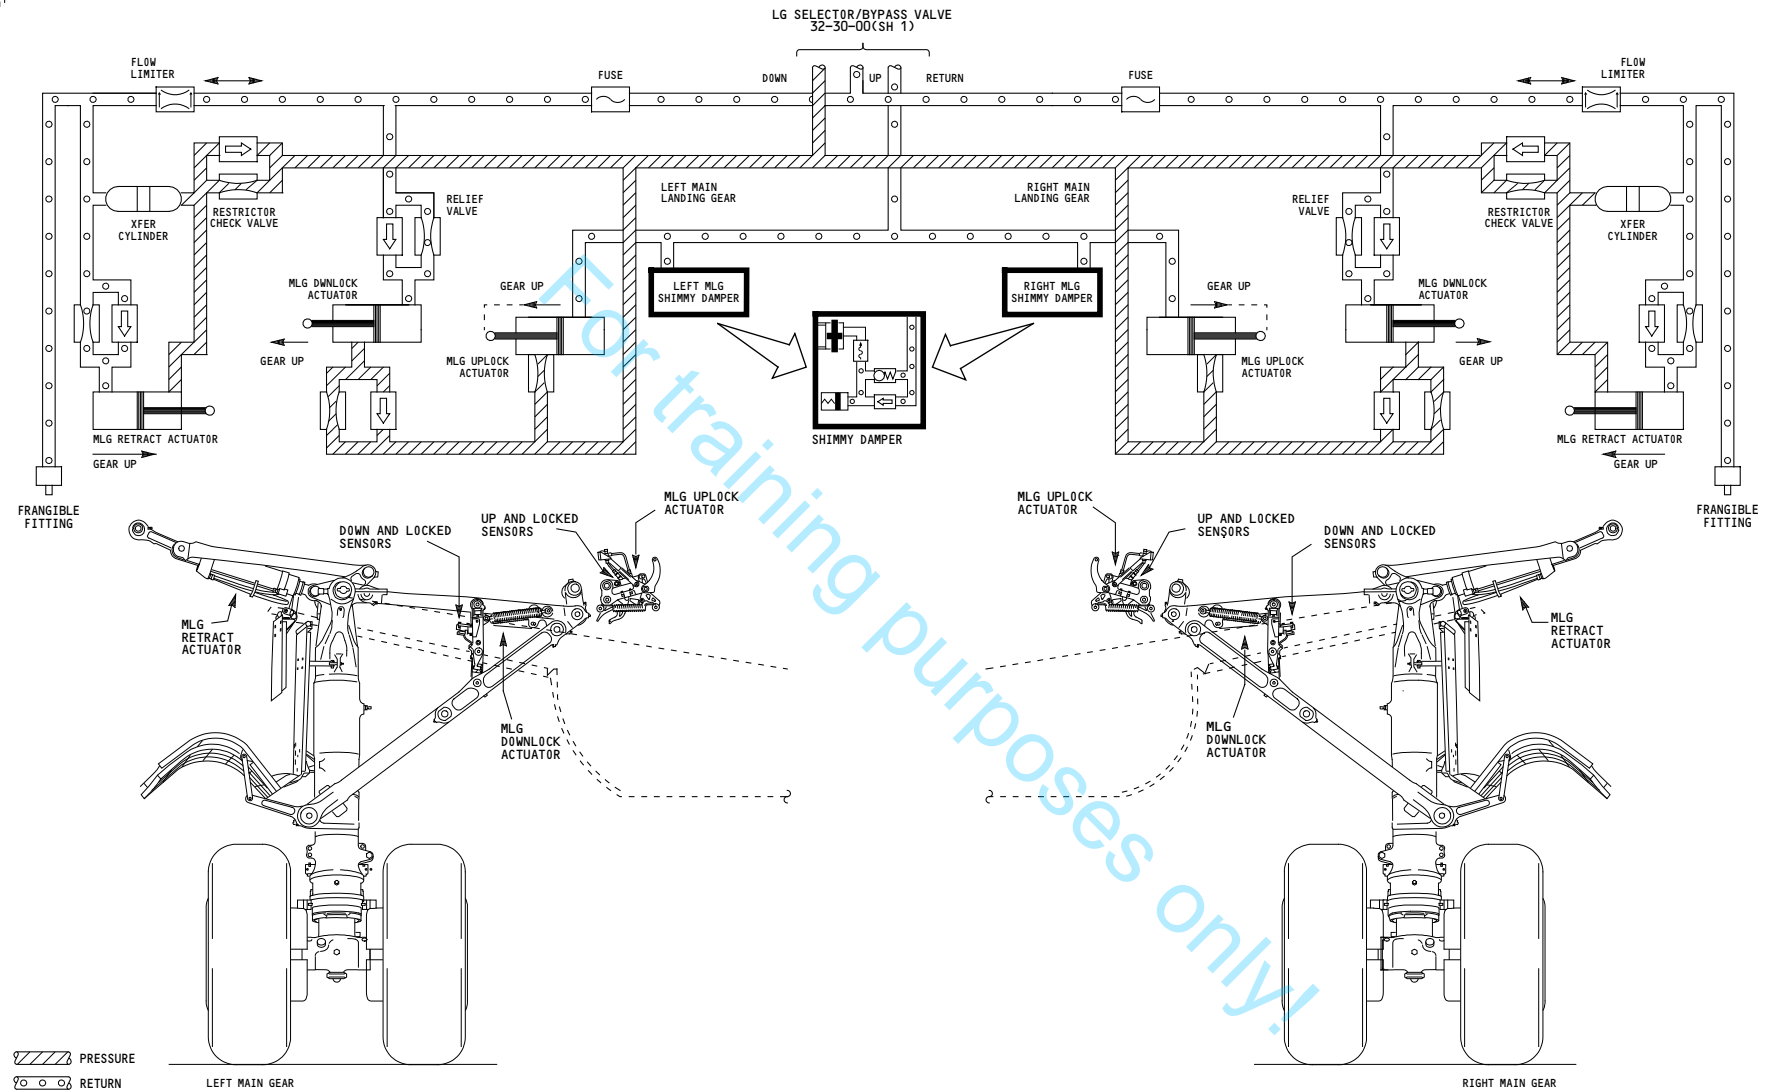

ALL


**LANDING GEAR EXTENSION
AND RETRACTION**

D280A238

32-30-00

Page 101
Sheet 2
May 09/2011

 1

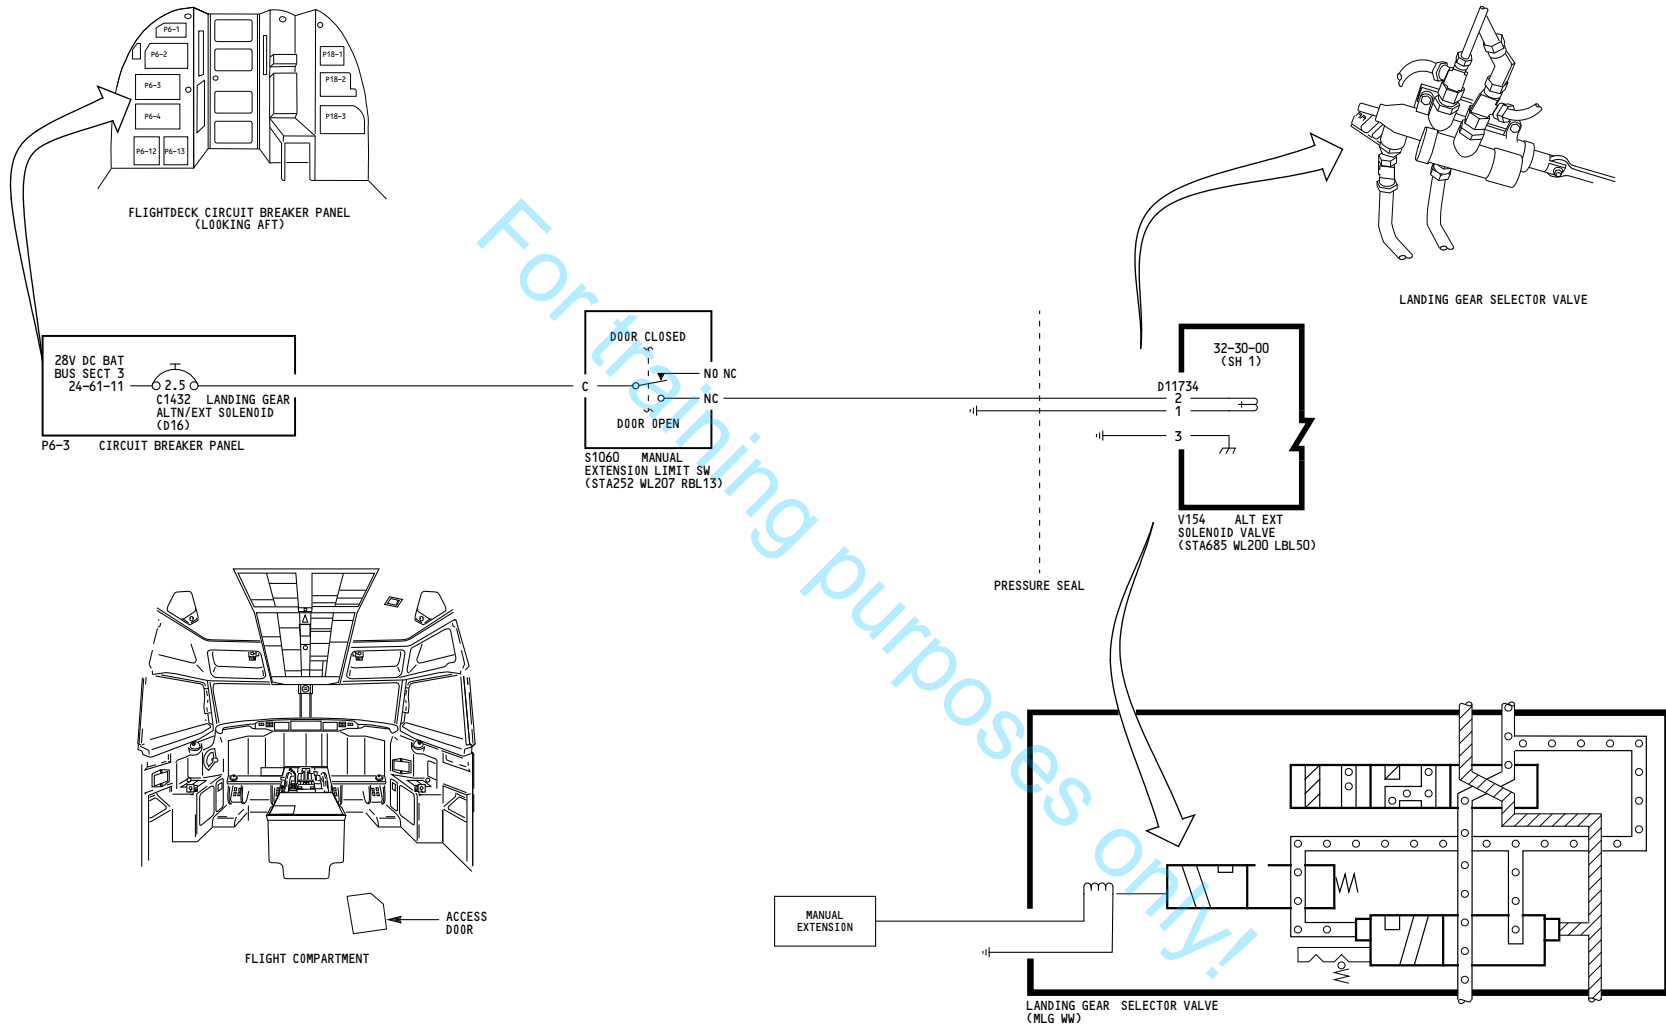

ALL


**ALTERNATE LANDING GEAR
EXTENSION SYSTEM**

D280A238

32-35-11

Page 101

 May 09/2011

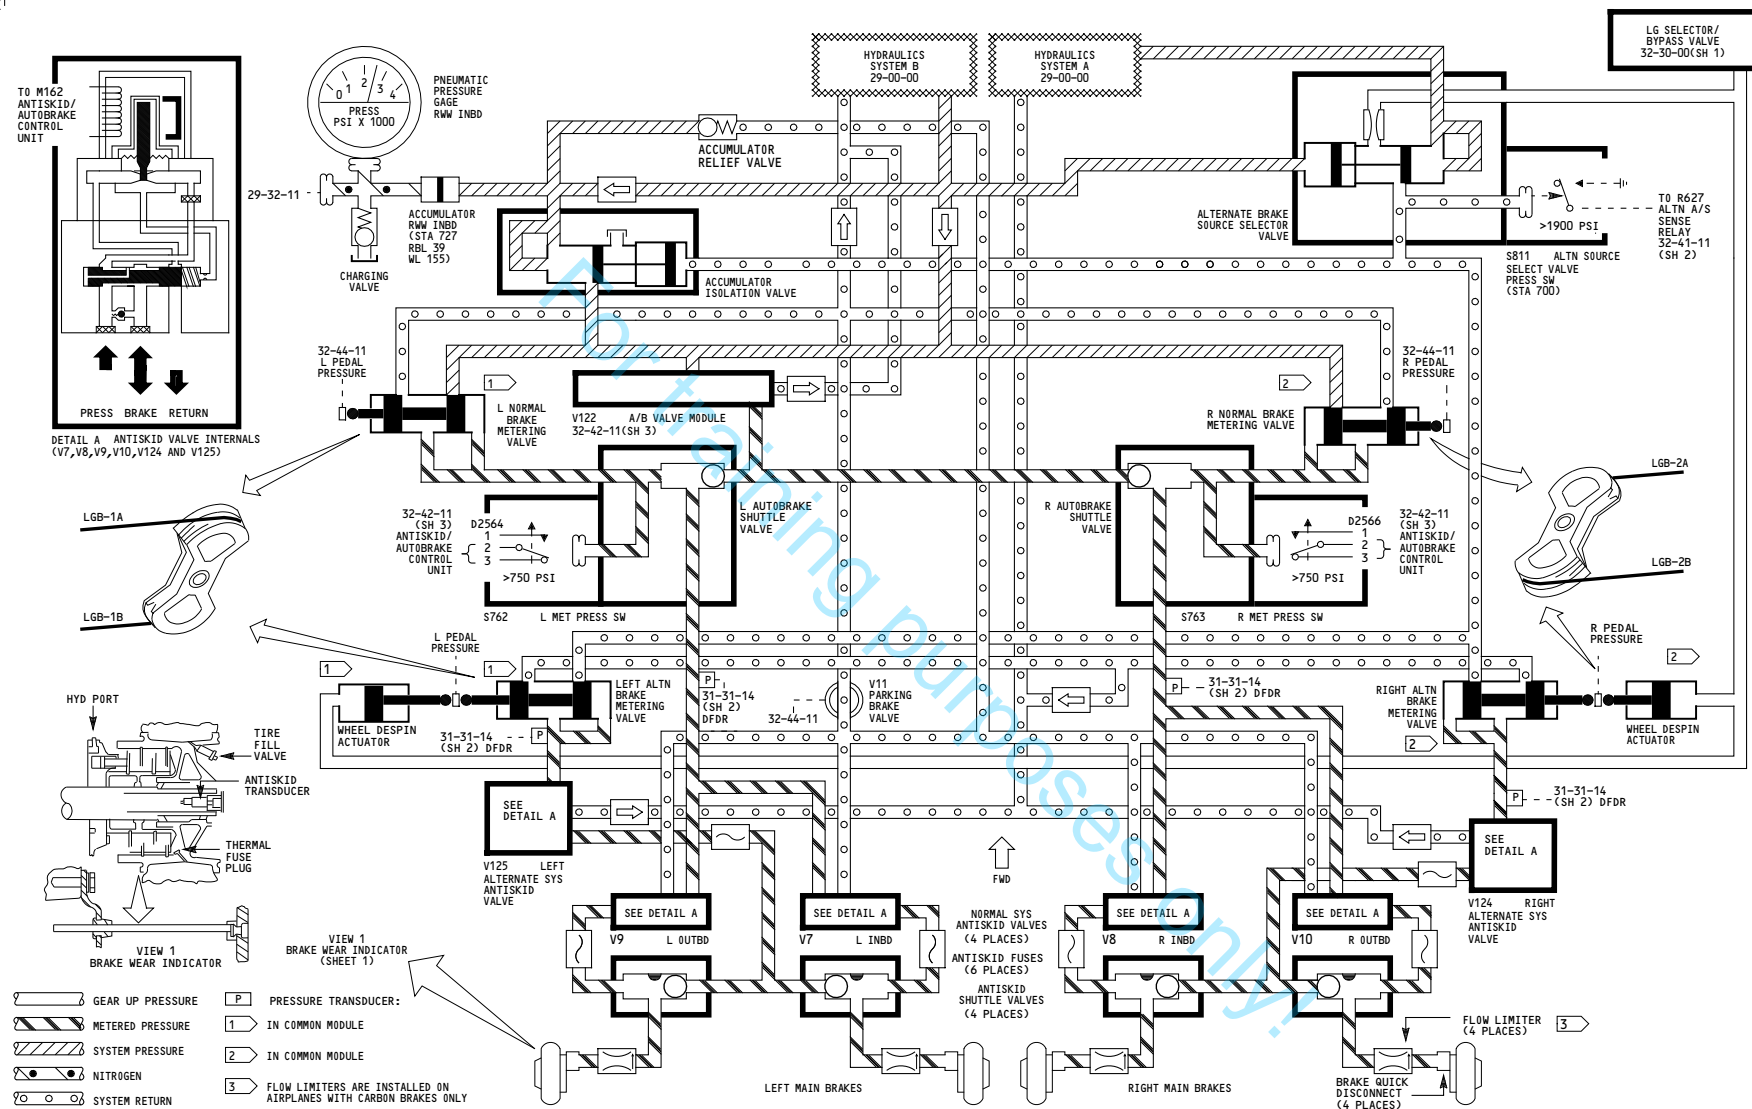

ALL


BRAKE SYSTEM

32-40-00

Page 101

Jun 30/2009

 D280A238

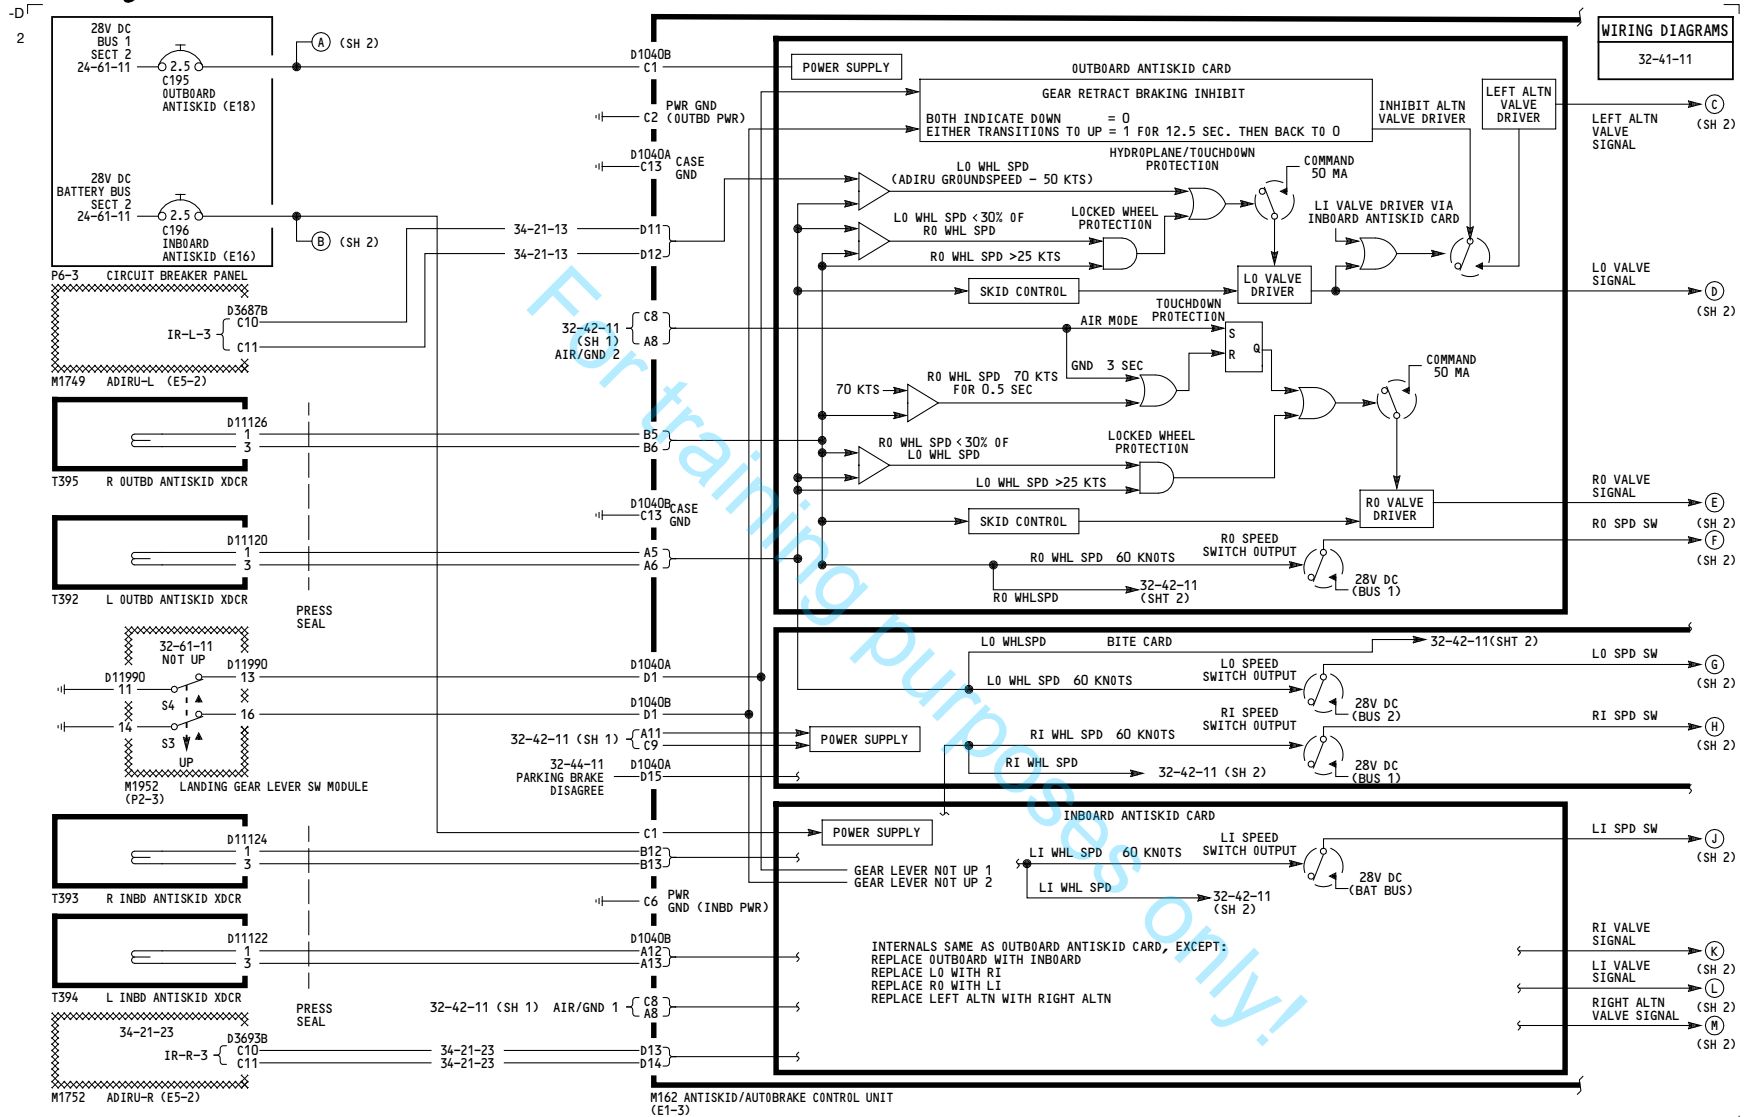


ALL

ANTISKID SYSTEM

D280A238

32-41-11

 Page 101
Sheet 1
Mar 07/2012

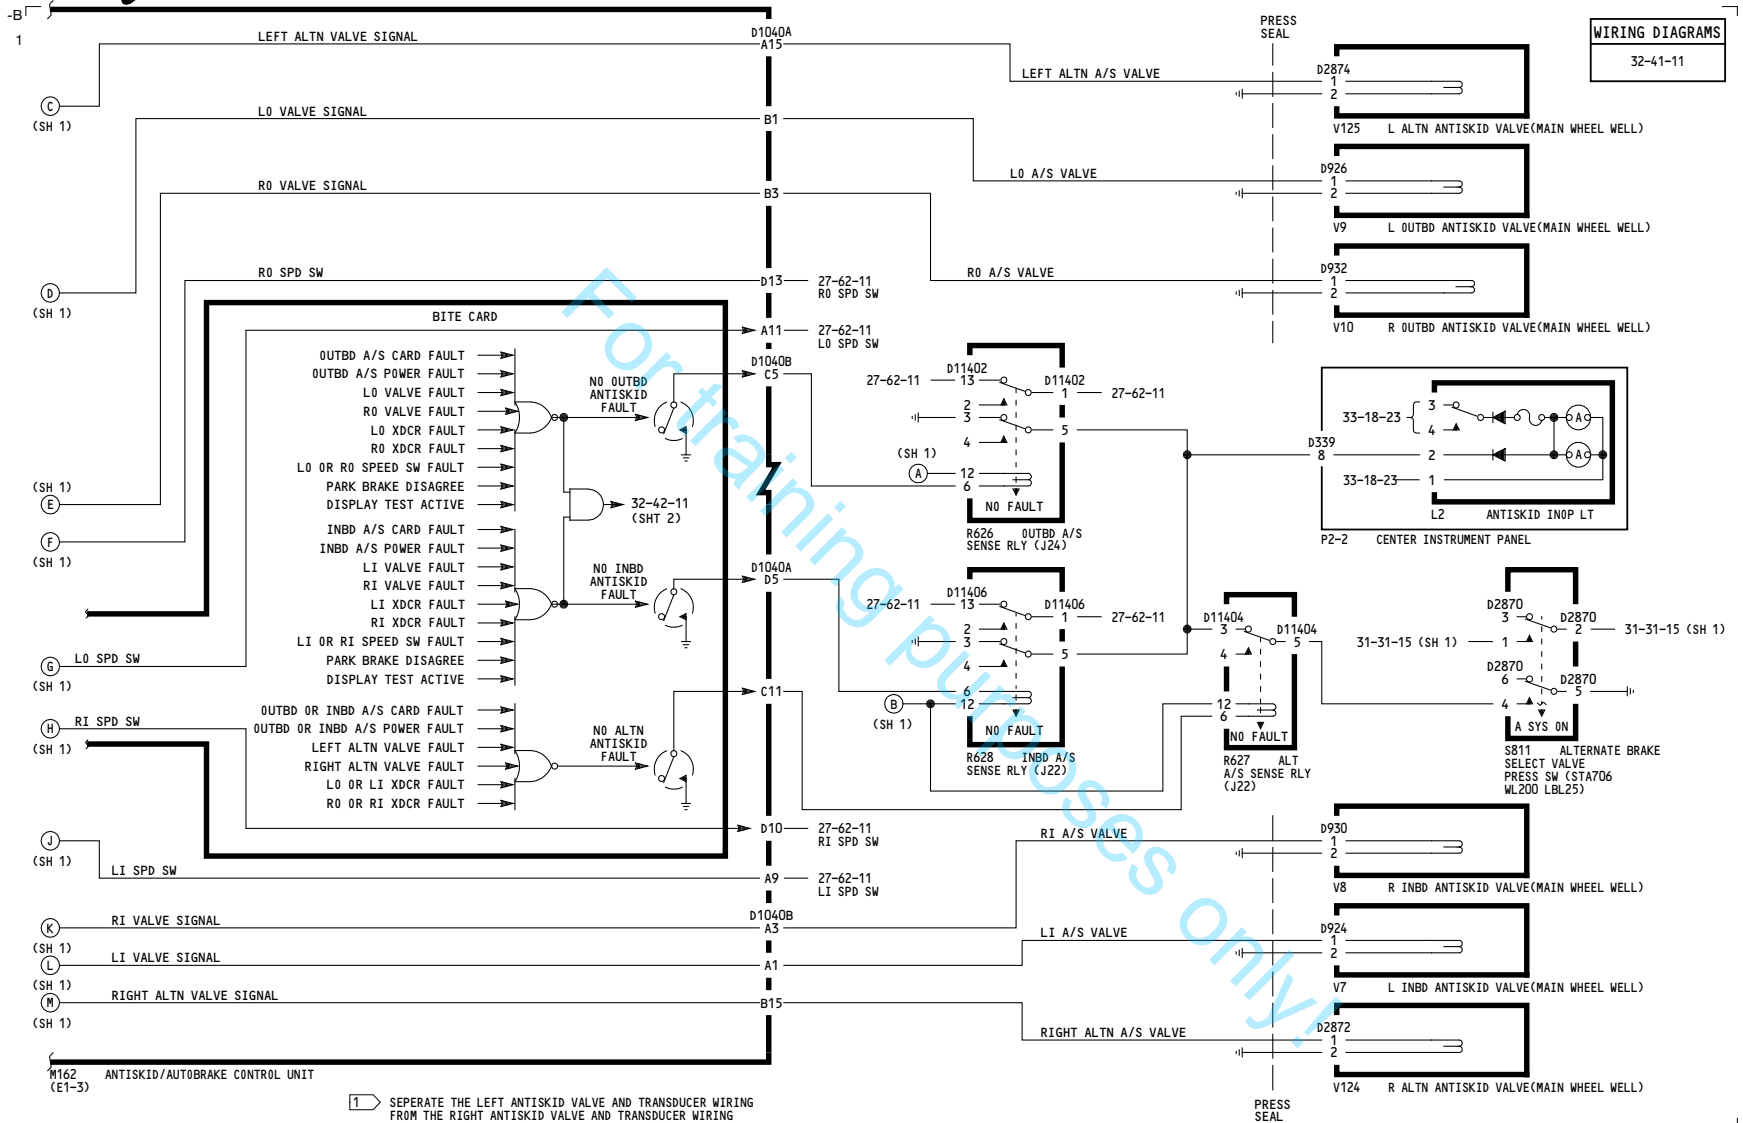


ALL

ANTISKID SYSTEM

D280A238

32-41-11

 Page 101
Sheet 2
Mar 07/2012

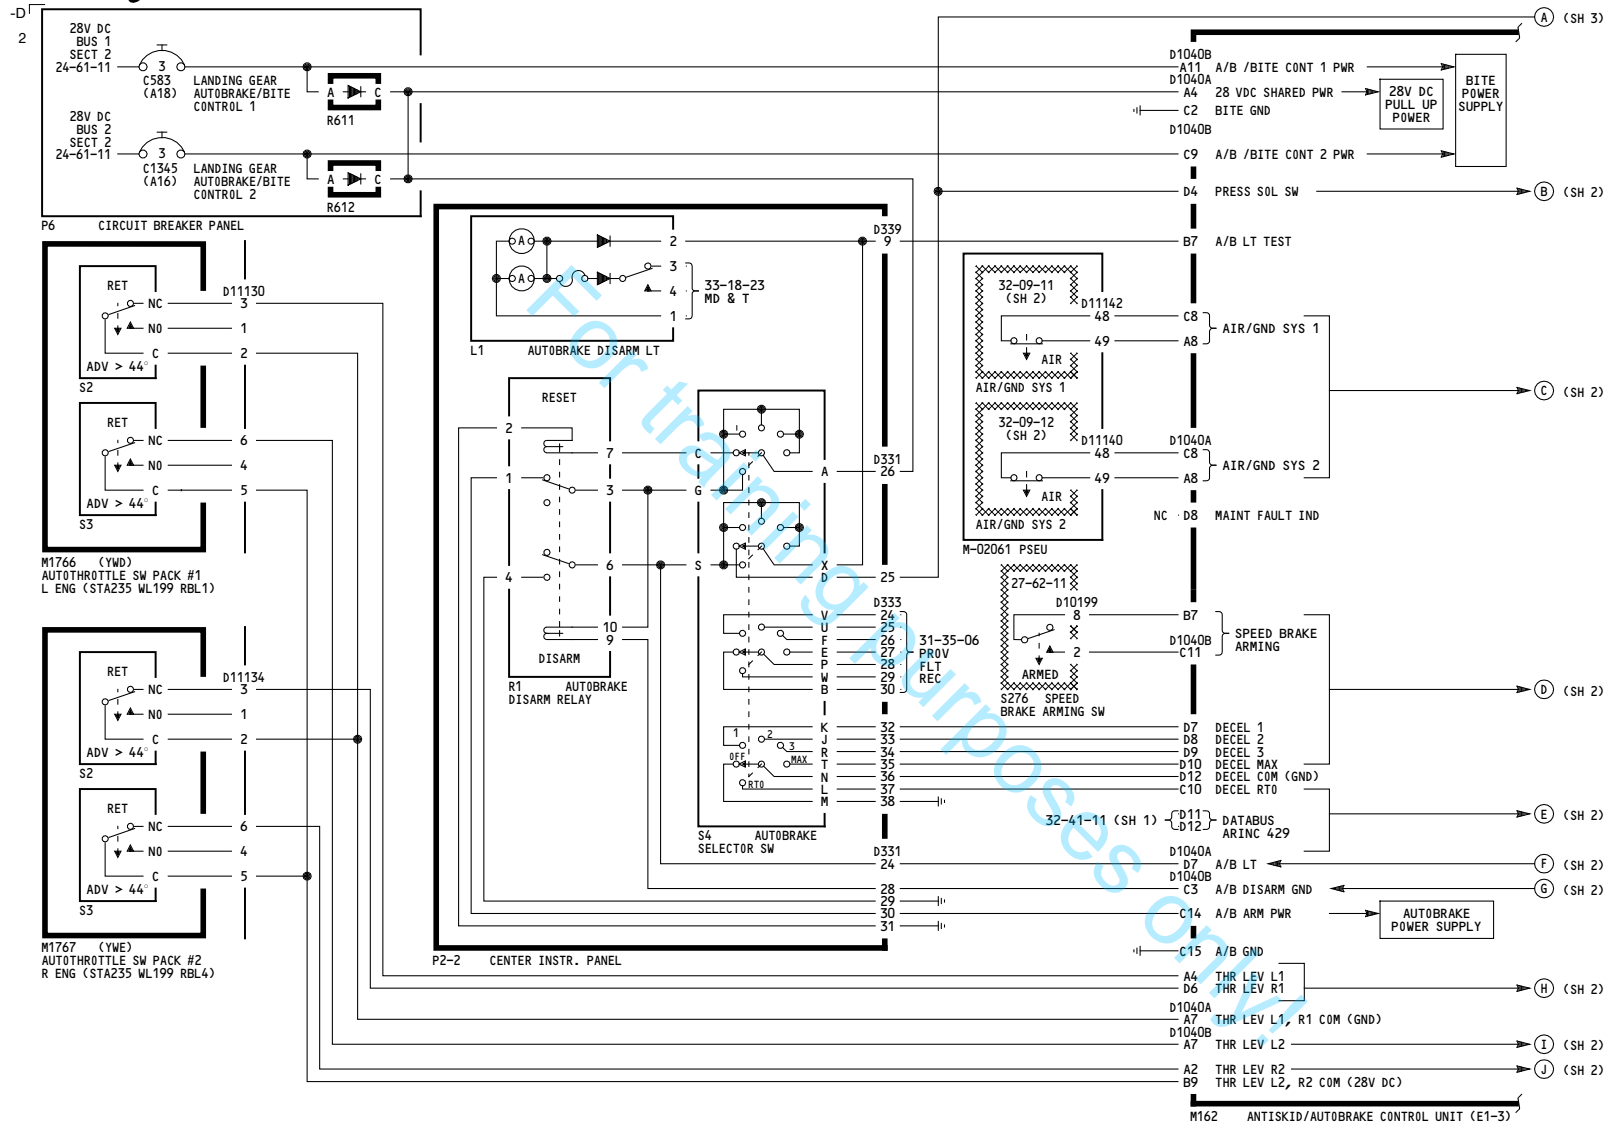



32-42-11




AUTOBRAKE SYSTEM

D280A238

32-42-11

 Page 101
Sheet 2
Jun 30/2009

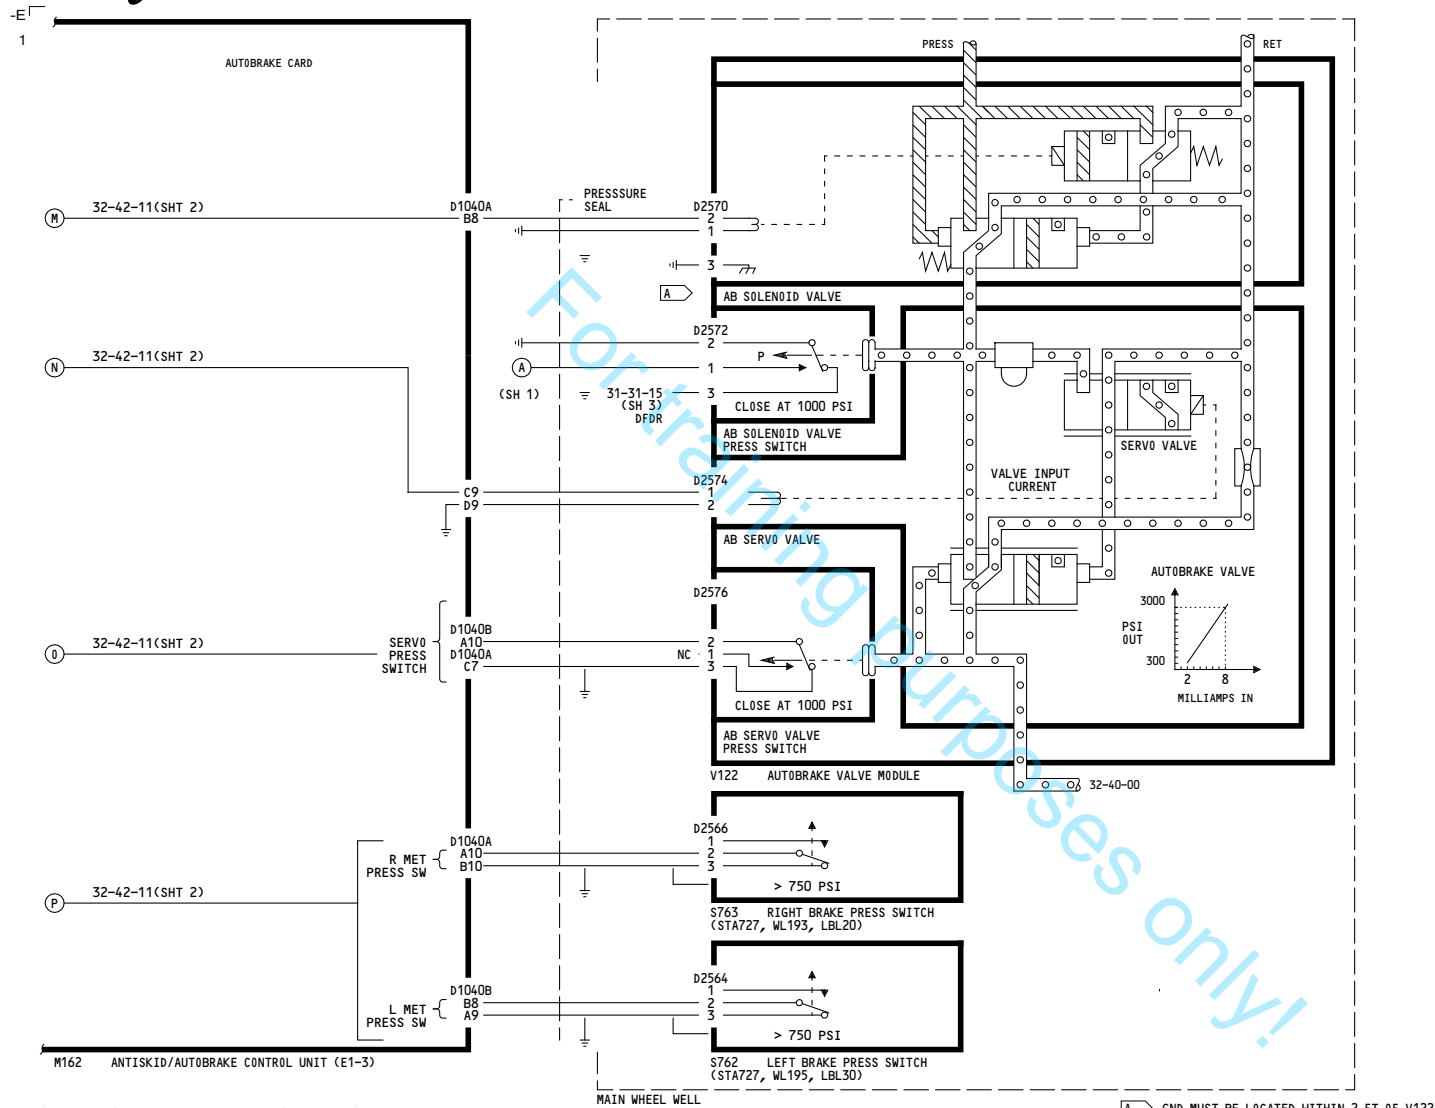

AUTOBRAKE SHOWN IN
OFF POSITION

GND MUST BE LOCATED WITHIN 2 FT OF V122

 
ALL

AUTOBRAKE SYSTEM

D280A238

32-42-11

-W-
1

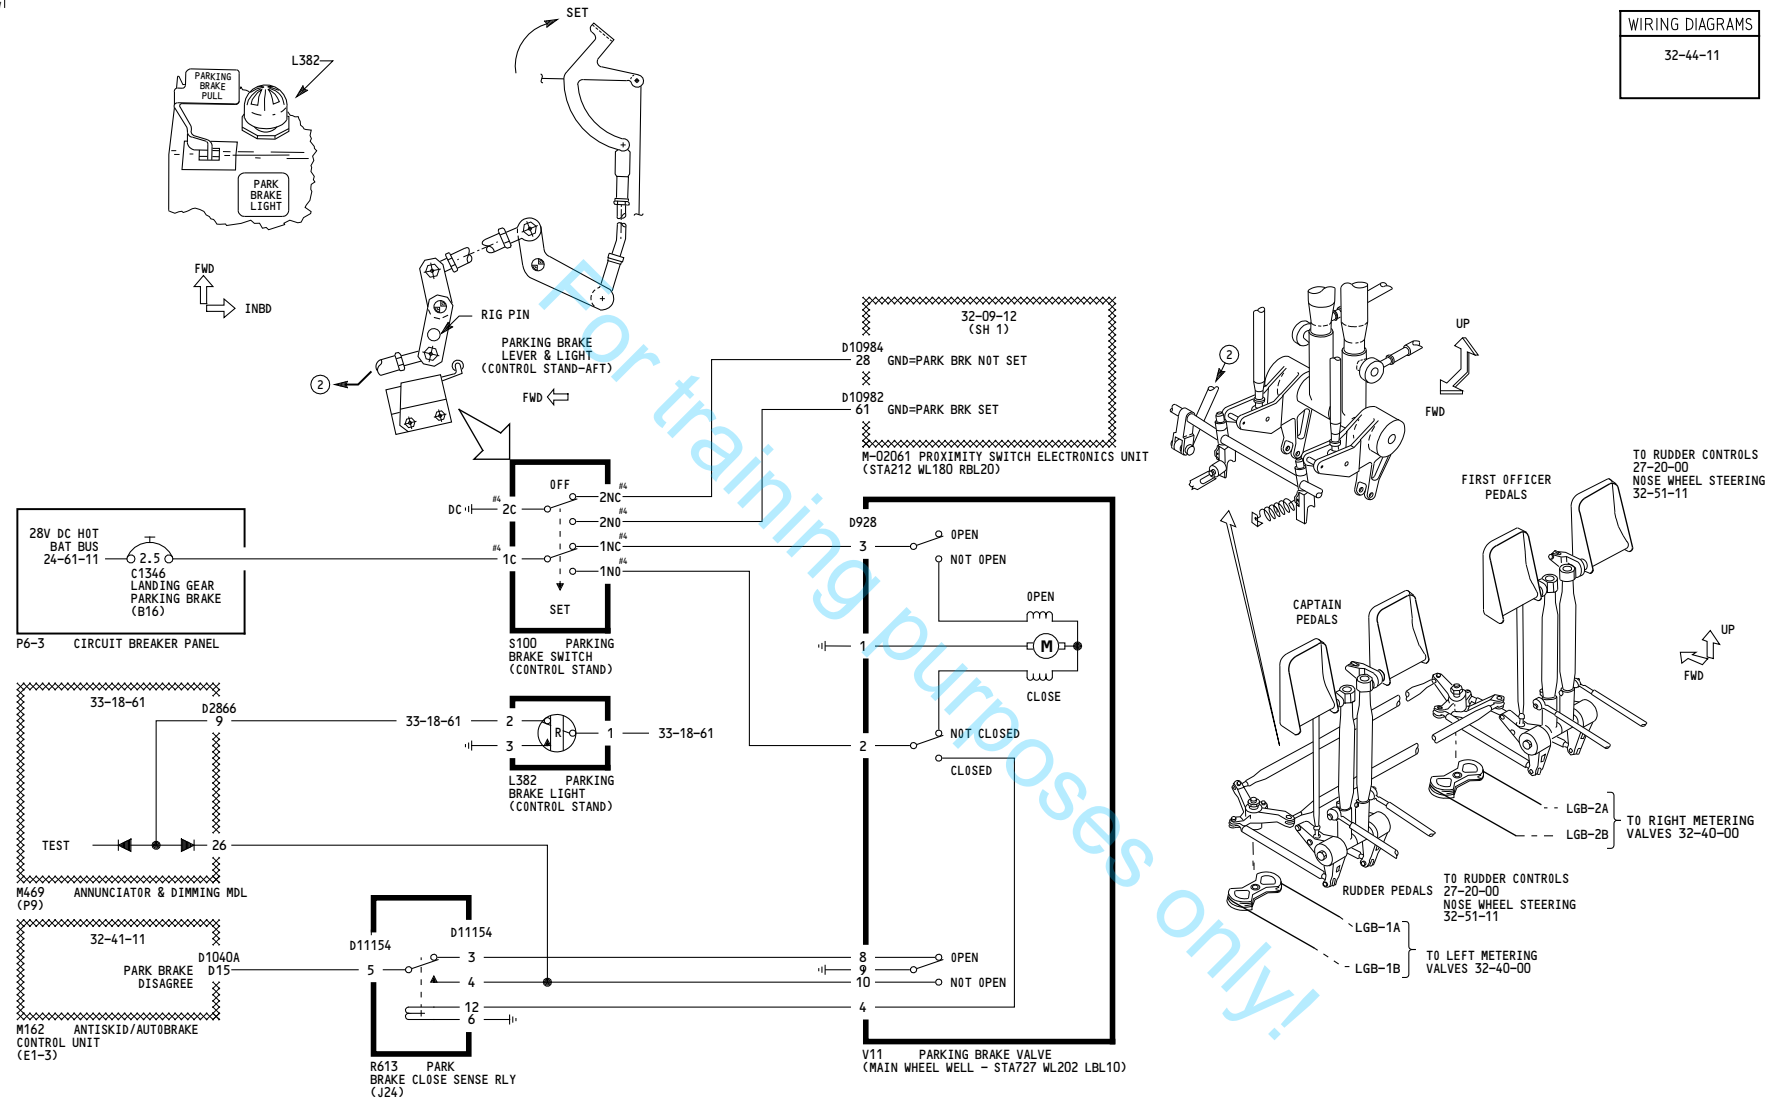


ALL	PARKING BRAKE SYSTEM
	D280A238

32-44-11

Page 101

 Jan 11/2006

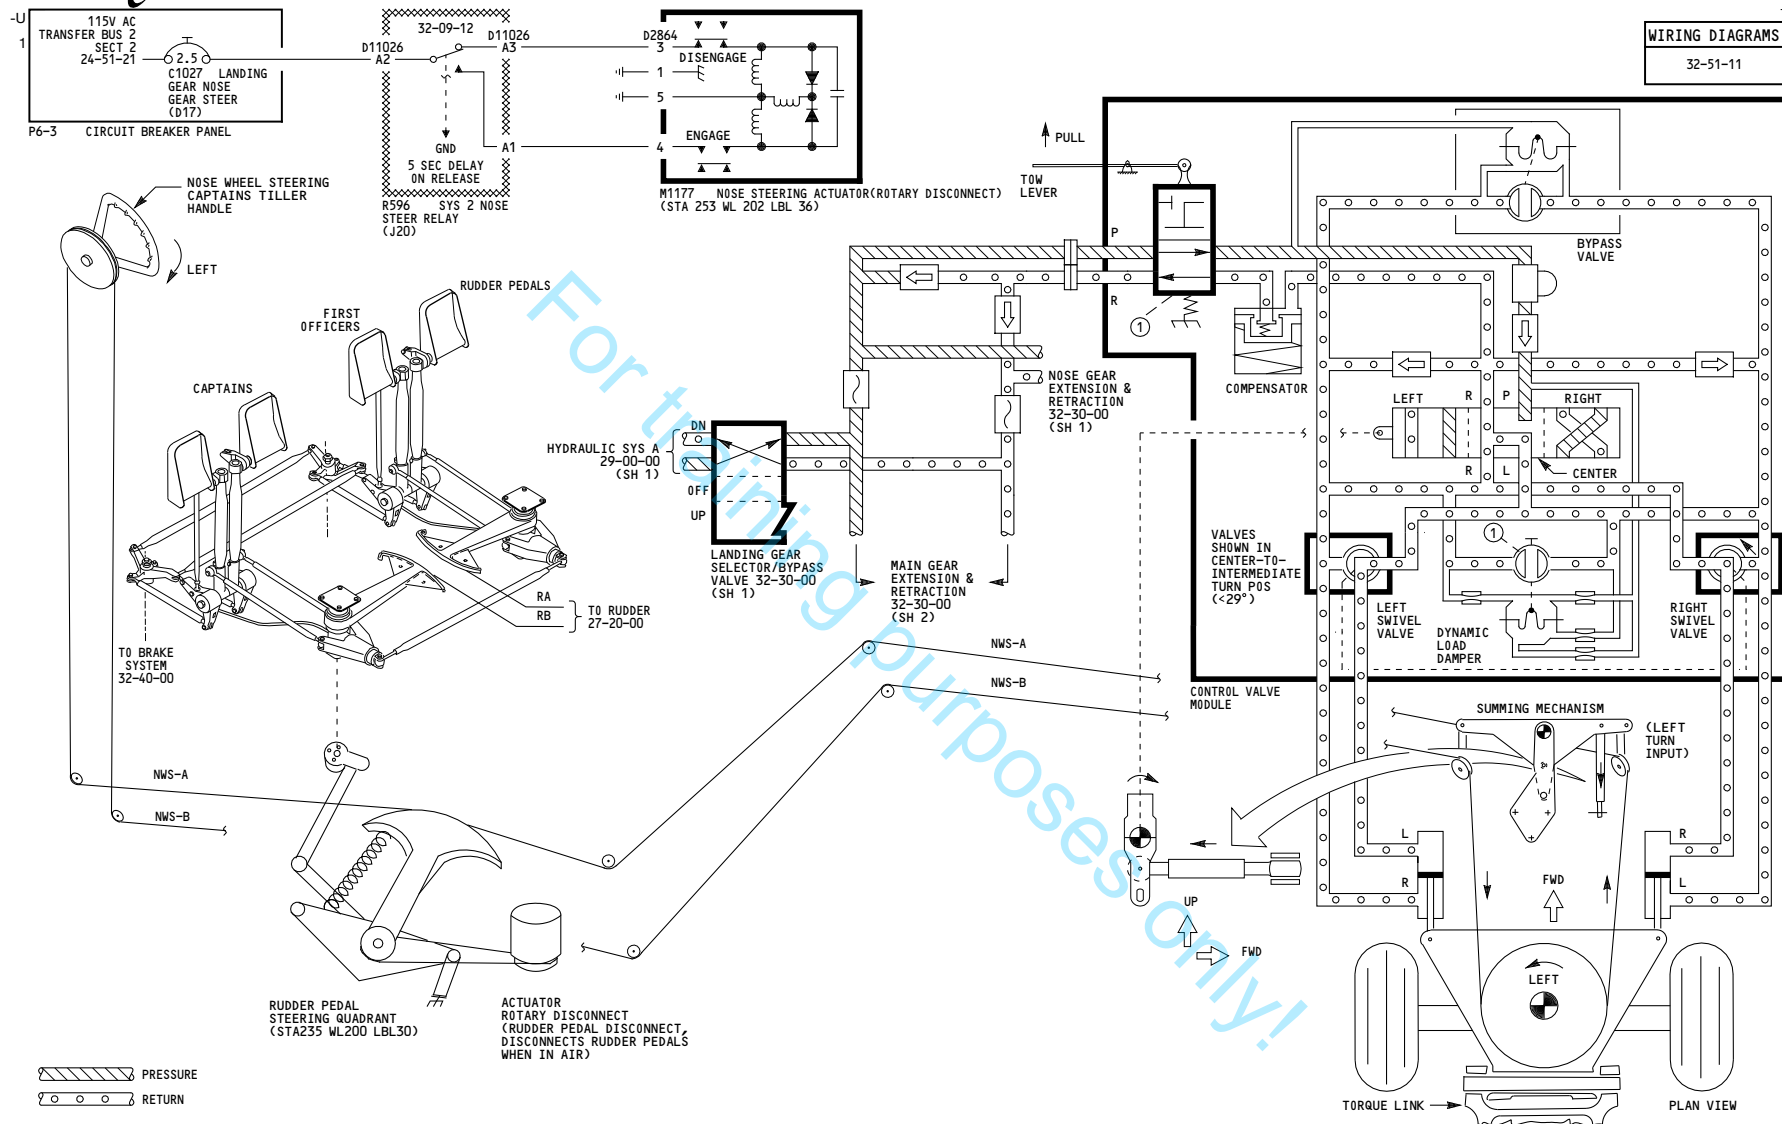

ALL


NOSE GEAR STEERING

32-51-11

Page 101

May 02/2008

 D280A238

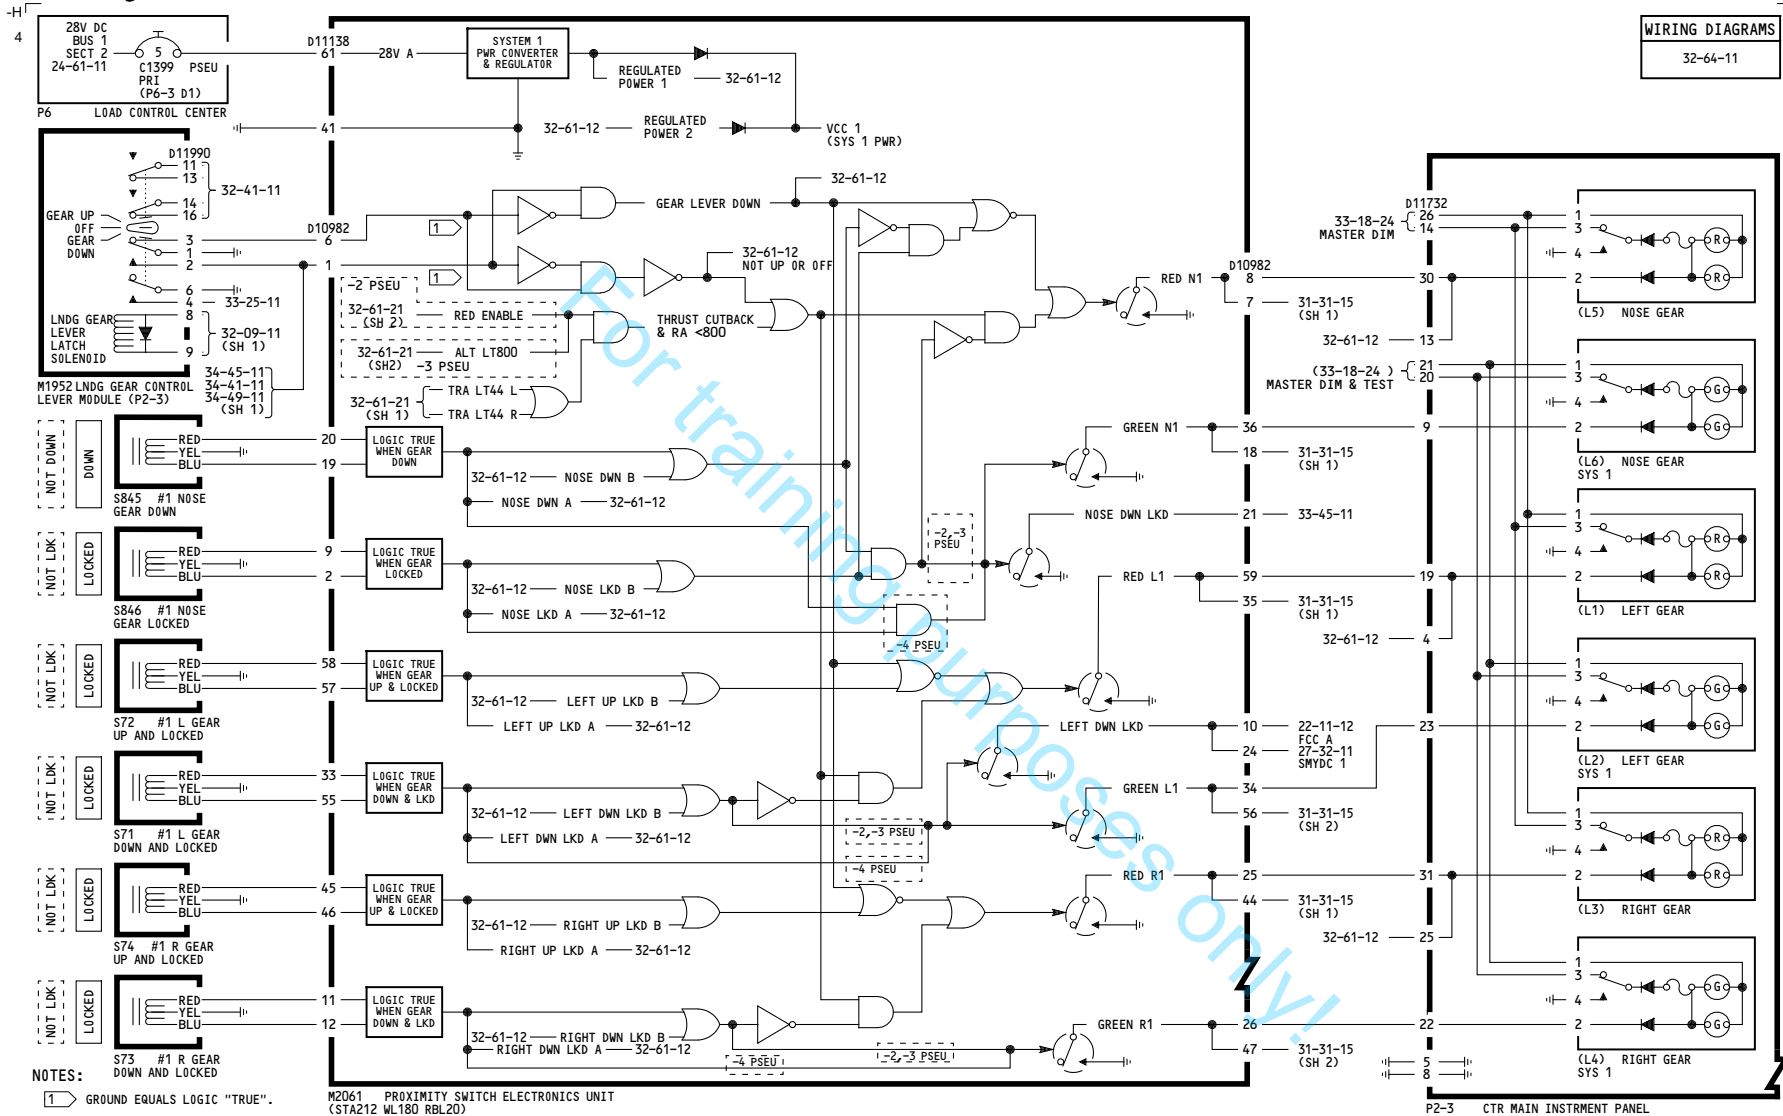

YD001-YD005


**LANDING GEAR POSITION
INDICATION SYSTEM 1**

D280A238

32-61-11

Page 101

 Jan 11/2006

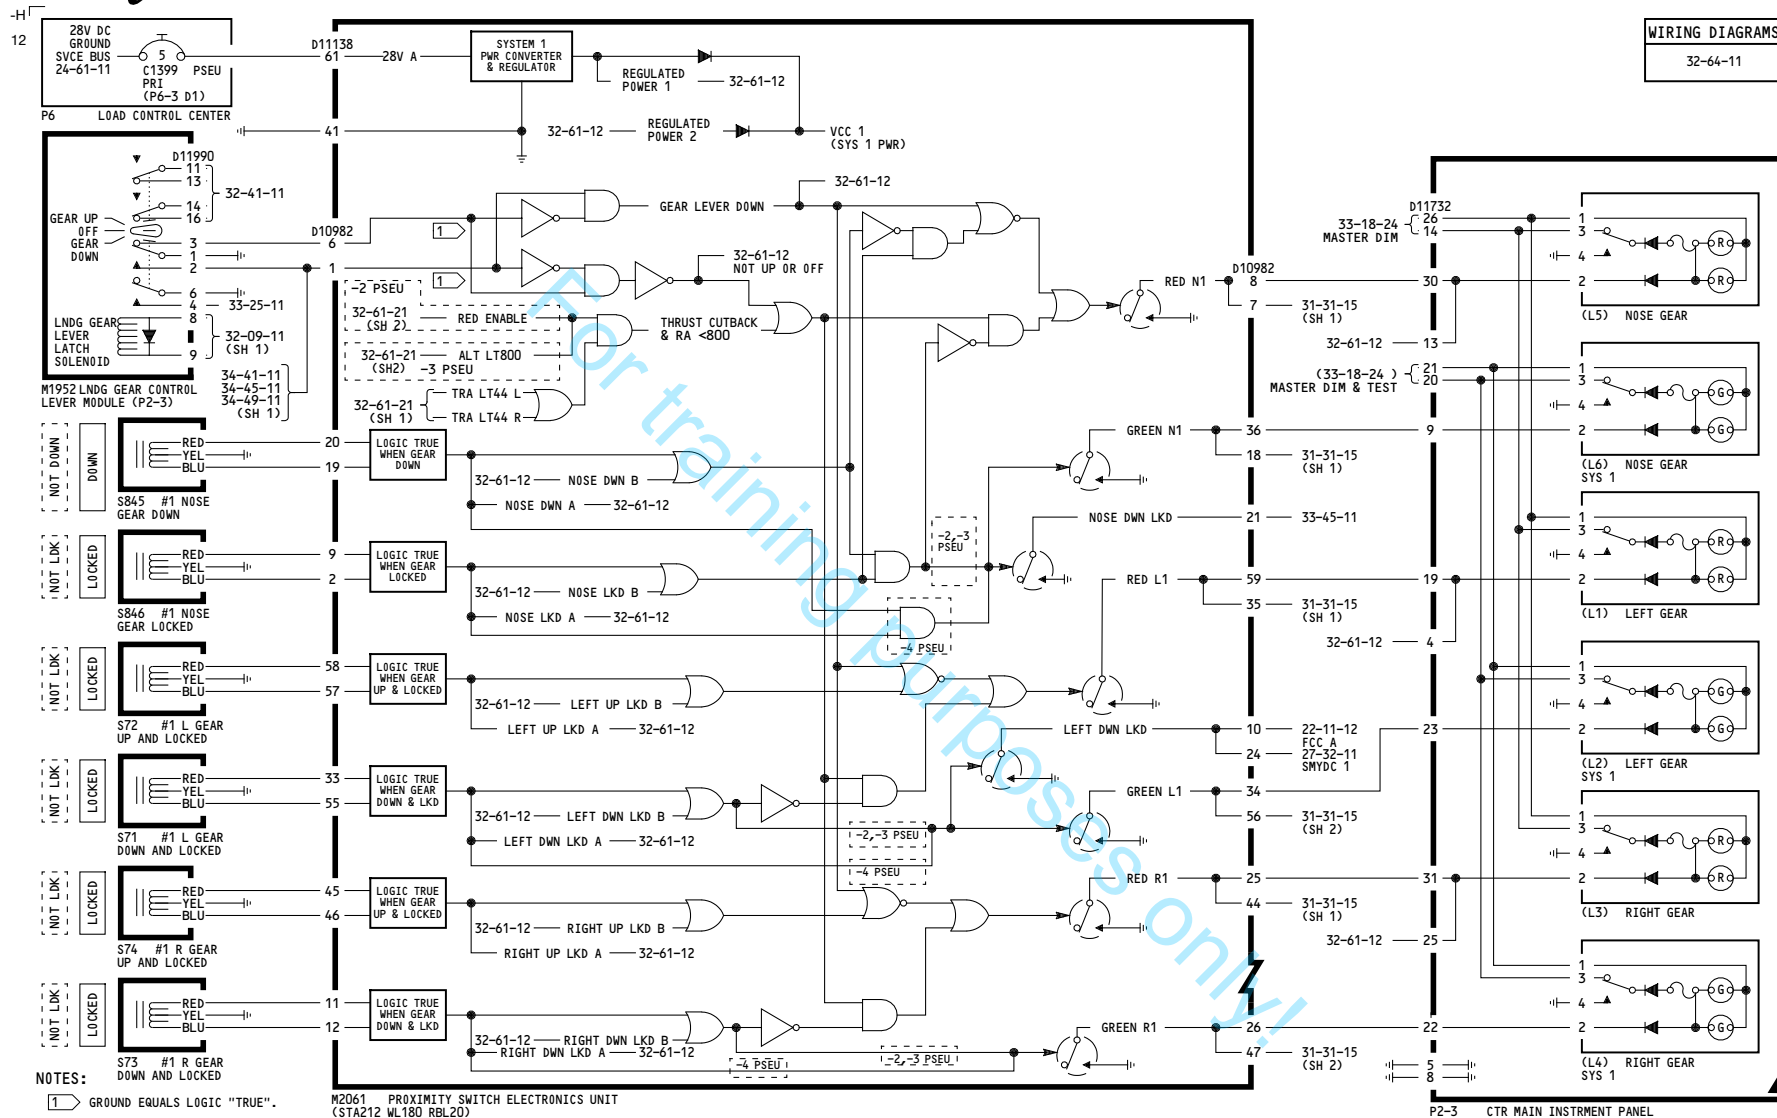

YD006-YD020


LANDING GEAR POSITION INDICATION SYSTEM 1

D280A238

32-61-11

Page 102

 Jun 30/2009

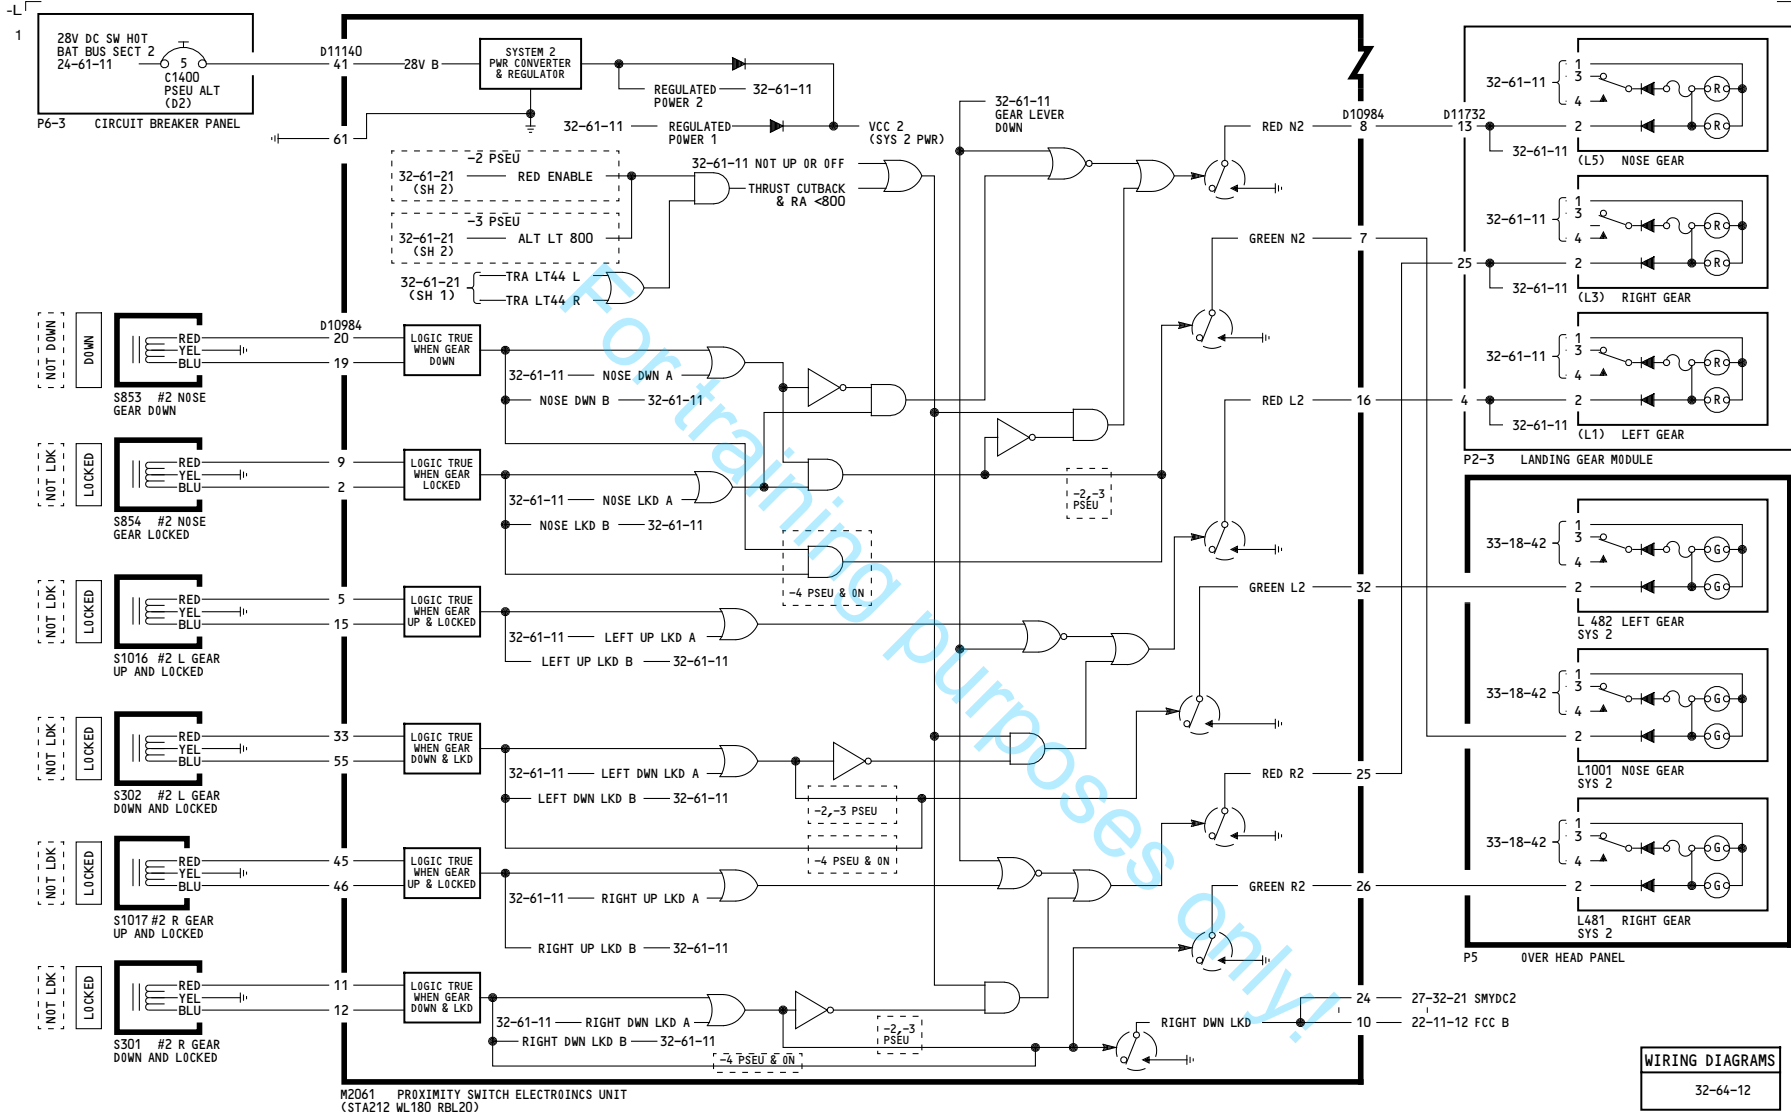

YD001-YD007


**LANDING GEAR POSITION
INDICATION SYSTEM 2**

D280A238

32-61-12

Page 101

 May 02/2008

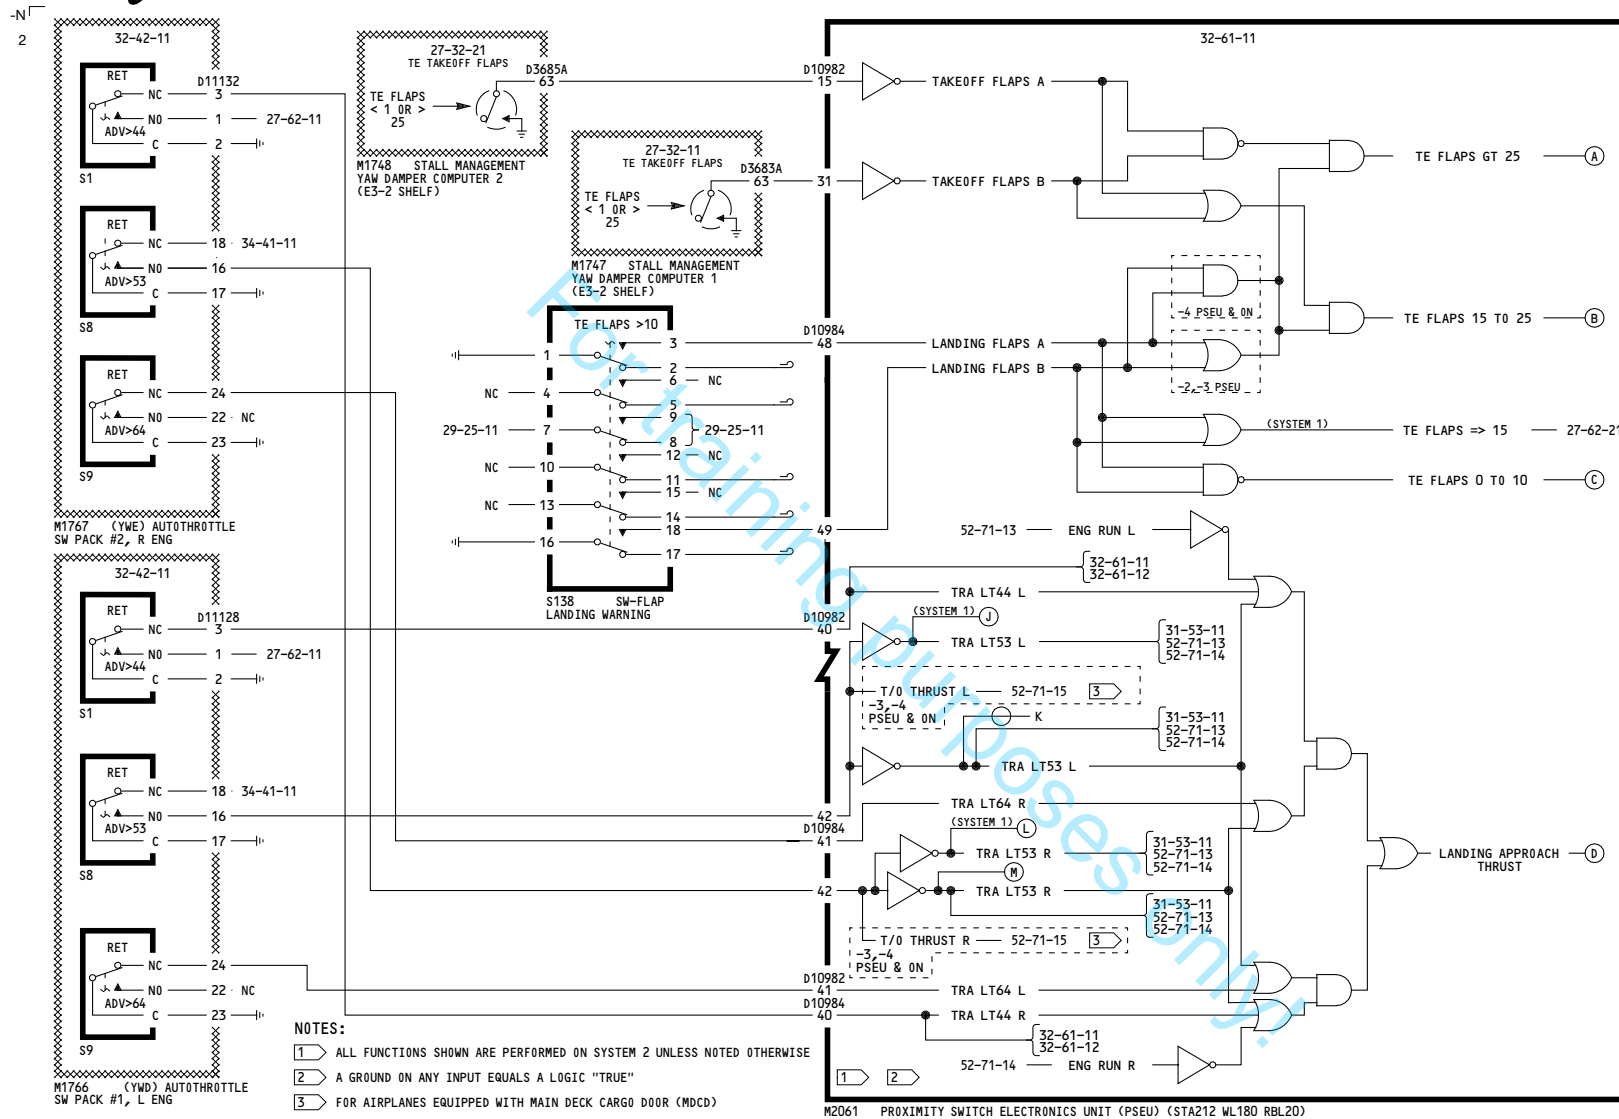


YD001-YD007

LANDING GEAR WARNING

D280A238

32-61-21

 Page 101
Sheet 1
May 02/2008

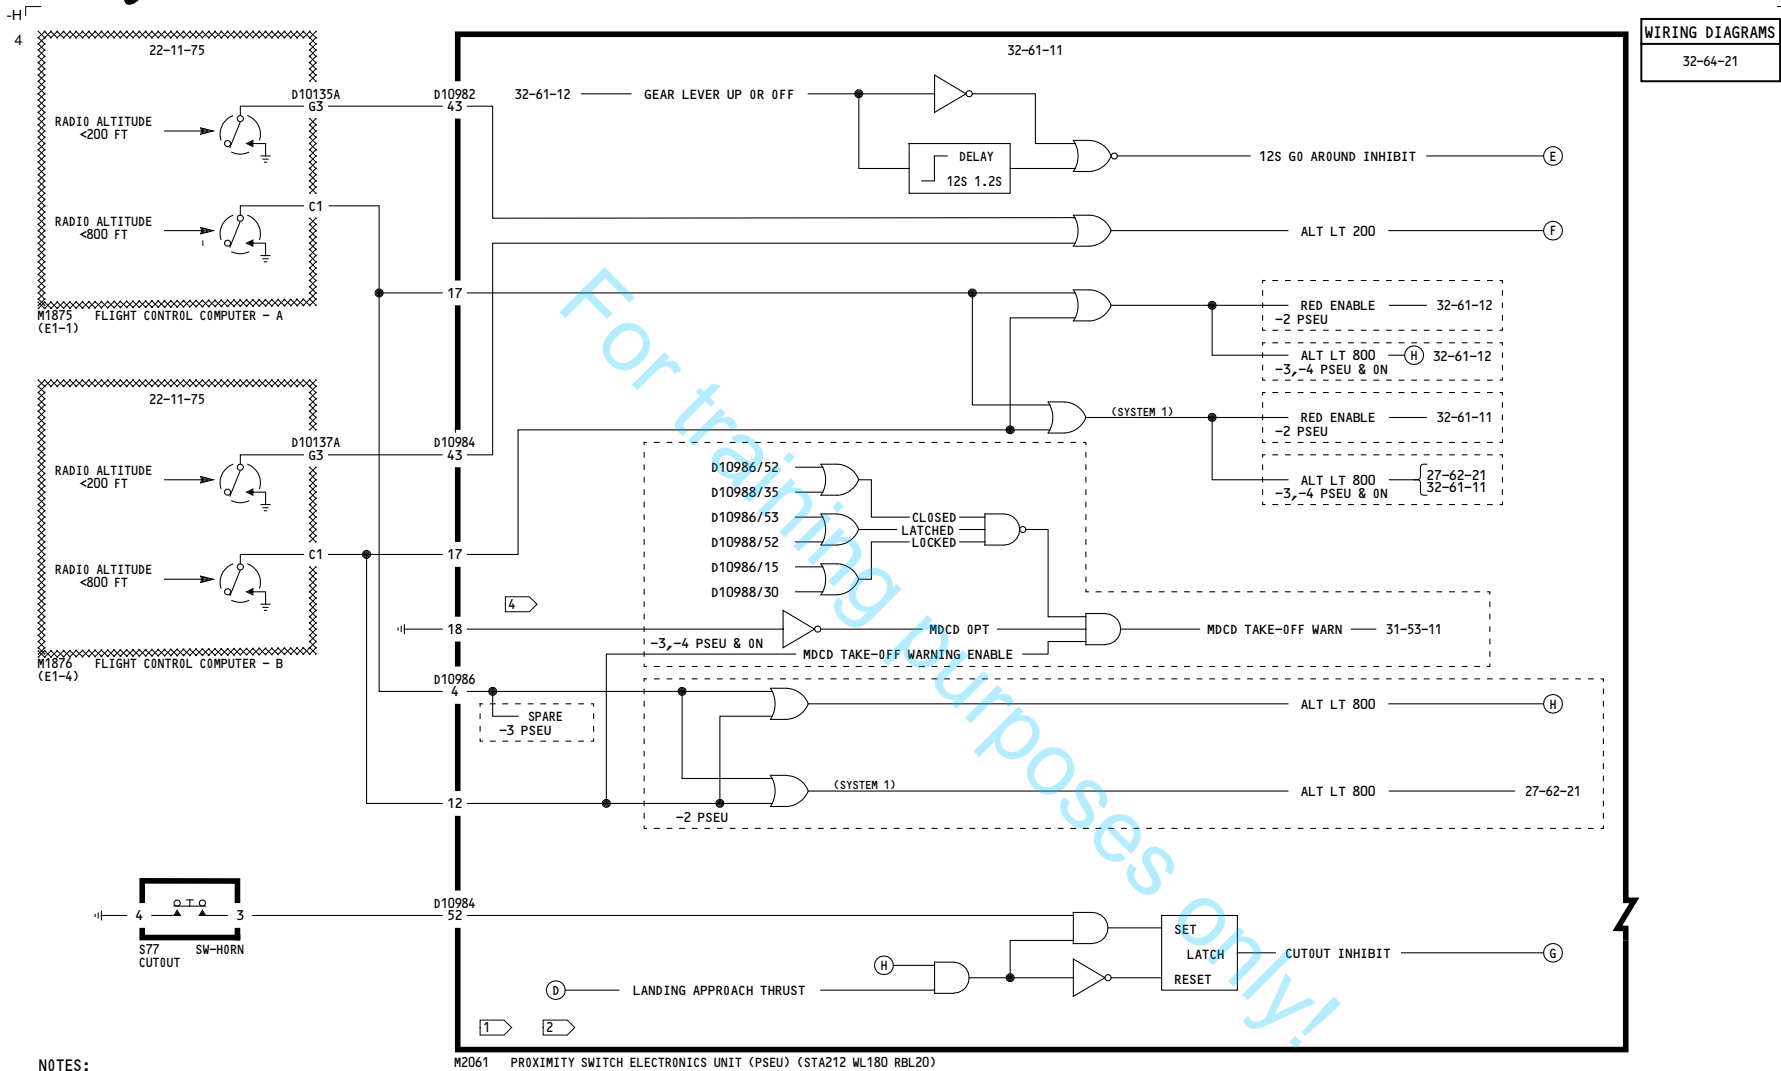

YD001-YD007


LANDING GEAR WARNING

D280A238

32-61-21

Page 101
Sheet 2
Jun 30/2009

 -B
1

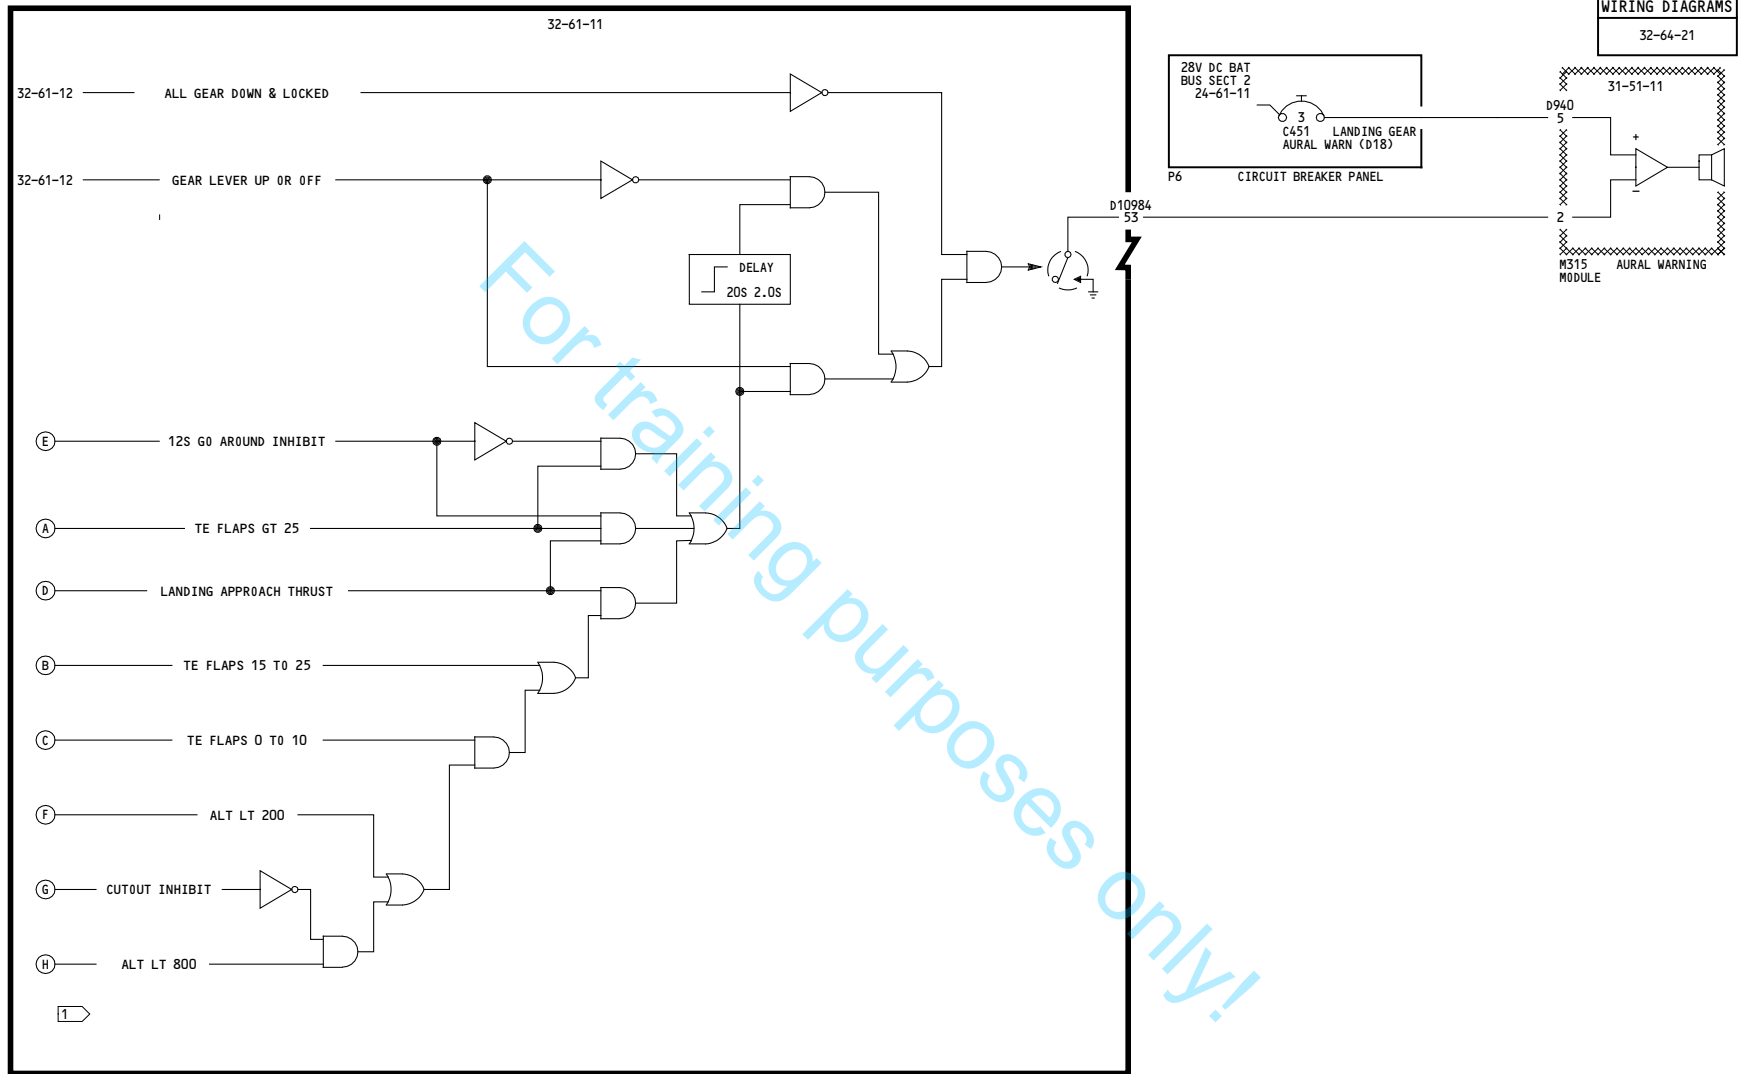

M2061 PROXIMITY SWITCH ELECTRONICS UNIT (PSEU) (STA212 WL180 RBL20)

YD001-YD007

LANDING GEAR WARNING


D280A238

32-61-21

Page 101
Sheet 3
Jun 30/2009

-B
1

 WIRING DIAGRAMS
32-64-21

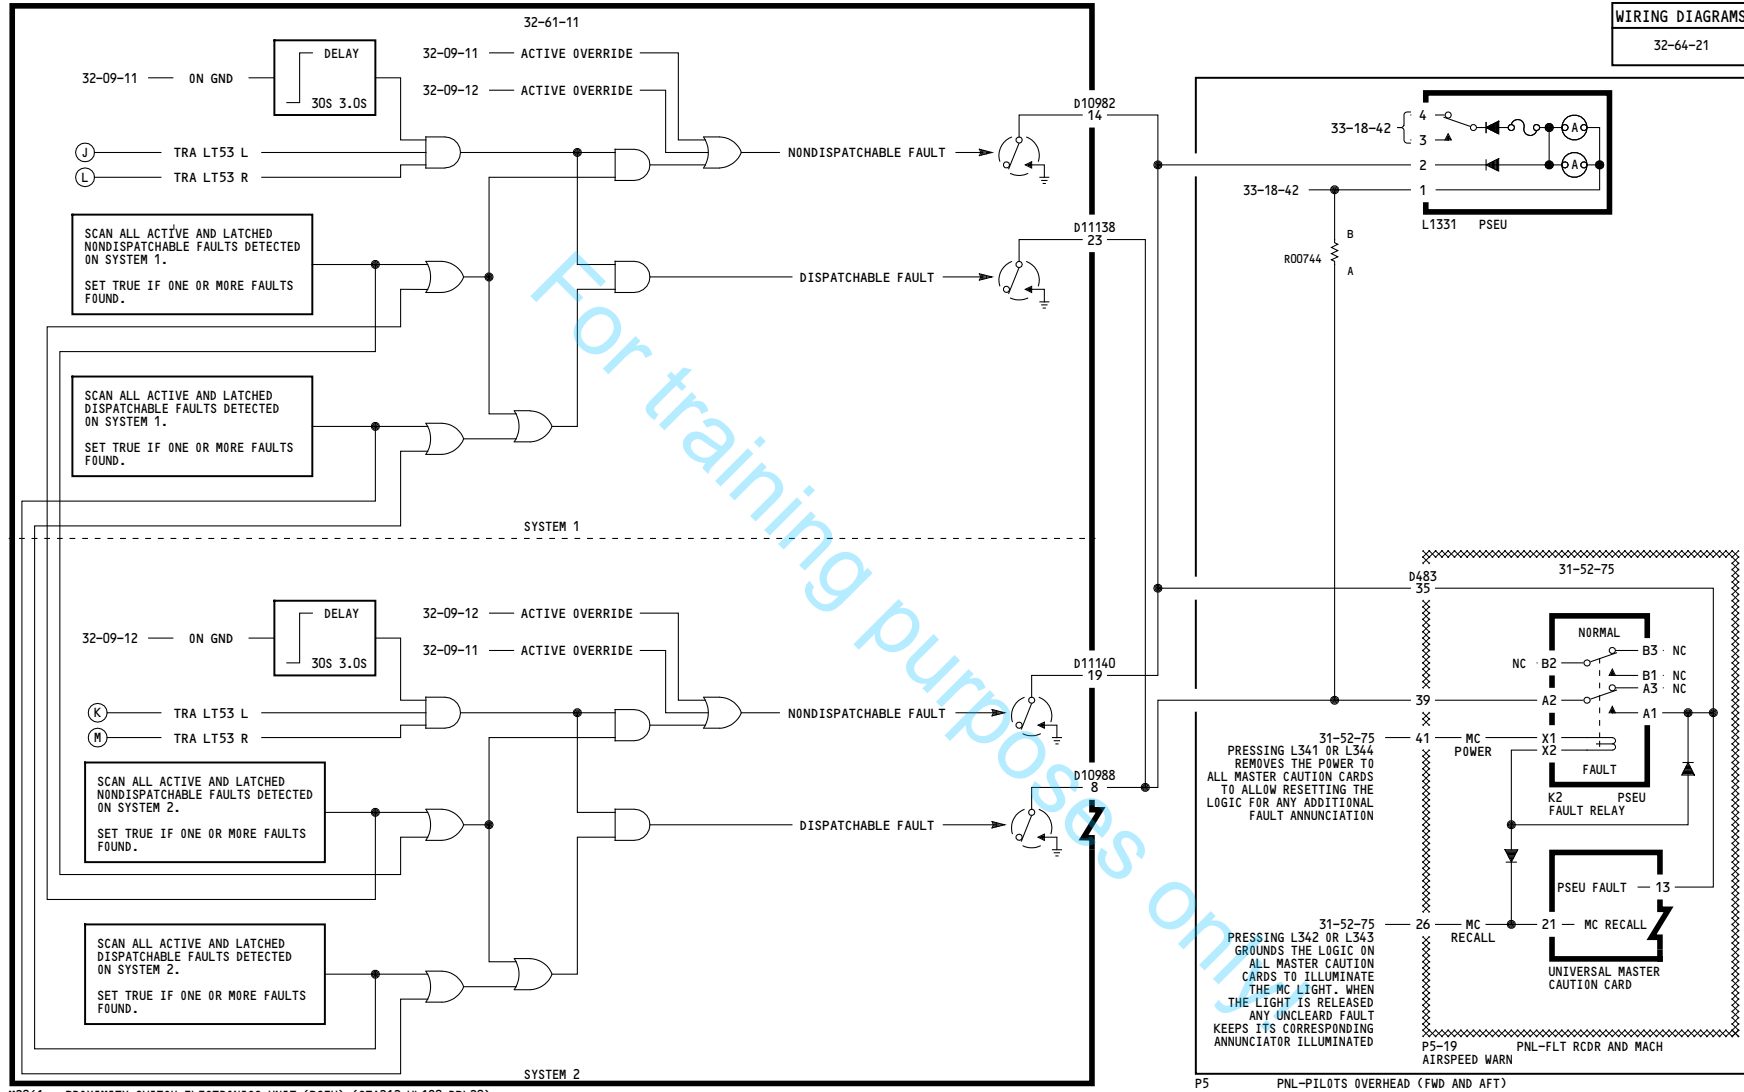

M2061 PROXIMITY SWITCH ELECTRONICS UNIT (PSEU) (STA212 WL180 RBL20)

YD001-YD007

LANDING GEAR WARNING

D280A238

32-61-21

Page 101
Sheet 4
Jun 30/2009