

# **CHAPTER**

# **80**

# **STARTING**

For training purposes only!

CHAPTER 80  
STARTING

CH-SC-SU	Schem	Page	Sheet	Date	CH-SC-SU	Schem	Page	Sheet	Date
80-EFFECTIVE PAGES									
		1		Mar 07/2012					
		2		BLANK					
80-CONTENTS									
		1		May 09/2011					
		2		BLANK					
80-ALPHABETICAL INDEX									
		1		May 02/2008					
		2		BLANK					
80-00-00									
		101		May 02/2008					
80-11-11									
		101		May 09/2011					

A = Added, R = Revised, D = Deleted, O = Overflow

## 80-EFFECTIVE PAGES

Page 1  
Mar 07/2012

D280A238

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

## CHAPTER 80 STARTING

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
<b><u>STARTING</u></b>						
ENGINE STARTING SYSTEM GENERAL ARRANGEMENT	80-00-00		101		May 02/2008	ALL
<b><u>ENGINE STARTING SYSTEM</u></b>						
ENGINE STARTING SYSTEM	80-11-11		101		May 09/2011	ALL

For training purposes only!

## 80-CONTENTS

Page 1  
May 09/2011

D280A238

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

CHAPTER 80  
STARTING

CH-SC-SU	Title
80-11-11	ENGINE STARTING SYSTEM
80-00-00	ENGINE STARTING SYSTEM GENERAL ARRANGEMENT

CH-SC-SU	Title

For training purposes only!





## 80-ALPHABETICAL INDEX

D280A238

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 1  
May 02/2008

-A  
4

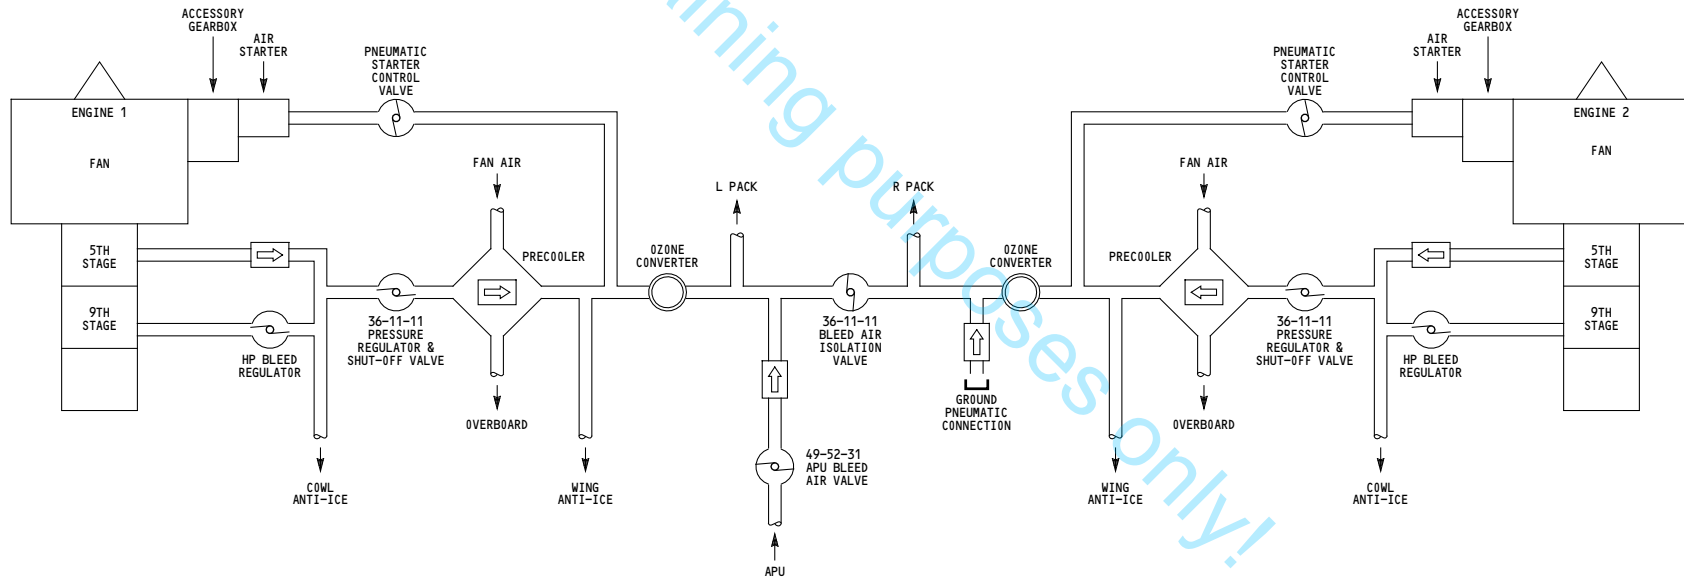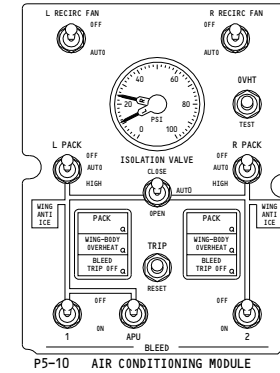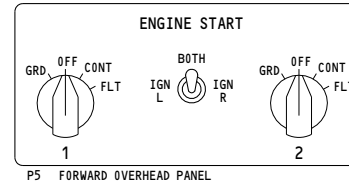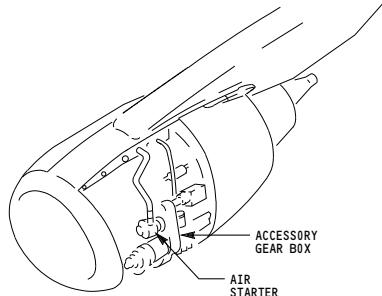

ALL


**ENGINE STARTING SYSTEM  
GENERAL ARRANGEMENT**

D280A238

**80-00-00**

Page 101

May 02/2008

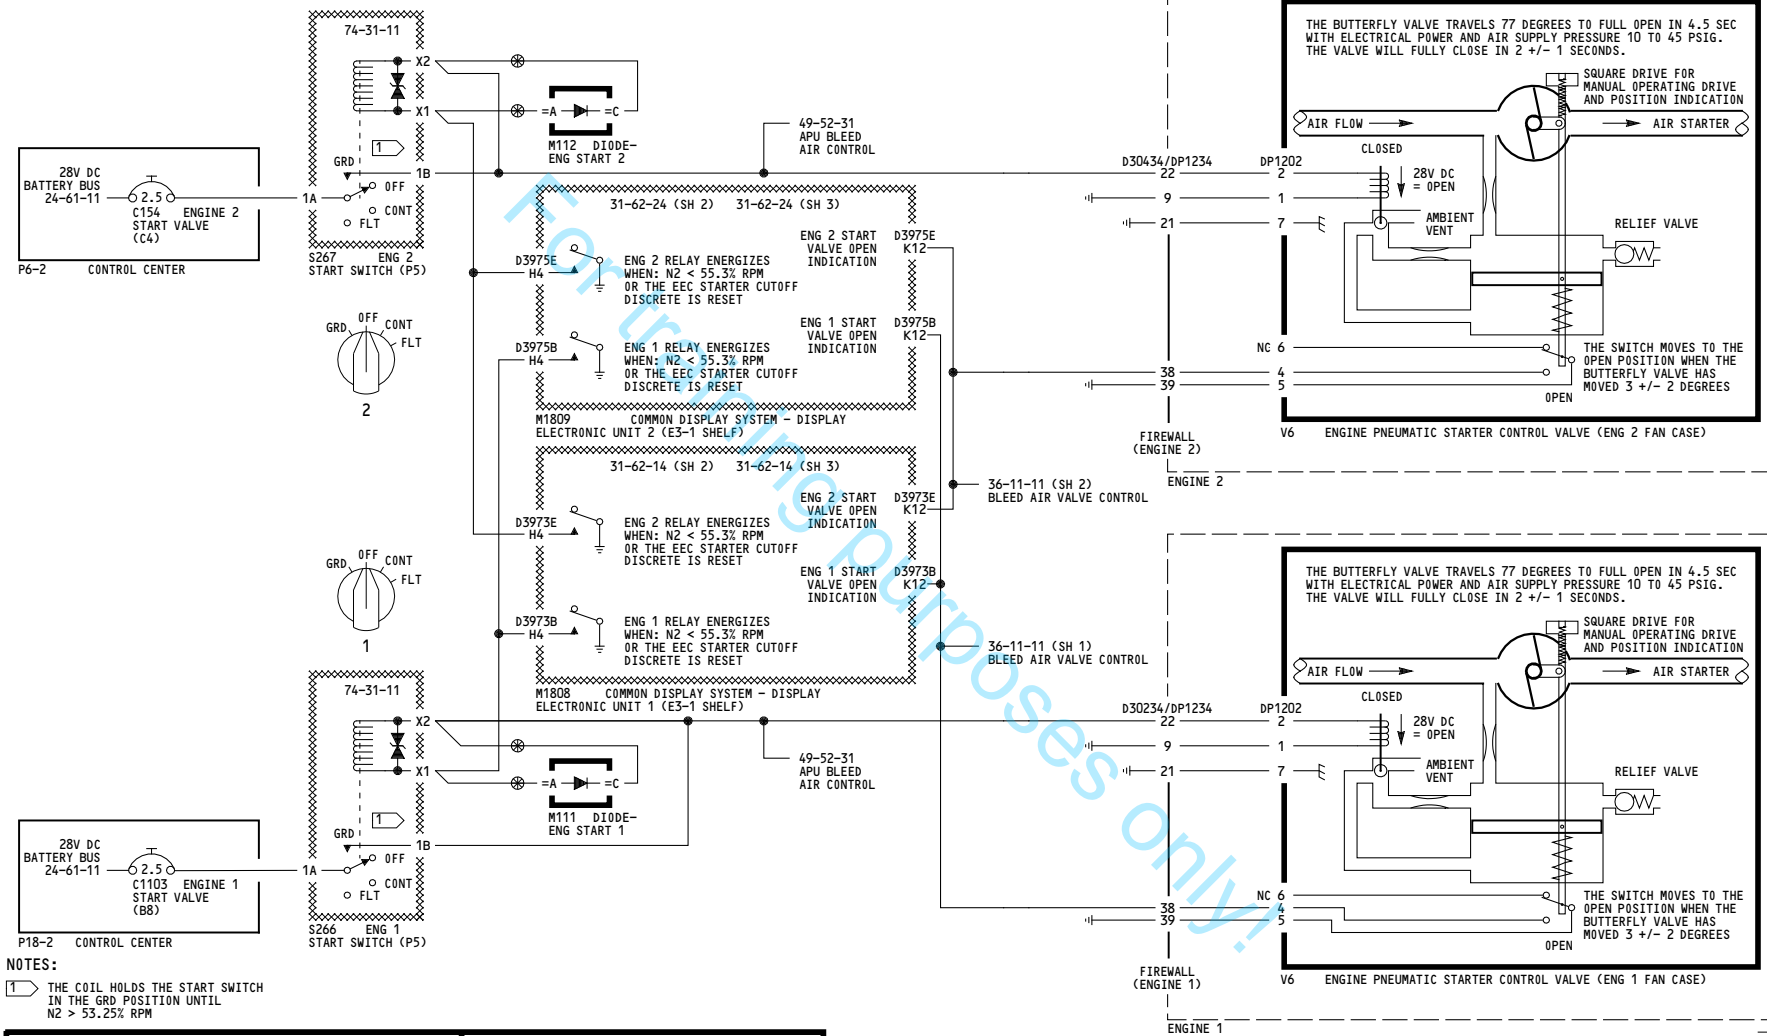

NOTES:

1 THE COIL HOLDS THE START SWITCH  
IN THE GRD POSITION UNTIL  
N2 > 53.25% RPM

ALL

## ENGINE STARTING SYSTEM

D280A238

**80-11-11**

Page 101

May 09/2011