



707, 727-787

STANDARD WIRING PRACTICES MANUAL

AIRPLANE FLAMMABLE LEAKAGE ZONES

| <u>Paragraph</u> | <u>Page</u> |
|---|-------------|
| 1. GENERAL DATA | 1 |
| A. Definition of a Flammable Leakage Zone | 1 |
| B. General Conditions | 1 |
| C. Fire Safety Precautions | 1 |
| 2. LOCATION OF THE FLAMMABLE LEAKAGE ZONES | 2 |
| A. 707 Model Flammable Leakage Zones | 2 |
| B. 727 Model Flammable Leakage Zones | 3 |
| C. 737 Model Flammable Leakage Zones | 4 |
| D. 747 Model Flammable Leakage Zones | 5 |
| E. 757 Model Flammable Leakage Zones | 6 |
| F. 767 Model Flammable Leakage Zones | 7 |
| G. 777 Model Flammable Leakage Zones | 8 |
| H. 787 Model Flammable Leakage Zones | 9 |

20-02-10 CONTENTS



707, 727-787

STANDARD WIRING PRACTICES MANUAL

AIRPLANE FLAMMABLE LEAKAGE ZONES

1. GENERAL DATA

A. Definition of a Flammable Leakage Zone

A flammable leakage zone is an area where leakage of flammable fluids or flammable vapors can occur as a result of:

- One failure
- Leakage during normal operation.

B. General Conditions

Refer to Subject 20-30-00 for the applicable conditions for protection of electrical connections in a flammable leakage zone.

C. Fire Safety Precautions

Refer to Subject 20-00-10 for the fire safety precautions in that apply to the electrical power of the circuits in a flammable leakage zone.

These conditions are applicable in an area where there are flammable vapors:

- All flames, smoking, sparks, and other sources of ignition must not occur
- Tools and test equipment that can make a spark must not be used
- A megohmmeter must not be used
- All electrical equipment, such as lights, motors, wiring, etc., must meet the necessary electrical and fire codes
- The accumulation of vapors must be prevented by sufficient ventilation.

20-02-10

Page 1
Nov 01/2008


D6-54446

STANDARD WIRING PRACTICES MANUAL

AIRPLANE FLAMMABLE LEAKAGE ZONES

2. LOCATION OF THE FLAMMABLE LEAKAGE ZONES

A. 707 Model Flammable Leakage Zones

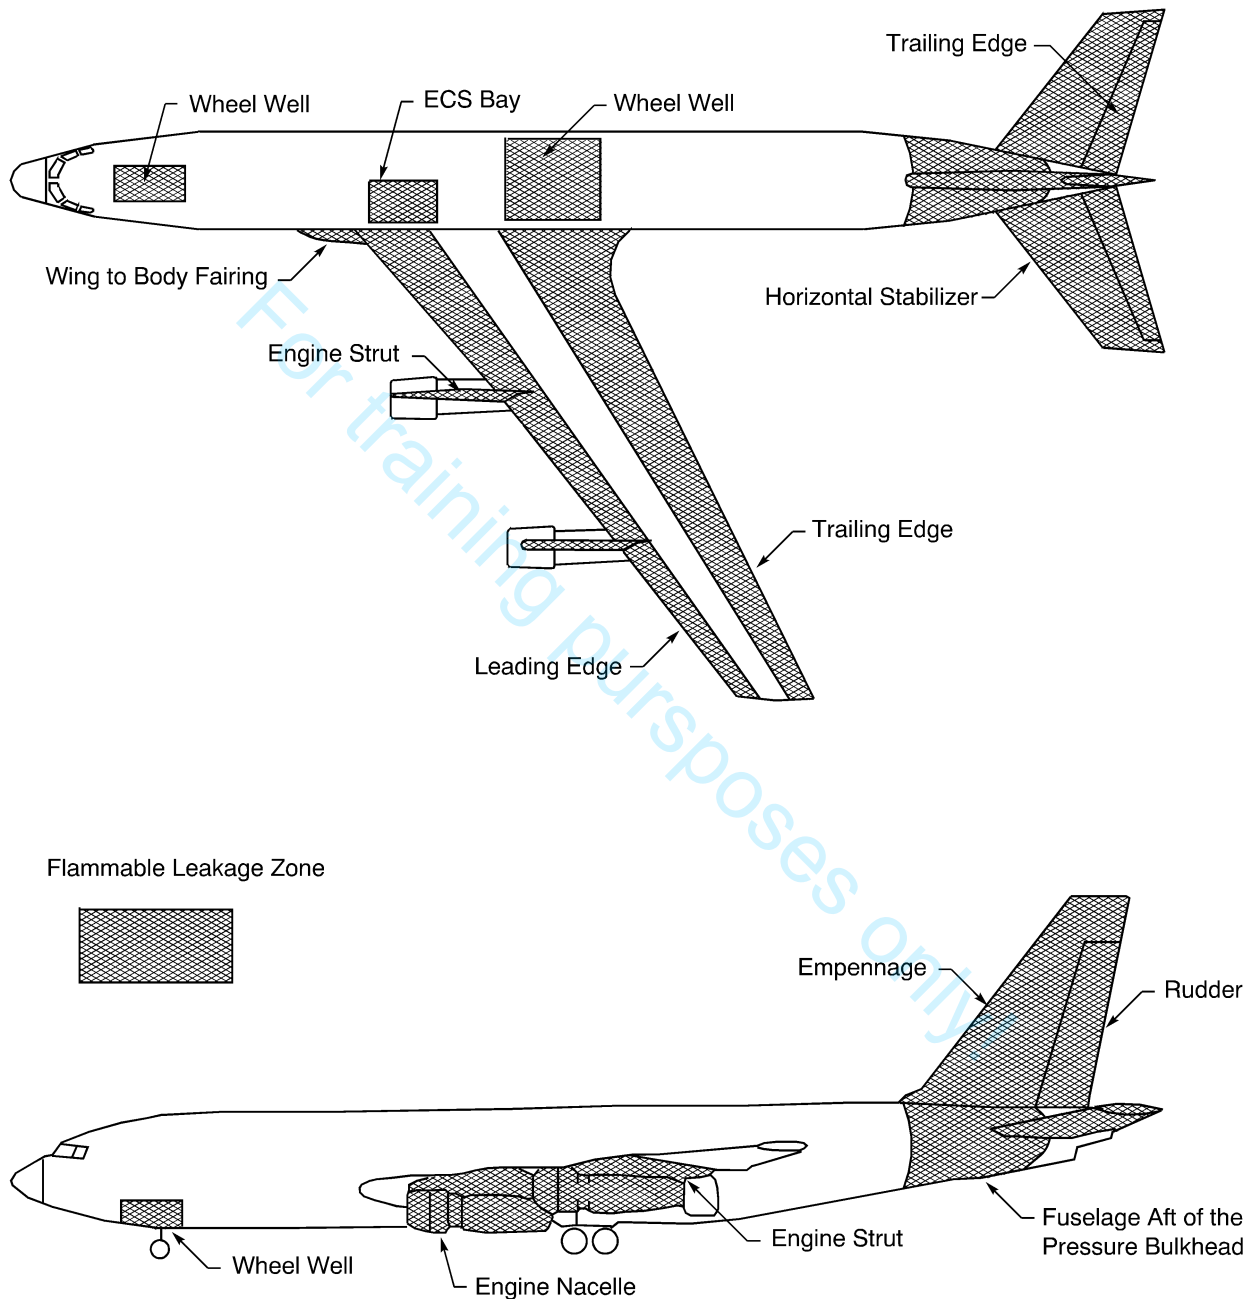


FLAMMABLE LEAKAGE ZONES
Figure 1

20-02-10



STANDARD WIRING PRACTICES MANUAL

AIRPLANE FLAMMABLE LEAKAGE ZONES

B. 727 Model Flammable Leakage Zones

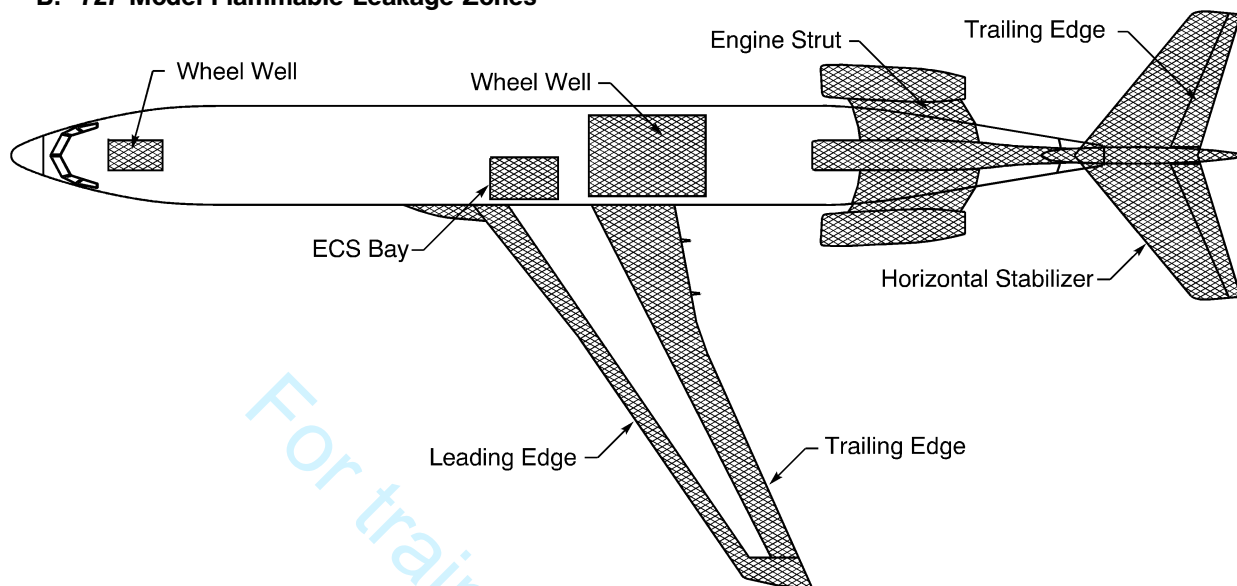

Flammable Leakage Zone

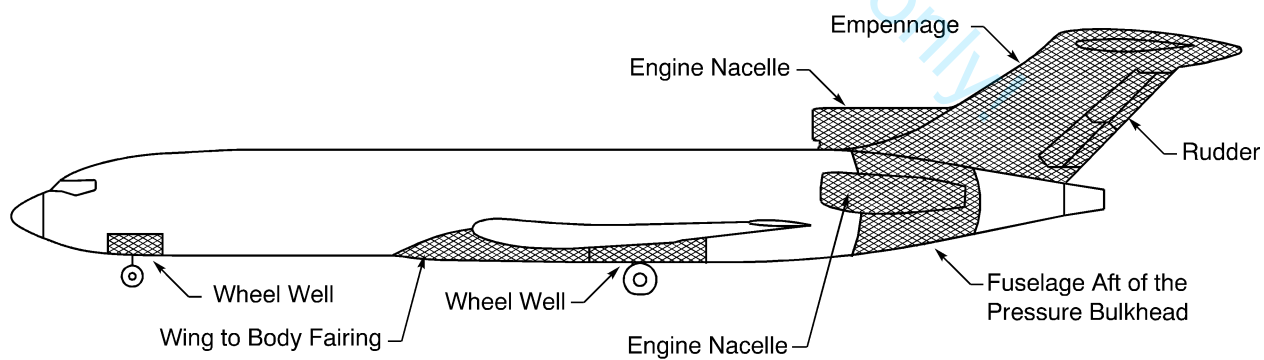 

FLAMMABLE LEAKAGE ZONES


Figure 2

20-02-10

STANDARD WIRING PRACTICES MANUAL

AIRPLANE FLAMMABLE LEAKAGE ZONES

C. 737 Model Flammable Leakage Zones

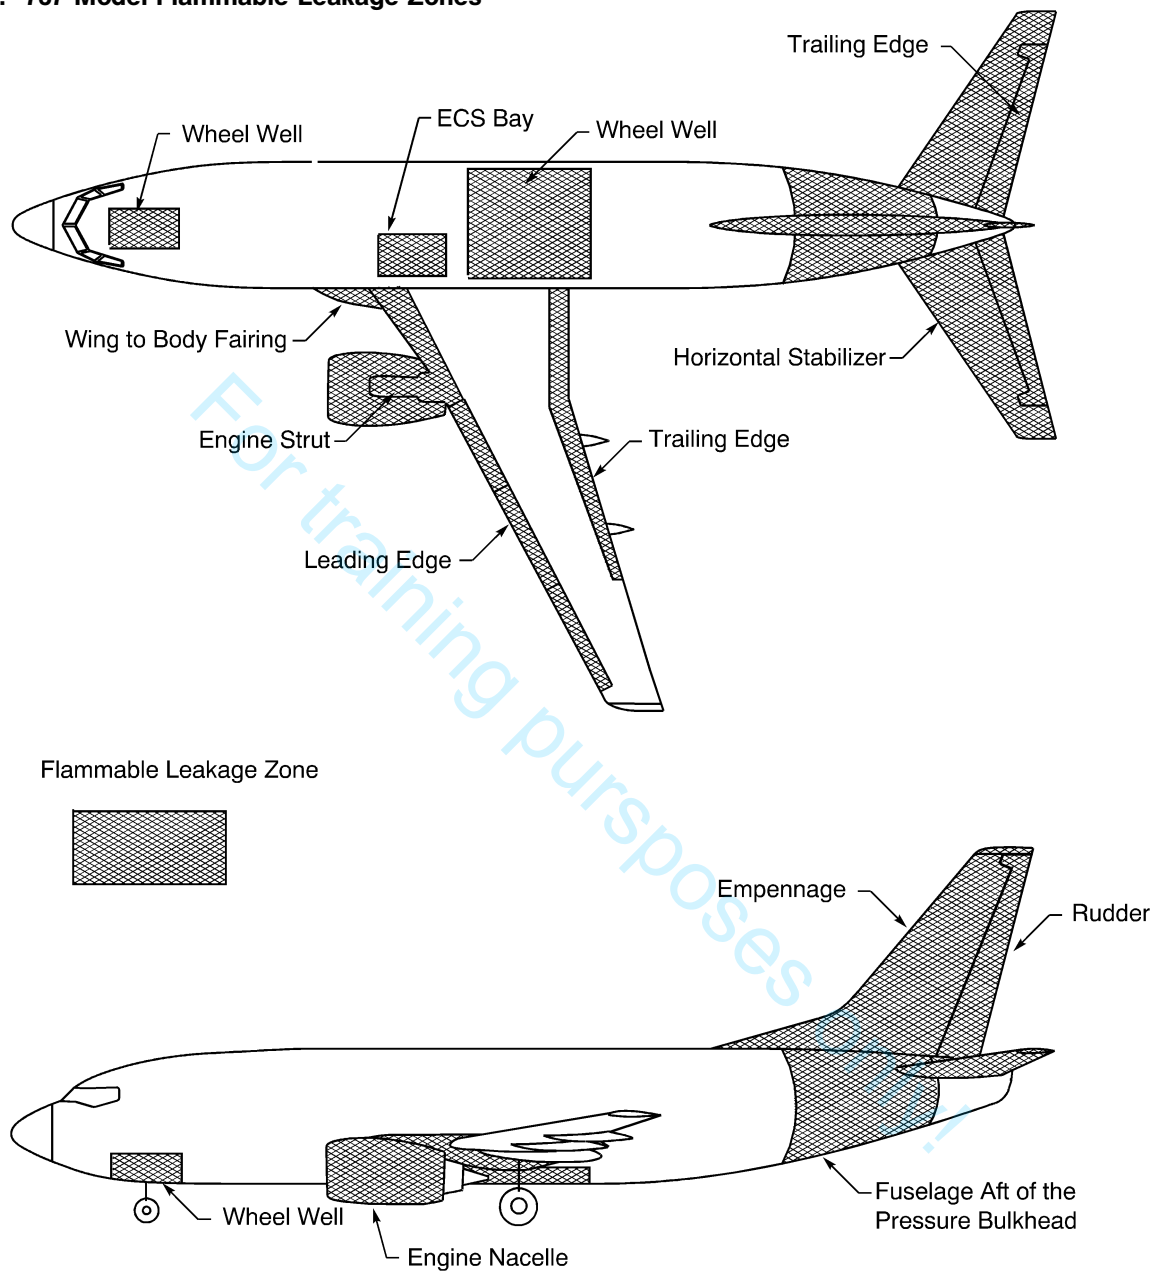

FLAMMABLE LEAKAGE ZONES


Figure 3

20-02-10

STANDARD WIRING PRACTICES MANUAL

AIRPLANE FLAMMABLE LEAKAGE ZONES

D. 747 Model Flammable Leakage Zones

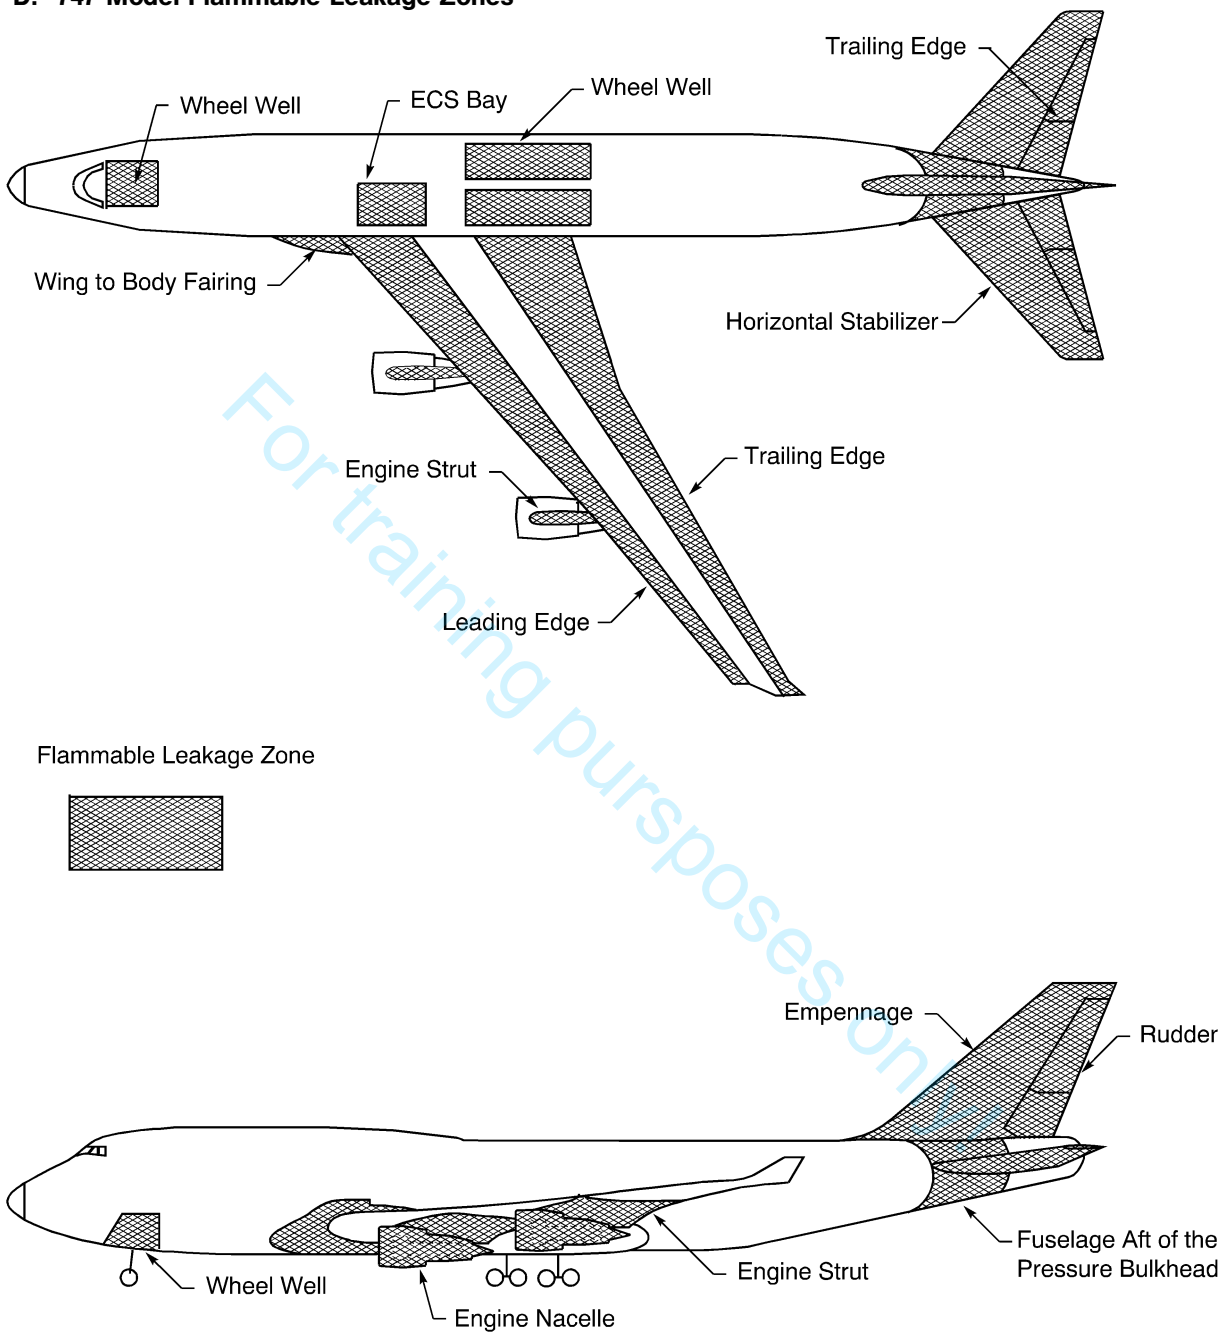

FLAMMABLE LEAKAGE ZONES


Figure 4

20-02-10



STANDARD WIRING PRACTICES MANUAL

AIRPLANE FLAMMABLE LEAKAGE ZONES

E. 757 Model Flammable Leakage Zones

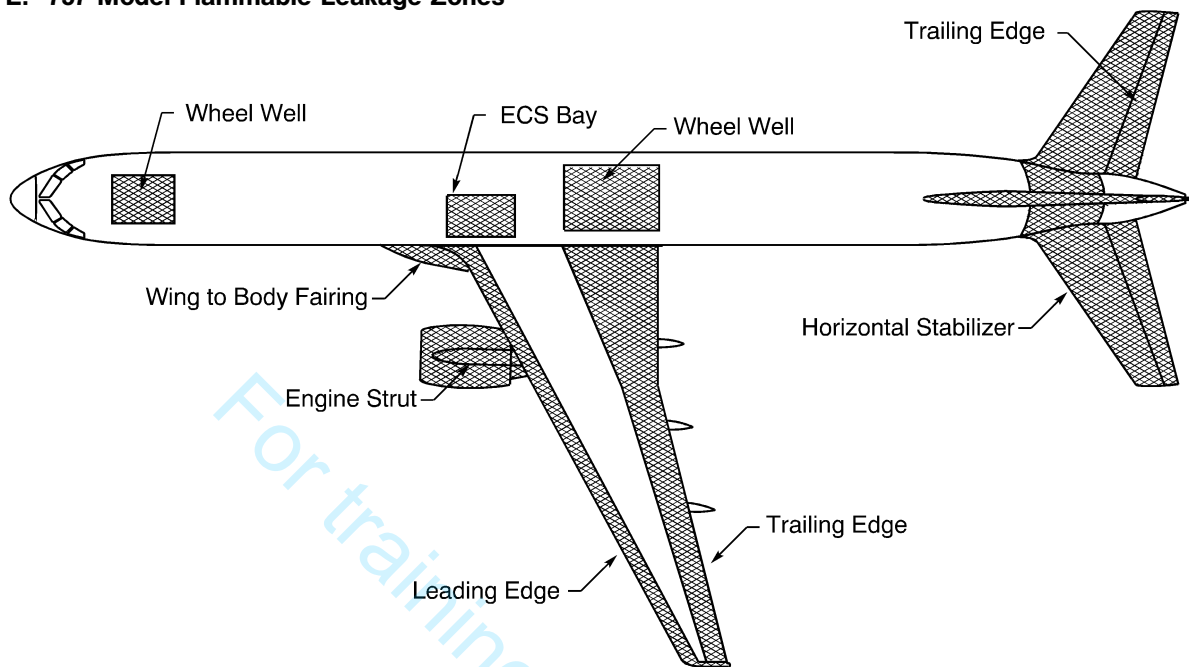

Flammable Leakage Zone

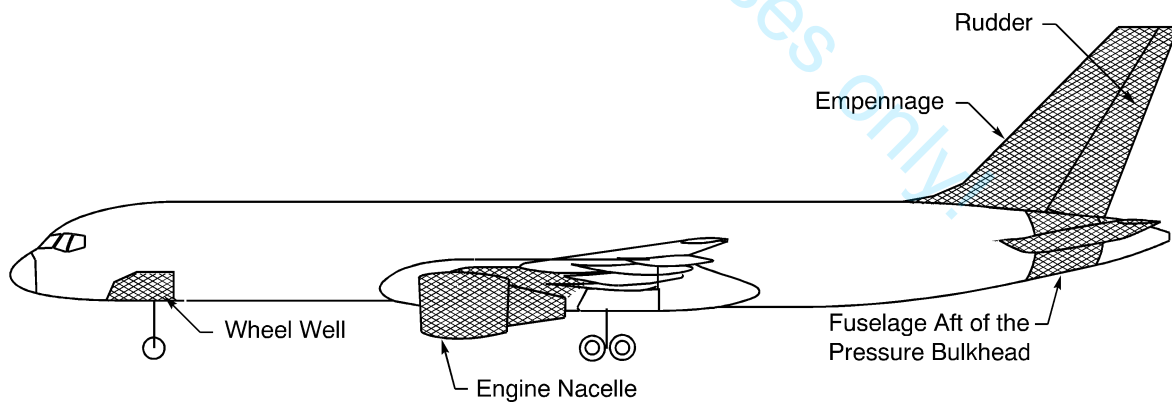 

FLAMMABLE LEAKAGE ZONES


Figure 5

20-02-10

STANDARD WIRING PRACTICES MANUAL

AIRPLANE FLAMMABLE LEAKAGE ZONES

F. 767 Model Flammable Leakage Zones

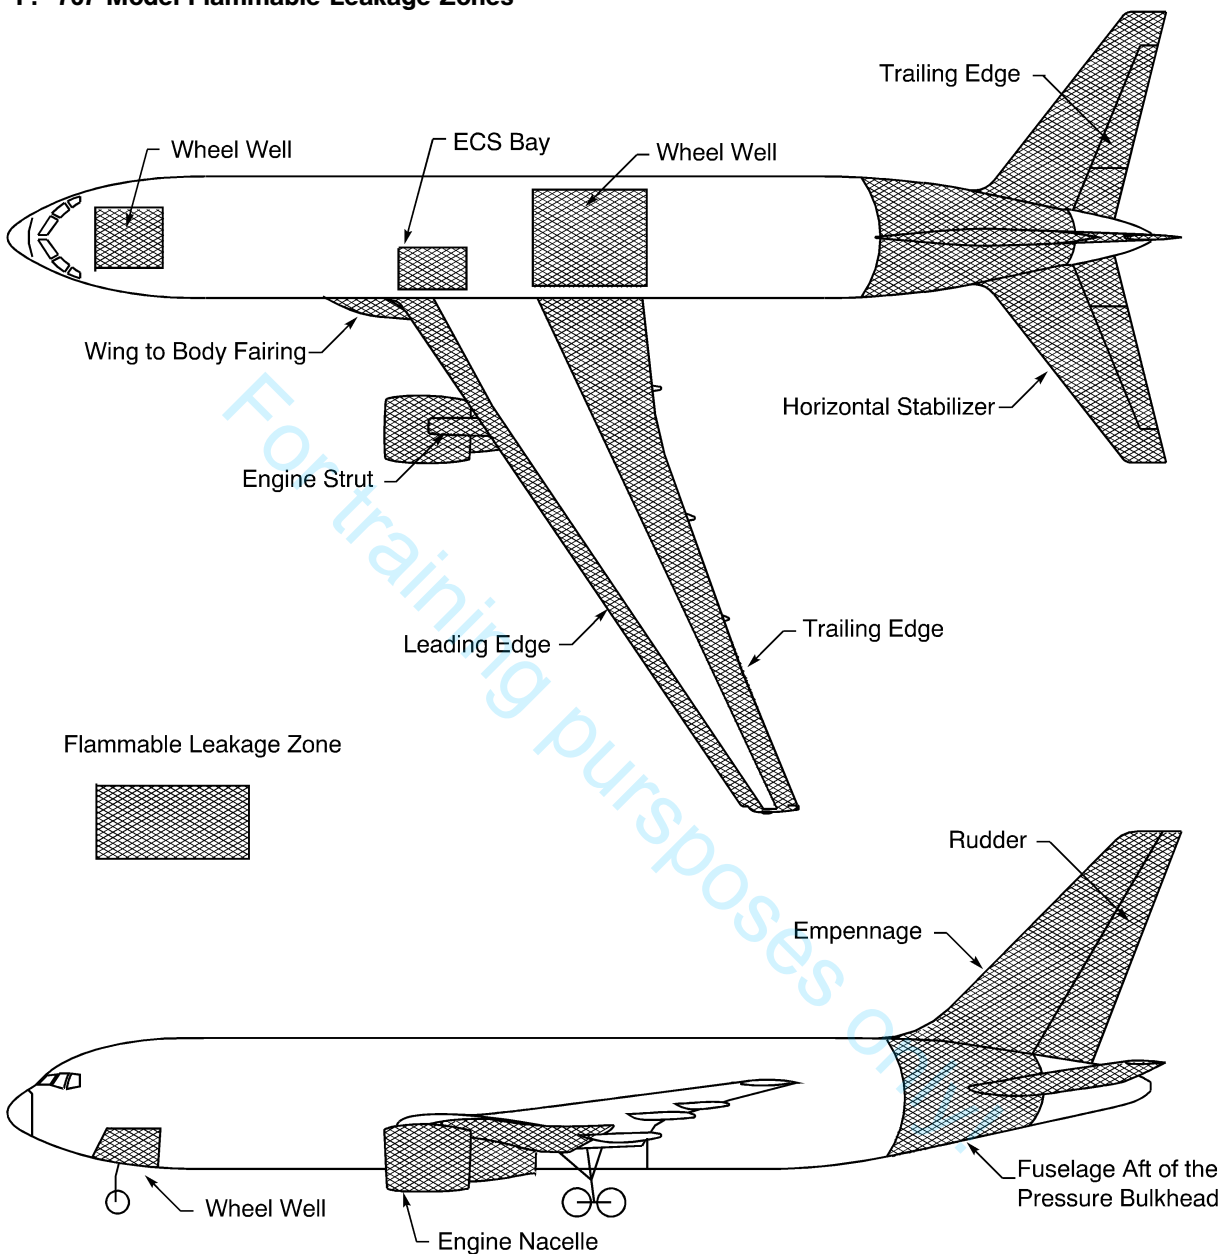

FLAMMABLE LEAKAGE ZONES


Figure 6

20-02-10

STANDARD WIRING PRACTICES MANUAL

AIRPLANE FLAMMABLE LEAKAGE ZONES

G. 777 Model Flammable Leakage Zones

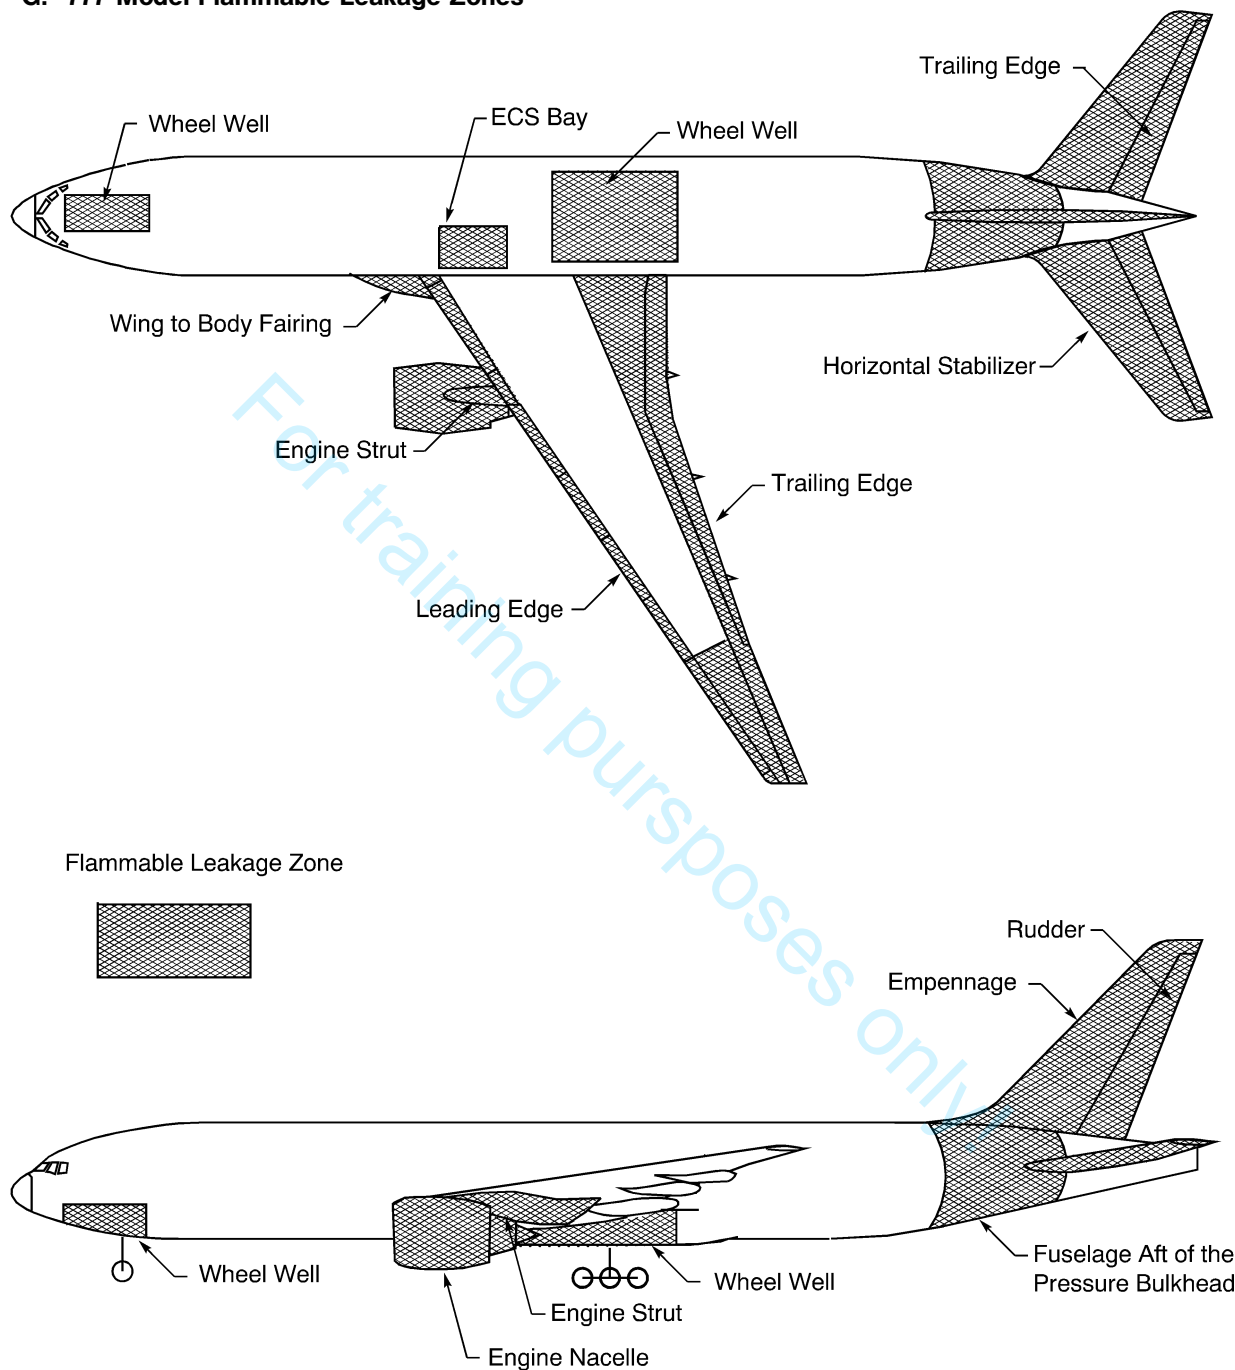


FLAMMABLE LEAKAGE ZONES
Figure 7

20-02-10


STANDARD WIRING PRACTICES MANUAL

AIRPLANE FLAMMABLE LEAKAGE ZONES

H. 787 Model Flammable Leakage Zones

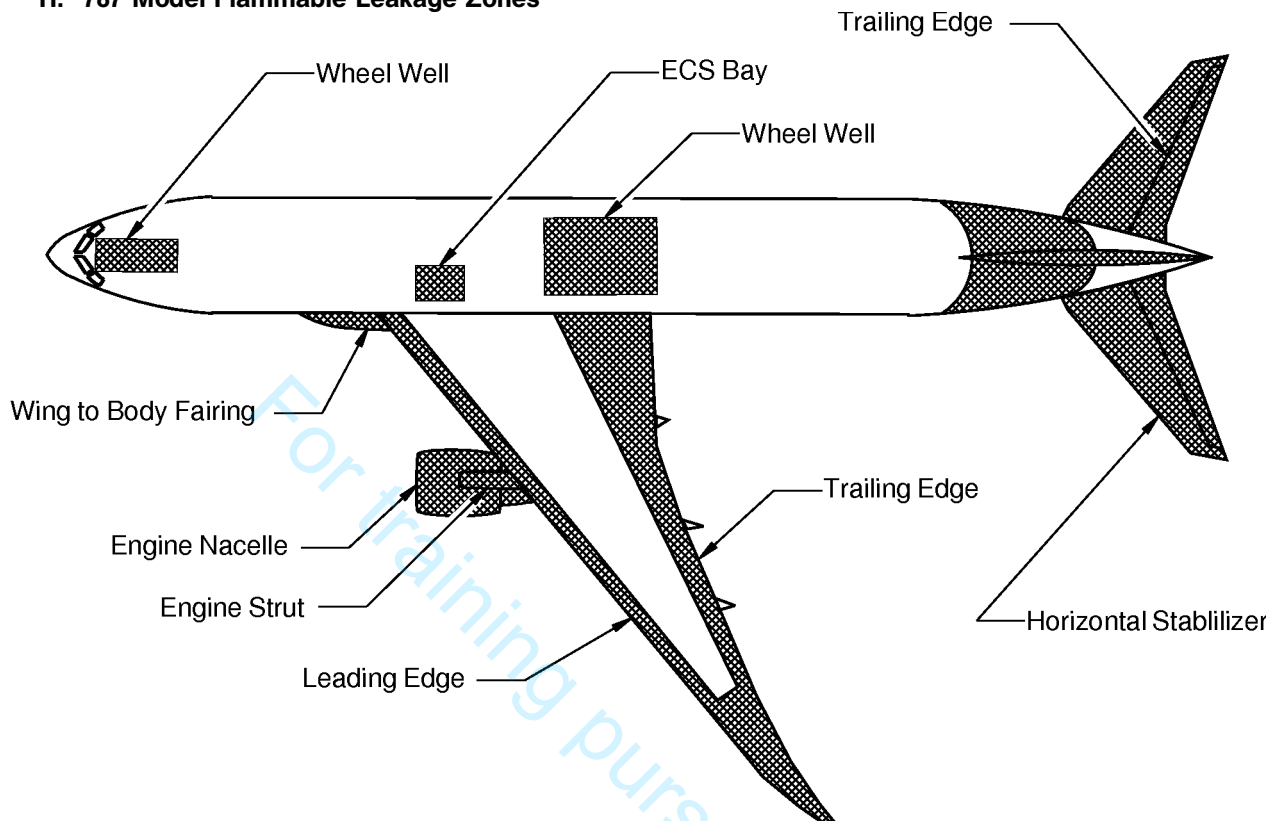

Flammable Leakage Zone

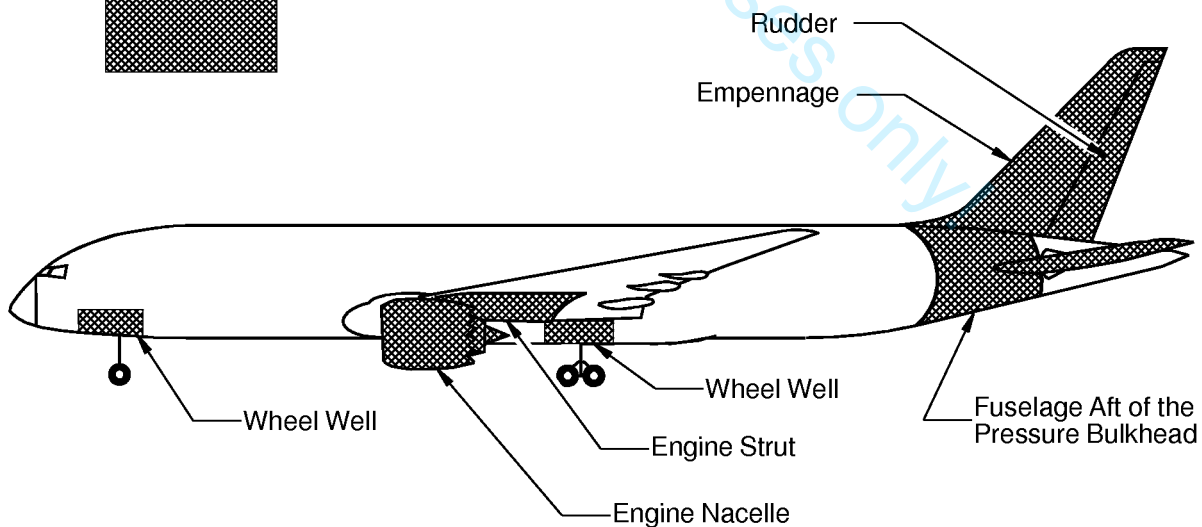

FLAMMABLE LEAKAGE ZONES

Figure 8

20-02-10



707, 727-787

STANDARD WIRING PRACTICES MANUAL

AIRPLANE TEMPERATURE AREAS

| <u>Paragraph</u> | <u>Page</u> |
|--|-------------|
| 1. <u>GENERAL DATA</u> | 1 |
| A. General Conditions | 1 |
| 2. <u>LOCATION OF HIGH TEMPERATURE AREAS</u> | 2 |
| A. Usual Location of High Temperature Areas | 2 |

For training purposes only!

20-02-20 CONTENTS

Page 1
Jun 01/2009

D6-54446



707, 727-787

STANDARD WIRING PRACTICES MANUAL

AIRPLANE TEMPERATURE AREAS

1. GENERAL DATA

A. General Conditions

The materials used for repair of a wire harness in a high temperature area must have Temperature Grade D.

Refer to:

- The applicable repair subject for the selection of materials
- Subject 20-10-13 for the general conditions for the repair of wire and cable.

For training purposes only!


20-02-20

STANDARD WIRING PRACTICES MANUAL

AIRPLANE TEMPERATURE AREAS

2. LOCATION OF HIGH TEMPERATURE AREAS

A. Usual Location of High Temperature Areas

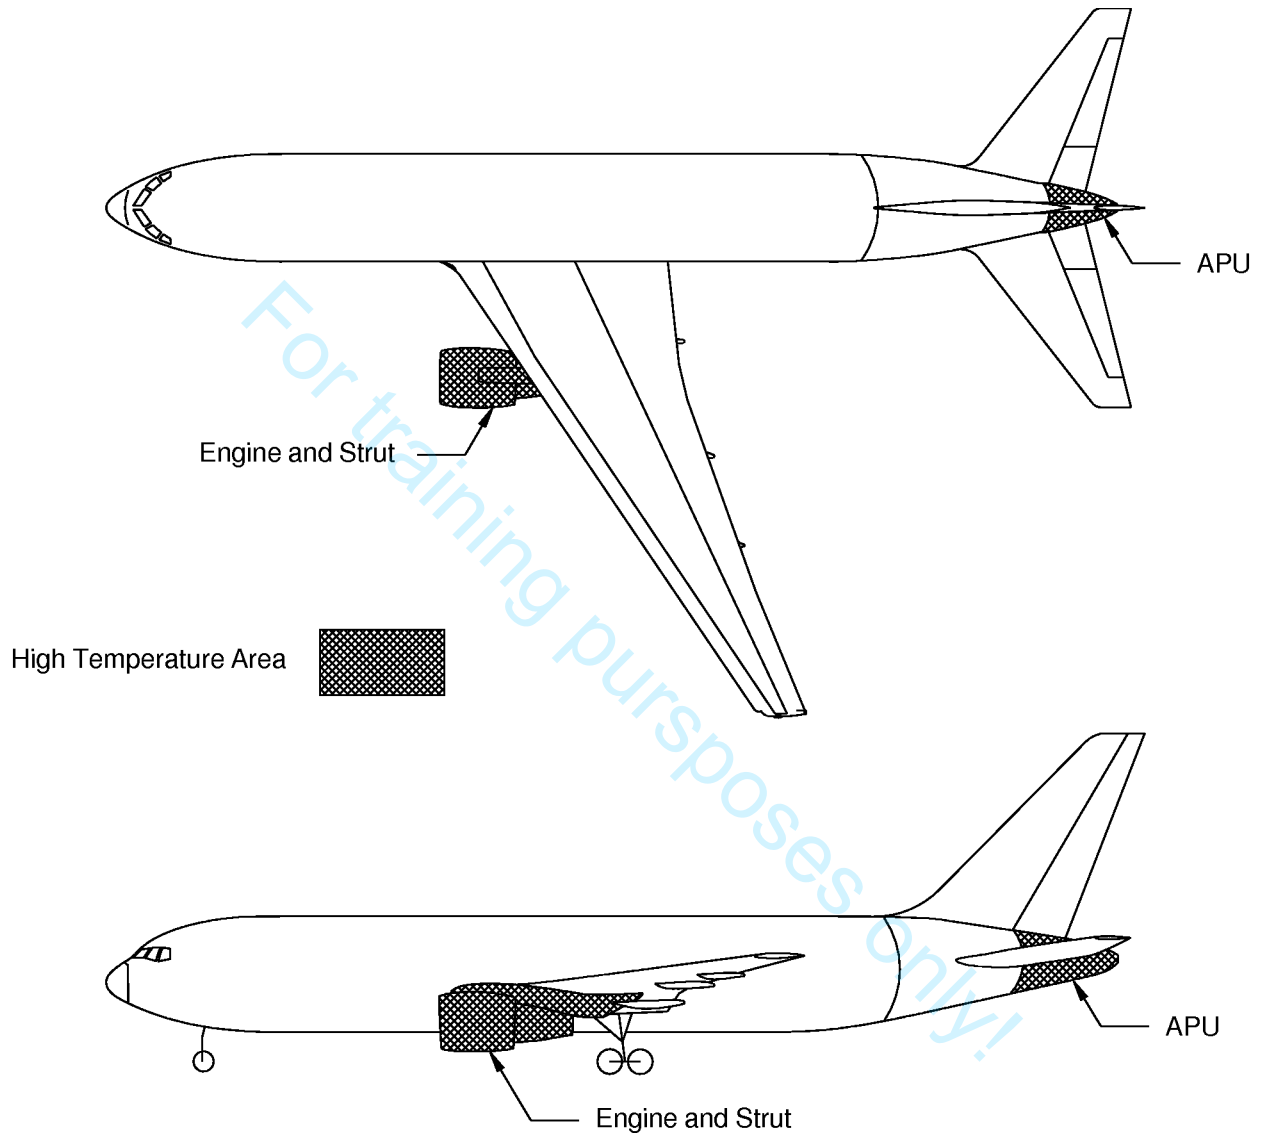

USUAL LOCATIONS OF HIGH TEMPERATURE AREAS FOR ALL MODELS

Figure 1

20-02-20



707, 727-787

STANDARD WIRING PRACTICES MANUAL

AIRPLANE VIBRATION AREAS

| <u>Paragraph</u> | <u>Page</u> |
|---|-------------|
| 1. <u>GENERAL DATA</u> | 1 |
| A. General Conditions | 1 |
| 2. <u>LOCATION OF THE VIBRATION AREAS</u> | 1 |
| A. Usual Locations of the Vibration Areas | 1 |

For training purposes only!

20-02-30 CONTENTS

Page 1
Jun 01/2009

D6-54446

STANDARD WIRING PRACTICES MANUAL**AIRPLANE VIBRATION AREAS****1. GENERAL DATA****A. General Conditions**

For the applicable conditions for the assembly and installation of wire harnesses in a high vibration area, refer to Subject 20-10-11.

2. LOCATION OF THE VIBRATION AREAS**A. Usual Locations of the Vibration Areas**

Table 1
VIBRATION LEVEL AND VIBRATION AREA TYPE

| Vibration Level | Type |
|------------------------|---------------------------|
| 1 | Not a high vibration area |
| 2 | A high vibration area |
| 3 | A high vibration area |

The usual locations for vibration areas with Vibration Level 1 are:

- The cabin
- The EE bay
- The cargo area.

The usual locations for vibration areas with Vibration Level 2 are:

- The ECS bay
- The empennage
- The fuel tanks
- The horizontal stabilizer
- The leading edge of the wing
- The radome
- The rudder
- The struts
- The trailing edge of the wing
- The wheel wells
- The wing to body fairing.


The usual locations for vibration areas with Vibration Level 3 are:

- The engine core
- The engine nacelle
- The APU compartment.

Refer to Figure 1.

STANDARD WIRING PRACTICES MANUAL

AIRPLANE VIBRATION AREAS

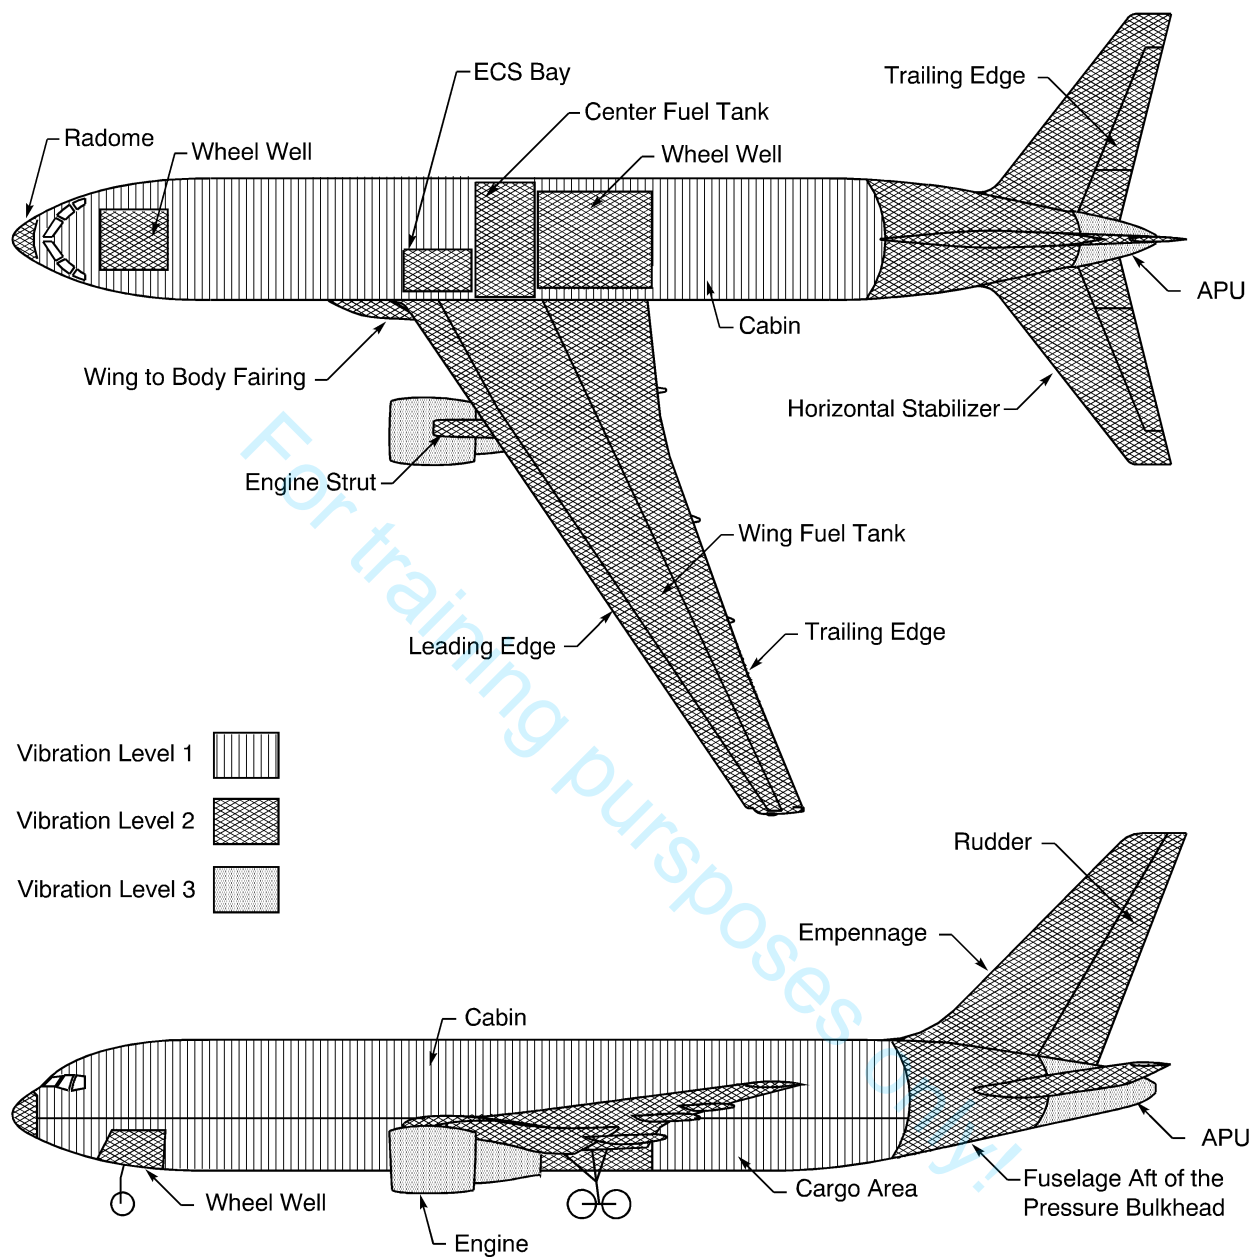

USUAL LOCATIONS OF THE VIBRATION AREAS FOR ALL MODELS

Figure 1

20-02-30