



707, 727-787

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF 10-60450 FRONT RELEASE PLUG-IN RELAY SOCKETS

<u>Paragraph</u>	<u>Page</u>
1. <u>PART NUMBERS AND DESCRIPTION</u>	1
A. Relay Socket Part Numbers	1
B. Contact Part Numbers	1
2. <u>RELAY SOCKET DISASSEMBLY</u>	2
A. Contact Removal	2
3. <u>RELAY SOCKET ASSEMBLY</u>	3
A. Contact Assembly	3
B. Contact Insertion	4
C. Spare Contact Installation	5
D. Polarization Plug Installation	5
4. <u>APPROVED TOOL SUPPLIERS</u>	6
A. Contact Insertion Tools	6
B. Contact Crimp Tools	6
C. Contact Removal Tools	6

20-81-11 CONTENTS

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF 10-60450 FRONT RELEASE PLUG-IN RELAY SOCKETS


1. PART NUMBERS AND DESCRIPTION

A. Relay Socket Part Numbers

Table 1
RELAY SOCKET PART NUMBERS


Boeing Standard	Part Number	Supplier
10-60450	82164-1F	Clover
	105-100-02	Methode
	000300-0445	Viking

B. Contact Part Numbers

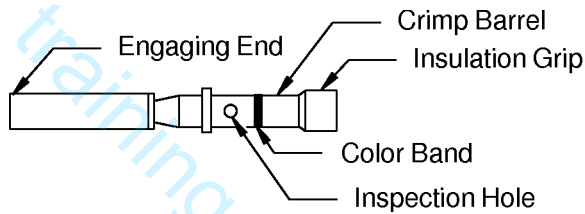

FRONT RELEASE SOCKET CONTACTS

Figure 1

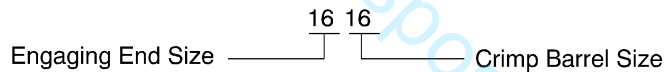

EXAMPLE OF CONTACT SIZE

Figure 2

Table 2
CONTACT PART NUMBERS

Contact Size	Part Number	Supplier
1616	BACC47CP2T	Boeing
	MS24255-16S	QPL
1614	248-136-1614S-02	Amphenol

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF 10-60450 FRONT RELEASE PLUG-IN RELAY SOCKETS

Table 3
ALTERNATIVE CONTACT PART NUMBERS

Specified Contact		Alternative Contact	
Part Number	Supplier	Part Number	Supplier
BACC47CP2T	Boeing	248-136-1600S-02	Tri-Star
		418-1616-902	Burndy
		ZZL-4116-36LT	Pyle-National
		248-136-1614S-02	Amphenol
248-136-1614S-02	Amphenol	P-208575-S	Pyle-National

2. RELAY SOCKET DISASSEMBLY

A. Contact Removal

Table 4
CONTACT REMOVAL TOOLS

Contact Engaging End Size	Removal Tool
16	AT 2016
	ATML 1908
	M81969/19-08
	MS24256R16
	DRK16

- (1) Make a selection of a contact removal tool from Table 4.
- (2) At the front of the relay socket, axially align the contact removal tool and the contact cavity.
- (3) Put the tip of the removal tool on the engaging end of the contact.
- (4) Carefully push the removal tool into the contact cavity until it stops.
- (5) Push the removal tool, and at the same time, push the internal plunger of the removal tool.
Make sure that the contact moves out of the rear of the relay socket.

CAUTION: DO NOT USE MORE FORCE THAN THE FORCE THAT IS NECESSARY TO PUSH THE REMOVAL TOOL INTO THE CONTACT CAVITY. DAMAGE TO THE CONTACT RETENTION CLIPS CAN OCCUR.

- (6) Carefully pull the removal tool out of the contact cavity.
- (7) Pull the wire and contact out of the contact cavity at the rear of the relay socket.

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF 10-60450 FRONT RELEASE PLUG-IN RELAY SOCKETS

3. RELAY SOCKET ASSEMBLY

A. Contact Assembly


Table 5
CONTACT CRIMP TOOLS

Wire Size (AWG)	Contact Size	Crimp Tool			
		Basic Unit		Locator	
		Part Number	Setting	Part Number	Color
24	1616	M22520/1-01	2	M22520/1-02	Blue
22	1616	M22520/1-01	3	M22520/1-02	Blue
20	1616	M22520/1-01	4	M22520/1-02	Blue
		MS3191-1	-	MS3191-16	-
18	1616	M22520/1-01	5	M22520/1-02	Blue
		MS3191-1	-	MS3191-16	-
16	1616	M22520/1-01	6	M22520/1-02	Blue
		MS3191-1	-	MS3191-16	-
14	1614	M22520/1-01	7	M22520/1-02	Blue

- (1) Make a selection of a crimp tool from Table 5.
- (2) Remove 0.28 inch \pm 0.03 inch of the wire insulation from the end of the wire.

Refer to:

- Figure 3
- Subject 20-00-15 for the insulation removal procedures.

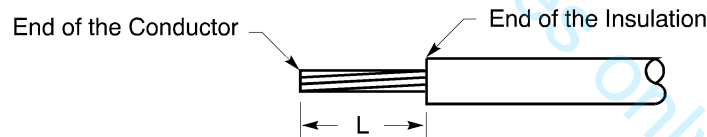

WIRE PREPARATION
Figure 3

- (3) Put the end of the wire into the crimp barrel of the contact. Refer to Figure 4.


Make sure that:

- The conductor can be seen in the inspection hole of the contact
- All of the strands of the conductor are in the crimp barrel
- The distance between the rear end of the contact and the wire insulation is 0.03 inch maximum.

20-81-11

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF 10-60450 FRONT RELEASE PLUG-IN RELAY SOCKETS

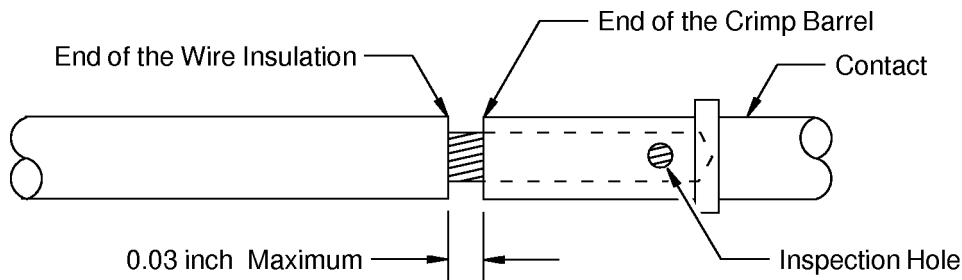

POSITION OF THE WIRE IN THE CRIMP BARREL

Figure 4

- (4) Crimp the contact.

Make sure that:


- Make sure the conductor can be seen in the inspection hole of the contact.
- The distance between the rear end of the contact and the wire insulation is 0.03 inch maximum
- The contact does not have a bend larger than 3.5 degrees from the longitudinal axis of the contact.

B. Contact Insertion

Table 6
CONTACT INSERTION TOOLS

Contact Size	Insertion Tool	Supplier
1616	M81969/17-04	QPL
1614	M81969/17-04	QPL

- (1) Make a selection of an insertion tool from Table 6.
- (2) Put the end of the insertion tool tip against the contact shoulder. Refer to Figure 5.

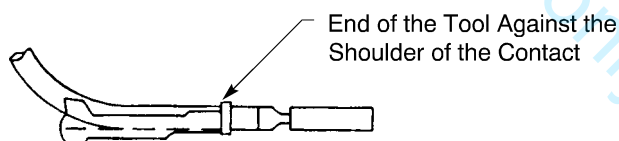

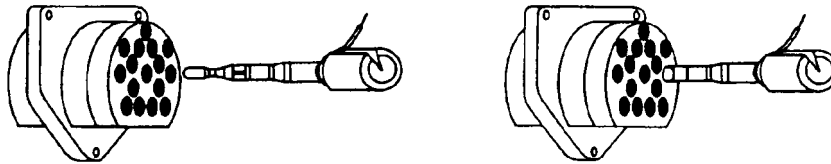
INSERTION TOOL POSITION ON THE CONTACT

Figure 5

- (3) At the rear of the connector, carefully push the tool and the contact into the contact cavity until it stops. Refer to Figure 6.

Make sure that the insertion tool stays aligned with the contact cavity.

20-81-11

STANDARD WIRING PRACTICES MANUAL
ASSEMBLY OF 10-60450 FRONT RELEASE PLUG-IN RELAY SOCKETS


CONTACT INSERTION
Figure 6

NOTE: The 10-60450-4 relay socket does not have a rubber grommet.

- (4) Carefully remove the insertion tool.
- (5) Lightly pull on the wire to make sure that the contact is locked in the contact cavity.

CAUTION: DO NOT MAKE A DENT IN THE INSULATION OF WIRE WITH THE FINGERNAILS. DAMAGE TO THE INSULATION CAN OCCUR.

C. Spare Contact Installation

- (1) Install a spare contact in each unused contact cavity.
Refer to Subject 20-60-08.

D. Polarization Plug Installation

Polarization plugs come with the relay socket.




10-60540-1 AND 10-60540-6 RELAY SOCKET POLARIZATION - KEY G1
Figure 7



10-60540-2 RELAY SOCKET POLARIZATION - KEY G2
Figure 8

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF 10-60450 FRONT RELEASE PLUG-IN RELAY SOCKETS

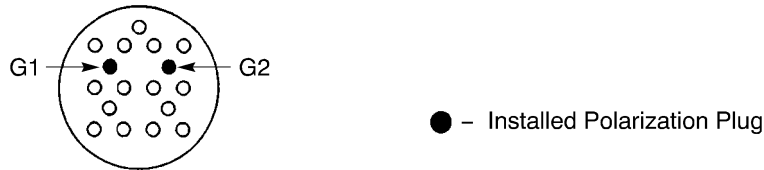

10-60540-3 RELAY SOCKET POLARIZATION - KEY G3

Figure 9

- (1) Install polarization plugs in the socket. Refer to Figure 7, Figure 8, and Figure 9 for the correct key.
 - (a) Make a selection of an insertion tool from Table 6.
 - (b) Put the end of the insertion tool tip against the plug shoulder.
 - (c) Carefully push the plug straight through the grommet hole until the plug is completely inserted.

4. APPROVED TOOL SUPPLIERS

A. Contact Insertion Tools

Table 7
INSERTION TOOL SUPPLIERS

Insertion Tool	Supplier
M81969/17-04	QPL

B. Contact Crimp Tools

Table 8
CRIMP TOOL SUPPLIERS

Crimp Tool	Supplier
M22520/1-01	QPL
M22520/1-02	QPL
MS3191-1	QPL
MS3191-16	QPL

C. Contact Removal Tools

Table 9
REMOVAL TOOL SUPPLIERS

Removal Tool	Supplier
AT 2016	Astro
ATML 1908	Astro
DRK16	Daniels
M81969/19-08	QPL

20-81-11



707, 727-787

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF 10-60450 FRONT RELEASE PLUG-IN RELAY SOCKETS

Table 9 (continued)

Removal Tool	Supplier
MS24256R16	QPL

For training purposes only!

20-81-11

Page 7
Jun 01/2012

D6-54446



707, 727-787

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS

<u>Paragraph</u>	<u>Page</u>
1. <u>PART NUMBERS AND DESCRIPTION</u>	1
A. Relay Socket Part Numbers	1
B. Contact Part Numbers	2
C. Contact Configurations	4
2. <u>RELAY SOCKET DISASSEMBLY</u>	6
A. Contact Removal	6
3. <u>RELAY SOCKET ASSEMBLY</u>	6
A. Contact Assembly	6
B. Contact Insertion	15
C. Spare Contact or Seal Plug Installation	16
4. <u>APPROVED TOOL SUPPLIERS</u>	17
A. Contact Crimp Tools	17
B. Contact Insertion Tool Suppliers	17
C. Contact Removal Tool Suppliers	17

20-81-12 CONTENTS

STANDARD WIRING PRACTICES MANUAL
ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS

This Subject gives the procedures to assemble BACS16W and BACS16X relay sockets.

These relay sockets have front release contacts.

Refer to Subject 20-81-22 for the installation of these relay sockets.

1. PART NUMBERS AND DESCRIPTION
A. Relay Socket Part Numbers

**Table 1
RELAY SOCKET PART NUMBERS**

Boeing Standard	Part Number	Supplier
-	000300-1560	Viking
BACS16W1A	000300-1539	Viking
	102 009-1	Burndy
BACS16W2A	000300-1542	Viking
	102 011-1	Burndy
BACS16W3A	000300-1543	Viking
	102 012-1	Burndy
BACS16W4A	000300-1544	Viking
	102 013-1	Burndy
BACS16W5A	000300-1545	Viking
	102 010-1	Burndy
BACS16X1A	000300-1538	Viking
	102 006-1	Burndy
	RSF116200	Amphenol PCD
BACS16X2A	000300-1540	Viking
	102 007-1	Burndy
	RSF116204	Amphenol PCD
BACS16X3A	000300-1541	Viking
	102 005-1	Burndy
	RSF116208	Amphenol PCD
BACS16X4A	000300-1648	Viking
	102 006-2	Burndy
	RSF116202	Amphenol PCD
BACS16X5A	000300-1650	Viking
	102 007-2	Burndy
	RSF116206	Amphenol PCD


20-81-12

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS

Table 1 (continued)


Boeing Standard	Part Number	Supplier
BACS16X6A	000300-1652	Viking
	102 005-2	Burndy
	RSF116210	Amphenol PCD

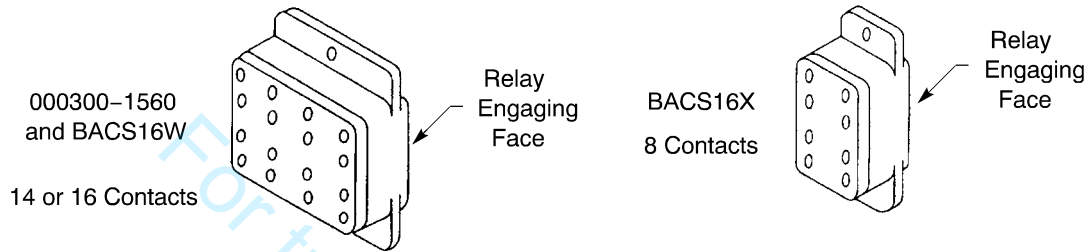

BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS


Figure 1

B. Contact Part Numbers

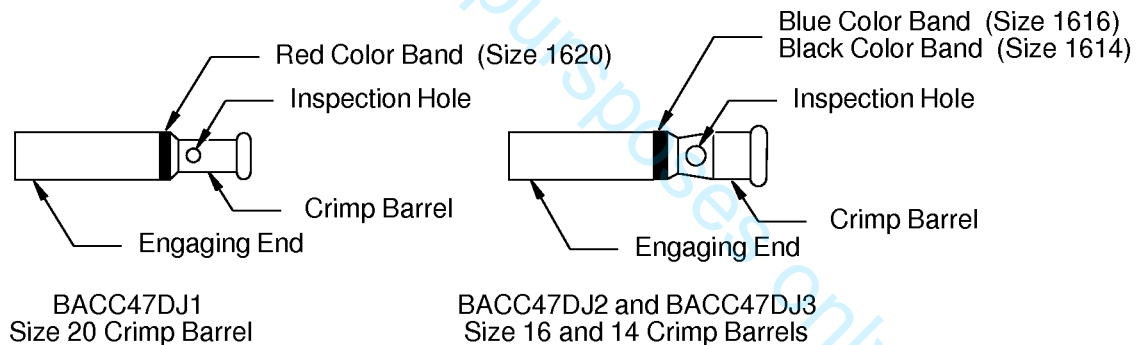

BACC47DJ CONTACTS

Figure 2

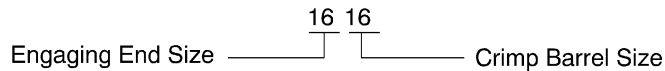

EXAMPLE OF CONTACT SIZE

Figure 3



707, 727-787

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS

Table 2
CONTACT PART NUMBERS

Contact Size	Color Code	Boeing Standard	Part Number	Supplier
1620	Red	BACC47DJ1	101-016-1DJ5	Burndy
			318-1620-802	PCD
			019-0249-000	Viking
1616	Blue	BACC47DJ2	101-015-1DJ5	Burndy
			318-1616-802	PCD
			019-0248-000	Viking
1614	Black	BACC47DJ3	101-034-1DJ5	Burndy
			019-0273-000	Viking

For training purposes only!

20-81-12


Page 3
Oct 01/2012

D6-54446


STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS


C. Contact Configurations

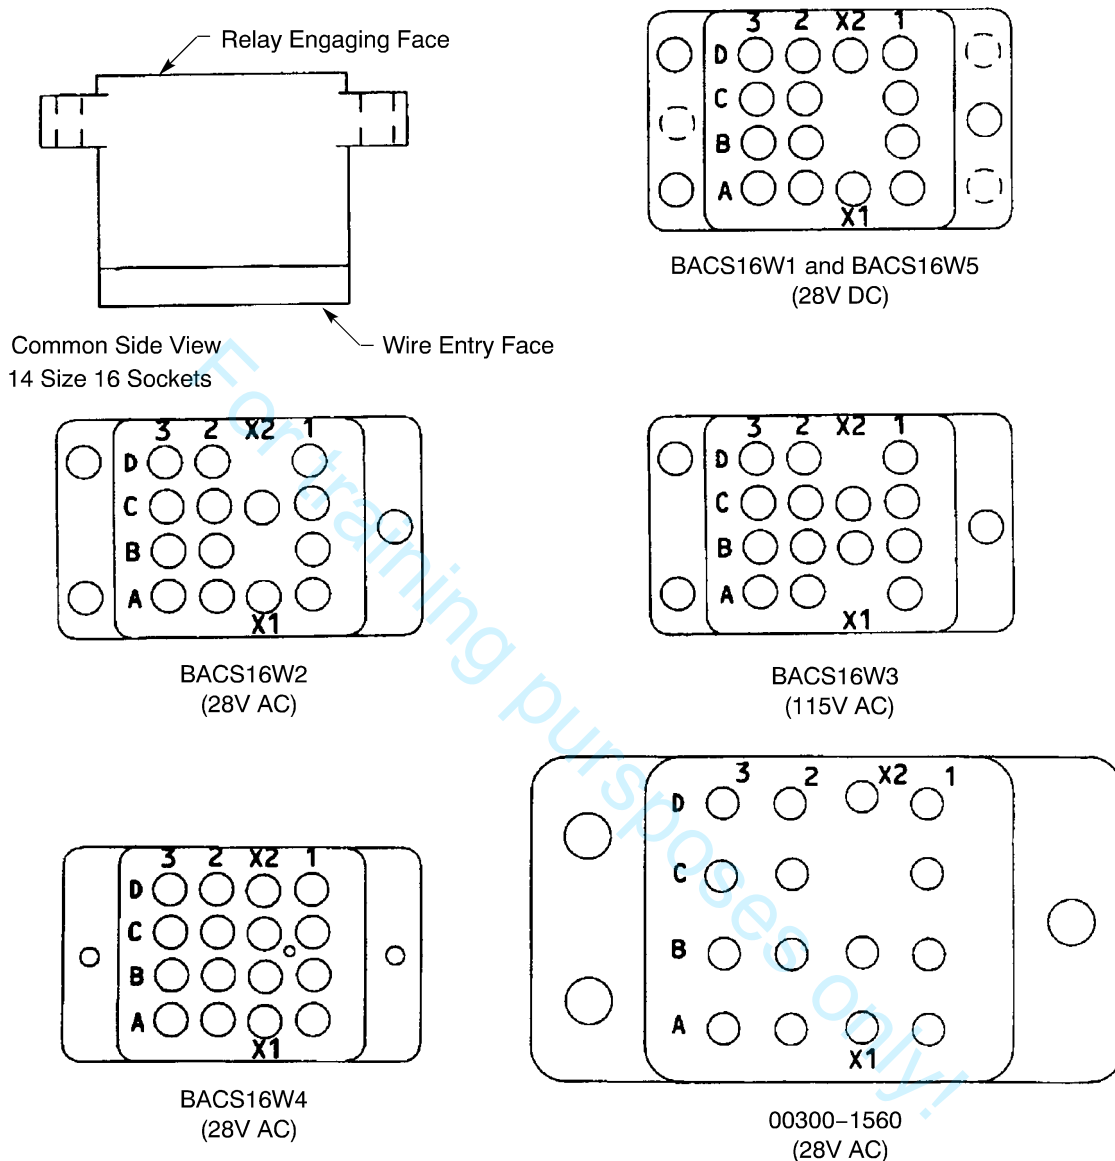


VIKING 00300-1560 AND BACS16W CONTACT CONFIGURATION
Figure 4

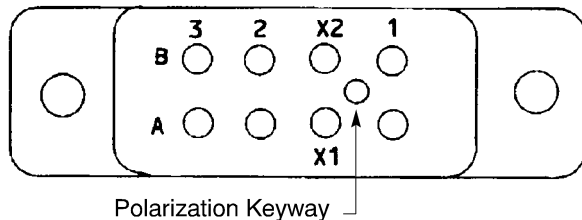STANDARD WIRING PRACTICES MANUAL
ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS


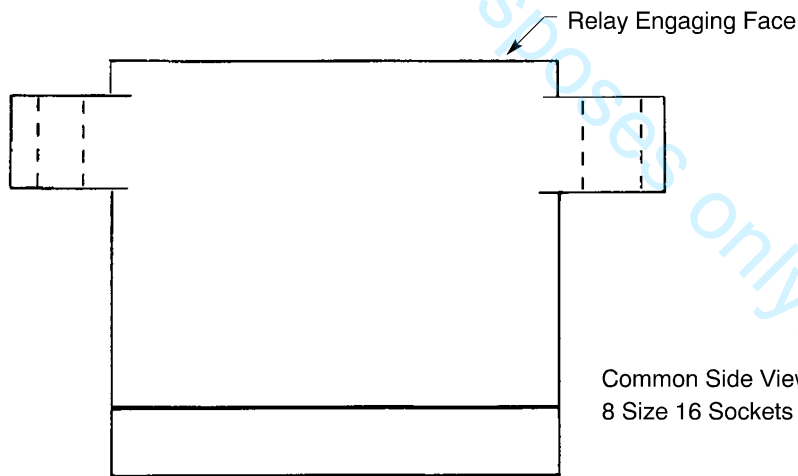
BACS16X1
Circular Polarization
(28V DC Coils)

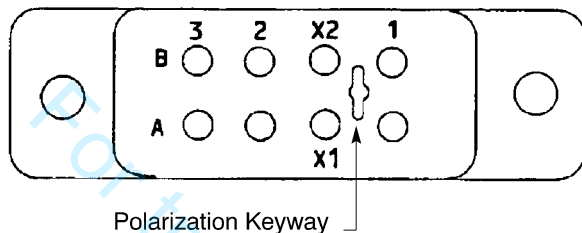

BACS16X2
Vertical Polarization
(28V AC Coils)

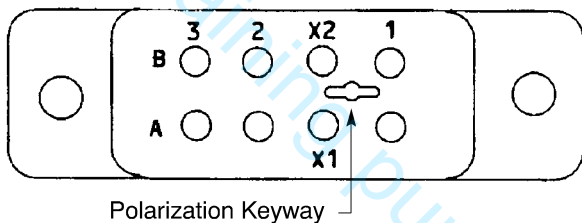

BACS16X3
Horizontal Polarization
(28V DC Coils)



BACS16X CONTACT CONFIGURATION
Figure 5

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS

2. RELAY SOCKET DISASSEMBLY

A. Contact Removal

Table 3
CONTACT REMOVAL TOOLS

Contact Engaging End Size	Removal Tool
16	294-97
	AT 2016
	DRK16
	M81969/19-01
	M81969/19-08
	MS24256R16
	RRBX-16S
	RX16-8
	ZZL-R-9511-16

- (1) Make a selection of a removal tool from Table 3.
- (2) At the front of the relay socket, axially align the contact removal tool and the contact cavity.
- (3) Put the tip of the removal tool on the engaging end of the contact.
- (4) Carefully push the removal tool into the contact cavity until it stops.
- (5) Push the removal tool, and at the same time, push the internal plunger of the removal tool. Make sure that the contact moves out of the rear of the relay socket.

CAUTION: DO NOT USE MORE FORCE THAN THE FORCE THAT IS NECESSARY TO PUSH THE REMOVAL TOOL INTO THE CONTACT CAVITY. DAMAGE TO THE CONTACT RETENTION CLIPS CAN OCCUR.

- (6) Carefully pull the removal tool out of the contact cavity.
- (7) Pull the wire and contact out of the rear of the relay socket.

3. RELAY SOCKET ASSEMBLY

A. Contact Assembly

Table 4
INSULATION REMOVAL LENGTH

Wire Size (AWG)	Contact Size	Removal Length (L) (inch)		Special Instructions
		Target	Tolerance	
26	1620	0.44	± 0.03	Fold back the conductor
24	1620	0.19	± 0.03	-
22	1620	0.19	± 0.03	-

20-81-12

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS

Table 4 (continued)

Wire Size (AWG)	Contact Size	Removal Length (L) (inch)		Special Instructions
		Target	Tolerance	
20	1620	0.19	± 0.03	-
	1616	0.19	± 0.03	-
18	1616	0.19	± 0.03	-
16	1616	0.19	± 0.03	-
14	1614	0.19	± 0.03	-

Table 5

CONTACT CRIMP TOOLS FOR A CONTACT THAT HAS ONE WIRE IN THE CRIMP BARREL

Wire Size (AWG)	Contact		Crimp Tool		
	Part Number	Size	Basic Unit		Locator
			Part Number	Setting	
26	BACC47DJ1	1620	M22520/1-01	5	TP502
			M22520/2-01	7	640003
				7	K866
			MS3191-1	-	038-0003-000
				-	612314
				-	ST2220-1-49
			ST2220-1-Y	-	038-0003-000
				-	612314
				-	ST2220-1-49
			WA22	7	640003
			WA22LC	7	640003

20-81-12

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS

Table 5 (continued)

Wire Size (AWG)	Contact		Crimp Tool		
	Part Number	Size	Basic Unit		Locator
			Part Number	Setting	
24	BACC47DJ1	1620	M22520/1-01	5	TP502
			M22520/2-01	8	K866
				7	K892
			MS3191-1	-	038-0003-000
				-	612314
				-	ST2220-1-49
			ST2220-1-Y	-	038-0003-000
				-	612314
				-	ST2220-1-49
			WA22	7	K892
22	BACC47DJ1	1620	WA22LC	7	K892
			M22520/1-01	5	TP502
			M22520/2-01	8	K866
				7	K892
			MS3191-1	-	038-0003-000
				-	612314
				-	ST2220-1-49
			ST2220-1-Y	-	038-0003-000
				-	612314
				-	ST2220-1-49
			WA22	7	K892
			WA22LC	7	K892

20-81-12

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS

Table 5 (continued)

Wire Size (AWG)	Contact		Crimp Tool		
	Part Number	Size	Basic Unit		Locator
			Part Number	Setting	
20	BACC47DJ1	1620	M22520/1-01	5	TP502
			M22520/2-01	8	K866
				7	K892
			MS3191-1	-	038-0003-000
				-	612314
				-	ST2220-1-49
			ST2220-1-Y	-	038-0003-000
				-	612314
				-	ST2220-1-49
			WA22	7	K892
20	BACC47DJ2	1616	M22520/1-01	5	TP502
			M22520/2-01	7	K866
				7	K892
			ST2220-1-Y	-	038-0003-000
				-	612314
				-	ST2220-1-49
				-	ST2220-1-65
			WA22	7	K892
			WA22LC	7	K892
20	BACC47DJ3	1614	ST2220-1-Y	-	ST2220-1-65
			MS3191-1	-	ST2220-1-65
			M22520/2-01	6	K866
				6	K892

20-81-12

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS

Table 5 (continued)

Wire Size (AWG)	Contact		Crimp Tool		
	Part Number	Size	Basic Unit		Locator
			Part Number	Setting	
18	BACC47DJ2	1616	M22520/1-01	5	TP502
			M22520/2-01	7	K866
				7	K892
			MS3191-1	-	ST2220-1-65
			ST2220-1-Y	-	038-0003-000
				-	612314
				-	ST2220-1-49
				-	ST2220-1-65
			WA22	7	K892
18	BACC47DJ3	1614	WA22LC	7	K892
			M22520/2-01	7	K892
			ST2220-1-Y	-	ST2220-1-65
16	BACC47DJ2	1616	M22520/1-01	5	TP502
			M22520/2-01	8	K866
				7	K892
			MS3191-1	-	ST2220-1-65
			ST2220-1-Y	-	038-0003-000
				-	612314
				-	ST2220-1-49
				-	ST2220-1-65
			WA22	7	K892
16	BACC47DJ3	1614	WA22LC	7	K892
16	BACC47DJ3	1614	M22520/2-01	7	K892
14	BACC47DJ3	1614	M22520/2-01	7	K892

20-81-12

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS

Table 6
CONTACT CRIMP TOOLS FOR A CONTACT THAT HAS MORE THAN ONE WIRE IN THE CRIMP BARREL

Total Number of Wires	First Wire Size		Second Wire Size		Contact		Crimp Tool		
	Count	Size (AWG)	Count	Size (AWG)	Size	Part Number	Basic Unit		Locator
							Part Number	Setting	
2	2	24	-	-	1620	BACC47DJ1	M22520/2-01	7	640003
							WA22	7	640003
							WA22LC	7	640003
3	3	24	-	-	1616	BACC47DJ2	MS3191-1	-	ST2220-1-65
							M22520/1-01	5	TP502
							M22520/2-01	7	K892
							ST2220-1-Y	-	038-0003-000
								-	612314
								-	ST2220-1-49
								-	ST2220-1-65
							WA22	7	K892
							WA22LC	7	K892
3	3	22	-	-	1616	BACC47DJ2	MS3191-1	-	ST2220-1-65
							M22520/1-01	5	TP502
							M22520/2-01	7	K892
							ST2220-1-Y	-	038-0003-000
								-	612314
								-	ST2220-1-49
								-	ST2220-1-65
							WA22	7	K892
							WA22LC	7	K892

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS

Table 6 (continued)

Total Number of Wires	First Wire Size		Second Wire Size		Contact		Crimp Tool		
	Count	Size (AWG)	Count	Size (AWG)	Size	Part Number	Basic Unit		Locator
							Part Number	Setting	
2	2	22	-	-	1616	BACC47DJ2	MS3191-1	-	ST2220-1-65
							M22520/1-01	5	TP502
							M22520/2-01	7	K892
							ST2220-1-Y	-	038-0003-000
								-	612314
								-	ST2220-1-49
								-	ST2220-1-65
							WA22	7	K892
2	1	24	1	22	1616	BACC47DJ2	MS3191-1	-	ST2220-1-65
							M22520/1-01	5	TP502
							M22520/2-01	7	K892
							ST2220-1-Y	-	038-0003-000
								-	612314
								-	ST2220-1-49
								-	ST2220-1-65
							WA22	7	K892
2	1	24	1	20	1616	BACC47DJ2	MS3191-1	-	ST2220-1-65
							M22520/1-01	5	TP502
							M22520/2-01	7	K892
							ST2220-1-Y	-	038-0003-000
								-	612314
								-	ST2220-1-49
								-	ST2220-1-65
							WA22	7	K892
2	1	24	1	20	1616	BACC47DJ2	WA22LC	7	K892
							WA22LC	7	K892

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS

Table 6 (continued)

Total Number of Wires	First Wire Size		Second Wire Size		Contact		Crimp Tool		
	Count	Size (AWG)	Count	Size (AWG)	Size	Part Number	Basic Unit		Locator
							Part Number	Setting	
2	1	24	1	18	1616	BACC47DJ2	MS3191-1	-	ST2220-1-65
							M22520/1-01	5	TP502
							M22520/2-01	7	K892
							ST2220-1-Y	-	038-0003-000
								-	612314
								-	ST2220-1-49
								-	ST2220-1-65
							WA22	7	K892
2	1	22	1	20	1616	BACC47DJ2	MS3191-1	-	ST2220-1-65
							M22520/1-01	5	TP502
							M22520/2-01	7	K892
							ST2220-1-Y	-	038-0003-000
								-	612314
								-	ST2220-1-49
								-	ST2220-1-65
							WA22	7	K892
2	1	22	1	18	1616	BACC47DJ2	MS3191-1	-	ST2220-1-65
							M22520/1-01	5	TP502
							M22520/2-01	7	K892
							ST2220-1-Y	-	038-0003-000
								-	612314
								-	ST2220-1-49
								-	ST2220-1-65
							WA22	7	K892
2	2	20	-	-	1616	BACC47DJ2	M22520/2-01	8	K892
							WA22	8	K892
							WA22LC	8	K892

20-81-12

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS

Table 6 (continued)

Total Number of Wires	First Wire Size		Second Wire Size		Contact		Crimp Tool		
	Count	Size (AWG)	Count	Size (AWG)	Size	Part Number	Basic Unit		Locator
							Part Number	Setting	
3	3	20	-	-	1614	BACC47DJ3	M22520/2-01	8	640003
							WA22	8	640003
							WA22LC	8	640003
2	2	18	-	-	1614	BACC47DJ3	M22520/2-01	8	640003
							WA22	8	640003
							WA22LC	8	640003
2	1	18	1	20	1614	BACC47DJ3	M22520/2-01	7	640003
							WA22	7	640003
							WA22LC	7	640003


(1) Make a selection of a crimp tool from:

- Table 5 for contacts that have one wire
- Table 6 for contacts that have more than one wire.

(2) Remove the necessary length of the wire insulation from the end of the wire or wires.


Refer to:

- Figure 6
- Table 4 for the insulation removal length
- Subject 20-00-15 for the insulation removal procedures.

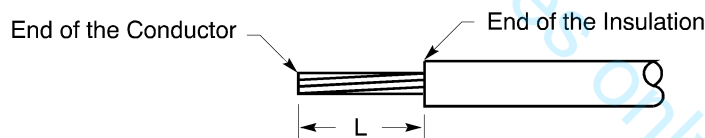

WIRE PREPARATION
Figure 6

(3) If it is specified, fold the conductor back. Refer to Figure 7.

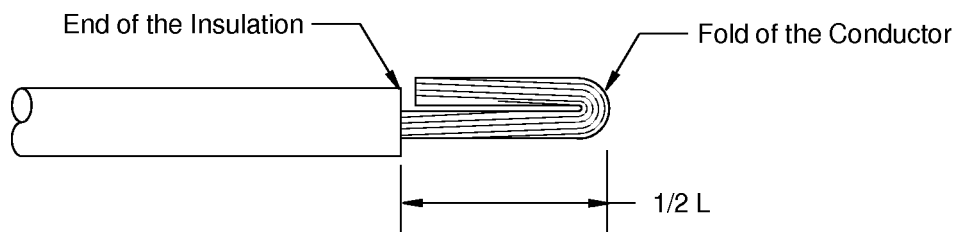

CONDUCTOR FOLDED BACK
Figure 7

20-81-12


STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS

- (4) Put the contact in the locator of the crimp tool.
- (5) Put the end of the wire into the crimp barrel of the contact. Refer to Figure 8.

Make sure that:

- The conductor can be seen in the inspection hole of the contact
- All of the strands of the conductor are in the crimp barrel
- The distance between the rear end of the contact and the wire insulation is 0.06 inch maximum.

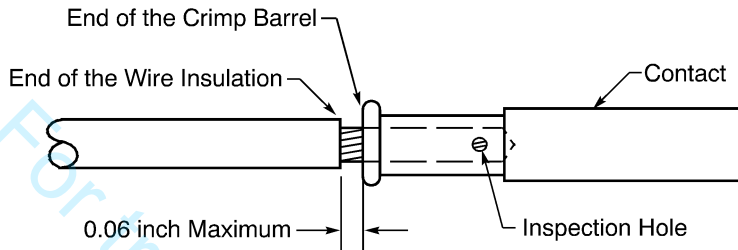

POSITION OF THE WIRE IN THE CRIMP BARREL OF THE BACC47DJ CONTACT
Figure 8

- (6) Crimp the contact.

Make sure that:

- Make sure the conductor can be seen in the inspection hole of the contact.
- The distance between the rear end of the contact and the wire insulation is 0.06 inch maximum
- The contact does not have a bend larger than 3.5 degrees from the longitudinal axis of the contact.

B. Contact Insertion

Table 7
CONTACT INSERTION TOOLS


Contact Size	Insertion Tool
1620	294-88
	M81969/17-09
	ZZL-R-9510-20
1616	294-88
	M81969/17-09
	ZZL-R-9510-20
1614	294-88
	M81969/17-09
	ZZL-R-9510-20

- (1) Make a selection of an insertion tool from Table 7.

STANDARD WIRING PRACTICES MANUAL


ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS

- (2) At the rear of the relay socket, put each wired contact in the contact cavities with the hand. Refer to Figure 9.

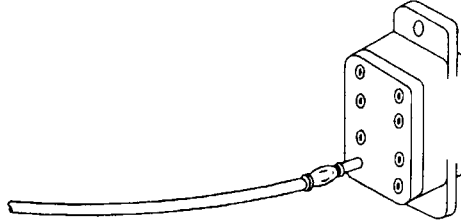


POSITION OF THE CONTACT IN THE CONTACT CAVITY
Figure 9

- (3) Put the end of the insertion tool tip against end of contact. Refer to Figure 10.

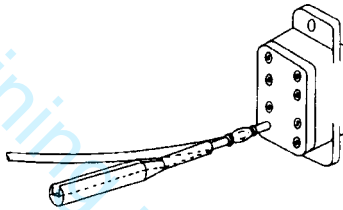

POSITION OF THE INSERTION TOOL ON THE CONTACT
Figure 10

- (4) Carefully push the tool and the contact into the contact cavity until it stops. Refer to Figure 11. Make sure that the insertion tool stays aligned with the contact cavity.

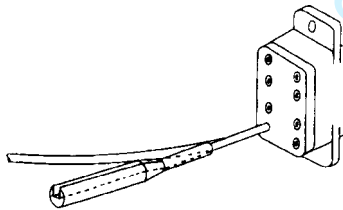

FULLY INSERTED CONTACT
Figure 11

- (5) Carefully remove the insertion tool.
(6) Lightly pull on the wire to make sure that the contact is locked in the contact cavity.

CAUTION: DO NOT MAKE A DENT IN THE INSULATION OF WIRE WITH THE FINGERNAILS.

- (7) Do Step (3) through Step (6) again for each contact in the relay socket.

C. Spare Contact or Seal Plug Installation

- (1) Install spare contacts or seal plugs in all unused contact cavities.
Refer to Subject 20-60-08.

20-81-12

STANDARD WIRING PRACTICES MANUAL**ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS****4. APPROVED TOOL SUPPLIERS****A. Contact Crimp Tools**

Table 8
CONTACT CRIMP TOOL SUPPLIERS

Crimp Tool	Supplier
038-0003-000	Viking
640003	Astro
612314	Buchanan
K866	Daniels
K892	Daniels
M22520/1-01	QPL
M22520/2-01	QPL
MS3191-1	QPL
ST2220-1-49	Boeing
ST2220-1-65	Boeing
ST2220-1-Y	Boeing
TP502	Daniels
WA22	Daniels
WA22LC	Daniels

B. Contact Insertion Tool Suppliers

Table 9
CONTACT INSERTION TOOL SUPPLIERS

Insertion Tool	Supplier
294-88	Amphenol
M81969/17-09	QPL
ZZL-R-9510-20	Pyle-National

C. Contact Removal Tool Suppliers

Table 10
CONTACT REMOVAL TOOL SUPPLIERS

Removal Tool	Supplier
294-97	Amphenol
AT 2016	Astro

20-81-12



707, 727-787

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS

Table 10 (continued)

Removal Tool	Supplier
DRK16	Daniels
M81969/19-01	QPL
M81969/19-08	QPL
MS24256R16	QPL
RRBX-16S	Russtech
RX16-8	Burndy
ZZL-R-9511-16	Pyle-National

For training purposes only!

20-81-12

Page 18
Oct 01/2012

D6-54446



707, 727-787

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF METHODE FRONT RELEASE RELAY SOCKETS

<u>Paragraph</u>	<u>Page</u>
1. <u>PART NUMBERS AND DESCRIPTION</u>	1
A. Relay Socket Part Numbers	1
B. Contact Part Numbers	1
C. Contact Configuration	2
2. <u>RELAY SOCKET DISASSEMBLY</u>	2
A. Contact Removal	2
3. <u>RELAY SOCKET ASSEMBLY</u>	2
A. Contact Assembly	2
B. Contact Insertion	3

20-81-13 CONTENTS

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF METHODE FRONT RELEASE RELAY SOCKETS


1. PART NUMBERS AND DESCRIPTION

A. Relay Socket Part Numbers

Table 1
RELAY SOCKET PART NUMBERS


Part Number	Supplier
133-158-02	Methode
133-158-03	Methode
133-179-03	Methode

B. Contact Part Numbers

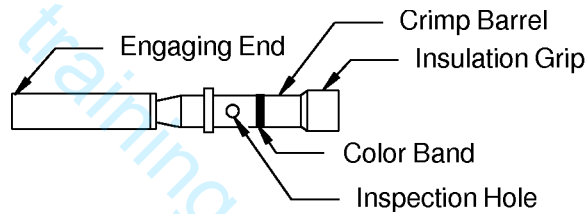

FRONT RELEASE CONTACTS

Figure 1

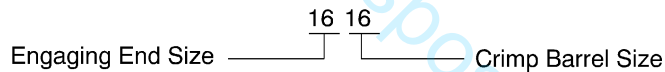

EXAMPLE OF A CONTACT SIZE

Figure 2


Table 2
CONTACT PART NUMBERS

Contact Size	Part Number	Supplier
1616	BACC47CP2T	Boeing
	MS3193-16A	QPL

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF METHODE FRONT RELEASE RELAY SOCKETS

C. Contact Configuration

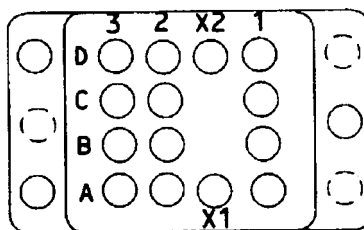

METHODE RELAY SOCKET CONTACT CONFIGURATION
Figure 3

2. RELAY SOCKET DISASSEMBLY

A. Contact Removal

Table 3
CONTACT REMOVAL TOOLS

Contact Engaging End Size	Removal Tool	Supplier
16	MS24256-R16	QPL

- (1) Make a selection of a contact removal tool from Table 3.
- (2) At the front of the relay socket, axially align the contact removal tool and the contact cavity.
- (3) Put the tip of the removal tool on the engaging end of the contact.
- (4) Carefully push the removal tool into the contact cavity until it stops.
- (5) Push the removal tool, and at the same time, push the internal plunger of the removal tool. Make sure that the contact moves out of the rear of the relay socket.

CAUTION: DO NOT USE MORE FORCE THAN THE FORCE THAT IS NECESSARY TO PUSH THE REMOVAL TOOL INTO THE CONTACT CAVITY. DAMAGE TO THE CONTACT RETENTION CLIPS CAN OCCUR.

- (6) Carefully pull the removal tool out of the contact cavity.
- (7) Pull the wire and contact out of the rear of the relay socket.

3. RELAY SOCKET ASSEMBLY

A. Contact Assembly

Table 4
INSULATION REMOVAL LENGTH

Wire Size (AWG)	Wire Count	Removal Length (inch)		Special Instructions
		Target	Tolerance	
24	1	0.50	0.03	Fold the conductor back
	2	0.25	0.03	-

20-81-13

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF METHODE FRONT RELEASE RELAY SOCKETS

Table 4 (continued)

Wire Size (AWG)	Wire Count	Removal Length (inch)		Special Instructions
		Target	Tolerance	
22	1	0.50	0.03	Fold the conductor back
	2	0.25	0.03	-
20	1	0.25	0.03	-
18	1	0.25	0.03	-
16	1	0.25	0.03	-

Table 5
CONTACT CRIMP TOOLS

Wire Size (AWG)	Contact Size	Crimp Tool					
		Basic Unit			Locator		
		Part Number	Setting	Supplier	Part Number	Color	Supplier
24	1616	M22520/1-01	4	QPL	M22520/1-02	Blue	QPL
22	1616	M22520/1-01	5	QPL	M22520/1-02	Blue	QPL
20	1616	M22520/1-01	4	QPL	M22520/1-02	Blue	QPL
18	1616	M22520/1-01	5	QPL	M22520/1-02	Blue	QPL
16	1616	M22520/1-01	6	QPL	M22520/1-02	Blue	QPL

- (1) Remove the wire insulation.
Refer to Table 4 and Subject 20-00-15.
- (2) Make a selection of the crimp tool from Table 5.
- (3) Put the wire or wires in the crimp barrel.
- (4) Crimp the contact.

B. Contact Insertion

Table 6
CONTACT INSERTION TOOLS

Contact Size	Insertion Tool	Supplier
1616	MS24256-A16	QPL

- (1) Make a selection of an insertion tool from Table 6.
- (2) Put the end of the insertion tool tip against the contact shoulder.
- (3) At the rear of the relay socket, align the insertion tool and the contact with the contact cavity.
- (4) Carefully guide the contact into the contact cavity until the contact is completely inserted.



707, 727-787

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF VIKING 000300-118() REAR RELEASE RELAY SOCKETS

<u>Paragraph</u>	<u>Page</u>
1. <u>PART NUMBERS AND DESCRIPTION</u>	1
A. Relay Socket Part Numbers	1
B. Contact Part Numbers	1
C. Contact Configurations	2
2. <u>RELAY SOCKET DISASSEMBLY</u>	2
A. Contact Removal	2
3. <u>RELAY SOCKET ASSEMBLY</u>	3
A. Contact Assembly	3
B. Contact Insertion	3
C. Spare Contact Installation	4

20-81-14 CONTENTS

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF VIKING 000300-118() REAR RELEASE RELAY SOCKETS


1. PART NUMBERS AND DESCRIPTION

A. Relay Socket Part Numbers


Table 1
RELAY SOCKET PART NUMBERS

Part Number	Supplier
000300-1180	Viking
000300-1181	Viking
000300-1182	Viking

B. Contact Part Numbers

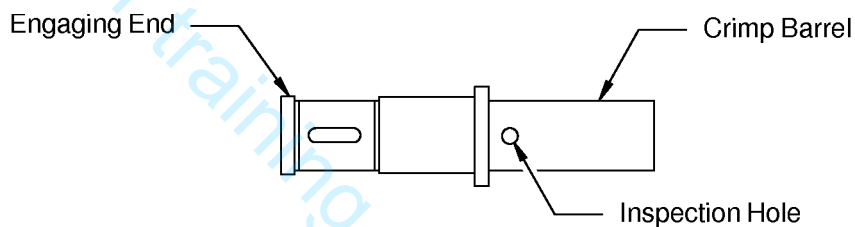

VIKING 019-0215-000 REAR RELEASE SOCKET CONTACT
Figure 1

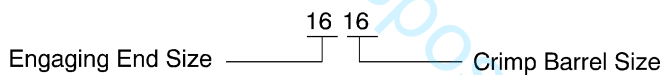

EXAMPLE OF A CONTACT SIZE
Figure 2


Table 2
CONTACT PART NUMBERS

Contact Size	Part Number	Supplier
1616	019-0215-000	Viking

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF VIKING 000300-118() REAR RELEASE RELAY SOCKETS

C. Contact Configurations

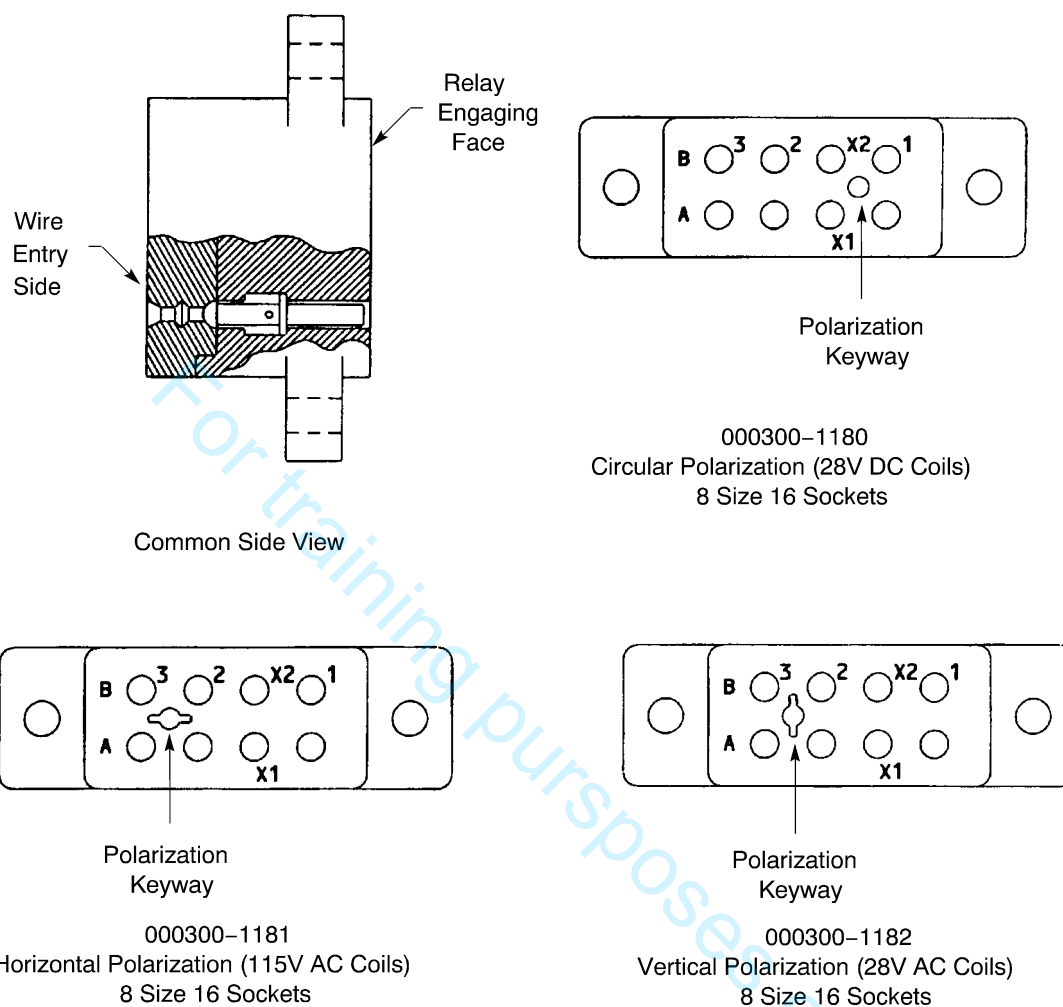

VIKING 000300-118() RELAY SOCKET CONTACT CONFIGURATIONS
Figure 3

2. RELAY SOCKET DISASSEMBLY

A. Contact Removal

Table 3
CONTACT REMOVAL TOOLS

Contact Size	Removal Tool	Supplier
1616	NAS1664-16	QPL

- (1) Make a selection of a contact removal tool from Table 3.
- (2) At the rear of the relay socket, put the white end of the tool on the wire.
- (3) Axially align the removal tool and the contact cavity.

20-81-14

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF VIKING 000300-118() REAR RELEASE RELAY SOCKETS

- (4) Push the tool into the contact cavity until it stops.
- (5) Hold the tool against the relay socket and, at the same time, hold the wire against the handle of the tool.
- (6) Pull the tool and the wire out of the contact cavity at the same time.

3. RELAY SOCKET ASSEMBLY

A. Contact Assembly

Table 4
CONTACT CRIMP TOOLS

Wire Size (AWG)	Wire Count	Contact Crimp Barrel Size	Crimp Tool				
			Basic Unit		Locator		
			Part Number	Supplier	Part Number	Color	Supplier
24	1	16	MS3191A	QPL	MS3191-16	Blue	QPL
	2		MS3191A	QPL	MS3191-16	Blue	QPL
22	1	16	MS3191A	QPL	MS3191-16	Blue	QPL
	2		MS3191A	QPL	MS3191-16	Blue	QPL
20	1	16	MS3191A	QPL	MS3191-16	Blue	QPL
18	1	16	MS3191A	QPL	MS3191-16	Blue	QPL
16	1	16	MS3191A	QPL	MS3191-16	Blue	QPL

- (1) Remove 9/32 inch \pm 1/32 inch of wire insulation.
Refer to Subject 20-00-15.
- (2) Make a selection of a contact crimp tool from Table 4.
- (3) Put the wire in the crimp barrel.
Make sure that:
 - All the conductor strands are in the crimp barrel
 - The wire is visible in the inspection hole.
- (4) Crimp the contact.

B. Contact Insertion

Table 5
CONTACT INSERTION TOOLS

Insertion Tool	Supplier
NAS1664-16	QPL

- (1) Examine the contact to make sure that the contact does not have a bend.
NOTE: As an option for contact installation, wired contacts assembled with AWG 22 or larger wire can be inserted by hand, without an insertion tool.
- (2) To insert the contact with an insertion tool:
 - (a) Make a selection of a contact insertion tool from Table 5.

20-81-14



707, 727-787

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF VIKING 000300-118() REAR RELEASE RELAY SOCKETS

- (b) Put the colored end of the tool on the wire.
 - (c) Put the tip of the tool against the contact.
 - (d) At the rear of the relay socket, axially align the tool, the contact, and the contact cavity.
 - (e) Push the contact into the contact cavity until it stops.
 - (f) Carefully remove the tool from the contact cavity.
- (3) Lightly pull on the wire to make sure that contact is locked in the contact cavity.

CAUTION: DO NOT PULL THE WIRE WITH A STRONG OR A SUDDEN FORCE. THE FORCE CAN CAUSE DAMAGE TO THE CONTACT.

CAUTION: DO NOT MAKE A DENT IN THE WIRE INSULATION WITH THE FINGERNAILS. DAMAGE TO THE WIRE INSULATION CAN CAUSE UNSATISFACTORY PERFORMANCE AND RELIABILITY OF THE WIRE.

C. Spare Contact Installation

- (1) Install a spare contact in each unused contact cavity.
Refer to Subject 20-60-08.

20-81-14

Page 4
Jun 01/2012

D6-54446



707, 727-787

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO SERIES, PCD RSE SERIES, AND OTHER REAR RELEASE RELAY SOCKETS

<u>Paragraph</u>	<u>Page</u>
1. <u>PART NUMBERS AND DESCRIPTION</u>	1
A. Relay Socket Part Numbers	1
B. Contact Part Numbers	3
C. Contact Configurations	7
D. Eyelet Part Numbers	11
2. <u>RELAY SOCKET DISASSEMBLY</u>	11
A. Contact Removal	11
3. <u>RELAY SOCKET ASSEMBLY</u>	12
A. Contact Assembly	12
B. Contact Insertion	15
C. Spare Contact or Seal Plug Installation	16

20-81-16 CONTENTS

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO SERIES, PCD RSE SERIES, AND OTHER REAR RELEASE RELAY SOCKETS

Refer to Subject 20-81-22 for the installation of these relay sockets.

1. PART NUMBERS AND DESCRIPTION

A. Relay Socket Part Numbers

Table 1
RELAY SOCKET PART NUMBERS

Part Number	Supplier	Attachment of the Mounting Studs to the Relay Socket as Supplied	Contacts are Supplied with the Relay Socket	Mounting Hardware is Supplied with the Relay Socket
RSE112305	Amphenol/PCD	fixed	no	no
RSE112310	Amphenol/PCD	fixed	no	no
RSE112315	Amphenol/PCD	fixed	no	no
RSE112320	Amphenol/PCD	fixed	no	no
RSE116135	Amphenol/PCD	fixed	no	no
RSE116332	Amphenol/PCD	loose	yes	no
RSE116521	Amphenol/PCD	fixed	no	no
RSE116755	Amphenol/PCD	loose	yes	yes
RSE120172	Amphenol/PCD	fixed	no	no
RSE120180	Amphenol/PCD	fixed	no	no
RSE120185	Amphenol/PCD	fixed	no	no
RSE120190	Amphenol/PCD	fixed	no	no
SO-1048-8308	Leach	loose	yes	yes
SO-1055-8690	Leach	fixed	yes	yes
SO-1056-8691	Leach	loose	yes	yes
SO-1057-8912	Leach	fixed	yes	yes
SO-1059-8914	Leach	fixed	yes	yes
SO-1061-8916	Leach	fixed	yes	yes
SO-1062-8917	Leach	fixed	yes	yes
SO-1064-001	Leach	fixed	yes	yes
SO-1064-003	Leach	fixed	yes	yes
SO-1064-007	Leach	fixed	no	yes
SO-1066-001	Leach	fixed	yes	yes
SO-1066-003	Leach	fixed	yes	yes
SO-1066-10197	Leach	fixed	no	yes
003017-0001	Viking	fixed	no	no

20-81-16

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO SERIES, PCD RSE SERIES, AND OTHER REAR RELEASE RELAY SOCKETS

Table 2
ALTERNATIVE RELAY SOCKET PART NUMBERS

Specified Relay Socket		Alternative Relay Socket	
Part Number	Supplier	Part Number	Supplier
RSE112305	Amphenol/PCD	SO-1057-8912	Leach
		003014-0001	Viking
RSE112310	Amphenol/PCD	SO-1059-8914	Leach
RSE112315	Amphenol/PCD	SO-1061-8916	Leach
RSE112320	Amphenol/PCD	SO-1062-8917	Leach
		003015-0001	Viking
RSE116135	Amphenol/PCD	SO-1048-8308	Leach
		003019-0001	Viking
RSE116332	Amphenol/PCD	SO-1056-8691	Leach
RSE116521	Amphenol/PCD	SO-1055-8690	Leach
		003005-0001	Viking
RSE120172	Amphenol/PCD	SO-1064-003	Leach
		003016-0001	Viking
RSE120180	Amphenol/PCD	SO-1064-007	Leach
		003017-0001	Viking
RSE120185	Amphenol/PCD	SO-1066-003	Leach
RSE120190	Amphenol/PCD	SO-1066-10197	Leach
SO-1048-8308	Leach	RSE116135	Amphenol/PCD
		003019-001	Viking
SO-1055-8690	Leach	RSE116521	Amphenol/PCD
		003005-0001	Viking
SO-1056-8691	Leach	RSE116332	Amphenol/PCD
SO-1057-8912	Leach	RSE112305	Amphenol/PCD
		003014-0001	Viking
SO-1059-8914	Leach	RSE112310	Amphenol/PCD
SO-1061-8916	Leach	RSE112315	Amphenol/PCD
SO-1062-8917	Leach	003015-0001	Viking
		RSE112320	Amphenol/PCD
SO-1064-001	Leach	SO-1064-007	Leach
		003017-0001	Viking
		RSE120180	Amphenol/PCD

20-81-16


STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO SERIES, PCD RSE SERIES, AND OTHER REAR RELEASE RELAY SOCKETS


Table 2 (continued)

Specified Relay Socket		Alternative Relay Socket	
Part Number	Supplier	Part Number	Supplier
SO-1064-003	Leach	003016-0001	Viking
		RSE120172	Amphenol/PCD
SO-1064-007	Leach	003017-0001	Viking
		RSE120180	Amphenol/PCD
		SO-1064-001	Leach
SO-1066-001	Leach	SO-1066-10197	Leach
SO-1066-003	Leach	RSE120185	Amphenol/PCD
		003021-0001	Viking
SO-1066-10197	Leach	003022-0001	Viking
		RSE120190	Amphenol/PCD
		SO-1066-001	Leach

B. Contact Part Numbers

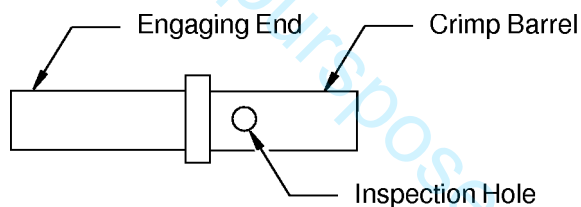

REAR RELEASE SOCKET CONTACTS
Figure 1

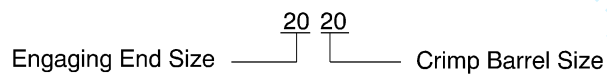

EXAMPLE OF A CONTACT SIZE
Figure 2

20-81-16

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO SERIES, PCD RSE SERIES, AND OTHER REAR RELEASE RELAY SOCKETS

Table 3
CONTACT PART NUMBERS

Relay Socket Part Number	Contact		
	Contact Size	Part Number	Supplier
RSE112305	1616	001-9007-000	Leach
		316-1616-634	Tri-Star
		M39029/92-533	QPL
	1212	001-9007-001	Leach
		316-1212-634	Tri-Star
RSE112310	1616	001-9007-000	Leach
		316-1616-634	Tri-Star
		M39029/92-533	QPL
	1212	001-9007-001	Leach
		316-1212-634	Tri-Star
RSE112315	1616	001-9007-000	Leach
		316-1616-634	Tri-Star
		M39029/92-533	QPL
	1212	001-9007-001	Leach
		316-1212-634	Tri-Star
RSE112320	1616	001-9007-000	Leach
		316-1616-634	Tri-Star
		M39029/92-533	QPL
	1212	001-9007-001	Leach
		316-1212-634	Tri-Star
RSE116135	1616	001-5490-000	Leach
	1212	M39029/5-116	QPL
RSE116332	1616	001-9007-000	Leach
		316-1616-634	Tri-Star
		M39029/92-533	QPL
RSE116521	2222L	001-7431-000	Leach
		316-2222-634	Tri-Star
		M39029/92-531	QPL
	1616	001-9007-000	Leach
		316-1616-634	Tri-Star
		M39029/92-533	QPL

20-81-16

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO SERIES, PCD RSE SERIES, AND OTHER REAR RELEASE RELAY SOCKETS

Table 3 (continued)

Relay Socket Part Number	Contact		
	Contact Size	Part Number	Supplier
RSE116755	1616	001-9007-000	Leach
		316-1616-634	Tri-Star
		M39029/92-533	QPL
RSE120172	2222	002-6746-000	Leach
	2020	002-3261-000	Leach
		280-30001-31	Boeing
		316-2020-192	Tri-Star
		M39029/22-192	QPL
RSE120180	2020	002-3261-000	Leach
		280-30001-31	Boeing
		316-2020-192	Tri-Star
		M39029/22-192	QPL
RSE120185	2020	002-3261-000	Leach
		280-30001-31	Boeing
		316-2020-192	Tri-Star
		M39029/22-192	QPL
RSE120190	2020	002-3261-000	Leach
		280-30001-31	Boeing
		316-2020-192	Tri-Star
		M39029/22-192	QPL
SO-1048-8308	1616	001-9007-000	Leach
		316-1616-634	Tri-Star
		M39029/92-533	QPL
SO-1055-8690	2222L	001-7431-000	Leach
		316-2222-634	Tri-Star
		M39029/92-531	QPL
	1616	001-9007-000	Leach
		316-1616-634	Tri-Star
		M39029/92-533	QPL
SO-1056-8691	1616	001-9007-000	Leach
		316-1616-634	Tri-Star
		M39029/92-533	QPL

20-81-16

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO SERIES, PCD RSE SERIES, AND OTHER REAR RELEASE RELAY SOCKETS

Table 3 (continued)

Relay Socket Part Number	Contact		
	Contact Size	Part Number	Supplier
SO-1057-8912	1616	001-9007-000	Leach
		316-1616-634	Tri-Star
		M39029/92-533	QPL
	1212	001-9007-001	Leach
		316-1212-634	Tri-Star
SO-1059-8914	1616	001-9007-000	Leach
		316-1616-634	Tri-Star
		M39029/92-533	QPL
	1212	001-9007-001	Leach
		316-1212-634	Tri-Star
SO-1061-8916	1616	001-9007-000	Leach
		316-1616-634	Tri-Star
		M39029/92-533	QPL
	1212	001-9007-001	Leach
		316-1212-634	Tri-Star
SO-1062-8917	1616	001-9007-000	Leach
		316-1616-634	Tri-Star
		M39029/92-533	QPL
	1212	001-9007-001	Leach
		316-1212-634	Tri-Star
SO-1064-001	2020	002-3261-000	Leach
		280-30001-31	Boeing
		316-2020-192	Tri-Star
		M39029/22-192	QPL
SO-1064-003	2222	002-6746-000	Leach
	2020	002-3261-000	Leach
		280-30001-31	Boeing
		316-2020-192	Tri-Star
		M39029/22-192	QPL

STANDARD WIRING PRACTICES MANUAL


ASSEMBLY OF LEACH SO SERIES, PCD RSE SERIES, AND OTHER REAR RELEASE RELAY SOCKETS

Table 3 (continued)

Relay Socket Part Number	Contact		
	Contact Size	Part Number	Supplier
SO-1064-007	2020	002-3261-000	Leach
		280-30001-31	Boeing
		316-2020-192	Tri-Star
		M39029/22-192	QPL
SO-1066-001	2020	002-3261-000	Leach
		280-30001-31	Boeing
		316-2020-192	Tri-Star
		M39029/22-192	QPL
SO-1066-003	2020	002-3261-000	Leach
		280-30001-31	Boeing
		316-2020-192	Tri-Star
		M39029/22-192	QPL
SO-1066-10197	2020	002-3261-000	Leach
		280-30001-31	Boeing
		316-2020-192	Tri-Star
		M39029/22-192	QPL
003017-0001	2020	002-3261-000	Leach
		280-30001-31	Boeing
		316-2020-192	Tri-Star
		M39029/22-192	QPL

C. Contact Configurations

The contact configurations of the relay sockets are shown in Figure 3 thru Figure 14.

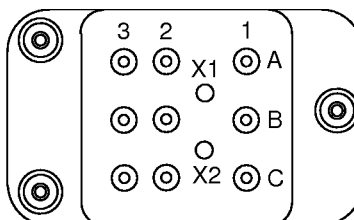

SO-1057-9812, RSE112305, and 003014-0001


LEACH SO-1057-9812, PCD RSE112305, AND VIKING 003014-0001 CONTACT CONFIGURATION

Figure 3

20-81-16


STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO SERIES, PCD RSE SERIES, AND OTHER REAR RELEASE RELAY SOCKETS

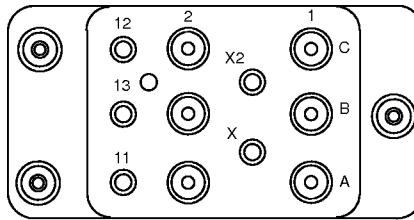


SO-1059-8914 and RSE112310

LEACH SO-1059-8914 AND PCD RSE112310 CONTACT CONFIGURATION
Figure 4

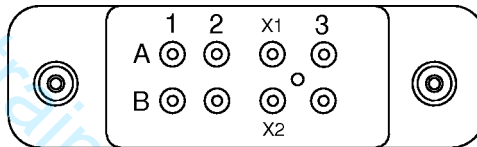

SO-1064-001, SO-1064-007, RSE120180, and 003017-000

LEACH SO-1064-001, SO-1064-007, PCD RSE120180, AND VIKING 003017-000 CONTACT CONFIGURATION
Figure 5

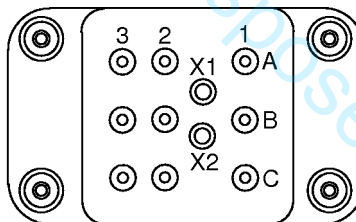


SO-1062-8917, RSE112320, and 003015-0001

LEACH SO-1062-8917, PCD RSE112320, AND VIKING 003015-0001 CONTACT CONFIGURATION
Figure 6

STANDARD WIRING PRACTICES MANUAL


ASSEMBLY OF LEACH SO SERIES, PCD RSE SERIES, AND OTHER REAR RELEASE RELAY SOCKETS

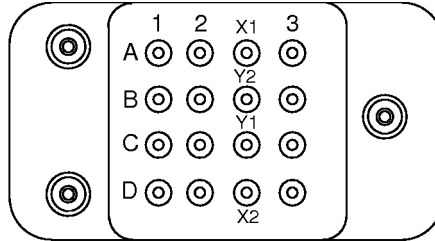

SO-1066-003, RSE120185, and 003021-0001

LEACH SO-1066-003, PCD RSE120185, AND VIKING 003021-0001 CONTACT CONFIGURATION


Figure 7

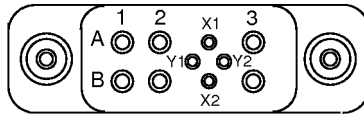

SO-1064-003, RSE120172, and 003016-0001

LEACH SO-1064-003, PCD RSE120172, AND VIKING 003016-0001 CONTACT CONFIGURATION


Figure 8

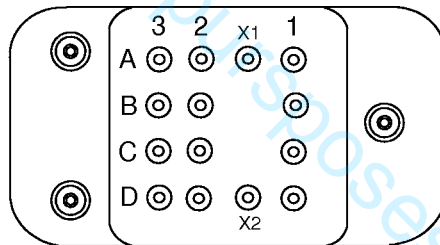

SO-1048-8308, RSE116135, and 003019-0001

LEACH SO-1048-8308, PCD RSE116135, AND VIKING 003019-0001 CONTACT CONFIGURATION

Figure 9

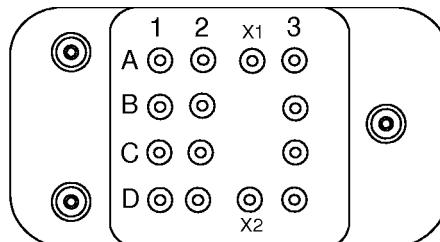

SO-1066-001, SO-1066-10197, RSE120190, and 003022-0001


LEACH SO-1066-001,SO-1066-10197, PCD RSE120190, AND VIKING 003022-0001 CONTACT CONFIGURATION

Figure 10

20-81-16


STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO SERIES, PCD RSE SERIES, AND OTHER REAR RELEASE RELAY SOCKETS

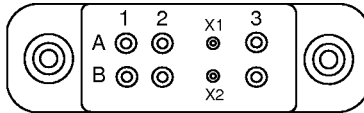


SO-1055-8690, RSE116521, and 003005-0001

LEACH SO-1055-8690, PCD RSE116521, AND VIKING 003005-0001 CONTACT CONFIGURATION
Figure 11

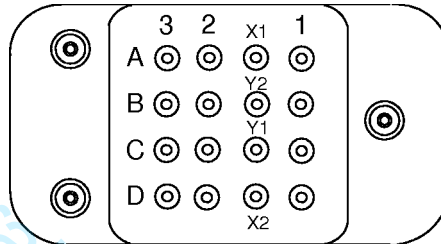


SO-1056-8691 and RSE116332

LEACH SO-1056-8691, AND PCD RSE116332 CONTACT CONFIGURATION
Figure 12

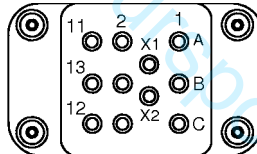

SO-1061-8916 and RSE112315

LEACH SO-1061-8916, AND PCD RSE112315 CONTACT CONFIGURATION
Figure 13

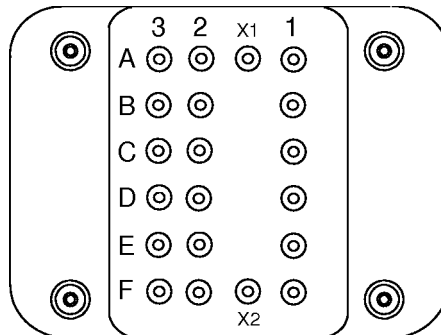

RSE116755

PCD RSE116755 CONTACT CONFIGURATION
Figure 14

20-81-16

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO SERIES, PCD RSE SERIES, AND OTHER REAR RELEASE RELAY SOCKETS

D. Eyelet Part Numbers

NOTE: Eyelets are used when these wires are crimped in size 1212 contacts:

- AWG 24
- AWG 22
- AWG 20
- AWG 18.

And when these wires are crimped in size 1616 contacts:

- AWG 24
- AWG 22.

Table 4
EYELET PART NUMBERS

Contact Size	Eyelet	
	Part Number	Supplier
1616	CE46FC	Circon
	Y6015-C	International Eyelets Inc.
	S-6049CUAU	Global Supply
1212	CE66FC	Circon
	Y9015-C	International Eyelets Inc.
	S-5934CUAU	Global Supply

2. RELAY SOCKET DISASSEMBLY

A. Contact Removal

Table 5
CONTACT REMOVAL TOOLS

Contact Size	Removal Tool		
	Part Number	Color	Supplier
2222L	M81969/14-10	Orange	QPL
	M81969/16-01	White	QPL
	NAS1664-20	White	QPL
2222	M81969/14-01	White	QPL
	MS27534-22D	White	QPL
2020	M81969/14-10	Orange	QPL
	M81969/16-01	White	QPL
	NAS1664-20	White	QPL
	CIET20-1	White	ITT Cannon
1620	M81969/14-03	White	QPL

20-81-16

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO SERIES, PCD RSE SERIES, AND OTHER REAR RELEASE RELAY SOCKETS

Table 5 (continued)

Contact Size	Removal Tool		
	Part Number	Color	Supplier
1616	ATR 2112	-	Astro
	M81969/14-03	White	QPL
	NAC1664-16	White	QPL
	CIET16-3	White	ITT Cannon
1212	ATR 2160	-	Astro
	M81969/14-04	White	QPL
	NAS1664-12	White	QPL

- (1) Make a selection of a contact removal tool from Table 5.
- (2) At the rear of the relay socket, put the end of the tool on the wire.
Make sure that you use the end of the tool that has the correct color for contact removal. Refer to Table 5.
- (3) Axially align the removal tool and the contact cavity.
- (4) Push the tool into the contact cavity until it stops.
- (5) Hold the tool against the relay socket and, at the same time, hold the wire against the handle of the tool.
- (6) Pull the tool and the wire out of the contact cavity at the same time.

3. RELAY SOCKET ASSEMBLY

A. Contact Assembly

Table 6
INSULATION REMOVAL AND WIRE PREPARATION

Contact Size	Wire Size (AWG)	Length (inch)		Wire Fold Back	Eyelet Part Number
		Target	Tolerance		
2222L	22	0.14	± 0.03	-	-
2222	20	0.18	± 0.03	-	-
	22	0.18	± 0.03	-	-
	24	0.18	± 0.03	-	-
2020	20	0.18	± 0.03	-	-
	22	0.18	± 0.03	-	-
	24	0.18	± 0.03	-	-
	26	0.39	± 0.03	Fold	-

20-81-16

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO SERIES, PCD RSE SERIES, AND OTHER REAR RELEASE RELAY SOCKETS

Table 6 (continued)

Contact Size	Wire Size (AWG)	Length (inch)		Wire Fold Back	Eyelet Part Number
		Target	Tolerance		
1616	16	0.25	± 0.03	-	-
	18	0.25	± 0.03	-	-
	20	0.25	± 0.03	-	-
	22	0.25	± 0.03	-	CE46F
	24	0.25	± 0.03	-	CE46F
1212	12	0.25	± 0.03	-	-
	14	0.25	± 0.03	-	-
	16	0.25	± 0.03	-	-
	18	0.25	± 0.03	-	CE66F
	20	0.25	± 0.03	-	CE66F
	22	0.53	± 0.03	Fold	CE66F
	24	0.53	± 0.03	Fold	CE66F

Table 7
CONTACT CRIMP TOOLS

Wire Size (AWG)	Contact Size	Crimp Tool				
		Basic Unit			Locator	
		Part Number	Setting	Supplier	Part Number	Supplier
26	2020	M22520/7-01	4	QPL	M22520/7-12	QPL
		ST2220-1-Y	-	Boeing	ST2220-1-48	Boeing
24	2222	M22520/7-01	4	QPL	M22520/7-11	QPL
	2020	M22520/7-01	3	QPL	M22520/7-12	QPL
		ST2220-1-Y	-	Boeing	ST2220-1-48	Boeing
		M22520/1-01	4	QPL	M22520/1-02	QPL
	1616	WA27F1	4	Daniels	M22520/1-02	QPL
		M22520/1-01	7	QPL	M22520/1-02	QPL
	1212	WA27F1	7	Daniels	M22520/1-01	QPL

20-81-16

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO SERIES, PCD RSE SERIES, AND OTHER REAR RELEASE RELAY SOCKETS

Table 7 (continued)

Wire Size (AWG)	Contact Size	Crimp Tool				
		Basic Unit			Locator	
		Part Number	Setting	Supplier	Part Number	Supplier
22	2222	M22520/7-01	5	QPL	M22520/7-11	QPL
	2222L	M22520/02-01	4	QPL	M22520/2-14	QPL
		MS3191-A	-	QPL	MS3191-22D	QPL
		ST2220-1-Y	-	Boeing	ST2220-1-60	Boeing
	2020	M22520/7-01	4	QPL	M22520/7-12	QPL
		ST2220-1-Y	-	QPL	ST2220-1-48	Boeing
	1616	M22520/1-01	6	QPL	M22520/1-02	QPL
		MS3191-1	-	QPL	MS3191-16A	QPL
		ST2220-1-Y	-	Boeing	ST2220-1-2	Boeing
		WA27F	6	Daniels	M22520/1-02	QPL
20	2020	M22520/7-01	5	QPL	M22520/7-12	QPL
		ST2220-1-Y	-	Boeing	ST2220-1-48	Boeing
	1616	M22520/1-01	4	QPL	M22520/1-02	QPL
		WA27F	4	Daniels	M22520/1-02	QPL
	1212	M22520/1-01	7	QPL	M22520/1-02	QPL
		WA27F	7	Daniels	M22520/1-02	QPL
18	1616	M22520/1-01	5	QPL	M22520/1-02	QPL
		WA27F	5	Daniels	M22520/1-02	QPL
	1212	M22520/1-01	7	QPL	M22520/1-02	QPL
		WA27F	7	Daniels	M22520/1-02	QPL
16	1616	M22520/1-01	6	QPL	M22520/1-02	QPL
		MS3191-1	-	QPL	MS3191-16A	QPL
		ST2220-1-Y	-	Boeing	ST2220-1-2	Boeing
		WA27F	6	Daniels	M22520/1-02	QPL
	1212	M22520/1-01	6	QPL	M22520/1-02	QPL
		WA27F	6	Daniels	M22520/1-02	QPL
14	1212	M225 20/1-01	7	QPL	M22520/1-02	QPL
		WA27F	7	Daniels	M22520/1-02	QPL

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO SERIES, PCD RSE SERIES, AND OTHER REAR RELEASE RELAY SOCKETS

Table 7 (continued)

Wire Size (AWG)	Contact Size	Crimp Tool				
		Basic Unit			Locator	
		Part Number	Setting	Supplier	Part Number	Supplier
12	1212	M22520/1-01	8	QPL	M22520/1-02	QPL
		MS3191-1	-	QPL	MS3191-12A	QPL
		ST2220-1-Y	-	Boeing	ST2220-1-3	Boeing
		WA27F	8	Daniels	M22520/1-02	QPL

(1) Remove the wire insulation.

Refer to Table 6 and Subject 20-00-15.

(2) Make a selection of the crimp tool from Table 7.

(3) For AWG 24, AWG 22, AWG 20, and AWG 18 wire in a size 12 contact, insert an eyelet into the contact. Refer to Table 4.

(4) Put the wire in the contact crimp barrel.

Make sure that:

- All the conductor strands are in the barrel
- The conductor is visible in the contact inspection hole.

(5) Put the contact in the crimp tool.

(6) Crimp the contact.

Make sure that the gap between the contact and wire insulation is not more than 1/32 inch.

B. Contact Insertion

Table 8
CONTACT INSERTION TOOLS

Contact Size	Insertion Tool		
	Part Number	Color	Supplier
2222L	M81969/14-10	Red	QPL
	M81969/16-01	Red	QPL
	NAS1664-20	Red	QPL
2222	M81969/14-01	Green	QPL
	MS27534-22D	-	QPL
2020	M81969/14-10	Red	QPL
	M81969/16-01	Red	QPL
	NAS1664-20	Red	QPL
	CIET20-1	Red	ITT Cannon
1620	M81969/14-03	Blue	QPL

20-81-16

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO SERIES, PCD RSE SERIES, AND OTHER REAR RELEASE RELAY SOCKETS

Table 8 (continued)

Contact Size	Insertion Tool		
	Part Number	Color	Supplier
1616	ATR 1105	-	Astro
	ATR 2112	-	Astro
	M81969/14-03	Blue	QPL
	NAC1664-16	Blue	QPL
	CIET16-3	Blue	ITT Cannon
1212	ATR 2160	-	Astro
	M81969/14-04	Yellow	QPL
	NAS1664-12	Yellow	QPL

- (1) Examine the contact to make sure that the contact does not have a bend.

NOTE: As an option for contact installation, wired contacts assembled with AWG 22 or larger wire can be inserted by hand, without an insertion tool.

- (2) To insert the contact with an insertion tool:

- (a) Make a selection of a contact insertion tool from Table 8.
- (b) Put the colored end of the tool on the wire.
- (c) Put the tip of the tool against the contact.

Make sure that the tip of the tool is against the shoulder of the contact.

- (d) At the rear of the relay socket, axially align the tool, the contact, and the contact cavity.
- (e) Push the contact into the contact cavity until it stops.
- (f) Carefully remove the tool from the contact cavity.

- (3) Lightly pull on the wire to make sure that contact is locked in the contact cavity.

CAUTION: DO NOT PULL THE WIRE WITH A STRONG OR A SUDDEN FORCE. THE FORCE CAN CAUSE DAMAGE TO THE CONTACT.

CAUTION: DO NOT MAKE A DENT IN THE WIRE INSULATION WITH THE FINGERNAILS. DAMAGE TO THE WIRE INSULATION CAN CAUSE UNSATISFACTORY PERFORMANCE AND RELIABILITY OF THE WIRE.

C. Spare Contact or Seal Plug Installation

- (1) Install a seal plug in all unused contact cavities.

Refer to Subject 20-60-08.



707, 727-787

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO-1057-8912 REAR RELEASE RELAY SOCKETS

<u>Paragraph</u>	<u>Page</u>
1. <u>PART NUMBERS DESCRIPTION</u>	1
A. Relay Socket Part Numbers	1
B. Contact Part Numbers	1
C. Contact Configuration	2
2. <u>RELAY SOCKET DISASSEMBLY</u>	2
A. Contact Removal	2
3. <u>RELAY SOCKET ASSEMBLY</u>	3
A. Contact Assembly	3
B. Contact Insertion	3
C. Installation of Spare Contacts	4
D. Installation of Seal Plugs or Seal Rods	4

20-81-17 CONTENTS

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO-1057-8912 REAR RELEASE RELAY SOCKETS


1. PART NUMBERS DESCRIPTION

A. Relay Socket Part Numbers


Table 1
RELAY SOCKET PART NUMBERS

Part Number	Supplier
SO-1057-8912	Leach

B. Contact Part Numbers

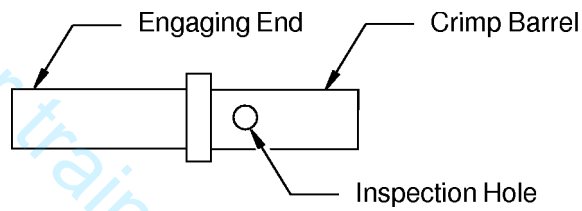

REAR RELEASE SOCKET CONTACTS
Figure 1

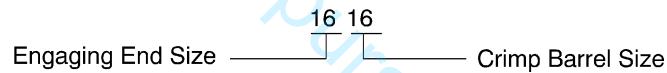

EXAMPLE OF A CONTACT SIZE
Figure 2


Table 2
CONTACT PART NUMBERS

Contact Size	Part Number	Supplier
1616	001-9007-000	Leach
1212	001-9007-001	Leach

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO-1057-8912 REAR RELEASE RELAY SOCKETS

C. Contact Configuration

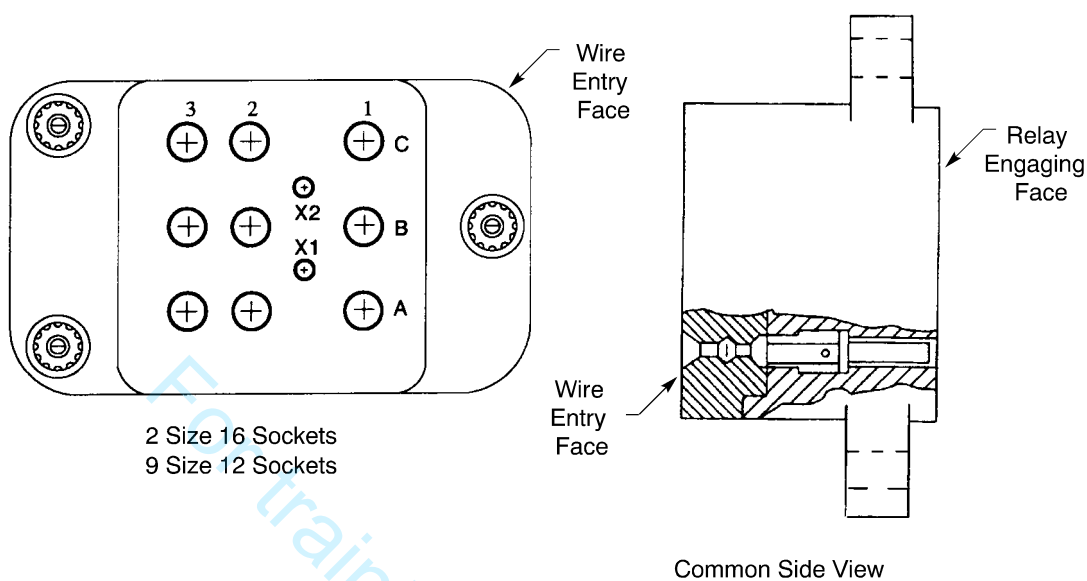

LEACH SO-1057-8912 RELAY SOCKET CONTACT CONFIGURATION

2. RELAY SOCKET DISASSEMBLY

A. Contact Removal

Table 3
CONTACT REMOVAL TOOLS

Contact Crimp Barrel Size	Removal Tool	Supplier
16	NAS1664-16	QPL
12	NAS1664-12	QPL

- (1) Make a selection of the removal tool from Table 3.
- (2) At the rear of the relay socket, put the end of the tool on the wire.
- (3) Axially align the removal tool and the contact cavity.
- (4) Push the tool into the contact cavity until it stops.
- (5) Hold the tool against the relay socket and, at the same time, hold the wire against the handle of the tool.
- (6) Pull the tool and the wire out of the contact cavity at the same time.

20-81-17

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO-1057-8912 REAR RELEASE RELAY SOCKETS

3. RELAY SOCKET ASSEMBLY

A. Contact Assembly

Table 4
CONTACT CRIMP TOOLS

Contact	Crimp Tool				
	Basic Unit		Locator		
	Part Number	Supplier	Part Number	Color	Supplier
001-9007-000	MS3191-1	QPL	MS3191-16A	Blue	QPL
	M22520/1-01	QPL	M22520/1-02	Blue	QPL
001-9007-001	MS3191-1	QPL	M3191-12A	Yellow	QPL
	M22520/1-01	QPL	M22520/1-02	Yellow	QPL

- (1) Remove 1/4 inch \pm 1/64 inch of wire insulation. Refer to Subject 20-00-15.
- (2) Make a selection of a crimp tool from Table 4.
- (3) Put the wire or wires in the contact crimp barrel.
Make sure that the conductor can be seen in the contact inspection hole.
- (4) Put the contact in the crimp tool.
- (5) Crimp the contact.
Make sure that the distance from the end of the crimp barrel to the end of the wire insulation is 0.03 inch maximum.

CAUTION: THE INDEX POINT AND THE INDENTERS WILL NOT BE IN THE CORRECT POSITION IF THERE IS TOO MUCH PRESSURE ON THE CONTACT.

B. Contact Insertion

Table 5
CONTACT INSERTION TOOLS


Contact Crimp Barrel Size	Insertion Tool	Supplier
16	NAS1664-16	QPL
12	NAS1664-12	QPL

- (1) Examine the contact to make sure that the contact does not have a bend.
NOTE: As an option for contact installation, wired contacts assembled with AWG 22 or larger wire can be inserted by hand, without an insertion tool.
- (2) To insert the contact with an insertion tool:
 - (a) Make a selection of a contact insertion tool from Table 5.
 - (b) Put the colored end of the tool on the wire.
 - (c) Put the tip of the tool against the contact.
Make sure that the tip of the tool is against the shoulder of the contact. Refer to Figure 4.

20-81-17

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO-1057-8912 REAR RELEASE RELAY SOCKETS

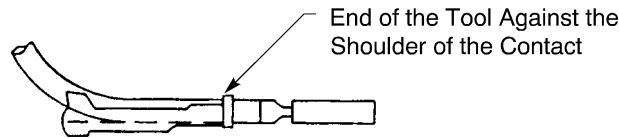

POSITION OF THE INSERTION TOOL ON THE CONTACT

Figure 4

- (d) At the rear of the relay socket, axially align the tool, the contact, and the contact cavity.
- (e) Push the contact into the contact cavity until it stops.
- (f) Carefully remove the tool from the contact cavity.
- (3) Lightly pull on the wire to make sure that contact is locked in the contact cavity.

CAUTION: DO NOT PULL THE WIRE WITH A STRONG OR A SUDDEN FORCE. THE FORCE CAN CAUSE DAMAGE TO THE CONTACT.

CAUTION: DO NOT MAKE A DENT IN THE WIRE INSULATION WITH THE FINGERNAILS. DAMAGE TO THE WIRE INSULATION CAN CAUSE UNSATISFACTORY PERFORMANCE AND RELIABILITY OF THE WIRE.

C. Installation of Spare Contacts

Refer to Subject 20-60-08.

If it is necessary to install a spare contact in the contact cavities that are not used:

- (1) Make a selection of a contact insertion tool from Table 5.
- (2) Put the contact in the contact cavity.
- (3) Axially align the tool and the contact.
- (4) Push the tool straight into the contact cavity until the tool stops.
- (5) Carefully remove the tool from the contact cavity.

D. Installation of Seal Plugs or Seal Rods

Refer to Subject 20-60-08.

If it is necessary to install a seal plug or a seal rod in the contact cavities that are not used:

- (1) Make a selection of a seal plug or a seal rod.
- (2) Push the plug or the rod into the contact cavity.

Make sure that the distance from the end of the plug or the rod to the grommet is less than 0.1 inch.



707, 727-787

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO-1048-8308 REAR RELEASE RELAY SOCKETS

<u>Paragraph</u>	<u>Page</u>
1. <u>PART NUMBERS AND DESCRIPTION</u>	1
A. Relay Socket Part Numbers	1
B. Contact Part Numbers	2
C. Contact Configuration	2
2. <u>RELAY SOCKET DISASSEMBLY</u>	3
A. Contact Removal	3
3. <u>RELAY SOCKET ASSEMBLY</u>	3
A. Contact Assembly	3
B. Contact Insertion	4
C. Spare Contact or Seal Plug Installation	5

20-81-18 CONTENTS

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO-1048-8308 REAR RELEASE RELAY SOCKETS

1. PART NUMBERS AND DESCRIPTION


A. Relay Socket Part Numbers

Table 1
RELAY SOCKET PART NUMBERS

Part Number	Supplier
SO-1048-8308	Leach
003019-0001	Viking
RSE116135	PCD

Table 2
ALTERNATIVE PART NUMBERS

Specified Relay Sockets		Alternative Relay Sockets	
Part Number	Supplier	Part Number	Supplier
SO-1048-8308	Leach	003019-0001	Viking
SO-1048-8308	Leach	RSE116135	PCD

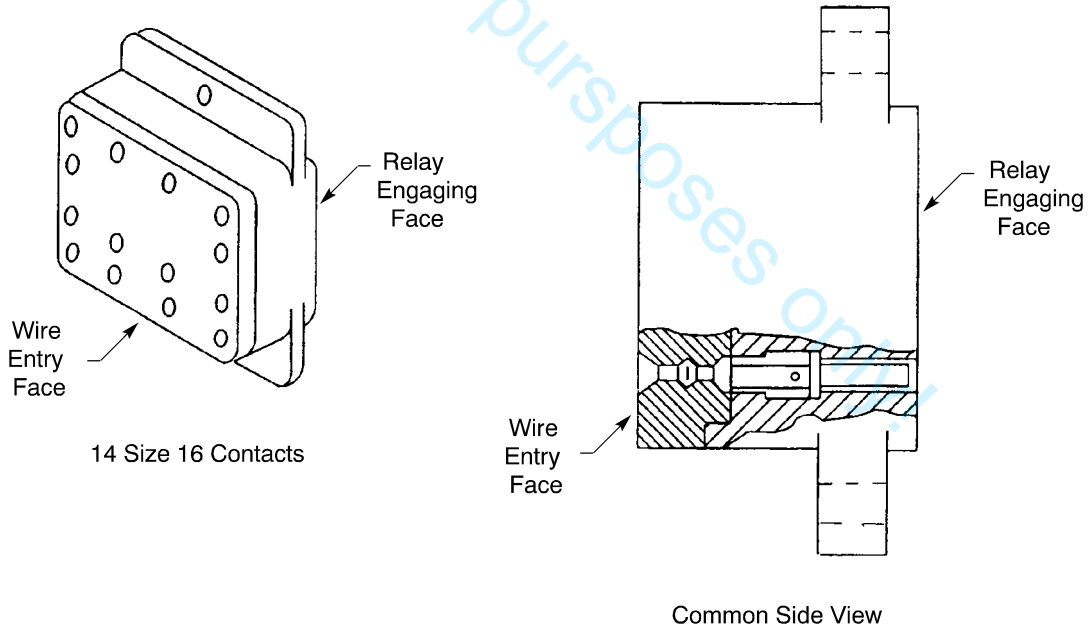


LEACH SO-1048-8308 REAR RELEASE RELAY SOCKET
Figure 1


STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO-1048-8308 REAR RELEASE RELAY SOCKETS

B. Contact Part Numbers

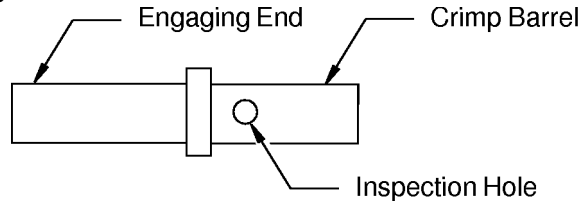

REAR RELEASE SOCKET CONTACTS
Figure 2

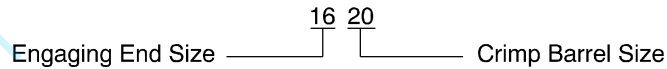


EXAMPLE OF A CONTACT SIZE
Figure 3

Table 3
CONTACT PART NUMBERS

Contact		Part Number	Supplier
Engaging End Size	Crimp Barrel Size		
16	20	001-5490-001	Leach
	16	001-5490-000	Leach

C. Contact Configuration

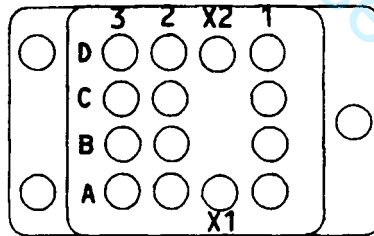

LEACH SO-1048-8308 RELAY SOCKET CONTACT CONFIGURATION
Figure 4

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO-1048-8308 REAR RELEASE RELAY SOCKETS

2. RELAY SOCKET DISASSEMBLY

A. Contact Removal

Table 4
CONTACT REMOVAL TOOLS

Crimp Barrel Size	Removal Tool	Supplier
20	NAS1664-16	QPL
16	NAS1664-16	QPL

- (1) Make a selection of the removal tool from Table 4.
- (2) At the rear of the relay socket, put the end of the tool on the wire.
- (3) Axially align the removal tool and the contact cavity.
- (4) Push the tool into the contact cavity until it stops.
- (5) Hold the tool against the relay socket and, at the same time, hold the wire against the handle of the tool.
- (6) Pull the tool and the wire out of the contact cavity at the same time.

3. RELAY SOCKET ASSEMBLY

A. Contact Assembly

Table 5
SIZE 16 CONTACT FILLER WIRES

Wire Size (AWG)	Filler Wire	
	Size (AWG)	Number Required
24	18	1
22	18	1
20	20	1

Table 6
CONTACT CRIMP TOOLS

Contact	Crimp Tool				
	Basic Unit		Locator		
	Part Number	Supplier	Part Number	Color	Supplier
001-5490-001	MS3191-1	QPL	MS3191-16	Blue	QPL
	M22520/1-01	QPL	M22520/1-02	Blue	QPL
001-5490-000	MS3191-1	QPL	M3191-20	Red	QPL
	M22520/1-01	QPL	M22520/1-02	Red	QPL

- (1) Make a selection of the contact from Table 3.
- (2) Remove 1/4 inch \pm 1/64 inch of insulation from wire end.

20-81-18

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO-1048-8308 REAR RELEASE RELAY SOCKETS

- (3) For AWG 20, AWG 22, or AWG 24 wire in a size 16 contact:
 - (a) Make a selection of a filler wire from Table 5.
- (4) Make a selection of the crimp tool from Table 6.
- (5) Put the wire or wires in the contact crimp barrel.

Make sure that the conductor is visible in the contact inspection hole.
- (6) Put the contact in the crimp tool.
- (7) Crimp the contact.

CAUTION: THE INDEX POINT AND THE INDENTORS WILL NOT BE IN THE CORRECT POSITION IF THERE IS TOO MUCH PRESSURE ON THE CONTACT.

Make sure that the maximum gap between the contact and wire insulation is 1/32 inch.

B. Contact Insertion

Table 7
CONTACT INSERTION TOOLS


Contact Crimp Barrel Size	Insertion Tool	Supplier
20	NAS1664-16	QPL
16	NAS1664-16	QPL

- (1) Examine the contact to make sure that the contact does not have a bend.

NOTE: As an option for contact installation, wired contacts assembled with AWG 22 or larger wire can be inserted by hand, without an insertion tool.

- (2) To insert the contact with an insertion tool:
 - (a) Make a selection of a contact insertion tool from Table 7.
 - (b) Put the colored end of the tool on the wire.
 - (c) Put the tip of the tool against the contact.

Make sure that the tip of the tool is against the shoulder of the contact. Refer to Figure 5.

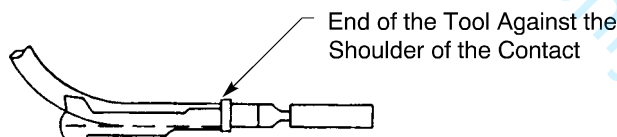

POSITION OF THE INSERTION TOOL ON THE CONTACT
Figure 5

- (d) At the rear of the relay socket, axially align the tool, the contact, and the contact cavity.
 - (e) Push the contact into the contact cavity until it stops.
 - (f) Carefully remove the tool from the contact cavity.
- (3) Lightly pull on the wire to make sure that contact is locked in the contact cavity.



707, 727-787

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO-1048-8308 REAR RELEASE RELAY SOCKETS

CAUTION: DO NOT PULL THE WIRE WITH A STRONG OR A SUDDEN FORCE. THE FORCE CAN CAUSE DAMAGE TO THE CONTACT.

CAUTION: DO NOT MAKE A DENT IN THE WIRE INSULATION WITH THE FINGERNAILS. DAMAGE TO THE WIRE INSULATION CAN CAUSE UNSATISFACTORY PERFORMANCE AND RELIABILITY OF THE WIRE.

C. Spare Contact or Seal Plug Installation

- (1) Install a spare contact or a seal plug in all unused contact cavities.

Refer to Subject 20-60-08.

For training purposes only!

20-81-18

Page 5
Jun 01/2012

D6-54446



707, 727-787

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16AF1, BACS16AG1, AND BACS16AH1 REAR RELEASE RELAY SOCKETS

<u>Paragraph</u>	<u>Page</u>
1. <u>PART NUMBERS AND DESCRIPTION</u>	1
A. Relay Socket Part Numbers	1
B. Contact Part Numbers	1
C. Contact Configurations	2
D. Seal Plug Part Numbers	2
2. <u>RELAY SOCKET DISASSEMBLY</u>	3
A. Contact Removal	3
3. <u>RELAY SOCKET ASSEMBLY</u>	3
A. Contact Assembly	3
B. Contact Insertion	5
C. Seal Plug Installation	5

20-81-19 CONTENTS

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16AF1, BACS16AG1, AND BACS16AH1 REAR RELEASE RELAY SOCKETS


1. PART NUMBERS AND DESCRIPTION

A. Relay Socket Part Numbers

The relay socket is designed as a base that the relay plugs into.

Table 1
RELAY SOCKET PART NUMBERS


Boeing Standard	Part Number	Supplier
BACS16AF1	451120-027	Amphenol/ PCD
	RSE120027	
BACS16AG1	451120-026	Amphenol/ PCD
	RSE120026	
BACS16AH1	451120-028	Amphenol/ PCD
	RSE120028	

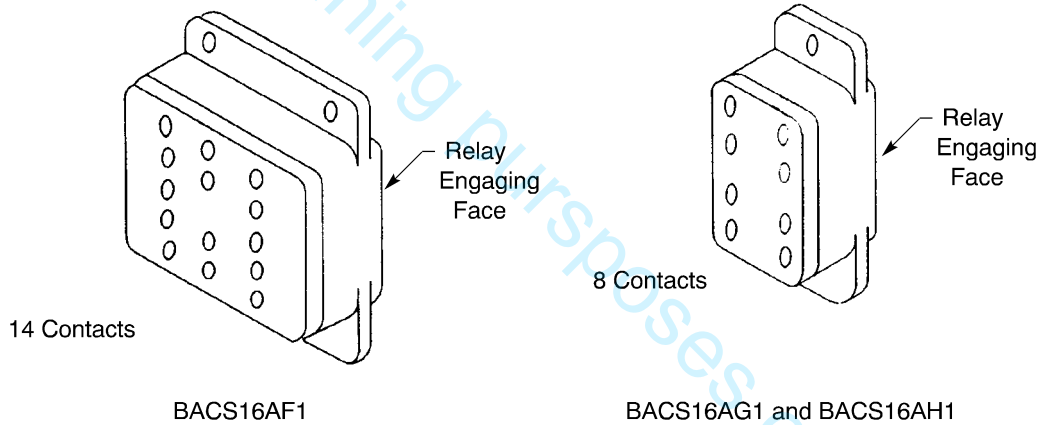

BACS16AF1, BACS16AG1, AND BACS16AH1 REAR RELEASE RELAY SOCKETS

Figure 1

B. Contact Part Numbers

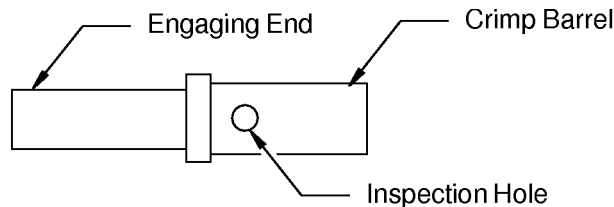

REAR RELEASE CRIMP TYPE SOCKET CONTACTS

Figure 2

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16AF1, BACS16AG1, AND BACS16AH1 REAR RELEASE RELAY SOCKETS

Engaging End Size 20 20 Crimp Barrel Size


EXAMPLE OF A CONTACT SIZE

Figure 3

Table 2
CONTACT PART NUMBERS

Contact Size	Boeing Standard	Part Number	Supplier
2220	BACC47ER1	422109-900	Precision Connector Design

C. Contact Configurations

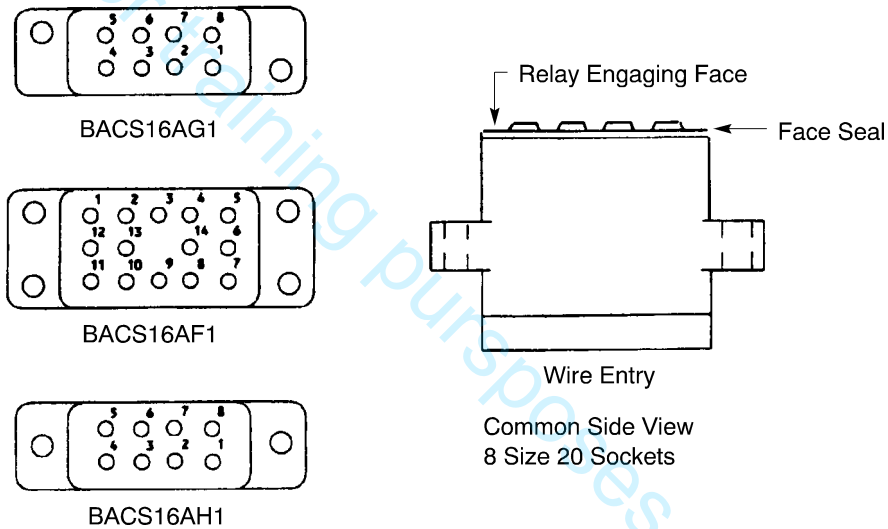

CONTACT ARRANGEMENTS

Figure 4

D. Seal Plug Part Numbers

Table 3
SEAL PLUG PART NUMBERS

Part Number	Supplier
M83723/28-20	QPL
NAS1668-1	QPL

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16AF1, BACS16AG1, AND BACS16AH1 REAR RELEASE RELAY SOCKETS

2. RELAY SOCKET DISASSEMBLY

A. Contact Removal

Table 4
CONTACT REMOVAL TOOLS

Contact Size	Removal Tool	Supplier
2220	6500-001-20	Matrix
	ATR 2080	Astro
	CIET-20	ITT Cannon
	M81969/14-02	QPL
	M81969/14-11	QPL
	M83723/31-20	QPL

- (1) Make a selection of a removal tool from Table 4.
- (2) At the rear of the relay socket, put the white end of the removal tool on the wire.
- (3) Axially align the removal tool and the contact cavity.
- (4) Push the tool into the contact cavity until it stops.
Make sure that the tool stays aligned with the contact cavity.
- (5) Hold the tool against the relay socket and, at the same time, hold the wire against the handle of the tool.
- (6) Pull the tool and the wire out of the contact cavity at the same time.

3. RELAY SOCKET ASSEMBLY

A. Contact Assembly

Table 5
CONTACT CRIMP TOOLS FOR ONE WIRE IN THE CRIMP BARREL

Wire Size (AWG)	Contact		Crimp Tool			
	Size	Boeing Standard	Basic Unit		Locator	
			Part Number	Setting	Part Number	Color
24	2220	BACC47ER1	M22520/2-01	4	M22520/2-11	-
			M22520/1-01	1	M22520/1-04	Red
			ST2220-1-Y	-	ST2220-1-48	-
22	2220	BACC47ER1	M22520/2-01	6	M22520/2-11	-
			M22520/1-01	3	M22520/1-04	Red
			ST2220-1-Y	-	ST2220-1-48	-
20	2220	BACC47ER1	M22520/2-01	7	M22520/2-11	-
			M22520/1-01	4	M22520/1-04	Red
			ST2220-1-Y	-	ST2220-1-48	-

20-81-19

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16AF1, BACS16AG1, AND BACS16AH1 REAR RELEASE RELAY SOCKETS

Table 6
CONTACT CRIMP TOOLS FOR TWO WIRES IN THE CRIMP BARREL

Two Wires in the Crimp Barrel		Contact		Crimp Tool			
First Wire Size (AWG)	Second Wire Size (AWG)	Size	Boeing Standard	Basic Unit		Locator	
				Part Number	Setting	Part Number	Color
24	24	2220	BACC47ER1	M22520/2-01	6	M22520/2-11	-
				M22520/1-01	3	M22520/1-04	Red
				ST2220-1-Y	-	ST2220-1-48	-

Table 7
CRIMP TOOL SUPPLIERS

Crimp Tool	Supplier
M22520/1-01	QPL
M22520/1-04	QPL
M22520/2-01	QPL
M22520/2-11	QPL
ST2220-1-Y	Boeing
ST2220-1-48	Boeing

- (1) Remove 0.14 inch \pm 0.02 inch of wire insulation from the end of the wire.
- (2) Make a selection of a crimp tool from:
 - Table 5 if one wire is to be installed in the crimp barrel
 - Table 6 if two wires are to be installed in the crimp barrel.
- (3) Put wire or wires in the contact barrel.
Make sure that:
 - All of the conductor strands are in the crimp barrel
 - The conductor is visible in the contact inspection hole.
- (4) Put the contact in the crimp tool.
NOTE: As an option, the wire can be put in the contact before the contact is put in the crimp tool.
- (5) Crimp the contact.
Make sure the distance between the end of the contact and the wire insulation is a maximum of:
 - 0.03 inch if one wire is to be installed in the crimp barrel
 - 0.05 inch if two wires are to be installed in the crimp barrel.

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16AF1, BACS16AG1, AND BACS16AH1 REAR RELEASE RELAY SOCKETS

B. Contact Insertion

Table 8
CONTACT INSERTION TOOLS

Contact Size	Insertion Tool	Supplier
2020	6500-001-20	Matrix
	ATR 1078	Astro
	CIET-20	ITT Cannon
	M81969/14-02	QPL
	M81969/14-11	QPL
	M83723/31-20	QPL


CAUTION: DO NOT INSTALL AN UNWIRED CONTACT.

- (1) Examine the contact to make sure that the contact does not have a bend.

NOTE: As an option for contact installation, wired contacts assembled with AWG 22 or larger wire can be inserted by hand, without an insertion tool.

- (2) To insert the contact with an insertion tool:
 - (a) Make a selection of a contact insertion tool from Table 8.
 - (b) Put the colored end of the insertion tool on the wire.
 - (c) Put the tip of the tool against the contact.

Make sure that the tip of the tool is against the shoulder of the contact. Refer to Figure 5.

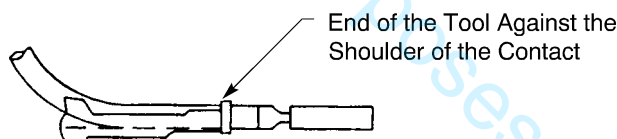

POSITION OF THE INSERTION TOOL ON THE CONTACT
Figure 5

- (d) At the rear of the relay socket, axially align the tool, the contact, and the contact cavity.
 - (e) Push the contact into the contact cavity until it stops.
 - (f) Carefully remove the tool from the contact cavity.
- (3) Lightly pull on the wire to make sure that contact is locked in the contact cavity.

CAUTION: DO NOT PULL THE WIRE WITH A STRONG OR A SUDDEN FORCE. THE FORCE CAN CAUSE DAMAGE TO THE CONTACT.

CAUTION: DO NOT MAKE A DENT IN THE WIRE INSULATION WITH THE FINGERNAILS. DAMAGE TO THE WIRE INSULATION CAN CAUSE UNSATISFACTORY PERFORMANCE AND RELIABILITY OF THE WIRE.

C. Seal Plug Installation

- (1) Make a selection of a seal plug from Table 3.



707, 727-787

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF BACS16AF1, BACS16AG1, AND BACS16AH1 REAR RELEASE RELAY SOCKETS

- (2) Install seal plugs in all unwired grommet holes.

Refer to Subject 20-60-08.

For training purposes only!

20-81-19

Page 6
Oct 01/2012

D6-54446



707, 727-787

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO-1055-8690 REAR RELEASE RELAY SOCKETS

<u>Paragraph</u>	<u>Page</u>
1. <u>PART NUMBERS AND DESCRIPTION</u>	1
A. Relay Socket Part Numbers	1
B. Contact Part Numbers	1
2. <u>RELAY SOCKET DISASSEMBLY</u>	1
A. Contact Removal	1
3. <u>RELAY SOCKET ASSEMBLY</u>	2
A. Contact Assembly	2
B. Contact Insertion	2

For training purposes only!

20-81-21 CONTENTS

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO-1055-8690 REAR RELEASE RELAY SOCKETS


1. PART NUMBERS AND DESCRIPTION

A. Relay Socket Part Numbers


Table 1
RELAY SOCKET PART NUMBERS

Part Number	Supplier
SO-1055-8690	Leach

B. Contact Part Numbers

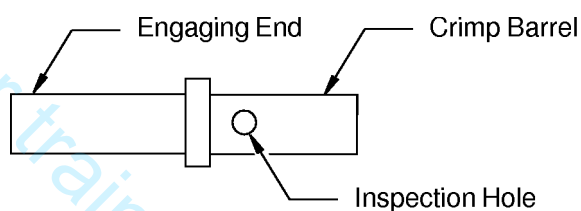

REAR RELEASE CRIMP TYPE CONTACTS
Figure 1

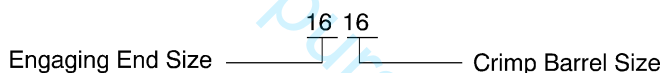

EXAMPLE OF A CONTACT SIZE
Figure 2

Table 2
CONTACT PART NUMBERS

Contact Size	Part Number	Supplier
2222	001-7931-000	Leach
1616	001-9007-000	Leach

2. RELAY SOCKET DISASSEMBLY

A. Contact Removal

Table 3
CONTACT REMOVAL TOOLS

Crimp Barrel Size	Removal Tool	Supplier
22	NAS1664-20	QPL
16	NAS1664-1-16	QPL

- (1) Make a selection of the removal tool from Table 3.
- (2) At the rear of the relay socket, put the end of the tool on the wire.

20-81-21

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO-1055-8690 REAR RELEASE RELAY SOCKETS

- (3) Axially align the removal tool and the contact cavity.
- (4) Push the tool into the contact cavity until it stops.
- (5) Hold the tool against the relay socket and, at the same time, hold the wire against the handle of the tool.
- (6) Pull the tool and the wire out of the contact cavity at the same time.

3. RELAY SOCKET ASSEMBLY

A. Contact Assembly

Table 4
CONTACT CRIMP TOOLS

Contact Crimp Barrel Size	Crimp Tool			
	Basic Unit		Locator	
	Part Number	Supplier	Part Number	Supplier
22	MS3191-A	QPL	MS3191-22D	QPL
	ST2220-1-Y	Boeing	ST2220-1-60	Boeing
16	M22520/1-01	QPL	M22520/1-02	QPL
	MS3191-A	QPL	MS3191-16A	QPL

- (1) Remove 1/4 inch \pm 1/64 inch of wire insulation.
- (2) Make a selection of the contact crimp tool from Table 4.
- (3) Put the wire in the contact crimp barrel.
Make sure that:
 - The gap between the wire insulation and the contact is no more than 1/32 inch
 - The conductor is visible in the contact inspection hole.
- (4) Crimp the contact.

B. Contact Insertion

Table 5
CONTACT INSERTION TOOLS

Contact Crimp Barrel Size	Insertion Tool	Supplier
22	NAS1664-20	QPL
16	NAS1664-1-16	QPL

- (1) Examine the contact to make sure that the contact does not have a bend.
NOTE: As an option for contact installation, wired contacts assembled with AWG 22 or larger wire can be inserted by hand, without an insertion tool.
- (2) To insert the contact with an insertion tool:
 - (a) Make a selection of a contact insertion tool from Table 5.
 - (b) Put the wire and contact into the insertion side of the tool.
 - (c) Put the tip of the tool against the contact.

20-81-21



707, 727-787

STANDARD WIRING PRACTICES MANUAL

ASSEMBLY OF LEACH SO-1055-8690 REAR RELEASE RELAY SOCKETS

- (d) At the rear of the relay socket, axially align the tool, the contact, and the contact cavity.
 - (e) Push the contact into the contact cavity until it stops.
 - (f) Carefully remove the tool from the contact cavity.
- (3) Lightly pull on the wire to make sure that contact is locked in the contact cavity.

CAUTION: DO NOT PULL THE WIRE WITH A STRONG OR A SUDDEN FORCE. THE FORCE CAN CAUSE DAMAGE TO THE CONTACT.

CAUTION: DO NOT MAKE A DENT IN THE WIRE INSULATION WITH THE FINGERNAILS. DAMAGE TO THE WIRE INSULATION CAN CAUSE UNSATISFACTORY PERFORMANCE AND RELIABILITY OF THE WIRE.

For training purposes only!

20-81-21

Page 3
Jun 01/2012

D6-54446



707, 727-787

STANDARD WIRING PRACTICES MANUAL

INSTALLATION OF RELAY SOCKETS AND RELAYS

<u>Paragraph</u>		<u>Page</u>
1.	<u>RELAY SOCKET AND RELAY INSTALLATION</u>	1
A.	Installation of BACS16AF1 Relay Sockets and Related BACR13CE() Relays	1
B.	Installation of BACS16AG1 Relay Sockets and Related BACR13CD() Relays	3
C.	Installation of BACS16AH1 Relay Sockets and Related TDH-1852, TDH-1853, or TDH 1953 Relays	6
D.	Installation of BACS16X and BACS16W Relay Sockets	8
E.	Installation of Leach SO Series and Amphenol/PCD RSE Series Rear Release Relay Sockets	11
F.	Bottom Mount Installation of Leach So-1018-7119 and So-1021-7127 Relay Sockets	13
G.	Installation of Armel HRCC-()KM, HRFB-605JV2, HRT-()KM and HRTS-()KM Relay Sockets	15
H.	Installation of the Armel 3SAM6015M2 Relay, the HRFB-605JV2 Relay Socket and the Armel 3SBM5134V2 Relay	15

20-81-22 CONTENTS

STANDARD WIRING PRACTICES MANUAL
INSTALLATION OF RELAY SOCKETS AND RELAYS
1. RELAY SOCKET AND RELAY INSTALLATION
A. Installation of BACS16AF1 Relay Sockets and Related BACR13CE() Relays

Refer to Subject 20-81-19 for the relay socket part numbers.


NOTE: The installation hardware for the BACS16AF1 relay socket and its relay is shown in Table 1 and in Figure 1.

Table 1
BACS16AF1 RELAY SOCKET INSTALLATION HARDWARE PART NUMBERS

Description	Size	Appleton Part Number	Amphenol - PCD Part Number	Industry Part Number	Marketing Masters Part Number
Screw	2-56	422080-809	200006501	-	-
Relay Lock Washer	2	422080-800	200006201	NAS1676C2	-
Mounting Stud	-	422080-815	200006801	-	-
Spacer	0.050 inch thick	422080-806	200006401	-	-
Panel Lock Washer	4	422080-801	200006301	NAS1676C4	-
Hex Nut	4-40	422080-817	200006901	-	-
Mounting Hardware Kit Includes All Parts Listed Above	-	-	CNA110902	-	-
Screw and Captive Relay Lock Washer	2-56	-	-	-	GAL500-2

STANDARD WIRING PRACTICES MANUAL


INSTALLATION OF RELAY SOCKETS AND RELAYS

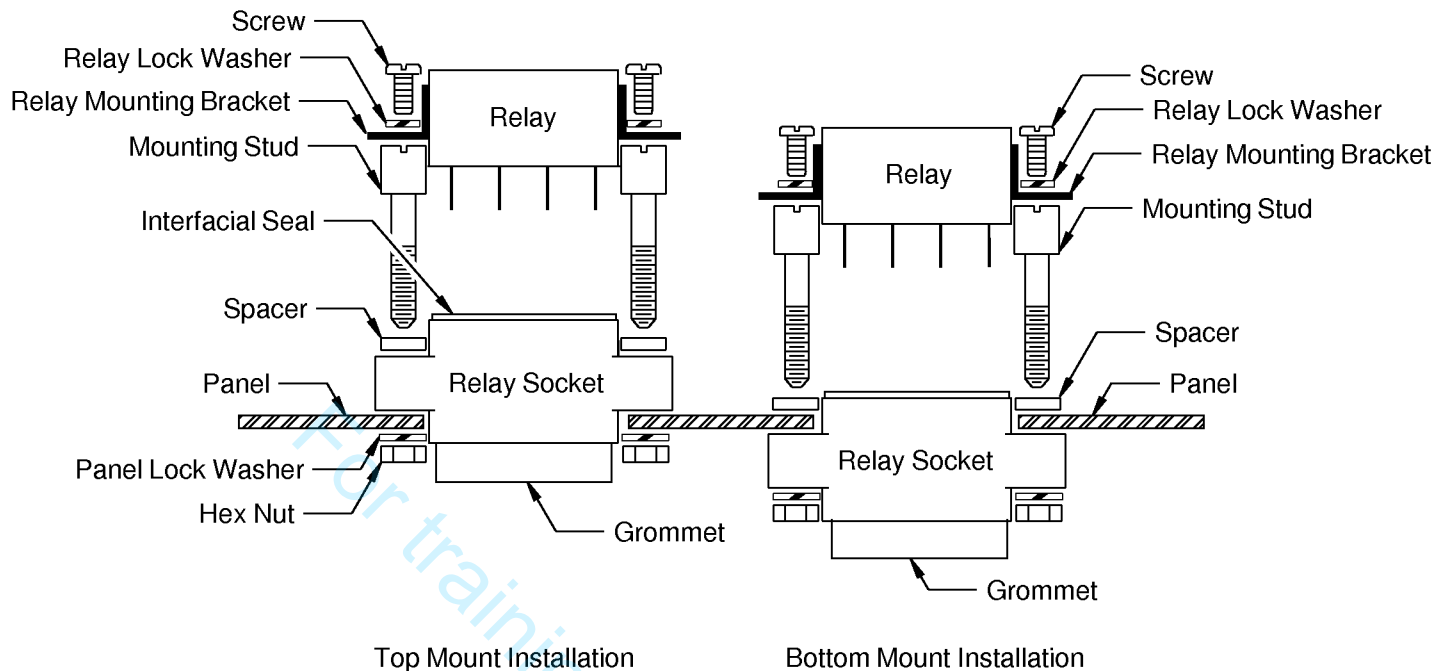

IDENTIFICATION OF RELAY SOCKET HARDWARE

Figure 1

- (1) Install the BACS16AF1 relay socket on the panel or bracket in the same configuration as its initial installation.

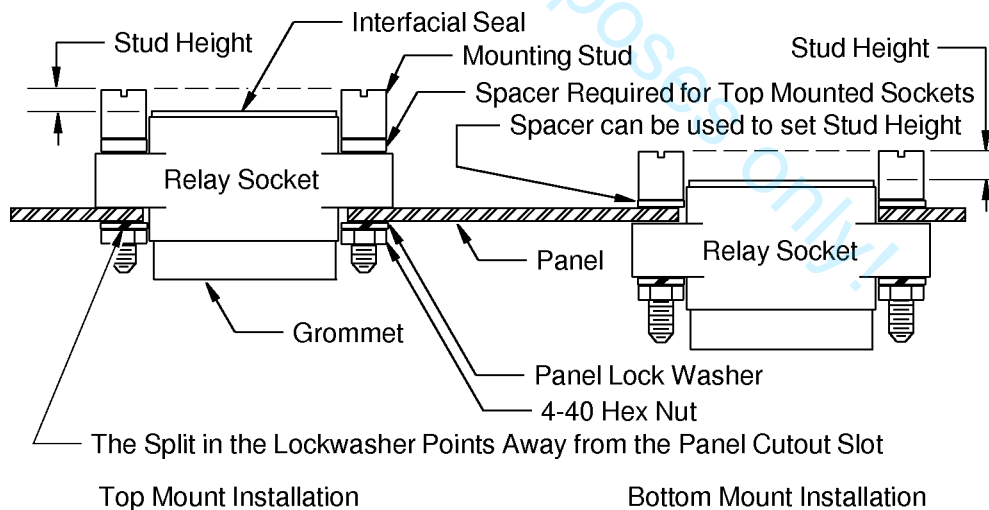

INSTALLATION OF THE RELAY SOCKET AND SPACERS FOR THE CORRECT STUD HEIGHT

Figure 2

- (a) Mount the relay socket in the top mounted configuration If the initial installation was top mounted.

STANDARD WIRING PRACTICES MANUAL

INSTALLATION OF RELAY SOCKETS AND RELAYS

Make sure to use the necessary number of spacers to make the stud height from the surface of the interfacial seal to the end of the mounting stud equal to 0.085 inch minimum to 0.110 inch maximum. Refer to Figure 2.

NOTE: For the top mount configuration on a thin panel, two spacers may be needed.


- (b) Mount the relay socket in the bottom mounted configuration. If the initial installation was bottom mounted.

Make sure to use the necessary number of spacers to make the stud height from the surface of the interfacial seal to the end of the mounting stud equal to 0.085 inch minimum to 0.110 inch maximum. Refer to Figure 2.

- (2) Verify that the stud height from the socket interfacial seal is between 0.085 inch minimum and 0.110 inch maximum.
- (3) Torque the hex nut on the mounting stud to between 6 and 8 inch pounds.
- (4) Push the correct BACR13CE () relay into the BACS16AF1 relay socket until it stops.
- (5) Install the screw and the relay lock washer on each side of the relay.
- (6) Torque each screw to between 3.5 and 4.5 inch pounds.

NOTE: These conditions are acceptable after the screws are tightened: Refer to Figure 3.

- A bend in the relay mounting bracket is acceptable
- A gap between the relay mounting bracket and the end of the mounting stud is acceptable.

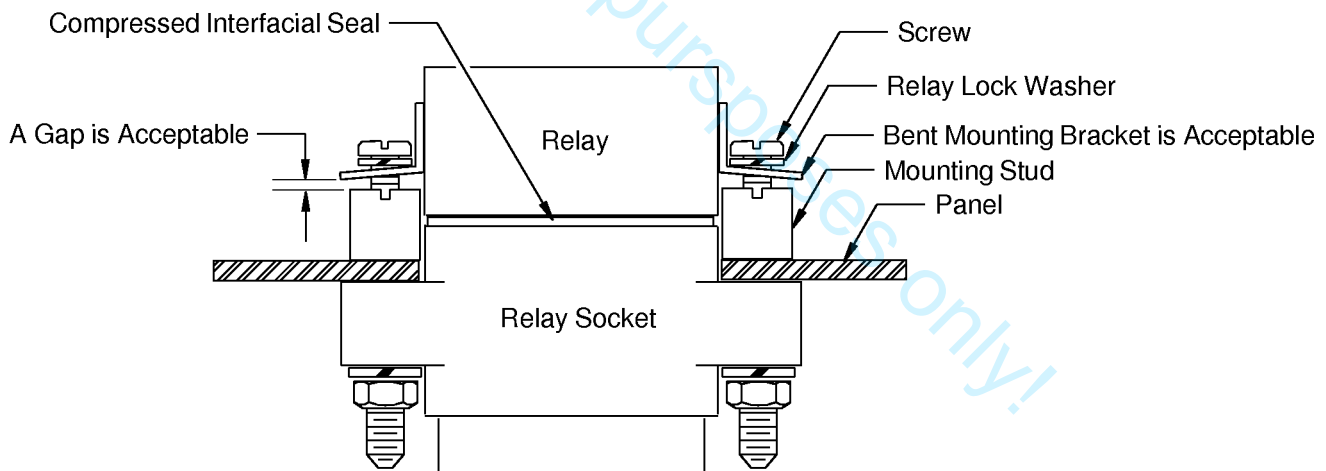

ACCEPTABLE CONDITIONS OF THE INSTALLED RELAY

Figure 3

B. Installation of BACS16AG1 Relay Sockets and Related BACR13CD () Relays


Refer to Subject 20-81-19 for the relay socket part numbers.

NOTE: The installation hardware for the BACS16AG1 relay socket and its relay is shown in Table 2 and in Figure 4.

STANDARD WIRING PRACTICES MANUAL
INSTALLATION OF RELAY SOCKETS AND RELAYS

Table 2
BACS16AG1 RELAY SOCKET INSTALLATION HARDWARE PART NUMBERS

Description	Size	Appleton Part Number	Amphenol - PCD Part Number	Industry Part Number	Marketing Masters Part Number
Screw	2-56	422080-809	200006501	-	-
Relay Lock Washer	2	422080-800	200006201	NAS1676C2	-
Mounting Stud	-	422080-815	200006801	-	-
Spacer	0.050 inch thick	422080-806	200006401	-	-
Panel Lock Washer	4	422080-801	200006301	NAS1676C4	-
Hex Nut	4-40	422080-817	200006901	-	-
Mounting hardware kit including All Parts Listed Above	-	-	CNA110900	-	-
Screw and Captive Relay Lock Washer	2-56	-	-	-	GAL500-2

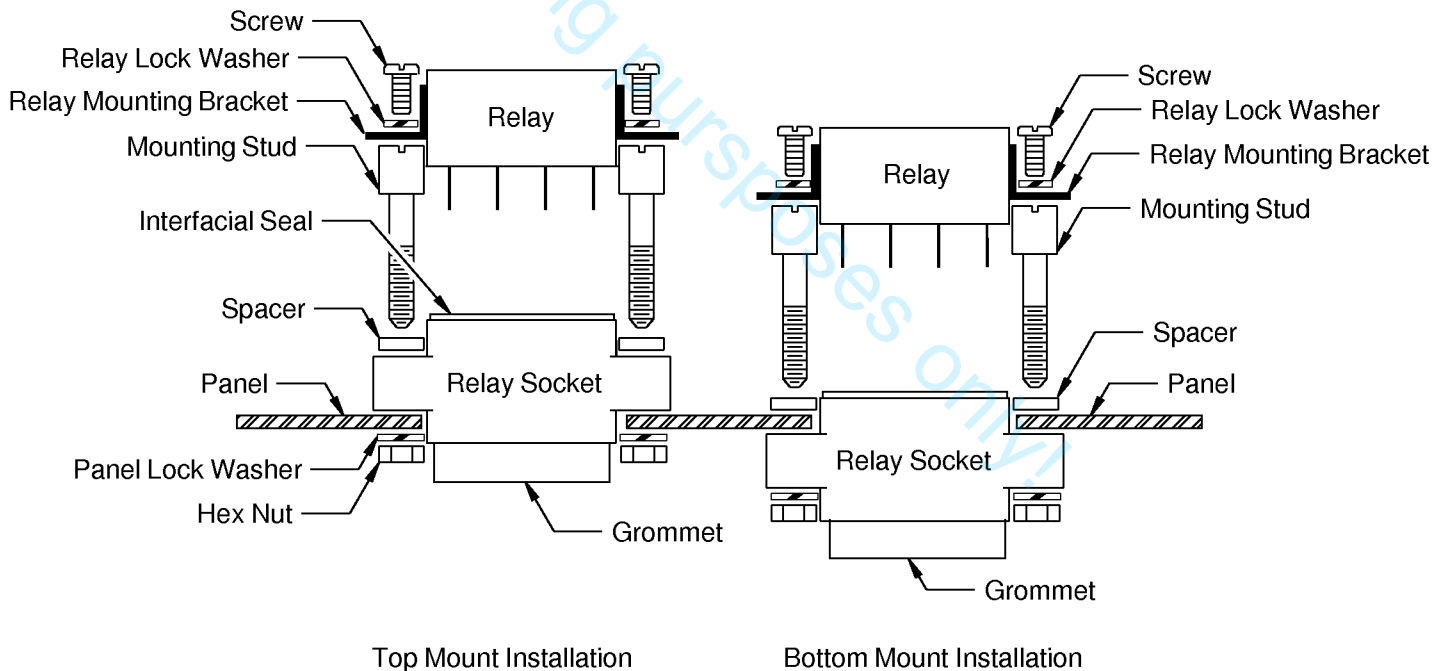


IDENTIFICATION OF RELAY SOCKET HARDWARE
Figure 4

- (1) Install the BACS16AG1 relay socket on the panel or bracket in the same configuration as its initial installation.

20-81-22

STANDARD WIRING PRACTICES MANUAL

INSTALLATION OF RELAY SOCKETS AND RELAYS

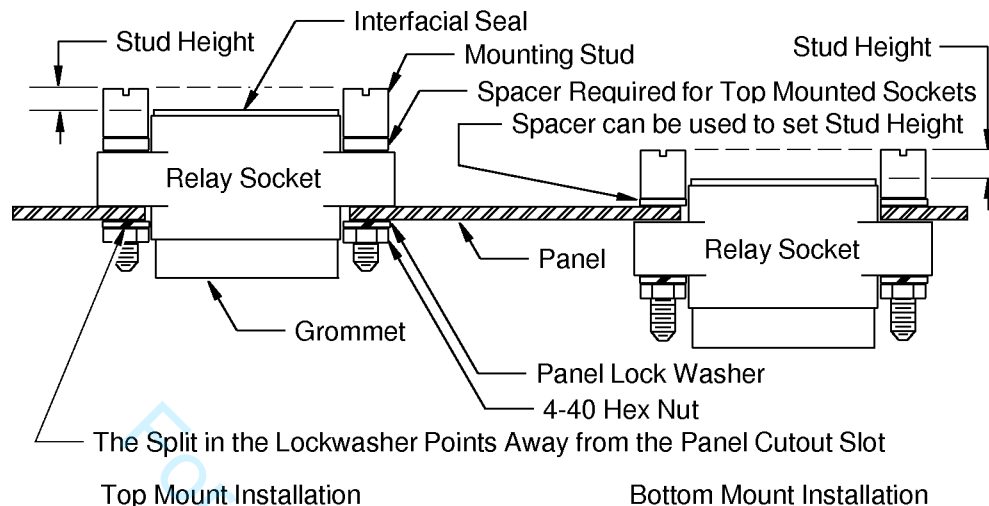

INSTALLATION OF THE RELAY SOCKET AND SPACERS FOR THE CORRECT STUD HEIGHT
Figure 5

- (a) Mount the relay socket in the top mounted configuration If the initial installation was top mounted.

Make sure to use the necessary number of spacers to make the stud height from the surface of the interfacial seal to the end of the mounting stud equal to 0.090 inch minimum to 0.115 inch maximum. Refer to Figure 5.

NOTE: For the top mount configuration on a thin panel, two spacers may be needed.
- (b) Mount the relay socket in the bottom mounted configuration If the initial installation was bottom mounted.


Make sure to use the necessary number of spacers to make the stud height from the surface of the interfacial seal to the end of the mounting stud equal to 0.090 inch minimum to 0.115 inch maximum. Refer to Figure 5.
- (2) Verify that the stud height from the socket interfacial seal is between 0.090 inch minimum and 0.115 inch maximum.
- (3) Torque the hex nut on the mounting stud to between 6 and 8 inch pounds.
- (4) Push the correct BACR13CD() relay into the BACS16AG1 relay socket until it stops.
- (5) Install the screw and the relay lock washer on each side of the relay.
- (6) Torque the each screw to between 3.5 and 4.5 inch pounds.

NOTE: These conditions are acceptable after the screws are tightened: Refer to Figure 6.

- A bend in the relay mounting bracket is acceptable
- A gap between the relay mounting bracket and the end of the mounting stud is acceptable.

STANDARD WIRING PRACTICES MANUAL

INSTALLATION OF RELAY SOCKETS AND RELAYS

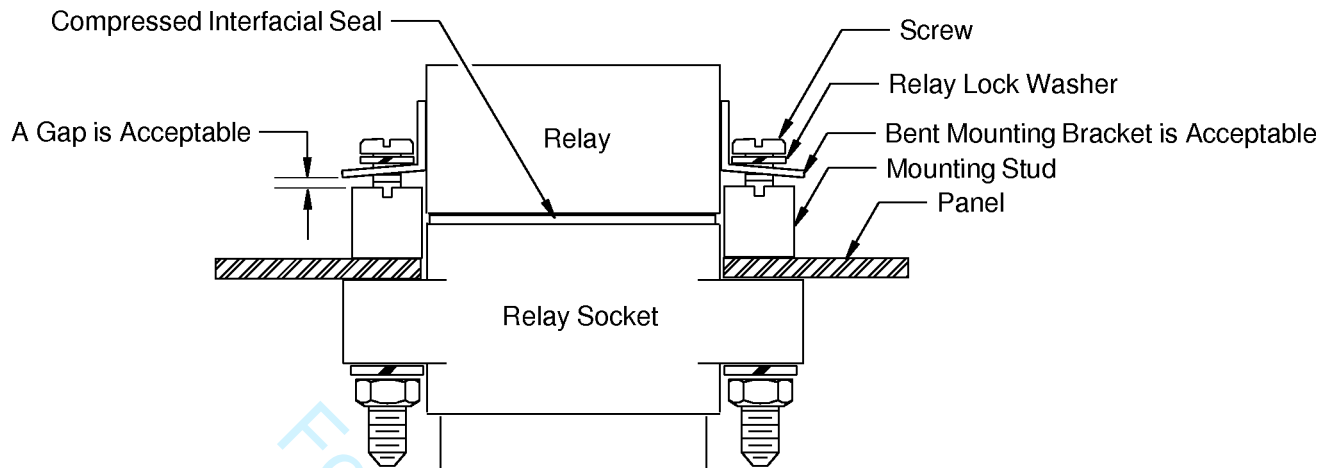

ACCEPTABLE CONDITIONS OF THE INSTALLED RELAY
Figure 6

C. Installation of BACS16AH1 Relay Sockets and Related TDH-1852, TDH-1853, or TDH 1953 Relays

Refer to Subject 20-81-19 for the relay socket part numbers.


NOTE: The installation hardware for the BACS16AH1 relay socket and its relays is shown in Table 3 and in Figure 7.

Table 3
BACS16AH1 RELAY SOCKET INSTALLATION HARDWARE PART NUMBERS

Description	Size	Appleton Part Number	Amphenol - PCD Part Number	Industry Part Number	Marketing Masters Part Number
Screw	4-40	422080-813	200006701	-	-
Relay Lock Washer	4	422080-801	200006301	NAS1676C4	-
Mounting Stud	-	422080-811	200006601	-	-
Spacer	0.050 inch thick	422080-806	200006401	-	-
	0.016 inch thick	-	200000401	NAS620-4L	-
Panel Lock Washer	4	422080-801	200006301	NAS1676C4	-
Hex Nut	4-40	422080-817	200006901	-	-
Mounting hardware kit includes All Necessary Parts	-	-	CNA110901	-	-
Screw and Captive Relay Lock Washer	4-40	-	-	-	GAL500-4

STANDARD WIRING PRACTICES MANUAL


INSTALLATION OF RELAY SOCKETS AND RELAYS

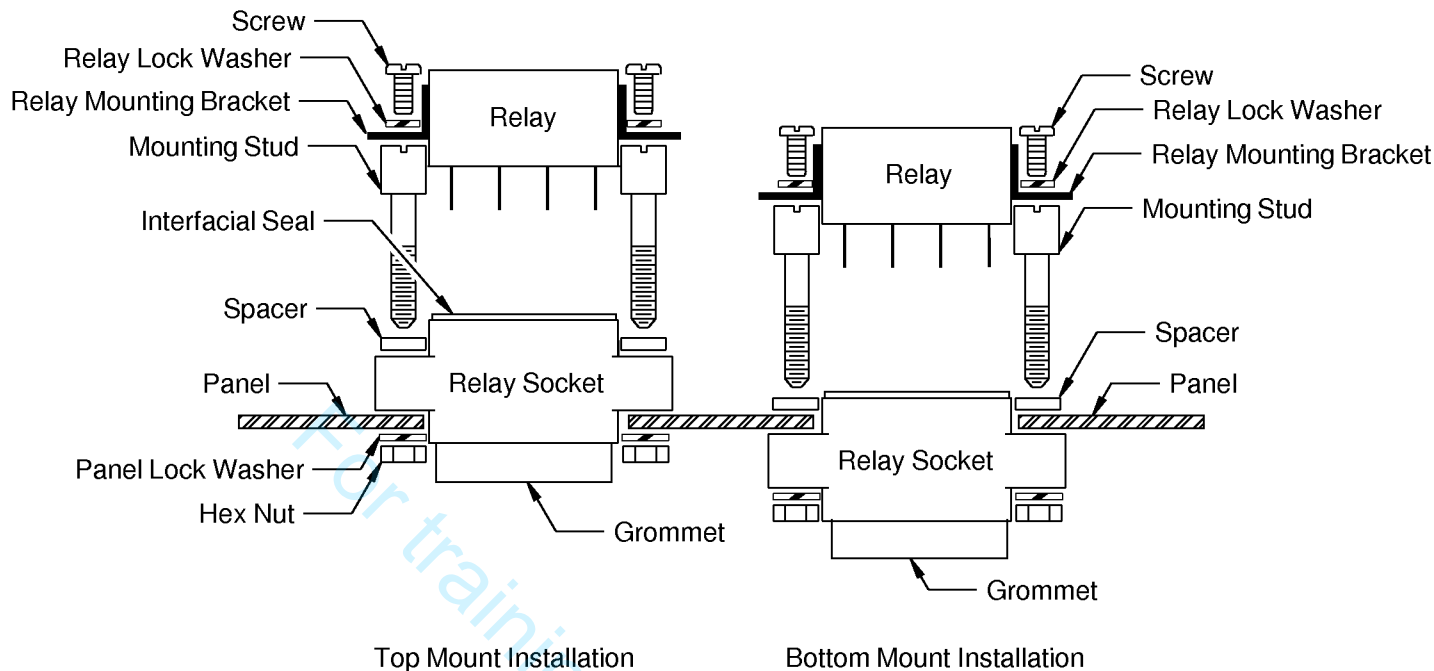

IDENTIFICATION OF RELAY SOCKET HARDWARE

Figure 7

- (1) Install the BACS16AH1 relay socket on the panel or bracket in the same configuration as its initial installation.

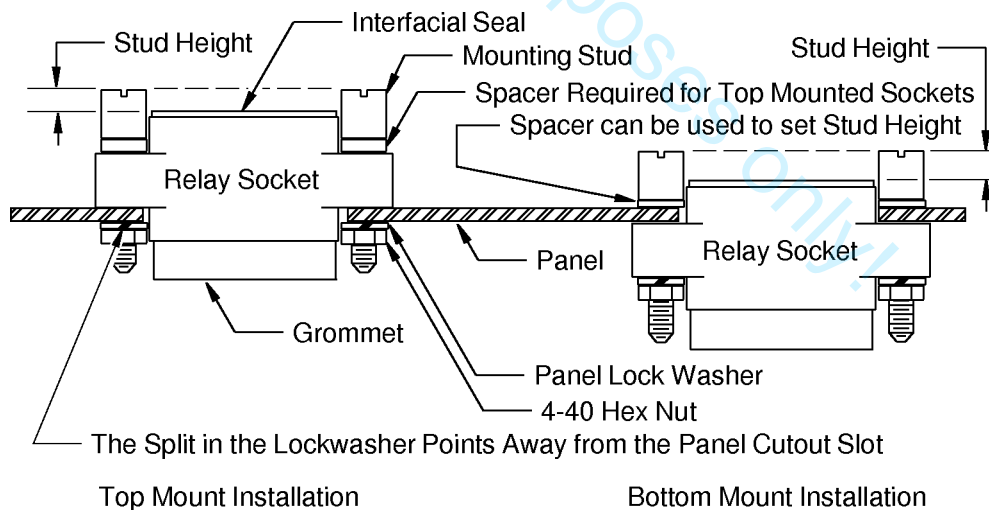

INSTALLATION OF THE RELAY SOCKET AND SPACERS FOR THE CORRECT STUD HEIGHT

Figure 8

- (a) Mount the relay socket in the top mounted configuration If the initial installation was top mounted.

STANDARD WIRING PRACTICES MANUAL

INSTALLATION OF RELAY SOCKETS AND RELAYS

Make sure to use the necessary number of spacers to make the stud height from the surface of the interfacial seal to the end of the mounting stud equal to 0.065 inch minimum to 0.090 inch maximum. Refer to Figure 8.

NOTE: For the top mount configuration on a thin panel, two spacers may be needed.


- (b) Mount the relay socket in the bottom mounted configuration. If the initial installation was bottom mounted.

Make sure to use the necessary number of spacers to make the stud height from the surface of the interfacial seal to the end of the mounting stud equal to 0.065 inch minimum to 0.090 inch maximum. Refer to Figure 8.

- (2) Verify that the stud height from the socket interfacial seal is between 0.065 inch minimum and 0.090 inch maximum.
- (3) Torque the hex nut on the mounting stud to between 6 and 8 inch pounds.
- (4) Push the correct relay into the BACS16AH1 relay socket until it stops.
- (5) Install the screw and the relay lock washer on each side of the relay.
- (6) Torque each screw to between 3.5 and 4.5 inch pounds.

NOTE: These conditions are acceptable after the screws are tightened: Refer to Figure 9.

- A bend in the relay mounting bracket is acceptable
- A gap between the relay mounting bracket and the end of the mounting stud is acceptable.

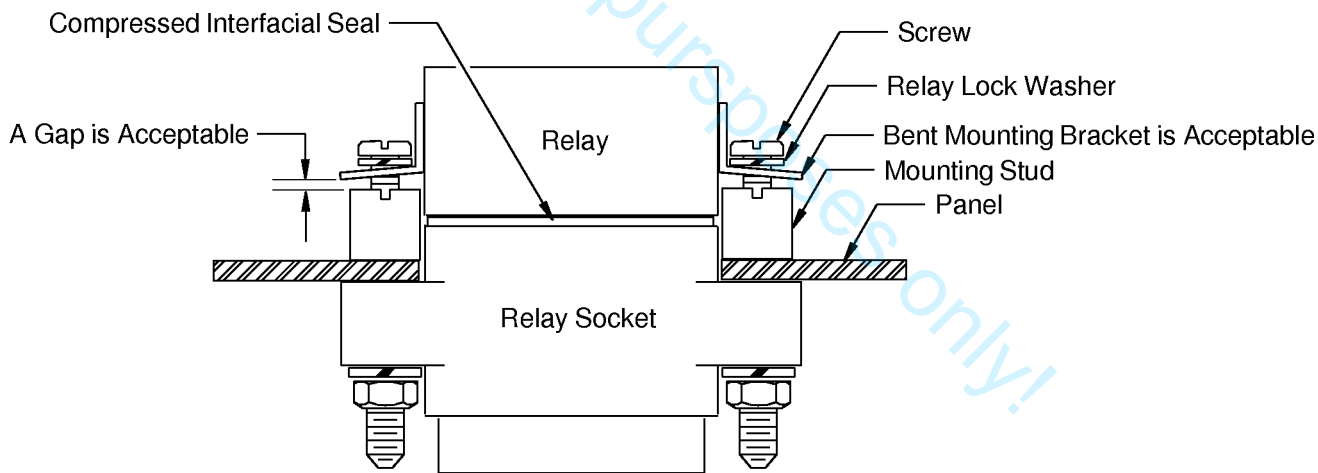

ACCEPTABLE CONDITIONS OF THE INSTALLED RELAY


Figure 9

D. Installation of BACS16X and BACS16W Relay Sockets

Refer to Subject 20-81-12 for alternative relay socket part numbers.

STANDARD WIRING PRACTICES MANUAL

INSTALLATION OF RELAY SOCKETS AND RELAYS

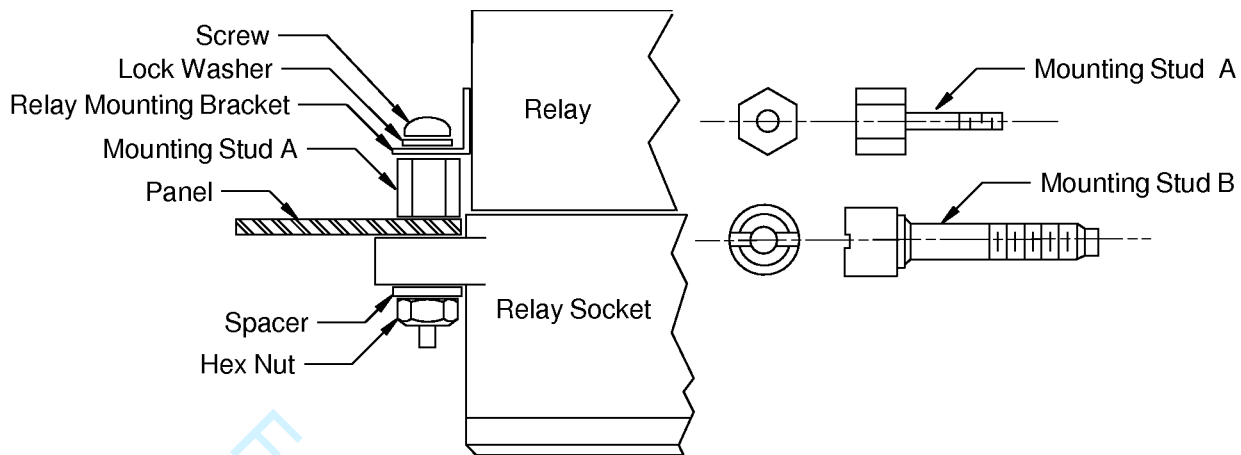

BACS16X AND BACS16W RELAY SOCKET INSTALLATION

Figure 10

Table 4
RELAY SOCKET PART NUMBERS

Relay Socket Part Number	Stud Finish	Location of Mounting Hardware Part Numbers
BACS16X1A	Passivated	Table 5
BACS16X2A		
BACS16X3A		
BACS16W1A		
BACS16W2A		
BACS16W3A		
BACS16W4A		
BACS16W5A		
BACS16X4A	Black Anodized	Table 6
BACS16X5A		
BACS16X6A		
BACS16W6A		
BACS16W7A		
BACS16W8A		
BACS16W9A		
BACS16W10A		

STANDARD WIRING PRACTICES MANUAL
INSTALLATION OF RELAY SOCKETS AND RELAYS
Table 5
BACS16W AND BACS16X RELAY SOCKET MOUNTING HARDWARE PART NUMBERS THAT HAVE PASSIVATED STUDS

Description	Part Number	Supplier
Hex Nut	BACN10YR04C	Boeing
Screw	MS51957-25	QPL
Lockwasher	NAS1676C6	QPL
Passivated Stud	200008901	Ampheol / PCD
	118-0090-000	Viking
Kit with Passivated Stud	102-KIT-12	Souriau
	102-KIT-13	Souriau
	450600210	Ampheol / PCD
	450600310	Ampheol / PCD
	126-0048-000	Viking
	126-0048-002	Viking
	126-0048-003	Viking

Table 6
BACS16W AND BACS16X RELAY SOCKET MOUNTING HARDWARE PART NUMBERS THAT HAVE BLACK ANODIZED STUDS

Description	Part Number	Supplier
Nut	BACN10YR04C	Boeing
Screw	MS51957-25	QPL
Lockwasher	NAS1676C6	QPL
Passivated Stud	200008901	Ampheol / PCD
	118-0090-000	Viking
Black Anodized Stud	200008501	Ampheol / PCD
	118-0218-001	Viking
Kit with Black Anodized Stud	102-KIT-22	Souriau
	102-KIT-23	Souriau
	450600200	Ampheol / PCD
	450600300	Ampheol / PCD
	126-0053-000	Viking
	126-0053-002	Viking
	126-0053-003	Viking

- (1) Install the relay socket in the same configuration as its initial installation.

20-81-22

STANDARD WIRING PRACTICES MANUAL

INSTALLATION OF RELAY SOCKETS AND RELAYS

Refer to:


- Figure 10 for the installation configuration
- Table 4, Table 5, and Table 6 for the part numbers for the mounting hardware.

(2) Torque the screw to 3.5 to 4.5 inch-pounds.

(3) Torque the hex nut to 6 inch-pounds.

E. Installation of Leach SO Series and Amphenol/PCD RSE Series Rear Release Relay Sockets

Refer to Subject 20-81-16 for the relay part numbers.

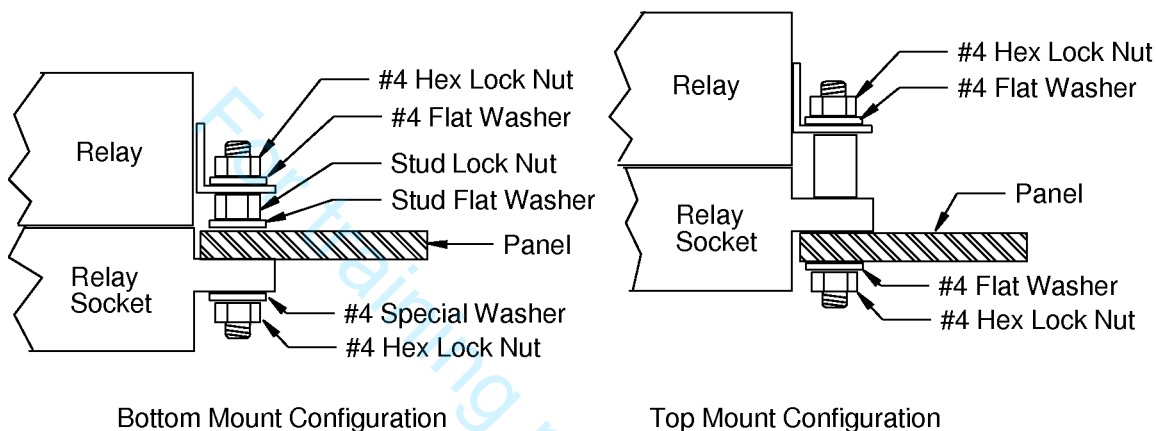

INSTALLATION OF LEACH SO SERIES AND PCD RELAY SOCKETS THAT HAVE FIXED MOUNTING STUDS Figure 11

Table 7

RELAY SOCKET PART NUMBERS AND THE LOCATION OF THE MOUNTING HARDWARE PART NUMBER DATA

Relay Socket		Location of the Mounting Hardware Data	Notes
Part Number	Supplier		
RSE112()	PCD	Table 8	-
RSE116()	PCD	Table 8	-
RSE120()	PCD	Table 9	-
SO-1048-8308	Leach	Table 8	Mounting Studs are not fixed to the Relay Socket
SO-1048-8779	Leach	Table 8	-
SO-1049-8772	Leach	Table 8	-
SO-1055-8690	Leach	Table 8	-
SO-1056-8691	Leach	Table 8	Mounting Studs are not fixed to the Relay Socket
SO-1057-8912	Leach	Table 8	-
SO-1058-8913	Leach	Table 8	-

STANDARD WIRING PRACTICES MANUAL

INSTALLATION OF RELAY SOCKETS AND RELAYS

Table 7 (continued)

Relay Socket		Location of the Mounting Hardware Data	Notes
Part Number	Supplier		
SO-1059-8914	Leach	Table 8	-
SO-1061-8916	Leach	Table 8	-
SO-1062-8917	Leach	Table 8	-
SO-1063-9033	Leach	Table 8	-
SO-1064-()	Leach	Table 9	-
SO-1066-()	Leach	Table 9	-

Table 8

RELAY AND RELAY SOCKET INSTALLATION HARDWARE INCLUDING SIZE 10 STUD

Description	Size	Industry Part Number	Amphenol - PCD Part Number	Boeing Part Number	Marketing Masters Part Number	Leach Part Number
#4 Hex Lock Nut	4	MS21042L04	-	BACN10YR04CM	-	-
#4 Flat Washer	4	NAS620-4L	-	-	-	-
Mounting Stud	10	-	-	-	-	001-6000-000
#4 Special Washer	4	-	200500401	-	-	-
Stud Lock Nut	10	MS21042L3	-	-	-	-
Stud Flat Washer	10	-	200002901	-	FW0007	-

Table 9

RELAY AND RELAY SOCKET INSTALLATION HARDWARE INCLUDING SIZE 8 STUD

Description	Size	Industry Part Number	Amphenol - PCD Part Number	Boeing Part Number	Marketing Masters Part Number
#4 Hex Lock Nut	4	MS21042L04	-	BACN10YR04CM	-
#4 Flat Washer	4	NAS620-4L	-	-	-
Stud Lock Nut	8	MS21042L08	-	-	-
Stud Flat Washer	8	-	200004001	-	FW0006

Table 10

LOCK NUT TORQUE

Lock Nut Size	Necessary Torque (inch-pounds)	
	Minimum	Maximum
4	3	4

20-81-22

STANDARD WIRING PRACTICES MANUAL

INSTALLATION OF RELAY SOCKETS AND RELAYS

Table 10 (continued)

Lock Nut Size	Necessary Torque (inch-pounds)	
	Minimum	Maximum
8	6	8
10	10	12

(1) Install the relay socket in the same configuration as its initial installation. Refer to Figure 11.

- (a) Use the mounting hardware that is supplied with the relay socket, or if necessary, use the relay socket part number and refer to Table 7 to find the location of the correct mounting hardware part numbers in Table 8 or Table 9.


NOTE: The supplied size 4 nylon nut packaged with Leach SO series relay sockets, can be used instead of a #4 lock nut to hold the relay socket to the panel if the relay socket is top mounted.

NOTE: The #4 special washer and its #4 hex lock nut are only necessary for bottom mounted relay sockets that have studs that are loose.

- (b) Torque the lock nuts. Refer to Table 10 for the necessary torque values.

NOTE: It is acceptable if the elastomeric interfacial seal between the relay and the relay socket becomes compressed when the fasteners are tightened.

F. Bottom Mount Installation of Leach So-1018-7119 and So-1021-7127 Relay Sockets

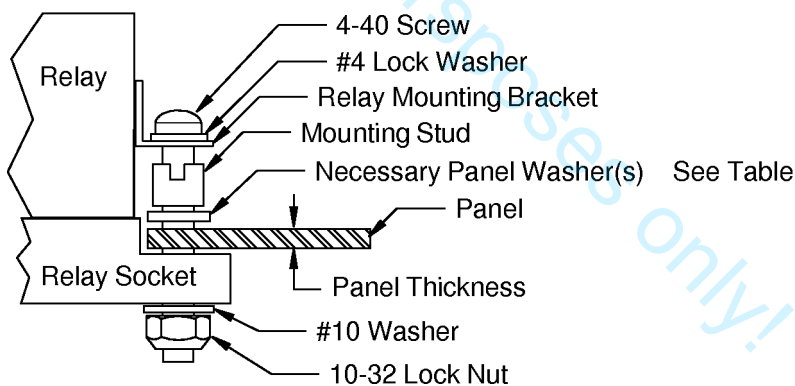

BOTTOM MOUNT INSTALLATION CONFIGURATION OF THE LEACH SO-1018-7119 AND SO-1021-7127 RELAY SOCKETS

Figure 12

Table 11
RELAY SOCKET MOUNTING HARDWARE PART NUMBERS

Description	Size	Part Number	Supplier
Screw	4-40	NAS600-6	QPL
		NAS600-6P	QPL

STANDARD WIRING PRACTICES MANUAL

INSTALLATION OF RELAY SOCKETS AND RELAYS

Table 11 (continued)

Description	Size	Part Number	Supplier
Lock Washer	4	AN935-4	QPL
		BACW10WEC4S	Boeing
Mounting Stud	10-32	MS25332-1	QPL
Lock Nut	10-32	MS20365-1032	QPL
		MS21042-L3	QPL

Table 12
NECESSARY PANEL WASHERS

Panel Thickness (inch)	Necessary Panel Washers
0.030 - 0.034	Two washers that are supplied with the relay socket
0.047 - 0.049	One washer that is supplied with the relay socket and one NAS1149D0316H washer
0.060 - 0.068	One washer that is supplied with the relay socket
0.077 - 0.083	One NAS1149D0316H washer
0.090 - 0.102	None

Table 13
FASTENER TORQUE

Fastener	Necessary Torque (inch-pounds)	
	Minimum	Maximum
4-40 Screw	3.5	4.5
10-32 Lock Nut	18	25

- (1) Install the SO-1018-7119 or the SO-1021-7127 relay socket on the panel in the bottom mount configuration.

Refer to:

- Figure 12 for the installation configuration
- Table 11 for the part numbers of the mounting hardware
- Table 12 for the necessary panel washers.


- (2) Torque the 4-40 screw and the 10-32 lock nut.

Refer to Table 13 for the necessary torque values.

STANDARD WIRING PRACTICES MANUAL

INSTALLATION OF RELAY SOCKETS AND RELAYS

G. Installation of Armel HRCC-()KM, HRFB-605JV2, HRT-()KM and HRTS-()KM Relay Sockets

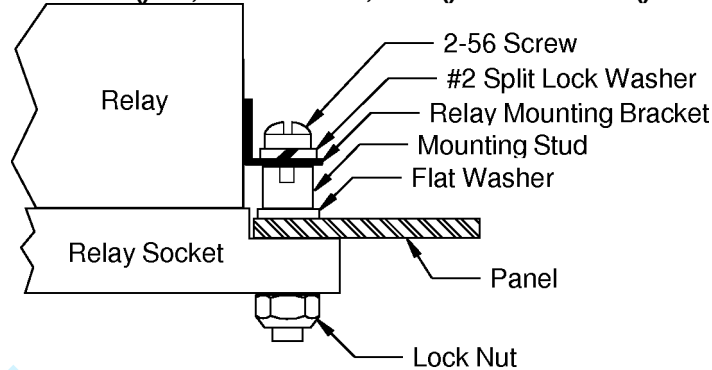


INSTALLATION CONFIGURATION OF ARMEL HRCC-()KM, HRFB-605JV2, HRT-()KM AND HRTS-()KM RELAY SOCKETS

Figure 13

- (1) Use the mounting hardware supplied with the relay socket to install the Armel HRCC-()KM, HRFB-605JV2, HRT-()KM and HRTS-()KM relay socket in the bottom mount configuration. Refer to Figure 13 for the installation configuration.

H. Installation of the Armel 3SAM6015M2 Relay, the HRFB-605JV2 Relay Socket and the Armel 3SBM5134V2 Relay

NOTE: When the Armel 3SAM6015M2 relay is installed in its relay socket, make sure that the relay pin contact that has a blue bead engages relay socket cavity number 1.

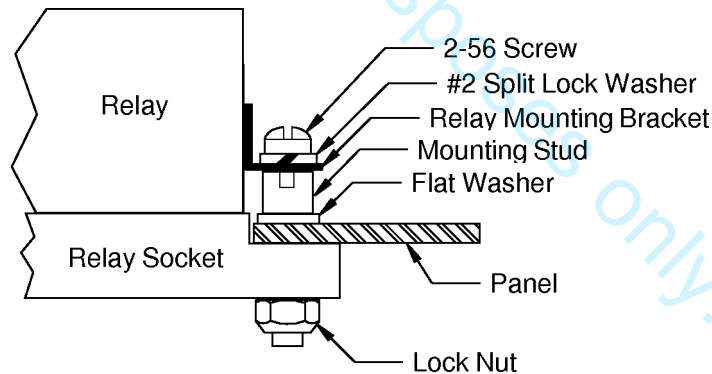

ARMEL HRFB-605JV2 RELAY SOCKET AND ARMEL 3SBM5134V2 RELAY INSTALLATION CONFIGURATION

Figure 14

- (1) Install the Armel HRFB-605JV2 relay socket and the Armel 3SBM5134V2 relay:
 - (a) Install the Armel HRFB-605JV2 relay socket in its initial configuration. Refer to Figure 14. Make sure to use the installation hardware that is supplied with the HRFB-605JV2 relay socket.
 - (b) Install the Armel 3SBM5134V2 relay in the HRFB-605JV2 relay socket. Make sure that the pin contact on the 3SBM5134V2 relay that has a blue bead engages HRFB-605JV2 relay socket cavity number 6.

20-81-22



707, 727-787

STANDARD WIRING PRACTICES MANUAL

INSTALLATION OF RELAY SOCKETS AND RELAYS

- (c) Tighten the screws to 3.5 to 4.5 inch-pounds.
- (d) Tighten the locknut to 6.0 to 8.0 inch-pounds.

For training purposes only!

20-81-22

Page 16
Oct 01/2012

D6-54446