



**707, 727-787**

# **STANDARD WIRING PRACTICES MANUAL**

## **Chapter 20**

This document has EAR data with Export Control Classification Numbers (ECCN) of:  
9E991

Export of this technology is controlled under the United States Export Administration Regulations (EAR) (15 CFR 730-774). An export license may be required before it is used for development, production or use by foreign persons from specific countries. The controller of this data has the individual responsibility to abide by all export laws.

**BOEING PROPRIETARY, CONFIDENTIAL, AND/OR TRADE SECRET**

Copyright © 2004 The Boeing Company  
Unpublished Work - All Rights Reserved

Boeing claims copyright in each page of this document only to the extent that the page contains copyrightable subject matter. Boeing also claims copyright in this document as a compilation and/or collective work.

This document includes proprietary information owned by The Boeing Company and/or one or more third parties. Treatment of the document and the information it contains is governed by contract with Boeing. For more information, contact The Boeing Company, P.O. Box 3707, Seattle, Washington 98124.

Boeing, the Boeing signature, the Boeing symbol, 707, 717, 727, 737, 747, 757, 767, 777, 787, Dreamliner, BBJ, C32, C40, DC-8, DC-9, DC-10, KC-10, KDC-10, MD-10, MD-11, MD-80, MD-88, MD-90, P-8A, P-8I, Poseidon and the Boeing liveries are all trademarks owned by The Boeing Company; and no trademark license is granted in connection with this document unless provided in writing by Boeing.

**DOCUMENT D6-54446**

Original Issue Date: Aug 01/1996  
Published by Boeing Commercial Airplanes Group, Seattle, Washington, USA  
A Division of The Boeing Company  
PAGE DATE: Oct 01/2012



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

Revision No. 52  
Oct 01/2012

To: All holders of this Boeing Document D6-54446

Attached is the current revision to the 707, 727-787 Standard Wiring Practices Manual (SWPM).

This manual is available either as a printed manual, on microfilm, or digital products, or any combination of the three. This revision replaces all previous microfilm cartridges or digital products. All microfilm and digital products are reissued with all obsolete data deleted and all updated pages added.

For printed manuals, changes are indicated on the Effective Pages. The pages which are revised will be identified on the Effective Pages by an R (Revised), A (Added), O (Overflow, i.e. changes to the document structure and/or page layout), or D (Deleted). Each page in the Effective Pages is identified by Chapter-Section-Subject number, page number and page date. Pages replaced or deleted by this revision should be removed and destroyed.

All pages are included in this revision. Revision bars on the pages identify current revision changes.

**NOTE:** IF YOU RECEIVE PRINTED REVISIONS, PLEASE VERIFY THAT YOU HAVE RECEIVED AND FILED THE PREVIOUS REVISION. BOEING MUST BE NOTIFIED WITHIN 30 DAYS IF YOU HAVE NOT RECEIVED THE PREVIOUS REVISION. REQUESTS FOR REVISIONS OTHER THAN THE PREVIOUS REVISION WILL REQUIRE A COMPLETE MANUAL REPRINT SUBJECT TO REPRINT CHARGES SHOWN IN THE DATA AND SERVICES CATALOG.

It is Boeing's intent to maintain the wiring repair practices so that the necessary procedures are satisfactory for the operator to use. Please direct any comments, concerns, or suggestions to the Boeing Technical Publications focal.

Revision bars identify all technical changes, however, not all changes identified by revision bars are technical in nature. A description of the revised technical data is given in the HIGHLIGHTS section (next section).

# TRANSMITTAL LETTER



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### Location of Change

### Description of Change

#### CHAPTER 20

20-00-10

Paragraph 3.A.

A work light requirement is added.

20-10-11

Paragraph 6.C.

Separation requirements for new wire installations from FQIS wiring is added.

20-10-13

Conditions for BMS13-51 wire that has missing topcoat are added.

20-10-13

Paragraph 1.A.

Reference to additional paragraphs are added.

20-10-13

Paragraph 2.Y.

Damage and repair conditions for BMS 13-51 wire that has missing topcoat are added.

20-10-15

The procedures for the assembly of a shield ground wire with a shield termination ring are added.

20-30-00

Paragraph 3.M.

Installation torque values for 5/16 size studs are added.

20-30-15

Paragraph 1.A.

Terminal 2-520337-2 is added.

20-30-15

Paragraph 2.A.

Terminal 2-520337-2 is added.

20-30-19

A new subject for the assembly of BACS52R shielded splices is added.

20-51-60

New Subject for the assembly of Radiall BACC64BT and BACC64BW coaxial connectors is added..

20-60-00

Paragraph 2.C.

Alternative eyelet part numbers are added.

20-60-01

Paragraph 1.D.

A work light requirement is added.

20-60-03

Paragraph 1.A.

BACC63CP() and BACC63CR() connectors are added to the list of cadmium plated connectors.

20-60-06

Paragraph 5.A.

The full connection condition for self-locking connectors that have an indicator color band is made more clear.

20-71-14

Paragraph 3.B.

Alternative eyelet part numbers are added.

20-71-14

Paragraph 8.A.

Alternative eyelet part numbers are added.

## HIGHLIGHTS

**STANDARD WIRING PRACTICES MANUAL**

<b><u>Location of Change</u></b>	<b><u>Description of Change</u></b>
20-71-14 Paragraph 20.A.	The figure of the polarization post and key positions is made more clear.
20-72-13 Paragraph 2.A.	Connector part numbers M24308/2-281, M24308/2-282, and M24308/288 are added.
20-74-11 Paragraph 2.E.	Alternative eyelet part numbers are added.
20-81-16	The title of Subject 20-81-16 is changed to Assembly of Leach So Series, PCD RSE Series, and Other Rear Release Relay Sockets.
20-81-16 Paragraph 1.C.	More contact configurations are added.
20-81-16 Paragraph 1.D.	Alternative eyelet part numbers are added.
20-81-16 Paragraph 3.C.	Removed the requirement for a spare contact in an empty contact cavity.
20-81-19 Paragraph 1.A.	Part number data is updated.
20-81-22	Changed the title of Subject 20-81-22 to "Installation of Relay Sockets and Relays".
20-81-22 Paragraph 1.A.	New procedure is added.
20-81-22 Paragraph 1.B.	New procedure is added.
20-81-22 Paragraph 1.C.	New procedure is added.
20-81-22 Paragraph 1.E.	Installation procedure is updated.
20-81-22 Paragraph 1.F.	New procedure is added.
20-81-22 Paragraph 1.G.	New procedure is added.
20-81-22 Paragraph 1.H.	New procedure is added.
20-83-01	The M81714 terminal junction module data is updated to include M81714/17 modules .
20-83-01 Paragraph 1.B.	M81714/17 terminal modules are added.

## HIGHLIGHTS



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### Location of Change

### Description of Change

20-83-01

Paragraph 1.E.

M39029/1-507 contacts for the M81714/17 terminal modules and alternative contact part numbers are added.

20-83-01

Paragraph 1.F.

More seal plug part numbers are added.

20-83-01

Paragraph 2.A.

The module configuration figures are made more clear and M81714/17 terminal module configurations are added.

20-83-01

Paragraph 3.A.

More contact removal tools are added.

20-83-01

Paragraph 4.D.

More Crimp tools are added.

20-83-01

Paragraph 4.E.

More contact insertion tools are added.

For training purposes only!

## HIGHLIGHTS



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

Subject/Page	Date	Subject/Page	Date	Subject/Page	Date
TITLE PAGE					
R 1	Oct 01/2012				
2	BLANK				
TRANSMITTAL LETTER					
R 1	Oct 01/2012				
2	BLANK				
HIGHLIGHTS					
R 1	Oct 01/2012				
R 2	Oct 01/2012				
A 3	Oct 01/2012				
A 4	BLANK				
EFFECTIVE PAGES					
1	Oct 01/2012				
2	BLANK				
REVISION RECORD					
1	Nov 01/2008				
2	Nov 01/2008				
RECORD OF TEMPORARY REVISION					
1	Nov 01/2008				
2	Nov 01/2008				
GENERAL INFORMATION					
1	Nov 01/2008				
2	BLANK				
DATA RELOCATION RECORD					
1	Oct 01/2011				
2	BLANK				
DEFINITIONS					
1	Oct 01/2010				
2	BLANK				
MANUAL USAGE					
1	Nov 01/2009				
2	BLANK				

A = Added, R = Revised, D = Deleted, O = Overflow

## EFFECTIVE PAGES

Page 1  
Oct 01/2012

D6-54446

# STANDARD WIRING PRACTICES MANUAL

All revisions to this manual will be accompanied by transmittal sheet bearing the revision number. Enter the revision number in numerical order, together with the revision date, the date filed and the initials of the person filing.

[illegible]

## REVISION RECORD

**707, 727-787**

# STANDARD WIRING PRACTICES MANUAL

[illegible]

## REVISION RECORD

# STANDARD WIRING PRACTICES MANUAL

All temporary revisions to this manual will be accompanied by a cover sheet bearing the temporary revision number. Enter the temporary revision number in numerical order, together with the temporary revision date, the date the temporary revision is inserted and the initials of the person filing.

When the temporary revision is incorporated or cancelled, and the pages are removed, enter the date the pages are removed and the initials of the person who removed the temporary revision.

[illegible]

## RECORD OF TEMPORARY REVISION

# STANDARD WIRING PRACTICES MANUAL

[illegible]

## RECORD OF TEMPORARY REVISION



**707, 727-787**

## **STANDARD WIRING PRACTICES MANUAL**

### **INTRODUCTION**

This manual contains the procedures and data that are necessary for the maintenance of the electrical wires and electrical termination on these Boeing Commercial Airplane models:

- 707
- 727
- 737
- 747
- 757
- 767
- 777
- 787

This manual also gives the data and procedures that are necessary for the maintenance of the wiring of these 777 model power plants:

- The Pratt & Whitney PW4000/777
- The Rolls-Royce RB 211 Trent 800.

NOTE: The wiring of the 777 model GE90 power plant is specified as line replaceable and, if unserviceable, must be returned to General Electric for repair.

Unless it is specified differently, the data and procedures in this manual are applicable for airplane wiring that has a Boeing part number. For the remaining wiring with a manufacturer part number, refer to the manufacturer or the applicable manual.

## **GENERAL INFORMATION**

**STANDARD WIRING PRACTICES MANUAL**
**INTRODUCTION**

Old Location	Data	New Location	Revision	Effective Date
Subject 20-61-16	Bendix PT()CE Connector Assembly	Subject 20-61-20	20	Jul 15/1994
Subject 20-64-12	ITT Cannon KO() Connector Assembly	Subject 20-40-00	21	Mar 30/1994
Subject 20-30-11	Assembly of End Caps	Subject 20-30-00	26	Mar 11/2001
Subject 20-50-00	All	Subject 20-51-16	26	Mar 11/2001
Subject 20-51-12	All	Subject 20-51-21	26	Mar 11/2001
Subject 20-51-14	All	Subject 20-51-31	26	Mar 11/2001
Subject 20-52-11	All	Subject 20-51-26	26	Mar 11/2001
Subject 20-53-11	All	Subject 20-51-32	26	Mar 11/2001
Subject 20-54-11	All	Subject 20-51-41	26	Mar 11/2001
Subject 20-54-12	All	Subject 20-51-42	26	Mar 11/2001
Subject 20-55-11	All	Subject 20-51-16	26	Mar 11/2001
Subject 20-56-11	All	Subject 20-51-05	26	Mar 11/2001
Subject 20-57-11	All	Subject 20-51-51	26	Mar 11/2001
Subject 20-61-27	All	Subject 20-51-33	26	Mar 11/2001
Subject 20-62-23	All	Subject 20-51-90	26	Mar 11/2001
Subject 20-55-00	All	Subject 20-53-05	26	Mar 11/2001
Subject 20-72-15	All	Subject 20-64-15	26	Mar 11/2001
Subject 20-92-00	All	Subject 20-60-02	28	Mar 11/2001
Subject 20-74-12	Tools and materials for cleaning fiber optic alignment sleeve inserts	Subject 20-74-02	40	Feb 01/2008
Subject 20-74-12	Inspection and cleaning of fiber optic alignment sleeve inserts	Subject 20-74-02	40	Feb 01/2008
Subject 20-74-12	Contamination removal without using solvent for fiber optic alignment sleeve inserts	Subject 20-74-02	40	Feb 01/2008
Subject 20-74-12	Contamination removal with solvent for fiber optic alignment sleeve inserts	Subject 20-74-02	40	Feb 01/2008
Subject 20-20-00	Replacement of ground studs	Subject 20-20-10	42	Jun 01/2009
Subject 20-61-17	All	Subject 20-63-21	43	Nov 01/2009
Subject 20-61-29	All	Subject 20-63-22	43	Nov 01/2009
Subject 20-63-18	All	Subject 20-61-30	43	Nov 01/2009
Subject 20-91-00	All	Subject 20-84-18	43	Nov 01/2009
Subject 20-40-12	All	Subject 20-84-11	46	Oct 01/2010
Subject 20-40-13	All	Subject 20-84-19	46	Oct 01/2010
Subject 20-00-13	Alternative Wire Data	Subject 20-00-14	48	Jul 01/2011

# DATA RELOCATION RECORD



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### INTRODUCTION

The following is a list of the most used acronyms and abbreviations in this document.

Abbreviation	Term
Al	Aluminum
Al-Ch	Alumel-Chromel
APU	Auxiliary Power Unit
ARINC	Aeronautical Radio Incorporated
BMS	Boeing Material Standard
CAU	Circular Area Units
CMA	Circular Mil Area
Cn-Ch	Constantan-Chromel
CRES	Corrosion Resistant Steel
Cu	Copper
EMC	Electromagnetic Compatibility
ESDS	Electrostatic Discharge Sensitive
I.D.	Inside Diameter
LRU	Line Replaceable Unit
O.D.	Outside Diameter
QPL	Qualified Products List
WTC	Wire Type Code

## DEFINITIONS



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### INTRODUCTION

This section gives the general instructions on how to find technical data in this manual.

#### 1. CROSS REFERENCE INDEX

The Cross Reference Index is an alphanumeric list of the names, the part numbers, and the suppliers of the equipment in this manual. Each entry in the Cross Reference Index also gives the Chapter/Section/Subject where the assembly procedure or the maintenance data for the equipment can be found.

A usual entry in the Cross Reference Index can give this data about the equipment:

- The name, the part number, the supplier
- The part number, the supplier, the name
- The supplier, the part number, the name.

Other entries in the Cross Reference Index can give one or more of these:

- General maintenance data
- The name of an assembly or an installation procedure.

For example, to find the assembly procedure for a splice, look in the Cross Reference Index and find the word "Splice" that is followed by the part number for that splice. The assembly procedure can also be found by the part number first or by the supplier first.

#### 2. CONTENTS OF A CHAPTER/SECTION/SUBJECT

Each Subject starts with a Table of Contents that gives:

- The major breakdown or subdivision
- The page number of the Subject where the major breakdown or subdivision starts.

The two types of Subjects in this manual are:

- The Subjects that give important maintenance data or conditions
- The Subjects that give the procedures for the assembly or the installation of equipment, or both.

For Subjects with the assembly or installation procedures give the part numbers and description of the equipment first, followed by the procedures.

#### 3. IMPORTANT DATA TABLES

These are important data tables:

- Contact Crimp Tools in Subject 20-00-12
- Insulation Removal Tools in Subject 20-00-15
- Materials in Subject 20-00-11
- Wire Type Codes and Wire Part Numbers in Subject 20-00-13.

## MANUAL USAGE

**CHAPTER**

**20**

**STANDARD WIRING  
PRACTICES**

**STANDARD WIRING PRACTICES MANUAL**
**CHAPTER 20**

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-EFFECTIVE PAGES			20-CROSS REFERENCE INDEX (continued)			20-CROSS REFERENCE INDEX (continued)		
	1 thru 66	Oct 01/2012						
20-CONTENTS				24	Jul 01/2011		60	Feb 01/2012
	1	Feb 01/2012		25	Jul 01/2011		61	Feb 01/2012
	2	Oct 01/2011		26	Jul 01/2011		62	Feb 01/2012
O	3	Oct 01/2012	R	27	Jul 01/2011	R	63	Oct 01/2012
O	4	Oct 01/2012	O	28	Oct 01/2012	R	64	Oct 01/2012
O	5	Oct 01/2012		29	Oct 01/2012	O	65	Oct 01/2012
O	6	Oct 01/2012		30	Jul 01/2011	O	66	Oct 01/2012
O	7	Oct 01/2012		31	Jul 01/2011	O	67	Oct 01/2012
O	8	Oct 01/2012		32	Jul 01/2011	O	68	Oct 01/2012
O	9	Oct 01/2012		33	Jul 01/2011	O	69	Oct 01/2012
	10	BLANK		34	Jul 01/2011	O	70	Oct 01/2012
20-CROSS REFERENCE INDEX				35	Jul 01/2011	O	71	Oct 01/2012
	1	Jun 01/2009		36	Jul 01/2011	O	72	Oct 01/2012
R	2	Oct 01/2012		37	Jul 01/2011	O	73	Oct 01/2012
	3	Jun 01/2009		38	Jun 01/2012	O	74	Oct 01/2012
R	4	Oct 01/2012	R	39	Jul 01/2011	O	75	Oct 01/2012
R	5	Oct 01/2012		40	Oct 01/2012	O	76	Oct 01/2012
O	6	Oct 01/2012		41	Jul 01/2011	O	77	Oct 01/2012
O	7	Oct 01/2012		42	Jul 01/2011	O	78	Oct 01/2012
O	8	Oct 01/2012		43	Jul 01/2011	O	79	Oct 01/2012
O	9	Oct 01/2012		44	Jul 01/2011	O	80	Oct 01/2012
O	10	Oct 01/2012		45	Jul 01/2011	O	81	Oct 01/2012
	11	Jun 01/2009		46	Jul 01/2011	O	82	Oct 01/2012
	12	Jun 01/2009		47	Jul 01/2011	O	83	Oct 01/2012
	13	Jun 01/2009		48	Jul 01/2011	O	84	Oct 01/2012
	14	Jun 01/2009		49	Jul 01/2011	O	85	Oct 01/2012
	15	Jun 01/2009		50	Jul 01/2011	O	86	Oct 01/2012
	16	Jun 01/2009		51	Jul 01/2011	O	87	Oct 01/2012
	17	Jun 01/2009		52	Jul 01/2011	O	88	Oct 01/2012
	18	Jun 01/2009		53	Jul 01/2011	O	89	Oct 01/2012
	19	Jul 01/2011		54	Jul 01/2011	R	90	Oct 01/2012
	20	Jul 01/2011	R	55	Jul 01/2011	O	91	Oct 01/2012
	21	Jul 01/2011	R	56	Oct 01/2012	O	92	Oct 01/2012
	22	Jul 01/2011	O	57	Oct 01/2012	O	93	Oct 01/2012
	23	Jul 01/2011	O	58	Oct 01/2012	O	94	Oct 01/2012
			O	59	Oct 01/2012	O	95	Oct 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-CROSS REFERENCE INDEX (continued)			20-CROSS REFERENCE INDEX (continued)			20-CROSS REFERENCE INDEX (continued)		
O	96	Oct 01/2012	O	132	Oct 01/2012	O	168	Oct 01/2012
O	97	Oct 01/2012	O	133	Oct 01/2012	O	169	Oct 01/2012
O	98	Oct 01/2012	O	134	Oct 01/2012	O	170	Oct 01/2012
O	99	Oct 01/2012	O	135	Oct 01/2012	O	171	Oct 01/2012
O	100	Oct 01/2012	O	136	Oct 01/2012	O	172	Oct 01/2012
O	101	Oct 01/2012	O	137	Oct 01/2012	O	173	Oct 01/2012
O	102	Oct 01/2012	O	138	Oct 01/2012	O	174	Oct 01/2012
O	103	Oct 01/2012	O	139	Oct 01/2012	O	175	Oct 01/2012
O	104	Oct 01/2012	O	140	Oct 01/2012	O	176	Oct 01/2012
O	105	Oct 01/2012	O	141	Oct 01/2012	O	177	Oct 01/2012
O	106	Oct 01/2012	O	142	Oct 01/2012	R	178	Oct 01/2012
O	107	Oct 01/2012	O	143	Oct 01/2012	O	179	Oct 01/2012
O	108	Oct 01/2012	O	144	Oct 01/2012	O	180	Oct 01/2012
	109	Jul 01/2011	O	145	Oct 01/2012	O	181	Oct 01/2012
	110	Jul 01/2011	O	146	Oct 01/2012	O	182	Oct 01/2012
	111	Jul 01/2011	O	147	Oct 01/2012	O	183	Oct 01/2012
	112	Jul 01/2011	O	148	Oct 01/2012	O	184	Oct 01/2012
	113	Jul 01/2011	O	149	Oct 01/2012	O	185	Oct 01/2012
	114	Jul 01/2011	O	150	Oct 01/2012	O	186	Oct 01/2012
	115	Jul 01/2011	O	151	Oct 01/2012	O	187	Oct 01/2012
	116	Jul 01/2011	O	152	Oct 01/2012	O	188	Oct 01/2012
	117	Jul 01/2011	O	153	Oct 01/2012	O	189	Oct 01/2012
	118	Jul 01/2011	O	154	Oct 01/2012	O	190	Oct 01/2012
	119	Jul 01/2011	O	155	Oct 01/2012	O	191	Oct 01/2012
	120	Jul 01/2011	O	156	Oct 01/2012	O	192	Oct 01/2012
	121	Jul 01/2011	O	157	Oct 01/2012	O	193	Oct 01/2012
	122	Jul 01/2011	O	158	Oct 01/2012	O	194	Oct 01/2012
R	123	Oct 01/2012	O	159	Oct 01/2012		195	Jul 01/2011
O	124	Oct 01/2012	O	160	Oct 01/2012		196	Jul 01/2011
O	125	Oct 01/2012	O	161	Oct 01/2012		197	Jul 01/2011
O	126	Oct 01/2012	O	162	Oct 01/2012		198	Jul 01/2011
O	127	Oct 01/2012	O	163	Oct 01/2012		199	Jul 01/2011
O	128	Oct 01/2012	O	164	Oct 01/2012		200	Jul 01/2011
O	129	Oct 01/2012	O	165	Oct 01/2012		201	Jul 01/2011
O	130	Oct 01/2012	O	166	Oct 01/2012		202	Jul 01/2011
O	131	Oct 01/2012	O	167	Oct 01/2012		203	Jul 01/2011

A = Added, R = Revised, D = Deleted, O = Overflow

## 20-EFFECTIVE PAGES

Page 2  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-CROSS REFERENCE INDEX (continued)			20-CROSS REFERENCE INDEX (continued)			20-CROSS REFERENCE INDEX (continued)		
R	204	Oct 01/2012		240	Jul 01/2011	R	276	Oct 01/2012
O	205	Oct 01/2012		241	Jul 01/2011	O	277	Oct 01/2012
R	206	Oct 01/2012		242	Jul 01/2011	R	278	Oct 01/2012
	207	Jul 01/2011		243	Jul 01/2011	R	279	Oct 01/2012
	208	Jul 01/2011		244	Jul 01/2011		280	Jul 01/2011
	209	Jul 01/2011		245	Jul 01/2011		281	Jul 01/2011
	210	Jul 01/2011		246	Jul 01/2011		282	Jul 01/2011
	211	Jul 01/2011		247	Jul 01/2011		283	Jul 01/2011
	212	Jul 01/2011		248	Jul 01/2011		284	Jul 01/2011
	213	Jul 01/2011		249	Jul 01/2011	R	285	Oct 01/2012
	214	Jul 01/2011		250	Jul 01/2011	R	286	Oct 01/2012
R	215	Oct 01/2012		251	Jul 01/2011	R	287	Oct 01/2012
O	216	Oct 01/2012		252	Jul 01/2011	O	288	Oct 01/2012
O	217	Oct 01/2012		253	Jul 01/2011	O	289	Oct 01/2012
	218	Jun 01/2012		254	Jul 01/2011	O	290	Oct 01/2012
	219	Jun 01/2012		255	Jul 01/2011	R	291	Oct 01/2012
O	220	Oct 01/2012	R	256	Oct 01/2012	O	292	Oct 01/2012
R	221	Oct 01/2012	O	257	Oct 01/2012	R	293	Oct 01/2012
O	222	Oct 01/2012	O	258	Oct 01/2012	O	294	Oct 01/2012
O	223	Oct 01/2012	R	259	Oct 01/2012	O	295	Oct 01/2012
O	224	Oct 01/2012	R	260	Oct 01/2012	O	296	Oct 01/2012
O	225	Oct 01/2012	O	261	Oct 01/2012	O	297	Oct 01/2012
O	226	Oct 01/2012	R	262	Oct 01/2012	O	298	Oct 01/2012
O	227	Oct 01/2012	O	263	Oct 01/2012	O	299	Oct 01/2012
O	228	Oct 01/2012	O	264	Oct 01/2012	O	300	Oct 01/2012
O	229	Oct 01/2012	R	265	Oct 01/2012	O	301	Oct 01/2012
O	230	Oct 01/2012	R	266	Oct 01/2012	O	302	Oct 01/2012
	231	Jul 01/2011	O	267	Oct 01/2012	O	303	Oct 01/2012
	232	Jul 01/2011		268	Jul 01/2011	R	304	Oct 01/2012
	233	Jul 01/2011		269	Jul 01/2011	R	305	Oct 01/2012
	234	Jul 01/2011	R	270	Oct 01/2012	O	306	Oct 01/2012
	235	Jul 01/2011	O	271	Oct 01/2012	O	307	Oct 01/2012
	236	Jul 01/2011	O	272	Oct 01/2012	O	308	Oct 01/2012
	237	Jul 01/2011	O	273	Oct 01/2012	O	309	Oct 01/2012
	238	Jul 01/2011	O	274	Oct 01/2012	O	310	Oct 01/2012
	239	Jul 01/2011	R	275	Oct 01/2012	O	311	Oct 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 3  
Oct 01/2012

D6-54446



707, 727-787

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-CROSS REFERENCE INDEX (continued)			20-CROSS REFERENCE INDEX (continued)			20-00-11 (continued)		
O	312	Oct 01/2012	O	348	Oct 01/2012		4	Feb 01/2012
O	313	Oct 01/2012	O	349	Oct 01/2012		5	Feb 01/2012
O	314	Oct 01/2012	O	350	Oct 01/2012		6	Jun 01/2012
O	315	Oct 01/2012	O	351	Oct 01/2012		7	Feb 01/2012
O	316	Oct 01/2012	O	352	Oct 01/2012		8	Feb 01/2012
O	317	Oct 01/2012	O	353	Oct 01/2012		9	Feb 01/2012
O	318	Oct 01/2012	O	354	Oct 01/2012		10	Feb 01/2012
O	319	Oct 01/2012	R	355	Oct 01/2012		11	Feb 01/2012
O	320	Oct 01/2012	O	356	Oct 01/2012		12	Feb 01/2012
O	321	Oct 01/2012	O	357	Oct 01/2012		13	Feb 01/2012
O	322	Oct 01/2012	O	358	Oct 01/2012		14	Feb 01/2012
O	323	Oct 01/2012	A	359	Oct 01/2012		15	Feb 01/2012
O	324	Oct 01/2012	A	360	Oct 01/2012		16	Feb 01/2012
O	325	Oct 01/2012	20-00-08 CONTENTS				17	Feb 01/2012
O	326	Oct 01/2012		1	Jun 01/2009		18	Feb 01/2012
O	327	Oct 01/2012		2	BLANK		19	Feb 01/2012
O	328	Oct 01/2012	20-00-08				20	Feb 01/2012
O	329	Oct 01/2012		1	Nov 01/2009		21	Feb 01/2012
O	330	Oct 01/2012		2	Feb 01/2011		22	Feb 01/2012
O	331	Oct 01/2012		3	Jun 01/2009		23	Feb 01/2012
O	332	Oct 01/2012		4	BLANK		24	Feb 01/2012
O	333	Oct 01/2012	20-00-10 CONTENTS				25	Feb 01/2012
O	334	Oct 01/2012		1	Jun 01/2009		26	Feb 01/2012
R	335	Oct 01/2012		2	BLANK		27	Feb 01/2012
O	336	Oct 01/2012	20-00-10				28	Feb 01/2012
O	337	Oct 01/2012		1	Feb 01/2012		29	Feb 01/2012
O	338	Oct 01/2012		2	Feb 01/2012		30	Feb 01/2012
R	339	Oct 01/2012	R	3	Oct 01/2012		31	Feb 01/2012
O	340	Oct 01/2012		4	BLANK		32	Feb 01/2012
O	341	Oct 01/2012	20-00-11 CONTENTS				33	Feb 01/2012
O	342	Oct 01/2012		1	Feb 01/2012		34	Feb 01/2012
O	343	Oct 01/2012		2	BLANK		35	Feb 01/2012
O	344	Oct 01/2012	20-00-11				36	Feb 01/2012
R	345	Oct 01/2012		1	Jun 01/2012		37	Feb 01/2012
O	346	Oct 01/2012		2	Feb 01/2012		38	Feb 01/2012
O	347	Oct 01/2012		3	Feb 01/2012	20-00-12 CONTENTS		
							1	Feb 01/2011

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-00-12	CONTENTS (continued)		20-00-13	(continued)		20-00-13	(continued)	
	2	BLANK		18	Jul 01/2011		55	Feb 01/2012
20-00-12				19	Feb 01/2012		56	Feb 01/2012
	1	Oct 01/2010		20	Feb 01/2011		57	Feb 01/2012
	2	Oct 01/2010		21	Feb 01/2011		58	Feb 01/2012
	3	Oct 01/2010		22	Feb 01/2012		59	Feb 01/2012
	4	Jun 01/2009		23	Feb 01/2012		60	Feb 01/2012
	5	Nov 01/2008		24	Feb 01/2012		61	Feb 01/2012
	6	Jun 01/2009		25	Feb 01/2012		62	Feb 01/2012
	7	Jun 01/2009		26	Feb 01/2012		63	Feb 01/2012
	8	Nov 01/2008		27	Feb 01/2012		64	Feb 01/2012
	9	Nov 01/2008		28	Feb 01/2012		65	Feb 01/2012
	10	Feb 01/2011		29	Feb 01/2012		66	Feb 01/2012
	11	Feb 01/2011		30	Feb 01/2011		67	Feb 01/2012
	12	Feb 01/2011		31	Feb 01/2012		68	Feb 01/2012
	13	Feb 01/2011		32	Feb 01/2012		69	Feb 01/2012
	14	BLANK		33	Feb 01/2012		70	Feb 01/2012
20-00-13	CONTENTS			34	Feb 01/2012		71	Feb 01/2012
	1	Feb 01/2012		35	Feb 01/2012		72	Feb 01/2012
	2	BLANK		36	Feb 01/2012		73	Feb 01/2012
20-00-13				37	Feb 01/2012		74	Feb 01/2012
	1	Jul 01/2011		38	Feb 01/2012		75	Feb 01/2012
	2	Feb 01/2012		39	Feb 01/2012		76	Feb 01/2012
	3	Feb 01/2011		40	Feb 01/2012		77	Feb 01/2012
	4	Jul 01/2011		41	Feb 01/2012		78	Feb 01/2012
	5	Feb 01/2011		42	Feb 01/2012		79	Feb 01/2012
	6	Jul 01/2011		43	Feb 01/2012		80	Feb 01/2012
	7	Feb 01/2012		44	Feb 01/2012		81	Feb 01/2012
	8	Feb 01/2011		45	Feb 01/2012		82	Feb 01/2012
	9	Feb 01/2011		46	Feb 01/2012		83	Feb 01/2012
	10	Oct 01/2010		47	Feb 01/2012		84	Feb 01/2012
	11	Feb 01/2011		48	Feb 01/2012		85	Feb 01/2012
	12	Feb 01/2011		49	Feb 01/2012		86	Feb 01/2012
	13	Feb 01/2011		50	Feb 01/2012		87	Feb 01/2012
	14	Oct 01/2010		51	Feb 01/2012		88	Feb 01/2012
	15	Feb 01/2011		52	Feb 01/2012		89	Feb 01/2012
	16	Feb 01/2011		53	Feb 01/2012		90	Feb 01/2012
	17	Jul 01/2011		54	Feb 01/2012		91	Feb 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 5  
Oct 01/2012

D6-54446



707, 727-787

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-00-13 (continued)			20-00-15 (continued)			20-00-15 (continued)		
92	Feb 01/2012		11	Nov 01/2008		48	Nov 01/2008	
20-00-14 CONTENTS			12	Nov 01/2008		49	Nov 01/2008	
1	Jul 01/2011		13	Nov 01/2008		50	Nov 01/2008	
2	BLANK		14	Nov 01/2008		51	Nov 01/2008	
20-00-14			15	Nov 01/2008		52	Nov 01/2008	
1	Oct 01/2011		16	Nov 01/2009		53	Nov 01/2008	
2	Oct 01/2011		17	Nov 01/2008		54	Nov 01/2008	
3	Oct 01/2011		18	Nov 01/2009		55	Nov 01/2008	
4	Oct 01/2011		19	Nov 01/2008		56	Nov 01/2008	
5	Oct 01/2011		20	Nov 01/2008		57	Nov 01/2008	
6	Oct 01/2011		21	Nov 01/2008		58	Nov 01/2008	
7	Oct 01/2011		22	Nov 01/2008		59	Nov 01/2008	
8	Oct 01/2011		23	Nov 01/2008		60	Nov 01/2008	
9	Oct 01/2011		24	Nov 01/2008		61	Nov 01/2008	
10	Oct 01/2011		25	Nov 01/2008		62	Nov 01/2008	
11	Oct 01/2011		26	Nov 01/2008		20-00-16 CONTENTS		
12	Oct 01/2011		27	Nov 01/2008		1	Jun 01/2009	
13	Oct 01/2011		28	Nov 01/2008		2	BLANK	
14	Oct 01/2011		29	Nov 01/2008		20-00-16		
15	Oct 01/2011		30	Nov 01/2008		1	Oct 01/2010	
16	Oct 01/2011		31	Nov 01/2008		2	Oct 01/2010	
17	Oct 01/2011		32	Nov 01/2008		3	Nov 01/2008	
18	Oct 01/2011		33	Nov 01/2008		4	Nov 01/2008	
20-00-15 CONTENTS			34	Nov 01/2008		5	Nov 01/2008	
1	Jun 01/2009		35	Nov 01/2008		6	BLANK	
2	BLANK		36	Nov 01/2008		20-02-10 CONTENTS		
20-00-15			37	Nov 01/2008		1	Jun 01/2009	
1	Oct 01/2010		38	Nov 01/2008		2	BLANK	
2	Oct 01/2010		39	Nov 01/2008		20-02-10		
3	Nov 01/2008		40	Nov 01/2008		1	Nov 01/2008	
4	Nov 01/2008		41	Nov 01/2008		2	Oct 01/2010	
5	Nov 01/2008		42	Nov 01/2008		3	Oct 01/2010	
6	Nov 01/2008		43	Nov 01/2008		4	Oct 01/2010	
7	Nov 01/2008		44	Nov 01/2008		5	Oct 01/2010	
8	Nov 01/2008		45	Nov 01/2008		6	Oct 01/2010	
9	Nov 01/2008		46	Nov 01/2008		7	Oct 01/2010	
10	Nov 01/2008		47	Nov 01/2008		8	Oct 01/2010	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 6  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-02-10 (continued)			20-10-06 CONTENTS			20-10-11 (continued)		
9	Oct 01/2010		1	Feb 01/2011		23	Feb 01/2012	
10	BLANK		2	BLANK		24	Feb 01/2012	
20-02-20 CONTENTS			20-10-06			25	Jul 01/2011	
1	Jun 01/2009		1	Nov 01/2008		26	Jun 01/2012	
2	BLANK		2	Nov 01/2008	R	27	Oct 01/2012	
20-02-20			3	Feb 01/2011	R	28	Oct 01/2012	
1	Nov 01/2008		4	Feb 01/2011		29	Feb 01/2012	
2	Oct 01/2010		5	Feb 01/2011		30	Feb 01/2012	
20-02-30 CONTENTS			5	Feb 01/2011		31	Feb 01/2012	
1	Jun 01/2009		20-10-11 CONTENTS			32	Feb 01/2012	
2	BLANK		1	Jun 01/2012		33	Feb 01/2012	
20-02-30			2	Feb 01/2012		34	Feb 01/2012	
1	Feb 01/2011		3	Feb 01/2012		35	Feb 01/2012	
2	Oct 01/2010		4	BLANK		36	Feb 01/2012	
20-10-04 CONTENTS			20-10-11			37	Feb 01/2012	
1	Jun 01/2009		1	Nov 01/2008		38	Feb 01/2012	
2	BLANK		2	Jul 01/2011		39	Feb 01/2012	
20-10-04			3	Jul 01/2011		40	Feb 01/2012	
1	Nov 01/2008		4	Jul 01/2011		41	Feb 01/2012	
2	Nov 01/2008		5	Feb 01/2012		42	Feb 01/2012	
3	Nov 01/2009		6	Feb 01/2012		43	Feb 01/2012	
4	Nov 01/2009		7	Jul 01/2011		44	Feb 01/2012	
5	Feb 01/2011		8	Jul 01/2011		45	Feb 01/2012	
6	Feb 01/2011		9	Oct 01/2011		46	Feb 01/2012	
7	Nov 01/2009		10	Jun 01/2012		47	Feb 01/2012	
8	Nov 01/2008		11	Jun 01/2012		48	Feb 01/2012	
9	Jun 01/2012		12	Jun 01/2012		49	Feb 01/2012	
10	Nov 01/2009		13	Feb 01/2012		50	Feb 01/2012	
11	Nov 01/2008		14	Feb 01/2012		51	Feb 01/2012	
12	Nov 01/2008		15	Feb 01/2012		52	Feb 01/2012	
13	Nov 01/2009		16	Feb 01/2012		53	Feb 01/2012	
14	Nov 01/2008		17	Feb 01/2012		54	Feb 01/2012	
15	Nov 01/2008		18	Feb 01/2012		55	Feb 01/2012	
16	Nov 01/2008		19	Feb 01/2012		56	Feb 01/2012	
17	Nov 01/2008		20	Jul 01/2011		57	Feb 01/2012	
18	Nov 01/2008		21	Feb 01/2012		58	Feb 01/2012	
			22	Feb 01/2012		59	Feb 01/2012	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 7  
Oct 01/2012

D6-54446



707, 727-787

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-10-11 (continued)			20-10-12			20-10-12 (continued)		
	60	Feb 01/2012		1	Feb 01/2011		38	Jun 01/2012
	61	Feb 01/2012		2	Feb 01/2011		39	Jun 01/2012
	62	Feb 01/2012		3	Jul 01/2011		40	Jun 01/2012
	63	Feb 01/2012		4	Feb 01/2011		41	Jun 01/2012
	64	Feb 01/2012		5	Feb 01/2011		42	Jun 01/2012
	65	Feb 01/2012		6	Feb 01/2011		43	Jun 01/2012
	66	Feb 01/2012		7	Jun 01/2012		44	Jun 01/2012
	67	Feb 01/2012		8	Jun 01/2012		45	Jun 01/2012
	68	Feb 01/2012		9	Feb 01/2011		46	Jun 01/2012
	69	Feb 01/2012		10	Feb 01/2011		47	Jun 01/2012
	70	Feb 01/2012		11	Feb 01/2011		48	Jun 01/2012
	71	Feb 01/2012		12	Feb 01/2011		49	Jun 01/2012
	72	Feb 01/2012		13	Feb 01/2011		50	Jun 01/2012
	73	Feb 01/2012		14	Feb 01/2011		51	Jun 01/2012
	74	Feb 01/2012		15	Feb 01/2011		52	Jun 01/2012
	75	Feb 01/2012	O	16	Oct 01/2012		53	Jun 01/2012
	76	Feb 01/2012		17	Jun 01/2012		54	Jun 01/2012
	77	Feb 01/2012		18	Jun 01/2012		55	Jun 01/2012
	78	Feb 01/2012		19	Jun 01/2012		56	Jun 01/2012
	79	Feb 01/2012		20	Jun 01/2012		57	Jun 01/2012
	80	Feb 01/2012		21	Jun 01/2012		58	Jun 01/2012
	81	Feb 01/2012		22	Jun 01/2012		59	Jun 01/2012
	82	Feb 01/2012		23	Jun 01/2012		60	Jun 01/2012
	83	Feb 01/2012		24	Jun 01/2012		61	Jun 01/2012
	84	Feb 01/2012		25	Jun 01/2012		62	Jun 01/2012
	85	Feb 01/2012		26	Jun 01/2012		63	Jun 01/2012
	86	Feb 01/2012		27	Jun 01/2012		64	Jun 01/2012
	87	Feb 01/2012		28	Jun 01/2012		65	Jun 01/2012
	88	Feb 01/2012		29	Jun 01/2012		66	Jun 01/2012
	89	Feb 01/2012		30	Jun 01/2012		67	Jun 01/2012
	90	Feb 01/2012		31	Jun 01/2012		68	Jun 01/2012
20-10-12 CONTENTS				32	Jun 01/2012		69	Jun 01/2012
	1	Jun 01/2012		33	Jun 01/2012		70	Jun 01/2012
	2	Jun 01/2012		34	Jun 01/2012		71	Jun 01/2012
	3	Jun 01/2012		35	Jun 01/2012		72	Jun 01/2012
	4	BLANK		36	Jun 01/2012		73	Jun 01/2012
				37	Jun 01/2012		74	Jun 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 8  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-10-12 (continued)			20-10-13 (continued)			20-10-13 (continued)		
	75	Jun 01/2012		4	Jun 01/2012		41	Jul 01/2011
	76	Jun 01/2012		5	Feb 01/2011		42	Jul 01/2011
	77	Jun 01/2012		6	Feb 01/2012	R	43	Oct 01/2012
	78	Jun 01/2012		7	Feb 01/2012	R	44	Oct 01/2012
	79	Jun 01/2012		8	Feb 01/2012	O	45	Oct 01/2012
	80	Jun 01/2012		9	Feb 01/2012	O	46	Oct 01/2012
	81	Jun 01/2012		10	Oct 01/2010	O	47	Oct 01/2012
	82	Jun 01/2012		11	Oct 01/2010	O	48	Oct 01/2012
	83	Jun 01/2012		12	Oct 01/2010	O	49	Oct 01/2012
	84	Jun 01/2012		13	Oct 01/2010	O	50	Oct 01/2012
	85	Jun 01/2012		14	Oct 01/2010	O	51	Oct 01/2012
	86	Jun 01/2012		15	Oct 01/2010	O	52	Oct 01/2012
	87	Jun 01/2012		16	Oct 01/2010	O	53	Oct 01/2012
	88	Jun 01/2012		17	Oct 01/2010	O	54	Oct 01/2012
	89	Jun 01/2012		18	Oct 01/2010	O	55	Oct 01/2012
	90	Jun 01/2012		19	Oct 01/2010	O	56	Oct 01/2012
	91	Jun 01/2012		20	Oct 01/2010	O	57	Oct 01/2012
	92	Jun 01/2012		21	Oct 01/2010	O	58	Oct 01/2012
	93	Jun 01/2012		22	Oct 01/2010	O	59	Oct 01/2012
	94	Jun 01/2012		23	Oct 01/2010	O	60	Oct 01/2012
	95	Jun 01/2012		24	Oct 01/2010	O	61	Oct 01/2012
	96	Jun 01/2012		25	Oct 01/2010	O	62	Oct 01/2012
	97	Jun 01/2012		26	Oct 01/2010	O	63	Oct 01/2012
	98	Jun 01/2012		27	Oct 01/2010	O	64	Oct 01/2012
	99	Jun 01/2012		28	Oct 01/2010	O	65	Oct 01/2012
	100	Jun 01/2012		29	Oct 01/2010	O	66	Oct 01/2012
	101	Jun 01/2012		30	Oct 01/2010	O	67	Oct 01/2012
	102	Jun 01/2012		31	Oct 01/2010	O	68	Oct 01/2012
20-10-13 CONTENTS				32	Oct 01/2010	O	69	Oct 01/2012
O	1	Oct 01/2012		33	Oct 01/2010	O	70	Oct 01/2012
O	2	Oct 01/2012		34	Oct 01/2010	O	71	Oct 01/2012
O	3	Oct 01/2012		35	Oct 01/2010	O	72	Oct 01/2012
	4	BLANK		36	Oct 01/2010	O	73	Oct 01/2012
20-10-13				37	Feb 01/2012	O	74	Oct 01/2012
R	1	Oct 01/2012		38	Oct 01/2010	O	75	Oct 01/2012
R	2	Oct 01/2012		39	Feb 01/2011	O	76	Oct 01/2012
	3	Jun 01/2012		40	Jul 01/2011	O	77	Oct 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-10-13 (continued)			20-10-13 (continued)			20-10-15 (continued)		
O	78	Oct 01/2012	R	115	Oct 01/2012		12	Jun 01/2012
R	79	Oct 01/2012	R	116	Oct 01/2012		13	Jun 01/2012
O	80	Oct 01/2012	O	117	Oct 01/2012		14	Jun 01/2012
O	81	Oct 01/2012	R	118	Oct 01/2012		15	Jun 01/2012
R	82	Oct 01/2012	O	119	Oct 01/2012		16	Jun 01/2012
O	83	Oct 01/2012	R	120	Oct 01/2012		17	Jun 01/2012
O	84	Oct 01/2012	O	121	Oct 01/2012		18	Jun 01/2012
R	85	Oct 01/2012	R	122	Oct 01/2012		19	Jun 01/2012
O	86	Oct 01/2012	O	123	Oct 01/2012		20	Jun 01/2012
O	87	Oct 01/2012	R	124	Oct 01/2012		21	Jun 01/2012
O	88	Oct 01/2012	A	125	Oct 01/2012		22	Feb 01/2012
R	89	Oct 01/2012	A	126	BLANK		23	Feb 01/2012
O	90	Oct 01/2012	20-10-14 CONTENTS				24	Feb 01/2012
O	91	Oct 01/2012		1	Nov 01/2009		25	Feb 01/2012
R	92	Oct 01/2012		2	BLANK		26	Jun 01/2012
O	93	Oct 01/2012	20-10-14				27	Jun 01/2012
O	94	Oct 01/2012		1	Jun 01/2010		28	Feb 01/2012
O	95	Oct 01/2012		2	Oct 01/2010		29	Feb 01/2012
O	96	Oct 01/2012		3	Jun 01/2010		30	Feb 01/2012
O	97	Oct 01/2012		4	BLANK		31	Feb 01/2012
O	98	Oct 01/2012	20-10-15 CONTENTS				32	Feb 01/2011
O	99	Oct 01/2012		1	Feb 01/2011		33	Feb 01/2012
O	100	Oct 01/2012	O	2	Oct 01/2012		34	Feb 01/2011
O	101	Oct 01/2012	O	3	Oct 01/2012		35	Feb 01/2012
O	102	Oct 01/2012		4	BLANK		36	Feb 01/2011
O	103	Oct 01/2012	20-10-15				37	Feb 01/2011
O	104	Oct 01/2012		1	Jul 01/2011		38	Feb 01/2011
O	105	Oct 01/2012	R	2	Oct 01/2012		39	Feb 01/2012
O	106	Oct 01/2012	R	3	Oct 01/2012		40	Feb 01/2011
O	107	Oct 01/2012	R	4	Oct 01/2012		41	Feb 01/2011
O	108	Oct 01/2012	R	5	Oct 01/2012		42	Feb 01/2011
O	109	Oct 01/2012	R	6	Oct 01/2012		43	Feb 01/2011
O	110	Oct 01/2012		7	Jun 01/2012		44	Feb 01/2012
O	111	Oct 01/2012		8	Feb 01/2011		45	Feb 01/2012
R	112	Oct 01/2012		9	Feb 01/2011		46	Feb 01/2011
R	113	Oct 01/2012		10	Feb 01/2011		47	Feb 01/2011
O	114	Oct 01/2012		11	Feb 01/2011		48	Feb 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 10  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-10-15 (continued)			20-10-15 (continued)			20-10-15 (continued)		
R	49	Feb 01/2011	R	86	Oct 01/2012	O	123	Oct 01/2012
	50	Feb 01/2012		87	Feb 01/2012	O	124	Oct 01/2012
	51	Feb 01/2011		88	Feb 01/2011	O	125	Oct 01/2012
	52	Feb 01/2012		89	Feb 01/2012	O	126	Oct 01/2012
	53	Feb 01/2012	R	90	Oct 01/2012	O	127	Oct 01/2012
	54	Oct 01/2012		91	Feb 01/2011	O	128	Oct 01/2012
	55	Feb 01/2012		92	Feb 01/2012	O	129	Oct 01/2012
	56	Feb 01/2011	R	93	Oct 01/2012	O	130	Oct 01/2012
	57	Feb 01/2012		94	Feb 01/2011	A	131	Oct 01/2012
	58	Feb 01/2012	R	95	Oct 01/2012	A	132	Oct 01/2012
	59	Feb 01/2011	R	96	Oct 01/2012	A	133	Oct 01/2012
	60	Feb 01/2012	R	97	Oct 01/2012	A	134	Oct 01/2012
	61	Feb 01/2011	R	98	Oct 01/2012	A	135	Oct 01/2012
	62	Feb 01/2012	R	99	Oct 01/2012	A	136	Oct 01/2012
	63	Feb 01/2012	R	100	Oct 01/2012	A	137	Oct 01/2012
	64	Feb 01/2011	R	101	Oct 01/2012	A	138	BLANK
	65	Feb 01/2012	R	102	Oct 01/2012	20-10-16 CONTENTS		
	66	Feb 01/2011	R	103	Oct 01/2012		1	Jun 01/2009
	67	Feb 01/2012	R	104	Oct 01/2012		2	BLANK
	68	Feb 01/2011	R	105	Oct 01/2012	20-10-16		
R	69	Feb 01/2012	R	106	Oct 01/2012		1	Jun 01/2012
	70	Feb 01/2011	R	107	Oct 01/2012		2	Jun 01/2012
	71	Feb 01/2012	R	108	Oct 01/2012		3	Oct 01/2010
	72	Feb 01/2011	R	109	Oct 01/2012		4	Oct 01/2010
	73	Feb 01/2012	R	110	Oct 01/2012		5	Oct 01/2010
	74	Feb 01/2012	R	111	Oct 01/2012		6	Oct 01/2010
	75	Feb 01/2011	R	112	Oct 01/2012		7	Jun 01/2009
	76	Feb 01/2012	R	113	Oct 01/2012		8	Oct 01/2010
	77	Feb 01/2012	R	114	Oct 01/2012		9	Oct 01/2010
	78	Feb 01/2012	R	115	Oct 01/2012		10	Jun 01/2009
	79	Feb 01/2011	R	116	Oct 01/2012	20-10-17 CONTENTS		
	80	Feb 01/2011	O	117	Oct 01/2012		1	Jun 01/2009
	81	Feb 01/2012	O	118	Oct 01/2012		2	BLANK
	82	Feb 01/2012	O	119	Oct 01/2012	20-10-17		
	83	Oct 01/2012	O	120	Oct 01/2012		1	Jun 01/2012
	84	Feb 01/2012	O	121	Oct 01/2012		2	Oct 01/2010
	85	Feb 01/2012	O	122	Oct 01/2012		3	Jun 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-10-17 (continued)			20-10-19 (continued)			20-10-20 (continued)		
4	BLANK		25	Oct 01/2011		24	Jun 01/2012	
20-10-18 CONTENTS			26	Jun 01/2012		25	Jun 01/2012	
1	Jun 01/2009		27	Jun 01/2012		26	Jun 01/2010	
2	BLANK		28	Jun 01/2012		27	Jun 01/2012	
20-10-18			29	Jun 01/2012		28	Feb 01/2010	
1	Oct 01/2010		30	Jun 01/2012		29	Jun 01/2012	
2	Oct 01/2010		31	Jun 01/2012		30	Feb 01/2010	
3	Jun 01/2009		32	Jun 01/2012		31	Feb 01/2010	
4	BLANK		33	Jun 01/2012		32	Feb 01/2010	
20-10-19 CONTENTS			34	BLANK		33	Feb 01/2010	
1	Oct 01/2011		20-10-20 CONTENTS			34	Feb 01/2010	
2	Oct 01/2011		1	Feb 01/2010		35	Jun 01/2010	
20-10-19			2	BLANK		36	Feb 01/2010	
1	Oct 01/2011		20-10-20			37	Feb 01/2010	
2	Oct 01/2011		1	Jun 01/2012		38	Feb 01/2010	
3	Oct 01/2011		2	Jun 01/2012		20-10-21 CONTENTS		
4	Jun 01/2012		3	Oct 01/2010		1	Jul 01/2011	
5	Jun 01/2012		4	Jun 01/2012		2	BLANK	
6	Jun 01/2012		5	Jun 01/2012		20-10-21		
7	Jun 01/2012		6	Jun 01/2012		1	Feb 01/2012	
8	Jun 01/2012		7	Jun 01/2012		2	Jul 01/2011	
9	Jun 01/2012		8	Jun 01/2012		3	Jun 01/2012	
10	Jun 01/2012		9	Jun 01/2012		4	BLANK	
11	Jun 01/2012		10	Jun 01/2012		20-10-22 CONTENTS		
12	Jun 01/2012		11	Oct 01/2010		1	Oct 01/2010	
13	Jun 01/2012		12	Feb 01/2012		2	BLANK	
14	Jun 01/2012		13	Feb 01/2012		20-10-22		
15	Jun 01/2012		14	Feb 01/2012		1	Oct 01/2010	
16	Jun 01/2012		15	Feb 01/2012		2	Oct 01/2010	
17	Jun 01/2012		16	Oct 01/2010		3	Jun 01/2012	
18	Jun 01/2012		17	Oct 01/2010		4	Jun 01/2012	
19	Jun 01/2012		18	Oct 01/2010		5	Jun 01/2012	
20	Oct 01/2011		19	Oct 01/2010		6	Jun 01/2012	
21	Oct 01/2011		20	Oct 01/2010		7	Jun 01/2012	
22	Jun 01/2012		21	Oct 01/2010		8	Oct 01/2010	
23	Jun 01/2012		22	Oct 01/2010		9	Oct 01/2010	
24	Oct 01/2011		23	Jun 01/2012		10	Oct 01/2010	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 12  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-10-22 (continued)			20-10-22 (continued)			20-10-24 (continued)		
	11	Oct 01/2010		48	Oct 01/2010		9	Jun 01/2012
	12	Oct 01/2010		49	Oct 01/2010		10	Jun 01/2012
	13	Oct 01/2010		50	Oct 01/2010		11	Jun 01/2012
	14	Oct 01/2010		51	Oct 01/2010		12	Jun 01/2012
	15	Oct 01/2010		52	Oct 01/2010		13	Jun 01/2012
	16	Jun 01/2012		53	Oct 01/2010		14	Jun 01/2012
	17	Jun 01/2012		54	Oct 01/2010		15	Jun 01/2012
	18	Jun 01/2012		55	Jun 01/2012		16	Jun 01/2012
	19	Jun 01/2012		56	Oct 01/2010		17	Jun 01/2012
	20	Jun 01/2012		57	Oct 01/2010		18	Feb 01/2012
	21	Jun 01/2012		58	Jun 01/2012		19	Feb 01/2012
	22	Oct 01/2010		59	Jun 01/2012		20	Feb 01/2012
	23	Oct 01/2010		60	Oct 01/2010		21	Feb 01/2012
	24	Oct 01/2010		61	Oct 01/2010		22	BLANK
	25	Oct 01/2010		62	Jun 01/2012	20-10-25 CONTENTS		
	26	Oct 01/2010		63	Oct 01/2010		1	Jun 01/2010
	27	Oct 01/2010		64	Oct 01/2010		2	BLANK
	28	Oct 01/2010		65	Jun 01/2012	20-10-25		
	29	Oct 01/2010		66	Oct 01/2010		1	Jun 01/2012
	30	Oct 01/2010		67	Jun 01/2012		2	Jun 01/2010
	31	Jun 01/2012		68	Oct 01/2010		3	Jun 01/2010
	32	Oct 01/2010		69	Jun 01/2012		4	Jun 01/2010
	33	Oct 01/2010		70	Jun 01/2012		5	Jun 01/2010
	34	Oct 01/2010		71	Jun 01/2012		6	Jun 01/2010
	35	Oct 01/2010		72	BLANK		7	Jun 01/2010
	36	Jun 01/2012	20-10-24 CONTENTS				8	Jun 01/2010
	37	Oct 01/2010		1	Feb 01/2012		9	Jun 01/2010
	38	Oct 01/2010		2	BLANK		10	Jun 01/2010
	39	Oct 01/2010	20-10-24				11	Oct 01/2010
	40	Oct 01/2010		1	Jun 01/2012		12	Oct 01/2010
	41	Oct 01/2010		2	Jun 01/2012		13	Jun 01/2010
	42	Oct 01/2010		3	Jun 01/2012		14	Jun 01/2010
	43	Oct 01/2010		4	Jun 01/2012		15	Jun 01/2010
	44	Oct 01/2010		5	Jun 01/2012		16	Jun 01/2010
	45	Oct 01/2010		6	Jun 01/2012		17	Jun 01/2010
	46	Jun 01/2012		7	Jun 01/2012		18	Jun 01/2010
	47	Jun 01/2012		8	Jun 01/2012		19	Jun 01/2010

A = Added, R = Revised, D = Deleted, O = Overflow

## 20-EFFECTIVE PAGES

Page 13  
Oct 01/2012

D6-54446



707, 727-787

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-10-25 (continued)			20-10-26 (continued)			20-11-11 CONTENTS		
20	Jun 01/2010		25	Jun 01/2010		1	Jun 01/2009	
21	Jun 01/2010		26	Jun 01/2010		2	Jun 01/2009	
22	Jun 01/2010		27	Oct 01/2010		20-11-11		
23	Jun 01/2010		28	Jun 01/2010		1	Jun 01/2012	
24	Jun 01/2010		29	Oct 01/2010		2	Jun 01/2012	
25	Jun 01/2010		30	Jun 01/2010		3	Oct 01/2010	
26	Jun 01/2010		31	Jun 01/2012		4	Oct 01/2010	
27	Oct 01/2010		32	Jun 01/2010		5	Jun 01/2012	
28	Jun 01/2010		33	Jun 01/2012		6	Jun 01/2012	
20-10-26 CONTENTS			34	Jun 01/2010		7	Jun 01/2012	
1	Jul 01/2011		20-10-27 CONTENTS			8	Jun 01/2012	
2	BLANK		1	Jun 01/2010		9	Oct 01/2010	
20-10-26			2	BLANK		10	Oct 01/2010	
1	Jun 01/2012		20-10-27			11	Jun 01/2012	
2	Jun 01/2012		1	Jun 01/2012		12	Oct 01/2010	
3	Jun 01/2012		2	Jun 01/2010		13	Oct 01/2010	
4	Jun 01/2012		3	Jun 01/2010		14	Jun 01/2012	
5	Jun 01/2012		4	Jun 01/2012		15	Nov 01/2008	
6	Jun 01/2012		5	Jun 01/2010		16	Jul 01/2011	
7	Jun 01/2012		6	Jun 01/2010		17	Oct 01/2010	
8	Jun 01/2012		7	Jun 01/2010		18	Oct 01/2010	
9	Jun 01/2012		8	Jun 01/2010		19	Oct 01/2010	
10	Jun 01/2012		9	Jun 01/2010		20	Jun 01/2012	
11	Jun 01/2012		10	Jun 01/2010		21	Oct 01/2010	
12	Jun 01/2012		11	Jun 01/2010		22	Oct 01/2010	
13	Jun 01/2012		12	BLANK		23	Oct 01/2010	
14	Jun 01/2012		20-10-91 CONTENTS			24	Oct 01/2010	
15	Jun 01/2012		1	Jun 01/2009		25	Oct 01/2010	
16	Jun 01/2012		2	BLANK		26	Jun 01/2012	
17	Jun 01/2010		20-10-91			27	Jun 01/2012	
18	Jun 01/2010		1	Oct 01/2010		28	Jun 01/2012	
19	Jun 01/2010		2	Oct 01/2010		29	Jun 01/2012	
20	Jun 01/2010		3	Oct 01/2010		30	Oct 01/2010	
21	Jun 01/2012		4	Oct 01/2010		31	Jun 01/2012	
22	Jun 01/2010		5	Nov 01/2008		32	Jun 01/2012	
23	Jun 01/2010		6	BLANK		33	Jun 01/2012	
24	Jun 01/2010					34	Oct 01/2010	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 14  
Oct 01/2012

D6-54446



**707, 727-787**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-11-11 (continued)			20-11-11 (continued)			20-12-11 (continued)		
	35	Oct 01/2010		72	Jun 01/2012		33	Oct 01/2010
	36	Oct 01/2010	20-12-11 CONTENTS				34	Oct 01/2010
	37	Oct 01/2010		1	Oct 01/2010		35	Oct 01/2010
	38	Jun 01/2012		2	Oct 01/2010		36	Oct 01/2010
	39	Jun 01/2012	20-12-11				37	Oct 01/2010
	40	Jun 01/2012		1	Oct 01/2010		38	Oct 01/2010
	41	Jun 01/2012		2	Oct 01/2010		39	Oct 01/2010
	42	Oct 01/2010		3	Oct 01/2010		40	Oct 01/2010
	43	Oct 01/2010		4	Oct 01/2010	20-12-20 CONTENTS		
	44	Oct 01/2010		5	Oct 01/2010		1	Jun 01/2012
	45	Jun 01/2012		6	Oct 01/2010		2	BLANK
	46	Oct 01/2010		7	Oct 01/2010	20-12-20		
	47	Jun 01/2012		8	Oct 01/2010		1	Oct 01/2010
	48	Oct 01/2010		9	Nov 01/2009		2	Oct 01/2010
	49	Oct 01/2010		10	Oct 01/2010		3	Oct 01/2010
	50	Oct 01/2010		11	Oct 01/2010		4	Oct 01/2010
	51	Oct 01/2010		12	Oct 01/2010		5	Oct 01/2010
	52	Jun 01/2012		13	Oct 01/2010		6	Oct 01/2010
	53	Oct 01/2010		14	Oct 01/2010		7	Oct 01/2010
	54	Jun 01/2012		15	Oct 01/2010		8	Oct 01/2010
	55	Jun 01/2012		16	Oct 01/2010		9	Jun 01/2012
	56	Jun 01/2012		17	Oct 01/2010		10	Jun 01/2012
	57	Jun 01/2012		18	Oct 01/2010		11	Jun 01/2012
	58	Oct 01/2010		19	Nov 01/2009		12	Jun 01/2012
	59	Oct 01/2010		20	Oct 01/2010		13	Jun 01/2012
	60	Oct 01/2010		21	Nov 01/2009		14	Jun 01/2012
	61	Oct 01/2010		22	Oct 01/2010		15	Jun 01/2012
	62	Oct 01/2010		23	Oct 01/2010		16	Jun 01/2012
	63	Oct 01/2010		24	Oct 01/2010		17	Jun 01/2012
	64	Oct 01/2010		25	Oct 01/2010		18	Jun 01/2012
	65	Oct 01/2010		26	Oct 01/2010	20-12-21 CONTENTS		
	66	Oct 01/2010		27	Oct 01/2010		1	Oct 01/2010
	67	Oct 01/2010		28	Oct 01/2010		2	BLANK
	68	Oct 01/2010		29	Oct 01/2010	20-12-21		
	69	Oct 01/2010		30	Oct 01/2010		1	Oct 01/2010
	70	Jun 01/2012		31	Oct 01/2010		2	Oct 01/2010
	71	Jun 01/2012		32	Oct 01/2010		3	Oct 01/2010

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 15  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-12-21 (continued)			20-14-11 (continued)			20-14-11 (continued)		
	4	Oct 01/2010		17	Feb 01/2012		54	Feb 01/2012
	5	Oct 01/2010		18	Jun 01/2012	20-14-12 CONTENTS		
	6	Oct 01/2010		19	Jun 01/2012		1	Feb 01/2011
	7	Oct 01/2010		20	Jun 01/2012		2	BLANK
	8	Oct 01/2010		21	Feb 01/2012	20-14-12		
	9	Oct 01/2010		22	Feb 01/2012		1	Jun 01/2012
	10	Oct 01/2010		23	Feb 01/2012		2	Feb 01/2011
	11	Oct 01/2010		24	Feb 01/2012		3	Feb 01/2011
	12	Oct 01/2010		25	Feb 01/2012		4	Feb 01/2011
	13	Oct 01/2010		26	Feb 01/2012		5	Feb 01/2011
	14	Oct 01/2010		27	Feb 01/2012		6	Feb 01/2011
	15	Oct 01/2010		28	Feb 01/2012		7	Feb 01/2011
	16	Oct 01/2010		29	Feb 01/2012		8	Feb 01/2011
	17	Oct 01/2010		30	Feb 01/2012		9	Feb 01/2011
	18	Oct 01/2010		31	Feb 01/2012		10	Oct 01/2010
	19	Oct 01/2010		32	Feb 01/2012		11	Oct 01/2010
	20	BLANK		33	Feb 01/2012		12	Oct 01/2010
20-14-11 CONTENTS				34	Feb 01/2012		13	Jun 01/2010
	1	Feb 01/2012		35	Feb 01/2012		14	Jun 01/2010
	2	Feb 01/2012		36	Feb 01/2012		15	Oct 01/2010
20-14-11				37	Feb 01/2012		16	Oct 01/2010
	1	Feb 01/2010		38	Feb 01/2012		17	Oct 01/2010
	2	Nov 01/2008		39	Feb 01/2012		18	Oct 01/2010
	3	Oct 01/2010		40	Feb 01/2012		19	Jun 01/2010
	4	Oct 01/2010		41	Feb 01/2012		20	Jun 01/2010
	5	Oct 01/2010		42	Feb 01/2012	20-14-14 CONTENTS		
	6	Oct 01/2010		43	Feb 01/2012		1	Jun 01/2010
	7	Oct 01/2010		44	Feb 01/2012		2	BLANK
	8	Feb 01/2010		45	Feb 01/2012	20-14-14		
	9	Jun 01/2012		46	Feb 01/2012		1	Nov 01/2009
	10	Feb 01/2012		47	Feb 01/2012		2	Jun 01/2009
	11	Feb 01/2012		48	Feb 01/2012		3	Jun 01/2010
	12	Feb 01/2012		49	Feb 01/2012		4	Jun 01/2010
	13	Feb 01/2012		50	Feb 01/2012		5	Oct 01/2010
	14	Jun 01/2012		51	Feb 01/2012		6	Oct 01/2010
	15	Feb 01/2012		52	Feb 01/2012		7	Jun 01/2010
	16	Feb 01/2012		53	Feb 01/2012		8	Jun 01/2010

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 16  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-14-14 (continued)			20-15-21 CONTENTS			20-15-31		
9	Feb 01/2012		1	Feb 01/2010		1	Nov 01/2008	
10	Feb 01/2012		2	BLANK		2	Nov 01/2008	
11	Feb 01/2012		20-15-21			3	Oct 01/2010	
12	BLANK		1	Feb 01/2010		4	Nov 01/2008	
20-14-51 CONTENTS			2	Feb 01/2010		20-15-33 CONTENTS		
1	Jun 01/2009		3	Feb 01/2010		1	Jun 01/2009	
2	BLANK		4	Oct 01/2010		2	BLANK	
20-14-51			5	Oct 01/2010		20-15-33		
1	Feb 01/2010		6	Oct 01/2010		1	Nov 01/2008	
2	Oct 01/2010		20-15-22 CONTENTS			2	Nov 01/2008	
3	Nov 01/2008		1	Jul 01/2011		3	Nov 01/2008	
4	BLANK		2	BLANK		4	Nov 01/2008	
20-14-52 CONTENTS			20-15-22			5	Oct 01/2010	
1	Jun 01/2009		1	Jul 01/2011		6	BLANK	
2	BLANK		2	Jul 01/2011		20-15-35 CONTENTS		
20-14-52			3	Jul 01/2011		1	Jun 01/2009	
1	Oct 01/2010		4	Jul 01/2011		2	BLANK	
2	Feb 01/2012		5	Jul 01/2011		20-15-35		
3	Feb 01/2012		6	Jul 01/2011		1	Oct 01/2010	
4	Feb 01/2012		7	Jul 01/2011		2	Jun 01/2012	
5	Oct 01/2010		8	Jul 01/2011		20-15-41 CONTENTS		
6	Feb 01/2012		9	Jul 01/2011		1	Jun 01/2009	
7	Feb 01/2012		10	Jul 01/2011		2	BLANK	
8	Feb 01/2012		11	Jul 01/2011		20-15-41		
9	Feb 01/2012		12	Jul 01/2011		1	Oct 01/2010	
10	Feb 01/2012		20-15-26 CONTENTS			2	Oct 01/2010	
11	Feb 01/2012		1	Jun 01/2009		3	Nov 01/2008	
12	Feb 01/2012		2	BLANK		4	Oct 01/2010	
20-15-04 CONTENTS			20-15-26			5	Oct 01/2010	
1	Jun 01/2009		1	Nov 01/2008		6	Oct 01/2010	
2	BLANK		2	Jun 01/2009		7	Oct 01/2010	
20-15-04			3	Oct 01/2010		8	Nov 01/2008	
1	Nov 01/2008		4	Jun 01/2009		20-15-42 CONTENTS		
2	Nov 01/2008		20-15-31 CONTENTS			1	Jun 01/2009	
3	Nov 01/2008		1	Jun 01/2009		2	BLANK	
4	Nov 01/2008		2	BLANK		20-15-42		
						1	Oct 01/2010	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 17  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-15-42 (continued)			20-15-44 (continued)			20-15-48 (continued)		
2	Jun 01/2009		7	Oct 01/2010		4	Oct 01/2010	
3	Oct 01/2010		8	BLANK		5	Oct 01/2010	
4	Oct 01/2010		20-15-46 CONTENTS			6	Jun 01/2009	
5	Oct 01/2010		1	Jun 01/2009		7	Oct 01/2010	
6	Oct 01/2010		2	BLANK		8	Oct 01/2010	
7	Oct 01/2010		20-15-46			9	Oct 01/2010	
8	Oct 01/2010		1	Jun 01/2009		10	Oct 01/2010	
9	Oct 01/2010		2	Jun 01/2009		11	Oct 01/2010	
10	Oct 01/2010		3	Jun 01/2009		12	Nov 01/2009	
11	Nov 01/2008		4	Oct 01/2010		13	Oct 01/2010	
12	BLANK		5	Oct 01/2010		14	Oct 01/2010	
20-15-43 CONTENTS			6	Jun 01/2009		15	Jun 01/2010	
1	Jun 01/2009		7	Oct 01/2010		16	Oct 01/2010	
2	BLANK		8	Oct 01/2010		17	Oct 01/2010	
20-15-43			9	Oct 01/2010		18	BLANK	
1	Oct 01/2010		10	Oct 01/2010		20-15-49 CONTENTS		
2	Feb 01/2012		11	Nov 01/2008		1	Nov 01/2009	
3	Oct 01/2010		12	Oct 01/2010		2	BLANK	
4	Oct 01/2010		13	Oct 01/2010		20-15-49		
5	Oct 01/2010		14	Oct 01/2010		1	Nov 01/2009	
6	Oct 01/2010		15	Oct 01/2010		2	Nov 01/2009	
7	Oct 01/2010		16	Oct 01/2010		3	Nov 01/2009	
8	Oct 01/2010		17	Nov 01/2008		4	Oct 01/2010	
9	Oct 01/2010		18	Oct 01/2010		5	Oct 01/2010	
10	Oct 01/2010		19	Oct 01/2010		6	Feb 01/2012	
11	Oct 01/2010		20	Jun 01/2010		7	Feb 01/2012	
12	Nov 01/2008		21	Oct 01/2010		8	Oct 01/2010	
20-15-44 CONTENTS			22	Oct 01/2010		9	Oct 01/2010	
1	Oct 01/2010		23	Oct 01/2010		10	Oct 01/2010	
2	BLANK		24	Nov 01/2008		11	Oct 01/2010	
20-15-44			20-15-48 CONTENTS			12	Oct 01/2010	
1	Oct 01/2010		1	Nov 01/2009		13	Oct 01/2010	
2	Feb 01/2012		2	BLANK		14	Feb 01/2012	
3	Feb 01/2012		20-15-48			15	Feb 01/2012	
4	Feb 01/2012		1	Oct 01/2010		16	BLANK	
5	Feb 01/2012		2	Jun 01/2009		20-20-00 CONTENTS		
6	Oct 01/2010		3	Jun 01/2009		1	Feb 01/2012	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 18  
Oct 01/2012

D6-54446



**707, 727-787**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-20-00	CONTENTS (continued)		20-20-00	(continued)		20-20-00	(continued)	
	2	Jun 01/2012		34	Feb 01/2012		71	Jun 01/2012
	3	Jun 01/2012		35	Feb 01/2012		72	Jun 01/2012
	4	Jun 01/2012		36	Feb 01/2012		73	Jun 01/2012
20-20-00				37	Feb 01/2012		74	Jun 01/2012
	1	Jun 01/2012		38	Feb 01/2012		75	Jun 01/2012
	2	Jun 01/2012		39	Feb 01/2012		76	Jun 01/2012
	3	Feb 01/2012		40	Feb 01/2012		77	Jun 01/2012
	4	Feb 01/2012		41	Feb 01/2012		78	Jun 01/2012
	5	Feb 01/2012		42	Jun 01/2012		79	Jun 01/2012
	6	Feb 01/2012		43	Feb 01/2012		80	Jun 01/2012
	7	Jul 01/2011		44	Jun 01/2012		81	Jun 01/2012
	8	Jun 01/2012		45	Feb 01/2012		82	Jun 01/2012
	9	Feb 01/2012		46	Jun 01/2012		83	Jun 01/2012
	10	Feb 01/2012		47	Jun 01/2012		84	Jun 01/2012
	11	Feb 01/2012		48	Feb 01/2012		85	Jun 01/2012
	12	Feb 01/2012		49	Feb 01/2012		86	Jun 01/2012
	13	Feb 01/2012		50	Jun 01/2012		87	Jun 01/2012
	14	Feb 01/2012		51	Jun 01/2012		88	Jun 01/2012
	15	Feb 01/2012		52	Jun 01/2012		89	Jun 01/2012
	16	Feb 01/2012		53	Jun 01/2012		90	Jun 01/2012
	17	Feb 01/2012		54	Jun 01/2012		91	Jun 01/2012
	18	Feb 01/2012		55	Jun 01/2012		92	Jun 01/2012
	19	Feb 01/2012		56	Jun 01/2012		93	Jun 01/2012
	20	Feb 01/2012		57	Jun 01/2012		94	Jun 01/2012
	21	Feb 01/2012		58	Jun 01/2012		95	Jun 01/2012
	22	Feb 01/2012		59	Jun 01/2012		96	Jun 01/2012
	23	Feb 01/2012		60	Jun 01/2012		97	Jun 01/2012
	24	Feb 01/2012		61	Jun 01/2012		98	Jun 01/2012
	25	Feb 01/2012		62	Jun 01/2012		99	Jun 01/2012
	26	Feb 01/2012		63	Jun 01/2012		100	Jun 01/2012
	27	Feb 01/2012		64	Jun 01/2012		101	Jun 01/2012
	28	Feb 01/2012		65	Jun 01/2012		102	Jun 01/2012
	29	Feb 01/2012		66	Jun 01/2012		103	Jun 01/2012
	30	Feb 01/2012		67	Jun 01/2012		104	Jun 01/2012
	31	Feb 01/2012		68	Jun 01/2012		105	Jun 01/2012
	32	Feb 01/2012		69	Jun 01/2012		106	Jun 01/2012
	33	Feb 01/2012		70	Jun 01/2012		107	Jun 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 19  
Oct 01/2012

D6-54446



**707, 727-787**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-20-00 (continued)			20-20-10 (continued)			20-20-10 (continued)		
108	BLANK		33	Feb 01/2011		70	Oct 01/2011	
20-20-10 CONTENTS			34	Feb 01/2011		71	Oct 01/2011	
1	Oct 01/2011		35	Feb 01/2011		72	Oct 01/2011	
2	Oct 01/2011		36	Feb 01/2011		73	Oct 01/2011	
20-20-10			37	Feb 01/2012		74	Oct 01/2011	
1	Feb 01/2011		38	Oct 01/2011		75	Oct 01/2011	
2	Feb 01/2011		39	Oct 01/2011		76	Jun 01/2012	
3	Feb 01/2011		40	Oct 01/2011		77	Oct 01/2011	
4	Feb 01/2011		41	Oct 01/2011		78	Oct 01/2011	
5	Feb 01/2011		42	Oct 01/2011		79	Oct 01/2011	
6	Jul 01/2011		43	Oct 01/2011		80	Feb 01/2012	
7	Jun 01/2012		44	Oct 01/2011		81	Feb 01/2012	
8	Feb 01/2011		45	Oct 01/2011		82	Feb 01/2012	
9	Feb 01/2011		46	Oct 01/2011		83	Oct 01/2011	
10	Feb 01/2011		47	Oct 01/2011		84	Oct 01/2011	
11	Feb 01/2011		48	Oct 01/2011		85	Oct 01/2011	
12	Feb 01/2011		49	Oct 01/2011		86	Oct 01/2011	
13	Feb 01/2011		50	Oct 01/2011		87	Oct 01/2011	
14	Feb 01/2011		51	Oct 01/2011		88	Oct 01/2011	
15	Feb 01/2011		52	Oct 01/2011		20-20-11 CONTENTS		
16	Feb 01/2011		53	Oct 01/2011		1	Oct 01/2011	
17	Feb 01/2011		54	Oct 01/2011		2	BLANK	
18	Feb 01/2011		55	Oct 01/2011		20-20-11		
19	Feb 01/2011		56	Oct 01/2011		1	Oct 01/2010	
20	Feb 01/2011		57	Oct 01/2011		2	Oct 01/2010	
21	Feb 01/2011		58	Oct 01/2011		3	Oct 01/2010	
22	Feb 01/2011		59	Oct 01/2011		4	Oct 01/2010	
23	Feb 01/2011		60	Oct 01/2011		5	Oct 01/2011	
24	Feb 01/2011		61	Oct 01/2011		6	Oct 01/2011	
25	Oct 01/2011		62	Oct 01/2011		20-20-12 CONTENTS		
26	Feb 01/2011		63	Oct 01/2011		1	Oct 01/2011	
27	Feb 01/2011		64	Oct 01/2011		2	BLANK	
28	Feb 01/2011		65	Oct 01/2011		20-20-12		
29	Feb 01/2011		66	Oct 01/2011		1	Oct 01/2011	
30	Feb 01/2011		67	Oct 01/2011		2	Oct 01/2011	
31	Feb 01/2011		68	Oct 01/2011		3	Oct 01/2011	
32	Feb 01/2011		69	Oct 01/2011		4	Oct 01/2011	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 20  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-20-12 (continued)			20-22-00			20-23-15 (continued)		
5	Oct 01/2011		1	Nov 01/2008		8	Oct 01/2010	
6	Oct 01/2011		2	BLANK		9	Oct 01/2010	
7	Oct 01/2011		20-23-00 CONTENTS			10	Oct 01/2010	
8	BLANK		1	Jun 01/2009		11	Oct 01/2010	
20-20-14 CONTENTS			2	BLANK		12	BLANK	
1	Jul 01/2011		20-23-00			20-23-16 CONTENTS		
2	BLANK		1	Jun 01/2009		1	Jun 01/2009	
20-20-14			2	BLANK		2	BLANK	
1	Jul 01/2011		20-23-01 CONTENTS			20-23-16		
2	Jun 01/2012		1	Jun 01/2009		1	Oct 01/2010	
3	Jul 01/2011		2	BLANK		2	BLANK	
4	Jul 01/2011		20-23-01			20-23-17 CONTENTS		
5	Jul 01/2011		1	Oct 01/2010		1	Jun 01/2009	
6	Jul 01/2011		2	Oct 01/2010		2	BLANK	
7	Jul 01/2011		3	Oct 01/2010		20-23-17		
8	Jul 01/2011		4	Oct 01/2010		1	Oct 01/2011	
9	Jul 01/2011		5	Oct 01/2010		2	Oct 01/2010	
10	Jul 01/2011		6	Oct 01/2010		3	Oct 01/2010	
11	Jul 01/2011		7	Oct 01/2010		4	Oct 01/2011	
12	Jul 01/2011		8	Oct 01/2010		5	Oct 01/2011	
13	Jul 01/2011		20-23-03 CONTENTS			6	Oct 01/2010	
14	Jul 01/2011		1	Jun 01/2009		7	Oct 01/2010	
15	Jul 01/2011		2	BLANK		8	Oct 01/2010	
16	Jul 01/2011		20-23-03			9	Oct 01/2010	
17	Jul 01/2011		1	Nov 01/2008		10	Oct 01/2010	
18	Jul 01/2011		2	Nov 01/2008		11	Oct 01/2010	
19	Jul 01/2011		20-23-15 CONTENTS			12	Oct 01/2010	
20	Jul 01/2011		1	Jun 01/2009		13	Oct 01/2010	
21	Jul 01/2011		2	BLANK		14	Oct 01/2010	
22	Jul 01/2011		20-23-15			15	Oct 01/2010	
23	Jul 01/2011		1	Oct 01/2010		16	Oct 01/2010	
24	Jul 01/2011		2	Oct 01/2010		17	Oct 01/2010	
25	Jul 01/2011		3	Oct 01/2010		18	Oct 01/2010	
26	BLANK		4	Nov 01/2008		19	Oct 01/2010	
20-22-00 CONTENTS			5	Nov 01/2008		20	Oct 01/2010	
1	Jun 01/2009		6	Oct 01/2010		21	Oct 01/2010	
2	BLANK		7	Oct 01/2010		22	Oct 01/2010	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 21  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-23-17 (continued)			20-23-30 (continued)			20-23-37 (continued)		
23	Oct 01/2010		4	Oct 01/2010		21	Oct 01/2010	
24	Oct 01/2010		5	Oct 01/2010		22	Oct 01/2010	
25	Oct 01/2010		6	Oct 01/2010		23	Oct 01/2010	
26	Oct 01/2010		7	Oct 01/2010		24	Oct 01/2010	
27	Oct 01/2010		8	Oct 01/2010		20-23-39 CONTENTS		
28	Oct 01/2010		9	Oct 01/2010		1	Jun 01/2009	
29	Oct 01/2010		10	Oct 01/2010		2	BLANK	
30	Oct 01/2010		20-23-32 CONTENTS			20-23-39		
31	Oct 01/2010		1	Jun 01/2009		1	Oct 01/2010	
32	Oct 01/2010		2	BLANK		2	Oct 01/2010	
33	Oct 01/2010		20-23-32			3	Nov 01/2008	
34	Oct 01/2010		1	Oct 01/2010		4	Nov 01/2008	
35	Oct 01/2010		2	Nov 01/2008		5	Oct 01/2010	
36	Oct 01/2010		20-23-37 CONTENTS			6	Oct 01/2010	
37	Oct 01/2010		1	Jun 01/2009		7	Oct 01/2010	
38	Oct 01/2010		2	BLANK		8	Oct 01/2010	
39	Oct 01/2010		20-23-37			9	Oct 01/2010	
40	Oct 01/2010		1	Oct 01/2010		10	Oct 01/2010	
41	Oct 01/2010		2	Oct 01/2010		11	Oct 01/2010	
42	Oct 01/2010		3	Oct 01/2010		12	Oct 01/2010	
43	Oct 01/2010		4	Oct 01/2010		13	Oct 01/2010	
44	Oct 01/2010		5	Oct 01/2010		14	Oct 01/2010	
45	Oct 01/2010		6	Oct 01/2010		15	Oct 01/2010	
46	Jun 01/2009		7	Oct 01/2010		16	Oct 01/2010	
20-23-19 CONTENTS			8	Oct 01/2010		20-24-00 CONTENTS		
1	Jun 01/2009		9	Oct 01/2010		1	Jun 01/2009	
2	BLANK		10	Oct 01/2010		2	BLANK	
20-23-19			11	Jun 01/2009		20-24-00		
1	Oct 01/2010		12	Oct 01/2010		1	Oct 01/2010	
2	Oct 01/2010		13	Oct 01/2010		2	Oct 01/2010	
20-23-30 CONTENTS			14	Oct 01/2010		3	Oct 01/2010	
1	Jun 01/2009		15	Oct 01/2010		4	Oct 01/2010	
2	BLANK		16	Oct 01/2010		5	Oct 01/2010	
20-23-30			17	Oct 01/2010		6	Oct 01/2010	
1	Nov 01/2008		18	Oct 01/2010		7	Oct 01/2010	
2	Oct 01/2010		19	Oct 01/2010		8	Oct 01/2010	
3	Oct 01/2010		20	Nov 01/2008				

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 22  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-24-01	CONTENTS		20-24-14 (continued)			20-24-22	CONTENTS	
	1	Jun 01/2009		3	Oct 01/2010		1	Jun 01/2009
	2	BLANK		4	Oct 01/2010		2	BLANK
20-24-01				5	Oct 01/2010	20-24-22		
	1	Oct 01/2010		6	BLANK		1	Oct 01/2010
	2	Nov 01/2008	20-24-20	CONTENTS			2	Oct 01/2010
20-24-02	CONTENTS			1	Oct 01/2010		3	Oct 01/2010
	1	Jun 01/2009		2	BLANK		4	Oct 01/2010
	2	BLANK	20-24-20			20-24-24	CONTENTS	
20-24-02				1	Oct 01/2010		1	Jun 01/2009
	1	Oct 01/2010		2	Oct 01/2010		2	BLANK
	2	Oct 01/2010		3	Oct 01/2010	20-24-24		
20-24-12	CONTENTS			4	Oct 01/2010		1	Oct 01/2010
	1	Jun 01/2009		5	Oct 01/2010		2	Oct 01/2010
	2	BLANK		6	Oct 01/2010		3	Oct 01/2010
20-24-12				7	Oct 01/2010		4	Nov 01/2008
	1	Oct 01/2010		8	Oct 01/2010		5	Oct 01/2010
	2	Jul 01/2011		9	Oct 01/2010		6	Oct 01/2010
	3	Oct 01/2010		10	Oct 01/2010	20-24-25	CONTENTS	
	4	Oct 01/2010		11	Oct 01/2010		1	Jun 01/2009
	5	Oct 01/2010		12	Oct 01/2010		2	BLANK
	6	Oct 01/2010		13	Oct 01/2010	20-24-25		
	7	Oct 01/2010		14	Oct 01/2010		1	Oct 01/2010
	8	Oct 01/2010		15	Oct 01/2010		2	Oct 01/2010
	9	Oct 01/2010		16	Oct 01/2010		3	Oct 01/2010
	10	Oct 01/2010		17	Oct 01/2010		4	Nov 01/2008
	11	Oct 01/2010		18	Oct 01/2010	20-24-26	CONTENTS	
	12	Oct 01/2010	20-24-21	CONTENTS			1	Oct 01/2010
	13	Oct 01/2010		1	Jun 01/2009		2	BLANK
	14	Oct 01/2010		2	BLANK	20-24-26		
	15	Oct 01/2010	20-24-21				1	Oct 01/2010
	16	Oct 01/2010		1	Oct 01/2010		2	Oct 01/2010
20-24-14	CONTENTS			2	Oct 01/2010		3	Oct 01/2010
	1	Jun 01/2009		3	Oct 01/2010		4	Oct 01/2010
	2	BLANK		4	Oct 01/2010		5	Oct 01/2010
20-24-14				5	Oct 01/2010		6	Oct 01/2010
	1	Oct 01/2010		6	Oct 01/2010	20-24-27	CONTENTS	
	2	Oct 01/2010					1	Jun 01/2009

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 23  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-24-27	CONTENTS (continued)		20-25-12	(continued)		20-25-13	(continued)	
	2	BLANK		2	Oct 01/2010		11	Oct 01/2010
20-24-27				3	Oct 01/2010		12	Oct 01/2010
	1	Oct 01/2010		4	Oct 01/2010		13	Oct 01/2010
	2	Oct 01/2010		5	Oct 01/2010		14	Oct 01/2010
20-25-00	CONTENTS			6	Feb 01/2010		15	Oct 01/2010
	1	Jun 01/2009		7	Feb 01/2010		16	Oct 01/2010
	2	BLANK		8	Oct 01/2010		17	Oct 01/2010
20-25-00				9	Oct 01/2010		18	Oct 01/2010
	1	Nov 01/2008		10	Oct 01/2010	20-25-14	CONTENTS	
	2	Oct 01/2010		11	Oct 01/2010		1	Feb 01/2012
	3	Oct 01/2010		12	Oct 01/2010		2	Feb 01/2012
	4	Nov 01/2008		13	Feb 01/2010	20-25-14		
20-25-11	CONTENTS			14	Oct 01/2010		1	Jul 01/2011
	1	Jun 01/2009		15	Oct 01/2010		2	Oct 01/2010
	2	BLANK		16	Oct 01/2010		3	Oct 01/2010
20-25-11				17	Oct 01/2010		4	Oct 01/2010
	1	Oct 01/2010		18	Feb 01/2010		5	Jul 01/2011
	2	Oct 01/2010		19	Oct 01/2010		6	Jul 01/2011
	3	Oct 01/2010		20	Oct 01/2010		7	Jun 01/2012
	4	Oct 01/2010		21	Oct 01/2010		8	Feb 01/2012
	5	Oct 01/2010		22	Oct 01/2010		9	Feb 01/2012
	6	Oct 01/2010		23	Feb 01/2010		10	Feb 01/2012
	7	Oct 01/2010		24	BLANK		11	Feb 01/2012
	8	Oct 01/2010	20-25-13	CONTENTS			12	Feb 01/2012
	9	Oct 01/2010		1	Jun 01/2009		13	Feb 01/2012
	10	Oct 01/2010		2	BLANK		14	Feb 01/2012
	11	Oct 01/2010	20-25-13				15	Feb 01/2012
	12	Oct 01/2010		1	Jun 01/2009		16	Feb 01/2012
	13	Nov 01/2008		2	Oct 01/2010		17	Feb 01/2012
	14	Jun 01/2009		3	Oct 01/2010		18	Feb 01/2012
	15	Oct 01/2010		4	Oct 01/2010		19	Feb 01/2012
	16	BLANK		5	Oct 01/2010		20	Feb 01/2012
20-25-12	CONTENTS			6	Jun 01/2009		21	Feb 01/2012
	1	Jun 01/2009		7	Oct 01/2010		22	Feb 01/2012
	2	BLANK		8	Jun 01/2009		23	Feb 01/2012
20-25-12				9	Oct 01/2010		24	Feb 01/2012
	1	Oct 01/2010		10	Jun 01/2009		25	Feb 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 24  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-25-14 (continued)			20-25-14 (continued)			20-25-15 (continued)		
	26	Feb 01/2012		63	Jul 01/2011		24	Jun 01/2010
	27	Feb 01/2012		64	Jul 01/2011		25	Jun 01/2010
	28	Feb 01/2012		65	Feb 01/2012		26	Oct 01/2010
	29	Feb 01/2012		66	Jul 01/2011		27	Oct 01/2010
	30	Feb 01/2012		67	Feb 01/2012		28	Oct 01/2010
	31	Feb 01/2012		68	Feb 01/2012		29	Oct 01/2010
	32	Feb 01/2012		69	Jul 01/2011		30	Oct 01/2010
	33	Feb 01/2012		70	Jul 01/2011		31	Jun 01/2010
	34	Feb 01/2012		71	Jul 01/2011		32	Oct 01/2010
	35	Feb 01/2012		72	Jul 01/2011		33	Oct 01/2010
	36	Feb 01/2012	20-25-15 CONTENTS				34	Oct 01/2010
	37	Feb 01/2012		1	Feb 01/2012		35	Oct 01/2010
	38	Feb 01/2012		2	Jun 01/2010		36	Oct 01/2010
	39	Feb 01/2012	20-25-15				37	Jun 01/2010
	40	Feb 01/2012		1	Oct 01/2010		38	Oct 01/2010
	41	Feb 01/2012		2	Oct 01/2010		39	Oct 01/2010
	42	Feb 01/2012		3	Oct 01/2010		40	Oct 01/2010
	43	Feb 01/2012		4	Feb 01/2012		41	Oct 01/2010
	44	Feb 01/2012		5	Feb 01/2012		42	Oct 01/2010
	45	Feb 01/2012		6	Oct 01/2010		43	Jun 01/2010
	46	Feb 01/2012		7	Oct 01/2010		44	Oct 01/2010
	47	Feb 01/2012		8	Oct 01/2010		45	Oct 01/2010
	48	Feb 01/2012		9	Jun 01/2010		46	Jun 01/2010
	49	Feb 01/2012		10	Jun 01/2010		47	Jun 01/2010
	50	Feb 01/2012		11	Jun 01/2010		48	Oct 01/2010
	51	Feb 01/2012		12	Jun 01/2010		49	Oct 01/2010
	52	Feb 01/2012		13	Jun 01/2010		50	Oct 01/2010
	53	Feb 01/2012		14	Jun 01/2010		51	Oct 01/2010
	54	Feb 01/2012		15	Jun 01/2010		52	Oct 01/2010
	55	Jul 01/2011		16	Jun 01/2010		53	Oct 01/2010
	56	Jul 01/2011		17	Jun 01/2010		54	Oct 01/2010
	57	Feb 01/2012		18	Jun 01/2010		55	Jun 01/2010
	58	Jul 01/2011		19	Oct 01/2010		56	Oct 01/2010
	59	Feb 01/2012		20	Oct 01/2010		57	Oct 01/2010
	60	Feb 01/2012		21	Jun 01/2010		58	Oct 01/2010
	61	Feb 01/2012		22	Oct 01/2010		59	Oct 01/2010
	62	Feb 01/2012		23	Oct 01/2010		60	Oct 01/2010

A = Added, R = Revised, D = Deleted, O = Overflow

## 20-EFFECTIVE PAGES

Page 25  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-25-15 (continued)			20-25-16 (continued)			20-30-00 (continued)		
	61	Oct 01/2010		20	Oct 01/2010		17	Feb 01/2011
	62	Jun 01/2010		21	Jun 01/2009		18	Feb 01/2011
	63	Jun 01/2010		22	Jun 01/2009		19	Feb 01/2011
	64	Oct 01/2010		23	Jun 01/2009	O	20	Oct 01/2012
	65	Oct 01/2010		24	Jun 01/2009	O	21	Oct 01/2012
	66	Oct 01/2010		25	Jun 01/2009	O	22	Oct 01/2012
	67	Oct 01/2010		26	Jun 01/2009	O	23	Oct 01/2012
	68	Oct 01/2010		27	Jun 01/2009	O	24	Oct 01/2012
	69	Oct 01/2010		28	Jun 01/2009	R	25	Oct 01/2012
	70	Oct 01/2010		29	Jun 01/2009	O	26	Oct 01/2012
	71	Jun 01/2010		30	Jun 01/2009	O	27	Oct 01/2012
	72	Jun 01/2010		31	Nov 01/2009		28	Feb 01/2011
	73	Oct 01/2010		32	Oct 01/2010	20-30-11 CONTENTS		
	74	Jun 01/2010		33	Nov 01/2009		1	Oct 01/2011
20-25-16 CONTENTS				34	Nov 01/2009		2	BLANK
	1	Jun 01/2009		35	Jun 01/2009	20-30-11		
	2	BLANK		36	Jun 01/2009		1	Oct 01/2011
20-25-16			20-30-00 CONTENTS				2	Oct 01/2011
	1	Jun 01/2009		1	Feb 01/2011		3	Oct 01/2011
	2	Oct 01/2010		2	BLANK		4	Oct 01/2011
	3	Oct 01/2010	20-30-00				5	Oct 01/2011
	4	Nov 01/2009	O	1	Oct 01/2012		6	Oct 01/2011
	5	Jun 01/2009	O	2	Oct 01/2012		7	Oct 01/2011
	6	Jun 01/2009		3	Oct 01/2010		8	Oct 01/2011
	7	Jun 01/2009	O	4	Oct 01/2012		9	Oct 01/2011
	8	Jun 01/2009		5	Oct 01/2010		10	Oct 01/2011
	9	Jun 01/2009		6	Oct 01/2010		11	Oct 01/2011
	10	Jun 01/2009		7	Oct 01/2010		12	Oct 01/2011
	11	Jun 01/2009	O	8	Oct 01/2012		13	Oct 01/2011
	12	Jun 01/2009	O	9	Oct 01/2012		14	Oct 01/2011
	13	Jun 01/2009		10	Oct 01/2010		15	Oct 01/2011
	14	Jun 01/2009	O	11	Oct 01/2012		16	Oct 01/2011
	15	Jun 01/2009	O	12	Oct 01/2012		17	Oct 01/2011
	16	Nov 01/2009	O	13	Oct 01/2012		18	Oct 01/2011
	17	Oct 01/2010		14	Feb 01/2011		19	Oct 01/2011
	18	Nov 01/2009		15	Feb 01/2011		20	Oct 01/2011
	19	Jun 01/2009		16	Feb 01/2011		21	Oct 01/2011

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 26  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-30-11 (continued)			20-30-11 (continued)			20-30-11 (continued)		
	22	Oct 01/2011		59	Oct 01/2011		96	Oct 01/2011
	23	Oct 01/2011		60	Oct 01/2011		97	Oct 01/2011
	24	Oct 01/2011		61	Oct 01/2011		98	Oct 01/2011
	25	Oct 01/2011		62	Oct 01/2011		99	Oct 01/2011
	26	Oct 01/2011		63	Oct 01/2011		100	Oct 01/2011
	27	Oct 01/2011		64	Oct 01/2011		101	Oct 01/2011
	28	Oct 01/2011		65	Oct 01/2011		102	Oct 01/2011
	29	Oct 01/2011		66	Oct 01/2011		103	Oct 01/2011
	30	Oct 01/2011		67	Oct 01/2011		104	Oct 01/2011
	31	Oct 01/2011		68	Oct 01/2011		105	Oct 01/2011
	32	Oct 01/2011		69	Oct 01/2011		106	Oct 01/2011
	33	Oct 01/2011		70	Oct 01/2011		107	Oct 01/2011
	34	Jun 01/2012		71	Oct 01/2011		108	Oct 01/2011
	35	Oct 01/2011		72	Oct 01/2011		109	Oct 01/2011
	36	Oct 01/2011		73	Oct 01/2011		110	Oct 01/2011
	37	Oct 01/2011		74	Oct 01/2011		111	Oct 01/2011
	38	Oct 01/2011		75	Oct 01/2011		112	Oct 01/2011
	39	Oct 01/2011		76	Oct 01/2011		113	Oct 01/2011
	40	Oct 01/2011		77	Oct 01/2011		114	Oct 01/2011
	41	Oct 01/2011		78	Oct 01/2011		115	Oct 01/2011
	42	Oct 01/2011		79	Oct 01/2011		116	Oct 01/2011
	43	Oct 01/2011		80	Oct 01/2011		117	Oct 01/2011
	44	Oct 01/2011		81	Oct 01/2011		118	Oct 01/2011
	45	Oct 01/2011		82	Oct 01/2011		119	Oct 01/2011
	46	Feb 01/2012		83	Oct 01/2011		120	Oct 01/2011
	47	Feb 01/2012		84	Oct 01/2011		121	Oct 01/2011
	48	Oct 01/2011		85	Oct 01/2011		122	Oct 01/2011
	49	Oct 01/2011		86	Oct 01/2011	20-30-12 CONTENTS		
	50	Oct 01/2011		87	Oct 01/2011		1	Feb 01/2012
	51	Oct 01/2011		88	Oct 01/2011		2	Jun 01/2010
	52	Oct 01/2011		89	Oct 01/2011		3	Feb 01/2012
	53	Oct 01/2011		90	Oct 01/2011		4	Feb 01/2012
	54	Oct 01/2011		91	Oct 01/2011		5	Feb 01/2012
	55	Oct 01/2011		92	Oct 01/2011		6	BLANK
	56	Oct 01/2011		93	Oct 01/2011	20-30-12		
	57	Oct 01/2011		94	Oct 01/2011	O	1	Oct 01/2012
	58	Oct 01/2011		95	Oct 01/2011	O	2	Oct 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

## 20-EFFECTIVE PAGES

Page 27  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-30-12 (continued)			20-30-12 (continued)			20-30-12 (continued)		
	3	Feb 01/2012		40	Feb 01/2012		77	Feb 01/2012
	4	Feb 01/2012		41	Feb 01/2012		78	Oct 01/2010
	5	Feb 01/2012		42	Feb 01/2012		79	Feb 01/2012
	6	Feb 01/2012		43	Feb 01/2012		80	Oct 01/2010
	7	Feb 01/2012		44	Feb 01/2012		81	Feb 01/2012
	8	Feb 01/2012		45	Feb 01/2012		82	Feb 01/2012
	9	Feb 01/2012		46	Feb 01/2012		83	Oct 01/2010
	10	Feb 01/2012		47	Feb 01/2012		84	Oct 01/2010
	11	Feb 01/2012		48	Feb 01/2012		85	Feb 01/2012
	12	Feb 01/2012		49	Feb 01/2012		86	Feb 01/2012
	13	Feb 01/2012		50	Feb 01/2012		87	Oct 01/2010
	14	Feb 01/2012		51	Feb 01/2012		88	Feb 01/2012
	15	Feb 01/2012		52	Feb 01/2012		89	Feb 01/2012
	16	Feb 01/2012		53	Feb 01/2012		90	Oct 01/2010
	17	Feb 01/2012		54	Feb 01/2012		91	Oct 01/2010
	18	Feb 01/2012		55	Oct 01/2010		92	Oct 01/2010
	19	Feb 01/2012		56	Oct 01/2010		93	Oct 01/2010
	20	Feb 01/2012		57	Oct 01/2010		94	Feb 01/2012
	21	Feb 01/2012		58	Feb 01/2012		95	Feb 01/2012
	22	Feb 01/2012		59	Feb 01/2012		96	Feb 01/2012
	23	Feb 01/2012		60	Oct 01/2010		97	Oct 01/2010
	24	Feb 01/2012		61	Feb 01/2012		98	Feb 01/2012
	25	Feb 01/2012		62	Feb 01/2012		99	Feb 01/2012
	26	Feb 01/2012		63	Oct 01/2010		100	Feb 01/2012
	27	Feb 01/2012		64	Feb 01/2012		101	Oct 01/2010
	28	Feb 01/2012		65	Feb 01/2012		102	Oct 01/2010
	29	Feb 01/2012		66	Feb 01/2012		103	Feb 01/2012
	30	Feb 01/2012		67	Feb 01/2012		104	Feb 01/2012
	31	Feb 01/2012		68	Feb 01/2012		105	Oct 01/2010
	32	Feb 01/2012		69	Feb 01/2012		106	Oct 01/2010
	33	Feb 01/2012		70	Feb 01/2012		107	Oct 01/2010
	34	Feb 01/2012		71	Oct 01/2010		108	Feb 01/2012
	35	Feb 01/2012		72	Feb 01/2012		109	Feb 01/2012
	36	Feb 01/2012		73	Feb 01/2012		110	Oct 01/2010
	37	Feb 01/2012		74	Oct 01/2010		111	Oct 01/2010
	38	Feb 01/2012		75	Oct 01/2010		112	Feb 01/2012
	39	Feb 01/2012		76	Feb 01/2012		113	Feb 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

## 20-EFFECTIVE PAGES

Page 28  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-30-12 (continued)			20-30-12 (continued)			20-30-12 (continued)		
	114	Oct 01/2010		151	Feb 01/2012		188	Oct 01/2010
	115	Feb 01/2012		152	Oct 01/2010		189	Jun 01/2010
	116	Oct 01/2010		153	Oct 01/2010		190	Feb 01/2012
	117	Oct 01/2010		154	Jun 01/2010		191	Oct 01/2010
	118	Oct 01/2010		155	Feb 01/2012		192	Jun 01/2010
	119	Oct 01/2010		156	Oct 01/2010		193	Feb 01/2012
	120	Feb 01/2012		157	Oct 01/2010		194	Oct 01/2010
	121	Feb 01/2012		158	Feb 01/2012		195	Oct 01/2010
	122	Feb 01/2012		159	Oct 01/2010		196	Feb 01/2012
	123	Feb 01/2012		160	Oct 01/2010		197	Oct 01/2010
	124	Oct 01/2010		161	Feb 01/2012		198	Oct 01/2010
	125	Feb 01/2012		162	Oct 01/2010		199	Feb 01/2012
	126	Feb 01/2012		163	Jun 01/2010		200	Oct 01/2010
	127	Oct 01/2010		164	Feb 01/2012		201	Oct 01/2010
	128	Feb 01/2012		165	Oct 01/2010		202	Oct 01/2010
	129	Feb 01/2012		166	Jun 01/2010		203	Feb 01/2012
	130	Oct 01/2010		167	Feb 01/2012		204	Oct 01/2010
	131	Feb 01/2012		168	Feb 01/2012		205	Feb 01/2012
	132	Feb 01/2012		169	Jun 01/2010		206	Feb 01/2012
	133	Oct 01/2010		170	Feb 01/2012		207	Jun 01/2012
	134	Oct 01/2010		171	Oct 01/2010		208	Feb 01/2012
	135	Feb 01/2012		172	Jun 01/2010	R	209	Oct 01/2012
	136	Feb 01/2012		173	Feb 01/2012		210	Jun 01/2012
	137	Oct 01/2010		174	Oct 01/2010		211	Jun 01/2012
	138	Feb 01/2012		175	Oct 01/2010		212	Jun 01/2012
	139	Feb 01/2012		176	Jun 01/2010		213	Jun 01/2012
	140	Feb 01/2012		177	Feb 01/2012		214	Jun 01/2012
	141	Feb 01/2012		178	Oct 01/2010		215	Feb 01/2012
	142	Oct 01/2010		179	Oct 01/2010		216	Jun 01/2012
	143	Jun 01/2010		180	Jun 01/2010		217	Jun 01/2012
	144	Feb 01/2012		181	Feb 01/2012		218	Jun 01/2012
	145	Oct 01/2010		182	Oct 01/2010		219	Jun 01/2012
	146	Jun 01/2010		183	Oct 01/2010		220	Jun 01/2012
	147	Feb 01/2012		184	Feb 01/2012		221	Jun 01/2012
	148	Oct 01/2010		185	Oct 01/2010		222	Feb 01/2012
	149	Oct 01/2010		186	Oct 01/2010		223	Jun 01/2012
	150	Jun 01/2010		187	Feb 01/2012		224	Jun 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

## 20-EFFECTIVE PAGES

Page 29  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-30-12 (continued)			20-30-12 (continued)			20-30-12 (continued)		
	225	Jun 01/2012		262	Feb 01/2012		299	Feb 01/2012
	226	Jun 01/2012		263	Feb 01/2012		300	BLANK
	227	Jun 01/2012		264	Feb 01/2012	20-30-13 CONTENTS		
	228	Jun 01/2012		265	Feb 01/2012		1	Jun 01/2010
	229	Feb 01/2012		266	Feb 01/2012		2	BLANK
	230	Jun 01/2012		267	Feb 01/2012	20-30-13		
	231	Jun 01/2012		268	Feb 01/2012		1	Oct 01/2010
	232	Jun 01/2012		269	Feb 01/2012		2	Jun 01/2009
	233	Jun 01/2012		270	Feb 01/2012		3	Oct 01/2010
	234	Jun 01/2012		271	Feb 01/2012		4	Feb 01/2012
	235	Jun 01/2012		272	Feb 01/2012		5	Feb 01/2012
	236	Feb 01/2012		273	Feb 01/2012		6	Feb 01/2012
	237	Feb 01/2012		274	Feb 01/2012		7	Feb 01/2012
	238	Feb 01/2012		275	Feb 01/2012		8	Feb 01/2012
	239	Feb 01/2012		276	Feb 01/2012		9	Feb 01/2012
	240	Feb 01/2012		277	Feb 01/2012		10	Feb 01/2012
	241	Feb 01/2012		278	Feb 01/2012		11	Feb 01/2012
	242	Feb 01/2012		279	Feb 01/2012		12	Feb 01/2012
	243	Feb 01/2012		280	Feb 01/2012		13	Feb 01/2012
	244	Feb 01/2012		281	Feb 01/2012		14	Feb 01/2012
	245	Feb 01/2012		282	Feb 01/2012		15	Feb 01/2012
	246	Feb 01/2012		283	Feb 01/2012		16	Feb 01/2012
	247	Feb 01/2012		284	Feb 01/2012		17	Feb 01/2012
	248	Feb 01/2012		285	Feb 01/2012		18	Feb 01/2012
	249	Feb 01/2012		286	Feb 01/2012		19	Oct 01/2010
	250	Feb 01/2012		287	Feb 01/2012		20	Oct 01/2010
	251	Feb 01/2012		288	Feb 01/2012		21	Oct 01/2010
	252	Feb 01/2012		289	Feb 01/2012		22	Jun 01/2010
	253	Feb 01/2012		290	Feb 01/2012		23	Feb 01/2012
	254	Feb 01/2012		291	Feb 01/2012		24	Feb 01/2012
	255	Feb 01/2012		292	Feb 01/2012		25	Feb 01/2012
	256	Feb 01/2012		293	Feb 01/2012		26	Feb 01/2012
	257	Feb 01/2012		294	Feb 01/2012		27	Feb 01/2012
	258	Feb 01/2012		295	Feb 01/2012		28	Feb 01/2012
	259	Feb 01/2012		296	Feb 01/2012		29	Feb 01/2012
	260	Feb 01/2012		297	Feb 01/2012		30	Feb 01/2012
	261	Feb 01/2012		298	Feb 01/2012		31	Feb 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 30  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-30-13 (continued)			20-30-14 (continued)			20-30-17 (continued)		
32	Feb 01/2012		31	Jun 01/2012		2	Jul 01/2011	
33	Oct 01/2010		32	Jun 01/2012		3	Jul 01/2011	
34	Jun 01/2010		33	Jun 01/2012		4	Jul 01/2011	
20-30-14 CONTENTS			34	Jun 01/2012		5	Jul 01/2011	
1	Jun 01/2012		35	Jun 01/2012		6	BLANK	
2	BLANK		36	Jun 01/2012				
20-30-14			37	Jun 01/2012		20-30-19 CONTENTS		
1	Jun 01/2010		38	Jun 01/2012		A	1	Oct 01/2012
2	Jun 01/2010		20-30-15 CONTENTS			A	2	BLANK
3	Jun 01/2010		O	1	Oct 01/2012	20-30-19		
4	Oct 01/2010		2	BLANK		A	1	Oct 01/2012
5	Oct 01/2010		20-30-15			A	2	Oct 01/2012
6	Oct 01/2010		R	1	Oct 01/2012	A	3	Oct 01/2012
7	Oct 01/2010		R	2	Oct 01/2012	A	4	Oct 01/2012
8	Oct 01/2010		O	3	Oct 01/2012	A	5	Oct 01/2012
9	Oct 01/2010		R	4	Oct 01/2012	A	6	Oct 01/2012
10	Oct 01/2010		O	5	Oct 01/2012	A	7	Oct 01/2012
11	Oct 01/2010		O	6	Oct 01/2012	A	8	Oct 01/2012
12	Oct 01/2010		O	7	Oct 01/2012	A	9	Oct 01/2012
13	Oct 01/2010		O	8	Oct 01/2012	A	10	Oct 01/2012
14	Jul 01/2011		20-30-16 CONTENTS			A	11	Oct 01/2012
15	Jul 01/2011		1	Jun 01/2009		A	12	Oct 01/2012
16	Jul 01/2011		2	BLANK		A	13	Oct 01/2012
17	Oct 01/2010		20-30-16			A	14	Oct 01/2012
18	Jun 01/2012		1	Feb 01/2011		A	15	Oct 01/2012
19	Jun 01/2012		2	Oct 01/2010		A	16	Oct 01/2012
20	Oct 01/2010		3	Feb 01/2011		A	17	Oct 01/2012
21	Jun 01/2012		4	Feb 01/2011		A	18	Oct 01/2012
22	Jul 01/2011		5	Oct 01/2010		A	19	Oct 01/2012
23	Jul 01/2011		6	Nov 01/2008		A	20	Oct 01/2012
24	Jul 01/2011		7	Oct 01/2010		A	21	Oct 01/2012
25	Jul 01/2011		8	Oct 01/2010		A	22	Oct 01/2012
26	Jun 01/2012		20-30-17 CONTENTS			A	23	Oct 01/2012
27	Jun 01/2012		1	Jul 01/2011		A	24	Oct 01/2012
28	Jun 01/2012		2	BLANK		A	25	Oct 01/2012
29	Jun 01/2012		20-30-17			A	26	Oct 01/2012
30	Jun 01/2012		1	Jul 01/2011		A	27	Oct 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 31  
Oct 01/2012

D6-54446



**707, 727-787**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-30-19 (continued)			20-35-11			20-35-13 (continued)		
A	28	Oct 01/2012		1	Oct 01/2010		6	Oct 01/2010
A	29	Oct 01/2012		2	Feb 01/2012		7	Oct 01/2010
A	30	Oct 01/2012		3	Feb 01/2012		8	Jun 01/2010
A	31	Oct 01/2012		4	Feb 01/2012		9	Oct 01/2010
A	32	Oct 01/2012		5	Feb 01/2012		10	Oct 01/2010
A	33	Oct 01/2012		6	Nov 01/2008		11	Oct 01/2010
A	34	Oct 01/2012		7	Oct 01/2010		12	Jun 01/2010
20-30-22 CONTENTS				8	Oct 01/2010		13	Jun 01/2010
	1	Feb 01/2010		9	Oct 01/2010		14	Feb 01/2012
	2	BLANK		10	Oct 01/2010		15	Feb 01/2012
20-30-22				11	Oct 01/2010		16	BLANK
	1	Oct 01/2010		12	Oct 01/2010	20-35-14 CONTENTS		
	2	Oct 01/2010		13	Feb 01/2012		1	Feb 01/2011
	3	Feb 01/2012		14	Feb 01/2012		2	BLANK
	4	Feb 01/2012		15	Oct 01/2010	20-35-14		
	5	Feb 01/2012		16	Oct 01/2010		1	Feb 01/2011
	6	Feb 01/2012		17	Feb 01/2012		2	BLANK
	7	Feb 01/2012		18	Oct 01/2010	20-35-17 CONTENTS		
	8	Feb 01/2012		19	Oct 01/2010		1	Feb 01/2011
	9	Oct 01/2010		20	Oct 01/2010		2	BLANK
	10	Oct 01/2010		21	Feb 01/2012	20-35-17		
	11	Oct 01/2010		22	BLANK		1	Feb 01/2011
	12	Oct 01/2010	20-35-12 CONTENTS				2	Feb 01/2011
	13	Feb 01/2012		1	Jun 01/2009	20-35-18 CONTENTS		
	14	Feb 01/2012		2	BLANK		1	Feb 01/2011
	15	Feb 01/2012	20-35-12				2	BLANK
	16	Feb 01/2012		1	Oct 01/2010	20-35-18		
	17	Feb 01/2012		2	BLANK		1	Feb 01/2011
	18	Feb 01/2012	20-35-13 CONTENTS				2	Feb 01/2011
	19	Feb 01/2012		1	Jun 01/2010	20-35-19 CONTENTS		
	20	Feb 01/2012		2	BLANK		1	Feb 01/2011
	21	Feb 01/2012	20-35-13				2	BLANK
	22	BLANK		1	Oct 01/2010	20-35-19		
20-35-11 CONTENTS				2	Jun 01/2010		1	Feb 01/2011
	1	Feb 01/2010		3	Oct 01/2010		2	Feb 01/2011
	2	BLANK		4	Jun 01/2010	20-35-20 CONTENTS		
				5	Oct 01/2010		1	Feb 01/2011

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 32  
Oct 01/2012

D6-54446



**707, 727-787**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-35-20	CONTENTS (continued)		20-35-26	CONTENTS		20-40-15	CONTENTS	
	2	BLANK		1	Jun 01/2009		1	Jun 01/2009
20-35-20				2	BLANK		2	BLANK
	1	Feb 01/2012	20-35-26			20-40-15		
	2	Feb 01/2011		1	Oct 01/2010		1	Oct 01/2010
	3	Feb 01/2011		2	Nov 01/2008		2	Oct 01/2010
	4	Feb 01/2011	20-35-27	CONTENTS			3	Oct 01/2010
20-35-22	CONTENTS			1	Jun 01/2009		4	Oct 01/2010
	1	Jun 01/2009		2	BLANK		5	Oct 01/2010
	2	BLANK	20-35-27				6	Oct 01/2010
20-35-22				1	Oct 01/2010		7	Oct 01/2010
	1	Oct 01/2010		2	Jun 01/2009		8	BLANK
	2	Oct 01/2010	20-40-00	CONTENTS		20-40-16	CONTENTS	
	3	Nov 01/2008		1	Jun 01/2009		1	Jun 01/2009
	4	BLANK		2	BLANK		2	BLANK
20-35-23	CONTENTS		20-40-00			20-40-16		
	1	Jun 01/2009		1	Oct 01/2010		1	Oct 01/2010
	2	BLANK		2	Oct 01/2010		2	Oct 01/2010
20-35-23				3	Nov 01/2008		3	Oct 01/2010
	1	Nov 01/2008		4	BLANK		4	BLANK
	2	Oct 01/2010	20-40-12	CONTENTS		20-41-01	CONTENTS	
	3	Oct 01/2010		1	Oct 01/2010		1	Oct 01/2010
	4	BLANK		2	BLANK		2	BLANK
20-35-24	CONTENTS		20-40-12			20-41-01		
	1	Jun 01/2009		1	Oct 01/2010		1	Nov 01/2008
	2	BLANK		2	BLANK		2	Oct 01/2010
20-35-24			20-40-13	CONTENTS			3	Oct 01/2010
	1	Nov 01/2008		1	Oct 01/2010		4	Oct 01/2010
	2	Oct 01/2010		2	BLANK		5	Oct 01/2010
	3	Oct 01/2010	20-40-13				6	Oct 01/2010
	4	BLANK		1	Feb 01/2011		7	Oct 01/2010
20-35-25	CONTENTS			2	BLANK		8	Oct 01/2010
	1	Feb 01/2011	20-40-14	CONTENTS		20-42-01	CONTENTS	
	2	BLANK		1	Jun 01/2009		1	Feb 01/2011
20-35-25				2	BLANK		2	BLANK
	1	Feb 01/2011	20-40-14			20-42-01		
	2	BLANK		1	Nov 01/2008		1	Feb 01/2011
				2	BLANK		2	Feb 01/2011

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 33  
Oct 01/2012

D6-54446



**707, 727-787**

# **STANDARD WIRING PRACTICES MANUAL**

## **CHAPTER 20**

<b>CH-SC-SU</b>	<b>Page</b>	<b>Date</b>	<b>CH-SC-SU</b>	<b>Page</b>	<b>Date</b>	<b>CH-SC-SU</b>	<b>Page</b>	<b>Date</b>
20-42-01 (continued)			20-51-11 (continued)			20-51-11 (continued)		
3	Feb 01/2011		2	Feb 01/2011		39	Feb 01/2011	
4	Jul 01/2011		3	Feb 01/2011		40	Feb 01/2011	
5	Feb 01/2011		4	Feb 01/2011		41	Feb 01/2011	
6	Feb 01/2011		5	Feb 01/2011		42	Feb 01/2011	
20-51-00 CONTENTS			6	Feb 01/2011		43	Feb 01/2011	
1	Jun 01/2009		7	Feb 01/2011		44	Feb 01/2011	
2	BLANK		8	Feb 01/2011		45	Feb 01/2011	
20-51-00			9	Feb 01/2011		46	Feb 01/2011	
1	Oct 01/2010		10	Feb 01/2011		47	Feb 01/2011	
2	Oct 01/2010		11	Feb 01/2011		48	Feb 01/2011	
3	Oct 01/2010		12	Feb 01/2011		49	Feb 01/2011	
4	Oct 01/2010		13	Feb 01/2011		50	Feb 01/2011	
5	Oct 01/2010		14	Feb 01/2011		51	Feb 01/2011	
6	Oct 01/2010		15	Feb 01/2011		52	Feb 01/2011	
7	Oct 01/2010		16	Feb 01/2011		53	Feb 01/2011	
8	Oct 01/2010		17	Feb 01/2011		54	Feb 01/2011	
9	Oct 01/2010		18	Feb 01/2011		55	Feb 01/2011	
10	Oct 01/2010		19	Feb 01/2011		56	Feb 01/2011	
11	Oct 01/2010		20	Feb 01/2011		57	Feb 01/2011	
12	Oct 01/2010		21	Feb 01/2011		58	Feb 01/2011	
13	Feb 01/2012		22	Feb 01/2011		59	Feb 01/2011	
14	Feb 01/2012		23	Feb 01/2011		60	Feb 01/2011	
15	Oct 01/2010		24	Feb 01/2011		61	Feb 01/2011	
16	Oct 01/2010		25	Feb 01/2011		62	Feb 01/2011	
17	Oct 01/2010		26	Feb 01/2011		63	Feb 01/2011	
18	BLANK		27	Feb 01/2011		64	Feb 01/2011	
20-51-05 CONTENTS			28	Feb 01/2011		65	Feb 01/2011	
1	Jun 01/2009		29	Feb 01/2011		66	Feb 01/2011	
2	BLANK		30	Feb 01/2011		67	Feb 01/2011	
20-51-05			31	Feb 01/2011		68	Feb 01/2011	
1	Oct 01/2010		32	Feb 01/2011		69	Feb 01/2011	
2	Nov 01/2008		33	Feb 01/2011		70	Feb 01/2011	
20-51-11 CONTENTS			34	Feb 01/2011		71	Feb 01/2011	
1	Feb 01/2011		35	Feb 01/2011		72	Feb 01/2011	
2	BLANK		36	Feb 01/2011		73	Feb 01/2011	
20-51-11			37	Feb 01/2011		74	Feb 01/2011	
1	Feb 01/2011		38	Feb 01/2011		75	Feb 01/2011	

A = Added, R = Revised, D = Deleted, O = Overflow

# **20-EFFECTIVE PAGES**

Page 34  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-51-11 (continued)			20-51-15 (continued)			20-51-15 (continued)		
76	Feb 01/2011		9	Feb 01/2011		46	Feb 01/2011	
77	Feb 01/2011		10	Feb 01/2011		47	Feb 01/2011	
78	Feb 01/2011		11	Feb 01/2011		48	Feb 01/2011	
79	Feb 01/2011		12	Feb 01/2011		49	Feb 01/2011	
80	Feb 01/2011		13	Feb 01/2011		50	Feb 01/2011	
81	Feb 01/2011		14	Feb 01/2011		51	Feb 01/2011	
82	BLANK		15	Feb 01/2011		52	Feb 01/2011	
20-51-13 CONTENTS			16	Feb 01/2011		53	Feb 01/2011	
1	Feb 01/2011		17	Feb 01/2011		54	Feb 01/2011	
2	BLANK		18	Feb 01/2011		55	Feb 01/2011	
20-51-13			19	Feb 01/2011		56	Feb 01/2011	
1	Feb 01/2011		20	Feb 01/2011		57	Feb 01/2011	
2	Feb 01/2011		21	Feb 01/2011		58	Feb 01/2011	
3	Feb 01/2011		22	Feb 01/2011		59	Feb 01/2011	
4	Feb 01/2011		23	Feb 01/2011		60	Feb 01/2011	
5	Feb 01/2011		24	Feb 01/2011		61	Feb 01/2011	
6	Feb 01/2011		25	Feb 01/2011		62	Feb 01/2011	
7	Feb 01/2011		26	Feb 01/2011		63	Feb 01/2011	
8	Feb 01/2011		27	Feb 01/2011		64	Feb 01/2011	
9	Feb 01/2011		28	Feb 01/2011		65	Feb 01/2011	
10	Feb 01/2011		29	Feb 01/2011		66	Feb 01/2011	
11	Feb 01/2011		30	Feb 01/2011		67	Feb 01/2011	
12	Feb 01/2011		31	Feb 01/2011		68	Feb 01/2011	
13	Feb 01/2011		32	Feb 01/2011		69	Feb 01/2011	
14	BLANK		33	Feb 01/2011		70	Feb 01/2011	
20-51-15 CONTENTS			34	Feb 01/2011		71	Feb 01/2011	
1	Feb 01/2011		35	Feb 01/2011		72	Feb 01/2011	
2	BLANK		36	Feb 01/2011		73	Feb 01/2011	
20-51-15			37	Feb 01/2011		74	Feb 01/2011	
1	Feb 01/2011		38	Feb 01/2011		75	Feb 01/2011	
2	Feb 01/2011		39	Feb 01/2011		76	Feb 01/2011	
3	Feb 01/2011		40	Feb 01/2011		77	Feb 01/2011	
4	Feb 01/2011		41	Feb 01/2011		78	Feb 01/2011	
5	Feb 01/2011		42	Feb 01/2011		79	Feb 01/2011	
6	Jul 01/2011		43	Feb 01/2011		80	Feb 01/2011	
7	Feb 01/2011		44	Feb 01/2011		81	Feb 01/2011	
8	Feb 01/2011		45	Feb 01/2011		82	Feb 01/2011	

A = Added, R = Revised, D = Deleted, O = Overflow

## 20-EFFECTIVE PAGES

Page 35  
Oct 01/2012

D6-54446



707, 727-787

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-51-15 (continued)			20-51-17			20-51-26 (continued)		
83	Feb 01/2011		1	Feb 01/2011		12	Feb 01/2011	
84	Feb 01/2011		2	Feb 01/2011		20-51-31 CONTENTS		
85	Feb 01/2011		3	Feb 01/2011		1	Jun 01/2009	
86	Feb 01/2011		4	Feb 01/2011		2	BLANK	
87	Feb 01/2011		5	Feb 01/2011		20-51-31		
88	Feb 01/2011		6	Feb 01/2011		1	Oct 01/2010	
89	Feb 01/2011		7	Feb 01/2011		2	Oct 01/2010	
90	Feb 01/2011		8	Feb 01/2011		3	Oct 01/2010	
91	Feb 01/2011		20-51-20 CONTENTS			4	Nov 01/2008	
92	Feb 01/2011		1	Jun 01/2009		5	Nov 01/2008	
93	Feb 01/2011		2	BLANK		6	BLANK	
94	Feb 01/2011		20-51-20			20-51-32 CONTENTS		
95	Feb 01/2011		1	Oct 01/2010		1	Jun 01/2012	
96	Feb 01/2011		2	Nov 01/2008		2	BLANK	
97	Feb 01/2011		3	Nov 01/2008		20-51-32		
98	Feb 01/2011		4	BLANK		1	Jun 01/2012	
99	Feb 01/2011		20-51-21 CONTENTS			2	Jun 01/2012	
100	Feb 01/2011		1	Feb 01/2011		3	Jun 01/2012	
101	Feb 01/2011		2	BLANK		4	BLANK	
102	BLANK		20-51-21			20-51-33 CONTENTS		
20-51-16 CONTENTS			1	Feb 01/2011		1	Jun 01/2009	
1	Feb 01/2011		2	Feb 01/2011		2	BLANK	
2	BLANK		20-51-26 CONTENTS			20-51-33		
20-51-16			1	Feb 01/2011		1	Nov 01/2008	
1	Feb 01/2011		2	BLANK		2	Oct 01/2010	
2	Feb 01/2011		20-51-26			3	Nov 01/2008	
3	Feb 01/2011		1	Feb 01/2011		4	BLANK	
4	Feb 01/2011		2	Feb 01/2011		20-51-41 CONTENTS		
5	Feb 01/2011		3	Feb 01/2011		1	Jun 01/2009	
6	Feb 01/2011		4	Feb 01/2011		2	BLANK	
7	Feb 01/2011		5	Feb 01/2011		20-51-41		
8	Feb 01/2011		6	Feb 01/2011		1	Oct 01/2010	
9	Feb 01/2011		7	Feb 01/2011		2	Oct 01/2010	
10	Feb 01/2011		8	Feb 01/2011		3	Nov 01/2008	
20-51-17 CONTENTS			9	Feb 01/2011		4	BLANK	
1	Feb 01/2011		10	Feb 01/2011		20-51-42 CONTENTS		
2	BLANK		11	Feb 01/2011		1	Jun 01/2009	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 36  
Oct 01/2012

D6-54446



707, 727-787

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-51-42	CONTENTS (continued)		20-51-60	(continued)		20-53-05	(continued)	
	2	BLANK	A	3	Oct 01/2012		18	Oct 01/2011
20-51-42			A	4	Oct 01/2012		19	Oct 01/2010
	1	Nov 01/2008	A	5	Oct 01/2012		20	Oct 01/2010
	2	Oct 01/2010	A	6	Oct 01/2012		21	Oct 01/2010
	3	Oct 01/2010	A	7	Oct 01/2012		22	BLANK
	4	Oct 01/2010	A	8	Oct 01/2012	20-60-00	CONTENTS	
20-51-51	CONTENTS		A	9	Oct 01/2012		1	Jun 01/2009
	1	Oct 01/2010	A	10	BLANK		2	BLANK
	2	BLANK	20-51-90	CONTENTS		20-60-00		
20-51-51				1	Jun 01/2009		1	Jun 01/2009
	1	Oct 01/2010		2	BLANK		2	Oct 01/2010
	2	Oct 01/2010	20-51-90				3	Oct 01/2010
	3	Oct 01/2010		1	Oct 01/2010		4	Oct 01/2010
	4	Oct 01/2010		2	Oct 01/2010	O	5	Oct 01/2012
	5	Oct 01/2010		3	Oct 01/2010	R	6	Oct 01/2012
	6	BLANK		4	BLANK	O	7	Oct 01/2012
20-51-52	CONTENTS		20-53-05	CONTENTS		O	8	Oct 01/2012
	1	Nov 01/2009		1	Jun 01/2009	20-60-01	CONTENTS	
	2	BLANK		2	BLANK		1	Feb 01/2010
20-51-52			20-53-05				2	BLANK
	1	Nov 01/2009		1	Oct 01/2010	20-60-01		
	2	Nov 01/2009		2	Oct 01/2011		1	Feb 01/2010
	3	Oct 01/2010		3	Oct 01/2010	R	2	Oct 01/2012
	4	Nov 01/2009		4	Oct 01/2010		3	Jun 01/2010
	5	Nov 01/2009		5	Oct 01/2010		4	Feb 01/2010
	6	Nov 01/2009		6	Oct 01/2010		5	Oct 01/2011
	7	Nov 01/2009		7	Oct 01/2010		6	Feb 01/2010
	8	Nov 01/2009		8	Oct 01/2010		7	Feb 01/2010
	9	Nov 01/2009		9	Oct 01/2010		8	Feb 01/2010
	10	Nov 01/2009		10	Oct 01/2010	20-60-02	CONTENTS	
20-51-60	CONTENTS			11	Feb 01/2012		1	Jun 01/2009
A	1	Oct 01/2012		12	Oct 01/2010		2	BLANK
A	2	BLANK		13	Oct 01/2011	20-60-02		
20-51-60				14	Oct 01/2010		1	Oct 01/2010
A	1	Oct 01/2012		15	Oct 01/2010		2	BLANK
A	2	Oct 01/2012		16	Oct 01/2010	20-60-03	CONTENTS	
				17	Oct 01/2010		1	Nov 01/2009

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 37  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-60-03 CONTENTS (continued)			20-60-06 (continued)			20-60-09		
	2	BLANK	O	16	Oct 01/2012		1	Feb 01/2012
20-60-03			O	17	Oct 01/2012		2	Feb 01/2012
R	1	Oct 01/2012	O	18	Oct 01/2012		3	Feb 01/2012
O	2	Oct 01/2012	O	19	Oct 01/2012		4	Feb 01/2012
O	3	Oct 01/2012	O	20	Oct 01/2012		5	Oct 01/2010
	4	Feb 01/2012	O	21	Oct 01/2012		6	Feb 01/2012
	5	Nov 01/2009	O	22	Oct 01/2012		7	Feb 01/2012
	6	Feb 01/2012	20-60-07 CONTENTS				8	Feb 01/2012
	7	Feb 01/2012		1	Feb 01/2012		9	Feb 01/2012
	8	Feb 01/2012		2	BLANK		10	Feb 01/2012
	9	Oct 01/2010	20-60-07				11	Feb 01/2012
	10	Oct 01/2010		1	Jun 01/2009		12	Feb 01/2012
	11	Nov 01/2009		2	Feb 01/2012		13	Oct 01/2010
	12	Oct 01/2010		3	Feb 01/2012		14	Oct 01/2010
	13	Oct 01/2010		4	Feb 01/2012		15	Jun 01/2009
	14	Nov 01/2009		5	Feb 01/2012		16	Feb 01/2012
	15	Nov 01/2009		6	BLANK		17	Feb 01/2012
	16	Nov 01/2009	20-60-08 CONTENTS				18	Feb 01/2012
20-60-06 CONTENTS				1	Jun 01/2009		19	Oct 01/2010
O	1	Oct 01/2012		2	BLANK		20	Oct 01/2010
	2	BLANK	20-60-08				21	Oct 01/2010
20-60-06				1	Oct 01/2010		22	Oct 01/2010
	1	Feb 01/2012	O	2	Oct 01/2012		23	Oct 01/2010
	2	Feb 01/2012		3	Feb 01/2012		24	Oct 01/2010
	3	Feb 01/2012		4	Feb 01/2012		25	Jun 01/2009
	4	Feb 01/2012		5	Feb 01/2012		26	BLANK
	5	Feb 01/2012		6	Oct 01/2010	20-61-00 CONTENTS		
	6	Feb 01/2012		7	Feb 01/2012		1	Jun 01/2009
	7	Feb 01/2012		8	Oct 01/2010		2	BLANK
	8	Oct 01/2010		9	Feb 01/2012	20-61-00		
	9	Feb 01/2012		10	Feb 01/2012		1	Feb 01/2012
	10	Oct 01/2010		11	Oct 01/2010		2	Nov 01/2009
	11	Feb 01/2012		12	BLANK		3	Oct 01/2010
	12	Feb 01/2012	20-60-09 CONTENTS				4	Oct 01/2010
	13	Oct 01/2010		1	Jun 01/2009		5	Nov 01/2008
R	14	Oct 01/2012		2	BLANK		6	Nov 01/2008
R	15	Oct 01/2012					7	Oct 01/2010

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-61-00 (continued)			20-61-11 (continued)			20-61-11 (continued)		
8	Nov 01/2008		21	Oct 01/2010		58	Feb 01/2012	
20-61-02 CONTENTS			22	Oct 01/2010		59	Feb 01/2012	
1	Jun 01/2009		23	Oct 01/2010		60	Feb 01/2012	
2	BLANK		24	Jun 01/2012		61	Feb 01/2012	
20-61-02			25	Oct 01/2012		62	Feb 01/2012	
1	Feb 01/2012		26	Jun 01/2012		63	Feb 01/2012	
2	Feb 01/2012		27	Oct 01/2011		64	Feb 01/2012	
3	Feb 01/2012		28	Feb 01/2012		65	Feb 01/2012	
4	Feb 01/2012		29	Feb 01/2012		66	Feb 01/2012	
5	Jun 01/2009		30	Feb 01/2012		67	Feb 01/2012	
6	Feb 01/2012		31	Feb 01/2012		68	Feb 01/2012	
20-61-11 CONTENTS			32	Feb 01/2012		69	Oct 01/2010	
1	Feb 01/2012		33	Feb 01/2012		70	Oct 01/2010	
2	Jun 01/2012		34	Feb 01/2012		71	Oct 01/2010	
3	Jun 01/2012		35	Feb 01/2012		72	Oct 01/2010	
4	BLANK		36	Feb 01/2012		73	Oct 01/2010	
20-61-11			37	Feb 01/2012		74	Feb 01/2012	
1	Feb 01/2012		38	Feb 01/2012		75	Feb 01/2012	
2	Feb 01/2012		39	Feb 01/2012		76	Feb 01/2012	
3	Feb 01/2012		40	Feb 01/2012		77	Feb 01/2012	
4	Feb 01/2012		41	Feb 01/2012		78	Jun 01/2010	
5	Feb 01/2012		42	Feb 01/2012		79	Feb 01/2012	
6	Feb 01/2012		43	Feb 01/2012		80	Feb 01/2012	
7	Feb 01/2012		44	Feb 01/2012		81	Feb 01/2012	
8	Feb 01/2012		45	Oct 01/2010		82	Feb 01/2012	
9	Oct 01/2010		46	Oct 01/2010		83	Feb 01/2012	
10	Oct 01/2010		47	Oct 01/2010		84	Feb 01/2012	
11	Feb 01/2012		48	Oct 01/2010		85	Feb 01/2012	
12	Feb 01/2012		49	Oct 01/2010		86	Feb 01/2012	
13	Oct 01/2010		50	Feb 01/2012		87	Feb 01/2012	
14	Oct 01/2010		51	Oct 01/2010		88	Jun 01/2012	
15	Oct 01/2010		52	Feb 01/2012		89	Jun 01/2012	
16	Jul 01/2011		53	Feb 01/2012		90	Jun 01/2012	
17	Feb 01/2012		54	Feb 01/2012		91	Jun 01/2012	
18	Oct 01/2010		55	Feb 01/2012		92	Feb 01/2011	
19	Oct 01/2010		56	Feb 01/2012		93	Feb 01/2011	
20	Oct 01/2010		57	Feb 01/2010		94	Feb 01/2012	

A = Added, R = Revised, D = Deleted, O = Overflow

## 20-EFFECTIVE PAGES

Page 39  
Oct 01/2012

D6-54446



707, 727-787

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-61-11 (continued)			20-61-11 (continued)			20-61-13 CONTENTS (continued)		
	95	Feb 01/2011		132	Jun 01/2012		2	BLANK
	96	Feb 01/2011		133	Jun 01/2012	20-61-13		
	97	Feb 01/2012		134	Jun 01/2012	O	1	Oct 01/2012
	98	Feb 01/2012		135	Jun 01/2012	O	2	Oct 01/2012
	99	Feb 01/2011		136	Jun 01/2012	O	3	Oct 01/2012
	100	Feb 01/2011		137	Jun 01/2012	O	4	Oct 01/2012
	101	Feb 01/2011		138	Jun 01/2012	O	5	Oct 01/2012
	102	Feb 01/2012		139	Jun 01/2012	O	6	Oct 01/2012
	103	Feb 01/2011		140	Jun 01/2012	R	7	Oct 01/2012
	104	Feb 01/2011		141	Jun 01/2012	O	8	Oct 01/2012
	105	Feb 01/2011		142	Jun 01/2012	O	9	Oct 01/2012
	106	Jun 01/2012		143	Jun 01/2012		10	BLANK
	107	Jun 01/2012		144	Jun 01/2012	20-61-15 CONTENTS		
	108	Jun 01/2012		145	Jun 01/2012		1	Jul 01/2011
	109	Jun 01/2012		146	Jun 01/2012		2	BLANK
	110	Jun 01/2012		147	Jun 01/2012	20-61-15		
	111	Jun 01/2012		148	Jun 01/2012	O	1	Oct 01/2012
	112	Jun 01/2012		149	Jun 01/2012	O	2	Oct 01/2012
	113	Jun 01/2012		150	Jun 01/2012		3	Jul 01/2011
	114	Jun 01/2012		151	Jun 01/2012		4	Jul 01/2011
	115	Jun 01/2012		152	Jun 01/2012	O	5	Oct 01/2012
	116	Jun 01/2012		153	Jun 01/2012	O	6	Oct 01/2012
	117	Jun 01/2012		154	BLANK	R	7	Oct 01/2012
	118	Jun 01/2012	20-61-12 CONTENTS			O	8	Oct 01/2012
	119	Jun 01/2012		1	Nov 01/2009	20-61-16 CONTENTS		
	120	Jun 01/2012		2	BLANK		1	Jun 01/2012
	121	Jun 01/2012	20-61-12				2	BLANK
	122	Jun 01/2012		1	Jul 01/2011	20-61-16		
	123	Jun 01/2012		2	Jul 01/2011		1	Jun 01/2012
	124	Jun 01/2012		3	Jul 01/2011		2	Jun 01/2012
	125	Jun 01/2012		4	Jul 01/2011		3	Jun 01/2012
	126	Jun 01/2012		5	Oct 01/2010		4	Jun 01/2012
	127	Jun 01/2012		6	Jul 01/2011		5	Jun 01/2012
	128	Jun 01/2012		7	Jul 01/2011		6	Jun 01/2012
	129	Jun 01/2012		8	BLANK		7	Jun 01/2012
	130	Jun 01/2012	20-61-13 CONTENTS				8	Jun 01/2012
	131	Jun 01/2012		1	Jul 01/2011		9	Jun 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 40  
Oct 01/2012

D6-54446



707, 727-787

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-61-16 (continued)			20-61-19 CONTENTS			20-61-19 (continued)		
10	Jun 01/2012		1	Jun 01/2010		35	Oct 01/2010	
11	Jun 01/2012		2	Jun 01/2010		36	Feb 01/2012	
12	Jun 01/2012		20-61-19			37	Feb 01/2012	
13	Jun 01/2012		1	Feb 01/2012		38	Feb 01/2012	
14	Jun 01/2012		2	Feb 01/2012		39	Feb 01/2012	
15	Jun 01/2012		3	Feb 01/2012		40	Feb 01/2012	
16	Jun 01/2012		4	Feb 01/2012		41	Feb 01/2012	
17	Jun 01/2012		5	Feb 01/2012		42	Oct 01/2011	
18	Jun 01/2012		6	Feb 01/2012		43	Oct 01/2011	
19	Jun 01/2012		7	Feb 01/2012		44	Oct 01/2010	
20	Jun 01/2012		8	Feb 01/2012		45	Feb 01/2012	
21	Jun 01/2012		9	Oct 01/2010		46	Feb 01/2012	
22	Jun 01/2012		10	Feb 01/2012		47	Feb 01/2012	
20-61-17 CONTENTS			11	Feb 01/2012		48	Feb 01/2012	
1	Nov 01/2009		12	Oct 01/2010		49	Feb 01/2012	
2	BLANK		13	Feb 01/2012		50	Feb 01/2012	
20-61-17			14	Feb 01/2012		51	Oct 01/2010	
1	Oct 01/2010		15	Feb 01/2012		52	Feb 01/2012	
2	BLANK		16	Feb 01/2012		53	Feb 01/2012	
20-61-18 CONTENTS			17	Feb 01/2012		54	Jun 01/2010	
1	Jun 01/2009		18	Feb 01/2012		55	Jun 01/2010	
2	BLANK		19	Feb 01/2012		56	Feb 01/2012	
20-61-18			20	Feb 01/2012		57	Feb 01/2012	
O 1	Oct 01/2012		21	Feb 01/2012		58	Feb 01/2012	
O 2	Oct 01/2012		22	Feb 01/2012		59	Feb 01/2012	
O 3	Oct 01/2012		23	Feb 01/2012		60	Feb 01/2012	
4	Oct 01/2010		24	Feb 01/2012		61	Feb 01/2012	
O 5	Oct 01/2012		25	Feb 01/2012		62	Jul 01/2011	
O 6	Oct 01/2012		26	Oct 01/2010		63	Oct 01/2010	
O 7	Oct 01/2012		27	Oct 01/2010		64	Feb 01/2012	
8	Oct 01/2010		28	Oct 01/2010		65	Feb 01/2012	
9	Oct 01/2010		29	Feb 01/2012		66	Feb 01/2012	
O 10	Oct 01/2012		30	Feb 01/2012		67	Feb 01/2012	
11	Oct 01/2010		31	Feb 01/2012		68	Feb 01/2012	
O 12	Oct 01/2012		32	Feb 01/2012		69	Feb 01/2012	
R 13	Oct 01/2012		33	Oct 01/2011		70	Feb 01/2012	
R 14	Oct 01/2012		34	Feb 01/2012		71	Feb 01/2012	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 41  
Oct 01/2012

D6-54446



**707, 727-787**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-61-19 (continued)			20-61-26			20-61-30 (continued)		
72	BLANK		1	Jul 01/2011		2	Nov 01/2009	
20-61-20 CONTENTS			2	Jul 01/2011		3	Jul 01/2011	
1	Nov 01/2009		3	Jul 01/2011		4	Feb 01/2010	
2	BLANK		4	Jul 01/2011		5	Oct 01/2010	
20-61-20			5	Jul 01/2011		6	Feb 01/2010	
1	Oct 01/2010		6	Jul 01/2011		7	Feb 01/2010	
2	Feb 01/2011		20-61-28 CONTENTS			8	Oct 01/2010	
3	Feb 01/2011		1	Jun 01/2009		9	Feb 01/2010	
4	Oct 01/2010		2	BLANK		10	Jul 01/2011	
5	Oct 01/2010		20-61-28			11	Feb 01/2010	
6	Jul 01/2011		1	Oct 01/2010		12	Feb 01/2010	
7	Jul 01/2011		2	Jul 01/2011		20-62-12 CONTENTS		
8	Nov 01/2009		3	Jul 01/2011		1	Jun 01/2010	
9	Jul 01/2011		4	Jul 01/2011		2	BLANK	
10	Nov 01/2009		5	Oct 01/2010		20-62-12		
20-61-23 CONTENTS			6	Jul 01/2011		1	Oct 01/2011	
1	Nov 01/2009		7	Jul 01/2011		2	Jul 01/2011	
2	BLANK		8	Jul 01/2011		3	Jul 01/2011	
20-61-23			9	Oct 01/2010		4	Oct 01/2011	
1	Jul 01/2011		10	Jul 01/2011		5	Oct 01/2010	
2	Nov 01/2009		11	Oct 01/2010		6	Oct 01/2010	
3	Jul 01/2011		12	Oct 01/2010		7	Oct 01/2010	
4	BLANK		13	Oct 01/2010		8	Oct 01/2010	
20-61-24 CONTENTS			14	Jul 01/2011		9	Oct 01/2010	
1	Jun 01/2009		15	Jul 01/2011		10	Jul 01/2011	
2	BLANK		16	BLANK		11	Oct 01/2010	
20-61-24			20-61-29 CONTENTS			12	Jul 01/2011	
1	Jul 01/2011		1	Nov 01/2009		13	Oct 01/2010	
2	Jul 01/2011		2	BLANK		14	BLANK	
3	Jul 01/2011		20-61-29			20-62-13 CONTENTS		
4	Jul 01/2011		1	Oct 01/2010		1	Nov 01/2009	
5	Nov 01/2008		2	BLANK		2	Jun 01/2009	
6	BLANK		20-61-30 CONTENTS			20-62-13		
20-61-26 CONTENTS			1	Feb 01/2010		1	Jul 01/2011	
1	Jun 01/2009		2	BLANK		2	Jul 01/2011	
2	BLANK		20-61-30			3	Jul 01/2011	
			1	Oct 01/2010		4	Nov 01/2008	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 42  
Oct 01/2012

D6-54446

**STANDARD WIRING PRACTICES MANUAL**
**CHAPTER 20**

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-62-13 (continued)			20-62-14 (continued)			20-62-14 (continued)		
	5	Nov 01/2008		10	Jul 01/2011		47	Nov 01/2009
	6	Oct 01/2010		11	Oct 01/2011		48	Jul 01/2011
	7	Oct 01/2011		12	Oct 01/2010		49	Oct 01/2011
	8	Oct 01/2010		13	Oct 01/2010		50	Nov 01/2009
	9	Oct 01/2010		14	Jul 01/2011		51	Nov 01/2009
	10	Oct 01/2010		15	Oct 01/2010		52	Nov 01/2009
	11	Jul 01/2011		16	Oct 01/2011		53	Nov 01/2009
	12	Jul 01/2011		17	Oct 01/2011		54	Jul 01/2011
	13	Oct 01/2010		18	Jul 01/2011		55	Jul 01/2011
	14	Oct 01/2010		19	Oct 01/2010		56	Jul 01/2011
	15	Nov 01/2008		20	Jul 01/2011		57	Oct 01/2011
	16	Oct 01/2010		21	Nov 01/2009		58	BLANK
	17	Jul 01/2011		22	Jul 01/2011	20-62-15 CONTENTS		
	18	Jul 01/2011		23	Oct 01/2010		1	Jun 01/2009
	19	Oct 01/2010		24	Oct 01/2011		2	BLANK
	20	Oct 01/2010		25	Oct 01/2011	20-62-15		
	21	Oct 01/2010		26	Oct 01/2010		1	Jul 01/2011
	22	Jun 01/2009		27	Jul 01/2011		2	Jul 01/2011
	23	Oct 01/2010		28	Oct 01/2010		3	Jul 01/2011
	24	Oct 01/2011		29	Jul 01/2011		4	Jul 01/2011
	25	Jul 01/2011		30	Oct 01/2010		5	Jul 01/2011
	26	Jul 01/2011		31	Oct 01/2010		6	Jul 01/2011
	27	Jul 01/2011		32	Oct 01/2010		7	Jul 01/2011
	28	Jul 01/2011		33	Jul 01/2011		8	Jul 01/2011
20-62-14 CONTENTS				34	Oct 01/2010		9	Jul 01/2011
	1	Nov 01/2009		35	Oct 01/2011		10	Jul 01/2011
	2	Nov 01/2009		36	Oct 01/2011		11	Jul 01/2011
20-62-14				37	Oct 01/2011		12	Jun 01/2009
	1	Jul 01/2011		38	Oct 01/2011		13	Jun 01/2009
	2	Jul 01/2011		39	Nov 01/2009		14	Jul 01/2011
	3	Jul 01/2011		40	Jul 01/2011		15	Jul 01/2011
	4	Jul 01/2011		41	Nov 01/2009		16	Jun 01/2009
	5	Jul 01/2011		42	Nov 01/2009		17	Jul 01/2011
	6	Jul 01/2011		43	Nov 01/2009		18	Jul 01/2011
	7	Jul 01/2011		44	Jul 01/2011		19	Jul 01/2011
	8	Nov 01/2009		45	Nov 01/2009		20	Jul 01/2011
	9	Jul 01/2011		46	Nov 01/2009		21	Jul 01/2011

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES



**707, 727-787**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-62-15 (continued)			20-62-17 (continued)			20-62-22 (continued)		
22	Jul 01/2011		5	Jul 01/2011		2	Oct 01/2010	
23	Jul 01/2011		6	Feb 01/2010		3	Jul 01/2011	
24	Oct 01/2010		20-62-18 CONTENTS			4	Jul 01/2011	
20-62-16 CONTENTS			1	Jun 01/2009		5	Oct 01/2010	
1	Jun 01/2009		2	BLANK		6	Oct 01/2010	
2	Jun 01/2009		20-62-18			7	Jul 01/2011	
20-62-16			1	Jul 01/2011		8	Jul 01/2011	
1	Jul 01/2011		2	Oct 01/2010		9	Jul 01/2011	
2	Jul 01/2011		3	Oct 01/2010		10	Jul 01/2011	
3	Oct 01/2010		4	Jul 01/2011		11	Jul 01/2011	
4	Jul 01/2011		5	Oct 01/2010		12	Jul 01/2011	
5	Nov 01/2008		6	BLANK		13	Jul 01/2011	
6	Jul 01/2011		20-62-19 CONTENTS			14	BLANK	
7	Jul 01/2011		1	Jun 01/2009		20-62-23 CONTENTS		
8	Oct 01/2010		2	BLANK		1	Oct 01/2010	
9	Jul 01/2011		20-62-19			2	BLANK	
10	Nov 01/2008		1	Jun 01/2012		20-62-23		
11	Jul 01/2011		2	Jun 01/2012		1	Jul 01/2011	
12	Jul 01/2011		20-62-20 CONTENTS			2	Jul 01/2011	
13	Jul 01/2011		1	Jun 01/2009		3	Oct 01/2010	
14	Jul 01/2011		2	BLANK		4	Jul 01/2011	
15	Oct 01/2010		20-62-20			5	Oct 01/2010	
16	Jul 01/2011		1	Jul 01/2011		6	Oct 01/2010	
17	Oct 01/2010		2	Oct 01/2010		7	Jul 01/2011	
18	Jul 01/2011		20-62-21 CONTENTS			8	Oct 01/2010	
19	Jul 01/2011		1	Jun 01/2009		9	Jul 01/2011	
20	Jul 01/2011		2	BLANK		10	Jul 01/2011	
21	Jul 01/2011		20-62-21			11	Oct 01/2010	
22	Jul 01/2011		1	Jul 01/2011		12	Jul 01/2011	
20-62-17 CONTENTS			2	Oct 01/2010		13	Oct 01/2010	
1	Feb 01/2010		3	Oct 01/2010		14	Oct 01/2010	
2	BLANK		4	Nov 01/2008		15	Oct 01/2010	
20-62-17			20-62-22 CONTENTS			16	Oct 01/2010	
1	Jul 01/2011		1	Feb 01/2010		17	Oct 01/2010	
2	Jun 01/2012		2	BLANK		18	Jul 01/2011	
3	Jul 01/2011		20-62-22			20-62-24 CONTENTS		
4	Oct 01/2010		1	Jul 01/2011		1	Nov 01/2009	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 44  
Oct 01/2012

D6-54446

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



707, 727-787

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-62-24	CONTENTS (continued)		20-62-26 (continued)			20-63-01		
	2	BLANK		4	Jul 01/2011		1	Jul 01/2011
20-62-24				5	Nov 01/2008		2	Jul 01/2011
	1	Jul 01/2011		6	BLANK		3	Jul 01/2011
	2	Jul 01/2011	20-62-28	CONTENTS			4	Jul 01/2011
	3	Jul 01/2011		1	Oct 01/2010		5	Jul 01/2011
	4	Jul 01/2011		2	BLANK		6	BLANK
	5	Jul 01/2011	20-62-28			20-63-02	CONTENTS	
	6	Jul 01/2011		1	Jul 01/2011		1	Oct 01/2010
	7	Jul 01/2011		2	Jul 01/2011		2	BLANK
	8	Oct 01/2010		3	Oct 01/2010	20-63-02		
	9	Nov 01/2009		4	Jul 01/2011		1	Jul 01/2011
	10	Jul 01/2011		5	Oct 01/2010		2	Oct 01/2010
	11	Jul 01/2011		6	BLANK		3	Jul 01/2011
	12	Nov 01/2009	20-62-29	CONTENTS			4	Jul 01/2011
	13	Jul 01/2011		1	Jul 01/2011		5	Jul 01/2011
	14	Oct 01/2011		2	BLANK		6	Jul 01/2011
	15	Nov 01/2009	20-62-29				7	Oct 01/2010
	16	Nov 01/2009		1	Jul 01/2011		8	Jul 01/2011
	17	Jul 01/2011		2	Jul 01/2011		9	Oct 01/2010
	18	Nov 01/2009		3	Jul 01/2011		10	Oct 01/2010
	19	Nov 01/2009		4	Jul 01/2011		11	Oct 01/2010
	20	BLANK		5	Jul 01/2011		12	Nov 01/2009
20-62-25	CONTENTS			6	Jul 01/2011		13	Nov 01/2009
	1	Jun 01/2009		7	Nov 01/2009		14	Jul 01/2011
	2	BLANK		8	Nov 01/2009		15	Oct 01/2010
20-62-25				9	Jul 01/2011		16	Jul 01/2011
	1	Jul 01/2011		10	Nov 01/2009		17	Oct 01/2010
	2	Jul 01/2011	20-63-00	CONTENTS			18	Oct 01/2010
	3	Oct 01/2010		1	Jun 01/2009	20-63-03	CONTENTS	
	4	Jul 01/2011		2	BLANK		1	Oct 01/2010
20-62-26	CONTENTS		20-63-00				2	BLANK
	1	Jun 01/2009		1	Nov 01/2008	20-63-03		
	2	BLANK		2	Nov 01/2008		1	Jul 01/2011
20-62-26			20-63-01	CONTENTS			2	Oct 01/2010
	1	Jul 01/2011		1	Jun 01/2009		3	Oct 01/2010
	2	Oct 01/2010		2	BLANK		4	Jul 01/2011
	3	Jul 01/2011					5	Jul 01/2011

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 45  
Oct 01/2012

D6-54446



707, 727-787

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-63-03 (continued)			20-63-13 (continued)			20-63-18 (continued)		
6	Oct 01/2010		23	Jun 01/2010		2	BLANK	
7	Jul 01/2011		24	Jul 01/2011		20-63-19 CONTENTS		
8	Jul 01/2011		25	Jul 01/2011		1	Jul 01/2011	
9	Jul 01/2011		26	Jul 01/2011		2	BLANK	
10	Oct 01/2010		27	Jul 01/2011		20-63-19		
11	Jul 01/2011		28	Jun 01/2010		1	Feb 01/2012	
12	Jul 01/2011		29	Jun 01/2010		2	Feb 01/2012	
13	Oct 01/2010		30	Feb 01/2012		3	Oct 01/2011	
14	Jul 01/2011		31	Feb 01/2012		4	Feb 01/2012	
15	Oct 01/2010		32	Feb 01/2012		5	Feb 01/2012	
16	BLANK		33	Jun 01/2010		6	Feb 01/2012	
20-63-13 CONTENTS			34	Jul 01/2011		7	Feb 01/2012	
1	Jun 01/2010		35	Feb 01/2012		8	Feb 01/2012	
2	Jun 01/2010		36	Feb 01/2012		9	Feb 01/2012	
20-63-13			37	Feb 01/2012		10	Feb 01/2012	
1	Jul 01/2011		38	BLANK		11	Feb 01/2011	
2	Jul 01/2011		20-63-14 CONTENTS			12	Feb 01/2011	
3	Jul 01/2011		1	Oct 01/2010		13	Feb 01/2011	
4	Jul 01/2011		2	BLANK		14	Feb 01/2011	
5	Oct 01/2010		20-63-14			15	Jun 01/2012	
6	Oct 01/2010		1	Jun 01/2012		16	Feb 01/2011	
7	Oct 01/2010		2	Oct 01/2010		17	Feb 01/2011	
8	Jul 01/2011		3	Jun 01/2012		18	Feb 01/2011	
9	Jul 01/2011		4	Jun 01/2012		19	Feb 01/2011	
10	Jul 01/2011		5	Jun 01/2012		20	Feb 01/2011	
11	Jul 01/2011		6	Jun 01/2012		21	Feb 01/2012	
12	Oct 01/2010		7	Jun 01/2012		22	Feb 01/2012	
13	Oct 01/2010		8	Jun 01/2012		23	Feb 01/2012	
14	Oct 01/2010		9	Oct 01/2011		24	Feb 01/2012	
15	Oct 01/2010		10	Jun 01/2012		25	Feb 01/2012	
16	Feb 01/2012		11	Jun 01/2012		26	Feb 01/2012	
17	Feb 01/2012		12	Jun 01/2012		27	Feb 01/2012	
18	Jul 01/2011		20-63-18 CONTENTS			28	Feb 01/2012	
19	Oct 01/2010		1	Nov 01/2009		29	Feb 01/2012	
20	Oct 01/2010		2	BLANK		30	Feb 01/2012	
21	Feb 01/2010		20-63-18			31	Feb 01/2012	
22	Feb 01/2010		1	Oct 01/2010		32	Feb 01/2012	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 46  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-63-19 (continued)			20-63-20 (continued)			20-63-22 CONTENTS (continued)		
33	Feb 01/2012		O 6	Oct 01/2012		2	BLANK	
34	Feb 01/2012		O 7	Oct 01/2012		20-63-22		
35	Feb 01/2012		8	Nov 01/2009		1	Oct 01/2010	
36	Oct 01/2011		9	Nov 01/2009		2	Oct 01/2010	
37	Feb 01/2012		10	Nov 01/2009		3	Oct 01/2010	
38	Feb 01/2012		O 11	Oct 01/2012		4	Nov 01/2009	
39	Feb 01/2012		12	Oct 01/2010		5	Nov 01/2009	
40	Feb 01/2011		13	Jun 01/2010		6	Oct 01/2010	
41	Feb 01/2011		14	Jun 01/2010		7	Oct 01/2010	
42	Feb 01/2011		15	Jun 01/2010		8	Oct 01/2010	
43	Feb 01/2011		16	Oct 01/2010		9	Nov 01/2009	
44	Feb 01/2011		17	Oct 01/2010		10	BLANK	
45	Feb 01/2011		18	Oct 01/2010		20-64-11 CONTENTS		
46	Feb 01/2011		19	Oct 01/2010		1	Nov 01/2009	
47	Feb 01/2011		20	BLANK		2	BLANK	
48	Jul 01/2011		20-63-21 CONTENTS			20-64-11		
49	Feb 01/2011		1	Nov 01/2009		O 1	Oct 01/2012	
50	Feb 01/2011		2	BLANK		O 2	Oct 01/2012	
51	Jul 01/2011		20-63-21			O 3	Oct 01/2012	
52	Jul 01/2011		O 1	Oct 01/2012		4	BLANK	
53	Jul 01/2011		O 2	Oct 01/2012		20-64-12 CONTENTS		
54	Jul 01/2011		O 3	Oct 01/2012		1	Jun 01/2009	
55	Feb 01/2012		O 4	Oct 01/2012		2	BLANK	
56	Feb 01/2012		5	Feb 01/2012		20-64-12		
57	Jul 01/2011		6	Jun 01/2012		O 1	Oct 01/2012	
58	Oct 01/2011		7	Jun 01/2012		2	Oct 01/2010	
59	Feb 01/2012		O 8	Oct 01/2012		3	Oct 01/2010	
60	Feb 01/2012		O 9	Oct 01/2012		O 4	Oct 01/2012	
20-63-20 CONTENTS			O 10	Oct 01/2012		O 5	Oct 01/2012	
1	Jun 01/2010		O 11	Oct 01/2012		6	Oct 01/2010	
2	BLANK		O 12	Oct 01/2012		7	Oct 01/2010	
20-63-20			O 13	Oct 01/2012		O 8	Oct 01/2012	
O 1	Oct 01/2012		O 14	Oct 01/2012		9	Oct 01/2010	
O 2	Oct 01/2012		O 15	Oct 01/2012		10	Nov 01/2008	
O 3	Oct 01/2012		16	BLANK		20-64-13 CONTENTS		
4	Oct 01/2010		20-63-22 CONTENTS			1	Jun 01/2009	
O 5	Oct 01/2012		1	Nov 01/2009		2	BLANK	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 47  
Oct 01/2012

D6-54446



707, 727-787

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-64-13			20-64-16 (continued)			20-71-11 (continued)		
O	1	Oct 01/2012	O	10	Oct 01/2012		7	Feb 01/2012
	2	BLANK		11	Feb 01/2012		8	Feb 01/2012
20-64-14 CONTENTS				12	Feb 01/2012		9	Feb 01/2012
	1	Jun 01/2009	20-64-17 CONTENTS				10	Feb 01/2012
	2	BLANK		1	Jun 01/2009		11	Feb 01/2012
20-64-14				2	BLANK		12	Feb 01/2012
O	1	Oct 01/2012	20-64-17				13	Feb 01/2012
O	2	Oct 01/2012	O	1	Oct 01/2012		14	Feb 01/2012
	3	Oct 01/2010	O	2	Oct 01/2012		15	Oct 01/2010
O	4	Oct 01/2012	O	3	Oct 01/2012		16	Oct 01/2010
	5	Oct 01/2010	O	4	Oct 01/2012		17	Oct 01/2010
O	6	Oct 01/2012	O	5	Oct 01/2012		18	Feb 01/2012
	7	Oct 01/2010	O	6	Oct 01/2012		19	Feb 01/2012
	8	Oct 01/2010	O	7	Oct 01/2010		20	Feb 01/2012
20-64-15 CONTENTS			O	8	Oct 01/2012		21	Feb 01/2012
	1	Nov 01/2009	20-64-18 CONTENTS				22	Feb 01/2012
	2	BLANK		1	Jun 01/2009		23	Feb 01/2012
20-64-15				2	BLANK		24	Feb 01/2012
O	1	Oct 01/2012	20-64-18				25	Feb 01/2012
	2	Jun 01/2012		1	Jul 01/2011		26	Feb 01/2012
	3	Oct 01/2010		2	Jul 01/2011		27	Feb 01/2012
O	4	Oct 01/2012		3	Jul 01/2011		28	Feb 01/2012
	5	Oct 01/2010		4	Jul 01/2011		29	Feb 01/2012
	6	BLANK		5	Jul 01/2011		30	Feb 01/2012
20-64-16 CONTENTS				6	Nov 01/2008		31	Feb 01/2012
	1	Feb 01/2012		7	Nov 01/2008		32	Feb 01/2012
	2	BLANK		8	BLANK		33	Feb 01/2012
20-64-16			20-71-11 CONTENTS				34	Feb 01/2012
O	1	Oct 01/2012		1	Jun 01/2010		35	Oct 01/2010
	2	Feb 01/2012		2	Jun 01/2009		36	Feb 01/2012
	3	Jun 01/2012	20-71-11				37	Feb 01/2012
	4	Feb 01/2012		1	Feb 01/2012		38	Feb 01/2012
	5	Feb 01/2012		2	Feb 01/2012		39	Feb 01/2012
O	6	Oct 01/2012		3	Feb 01/2012		40	Feb 01/2012
	7	Feb 01/2012		4	Feb 01/2012		41	Feb 01/2012
	8	Jun 01/2012		5	Feb 01/2012		42	Feb 01/2012
	9	Feb 01/2012		6	Feb 01/2012		43	Feb 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 48  
Oct 01/2012

D6-54446



**707, 727-787**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-71-11 (continued)			20-71-11 (continued)			20-71-11 (continued)		
	44	Feb 01/2012		81	Jun 01/2009		118	Oct 01/2010
	45	Oct 01/2010		82	Jun 01/2009		119	Oct 01/2010
	46	Oct 01/2010		83	Jun 01/2009		120	Oct 01/2010
	47	Oct 01/2010		84	Jun 01/2009		121	Oct 01/2010
	48	Oct 01/2010		85	Jun 01/2009		122	Oct 01/2010
	49	Oct 01/2010		86	Jun 01/2009		123	Oct 01/2010
	50	Oct 01/2010		87	Nov 01/2009		124	Oct 01/2010
	51	Oct 01/2010		88	Oct 01/2010		125	Nov 01/2009
	52	Oct 01/2010		89	Oct 01/2010		126	Nov 01/2009
	53	Feb 01/2012		90	Oct 01/2010		127	Oct 01/2010
	54	Feb 01/2012		91	Oct 01/2010		128	Oct 01/2010
	55	Feb 01/2012		92	Oct 01/2010		129	Oct 01/2010
	56	Oct 01/2010		93	Oct 01/2010		130	Oct 01/2010
	57	Feb 01/2012		94	Oct 01/2010		131	Oct 01/2010
	58	Feb 01/2012		95	Oct 01/2010		132	Oct 01/2010
	59	Feb 01/2012		96	Nov 01/2009		133	Oct 01/2010
	60	Feb 01/2012		97	Oct 01/2010		134	Oct 01/2011
	61	Feb 01/2012		98	Oct 01/2010		135	Oct 01/2011
	62	Feb 01/2012		99	Oct 01/2010		136	Oct 01/2011
	63	Feb 01/2012		100	Oct 01/2010		137	Oct 01/2011
	64	Feb 01/2012		101	Oct 01/2010		138	Oct 01/2011
	65	Feb 01/2012		102	Oct 01/2010		139	Oct 01/2011
	66	Feb 01/2012		103	Oct 01/2010		140	BLANK
	67	Oct 01/2010		104	Oct 01/2011	20-71-12 CONTENTS		
	68	Oct 01/2011		105	Oct 01/2010		1	Feb 01/2011
	69	Feb 01/2012		106	Oct 01/2010		2	BLANK
	70	Feb 01/2012		107	Oct 01/2010	20-71-12		
	71	Feb 01/2012		108	Oct 01/2010		1	Feb 01/2011
	72	Feb 01/2012		109	Oct 01/2010		2	Feb 01/2011
	73	Feb 01/2012		110	Oct 01/2010		3	Feb 01/2011
	74	Oct 01/2010		111	Oct 01/2010		4	Feb 01/2011
	75	Oct 01/2010		112	Oct 01/2010		5	Feb 01/2011
	76	Jun 01/2009		113	Oct 01/2010		6	Feb 01/2011
	77	Jun 01/2009		114	Oct 01/2010		7	Feb 01/2011
	78	Jun 01/2009		115	Oct 01/2010		8	Feb 01/2011
	79	Jun 01/2009		116	Oct 01/2010		9	Feb 01/2011
	80	Oct 01/2010		117	Oct 01/2010		10	Feb 01/2011

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 49  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-71-12 (continued)			20-71-14 (continued)			20-71-14 (continued)		
	11	Feb 01/2011		8	Feb 01/2012		45	Feb 01/2012
	12	Feb 01/2011		9	Feb 01/2012		46	Feb 01/2012
	13	Feb 01/2011		10	Feb 01/2012		47	Feb 01/2012
	14	Feb 01/2011		11	Feb 01/2012		48	Feb 01/2012
	15	Feb 01/2011	R	12	Oct 01/2012		49	Feb 01/2012
	16	Feb 01/2011		13	Feb 01/2012		50	Feb 01/2012
	17	Feb 01/2011		14	Feb 01/2012	R	51	Oct 01/2012
	18	Feb 01/2011		15	Feb 01/2012	O	52	Oct 01/2012
	19	Feb 01/2011		16	Feb 01/2012	O	53	Oct 01/2012
	20	Feb 01/2011		17	Feb 01/2012	O	54	Oct 01/2012
	21	Feb 01/2011		18	Feb 01/2012	O	55	Oct 01/2012
	22	Feb 01/2011		19	Feb 01/2012	O	56	Oct 01/2012
	23	Feb 01/2011		20	Feb 01/2012	O	57	Oct 01/2012
	24	Feb 01/2011		21	Feb 01/2012	R	58	Oct 01/2012
	25	Feb 01/2011		22	Feb 01/2012	R	59	Oct 01/2012
	26	BLANK		23	Feb 01/2012	R	60	Oct 01/2012
20-71-13 CONTENTS				24	Feb 01/2012	O	61	Oct 01/2012
	1	Nov 01/2009		25	Feb 01/2012	O	62	Oct 01/2012
	2	BLANK		26	Feb 01/2012	R	63	Oct 01/2012
20-71-13				27	Feb 01/2012	R	64	Oct 01/2012
	1	Oct 01/2010		28	Feb 01/2012	O	65	Oct 01/2012
	2	Nov 01/2009		29	Feb 01/2012	O	66	Oct 01/2012
	3	Nov 01/2009		30	Feb 01/2012	O	67	Oct 01/2012
	4	Nov 01/2009		31	Feb 01/2012	O	68	Oct 01/2012
20-71-14 CONTENTS				32	Feb 01/2012	O	69	Oct 01/2012
O	1	Oct 01/2012		33	Feb 01/2012		70	Oct 01/2010
	2	Oct 01/2010		34	Feb 01/2012	O	71	Oct 01/2012
	3	Oct 01/2011		35	Feb 01/2012	O	72	Oct 01/2012
	4	Jul 01/2011		36	Feb 01/2012	O	73	Oct 01/2012
20-71-14				37	Feb 01/2012	R	74	Oct 01/2012
	1	Oct 01/2010		38	Feb 01/2012	O	75	Oct 01/2012
	2	Oct 01/2010		39	Feb 01/2012	O	76	Oct 01/2012
	3	Oct 01/2010		40	Feb 01/2012	O	77	Oct 01/2012
	4	Feb 01/2011		41	Feb 01/2012		78	Oct 01/2010
	5	Feb 01/2012		42	Feb 01/2012		79	Oct 01/2010
	6	Oct 01/2010		43	Feb 01/2012		80	Oct 01/2010
	7	Feb 01/2012		44	Feb 01/2012		81	Oct 01/2010

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 50  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-71-14 (continued)			20-71-14 (continued)			20-71-14 (continued)		
	82	Oct 01/2010	R	119	Oct 01/2012	O	156	Oct 01/2012
	83	Oct 01/2010	O	120	Oct 01/2012		157	Jul 01/2011
	84	Oct 01/2010	R	121	Oct 01/2012		158	Jul 01/2011
	85	Oct 01/2010		122	Oct 01/2011	R	159	Oct 01/2012
	86	Oct 01/2010	O	123	Oct 01/2012	R	160	Oct 01/2012
	87	Oct 01/2010	R	124	Oct 01/2012	R	161	Oct 01/2012
	88	Oct 01/2010	R	125	Oct 01/2012	O	162	Oct 01/2012
	89	Oct 01/2010	O	126	Oct 01/2012	R	163	Oct 01/2012
	90	Oct 01/2010	R	127	Oct 01/2012		164	Jul 01/2011
	91	Oct 01/2010		128	Oct 01/2010		165	Jul 01/2011
	92	Oct 01/2010		129	Oct 01/2010		166	Jul 01/2011
	93	Oct 01/2010		130	Oct 01/2010	R	167	Oct 01/2012
	94	Oct 01/2010	O	131	Oct 01/2012	O	168	Oct 01/2012
	95	Jun 01/2010	R	132	Oct 01/2012	R	169	Oct 01/2012
	96	Jun 01/2010	R	133	Oct 01/2012		170	Jul 01/2011
O	97	Oct 01/2012		134	Oct 01/2010	R	171	Oct 01/2012
R	98	Oct 01/2012		135	Oct 01/2010	R	172	Oct 01/2012
	99	Oct 01/2010	R	136	Oct 01/2012	R	173	Oct 01/2012
R	100	Oct 01/2012		137	Oct 01/2010		174	Jul 01/2011
R	101	Oct 01/2012		138	Oct 01/2010	R	175	Oct 01/2012
R	102	Oct 01/2012		139	Oct 01/2010		176	Jul 01/2011
	103	Oct 01/2010		140	Oct 01/2010		177	Jul 01/2011
	104	Oct 01/2010		141	Oct 01/2010		178	Jul 01/2011
O	105	Oct 01/2012	O	142	Oct 01/2012	R	179	Oct 01/2012
R	106	Oct 01/2012	R	143	Oct 01/2012		180	Jul 01/2011
R	107	Oct 01/2012		144	Oct 01/2010		181	Jul 01/2011
	108	Oct 01/2010	R	145	Oct 01/2012		182	Jul 01/2011
O	109	Oct 01/2012		146	Oct 01/2010	O	183	Oct 01/2012
O	110	Oct 01/2012	R	147	Oct 01/2012	R	184	Oct 01/2012
O	111	Oct 01/2012		148	Oct 01/2010		185	Jul 01/2011
O	112	Oct 01/2012		149	Oct 01/2010	R	186	Oct 01/2012
R	113	Oct 01/2012		150	Jul 01/2011	R	187	Oct 01/2012
R	114	Oct 01/2012		151	Jul 01/2011	R	188	Oct 01/2012
R	115	Oct 01/2012	O	152	Oct 01/2012	O	189	Oct 01/2012
O	116	Oct 01/2012	O	153	Oct 01/2012	R	190	Oct 01/2012
O	117	Oct 01/2012	R	154	Oct 01/2012	R	191	Oct 01/2012
O	118	Oct 01/2012		155	Jul 01/2011	O	192	Oct 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 51  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-71-14 (continued)			20-71-14 (continued)			20-71-15 (continued)		
R	193	Oct 01/2012		230	BLANK		33	Feb 01/2012
R	194	Oct 01/2012	20-71-15 CONTENTS				34	Feb 01/2012
R	195	Oct 01/2012		1	Feb 01/2012		35	Feb 01/2012
	196	Oct 01/2011		2	BLANK		36	Feb 01/2012
R	197	Oct 01/2012	20-71-15				37	Feb 01/2012
	198	Oct 01/2011		1	Feb 01/2012		38	Feb 01/2012
	199	Oct 01/2011		2	Oct 01/2010		39	Feb 01/2012
	200	Oct 01/2011		3	Oct 01/2010		40	Feb 01/2012
R	201	Oct 01/2012		4	Feb 01/2012		41	Feb 01/2012
	202	Oct 01/2011		5	Oct 01/2010		42	Feb 01/2012
R	203	Oct 01/2012		6	Oct 01/2010		43	Feb 01/2012
	204	Jul 01/2011		7	Feb 01/2012		44	Feb 01/2012
R	205	Oct 01/2012		8	Feb 01/2012		45	Feb 01/2012
O	206	Oct 01/2012		9	Feb 01/2012		46	Feb 01/2012
R	207	Oct 01/2012		10	Feb 01/2012		47	Feb 01/2012
	208	Oct 01/2011		11	Feb 01/2012		48	BLANK
O	209	Oct 01/2012		12	Feb 01/2012	20-71-16 CONTENTS		
R	210	Oct 01/2012		13	Jun 01/2012		1	Feb 01/2011
R	211	Oct 01/2012		14	Jun 01/2012		2	BLANK
R	212	Oct 01/2012		15	Jun 01/2012	20-71-16		
O	213	Oct 01/2012		16	Feb 01/2012		1	Feb 01/2011
O	214	Oct 01/2012		17	Jun 01/2012		2	Feb 01/2011
O	215	Oct 01/2012		18	Feb 01/2012		3	Feb 01/2011
O	216	Oct 01/2012		19	Jun 01/2012		4	Feb 01/2011
O	217	Oct 01/2012		20	Feb 01/2012		5	Feb 01/2011
O	218	Oct 01/2012		21	Feb 01/2012		6	Feb 01/2011
	219	Oct 01/2011		22	Feb 01/2012		7	Feb 01/2011
	220	Oct 01/2011		23	Feb 01/2012		8	Feb 01/2011
O	221	Oct 01/2012		24	Feb 01/2012		9	Feb 01/2011
R	222	Oct 01/2012		25	Feb 01/2012		10	Feb 01/2011
R	223	Oct 01/2012		26	Feb 01/2012		11	Feb 01/2011
O	224	Oct 01/2012		27	Feb 01/2012		12	Feb 01/2011
O	225	Oct 01/2012		28	Feb 01/2012		13	Feb 01/2011
O	226	Oct 01/2012		29	Feb 01/2012		14	Feb 01/2011
O	227	Oct 01/2012		30	Feb 01/2012		15	Feb 01/2011
O	228	Oct 01/2012		31	Feb 01/2012		16	Feb 01/2011
O	229	Oct 01/2012		32	Feb 01/2012		17	Feb 01/2011

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 52  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-71-16 (continued)			20-72-08 CONTENTS			20-72-10 CONTENTS (continued)		
18	Feb 01/2011		1	Jun 01/2009		2	BLANK	
19	Feb 01/2011		2	BLANK		20-72-10		
20	Feb 01/2011		20-72-08			1	Oct 01/2010	
21	Feb 01/2011		1	Nov 01/2008		2	Feb 01/2012	
22	Feb 01/2011		2	Oct 01/2010		3	Feb 01/2012	
23	Feb 01/2011		3	Oct 01/2010		4	Feb 01/2012	
24	Feb 01/2011		4	Oct 01/2010		5	Feb 01/2012	
25	Feb 01/2011		5	Oct 01/2010		6	Feb 01/2012	
26	Feb 01/2011		6	Oct 01/2010		7	Feb 01/2012	
27	Feb 01/2011		7	Oct 01/2010		8	Feb 01/2012	
28	Feb 01/2011		8	Jun 01/2009		9	Feb 01/2012	
29	Feb 01/2011		9	Oct 01/2010		10	Feb 01/2012	
30	Feb 01/2011		10	Oct 01/2010		11	Feb 01/2012	
31	Feb 01/2011		11	Oct 01/2010		12	Feb 01/2012	
32	Feb 01/2011		12	Oct 01/2010		13	Feb 01/2012	
33	Feb 01/2011		13	Oct 01/2010		14	Feb 01/2012	
34	Feb 01/2011		14	Oct 01/2010		15	Jun 01/2012	
20-72-07 CONTENTS			15	Oct 01/2010		16	Feb 01/2012	
1	Jun 01/2009		16	Oct 01/2010		17	Feb 01/2012	
2	BLANK		17	Oct 01/2010		18	Feb 01/2012	
20-72-07			18	Oct 01/2010		19	Feb 01/2012	
1	Oct 01/2010		19	Oct 01/2010		20	Feb 01/2012	
2	Oct 01/2010		20	Oct 01/2010		21	Feb 01/2012	
3	Oct 01/2010		21	Oct 01/2010		22	Feb 01/2012	
4	Oct 01/2010		22	Oct 01/2010		23	Feb 01/2012	
5	Jun 01/2009		23	Oct 01/2010		24	Feb 01/2012	
6	Oct 01/2010		24	Oct 01/2010		25	Feb 01/2012	
7	Nov 01/2008		25	Oct 01/2010		26	Feb 01/2012	
8	Oct 01/2010		26	Oct 01/2010		27	Feb 01/2012	
9	Oct 01/2010		27	Oct 01/2010		28	Feb 01/2012	
10	Oct 01/2010		28	Oct 01/2010		29	Feb 01/2012	
11	Oct 01/2010		29	Oct 01/2010		30	Feb 01/2012	
12	Oct 01/2010		30	Nov 01/2008		31	Feb 01/2012	
13	Oct 01/2010		31	Nov 01/2008		32	Feb 01/2012	
14	Oct 01/2010		32	BLANK		33	Feb 01/2012	
15	Oct 01/2010		20-72-10 CONTENTS			34	Feb 01/2012	
16	Oct 01/2010		1	Feb 01/2012		35	Feb 01/2012	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 53  
Oct 01/2012

D6-54446

**STANDARD WIRING PRACTICES MANUAL**
**CHAPTER 20**

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-72-10 (continued)			20-72-12 CONTENTS			20-72-13 CONTENTS		
	36	Feb 01/2012		1	Oct 01/2011		1	Jul 01/2011
	37	Feb 01/2012		2	BLANK		2	BLANK
	38	Feb 01/2012	20-72-12			20-72-13		
	39	Feb 01/2012		1	Oct 01/2010		1	Oct 01/2010
	40	Feb 01/2012		2	Oct 01/2011	R	2	Oct 01/2012
	41	Feb 01/2012		3	Oct 01/2011	O	3	Oct 01/2012
	42	Feb 01/2012		4	Oct 01/2011	R	4	Oct 01/2012
	43	Feb 01/2012		5	Feb 01/2012		5	Feb 01/2012
	44	Feb 01/2012		6	Oct 01/2011		6	Nov 01/2009
	45	Feb 01/2012		7	Oct 01/2011		7	Feb 01/2012
	46	Feb 01/2012		8	Oct 01/2011		8	Jun 01/2012
	47	Feb 01/2012		9	Oct 01/2011		9	Jul 01/2011
	48	BLANK		10	Oct 01/2011		10	Jul 01/2011
20-72-11 CONTENTS				11	Oct 01/2011		11	Jul 01/2011
	1	Jun 01/2009		12	Oct 01/2011		12	Jul 01/2011
	2	BLANK		13	Oct 01/2011		13	Jul 01/2011
20-72-11				14	Oct 01/2011		14	Jul 01/2011
	1	Oct 01/2010		15	Oct 01/2011		15	Jul 01/2011
	2	Jun 01/2009		16	Oct 01/2011		16	Jul 01/2011
	3	Jun 01/2009		17	Oct 01/2011		17	Jul 01/2011
	4	Jun 01/2009		18	Oct 01/2011		18	Jul 01/2011
	5	Jun 01/2009		19	Oct 01/2011		19	Jul 01/2011
	6	Jun 01/2009		20	Oct 01/2011		20	Jul 01/2011
	7	Jun 01/2009		21	Oct 01/2011		21	Jul 01/2011
	8	Oct 01/2010		22	Oct 01/2011		22	Jul 01/2011
	9	Nov 01/2009		23	Oct 01/2011		23	Jul 01/2011
	10	Jul 01/2011		24	Oct 01/2011		24	Jul 01/2011
	11	Oct 01/2010		25	Oct 01/2011		25	Jul 01/2011
	12	Oct 01/2010		26	Oct 01/2011		26	Jul 01/2011
	13	Oct 01/2010		27	Oct 01/2011	20-72-16 CONTENTS		
	14	Oct 01/2010		28	Oct 01/2011		1	Nov 01/2009
	15	Oct 01/2010		29	Oct 01/2011		2	BLANK
	16	Jun 01/2010		30	Oct 01/2011	20-72-16		
	17	Jun 01/2010		31	Oct 01/2011		1	Nov 01/2009
	18	Oct 01/2010		32	Oct 01/2011		2	Feb 01/2010
	19	Jun 01/2010		33	Oct 01/2011		3	Jul 01/2011
	20	BLANK		34	BLANK		4	Oct 01/2010

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES



**707, 727-787**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-72-16 (continued)			20-72-17 (continued)			20-72-18 (continued)		
5	Oct 01/2010		32	Nov 01/2008		19	Oct 01/2010	
6	BLANK		33	Nov 01/2008		20	Jun 01/2009	
20-72-17 CONTENTS			34	Nov 01/2008		21	Jun 01/2009	
1	Jun 01/2009		35	Nov 01/2008		22	Jun 01/2010	
2	BLANK		36	Nov 01/2008		23	Jun 01/2009	
20-72-17			37	Oct 01/2010		24	Jun 01/2009	
1	Oct 01/2010		38	Oct 01/2010		25	Jun 01/2009	
2	Oct 01/2010		39	Oct 01/2010		26	Oct 01/2010	
3	Oct 01/2010		40	Oct 01/2010		27	Oct 01/2010	
4	Nov 01/2008		41	Oct 01/2010		28	Oct 01/2010	
5	Jun 01/2009		42	Oct 01/2010		29	Oct 01/2010	
6	Oct 01/2010		43	Oct 01/2010		30	Oct 01/2010	
7	Oct 01/2010		44	Oct 01/2010		31	Oct 01/2010	
8	Oct 01/2010		45	Oct 01/2010		32	BLANK	
9	Jun 01/2009		46	Oct 01/2010		20-72-19 CONTENTS		
10	Oct 01/2010		20-72-18 CONTENTS			1	Jun 01/2009	
11	Oct 01/2010		1	Jun 01/2009		2	BLANK	
12	Oct 01/2010		2	Oct 01/2010		20-72-19		
13	Oct 01/2010		20-72-18			1	Oct 01/2010	
14	Oct 01/2010		1	Nov 01/2008		2	Oct 01/2010	
15	Oct 01/2010		2	Nov 01/2008		3	Oct 01/2010	
16	Oct 01/2010		3	Nov 01/2008		4	Jun 01/2009	
17	Oct 01/2010		4	Nov 01/2008		5	Nov 01/2009	
18	Oct 01/2010		5	Nov 01/2008		6	Oct 01/2010	
19	Oct 01/2010		6	Nov 01/2008		7	Oct 01/2010	
20	Oct 01/2010		7	Nov 01/2008		8	BLANK	
21	Oct 01/2010		8	Nov 01/2008		20-72-21 CONTENTS		
22	Oct 01/2010		9	Oct 01/2010		1	Nov 01/2009	
23	Oct 01/2010		10	Oct 01/2010		2	BLANK	
24	Oct 01/2010		11	Oct 01/2010		20-72-21		
25	Oct 01/2010		12	Oct 01/2010		1	Oct 01/2010	
26	Oct 01/2010		13	Oct 01/2010		2	Oct 01/2010	
27	Oct 01/2010		14	Oct 01/2010		3	Oct 01/2010	
28	Nov 01/2008		15	Oct 01/2010		4	Oct 01/2010	
29	Oct 01/2010		16	Jun 01/2009		5	Oct 01/2010	
30	Oct 01/2010		17	Oct 01/2010		6	Oct 01/2010	
31	Nov 01/2008		18	Oct 01/2010		7	Oct 01/2010	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 55  
Oct 01/2012

D6-54446



**707, 727-787**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-72-21 (continued)			20-72-22 (continued)			20-72-23 (continued)		
8	Oct 01/2010		33	Oct 01/2010		20	Nov 01/2009	
20-72-22 CONTENTS			34	Oct 01/2010		21	Oct 01/2010	
1	Nov 01/2009		35	Oct 01/2010		22	Oct 01/2010	
2	BLANK		36	Nov 01/2009		23	Oct 01/2010	
20-72-22			37	Oct 01/2010		24	Oct 01/2010	
1	Jun 01/2009		38	Oct 01/2010		25	Oct 01/2010	
2	Jun 01/2009		39	Nov 01/2009		26	Oct 01/2010	
3	Jun 01/2009		40	Oct 01/2010		27	Oct 01/2010	
4	Jun 01/2009		41	Oct 01/2010		28	Oct 01/2010	
5	Oct 01/2010		42	Oct 01/2010		29	Oct 01/2010	
6	Oct 01/2010		43	Oct 01/2010		30	Oct 01/2010	
7	Oct 01/2010		44	Oct 01/2010		31	Oct 01/2010	
8	Oct 01/2010		45	Oct 01/2010		32	Oct 01/2010	
9	Oct 01/2010		46	Oct 01/2010		33	Oct 01/2010	
10	Oct 01/2010		20-72-23 CONTENTS			34	Oct 01/2010	
11	Oct 01/2010		1	Jun 01/2009		35	Oct 01/2010	
12	Jun 01/2009		2	BLANK		36	Oct 01/2010	
13	Oct 01/2010		20-72-23			37	Oct 01/2010	
14	Oct 01/2010		1	Oct 01/2010		38	Jun 01/2009	
15	Oct 01/2010		2	Oct 01/2010		39	Oct 01/2010	
16	Nov 01/2009		3	Oct 01/2010		40	Oct 01/2010	
17	Oct 01/2010		4	Oct 01/2010		41	Oct 01/2010	
18	Oct 01/2010		5	Oct 01/2010		42	Oct 01/2010	
19	Nov 01/2009		6	Oct 01/2010		20-72-24 CONTENTS		
20	Oct 01/2010		7	Nov 01/2009		1	Nov 01/2009	
21	Oct 01/2010		8	Feb 01/2010		2	BLANK	
22	Nov 01/2009		9	Oct 01/2010		20-72-24		
23	Nov 01/2009		10	Oct 01/2010		1	Oct 01/2010	
24	Oct 01/2010		11	Oct 01/2010		2	Oct 01/2010	
25	Oct 01/2010		12	Oct 01/2010		3	Oct 01/2010	
26	Oct 01/2010		13	Oct 01/2010		4	Oct 01/2010	
27	Nov 01/2009		14	Jul 01/2011		5	Oct 01/2010	
28	Nov 01/2009		15	Oct 01/2010		6	Nov 01/2009	
29	Nov 01/2009		16	Oct 01/2010		7	Oct 01/2010	
30	Nov 01/2009		17	Oct 01/2010		8	Oct 01/2010	
31	Nov 01/2009		18	Oct 01/2010		9	Oct 01/2010	
32	Oct 01/2010		19	Oct 01/2010		10	Nov 01/2009	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 56  
Oct 01/2012

D6-54446



707, 727-787

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-72-24 (continued)			20-72-26 CONTENTS			20-73-01 (continued)		
11	Nov 01/2009		1	Nov 01/2009		3	Oct 01/2010	
12	Oct 01/2010		2	BLANK		O 4	Oct 01/2012	
13	Nov 01/2009		20-72-26			O 5	Oct 01/2012	
14	Oct 01/2010		1	Oct 01/2010		O 6	Oct 01/2012	
15	Oct 01/2010		2	Oct 01/2010		O 7	Oct 01/2012	
16	Jul 01/2011		3	Oct 01/2010		O 8	Oct 01/2012	
17	Jul 01/2011		4	Oct 01/2010		O 9	Oct 01/2012	
18	Oct 01/2010		5	Oct 01/2010		10	BLANK	
19	Oct 01/2010		6	Oct 01/2010		20-74-02 CONTENTS		
20	Oct 01/2010		7	Oct 01/2010		1	Feb 01/2012	
21	Oct 01/2010		8	Nov 01/2009		2	Jul 01/2011	
22	Nov 01/2009		9	Nov 01/2009		20-74-02		
23	Nov 01/2009		10	Nov 01/2009		1	Oct 01/2010	
24	BLANK		11	Oct 01/2010		2	Oct 01/2010	
20-72-25 CONTENTS			12	Oct 01/2010		3	Oct 01/2010	
1	Nov 01/2009		13	Jul 01/2011		4	Oct 01/2010	
2	BLANK		14	Oct 01/2010		5	Oct 01/2010	
20-72-25			15	Oct 01/2010		6	Feb 01/2012	
1	Oct 01/2010		16	Oct 01/2010		7	Feb 01/2012	
2	Oct 01/2010		17	Feb 01/2008		8	Feb 01/2012	
3	Oct 01/2010		18	BLANK		9	Feb 01/2012	
4	Oct 01/2010		20-73-00 CONTENTS			10	Oct 01/2010	
5	Oct 01/2010		1	Jun 01/2009		11	Feb 01/2012	
6	Oct 01/2010		2	BLANK		12	Feb 01/2012	
7	Oct 01/2010		20-73-00			13	Feb 01/2012	
8	Nov 01/2009		O 1	Oct 01/2012		14	Feb 01/2012	
9	Oct 01/2010		2	Oct 01/2010		15	Feb 01/2012	
10	Nov 01/2008		3	Oct 01/2010		16	Feb 01/2012	
11	Oct 01/2010		O 4	Oct 01/2012		17	Feb 01/2012	
12	Oct 01/2010		5	Nov 01/2008		18	Feb 01/2012	
13	Jul 01/2011		6	BLANK		19	Feb 01/2012	
14	Jul 01/2011		20-73-01 CONTENTS			20	Feb 01/2012	
15	Oct 01/2010		1	Jun 01/2009		21	Feb 01/2012	
16	Nov 01/2008		2	BLANK		22	Feb 01/2012	
17	Nov 01/2008		20-73-01			23	Feb 01/2012	
18	BLANK		O 1	Oct 01/2012		24	Feb 01/2012	
			2	Oct 01/2010		25	Feb 01/2012	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 57  
Oct 01/2012

D6-54446



**707, 727-787**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-74-02 (continued)			20-74-02 (continued)			20-74-04 (continued)		
	26	Feb 01/2012		63	Oct 01/2010		10	Jun 01/2012
	27	Oct 01/2010		64	Oct 01/2010		11	Jun 01/2012
	28	Feb 01/2012		65	Oct 01/2010		12	Jun 01/2012
	29	Feb 01/2012		66	Oct 01/2010		13	Jun 01/2012
	30	Feb 01/2012		67	Oct 01/2010		14	Jun 01/2012
	31	Feb 01/2012		68	Feb 01/2012		15	Jun 01/2012
	32	Feb 01/2012		69	Oct 01/2010		16	Jun 01/2012
	33	Feb 01/2012		70	Oct 01/2010		17	Oct 01/2010
	34	Feb 01/2012		71	Jul 01/2011		18	Oct 01/2010
	35	Feb 01/2012		72	Oct 01/2011		19	Jun 01/2010
	36	Feb 01/2012		73	Jul 01/2011		20	Nov 01/2009
	37	Oct 01/2010		74	Feb 01/2012		21	Oct 01/2010
	38	Oct 01/2010		75	Jul 01/2011		22	Oct 01/2010
	39	Oct 01/2010		76	Feb 01/2012		23	Oct 01/2010
	40	Oct 01/2010		77	Feb 01/2012		24	Oct 01/2010
	41	Oct 01/2010		78	Oct 01/2011		25	Jun 01/2012
	42	Oct 01/2010		79	Feb 01/2012		26	Jun 01/2012
	43	Feb 01/2012		80	Feb 01/2012	20-74-11 CONTENTS		
	44	Feb 01/2012		81	Feb 01/2012		1	Feb 01/2012
	45	Feb 01/2012		82	Jul 01/2011		2	Feb 01/2012
	46	Oct 01/2010		83	Feb 01/2012	20-74-11		
	47	Feb 01/2012		84	Feb 01/2012		1	Feb 01/2011
	48	Oct 01/2010		85	Feb 01/2012		2	Jun 01/2012
	49	Feb 01/2012		86	BLANK		3	Feb 01/2012
	50	Feb 01/2012	20-74-04 CONTENTS				4	Feb 01/2011
	51	Feb 01/2012		1	Oct 01/2010		5	Feb 01/2011
	52	Oct 01/2010		2	BLANK		6	Feb 01/2011
	53	Feb 01/2012	20-74-04				7	Feb 01/2011
	54	Feb 01/2012		1	Oct 01/2010		8	Feb 01/2011
	55	Feb 01/2012		2	Oct 01/2010		9	Feb 01/2012
	56	Oct 01/2010		3	Jun 01/2009		10	Feb 01/2012
	57	Oct 01/2010		4	Nov 01/2009		11	Feb 01/2012
	58	Feb 01/2012		5	Oct 01/2010		12	Feb 01/2012
	59	Feb 01/2012		6	Feb 01/2010	R	13	Oct 01/2012
	60	Oct 01/2010		7	Nov 01/2009	R	14	Oct 01/2012
	61	Oct 01/2010		8	Nov 01/2009	R	15	Oct 01/2012
	62	Feb 01/2012		9	Nov 01/2009	R	16	Oct 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 58  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-74-11 (continued)			20-74-11 (continued)			20-74-12 (continued)		
R	17	Oct 01/2012	R	54	Oct 01/2012		29	Nov 01/2009
	18	Feb 01/2011	O	55	Oct 01/2012		30	Nov 01/2009
O	19	Oct 01/2012	O	56	Oct 01/2012		31	Nov 01/2009
	20	Feb 01/2011	20-74-12 CONTENTS				32	Nov 01/2009
R	21	Oct 01/2012		1	Nov 01/2009		33	Feb 01/2012
R	22	Oct 01/2012		2	Oct 01/2010		34	Nov 01/2009
O	23	Oct 01/2012		3	Oct 01/2010		35	Nov 01/2009
R	24	Oct 01/2012		4	BLANK		36	Nov 01/2009
R	25	Oct 01/2012	20-74-12				37	Feb 01/2012
R	26	Oct 01/2012		1	Feb 01/2012		38	Nov 01/2009
R	27	Oct 01/2012		2	Feb 01/2012		39	Jun 01/2010
R	28	Oct 01/2012		3	Oct 01/2010		40	Feb 01/2012
O	29	Oct 01/2012		4	Oct 01/2010		41	Feb 01/2012
R	30	Oct 01/2012		5	Oct 01/2010		42	Nov 01/2009
R	31	Oct 01/2012		6	Feb 01/2012		43	Nov 01/2009
O	32	Oct 01/2012		7	Feb 01/2012		44	Nov 01/2009
R	33	Oct 01/2012		8	Feb 01/2012		45	Nov 01/2009
R	34	Oct 01/2012		9	Feb 01/2012		46	Feb 01/2012
	35	Feb 01/2012		10	Feb 01/2012		47	Nov 01/2009
	36	Feb 01/2012		11	Oct 01/2010		48	Nov 01/2009
	37	Feb 01/2012		12	Oct 01/2010		49	Oct 01/2010
	38	Feb 01/2012		13	Feb 01/2012		50	Oct 01/2010
O	39	Oct 01/2012		14	Feb 01/2012		51	Feb 01/2012
R	40	Oct 01/2012		15	Oct 01/2010		52	Oct 01/2010
O	41	Oct 01/2012		16	Feb 01/2012		53	Oct 01/2010
	42	Feb 01/2012		17	Feb 01/2012		54	Feb 01/2012
R	43	Oct 01/2012		18	Feb 01/2012		55	Oct 01/2010
R	44	Oct 01/2012		19	Feb 01/2012		56	Oct 01/2010
R	45	Oct 01/2012		20	Nov 01/2009		57	Jun 01/2010
	46	Feb 01/2012		21	Feb 01/2012		58	Feb 01/2012
	47	Feb 01/2012		22	Feb 01/2012		59	Oct 01/2010
	48	Feb 01/2012		23	Oct 01/2010		60	Feb 01/2012
R	49	Oct 01/2012		24	Feb 01/2012		61	Oct 01/2010
O	50	Oct 01/2012		25	Feb 01/2012		62	Oct 01/2010
R	51	Oct 01/2012		26	Nov 01/2009		63	Oct 01/2010
O	52	Oct 01/2012		27	Nov 01/2009		64	Oct 01/2010
R	53	Oct 01/2012		28	Nov 01/2009		65	Feb 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 59  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-74-12 (continued)			20-74-13 (continued)			20-74-13 (continued)		
	66	Feb 01/2012		19	Feb 01/2012		56	Oct 01/2010
	67	Feb 01/2012		20	Oct 01/2010		57	Feb 01/2012
	68	Feb 01/2012		21	Feb 01/2012		58	Oct 01/2010
	69	Feb 01/2012		22	Feb 01/2012		59	Feb 01/2012
	70	Oct 01/2010		23	Oct 01/2010		60	Feb 01/2012
	71	Feb 01/2012		24	Feb 01/2012		61	Feb 01/2012
	72	Oct 01/2010		25	Feb 01/2012		62	Feb 01/2012
	73	Oct 01/2010		26	Feb 01/2012		63	Feb 01/2012
	74	Feb 01/2012		27	Feb 01/2012		64	Feb 01/2012
	75	Oct 01/2010		28	Oct 01/2010		65	Feb 01/2012
	76	Feb 01/2012		29	Oct 01/2010		66	Feb 01/2012
	77	Feb 01/2012		30	Oct 01/2010		67	Feb 01/2012
	78	Feb 01/2012		31	Feb 01/2012		68	Feb 01/2012
20-74-13 CONTENTS				32	Jun 01/2010		69	Feb 01/2012
	1	Feb 01/2012		33	Oct 01/2010		70	Feb 01/2012
	2	Feb 01/2012		34	Oct 01/2010		71	Feb 01/2012
	3	Feb 01/2012		35	Feb 01/2012		72	Feb 01/2012
	4	BLANK		36	Oct 01/2010		73	Feb 01/2012
20-74-13				37	Oct 01/2010		74	Feb 01/2012
	1	Feb 01/2012		38	Feb 01/2012		75	Feb 01/2012
	2	Feb 01/2012		39	Oct 01/2010		76	Feb 01/2012
	3	Feb 01/2012		40	Oct 01/2010		77	Feb 01/2012
	4	Oct 01/2010		41	Oct 01/2010		78	Feb 01/2012
	5	Feb 01/2012		42	Feb 01/2012		79	Feb 01/2012
	6	Feb 01/2012		43	Oct 01/2010		80	Feb 01/2012
	7	Feb 01/2012		44	Feb 01/2012		81	Feb 01/2012
	8	Feb 01/2012		45	Feb 01/2012		82	Feb 01/2012
	9	Feb 01/2012		46	Oct 01/2010		83	Feb 01/2012
	10	Feb 01/2012		47	Oct 01/2010		84	Feb 01/2012
	11	Feb 01/2012		48	Oct 01/2010	20-74-14 CONTENTS		
	12	Feb 01/2012		49	Feb 01/2012		1	Jun 01/2010
	13	Feb 01/2012		50	Oct 01/2010		2	Oct 01/2010
	14	Feb 01/2012		51	Feb 01/2012	20-74-14		
	15	Feb 01/2012		52	Oct 01/2010		1	Jun 01/2012
	16	Feb 01/2012		53	Oct 01/2010		2	Jun 01/2012
	17	Oct 01/2010		54	Feb 01/2012		3	Oct 01/2010
	18	Feb 01/2012		55	Feb 01/2012		4	Oct 01/2010

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 60  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-74-14 (continued)			20-74-14 (continued)			20-74-16 (continued)		
	5	Jun 01/2012		42	Oct 01/2010		19	Jun 01/2012
	6	Jun 01/2012		43	Oct 01/2010		20	Jun 01/2012
	7	Jun 01/2012		44	Oct 01/2010		21	Oct 01/2011
	8	Jun 01/2010		45	Oct 01/2010		22	Oct 01/2011
	9	Jun 01/2012		46	Oct 01/2010		23	Oct 01/2011
	10	Oct 01/2010		47	Jun 01/2012		24	Jun 01/2012
	11	Oct 01/2010		48	Jun 01/2012		25	Jun 01/2012
	12	Jun 01/2012		49	Oct 01/2010		26	Oct 01/2011
	13	Jun 01/2012		50	Jun 01/2012		27	Jun 01/2012
	14	Jun 01/2012		51	Oct 01/2010		28	Jun 01/2012
	15	Oct 01/2010		52	Oct 01/2010		29	Oct 01/2011
	16	Oct 01/2010		53	Oct 01/2010		30	Oct 01/2011
	17	Oct 01/2010		54	Oct 01/2010		31	Oct 01/2011
	18	Oct 01/2010		55	Jun 01/2012		32	Oct 01/2011
	19	Oct 01/2010		56	Jun 01/2012		33	Jun 01/2012
	20	Jun 01/2012	20-74-16 CONTENTS				34	Oct 01/2011
	21	Oct 01/2010		1	Feb 01/2012		35	Oct 01/2011
	22	Oct 01/2010		2	BLANK		36	Oct 01/2011
	23	Jun 01/2012	20-74-16				37	Jun 01/2012
	24	Oct 01/2010		1	Jun 01/2012		38	Jun 01/2012
	25	Oct 01/2010		2	Oct 01/2010		39	Feb 01/2012
	26	Oct 01/2010		3	Oct 01/2010		40	Oct 01/2011
	27	Jun 01/2012		4	Oct 01/2010		41	Jun 01/2012
	28	Jun 01/2010		5	Oct 01/2010		42	Jun 01/2012
	29	Jun 01/2010		6	Jun 01/2012		43	Jun 01/2012
	30	Jun 01/2012		7	Jun 01/2012		44	Jun 01/2012
	31	Oct 01/2010		8	Jun 01/2012	20-74-18 CONTENTS		
	32	Jun 01/2012		9	Oct 01/2011		1	Jun 01/2009
	33	Oct 01/2010		10	Jun 01/2012		2	BLANK
	34	Oct 01/2010		11	Jun 01/2012	20-74-18		
	35	Jun 01/2012		12	Jun 01/2012		1	Jun 01/2012
	36	Oct 01/2010		13	Oct 01/2011		2	Jun 01/2012
	37	Jun 01/2012		14	Jun 01/2012		3	Jun 01/2012
	38	Feb 01/2012		15	Oct 01/2011		4	Jun 01/2012
	39	Feb 01/2012		16	Jun 01/2012		5	Jun 01/2009
	40	Oct 01/2010		17	Oct 01/2011		6	Jun 01/2012
	41	Oct 01/2010		18	Jun 01/2012		7	Jun 01/2009

A = Added, R = Revised, D = Deleted, O = Overflow

## 20-EFFECTIVE PAGES

Page 61  
Oct 01/2012

D6-54446



**707, 727-787**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-74-18 (continued)			20-81-11 CONTENTS (continued)			20-81-13 (continued)		
8	Jun 01/2012		2	BLANK		2	Jun 01/2012	
9	Jun 01/2009		20-81-11			3	Jun 01/2012	
10	Nov 01/2009		1	Jun 01/2012		4	BLANK	
11	Oct 01/2010		2	Jun 01/2012		20-81-14 CONTENTS		
12	Nov 01/2009		3	Jun 01/2012		1	Jun 01/2009	
13	Jun 01/2009		4	Jun 01/2012		2	BLANK	
14	Jun 01/2012		5	Oct 01/2010		20-81-14		
20-74-19 CONTENTS			6	Jun 01/2012		1	Jun 01/2012	
1	Oct 01/2010		7	Jun 01/2012		2	Jun 01/2012	
2	BLANK		8	BLANK		3	Jun 01/2012	
20-74-19			20-81-12 CONTENTS			4	Jun 01/2012	
1	Jun 01/2012		O 1	Oct 01/2012		20-81-16 CONTENTS		
2	Jun 01/2012		2	BLANK		O 1	Oct 01/2012	
3	Jun 01/2009		20-81-12			2	BLANK	
4	Jun 01/2012		R 1	Oct 01/2012		20-81-16		
5	Nov 01/2009		R 2	Oct 01/2012		R 1	Oct 01/2012	
6	Nov 01/2009		O 3	Oct 01/2012		R 2	Oct 01/2012	
7	Jun 01/2012		O 4	Oct 01/2012		R 3	Oct 01/2012	
8	Jun 01/2009		O 5	Oct 01/2012		R 4	Oct 01/2012	
9	Jun 01/2012		R 6	Oct 01/2012		R 5	Oct 01/2012	
10	Jun 01/2009		O 7	Oct 01/2012		R 6	Oct 01/2012	
11	Jun 01/2012		O 8	Oct 01/2012		R 7	Oct 01/2012	
12	Jun 01/2009		O 9	Oct 01/2012		R 8	Oct 01/2012	
13	Jun 01/2012		O 10	Oct 01/2012		R 9	Oct 01/2012	
14	Jun 01/2012		O 11	Oct 01/2012		R 10	Oct 01/2012	
15	Jun 01/2009		O 12	Oct 01/2012		R 11	Oct 01/2012	
16	Jun 01/2009		O 13	Oct 01/2012		R 12	Oct 01/2012	
17	Nov 01/2009		R 14	Oct 01/2012		A 13	Oct 01/2012	
18	Jun 01/2012		R 15	Oct 01/2012		A 14	Oct 01/2012	
19	Oct 01/2010		O 16	Oct 01/2012		A 15	Oct 01/2012	
20	Oct 01/2010		O 17	Oct 01/2012		A 16	Oct 01/2012	
21	Jun 01/2012		O 18	Oct 01/2012		20-81-17 CONTENTS		
22	Oct 01/2010		20-81-13 CONTENTS			1	Nov 01/2009	
23	Jun 01/2012		1	Nov 01/2009		2	BLANK	
24	BLANK		2	BLANK		20-81-17		
20-81-11 CONTENTS			20-81-13			1	Jun 01/2012	
1	Nov 01/2009		1	Jun 01/2012		2	Jun 01/2012	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 62  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-81-17 (continued)			20-81-22 (continued)			20-82-13		
3	Jun 01/2012		R 4	Oct 01/2012		1	Jun 01/2012	
4	Jun 01/2012		A 5	Oct 01/2012		2	Jun 01/2012	
20-81-18 CONTENTS			A 6	Oct 01/2012		3	Jun 01/2012	
1	Jun 01/2012		A 7	Oct 01/2012		4	Jun 01/2012	
2	BLANK		A 8	Oct 01/2012		5	Jun 01/2012	
20-81-18			A 9	Oct 01/2012		6	Nov 01/2008	
1	Jun 01/2012		A 10	Oct 01/2012		7	Jun 01/2012	
2	Jun 01/2012		A 11	Oct 01/2012		8	Jun 01/2012	
3	Jun 01/2012		A 12	Oct 01/2012		9	Jun 01/2012	
4	Jun 01/2012		A 13	Oct 01/2012		10	Jun 01/2012	
5	Jun 01/2012		A 14	Oct 01/2012		11	Jun 01/2012	
6	BLANK		A 15	Oct 01/2012		12	BLANK	
20-81-19 CONTENTS			A 16	Oct 01/2012		20-83-00 CONTENTS		
O 1	Oct 01/2012		20-82-11 CONTENTS			1	Jun 01/2012	
2	BLANK		1	Feb 01/2011		2	BLANK	
20-81-19			2	BLANK		20-83-00		
R 1	Oct 01/2012		20-82-11			1	Jun 01/2012	
O 2	Oct 01/2012		1	Feb 01/2011		2	Jun 01/2012	
O 3	Oct 01/2012		2	Feb 01/2011		3	Jun 01/2012	
O 4	Oct 01/2012		3	Feb 01/2011		4	Jun 01/2012	
O 5	Oct 01/2012		4	Feb 01/2011		5	Jun 01/2012	
O 6	Oct 01/2012		5	Feb 01/2011		6	Jun 01/2012	
20-81-21 CONTENTS			6	Feb 01/2011		7	Jun 01/2012	
1	Nov 01/2009		7	Feb 01/2011		8	Jun 01/2012	
2	BLANK		8	Feb 01/2011		9	Jun 01/2012	
20-81-21			20-82-12 CONTENTS			10	Jun 01/2012	
1	Jun 01/2012		1	Feb 01/2011		11	Jun 01/2012	
2	Jun 01/2012		2	BLANK		12	Jun 01/2012	
3	Jun 01/2012		20-82-12			20-83-01 CONTENTS		
4	BLANK		1	Feb 01/2011		O 1	Oct 01/2012	
20-81-22 CONTENTS			2	Feb 01/2011		2	BLANK	
O 1	Oct 01/2012		3	Feb 01/2011		20-83-01		
2	BLANK		4	Feb 01/2011		1	Oct 01/2010	
20-81-22			20-82-13 CONTENTS			R 2	Oct 01/2012	
R 1	Oct 01/2012		1	Jun 01/2009		R 3	Oct 01/2012	
R 2	Oct 01/2012		2	BLANK		R 4	Oct 01/2012	
R 3	Oct 01/2012					R 5	Oct 01/2012	

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 63  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-83-01 (continued)			20-83-11 CONTENTS (continued)			20-84-11 (continued)		
O	6	Oct 01/2012		2	BLANK		6	BLANK
R	7	Oct 01/2012	20-83-11			20-84-13 CONTENTS		
R	8	Oct 01/2012	R	1	Oct 01/2012		1	Jun 01/2009
R	9	Oct 01/2012	O	2	Oct 01/2012		2	BLANK
R	10	Oct 01/2012	R	3	Oct 01/2012	20-84-13		
R	11	Oct 01/2012	R	4	Oct 01/2012		1	Jun 01/2012
R	12	Oct 01/2012	R	5	Oct 01/2012		2	Oct 01/2010
R	13	Oct 01/2012	R	6	Oct 01/2012		3	Oct 01/2010
R	14	Oct 01/2012	R	7	Oct 01/2012		4	Jun 01/2012
O	15	Oct 01/2012		8	BLANK		5	Jun 01/2012
R	16	Oct 01/2012	20-84-00 CONTENTS				6	Jun 01/2012
O	17	Oct 01/2012		1	Jun 01/2009		7	Jun 01/2012
R	18	Oct 01/2012		2	BLANK		8	Jun 01/2009
R	19	Oct 01/2012	20-84-00				9	Jun 01/2012
R	20	Oct 01/2012		1	Jun 01/2012		10	Jun 01/2012
R	21	Oct 01/2012		2	Jun 01/2012		11	Jun 01/2012
O	22	Oct 01/2012	20-84-10 CONTENTS				12	Jun 01/2009
R	23	Oct 01/2012		1	Jun 01/2009		13	Jun 01/2009
R	24	Oct 01/2012		2	BLANK		14	BLANK
R	25	Oct 01/2012	20-84-10			20-84-14 CONTENTS		
R	26	Oct 01/2012		1	Jun 01/2012		1	Jun 01/2009
A	27	Oct 01/2012		2	Jun 01/2012		2	BLANK
A	28	Oct 01/2012		3	Oct 01/2010	20-84-14		
20-83-02 CONTENTS				4	Jun 01/2012		1	Jun 01/2012
	1	Oct 01/2010		5	Jun 01/2012		2	Jun 01/2012
	2	BLANK		6	Jun 01/2012		3	Jun 01/2012
20-83-02				7	Jun 01/2012		4	Jun 01/2012
	1	Jun 01/2012		8	Jun 01/2012		5	Oct 01/2010
	2	Jun 01/2012	20-84-11 CONTENTS				6	Jun 01/2012
	3	Oct 01/2010		1	Oct 01/2010		7	Jun 01/2012
	4	Oct 01/2010		2	BLANK		8	Jun 01/2012
	5	Jun 01/2012	20-84-11				9	Jun 01/2012
	6	Jun 01/2012		1	Jun 01/2012		10	Oct 01/2010
	7	Oct 01/2010		2	Oct 01/2010		11	Oct 01/2010
	8	BLANK		3	Jun 01/2012		12	Jun 01/2012
20-83-11 CONTENTS				4	Jun 01/2012	20-84-17 CONTENTS		
O	1	Oct 01/2012		5	Oct 01/2010		1	Jun 01/2009

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 64  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-84-17	CONTENTS (continued)		20-85-12	(continued)		20-90-11	(continued)	
	2	BLANK		10	Oct 01/2010		9	Oct 01/2010
20-84-17				11	Oct 01/2010		10	Jun 01/2012
	1	Jun 01/2012		12	Oct 01/2010		11	Feb 01/2012
	2	BLANK		13	Oct 01/2010		12	Feb 01/2012
20-84-18	CONTENTS			14	Oct 01/2010		13	Feb 01/2012
	1	Nov 01/2009		15	Oct 01/2010		14	Feb 01/2012
	2	BLANK		16	Oct 01/2010		15	Feb 01/2012
20-84-18				17	Oct 01/2010		16	Jun 01/2012
	1	Jun 01/2012		18	Oct 01/2010		17	Jun 01/2012
	2	Oct 01/2010		19	Oct 01/2010		18	Jun 01/2012
	3	Oct 01/2010		20	BLANK		19	Oct 01/2010
	4	BLANK	20-86-00	CONTENTS			20	BLANK
20-84-19	CONTENTS			1	Nov 01/2009	20-90-12	CONTENTS	
	1	Oct 01/2010		2	BLANK		1	Nov 01/2009
	2	BLANK	20-86-00				2	BLANK
20-84-19				1	Jun 01/2012	20-90-12		
	1	Oct 01/2010		2	Jun 01/2012		1	Jun 01/2012
	2	BLANK		3	Jun 01/2012		2	Jun 01/2012
20-85-11	CONTENTS			4	Jun 01/2012		3	Jun 01/2012
	1	Jun 01/2009	20-87-00	CONTENTS			4	Jun 01/2012
	2	BLANK		1	Jun 01/2009	20-90-14	CONTENTS	
20-85-11				2	BLANK		1	Nov 01/2009
	1	Jun 01/2012	20-87-00				2	BLANK
	2	BLANK		1	Jun 01/2012	20-90-14		
20-85-12	CONTENTS			2	Oct 01/2010		1	Jun 01/2012
	1	Jun 01/2009	20-90-11	CONTENTS			2	Jun 01/2012
	2	BLANK		1	Nov 01/2009		3	Jun 01/2012
20-85-12				2	BLANK		4	Jun 01/2012
	1	Jun 01/2012	20-90-11				5	Jun 01/2012
	2	Jun 01/2012		1	Jun 01/2012		6	BLANK
	3	Oct 01/2010		2	Oct 01/2010	20-90-15	CONTENTS	
	4	Oct 01/2010		3	Jun 01/2012		1	Oct 01/2010
	5	Oct 01/2010		4	Jun 01/2012		2	BLANK
	6	Oct 01/2010		5	Jun 01/2012	20-90-15		
	7	Oct 01/2010		6	Jun 01/2012		1	Feb 01/2011
	8	Feb 01/2010		7	Jun 01/2012		2	Jun 01/2012
	9	Oct 01/2010		8	Jun 01/2012		3	Jun 01/2012

A = Added, R = Revised, D = Deleted, O = Overflow

# 20-EFFECTIVE PAGES

Page 65  
Oct 01/2012

D6-54446



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

CH-SC-SU	Page	Date	CH-SC-SU	Page	Date	CH-SC-SU	Page	Date
20-90-15 (continued)			20-90-16 (continued)					
	4	Oct 01/2010		3	Jun 01/2012			
	5	Jun 01/2012		4	Oct 01/2010			
	6	Jun 01/2012		5	Jun 01/2012			
	7	Jun 01/2012		6	Jun 01/2012			
	8	Jun 01/2012		7	Jun 01/2009			
	9	Jun 01/2012		8	Jun 01/2012			
	10	Jun 01/2012		9	Jun 01/2012			
	11	Jun 01/2012		10	Jun 01/2012			
	12	Jun 01/2012		11	Oct 01/2010			
	13	Jun 01/2012		12	Jun 01/2009			
	14	Jun 01/2012		13	Oct 01/2010			
	15	Jun 01/2012		14	Jun 01/2012			
	16	Jun 01/2012		15	Jun 01/2012			
	17	Oct 01/2010		16	BLANK			
	18	Oct 01/2010	20-91-00 CONTENTS					
	19	Oct 01/2010		1	Nov 01/2009			
	20	Oct 01/2010		2	BLANK			
	21	Oct 01/2010	20-91-00					
	22	Jun 01/2012		1	Oct 01/2010			
	23	Jun 01/2012		2	BLANK			
	24	Oct 01/2010						
	25	Jun 01/2012						
	26	Oct 01/2010						
	27	Oct 01/2010						
	28	Jun 01/2012						
	29	Oct 01/2010						
	30	Oct 01/2010						
	31	Oct 01/2010						
	32	Jun 01/2012						
	33	Jun 01/2012						
	34	BLANK						
20-90-16 CONTENTS								
	1	Nov 01/2009						
	2	BLANK						
20-90-16								
	1	Jun 01/2012						
	2	Oct 01/2010						

A = Added, R = Revised, D = Deleted, O = Overflow

## 20-EFFECTIVE PAGES

Page 66  
Oct 01/2012

D6-54446

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****CHAPTER  
SECTION  
SUBJECT****TITLE****20-00 GENERAL DATA**

20-00-08	PROTECTION DURING MAINTENANCE
20-00-10	SAFETY PRACTICES
20-00-11	MATERIALS AND PARTS
20-00-12	CONTACT CRIMP TOOL CROSS REFERENCE
20-00-13	WIRE TYPE CODES
20-00-14	ALTERNATIVE WIRE
20-00-15	WIRE INSULATION REMOVAL
20-00-16	OUTER DIAMETER OF WIRE

**20-02 FIRE PROTECTION ZONES AND ENVIRONMENTAL AREAS**

20-02-10	AIRPLANE FLAMMABLE LEAKAGE ZONES
20-02-20	AIRPLANE TEMPERATURE AREAS
20-02-30	AIRPLANE VIBRATION AREAS

**20-10 WIRING INSTALLATION**

20-10-04	CLEANING OF WIRE HARNESSSES
20-10-06	INSPECTION OF WIRING
20-10-11	WIRING ASSEMBLY AND INSTALLATION CONFIGURATION
20-10-12	WIRE HARNESS SUPPORTS
20-10-13	REPAIR OF ELECTRICAL WIRE AND CABLE
20-10-14	INSTALLATION OF SHRINKABLE SLEEVES
20-10-15	ASSEMBLY OF SHIELD GROUND WIRES
20-10-16	ASSEMBLY OF MOLDED TEE FITTINGS AND HEAT SHRINKABLE BOOTS
20-10-17	INSTALLATION OF ZIPPERTUBING
20-10-18	INSTALLATION OF SLEEVES ON WIRING
20-10-19	WIRE SEPARATION
20-10-20	INSTALLATION OF PRESSURE BULKHEAD SEALS
20-10-21	312T2202-1 FEEDTHROUGH ASSEMBLY FOR THE POWER FEEDER WIRE HARNESS
20-10-22	DISASSEMBLY, ASSEMBLY, AND INSTALLATION OF BACS31T SEAL FITTINGS
20-10-24	INSTALLATION OF BACF39A AND BACF39B FEED THROUGH FITTINGS
20-10-25	ASSEMBLY AND INSTALLATION OF EMI WRAPPABLE SLEEVES
20-10-26	INSTALLATION OF BMS13-82 PROTECTIVE SLEEVES
20-10-27	Installation of Expandable and Wrappable Sleeves
20-10-91	REPAIR OF FLEXIBLE ELECTRICAL CONDUITS

**20-11 ARINC 629 DATA BUS WIRING**

20-11-11	ARINC 629 WIRING
----------	------------------

**20-12 FIBER OPTIC CABLE AND CONNECTORS**

20-12-11	S280W701-() FIBER OPTIC CABLE ASSEMBLIES
20-12-20	BACC69A AND BACC69C FIBER OPTIC CABLE ASSEMBLIES
20-12-21	BACC68C, BACC68D, BACC68E, AND BACC68F FIBER OPTIC CONNECTORS

**20-CONTENTS**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### CHAPTER SECTION SUBJECT

### TITLE

#### 20-14 PRIMARY FLIGHT CONTROL, FUEL QUANTITY INDICATOR SYSTEM (FQIS), AND FLIGHT RECORDER -AIDS WIRE HARNESSSES

- 20-14-11 REPAIR OF PRIMARY FLIGHT CONTROL SYSTEM WIRE HARNESSSES
- 20-14-12 REPAIR OF FUEL QUANTITY INDICATOR SYSTEM (FQIS) WIRE HARNESSSES
- 20-14-14 INSTALLATION OF BACG20AN SEAL FITTINGS
- 20-14-51 ASSEMBLY OF THE FLIGHT RECORDER-AIDS WIRE HARNESS WITH A BACC63AF() FIREWALL CONNECTOR
- 20-14-52 AIRBORN RM342() CABLE ASSEMBLIES

#### 20-15 777 ELMS PANEL REPAIR

- 20-15-04 777 ELMS PANEL REPAIR: WIRE INSULATION REMOVAL
- 20-15-21 777 ELMS PANEL REPAIR: TERMINAL LUGS AND TERMINAL BOLTS
- 20-15-22 777 ELMS PANEL REPAIR: TORQUE VALUES, ELECTRICAL BONDING, AND MECHANICAL ATTACHMENT PROCEDURES
- 20-15-26 777 ELMS PANEL REPAIR: SPLICES
- 20-15-31 777 ELMS PANEL REPAIR: MIL-C-26500 TYPE CONNECTORS
- 20-15-33 777 ELMS PANEL REPAIR: MIL-C-38999 TYPE CONNECTORS
- 20-15-35 777 ELMS PANEL REPAIR: MIL-C-5015 TYPE CONNECTORS
- 20-15-41 777 ELMS PANEL REPAIR: D SUBMINIATURE CONNECTORS
- 20-15-42 777 ELMS PANEL REPAIR: HIGH DENSITY D SUBMINIATURE CONNECTORS
- 20-15-43 777 ELMS PANEL REPAIR: HYPERTAC HPW CONNECTORS
- 20-15-44 777 ELMS PANEL REPAIR: HARWIN M80 DATAMATE CONNECTORS
- 20-15-46 777 ELMS PANEL REPAIR: RELAY SOCKETS AND RELAYS
- 20-15-48 777 ELMS PANEL REPAIR: AIR LB TERMINAL JUNCTION SYSTEM
- 20-15-49 777 ELMS PANEL REPAIR: M81714 SERIES II TERMINAL JUNCTION SYSTEM

#### 20-20 ELECTRICAL BONDS AND GROUNDS

- 20-20-00 ELECTRICAL BONDING PROCESSES
- 20-20-10 REPLACEMENT OF GROUND STUDS AND BONDING JUMPER INSTALLATION
- 20-20-11 ASSEMBLY OF BURNDY YHLZG GROUND BLOCK MODULES
- 20-20-12 ASSEMBLY OF A DUAL GROUND WITH BACT12G FLAG TERMINALS
- 20-20-14 MAINTENANCE OF THE BACC13AU CURRENT RETURN NETWORK

#### 20-22 GE90 POWER PLANT WIRING REPAIR

- 20-22-00 GE90 POWER PLANT: WIRING REPAIR

#### 20-23 ROLLS ROYCE RB211 TRENT 800 POWER PLANT WIRING REPAIR

- 20-23-00 RB 211 TRENT 800 POWER PLANT: WIRING REPAIR
- 20-23-01 RB 211 TRENT 800 POWER PLANT: CONNECTORS
- 20-23-03 RB 211 TRENT 800 POWER PLANT: WIRE AND CABLE TYPES
- 20-23-15 RB 211 TRENT 800 POWER PLANT: WIRING REPAIR
- 20-23-16 RB 211 TRENT 800 POWER PLANT: REPAIR OF WIRE HARNESS IDENTIFICATION
- 20-23-17 RB 211 TRENT 800 POWER PLANT: REPAIR OF SHIELDED CABLES
- 20-23-19 RB 211 TRENT 800 POWER PLANT: REPAIR OF ALTERNATOR LEAD WIRES
- 20-23-30 RB 211 TRENT 800 POWER PLANT: WIRE HARNESS DISASSEMBLY AND ASSEMBLY

## 20-CONTENTS

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

**CHAPTER  
SECTION  
SUBJECT****TITLE****20-23 ROLLS ROYCE RB211 TRENT 800 POWER PLANT WIRING REPAIR (continued)**

- 20-23-32 RB 211 TRENT 800 POWER PLANT: ASSEMBLY OF TERMINAL LUGS
- 20-23-37 RB 211 TRENT 800 POWER PLANT: CONNECTOR DISASSEMBLY AND ASSEMBLY
- 20-23-39 RB 211 TRENT 800 POWER PLANT: ASSEMBLY OF BACKSHELLS

**20-24 PRATT AND WHITNEY P44000/777 POWER PLANT WIRING REPAIR**

- 20-24-00 PW4000/777 POWER PLANT: WIRING REPAIR
- 20-24-01 PW4000/777 POWER PLANT: GENERAL DATA FOR WIRING REPAIR
- 20-24-02 PW4000/777 POWER PLANT: WIRING COMPONENT AND TOOL SUPPLIERS
- 20-24-12 PW4000/777 POWER PLANT: CONNECTOR INSERT CONFIGURATIONS AND POLARIZATION
- 20-24-14 PW4000/777 POWER PLANT: ASSEMBLY OF WIRE HARNESS TIES
- 20-24-20 PW4000/777 POWER PLANT: CONNECTOR AND BACKSHELL REPLACEMENT
- 20-24-21 PW4000/777 POWER PLANT: CONTACT REPLACEMENT
- 20-24-22 PW4000/777 POWER PLANT: CABLE JACKET REPAIR
- 20-24-24 PW4000/777 POWER PLANT: REPLACEMENT OF A SHIELDED CABLE
- 20-24-25 PW4000/777 POWER PLANT: CONNECTOR ADAPTER PLATE REPLACEMENT
- 20-24-26 PW4000/777 POWER PLANT: REPLACEMENT OF TERMINAL LUGS
- 20-24-27 PW4000/777 POWER PLANT: REPAIR OF WIRING IDENTIFICATION MARKERS

**20-25 SHIELDED CABLES AND BACKSHELLS WITH SHIELDED CABLES**

- 20-25-00 SHIELDED CABLES
- 20-25-11 OVERBRAID SHIELDS ON WIRE BUNDLES
- 20-25-12 ASSEMBLY OF STRAIN RELIEF BACKSHELLS AND SHIELD TERMINATION WITH TERMINAL LUGS
- 20-25-13 ELECTRICAL CONNECTION OF SHIELDED CABLES AND BACKSHELLS THAT HAVE INNER AND OUTER GROUND RINGS
- 20-25-14 ELECTRICAL CONNECTION OF SHIELDED CABLES AND CONNECTOR BACKSHELLS WITH SHIELD TERMINATOR BANDS
- 20-25-15 ASSEMBLY OF COMPOSITE BACKSHELLS THAT HAVE A BRAIDED SHIELD SOCK
- 20-25-16 ASSEMBLY OF MST AND MISTY INSERT SHIELD TERMINATIONS

**20-30 TERMINALS AND SPLICES**

- 20-30-00 ELECTRICAL CONNECTION OF EQUIPMENT
- 20-30-11 ASSEMBLY OF INSULATED AND UNINSULATED TERMINAL LUGS
- 20-30-12 ASSEMBLY OF SPLICES
- 20-30-13 ASSEMBLY AND REPAIR OF THE AMP AND BACS52N COPALUM SPLICES
- 20-30-14 ASSEMBLY OF COPALUM AND ALUMINUM TERMINALS
- 20-30-15 ASSEMBLY OF AMP (TYCO) FASTON TERMINALS
- 20-30-16 ASSEMBLY OF END CAPS
- 20-30-17 AMP PRINTED CIRCUIT BOARD TERMINAL RECEPTACLES
- 20-30-19 ASSEMBLY OF BACS52R SHIELDED SPLICES
- 20-30-22 ASSEMBLY OF TERMINALS AND SPLICES UNDER SPECIAL CONDITIONS

**20-CONTENTS**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### CHAPTER SECTION SUBJECT

### TITLE

#### 20-35 SPECIAL CABLES

20-35-11	CONNECTOR AND TERMINAL ASSEMBLY WITH 65B47866() SHIELDED CABLE
20-35-12	PREPARATION OF THE S280T004-1 AUDIO CABLE
20-35-13	CONNECTOR ASSEMBLY WITH S280T006-1 AND S280T006-2 SPOILER CABLES
20-35-14	SHIELD TERMINATION OF THE RAYCHEM (TYCO) 0024A0014 BALANCED LINE CABLE
20-35-17	SHIELD TERMINATION OF RAYCHEM (TYCO) 55A6087 CABLES
20-35-18	SHIELD TERMINATION OF THE RAYCHEM (TYCO) 55A6090 CABLE
20-35-19	SHIELD TERMINATION OF THE RAYCHEM (TYCO) 55A6088 CABLE
20-35-20	SHIELD TERMINATION OF RAYCHEM (TYCO) 55A6160 AND 55A6160-20 CABLES, AND CHAMPLAIN 61-02651 AND 61-02783 CABLES
20-35-22	CONNECTOR ASSEMBLY WITH MICRODOT 202-3836-0000 AVM CABLE
20-35-23	SHIELD TERMINATION OF THE CHAMPLAIN 30-04749 ADF CABLE
20-35-24	SHIELD TERMINATION OF THE CHAMPLAIN 30-04680 ADF CABLE
20-35-25	SHIELD TERMINATION OF THE RAYCHEM (TYCO) CTC-0039-()-9/5-9 THERMOCOUPLE CABLE
20-35-26	SHIELD TERMINATION OF THE ENDEVCO 16833 AVM CABLE
20-35-27	TERMINAL ASSEMBLY WITH ALUMEL-CHROMEL THERMOCOUPLE WIRE

#### 20-40 SOLDER CONNECTIONS

20-40-00	ASSEMBLY OF CONNECTORS WITH SOLDER TYPE CONTACTS
20-40-12	ASSEMBLY OF THE GRIMES-HONEYWELL A-4135 MAP LIGHT
20-40-13	TERMINATION OF WIRE IN MS25257 TYPE INDICATOR LIGHTS
20-40-14	TERMINATION OF WIRE IN THE JOHNSON 105-0303-001 TIP PLUG CONNECTOR
20-40-15	ASSEMBLY OF THE ITT GREMAR 150900-() TWINAXPLUG CONNECTOR
20-40-16	ASSEMBLY OF THE W. W. FISHER D105A067-60 CONNECTOR

#### 20-41 ELECTROSTATIC SENSITIVE DEVICES

20-41-01	ELECTROSTATIC SENSITIVE DEVICE IDENTIFICATION
----------	---

#### 20-42 MATE-N-LOC CONNECTORS

20-42-01	ASSEMBLY OF AMP (TYCO) MATE-N-LOK CONNECTORS
----------	--

#### 20-51 COAX CONNECTORS

20-51-00	ASSEMBLY AND INSTALLATION OF COAX CONNECTORS
20-51-05	ASSEMBLY OF STANDARD CONNECTORS WITH COAX CABLE
20-51-11	ASSEMBLY OF KINGS (WINCHESTER ELECTRONICS) K-GRIP WEATHERPROOF COAX CONNECTORS
20-51-13	ASSEMBLY OF KINGS (WINCHESTER ELECTRONICS) STANDARD K-GRIP COAX CONNECTORS
20-51-15	ASSEMBLY OF KINGS (WINCHESTER ELECTRONICS) WEATHERPROOF K-GRIP JUNIOR CONNECTORS
20-51-16	ASSEMBLY OF KINGS (WINCHESTER ELECTRONICS) CONVENTIONAL COAX CONNECTORS
20-51-17	ASSEMBLY OF KINGS (WINCHESTER ELECTRONICS) K-LOC COAX CONNECTORS
20-51-20	ASSEMBLY OF TRIAX CABLE CONNECTORS
20-51-21	ASSEMBLY OF AMP (TYCO) 2-329083-1 COAX CONNECTORS

## 20-CONTENTS

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****CHAPTER  
SECTION  
SUBJECT****TITLE****20-51 COAX CONNECTORS (continued)**

20-51-26	ASSEMBLY OF AMP (TYCO) COAXICLAMP CONNECTORS AND SPLICES
20-51-31	ASSEMBLY OF BURNDY RSCDEX-() COAX CONNECTORS
20-51-32	ASSEMBLY OF SOURIAU/BURNDY HYFEN BANTAM M22T() COAX CONNECTORS
20-51-33	ASSEMBLY OF BURNDY G6F12-88() COAX CONNECTORS
20-51-41	ASSEMBLY OF AMPHENOL 82-175 COAX CONNECTORS
20-51-42	ASSEMBLY OF AMPHENOL 82-3292 COAX CONNECTORS
20-51-51	ASSEMBLY OF ANDREWS 44ASN AND 40229 COAX CONNECTORS
20-51-52	ASSEMBLY OF ANDREWS L42ENT AND L42EWT TNC COAX CONNECTORS
20-51-60	ASSEMBLY OF BACC64BT, BACC64BW TNC COAX CONNECTORS SUPPLIED BY RADIAL
20-51-90	ASSEMBLY OF CABLEWAVE COAX CONNECTORS

**20-53 TRIAX CONNECTORS**

20-53-05	CONNECTOR ASSEMBLY WITH TRIAX CABLE
----------	-------------------------------------

**20-60 STANDARD CONNECTOR PROCESSES**

20-60-00	ASSEMBLY OF CONNECTOR CONTACTS WITH THE ADJUSTMENT OF THE CONDUCTOR SIZE
20-60-01	CLEANING OF ELECTRICAL CONNECTORS
20-60-02	REPLACEMENT OF CONTACTS
20-60-03	SPECIAL PROTECTION OF ELECTRICAL CONNECTORS
20-60-06	INSTALLATION OF ELECTRICAL CONNECTORS
20-60-07	INSTALLATION OF LOCKWIRE AND SAFETY CABLE ON ELECTRICAL CONNECTORS, CONNECTOR BACKSHELL CABLE CLAMPS AND SWITCH GUARDS
20-60-08	SEALING OF ELECTRICAL CONNECTORS
20-60-09	ASSEMBLY OF STRAIN RELIEF BACKSHELLS THAT DO NOT TERMINATE A SHIELD

**20-61 FRONT RELEASE CIRCULAR CONNECTORS**

20-61-00	ASSEMBLY OF CONNECTORS WITH FRONT RELEASE CONTACTS
20-61-02	ASSEMBLY OF JBX TYPE MINIATURE PUSH-PULL CONNECTORS
20-61-11	MIL-C-26500 FRONT RELEASE CONNECTORS
20-61-12	ASSEMBLY OF AMPHENOL 67 SERIES AND CINCH CN0906 SERIES CONNECTORS
20-61-13	ASSEMBLY OF AMPHENOL 69 SERIES CONNECTORS
20-61-15	ASSEMBLY OF DEUTSCH DS SERIES CONNECTORS
20-61-16	ASSEMBLY OF MIL-C-26482 SERIES I FRONT RELEASE CONNECTORS
20-61-17	ASSEMBLY OF MIL-C-26482 SERIES II CONNECTORS
20-61-18	ASSEMBLY OF AMPHENOL/BENDIX 10-244() SERIES CONNECTORS
20-61-19	ASSEMBLY OF MIL-C-5015 FRONT RELEASE CONTACT TYPE CONNECTORS
20-61-20	ASSEMBLY OF BENDIX PT()CE AND PC()CE SERIES CONNECTORS
20-61-23	ASSEMBLY OF BURNDY MBG28 SERIES CONNECTORS
20-61-24	ASSEMBLY OF DEUTSCH DD SERIES CONNECTORS
20-61-26	ASSEMBLY OF WIRE-PRO 84-() SERIES CONNECTORS
20-61-28	VIKING ELECTRONICS AMC() SERIES CIRCULAR CONNECTORS

**20-CONTENTS**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### CHAPTER SECTION SUBJECT

### TITLE

#### 20-61 FRONT RELEASE CIRCULAR CONNECTORS (continued)

- 20-61-29 CORY AND TRI-STAR CSLT2-21P() CONNECTORS
- 20-61-30 ASSEMBLY OF MIL-C-81511 SERIES 1 AND SERIES 2 CONNECTORS

#### 20-62 SPECIAL CONNECTORS

- 20-62-12 ASSEMBLY OF VEAM 115 SERIES CONNECTORS
- 20-62-13 ASSEMBLY OF BOEING 60B40052-() AND BURNDY MB6, MB10, MB12, MB13, AND MB24 CONNECTORS
- 20-62-14 ASSEMBLY OF FENWAL CONNECTORS
- 20-62-15 ASSEMBLY OF GRAVINER CONNECTORS
- 20-62-16 ASSEMBLY OF WALTER KIDDE CONNECTORS
- 20-62-17 ASSEMBLY OF LINDBERG 1039, 2564-3, AND 2564-4 CONNECTORS
- 20-62-18 ASSEMBLY OF WAVE LAB 169493 AND 400015 CONNECTORS
- 20-62-19 ASSEMBLY OF AN3115 TYPE CONNECTORS
- 20-62-20 ASSEMBLY OF AVIBANK AV667 AND AV697 CONNECTORS
- 20-62-21 ASSEMBLY OF THE CINCH S345T002-156 CONNECTOR
- 20-62-22 ASSEMBLY OF AN3116 TYPE CONNECTORS
- 20-62-23 ASSEMBLY OF BACC63DP, DR, DT, DU, DV AND GLENAIR SERIES 800 MIGHTY MOUSE CONNECTORS
- 20-62-24 ASSEMBLY AND INSTALLATION OF BACC65BL EXTERNAL POWER CONNECTORS
- 20-62-25 ASSEMBLY OF MS25182 BATTERY CONNECTORS
- 20-62-26 ITT CANNON CA()KR FIREWALL CONNECTORS
- 20-62-28 WTDX SERIES HIGH DENSITY RECTANGULAR CONNECTORS
- 20-62-29 SGMC SERIES HIGH DENSITY RECTANGULAR CONNECTORS

#### 20-63 REAR RELEASE CIRCULAR CONNECTORS

- 20-63-00 ASSEMBLY OF CONNECTORS WITH REAR RELEASE CONTACTS
- 20-63-01 ASSEMBLY OF DEUTSCH DL TYPE CONNECTORS
- 20-63-02 BACC63DE, BACC63DF, BACC63DG, AND BACC63DH QUICK DISCONNECT CIRCULAR CONNECTORS
- 20-63-03 BACC63ED, BACC63EE AND BACC63EF MINIATURE CIRCULAR CONNECTORS
- 20-63-13 ASSEMBLY OF MIL-C-83723 SERIES III TYPE CONNECTORS
- 20-63-14 ASSEMBLY OF MIL-C-5015 TYPE CONNECTORS WITH REAR RELEASE CONTACTS
- 20-63-18 ASSEMBLY OF MIL-C-81511 SERIES 1 AND SERIES 2 CONNECTORS
- 20-63-19 ASSEMBLY OF MIL-C-38999 CONNECTORS
- 20-63-20 ASSEMBLY OF BACC63EB CONNECTORS
- 20-63-21 ASSEMBLY OF MIL-C-26482 SERIES II REAR RELEASE CONNECTORS
- 20-63-22 CORY AND TRI-STAR CSLT2-21P() CONNECTORS

#### 20-64 SMALL MODULAR CONNECTORS

- 20-64-11 CORY CTZ623-6CH MODULAR JACK ASSEMBLY
- 20-64-12 ITT CANNON XLR-() AND AXR-()CONNECTORS
- 20-64-13 ASSEMBLY OF MIL-J-641/8 TELEPHONE JACK CONNECTORS
- 20-64-14 J.S.T. SMP-()-BC, SMR-()-B, AND XHP-() CONNECTORS

## 20-CONTENTS

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

**CHAPTER  
SECTION  
SUBJECT****TITLE****20-64 SMALL MODULAR CONNECTORS (continued)**

- 20-64-15 ASSEMBLY OF ROSEMOUNT CERAMIC CONNECTORS
- 20-64-16 ASSEMBLY OF TRI-STAR CWC(), CORY CWC(), AND WALLACE-BLACK WB() CONNECTORS
- 20-64-17 MOLEX 03-06-(), 1625-(), AND AIRFONE AFP30-005()-AA CONNECTORS
- 20-64-18 ASSEMBLY OF M39029/57-() SOCKET CONTACTS FOR WINDOW HEAT CONNECTORS

**20-71 RECTANGULAR RACK AND PANEL CONNECTORS**

- 20-71-11 ITT CANNON DPX, DPD, AND DPA CONNECTORS
- 20-71-12 ASSEMBLY OF AMP (TYCO) AA, AD, AM, AND BD CONNECTORS AND AMPHENOL 213 CONNECTORS
- 20-71-13 ASSEMBLY OF CANNON DPE-MA SERIES CONNECTORS
- 20-71-14 ASSEMBLY OF BACC66F, H, AND K ARINC 600, AND S280W551 RACK AND PANEL CONNECTORS
- 20-71-15 ASSEMBLY OF RADIAL DSX SERIES CONNECTORS
- 20-71-16 ASSEMBLY OF AMP (TYCO) ARINC 404 AND MIL-C-81659 CONNECTORS

**20-72 D-SUBMINIATURE CONNECTORS AND OTHER SMALL RECTANGULAR CONNECTORS**

- 20-72-07 D SUBMINIATURE CONNECTORS: INSTALLATION HARDWARE ASSEMBLY AND CONNECTOR INSTALLATION
- 20-72-08 D SUBMINIATURE CONNECTORS: BACKSHELL ASSEMBLY AND CONNECTOR INSTALLATION
- 20-72-10 D-SUBMINIATURE CONNECTORS: TRI-STAR C()MA AND CORY C()MA CONNECTORS
- 20-72-11 D-SUBMINIATURE CONNECTORS: WPI 17-() AND AMPHENOL 17-() CONNECTORS
- 20-72-12 D-SUBMINIATURE CONNECTORS: ITT CANNON D()MA CONNECTORS
- 20-72-13 D-SUBMINIATURE CONNECTORS: M24308 SERIES CONNECTORS
- 20-72-16 ASSEMBLY OF ITT CANNON D()U() D SUBMINIATURE CONNECTORS
- 20-72-17 ASSEMBLY OF BOEING 280U00()-() AND 284U1147()-() CONNECTORS
- 20-72-18 WIRE WRAP CONNECTIONS
- 20-72-19 ASSEMBLY OF ARIZONA INTEGRATED ELECTRONICS APC() SERIES CONNECTORS
- 20-72-21 ASSEMBLY OF ITT CANNON SGA(), SOURIAU 30-00053-() AND 30-00054-() AND TRI-STAR C-06BC-01()-1112 RACK AND PANEL CONNECTORS
- 20-72-22 ASSEMBLY OF TRI-STAR CB()-(), CORY CB()-(), AND HUGHES 116706()-() SERIES CONNECTORS
- 20-72-23 TRI-STAR CQ() AND CORY CQ() RECTANGULAR CONNECTORS
- 20-72-24 ASSEMBLY OF BACC65AJ, BACC65AK, S280W557-1, AND S280W557-2 CONNECTORS
- 20-72-25 ASSEMBLY OF 002368-0802, BACC65AL, AND S280W557-8 CONNECTORS
- 20-72-26 ASSEMBLY OF VIKING ELECTRONICS ATM() CONNECTORS

**20-73 FLAT CABLE CONNECTORS**

- 20-73-00 REPAIR OF FLAT CABLE CONNECTOR ASSEMBLIES
- 20-73-01 ASSEMBLY OF BACC65() FLAT CABLE CONNECTORS

**20-74 RECTANGULAR, REAR RELEASE CONNECTORS**

- 20-74-02 ASSEMBLY OF BACI10AL, BACI10AM, AND BACI10AP RECTANGULAR CONNECTOR INSERTS

**20-CONTENTS**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### CHAPTER SECTION SUBJECT

### TITLE

<b>20-74</b>	<b>RECTANGULAR, REAR RELEASE CONNECTORS (continued)</b>
20-74-04	ASSEMBLY OF BAC110BC RECTANGULAR CONNECTOR INSERTS
20-74-11	CINCH ACIS CONNECTORS, RAYCHEM (TYCO) MTC100, MTCPQ, AND MTCTQ CONNECTORS
20-74-12	ASSEMBLY OF BACC65AA AND BACC65AB CONNECTORS
20-74-13	ASSEMBLY OF BACC65AN, BACC65AP, BACC65AV, AND BACC65AW CONNECTORS
20-74-14	ASSEMBLY OF BACC65BJ AND BACC65BK CONNECTORS
20-74-16	ASSEMBLY OF BACC65BC AND BACC65BD CONNECTORS
20-74-18	ASSEMBLY OF BACC65BP, AND BACC65BR CONNECTORS
20-74-19	ASSEMBLY OF BACC65BU, BACC65BV AND BACC65CA RECTANGULAR CONNECTORS
<b>20-81</b>	<b>ASSEMBLY AND INSTALLATION OF RELAY SOCKETS AND RELAYS</b>
20-81-11	ASSEMBLY OF 10-60450 FRONT RELEASE PLUG-IN RELAY SOCKETS
20-81-12	ASSEMBLY OF BACS16W AND BACS16X FRONT RELEASE RELAY SOCKETS
20-81-13	ASSEMBLY OF METHODE FRONT RELEASE RELAY SOCKETS
20-81-14	ASSEMBLY OF VIKING 000300-118() REAR RELEASE RELAY SOCKETS
20-81-16	ASSEMBLY OF LEACH SO SERIES, PCD RSE SERIES, AND OTHER REAR RELEASE RELAY SOCKETS
20-81-17	ASSEMBLY OF LEACH SO-1057-8912 REAR RELEASE RELAY SOCKETS
20-81-18	ASSEMBLY OF LEACH SO-1048-8308 REAR RELEASE RELAY SOCKETS
20-81-19	ASSEMBLY OF BACS16AF1, BACS16AG1, AND BACS16AH1 REAR RELEASE RELAY SOCKETS
20-81-21	ASSEMBLY OF LEACH SO-1055-8690 REAR RELEASE RELAY SOCKETS
20-81-22	INSTALLATION OF RELAY SOCKETS AND RELAYS
<b>20-82</b>	<b>PRINTED WIRING BOARD CONNECTORS</b>
20-82-11	(TYCO) AMP TAB-TERMINAL PRINTED CIRCUIT BOARD CONNECTORS
20-82-12	ASSEMBLY OF AMP (TYCO) 3-582151-() PRINTED CIRCUIT CONNECTORS
20-82-13	BACC65K() AND BACC65L() PRINTED WIRING BOARD CONNECTORS
<b>20-83</b>	<b>WIRING SYSTEM TERMINATION SYSTEMS AND TOGGLE SWITCHES</b>
20-83-00	ASSEMBLY OF INTEGRATED WIRING TERMINATION SYSTEMS
20-83-01	ASSEMBLY OF THE M81714() SERIES I TERMINAL JUNCTION SYSTEM
20-83-02	ASSEMBLY OF THE M81714() SERIES II TERMINAL JUNCTION SYSTEM
20-83-11	ASSEMBLY OF MICRO SWITCH 10()TL() SERIES TOGGLE SWITCH
<b>20-84</b>	<b>LIGHTS AND LIGHTED SWITCHES</b>
20-84-00	ESTERLINE-MASON AND WESTERN INDICATOR LAMP SOCKETS AND CONNECTORS
20-84-10	ASSEMBLY OF GRIMES-HONEYWELL ELECTRIC LIGHTS
20-84-11	ASSEMBLY OF THE GRIMES-HONEYWELL A-4135 MAP LIGHT
20-84-13	EATON 851-37()-() SERIES LIGHTED PUSH BUTTON SWITCHES
20-84-14	BOEING S231W240()-() AND KORRY ELECTRONICS 09-530()-() LIGHTED PUSHBUTTON SWITCHES
20-84-17	JANCO AD45()-() SWITCHES

## 20-CONTENTS



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

**CHAPTER  
SECTION  
SUBJECT**

**TITLE**

**20-84 LIGHTS AND LIGHTED SWITCHES (continued)**

- 20-84-18 BOEING S231T290 LIGHTED PUSHBUTTON SWITCHES AND S231T300 AND S231T301 INDICATORS
- 20-84-19 TERMINATION OF WIRE IN MS25257 TYPE INDICATOR LIGHTS

**20-85 CONNECTOR CLAMPS AND LANDING GEAR CABLES**

- 20-85-11 ASSEMBLY OF GLENAIR G2636-() AND G2918-() CONNECTOR CLAMPS
- 20-85-12 ASSEMBLY OF LANDING GEAR CABLES

**20-86 BURNDY MT17R-1 CONNECTORS**

- 20-86-00 ASSEMBLY OF BURNDY MT17R-1 CONNECTORS

**20-87 HF ANTENNA LEAD ASSEMBLY AND PROBE RECEPTACLES**

- 20-87-00 HF ANTENNA LEAD ASSEMBLY AND PROBE RECEPTACLES

**20-90 TERMINAL BLOCK ASSEMBLY**

- 20-90-11 ASSEMBLY OF BACM15C AND BURNDY YHLZD-() AND YHLZR-() TERMINAL BLOCK MODULES
- 20-90-12 ASSEMBLY OF BURNDY SEALOK SEALED TERMINAL BLOCKS
- 20-90-14 ASSEMBLY OF DEUTSCH JIFFY JUNCTION SPLICES
- 20-90-15 ASSEMBLY OF S280W555-(), BACC50AN(), AND BURNDY RB(), TERMINAL MODULES AND GROUND MODULES
- 20-90-16 BURNDY RBDSC-() AND BACM15J() PROGRAM SWITCH MODULE

**20-91 FUSE DIODE MODULE AND LAMP REPLACEMENT**

- 20-91-00 FUSE DIODE MODULE AND LAMP REPLACEMENT

## 20-CONTENTS

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## 0

000300-0445, RELAY SOCKET, VIKING . . . . .	20-81-11
000300-1180, RELAY SOCKET, VIKING . . . . .	20-81-14
000300-1181, RELAY SOCKET, VIKING . . . . .	20-81-14
000300-1182, RELAY SOCKET, VIKING . . . . .	20-81-14
000300-1538, RELAY SOCKET, VIKING . . . . .	20-81-12
000300-1539, RELAY SOCKET, VIKING . . . . .	20-81-12
000300-1540, RELAY SOCKET, VIKING . . . . .	20-81-12
000300-1541, RELAY SOCKET, VIKING . . . . .	20-81-12
000300-1542, RELAY SOCKET, VIKING . . . . .	20-81-12
000300-1543, RELAY SOCKET, VIKING . . . . .	20-81-12
000300-1544, RELAY SOCKET, VIKING . . . . .	20-81-12
000300-1545, RELAY SOCKET, VIKING . . . . .	20-81-12
000300-1560, RELAY SOCKET, VIKING . . . . .	20-81-12
0011-0000-053BB, TERMINAL STUD MODULE, AIR LB . . . . .	20-15-48
001751-102-00, TERMINAL MODULE TRACK, AIR LB . . . . .	20-15-48
001751-103-00, TERMINAL MODULE TRACK, AIR LB . . . . .	20-15-48
001751-104-00, TERMINAL MODULE TRACK, AIR LB . . . . .	20-15-48
001751-106-00, TERMINAL MODULE TRACK, AIR LB . . . . .	20-15-48
001751-108-00, TERMINAL MODULE TRACK, AIR LB . . . . .	20-15-48
001751-110-00, TERMINAL MODULE TRACK, AIR LB . . . . .	20-15-48
001751-114-00, TERMINAL MODULE TRACK, AIR LB . . . . .	20-15-48
001751-118-00, TERMINAL MODULE TRACK, AIR LB . . . . .	20-15-48
001755-101-02, TERMINAL MODULE, AIR LB . . . . .	20-15-48
001755-305-02, TERMINAL MODULE, AIR LB . . . . .	20-15-48
001756-202-02, TERMINAL MODULE, AIR LB . . . . .	20-15-48
001756-204-02, TERMINAL MODULE, AIR LB . . . . .	20-15-48
001756-205-02, TERMINAL MODULE, AIR LB . . . . .	20-15-48
001756-206-02, TERMINAL MODULE, AIR LB . . . . .	20-15-48
001756-207-02, TERMINAL MODULE, AIR LB . . . . .	20-15-48
001758-101-02, GROUND MODULE, AIR LB . . . . .	20-15-48
001758-202-02, GROUND MODULE, AIR LB . . . . .	20-15-48
001765-101-02, DIODE TERMINAL MODULE, AIR LB . . . . .	20-15-48
001766-101-02, RESISTOR TERMINAL MODULE, AIR LB . . . . .	20-15-48
001766-103-02, RESISTOR TERMINAL MODULE, AIR LB . . . . .	20-15-48
001766-107-02, RESISTOR TERMINAL MODULE, AIR LB . . . . .	20-15-48
001766-108-02, RESISTOR TERMINAL MODULE, AIR LB . . . . .	20-15-48
001766-111-02, RESISTOR TERMINAL MODULE, AIR LB . . . . .	20-15-48
001766-112-02, RESISTOR TERMINAL MODULE, AIR LB . . . . .	20-15-48
001767-101-02, RESISTOR TERMINAL MODULE, AIR LB . . . . .	20-15-48
001767-102-02, RESISTOR TERMINAL MODULE, AIR LB . . . . .	20-15-48
001767-103-02, RESISTOR TERMINAL MODULE, AIR LB . . . . .	20-15-48
001767-107-02, RESISTOR TERMINAL MODULE, AIR LB . . . . .	20-15-48
001767-109-02, RESISTOR TERMINAL MODULE, AIR LB . . . . .	20-15-48
001767-110-02, RESISTOR TERMINAL MODULE, AIR LB . . . . .	20-15-48
001767-111-02, RESISTOR TERMINAL MODULE, AIR LB . . . . .	20-15-48

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

001768-101-02, RESISTOR TERMINAL MODULE, AIR LB. . . . .	20-15-48
001768-103-02, RESISTOR TERMINAL MODULE, AIR LB. . . . .	20-15-48
002368-0802, CONNECTOR, VIKING ELECTRONICS . . . . .	20-72-25
0024A0014 CABLE	
BALANCED LINE, RAYCHEM, SHIELD TERMINATION . . . . .	20-35-14
I 003017-0001, RELAY SOCKET, VIKING . . . . .	20-81-16
003019-0001, RELAY SOCKET, VIKING . . . . .	20-81-18
00850-0027-0004, CONNECTOR, ROSEMOUNT . . . . .	20-64-15
00855-0478-0001, CONNECTOR, ROSEMOUNT . . . . .	20-64-15
00855-0488-0003, CONNECTOR, ROSEMOUNT . . . . .	20-64-15
00855-1727-0001, CONNECTOR, ROSEMOUNT . . . . .	20-64-15
017832-3000, CONNECTOR, SABRITEC . . . . .	20-61-19
025-1121-001, PROTECTIVE CAP, ITT CANNON . . . . .	20-71-14
025-1122-001, PROTECTIVE CAP, ITT CANNON . . . . .	20-71-14
025-1123-001, PROTECTIVE CAP, ITT CANNON . . . . .	20-71-14
025-1124-001, PROTECTIVE CAP, ITT CANNON . . . . .	20-71-14
025-1183-000, PROTECTIVE CAP, ITT CANNON . . . . .	20-71-14
025-1218-000, PROTECTIVE CAP, ITT CANNON . . . . .	20-71-14
025-1218-001, PROTECTIVE CAP, ITT CANNON . . . . .	20-71-14
03-06-1022, CONNECTOR, MOLEX . . . . .	20-64-17
03-06-1121, CONNECTOR, MOLEX . . . . .	20-64-17
03-06-1122, CONNECTOR, MOLEX . . . . .	20-64-17
03-06-2022, CONNECTOR, MOLEX . . . . .	20-64-17
03-06-2024, CONNECTOR, MOLEX . . . . .	20-64-17
03-06-2121, CONNECTOR, MOLEX . . . . .	20-64-17
03-06-2122, CONNECTOR, MOLEX . . . . .	20-64-17
04-035303-087, CONNECTOR, FENWAL . . . . .	20-62-14
046-1000-000, BACKSHELL, EMI, ITT CANNON . . . . .	20-71-14
057-0872-000, BACKSHELL, ITT CANNON . . . . .	20-23-39
09-530-(), SWITCH, LIGHTED PUSHBUTTON, ITW SWITCHES . . . . .	20-84-14
09-530-(), SWITCH, LIGHTED PUSHBUTTON, KORRY ELECTRONICS . . . . .	20-84-14
09-530-9501, CONNECTOR, SWITCH, KORRY ELECTRONICS . . . . .	20-84-14

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## 1

1-320551-2, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
1-320551-2, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
1-320551-3, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
1-320551-3, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
1-320551-4, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
1-320551-4, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
1-321897-0, TERMINAL, THERMOCOUPLE, AMP . . . . .	20-35-27
1-321898-0, TERMINAL, THERMOCOUPLE, AMP . . . . .	20-35-27
1-322325-0, ALUMEL THERMOCOUPLE BUTT SPLICE, AMP . . . . .	20-23-17
1-322325-0, SPLICE, THERMOCOUPLE, AMP . . . . .	20-10-13
1-322325-1, CHROMEL THERMOCOUPLE BUTT SPLICE, AMP . . . . .	20-23-17
1-322325-1, SPLICE, THERMOCOUPLE, AMP . . . . .	20-10-13
1-331456-0, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
1-331456-1, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
1-331457-0, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
1-331458-0, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
1-331458-1, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
1-331459-0, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
1-331460-0, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
1-331460-1, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
1-331461-0, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
1-51864-0, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
1-51864-0, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
1-51864-1, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
1-51864-1, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
1-52521-0, TERMINAL, COPALUM, AMP . . . . .	20-30-14
1-52521-1, TERMINAL, COPALUM, AMP . . . . .	20-30-14
10-244(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE, BENDIX . . . . .	20-35-11
10-244011-3P, CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-18
10-244014-7H, CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-18
10-244014-7P, CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-18
10-244014-7S, CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-18
10-244016-1P, CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-18
10-244016-1S, CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-18
10-244016-8S, CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-18
10-244020-27S, CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-18
10-244022-14S, CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-18
10-244211-3P, CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-18
10-244611-3S, CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-18
10-244611-4S, CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-18
10-244612-3S, CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-18
10-244614-5S, CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-18
10-244614-7G, CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-18
10-244614-7P, CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-18
10-244614-7S, CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-18
10-244616-1S, CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-18

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

10-244618-12S, CONNECTOR, AMPHENOL/BENDIX .....	20-61-18
10-244618-4S, CONNECTOR, AMPHENOL/BENDIX .....	20-61-18
10-244620-27S, CONNECTOR, AMPHENOL/BENDIX .....	20-61-18
10-244622-14P, CONNECTOR, AMPHENOL/BENDIX .....	20-61-18
10-244811-3S, CONNECTOR, AMPHENOL/BENDIX .....	20-61-18
10-244811-4S, CONNECTOR, AMPHENOL/BENDIX .....	20-61-18
10-244812-3S, CONNECTOR, AMPHENOL/BENDIX .....	20-61-18
10-244814-5S, CONNECTOR, AMPHENOL/BENDIX .....	20-61-18
10-244814-7S, CONNECTOR, AMPHENOL/BENDIX .....	20-61-18
10-244814-9S, CONNECTOR, AMPHENOL/BENDIX .....	20-61-18
10-244816-1S, CONNECTOR, AMPHENOL/BENDIX .....	20-61-18
10-244816-8S, CONNECTOR, AMPHENOL/BENDIX .....	20-61-18
10-244818-12S, CONNECTOR, AMPHENOL/BENDIX .....	20-61-18
10-584762, CONNECTOR, AMPHENOL .....	20-63-13
10-584796, CONNECTOR, AMPHENOL .....	20-63-13
10-60450, RELAY SOCKET, BOEING .....	20-81-11
10-60479-(), CONNECTOR, BOEING .....	20-61-11
10-60479-1, CONNECTOR, BOEING .....	20-61-11
10-60479-12, CONNECTOR, BOEING .....	20-61-11
10-60479-126, CONNECTOR, BOEING .....	20-61-11
10-60479-127, CONNECTOR, BOEING .....	20-61-11
10-60479-128, CONNECTOR, BOEING .....	20-61-11
10-60479-129, CONNECTOR, BOEING .....	20-61-11
10-60479-16, CONNECTOR, BOEING .....	20-61-11
10-60479-17, CONNECTOR, BOEING .....	20-61-11
10-60479-18, CONNECTOR, BOEING .....	20-61-11
10-60479-19, CONNECTOR, BOEING .....	20-61-11
10-60479-5, CONNECTOR, BOEING .....	20-61-11
10-60479-6, CONNECTOR, BOEING .....	20-61-11
10-60479-66, CONNECTOR, BOEING .....	20-61-11
10-60479-67, CONNECTOR, BOEING .....	20-61-11
10-60479-68, CONNECTOR, BOEING .....	20-61-11
10-60479-69, CONNECTOR, BOEING .....	20-61-11
10-60875	
BOEING, FUEL QUANTITY WIRE, SHIELD TERMINATION .....	20-10-15
10-61430-222-(), CONNECTOR, BOEING .....	20-71-12
10-61430-411-(), CONNECTOR, BOEING .....	20-71-12
10-628485-472, CONNECTOR, AMPHENOL .....	20-63-19
101TL(), TOGGLE SWITCH, MICRO SWITCH/HONEYWELL .....	20-83-11
101TL2887-3, TOGGLE SWITCH, MICRO SWITCH/HONEYWELL .....	20-83-11
101TL2887-51, TOGGLE SWITCH, MICRO SWITCH/HONEYWELL .....	20-83-11
102 005-1, RELAY SOCKET, BURNDY .....	20-81-12
102 006-1, RELAY SOCKET, BURNDY .....	20-81-12
102 007-1, RELAY SOCKET, BURNDY .....	20-81-12
102 009-1, RELAY SOCKET, BURNDY .....	20-81-12
102 010-1, RELAY SOCKET, BURNDY .....	20-81-12
102 011-1, RELAY SOCKET, BURNDY .....	20-81-12
102 012-1, RELAY SOCKET, BURNDY .....	20-81-12

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

102 013-1, RELAY SOCKET, BURNDY . . . . .	20-81-12
102TL(), TOGGLE SWITCH, MICRO SWITCH/HONEYWELL . . . . .	20-83-11
102TL2887-3, TOGGLE SWITCH, MICRO SWITCH/HONEYWELL . . . . .	20-83-11
102TL2887-3D, TOGGLE SWITCH, MICRO SWITCH/HONEYWELL . . . . .	20-83-11
102TL2887-7E, TOGGLE SWITCH, MICRO SWITCH/HONEYWELL . . . . .	20-83-11
10363	
TRIAx CABLE, RAYCHEM, CONNECTOR ASSEMBLY . . . . .	20-53-05
1039, CONNECTOR, LINDBERG . . . . .	20-62-17
104TL(), TOGGLE SWITCH, MICRO SWITCH/HONEYWELL . . . . .	20-83-11
105-0303-001 TIP PLUG CONNECTOR	
JOHNSON, WIRE INSTALLATION . . . . .	20-40-14
105-100-02, RELAY SOCKET, METHODE . . . . .	20-81-11
10599 TWINAX CABLE	
RAYCHEM, CONNECTOR ASSEMBLY . . . . .	20-40-15
10648()-(), SWITCH, LIGHTED PUSHBUTTON, JAY-EL . . . . .	20-83-00
1075-13-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
1075-13-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-17
115-5051, CONNECTOR, VEAM . . . . .	20-62-12
115-5051-1, CONNECTOR, VEAM . . . . .	20-62-12
115-5066, CONNECTOR, AMPHENOL . . . . .	20-35-26
115-5066, CONNECTOR, VEAM . . . . .	20-62-12
115-5074, CONNECTOR, AMPHENOL . . . . .	20-35-26
115-5074, CONNECTOR, VEAM . . . . .	20-62-12
1167060, CONNECTOR, HUGHES AIRCRAFT . . . . .	20-72-22
1167061, CONNECTOR, HUGHES AIRCRAFT . . . . .	20-72-22
1167062-1, CONNECTOR, HUGHES AIRCRAFT . . . . .	20-72-22
1167062-2, CONNECTOR, HUGHES AIRCRAFT . . . . .	20-72-22
1167062-3, CONNECTOR, HUGHES AIRCRAFT . . . . .	20-72-22
1167063-1, CONNECTOR, HUGHES AIRCRAFT . . . . .	20-72-22
1167063-2, CONNECTOR, HUGHES AIRCRAFT . . . . .	20-72-22
1167063-3, CONNECTOR, HUGHES AIRCRAFT . . . . .	20-72-22
1167A(), CONNECTOR, CINCH . . . . .	20-61-11
117432-2001, CONNECTOR, ARINC 404, SABRITEC . . . . .	20-83-02
120 SERIES, CONVOLUTED TUBE, GLENAIR . . . . .	20-61-00
1201-11-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
1201-12-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
1201-13-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
1201-14-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
1201-20-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
1201-21-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
1201-22-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
1201-23-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
1201-24-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
1201-25-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
1201-6-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
1202-20-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
1202-23-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
1202-26-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

1203-13-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1203-14-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1203-15-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1203-16-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1203-19-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1203-20-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1203-21-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1203-4-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1205-20-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1205-31-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1205-47-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1205-48-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1205-49-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1205-61-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1205-62-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1206-11-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1206-21-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1206-22-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1206-26-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1206-29-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
1206-30-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
121-11-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
121-24-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
121-35-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
121-36-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
121-37-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
121-38-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
121-39-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
121-40-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
121-44-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
121-45-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
121-46-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
121-52-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
122-37-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
123-22-5, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
123-23-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
123-24-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
123-26-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
125-101-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
125-101-9, CONNECTOR, KINGS	20-71-14
125-105-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
125-105-9, CONNECTOR, KINGS	20-71-14
125-126-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
125-60-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
125-61-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
125-69-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
125-88-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
125-89-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

125-91-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
125-92-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
125-92-9, CONNECTOR, KINGS	20-71-14
125-94-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
125-94-9, CONNECTOR, KINGS	20-71-14
125-95-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
125-96-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
125-96-9, CONNECTOR, KINGS	20-71-14
125-98-9, CONNECTOR, KINGS	20-71-14
126-14-5, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
126-50-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
126-58-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
126-59-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
126-64-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
126-67-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
126-70-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
126-71-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
126-73-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
126-74-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
126-78-1, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
126-78-6, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
126-85-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
133-158-02, RELAY SOCKET, METHODE	20-81-13
133-158-03, RELAY SOCKET, METHODE	20-81-13
133-179-03, RELAY SOCKET, METHODE	20-81-13
1387-3, TERMINAL, THERMOCOUPLE, THERMO-ELECTRIC	20-35-27
1387-4, TERMINAL, THERMOCOUPLE, THERMO-ELECTRIC	20-35-27
140124-0022, CONNECTOR, ITT CANNON	20-12-11
140124-0024, CONNECTOR, ITT CANNON	20-12-11
140124-0028, CONNECTOR, ITT CANNON	20-12-11
140124-0032, CONNECTOR, ITT CANNON	20-12-11
140124-0039, CONNECTOR, ITT CANNON	20-12-11
140124-0040, CONNECTOR, ITT CANNON	20-12-11
140124-0041, CONNECTOR, ITT CANNON	20-12-11
140124-0042, CONNECTOR, ITT CANNON	20-12-11
140125-0000, CABLE ASSEMBLY, FIBER OPTIC, ITT CANNON	20-12-11
140125-0001, CABLE ASSEMBLY, FIBER OPTIC, ITT CANNON	20-12-11
140125-0002, CABLE ASSEMBLY, FIBER OPTIC, ITT CANNON	20-12-11
140125-0003, CABLE ASSEMBLY, FIBER OPTIC, ITT CANNON	20-12-11
140126-0002, CABLE ASSEMBLY, FIBER OPTIC, ITT CANNON	20-12-11
140126-0003, CABLE ASSEMBLY, FIBER OPTIC, ITT CANNON	20-12-11
140126-0005, CONNECTOR, ITT CANNON	20-12-11
140127-0003, CABLE ASSEMBLY, FIBER OPTIC, ITT CANNON	20-12-11
140127-0004, CABLE ASSEMBLY, FIBER OPTIC, ITT CANNON	20-12-11
140127-0005, CABLE ASSEMBLY, FIBER OPTIC, ITT CANNON	20-12-11
140127-0006, CABLE ASSEMBLY, FIBER OPTIC, ITT CANNON	20-12-11
140127-0007, CABLE ASSEMBLY, FIBER OPTIC, ITT CANNON	20-12-11
140127-0008, CABLE ASSEMBLY, FIBER OPTIC, ITT CANNON	20-12-11

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20**

140127-0009, CABLE ASSEMBLY, FIBER OPTIC, ITT CANNON . . . . .	20-12-11
140127-0010, CABLE ASSEMBLY, FIBER OPTIC, ITT CANNON . . . . .	20-12-11
140127-0011, CABLE ASSEMBLY, FIBER OPTIC, ITT CANNON . . . . .	20-12-11
140127-0012, CABLE ASSEMBLY, FIBER OPTIC, ITT CANNON . . . . .	20-12-11
140127-0020, CABLE ASSEMBLY, FIBER OPTIC, ITT CANNON . . . . .	20-12-11
140127-0021, CABLE ASSEMBLY, FIBER OPTIC, ITT CANNON . . . . .	20-12-11
140127-0022, CABLE ASSEMBLY, FIBER OPTIC, ITT CANNON . . . . .	20-12-11
140143-0000, CONNECTOR, ITT CANNON . . . . .	20-12-11
140143-0007, CONNECTOR, ITT CANNON . . . . .	20-12-11
140143-0008, CONNECTOR, ITT CANNON . . . . .	20-12-11
150456, TERMINAL LUG, AMP . . . . .	20-30-11
150471, TERMINAL LUG, AMP . . . . .	20-30-11
150900-0302, CONNECTOR, ITT GREMAR . . . . .	20-40-15
150900-0303, CONNECTOR, ITT GREMAR . . . . .	20-40-15
150900-2341, CONNECTOR, ITT GREMAR . . . . .	20-40-15
150900-2342, CONNECTOR, ITT GREMAR . . . . .	20-40-15
150900-2343, CONNECTOR, ITT GREMAR . . . . .	20-40-15
1525-4-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
1625-02P, CONNECTOR, MOLEX . . . . .	20-64-17
1625-12P, CONNECTOR, MOLEX . . . . .	20-64-17
1625-12P1, CONNECTOR, MOLEX . . . . .	20-64-17
1625-12R, CONNECTOR, MOLEX . . . . .	20-64-17
1625-12R1, CONNECTOR, MOLEX . . . . .	20-64-17
1625-2R2, CONNECTOR, MOLEX . . . . .	20-64-17
16833 CABLE	
AVM, ENDEVCO, SHIELD TERMINATION . . . . .	20-35-26
ENDEVCO, VEAM 115 SERIES ASSEMBLY . . . . .	20-62-12
169493, CONNECTOR, WAVE LAB . . . . .	20-62-18
17-10090, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-10090, CONNECTOR, WPI . . . . .	20-72-11
17-10090-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-10090-1, CONNECTOR, WPI . . . . .	20-72-11
17-10150, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-10150, CONNECTOR, WPI . . . . .	20-72-11
17-10150-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-10150-1, CONNECTOR, WPI . . . . .	20-72-11
17-10250, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-10250, CONNECTOR, WPI . . . . .	20-72-11
17-10250-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-10250-1, CONNECTOR, WPI . . . . .	20-72-11
17-10370, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-10370, CONNECTOR, WPI . . . . .	20-72-11
17-10370-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-10370-1, CONNECTOR, WPI . . . . .	20-72-11
17-10500, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-10500, CONNECTOR, WPI . . . . .	20-72-11
17-10500-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-10500-1, CONNECTOR, WPI . . . . .	20-72-11

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

17-20090, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-20090, CONNECTOR, WPI . . . . .	20-72-11
17-20090-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-20090-1, CONNECTOR, WPI . . . . .	20-72-11
17-20150, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-20150, CONNECTOR, WPI . . . . .	20-72-11
17-20150-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-20150-1, CONNECTOR, WPI . . . . .	20-72-11
17-20250, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-20250, CONNECTOR, WPI . . . . .	20-72-11
17-20250-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-20250-1, CONNECTOR, WPI . . . . .	20-72-11
17-20370, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-20370, CONNECTOR, WPI . . . . .	20-72-11
17-20370-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-20370-1, CONNECTOR, WPI . . . . .	20-72-11
17-20500, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-20500, CONNECTOR, WPI . . . . .	20-72-11
17-20500-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-20500-1, CONNECTOR, WPI . . . . .	20-72-11
17-300-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-300-1, CONNECTOR, WPI . . . . .	20-72-11
17-301-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-301-1, CONNECTOR, WPI . . . . .	20-72-11
17-302-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-302-1, CONNECTOR, WPI . . . . .	20-72-11
17-303-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-303-1, CONNECTOR, WPI . . . . .	20-72-11
17-304-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-304-1, CONNECTOR, WPI . . . . .	20-72-11
17-305-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-305-1, CONNECTOR, WPI . . . . .	20-72-11
17-306-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-306-1, CONNECTOR, WPI . . . . .	20-72-11
17-307-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-307-1, CONNECTOR, WPI . . . . .	20-72-11
17-308-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-308-1, CONNECTOR, WPI . . . . .	20-72-11
17-309-1, CONNECTOR, AMPHENOL . . . . .	20-72-11
17-309-1, CONNECTOR, WPI . . . . .	20-72-11
17-310-1, BACKSHELL, AMPHENOL . . . . .	20-72-08
17-310-1, BACKSHELL, WPI . . . . .	20-72-08
17-311-1, BACKSHELL, AMPHENOL . . . . .	20-72-08
17-311-1, BACKSHELL, WPI . . . . .	20-72-08
17-312-1, BACKSHELL, AMPHENOL . . . . .	20-72-08
17-312-1, BACKSHELL, WPI . . . . .	20-72-08
17-313-1, BACKSHELL, AMPHENOL . . . . .	20-72-08
17-313-1, BACKSHELL, WPI . . . . .	20-72-08

## 20-CROSS REFERENCE INDEX



707, 727-787

STANDARD WIRING PRACTICES MANUAL

CHAPTER 20

17-314-1, BACKSHELL, AMPHENOL . . . . . 20-72-08

17-314-1, BACKSHELL, WPI . . . . . 20-72-08

172160-1, CONNECTOR, AMP . . . . . 20-42-01

172168-1, CONNECTOR, AMP . . . . . 20-42-01

191-314-0001, CONNECTOR, METHODE . . . . . 20-82-13

191-341-0003, CONNECTOR, METHODE . . . . . 20-82-13

191-366-0006, CONNECTOR, METHODE . . . . . 20-82-13

192-314-0007, CONNECTOR, METHODE . . . . . 20-82-13

192-341-0005, CONNECTOR, METHODE . . . . . 20-82-13

192-366-0010, CONNECTOR, METHODE . . . . . 20-82-13

1965-12-9, CONNECTOR, KINGS . . . . . 20-53-05

For training purposes only!

20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## 2

2-320563-3, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-320568-2, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
2-320568-2, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-320568-3, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
2-320568-3, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-320569-5, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-320569-6, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-320571-3, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
2-320571-3, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-320571-4, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
2-320571-4, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-320571-5, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
2-320571-5, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-320572-2, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-320572-3, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
2-320572-3, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-320572-4, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-320573-1, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-320573-2, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-320573-3, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-320575-2, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-320575-3, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-320576-2, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-320576-3, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-320577-1, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-320577-2, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-329083-1, CONNECTOR, AMP . . . . .	20-51-21
2-36153-3, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
2-36153-3, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-36153-4, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
2-36153-4, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-36153-5, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
2-36153-5, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-36161-3, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
2-36161-3, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-36161-4, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
2-36161-4, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-36161-5, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
2-36161-6, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
202-3836-000 CABLE	
AVM, MICRODOT, CONNECTOR ASSEMBLY . . . . .	20-35-22
202A()-3-00, STRAIGHT BOOT, RAYCHEM . . . . .	20-10-16
204-18291-2, CONNECTOR, BOEING . . . . .	20-40-15
208598-3, CONNECTOR, AMP . . . . .	20-71-14
208972-3, CONNECTOR, AMP . . . . .	20-71-14
208973-5, CONNECTOR, AMP . . . . .	20-71-14

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

208973-6, CONNECTOR, AMP .....	20-71-14
208973-8, CONNECTOR, AMP .....	20-71-14
208977-4, CONNECTOR, AMP .....	20-71-14
208977-5, CONNECTOR, AMP .....	20-71-14
208977-7, CONNECTOR, AMP .....	20-71-14
211600-1, PROTECTIVE CAP, AMP .....	20-71-14
211600-2, PROTECTIVE CAP, AMP .....	20-71-14
213(), CONNECTOR, AMPHENOL .....	20-71-12
213395-1, CONNECTOR, AMP .....	20-72-17
213396-1, CONNECTOR, AMP .....	20-72-17
222A()-3-00, 90 DEGREE BOOT, RAYCHEM .....	20-10-16
227155-1, TERMINAL, COPALUM, AMP .....	20-30-14
24-00033 WIRE	
CHAMPLAIN, MIL-C-5015 CONNECTOR ASSEMBLY .....	20-63-14
24-00034 WIRE	
CHAMPLAIN, GRAVINER CONNECTOR ASSEMBLY .....	20-62-15
CHAMPLAIN, MIL-C-5015 CONNECTOR ASSEMBLY .....	20-63-14
240-92-702, PROTECTIVE CAP, RADIAL .....	20-71-14
240-92-703, PROTECTIVE CAP, RADIAL .....	20-71-14
240-92-706, PROTECTIVE CAP, RADIAL .....	20-71-14
240-92-707, PROTECTIVE CAP, RADIAL .....	20-71-14
2430-1-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2430-2-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2431-74-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2431-76-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2431-80-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2431-81-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2431-82-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2431-83-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2431-84-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2431-85-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2431-87-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2431-88-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2431-89-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2435-74-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2435-77-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2435-81-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2435-82-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2435-83-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2435-84-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2435-87-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2436-81-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2436-83-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
2436-85-(), COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
246-3000R()-(), CONNECTOR, AMPHENOL .....	20-61-19
246-3006R()-(), CONNECTOR, AMPHENOL .....	20-61-19
252-1230-000, ADAPTER, CRIMP BARREL, ITT CANNON .....	20-62-26

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

252-94102 THERMOCOUPLE WIRE	
GALITE, TERMINAL ASSEMBLY	20-35-27
2564-3, CONNECTOR, LINDBERG	20-62-17
2564-4, CONNECTOR, LINDBERG	20-62-17
26574, CONNECTOR, ENDEVCO	20-35-11
277027-1, SPLICE, COPALUM, AMP	20-30-13
277028-2, TERMINAL, COPALUM, AMP	20-30-14
277050-1, SPLICE, COPALUM, AMP	20-30-13
277082-1, SPLICE, COPALUM, AMP	20-30-13
277147-1, TERMINAL, COPALUM, AMP	20-30-14
277147-3, TERMINAL, COPALUM, AMP	20-30-14
277147-4, TERMINAL, COPALUM, AMP	20-30-14
277147-5, TERMINAL, COPALUM, AMP	20-30-14
277148-1, TERMINAL, COPALUM, AMP	20-30-14
277148-2, TERMINAL, COPALUM, AMP	20-30-14
277148-3, TERMINAL, ALUMINUM, AMP	20-30-14
277148-3, TERMINAL, COPALUM, AMP	20-30-14
277148-4, TERMINAL, COPALUM, AMP	20-30-14
277148-5, TERMINAL, COPALUM, AMP	20-30-14
277148-7, TERMINAL, COPALUM, AMP	20-30-14
277149-1, TERMINAL, COPALUM, AMP	20-30-14
277149-2, TERMINAL, COPALUM, AMP	20-30-14
277149-3, TERMINAL, ALUMINUM, AMP	20-30-14
277149-3, TERMINAL, COPALUM, AMP	20-30-14
277149-4, TERMINAL, COPALUM, AMP	20-30-14
277149-5, TERMINAL, COPALUM, AMP	20-30-14
277150-1, TERMINAL, COPALUM, AMP	20-30-14
277150-2, TERMINAL, COPALUM, AMP	20-30-14
277150-3, TERMINAL, COPALUM, AMP	20-30-14
277151-1, TERMINAL, ALUMINUM, AMP	20-30-14
277151-1, TERMINAL, COPALUM, AMP	20-30-14
277151-2, TERMINAL, COPALUM, AMP	20-30-14
277151-3, TERMINAL, COPALUM, AMP	20-30-14
277151-5, TERMINAL, COPALUM, AMP	20-30-14
277151-6, TERMINAL, COPALUM, AMP	20-30-14
277152-2, TERMINAL, COPALUM, AMP	20-30-14
277152-3, TERMINAL, COPALUM, AMP	20-30-14
277152-4, TERMINAL, COPALUM, AMP	20-30-14
277152-5, TERMINAL, COPALUM, AMP	20-30-14
277153-1, TERMINAL, COPALUM, AMP	20-30-14
277154-1, TERMINAL, COPALUM, AMP	20-30-14
277156-1, SPLICE, COPALUM, AMP	20-30-13
277157-1, SPLICE, COPALUM, AMP	20-30-13
277158-1, SPLICE, COPALUM, AMP	20-30-13
277159-1, SPLICE, COPALUM, AMP	20-30-13
277160-1, SPLICE, COPALUM, AMP	20-30-13
277161-1, SPLICE, COPALUM, AMP	20-30-13
277162-1, SPLICE, COPALUM, AMP	20-30-13

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

277163-1, SPLICE, COPALUM, AMP . . . . .	20-30-13
277164-1, SPLICE, COPALUM, AMP . . . . .	20-30-13
277165-1, SPLICE, COPALUM, AMP . . . . .	20-30-13
277168-1, SPLICE, COPALUM, AMP . . . . .	20-30-13
280-30001-(), TERMINAL BLOCK MODULE, BOEING . . . . .	20-83-02
280T10()-(), CONNECTOR, BOEING . . . . .	20-61-11
280T1000-1, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-10, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-100, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-101, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-102, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-103, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-104, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-105, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-106, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-107, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-108, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-109, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-11, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-110, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-111, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-112, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-113, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-114, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-115, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-116, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-117, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-118, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-119, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-12, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-120, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-121, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-122, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-123, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-124, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-125, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-126, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-127, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-128, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-129, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-13, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-132, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-133, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-134, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-135, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-136, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-137, CONNECTOR, BOEING . . . . .	20-61-11
280T1000-138, CONNECTOR, BOEING . . . . .	20-61-11

## 20-CROSS REFERENCE INDEX



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

280T1000-139, CONNECTOR, BOEING	20-61-11
280T1000-14, CONNECTOR, BOEING	20-61-11
280T1000-140, CONNECTOR, BOEING	20-61-11
280T1000-141, CONNECTOR, BOEING	20-61-11
280T1000-142, CONNECTOR, BOEING	20-61-11
280T1000-143, CONNECTOR, BOEING	20-61-11
280T1000-144, CONNECTOR, BOEING	20-61-11
280T1000-145, CONNECTOR, BOEING	20-61-11
280T1000-146, CONNECTOR, BOEING	20-61-11
280T1000-147, CONNECTOR, BOEING	20-61-11
280T1000-148, CONNECTOR, BOEING	20-61-11
280T1000-149, CONNECTOR, BOEING	20-61-11
280T1000-15, CONNECTOR, BOEING	20-61-11
280T1000-150, CONNECTOR, BOEING	20-61-11
280T1000-151, CONNECTOR, BOEING	20-61-11
280T1000-152, CONNECTOR, BOEING	20-61-11
280T1000-153, CONNECTOR, BOEING	20-61-11
280T1000-154, CONNECTOR, BOEING	20-61-11
280T1000-155, CONNECTOR, BOEING	20-61-11
280T1000-156, CONNECTOR, BOEING	20-61-11
280T1000-157, CONNECTOR, BOEING	20-61-11
280T1000-158, CONNECTOR, BOEING	20-61-11
280T1000-159, CONNECTOR, BOEING	20-61-11
280T1000-16, CONNECTOR, BOEING	20-61-11
280T1000-160, CONNECTOR, BOEING	20-61-11
280T1000-161, CONNECTOR, BOEING	20-61-11
280T1000-162, CONNECTOR, BOEING	20-61-11
280T1000-163, CONNECTOR, BOEING	20-61-11
280T1000-17, CONNECTOR, BOEING	20-61-11
280T1000-18, CONNECTOR, BOEING	20-61-11
280T1000-19, CONNECTOR, BOEING	20-61-11
280T1000-2, CONNECTOR, BOEING	20-61-11
280T1000-20, CONNECTOR, BOEING	20-61-11
280T1000-21, CONNECTOR, BOEING	20-61-11
280T1000-22, CONNECTOR, BOEING	20-61-11
280T1000-23, CONNECTOR, BOEING	20-61-11
280T1000-24, CONNECTOR, BOEING	20-61-11
280T1000-25, CONNECTOR, BOEING	20-61-11
280T1000-26, CONNECTOR, BOEING	20-61-11
280T1000-27, CONNECTOR, BOEING	20-61-11
280T1000-28, CONNECTOR, BOEING	20-61-11
280T1000-3, CONNECTOR, BOEING	20-61-11
280T1000-4, CONNECTOR, BOEING	20-61-11
280T1000-5, CONNECTOR, BOEING	20-61-11
280T1000-6, CONNECTOR, BOEING	20-61-11
280T1000-7, CONNECTOR, BOEING	20-61-11
280T1000-8, CONNECTOR, BOEING	20-61-11
280T1000-9, CONNECTOR, BOEING	20-61-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

280T1003-1, CONNECTOR, BOEING . . . . .	20-61-11
280T1004-1, CONNECTOR, BOEING . . . . .	20-61-11
280T1004-10, CONNECTOR, BOEING . . . . .	20-61-11
280T1004-8, CONNECTOR, BOEING . . . . .	20-61-11
280T1021-1, CONNECTOR, BOEING . . . . .	20-61-11
280T1021-2, CONNECTOR, BOEING . . . . .	20-61-11
280T1021-3, CONNECTOR, BOEING . . . . .	20-61-11
280T1021-4, CONNECTOR, BOEING . . . . .	20-61-11
280T1021-5, CONNECTOR, BOEING . . . . .	20-61-11
280T1021-51, CONNECTOR, BOEING . . . . .	20-61-11
280T1021-52, CONNECTOR, BOEING . . . . .	20-61-11
280T1021-53, CONNECTOR, BOEING . . . . .	20-61-11
280T1021-54, CONNECTOR, BOEING . . . . .	20-61-11
280T1021-55, CONNECTOR, BOEING . . . . .	20-61-11
280T1021-56, CONNECTOR, BOEING . . . . .	20-61-11
280T1021-6, CONNECTOR, BOEING . . . . .	20-61-11
280U0001-(), CONNECTOR, BOEING . . . . .	20-72-17
280U0002-(), CONNECTOR, BOEING . . . . .	20-72-17
280U0003-(), CONNECTOR, BOEING . . . . .	20-72-17
280U0004-(), CONNECTOR, BOEING . . . . .	20-72-17
280U0005-(), CONNECTOR, BOEING . . . . .	20-72-17
280U0006-(), CONNECTOR, BOEING . . . . .	20-72-17
280U0007-(), CONNECTOR, BOEING . . . . .	20-72-17
280U001()-(), CONNECTOR, BOEING . . . . .	20-61-11
280U0010-1, TERMINAL LUG, HIGH TEMPERATURE, BOEING . . . . .	20-30-11
280U0011-(), CONNECTOR, BOEING . . . . .	20-72-17
280U0013-1, CONNECTOR, BOEING . . . . .	20-61-11
280U0013-101, CONNECTOR, BOEING . . . . .	20-61-11
280U0013-151, CONNECTOR, BOEING . . . . .	20-61-11
280U0013-152, CONNECTOR, BOEING . . . . .	20-61-11
280U0013-201, CONNECTOR, BOEING . . . . .	20-61-11
280U0013-202, CONNECTOR, BOEING . . . . .	20-61-11
280U0013-51, CONNECTOR, BOEING . . . . .	20-61-11
280U0014-1, CONNECTOR, BOEING . . . . .	20-61-11
280U0019-1, CONNECTOR, BOEING . . . . .	20-61-11
280U0019-51, CONNECTOR, BOEING . . . . .	20-61-11
280U0021, TERMINAL, COPALUM, BOEING . . . . .	20-30-14
280U2028-(), CONNECTOR, BOEING . . . . .	20-61-11
280U2028-100, CONNECTOR, BOEING . . . . .	20-61-11
280U2028-106, CONNECTOR, BOEING . . . . .	20-61-11
280U2028-107, CONNECTOR, BOEING . . . . .	20-61-11
280U2028-108, CONNECTOR, BOEING . . . . .	20-61-11
280U2028-109, CONNECTOR, BOEING . . . . .	20-61-11
280U2028-200, CONNECTOR, BOEING . . . . .	20-61-11
280U2028-206, CONNECTOR, BOEING . . . . .	20-61-11
280U2028-207, CONNECTOR, BOEING . . . . .	20-61-11
280U2028-208, CONNECTOR, BOEING . . . . .	20-61-11
280U2028-209, CONNECTOR, BOEING . . . . .	20-61-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

280U2028-300, CONNECTOR, BOEING . . . . .	20-61-11
280U2028-306, CONNECTOR, BOEING . . . . .	20-61-11
280U2028-400, CONNECTOR, BOEING . . . . .	20-61-11
280U2028-406, CONNECTOR, BOEING . . . . .	20-61-11
280W0002-1, CONNECTOR, BOEING . . . . .	20-61-11
284U1147-(), CONNECTOR, AMP . . . . .	20-72-17
284U1147-1(), CONNECTOR, AMP . . . . .	20-72-17
284U1147-10(), CONNECTOR, AIE . . . . .	20-72-17
284U1147-1072, CONNECTOR, AIE . . . . .	20-72-17
284U1147-11(), CONNECTOR, AIE . . . . .	20-72-17
284U1147-1166, CONNECTOR, AIE . . . . .	20-72-17
284U1147-12(), CONNECTOR, AIE . . . . .	20-72-17
284U1147-13(), CONNECTOR, AIE . . . . .	20-72-17
284U1147-14(), CONNECTOR, AIE . . . . .	20-72-17
284U1147-16(), CONNECTOR, AIE . . . . .	20-72-17
284U1147-17(), CONNECTOR, AIE . . . . .	20-72-17
284U1147-18(), CONNECTOR, AIE . . . . .	20-72-17
284U1147-1824, CONNECTOR, AIE . . . . .	20-72-17
284U1147-1826, CONNECTOR, AIE . . . . .	20-72-17
284U1147-1831, CONNECTOR, AIE . . . . .	20-72-17
284U1147-1834, CONNECTOR, AIE . . . . .	20-72-17
284U1147-1837, CONNECTOR, AIE . . . . .	20-72-17
284U1147-1840, CONNECTOR, AIE . . . . .	20-72-17
284U1147-1919, CONNECTOR, AIE . . . . .	20-72-17
284U1147-2(), CONNECTOR, AMP . . . . .	20-72-17
284U1147-2001, CONNECTOR, AIE . . . . .	20-72-17
284U1147-3(), CONNECTOR, AMP . . . . .	20-72-17
284U1147-4(), CONNECTOR, AMP . . . . .	20-72-17
284U1147-6(), CONNECTOR, AMP . . . . .	20-72-17
284U1147-7(), CONNECTOR, AMP . . . . .	20-72-17
284U1147-72, CONNECTOR, AMP . . . . .	20-72-17
284U1147-8(), CONNECTOR, AMP . . . . .	20-72-17
284U1147-831, CONNECTOR, AMP . . . . .	20-72-17
284U1147-834, CONNECTOR, AMP . . . . .	20-72-17
284U1147-837, CONNECTOR, AMP . . . . .	20-72-17
284U1147-840, CONNECTOR, AMP . . . . .	20-72-17
285-00-10-002-(), CONNECTOR, CINCH . . . . .	20-74-11
285-00-20-002-(), CONNECTOR, CINCH . . . . .	20-74-11
285T0112, SENSOR UNIT, AUTOBRIGHT INDICATOR, BOEING . . . . .	20-83-00
285T0625-1, CONNECTOR, WIRE WRAP, COVER, QPL . . . . .	20-72-18
285T0625-2, CONNECTOR, WIRE WRAP, COVER, QPL . . . . .	20-72-18
285T0626-1, CONNECTOR, WIRE WRAP, COVER, QPL . . . . .	20-72-18
285T0631-1, CONNECTOR, WIRE WRAP, COVER, QPL . . . . .	20-72-18
285T0632-1, CONNECTOR, WIRE WRAP, COVER, QPL . . . . .	20-72-18
285T0632-2, CONNECTOR, WIRE WRAP, COVER, QPL . . . . .	20-72-18
285T0632-3, CONNECTOR, WIRE WRAP, COVER, QPL . . . . .	20-72-18
285U0173-1, CONNECTOR, WIRE WRAP, COVER, QPL . . . . .	20-72-18
285U0173-2, CONNECTOR, WIRE WRAP, COVER, QPL . . . . .	20-72-18

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

286-00-10-002-(), CONNECTOR, CINCH . . . . .	20-74-11
286-00-10-006-(), CONNECTOR, CINCH . . . . .	20-74-11
286-00-20-002-(), CONNECTOR, CINCH . . . . .	20-74-11
286-00-20-006-(), CONNECTOR, CINCH . . . . .	20-74-11
287T0011-(), CLAMP, LOOP, BOEING . . . . .	20-10-12
287T0011-1, CLAMP, FIBER OPTIC CABLE, BOEING. . . . .	20-12-11
287T0011-4, CLAMP, FIBER OPTIC CABLE, BOEING. . . . .	20-12-11
287T0028-1, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
287T0028-14, ADAPTER PLATE, CUTOUT, BOEING. . . . .	20-60-06
287T0028-15, ADAPTER PLATE, CUTOUT, BOEING. . . . .	20-60-06
287T0028-2, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
287T0028-3, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
287T0028-4, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
287T0028-5, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
287W1619-() VAPOR SEAL, BOEING . . . . .	20-14-11
2971-2-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2971-3-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2971-4-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2971-5-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2971-6-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2971-7-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2971-8-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2975-2-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2975-4-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2975-5-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2975-6-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2976-1-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2976-3-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2981-1-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2981-3-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2981-4-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2981-5-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2981-6-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2981-7-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2981-8-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2985-2-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2985-3-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2985-4-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2986-1-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
2986-3-(), COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## 3

3-208972-3, CONNECTOR, AMP . . . . .	20-71-14
3-320564-1, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
3-CHANNEL TRUNK CABLE ASSEMBLY . . . . .	
S280W701-101, BOEING . . . . .	20-12-11
S280W701-102, BOEING . . . . .	20-12-11
S280W701-114, BOEING . . . . .	20-12-11
S280W701-115, BOEING . . . . .	20-12-11
30-00053-(), CONNECTOR, SOURIAU . . . . .	20-72-21
30-00054-(), CONNECTOR, SOURIAU . . . . .	20-72-21
30-04680 ADF CABLE . . . . .	
CHAMPLAIN, SHIELD TERMINATION . . . . .	20-35-24
30-04749 CABLE . . . . .	
ADF, CHAMPLAIN, SHIELD TERMINATION . . . . .	20-35-23
300044-001, CONNECTOR, INCON . . . . .	20-82-13
300046-003, CONNECTOR, INCON . . . . .	20-82-13
300048-004, CONNECTOR, INCON . . . . .	20-82-13
300052-001, CONNECTOR, INCON . . . . .	20-82-13
300055-001, CONNECTOR, INCON . . . . .	20-82-13
300206-001, CONNECTOR, INCON . . . . .	20-82-13
301A022, MOLDED TEE, RAYCHEM . . . . .	20-10-16
30382-1, CONNECTOR, DAGE . . . . .	20-51-20
30382-1, CONNECTOR, DAGE . . . . .	20-53-05
30383-1, CONNECTOR, DAGE . . . . .	20-51-20
30391-1, CONNECTOR, DAGE . . . . .	20-53-05
31-30383-1, CONNECTOR, AMPHENOL . . . . .	20-51-20
312N5204-1, COVER PLATE, BOEING . . . . .	20-10-21
312N5205-1, SEAL, BOEING . . . . .	20-10-21
312T2202-1, SEAL HOUSING, BOEING . . . . .	20-10-21
318-07-99-001, CONNECTOR INSERT, CINCH . . . . .	20-74-11
318-07-99-002, CONNECTOR INSERT, CINCH . . . . .	20-74-11
318-07-99-014, CONNECTOR INSERT, CINCH . . . . .	20-74-11
318-07-99-015, CONNECTOR INSERT, CINCH . . . . .	20-74-11
318-07-99-016, CONNECTOR INSERT, CINCH . . . . .	20-74-11
318-07-99-017, CONNECTOR INSERT, CINCH . . . . .	20-74-11
319AS110BM, BACKSHELL, GLENAIR . . . . .	20-25-15
319F064XO, BACKSHELL, GLENAIR . . . . .	20-25-15
319HS110BM, BACKSHELL, GLENAIR . . . . .	20-25-15
320551, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
320553, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
320561, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
320563, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
320564, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
320567, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
320568, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
320569, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
320571, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

320572, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
320573, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
320576, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
320577, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
321892, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, AMP. . . . .	20-30-11
321893, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, AMP. . . . .	20-30-11
321893, TERMINAL, ASSEMBLY WITH 65B47866-() CABLE, AMP . . . . .	20-35-11
321894, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, AMP. . . . .	20-30-11
321897, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, AMP. . . . .	20-30-11
321898, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, AMP. . . . .	20-30-11
322320, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, AMP. . . . .	20-30-11
322325, BUTT SPLICE, AMP. . . . .	20-23-17
322332, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, AMP. . . . .	20-30-11
322334, TERMINAL LUG, AMP. . . . .	20-23-39
322337, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, AMP. . . . .	20-30-11
322338, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, AMP. . . . .	20-30-11
322341, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, AMP. . . . .	20-30-11
322344, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
322362, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
322363, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
322364, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
322366, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
322367, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
322369, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
322371, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
322373, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
322374, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
322375, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
322376, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
322378, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
323064, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
323065, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
323066, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
323069, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
323199, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
323747, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
323749, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, AMP. . . . .	20-30-11
323750, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, AMP. . . . .	20-30-11
323751, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, AMP. . . . .	20-30-11
323752, TERMINAL LUG, HIGH TEMPERATURE, AMP . . . . .	20-30-11
323912, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
323914, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
323915, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
323916, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
324043, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-15-21
324043, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
324044, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
324045, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-15-21

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

324045, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324046, TERMINAL LUG, GENERAL PURPOSE, AMP	20-15-21
324046, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324047, TERMINAL LUG, GENERAL PURPOSE, AMP	20-15-21
324047, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324048, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324049, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324050, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324051, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324052, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324053, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324054, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324055, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324056, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324057, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324058, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324075, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324082, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324083, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324084, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324085, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324114, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324159, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324187, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324188, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324189, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
324484, END CAP, AMP	20-30-16
324485, END CAP, AMP	20-30-16
324486, END CAP, AMP	20-30-16
324487, END CAP, AMP	20-30-16
325154, TERMINAL LUG, HIGH TEMPERATURE, AMP	20-30-11
325155, TERMINAL LUG, HIGH TEMPERATURE, AMP	20-30-11
325156, TERMINAL LUG, HIGH TEMPERATURE, AMP	20-30-11
325157, TERMINAL LUG, HIGH TEMPERATURE, AMP	20-30-11
328307, END CAP, AMP	20-30-16
328308, END CAP, AMP	20-30-16
328309, END CAP, AMP	20-30-16
328849, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
328854, END CAP, AMP	20-30-16
328855, END CAP, AMP	20-30-16
328856, END CAP, AMP	20-30-16
328857, END CAP, AMP	20-30-16
328858, END CAP, AMP	20-30-16
328859, END CAP, AMP	20-30-16
328860, END CAP, AMP	20-30-16
328861, END CAP, AMP	20-30-16
328975, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
328998, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

329150, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
329151, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
329638, END CAP, AMP . . . . .	20-30-16
331456, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
331457, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
331458, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
331459, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
331460, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
331461, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
331467, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
331713, SPLICE, COAX, AMP . . . . .	20-51-26
331719, CONNECTOR, AMP . . . . .	20-51-26
331843, CONNECTOR, AMP . . . . .	20-51-26
340FS001N-14-2F12B, BACKSHELL, STRAIN RELIEF, GLENAIR . . . . .	20-15-33
34137, SPLICE, PARALLEL, AMP . . . . .	20-30-12
34138, SPLICE, PARALLEL, AMP . . . . .	20-30-12
348-(), CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-30
35303-10, CONNECTOR, FENWAL . . . . .	20-62-14
35303-100, CONNECTOR, FENWAL . . . . .	20-62-14
35303-11, CONNECTOR, FENWAL . . . . .	20-62-14
35303-12, CONNECTOR, FENWAL . . . . .	20-62-14
35303-141, CONNECTOR, FENWAL . . . . .	20-62-14
35303-142, CONNECTOR, FENWAL . . . . .	20-62-14
35303-64, CONNECTOR, FENWAL . . . . .	20-62-14
35303-66, CONNECTOR, FENWAL . . . . .	20-62-14
35303-67, CONNECTOR, FENWAL . . . . .	20-62-14
35303-68, CONNECTOR, FENWAL . . . . .	20-62-14
35303-73, CONNECTOR, FENWAL . . . . .	20-62-14
35303-75, CONNECTOR, FENWAL . . . . .	20-62-14
35303-77, CONNECTOR, FENWAL . . . . .	20-62-14
35303-8, CONNECTOR, FENWAL . . . . .	20-62-14
35303-87, CONNECTOR, FENWAL . . . . .	20-62-14
35303-9, CONNECTOR, FENWAL . . . . .	20-62-14
35303-90, CONNECTOR, FENWAL . . . . .	20-62-14
35303-91, CONNECTOR, FENWAL . . . . .	20-62-14
35303-94, CONNECTOR, FENWAL . . . . .	20-62-14
35303-95, CONNECTOR, FENWAL . . . . .	20-62-14
35303-97, CONNECTOR, FENWAL . . . . .	20-62-14
35303-98, CONNECTOR, FENWAL . . . . .	20-62-14
35303-99, CONNECTOR, FENWAL . . . . .	20-62-14
36149, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
36153, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
36161, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
380()001(), BACKSHELL, GLENAIR . . . . .	20-25-13
380()003, BACKSHELL, GLENAIR . . . . .	20-25-13
387(), BACKSHELL, GLENAIR . . . . .	20-25-13
387()020 BACKSHELL . . . . .	
GLENAIR, CONNECTOR ASSEMBLY WITH 65B47866-() CABLE . . . . .	20-35-11

## 20-CROSS REFERENCE INDEX



707, 727-787

STANDARD WIRING PRACTICES MANUAL

CHAPTER 20

387()A020, BACKSHELL, GLENAIR. . . . . 20-25-14  
387()B020, BACKSHELL, GLENAIR. . . . . 20-25-14  
387()S020, BACKSHELL, GLENAIR. . . . . 20-25-14

For training purposes only!

20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## 4

40-416-6132U, TERMINAL LUG, GENERAL PURPOSE, SMITHS INDUSTRIES . . . . .	20-15-21
40-617-2010, RELAY SOCKET, SMITHS INDUSTRIES . . . . .	20-15-46
40-617-286, RELAY SOCKET, SMITHS INDUSTRIES . . . . .	20-15-46
40-617-287, RELAY SOCKET, SMITHS INDUSTRIES . . . . .	20-15-46
40-617-288, RELAY SOCKET, SMITHS INDUSTRIES . . . . .	20-15-46
40-617-289, RELAY SOCKET, SMITHS INDUSTRIES . . . . .	20-15-46
40-617-290, RELAY SOCKET, SMITHS INDUSTRIES . . . . .	20-15-46
40-617-291, RELAY SOCKET, SMITHS INDUSTRIES . . . . .	20-15-46
40-617-292, RELAY SOCKET, SMITHS INDUSTRIES . . . . .	20-15-46
40-617-293, RELAY SOCKET, SMITHS INDUSTRIES . . . . .	20-15-46
40-617-294, RELAY SOCKET, SMITHS INDUSTRIES . . . . .	20-15-46
40-617-295, RELAY SOCKET, SMITHS INDUSTRIES . . . . .	20-15-46
40-617-296, RELAY SOCKET, SMITHS INDUSTRIES . . . . .	20-15-46
40-617-298, RELAY SOCKET, SMITHS INDUSTRIES . . . . .	20-15-46
40-716-1140, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1155, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1156, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1157, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1158, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1159, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1160, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1161, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1162, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1163, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1164, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1165, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1166, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1167, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1168, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1169, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1170, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1172, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1173, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1174, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1175, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1177, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1178, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1179, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1180, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-1181, TERMINAL LUG, RESTRICTIVE ENTRY, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-6079, SPLICE KIT, BUTT, SMITHS INDUSTRIES . . . . .	20-15-26
40-716-6080, SPLICE KIT, BUTT, SMITHS INDUSTRIES . . . . .	20-15-26
40-716-6096, SPLICE KIT, BUTT, SMITHS INDUSTRIES . . . . .	20-15-26
40-716-6120, TERMINAL LUG, GENERAL PURPOSE, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-6120U, TERMINAL LUG, GENERAL PURPOSE, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-6121U, TERMINAL LUG, GENERAL PURPOSE, SMITHS INDUSTRIES . . . . .	20-15-21

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

40-716-6123, TERMINAL LUG, GENERAL PURPOSE, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-6123U, TERMINAL LUG, GENERAL PURPOSE, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-6128U, TERMINAL LUG, GENERAL PURPOSE, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-6130U, TERMINAL LUG, GENERAL PURPOSE, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-6131U, TERMINAL LUG, GENERAL PURPOSE, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-6157-02, SPLICE, PARALLEL, SMITHS INDUSTRIES . . . . .	20-15-26
40-716-6157-03, SPLICE, PARALLEL, SMITHS INDUSTRIES . . . . .	20-15-26
40-716-6157-04, SPLICE, PARALLEL, SMITHS INDUSTRIES . . . . .	20-15-26
40-716-6199, TERMINAL LUG, GENERAL PURPOSE, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-6201, TERMINAL LUG, GENERAL PURPOSE, SMITHS INDUSTRIES . . . . .	20-15-21
40-716-6206, RESISTIVE SPLICE, SMITHS INDUSTRIES . . . . .	20-15-49
40-716-6207, RESISTIVE SPLICE, SMITHS INDUSTRIES . . . . .	20-15-49
40-716-6208, RESISTIVE SPLICE, SMITHS INDUSTRIES . . . . .	20-15-49
40-718-5238, TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5240, TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5254, TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5256, TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5257, TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5258, TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5259, TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5262, GROUND MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5263, GROUND MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5266, RESISTOR TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5268, RESISTOR TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5269, RESISTOR TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5270, RESISTOR TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5271, RESISTOR TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5272, RESISTOR TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5273, RESISTOR TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5274, RESISTOR TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5276, RESISTOR TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5278, RESISTOR TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5282, DIODE TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5285, TERMINAL STUD MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5290, RESISTOR TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5368-01, GROUND MODULE, SMITHS INDUSTRIES . . . . .	20-15-49
40-718-5404, RESISTOR TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5405, RESISTOR TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5406, RESISTOR TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5407, RESISTOR TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-938, TERMINAL MODULE TRACK, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-939, TERMINAL MODULE TRACK, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-940, TERMINAL MODULE TRACK, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-942, TERMINAL MODULE TRACK, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-944, TERMINAL MODULE TRACK, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-946, TERMINAL MODULE TRACK, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-950, TERMINAL MODULE TRACK, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-960, TERMINAL MODULE TRACK, SMITHS INDUSTRIES . . . . .	20-15-48

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

40-741-1603-08U, CLAMP, STRAIN RELIEF, SMITHS INDUSTRIES	20-15-33
40-741-1603-09U, CLAMP, STRAIN RELIEF, SMITHS INDUSTRIES	20-15-33
40-741-1604-04U, CLAMP, STRAIN RELIEF, SMITHS INDUSTRIES	20-15-33
40-741-1604-08U, CLAMP, STRAIN RELIEF, SMITHS INDUSTRIES	20-15-33
40-741-1604-09U, CLAMP, STRAIN RELIEF, SMITHS INDUSTRIES	20-15-33
40-741-1632, BACKSHELL, STRAIN RELIEF, SMITHS INDUSTRIES	20-15-33
40-742-2045-00, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-742-2045-26, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-742-2046-00, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-742-2046-26, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-742-3211-00U, CONNECTOR, SMITHS INDUSTRIES	20-15-35
40-742-4026-00U, CONNECTOR, SMITHS INDUSTRIES	20-15-35
40-742-4026-01U, CONNECTOR, SMITHS INDUSTRIES	20-15-35
40-742-4028-00, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-742-4030-00U, CONNECTOR, SMITHS INDUSTRIES	20-15-35
40-742-6024-00, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-742-6024-26, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-742-6025-29, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-742-6045, CONNECTOR, GE AVATION	20-15-44
40-742-7044-01U, CONNECTOR, SMITHS INDUSTRIES	20-15-35
40-742-7045-01U, CONNECTOR, SMITHS INDUSTRIES	20-15-35
40-742-7056, CONNECTOR, SMITHS INDUSTRIES	20-15-41
40-743-1158-26, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-1159-00, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-1521-00, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-1521-26, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-1521-27, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-1521-28, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-1521-29, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-1530-00, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-1641-00, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-1641-27, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-1641-28, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-1644-28, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-1656-28, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-2325-26, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-3182-29, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-3189-00U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
40-743-3196-00U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
40-743-4761-00, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-4761-26, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-4761-27, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-4761-28, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-4768-28, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-4773-00, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-4773-26, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-5103-26, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-5120-00, CONNECTOR, SMITHS INDUSTRIES	20-15-31

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

40-743-6213-26, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-6213-27, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-6217-28, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-6347-00, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-6347-26, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-6348-00, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-6821-00U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
40-743-6987-00U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
40-743-7396-00, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-7396-26, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-7396-27, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-7396-28, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-7396-29, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-7399-00, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-7399-26, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-7413-26, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-7416-00, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-7416-28, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-7419-00, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-8581-29, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-862, CONNECTOR, SMITHS INDUSTRIES	20-15-42
40-743-9136-29, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-9137-26, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-9137-27, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-9142-00, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-9142-29, CONNECTOR, SMITHS INDUSTRIES	20-15-31
40-743-9414-00U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
40-743-9414-05U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
40-743-9414-06U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
40-743-9414-07U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
40-743-9445-00U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
40-743-9445-05U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
40-743-9445-06U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
40-743-9445-07U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
40-743-9525, CONNECTOR, SMITHS INDUSTRIES	20-15-43
40-743-9698, CONNECTOR, SMITHS INDUSTRIES	20-15-43
40-743-9699, CONNECTOR, SMITHS INDUSTRIES	20-15-43
40-743-9734-00U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
40-743-9734-05U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
40-743-9734-06U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
40-743-9734-07U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
40-743-9744-00U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
40-743-9744-05U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
40-743-9744-06U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
40-743-9744-07U, CONNECTOR, SMITHS INDUSTRIES	20-15-33
400015, CONNECTOR, WAVE LAB	20-62-18
40229, CONNECTOR, ANDREWS	20-51-51

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

421-593 CUJAC COAX CABLE	
AMPHENOL, CONNECTOR ASSEMBLY . . . . .	20-51-41
421120-450, TERMINAL BLOCK MODULE, PRECISION CONNECTOR DESIGN . . . . .	20-90-11
421120-452, TERMINAL BLOCK MODULE, PRECISION CONNECTOR DESIGN . . . . .	20-90-11
421120-454, TERMINAL BLOCK MODULE, PRECISION CONNECTOR DESIGN . . . . .	20-90-11
42250KS(), CONNECTOR, MATRIX . . . . .	20-63-14
42839KS(), CONNECTOR, MATRIX . . . . .	20-63-14
42839KS14S5SX-190 CONNECTOR	
MATRIX, INSTALLATION TORQUE . . . . .	20-60-06
432-632-1089-00(), SWITCH, LIGHTED PUSHBUTTON, KORRY ELECTRONICS . . . . .	20-83-00
433-673-()-(), SWITCH, LIGHTED PUSHBUTTON, KORRY ELECTRONICS . . . . .	20-83-00
434-674-()-(), LIGHTED INDICATOR, KORRY ELECTRONICS . . . . .	20-83-00
437-027, BACKSHELL, GLENAIR . . . . .	20-40-16
440()H031, BACKSHELL, GLENAIR . . . . .	20-25-14
440()J031, BACKSHELL, GLENAIR . . . . .	20-25-14
440()J069, BACKSHELL, GLENAIR . . . . .	20-25-14
440()S031, BACKSHELL, GLENAIR . . . . .	20-25-14
440()S069, BACKSHELL, GLENAIR . . . . .	20-25-14
44267KS-10SL-3BN-745, CONNECTOR, HI-REL . . . . .	20-63-14
447HA557, BACKSHELL, GLENAIR . . . . .	20-25-15
44A7620	
RAYCHEM, THERMOCOUPLE WIRE, SHIELD TERMINATION . . . . .	20-10-15
44ASN, CONNECTOR, ANDREWS . . . . .	20-51-51
451120-026, RELAY SOCKET, AMPHENOL/ PCD . . . . .	20-81-19
451120-027, RELAY SOCKET, AMPHENOL/ PCD . . . . .	20-81-19
451120-028, RELAY SOCKET, AMPHENOL/ PCD . . . . .	20-81-19
460-3094-01-01-00, SOLDER ADAPTER, CAMBION . . . . .	20-40-00
467AH009LF10FR, BACKSHELL, GLENAIR . . . . .	20-25-13
467AJ009LF10FR, BACKSHELL, GLENAIR . . . . .	20-25-13
467AS009LF10FR, BACKSHELL, GLENAIR . . . . .	20-25-13
48-00R(), CONNECTOR, AMPHENOL . . . . .	20-61-11
48-00R16-10S, CONNECTOR, AMPHENOL . . . . .	20-35-13
48-03R(), CONNECTOR, AMPHENOL . . . . .	20-61-11
48-06R(), CONNECTOR, AMPHENOL . . . . .	20-61-11
48-10R(), CONNECTOR, AMPHENOL . . . . .	20-61-11
48-10R14-2/1P, CONNECTOR, AMPHENOL . . . . .	20-61-11
48-10R14-2/1P7, CONNECTOR, AMPHENOL . . . . .	20-61-11
48-10R14-2/1P8, CONNECTOR, AMPHENOL . . . . .	20-61-11
48-10R14-2/1P9, CONNECTOR, AMPHENOL . . . . .	20-61-11
48-16R(), CONNECTOR, AMPHENOL . . . . .	20-61-11
48-16R14-2/1S, CONNECTOR, AMPHENOL . . . . .	20-61-11
48-16R14-2/1S6, CONNECTOR, AMPHENOL . . . . .	20-61-11
48-16R14-2/1S7, CONNECTOR, AMPHENOL . . . . .	20-61-11
48-16R14-2/1S8, CONNECTOR, AMPHENOL . . . . .	20-61-11
48-16R14-2/1S9, CONNECTOR, AMPHENOL . . . . .	20-61-11
48-16R18-10/1S, CONNECTOR, AMPHENOL . . . . .	20-61-11
48-16R18-10/1S6, CONNECTOR, AMPHENOL . . . . .	20-61-11
48-16R18-10/1S7, CONNECTOR, AMPHENOL . . . . .	20-61-11

## 20-CROSS REFERENCE INDEX



707, 727-787

STANDARD WIRING PRACTICES MANUAL

CHAPTER 20

48-16R18-10/1S8, CONNECTOR, AMPHENOL . . . . . 20-61-11

48-16R18-10/1S9, CONNECTOR, AMPHENOL . . . . . 20-61-11

48-16V(), CONNECTOR, AMPHENOL . . . . . 20-61-11

48-63N(), CONNECTOR, AMPHENOL . . . . . 20-61-11

48-7005, CONNECTOR, AMPHENOL . . . . . 20-61-11

48-7164-(), CONNECTOR, AMPHENOL . . . . . 20-61-11

48-7190, SPLICE, REMOVABLE CONTACT, AMPHENOL . . . . . 20-30-12

48-7190-1, SPLICE, REMOVABLE CONTACT, AMPHENOL . . . . . 20-30-12

48-7191, SPLICE, REMOVABLE CONTACT, AMPHENOL . . . . . 20-30-12

48-7191-1, SPLICE, REMOVABLE CONTACT, AMPHENOL . . . . . 20-30-12

For training purposes only!

20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## 5

5-CHANNEL GATELINK CABLE ASSEMBLY	
S280W701-119, BOEING	20-12-11
S280W701-120, BOEING	20-12-11
5-CHANNEL STUB CABLE ASSEMBLY	
S280W701-106, BOEING	20-12-11
S280W701-107, BOEING	20-12-11
S280W701-108, BOEING	20-12-11
S280W701-110, BOEING	20-12-11
S280W701-111, BOEING	20-12-11
S280W701-112, BOEING	20-12-11
S280W701-113, BOEING	20-12-11
S280W701-116, BOEING	20-12-11
S280W701-117, BOEING	20-12-11
S280W701-118, BOEING	20-12-11
S280W701-122, BOEING	20-12-11
S280W701-123, BOEING	20-12-11
S280W701-124, BOEING	20-12-11
50031004-001, BACKSHELL, CINCH	20-62-21
502-70T-02, LAMP SOCKET, ESTERLINE-MASON	20-84-00
502-70T-02, LAMP SOCKET, WESTERN INDICATOR	20-84-00
5020G3442 COAX CABLE	
RAYCHEM, CONNECTOR ASSEMBLY	20-51-05
514-74-13-02, CONNECTOR, ESTERLINE-MASON	20-84-00
514-74-13-02, CONNECTOR, WESTERN INDICATOR	20-84-00
51408-016, TERMINAL LUG, GENERAL PURPOSE, SMITHS INDUSTRIES	20-15-21
51408-017, TERMINAL LUG, GENERAL PURPOSE, SMITHS INDUSTRIES	20-15-21
51444-103, CONNECTOR, GRAVINER	20-62-15
51444-106, CONNECTOR, GRAVINER	20-62-15
51444-118, CONNECTOR, GRAVINER	20-62-15
51444-123-1D, CONNECTOR, GRAVINER	20-62-15
51444-124-1D, CONNECTOR, GRAVINER	20-62-15
51444-129, CONNECTOR, GRAVINER	20-62-15
51444-129-1D, CONNECTOR, GRAVINER	20-62-15
51444-130, CONNECTOR, GRAVINER	20-62-15
51444-130-1D, CONNECTOR, GRAVINER	20-62-15
51444-137, CONNECTOR, GRAVINER	20-62-15
51444-138, CONNECTOR, GRAVINER	20-62-15
51444-144, CONNECTOR, GRAVINER	20-62-15
51444-145, CONNECTOR, GRAVINER	20-62-15
51863, TERMINAL LUG, GENERAL PURPOSE, AMP	20-30-11
51863-2, TERMINAL LUG, RESTRICTIVE ENTRY, AMP	20-15-21
51863-2, TERMINAL LUG, RESTRICTIVE ENTRY, AMP	20-30-11
51863-3, TERMINAL LUG, RESTRICTIVE ENTRY, AMP	20-15-21
51863-3, TERMINAL LUG, RESTRICTIVE ENTRY, AMP	20-30-11
51863-4, TERMINAL LUG, RESTRICTIVE ENTRY, AMP	20-15-21
51863-4, TERMINAL LUG, RESTRICTIVE ENTRY, AMP	20-30-11

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

51864, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
51864-1, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
51864-2, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
51864-6, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
51864-6, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
51864-7, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
51864-7, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
51864-8, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
51864-8, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
51864-9, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
51864-9, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
52273, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
52273, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
52273-1, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
52273-1, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
52273-2, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-15-21
52273-2, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
5242500-100, COUPLER, ARINC 629, SCI TECHNOLOGY . . . . .	20-11-11
5242500-101, COUPLER, ARINC 629, SCI TECHNOLOGY . . . . .	20-11-11
5242500-102, COUPLER, ARINC 629, SCI TECHNOLOGY . . . . .	20-11-11
5242505-100, COUPLER COVER, ARINC 629, SCI TECHNOLOGY . . . . .	20-11-11
5242505-101, COUPLER COVER, ARINC 629, SCI TECHNOLOGY . . . . .	20-11-11
5242505-102, COUPLER COVER, ARINC 629, SCI TECHNOLOGY . . . . .	20-11-11
5242515-100, COUPLER BASE, ARINC 629, SCI TECHNOLOGY . . . . .	20-11-11
5242515-101, COUPLER BASE, ARINC 629, SCI TECHNOLOGY . . . . .	20-11-11
5242515-102, COUPLER BASE, ARINC 629, SCI TECHNOLOGY . . . . .	20-11-11
52516, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52517, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52517-1, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52517-2, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52517-3, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52517-4, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52518, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52518-1, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52518-2, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52518-3, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52518-4, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52519, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52519-1, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52519-2, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52520, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52520-1, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52520-2, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52520-3, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52520-4, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52520-5, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52521-7, TERMINAL, COPALUM, AMP . . . . .	20-30-14
52521-9, TERMINAL, COPALUM, AMP . . . . .	20-30-14

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

52522, SPLICE, COPALUM, AMP . . . . .	20-30-13
52523, SPLICE, COPALUM, AMP . . . . .	20-30-13
52524, SPLICE, COPALUM, AMP . . . . .	20-30-13
52525, SPLICE, COPALUM, AMP . . . . .	20-30-13
52526, SPLICE, COPALUM, AMP . . . . .	20-30-13
52527, SPLICE, COPALUM, AMP . . . . .	20-30-13
527-187(), BACKSHELL, EMI, GLENAIR . . . . .	20-71-14
527-187(), BACKSHELL, GLENAIR . . . . .	20-25-14
527-212(), BACKSHELL, EMI, GLENAIR . . . . .	20-71-14
527-212(), BACKSHELL, GLENAIR . . . . .	20-25-14
527-281ML, BACKSHELL, GLENAIR . . . . .	20-74-12
52752-( ), CONNECTOR, MATRIX . . . . .	20-63-13
52753-( ), CONNECTOR, MATRIX . . . . .	20-63-13
52761-( ), CONNECTOR, MATRIX . . . . .	20-63-13
52834-1, TERMINAL, COPALUM, AMP . . . . .	20-30-14
53041, TERMINAL LUG, GENERAL PURPOSE, AMP . . . . .	20-30-11
53054, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
53055, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
53056, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
53057, TERMINAL LUG, RESTRICTIVE ENTRY, AMP . . . . .	20-30-11
53270-002, TERMINAL MODULE TRACK, SMITHS INDUSTRIES . . . . .	20-15-49
53270-003, TERMINAL MODULE TRACK, SMITHS INDUSTRIES . . . . .	20-15-49
53270-005, TERMINAL MODULE TRACK, SMITHS INDUSTRIES . . . . .	20-15-49
53527-1, SPLICE, COPALUM, AMP . . . . .	20-30-13
53528-1, SPLICE, COPALUM, AMP . . . . .	20-30-13
53710-001, TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-49
53710-002, TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-49
53710-003, TERMINAL MODULE, SMITHS INDUSTRIES . . . . .	20-15-49
53710-005, GROUND MODULE, SMITHS INDUSTRIES . . . . .	20-15-49
5446500-001, COUPLER, ARINC 629, SCI TECHNOLOGY . . . . .	20-11-11
557-(), BACKSHELL, GLENAIR . . . . .	20-25-14
55832-1, TERMINAL, COPALUM, AMP . . . . .	20-30-14
55832-2, TERMINAL, COPALUM, AMP . . . . .	20-30-14
55833-1, TERMINAL, COPALUM, AMP . . . . .	20-30-14
55833-2, TERMINAL, COPALUM, AMP . . . . .	20-30-14
55834-1, TERMINAL, COPALUM, AMP . . . . .	20-30-14
55834-2, TERMINAL, COPALUM, AMP . . . . .	20-30-14
55835-1, TERMINAL, COPALUM, AMP . . . . .	20-30-14
55835-2, TERMINAL, COPALUM, AMP . . . . .	20-30-14
55836-1, TERMINAL, COPALUM, AMP . . . . .	20-30-14
55836-2, TERMINAL, COPALUM, AMP . . . . .	20-30-14
55837-1, TERMINAL, COPALUM, AMP . . . . .	20-30-14
55838-1, TERMINAL, COPALUM, AMP . . . . .	20-30-14
55839-1, TERMINAL, COPALUM, AMP . . . . .	20-30-14
55840-1, TERMINAL, COPALUM, AMP . . . . .	20-30-14
55A6087 CABLE . . . . .	
RAYCHEM, SHIELD TERMINATION . . . . .	20-35-17

## 20-CROSS REFERENCE INDEX



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

55A6088 CABLE	
RAYCHEM, SHIELD TERMINATION . . . . .	20-35-19
55A6090 CABLE	
RAYCHEM, SHIELD TERMINATION . . . . .	20-35-18
55A6160 CABLE	
RAYCHEM, SHIELD TERMINATION . . . . .	20-35-20
55A6160-20 CABLE	
RAYCHEM, SHIELD TERMINATION . . . . .	20-35-20
582551-1, CONNECTOR, AMP . . . . .	20-82-11
582583-1, CONNECTOR, AMP . . . . .	20-82-11
582591-1, CONNECTOR, AMP . . . . .	20-82-11
592584-(), SPLICE, DISCONNECTABLE WIRE, AMP . . . . .	20-83-00

For training purposes only!

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## 6

60-116-00 CABLE	
VIBRO-METER, BENDIX 10-244() SERIES ASSEMBLY . . . . .	20-61-18
60124, TERMINAL, ALUMINUM, THOMAS & BETTS . . . . .	20-30-14
60789-2, TERMINAL, RECEPTACLE, AMP . . . . .	20-30-17
60790-1, TERMINAL, RECEPTACLE, AMP . . . . .	20-30-17
60790-2, TERMINAL, RECEPTACLE, AMP . . . . .	20-30-17
60888-4, TERMINAL, RECEPTACLE, AMP . . . . .	20-30-17
60983-3, TERMINAL, RECEPTACLE, AMP . . . . .	20-30-17
60B40052-3, CONNECTOR, BOEING . . . . .	20-62-13
60B40052-4, CONNECTOR, BOEING . . . . .	20-62-13
60B40122-(), SWITCH, LIGHTED PUSHBUTTON, BOEING . . . . .	20-83-00
61-02651 CABLE	
CHAMPLAIN, SHIELD TERMINATION . . . . .	20-35-20
61-02783 CABLE	
CHAMPLAIN, SHIELD TERMINATION . . . . .	20-35-20
617924013, BACKSHELL, RADIAL . . . . .	20-74-13
617925062, BACKSHELL, RADIAL . . . . .	20-74-12
617927007, BACKSHELL, RADIAL . . . . .	20-74-13
620410207, CONNECTOR, RADIAL . . . . .	20-71-14
620600694, CONNECTOR, RADIAL . . . . .	20-71-14
620AA028Z1-(), BACKSHELL, GLENAIR . . . . .	20-25-12
620AA028Z1-(), BACKSHELL, GLENAIR . . . . .	20-60-09
620AS048ZM-(), BACKSHELL, GLENAIR . . . . .	20-25-12
620HA048ZM-(), BACKSHELL, GLENAIR . . . . .	20-25-12
627AS152XO32, BACKSHELL, GLENAIR . . . . .	20-60-09
64-500 COAX CABLE	
PRODELIN, CONNECTOR ASSEMBLY . . . . .	20-51-90
640024-1, TERMINAL, RECEPTACLE, AMP . . . . .	20-30-17
65007, TERMINAL, ALUMINUM, THOMAS & BETTS . . . . .	20-30-14
65011, TERMINAL, ALUMINUM, THOMAS & BETTS . . . . .	20-30-14
65B414()-(), CONNECTOR, BOEING . . . . .	20-61-11
65B41429-1, CONNECTOR, BOEING . . . . .	20-61-11
65B41429-10, CONNECTOR, BOEING . . . . .	20-61-11
65B41429-11, CONNECTOR, BOEING . . . . .	20-61-11
65B41429-12, CONNECTOR, BOEING . . . . .	20-61-11
65B41429-13, CONNECTOR, BOEING . . . . .	20-61-11
65B41429-14, CONNECTOR, BOEING . . . . .	20-61-11
65B41429-15, CONNECTOR, BOEING . . . . .	20-61-11
65B41429-16, CONNECTOR, BOEING . . . . .	20-61-11
65B41429-17, CONNECTOR, BOEING . . . . .	20-61-11
65B41429-18, CONNECTOR, BOEING . . . . .	20-61-11
65B41429-19, CONNECTOR, BOEING . . . . .	20-61-11
65B41429-2, CONNECTOR, BOEING . . . . .	20-61-11
65B41429-20, CONNECTOR, BOEING . . . . .	20-61-11
65B41429-3, CONNECTOR, BOEING . . . . .	20-61-11
65B41429-4, CONNECTOR, BOEING . . . . .	20-61-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

65B41429-5, CONNECTOR, BOEING . . . . .	20-61-11
65B41429-6, CONNECTOR, BOEING . . . . .	20-61-11
65B41429-7, CONNECTOR, BOEING . . . . .	20-61-11
65B41429-8, CONNECTOR, BOEING . . . . .	20-61-11
65B41429-9, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-1, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-10, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-11, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-12, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-13, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-14, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-15, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-16, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-17, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-18, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-19, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-2, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-20, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-3, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-4, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-5, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-6, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-7, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-8, CONNECTOR, BOEING . . . . .	20-61-11
65B41430-9, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-1, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-10, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-11, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-12, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-13, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-14, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-15, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-16, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-17, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-18, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-19, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-2, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-20, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-3, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-4, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-5, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-6, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-7, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-8, CONNECTOR, BOEING . . . . .	20-61-11
65B41431-9, CONNECTOR, BOEING . . . . .	20-61-11
65B41432-1, CONNECTOR, BOEING . . . . .	20-61-11
65B41432-10, CONNECTOR, BOEING . . . . .	20-61-11
65B41432-11, CONNECTOR, BOEING . . . . .	20-61-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

65B41432-12, CONNECTOR, BOEING . . . . .	20-61-11
65B41432-13, CONNECTOR, BOEING . . . . .	20-61-11
65B41432-14, CONNECTOR, BOEING . . . . .	20-61-11
65B41432-15, CONNECTOR, BOEING . . . . .	20-61-11
65B41432-16, CONNECTOR, BOEING . . . . .	20-61-11
65B41432-17, CONNECTOR, BOEING . . . . .	20-61-11
65B41432-18, CONNECTOR, BOEING . . . . .	20-61-11
65B41432-19, CONNECTOR, BOEING . . . . .	20-61-11
65B41432-2, CONNECTOR, BOEING . . . . .	20-61-11
65B41432-20, CONNECTOR, BOEING . . . . .	20-61-11
65B41432-3, CONNECTOR, BOEING . . . . .	20-61-11
65B41432-4, CONNECTOR, BOEING . . . . .	20-61-11
65B41432-5, CONNECTOR, BOEING . . . . .	20-61-11
65B41432-6, CONNECTOR, BOEING . . . . .	20-61-11
65B41432-7, CONNECTOR, BOEING . . . . .	20-61-11
65B41432-8, CONNECTOR, BOEING . . . . .	20-61-11
65B41432-9, CONNECTOR, BOEING . . . . .	20-61-11
65B47866-() SHIELDED CABLE . . . . .	
BOEING, CONNECTOR ASSEMBLY . . . . .	20-35-11
BOEING, TERMINAL ASSEMBLY . . . . .	20-35-11
66-13970-1, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
66-14850-1, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
66-18337-1, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
667-047, DUST COVER, GLENAIR . . . . .	20-40-16
67-906, CONNECTOR, AMPHENOL . . . . .	20-61-12
67-907, CONNECTOR, AMPHENOL . . . . .	20-61-12
687-062-01, BAND, SHIELD TERMINATOR, GLENAIR . . . . .	20-25-14
687-062-02, BAND, SHIELD TERMINATOR, GLENAIR . . . . .	20-25-14
687-062-03, BAND, SHIELD TERMINATOR, GLENAIR . . . . .	20-25-14
687-062-04, BAND, SHIELD TERMINATOR, GLENAIR . . . . .	20-25-14
687-062-05, BAND, SHIELD TERMINATOR, GLENAIR . . . . .	20-25-14
687-062-06, BAND, SHIELD TERMINATOR, GLENAIR . . . . .	20-25-14
69-()R(), CONNECTOR, AMPHENOL . . . . .	20-61-13
69-0()R, CONNECTOR, AMPHENOL . . . . .	20-61-13
69-37164-3, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
69-54481, HF PROBE ANTENNA RECEPTACLE, BOEING . . . . .	20-87-00
69-6()R, CONNECTOR, AMPHENOL . . . . .	20-61-13
690-52622-1, TERMINAL LUG, GENERAL PURPOSE, THOMAS & BETTS . . . . .	20-30-11
690-52622-2, TERMINAL LUG, GENERAL PURPOSE, THOMAS & BETTS . . . . .	20-30-11
690-52622-3, TERMINAL LUG, GENERAL PURPOSE, THOMAS & BETTS . . . . .	20-30-11
6930-06-(), CONDUIT ADAPTER, ICORE . . . . .	20-61-00
6930-09-(), CONDUIT ADAPTER, ICORE . . . . .	20-61-00
69B41500, HF ANTENNA LEAD ASSEMBLY, BOEING . . . . .	20-87-00
69B41501-(), TERMINAL, BOEING . . . . .	20-87-00
69B4181()-(), CONNECTOR, BOEING . . . . .	20-61-11
69B41813-1, CONNECTOR, BOEING . . . . .	20-61-11
69B41813-2, CONNECTOR, BOEING . . . . .	20-61-11
69B41813-3, CONNECTOR, BOEING . . . . .	20-61-11

## 20-CROSS REFERENCE INDEX



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

69B41813-4, CONNECTOR, BOEING . . . . .	20-61-11
69B41813-5, CONNECTOR, BOEING . . . . .	20-61-11
69B41813-6, CONNECTOR, BOEING . . . . .	20-61-11
69B41813-7, CONNECTOR, BOEING . . . . .	20-61-11
69B41813-8, CONNECTOR, BOEING . . . . .	20-61-11
69B41814-1, CONNECTOR, BOEING . . . . .	20-61-11
69B41814-2, CONNECTOR, BOEING . . . . .	20-61-11
69B41814-3, CONNECTOR, BOEING . . . . .	20-61-11
69B41814-4, CONNECTOR, BOEING . . . . .	20-61-11
69B41814-5, CONNECTOR, BOEING . . . . .	20-61-11
69B41814-6, CONNECTOR, BOEING . . . . .	20-61-11
69B41815-1, CONNECTOR, BOEING . . . . .	20-61-11
69B41815-2, CONNECTOR, BOEING . . . . .	20-61-11
69B41815-3, CONNECTOR, BOEING . . . . .	20-61-11
69B41815-4, CONNECTOR, BOEING . . . . .	20-61-11
69B41815-5, CONNECTOR, BOEING . . . . .	20-61-11
69B41815-6, CONNECTOR, BOEING . . . . .	20-61-11
69B41816-1, CONNECTOR, BOEING . . . . .	20-61-11
69B41816-2, CONNECTOR, BOEING . . . . .	20-61-11
69B41816-3, CONNECTOR, BOEING . . . . .	20-61-11
69B41816-4, CONNECTOR, BOEING . . . . .	20-61-11
69B41816-5, CONNECTOR, BOEING . . . . .	20-61-11
69B41816-6, CONNECTOR, BOEING . . . . .	20-61-11
69B41817-1, CONNECTOR, BOEING . . . . .	20-61-11
69B41817-2, CONNECTOR, BOEING . . . . .	20-61-11
69B41817-3, CONNECTOR, BOEING . . . . .	20-61-11
69B41817-4, CONNECTOR, BOEING . . . . .	20-61-11
69B41817-5, CONNECTOR, BOEING . . . . .	20-61-11
69B41817-6, CONNECTOR, BOEING . . . . .	20-61-11
69B41817-7, CONNECTOR, BOEING . . . . .	20-61-11
69B41817-8, CONNECTOR, BOEING . . . . .	20-61-11
69B41817-9, CONNECTOR, BOEING . . . . .	20-61-11
69B41818-1, CONNECTOR, BOEING . . . . .	20-61-11
69B41818-10, CONNECTOR, BOEING . . . . .	20-61-11
69B41818-11, CONNECTOR, BOEING . . . . .	20-61-11
69B41818-2, CONNECTOR, BOEING . . . . .	20-61-11
69B41818-3, CONNECTOR, BOEING . . . . .	20-61-11
69B41818-4, CONNECTOR, BOEING . . . . .	20-61-11
69B41818-5, CONNECTOR, BOEING . . . . .	20-61-11
69B41818-6, CONNECTOR, BOEING . . . . .	20-61-11
69B41818-7, CONNECTOR, BOEING . . . . .	20-61-11
69B41818-8, CONNECTOR, BOEING . . . . .	20-61-11
69B41818-9, CONNECTOR, BOEING . . . . .	20-61-11
69B41819-1, CONNECTOR, BOEING . . . . .	20-61-11
69B41819-2, CONNECTOR, BOEING . . . . .	20-61-11
69B41819-3, CONNECTOR, BOEING . . . . .	20-61-11
69B41819-4, CONNECTOR, BOEING . . . . .	20-61-11
69B90483-(), CLAMP, BLOCK, BOEING . . . . .	20-10-12

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### 7

710 SERIES, CONVOLUTED TUBE ADAPTER, GLENAIR . . . . .	20-61-00
712-148, CONDUIT ADAPTER, GLENAIR. . . . .	20-61-00
71550SE-12T-03SN-960, CONNECTOR, HI-REL . . . . .	20-63-14
75-500, CONNECTOR, CABLEWAVE. . . . .	20-51-90
751-10-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
751-11-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
751-2-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
751-20-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
751-22-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
751-3-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
751-4-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
752-43-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
7524D5011	
TRIAX CABLE, RAYCHEM, CONNECTOR ASSEMBLY . . . . .	20-53-05
755-129-9, COAX CONNECTOR, KINGS ELECTRONICS. . . . .	20-51-15
755-78-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
755-79-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
755-93-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
756-10-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
756-16-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
756-4-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
76-500, CONNECTOR, CABLEWAVE. . . . .	20-51-90
787-8055-10M, BACKSHELL, DEUTSCH . . . . .	20-74-19
787-8055-16M, BACKSHELL, DEUTSCH . . . . .	20-74-19
787-8055-20M, BACKSHELL, DEUTSCH . . . . .	20-74-19
787-8055-30M, BACKSHELL, DEUTSCH . . . . .	20-74-19
791-10-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
791-11-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
791-5-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
791-6-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
791-7-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
791-8-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
791-9-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
795-15-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
795-16-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
795-20-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
795-21-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
795-23-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
795-29-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
795-30-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
795-33-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
796-15-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
796-17-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
796-18-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
796-19-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
796-4-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## 8

## 80-116-00 CABLE

VIBRO-METER, BENDIX 10-244() SERIES ASSEMBLY . . . . .	20-61-18
82-175, CONNECTOR, AMPHENOL . . . . .	20-51-41
82-3292, CONNECTOR, AMPHENOL . . . . .	20-51-42
82-887, ADAPTER KIT, AMPHENOL . . . . .	20-51-41
821-2-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
821-3-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
821-4-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
821-5-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
821-6-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
821-7-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
821-9-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
82164-1F, RELAY SOCKET, CLOVER . . . . .	20-81-11
823-1-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
823-2-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
825-10-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
825-11-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
825-12-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
825-14-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
825-7-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
826-10-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
826-8-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
826-9-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
83-185, CABLE, TRIAX, ADAPTER, AMPHENOL . . . . .	20-53-05
83-59, CONNECTOR, AMPHENOL . . . . .	20-53-05
84-()	
AMPHENOL, CONNECTOR . . . . .	20-61-26
84-(), CONNECTOR, WIRE-PRO . . . . .	20-61-26
8400-0()-(), TERMINAL MODULE BRACKET, MATRIX SCIENCE . . . . .	20-83-01
841-1-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
843-2-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
845-3-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
846-5-9, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
850-27-4, CONNECTOR, ROSEMOUNT . . . . .	20-64-15
851-30768-(), SWITCH, LIGHTED PUSHBUTTON, EATON . . . . .	20-83-00
851-30768-(), SWITCH, LIGHTED PUSHBUTTON, MSC . . . . .	20-83-00
851-35100-(), SWITCH, LIGHTED PUSHBUTTON, EATON . . . . .	20-83-00
851-35100-(), SWITCH, LIGHTED PUSHBUTTON, MSC . . . . .	20-83-00
851-37167-()-001, SWITCH, LIGHTED PUSH BUTTON, EATON . . . . .	20-84-13
851-37167-()-002, SWITCH, LIGHTED PUSH BUTTON, EATON . . . . .	20-84-13
851-37167-()-003, SWITCH, LIGHTED PUSH BUTTON, EATON . . . . .	20-84-13
851-37962-()-001, SWITCH, LIGHTED PUSH BUTTON, EATON . . . . .	20-84-13
851-37962-()-002, SWITCH, LIGHTED PUSH BUTTON, EATON . . . . .	20-84-13
851-37962-()-003, SWITCH, LIGHTED PUSH BUTTON, EATON . . . . .	20-84-13
851-37962-()-004, SWITCH, LIGHTED PUSH BUTTON, EATON . . . . .	20-84-13
851-37962-()-005, SWITCH, LIGHTED PUSH BUTTON, EATON . . . . .	20-84-13

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

851-37962-()-006, SWITCH, LIGHTED PUSH BUTTON, EATON	20-84-13
851-37962-()-101, SWITCH, LIGHTED PUSH BUTTON, EATON	20-84-13
851-37962-()-102, SWITCH, LIGHTED PUSH BUTTON, EATON	20-84-13
851-37962-()-103, SWITCH, LIGHTED PUSH BUTTON, EATON	20-84-13
851-37962-()-104, SWITCH, LIGHTED PUSH BUTTON, EATON	20-84-13
851-37962-()-201, SWITCH, LIGHTED PUSH BUTTON, EATON	20-84-13
851-37962-()-202, SWITCH, LIGHTED PUSH BUTTON, EATON	20-84-13
851-37962-()-203, SWITCH, LIGHTED PUSH BUTTON, EATON	20-84-13
851-37962-()-204, SWITCH, LIGHTED PUSH BUTTON, EATON	20-84-13
852-4000311 THERMOCOUPLE WIRE	
PIRELLI, TERMINAL ASSEMBLY	20-35-27
852-4985321 THERMOCOUPLE WIRE	
PIRELLI, TERMINAL ASSEMBLY	20-35-27
871-59-3, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
875-100-3, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
875-105-3, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
875-91-3, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
875-92-3, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
875564, CONNECTOR, WALTER KIDDE	20-62-16
876-64-3, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
876288, CONNECTOR, WALTER KIDDE	20-62-16
876633, CONNECTOR, WALTER KIDDE	20-62-16
876635, CONNECTOR, WALTER KIDDE	20-62-16
877535, CONNECTOR, WALTER KIDDE	20-62-16
877536, CONNECTOR, WALTER KIDDE	20-62-16
878238-01, CONNECTOR, WALTER KIDDE	20-62-16
878238-02, CONNECTOR, WALTER KIDDE	20-62-16
878239-01, CONNECTOR, WALTER KIDDE	20-62-16
878239-02, CONNECTOR, WALTER KIDDE	20-62-16
878550-01, CONNECTOR, WALTER KIDDE	20-62-16
878551-01, CONNECTOR, WALTER KIDDE	20-62-16
878581-01, CONNECTOR, WALTER KIDDE	20-62-16
878582-01, CONNECTOR, WALTER KIDDE	20-62-16
8856K515, TOGGLE SWITCH, EATON AEROSPACE	20-83-11
8868K56, TOGGLE SWITCH, EATON AEROSPACE	20-83-11
892(), CONNECTOR, SOURIAU	20-63-14
892-2-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
892-3-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
895-3-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
895-6-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
896-4-9, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
8D513M, CONNECTOR, SOURIAU	20-63-19

## 20-CROSS REFERENCE INDEX



707, 727-787

STANDARD WIRING PRACTICES MANUAL

CHAPTER 20

9

90 DEGREE BOOT

222A()-3-00, RAYCHEM . . . . .	20-10-16
9440(), CONNECTOR, MATRIX . . . . .	20-63-14
9446(), CONNECTOR, MATRIX . . . . .	20-63-14
9816(), CONNECTOR, MATRIX . . . . .	20-63-14
9816KS(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE, MATRIX . . . . .	20-35-11
99537-(), TERMINAL MODULE TRACK, MATRIX SCIENCE . . . . .	20-83-01

For training purposes only!

20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### A

A-4135()-13(), LIGHT, GRIMES-HONEYWELL . . . . .	20-84-11
A-4135()-1810(), LIGHT, GRIMES-HONEYWELL . . . . .	20-84-11
A-4135()-1820(), LIGHT, GRIMES-HONEYWELL . . . . .	20-84-11
A-4135()-1864(), LIGHT, GRIMES-HONEYWELL . . . . .	20-84-11
A-4135()-24(), LIGHT, GRIMES-HONEYWELL . . . . .	20-84-11
A-4135()-6(), LIGHT, GRIMES-HONEYWELL . . . . .	20-84-11
A-8985-1, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
A-8985-10, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
A-8985-103, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
A-8985-11, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
A-8985-12, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
A-8985-13, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
A-8985-14, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
A-8985-15, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
A-8985-16, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
A-8985-17, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
A-8985-2, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
A-8985-3, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
A-8985-4, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
A-8985-5, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
A-8985-6, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
A-8985-7, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
A-8985-8, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
A-8985-9, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
A10-106, FERRULE - SAFETY CABLE, DANIELS . . . . .	20-60-07
A10-109, FERRULE - SAFETY CABLE, DANIELS . . . . .	20-60-07
A10-112, FERRULE - SAFETY CABLE, DANIELS . . . . .	20-60-07
A10-115, FERRULE - SAFETY CABLE, DANIELS . . . . .	20-60-07
A10-118, FERRULE - SAFETY CABLE, DANIELS . . . . .	20-60-07
A10-121, FERRULE - SAFETY CABLE, DANIELS . . . . .	20-60-07
A10-124, FERRULE - SAFETY CABLE, DANIELS . . . . .	20-60-07
AA(), CONNECTOR, AMP . . . . .	20-71-12
AA-820-04, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
AA-820-06, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
AA-821-08, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
AA-821-10, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
AA-822-14, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
AA-822-56, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
AA-826-38, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
AA-832-06, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
AAY()-12(), CONNECTOR, AMPHENOL-PYLE . . . . .	20-61-11
AAY()-17(), CONNECTOR, AMPHENOL-PYLE . . . . .	20-61-11
AC30-(), SWITCH, JANCO . . . . .	20-83-00
AC45-(), SWITCH, JANCO . . . . .	20-83-00
AC60-(), SWITCH, JANCO . . . . .	20-83-00
AC90-(), SWITCH, JANCO . . . . .	20-83-00

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

AD(), CONNECTOR, AMP . . . . .	20-71-12
AD45-(), SWITCH, JANCO . . . . .	20-84-17
ADAPTER	
CABLE, G1504-(), GLENAIR . . . . .	20-85-12
CONDUIT, CONNECTOR ASSEMBLY . . . . .	20-61-00
COUPLING RING, C0900-246-(), CINCH . . . . .	20-61-11
CRIMP BARREL, 252-1230-000, ITT CANNON . . . . .	20-62-26
SLEEVE, CIRCULAR AREA UNITS (CAU) . . . . .	20-30-22
SOLDER, 460-3094-01-01-00, CAMBION . . . . .	20-40-00
SOLDER, BACA14AB164, BOEING . . . . .	20-40-00
SPLICE, CIRCULAR AREA UNITS (CAU) . . . . .	20-30-22
ADAPTER KIT	
82-887, AMPHENOL . . . . .	20-51-41
COAX CONNECTOR, 82-887, AMPHENOL . . . . .	20-51-41
ADAPTER PLATE	
CUTOUT, 287T0028-1, BOEING . . . . .	20-60-06
CUTOUT, 287T0028-14, BOEING . . . . .	20-60-06
CUTOUT, 287T0028-15, BOEING . . . . .	20-60-06
CUTOUT, 287T0028-2, BOEING . . . . .	20-60-06
CUTOUT, 287T0028-3, BOEING . . . . .	20-60-06
CUTOUT, 287T0028-4, BOEING . . . . .	20-60-06
CUTOUT, 287T0028-5, BOEING . . . . .	20-60-06
CUTOUT, 66-13970-1, BOEING . . . . .	20-60-06
CUTOUT, 66-14850-1, BOEING . . . . .	20-60-06
CUTOUT, 66-18337-1, BOEING . . . . .	20-60-06
CUTOUT, 69-37164-3, BOEING . . . . .	20-60-06
CUTOUT, BACA14BH10, BOEING . . . . .	20-60-06
CUTOUT, BACA14BH10A, BOEING . . . . .	20-60-06
CUTOUT, BACA14BH12, BOEING . . . . .	20-60-06
CUTOUT, BACA14BH14, BOEING . . . . .	20-60-06
CUTOUT, BACA14BH16A, BOEING . . . . .	20-60-06
CUTOUT, BACA14BH1A, BOEING . . . . .	20-60-06
CUTOUT, BACA14BH26A, BOEING . . . . .	20-60-06
CUTOUT, BACA14BH5, BOEING . . . . .	20-60-06
CUTOUT, BACA14BH5A, BOEING . . . . .	20-60-06
CUTOUT, BACA14BH6A, BOEING . . . . .	20-60-06
CUTOUT, BACA14BH7, BOEING . . . . .	20-60-06
CUTOUT, BACA14BH7A, BOEING . . . . .	20-60-06
CUTOUT, BACA14BH8, BOEING . . . . .	20-60-06
ADF CABLE	
30-04680, CHAMPLAIN . . . . .	20-35-24
30-04749, CHAMPLAIN, SHIELD TERMINATION . . . . .	20-35-23
ADHESIVE BONDED CABLE TIE MOUNT	
BACM14L(), BOEING . . . . .	20-10-12
ADHESIVE TAPE	
WIRE HARNESS TIE, BMS8-389, BOEING . . . . .	20-10-12
AFP30-0052-AA, CONNECTOR, AIRFONE . . . . .	20-64-17
AFP30-0054-AA, CONNECTOR, AIRFONE . . . . .	20-64-17

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### AIE

284U1147-10(), CONNECTOR . . . . .	20-72-17
284U1147-1072, CONNECTOR. . . . .	20-72-17
284U1147-11(), CONNECTOR . . . . .	20-72-17
284U1147-1166, CONNECTOR. . . . .	20-72-17
284U1147-12(), CONNECTOR . . . . .	20-72-17
284U1147-13(), CONNECTOR . . . . .	20-72-17
284U1147-14(), CONNECTOR . . . . .	20-72-17
284U1147-16(), CONNECTOR . . . . .	20-72-17
284U1147-17(), CONNECTOR . . . . .	20-72-17
284U1147-18(), CONNECTOR . . . . .	20-72-17
284U1147-1824, CONNECTOR. . . . .	20-72-17
284U1147-1826, CONNECTOR. . . . .	20-72-17
284U1147-1831, CONNECTOR. . . . .	20-72-17
284U1147-1834, CONNECTOR. . . . .	20-72-17
284U1147-1837, CONNECTOR. . . . .	20-72-17
284U1147-1840, CONNECTOR. . . . .	20-72-17
284U1147-1919, CONNECTOR. . . . .	20-72-17
284U1147-2001, CONNECTOR. . . . .	20-72-17

### AIE APC() SERIES

CONNECTOR ASSEMBLY . . . . .	20-72-19
------------------------------	----------

### AIR LB

0011-0000-053BB, TERMINAL STUD MODULE. . . . .	20-15-48
001751-102-00, TERMINAL MODULE TRACK. . . . .	20-15-48
001751-103-00, TERMINAL MODULE TRACK. . . . .	20-15-48
001751-104-00, TERMINAL MODULE TRACK. . . . .	20-15-48
001751-106-00, TERMINAL MODULE TRACK. . . . .	20-15-48
001751-108-00, TERMINAL MODULE TRACK. . . . .	20-15-48
001751-110-00, TERMINAL MODULE TRACK. . . . .	20-15-48
001751-114-00, TERMINAL MODULE TRACK. . . . .	20-15-48
001751-118-00, TERMINAL MODULE TRACK. . . . .	20-15-48
001755-101-02, TERMINAL MODULE. . . . .	20-15-48
001755-305-02, TERMINAL MODULE. . . . .	20-15-48
001756-202-02, TERMINAL MODULE. . . . .	20-15-48
001756-204-02, TERMINAL MODULE. . . . .	20-15-48
001756-205-02, TERMINAL MODULE. . . . .	20-15-48
001756-206-02, TERMINAL MODULE. . . . .	20-15-48
001756-207-02, TERMINAL MODULE. . . . .	20-15-48
001758-101-02, GROUND MODULE. . . . .	20-15-48
001758-202-02, GROUND MODULE. . . . .	20-15-48
001765-101-02, DIODE TERMINAL MODULE . . . . .	20-15-48
001766-101-02, RESISTOR TERMINAL MODULE . . . . .	20-15-48
001766-103-02, RESISTOR TERMINAL MODULE . . . . .	20-15-48
001766-107-02, RESISTOR TERMINAL MODULE . . . . .	20-15-48
001766-108-02, RESISTOR TERMINAL MODULE . . . . .	20-15-48
001766-111-02, RESISTOR TERMINAL MODULE . . . . .	20-15-48
001766-112-02, RESISTOR TERMINAL MODULE . . . . .	20-15-48
001767-101-02, RESISTOR TERMINAL MODULE . . . . .	20-15-48

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## AIR LB (continued)

001767-102-02, RESISTOR TERMINAL MODULE . . . . .	20-15-48
001767-103-02, RESISTOR TERMINAL MODULE . . . . .	20-15-48
001767-107-02, RESISTOR TERMINAL MODULE . . . . .	20-15-48
001767-109-02, RESISTOR TERMINAL MODULE . . . . .	20-15-48
001767-110-02, RESISTOR TERMINAL MODULE . . . . .	20-15-48
001767-111-02, RESISTOR TERMINAL MODULE . . . . .	20-15-48
001768-101-02, RESISTOR TERMINAL MODULE . . . . .	20-15-48
001768-103-02, RESISTOR TERMINAL MODULE . . . . .	20-15-48

## AIRBORN

RM342-011-581-5900, CONNECTOR . . . . .	20-14-52
RM342-011-581-5900-E47, CABLE ASSEMBLY. . . . .	20-14-52
RM342-023-581-5900, CONNECTOR . . . . .	20-14-52
RM342-023-581-5900-E58, CABLE ASSEMBLY. . . . .	20-14-52

## AIRFONE

AFP30-0052-AA, CONNECTOR . . . . .	20-64-17
AFP30-0054-AA, CONNECTOR . . . . .	20-64-17

ALTERNATIVE WIRES . . . . .	20-00-13
-----------------------------	----------

## ALUMEL SPLICE

ASSEMBLY. . . . .	20-10-13
-------------------	----------

## ALUMEL TERMINAL

1-321898-1, AMP . . . . .	20-35-27
1387-4, THERMO-ELECTRIC. . . . .	20-35-27

## ALUMEL THERMOCOUPLE BUTT SPLICE

1-322325-0, AMP . . . . .	20-23-17
---------------------------	----------

## ALUMEL-CHROMEL THERMOCOUPLE WIRE

DAMAGE CONDITIONS AND REPAIR. . . . .	20-10-13
---------------------------------------	----------

## ALUMINUM TERMINAL

277148-3, AMP. . . . .	20-30-14
277149-3, AMP. . . . .	20-30-14
277151-1, AMP. . . . .	20-30-14
60124, THOMAS & BETTS . . . . .	20-30-14
65007, THOMAS & BETTS . . . . .	20-30-14
65011, THOMAS & BETTS . . . . .	20-30-14
MS25435-11, QPL . . . . .	20-30-14
MS25435-7, QPL . . . . .	20-30-14

## ALUMINUM WIRE

DAMAGE CONDITIONS AND REPAIR. . . . .	20-10-13
POWER FEEDER, CLAMP CONFIGURATION . . . . .	20-10-11

AM(), CONNECTOR, AMP . . . . .	20-71-12
--------------------------------	----------

AM1R57P6031, CONNECTOR, AMP . . . . .	20-72-18
---------------------------------------	----------

AMC02PA03B, CONNECTOR, VIKING ELECTRONICS . . . . .	20-61-28
---	----------

AMC02PA03R, CONNECTOR, VIKING ELECTRONICS . . . . .	20-61-28
---	----------

AMC02PA03W, CONNECTOR, VIKING ELECTRONICS. . . . .	20-61-28
--	----------

AMC02RA03B, CONNECTOR, VIKING ELECTRONICS. . . . .	20-61-28
--	----------

AMC02RA03R, CONNECTOR, VIKING ELECTRONICS. . . . .	20-61-28
--	----------

AMC02RA03RWC, CONNECTOR, VIKING ELECTRONICS . . . . .	20-61-28
---	----------

AMC02RA03W, CONNECTOR, VIKING ELECTRONICS . . . . .	20-61-28
---	----------

AMC12RA03B, CONNECTOR, VIKING ELECTRONICS. . . . .	20-61-28
--	----------

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

AMC12RA03R, CONNECTOR, VIKING ELECTRONICS . . . . .	20-61-28
AMC12RA03W, CONNECTOR, VIKING ELECTRONICS . . . . .	20-61-28
AMP	
1-320551-2, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
1-320551-2, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
1-320551-3, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
1-320551-3, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
1-320551-4, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
1-320551-4, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
1-321897-0, TERMINAL, THERMOCOUPLE . . . . .	20-35-27
1-321898-0, TERMINAL, THERMOCOUPLE . . . . .	20-35-27
1-322325-0, ALUMEL THERMOCOUPLE BUTT SPLICE . . . . .	20-23-17
1-322325-0, SPLICE, THERMOCOUPLE . . . . .	20-10-13
1-322325-1, CHROMEL THERMOCOUPLE BUTT SPLICE . . . . .	20-23-17
1-322325-1, SPLICE, THERMOCOUPLE . . . . .	20-10-13
1-331456-0, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
1-331456-1, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
1-331457-0, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
1-331458-0, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
1-331458-1, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
1-331459-0, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
1-331460-0, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
1-331460-1, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
1-331461-0, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
1-51864-0, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
1-51864-0, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
1-51864-1, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
1-51864-1, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
1-52521-0, TERMINAL, COPALUM . . . . .	20-30-14
1-52521-1, TERMINAL, COPALUM . . . . .	20-30-14
150456, TERMINAL LUG . . . . .	20-30-11
150471, TERMINAL LUG . . . . .	20-30-11
172160-1, CONNECTOR . . . . .	20-42-01
172168-1, CONNECTOR . . . . .	20-42-01
2-320563-3, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
2-320568-2, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
2-320568-2, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
2-320568-3, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
2-320568-3, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
2-320569-5, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
2-320569-6, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
2-320571-3, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
2-320571-3, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
2-320571-4, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
2-320571-4, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
2-320571-5, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
2-320571-5, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
2-320572-2, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

AMP (continued)

2-320572-3, TERMINAL LUG, RESTRICTIVE ENTRY	20-15-21
2-320572-3, TERMINAL LUG, RESTRICTIVE ENTRY	20-30-11
2-320572-4, TERMINAL LUG, RESTRICTIVE ENTRY	20-30-11
2-320573-1, TERMINAL LUG, RESTRICTIVE ENTRY	20-30-11
2-320573-2, TERMINAL LUG, RESTRICTIVE ENTRY	20-30-11
2-320573-3, TERMINAL LUG, RESTRICTIVE ENTRY	20-30-11
2-320575-2, TERMINAL LUG, RESTRICTIVE ENTRY	20-30-11
2-320575-3, TERMINAL LUG, RESTRICTIVE ENTRY	20-30-11
2-320576-2, TERMINAL LUG, RESTRICTIVE ENTRY	20-30-11
2-320576-3, TERMINAL LUG, RESTRICTIVE ENTRY	20-30-11
2-320577-1, TERMINAL LUG, RESTRICTIVE ENTRY	20-30-11
2-320577-2, TERMINAL LUG, RESTRICTIVE ENTRY	20-30-11
2-329083-1, CONNECTOR	20-51-21
2-36153-3, TERMINAL LUG, RESTRICTIVE ENTRY	20-15-21
2-36153-3, TERMINAL LUG, RESTRICTIVE ENTRY	20-30-11
2-36153-4, TERMINAL LUG, RESTRICTIVE ENTRY	20-15-21
2-36153-4, TERMINAL LUG, RESTRICTIVE ENTRY	20-30-11
2-36153-5, TERMINAL LUG, RESTRICTIVE ENTRY	20-15-21
2-36153-5, TERMINAL LUG, RESTRICTIVE ENTRY	20-30-11
2-36161-3, TERMINAL LUG, RESTRICTIVE ENTRY	20-15-21
2-36161-3, TERMINAL LUG, RESTRICTIVE ENTRY	20-30-11
2-36161-4, TERMINAL LUG, RESTRICTIVE ENTRY	20-15-21
2-36161-4, TERMINAL LUG, RESTRICTIVE ENTRY	20-30-11
2-36161-5, TERMINAL LUG, RESTRICTIVE ENTRY	20-30-11
2-36161-6, TERMINAL LUG, RESTRICTIVE ENTRY	20-30-11
208598-3, CONNECTOR	20-71-14
208972-3, CONNECTOR	20-71-14
208973-5, CONNECTOR	20-71-14
208973-6, CONNECTOR	20-71-14
208973-8, CONNECTOR	20-71-14
208977-4, CONNECTOR	20-71-14
208977-5, CONNECTOR	20-71-14
208977-7, CONNECTOR	20-71-14
211600-1, PROTECTIVE CAP	20-71-14
211600-2, PROTECTIVE CAP	20-71-14
213395-1, CONNECTOR	20-72-17
213396-1, CONNECTOR	20-72-17
227155-1, TERMINAL, COPALUM	20-30-14
277027-1, SPLICE, COPALUM	20-30-13
277028-2, TERMINAL, COPALUM	20-30-14
277050-1, SPLICE, COPALUM	20-30-13
277082-1, SPLICE, COPALUM	20-30-13
277147-1, TERMINAL, COPALUM	20-30-14
277147-3, TERMINAL, COPALUM	20-30-14
277147-4, TERMINAL, COPALUM	20-30-14
277147-5, TERMINAL, COPALUM	20-30-14
277148-1, TERMINAL, COPALUM	20-30-14
277148-2, TERMINAL, COPALUM	20-30-14

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## AMP (continued)

277148-3, TERMINAL, ALUMINUM . . . . .	20-30-14
277148-3, TERMINAL, COPALUM . . . . .	20-30-14
277148-4, TERMINAL, COPALUM . . . . .	20-30-14
277148-5, TERMINAL, COPALUM . . . . .	20-30-14
277148-7, TERMINAL, COPALUM . . . . .	20-30-14
277149-1, TERMINAL, COPALUM . . . . .	20-30-14
277149-2, TERMINAL, COPALUM . . . . .	20-30-14
277149-3, TERMINAL, ALUMINUM . . . . .	20-30-14
277149-3, TERMINAL, COPALUM . . . . .	20-30-14
277149-4, TERMINAL, COPALUM . . . . .	20-30-14
277149-5, TERMINAL, COPALUM . . . . .	20-30-14
277150-1, TERMINAL, COPALUM . . . . .	20-30-14
277150-2, TERMINAL, COPALUM . . . . .	20-30-14
277150-3, TERMINAL, COPALUM . . . . .	20-30-14
277151-1, TERMINAL, ALUMINUM . . . . .	20-30-14
277151-1, TERMINAL, COPALUM . . . . .	20-30-14
277151-2, TERMINAL, COPALUM . . . . .	20-30-14
277151-3, TERMINAL, COPALUM . . . . .	20-30-14
277151-5, TERMINAL, COPALUM . . . . .	20-30-14
277151-6, TERMINAL, COPALUM . . . . .	20-30-14
277152-2, TERMINAL, COPALUM . . . . .	20-30-14
277152-3, TERMINAL, COPALUM . . . . .	20-30-14
277152-4, TERMINAL, COPALUM . . . . .	20-30-14
277152-5, TERMINAL, COPALUM . . . . .	20-30-14
277153-1, TERMINAL, COPALUM . . . . .	20-30-14
277154-1, TERMINAL, COPALUM . . . . .	20-30-14
277156-1, SPLICE, COPALUM . . . . .	20-30-13
277157-1, SPLICE, COPALUM . . . . .	20-30-13
277158-1, SPLICE, COPALUM . . . . .	20-30-13
277159-1, SPLICE, COPALUM . . . . .	20-30-13
277160-1, SPLICE, COPALUM . . . . .	20-30-13
277161-1, SPLICE, COPALUM . . . . .	20-30-13
277162-1, SPLICE, COPALUM . . . . .	20-30-13
277163-1, SPLICE, COPALUM . . . . .	20-30-13
277164-1, SPLICE, COPALUM . . . . .	20-30-13
277165-1, SPLICE, COPALUM . . . . .	20-30-13
277168-1, SPLICE, COPALUM . . . . .	20-30-13
284U1147-(), CONNECTOR . . . . .	20-72-17
284U1147-1(), CONNECTOR . . . . .	20-72-17
284U1147-2(), CONNECTOR . . . . .	20-72-17
284U1147-3(), CONNECTOR . . . . .	20-72-17
284U1147-4(), CONNECTOR . . . . .	20-72-17
284U1147-6(), CONNECTOR . . . . .	20-72-17
284U1147-7(), CONNECTOR . . . . .	20-72-17
284U1147-72, CONNECTOR . . . . .	20-72-17
284U1147-8(), CONNECTOR . . . . .	20-72-17
284U1147-831, CONNECTOR . . . . .	20-72-17
284U1147-834, CONNECTOR . . . . .	20-72-17

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## AMP (continued)

284U1147-837, CONNECTOR . . . . .	20-72-17
284U1147-840, CONNECTOR . . . . .	20-72-17
3-208972-3, CONNECTOR . . . . .	20-71-14
3-320564-1, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
320551, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
320553, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
320561, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
320563, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
320564, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
320567, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
320568, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
320569, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
320571, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
320572, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
320573, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
320576, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
320577, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
321892, TERMINAL LUG, NICKEL, HIGH TEMPERATURE . . . . .	20-30-11
321893, TERMINAL LUG, NICKEL, HIGH TEMPERATURE . . . . .	20-30-11
321893, TERMINAL, ASSEMBLY WITH 65B47866-() CABLE . . . . .	20-35-11
321894, TERMINAL LUG, NICKEL, HIGH TEMPERATURE . . . . .	20-30-11
321897, TERMINAL LUG, NICKEL, HIGH TEMPERATURE . . . . .	20-30-11
321898, TERMINAL LUG, NICKEL, HIGH TEMPERATURE . . . . .	20-30-11
322320, TERMINAL LUG, NICKEL, HIGH TEMPERATURE . . . . .	20-30-11
322325, BUTT SPLICE . . . . .	20-23-17
322332, TERMINAL LUG, NICKEL, HIGH TEMPERATURE . . . . .	20-30-11
322334, TERMINAL LUG . . . . .	20-23-39
322337, TERMINAL LUG, NICKEL, HIGH TEMPERATURE . . . . .	20-30-11
322338, TERMINAL LUG, NICKEL, HIGH TEMPERATURE . . . . .	20-30-11
322341, TERMINAL LUG, NICKEL, HIGH TEMPERATURE . . . . .	20-30-11
322344, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
322362, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
322363, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
322364, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
322366, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
322367, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
322369, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
322371, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
322373, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
322374, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
322375, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
322376, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
322378, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
323064, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
323065, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
323066, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
323069, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
323199, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

AMP (continued)

323747, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
323749, TERMINAL LUG, NICKEL, HIGH TEMPERATURE . . . . .	20-30-11
323750, TERMINAL LUG, NICKEL, HIGH TEMPERATURE . . . . .	20-30-11
323751, TERMINAL LUG, NICKEL, HIGH TEMPERATURE . . . . .	20-30-11
323752, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
323912, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
323914, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
323915, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
323916, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324043, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
324043, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324044, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324045, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
324045, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324046, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
324046, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324047, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
324047, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324048, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324049, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324050, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324051, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324052, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324053, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324054, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324055, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324056, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324057, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324058, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324075, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324082, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324083, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324084, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324085, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324114, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324159, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324187, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324188, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324189, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
324484, END CAP . . . . .	20-30-16
324485, END CAP . . . . .	20-30-16
324486, END CAP . . . . .	20-30-16
324487, END CAP . . . . .	20-30-16
325154, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
325155, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
325156, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
325157, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
328307, END CAP . . . . .	20-30-16

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## AMP (continued)

328308, END CAP .....	20-30-16
328309, END CAP .....	20-30-16
328849, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
328854, END CAP .....	20-30-16
328855, END CAP .....	20-30-16
328856, END CAP .....	20-30-16
328857, END CAP .....	20-30-16
328858, END CAP .....	20-30-16
328859, END CAP .....	20-30-16
328860, END CAP .....	20-30-16
328861, END CAP .....	20-30-16
328975, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
328998, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
329150, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
329151, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
329638, END CAP .....	20-30-16
331456, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
331457, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
331458, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
331459, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
331460, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
331461, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
331467, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
331713, SPLICE, COAX .....	20-51-26
331719, CONNECTOR .....	20-51-26
331843, CONNECTOR .....	20-51-26
34137, SPLICE, PARALLEL .....	20-30-12
34138, SPLICE, PARALLEL .....	20-30-12
36149, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
36153, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
36161, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
51863, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
51863-2, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-15-21
51863-2, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
51863-3, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-15-21
51863-3, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
51863-4, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-15-21
51863-4, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
51864, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
51864-1, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
51864-2, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
51864-6, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-15-21
51864-6, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
51864-7, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-15-21
51864-7, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
51864-8, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-15-21
51864-8, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
51864-9, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-15-21

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## AMP (continued)

51864-9, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
52273, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
52273, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
52273-1, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
52273-1, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
52273-2, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
52273-2, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
52516, TERMINAL, COPALUM . . . . .	20-30-14
52517, TERMINAL, COPALUM . . . . .	20-30-14
52517-1, TERMINAL, COPALUM . . . . .	20-30-14
52517-2, TERMINAL, COPALUM . . . . .	20-30-14
52517-3, TERMINAL, COPALUM . . . . .	20-30-14
52517-4, TERMINAL, COPALUM . . . . .	20-30-14
52518, TERMINAL, COPALUM . . . . .	20-30-14
52518-1, TERMINAL, COPALUM . . . . .	20-30-14
52518-2, TERMINAL, COPALUM . . . . .	20-30-14
52518-3, TERMINAL, COPALUM . . . . .	20-30-14
52518-4, TERMINAL, COPALUM . . . . .	20-30-14
52519, TERMINAL, COPALUM . . . . .	20-30-14
52519-1, TERMINAL, COPALUM . . . . .	20-30-14
52519-2, TERMINAL, COPALUM . . . . .	20-30-14
52520, TERMINAL, COPALUM . . . . .	20-30-14
52520-1, TERMINAL, COPALUM . . . . .	20-30-14
52520-2, TERMINAL, COPALUM . . . . .	20-30-14
52520-3, TERMINAL, COPALUM . . . . .	20-30-14
52520-4, TERMINAL, COPALUM . . . . .	20-30-14
52520-5, TERMINAL, COPALUM . . . . .	20-30-14
52521-7, TERMINAL, COPALUM . . . . .	20-30-14
52521-9, TERMINAL, COPALUM . . . . .	20-30-14
52522, SPLICE, COPALUM . . . . .	20-30-13
52523, SPLICE, COPALUM . . . . .	20-30-13
52524, SPLICE, COPALUM . . . . .	20-30-13
52525, SPLICE, COPALUM . . . . .	20-30-13
52526, SPLICE, COPALUM . . . . .	20-30-13
52527, SPLICE, COPALUM . . . . .	20-30-13
52834-1, TERMINAL, COPALUM . . . . .	20-30-14
53041, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
53054, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
53055, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
53056, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
53057, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
53527-1, SPLICE, COPALUM . . . . .	20-30-13
53528-1, SPLICE, COPALUM . . . . .	20-30-13
55832-1, TERMINAL, COPALUM . . . . .	20-30-14
55832-2, TERMINAL, COPALUM . . . . .	20-30-14
55833-1, TERMINAL, COPALUM . . . . .	20-30-14
55833-2, TERMINAL, COPALUM . . . . .	20-30-14
55834-1, TERMINAL, COPALUM . . . . .	20-30-14

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### AMP (continued)

55834-2, TERMINAL, COPALUM . . . . .	20-30-14
55835-1, TERMINAL, COPALUM . . . . .	20-30-14
55835-2, TERMINAL, COPALUM . . . . .	20-30-14
55836-1, TERMINAL, COPALUM . . . . .	20-30-14
55836-2, TERMINAL, COPALUM . . . . .	20-30-14
55837-1, TERMINAL, COPALUM . . . . .	20-30-14
55838-1, TERMINAL, COPALUM . . . . .	20-30-14
55839-1, TERMINAL, COPALUM . . . . .	20-30-14
55840-1, TERMINAL, COPALUM . . . . .	20-30-14
582551-1, CONNECTOR . . . . .	20-82-11
582583-1, CONNECTOR . . . . .	20-82-11
582591-1, CONNECTOR . . . . .	20-82-11
592584-(), SPLICE, DISCONNECTABLE WIRE . . . . .	20-83-00
60789-2, TERMINAL, RECEPTACLE . . . . .	20-30-17
60790-1, TERMINAL, RECEPTACLE . . . . .	20-30-17
60790-2, TERMINAL, RECEPTACLE . . . . .	20-30-17
60888-4, TERMINAL, RECEPTACLE . . . . .	20-30-17
60983-3, TERMINAL, RECEPTACLE . . . . .	20-30-17
640024-1, TERMINAL, RECEPTACLE . . . . .	20-30-17
AA(), CONNECTOR . . . . .	20-71-12
AD(), CONNECTOR . . . . .	20-71-12
AM(), CONNECTOR . . . . .	20-71-12
AM1R57P6031, CONNECTOR . . . . .	20-72-18
BD(), CONNECTOR . . . . .	20-71-12
COAXICLAMP CONNECTOR . . . . .	20-51-26
COAXICLAMP SPLICE . . . . .	20-51-26
MATE-N-LOK, CONNECTOR . . . . .	20-42-01
MWS(), SPLICE, DISCONNECTABLE WIRE . . . . .	20-83-00
NIC66F11()AA, CONNECTOR . . . . .	20-71-14
NIC66H20()AA, CONNECTOR . . . . .	20-71-14
NIC66H21()AA, CONNECTOR . . . . .	20-71-14
NIC66H22()AA, CONNECTOR . . . . .	20-71-14
NIC66H23()AA, CONNECTOR . . . . .	20-71-14
NIC66H25()AA, CONNECTOR . . . . .	20-71-14
NIC66H26()AA, CONNECTOR . . . . .	20-71-14
NIC66H28()AA, CONNECTOR . . . . .	20-71-14
NIC66K31()AA, CONNECTOR . . . . .	20-71-14
NIC66K32()AA, CONNECTOR . . . . .	20-71-14
NIC66K33()AA, CONNECTOR . . . . .	20-71-14
NIC66K34()AA, CONNECTOR . . . . .	20-71-14
NIC66K36()AA, CONNECTOR . . . . .	20-71-14
AMP AA CONNECTOR	
CONNECTOR ASSEMBLY . . . . .	20-71-12
AMP AD CONNECTOR	
CONNECTOR ASSEMBLY . . . . .	20-71-12
AMP AM CONNECTOR	
CONNECTOR ASSEMBLY . . . . .	20-71-12

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

AMP ARINC 404 CONNECTORS	
CONNECTOR ASSEMBLY . . . . .	20-71-16
AMP BD CONNECTOR	
CONNECTOR ASSEMBLY . . . . .	20-71-12
AMP TAB-TERMINAL	
PCB CONNECTOR ASSEMBLY . . . . .	20-82-11
AMPHENOL	
10-584762, CONNECTOR . . . . .	20-63-13
10-584796, CONNECTOR . . . . .	20-63-13
10-628485-472, CONNECTOR . . . . .	20-63-19
115-5066, CONNECTOR . . . . .	20-35-26
115-5074, CONNECTOR . . . . .	20-35-26
17-10090, CONNECTOR . . . . .	20-72-11
17-10090-1, CONNECTOR . . . . .	20-72-11
17-10150, CONNECTOR . . . . .	20-72-11
17-10150-1, CONNECTOR . . . . .	20-72-11
17-10250, CONNECTOR . . . . .	20-72-11
17-10250-1, CONNECTOR . . . . .	20-72-11
17-10370, CONNECTOR . . . . .	20-72-11
17-10370-1, CONNECTOR . . . . .	20-72-11
17-10500, CONNECTOR . . . . .	20-72-11
17-10500-1, CONNECTOR . . . . .	20-72-11
17-20090, CONNECTOR . . . . .	20-72-11
17-20090-1, CONNECTOR . . . . .	20-72-11
17-20150, CONNECTOR . . . . .	20-72-11
17-20150-1, CONNECTOR . . . . .	20-72-11
17-20250, CONNECTOR . . . . .	20-72-11
17-20250-1, CONNECTOR . . . . .	20-72-11
17-20370, CONNECTOR . . . . .	20-72-11
17-20370-1, CONNECTOR . . . . .	20-72-11
17-20500, CONNECTOR . . . . .	20-72-11
17-20500-1, CONNECTOR . . . . .	20-72-11
17-300-1, CONNECTOR . . . . .	20-72-11
17-301-1, CONNECTOR . . . . .	20-72-11
17-302-1, CONNECTOR . . . . .	20-72-11
17-303-1, CONNECTOR . . . . .	20-72-11
17-304-1, CONNECTOR . . . . .	20-72-11
17-305-1, CONNECTOR . . . . .	20-72-11
17-306-1, CONNECTOR . . . . .	20-72-11
17-307-1, CONNECTOR . . . . .	20-72-11
17-308-1, CONNECTOR . . . . .	20-72-11
17-309-1, CONNECTOR . . . . .	20-72-11
17-310-1, BACKSHELL . . . . .	20-72-08
17-311-1, BACKSHELL . . . . .	20-72-08
17-312-1, BACKSHELL . . . . .	20-72-08
17-313-1, BACKSHELL . . . . .	20-72-08
17-314-1, BACKSHELL . . . . .	20-72-08
213(), CONNECTOR . . . . .	20-71-12

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20**

## AMPHENOL (continued)

246-3000R()-(), CONNECTOR . . . . .	20-61-19
246-3006R()-(), CONNECTOR . . . . .	20-61-19
31-30383-1, CONNECTOR . . . . .	20-51-20
421-593, CUJAC COAX CABLE, CONNECTOR ASSEMBLY . . . . .	20-51-41
48-00R(), CONNECTOR . . . . .	20-61-11
48-00R16-10S, CONNECTOR . . . . .	20-35-13
48-03R(), CONNECTOR . . . . .	20-61-11
48-06R(), CONNECTOR . . . . .	20-61-11
48-10R(), CONNECTOR . . . . .	20-61-11
48-10R14-2/1P, CONNECTOR . . . . .	20-61-11
48-10R14-2/1P7, CONNECTOR . . . . .	20-61-11
48-10R14-2/1P8, CONNECTOR . . . . .	20-61-11
48-10R14-2/1P9, CONNECTOR . . . . .	20-61-11
48-16R(), CONNECTOR . . . . .	20-61-11
48-16R14-2/1S, CONNECTOR . . . . .	20-61-11
48-16R14-2/1S6, CONNECTOR . . . . .	20-61-11
48-16R14-2/1S7, CONNECTOR . . . . .	20-61-11
48-16R14-2/1S8, CONNECTOR . . . . .	20-61-11
48-16R14-2/1S9, CONNECTOR . . . . .	20-61-11
48-16R18-10/1S, CONNECTOR . . . . .	20-61-11
48-16R18-10/1S6, CONNECTOR . . . . .	20-61-11
48-16R18-10/1S7, CONNECTOR . . . . .	20-61-11
48-16R18-10/1S8, CONNECTOR . . . . .	20-61-11
48-16R18-10/1S9, CONNECTOR . . . . .	20-61-11
48-16V(), CONNECTOR . . . . .	20-61-11
48-63N(), CONNECTOR . . . . .	20-61-11
48-7005, CONNECTOR . . . . .	20-61-11
48-7164-(), CONNECTOR . . . . .	20-61-11
48-7190, SPLICE, REMOVABLE CONTACT . . . . .	20-30-12
48-7190-1, SPLICE, REMOVABLE CONTACT . . . . .	20-30-12
48-7191, SPLICE, REMOVABLE CONTACT . . . . .	20-30-12
48-7191-1, SPLICE, REMOVABLE CONTACT . . . . .	20-30-12
67-906, CONNECTOR . . . . .	20-61-12
67-907, CONNECTOR . . . . .	20-61-12
69-()R(), CONNECTOR . . . . .	20-61-13
69-0()R, CONNECTOR . . . . .	20-61-13
69-6()R, CONNECTOR . . . . .	20-61-13
82-175, CONNECTOR . . . . .	20-51-41
82-3292, CONNECTOR . . . . .	20-51-42
82-887, ADAPTER KIT . . . . .	20-51-41
83-185, CABLE, TRIAX, ADAPTER . . . . .	20-53-05
83-59, CONNECTOR . . . . .	20-53-05
84-(), CONNECTOR . . . . .	20-61-26
ESC30(), CONTACT . . . . .	20-23-01
PT06E(), CONNECTOR . . . . .	20-40-00
TV26RK9-98SN, CONNECTOR . . . . .	20-63-19
AMPHENOL 17-() CONNECTORS	
CONNECTOR ASSEMBLY . . . . .	20-72-11

**20-CROSS REFERENCE INDEX**

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20**

AMPHENOL 213 CONNECTOR	
CONNECTOR ASSEMBLY .....	20-71-12
AMPHENOL 67 SERIES	
CONNECTOR ASSEMBLY .....	20-61-12
AMPHENOL 69 SERIES	
CONNECTOR ASSEMBLY .....	20-61-13
AMPHENOL 84-() SERIES	
CONNECTOR ASSEMBLY .....	20-61-26
AMPHENOL PCD	
BACC63DE(), CONNECTOR .....	20-63-02
BACC63DF(), CONNECTOR .....	20-63-02
BACC63DG(), CONNECTOR .....	20-63-02
BACC63DH(), CONNECTOR .....	20-63-02
BACC63ED(), CONNECTOR .....	20-63-03
BACC63EE(), CONNECTOR .....	20-63-03
BACC63EF(), CONNECTOR .....	20-63-03
AMPHENOL-PYLE	
AA-(-)-12(), CONNECTOR .....	20-61-11
AA-(-)-17(), CONNECTOR .....	20-61-11
AMPHENOL/ PCD	
451120-026, RELAY SOCKET .....	20-81-19
451120-027, RELAY SOCKET .....	20-81-19
451120-028, RELAY SOCKET .....	20-81-19
RSE120026, RELAY SOCKET .....	20-81-19
RSE120027, RELAY SOCKET .....	20-81-19
RSE120028, RELAY SOCKET .....	20-81-19
AMPHENOL/BENDIX	
10-244011-3P, CONNECTOR .....	20-61-18
10-244014-7H, CONNECTOR .....	20-61-18
10-244014-7P, CONNECTOR .....	20-61-18
10-244014-7S, CONNECTOR .....	20-61-18
10-244016-1P, CONNECTOR .....	20-61-18
10-244016-1S, CONNECTOR .....	20-61-18
10-244016-8S, CONNECTOR .....	20-61-18
10-244020-27S, CONNECTOR .....	20-61-18
10-244022-14S, CONNECTOR .....	20-61-18
10-244211-3P, CONNECTOR .....	20-61-18
10-244611-3S, CONNECTOR .....	20-61-18
10-244611-4S, CONNECTOR .....	20-61-18
10-244612-3S, CONNECTOR .....	20-61-18
10-244614-5S, CONNECTOR .....	20-61-18
10-244614-7G, CONNECTOR .....	20-61-18
10-244614-7P, CONNECTOR .....	20-61-18
10-244614-7S, CONNECTOR .....	20-61-18
10-244616-1S, CONNECTOR .....	20-61-18
10-244618-12S, CONNECTOR .....	20-61-18
10-244618-4S, CONNECTOR .....	20-61-18
10-244620-27S, CONNECTOR .....	20-61-18

**20-CROSS REFERENCE INDEX**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### AMPHENOL/BENDIX (continued)

10-244622-14P, CONNECTOR . . . . .	20-61-18
10-244811-3S, CONNECTOR . . . . .	20-61-18
10-244811-4S, CONNECTOR . . . . .	20-61-18
10-244812-3S, CONNECTOR . . . . .	20-61-18
10-244814-5S, CONNECTOR . . . . .	20-61-18
10-244814-7S, CONNECTOR . . . . .	20-61-18
10-244814-9S, CONNECTOR . . . . .	20-61-18
10-244816-1S, CONNECTOR . . . . .	20-61-18
10-244816-8S, CONNECTOR . . . . .	20-61-18
10-244818-12S, CONNECTOR . . . . .	20-61-18
348-(), CONNECTOR . . . . .	20-61-30
DB110777, COUPLER, ARINC 629. . . . .	20-11-11
DB110778, COUPLER BASE, ARINC 629. . . . .	20-11-11
DB110779, COUPLER COVER, ARINC 629 . . . . .	20-11-11
PT()SE(), CONNECTOR . . . . .	20-61-16
S227W001-1, COUPLER, ARINC 629 . . . . .	20-11-11
SP()SE(), CONNECTOR . . . . .	20-61-16

### AMPHENOL/PCD

RSE112305, RELAY SOCKET . . . . .	20-81-16
RSE112310, RELAY SOCKET . . . . .	20-81-16
RSE112320, RELAY SOCKET . . . . .	20-81-16
RSE116135, RELAY SOCKET . . . . .	20-81-16
RSE116332, RELAY SOCKET . . . . .	20-81-16
RSE116521, RELAY SOCKET . . . . .	20-81-16
RSE116755, RELAY SOCKET . . . . .	20-81-16
RSE120172, RELAY SOCKET . . . . .	20-81-16
RSE120180, RELAY SOCKET . . . . .	20-81-16
RSE120185, RELAY SOCKET . . . . .	20-81-16
RSE120190, RELAY SOCKET . . . . .	20-81-16

AN3115-1, CONNECTOR, QPL . . . . .	20-62-19
AN3116-2, CONNECTOR, ITT CANNON. . . . .	20-62-22
AN960CIOL, WASHER, QPL . . . . .	20-10-21

### ANDREWS

40229, CONNECTOR . . . . .	20-51-51
44ASN, CONNECTOR . . . . .	20-51-51
FSJ4-50, COAX CABLE, CONNECTOR ASSEMBLY . . . . .	20-51-51
L42ENT, CONNECTOR . . . . .	20-51-52
L42EWT, CONNECTOR . . . . .	20-51-52

### ANTI-SKID SYSTEM

LANDING GEAR CABLES . . . . .	20-85-12
APC32PS(), CONNECTOR, ARIZONA INTEGRATED ELECTRONICS. . . . .	20-72-19
APC32RP(), CONNECTOR, ARIZONA INTEGRATED ELECTRONICS. . . . .	20-72-19
APC60PS(), CONNECTOR, ARIZONA INTEGRATED ELECTRONICS. . . . .	20-72-19
APC60RP(), CONNECTOR, ARIZONA INTEGRATED ELECTRONICS. . . . .	20-72-19

### ARINC 404

AMP, CONNECTOR ASSEMBLY . . . . .	20-71-16
CONNECTOR ASSEMBLY . . . . .	20-71-11
CONNECTOR, TERMINAL BLOCK MODULE ASSEMBLY . . . . .	20-83-02

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

ARINC 404 (continued)	
RADIALL, CONNECTOR ASSEMBLY . . . . .	20-71-15
ARINC 404 CONNECTOR	
117432-2001, SABRITEC. . . . .	20-83-02
ARINC 404 TYPE CONNECTOR	
DSX1(), RADIALL. . . . .	20-71-15
DSX2(), RADIALL. . . . .	20-71-15
DSX3(), RADIALL. . . . .	20-71-15
M(), RADIALL. . . . .	20-71-16
MM(), RADIALL. . . . .	20-71-16
MME(), RADIALL. . . . .	20-71-16
R(), RADIALL. . . . .	20-71-16
RM(), RADIALL. . . . .	20-71-16
RME(), RADIALL. . . . .	20-71-16
ARINC 600 TYPE	
SINGLE GANG, CONNECTOR ASSEMBLY . . . . .	20-72-21
ARINC 600 TYPE CONNECTORS	
CONNECTOR ASSEMBLY . . . . .	20-71-14
ARINC 629 COUPLER	
5242500-100, SCI TECHNOLOGY . . . . .	20-11-11
5242500-101, SCI TECHNOLOGY . . . . .	20-11-11
5242500-102, SCI TECHNOLOGY . . . . .	20-11-11
5446500-001, SCI TECHNOLOGY . . . . .	20-11-11
DB110777, AMPHENOL/BENDIX. . . . .	20-11-11
S227W001-1, AMPHENOL/BENDIX. . . . .	20-11-11
S227W001-2, SCI TECHNOLOGY . . . . .	20-11-11
S227W001-4, SCI TECHNOLOGY . . . . .	20-11-11
S227W001-6, SCI TECHNOLOGY . . . . .	20-11-11
S227W001-8, SCI TECHNOLOGY . . . . .	20-11-11
ARINC 629 COUPLER BASE	
5242515-100, SCI TECHNOLOGY . . . . .	20-11-11
5242515-101, SCI TECHNOLOGY . . . . .	20-11-11
5242515-102, SCI TECHNOLOGY . . . . .	20-11-11
DB110778, AMPHENOL/BENDIX. . . . .	20-11-11
ARINC 629 COUPLER COVER	
5242505-100, SCI TECHNOLOGY . . . . .	20-11-11
5242505-101, SCI TECHNOLOGY . . . . .	20-11-11
5242505-102, SCI TECHNOLOGY . . . . .	20-11-11
DB110779, AMPHENOL/BENDIX. . . . .	20-11-11
ARINC 629 DATA BUS CABLE	
CABLE REPAIR. . . . .	20-11-11
DAMAGE CONDITIONS AND REPAIR. . . . .	20-10-13
WIRE REPAIR. . . . .	20-11-11
ARINC 629 DATA BUS CABLE ASSEMBLY	
S280W651-(), BOEING . . . . .	20-11-11
ARINC 629 STUB CABLE	
CABLE REPAIR. . . . .	20-11-11
DAMAGE CONDITIONS AND REPAIR. . . . .	20-10-13
S280W502-1, BOEING . . . . .	20-11-11

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20**

ARINC 629 STUB CABLE (continued)	
S280W502-4, BOEING . . . . .	20-11-11
ARIZONA INTEGRATED ELECTRONICS	
APC32PS(), CONNECTOR . . . . .	20-72-19
APC32RP(), CONNECTOR . . . . .	20-72-19
APC60PS(), CONNECTOR . . . . .	20-72-19
APC60RP(), CONNECTOR . . . . .	20-72-19
ARIZONA INTEGRATED ELECTRONICS APC() SERIES	
CONNECTOR ASSEMBLY . . . . .	20-72-19
AS85049-38S(), BACKSHELL, QPL . . . . .	20-25-12
AS85049-38S(), BACKSHELL, QPL . . . . .	20-60-09
ATM08PA30, CONNECTOR, VIKING ELECTRONICS . . . . .	20-72-26
ATM08PA50, CONNECTOR, VIKING ELECTRONICS . . . . .	20-72-26
ATM08RA30, CONNECTOR, VIKING ELECTRONICS . . . . .	20-72-26
ATM08RA50, CONNECTOR, VIKING ELECTRONICS . . . . .	20-72-26
ATM12PA00, CONNECTOR, VIKING ELECTRONICS . . . . .	20-72-26
ATM12PA10, CONNECTOR, VIKING ELECTRONICS . . . . .	20-72-26
ATM12PA30, CONNECTOR, VIKING ELECTRONICS . . . . .	20-72-26
ATM12RA00, CONNECTOR, VIKING ELECTRONICS . . . . .	20-72-26
ATM12RA10, CONNECTOR, VIKING ELECTRONICS . . . . .	20-72-26
AUDIO CABLE	
S280T004-1, BOEING, PREPARATION. . . . .	20-35-12
AUDIO CONNECTOR	
AXR-(), ITT CANNON . . . . .	20-64-12
XLR-(), ITT CANNON . . . . .	20-64-12
AV667, CONNECTOR, AVIBANK. . . . .	20-62-20
AV697, CONNECTOR, AVIBANK. . . . .	20-62-20
AVIBANK	
AV667, CONNECTOR. . . . .	20-62-20
AV697, CONNECTOR. . . . .	20-62-20
AVM CABLE	
16833, ENDEVCO, SHIELD TERMINATION . . . . .	20-35-26
202-3836-000, MICRODOT, CONNECTOR ASSEMBLY . . . . .	20-35-22
AWG	
CONVERSION TO CAU . . . . .	20-30-12
AXR-(), CONNECTOR, ITT CANNON. . . . .	20-64-12

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### B

B-9845-()-1665, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
B-9845-()-1691, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
B-9845-()-303, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
B-9845-()-305, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
B-9845-()-307, LIGHT, GRIMES-HONEYWELL . . . . .	20-84-10
BA14349 COAX CABLE	
ITT SURPRENANT, CONNECTOR ASSEMBLY . . . . .	20-51-05
ITT SURPRENANT, CONNECTOR ASSEMBLY . . . . .	20-51-42
BA5903 COAX CABLE	
SURPRENANT, ITT CANNON DP SERIES ASSEMBLY. . . . .	20-71-11
BA6416A	
TRIAx CABLE, ITT SURPRENANT, CONNECTOR ASSEMBLY. . . . .	20-53-05
BACA14AB164, SOLDER ADAPTER, BOEING. . . . .	20-40-00
BACA14AN()	
SPLICE ADAPTER, BOEING. . . . .	20-30-22
BACA14BH10, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
BACA14BH10A, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
BACA14BH12, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
BACA14BH14, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
BACA14BH16A, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
BACA14BH1A, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
BACA14BH26A, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
BACA14BH5, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
BACA14BH5A, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
BACA14BH6A, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
BACA14BH7, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
BACA14BH7A, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
BACA14BH8, ADAPTER PLATE, CUTOUT, BOEING . . . . .	20-60-06
BACB20VB, FQIS WIRE HARNESS BRACKET, WITHOUT CARRIER, BOEING . . . . .	20-10-12
BACB20VE, FQIS WIRE HARNESS BRACKET, WITH CARRIER, BOEING. . . . .	20-10-12
BACB20VG, RACEWAY BRACKET, BOEING. . . . .	20-10-12
BACB30LE5U18, BOLT, BOEING . . . . .	20-10-21
BACB42F3, BAND, SHIELD TERMINATOR, BOEING . . . . .	20-00-11
BACB42F3, BAND, SHIELD TERMINATOR, BOEING . . . . .	20-25-14
BACB42F4, BAND, SHIELD TERMINATOR, BOEING . . . . .	20-00-11
BACB42F4, BAND, SHIELD TERMINATOR, BOEING . . . . .	20-25-14
BACC10BU(), CLAMP, LOOP, BOEING. . . . .	20-10-12
BACC10DK(), CLAMP, LOOP, BOEING. . . . .	20-10-12
BACC10DR(), RACEWAY CHANNEL, BOEING. . . . .	20-10-12
BACC10DS(), CLAMP, RACEWAY, BOEING . . . . .	20-10-12
BACC10GE(), CLAMP, LOOP, BOEING. . . . .	20-10-12
BACC10GE8A, LOOP CLAMP, BOEING . . . . .	20-11-11
BACC10GH, BACKSHELL, BOEING . . . . .	20-60-09
BACC10GU(), CLAMP, LOOP, BOEING. . . . .	20-10-12
BACC10HD, BACKSHELL, BOEING . . . . .	20-25-12
BACC10HD, BACKSHELL, BOEING . . . . .	20-60-09

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

BACC10HE, BACKSHELL, BOEING . . . . .	20-25-12
BACC10HE, BACKSHELL, BOEING . . . . .	20-60-09
BACC10HF, BACKSHELL, BOEING . . . . .	20-25-12
BACC10HF, BACKSHELL, BOEING . . . . .	20-60-09
BACC10HG, BACKSHELL, BOEING . . . . .	20-25-12
BACC10HG, BACKSHELL, BOEING . . . . .	20-60-09
BACC10HS(), CLAMP, LOOP, BOEING . . . . .	20-10-12
BACC10JC, BACKSHELL, BOEING . . . . .	20-60-09
BACC10JU(), CLAMP, LOOP, BOEING . . . . .	20-10-12
BACC10JV()A, BACKSHELL, BOEING . . . . .	20-25-12
BACC10JV()A, BACKSHELL, BOEING . . . . .	20-60-09
BACC10JV()S, BACKSHELL, BOEING . . . . .	20-25-12
BACC10JV()S, BACKSHELL, BOEING . . . . .	20-60-09
BACC10JW()A, BACKSHELL, BOEING . . . . .	20-25-12
BACC10JW()A, BACKSHELL, BOEING . . . . .	20-60-09
BACC10JW()S, BACKSHELL, BOEING . . . . .	20-25-12
BACC10JW()S, BACKSHELL, BOEING . . . . .	20-60-09
BACC10KA, BACKSHELL, BOEING . . . . .	20-25-12
BACC10KA, BACKSHELL, BOEING . . . . .	20-60-09
BACC10KB, BACKSHELL, BOEING . . . . .	20-25-12
BACC10KB, BACKSHELL, BOEING . . . . .	20-60-09
BACC10KC, BACKSHELL, BOEING . . . . .	20-25-12
BACC10KC, BACKSHELL, BOEING . . . . .	20-60-09
BACC10KD, BACKSHELL, BOEING . . . . .	20-25-12
BACC10KD, BACKSHELL, BOEING . . . . .	20-60-09
BACC10KE, BACKSHELL, BOEING . . . . .	20-25-12
BACC10KE, BACKSHELL, BOEING . . . . .	20-60-09
BACC10KF, BACKSHELL, BOEING . . . . .	20-25-12
BACC10KF, BACKSHELL, BOEING . . . . .	20-60-09
BACC10KL(), CLAMP, LOOP, BOEING . . . . .	20-10-12
BACC10LD(), BACKSHELL, BOEING . . . . .	20-74-12
BACC10LH1, BACKSHELL, BOEING . . . . .	20-74-13
BACC10LH2, BACKSHELL, BOEING . . . . .	20-74-13
BACC10LL1, STRAIN RELIEF CLAMP, BOEING . . . . .	20-74-13
BACC10LL2, STRAIN RELIEF CLAMP, BOEING . . . . .	20-74-13
BACC10LM1F, STRAIN RELIEF CLAMP, BOEING . . . . .	20-74-13
BACC10LM2F, STRAIN RELIEF CLAMP, BOEING . . . . .	20-74-13
BACC10LT(), BACKSHELL, BOEING . . . . .	20-74-12
BACC10LV2, STRAIN RELIEF CLAMP, BOEING . . . . .	20-74-13
BACC10MA, BACKSHELL, BOEING . . . . .	20-25-15
BACC10MB, BACKSHELL, BOEING . . . . .	20-25-15
BACC10MK, BACKSHELL, BOEING . . . . .	20-60-09
BACC10MM, BACKSHELL, BOEING . . . . .	20-25-15
BACC10MP, BACKSHELL, BOEING . . . . .	20-25-15
BACC10MR1, BACKSHELL, BOEING . . . . .	20-74-14
BACC10MY1, STRAIN RELIEF CLAMP, BOEING . . . . .	20-74-18
BACC10NA(), CLAMP, CUSHION, SINGLE LEG ASSEMBLY, HIGH PERFORMANCE PLASTIC, BOEING . . . . .	20-10-12
BACC10NB(), CLAMP, CUSHION, DOUBLE LEG ASSEMBLY, HIGH PERFORMANCE PLASTIC, BOEING . . . . .	20-10-12

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

BACC10NC, BACKSHELL, BOEING . . . . .	20-60-09
BACC13AT2C12, FERRULE - SAFETY CABLE, BOEING . . . . .	20-60-07
BACC13AT2C15, FERRULE - SAFETY CABLE, BOEING . . . . .	20-60-07
BACC13AT2C18, FERRULE - SAFETY CABLE, BOEING . . . . .	20-60-07
BACC13AT2C21, FERRULE - SAFETY CABLE, BOEING . . . . .	20-60-07
BACC13AT2C24, FERRULE - SAFETY CABLE, BOEING . . . . .	20-60-07
BACC13AT2C6, FERRULE - SAFETY CABLE, BOEING . . . . .	20-60-07
BACC13AT2C9, FERRULE - SAFETY CABLE, BOEING . . . . .	20-60-07
BACC13AT2F, FERRULE - SAFETY CABLE, BOEING . . . . .	20-60-07
BACC13AT2K12, FERRULE - SAFETY CABLE, BOEING . . . . .	20-60-07
BACC13AT2K15, FERRULE - SAFETY CABLE, BOEING . . . . .	20-60-07
BACC13AT2K18, FERRULE - SAFETY CABLE, BOEING . . . . .	20-60-07
BACC13AT2K21, FERRULE - SAFETY CABLE, BOEING . . . . .	20-60-07
BACC13AT2K24, FERRULE - SAFETY CABLE, BOEING . . . . .	20-60-07
BACC13AT2K6, FERRULE - SAFETY CABLE, BOEING . . . . .	20-60-07
BACC13AT2K9, FERRULE - SAFETY CABLE, BOEING . . . . .	20-60-07
BACC13AU . . . . .	20-20-14
BACC18AF, CIRCUIT BREAKER, REMOTE CONTROL, BOEING . . . . .	20-83-00
BACC45F(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE, BOEING . . . . .	20-35-11
BACC45F(), CONNECTOR, BOEING . . . . .	20-35-22
BACC45FL(), CONNECTOR, BOEING . . . . .	20-61-11
BACC45FM(), CONNECTOR, BOEING . . . . .	20-61-11
BACC45FM14-7P, CONNECTOR, BOEING . . . . .	20-35-13
BACC45FM16-10S, CONNECTOR, BOEING . . . . .	20-35-13
BACC45FN(), CONNECTOR, BOEING . . . . .	20-61-11
BACC45FP(), CONNECTOR, BOEING . . . . .	20-61-11
BACC45FS(), CONNECTOR, BOEING . . . . .	20-61-11
BACC45FT(), CONNECTOR, BOEING . . . . .	20-61-11
BACC50AN16, GROUND MODULE, BOEING . . . . .	20-90-15
BACC50AN20, GROUND MODULE, BOEING . . . . .	20-90-15
BACC63AE(), CONNECTOR, BOEING . . . . .	20-61-11
BACC63AE, CONNECTOR, BOEING . . . . .	20-35-26
BACC63AF(), CONNECTOR, BOEING . . . . .	20-61-11
BACC63AF, CONNECTOR, BOEING . . . . .	20-35-26
BACC63AF24-30P10, CONNECTOR, BOEING . . . . .	20-14-51
BACC63BD, CONNECTOR, BOEING . . . . .	20-61-19
BACC63BE, CONNECTOR, BOEING . . . . .	20-61-19
BACC63BN(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE, BOEING . . . . .	20-35-11
BACC63BN(), CONNECTOR, BOEING . . . . .	20-61-11
BACC63BP(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE, BOEING . . . . .	20-35-11
BACC63BP(), CONNECTOR, BOEING . . . . .	20-35-22
BACC63BP(), CONNECTOR, BOEING . . . . .	20-61-11
BACC63BP, CONNECTOR, BOEING . . . . .	20-35-17
BACC63BP18D8SN, CONNECTOR, BOEING . . . . .	20-61-11
BACC63BR(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE, BOEING . . . . .	20-35-11
BACC63BR(), CONNECTOR, BOEING . . . . .	20-63-13
BACC63BT(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE, BOEING . . . . .	20-35-11
BACC63BT(), CONNECTOR, BOEING . . . . .	20-63-13

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

BACC63BV(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE, BOEING	20-35-11
BACC63BV(), CONNECTOR, BOEING	20-35-22
BACC63BV(), CONNECTOR, BOEING	20-61-11
BACC63BV14-7P, CONNECTOR, BOEING	20-35-13
BACC63BV16-10S, CONNECTOR, BOEING	20-35-13
BACC63BW, CONNECTOR, BOEING	20-61-19
BACC63BY, CONNECTOR, BOEING	20-61-19
BACC63CB(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE, BOEING	20-35-11
BACC63CB(), CONNECTOR, BOEING	20-61-11
BACC63CC(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE, BOEING	20-35-11
BACC63CC(), CONNECTOR, BOEING	20-61-11
BACC63CD, CONNECTOR, BOEING	20-61-19
BACC63CE, CONNECTOR, BOEING	20-61-19
BACC63CE24()22S, CONNECTOR, BOEING	20-61-19
BACC63CM(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE, BOEING	20-35-11
BACC63CM(), CONNECTOR, BOEING	20-63-13
BACC63CN(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE, BOEING	20-35-11
BACC63CN(), CONNECTOR, BOEING	20-63-13
BACC63CP(), CONNECTOR, BOEING	20-60-06
BACC63CR(), CONNECTOR, BOEING	20-60-06
BACC63CS(), CONNECTOR, BOEING	20-61-11
BACC63CT, CONNECTOR, BOEING	20-63-19
BACC63CU, CONNECTOR, BOEING	20-63-19
BACC63DB, CONNECTOR, BOEING	20-63-19
BACC63DC, CONNECTOR, BOEING	20-63-19
BACC63DE(), CONNECTOR, AMPHENOL PCD	20-63-02
BACC63DF(), CONNECTOR, AMPHENOL PCD	20-63-02
BACC63DG(), CONNECTOR, AMPHENOL PCD	20-63-02
BACC63DH(), CONNECTOR, AMPHENOL PCD	20-63-02
BACC63DP, CONNECTOR, GLENAIR	20-62-23
BACC63DR, CONNECTOR, GLENAIR	20-62-23
BACC63DT, CONNECTOR, GLENAIR	20-62-23
BACC63DU, CONNECTOR, GLENAIR	20-62-23
BACC63DV, CONNECTOR, GLENAIR	20-62-23
BACC63DW(), CONNECTOR, BOEING	20-61-11
BACC63DY(), CONNECTOR, BOEING	20-61-11
BACC63ED(), CONNECTOR, AMPHENOL PCD	20-63-03
BACC63EE(), CONNECTOR, AMPHENOL PCD	20-63-03
BACC63EF(), CONNECTOR, AMPHENOL PCD	20-63-03
BACC63X(), CONNECTOR, BOEING	20-61-11
BACC63X, CONNECTOR, BOEING	20-35-26
BACC63Y(), CONNECTOR, BOEING	20-61-11
BACC63Y, CONNECTOR, BOEING	20-35-26
! BACC64BT CONNECTOR, COAX	20-51-60
! BACC64BT4, COAX CONNECTOR, BOEING	20-51-60
! BACC64BT5, COAX CONNECTOR, BOEING	20-51-60
! BACC64BT6, COAX CONNECTOR, BOEING	20-51-60
! BACC64BW CONNECTOR, COAX	20-51-60

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

I BACC64BW4, COAX CONNECTOR, BOEING	20-51-60
I BACC64BW5, COAX CONNECTOR, BOEING	20-51-60
I BACC64BW6, COAX CONNECTOR, BOEING	20-51-60
BACC65AA(), CONNECTOR, BOEING	20-74-12
BACC65AB(), CONNECTOR, BOEING	20-74-12
BACC65AJ(), CONNECTOR, BOEING	20-72-24
BACC65AK(), CONNECTOR, BOEING	20-72-24
BACC65AL(), CONNECTOR, BOEING	20-72-25
BACC65AN(), CONNECTOR, BOEING	20-74-13
BACC65AP(), CONNECTOR, BOEING	20-74-13
BACC65AV(), CONNECTOR, BOEING	20-74-13
BACC65AW(), CONNECTOR, BOEING	20-74-13
BACC65BC12( ), CONNECTOR, BOEING	20-74-16
BACC65BC2( ), CONNECTOR, BOEING	20-74-16
BACC65BD12( ), CONNECTOR, BOEING	20-74-16
BACC65BD2( ), CONNECTOR, BOEING	20-74-16
BACC65BJ-E, CONNECTOR, BOEING	20-74-14
BACC65BJ-F, CONNECTOR, BOEING	20-74-14
BACC65BK-E, CONNECTOR, BOEING	20-74-14
BACC65BK-F, CONNECTOR, BOEING	20-74-14
BACC65BP1, CONNECTOR, BOEING	20-74-18
BACC65BR1, CONNECTOR, BOEING	20-74-18
BACC65BU(), CONNECTOR, BOEING	20-74-19
BACC65BV(), CONNECTOR, BOEING	20-74-19
BACC65CA(), CONNECTOR, BOEING	20-74-19
BACC65K()	
CONNECTOR ASSEMBLY	20-82-13
BACC65K114, CONNECTOR, BOEING	20-82-13
BACC65K41, CONNECTOR, BOEING	20-82-13
BACC65K66, CONNECTOR, BOEING	20-82-13
BACC65L()	
CONNECTOR ASSEMBLY	20-82-13
BACC65L114, CONNECTOR, BOEING	20-82-13
BACC65L41, CONNECTOR, BOEING	20-82-13
BACC65L66, CONNECTOR, BOEING	20-82-13
BACC65M(), CONNECTOR, BOEING	20-73-00
BACC65M(), CONNECTOR, BOEING	20-73-01
BACC65N(), CONNECTOR, BOEING	20-73-00
BACC65N(), CONNECTOR, BOEING	20-73-01
BACC65P(), CONNECTOR, BOEING	20-73-00
BACC65P22244A(), CONNECTOR, BOEING	20-73-01
BACC65R(), CONNECTOR, BOEING	20-73-00
BACC65R22211A(), CONNECTOR, BOEING	20-73-01
BACC65T114, CONNECTOR, QPL	20-72-18
BACC65T66, CONNECTOR, QPL	20-72-18
BACC66(), CONNECTOR, BOEING	20-35-22
BACC66E, CONNECTOR, QPL	20-72-18
BACC66F11, CONNECTOR, BOEING	20-71-14

# 20-CROSS REFERENCE INDEX



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

BACC66F12, CONNECTOR, BOEING	20-71-14
BACC66F13, CONNECTOR, BOEING	20-71-14
BACC66G, CONNECTOR, QPL	20-72-18
BACC66H122, CONNECTOR, BOEING	20-71-14
BACC66H123, CONNECTOR, BOEING	20-71-14
BACC66H125, CONNECTOR, BOEING	20-71-14
BACC66H21, CONNECTOR, BOEING	20-71-14
BACC66H22, CONNECTOR, BOEING	20-71-14
BACC66H23, CONNECTOR, BOEING	20-71-14
BACC66H24, CONNECTOR, BOEING	20-71-14
BACC66H25, CONNECTOR, BOEING	20-71-14
BACC66H26, CONNECTOR, BOEING	20-71-14
BACC66H27, CONNECTOR, BOEING	20-71-14
BACC66H28, CONNECTOR, BOEING	20-71-14
BACC66H29, CONNECTOR, BOEING	20-71-14
BACC66H30, CONNECTOR, BOEING	20-71-14
BACC66H31, CONNECTOR, BOEING	20-71-14
BACC66H32, CONNECTOR, BOEING	20-71-14
BACC66H33, CONNECTOR, BOEING	20-71-14
BACC66H34, CONNECTOR, BOEING	20-71-14
BACC66H35, CONNECTOR, BOEING	20-71-14
BACC66H36, CONNECTOR, BOEING	20-71-14
BACC66H37, CONNECTOR, BOEING	20-71-14
BACC66H38, CONNECTOR, BOEING	20-71-14
BACC66H39, CONNECTOR, BOEING	20-71-14
BACC66H40, CONNECTOR, BOEING	20-71-14
BACC66H41, CONNECTOR, BOEING	20-71-14
BACC66H42, CONNECTOR, BOEING	20-71-14
BACC66H43, CONNECTOR, BOEING	20-71-14
BACC66H44, CONNECTOR, BOEING	20-71-14
BACC66H45, CONNECTOR, BOEING	20-71-14
BACC66H46, CONNECTOR, BOEING	20-71-14
BACC66H47, CONNECTOR, BOEING	20-71-14
BACC66H48, CONNECTOR, BOEING	20-71-14
BACC66H49, CONNECTOR, BOEING	20-71-14
BACC66H50, CONNECTOR, BOEING	20-71-14
BACC66H51, CONNECTOR, BOEING	20-71-14
BACC66J, CONNECTOR, QPL	20-72-18
BACC66K31, CONNECTOR, BOEING	20-71-14
BACC66K32, CONNECTOR, BOEING	20-71-14
BACC66K33, CONNECTOR, BOEING	20-71-14
BACC66K34, CONNECTOR, BOEING	20-71-14
BACC66K35, CONNECTOR, BOEING	20-71-14
BACC66K36, CONNECTOR, BOEING	20-71-14
BACC66K37, CONNECTOR, BOEING	20-71-14
BACC66K38, CONNECTOR, BOEING	20-71-14
BACC66K39, CONNECTOR, BOEING	20-71-14
BACC66K40, CONNECTOR, BOEING	20-71-14

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

BACC66K41, CONNECTOR, BOEING . . . . .	20-71-14
BACC68C(), CONNECTOR, BOEING . . . . .	20-12-21
BACC68D(), CONNECTOR, BOEING . . . . .	20-12-21
BACC69A	
CABLE ASSEMBLY, FIBER OPTIC, BOEING. . . . .	20-12-20
BACI10AL()A(), INSERT, CONNECTOR, BOEING. . . . .	20-74-02
BACI10AL00-N, INSERT, CONNECTOR, BOEING. . . . .	20-74-02
BACI10AM()AP, INSERT, CONNECTOR, BOEING . . . . .	20-74-02
BACI10AP()A(), INSERT, CONNECTOR, BOEING. . . . .	20-74-02
BACI10AP00-N, INSERT, CONNECTOR, BOEING . . . . .	20-74-02
BACJ40A(), BOND AND GROUND JUMPER ASSEMBLY, BOEING. . . . .	20-20-00
BACJ40B(), BOND AND GROUND JUMPER ASSEMBLY, BOEING. . . . .	20-20-00
BACJ40C(), BOND AND GROUND JUMPER ASSEMBLY, BOEING. . . . .	20-20-00
BACJ40D(), BOND AND GROUND JUMPER ASSEMBLY, BOEING. . . . .	20-20-00
BACJ40E(), BOND AND GROUND JUMPER ASSEMBLY, BOEING. . . . .	20-20-00
BACJ40F(), BOND AND GROUND JUMPER ASSEMBLY, BOEING. . . . .	20-20-00
BACJ40T(), BOND AND GROUND JUMPER ASSEMBLY, BOEING. . . . .	20-20-00
BACJ40W(), BOND AND GROUND JUMPER ASSEMBLY, BOEING . . . . .	20-20-00
BACKSHELL	
057-0872-000, ITT CANNON . . . . .	20-23-39
17-310-1, AMPHENOL . . . . .	20-72-08
17-310-1, WPI . . . . .	20-72-08
17-311-1, AMPHENOL . . . . .	20-72-08
17-311-1, WPI . . . . .	20-72-08
17-312-1, AMPHENOL . . . . .	20-72-08
17-312-1, WPI . . . . .	20-72-08
17-313-1, AMPHENOL . . . . .	20-72-08
17-313-1, WPI . . . . .	20-72-08
17-314-1, AMPHENOL . . . . .	20-72-08
17-314-1, WPI . . . . .	20-72-08
319AS110BM, GLENAIR. . . . .	20-25-15
319F064XO, GLENAIR . . . . .	20-25-15
319HS110BM, GLENAIR. . . . .	20-25-15
380()001(), GLENAIR . . . . .	20-25-13
380()003, GLENAIR . . . . .	20-25-13
387(), GLENAIR . . . . .	20-25-13
387()020, GLENAIR, CONNECTOR ASSEMBLY WITH 65B47866-() CABLE . . . . .	20-35-11
387()A020, GLENAIR . . . . .	20-25-14
387()B020, GLENAIR . . . . .	20-25-14
387()S020, GLENAIR . . . . .	20-25-14
437-027, GLENAIR . . . . .	20-40-16
440()H031, GLENAIR . . . . .	20-25-14
440()J031, GLENAIR. . . . .	20-25-14
440()J069, GLENAIR. . . . .	20-25-14
440()S031, GLENAIR . . . . .	20-25-14
440()S069, GLENAIR . . . . .	20-25-14
447HA557, GLENAIR . . . . .	20-25-15
467AH009LF10FR, GLENAIR. . . . .	20-25-13

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****BACKSHELL (continued)**

467AJ009LF10FR, GLENAIR . . . . .	20-25-13
467AS009LF10FR, GLENAIR . . . . .	20-25-13
50031004-001, CINCH . . . . .	20-62-21
527-187(), GLENAIR . . . . .	20-25-14
527-212(), GLENAIR . . . . .	20-25-14
527-281ML, GLENAIR . . . . .	20-74-12
557-(), GLENAIR . . . . .	20-25-14
617924013, RADIALL . . . . .	20-74-13
617925062, RADIALL . . . . .	20-74-12
617927007, RADIALL . . . . .	20-74-13
620AA028Z1-(), GLENAIR . . . . .	20-25-12
620AA028Z1-(), GLENAIR . . . . .	20-60-09
620AS048ZM-(), GLENAIR . . . . .	20-25-12
620HA048ZM-(), GLENAIR . . . . .	20-25-12
627AS152XO32, GLENAIR . . . . .	20-60-09
787-8055-10M, DEUTSCH . . . . .	20-74-19
787-8055-16M, DEUTSCH . . . . .	20-74-19
787-8055-20M, DEUTSCH . . . . .	20-74-19
787-8055-30M, DEUTSCH . . . . .	20-74-19
AS85049-38S(), QPL . . . . .	20-25-12
AS85049-38S(), QPL . . . . .	20-60-09
BACC10GH, BOEING . . . . .	20-60-09
BACC10HD, BOEING . . . . .	20-25-12
BACC10HD, BOEING . . . . .	20-60-09
BACC10HE, BOEING . . . . .	20-25-12
BACC10HE, BOEING . . . . .	20-60-09
BACC10HF, BOEING . . . . .	20-25-12
BACC10HF, BOEING . . . . .	20-60-09
BACC10HG, BOEING . . . . .	20-25-12
BACC10HG, BOEING . . . . .	20-60-09
BACC10JC, BOEING . . . . .	20-60-09
BACC10JV()A, BOEING . . . . .	20-25-12
BACC10JV()A, BOEING . . . . .	20-60-09
BACC10JV()S, BOEING . . . . .	20-25-12
BACC10JV()S, BOEING . . . . .	20-60-09
BACC10JW()A, BOEING . . . . .	20-25-12
BACC10JW()A, BOEING . . . . .	20-60-09
BACC10JW()S, BOEING . . . . .	20-25-12
BACC10JW()S, BOEING . . . . .	20-60-09
BACC10KA, BOEING . . . . .	20-25-12
BACC10KA, BOEING . . . . .	20-60-09
BACC10KB, BOEING . . . . .	20-25-12
BACC10KB, BOEING . . . . .	20-60-09
BACC10KC, BOEING . . . . .	20-25-12
BACC10KC, BOEING . . . . .	20-60-09
BACC10KD, BOEING . . . . .	20-25-12
BACC10KD, BOEING . . . . .	20-60-09
BACC10KE, BOEING . . . . .	20-25-12

**20-CROSS REFERENCE INDEX**

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****BACKSHELL (continued)**

BACC10KE, BOEING . . . . .	20-60-09
BACC10KF, BOEING . . . . .	20-25-12
BACC10KF, BOEING . . . . .	20-60-09
BACC10LD(), BOEING . . . . .	20-74-12
BACC10LH1, BOEING . . . . .	20-74-13
BACC10LH2, BOEING . . . . .	20-74-13
BACC10LT(), BOEING . . . . .	20-74-12
BACC10MA, BOEING . . . . .	20-25-15
BACC10MB, BOEING . . . . .	20-25-15
BACC10MK, BOEING . . . . .	20-60-09
BACC10MM, BOEING . . . . .	20-25-15
BACC10MP, BOEING . . . . .	20-25-15
BACC10MR1, BOEING . . . . .	20-74-14
BACC10NC, BOEING . . . . .	20-60-09
CBJ-14, CORY COMPONENTS . . . . .	20-64-14
CBJ-14, TRI-STAR . . . . .	20-64-14
CIRCULAR CONNECTOR ASSEMBLY . . . . .	20-25-12
CIRCULAR CONNECTOR ASSEMBLY . . . . .	20-25-15
CIRCULAR CONNECTOR ASSEMBLY . . . . .	20-25-16
CIRCULAR CONNECTOR ASSEMBLY . . . . .	20-60-09
DA19678-1, ITT CANNON . . . . .	20-72-08
DA19977-1, ITT CANNON . . . . .	20-72-08
DA20961, ITT CANNON . . . . .	20-72-08
DA24658, ITT CANNON . . . . .	20-72-08
DB19678-2, ITT CANNON . . . . .	20-72-08
DB19977-2, ITT CANNON . . . . .	20-72-08
DB20962, ITT CANNON . . . . .	20-72-08
DB24659, ITT CANNON . . . . .	20-72-08
DC19678-3, ITT CANNON . . . . .	20-72-08
DC19977-3, ITT CANNON . . . . .	20-72-08
DC20963, ITT CANNON . . . . .	20-72-08
DC24660, ITT CANNON . . . . .	20-72-08
DD19678-4, ITT CANNON . . . . .	20-72-08
DD19977-4, ITT CANNON . . . . .	20-72-08
DD20964, ITT CANNON . . . . .	20-72-08
DD24661, ITT CANNON . . . . .	20-72-08
DE19977-5, ITT CANNON . . . . .	20-72-08
DE24657, ITT CANNON . . . . .	20-72-08
DE44994, ITT CANNON . . . . .	20-72-08
DSB-3, CORY COMPONENTS . . . . .	20-72-08
DSB-3, TRI-STAR . . . . .	20-72-08
DSB-4, CORY COMPONENTS . . . . .	20-72-08
DSB-4, TRI-STAR . . . . .	20-72-08
DSB-5, CORY COMPONENTS . . . . .	20-72-08
DSB-5, TRI-STAR . . . . .	20-72-08
ELM655-1, SMITHS INDUSTRIES . . . . .	20-15-42
EMI . . . . .	20-25-13
EMI, 046-1000-000, ITT CANNON . . . . .	20-71-14

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BACKSHELL (continued)

EMI, 527-187(), GLENAIR . . . . .	20-71-14
EMI, 527-212(), GLENAIR . . . . .	20-71-14
ESC75(), QPL . . . . .	20-23-39
ESC76(), QPL . . . . .	20-23-39
ESC77(), QPL . . . . .	20-23-39
G387(), GLENAIR . . . . .	20-25-13
G4993, GLENAIR . . . . .	20-25-13
G65217, GLENAIR . . . . .	20-60-09
G8993-(), GLENAIR . . . . .	20-25-12
G8993-(), GLENAIR . . . . .	20-60-09
G8993M(), GLENAIR . . . . .	20-25-12
G8993M(), GLENAIR . . . . .	20-60-09
G8994-(), GLENAIR . . . . .	20-25-12
G8994-(), GLENAIR . . . . .	20-60-09
G8994M(), GLENAIR . . . . .	20-25-12
G8994M(), GLENAIR . . . . .	20-60-09
G9034(), GLENAIR . . . . .	20-25-13
G9166(), GLENAIR . . . . .	20-25-13
GTR21-(), GLENAIR . . . . .	20-60-09
M85049-38S(), QPL . . . . .	20-25-12
M85049-38S(), QPL . . . . .	20-60-09
S1347-(), SUNBANK . . . . .	20-25-12
S1347-(), SUNBANK . . . . .	20-60-09
S2277-(), SUNBANK . . . . .	20-25-12
S2277-(), SUNBANK . . . . .	20-60-09
S2408-(), SUNBANK . . . . .	20-25-12
S2408-(), SUNBANK . . . . .	20-60-09
S280W603, BOEING, CONNECTOR ASSEMBLY WITH 65B47866-() CABLE . . . . .	20-35-11
S280W603-1(), BOEING . . . . .	20-25-14
S280W603-2(), BOEING . . . . .	20-25-14
S280W603-3(), BOEING . . . . .	20-25-14
S280W604-1(), BOEING . . . . .	20-25-14
S280W604-2(), BOEING . . . . .	20-25-14
S280W604-3(), BOEING . . . . .	20-25-14
S280W605()-1, BOEING . . . . .	20-25-13
S280W605()-2, BOEING . . . . .	20-25-13
S280W605()-3, BOEING . . . . .	20-25-13
S3929()-34, SUNBANK . . . . .	20-25-14
S3929A()-34, SUNBANK . . . . .	20-25-14
S3929R()-34, SUNBANK . . . . .	20-25-14
S3930()-34, SUNBANK . . . . .	20-25-14
S3930A()-34, SUNBANK . . . . .	20-25-14
S3930R()-34, SUNBANK . . . . .	20-25-14
STRAIN RELIEF, 340FS001N-14-2F12B, GLENAIR . . . . .	20-15-33
STRAIN RELIEF, 40-741-1632, SMITHS INDUSTRIES . . . . .	20-15-33
BACKSHELL ASSEMBLY	
RB 211 TRENT 800 POWER PLANT . . . . .	20-23-39

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

BACKSHELL CONNECTOR ASSEMBLY	
787-8055-()M, DEUTSCH . . . . .	20-74-19
BACC65BU(), BOEING . . . . .	20-74-19
BACC65BV(), BOEING . . . . .	20-74-19
BACC65CA(), BOEING . . . . .	20-74-19
BACKSHELL INSTALLATION	
CIRCULAR CONNECTORS . . . . .	20-61-00
BACKSHELLS	
CONNECTOR, SHIELD CONNECTION TO BACKSHELL . . . . .	20-25-00
BACM14L(), MOUNT, CABLE TIE, ADHESIVE BONDED, BOEING . . . . .	20-10-12
BACM15C1A, TERMINAL BLOCK MODULE, BOEING . . . . .	20-90-11
BACM15C1B, TERMINAL BLOCK MODULE, BOEING . . . . .	20-90-11
BACM15C2A, TERMINAL BLOCK MODULE, BOEING . . . . .	20-90-11
BACM15C3A, TERMINAL BLOCK MODULE, BOEING . . . . .	20-90-11
BACM15C3B, TERMINAL BLOCK MODULE, BOEING . . . . .	20-90-11
BACM15C3C, TERMINAL BLOCK MODULE, BOEING . . . . .	20-90-11
BACM15C3D, TERMINAL BLOCK MODULE, BOEING . . . . .	20-90-11
BACM15C3E, TERMINAL BLOCK MODULE, BOEING . . . . .	20-90-11
BACM15C3F, TERMINAL BLOCK MODULE, BOEING . . . . .	20-90-11
BACS12HN3U10, SCREW, QPL . . . . .	20-10-21
BACS13BH1, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13BH2, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13BH3, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT1A, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT1B, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT1C, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT1N, SOLDER SLEEVE, BOEING . . . . .	20-10-13
BACS13CT1N, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT1N, SOLDER SLEEVE, BOEING . . . . .	20-30-12
BACS13CT2A, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT2B, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT2C, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT2D, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT2N, SOLDER SLEEVE, BOEING . . . . .	20-10-13
BACS13CT2N, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT2N, SOLDER SLEEVE, BOEING . . . . .	20-30-12
BACS13CT3A, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT3B, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT3C, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT3D, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT3N, SOLDER SLEEVE, BOEING . . . . .	20-10-13
BACS13CT3N, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT3N, SOLDER SLEEVE, BOEING . . . . .	20-30-12
BACS13CT4A, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT4B, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT4C, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT4D, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT4N, SOLDER SLEEVE, BOEING . . . . .	20-10-13

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

BACS13CT4N, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT5A, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT5B, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT5C, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT5D, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13CT5N, SOLDER SLEEVE, BOEING . . . . .	20-10-13
BACS13CT5N, SOLDER SLEEVE, BOEING . . . . .	20-10-15
BACS13S(), FERRULE, MECHANICAL, BOEING . . . . .	20-10-15
BACS13S()NP, FERRULE, MECHANICAL, BOEING . . . . .	20-10-15
BACS16AF1, RELAY SOCKET, BOEING . . . . .	20-81-19
BACS16AG1, RELAY SOCKET, BOEING . . . . .	20-81-19
BACS16AH1, RELAY SOCKET, BOEING . . . . .	20-81-19
BACS16W1A, RELAY SOCKET, BOEING . . . . .	20-81-12
BACS16W2A, RELAY SOCKET, BOEING . . . . .	20-81-12
BACS16W3A, RELAY SOCKET, BOEING . . . . .	20-81-12
BACS16W4A, RELAY SOCKET, BOEING . . . . .	20-81-12
BACS16W5A, RELAY SOCKET, BOEING . . . . .	20-81-12
BACS16X1A, RELAY SOCKET, BOEING . . . . .	20-81-12
BACS16X2A, RELAY SOCKET, BOEING . . . . .	20-81-12
BACS16X3A, RELAY SOCKET, BOEING . . . . .	20-81-12
BACS16X4A, RELAY SOCKET, BOEING . . . . .	20-81-12
BACS16X5A, RELAY SOCKET, BOEING . . . . .	20-81-12
BACS16X6A, RELAY SOCKET, BOEING . . . . .	20-81-12
BACS18AX(), SPACER, STAR, BOEING . . . . .	20-10-20
BACS18AY(), SPACER, COIL, BOEING . . . . .	20-10-20
BACS31H(), RING POST SUPPORT, WIRE HARNESS, BOEING . . . . .	20-10-12
BACS31J(), SUPPORT ASSEMBLY, WIRE HARNESS, BOEING . . . . .	20-10-12
BACS31K(), RACEWAY WIRING SUPPORT, BOEING . . . . .	20-10-12
BACS31M(), RACEWAY CHANNEL SUPPORT, BOEING . . . . .	20-10-12
BACS38AA(), PLASTIC TIE STRAP MOUNTING PLATE, BOEING . . . . .	20-10-12
BACS38AB(), CLIP, STRINGER, BOEING . . . . .	20-10-12
BACS38J(), CLIP, STRINGER, BOEING . . . . .	20-10-12
BACS38J4, STRINGER CLIP, SINGLE INSERT, BOEING . . . . .	20-10-12
BACS38J5, STRINGER CLIP, DUAL INSERT, BOEING . . . . .	20-10-12
BACS38J7, STRINGER CLIP, LONG SINGLE INSERT, BOEING . . . . .	20-10-12
BACS45A(), SEAL, WIRE HARNESS, BOEING . . . . .	20-10-20
BACS45A(), SPACER, COIL, BOEING . . . . .	20-10-20
BACS45A(), SPACER, STAR, BOEING . . . . .	20-10-20
BACS45B(), SEAL, WIRE HARNESS, BOEING . . . . .	20-10-20
BACS52H1B-B1-1, SPLICE, BOEING . . . . .	20-73-00
BACS53B1EA1, GROUND STUD, BOEING . . . . .	20-20-10
BACS53B1EA2, GROUND STUD, BOEING . . . . .	20-20-10
BACT12AC1, TERMINAL LUG, GENERAL PURPOSE, BOEING . . . . .	20-30-11
BACT12AC10, TERMINAL LUG, GENERAL PURPOSE, BOEING . . . . .	20-30-11
BACT12AC11, TERMINAL LUG, GENERAL PURPOSE, BOEING . . . . .	20-30-11
BACT12AC12, TERMINAL LUG, GENERAL PURPOSE, BOEING . . . . .	20-30-11
BACT12AC12, TERMINAL, SHIELD GROUND ASSEMBLY, BOEING . . . . .	20-25-11
BACT12AC13, TERMINAL LUG, GENERAL PURPOSE, BOEING . . . . .	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

BACT12AC14, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC15, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC15, TERMINAL, SHIELD GROUND ASSEMBLY, BOEING	20-25-11
BACT12AC16, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC17, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC18, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC19, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC19, TERMINAL, SHIELD GROUND ASSEMBLY, BOEING	20-25-11
BACT12AC2, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC20, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC21, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC22, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC23, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC24, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC25, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC26, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC27, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC28, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC3, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC3, TERMINAL, SHIELD GROUND ASSEMBLY, BOEING	20-25-11
BACT12AC32, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC33, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC34, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC35, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC36, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC37, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC4, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC40, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC41, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC42, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC43, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC44, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC45, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC46, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC47, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC48, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC49, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC5, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC50, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC51, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC52, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC53, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC54, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC55, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC56, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC57, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC58, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC59, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

BACT12AC6, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC60, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC61, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC62, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC7, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC8, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AC8, TERMINAL, SHIELD GROUND ASSEMBLY, BOEING	20-25-11
BACT12AC9, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AL10, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AL11, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AL12, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AL13, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AL15, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AL16, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AL17, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AL18, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AL19, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AL2, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AL3, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AL4, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AL5, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AL6, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AL9, TERMINAL LUG, GENERAL PURPOSE, BOEING	20-30-11
BACT12AR101, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR102, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR103, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR104, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR105, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR106, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR121, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR122, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR123, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR124, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR125, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR126, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR141, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR142, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR143, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR144, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR161, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR162, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR163, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR164, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR165, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR166, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR181, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR182, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR183, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

BACT12AR184, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR185, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR186, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR187, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR201, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR202, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR203, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR204, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR205, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR206, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR207, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR221, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR222, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR223, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR224, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR225, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR226, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR227, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR241, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR242, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR243, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR244, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AR245, TERMINAL LUG, RESTRICTIVE ENTRY, BOEING	20-30-11
BACT12AV011, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, BOEING	20-30-11
BACT12AV012, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, BOEING	20-30-11
BACT12AV013, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, BOEING	20-30-11
BACT12AV014, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, BOEING	20-30-11
BACT12AV021, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, BOEING	20-30-11
BACT12AV022, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, BOEING	20-30-11
BACT12AV023, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, BOEING	20-30-11
BACT12AV024, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, BOEING	20-30-11
BACT12AV031, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, BOEING	20-30-11
BACT12AV032, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, BOEING	20-30-11
BACT12AV033, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, BOEING	20-30-11
BACT12AV034, TERMINAL LUG, NICKEL, HIGH TEMPERATURE, BOEING	20-30-11
BACT12C11, SPLICE, BUTT, HIGH TEMPERATURE, BOEING	20-30-12
BACT12C15, SPLICE, BUTT, HIGH TEMPERATURE, BOEING	20-30-12
BACT12C20, SPLICE, BUTT, HIGH TEMPERATURE, BOEING	20-30-12
BACT12E10, TERMINAL LUG, 90 DEGREE, UPRIGHT, BOEING	20-30-11
BACT12E101, TERMINAL LUG, 90 DEGREE, UPRIGHT, BOEING	20-30-11
BACT12E102, TERMINAL LUG, 90 DEGREE, UPRIGHT, BOEING	20-30-11
BACT12E11, TERMINAL LUG, 90 DEGREE, UPRIGHT, BOEING	20-30-11
BACT12E14, TERMINAL LUG, 90 DEGREE, UPRIGHT, BOEING	20-30-11
BACT12E18, TERMINAL LUG, 90 DEGREE, UPRIGHT, BOEING	20-30-11
BACT12E2, TERMINAL LUG, 90 DEGREE, UPRIGHT, BOEING	20-30-11
BACT12E201, TERMINAL LUG, 90 DEGREE, UPRIGHT, BOEING	20-30-11
BACT12E300, TERMINAL LUG, 90 DEGREE, UPRIGHT, BOEING	20-30-11
BACT12E4, TERMINAL LUG, 90 DEGREE, UPRIGHT, BOEING	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

BACT12E401, TERMINAL LUG, 90 DEGREE, UPRIGHT, BOEING	20-30-11
BACT12E402, TERMINAL LUG, 90 DEGREE, UPRIGHT, BOEING	20-30-11
BACT12E6, TERMINAL LUG, 90 DEGREE, UPRIGHT, BOEING	20-30-11
BACT12E81, TERMINAL LUG, 90 DEGREE, UPRIGHT, BOEING	20-30-11
BACT12G102, TERMINAL LUG, FLAG, BOEING	20-30-11
BACT12G102, TERMINAL, BOEING	20-20-12
BACT12G202, TERMINAL LUG, FLAG, BOEING	20-30-11
BACT12G202, TERMINAL, BOEING	20-20-12
BACT12G23, TERMINAL LUG, FLAG, BOEING	20-30-11
BACT12G23, TERMINAL, BOEING	20-20-12
BACT12G24, TERMINAL LUG, FLAG, BOEING	20-30-11
BACT12G24, TERMINAL, BOEING	20-20-12
BACT12G42, TERMINAL LUG, FLAG, BOEING	20-30-11
BACT12G42, TERMINAL, BOEING	20-20-12
BACT12G44, TERMINAL LUG, FLAG, BOEING	20-30-11
BACT12G44, TERMINAL, BOEING	20-20-12
BACT12G62, TERMINAL LUG, FLAG, BOEING	20-30-11
BACT12G62, TERMINAL, BOEING	20-20-12
BACT12G64, TERMINAL LUG, FLAG, BOEING	20-30-11
BACT12G64, TERMINAL, BOEING	20-20-12
BACT12G81, TERMINAL LUG, FLAG, BOEING	20-30-11
BACT12G81, TERMINAL, BOEING	20-20-12
BACT12G82, TERMINAL LUG, FLAG, BOEING	20-30-11
BACT12G82, TERMINAL, BOEING	20-20-12
BACT12M1-1, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M1-2, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M1-3, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M1-4, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M1-5, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M130, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M139, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M140, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M141, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M144, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M145, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M147, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M148, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M173, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M198, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M2, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M2-1, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M2-2, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M2-3, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M2-4, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M2-5, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M25-1, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M25-2, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M25-3, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

BACT12M25-4, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M25-5, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M26-1, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M26-2, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M26-3, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M26-4, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M26-5, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M26-6, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M27-1, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M27-2, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M27-3, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M27-4, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M28-1, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M28-2, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M28-3, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M28-4, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M28-5, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M28-6, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M4, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M4-1, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M4-2, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M4-3, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M4-4, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M4-5, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M5, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M6-1, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M6-2, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M6-3, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M6-4, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M6-5, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M7, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M8, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M8-1, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M8-2, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M8-3, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M8-4, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M8-5, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT12M8-6, TERMINAL LUG, HIGH TEMPERATURE, BOEING	20-30-11
BACT63D1, END CAP, HEAT SHRINKABLE, BOEING	20-30-16
BACT63D2, END CAP, HEAT SHRINKABLE, BOEING	20-30-16
BACT63D3, END CAP, HEAT SHRINKABLE, BOEING	20-30-16
BALANCED LINE CABLE	
0024A0014, RAYCHEM, SHIELD TERMINATION	20-35-14
BAND	
SHIELD TERMINATOR, 687-062-01, GLENAIR	20-25-14
SHIELD TERMINATOR, 687-062-02, GLENAIR	20-25-14
SHIELD TERMINATOR, 687-062-03, GLENAIR	20-25-14
SHIELD TERMINATOR, 687-062-04, GLENAIR	20-25-14

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### BAND (continued)

SHIELD TERMINATOR, 687-062-05, GLENAIR . . . . .	20-25-14
SHIELD TERMINATOR, 687-062-06, GLENAIR . . . . .	20-25-14
SHIELD TERMINATOR, BACB42F3, BOEING . . . . .	20-00-11
SHIELD TERMINATOR, BACB42F3, BOEING . . . . .	20-25-14
SHIELD TERMINATOR, BACB42F4, BOEING . . . . .	20-00-11
SHIELD TERMINATOR, BACB42F4, BOEING . . . . .	20-25-14
BB-818-38, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
BB-823-04, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
BB-823-06, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
BB-825-14, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
BB-825-56, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
BB-837-06, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
BB-837-08, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
BB-839-10, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
BD(), CONNECTOR, AMP. . . . .	20-71-12
BDX016016, GROUND MODULE, SOURIAU . . . . .	20-90-15
BDX016020, GROUND MODULE, SOURIAU . . . . .	20-90-15
BENDIX	
10-244(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE . . . . .	20-35-11
PC()CE, CONNECTOR . . . . .	20-61-20
PT()CE, CONNECTOR . . . . .	20-61-20
SM3106(), CONNECTOR. . . . .	20-40-00
SRPA1N8AS1, CONNECTOR . . . . .	20-40-00
BENDIX 10-244() SERIES	
CONNECTOR ASSEMBLY . . . . .	20-61-18
BENDIX PC()CE SERIES	
CONNECTOR ASSEMBLY . . . . .	20-61-20
BENDIX PT()CE SERIES	
CONNECTOR ASSEMBLY . . . . .	20-61-20
BERGEN	
C20B06, FERRULE - SAFETY CABLE . . . . .	20-60-07
C20B09, FERRULE - SAFETY CABLE . . . . .	20-60-07
C20B12, FERRULE - SAFETY CABLE . . . . .	20-60-07
C20B15, FERRULE - SAFETY CABLE . . . . .	20-60-07
C20B18, FERRULE - SAFETY CABLE . . . . .	20-60-07
C20B21, FERRULE - SAFETY CABLE . . . . .	20-60-07
C20B24, FERRULE - SAFETY CABLE . . . . .	20-60-07
F20B, FERRULE - SAFETY CABLE . . . . .	20-60-07
K20B06, FERRULE - SAFETY CABLE . . . . .	20-60-07
K20B09, FERRULE - SAFETY CABLE . . . . .	20-60-07
K20B12, FERRULE - SAFETY CABLE . . . . .	20-60-07
K20B15, FERRULE - SAFETY CABLE . . . . .	20-60-07
K20B18, FERRULE - SAFETY CABLE . . . . .	20-60-07
K20B21, FERRULE - SAFETY CABLE . . . . .	20-60-07
K20B24, FERRULE - SAFETY CABLE . . . . .	20-60-07
BGG1P-044D0001, CONNECTOR, ITT CANNON. . . . .	20-71-14
BGG1P-044D1001, CONNECTOR, ITT CANNON. . . . .	20-71-14
BGG1P-069D0201, CONNECTOR, ITT CANNON. . . . .	20-71-14

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

BGG1P-069D1201, CONNECTOR, ITT CANNON . . . . .	20-71-14
BGG1P-134A1301, CONNECTOR, ITT CANNON . . . . .	20-71-14
BGG2P-220D0101, CONNECTOR, ITT CANNON . . . . .	20-71-14
BGG2P-220D1101, CONNECTOR, ITT CANNON . . . . .	20-71-14
BGG2P-254D0101, CONNECTOR, ITT CANNON . . . . .	20-71-14
BGG2P-254D1101, CONNECTOR, ITT CANNON . . . . .	20-71-14
BGG2P-272D0101, CONNECTOR, ITT CANNON . . . . .	20-71-14
BGG2P-272D1101, CONNECTOR, ITT CANNON . . . . .	20-71-14
BGG2P-406D0101, CONNECTOR, ITT CANNON . . . . .	20-71-14
BGG2P-406D1101, CONNECTOR, ITT CANNON . . . . .	20-71-14
BGG3P-084D0101, CONNECTOR, ITT CANNON . . . . .	20-71-14
BGG3P-084D1101, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()-155-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()-234-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()-A234-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()1-100-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()1-120-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()1-124-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()1-125-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-042-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-066-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-105-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-133-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-137-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-154-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-155M-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-158-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-158M-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-165M-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-167-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-167T-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-187-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-188-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-215-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-234M-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-244-322130, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-246-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-248-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-253-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-313-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-324-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-340-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-359-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-370-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-385-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-400-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-67402-203, CONNECTOR, ITT CANNON . . . . .	20-71-14
BKA()2-67402-229, CONNECTOR, ITT CANNON . . . . .	20-71-14

## 20-CROSS REFERENCE INDEX



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

BAK()2-67402-316, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()2-67403-22-51, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()2-67403-22-56, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()2-68134-101, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()2-A137-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()2-A158M-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()2-A164-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()2-A234M-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()2-B234-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()2-B234M-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()2-BW234-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()2-V155M-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-067404-0080, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-271C-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-271T-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-494-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-496-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-537-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-608-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-626-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-67404-62, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-67404-80, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-67404-91, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-67405-54, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-67405-54-40, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-68135-21, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-68135-25, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-68135-95, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-713-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-718-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-770-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-784-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-800-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-A713-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BAK()3-A759-3, CONNECTOR, ITT CANNON . . . . .	20-71-14
BLOCK CLAMP	
69B90483-(), BOEING . . . . .	20-10-12
BMS 13-()	
WIRE TYPE CODES . . . . .	20-00-13
BMS 13-10 CABLE	
BOEING, VEAM 115 SERIES ASSEMBLY . . . . .	20-62-12
BMS 13-16 CABLE	
BOEING, VEAM 115 SERIES ASSEMBLY . . . . .	20-62-12
BMS 13-18 WIRE	
BOEING, WAVE LAB CONNECTOR ASSEMBLY . . . . .	20-62-18
BMS 13-31 WIRE	
BOEING, GRAVINER CONNECTOR ASSEMBLY . . . . .	20-62-15

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20**

BMS 13-48 WIRE TYPES	
STANDARD WIRE REPLACEMENT . . . . .	20-00-14
BMS 13-55 WIRE	
BOEING, GRAVINER CONNECTOR ASSEMBLY . . . . .	20-62-15
BOEING, MIL-C-5015 CONNECTOR ASSEMBLY . . . . .	20-63-14
BMS 13-58 WIRE TYPES	
STANDARD WIRE REPLACEMENT . . . . .	20-00-14
BMS 13-60 WIRE TYPES	
STANDARD WIRE REPLACEMENT . . . . .	20-00-14
BMS 13-8 WIRE	
BOEING, GRAVINER CONNECTOR ASSEMBLY . . . . .	20-62-15
BOEING, LINDBERG CONNECTOR ASSEMBLY . . . . .	20-62-17
BOEING, MIL-C-5015 CONNECTOR ASSEMBLY . . . . .	20-63-14
BMS24264R()-B(), CONNECTOR, DEUTSCH . . . . .	20-61-11
BMS24266R()-B(), CONNECTOR, DEUTSCH . . . . .	20-61-11
BMS8-389, ADHESIVE TAPE, WIRE HARNESS TIE, BOEING . . . . .	20-10-12
BOEING	
10-60450, RELAY SOCKET . . . . .	20-81-11
10-60479-(), CONNECTOR . . . . .	20-61-11
10-60479-1, CONNECTOR . . . . .	20-61-11
10-60479-12, CONNECTOR . . . . .	20-61-11
10-60479-126, CONNECTOR . . . . .	20-61-11
10-60479-127, CONNECTOR . . . . .	20-61-11
10-60479-128, CONNECTOR . . . . .	20-61-11
10-60479-129, CONNECTOR . . . . .	20-61-11
10-60479-16, CONNECTOR . . . . .	20-61-11
10-60479-17, CONNECTOR . . . . .	20-61-11
10-60479-18, CONNECTOR . . . . .	20-61-11
10-60479-19, CONNECTOR . . . . .	20-61-11
10-60479-5, CONNECTOR . . . . .	20-61-11
10-60479-6, CONNECTOR . . . . .	20-61-11
10-60479-66, CONNECTOR . . . . .	20-61-11
10-60479-67, CONNECTOR . . . . .	20-61-11
10-60479-68, CONNECTOR . . . . .	20-61-11
10-60479-69, CONNECTOR . . . . .	20-61-11
10-60875, FUEL QUANTITY WIRE, SHIELD TERMINATION . . . . .	20-10-15
10-61430-222-(), CONNECTOR . . . . .	20-71-12
10-61430-411-(), CONNECTOR . . . . .	20-71-12
204-18291-2, CONNECTOR . . . . .	20-40-15
280-30001-(), TERMINAL BLOCK MODULE . . . . .	20-83-02
280T10()-(), CONNECTOR . . . . .	20-61-11
280T1000-1, CONNECTOR . . . . .	20-61-11
280T1000-10, CONNECTOR . . . . .	20-61-11
280T1000-100, CONNECTOR . . . . .	20-61-11
280T1000-101, CONNECTOR . . . . .	20-61-11
280T1000-102, CONNECTOR . . . . .	20-61-11
280T1000-103, CONNECTOR . . . . .	20-61-11
280T1000-104, CONNECTOR . . . . .	20-61-11

**20-CROSS REFERENCE INDEX**



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

#### BOEING (continued)

280T1000-105, CONNECTOR. . . . .	20-61-11
280T1000-106, CONNECTOR. . . . .	20-61-11
280T1000-107, CONNECTOR. . . . .	20-61-11
280T1000-108, CONNECTOR. . . . .	20-61-11
280T1000-109, CONNECTOR. . . . .	20-61-11
280T1000-11, CONNECTOR. . . . .	20-61-11
280T1000-110, CONNECTOR. . . . .	20-61-11
280T1000-111, CONNECTOR. . . . .	20-61-11
280T1000-112, CONNECTOR. . . . .	20-61-11
280T1000-113, CONNECTOR. . . . .	20-61-11
280T1000-114, CONNECTOR. . . . .	20-61-11
280T1000-115, CONNECTOR. . . . .	20-61-11
280T1000-116, CONNECTOR. . . . .	20-61-11
280T1000-117, CONNECTOR. . . . .	20-61-11
280T1000-118, CONNECTOR. . . . .	20-61-11
280T1000-119, CONNECTOR. . . . .	20-61-11
280T1000-12, CONNECTOR. . . . .	20-61-11
280T1000-120, CONNECTOR. . . . .	20-61-11
280T1000-121, CONNECTOR. . . . .	20-61-11
280T1000-122, CONNECTOR. . . . .	20-61-11
280T1000-123, CONNECTOR. . . . .	20-61-11
280T1000-124, CONNECTOR. . . . .	20-61-11
280T1000-125, CONNECTOR. . . . .	20-61-11
280T1000-126, CONNECTOR. . . . .	20-61-11
280T1000-127, CONNECTOR. . . . .	20-61-11
280T1000-128, CONNECTOR. . . . .	20-61-11
280T1000-129, CONNECTOR. . . . .	20-61-11
280T1000-13, CONNECTOR. . . . .	20-61-11
280T1000-132, CONNECTOR. . . . .	20-61-11
280T1000-133, CONNECTOR. . . . .	20-61-11
280T1000-134, CONNECTOR. . . . .	20-61-11
280T1000-135, CONNECTOR. . . . .	20-61-11
280T1000-136, CONNECTOR. . . . .	20-61-11
280T1000-137, CONNECTOR. . . . .	20-61-11
280T1000-138, CONNECTOR. . . . .	20-61-11
280T1000-139, CONNECTOR. . . . .	20-61-11
280T1000-14, CONNECTOR. . . . .	20-61-11
280T1000-140, CONNECTOR. . . . .	20-61-11
280T1000-141, CONNECTOR. . . . .	20-61-11
280T1000-142, CONNECTOR. . . . .	20-61-11
280T1000-143, CONNECTOR. . . . .	20-61-11
280T1000-144, CONNECTOR. . . . .	20-61-11
280T1000-145, CONNECTOR. . . . .	20-61-11
280T1000-146, CONNECTOR. . . . .	20-61-11
280T1000-147, CONNECTOR. . . . .	20-61-11
280T1000-148, CONNECTOR. . . . .	20-61-11
280T1000-149, CONNECTOR. . . . .	20-61-11
280T1000-15, CONNECTOR. . . . .	20-61-11

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****BOEING (continued)**

280T1000-150, CONNECTOR . . . . .	20-61-11
280T1000-151, CONNECTOR . . . . .	20-61-11
280T1000-152, CONNECTOR . . . . .	20-61-11
280T1000-153, CONNECTOR . . . . .	20-61-11
280T1000-154, CONNECTOR . . . . .	20-61-11
280T1000-155, CONNECTOR . . . . .	20-61-11
280T1000-156, CONNECTOR . . . . .	20-61-11
280T1000-157, CONNECTOR . . . . .	20-61-11
280T1000-158, CONNECTOR . . . . .	20-61-11
280T1000-159, CONNECTOR . . . . .	20-61-11
280T1000-16, CONNECTOR . . . . .	20-61-11
280T1000-160, CONNECTOR . . . . .	20-61-11
280T1000-161, CONNECTOR . . . . .	20-61-11
280T1000-162, CONNECTOR . . . . .	20-61-11
280T1000-163, CONNECTOR . . . . .	20-61-11
280T1000-17, CONNECTOR . . . . .	20-61-11
280T1000-18, CONNECTOR . . . . .	20-61-11
280T1000-19, CONNECTOR . . . . .	20-61-11
280T1000-2, CONNECTOR . . . . .	20-61-11
280T1000-20, CONNECTOR . . . . .	20-61-11
280T1000-21, CONNECTOR . . . . .	20-61-11
280T1000-22, CONNECTOR . . . . .	20-61-11
280T1000-23, CONNECTOR . . . . .	20-61-11
280T1000-24, CONNECTOR . . . . .	20-61-11
280T1000-25, CONNECTOR . . . . .	20-61-11
280T1000-26, CONNECTOR . . . . .	20-61-11
280T1000-27, CONNECTOR . . . . .	20-61-11
280T1000-28, CONNECTOR . . . . .	20-61-11
280T1000-3, CONNECTOR . . . . .	20-61-11
280T1000-4, CONNECTOR . . . . .	20-61-11
280T1000-5, CONNECTOR . . . . .	20-61-11
280T1000-6, CONNECTOR . . . . .	20-61-11
280T1000-7, CONNECTOR . . . . .	20-61-11
280T1000-8, CONNECTOR . . . . .	20-61-11
280T1000-9, CONNECTOR . . . . .	20-61-11
280T1003-1, CONNECTOR . . . . .	20-61-11
280T1004-1, CONNECTOR . . . . .	20-61-11
280T1004-10, CONNECTOR . . . . .	20-61-11
280T1004-8, CONNECTOR . . . . .	20-61-11
280T1021-1, CONNECTOR . . . . .	20-61-11
280T1021-2, CONNECTOR . . . . .	20-61-11
280T1021-3, CONNECTOR . . . . .	20-61-11
280T1021-4, CONNECTOR . . . . .	20-61-11
280T1021-5, CONNECTOR . . . . .	20-61-11
280T1021-51, CONNECTOR . . . . .	20-61-11
280T1021-52, CONNECTOR . . . . .	20-61-11
280T1021-53, CONNECTOR . . . . .	20-61-11
280T1021-54, CONNECTOR . . . . .	20-61-11

**20-CROSS REFERENCE INDEX**

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****BOEING (continued)**

280T1021-55, CONNECTOR . . . . .	20-61-11
280T1021-56, CONNECTOR . . . . .	20-61-11
280T1021-6, CONNECTOR . . . . .	20-61-11
280U0001-(), CONNECTOR . . . . .	20-72-17
280U0002-(), CONNECTOR . . . . .	20-72-17
280U0003-(), CONNECTOR . . . . .	20-72-17
280U0004-(), CONNECTOR . . . . .	20-72-17
280U0005-(), CONNECTOR . . . . .	20-72-17
280U0006-(), CONNECTOR . . . . .	20-72-17
280U0007-(), CONNECTOR . . . . .	20-72-17
280U001()-(), CONNECTOR . . . . .	20-61-11
280U0010-1, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
280U0011-(), CONNECTOR . . . . .	20-72-17
280U0013-1, CONNECTOR . . . . .	20-61-11
280U0013-101, CONNECTOR . . . . .	20-61-11
280U0013-151, CONNECTOR . . . . .	20-61-11
280U0013-152, CONNECTOR . . . . .	20-61-11
280U0013-201, CONNECTOR . . . . .	20-61-11
280U0013-202, CONNECTOR . . . . .	20-61-11
280U0013-51, CONNECTOR . . . . .	20-61-11
280U0014-1, CONNECTOR . . . . .	20-61-11
280U0019-1, CONNECTOR . . . . .	20-61-11
280U0019-51, CONNECTOR . . . . .	20-61-11
280U0021, TERMINAL, COPALUM . . . . .	20-30-14
280U2028-(), CONNECTOR . . . . .	20-61-11
280U2028-100, CONNECTOR . . . . .	20-61-11
280U2028-106, CONNECTOR . . . . .	20-61-11
280U2028-107, CONNECTOR . . . . .	20-61-11
280U2028-108, CONNECTOR . . . . .	20-61-11
280U2028-109, CONNECTOR . . . . .	20-61-11
280U2028-200, CONNECTOR . . . . .	20-61-11
280U2028-206, CONNECTOR . . . . .	20-61-11
280U2028-207, CONNECTOR . . . . .	20-61-11
280U2028-208, CONNECTOR . . . . .	20-61-11
280U2028-209, CONNECTOR . . . . .	20-61-11
280U2028-300, CONNECTOR . . . . .	20-61-11
280U2028-306, CONNECTOR . . . . .	20-61-11
280U2028-400, CONNECTOR . . . . .	20-61-11
280U2028-406, CONNECTOR . . . . .	20-61-11
280W0002-1, CONNECTOR . . . . .	20-61-11
285T0112, SENSOR UNIT, AUTOBRIGHT INDICATOR . . . . .	20-83-00
287T0011-(), CLAMP, LOOP . . . . .	20-10-12
287T0011-1, CLAMP, FIBER OPTIC CABLE . . . . .	20-12-11
287T0011-4, CLAMP, FIBER OPTIC CABLE . . . . .	20-12-11
287T0028-1, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
287T0028-14, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
287T0028-15, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
287T0028-2, ADAPTER PLATE, CUTOUT . . . . .	20-60-06

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BOEING (continued)

287T0028-3, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
287T0028-4, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
287T0028-5, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
287W1619-(), VAPOR SEAL, PFCS . . . . .	20-14-11
312N5204-1, COVER PLATE . . . . .	20-10-21
312N5205-1, SEAL . . . . .	20-10-21
312T2202-1, SEAL HOUSING . . . . .	20-10-21
60B40052-3, CONNECTOR . . . . .	20-62-13
60B40052-4, CONNECTOR . . . . .	20-62-13
60B40122-(), SWITCH, LIGHTED PUSHBUTTON . . . . .	20-83-00
65B414-()-(), CONNECTOR . . . . .	20-61-11
65B41429-1, CONNECTOR . . . . .	20-61-11
65B41429-10, CONNECTOR . . . . .	20-61-11
65B41429-11, CONNECTOR . . . . .	20-61-11
65B41429-12, CONNECTOR . . . . .	20-61-11
65B41429-13, CONNECTOR . . . . .	20-61-11
65B41429-14, CONNECTOR . . . . .	20-61-11
65B41429-15, CONNECTOR . . . . .	20-61-11
65B41429-16, CONNECTOR . . . . .	20-61-11
65B41429-17, CONNECTOR . . . . .	20-61-11
65B41429-18, CONNECTOR . . . . .	20-61-11
65B41429-19, CONNECTOR . . . . .	20-61-11
65B41429-2, CONNECTOR . . . . .	20-61-11
65B41429-20, CONNECTOR . . . . .	20-61-11
65B41429-3, CONNECTOR . . . . .	20-61-11
65B41429-4, CONNECTOR . . . . .	20-61-11
65B41429-5, CONNECTOR . . . . .	20-61-11
65B41429-6, CONNECTOR . . . . .	20-61-11
65B41429-7, CONNECTOR . . . . .	20-61-11
65B41429-8, CONNECTOR . . . . .	20-61-11
65B41429-9, CONNECTOR . . . . .	20-61-11
65B41430-1, CONNECTOR . . . . .	20-61-11
65B41430-10, CONNECTOR . . . . .	20-61-11
65B41430-11, CONNECTOR . . . . .	20-61-11
65B41430-12, CONNECTOR . . . . .	20-61-11
65B41430-13, CONNECTOR . . . . .	20-61-11
65B41430-14, CONNECTOR . . . . .	20-61-11
65B41430-15, CONNECTOR . . . . .	20-61-11
65B41430-16, CONNECTOR . . . . .	20-61-11
65B41430-17, CONNECTOR . . . . .	20-61-11
65B41430-18, CONNECTOR . . . . .	20-61-11
65B41430-19, CONNECTOR . . . . .	20-61-11
65B41430-2, CONNECTOR . . . . .	20-61-11
65B41430-20, CONNECTOR . . . . .	20-61-11
65B41430-3, CONNECTOR . . . . .	20-61-11
65B41430-4, CONNECTOR . . . . .	20-61-11
65B41430-5, CONNECTOR . . . . .	20-61-11
65B41430-6, CONNECTOR . . . . .	20-61-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BOEING (continued)

65B41430-7, CONNECTOR . . . . .	20-61-11
65B41430-8, CONNECTOR . . . . .	20-61-11
65B41430-9, CONNECTOR . . . . .	20-61-11
65B41431-1, CONNECTOR . . . . .	20-61-11
65B41431-10, CONNECTOR . . . . .	20-61-11
65B41431-11, CONNECTOR . . . . .	20-61-11
65B41431-12, CONNECTOR . . . . .	20-61-11
65B41431-13, CONNECTOR . . . . .	20-61-11
65B41431-14, CONNECTOR . . . . .	20-61-11
65B41431-15, CONNECTOR . . . . .	20-61-11
65B41431-16, CONNECTOR . . . . .	20-61-11
65B41431-17, CONNECTOR . . . . .	20-61-11
65B41431-18, CONNECTOR . . . . .	20-61-11
65B41431-19, CONNECTOR . . . . .	20-61-11
65B41431-2, CONNECTOR . . . . .	20-61-11
65B41431-20, CONNECTOR . . . . .	20-61-11
65B41431-3, CONNECTOR . . . . .	20-61-11
65B41431-4, CONNECTOR . . . . .	20-61-11
65B41431-5, CONNECTOR . . . . .	20-61-11
65B41431-6, CONNECTOR . . . . .	20-61-11
65B41431-7, CONNECTOR . . . . .	20-61-11
65B41431-8, CONNECTOR . . . . .	20-61-11
65B41431-9, CONNECTOR . . . . .	20-61-11
65B41432-1, CONNECTOR . . . . .	20-61-11
65B41432-10, CONNECTOR . . . . .	20-61-11
65B41432-11, CONNECTOR . . . . .	20-61-11
65B41432-12, CONNECTOR . . . . .	20-61-11
65B41432-13, CONNECTOR . . . . .	20-61-11
65B41432-14, CONNECTOR . . . . .	20-61-11
65B41432-15, CONNECTOR . . . . .	20-61-11
65B41432-16, CONNECTOR . . . . .	20-61-11
65B41432-17, CONNECTOR . . . . .	20-61-11
65B41432-18, CONNECTOR . . . . .	20-61-11
65B41432-19, CONNECTOR . . . . .	20-61-11
65B41432-2, CONNECTOR . . . . .	20-61-11
65B41432-20, CONNECTOR . . . . .	20-61-11
65B41432-3, CONNECTOR . . . . .	20-61-11
65B41432-4, CONNECTOR . . . . .	20-61-11
65B41432-5, CONNECTOR . . . . .	20-61-11
65B41432-6, CONNECTOR . . . . .	20-61-11
65B41432-7, CONNECTOR . . . . .	20-61-11
65B41432-8, CONNECTOR . . . . .	20-61-11
65B41432-9, CONNECTOR . . . . .	20-61-11
65B47866-(), SHIELDED CABLE . . . . .	20-35-11
66-13970-1, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
66-14850-1, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
66-18337-1, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
69-37164-3, ADAPTER PLATE, CUTOUT . . . . .	20-60-06

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BOEING (continued)

69-54481, HF PROBE ANTENNA RECEPTACLE . . . . .	20-87-00
69B41500, HF ANTENNA LEAD ASSEMBLY . . . . .	20-87-00
69B41501-(), TERMINAL . . . . .	20-87-00
69B4181()-(), CONNECTOR . . . . .	20-61-11
69B41813-1, CONNECTOR . . . . .	20-61-11
69B41813-2, CONNECTOR . . . . .	20-61-11
69B41813-3, CONNECTOR . . . . .	20-61-11
69B41813-4, CONNECTOR . . . . .	20-61-11
69B41813-5, CONNECTOR . . . . .	20-61-11
69B41813-6, CONNECTOR . . . . .	20-61-11
69B41813-7, CONNECTOR . . . . .	20-61-11
69B41813-8, CONNECTOR . . . . .	20-61-11
69B41814-1, CONNECTOR . . . . .	20-61-11
69B41814-2, CONNECTOR . . . . .	20-61-11
69B41814-3, CONNECTOR . . . . .	20-61-11
69B41814-4, CONNECTOR . . . . .	20-61-11
69B41814-5, CONNECTOR . . . . .	20-61-11
69B41814-6, CONNECTOR . . . . .	20-61-11
69B41815-1, CONNECTOR . . . . .	20-61-11
69B41815-2, CONNECTOR . . . . .	20-61-11
69B41815-3, CONNECTOR . . . . .	20-61-11
69B41815-4, CONNECTOR . . . . .	20-61-11
69B41815-5, CONNECTOR . . . . .	20-61-11
69B41815-6, CONNECTOR . . . . .	20-61-11
69B41816-1, CONNECTOR . . . . .	20-61-11
69B41816-2, CONNECTOR . . . . .	20-61-11
69B41816-3, CONNECTOR . . . . .	20-61-11
69B41816-4, CONNECTOR . . . . .	20-61-11
69B41816-5, CONNECTOR . . . . .	20-61-11
69B41816-6, CONNECTOR . . . . .	20-61-11
69B41817-1, CONNECTOR . . . . .	20-61-11
69B41817-2, CONNECTOR . . . . .	20-61-11
69B41817-3, CONNECTOR . . . . .	20-61-11
69B41817-4, CONNECTOR . . . . .	20-61-11
69B41817-5, CONNECTOR . . . . .	20-61-11
69B41817-6, CONNECTOR . . . . .	20-61-11
69B41817-7, CONNECTOR . . . . .	20-61-11
69B41817-8, CONNECTOR . . . . .	20-61-11
69B41817-9, CONNECTOR . . . . .	20-61-11
69B41818-1, CONNECTOR . . . . .	20-61-11
69B41818-10, CONNECTOR . . . . .	20-61-11
69B41818-11, CONNECTOR . . . . .	20-61-11
69B41818-2, CONNECTOR . . . . .	20-61-11
69B41818-3, CONNECTOR . . . . .	20-61-11
69B41818-4, CONNECTOR . . . . .	20-61-11
69B41818-5, CONNECTOR . . . . .	20-61-11
69B41818-6, CONNECTOR . . . . .	20-61-11
69B41818-7, CONNECTOR . . . . .	20-61-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BOEING (continued)

69B41818-8, CONNECTOR . . . . .	20-61-11
69B41818-9, CONNECTOR . . . . .	20-61-11
69B41819-1, CONNECTOR . . . . .	20-61-11
69B41819-2, CONNECTOR . . . . .	20-61-11
69B41819-3, CONNECTOR . . . . .	20-61-11
69B41819-4, CONNECTOR . . . . .	20-61-11
69B90483-(), CLAMP, BLOCK . . . . .	20-10-12
BACA14AB164, SOLDER ADAPTER . . . . .	20-40-00
BACA14AN(), SPLICE ADAPTER . . . . .	20-30-22
BACA14BH10, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
BACA14BH10A, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
BACA14BH12, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
BACA14BH14, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
BACA14BH16A, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
BACA14BH1A, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
BACA14BH26A, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
BACA14BH5, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
BACA14BH5A, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
BACA14BH6A, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
BACA14BH7, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
BACA14BH7A, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
BACA14BH8, ADAPTER PLATE, CUTOUT . . . . .	20-60-06
BACB20VB, FQIS WIRE HARNESS BRACKET, WITHOUT CARRIER . . . . .	20-10-12
BACB20VE, FQIS WIRE HARNESS BRACKET, WITH CARRIER . . . . .	20-10-12
BACB20VG, RACEWAY BRACKET . . . . .	20-10-12
BACB30LE5U18, BOLT . . . . .	20-10-21
BACB42F3, BAND, SHIELD TERMINATOR . . . . .	20-00-11
BACB42F3, BAND, SHIELD TERMINATOR . . . . .	20-25-14
BACB42F4, BAND, SHIELD TERMINATOR . . . . .	20-00-11
BACB42F4, BAND, SHIELD TERMINATOR . . . . .	20-25-14
BACC10BU(), CLAMP, LOOP . . . . .	20-10-12
BACC10DK(), CLAMP, LOOP . . . . .	20-10-12
BACC10DR(), RACEWAY CHANNEL . . . . .	20-10-12
BACC10DS(), CLAMP, RACEWAY . . . . .	20-10-12
BACC10GE(), CLAMP, LOOP . . . . .	20-10-12
BACC10GE8A, LOOP CLAMP . . . . .	20-11-11
BACC10GH, BACKSHELL . . . . .	20-60-09
BACC10GU(), CLAMP, LOOP . . . . .	20-10-12
BACC10HD, BACKSHELL . . . . .	20-25-12
BACC10HD, BACKSHELL . . . . .	20-60-09
BACC10HE, BACKSHELL . . . . .	20-25-12
BACC10HE, BACKSHELL . . . . .	20-60-09
BACC10HF, BACKSHELL . . . . .	20-25-12
BACC10HF, BACKSHELL . . . . .	20-60-09
BACC10HG, BACKSHELL . . . . .	20-25-12
BACC10HG, BACKSHELL . . . . .	20-60-09
BACC10HS(), CLAMP, LOOP . . . . .	20-10-12
BACC10JC, BACKSHELL . . . . .	20-60-09

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

BOEING (continued)

BACC10JU(), CLAMP, LOOP	20-10-12
BACC10JV()A, BACKSHELL	20-25-12
BACC10JV()A, BACKSHELL	20-60-09
BACC10JV()S, BACKSHELL	20-25-12
BACC10JV()S, BACKSHELL	20-60-09
BACC10JW()A, BACKSHELL	20-25-12
BACC10JW()A, BACKSHELL	20-60-09
BACC10JW()S, BACKSHELL	20-25-12
BACC10JW()S, BACKSHELL	20-60-09
BACC10KA, BACKSHELL	20-25-12
BACC10KA, BACKSHELL	20-60-09
BACC10KB, BACKSHELL	20-25-12
BACC10KB, BACKSHELL	20-60-09
BACC10KC, BACKSHELL	20-25-12
BACC10KC, BACKSHELL	20-60-09
BACC10KD, BACKSHELL	20-25-12
BACC10KD, BACKSHELL	20-60-09
BACC10KE, BACKSHELL	20-25-12
BACC10KE, BACKSHELL	20-60-09
BACC10KF, BACKSHELL	20-25-12
BACC10KF, BACKSHELL	20-60-09
BACC10KL(), CLAMP, LOOP	20-10-12
BACC10LD(), BACKSHELL	20-74-12
BACC10LH1, BACKSHELL	20-74-13
BACC10LH2, BACKSHELL	20-74-13
BACC10LL1, STRAIN RELIEF CLAMP	20-74-13
BACC10LL2, STRAIN RELIEF CLAMP	20-74-13
BACC10LM1F, STRAIN RELIEF CLAMP	20-74-13
BACC10LM2F, STRAIN RELIEF CLAMP	20-74-13
BACC10LT(), BACKSHELL	20-74-12
BACC10LV2, STRAIN RELIEF CLAMP	20-74-13
BACC10MA, BACKSHELL	20-25-15
BACC10MB, BACKSHELL	20-25-15
BACC10MK, BACKSHELL	20-60-09
BACC10MM, BACKSHELL	20-25-15
BACC10MP, BACKSHELL	20-25-15
BACC10MR1, BACKSHELL	20-74-14
BACC10MY1, STRAIN RELIEF CLAMP	20-74-18
BACC10NA(), CLAMP, CUSHION, SINGLE LEG ASSEMBLY, HIGH PERFORMANCE PLASTIC	20-10-12
BACC10NB(), CLAMP, CUSHION, DOUBLE LEG ASSEMBLY, HIGH PERFORMANCE PLASTIC	20-10-12
BACC10NC, BACKSHELL	20-60-09
BACC13AT2C12, FERRULE - SAFETY CABLE	20-60-07
BACC13AT2C15, FERRULE - SAFETY CABLE	20-60-07
BACC13AT2C18, FERRULE - SAFETY CABLE	20-60-07
BACC13AT2C21, FERRULE - SAFETY CABLE	20-60-07
BACC13AT2C24, FERRULE - SAFETY CABLE	20-60-07
BACC13AT2C6, FERRULE - SAFETY CABLE	20-60-07
BACC13AT2C9, FERRULE - SAFETY CABLE	20-60-07

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### BOEING (continued)

BACC13AT2F, FERRULE - SAFETY CABLE .....	20-60-07
BACC13AT2K12, FERRULE - SAFETY CABLE .....	20-60-07
BACC13AT2K15, FERRULE - SAFETY CABLE .....	20-60-07
BACC13AT2K18, FERRULE - SAFETY CABLE .....	20-60-07
BACC13AT2K21, FERRULE - SAFETY CABLE .....	20-60-07
BACC13AT2K24, FERRULE - SAFETY CABLE .....	20-60-07
BACC13AT2K6, FERRULE - SAFETY CABLE .....	20-60-07
BACC13AT2K9, FERRULE - SAFETY CABLE .....	20-60-07
BACC18AF, CIRCUIT BREAKER, REMOTE CONTROL .....	20-83-00
BACC45F(), CONNECTOR .....	20-35-22
BACC45F(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE .....	20-35-11
BACC45FL(), CONNECTOR .....	20-61-11
BACC45FM(), CONNECTOR .....	20-61-11
BACC45FM14-7P, CONNECTOR .....	20-35-13
BACC45FM16-10S, CONNECTOR .....	20-35-13
BACC45FN(), CONNECTOR .....	20-61-11
BACC45FP(), CONNECTOR .....	20-61-11
BACC45FS(), CONNECTOR .....	20-61-11
BACC45FT(), CONNECTOR .....	20-61-11
BACC50AN16, GROUND MODULE .....	20-90-15
BACC50AN20, GROUND MODULE .....	20-90-15
BACC63AE(), CONNECTOR .....	20-61-11
BACC63AE, CONNECTOR .....	20-35-26
BACC63AF(), CONNECTOR .....	20-61-11
BACC63AF, CONNECTOR .....	20-35-26
BACC63AF24-30P10, CONNECTOR .....	20-14-51
BACC63BD, CONNECTOR .....	20-61-19
BACC63BE, CONNECTOR .....	20-61-19
BACC63BN(), CONNECTOR .....	20-61-11
BACC63BN(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE .....	20-35-11
BACC63BP(), CONNECTOR .....	20-35-22
BACC63BP(), CONNECTOR .....	20-61-11
BACC63BP(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE .....	20-35-11
BACC63BP, CONNECTOR .....	20-35-17
BACC63BP18D8SN, CONNECTOR .....	20-61-11
BACC63BR(), CONNECTOR .....	20-63-13
BACC63BR(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE .....	20-35-11
BACC63BT(), CONNECTOR .....	20-63-13
BACC63BT(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE .....	20-35-11
BACC63BV(), CONNECTOR .....	20-35-22
BACC63BV(), CONNECTOR .....	20-61-11
BACC63BV(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE .....	20-35-11
BACC63BV14-7P, CONNECTOR .....	20-35-13
BACC63BV16-10S, CONNECTOR .....	20-35-13
BACC63BW, CONNECTOR .....	20-61-19
BACC63BY, CONNECTOR .....	20-61-19
BACC63CB(), CONNECTOR .....	20-61-11
BACC63CB(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE .....	20-35-11

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### BOEING (continued)

BACC63CC(), CONNECTOR . . . . .	20-61-11
BACC63CC(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE . . . . .	20-35-11
BACC63CD, CONNECTOR . . . . .	20-61-19
BACC63CE, CONNECTOR . . . . .	20-61-19
BACC63CE24()22S, CONNECTOR . . . . .	20-61-19
BACC63CM(), CONNECTOR . . . . .	20-63-13
BACC63CM(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE . . . . .	20-35-11
BACC63CN(), CONNECTOR . . . . .	20-63-13
BACC63CN(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE . . . . .	20-35-11
BACC63CP(), CONNECTOR . . . . .	20-60-06
BACC63CR(), CONNECTOR . . . . .	20-60-06
BACC63CS(), CONNECTOR . . . . .	20-61-11
BACC63CT, CONNECTOR . . . . .	20-63-19
BACC63CU, CONNECTOR . . . . .	20-63-19
BACC63DB, CONNECTOR . . . . .	20-63-19
BACC63DC, CONNECTOR . . . . .	20-63-19
BACC63DW(), CONNECTOR . . . . .	20-61-11
BACC63DY(), CONNECTOR . . . . .	20-61-11
BACC63X(), CONNECTOR . . . . .	20-61-11
BACC63X, CONNECTOR . . . . .	20-35-26
BACC63Y(), CONNECTOR . . . . .	20-61-11
BACC63Y, CONNECTOR . . . . .	20-35-26
I BACC64BT4, COAX CONNECTOR . . . . .	20-51-60
I BACC64BT5, COAX CONNECTOR . . . . .	20-51-60
I BACC64BT6, COAX CONNECTOR . . . . .	20-51-60
I BACC64BW4, COAX CONNECTOR . . . . .	20-51-60
I BACC64BW5, COAX CONNECTOR . . . . .	20-51-60
I BACC64BW6, COAX CONNECTOR . . . . .	20-51-60
BACC65AA(), CONNECTOR . . . . .	20-74-12
BACC65AB(), CONNECTOR . . . . .	20-74-12
BACC65AJ(), CONNECTOR . . . . .	20-72-24
BACC65AK(), CONNECTOR . . . . .	20-72-24
BACC65AL(), CONNECTOR . . . . .	20-72-25
BACC65AN(), CONNECTOR . . . . .	20-74-13
BACC65AP(), CONNECTOR . . . . .	20-74-13
BACC65AV(), CONNECTOR . . . . .	20-74-13
BACC65AW(), CONNECTOR . . . . .	20-74-13
BACC65BC12( ), CONNECTOR . . . . .	20-74-16
BACC65BC2( ), CONNECTOR . . . . .	20-74-16
BACC65BD12( ), CONNECTOR . . . . .	20-74-16
BACC65BD2( ), CONNECTOR . . . . .	20-74-16
BACC65BJ-E, CONNECTOR . . . . .	20-74-14
BACC65BJ-F, CONNECTOR . . . . .	20-74-14
BACC65BK-E, CONNECTOR . . . . .	20-74-14
BACC65BK-F, CONNECTOR . . . . .	20-74-14
BACC65BP1, CONNECTOR . . . . .	20-74-18
BACC65BR1, CONNECTOR . . . . .	20-74-18
BACC65BU(), CONNECTOR . . . . .	20-74-19

# 20-CROSS REFERENCE INDEX



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

#### BOEING (continued)

BACC65BV(), CONNECTOR	20-74-19
BACC65CA(), CONNECTOR	20-74-19
BACC65K114, CONNECTOR	20-82-13
BACC65K41, CONNECTOR	20-82-13
BACC65K66, CONNECTOR	20-82-13
BACC65L114, CONNECTOR	20-82-13
BACC65L41, CONNECTOR	20-82-13
BACC65L66, CONNECTOR	20-82-13
BACC65M(), CONNECTOR	20-73-00
BACC65M(), CONNECTOR	20-73-01
BACC65N(), CONNECTOR	20-73-00
BACC65N(), CONNECTOR	20-73-01
BACC65P(), CONNECTOR	20-73-00
BACC65P22244A(), CONNECTOR	20-73-01
BACC65R(), CONNECTOR	20-73-00
BACC65R22211A(), CONNECTOR	20-73-01
BACC66(), CONNECTOR	20-35-22
BACC66F11, CONNECTOR	20-71-14
BACC66F12, CONNECTOR	20-71-14
BACC66F13, CONNECTOR	20-71-14
BACC66H122, CONNECTOR	20-71-14
BACC66H123, CONNECTOR	20-71-14
BACC66H125, CONNECTOR	20-71-14
BACC66H21, CONNECTOR	20-71-14
BACC66H22, CONNECTOR	20-71-14
BACC66H23, CONNECTOR	20-71-14
BACC66H24, CONNECTOR	20-71-14
BACC66H25, CONNECTOR	20-71-14
BACC66H26, CONNECTOR	20-71-14
BACC66H27, CONNECTOR	20-71-14
BACC66H28, CONNECTOR	20-71-14
BACC66H29, CONNECTOR	20-71-14
BACC66H30, CONNECTOR	20-71-14
BACC66H31, CONNECTOR	20-71-14
BACC66H32, CONNECTOR	20-71-14
BACC66H33, CONNECTOR	20-71-14
BACC66H34, CONNECTOR	20-71-14
BACC66H35, CONNECTOR	20-71-14
BACC66H36, CONNECTOR	20-71-14
BACC66H37, CONNECTOR	20-71-14
BACC66H38, CONNECTOR	20-71-14
BACC66H39, CONNECTOR	20-71-14
BACC66H40, CONNECTOR	20-71-14
BACC66H41, CONNECTOR	20-71-14
BACC66H42, CONNECTOR	20-71-14
BACC66H43, CONNECTOR	20-71-14
BACC66H44, CONNECTOR	20-71-14
BACC66H45, CONNECTOR	20-71-14

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BOEING (continued)

BACC66H46, CONNECTOR .....	20-71-14
BACC66H47, CONNECTOR .....	20-71-14
BACC66H48, CONNECTOR .....	20-71-14
BACC66H49, CONNECTOR .....	20-71-14
BACC66H50, CONNECTOR .....	20-71-14
BACC66H51, CONNECTOR .....	20-71-14
BACC66K31, CONNECTOR .....	20-71-14
BACC66K32, CONNECTOR .....	20-71-14
BACC66K33, CONNECTOR .....	20-71-14
BACC66K34, CONNECTOR .....	20-71-14
BACC66K35, CONNECTOR .....	20-71-14
BACC66K36, CONNECTOR .....	20-71-14
BACC66K37, CONNECTOR .....	20-71-14
BACC66K38, CONNECTOR .....	20-71-14
BACC66K39, CONNECTOR .....	20-71-14
BACC66K40, CONNECTOR .....	20-71-14
BACC66K41, CONNECTOR .....	20-71-14
BACC68C(), CONNECTOR .....	20-12-21
BACC68D(), CONNECTOR .....	20-12-21
BACC69A AND BACC69C, CABLE ASSEMBLY, FIBER OPTIC .....	20-12-20
BACI10AL()A(), INSERT, CONNECTOR .....	20-74-02
BACI10AL00-N, INSERT, CONNECTOR .....	20-74-02
BACI10AM()AP, INSERT, CONNECTOR .....	20-74-02
BACI10AP()A(), INSERT, CONNECTOR .....	20-74-02
BACI10AP00-N, INSERT, CONNECTOR .....	20-74-02
BACJ40A(), BOND AND GROUND JUMPER ASSEMBLY .....	20-20-00
BACJ40B(), BOND AND GROUND JUMPER ASSEMBLY .....	20-20-00
BACJ40C(), BOND AND GROUND JUMPER ASSEMBLY .....	20-20-00
BACJ40D(), BOND AND GROUND JUMPER ASSEMBLY .....	20-20-00
BACJ40E(), BOND AND GROUND JUMPER ASSEMBLY .....	20-20-00
BACJ40F(), BOND AND GROUND JUMPER ASSEMBLY .....	20-20-00
BACJ40T(), BOND AND GROUND JUMPER ASSEMBLY .....	20-20-00
BACJ40W(), BOND AND GROUND JUMPER ASSEMBLY .....	20-20-00
BACM14L(), MOUNT, CABLE TIE, ADHESIVE BONDED .....	20-10-12
BACM15C1A, TERMINAL BLOCK MODULE .....	20-90-11
BACM15C1B, TERMINAL BLOCK MODULE .....	20-90-11
BACM15C2A, TERMINAL BLOCK MODULE .....	20-90-11
BACM15C3A, TERMINAL BLOCK MODULE .....	20-90-11
BACM15C3B, TERMINAL BLOCK MODULE .....	20-90-11
BACM15C3C, TERMINAL BLOCK MODULE .....	20-90-11
BACM15C3D, TERMINAL BLOCK MODULE .....	20-90-11
BACM15C3E, TERMINAL BLOCK MODULE .....	20-90-11
BACM15C3F, TERMINAL BLOCK MODULE .....	20-90-11
BACS13BH1, SOLDER SLEEVE .....	20-10-15
BACS13BH2, SOLDER SLEEVE .....	20-10-15
BACS13BH3, SOLDER SLEEVE .....	20-10-15
BACS13CT1A, SOLDER SLEEVE .....	20-10-15
BACS13CT1B, SOLDER SLEEVE .....	20-10-15

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### BOEING (continued)

BACS13CT1C, SOLDER SLEEVE	20-10-15
BACS13CT1N, SOLDER SLEEVE	20-10-13
BACS13CT1N, SOLDER SLEEVE	20-10-15
BACS13CT1N, SOLDER SLEEVE	20-30-12
BACS13CT2A, SOLDER SLEEVE	20-10-15
BACS13CT2B, SOLDER SLEEVE	20-10-15
BACS13CT2C, SOLDER SLEEVE	20-10-15
BACS13CT2D, SOLDER SLEEVE	20-10-15
BACS13CT2N, SOLDER SLEEVE	20-10-13
BACS13CT2N, SOLDER SLEEVE	20-10-15
BACS13CT2N, SOLDER SLEEVE	20-30-12
BACS13CT3A, SOLDER SLEEVE	20-10-15
BACS13CT3B, SOLDER SLEEVE	20-10-15
BACS13CT3C, SOLDER SLEEVE	20-10-15
BACS13CT3D, SOLDER SLEEVE	20-10-15
BACS13CT3N, SOLDER SLEEVE	20-10-13
BACS13CT3N, SOLDER SLEEVE	20-10-15
BACS13CT3N, SOLDER SLEEVE	20-30-12
BACS13CT4A, SOLDER SLEEVE	20-10-15
BACS13CT4B, SOLDER SLEEVE	20-10-15
BACS13CT4C, SOLDER SLEEVE	20-10-15
BACS13CT4D, SOLDER SLEEVE	20-10-15
BACS13CT4N, SOLDER SLEEVE	20-10-13
BACS13CT4N, SOLDER SLEEVE	20-10-15
BACS13CT5A, SOLDER SLEEVE	20-10-15
BACS13CT5B, SOLDER SLEEVE	20-10-15
BACS13CT5C, SOLDER SLEEVE	20-10-15
BACS13CT5D, SOLDER SLEEVE	20-10-15
BACS13CT5N, SOLDER SLEEVE	20-10-13
BACS13CT5N, SOLDER SLEEVE	20-10-15
BACS13S(), FERRULE, MECHANICAL	20-10-15
BACS13S()NP, FERRULE, MECHANICAL	20-10-15
BACS16AF1, RELAY SOCKET	20-81-19
BACS16AG1, RELAY SOCKET	20-81-19
BACS16AH1, RELAY SOCKET	20-81-19
BACS16W1A, RELAY SOCKET	20-81-12
BACS16W2A, RELAY SOCKET	20-81-12
BACS16W3A, RELAY SOCKET	20-81-12
BACS16W4A, RELAY SOCKET	20-81-12
BACS16W5A, RELAY SOCKET	20-81-12
BACS16X1A, RELAY SOCKET	20-81-12
BACS16X2A, RELAY SOCKET	20-81-12
BACS16X3A, RELAY SOCKET	20-81-12
BACS16X4A, RELAY SOCKET	20-81-12
BACS16X5A, RELAY SOCKET	20-81-12
BACS16X6A, RELAY SOCKET	20-81-12
BACS18AX(), SPACER, STAR	20-10-20
BACS18AY(), SPACER, COIL	20-10-20

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BOEING (continued)

BACS31H(), RING POST SUPPORT, WIRE HARNESS .....	20-10-12
BACS31J(), SUPPORT ASSEMBLY, WIRE HARNESS .....	20-10-12
BACS31K(), RACEWAY WIRING SUPPORT .....	20-10-12
BACS31M(), RACEWAY CHANNEL SUPPORT .....	20-10-12
BACS38AA(), PLASTIC TIE STRAP MOUNTING PLATE .....	20-10-12
BACS38AB(), CLIP, STRINGER .....	20-10-12
BACS38J(), CLIP, STRINGER .....	20-10-12
BACS38J4, STRINGER CLIP, SINGLE INSERT .....	20-10-12
BACS38J5, STRINGER CLIP, DUAL INSERT .....	20-10-12
BACS38J7, STRINGER CLIP, LONG SINGLE INSERT .....	20-10-12
BACS45A(), SEAL, WIRE HARNESS .....	20-10-20
BACS45A(), SPACER, COIL .....	20-10-20
BACS45A(), SPACER, STAR .....	20-10-20
BACS45B(), SEAL, WIRE HARNESS .....	20-10-20
BACS52H1B-B1-1, SPLICE .....	20-73-00
BACS53B1EA1, GROUND STUD .....	20-20-10
BACS53B1EA2, GROUND STUD .....	20-20-10
BACT12AC1, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC10, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC11, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC12, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC12, TERMINAL, SHIELD GROUND ASSEMBLY .....	20-25-11
BACT12AC13, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC14, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC15, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC15, TERMINAL, SHIELD GROUND ASSEMBLY .....	20-25-11
BACT12AC16, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC17, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC18, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC19, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC19, TERMINAL, SHIELD GROUND ASSEMBLY .....	20-25-11
BACT12AC2, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC20, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC21, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC22, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC23, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC24, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC25, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC26, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC27, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC28, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC3, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC3, TERMINAL, SHIELD GROUND ASSEMBLY .....	20-25-11
BACT12AC32, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC33, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC34, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC35, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BACT12AC36, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BOEING (continued)

BACT12AC37, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC4, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC40, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC41, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC42, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC43, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC44, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC45, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC46, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC47, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC48, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC49, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC5, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC50, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC51, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC52, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC53, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC54, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC55, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC56, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC57, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC58, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC59, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC6, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC60, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC61, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC62, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC7, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC8, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AC8, TERMINAL, SHIELD GROUND ASSEMBLY. . . . .	20-25-11
BACT12AC9, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AL10, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AL11, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AL12, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AL13, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AL15, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AL16, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AL17, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AL18, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AL19, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AL2, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AL3, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AL4, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AL5, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AL6, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AL9, TERMINAL LUG, GENERAL PURPOSE. . . . .	20-30-11
BACT12AR101, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11
BACT12AR102, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BOEING (continued)

BACT12AR103, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR104, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR105, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR106, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR121, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR122, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR123, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR124, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR125, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR126, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR141, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR142, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR143, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR144, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR161, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR162, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR163, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR164, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR165, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR166, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR181, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR182, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR183, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR184, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR185, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR186, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR187, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR201, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR202, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR203, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR204, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR205, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR206, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR207, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR221, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR222, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR223, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR224, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR225, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR226, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR227, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR241, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR242, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR243, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR244, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AR245, TERMINAL LUG, RESTRICTIVE ENTRY .....	20-30-11
BACT12AV011, TERMINAL LUG, NICKEL, HIGH TEMPERATURE .....	20-30-11
BACT12AV012, TERMINAL LUG, NICKEL, HIGH TEMPERATURE .....	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BOEING (continued)

BACT12AV013, TERMINAL LUG, NICKEL, HIGH TEMPERATURE .....	20-30-11
BACT12AV014, TERMINAL LUG, NICKEL, HIGH TEMPERATURE .....	20-30-11
BACT12AV021, TERMINAL LUG, NICKEL, HIGH TEMPERATURE .....	20-30-11
BACT12AV022, TERMINAL LUG, NICKEL, HIGH TEMPERATURE .....	20-30-11
BACT12AV023, TERMINAL LUG, NICKEL, HIGH TEMPERATURE .....	20-30-11
BACT12AV024, TERMINAL LUG, NICKEL, HIGH TEMPERATURE .....	20-30-11
BACT12AV031, TERMINAL LUG, NICKEL, HIGH TEMPERATURE .....	20-30-11
BACT12AV032, TERMINAL LUG, NICKEL, HIGH TEMPERATURE .....	20-30-11
BACT12AV033, TERMINAL LUG, NICKEL, HIGH TEMPERATURE .....	20-30-11
BACT12AV034, TERMINAL LUG, NICKEL, HIGH TEMPERATURE .....	20-30-11
BACT12C11, SPLICE, BUTT, HIGH TEMPERATURE .....	20-30-12
BACT12C15, SPLICE, BUTT, HIGH TEMPERATURE .....	20-30-12
BACT12C20, SPLICE, BUTT, HIGH TEMPERATURE .....	20-30-12
BACT12E10, TERMINAL LUG, 90 DEGREE, UPRIGHT .....	20-30-11
BACT12E101, TERMINAL LUG, 90 DEGREE, UPRIGHT .....	20-30-11
BACT12E102, TERMINAL LUG, 90 DEGREE, UPRIGHT .....	20-30-11
BACT12E11, TERMINAL LUG, 90 DEGREE, UPRIGHT .....	20-30-11
BACT12E14, TERMINAL LUG, 90 DEGREE, UPRIGHT .....	20-30-11
BACT12E18, TERMINAL LUG, 90 DEGREE, UPRIGHT .....	20-30-11
BACT12E2, TERMINAL LUG, 90 DEGREE, UPRIGHT .....	20-30-11
BACT12E201, TERMINAL LUG, 90 DEGREE, UPRIGHT .....	20-30-11
BACT12E300, TERMINAL LUG, 90 DEGREE, UPRIGHT .....	20-30-11
BACT12E4, TERMINAL LUG, 90 DEGREE, UPRIGHT .....	20-30-11
BACT12E401, TERMINAL LUG, 90 DEGREE, UPRIGHT .....	20-30-11
BACT12E402, TERMINAL LUG, 90 DEGREE, UPRIGHT .....	20-30-11
BACT12E6, TERMINAL LUG, 90 DEGREE, UPRIGHT .....	20-30-11
BACT12E81, TERMINAL LUG, 90 DEGREE, UPRIGHT .....	20-30-11
BACT12G102, TERMINAL .....	20-20-12
BACT12G102, TERMINAL LUG, FLAG .....	20-30-11
BACT12G202, TERMINAL .....	20-20-12
BACT12G202, TERMINAL LUG, FLAG .....	20-30-11
BACT12G23, TERMINAL .....	20-20-12
BACT12G23, TERMINAL LUG, FLAG .....	20-30-11
BACT12G24, TERMINAL .....	20-20-12
BACT12G24, TERMINAL LUG, FLAG .....	20-30-11
BACT12G42, TERMINAL .....	20-20-12
BACT12G42, TERMINAL LUG, FLAG .....	20-30-11
BACT12G44, TERMINAL .....	20-20-12
BACT12G44, TERMINAL LUG, FLAG .....	20-30-11
BACT12G62, TERMINAL .....	20-20-12
BACT12G62, TERMINAL LUG, FLAG .....	20-30-11
BACT12G64, TERMINAL .....	20-20-12
BACT12G64, TERMINAL LUG, FLAG .....	20-30-11
BACT12G81, TERMINAL .....	20-20-12
BACT12G81, TERMINAL LUG, FLAG .....	20-30-11
BACT12G82, TERMINAL .....	20-20-12
BACT12G82, TERMINAL LUG, FLAG .....	20-30-11
BACT12M1-1, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BOEING (continued)

BACT12M1-2, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M1-3, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M1-4, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M1-5, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M130, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M139, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M140, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M141, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M144, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M145, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M147, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M148, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M173, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M198, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M2, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M2-1, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M2-2, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M2-3, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M2-4, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M2-5, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M25-1, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M25-2, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M25-3, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M25-4, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M25-5, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M26-1, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M26-2, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M26-3, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M26-4, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M26-5, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M26-6, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M27-1, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M27-2, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M27-3, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M27-4, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M28-1, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M28-2, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M28-3, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M28-4, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M28-5, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M28-6, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M4, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M4-1, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M4-2, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M4-3, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M4-4, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M4-5, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M5, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BOEING (continued)

BACT12M6-1, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M6-2, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M6-3, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M6-4, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M6-5, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M7, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M8, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M8-1, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M8-2, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M8-3, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M8-4, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M8-5, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT12M8-6, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
BACT63D1, END CAP, HEAT SHRINKABLE .....	20-30-16
BACT63D2, END CAP, HEAT SHRINKABLE .....	20-30-16
BACT63D3, END CAP, HEAT SHRINKABLE .....	20-30-16
BMS 13-10 CABLE, VEAM 115 SERIES ASSEMBLY .....	20-62-12
BMS 13-16 CABLE, VEAM 115 SERIES ASSEMBLY .....	20-62-12
BMS 13-18 WIRE, WAVE LAB CONNECTOR ASSEMBLY .....	20-62-18
BMS 13-31 WIRE, GRAVINER CONNECTOR ASSEMBLY .....	20-62-15
BMS 13-55 WIRE, GRAVINER CONNECTOR ASSEMBLY .....	20-62-15
BMS 13-55 WIRE, MIL-C-5015 ASSEMBLY .....	20-63-14
BMS 13-8 WIRE, GRAVINER CONNECTOR ASSEMBLY .....	20-62-15
BMS 13-8 WIRE, LINDBERG CONNECTOR ASSEMBLY .....	20-62-17
BMS 13-8 WIRE, MIL-C-5015 ASSEMBLY .....	20-63-14
BMS8-389, ADHESIVE TAPE, WIRE HARNESS TIE .....	20-10-12
CR2, CLIP, STRINGER .....	20-10-12
CR4H, CLIP, STRINGER .....	20-10-12
CSCS, TIE STRAP MOUNTING PLATFORM .....	20-10-12
S231T290-(), SWITCH, LIGHTED PUSHBUTTON .....	20-83-00
S231T300-(), INDICATOR, LIGHTED .....	20-83-00
S231T301-(), INDICATOR, LIGHTED .....	20-83-00
S231W240-(), SWITCH, LIGHTED PUSHBUTTON .....	20-84-14
S231W240-301, CONNECTOR, SWITCH .....	20-84-14
S280T004-1, CABLE, AUDIO .....	20-35-12
S280T006-1, CABLE, SPOILER .....	20-35-13
S280T006-2, CABLE, SPOILER .....	20-35-13
S280W501-() CABLE, REPAIR .....	20-14-11
S280W502-1, STUB CABLE, ARINC 629 .....	20-11-11
S280W502-4, STUB CABLE, ARINC 629 .....	20-11-11
S280W503-1 COAX CABLE, ITT CANNON DP SERIES ASSEMBLY .....	20-71-11
S280W551-209, CONNECTOR .....	20-71-14
S280W551-209A, CONNECTOR .....	20-71-14
S280W551-211, CONNECTOR .....	20-71-14
S280W551-211A, CONNECTOR .....	20-71-14
S280W551-213A, CONNECTOR .....	20-71-14
S280W551-401, CONNECTOR .....	20-71-14
S280W551-401A, CONNECTOR .....	20-71-14

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BOEING (continued)

S280W551-405, CONNECTOR . . . . .	20-71-14
S280W551-405A, CONNECTOR . . . . .	20-71-14
S280W551-407, CONNECTOR . . . . .	20-71-14
S280W551-407A, CONNECTOR . . . . .	20-71-14
S280W551-413, CONNECTOR . . . . .	20-71-14
S280W551-413A, CONNECTOR . . . . .	20-71-14
S280W551-503, CONNECTOR . . . . .	20-71-14
S280W551-503A, CONNECTOR . . . . .	20-71-14
S280W555-102, TERMINAL MODULE . . . . .	20-90-15
S280W555-104, TERMINAL MODULE . . . . .	20-90-15
S280W555-108, TERMINAL MODULE . . . . .	20-90-15
S280W555-16, GROUND MODULE . . . . .	20-90-15
S280W555-16S, GROUND MODULE . . . . .	20-90-15
S280W555-20, GROUND MODULE . . . . .	20-90-15
S280W555-203, TERMINAL MODULE . . . . .	20-90-15
S280W555-206, TERMINAL MODULE . . . . .	20-90-15
S280W555-401, GROUND MODULE . . . . .	20-90-15
S280W555-402, GROUND MODULE . . . . .	20-90-15
S280W555-502, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-504, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-506, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-508, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-510, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-514, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-516, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-522, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-526, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-5502, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-5504, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-5506, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-5508, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-5510, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-5514, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-5516, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-5518, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-5522, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-5526, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-602, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-604, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-606, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-608, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-610, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-614, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-616, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-622, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-626, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-6602, TERMINAL MODULE TRACK . . . . .	20-90-15
S280W555-6604, TERMINAL MODULE TRACK . . . . .	20-90-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BOEING (continued)

S280W555-6606, TERMINAL MODULE TRACK .....	20-90-15
S280W555-6610, TERMINAL MODULE TRACK .....	20-90-15
S280W555-6614, TERMINAL MODULE TRACK .....	20-90-15
S280W555-6616, TERMINAL MODULE TRACK .....	20-90-15
S280W555-702, RESISTOR MODULE .....	20-90-15
S280W555-703, RESISTOR MODULE .....	20-90-15
S280W555-704, RESISTOR MODULE .....	20-90-15
S280W555-705, RESISTOR MODULE .....	20-90-15
S280W555-706, RESISTOR MODULE .....	20-90-15
S280W555-707, RESISTOR MODULE .....	20-90-15
S280W555-751, DIODE MODULE .....	20-90-15
S280W555-753, DIODE MODULE .....	20-90-15
S280W557-1(), CONNECTOR .....	20-72-24
S280W557-2(), CONNECTOR .....	20-72-24
S280W557-801, CONNECTOR .....	20-72-25
S280W557-802, CONNECTOR .....	20-72-25
S280W601-101, GROUND BLOCK, CONNECTOR .....	20-71-14
S280W601-103, GROUND BLOCK, CONNECTOR .....	20-71-14
S280W601-104, GROUND BLOCK, CONNECTOR .....	20-71-14
S280W601-105, GROUND BLOCK, CONNECTOR .....	20-71-14
S280W601-106, GROUND BLOCK, CONNECTOR .....	20-71-14
S280W601-116, GROUND BLOCK, CONNECTOR .....	20-71-14
S280W601-201, GROUND BLOCK, CONNECTOR .....	20-71-14
S280W601-202, GROUND BLOCK, CONNECTOR .....	20-71-14
S280W601-203, GROUND BLOCK, CONNECTOR .....	20-71-14
S280W601-213, GROUND BLOCK, CONNECTOR .....	20-71-14
S280W601-301, GROUND BLOCK, CONNECTOR .....	20-71-14
S280W603-1(), BACKSHELL .....	20-25-14
S280W603-2(), BACKSHELL .....	20-25-14
S280W603-3(), BACKSHELL .....	20-25-14
S280W604-1(), BACKSHELL .....	20-25-14
S280W604-2(), BACKSHELL .....	20-25-14
S280W604-3(), BACKSHELL .....	20-25-14
S280W605()-1, BACKSHELL .....	20-25-13
S280W605()-2, BACKSHELL .....	20-25-13
S280W605()-3, BACKSHELL .....	20-25-13
S280W651-(), CABLE ASSEMBLY, ARINC 629 DATA BUS .....	20-11-11
S280W654-() CABLE ASSEMBLY, REPAIR .....	20-14-11
S280W655-() CABLE ASSEMBLY, REPAIR .....	20-14-11
S280W657-() CABLE ASSEMBLY, REPAIR .....	20-14-11
S280W701-101, CABLE ASSEMBLY, 3-CHANNEL TRUNK .....	20-12-11
S280W701-101, CABLE ASSEMBLY, FIBER OPTIC .....	20-12-11
S280W701-102, CABLE ASSEMBLY, 3-CHANNEL TRUNK .....	20-12-11
S280W701-102, CABLE ASSEMBLY, FIBER OPTIC .....	20-12-11
S280W701-106, CABLE ASSEMBLY, 5-CHANNEL STUB .....	20-12-11
S280W701-106, CABLE ASSEMBLY, FIBER OPTIC .....	20-12-11
S280W701-107, CABLE ASSEMBLY, 5-CHANNEL STUB .....	20-12-11
S280W701-107, CABLE ASSEMBLY, FIBER OPTIC .....	20-12-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BOEING (continued)

S280W701-108, CABLE ASSEMBLY, 5-CHANNEL STUB	20-12-11
S280W701-108, CABLE ASSEMBLY, FIBER OPTIC	20-12-11
S280W701-110, CABLE ASSEMBLY, 5-CHANNEL STUB	20-12-11
S280W701-110, CABLE ASSEMBLY, FIBER OPTIC	20-12-11
S280W701-111, CABLE ASSEMBLY, 5-CHANNEL STUB	20-12-11
S280W701-111, CABLE ASSEMBLY, FIBER OPTIC	20-12-11
S280W701-112, CABLE ASSEMBLY, 5-CHANNEL STUB	20-12-11
S280W701-112, CABLE ASSEMBLY, FIBER OPTIC	20-12-11
S280W701-113, CABLE ASSEMBLY, 5-CHANNEL STUB	20-12-11
S280W701-113, CABLE ASSEMBLY, FIBER OPTIC	20-12-11
S280W701-114, CABLE ASSEMBLY, 3-CHANNEL TRUNK	20-12-11
S280W701-114, CABLE ASSEMBLY, FIBER OPTIC	20-12-11
S280W701-115, CABLE ASSEMBLY, 3-CHANNEL TRUNK	20-12-11
S280W701-115, CABLE ASSEMBLY, FIBER OPTIC	20-12-11
S280W701-116, CABLE ASSEMBLY, 5-CHANNEL STUB	20-12-11
S280W701-116, CABLE ASSEMBLY, FIBER OPTIC	20-12-11
S280W701-117, CABLE ASSEMBLY, 5-CHANNEL STUB	20-12-11
S280W701-117, CABLE ASSEMBLY, FIBER OPTIC	20-12-11
S280W701-118, CABLE ASSEMBLY, 5-CHANNEL STUB	20-12-11
S280W701-118, CABLE ASSEMBLY, FIBER OPTIC	20-12-11
S280W701-119, CABLE ASSEMBLY, 5-CHANNEL GATELINK	20-12-11
S280W701-119, CABLE ASSEMBLY, FIBER OPTIC	20-12-11
S280W701-120, CABLE ASSEMBLY, 5-CHANNEL GATELINK	20-12-11
S280W701-120, CABLE ASSEMBLY, FIBER OPTIC	20-12-11
S280W701-122, CABLE ASSEMBLY, 5-CHANNEL STUB	20-12-11
S280W701-122, CABLE ASSEMBLY, FIBER OPTIC	20-12-11
S280W701-123, CABLE ASSEMBLY, 5-CHANNEL STUB	20-12-11
S280W701-123, CABLE ASSEMBLY, FIBER OPTIC	20-12-11
S280W701-124, CABLE ASSEMBLY, 5-CHANNEL STUB	20-12-11
S280W701-124, CABLE ASSEMBLY, FIBER OPTIC	20-12-11
S280W701-601, CONNECTOR	20-12-11
S280W701-602, CONNECTOR	20-12-11
S280W701-611, CONNECTOR	20-12-11
S280W701-613, CONNECTOR	20-12-11
S280W701-614, CONNECTOR	20-12-11
S280W701-615, CONNECTOR	20-12-11
S280W701-616, CONNECTOR	20-12-11
S280W701-631, CONNECTOR	20-12-11
S280W701-641, CONNECTOR	20-12-11
S280W701-642, CONNECTOR	20-12-11
S280W701-643, CONNECTOR	20-12-11
S280W701-661, CONNECTOR	20-12-11
S280W752-1, FERRITE SUPPRESSOR	20-11-11
S283A202-11, CONNECTOR	20-61-11
S283A202-12, CONNECTOR	20-61-11
S283T022-(), SWITCH	20-83-00
S283T025-2, CONNECTOR	20-61-11
S283T025-4, CONNECTOR	20-61-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

BOEING (continued)	
STBP19M, TIE STRAP MOUNTING PLATFORM	20-10-12
BOLT	
BACB30LE5U18, BOEING	20-10-21
BOND	
ELECTRICAL	20-20-00
JUMPER ASSEMBLY, DAMAGE CONDITIONS AND REPAIR	20-10-13
JUMPER ASSEMBLY, DAMAGE LIMITS	20-20-00
BOND AND GROUND	
GENERAL CONDITIONS	20-20-00
BOND AND GROUND JUMPER ASSEMBLY	
BACJ40A(), BOEING	20-20-00
BACJ40B(), BOEING	20-20-00
BACJ40C(), BOEING	20-20-00
BACJ40D(), BOEING	20-20-00
BACJ40E(), BOEING	20-20-00
BACJ40F(), BOEING	20-20-00
BACJ40T(), BOEING	20-20-00
BACJ40W(), BOEING	20-20-00
M83413/8-A(), QPL	20-20-00
M83413/8-B(), QPL	20-20-00
M83413/8-D(), QPL	20-20-00
M83413/8-E(), QPL	20-20-00
M83413/8-F(), QPL	20-20-00
M83413/8-G(), QPL	20-20-00
M83413/8-H(), QPL	20-20-00
MS25083-2(), QPL	20-20-00
MS25083-3(), QPL	20-20-00
MS25083-4(), QPL	20-20-00
MS25083-5(), QPL	20-20-00
MS25083-6(), QPL	20-20-00
BOOTS	
HEAT SHRINKABLE	20-10-16
BRACKET	
FQIS WIRE HARNESS, WITH CARRIER, BACB20VE, BOEING	20-10-12
FQIS WIRE HARNESS, WITHOUT CARRIER, BACB20VB, BOEING	20-10-12
RACEWAY, BACB20VG, BOEING	20-10-12
TERMINAL MODULE, 8400-0()-(), MATRIX SCIENCE	20-83-01
TERMINAL MODULE, M81714/29-(), QPL	20-83-01
BRAKE COOLING SYSTEM	
LANDING GEAR CABLES	20-85-12
BSK-12( ), CONNECTOR, PYLE-NATIONAL	20-63-13
BSK-17( ), CONNECTOR, PYLE-NATIONAL	20-63-13
BULKHEAD	
PRESSURE, SEAL ASSEMBLY	20-10-20
PRESSURE, SEAL ASSEMBLY	20-10-24
PRESSURE, SEAL ASSEMBLY	20-14-14
BURNDY	
102 005-1, RELAY SOCKET	20-81-12

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BURNDY (continued)

102 006-1, RELAY SOCKET . . . . .	20-81-12
102 007-1, RELAY SOCKET . . . . .	20-81-12
102 009-1, RELAY SOCKET . . . . .	20-81-12
102 010-1, RELAY SOCKET . . . . .	20-81-12
102 011-1, RELAY SOCKET . . . . .	20-81-12
102 012-1, RELAY SOCKET . . . . .	20-81-12
102 013-1, RELAY SOCKET . . . . .	20-81-12
G6G12-88PNH, CONNECTOR . . . . .	20-51-33
G6G12-88SNH, CONNECTOR . . . . .	20-51-33
L()T(), CONNECTOR . . . . .	20-61-16
LPT(), CONNECTOR . . . . .	20-61-16
MB10P-1, CONNECTOR . . . . .	20-62-13
MB10R-6, CONNECTOR . . . . .	20-62-13
MB12P-1, CONNECTOR . . . . .	20-62-13
MB12R-20, CONNECTOR . . . . .	20-62-13
MB12R-6, CONNECTOR . . . . .	20-62-13
MB13P-3, CONNECTOR . . . . .	20-62-13
MB13R-4, CONNECTOR . . . . .	20-62-13
MB24P, CONNECTOR . . . . .	20-62-13
MB6P-3, CONNECTOR . . . . .	20-62-13
MB6R-3, CONNECTOR . . . . .	20-62-13
MBG28P, CONNECTOR . . . . .	20-61-23
MBG28R, CONNECTOR . . . . .	20-61-23
MT17R-1, CONNECTOR . . . . .	20-86-00
RBDSC-(), SWITCH MODULE ASSEMBLY . . . . .	20-90-16
RSCDEX-2, CONNECTOR . . . . .	20-51-31
RSMDEX-1, CONNECTOR . . . . .	20-51-31
TBS12-22-1, TERMINAL BLOCK . . . . .	20-90-12
TBS12-44-1, TERMINAL BLOCK . . . . .	20-90-12
TBS12-8-1, TERMINAL BLOCK . . . . .	20-90-12
TBS16-22-1, TERMINAL BLOCK . . . . .	20-90-12
TBS16-44-1, TERMINAL BLOCK . . . . .	20-90-12
TBS16-8-1, TERMINAL BLOCK . . . . .	20-90-12
TBS1620-22-1, TERMINAL BLOCK . . . . .	20-90-12
TBS1620-44-1, TERMINAL BLOCK . . . . .	20-90-12
TBS1620-8-1, TERMINAL BLOCK . . . . .	20-90-12
TBS20-22-1, TERMINAL BLOCK . . . . .	20-90-12
TBS20-42-1, TERMINAL BLOCK . . . . .	20-90-12
TBS20-44-1, TERMINAL BLOCK . . . . .	20-90-12
TBS20-62-1, TERMINAL BLOCK . . . . .	20-90-12
TBS20-8-1, TERMINAL BLOCK . . . . .	20-90-12
YAD18HNK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAEV25-G24, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
YAEV25-G25, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
YAEV25-G26, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
YAEV26-L, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
YAEV26-L2, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
YAEV26-L3, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BURNDY (continued)

YAEV28-G1, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEV28-G2, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEV28-G3, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEV28-G4, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEV28-G5, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEV2C-L, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEV2C-L1, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEV2C-L4, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEV4C-L, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEV6C-L, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEV6C-L1, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEV6C-L2, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEV6C-L4, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEV8C-L, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEV8C-L1, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEV8C-L14, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEV8C-L2, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEV8C-L3, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEVAC-L2, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEVAC-L4, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAEVAC-L5, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
YAV14-H, TERMINAL LUG, HEAVY DUTY .....	20-30-11
YAV14-H1, TERMINAL LUG, HEAVY DUTY .....	20-30-11
YAV14G82, TERMINAL LUG, HEAVY DUTY .....	20-30-11
YAV14G88, TERMINAL LUG, HEAVY DUTY .....	20-30-11
YAV14G88, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
YAV18-H, TERMINAL LUG, HEAVY DUTY .....	20-30-11
YAV1C-L1NK, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
YAV1C-L2NK, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
YAV1C-L3NK, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
YAV1C-L6NK, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
YAV1C-LNK, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
YAV25-2L38-NK, TERMINAL LUG, DUAL HOLE .....	20-30-11
YAV25-L1NK, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
YAV25-L2NK, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
YAV25-L3NK, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
YAV25-L4NK, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
YAV25-LNK, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
YAV25RSNK, TERMINAL LUG, UPRIGHT .....	20-30-11
YAV26-2L38-30-NK, TERMINAL LUG, DUAL HOLE .....	20-30-11
YAV26-2L38-NK, TERMINAL LUG, DUAL HOLE .....	20-30-11
YAV26-L12NK, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
YAV26-L1NK, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
YAV26-L22NK, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
YAV26-L2NK, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
YAV26-L3NK, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
YAV26-LNK, TERMINAL LUG, HIGH TEMPERATURE .....	20-30-11
YAV27-2L38-30-NK, TERMINAL LUG, DUAL HOLE .....	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BURNDY (continued)

YAV27-2L38-NK, TERMINAL LUG, DUAL HOLE . . . . .	20-30-11
YAV27-L15NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV27-L1NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV27-L20NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV27-LNK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV28-L12NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV28-L13NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV28-L14NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV28-L54NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV28-L56NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV28-LNK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV2C-2L38-NK, TERMINAL LUG, DUAL HOLE . . . . .	20-30-11
YAV2C-L1NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV2C-L2NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV2C-L3NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV2C-L4NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV2C-LNK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV4C-2L38-30-NK, TERMINAL LUG, DUAL HOLE . . . . .	20-30-11
YAV4C-2L38-NK, TERMINAL LUG, DUAL HOLE . . . . .	20-30-11
YAV4C-L2NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV4C-L3NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV4C-L4NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV4C-L5NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV4C-LNK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV4CRS2NK, TERMINAL LUG, UPRIGHT . . . . .	20-30-11
YAV6C-2L38-NK, TERMINAL LUG, DUAL HOLE . . . . .	20-30-11
YAV6C-L10NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV6C-L1NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV6C-L2NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV6C-L4NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV6C-LNK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV8C-L14NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV8C-L1NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV8C-L2NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV8C-L3NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV8C-L4NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV8C-LNK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YBM25-L, TERMINAL . . . . .	20-20-12
YBM25L, TERMINAL . . . . .	20-20-12
YBM26-L, TERMINAL . . . . .	20-20-12
YBM26L, TERMINAL . . . . .	20-20-12
YBM2C-L, TERMINAL . . . . .	20-20-12
YBM2C-L1, TERMINAL . . . . .	20-20-12
YBM2CL, TERMINAL . . . . .	20-20-12
YBM2CL1, TERMINAL . . . . .	20-20-12
YBM4C-L, TERMINAL . . . . .	20-20-12
YBM4C-L2, TERMINAL . . . . .	20-20-12
YBM4CL, TERMINAL . . . . .	20-20-12

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BURNDY (continued)

YBM4CL2, TERMINAL . . . . .	20-20-12
YBM6C-L, TERMINAL . . . . .	20-20-12
YBM6C-L2, TERMINAL . . . . .	20-20-12
YBM6CL, TERMINAL . . . . .	20-20-12
YBM6CL2, TERMINAL . . . . .	20-20-12
YBM8C, TERMINAL . . . . .	20-20-12
YBM8C-T2, TERMINAL . . . . .	20-20-12
YBM8CT2, TERMINAL . . . . .	20-20-12
YHLZ-22, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZ-44, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZ-8, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZ16-2, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZ16-4, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZ16-8, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZD-11, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZD-14, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZD-15, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZD-23, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZD-24, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZD-26, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZD-28, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZD-29, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZD-30, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZD-31, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZD-32, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZD-33, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZD-34, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZD-35, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZD-38, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZD-39, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZD-9, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZG16-1, GROUND BLOCK MODULE . . . . .	20-20-11
YHLZG16-2, GROUND BLOCK MODULE . . . . .	20-20-11
YHLZG8-1, GROUND BLOCK MODULE . . . . .	20-20-11
YHLZG8-2, GROUND BLOCK MODULE . . . . .	20-20-11
YHLZR-1, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZR-10, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZR-11, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZR-13, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZR-14, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZR-15, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZR-16, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZR-17, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZR-18, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZR-19, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZR-2, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZR-20, TERMINAL BLOCK MODULE . . . . .	20-90-11
YHLZR-21, TERMINAL BLOCK MODULE . . . . .	20-90-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## BURNDY (continued)

YHLZR-22, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-23, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-24, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-25, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-26, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-27, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-28, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-29, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-3, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-30, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-31, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-32, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-33, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-34, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-35, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-36, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-37, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-38, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-39, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-4, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-40, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-41, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-42, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-43, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-44, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-47, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-5, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-6, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-7, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-8, TERMINAL BLOCK MODULE .....	20-90-11
YHLZR-9, TERMINAL BLOCK MODULE .....	20-90-11
BURNDY MB CONNECTORS	
CONNECTOR ASSEMBLY .....	20-62-13
BURNDY MBG28 SERIES	
CONNECTOR ASSEMBLY .....	20-61-23
BUTT SPLICE	
322325, AMP .....	20-23-17
CIRCULAR AREA UNITS (CAU) .....	20-30-22

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### C

C-06()5-99, CONNECTOR, TRI-STAR . . . . .	20-71-14
C-06A3-B305-1100, CONNECTOR, TRI-STAR . . . . .	20-71-14
C-06A5-9940-1100, CONNECTOR, TRI-STAR . . . . .	20-71-14
C-06BC-01()-1112, CONNECTOR, TRI-STAR . . . . .	20-72-21
C-828-06, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
C-828-08, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
C-828-10, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
C-830-14, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
C-830-56, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
C-840-38, TERMINAL LUG, GENERAL PURPOSE, ETC . . . . .	20-30-11
C0900-246-(), ADAPTER, COUPLING RING, CINCH . . . . .	20-61-11
C0909(), CONNECTOR, CINCH . . . . .	20-61-11
C110-106, FERRULE - SAFETY CABLE, DANIELS . . . . .	20-60-07
C110-109, FERRULE - SAFETY CABLE, DANIELS . . . . .	20-60-07
C110-112, FERRULE - SAFETY CABLE, DANIELS . . . . .	20-60-07
C110-115, FERRULE - SAFETY CABLE, DANIELS . . . . .	20-60-07
C110-118, FERRULE - SAFETY CABLE, DANIELS . . . . .	20-60-07
C110-121, FERRULE - SAFETY CABLE, DANIELS . . . . .	20-60-07
C110-124, FERRULE - SAFETY CABLE, DANIELS . . . . .	20-60-07
C20B06, FERRULE - SAFETY CABLE, BERGEN . . . . .	20-60-07
C20B09, FERRULE - SAFETY CABLE, BERGEN . . . . .	20-60-07
C20B12, FERRULE - SAFETY CABLE, BERGEN . . . . .	20-60-07
C20B15, FERRULE - SAFETY CABLE, BERGEN . . . . .	20-60-07
C20B18, FERRULE - SAFETY CABLE, BERGEN . . . . .	20-60-07
C20B21, FERRULE - SAFETY CABLE, BERGEN . . . . .	20-60-07
C20B24, FERRULE - SAFETY CABLE, BERGEN . . . . .	20-60-07
C48-00R(), CONNECTOR, CINCH . . . . .	20-61-11
C48-03R(), CONNECTOR, CINCH . . . . .	20-61-11
C48-06R(), CONNECTOR, CINCH . . . . .	20-61-11
C48-10R(), CONNECTOR, CINCH . . . . .	20-61-11
C48-16R(), CONNECTOR, CINCH . . . . .	20-61-11
CA270-8, CONNECTOR, ITT CANNON . . . . .	20-62-22
CA3100KR(), CONNECTOR, ITT CANNON . . . . .	20-62-26
CA3106KR(), CONNECTOR, ITT CANNON . . . . .	20-62-26
CA66278-101, CONNECTOR, ITT CANNON . . . . .	20-61-19
CA66278-105, CONNECTOR, ITT CANNON . . . . .	20-61-19
CA66278-93, CONNECTOR, ITT CANNON . . . . .	20-61-19
CA66279-102, CONNECTOR, ITT CANNON . . . . .	20-61-19
CA66279-106, CONNECTOR, ITT CANNON . . . . .	20-23-01
CA66279-106, CONNECTOR, ITT CANNON . . . . .	20-61-19
CA66279-94, CONNECTOR, ITT CANNON . . . . .	20-61-19
CA66286-45, CONNECTOR, ITT CANNON . . . . .	20-61-19
CA66287-50, CONNECTOR, ITT CANNON . . . . .	20-61-19
CA66420-1, CONNECTOR, ITT CANNON . . . . .	20-61-19
CA66422-9, CONNECTOR, ITT CANNON . . . . .	20-61-19
CA66432-2, CONNECTOR, ITT CANNON . . . . .	20-61-19

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CA66434-6, CONNECTOR, ITT CANNON . . . . .	20-61-19
CA80503-14, CONNECTOR, ITT CANNON . . . . .	20-61-19
CABLE	
0024A0014, BALANCED LINE, RAYCHEM . . . . .	20-35-14
16833, AVM, ENDEVCO . . . . .	20-35-26
16833, ENDEVCO, VEAM 115 SERIES ASSEMBLY . . . . .	20-62-12
202-3836-000, AVM, MICRODOT . . . . .	20-35-22
30-04680, CHAMPLAIN . . . . .	20-35-24
30-04749, ADF, CHAMPLAIN . . . . .	20-35-23
55A6087, RAYCHEM . . . . .	20-35-17
55A6088, RAYCHEM . . . . .	20-35-19
55A6090, RAYCHEM . . . . .	20-35-18
55A6160, RAYCHEM . . . . .	20-35-20
55A6160-20, RAYCHEM . . . . .	20-35-20
60-116-000, VIBRO-METER, 10-244() SERIES ASSEMBLY . . . . .	20-61-18
61-02651, CHAMPLAIN . . . . .	20-35-20
61-02783, CHAMPLAIN . . . . .	20-35-20
80-116-000, VIBRO-METER, 10-244() SERIES ASSEMBLY . . . . .	20-61-18
ADF, 30-04680, CHAMPLAIN . . . . .	20-35-24
ADF, 30-04749, CHAMPLAIN . . . . .	20-35-23
ALTERNATIVE . . . . .	20-00-13
AUDIO, S280T004-1, BOEING . . . . .	20-35-12
AVM, 16833, ENDEVCO . . . . .	20-35-26
AVM, 202-3836-000, MICRODOT . . . . .	20-35-22
BALANCED LINE, 0024A0014, RAYCHEM . . . . .	20-35-14
BMS 13-10, BOEING, VEAM 115 SERIES ASSEMBLY . . . . .	20-62-12
BMS 13-16, BOEING, VEAM 115 SERIES ASSEMBLY . . . . .	20-62-12
COAX, 421-593, AMPHENOL, CONNECTOR ASSEMBLY . . . . .	20-51-41
COAX, 5020G3442, RAYCHEM, CONNECTOR ASSEMBLY . . . . .	20-51-05
COAX, 64-500, PRODELIN, CONNECTOR ASSEMBLY . . . . .	20-51-90
COAX, BA14349, ITT SURPRENANT, CONNECTOR ASSEMBLY . . . . .	20-51-05
COAX, BA14349, ITT SURPRENANT, CONNECTOR ASSEMBLY . . . . .	20-51-42
COAX, BOEING, S280W503-1, ITT CANNON DP SERIES ASSEMBLY . . . . .	20-71-11
COAX, DAMAGE CONDITIONS AND REPAIR . . . . .	20-10-13
COAX, DAMAGE CONDITIONS AND REPAIR . . . . .	20-10-13
COAX, END CAP ASSEMBLY . . . . .	20-30-16
COAX, END CAP ASSEMBLY . . . . .	20-30-16
COAX, FSJ4-50, ANDREWS, CONNECTOR ASSEMBLY . . . . .	20-51-51
COAX, G87T325CU, PRECISION TUBE COMPANY, CONNECTOR ASSEMBLY . . . . .	20-51-41
COAX, PREPARATION, GENERAL CONDITIONS . . . . .	20-51-00
COAX, PREPARATION, GENERAL CONDITIONS . . . . .	20-51-00
COAX, RG115A, ITT CANNON DP SERIES ASSEMBLY . . . . .	20-71-11
COAX, RG223, ITT CANNON DP SERIES ASSEMBLY . . . . .	20-71-11
COAX, RG231, REPAIR . . . . .	20-51-26
COAX, SURPRENANT, BA5903, ITT CANNON DP SERIES ASSEMBLY . . . . .	20-71-11
CTC-0039-()-9/5-9, RAYCHEM . . . . .	20-35-25
DAMAGE CONDITIONS AND REPAIR . . . . .	20-10-13
END CAP ASSEMBLY, CRIMP TYPE . . . . .	20-30-16

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CABLE (continued)

END CAP ASSEMBLY, HEAT SHRINKABLE .....	20-30-16
FIBER OPTIC, INSTALLATION .....	20-12-11
FLAT CONDUCTOR, DAMAGE CONDITION AND REPAIR .....	20-10-13
IDENTIFICATION .....	20-10-11
INSTALLATION, NEW .....	20-10-11
JACKET REMOVAL .....	20-00-15
JACKET REPAIR .....	20-10-13
LANDING GEAR, MODEL 747, 767, 777 .....	20-85-12
MIL-W-16878, VEAM 115 SERIES ASSEMBLY .....	20-62-12
O.D. OF SPECIFIED WIRE .....	20-00-16
PART NUMBERS AND WIRE TYPE CODES .....	20-00-13
REMOVAL FROM OPERATION .....	20-10-11
S280T004-1, AUDIO, BOEING .....	20-35-12
S280T006-1, SPOILER, BOEING .....	20-35-13
S280T006-2, SPOILER, BOEING .....	20-35-13
S280W501-(), BOEING, REPAIR .....	20-14-11
SHIELD DEAD END, ASSEMBLY .....	20-10-15
SHIELD EXTENSION, ASSEMBLY .....	20-10-15
SHIELD GROUND WIRE, ASSEMBLY .....	20-10-15
SHIELD REPAIR .....	20-10-13
SHIELDED, 65B47866-(), BOEING .....	20-35-11
SHIELDED, GENERAL DATA .....	20-25-00
SHIELDED, SHIELD CONNECTION TO BACKSHELL .....	20-25-00
SHIELDED, SPLICE ASSEMBLY .....	20-30-12
SPECIFICATIONS AND WIRE TYPE CODES .....	20-00-13
SPLICE ASSEMBLY .....	20-30-12
SPOILER, S280T006-1, BOEING .....	20-35-13
SPOILER, S280T006-2, BOEING .....	20-35-13
STANDARD WIRE REPLACEMENT .....	20-00-14
THERMOCOUPLE, CTC-0039-()-9/5-9, RAYCHEM .....	20-35-25
TRIAx, 10363, RAYCHEM, CONNECTOR ASSEMBLY .....	20-53-05
TRIAx, 7524D5011, RAYCHEM, CONNECTOR ASSEMBLY .....	20-53-05
TRIAx, ADAPTER, 83-185, AMPHENOL .....	20-53-05
TRIAx, BA6416A, SURPRENANT, CONNECTOR ASSEMBLY .....	20-53-05
TRIAx, CONNECTOR ASSEMBLY .....	20-51-20
TRIAx, CONNECTOR ASSEMBLY .....	20-51-20
TWINAX, 10599, RAYCHEM .....	20-40-15
TWINAX, 10599, RAYCHEM .....	20-40-15
UNSHIELDED, SPLICE ASSEMBLY .....	20-30-12
CABLE ADAPTER	
G1504-(), GLENAIR .....	20-85-12
CABLE ASSEMBLY	
3-CHANNEL TRUNK, S280W701-101, BOEING .....	20-12-11
3-CHANNEL TRUNK, S280W701-102, BOEING .....	20-12-11
3-CHANNEL TRUNK, S280W701-114, BOEING .....	20-12-11
3-CHANNEL TRUNK, S280W701-115, BOEING .....	20-12-11
5-CHANNEL GATELINK, S280W701-119, BOEING .....	20-12-11
5-CHANNEL GATELINK, S280W701-120, BOEING .....	20-12-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CABLE ASSEMBLY (continued)

5-CHANNEL STUB, S280W701-106, BOEING	20-12-11
5-CHANNEL STUB, S280W701-107, BOEING	20-12-11
5-CHANNEL STUB, S280W701-108, BOEING	20-12-11
5-CHANNEL STUB, S280W701-110, BOEING	20-12-11
5-CHANNEL STUB, S280W701-111, BOEING	20-12-11
5-CHANNEL STUB, S280W701-112, BOEING	20-12-11
5-CHANNEL STUB, S280W701-113, BOEING	20-12-11
5-CHANNEL STUB, S280W701-116, BOEING	20-12-11
5-CHANNEL STUB, S280W701-117, BOEING	20-12-11
5-CHANNEL STUB, S280W701-118, BOEING	20-12-11
5-CHANNEL STUB, S280W701-122, BOEING	20-12-11
5-CHANNEL STUB, S280W701-123, BOEING	20-12-11
5-CHANNEL STUB, S280W701-124, BOEING	20-12-11
ARINC 629 DATA BUS, S280W651-(), BOEING	20-11-11
ARINC 629, DAMAGE CONDITIONS AND REPAIR	20-10-13
BACC69A AND BACC69C, FIBER OPTIC, BOEING	20-12-20
ENGINE WIRE HARNESS, DAMAGE CONDITIONS AND REPAIR	20-10-13
FIBER OPTIC, 140125-0000, ITT CANNON	20-12-11
FIBER OPTIC, 140125-0001, ITT CANNON	20-12-11
FIBER OPTIC, 140125-0002, ITT CANNON	20-12-11
FIBER OPTIC, 140125-0003, ITT CANNON	20-12-11
FIBER OPTIC, 140126-0002, ITT CANNON	20-12-11
FIBER OPTIC, 140126-0003, ITT CANNON	20-12-11
FIBER OPTIC, 140127-0003, ITT CANNON	20-12-11
FIBER OPTIC, 140127-0004, ITT CANNON	20-12-11
FIBER OPTIC, 140127-0005, ITT CANNON	20-12-11
FIBER OPTIC, 140127-0006, ITT CANNON	20-12-11
FIBER OPTIC, 140127-0007, ITT CANNON	20-12-11
FIBER OPTIC, 140127-0008, ITT CANNON	20-12-11
FIBER OPTIC, 140127-0009, ITT CANNON	20-12-11
FIBER OPTIC, 140127-0010, ITT CANNON	20-12-11
FIBER OPTIC, 140127-0011, ITT CANNON	20-12-11
FIBER OPTIC, 140127-0012, ITT CANNON	20-12-11
FIBER OPTIC, 140127-0020, ITT CANNON	20-12-11
FIBER OPTIC, 140127-0021, ITT CANNON	20-12-11
FIBER OPTIC, 140127-0022, ITT CANNON	20-12-11
FIBER OPTIC, S280W701-101, BOEING	20-12-11
FIBER OPTIC, S280W701-102, BOEING	20-12-11
FIBER OPTIC, S280W701-106, BOEING	20-12-11
FIBER OPTIC, S280W701-107, BOEING	20-12-11
FIBER OPTIC, S280W701-108, BOEING	20-12-11
FIBER OPTIC, S280W701-110, BOEING	20-12-11
FIBER OPTIC, S280W701-111, BOEING	20-12-11
FIBER OPTIC, S280W701-112, BOEING	20-12-11
FIBER OPTIC, S280W701-113, BOEING	20-12-11
FIBER OPTIC, S280W701-114, BOEING	20-12-11
FIBER OPTIC, S280W701-115, BOEING	20-12-11
FIBER OPTIC, S280W701-116, BOEING	20-12-11

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### CABLE ASSEMBLY (continued)

FIBER OPTIC, S280W701-117, BOEING . . . . .	20-12-11
FIBER OPTIC, S280W701-118, BOEING . . . . .	20-12-11
FIBER OPTIC, S280W701-119, BOEING . . . . .	20-12-11
FIBER OPTIC, S280W701-120, BOEING . . . . .	20-12-11
FIBER OPTIC, S280W701-122, BOEING . . . . .	20-12-11
FIBER OPTIC, S280W701-123, BOEING . . . . .	20-12-11
FIBER OPTIC, S280W701-124, BOEING . . . . .	20-12-11
FLAT CONDUCTOR . . . . .	20-73-00
FLAT CONDUCTOR CABLE, DAMAGE CONDITIONS AND REPAIR . . . . .	20-10-13
FUEL QUANTITY INDICATOR SYSTEM, DAMAGE CONDITIONS AND REPAIR . . . . .	20-10-13
RM342-011-581-5900-E47, AIRBORN . . . . .	20-14-52
RM342-023-581-5900-E58, AIRBORN . . . . .	20-14-52
S280W651, DAMAGE CONDITIONS AND REPAIR . . . . .	20-10-13
S280W654-(), BOEING, REPAIR . . . . .	20-14-11
S280W655-(), BOEING, REPAIR . . . . .	20-14-11
S280W657-(), BOEING, REPAIR . . . . .	20-14-11
<b>CABLE REPAIR</b>	
ARINC 629 DATA BUS CABLE . . . . .	20-10-13
ARINC 629 DATA BUS CABLE . . . . .	20-11-11
ARINC 629 STUB CABLE . . . . .	20-10-13
ARINC 629 STUB CABLE . . . . .	20-11-11
COAX . . . . .	20-10-13
ENGINE WIRE HARNESS . . . . .	20-10-13
FIBER OPTIC CABLE ASSEMBLY . . . . .	20-12-11
FLAT CONDUCTOR CABLE . . . . .	20-10-13
FQIS . . . . .	20-10-13
FUEL QUANTITY INDICATOR SYSTEM . . . . .	20-10-13
JACKET . . . . .	20-10-13
OPTIC FIBER REPLACEMENT . . . . .	20-12-11
REPAIR OF SPLICE ASSEMBLY . . . . .	20-10-13
RG231 COAX CABLE . . . . .	20-51-26
S280W501-(), BOEING, PFCS . . . . .	20-14-11
SHIELD . . . . .	20-10-13
SHIELD GROUND WIRE . . . . .	20-10-13
<b>CABLE SHIELD</b>	
REPAIR . . . . .	20-10-13
<b>CABLEWAVE</b>	
75-500, CONNECTOR . . . . .	20-51-90
76-500, CONNECTOR . . . . .	20-51-90
CAMA(), CONNECTOR, CORY COMPONENTS . . . . .	20-72-10
CAMA(), CONNECTOR, TRI-STAR . . . . .	20-72-10
<b>CAMBION</b>	
460-3094-01-01-00, SOLDER ADAPTER . . . . .	20-40-00
<b>CANNON</b>	
DPE-MA(), CONNECTOR . . . . .	20-71-13
<b>CAP AND STOW</b>	
FREE END OF WIRING . . . . .	20-10-11

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CAU

CONDUCTORS, SPLICES, TERMINALS . . . . .	20-30-22
CONVERSION TO AWG . . . . .	20-30-12
DEFINITION, CONVERSION . . . . .	20-30-22
CB02-15P, CONNECTOR, CORY COMPONENTS . . . . .	20-72-22
CB02-15P, CONNECTOR, TRI-STAR . . . . .	20-72-22
CB02-15S, CONNECTOR, CORY COMPONENTS . . . . .	20-72-22
CB02-15S, CONNECTOR, TRI-STAR . . . . .	20-72-22
CB02C-15P, CONNECTOR, CORY COMPONENTS . . . . .	20-72-22
CB02C-15P, CONNECTOR, TRI-STAR . . . . .	20-72-22
CB02C-15S, CONNECTOR, CORY COMPONENTS . . . . .	20-72-22
CB02C-15S, CONNECTOR, TRI-STAR . . . . .	20-72-22
CB05-15P, CONNECTOR, CORY COMPONENTS . . . . .	20-72-22
CB05-15P, CONNECTOR, TRI-STAR . . . . .	20-72-22
CB05-15S, CONNECTOR, CORY COMPONENTS . . . . .	20-72-22
CB05-15S, CONNECTOR, TRI-STAR . . . . .	20-72-22
CB06-15P, CONNECTOR, CORY COMPONENTS . . . . .	20-72-22
CB06-15P, CONNECTOR, TRI-STAR . . . . .	20-72-22
CB06-15S, CONNECTOR, CORY COMPONENTS . . . . .	20-72-22
CB06-15S, CONNECTOR, TRI-STAR . . . . .	20-72-22
CB08-15P, CONNECTOR, CORY COMPONENTS . . . . .	20-72-22
CB08-15P, CONNECTOR, TRI-STAR . . . . .	20-72-22
CB08-15S, CONNECTOR, CORY COMPONENTS . . . . .	20-72-22
CB08-15S, CONNECTOR, TRI-STAR . . . . .	20-72-22
CB08T-15P, CONNECTOR, CORY COMPONENTS . . . . .	20-72-22
CB08T-15P, CONNECTOR, TRI-STAR . . . . .	20-72-22
CB08T-15S, CONNECTOR, CORY COMPONENTS . . . . .	20-72-22
CB08T-15S, CONNECTOR, TRI-STAR . . . . .	20-72-22
CB24P-4, CONNECTOR, CORY COMPONENTS . . . . .	20-72-22
CB24P-4, CONNECTOR, TRI-STAR . . . . .	20-72-22
CBCX12R-1, CONNECTOR, CORY COMPONENTS . . . . .	20-72-22
CBCX12R-1, CONNECTOR, TRI-STAR . . . . .	20-72-22
CBJ-14, BACKSHELL, CORY COMPONENTS . . . . .	20-64-14
CBJ-14, BACKSHELL, TRI-STAR . . . . .	20-64-14
CBMA(), CONNECTOR, CORY COMPONENTS . . . . .	20-72-10
CBMA(), CONNECTOR, TRI-STAR . . . . .	20-72-10
CBME05-15S, CONNECTOR, CORY COMPONENTS . . . . .	20-72-22
CBME05-15S, CONNECTOR, TRI-STAR . . . . .	20-72-22
CBRE02-15P-1, CONNECTOR, CORY COMPONENTS . . . . .	20-72-22
CBRE02-15P-1, CONNECTOR, TRI-STAR . . . . .	20-72-22
CBRE02C-15P, CONNECTOR, CORY COMPONENTS . . . . .	20-72-22
CBRE02C-15P, CONNECTOR, TRI-STAR . . . . .	20-72-22
CBX12PM-1A, CONNECTOR, CORY COMPONENTS . . . . .	20-72-22
CBX12PM-1A, CONNECTOR, TRI-STAR . . . . .	20-72-22
CCMA(), CONNECTOR, CORY COMPONENTS . . . . .	20-72-10
CCMA(), CONNECTOR, TRI-STAR . . . . .	20-72-10
CDMA(), CONNECTOR, CORY COMPONENTS . . . . .	20-72-10
CDMA(), CONNECTOR, TRI-STAR . . . . .	20-72-10

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CE46FC, EYELET, CIRCON . . . . .	20-60-00
CE46FC, EYELET, CIRCON . . . . .	20-81-16
CE66FC, EYELET, CIRCON . . . . .	20-60-00
CE66FC, EYELET, CIRCON . . . . .	20-81-16
CE9307-(), CONNECTOR, ITT CANNON . . . . .	20-40-00
CE9307-10, CONNECTOR, ITT CANNON . . . . .	20-71-11
CE9307-11, CONNECTOR, ITT CANNON . . . . .	20-71-11
CE9307-18, CONNECTOR, ITT CANNON . . . . .	20-71-11
CE9307-19, CONNECTOR, ITT CANNON . . . . .	20-71-11
CEMA(), CONNECTOR, CORY COMPONENTS . . . . .	20-72-10
CEMA(), CONNECTOR, TRI-STAR . . . . .	20-72-10
CEMENT	
SUPPLIERS . . . . .	20-00-11
CERRO	
H22-4000 WIRE, BENDIX 10-244() SERIES ASSEMBLY . . . . .	20-61-18
H22-4000 WIRE, GRAIVNER CONNECTOR ASSEMBLY . . . . .	20-62-15
CFT-06-0-00, TUBE, TEFLON, ICORE . . . . .	20-10-16
CFT-09-0-00, TUBE, TEFLON, ICORE . . . . .	20-10-16
CG505M1-03, CONNECTOR, VIBRO-METER . . . . .	20-35-11
CG505M3-01, CONNECTOR, VIBRO-METER . . . . .	20-35-11
CHA-1598, FIBER OPTIC CLAMP KIT, RAYCHEM . . . . .	20-74-11
CHA-1599, FIBER OPTIC CLAMP KIT, RAYCHEM . . . . .	20-74-11
CHAMPLAIN	
24-00033, MIL-C-5015 ASSEMBLY . . . . .	20-63-14
24-00034 WIRE, GRAVINER CONNECTOR ASSEMBLY . . . . .	20-62-15
24-00034, MIL-C-5015 ASSEMBLY . . . . .	20-63-14
30-04680, CABLE, ADF . . . . .	20-35-24
30-04749, CABLE, ADF . . . . .	20-35-23
61-02651, CABLE . . . . .	20-35-20
61-02783, CABLE . . . . .	20-35-20
CHANNEL	
RACEWAY, BACC10DR(), BOEING . . . . .	20-10-12
CHROMEL SPLICE	
ASSEMBLY . . . . .	20-10-13
CHROMEL TERMINAL	
1-321897-0, AMP . . . . .	20-35-27
1387-3, THERMO-ELECTRIC . . . . .	20-35-27
CHROMEL THERMOCOUPLE BUTT SPLICE	
1-322325-1, AMP . . . . .	20-23-17
CINCH	
1167A(), CONNECTOR . . . . .	20-61-11
285-00-10-002-(), CONNECTOR . . . . .	20-74-11
285-00-20-002-(), CONNECTOR . . . . .	20-74-11
286-00-10-002-(), CONNECTOR . . . . .	20-74-11
286-00-10-006-(), CONNECTOR . . . . .	20-74-11
286-00-20-002-(), CONNECTOR . . . . .	20-74-11
286-00-20-006-(), CONNECTOR . . . . .	20-74-11
318-07-99-001, CONNECTOR INSERT . . . . .	20-74-11

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CINCH (continued)

318-07-99-002, CONNECTOR INSERT . . . . .	20-74-11
318-07-99-014, CONNECTOR INSERT . . . . .	20-74-11
318-07-99-015, CONNECTOR INSERT . . . . .	20-74-11
318-07-99-016, CONNECTOR INSERT . . . . .	20-74-11
318-07-99-017, CONNECTOR INSERT . . . . .	20-74-11
50031004-001, BACKSHELL . . . . .	20-62-21
C0900-246-(), ADAPTER, COUPLING RING . . . . .	20-61-11
C0909(), CONNECTOR . . . . .	20-61-11
C48-00R(), CONNECTOR . . . . .	20-61-11
C48-03R(), CONNECTOR . . . . .	20-61-11
C48-06R(), CONNECTOR . . . . .	20-61-11
C48-10R(), CONNECTOR . . . . .	20-61-11
C48-16R(), CONNECTOR . . . . .	20-61-11
CN0900-329, CONNECTOR . . . . .	20-61-11
CN0906-02E14-12S, CONNECTOR . . . . .	20-61-12
CN0906-06E14-12P, CONNECTOR . . . . .	20-61-12
CN0940-1, CONNECTOR . . . . .	20-61-11
CN0940-12, CONNECTOR . . . . .	20-61-11
CN0940-126, CONNECTOR . . . . .	20-61-11
CN0940-127, CONNECTOR . . . . .	20-61-11
CN0940-128, CONNECTOR . . . . .	20-61-11
CN0940-129, CONNECTOR . . . . .	20-61-11
CN0940-16, CONNECTOR . . . . .	20-61-11
CN0940-17, CONNECTOR . . . . .	20-61-11
CN0940-18, CONNECTOR . . . . .	20-61-11
CN0940-19, CONNECTOR . . . . .	20-61-11
CN0940-5, CONNECTOR . . . . .	20-61-11
CN0940-6, CONNECTOR . . . . .	20-61-11
CN0940-66, CONNECTOR . . . . .	20-61-11
CN0940-67, CONNECTOR . . . . .	20-61-11
CN0940-68, CONNECTOR . . . . .	20-61-11
CN0940-69, CONNECTOR . . . . .	20-61-11
CN0966(), CONNECTOR . . . . .	20-61-11
CN0967(), CONNECTOR . . . . .	20-61-11
CN0977(), CONNECTOR . . . . .	20-61-11
CN0986(), CONNECTOR . . . . .	20-61-11
CN0986-(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE . . . . .	20-35-11
CN1004-(), CONNECTOR . . . . .	20-61-11
CN1020A(), CONNECTOR . . . . .	20-61-11
CN1021A(), CONNECTOR . . . . .	20-61-11
CN1068A22A55N, CONNECTOR . . . . .	20-60-06
CN1156-2, CONNECTOR . . . . .	20-61-11
CN1156-4, CONNECTOR . . . . .	20-61-11
CN1159-11, CONNECTOR . . . . .	20-61-11
CN1159-12, CONNECTOR . . . . .	20-61-11
CSF3440C()-()CD, CONNECTOR . . . . .	20-61-19
CSF3446C()-()CE, CONNECTOR . . . . .	20-61-19
S345T002-156, CONNECTOR . . . . .	20-62-21

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CINCH ACIS CONNECTORS	
CONNECTOR ASSEMBLY .....	20-74-11
CINCH CN0906 SERIES	
CONNECTOR ASSEMBLY .....	20-61-12
CIRCON	
CE46FC, EYELET .....	20-60-00
CE46FC, EYELET .....	20-81-16
CE66FC, EYELET .....	20-60-00
CE66FC, EYELET .....	20-81-16
CIRCUIT BREAKER	
REMOTE CONTROL, BACC18AF, BOEING .....	20-83-00
TERMINAL LUG, INSTALLATION TORQUE .....	20-30-00
CIRCUIT BREAKER RESET .....	20-00-10
CIRCULAR AREA UNITS (CAU)	
CONDUCTORS, SPLICES, TERMINALS .....	20-30-22
DEFINITION, CONVERSION .....	20-30-22
CLAMP	
BLOCK, 69B90483-(), BOEING .....	20-10-12
CONDUIT, ELECTRICAL BOND .....	20-20-00
CONNECTOR, G2636-(), GLENAIR .....	20-85-11
CONNECTOR, G2918-(), GLENAIR .....	20-85-11
CUSHION, DOUBLE LEG ASSEMBLY, HIGH PERFORMANCE PLASTIC, BACC10NB(), BOEING .....	20-10-12
CUSHION, SINGLE LEG ASSEMBLY, HIGH PERFORMANCE PLASTIC, BACC10NA(), BOEING .....	20-10-12
FIBER OPTIC CABLE, 287T0011-1, BOEING .....	20-12-11
FIBER OPTIC CABLE, 287T0011-4, BOEING .....	20-12-11
G2636-(), GLENAIR .....	20-85-11
G2918-(), GLENAIR .....	20-85-11
LOOP, 287T0011-(), BOEING .....	20-10-12
LOOP, BACC10BU(), BOEING .....	20-10-12
LOOP, BACC10DK(), BOEING .....	20-10-12
LOOP, BACC10GE(), BOEING .....	20-10-12
LOOP, BACC10GE8A, BOEING .....	20-11-11
LOOP, BACC10GU(), BOEING .....	20-10-12
LOOP, BACC10HS(), BOEING .....	20-10-12
LOOP, BACC10JU(), BOEING .....	20-10-12
LOOP, BACC10KL(), BOEING .....	20-10-12
LOOP, TA025041-(), TA MANUFACTURING .....	20-10-12
LOOP, TA025097(), TA MANUFACTURING .....	20-10-12
RACEWAY, BACC10DS(), BOEING .....	20-10-12
SADDLE, TA0930034-(), TA MANUFACTURING .....	20-10-12
STRAIN RELIEF, 40-741-1603-08U, SMITHS INDUSTRIES .....	20-15-33
STRAIN RELIEF, 40-741-1603-09U, SMITHS INDUSTRIES .....	20-15-33
STRAIN RELIEF, 40-741-1604-04U, SMITHS INDUSTRIES .....	20-15-33
STRAIN RELIEF, 40-741-1604-08U, SMITHS INDUSTRIES .....	20-15-33
STRAIN RELIEF, 40-741-1604-09U, SMITHS INDUSTRIES .....	20-15-33
STRAIN RELIEF, BACC10LL1, BOEING .....	20-74-13
STRAIN RELIEF, BACC10LL2, BOEING .....	20-74-13
STRAIN RELIEF, BACC10LM1F, BOEING .....	20-74-13

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CLAMP (continued)

STRAIN RELIEF, BACC10LM2F, BOEING . . . . .	20-74-13
STRAIN RELIEF, BACC10LV2, BOEING . . . . .	20-74-13
STRAIN RELIEF, BACC10MY1, BOEING . . . . .	20-74-18
TUBE, ELECTRICAL BOND . . . . .	20-20-00
TUBE, GROUND STUD ASSEMBLY . . . . .	20-20-00
WIRE HARNESS, GENERAL CONDITIONS . . . . .	20-10-11
WIRE HARNESS, INSTALLATION . . . . .	20-10-12
WIRE HARNESS, SELECTION . . . . .	20-10-12

## CLAMP ASSEMBLY

G2636-(), GLENAIR . . . . .	20-85-11
G2918-(), GLENAIR . . . . .	20-85-11

## CLEANING

CONNECTOR, GENERAL PURPOSE . . . . .	20-60-01
CONNECTOR, WALTER KIDDE CONNECTOR . . . . .	20-60-01
FAYING SURFACE FOR ELECTRICAL BOND . . . . .	20-20-00
WIRE HARNESS COMPONENTS . . . . .	20-10-04

## CLIP

STRINGER, BACS38AB(), BOEING . . . . .	20-10-12
STRINGER, BACS38J(), BOEING . . . . .	20-10-12
STRINGER, CR2, BOEING . . . . .	20-10-12
STRINGER, CR4H, BOEING . . . . .	20-10-12

## CLOVER

82164-1F, RELAY SOCKET . . . . .	20-81-11
CN0900-329, CONNECTOR, CINCH . . . . .	20-61-11
CN0906-02E14-12S, CONNECTOR, CINCH . . . . .	20-61-12
CN0906-06E14-12P, CONNECTOR, CINCH . . . . .	20-61-12
CN0940-1, CONNECTOR, CINCH . . . . .	20-61-11
CN0940-12, CONNECTOR, CINCH . . . . .	20-61-11
CN0940-126, CONNECTOR, CINCH . . . . .	20-61-11
CN0940-127, CONNECTOR, CINCH . . . . .	20-61-11
CN0940-128, CONNECTOR, CINCH . . . . .	20-61-11
CN0940-129, CONNECTOR, CINCH . . . . .	20-61-11
CN0940-16, CONNECTOR, CINCH . . . . .	20-61-11
CN0940-17, CONNECTOR, CINCH . . . . .	20-61-11
CN0940-18, CONNECTOR, CINCH . . . . .	20-61-11
CN0940-19, CONNECTOR, CINCH . . . . .	20-61-11
CN0940-5, CONNECTOR, CINCH . . . . .	20-61-11
CN0940-6, CONNECTOR, CINCH . . . . .	20-61-11
CN0940-66, CONNECTOR, CINCH . . . . .	20-61-11
CN0940-67, CONNECTOR, CINCH . . . . .	20-61-11
CN0940-68, CONNECTOR, CINCH . . . . .	20-61-11
CN0940-69, CONNECTOR, CINCH . . . . .	20-61-11
CN0966(), CONNECTOR, CINCH . . . . .	20-61-11
CN0967(), CONNECTOR, CINCH . . . . .	20-61-11
CN0977(), CONNECTOR, CINCH . . . . .	20-61-11
CN0986(), CONNECTOR, CINCH . . . . .	20-61-11
CN0986-(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE, CINCH . . . . .	20-35-11
CN1004-(), CONNECTOR, CINCH . . . . .	20-61-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CN1020A(), CONNECTOR, CINCH . . . . .	20-61-11
CN1021A(), CONNECTOR, CINCH . . . . .	20-61-11
CN1068A22A55N, CONNECTOR, CINCH . . . . .	20-60-06
CN1156-2, CONNECTOR, CINCH . . . . .	20-61-11
CN1156-4, CONNECTOR, CINCH . . . . .	20-61-11
CN1159-11, CONNECTOR, CINCH . . . . .	20-61-11
CN1159-12, CONNECTOR, CINCH . . . . .	20-61-11
COATING MATERIAL	
SUPPLIERS . . . . .	20-00-11
COAX CABLE	
421-593, AMPHENOL, CONNECTOR ASSEMBLY . . . . .	20-51-41
5020G3442, RAYCHEM, CONNECTOR ASSEMBLY . . . . .	20-51-05
64-500, PRODELIN, CONNECTOR ASSEMBLY . . . . .	20-51-90
BA14349, ITT SURPRENANT, CONNECTOR ASSEMBLY . . . . .	20-51-05
BA14349, ITT SURPRENANT, CONNECTOR ASSEMBLY . . . . .	20-51-42
BOEING, S280W503-1, ITT CANNON DP SERIES ASSEMBLY . . . . .	20-71-11
DAMAGE CONDITIONS AND REPAIR . . . . .	20-10-13
END CAP ASSEMBLY . . . . .	20-30-16
FSJ4-50, ANDREWS, CONNECTOR ASSEMBLY . . . . .	20-51-51
G87T325CU, PRECISION TUBE COMPANY, CONNECTOR ASSEMBLY . . . . .	20-51-41
PREPARATION, GENERAL CONDITIONS . . . . .	20-51-00
RG115A, ITT CANNON DP SERIES ASSEMBLY . . . . .	20-71-11
RG223, ITT CANNON DP SERIES ASSEMBLY . . . . .	20-71-11
RG231, REPAIR . . . . .	20-51-26
SURPRENANT, BA5903, ITT CANNON DP SERIES ASSEMBLY . . . . .	20-71-11
COAX CONNECTOR	
1075-13-9, KINGS ELECTRONICS . . . . .	20-51-15
1075-13-9, KINGS ELECTRONICS . . . . .	20-51-17
1201-11-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-12-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-13-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-14-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-20-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-21-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-22-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-23-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-24-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-25-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-6-9, KINGS ELECTRONICS . . . . .	20-51-15
1202-20-9, KINGS ELECTRONICS . . . . .	20-51-15
1202-23-9, KINGS ELECTRONICS . . . . .	20-51-15
1202-26-9, KINGS ELECTRONICS . . . . .	20-51-15
1203-13-9, KINGS ELECTRONICS . . . . .	20-51-15
1203-14-9, KINGS ELECTRONICS . . . . .	20-51-15
1203-15-9, KINGS ELECTRONICS . . . . .	20-51-15
1203-16-9, KINGS ELECTRONICS . . . . .	20-51-15
1203-19-9, KINGS ELECTRONICS . . . . .	20-51-15
1203-20-9, KINGS ELECTRONICS . . . . .	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## COAX CONNECTOR (continued)

1203-21-9, KINGS ELECTRONICS . . . . .	20-51-15
1203-4-9, KINGS ELECTRONICS . . . . .	20-51-15
1205-20-9, KINGS ELECTRONICS . . . . .	20-51-15
1205-31-9, KINGS ELECTRONICS . . . . .	20-51-15
1205-47-9, KINGS ELECTRONICS . . . . .	20-51-15
1205-48-9, KINGS ELECTRONICS . . . . .	20-51-15
1205-49-9, KINGS ELECTRONICS . . . . .	20-51-15
1205-61-9, KINGS ELECTRONICS . . . . .	20-51-15
1205-62-9, KINGS ELECTRONICS . . . . .	20-51-15
1206-11-9, KINGS ELECTRONICS . . . . .	20-51-15
1206-21-9, KINGS ELECTRONICS . . . . .	20-51-15
1206-22-9, KINGS ELECTRONICS . . . . .	20-51-15
1206-26-9, KINGS ELECTRONICS . . . . .	20-51-15
1206-29-9, KINGS ELECTRONICS . . . . .	20-51-15
1206-30-9, KINGS ELECTRONICS . . . . .	20-51-15
121-11-9, KINGS ELECTRONICS . . . . .	20-51-15
121-24-9, KINGS ELECTRONICS . . . . .	20-51-15
121-35-9, KINGS ELECTRONICS . . . . .	20-51-15
121-36-9, KINGS ELECTRONICS . . . . .	20-51-15
121-37-9, KINGS ELECTRONICS . . . . .	20-51-15
121-38-9, KINGS ELECTRONICS . . . . .	20-51-15
121-39-9, KINGS ELECTRONICS . . . . .	20-51-15
121-40-9, KINGS ELECTRONICS . . . . .	20-51-15
121-44-9, KINGS ELECTRONICS . . . . .	20-51-15
121-45-9, KINGS ELECTRONICS . . . . .	20-51-15
121-46-9, KINGS ELECTRONICS . . . . .	20-51-15
121-52-9, KINGS ELECTRONICS . . . . .	20-51-15
122-37-9, KINGS ELECTRONICS . . . . .	20-51-15
123-22-5, KINGS ELECTRONICS . . . . .	20-51-15
123-23-9, KINGS ELECTRONICS . . . . .	20-51-15
123-24-9, KINGS ELECTRONICS . . . . .	20-51-15
123-26-9, KINGS ELECTRONICS . . . . .	20-51-15
125-101-9, KINGS ELECTRONICS . . . . .	20-51-15
125-105-9, KINGS ELECTRONICS . . . . .	20-51-15
125-126-9, KINGS ELECTRONICS . . . . .	20-51-15
125-60-9, KINGS ELECTRONICS . . . . .	20-51-15
125-61-9, KINGS ELECTRONICS . . . . .	20-51-15
125-69-9, KINGS ELECTRONICS . . . . .	20-51-15
125-88-9, KINGS ELECTRONICS . . . . .	20-51-15
125-89-9, KINGS ELECTRONICS . . . . .	20-51-15
125-91-9, KINGS ELECTRONICS . . . . .	20-51-15
125-92-9, KINGS ELECTRONICS . . . . .	20-51-15
125-94-9, KINGS ELECTRONICS . . . . .	20-51-15
125-95-9, KINGS ELECTRONICS . . . . .	20-51-15
125-96-9, KINGS ELECTRONICS . . . . .	20-51-15
126-14-5, KINGS ELECTRONICS . . . . .	20-51-15
126-50-9, KINGS ELECTRONICS . . . . .	20-51-15
126-58-9, KINGS ELECTRONICS . . . . .	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## COAX CONNECTOR (continued)

126-59-9, KINGS ELECTRONICS	20-51-15
126-64-9, KINGS ELECTRONICS	20-51-15
126-67-9, KINGS ELECTRONICS	20-51-15
126-70-9, KINGS ELECTRONICS	20-51-15
126-71-9, KINGS ELECTRONICS	20-51-15
126-73-9, KINGS ELECTRONICS	20-51-15
126-74-9, KINGS ELECTRONICS	20-51-15
126-78-1, KINGS ELECTRONICS	20-51-15
126-78-6, KINGS ELECTRONICS	20-51-15
126-85-9, KINGS ELECTRONICS	20-51-15
1525-4-9, KINGS ELECTRONICS	20-51-15
2-329083-1, AMP	20-51-21
2430-1-(), KINGS ELECTRONICS	20-51-15
2430-2-(), KINGS ELECTRONICS	20-51-15
2431-74-(), KINGS ELECTRONICS	20-51-15
2431-76-(), KINGS ELECTRONICS	20-51-15
2431-80-(), KINGS ELECTRONICS	20-51-15
2431-81-(), KINGS ELECTRONICS	20-51-15
2431-82-(), KINGS ELECTRONICS	20-51-15
2431-83-(), KINGS ELECTRONICS	20-51-15
2431-84-(), KINGS ELECTRONICS	20-51-15
2431-85-(), KINGS ELECTRONICS	20-51-15
2431-87-(), KINGS ELECTRONICS	20-51-15
2431-88-(), KINGS ELECTRONICS	20-51-15
2431-89-(), KINGS ELECTRONICS	20-51-15
2435-74-(), KINGS ELECTRONICS	20-51-15
2435-77-(), KINGS ELECTRONICS	20-51-15
2435-81-(), KINGS ELECTRONICS	20-51-15
2435-82-(), KINGS ELECTRONICS	20-51-15
2435-83-(), KINGS ELECTRONICS	20-51-15
2435-84-(), KINGS ELECTRONICS	20-51-15
2435-87-(), KINGS ELECTRONICS	20-51-15
2436-81-(), KINGS ELECTRONICS	20-51-15
2436-83-(), KINGS ELECTRONICS	20-51-15
2436-85-(), KINGS ELECTRONICS	20-51-15
2971-2-(), KINGS ELECTRONICS	20-51-15
2971-3-(), KINGS ELECTRONICS	20-51-15
2971-4-(), KINGS ELECTRONICS	20-51-15
2971-5-(), KINGS ELECTRONICS	20-51-15
2971-6-(), KINGS ELECTRONICS	20-51-15
2971-7-(), KINGS ELECTRONICS	20-51-15
2971-8-(), KINGS ELECTRONICS	20-51-15
2975-2-(), KINGS ELECTRONICS	20-51-15
2975-4-(), KINGS ELECTRONICS	20-51-15
2975-5-(), KINGS ELECTRONICS	20-51-15
2975-6-(), KINGS ELECTRONICS	20-51-15
2976-1-(), KINGS ELECTRONICS	20-51-15
2976-3-(), KINGS ELECTRONICS	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## COAX CONNECTOR (continued)

2981-1-(), KINGS ELECTRONICS .....	20-51-15
2981-3-(), KINGS ELECTRONICS .....	20-51-15
2981-4-(), KINGS ELECTRONICS .....	20-51-15
2981-5-(), KINGS ELECTRONICS .....	20-51-15
2981-6-(), KINGS ELECTRONICS .....	20-51-15
2981-7-(), KINGS ELECTRONICS .....	20-51-15
2981-8-(), KINGS ELECTRONICS .....	20-51-15
2985-2-(), KINGS ELECTRONICS .....	20-51-15
2985-3-(), KINGS ELECTRONICS .....	20-51-15
2985-4-(), KINGS ELECTRONICS .....	20-51-15
2986-1-(), KINGS ELECTRONICS .....	20-51-15
2986-3-(), KINGS ELECTRONICS .....	20-51-15
331719, AMP .....	20-51-26
331843, AMP .....	20-51-26
40229, ANDREWS .....	20-51-51
44ASN, ANDREWS .....	20-51-51
75-500, CABLEWAVE .....	20-51-90
751-10-9, KINGS ELECTRONICS .....	20-51-15
751-11-9, KINGS ELECTRONICS .....	20-51-15
751-2-9, KINGS ELECTRONICS .....	20-51-15
751-20-9, KINGS ELECTRONICS .....	20-51-15
751-22-9, KINGS ELECTRONICS .....	20-51-15
751-3-9, KINGS ELECTRONICS .....	20-51-15
751-4-9, KINGS ELECTRONICS .....	20-51-15
752-43-9, KINGS ELECTRONICS .....	20-51-15
755-129-9, KINGS ELECTRONICS .....	20-51-15
755-78-9, KINGS ELECTRONICS .....	20-51-15
755-79-9, KINGS ELECTRONICS .....	20-51-15
755-93-9, KINGS ELECTRONICS .....	20-51-15
756-10-9, KINGS ELECTRONICS .....	20-51-15
756-16-9, KINGS ELECTRONICS .....	20-51-15
756-4-9, KINGS ELECTRONICS .....	20-51-15
76-500, CABLEWAVE .....	20-51-90
791-10-9, KINGS ELECTRONICS .....	20-51-15
791-11-9, KINGS ELECTRONICS .....	20-51-15
791-5-9, KINGS ELECTRONICS .....	20-51-15
791-6-9, KINGS ELECTRONICS .....	20-51-15
791-7-9, KINGS ELECTRONICS .....	20-51-15
791-8-9, KINGS ELECTRONICS .....	20-51-15
791-9-9, KINGS ELECTRONICS .....	20-51-15
795-15-9, KINGS ELECTRONICS .....	20-51-15
795-16-9, KINGS ELECTRONICS .....	20-51-15
795-20-9, KINGS ELECTRONICS .....	20-51-15
795-21-9, KINGS ELECTRONICS .....	20-51-15
795-23-9, KINGS ELECTRONICS .....	20-51-15
795-29-9, KINGS ELECTRONICS .....	20-51-15
795-30-9, KINGS ELECTRONICS .....	20-51-15
795-33-9, KINGS ELECTRONICS .....	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## COAX CONNECTOR (continued)

796-15-9, KINGS ELECTRONICS. ....	20-51-15
796-17-9, KINGS ELECTRONICS. ....	20-51-15
796-18-9, KINGS ELECTRONICS. ....	20-51-15
796-19-9, KINGS ELECTRONICS. ....	20-51-15
796-4-9, KINGS ELECTRONICS. ....	20-51-15
82-175, AMPHENOL. ....	20-51-41
82-3292, AMPHENOL. ....	20-51-42
821-2-9, KINGS ELECTRONICS. ....	20-51-15
821-3-9, KINGS ELECTRONICS. ....	20-51-15
821-4-9, KINGS ELECTRONICS. ....	20-51-15
821-5-9, KINGS ELECTRONICS. ....	20-51-15
821-6-9, KINGS ELECTRONICS. ....	20-51-15
821-7-9, KINGS ELECTRONICS. ....	20-51-15
821-9-9, KINGS ELECTRONICS. ....	20-51-15
823-1-9, KINGS ELECTRONICS. ....	20-51-15
823-2-9, KINGS ELECTRONICS. ....	20-51-15
825-10-9, KINGS ELECTRONICS. ....	20-51-15
825-11-9, KINGS ELECTRONICS. ....	20-51-15
825-12-9, KINGS ELECTRONICS. ....	20-51-15
825-14-9, KINGS ELECTRONICS. ....	20-51-15
825-7-9, KINGS ELECTRONICS. ....	20-51-15
826-10-9, KINGS ELECTRONICS. ....	20-51-15
826-8-9, KINGS ELECTRONICS. ....	20-51-15
826-9-9, KINGS ELECTRONICS. ....	20-51-15
841-1-9, KINGS ELECTRONICS. ....	20-51-15
843-2-9, KINGS ELECTRONICS. ....	20-51-15
845-3-9, KINGS ELECTRONICS. ....	20-51-15
846-5-9, KINGS ELECTRONICS. ....	20-51-15
871-59-3, KINGS ELECTRONICS. ....	20-51-15
875-100-3, KINGS ELECTRONICS. ....	20-51-15
875-105-3, KINGS ELECTRONICS. ....	20-51-15
875-91-3, KINGS ELECTRONICS. ....	20-51-15
875-92-3, KINGS ELECTRONICS. ....	20-51-15
876-64-3, KINGS ELECTRONICS. ....	20-51-15
892-2-9, KINGS ELECTRONICS. ....	20-51-15
892-3-9, KINGS ELECTRONICS. ....	20-51-15
895-3-9, KINGS ELECTRONICS. ....	20-51-15
895-6-9, KINGS ELECTRONICS. ....	20-51-15
896-4-9, KINGS ELECTRONICS. ....	20-51-15
I BACC64BT4, BOEING. ....	20-51-60
I BACC64BT5, BOEING. ....	20-51-60
I BACC64BT6, BOEING. ....	20-51-60
I BACC64BW4, BOEING. ....	20-51-60
I BACC64BW5, BOEING. ....	20-51-60
I BACC64BW6, BOEING. ....	20-51-60
G6G12-88PNH, BURNDY. ....	20-51-33
G6G12-88SNH, BURNDY. ....	20-51-33
GENERAL CONDITIONS FOR ASSEMBLY. ....	20-51-00

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## COAX CONNECTOR (continued)

KA-19-102, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-143, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-143-M06, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-162, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-163, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-193, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-195-M06, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-198-M06, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-21, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-213, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-213-M06, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-216, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-216-M06, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-23, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-24, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-25, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-48, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-50, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-51, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-63, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-68, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-83, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-100-M06, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-102-M06, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-12, KINGS ELECTRONICS . . . . .	20-51-11
KA-39-15, KINGS ELECTRONICS . . . . .	20-51-11
KA-39-31, KINGS ELECTRONICS . . . . .	20-51-11
KA-39-32, KINGS ELECTRONICS . . . . .	20-51-11
KA-39-44, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-82, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-83, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-85, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-94-M06, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-128, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-134, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-138, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-166, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-185, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-185-MC7, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-186, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-187, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-188, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-189, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-230, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-236, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-251, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-260, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-267, KINGS ELECTRONICS . . . . .	20-51-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## COAX CONNECTOR (continued)

KA-59-277, KINGS ELECTRONICS .....	20-51-15
KA-59-29, KINGS ELECTRONICS .....	20-51-11
KA-59-292, KINGS ELECTRONICS .....	20-51-15
KA-59-304, KINGS ELECTRONICS .....	20-51-15
KA-59-31, KINGS ELECTRONICS .....	20-51-11
KA-59-313, KINGS ELECTRONICS .....	20-51-15
KA-59-316, KINGS ELECTRONICS .....	20-51-15
KA-59-317, KINGS ELECTRONICS .....	20-51-15
KA-59-318, KINGS ELECTRONICS .....	20-51-11
KA-59-319, KINGS ELECTRONICS .....	20-51-11
KA-59-32, KINGS ELECTRONICS .....	20-51-11
KA-59-324, KINGS ELECTRONICS .....	20-51-15
KA-59-353-M06, KINGS ELECTRONICS .....	20-51-15
KA-59-36, KINGS ELECTRONICS .....	20-51-11
KA-59-39, KINGS ELECTRONICS .....	20-51-11
KA-59-391-M06, KINGS ELECTRONICS .....	20-51-15
KA-59-392-M06, KINGS ELECTRONICS .....	20-51-15
KA-59-393-M06, KINGS ELECTRONICS .....	20-51-15
KA-59-40, KINGS ELECTRONICS .....	20-51-11
KA-59-41, KINGS ELECTRONICS .....	20-51-11
KA-59-437-M06, KINGS ELECTRONICS .....	20-51-15
KA-59-438-M06, KINGS ELECTRONICS .....	20-51-15
KA-59-439-M06, KINGS ELECTRONICS .....	20-51-15
KA-59-57, KINGS ELECTRONICS .....	20-51-15
KA-59-59, KINGS ELECTRONICS .....	20-51-11
KA-59-73, KINGS ELECTRONICS .....	20-51-15
KA-59-98, KINGS ELECTRONICS .....	20-51-11
KA-59-99, KINGS ELECTRONICS .....	20-51-11
KC-19-100, KINGS ELECTRONICS .....	20-51-11
KC-19-101, KINGS ELECTRONICS .....	20-51-11
KC-19-113, KINGS ELECTRONICS .....	20-51-11
KC-19-116, KINGS ELECTRONICS .....	20-51-11
KC-19-121, KINGS ELECTRONICS .....	20-51-11
KC-19-121, KINGS ELECTRONICS .....	20-51-15
KC-19-122, KINGS ELECTRONICS .....	20-51-15
KC-19-125, KINGS ELECTRONICS .....	20-51-11
KC-19-129, KINGS ELECTRONICS .....	20-51-15
KC-19-129-M06, KINGS ELECTRONICS .....	20-51-15
KC-19-136, KINGS ELECTRONICS .....	20-51-11
KC-19-161, KINGS ELECTRONICS .....	20-51-15
KC-19-169, KINGS ELECTRONICS .....	20-51-15
KC-19-170, KINGS ELECTRONICS .....	20-51-15
KC-19-177, KINGS ELECTRONICS .....	20-51-15
KC-19-177-M06, KINGS ELECTRONICS .....	20-51-15
KC-19-21, KINGS ELECTRONICS .....	20-51-11
KC-19-226, KINGS ELECTRONICS .....	20-51-15
KC-19-254, KINGS ELECTRONICS .....	20-51-15
KC-19-255, KINGS ELECTRONICS .....	20-51-15

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****COAX CONNECTOR (continued)**

KC-19-256, KINGS ELECTRONICS .....	20-51-15
KC-19-261, KINGS ELECTRONICS .....	20-51-15
KC-19-262, KINGS ELECTRONICS .....	20-51-15
KC-19-307-M06, KINGS ELECTRONICS .....	20-51-15
KC-19-308-M06, KINGS ELECTRONICS .....	20-51-15
KC-19-31, KINGS ELECTRONICS .....	20-51-11
KC-19-32, KINGS ELECTRONICS .....	20-51-11
KC-19-327-M06, KINGS ELECTRONICS .....	20-51-15
KC-19-328-M06, KINGS ELECTRONICS .....	20-51-15
KC-19-329-M06, KINGS ELECTRONICS .....	20-51-15
KC-19-33, KINGS ELECTRONICS .....	20-51-11
KC-19-34, KINGS ELECTRONICS .....	20-51-11
KC-19-57, KINGS ELECTRONICS .....	20-51-11
KC-19-69, KINGS ELECTRONICS .....	20-51-11
KC-39-102, KINGS ELECTRONICS .....	20-51-11
KC-39-108, KINGS ELECTRONICS .....	20-51-15
KC-39-109, KINGS ELECTRONICS .....	20-51-15
KC-39-110, KINGS ELECTRONICS .....	20-51-15
KC-39-111, KINGS ELECTRONICS .....	20-51-15
KC-39-14, KINGS ELECTRONICS .....	20-51-11
KC-39-140-M06, KINGS ELECTRONICS .....	20-51-15
KC-39-142-M06, KINGS ELECTRONICS .....	20-51-15
KC-39-20, KINGS ELECTRONICS .....	20-51-11
KC-39-21, KINGS ELECTRONICS .....	20-51-11
KC-39-22, KINGS ELECTRONICS .....	20-51-11
KC-39-25, KINGS ELECTRONICS .....	20-51-11
KC-39-29, KINGS ELECTRONICS .....	20-51-15
KC-39-31, KINGS ELECTRONICS .....	20-51-11
KC-39-36, KINGS ELECTRONICS .....	20-51-15
KC-39-44, KINGS ELECTRONICS .....	20-51-11
KC-39-45, KINGS ELECTRONICS .....	20-51-15
KC-39-48, KINGS ELECTRONICS .....	20-51-11
KC-39-56, KINGS ELECTRONICS .....	20-51-11
KC-39-57, KINGS ELECTRONICS .....	20-51-11
KC-39-81, KINGS ELECTRONICS .....	20-51-15
KC-59-104, KINGS ELECTRONICS .....	20-51-15
KC-59-111, KINGS ELECTRONICS .....	20-51-11
KC-59-128, KINGS ELECTRONICS .....	20-51-15
KC-59-136, KINGS ELECTRONICS .....	20-51-11
KC-59-152, KINGS ELECTRONICS .....	20-51-15
KC-59-172, KINGS ELECTRONICS .....	20-51-11
KC-59-177, KINGS ELECTRONICS .....	20-51-11
KC-59-178, KINGS ELECTRONICS .....	20-51-11
KC-59-188, KINGS ELECTRONICS .....	20-51-11
KC-59-191, KINGS ELECTRONICS .....	20-51-11
KC-59-194, KINGS ELECTRONICS .....	20-51-11
KC-59-218, KINGS ELECTRONICS .....	20-51-15
KC-59-222, KINGS ELECTRONICS .....	20-51-15

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## COAX CONNECTOR (continued)

KC-59-259, KINGS ELECTRONICS	20-51-15
KC-59-261, KINGS ELECTRONICS	20-51-15
KC-59-262, KINGS ELECTRONICS	20-51-15
KC-59-263, KINGS ELECTRONICS	20-51-15
KC-59-265, KINGS ELECTRONICS	20-51-15
KC-59-267, KINGS ELECTRONICS	20-51-15
KC-59-281, KINGS ELECTRONICS	20-51-15
KC-59-287, KINGS ELECTRONICS	20-51-15
KC-59-291, KINGS ELECTRONICS	20-51-15
KC-59-33, KINGS ELECTRONICS	20-51-11
KC-59-38, KINGS ELECTRONICS	20-51-11
KC-59-383, KINGS ELECTRONICS	20-51-15
KC-59-41, KINGS ELECTRONICS	20-51-11
KC-59-411, KINGS ELECTRONICS	20-51-15
KC-59-42, KINGS ELECTRONICS	20-51-11
KC-59-425-M06, KINGS ELECTRONICS	20-51-15
KC-59-444, KINGS ELECTRONICS	20-51-15
KC-59-445, KINGS ELECTRONICS	20-51-15
KC-59-446, KINGS ELECTRONICS	20-51-15
KC-59-447, KINGS ELECTRONICS	20-51-15
KC-59-448, KINGS ELECTRONICS	20-51-15
KC-59-557-M06, KINGS ELECTRONICS	20-51-15
KC-59-585-M06, KINGS ELECTRONICS	20-51-15
KC-59-604-M06, KINGS ELECTRONICS	20-51-15
KC-59-605-M06, KINGS ELECTRONICS	20-51-15
KC-59-609, KINGS ELECTRONICS	20-51-15
KC-59-609-M06, KINGS ELECTRONICS	20-51-15
KC-59-61, KINGS ELECTRONICS	20-51-11
KC-59-62, KINGS ELECTRONICS	20-51-11
KC-59-63, KINGS ELECTRONICS	20-51-11
KC-59-64, KINGS ELECTRONICS	20-51-11
KC-59-660-M06, KINGS ELECTRONICS	20-51-15
KC-59-669-M06, KINGS ELECTRONICS	20-51-15
KC-59-85, KINGS ELECTRONICS	20-51-11
KC-59-96, KINGS ELECTRONICS	20-51-11
KD-19-08, KINGS ELECTRONICS	20-51-13
KD-19-104, KINGS ELECTRONICS	20-51-15
KD-19-104-M06, KINGS ELECTRONICS	20-51-15
KD-19-105-M06, KINGS ELECTRONICS	20-51-15
KD-19-107-M06, KINGS ELECTRONICS	20-51-15
KD-19-26, KINGS ELECTRONICS	20-51-11
KD-19-28, KINGS ELECTRONICS	20-51-11
KD-19-29, KINGS ELECTRONICS	20-51-11
KD-19-33, KINGS ELECTRONICS	20-51-11
KD-19-44, KINGS ELECTRONICS	20-51-11
KD-19-45, KINGS ELECTRONICS	20-51-11
KD-19-49, KINGS ELECTRONICS	20-51-11
KD-19-52, KINGS ELECTRONICS	20-51-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## COAX CONNECTOR (continued)

KD-19-55, KINGS ELECTRONICS	20-51-15
KD-19-56, KINGS ELECTRONICS	20-51-11
KD-19-66, KINGS ELECTRONICS	20-51-15
KD-19-67, KINGS ELECTRONICS	20-51-15
KD-19-68, KINGS ELECTRONICS	20-51-15
KD-19-69, KINGS ELECTRONICS	20-51-15
KD-19-90, KINGS ELECTRONICS	20-51-15
KD-19-94, KINGS ELECTRONICS	20-51-15
KD-19-95, KINGS ELECTRONICS	20-51-15
KD-39-08, KINGS ELECTRONICS	20-51-11
KD-39-09, KINGS ELECTRONICS	20-51-11
KD-39-10, KINGS ELECTRONICS	20-51-11
KD-39-21, KINGS ELECTRONICS	20-51-11
KD-39-27, KINGS ELECTRONICS	20-51-15
KD-39-28, KINGS ELECTRONICS	20-51-15
KD-39-37, KINGS ELECTRONICS	20-51-15
KD-39-42, KINGS ELECTRONICS	20-51-15
KD-59-100, KINGS ELECTRONICS	20-51-11
KD-59-101, KINGS ELECTRONICS	20-51-11
KD-59-110, KINGS ELECTRONICS	20-51-15
KD-59-120, KINGS ELECTRONICS	20-51-15
KD-59-125, KINGS ELECTRONICS	20-51-15
KD-59-126, KINGS ELECTRONICS	20-51-15
KD-59-128, KINGS ELECTRONICS	20-51-15
KD-59-129, KINGS ELECTRONICS	20-51-15
KD-59-155, KINGS ELECTRONICS	20-51-11
KD-59-156, KINGS ELECTRONICS	20-51-11
KD-59-161, KINGS ELECTRONICS	20-51-15
KD-59-163, KINGS ELECTRONICS	20-51-15
KD-59-164, KINGS ELECTRONICS	20-51-15
KD-59-165, KINGS ELECTRONICS	20-51-15
KD-59-166, KINGS ELECTRONICS	20-51-15
KD-59-180-M06, KINGS ELECTRONICS	20-51-15
KD-59-184-M06, KINGS ELECTRONICS	20-51-15
KD-59-185, KINGS ELECTRONICS	20-51-15
KD-59-185-M06, KINGS ELECTRONICS	20-51-15
KD-59-186, KINGS ELECTRONICS	20-51-15
KD-59-186-M06, KINGS ELECTRONICS	20-51-15
KD-59-187-M06, KINGS ELECTRONICS	20-51-15
KD-59-193-M06, KINGS ELECTRONICS	20-51-15
KD-59-199-M06, KINGS ELECTRONICS	20-51-15
KD-59-201, KINGS ELECTRONICS	20-51-15
KD-59-201-M06, KINGS ELECTRONICS	20-51-15
KD-59-202, KINGS ELECTRONICS	20-51-15
KD-59-202-M06, KINGS ELECTRONICS	20-51-15
KD-59-33, KINGS ELECTRONICS	20-51-11
KD-59-35, KINGS ELECTRONICS	20-51-11
KD-59-38, KINGS ELECTRONICS	20-51-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## COAX CONNECTOR (continued)

KD-59-40, KINGS ELECTRONICS .....	20-51-11
KD-59-41, KINGS ELECTRONICS .....	20-51-11
KD-59-42, KINGS ELECTRONICS .....	20-51-11
KD-59-43, KINGS ELECTRONICS .....	20-51-11
KD-59-44, KINGS ELECTRONICS .....	20-51-11
KD-59-50, KINGS ELECTRONICS .....	20-51-11
KD-59-52, KINGS ELECTRONICS .....	20-51-15
KD-59-55, KINGS ELECTRONICS .....	20-51-11
KD-59-57, KINGS ELECTRONICS .....	20-51-11
KD-59-58, KINGS ELECTRONICS .....	20-51-15
KD-59-63, KINGS ELECTRONICS .....	20-51-15
KD-59-64, KINGS ELECTRONICS .....	20-51-15
KD-59-90, KINGS ELECTRONICS .....	20-51-11
KD-59-94, KINGS ELECTRONICS .....	20-51-11
KD-59-95, KINGS ELECTRONICS .....	20-51-11
KG-19-15-M06, KINGS ELECTRONICS .....	20-51-15
KG-59-16, KINGS ELECTRONICS .....	20-51-11
KG-59-22, KINGS ELECTRONICS .....	20-51-11
KG-59-23, KINGS ELECTRONICS .....	20-51-11
KG-59-25, KINGS ELECTRONICS .....	20-51-11
KG-59-26, KINGS ELECTRONICS .....	20-51-11
KG-59-28, KINGS ELECTRONICS .....	20-51-15
KG-59-31-M06, KINGS ELECTRONICS .....	20-51-15
KG-59-32-M06, KINGS ELECTRONICS .....	20-51-15
KG-59-33-M06, KINGS ELECTRONICS .....	20-51-15
KG-59-34-M06, KINGS ELECTRONICS .....	20-51-15
KH-19-12, KINGS ELECTRONICS .....	20-51-11
KH-19-13, KINGS ELECTRONICS .....	20-51-11
KH-19-14, KINGS ELECTRONICS .....	20-51-11
KH-19-18, KINGS ELECTRONICS .....	20-51-15
KH-19-22, KINGS ELECTRONICS .....	20-51-11
KH-39-11, KINGS ELECTRONICS .....	20-51-11
KH-39-12, KINGS ELECTRONICS .....	20-51-11
KH-39-21, KINGS ELECTRONICS .....	20-51-15
KH-39-22, KINGS ELECTRONICS .....	20-51-15
KH-39-25-M06, KINGS ELECTRONICS .....	20-51-15
KH-59-102-M06, KINGS ELECTRONICS .....	20-51-15
KH-59-103-M06, KINGS ELECTRONICS .....	20-51-15
KH-59-104-M06, KINGS ELECTRONICS .....	20-51-15
KH-59-19, KINGS ELECTRONICS .....	20-51-11
KH-59-20, KINGS ELECTRONICS .....	20-51-11
KH-59-21, KINGS ELECTRONICS .....	20-51-11
KH-59-24, KINGS ELECTRONICS .....	20-51-11
KH-59-28, KINGS ELECTRONICS .....	20-51-11
KH-59-31, KINGS ELECTRONICS .....	20-51-11
KH-59-47, KINGS ELECTRONICS .....	20-51-11
KH-59-50, KINGS ELECTRONICS .....	20-51-11
KH-59-53, KINGS ELECTRONICS .....	20-51-11

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****COAX CONNECTOR (continued)**

KH-59-54, KINGS ELECTRONICS . . . . .	20-51-11
KH-59-56, KINGS ELECTRONICS . . . . .	20-51-11
KH-59-60, KINGS ELECTRONICS . . . . .	20-51-11
KH-59-63, KINGS ELECTRONICS . . . . .	20-51-15
KH-59-64, KINGS ELECTRONICS . . . . .	20-51-15
KH-59-65, KINGS ELECTRONICS . . . . .	20-51-15
KH-59-66, KINGS ELECTRONICS . . . . .	20-51-15
KH-59-69, KINGS ELECTRONICS . . . . .	20-51-15
KH-59-78, KINGS ELECTRONICS . . . . .	20-51-11
KH-59-99-M06, KINGS ELECTRONICS . . . . .	20-51-15
KM-19-08, KINGS ELECTRONICS . . . . .	20-51-15
KM-39-07, KINGS ELECTRONICS . . . . .	20-51-15
KM-59-05, KINGS ELECTRONICS . . . . .	20-51-13
KM-59-18, KINGS ELECTRONICS . . . . .	20-51-15
KM-59-20, KINGS ELECTRONICS . . . . .	20-51-15
KM-59-31, KINGS ELECTRONICS . . . . .	20-51-15
KM-59-36, KINGS ELECTRONICS . . . . .	20-51-15
KM-59-41, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-115, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-117, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-118, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-125, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-145, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-149, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-151, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-162, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-195-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-196-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-198-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-199-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-205-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-206-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-207-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-208-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-209-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-30, KINGS ELECTRONICS . . . . .	20-51-11
KN-19-31, KINGS ELECTRONICS . . . . .	20-51-11
KN-19-331-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-37, KINGS ELECTRONICS . . . . .	20-51-11
KN-19-44, KINGS ELECTRONICS . . . . .	20-51-11
KN-19-48, KINGS ELECTRONICS . . . . .	20-51-11
KN-19-68, KINGS ELECTRONICS . . . . .	20-51-11
KN-19-73, KINGS ELECTRONICS . . . . .	20-51-11
KN-19-78, KINGS ELECTRONICS . . . . .	20-51-11
KN-19-79, KINGS ELECTRONICS . . . . .	20-51-11
KN-39-114-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-39-121-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-39-122-M06, KINGS ELECTRONICS . . . . .	20-51-15

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## COAX CONNECTOR (continued)

KN-39-19, KINGS ELECTRONICS	20-51-11
KN-39-20, KINGS ELECTRONICS	20-51-11
KN-39-21, KINGS ELECTRONICS	20-51-11
KN-39-23, KINGS ELECTRONICS	20-51-11
KN-39-42, KINGS ELECTRONICS	20-51-11
KN-39-48, KINGS ELECTRONICS	20-51-11
KN-39-51, KINGS ELECTRONICS	20-51-11
KN-39-55, KINGS ELECTRONICS	20-51-11
KN-39-71, KINGS ELECTRONICS	20-51-15
KN-39-72, KINGS ELECTRONICS	20-51-15
KN-39-73, KINGS ELECTRONICS	20-51-15
KN-39-87, KINGS ELECTRONICS	20-51-15
KN-39-93, KINGS ELECTRONICS	20-51-15
KN-59-107, KINGS ELECTRONICS	20-51-11
KN-59-110, KINGS ELECTRONICS	20-51-11
KN-59-113, KINGS ELECTRONICS	20-51-11
KN-59-120, KINGS ELECTRONICS	20-51-15
KN-59-128, KINGS ELECTRONICS	20-51-11
KN-59-129, KINGS ELECTRONICS	20-51-11
KN-59-131, KINGS ELECTRONICS	20-51-11
KN-59-133, KINGS ELECTRONICS	20-51-11
KN-59-135, KINGS ELECTRONICS	20-51-11
KN-59-136, KINGS ELECTRONICS	20-51-11
KN-59-138, KINGS ELECTRONICS	20-51-11
KN-59-159, KINGS ELECTRONICS	20-51-15
KN-59-18, KINGS ELECTRONICS	20-51-11
KN-59-183, KINGS ELECTRONICS	20-51-15
KN-59-183-M06, KINGS ELECTRONICS	20-51-15
KN-59-185, KINGS ELECTRONICS	20-51-15
KN-59-186, KINGS ELECTRONICS	20-51-15
KN-59-190, KINGS ELECTRONICS	20-51-15
KN-59-201-M06, KINGS ELECTRONICS	20-51-15
KN-59-220, KINGS ELECTRONICS	20-51-15
KN-59-220-M07, KINGS ELECTRONICS	20-51-15
KN-59-237, KINGS ELECTRONICS	20-51-11
KN-59-238, KINGS ELECTRONICS	20-51-11
KN-59-239, KINGS ELECTRONICS	20-51-15
KN-59-242-M06, KINGS ELECTRONICS	20-51-15
KN-59-247, KINGS ELECTRONICS	20-51-15
KN-59-261, KINGS ELECTRONICS	20-51-15
KN-59-262, KINGS ELECTRONICS	20-51-15
KN-59-263, KINGS ELECTRONICS	20-51-15
KN-59-264, KINGS ELECTRONICS	20-51-15
KN-59-264-M06, KINGS ELECTRONICS	20-51-15
KN-59-28, KINGS ELECTRONICS	20-51-11
KN-59-29, KINGS ELECTRONICS	20-51-11
KN-59-31, KINGS ELECTRONICS	20-51-11
KN-59-313-M06, KINGS ELECTRONICS	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## COAX CONNECTOR (continued)

KN-59-329-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-330-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-331-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-332-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-34, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-361-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-367-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-368-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-369-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-46, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-47, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-48, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-49, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-50, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-53, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-56, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-57, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-69, KINGS ELECTRONICS . . . . .	20-51-11
KS-89-108, KINGS ELECTRONICS . . . . .	20-51-15
KS-89-164, KINGS ELECTRONICS . . . . .	20-51-15
KS-89-31, KINGS ELECTRONICS . . . . .	20-51-11
KS-89-35, KINGS ELECTRONICS . . . . .	20-51-11
KS-89-42, KINGS ELECTRONICS . . . . .	20-51-11
KS-89-55, KINGS ELECTRONICS . . . . .	20-51-15
KU-59-03, KINGS ELECTRONICS . . . . .	20-51-15
KU-59-19, KINGS ELECTRONICS . . . . .	20-51-11
KU-59-21, KINGS ELECTRONICS . . . . .	20-51-11
KU-59-25, KINGS ELECTRONICS . . . . .	20-51-11
KU-59-32, KINGS ELECTRONICS . . . . .	20-51-11
KU-59-67, KINGS ELECTRONICS . . . . .	20-51-11
KY-59-02, KINGS ELECTRONICS . . . . .	20-51-13
L42ENT, ANDREWS . . . . .	20-51-52
L42EWT, ANDREWS . . . . .	20-51-52
L42EWT, ANDREWS, CONNECTOR ASSEMBLY . . . . .	20-51-52
M22T(), SOURIAU/BURNDY . . . . .	20-51-32
RSCDEX-2, BURNDY . . . . .	20-51-31
RSMDEX-1, BURNDY . . . . .	20-51-31
COAX SPLICE	
331713, AMP . . . . .	20-51-26
COAXICLAMP	
AMP, CONNECTOR ASSEMBLY . . . . .	20-51-26
AMP, SPLICE ASSEMBLY . . . . .	20-51-26
COLD SHRINKABLE SLEEVE	
SUPPLIERS . . . . .	20-00-11
COLD SHRINKABLE SLEEVES	
INSTALLATION . . . . .	20-10-14
INSTALLATION . . . . .	20-10-27
SELECTION . . . . .	20-10-14

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

COLD SHRINKABLE SLEEVES (continued)	
SELECTION . . . . .	20-10-27
CONDUCTOR	
SIZE ADJUSTMENT FOR CONTACT ASSEMBLY . . . . .	20-60-00
CONDUIT	
FLEXIBLE, REPAIR . . . . .	20-10-91
CONDUIT ADAPTER	
6930-06-(), ICORE . . . . .	20-61-00
6930-09-(), ICORE . . . . .	20-61-00
712-148, GLENAIR . . . . .	20-61-00
CONNECTOR ASSEMBLY . . . . .	20-61-00
G8148, GLENAIR . . . . .	20-61-00
MS27557, QPL . . . . .	20-61-00
CONNECTOR	
002368-0802, VIKING ELECTRONICS . . . . .	20-72-25
00850-0027-0004, ROSEMOUNT . . . . .	20-64-15
00855-0478-0001, ROSEMOUNT . . . . .	20-64-15
00855-0488-0003, ROSEMOUNT . . . . .	20-64-15
00855-1727-0001, ROSEMOUNT . . . . .	20-64-15
017832-3000, SABRITEC . . . . .	20-61-19
03-06-1022, MOLEX . . . . .	20-64-17
03-06-1121, MOLEX . . . . .	20-64-17
03-06-1122, MOLEX . . . . .	20-64-17
03-06-2022, MOLEX . . . . .	20-64-17
03-06-2024, MOLEX . . . . .	20-64-17
03-06-2121, MOLEX . . . . .	20-64-17
03-06-2122, MOLEX . . . . .	20-64-17
04-035303-087, FENWAL . . . . .	20-62-14
10-244011-3P, AMPHENOL/BENDIX . . . . .	20-61-18
10-244014-7H, AMPHENOL/BENDIX . . . . .	20-61-18
10-244014-7P, AMPHENOL/BENDIX . . . . .	20-61-18
10-244014-7S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244016-1P, AMPHENOL/BENDIX . . . . .	20-61-18
10-244016-1S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244016-8S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244020-27S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244022-14S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244211-3P, AMPHENOL/BENDIX . . . . .	20-61-18
10-244611-3S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244611-4S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244612-3S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244614-5S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244614-7G, AMPHENOL/BENDIX . . . . .	20-61-18
10-244614-7P, AMPHENOL/BENDIX . . . . .	20-61-18
10-244614-7S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244616-1S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244618-12S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244618-4S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244620-27S, AMPHENOL/BENDIX . . . . .	20-61-18

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

10-244622-14P, AMPHENOL/BENDIX . . . . .	20-61-18
10-244811-3S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244811-4S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244812-3S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244814-5S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244814-7S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244814-9S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244816-1S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244816-8S, AMPHENOL/BENDIX . . . . .	20-61-18
10-244818-12S, AMPHENOL/BENDIX . . . . .	20-61-18
10-584762, AMPHENOL . . . . .	20-63-13
10-584796, AMPHENOL . . . . .	20-63-13
10-60479-(), BOEING . . . . .	20-61-11
10-60479-1, BOEING . . . . .	20-61-11
10-60479-12, BOEING . . . . .	20-61-11
10-60479-126, BOEING . . . . .	20-61-11
10-60479-127, BOEING . . . . .	20-61-11
10-60479-128, BOEING . . . . .	20-61-11
10-60479-129, BOEING . . . . .	20-61-11
10-60479-16, BOEING . . . . .	20-61-11
10-60479-17, BOEING . . . . .	20-61-11
10-60479-18, BOEING . . . . .	20-61-11
10-60479-19, BOEING . . . . .	20-61-11
10-60479-5, BOEING . . . . .	20-61-11
10-60479-6, BOEING . . . . .	20-61-11
10-60479-66, BOEING . . . . .	20-61-11
10-60479-67, BOEING . . . . .	20-61-11
10-60479-68, BOEING . . . . .	20-61-11
10-60479-69, BOEING . . . . .	20-61-11
10-61430-222-(), BOEING . . . . .	20-71-12
10-61430-411-(), BOEING . . . . .	20-71-12
10-628485-472, AMPHENOL . . . . .	20-63-19
1039, LINDBERG . . . . .	20-62-17
1075-13-9, KINGS ELECTRONICS . . . . .	20-51-15
1075-13-9, KINGS ELECTRONICS . . . . .	20-51-17
115-5051, VEAM . . . . .	20-62-12
115-5051-1, VEAM . . . . .	20-62-12
115-5066, AMPHENOL . . . . .	20-35-26
115-5066, VEAM . . . . .	20-62-12
115-5074, AMPHENOL . . . . .	20-35-26
115-5074, VEAM . . . . .	20-62-12
1167060, HUGHES AIRCRAFT . . . . .	20-72-22
1167061, HUGHES AIRCRAFT . . . . .	20-72-22
1167062-1, HUGHES AIRCRAFT . . . . .	20-72-22
1167062-2, HUGHES AIRCRAFT . . . . .	20-72-22
1167062-3, HUGHES AIRCRAFT . . . . .	20-72-22
1167063-1, HUGHES AIRCRAFT . . . . .	20-72-22
1167063-2, HUGHES AIRCRAFT . . . . .	20-72-22

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

1167063-3, HUGHES AIRCRAFT . . . . .	20-72-22
1167A(), CINCH . . . . .	20-61-11
1201-11-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-12-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-13-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-14-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-20-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-21-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-22-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-23-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-24-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-25-9, KINGS ELECTRONICS . . . . .	20-51-15
1201-6-9, KINGS ELECTRONICS . . . . .	20-51-15
1202-20-9, KINGS ELECTRONICS . . . . .	20-51-15
1202-23-9, KINGS ELECTRONICS . . . . .	20-51-15
1202-26-9, KINGS ELECTRONICS . . . . .	20-51-15
1203-13-9, KINGS ELECTRONICS . . . . .	20-51-15
1203-14-9, KINGS ELECTRONICS . . . . .	20-51-15
1203-15-9, KINGS ELECTRONICS . . . . .	20-51-15
1203-16-9, KINGS ELECTRONICS . . . . .	20-51-15
1203-19-9, KINGS ELECTRONICS . . . . .	20-51-15
1203-20-9, KINGS ELECTRONICS . . . . .	20-51-15
1203-21-9, KINGS ELECTRONICS . . . . .	20-51-15
1203-4-9, KINGS ELECTRONICS . . . . .	20-51-15
1205-20-9, KINGS ELECTRONICS . . . . .	20-51-15
1205-31-9, KINGS ELECTRONICS . . . . .	20-51-15
1205-47-9, KINGS ELECTRONICS . . . . .	20-51-15
1205-48-9, KINGS ELECTRONICS . . . . .	20-51-15
1205-49-9, KINGS ELECTRONICS . . . . .	20-51-15
1205-61-9, KINGS ELECTRONICS . . . . .	20-51-15
1205-62-9, KINGS ELECTRONICS . . . . .	20-51-15
1206-11-9, KINGS ELECTRONICS . . . . .	20-51-15
1206-21-9, KINGS ELECTRONICS . . . . .	20-51-15
1206-22-9, KINGS ELECTRONICS . . . . .	20-51-15
1206-26-9, KINGS ELECTRONICS . . . . .	20-51-15
1206-29-9, KINGS ELECTRONICS . . . . .	20-51-15
1206-30-9, KINGS ELECTRONICS . . . . .	20-51-15
121-11-9, KINGS ELECTRONICS . . . . .	20-51-15
121-24-9, KINGS ELECTRONICS . . . . .	20-51-15
121-35-9, KINGS ELECTRONICS . . . . .	20-51-15
121-36-9, KINGS ELECTRONICS . . . . .	20-51-15
121-37-9, KINGS ELECTRONICS . . . . .	20-51-15
121-38-9, KINGS ELECTRONICS . . . . .	20-51-15
121-39-9, KINGS ELECTRONICS . . . . .	20-51-15
121-40-9, KINGS ELECTRONICS . . . . .	20-51-15
121-44-9, KINGS ELECTRONICS . . . . .	20-51-15
121-45-9, KINGS ELECTRONICS . . . . .	20-51-15
121-46-9, KINGS ELECTRONICS . . . . .	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

121-52-9, KINGS ELECTRONICS. . . . .	20-51-15
122-37-9, KINGS ELECTRONICS. . . . .	20-51-15
123-22-5, KINGS ELECTRONICS. . . . .	20-51-15
123-23-9, KINGS ELECTRONICS. . . . .	20-51-15
123-24-9, KINGS ELECTRONICS. . . . .	20-51-15
123-26-9, KINGS ELECTRONICS. . . . .	20-51-15
125-101-9, KINGS. . . . .	20-71-14
125-101-9, KINGS ELECTRONICS. . . . .	20-51-15
125-105-9, KINGS. . . . .	20-71-14
125-105-9, KINGS ELECTRONICS. . . . .	20-51-15
125-126-9, KINGS ELECTRONICS. . . . .	20-51-15
125-60-9, KINGS ELECTRONICS. . . . .	20-51-15
125-61-9, KINGS ELECTRONICS. . . . .	20-51-15
125-69-9, KINGS ELECTRONICS. . . . .	20-51-15
125-88-9, KINGS ELECTRONICS. . . . .	20-51-15
125-89-9, KINGS ELECTRONICS. . . . .	20-51-15
125-91-9, KINGS ELECTRONICS. . . . .	20-51-15
125-92-9, KINGS. . . . .	20-71-14
125-92-9, KINGS ELECTRONICS. . . . .	20-51-15
125-94-9, KINGS. . . . .	20-71-14
125-94-9, KINGS ELECTRONICS. . . . .	20-51-15
125-95-9, KINGS ELECTRONICS. . . . .	20-51-15
125-96-9, KINGS. . . . .	20-71-14
125-96-9, KINGS ELECTRONICS. . . . .	20-51-15
125-98-9, KINGS. . . . .	20-71-14
126-14-5, KINGS ELECTRONICS. . . . .	20-51-15
126-50-9, KINGS ELECTRONICS. . . . .	20-51-15
126-58-9, KINGS ELECTRONICS. . . . .	20-51-15
126-59-9, KINGS ELECTRONICS. . . . .	20-51-15
126-64-9, KINGS ELECTRONICS. . . . .	20-51-15
126-67-9, KINGS ELECTRONICS. . . . .	20-51-15
126-70-9, KINGS ELECTRONICS. . . . .	20-51-15
126-71-9, KINGS ELECTRONICS. . . . .	20-51-15
126-73-9, KINGS ELECTRONICS. . . . .	20-51-15
126-74-9, KINGS ELECTRONICS. . . . .	20-51-15
126-78-1, KINGS ELECTRONICS. . . . .	20-51-15
126-78-6, KINGS ELECTRONICS. . . . .	20-51-15
126-85-9, KINGS ELECTRONICS. . . . .	20-51-15
140124-0022, ITT CANNON. . . . .	20-12-11
140124-0024, ITT CANNON. . . . .	20-12-11
140124-0028, ITT CANNON. . . . .	20-12-11
140124-0032, ITT CANNON. . . . .	20-12-11
140124-0039, ITT CANNON. . . . .	20-12-11
140124-0040, ITT CANNON. . . . .	20-12-11
140124-0041, ITT CANNON. . . . .	20-12-11
140124-0042, ITT CANNON. . . . .	20-12-11
140126-0005, ITT CANNON. . . . .	20-12-11
140143-0000, ITT CANNON. . . . .	20-12-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

140143-0007, ITT CANNON . . . . .	20-12-11
140143-0008, ITT CANNON . . . . .	20-12-11
150900-0302, ITT GREMAR . . . . .	20-40-15
150900-0303, ITT GREMAR . . . . .	20-40-15
150900-2341, ITT GREMAR . . . . .	20-40-15
150900-2342, ITT GREMAR . . . . .	20-40-15
150900-2343, ITT GREMAR . . . . .	20-40-15
1525-4-9, KINGS ELECTRONICS . . . . .	20-51-15
1625-02P, MOLEX . . . . .	20-64-17
1625-12P, MOLEX . . . . .	20-64-17
1625-12P1, MOLEX . . . . .	20-64-17
1625-12R, MOLEX . . . . .	20-64-17
1625-12R1, MOLEX . . . . .	20-64-17
1625-2R2, MOLEX . . . . .	20-64-17
169493, WAVE LAB . . . . .	20-62-18
17-10090, AMPHENOL . . . . .	20-72-11
17-10090, WPI . . . . .	20-72-11
17-10090-1, AMPHENOL . . . . .	20-72-11
17-10090-1, WPI . . . . .	20-72-11
17-10150, AMPHENOL . . . . .	20-72-11
17-10150, WPI . . . . .	20-72-11
17-10150-1, AMPHENOL . . . . .	20-72-11
17-10150-1, WPI . . . . .	20-72-11
17-10250, AMPHENOL . . . . .	20-72-11
17-10250, WPI . . . . .	20-72-11
17-10250-1, AMPHENOL . . . . .	20-72-11
17-10250-1, WPI . . . . .	20-72-11
17-10370, AMPHENOL . . . . .	20-72-11
17-10370, WPI . . . . .	20-72-11
17-10370-1, AMPHENOL . . . . .	20-72-11
17-10370-1, WPI . . . . .	20-72-11
17-10500, AMPHENOL . . . . .	20-72-11
17-10500, WPI . . . . .	20-72-11
17-10500-1, AMPHENOL . . . . .	20-72-11
17-10500-1, WPI . . . . .	20-72-11
17-20090, AMPHENOL . . . . .	20-72-11
17-20090, WPI . . . . .	20-72-11
17-20090-1, AMPHENOL . . . . .	20-72-11
17-20090-1, WPI . . . . .	20-72-11
17-20150, AMPHENOL . . . . .	20-72-11
17-20150, WPI . . . . .	20-72-11
17-20150-1, AMPHENOL . . . . .	20-72-11
17-20150-1, WPI . . . . .	20-72-11
17-20250, AMPHENOL . . . . .	20-72-11
17-20250, WPI . . . . .	20-72-11
17-20250-1, AMPHENOL . . . . .	20-72-11
17-20250-1, WPI . . . . .	20-72-11
17-20370, AMPHENOL . . . . .	20-72-11

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****CONNECTOR (continued)**

17-20370, WPI . . . . .	20-72-11
17-20370-1, AMPHENOL . . . . .	20-72-11
17-20370-1, WPI . . . . .	20-72-11
17-20500, AMPHENOL . . . . .	20-72-11
17-20500, WPI . . . . .	20-72-11
17-20500-1, AMPHENOL . . . . .	20-72-11
17-20500-1, WPI . . . . .	20-72-11
17-300-1, AMPHENOL . . . . .	20-72-11
17-300-1, WPI . . . . .	20-72-11
17-301-1, AMPHENOL . . . . .	20-72-11
17-301-1, WPI . . . . .	20-72-11
17-302-1, AMPHENOL . . . . .	20-72-11
17-302-1, WPI . . . . .	20-72-11
17-303-1, AMPHENOL . . . . .	20-72-11
17-303-1, WPI . . . . .	20-72-11
17-304-1, AMPHENOL . . . . .	20-72-11
17-304-1, WPI . . . . .	20-72-11
17-305-1, AMPHENOL . . . . .	20-72-11
17-305-1, WPI . . . . .	20-72-11
17-306-1, AMPHENOL . . . . .	20-72-11
17-306-1, WPI . . . . .	20-72-11
17-307-1, AMPHENOL . . . . .	20-72-11
17-307-1, WPI . . . . .	20-72-11
17-308-1, AMPHENOL . . . . .	20-72-11
17-308-1, WPI . . . . .	20-72-11
17-309-1, AMPHENOL . . . . .	20-72-11
17-309-1, WPI . . . . .	20-72-11
172160-1, AMP. . . . .	20-42-01
172168-1, AMP. . . . .	20-42-01
191-314-0001, METHODE . . . . .	20-82-13
191-341-0003, METHODE . . . . .	20-82-13
191-366-0006, METHODE . . . . .	20-82-13
192-314-0007, METHODE . . . . .	20-82-13
192-341-0005, METHODE . . . . .	20-82-13
192-366-0010, METHODE . . . . .	20-82-13
1965-12-9, KINGS. . . . .	20-53-05
2-329083-1, AMP . . . . .	20-51-21
204-18291-2, BOEING. . . . .	20-40-15
208598-3, AMP. . . . .	20-71-14
208972-3, AMP. . . . .	20-71-14
208973-5, AMP. . . . .	20-71-14
208973-6, AMP. . . . .	20-71-14
208973-8, AMP. . . . .	20-71-14
208977-4, AMP. . . . .	20-71-14
208977-5, AMP. . . . .	20-71-14
208977-7, AMP. . . . .	20-71-14
213(), AMPHENOL . . . . .	20-71-12
213395-1, AMP. . . . .	20-72-17

**20-CROSS REFERENCE INDEX**

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****CONNECTOR (continued)**

213396-1, AMP. . . . .	20-72-17
2430-1-(), KINGS ELECTRONICS . . . . .	20-51-15
2430-2-(), KINGS ELECTRONICS . . . . .	20-51-15
2431-74-(), KINGS ELECTRONICS. . . . .	20-51-15
2431-76-(), KINGS ELECTRONICS. . . . .	20-51-15
2431-80-(), KINGS ELECTRONICS. . . . .	20-51-15
2431-81-(), KINGS ELECTRONICS. . . . .	20-51-15
2431-82-(), KINGS ELECTRONICS. . . . .	20-51-15
2431-83-(), KINGS ELECTRONICS. . . . .	20-51-15
2431-84-(), KINGS ELECTRONICS. . . . .	20-51-15
2431-85-(), KINGS ELECTRONICS. . . . .	20-51-15
2431-87-(), KINGS ELECTRONICS. . . . .	20-51-15
2431-88-(), KINGS ELECTRONICS. . . . .	20-51-15
2431-89-(), KINGS ELECTRONICS. . . . .	20-51-15
2435-74-(), KINGS ELECTRONICS. . . . .	20-51-15
2435-77-(), KINGS ELECTRONICS. . . . .	20-51-15
2435-81-(), KINGS ELECTRONICS. . . . .	20-51-15
2435-82-(), KINGS ELECTRONICS. . . . .	20-51-15
2435-83-(), KINGS ELECTRONICS. . . . .	20-51-15
2435-84-(), KINGS ELECTRONICS. . . . .	20-51-15
2435-87-(), KINGS ELECTRONICS. . . . .	20-51-15
2436-81-(), KINGS ELECTRONICS. . . . .	20-51-15
2436-83-(), KINGS ELECTRONICS. . . . .	20-51-15
2436-85-(), KINGS ELECTRONICS. . . . .	20-51-15
246-3000R()-(), AMPHENOL . . . . .	20-61-19
246-3006R()-(), AMPHENOL . . . . .	20-61-19
2564-3, LINDBERG. . . . .	20-62-17
2564-4, LINDBERG. . . . .	20-62-17
26574, ENDEVCO. . . . .	20-35-11
280T10()-(), BOEING. . . . .	20-61-11
280T1000-1, BOEING . . . . .	20-61-11
280T1000-10, BOEING . . . . .	20-61-11
280T1000-100, BOEING . . . . .	20-61-11
280T1000-101, BOEING . . . . .	20-61-11
280T1000-102, BOEING . . . . .	20-61-11
280T1000-103, BOEING . . . . .	20-61-11
280T1000-104, BOEING . . . . .	20-61-11
280T1000-105, BOEING . . . . .	20-61-11
280T1000-106, BOEING . . . . .	20-61-11
280T1000-107, BOEING . . . . .	20-61-11
280T1000-108, BOEING . . . . .	20-61-11
280T1000-109, BOEING . . . . .	20-61-11
280T1000-11, BOEING . . . . .	20-61-11
280T1000-110, BOEING . . . . .	20-61-11
280T1000-111, BOEING . . . . .	20-61-11
280T1000-112, BOEING . . . . .	20-61-11
280T1000-113, BOEING . . . . .	20-61-11
280T1000-114, BOEING . . . . .	20-61-11

**20-CROSS REFERENCE INDEX**



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

#### CONNECTOR (continued)

280T1000-115, BOEING	20-61-11
280T1000-116, BOEING	20-61-11
280T1000-117, BOEING	20-61-11
280T1000-118, BOEING	20-61-11
280T1000-119, BOEING	20-61-11
280T1000-12, BOEING	20-61-11
280T1000-120, BOEING	20-61-11
280T1000-121, BOEING	20-61-11
280T1000-122, BOEING	20-61-11
280T1000-123, BOEING	20-61-11
280T1000-124, BOEING	20-61-11
280T1000-125, BOEING	20-61-11
280T1000-126, BOEING	20-61-11
280T1000-127, BOEING	20-61-11
280T1000-128, BOEING	20-61-11
280T1000-129, BOEING	20-61-11
280T1000-13, BOEING	20-61-11
280T1000-132, BOEING	20-61-11
280T1000-133, BOEING	20-61-11
280T1000-134, BOEING	20-61-11
280T1000-135, BOEING	20-61-11
280T1000-136, BOEING	20-61-11
280T1000-137, BOEING	20-61-11
280T1000-138, BOEING	20-61-11
280T1000-139, BOEING	20-61-11
280T1000-14, BOEING	20-61-11
280T1000-140, BOEING	20-61-11
280T1000-141, BOEING	20-61-11
280T1000-142, BOEING	20-61-11
280T1000-143, BOEING	20-61-11
280T1000-144, BOEING	20-61-11
280T1000-145, BOEING	20-61-11
280T1000-146, BOEING	20-61-11
280T1000-147, BOEING	20-61-11
280T1000-148, BOEING	20-61-11
280T1000-149, BOEING	20-61-11
280T1000-15, BOEING	20-61-11
280T1000-150, BOEING	20-61-11
280T1000-151, BOEING	20-61-11
280T1000-152, BOEING	20-61-11
280T1000-153, BOEING	20-61-11
280T1000-154, BOEING	20-61-11
280T1000-155, BOEING	20-61-11
280T1000-156, BOEING	20-61-11
280T1000-157, BOEING	20-61-11
280T1000-158, BOEING	20-61-11
280T1000-159, BOEING	20-61-11
280T1000-16, BOEING	20-61-11

## 20-CROSS REFERENCE INDEX



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

#### CONNECTOR (continued)

280T1000-160, BOEING	20-61-11
280T1000-161, BOEING	20-61-11
280T1000-162, BOEING	20-61-11
280T1000-163, BOEING	20-61-11
280T1000-17, BOEING	20-61-11
280T1000-18, BOEING	20-61-11
280T1000-19, BOEING	20-61-11
280T1000-2, BOEING	20-61-11
280T1000-20, BOEING	20-61-11
280T1000-21, BOEING	20-61-11
280T1000-22, BOEING	20-61-11
280T1000-23, BOEING	20-61-11
280T1000-24, BOEING	20-61-11
280T1000-25, BOEING	20-61-11
280T1000-26, BOEING	20-61-11
280T1000-27, BOEING	20-61-11
280T1000-28, BOEING	20-61-11
280T1000-3, BOEING	20-61-11
280T1000-4, BOEING	20-61-11
280T1000-5, BOEING	20-61-11
280T1000-6, BOEING	20-61-11
280T1000-7, BOEING	20-61-11
280T1000-8, BOEING	20-61-11
280T1000-9, BOEING	20-61-11
280T1003-1, BOEING	20-61-11
280T1004-1, BOEING	20-61-11
280T1004-10, BOEING	20-61-11
280T1004-8, BOEING	20-61-11
280T1021-1, BOEING	20-61-11
280T1021-2, BOEING	20-61-11
280T1021-3, BOEING	20-61-11
280T1021-4, BOEING	20-61-11
280T1021-5, BOEING	20-61-11
280T1021-51, BOEING	20-61-11
280T1021-52, BOEING	20-61-11
280T1021-53, BOEING	20-61-11
280T1021-54, BOEING	20-61-11
280T1021-55, BOEING	20-61-11
280T1021-56, BOEING	20-61-11
280T1021-6, BOEING	20-61-11
280U0001-(), BOEING	20-72-17
280U0002-(), BOEING	20-72-17
280U0003-(), BOEING	20-72-17
280U0004-(), BOEING	20-72-17
280U0005-(), BOEING	20-72-17
280U0006-(), BOEING	20-72-17
280U0007-(), BOEING	20-72-17
280U001()-(), BOEING	20-61-11

## 20-CROSS REFERENCE INDEX



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

#### CONNECTOR (continued)

280U0011-(), BOEING . . . . .	20-72-17
280U0013-1, BOEING . . . . .	20-61-11
280U0013-101, BOEING . . . . .	20-61-11
280U0013-151, BOEING . . . . .	20-61-11
280U0013-152, BOEING . . . . .	20-61-11
280U0013-201, BOEING . . . . .	20-61-11
280U0013-202, BOEING . . . . .	20-61-11
280U0013-51, BOEING . . . . .	20-61-11
280U0014-1, BOEING . . . . .	20-61-11
280U0019-1, BOEING . . . . .	20-61-11
280U0019-51, BOEING . . . . .	20-61-11
280U2028-(), BOEING . . . . .	20-61-11
280U2028-100, BOEING . . . . .	20-61-11
280U2028-106, BOEING . . . . .	20-61-11
280U2028-107, BOEING . . . . .	20-61-11
280U2028-108, BOEING . . . . .	20-61-11
280U2028-109, BOEING . . . . .	20-61-11
280U2028-200, BOEING . . . . .	20-61-11
280U2028-206, BOEING . . . . .	20-61-11
280U2028-207, BOEING . . . . .	20-61-11
280U2028-208, BOEING . . . . .	20-61-11
280U2028-209, BOEING . . . . .	20-61-11
280U2028-300, BOEING . . . . .	20-61-11
280U2028-306, BOEING . . . . .	20-61-11
280U2028-400, BOEING . . . . .	20-61-11
280U2028-406, BOEING . . . . .	20-61-11
280W0002-1, BOEING . . . . .	20-61-11
284U1147-(), AMP . . . . .	20-72-17
284U1147-1(), AMP . . . . .	20-72-17
284U1147-10(), AIE . . . . .	20-72-17
284U1147-1072, AIE . . . . .	20-72-17
284U1147-11(), AIE . . . . .	20-72-17
284U1147-1166, AIE . . . . .	20-72-17
284U1147-12(), AIE . . . . .	20-72-17
284U1147-13(), AIE . . . . .	20-72-17
284U1147-14(), AIE . . . . .	20-72-17
284U1147-16(), AIE . . . . .	20-72-17
284U1147-17(), AIE . . . . .	20-72-17
284U1147-18(), AIE . . . . .	20-72-17
284U1147-1824, AIE . . . . .	20-72-17
284U1147-1826, AIE . . . . .	20-72-17
284U1147-1831, AIE . . . . .	20-72-17
284U1147-1834, AIE . . . . .	20-72-17
284U1147-1837, AIE . . . . .	20-72-17
284U1147-1840, AIE . . . . .	20-72-17
284U1147-1919, AIE . . . . .	20-72-17
284U1147-2(), AMP . . . . .	20-72-17
284U1147-2001, AIE . . . . .	20-72-17

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

284U1147-3(), AMP	20-72-17
284U1147-4(), AMP	20-72-17
284U1147-6(), AMP	20-72-17
284U1147-7(), AMP	20-72-17
284U1147-72, AMP	20-72-17
284U1147-8(), AMP	20-72-17
284U1147-831, AMP	20-72-17
284U1147-834, AMP	20-72-17
284U1147-837, AMP	20-72-17
284U1147-840, AMP	20-72-17
285-00-10-002-(), CINCH	20-74-11
285-00-20-002-(), CINCH	20-74-11
286-00-10-002-(), CINCH	20-74-11
286-00-10-006-(), CINCH	20-74-11
286-00-20-002-(), CINCH	20-74-11
286-00-20-006-(), CINCH	20-74-11
2971-2-(), KINGS ELECTRONICS	20-51-15
2971-3-(), KINGS ELECTRONICS	20-51-15
2971-4-(), KINGS ELECTRONICS	20-51-15
2971-5-(), KINGS ELECTRONICS	20-51-15
2971-6-(), KINGS ELECTRONICS	20-51-15
2971-7-(), KINGS ELECTRONICS	20-51-15
2971-8-(), KINGS ELECTRONICS	20-51-15
2975-2-(), KINGS ELECTRONICS	20-51-15
2975-4-(), KINGS ELECTRONICS	20-51-15
2975-5-(), KINGS ELECTRONICS	20-51-15
2975-6-(), KINGS ELECTRONICS	20-51-15
2976-1-(), KINGS ELECTRONICS	20-51-15
2976-3-(), KINGS ELECTRONICS	20-51-15
2981-1-(), KINGS ELECTRONICS	20-51-15
2981-3-(), KINGS ELECTRONICS	20-51-15
2981-4-(), KINGS ELECTRONICS	20-51-15
2981-5-(), KINGS ELECTRONICS	20-51-15
2981-6-(), KINGS ELECTRONICS	20-51-15
2981-7-(), KINGS ELECTRONICS	20-51-15
2981-8-(), KINGS ELECTRONICS	20-51-15
2985-2-(), KINGS ELECTRONICS	20-51-15
2985-3-(), KINGS ELECTRONICS	20-51-15
2985-4-(), KINGS ELECTRONICS	20-51-15
2986-1-(), KINGS ELECTRONICS	20-51-15
2986-3-(), KINGS ELECTRONICS	20-51-15
3-208972-3, AMP	20-71-14
30-00053-(), SOURIAU	20-72-21
30-00054-(), SOURIAU	20-72-21
300044-001, INCON	20-82-13
300046-003, INCON	20-82-13
300048-004, INCON	20-82-13
300052-001, INCON	20-82-13

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

300055-001, INCON . . . . .	20-82-13
300206-001, INCON . . . . .	20-82-13
30382-1, DAGE . . . . .	20-51-20
30382-1, DAGE . . . . .	20-53-05
30383-1, DAGE . . . . .	20-51-20
30391-1, DAGE . . . . .	20-53-05
31-30383-1, AMPHENOL . . . . .	20-51-20
331719, AMP . . . . .	20-51-26
331843, AMP . . . . .	20-51-26
348-(), AMPHENOL/BENDIX . . . . .	20-61-30
35303-10, FENWAL . . . . .	20-62-14
35303-100, FENWAL . . . . .	20-62-14
35303-11, FENWAL . . . . .	20-62-14
35303-12, FENWAL . . . . .	20-62-14
35303-141, FENWAL . . . . .	20-62-14
35303-142, FENWAL . . . . .	20-62-14
35303-64, FENWAL . . . . .	20-62-14
35303-66, FENWAL . . . . .	20-62-14
35303-67, FENWAL . . . . .	20-62-14
35303-68, FENWAL . . . . .	20-62-14
35303-73, FENWAL . . . . .	20-62-14
35303-75, FENWAL . . . . .	20-62-14
35303-77, FENWAL . . . . .	20-62-14
35303-8, FENWAL . . . . .	20-62-14
35303-87, FENWAL . . . . .	20-62-14
35303-9, FENWAL . . . . .	20-62-14
35303-90, FENWAL . . . . .	20-62-14
35303-91, FENWAL . . . . .	20-62-14
35303-94, FENWAL . . . . .	20-62-14
35303-95, FENWAL . . . . .	20-62-14
35303-97, FENWAL . . . . .	20-62-14
35303-98, FENWAL . . . . .	20-62-14
35303-99, FENWAL . . . . .	20-62-14
40-742-2045-00, SMITHS INDUSTRIES . . . . .	20-15-31
40-742-2045-26, SMITHS INDUSTRIES . . . . .	20-15-31
40-742-2046-00, SMITHS INDUSTRIES . . . . .	20-15-31
40-742-2046-26, SMITHS INDUSTRIES . . . . .	20-15-31
40-742-3211-00U, SMITHS INDUSTRIES . . . . .	20-15-35
40-742-4026-00U, SMITHS INDUSTRIES . . . . .	20-15-35
40-742-4026-01U, SMITHS INDUSTRIES . . . . .	20-15-35
40-742-4028-00, SMITHS INDUSTRIES . . . . .	20-15-31
40-742-4030-00U, SMITHS INDUSTRIES . . . . .	20-15-35
40-742-6024-00, SMITHS INDUSTRIES . . . . .	20-15-31
40-742-6024-26, SMITHS INDUSTRIES . . . . .	20-15-31
40-742-6025-29, SMITHS INDUSTRIES . . . . .	20-15-31
40-742-6045, GE AVATION . . . . .	20-15-44
40-742-7044-01U, SMITHS INDUSTRIES . . . . .	20-15-35
40-742-7045-01U, SMITHS INDUSTRIES . . . . .	20-15-35

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

40-742-7056, SMITHS INDUSTRIES . . . . .	20-15-41
40-743-1158-26, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-1159-00, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-1521-00, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-1521-26, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-1521-27, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-1521-28, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-1521-29, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-1530-00, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-1641-00, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-1641-27, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-1641-28, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-1644-28, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-1656-28, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-2325-26, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-3182-29, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-3189-00U, SMITHS INDUSTRIES . . . . .	20-15-33
40-743-3196-00U, SMITHS INDUSTRIES . . . . .	20-15-33
40-743-4761-00, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-4761-26, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-4761-27, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-4761-28, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-4768-28, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-4773-00, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-4773-26, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-5103-26, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-5120-00, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-6213-26, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-6213-27, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-6217-28, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-6347-00, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-6347-26, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-6348-00, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-6821-00U, SMITHS INDUSTRIES . . . . .	20-15-33
40-743-6987-00U, SMITHS INDUSTRIES . . . . .	20-15-33
40-743-7396-00, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-7396-26, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-7396-27, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-7396-28, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-7396-29, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-7399-00, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-7399-26, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-7413-26, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-7416-00, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-7416-28, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-7419-00, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-8581-29, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-862, SMITHS INDUSTRIES . . . . .	20-15-42

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

40-743-9136-29, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-9137-26, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-9137-27, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-9142-00, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-9142-29, SMITHS INDUSTRIES . . . . .	20-15-31
40-743-9414-00U, SMITHS INDUSTRIES . . . . .	20-15-33
40-743-9414-05U, SMITHS INDUSTRIES . . . . .	20-15-33
40-743-9414-06U, SMITHS INDUSTRIES . . . . .	20-15-33
40-743-9414-07U, SMITHS INDUSTRIES . . . . .	20-15-33
40-743-9445-00U, SMITHS INDUSTRIES . . . . .	20-15-33
40-743-9445-05U, SMITHS INDUSTRIES . . . . .	20-15-33
40-743-9445-06U, SMITHS INDUSTRIES . . . . .	20-15-33
40-743-9445-07U, SMITHS INDUSTRIES . . . . .	20-15-33
40-743-9525, SMITHS INDUSTRIES . . . . .	20-15-43
40-743-9698, SMITHS INDUSTRIES . . . . .	20-15-43
40-743-9699, SMITHS INDUSTRIES . . . . .	20-15-43
40-743-9734-00U, SMITHS INDUSTRIES . . . . .	20-15-33
40-743-9734-05U, SMITHS INDUSTRIES . . . . .	20-15-33
40-743-9734-06U, SMITHS INDUSTRIES . . . . .	20-15-33
40-743-9734-07U, SMITHS INDUSTRIES . . . . .	20-15-33
40-743-9744-00U, SMITHS INDUSTRIES . . . . .	20-15-33
40-743-9744-05U, SMITHS INDUSTRIES . . . . .	20-15-33
40-743-9744-06U, SMITHS INDUSTRIES . . . . .	20-15-33
40-743-9744-07U, SMITHS INDUSTRIES . . . . .	20-15-33
400015, WAVE LAB . . . . .	20-62-18
40229, ANDREWS . . . . .	20-51-51
42250KS(), MATRIX . . . . .	20-63-14
42839KS(), MATRIX . . . . .	20-63-14
42839KS14S5SX-190, MATRIX, INSTALLATION TORQUE . . . . .	20-60-06
44267KS-10SL-3BN-745, HI-REL . . . . .	20-63-14
44ASN, ANDREWS . . . . .	20-51-51
48-00R(), AMPHENOL . . . . .	20-61-11
48-00R16-10S, AMPHENOL . . . . .	20-35-13
48-03R(), AMPHENOL . . . . .	20-61-11
48-06R(), AMPHENOL . . . . .	20-61-11
48-10R(), AMPHENOL . . . . .	20-61-11
48-10R14-2/1P, AMPHENOL . . . . .	20-61-11
48-10R14-2/1P7, AMPHENOL . . . . .	20-61-11
48-10R14-2/1P8, AMPHENOL . . . . .	20-61-11
48-10R14-2/1P9, AMPHENOL . . . . .	20-61-11
48-16R(), AMPHENOL . . . . .	20-61-11
48-16R14-2/1S, AMPHENOL . . . . .	20-61-11
48-16R14-2/1S6, AMPHENOL . . . . .	20-61-11
48-16R14-2/1S7, AMPHENOL . . . . .	20-61-11
48-16R14-2/1S8, AMPHENOL . . . . .	20-61-11
48-16R14-2/1S9, AMPHENOL . . . . .	20-61-11
48-16R18-10/1S, AMPHENOL . . . . .	20-61-11
48-16R18-10/1S6, AMPHENOL . . . . .	20-61-11

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****CONNECTOR (continued)**

48-16R18-10/1S7, AMPHENOL . . . . .	20-61-11
48-16R18-10/1S8, AMPHENOL . . . . .	20-61-11
48-16R18-10/1S9, AMPHENOL . . . . .	20-61-11
48-16V(), AMPHENOL . . . . .	20-61-11
48-63N(), AMPHENOL . . . . .	20-61-11
48-7005, AMPHENOL . . . . .	20-61-11
48-7164-(), AMPHENOL . . . . .	20-61-11
514-74-13-02, ESTERLINE-MASON . . . . .	20-84-00
514-74-13-02, WESTERN INDICATOR . . . . .	20-84-00
51444-103, GRAVINER . . . . .	20-62-15
51444-106, GRAVINER . . . . .	20-62-15
51444-118, GRAVINER . . . . .	20-62-15
51444-123-1D, GRAVINER . . . . .	20-62-15
51444-124-1D, GRAVINER . . . . .	20-62-15
51444-129, GRAVINER . . . . .	20-62-15
51444-129-1D, GRAVINER . . . . .	20-62-15
51444-130, GRAVINER . . . . .	20-62-15
51444-130-1D, GRAVINER . . . . .	20-62-15
51444-137, GRAVINER . . . . .	20-62-15
51444-138, GRAVINER . . . . .	20-62-15
51444-144, GRAVINER . . . . .	20-62-15
51444-145, GRAVINER . . . . .	20-62-15
52752-(), MATRIX . . . . .	20-63-13
52753-(), MATRIX . . . . .	20-63-13
52761-(), MATRIX . . . . .	20-63-13
582551-1, AMP. . . . .	20-82-11
582583-1, AMP. . . . .	20-82-11
582591-1, AMP. . . . .	20-82-11
60B40052-3, BOEING . . . . .	20-62-13
60B40052-4, BOEING . . . . .	20-62-13
620410207, RADIALL . . . . .	20-71-14
620600694, RADIALL . . . . .	20-71-14
65B414()-(), BOEING . . . . .	20-61-11
65B41429-1, BOEING . . . . .	20-61-11
65B41429-10, BOEING . . . . .	20-61-11
65B41429-11, BOEING . . . . .	20-61-11
65B41429-12, BOEING . . . . .	20-61-11
65B41429-13, BOEING . . . . .	20-61-11
65B41429-14, BOEING . . . . .	20-61-11
65B41429-15, BOEING . . . . .	20-61-11
65B41429-16, BOEING . . . . .	20-61-11
65B41429-17, BOEING . . . . .	20-61-11
65B41429-18, BOEING . . . . .	20-61-11
65B41429-19, BOEING . . . . .	20-61-11
65B41429-2, BOEING . . . . .	20-61-11
65B41429-20, BOEING . . . . .	20-61-11
65B41429-3, BOEING . . . . .	20-61-11
65B41429-4, BOEING . . . . .	20-61-11

**20-CROSS REFERENCE INDEX**

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****CONNECTOR (continued)**

65B41429-5, BOEING . . . . .	20-61-11
65B41429-6, BOEING . . . . .	20-61-11
65B41429-7, BOEING . . . . .	20-61-11
65B41429-8, BOEING . . . . .	20-61-11
65B41429-9, BOEING . . . . .	20-61-11
65B41430-1, BOEING . . . . .	20-61-11
65B41430-10, BOEING . . . . .	20-61-11
65B41430-11, BOEING . . . . .	20-61-11
65B41430-12, BOEING . . . . .	20-61-11
65B41430-13, BOEING . . . . .	20-61-11
65B41430-14, BOEING . . . . .	20-61-11
65B41430-15, BOEING . . . . .	20-61-11
65B41430-16, BOEING . . . . .	20-61-11
65B41430-17, BOEING . . . . .	20-61-11
65B41430-18, BOEING . . . . .	20-61-11
65B41430-19, BOEING . . . . .	20-61-11
65B41430-2, BOEING . . . . .	20-61-11
65B41430-20, BOEING . . . . .	20-61-11
65B41430-3, BOEING . . . . .	20-61-11
65B41430-4, BOEING . . . . .	20-61-11
65B41430-5, BOEING . . . . .	20-61-11
65B41430-6, BOEING . . . . .	20-61-11
65B41430-7, BOEING . . . . .	20-61-11
65B41430-8, BOEING . . . . .	20-61-11
65B41430-9, BOEING . . . . .	20-61-11
65B41431-1, BOEING . . . . .	20-61-11
65B41431-10, BOEING . . . . .	20-61-11
65B41431-11, BOEING . . . . .	20-61-11
65B41431-12, BOEING . . . . .	20-61-11
65B41431-13, BOEING . . . . .	20-61-11
65B41431-14, BOEING . . . . .	20-61-11
65B41431-15, BOEING . . . . .	20-61-11
65B41431-16, BOEING . . . . .	20-61-11
65B41431-17, BOEING . . . . .	20-61-11
65B41431-18, BOEING . . . . .	20-61-11
65B41431-19, BOEING . . . . .	20-61-11
65B41431-2, BOEING . . . . .	20-61-11
65B41431-20, BOEING . . . . .	20-61-11
65B41431-3, BOEING . . . . .	20-61-11
65B41431-4, BOEING . . . . .	20-61-11
65B41431-5, BOEING . . . . .	20-61-11
65B41431-6, BOEING . . . . .	20-61-11
65B41431-7, BOEING . . . . .	20-61-11
65B41431-8, BOEING . . . . .	20-61-11
65B41431-9, BOEING . . . . .	20-61-11
65B41432-1, BOEING . . . . .	20-61-11
65B41432-10, BOEING . . . . .	20-61-11
65B41432-11, BOEING . . . . .	20-61-11

**20-CROSS REFERENCE INDEX**

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****CONNECTOR (continued)**

65B41432-12, BOEING	20-61-11
65B41432-13, BOEING	20-61-11
65B41432-14, BOEING	20-61-11
65B41432-15, BOEING	20-61-11
65B41432-16, BOEING	20-61-11
65B41432-17, BOEING	20-61-11
65B41432-18, BOEING	20-61-11
65B41432-19, BOEING	20-61-11
65B41432-2, BOEING	20-61-11
65B41432-20, BOEING	20-61-11
65B41432-3, BOEING	20-61-11
65B41432-4, BOEING	20-61-11
65B41432-5, BOEING	20-61-11
65B41432-6, BOEING	20-61-11
65B41432-7, BOEING	20-61-11
65B41432-8, BOEING	20-61-11
65B41432-9, BOEING	20-61-11
67-906, AMPHENOL	20-61-12
67-907, AMPHENOL	20-61-12
69-()R(), AMPHENOL	20-61-13
69-0()R, AMPHENOL	20-61-13
69-6()R, AMPHENOL	20-61-13
69B4181()-(), BOEING	20-61-11
69B41813-1, BOEING	20-61-11
69B41813-2, BOEING	20-61-11
69B41813-3, BOEING	20-61-11
69B41813-4, BOEING	20-61-11
69B41813-5, BOEING	20-61-11
69B41813-6, BOEING	20-61-11
69B41813-7, BOEING	20-61-11
69B41813-8, BOEING	20-61-11
69B41814-1, BOEING	20-61-11
69B41814-2, BOEING	20-61-11
69B41814-3, BOEING	20-61-11
69B41814-4, BOEING	20-61-11
69B41814-5, BOEING	20-61-11
69B41814-6, BOEING	20-61-11
69B41815-1, BOEING	20-61-11
69B41815-2, BOEING	20-61-11
69B41815-3, BOEING	20-61-11
69B41815-4, BOEING	20-61-11
69B41815-5, BOEING	20-61-11
69B41815-6, BOEING	20-61-11
69B41816-1, BOEING	20-61-11
69B41816-2, BOEING	20-61-11
69B41816-3, BOEING	20-61-11
69B41816-4, BOEING	20-61-11
69B41816-5, BOEING	20-61-11

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

69B41816-6, BOEING . . . . .	20-61-11
69B41817-1, BOEING . . . . .	20-61-11
69B41817-2, BOEING . . . . .	20-61-11
69B41817-3, BOEING . . . . .	20-61-11
69B41817-4, BOEING . . . . .	20-61-11
69B41817-5, BOEING . . . . .	20-61-11
69B41817-6, BOEING . . . . .	20-61-11
69B41817-7, BOEING . . . . .	20-61-11
69B41817-8, BOEING . . . . .	20-61-11
69B41817-9, BOEING . . . . .	20-61-11
69B41818-1, BOEING . . . . .	20-61-11
69B41818-10, BOEING . . . . .	20-61-11
69B41818-11, BOEING . . . . .	20-61-11
69B41818-2, BOEING . . . . .	20-61-11
69B41818-3, BOEING . . . . .	20-61-11
69B41818-4, BOEING . . . . .	20-61-11
69B41818-5, BOEING . . . . .	20-61-11
69B41818-6, BOEING . . . . .	20-61-11
69B41818-7, BOEING . . . . .	20-61-11
69B41818-8, BOEING . . . . .	20-61-11
69B41818-9, BOEING . . . . .	20-61-11
69B41819-1, BOEING . . . . .	20-61-11
69B41819-2, BOEING . . . . .	20-61-11
69B41819-3, BOEING . . . . .	20-61-11
69B41819-4, BOEING . . . . .	20-61-11
71550SE-12T-03SN-960, HI-REL . . . . .	20-63-14
75-500, CABLEWAVE . . . . .	20-51-90
751-10-9, KINGS ELECTRONICS . . . . .	20-51-15
751-11-9, KINGS ELECTRONICS . . . . .	20-51-15
751-2-9, KINGS ELECTRONICS . . . . .	20-51-15
751-20-9, KINGS ELECTRONICS . . . . .	20-51-15
751-22-9, KINGS ELECTRONICS . . . . .	20-51-15
751-3-9, KINGS ELECTRONICS . . . . .	20-51-15
751-4-9, KINGS ELECTRONICS . . . . .	20-51-15
752-43-9, KINGS ELECTRONICS . . . . .	20-51-15
755-129-9, KINGS ELECTRONICS . . . . .	20-51-15
755-78-9, KINGS ELECTRONICS . . . . .	20-51-15
755-79-9, KINGS ELECTRONICS . . . . .	20-51-15
755-93-9, KINGS ELECTRONICS . . . . .	20-51-15
756-10-9, KINGS ELECTRONICS . . . . .	20-51-15
756-16-9, KINGS ELECTRONICS . . . . .	20-51-15
756-4-9, KINGS ELECTRONICS . . . . .	20-51-15
76-500, CABLEWAVE . . . . .	20-51-90
791-10-9, KINGS ELECTRONICS . . . . .	20-51-15
791-11-9, KINGS ELECTRONICS . . . . .	20-51-15
791-5-9, KINGS ELECTRONICS . . . . .	20-51-15
791-6-9, KINGS ELECTRONICS . . . . .	20-51-15
791-7-9, KINGS ELECTRONICS . . . . .	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

791-8-9, KINGS ELECTRONICS. . . . .	20-51-15
791-9-9, KINGS ELECTRONICS. . . . .	20-51-15
795-15-9, KINGS ELECTRONICS. . . . .	20-51-15
795-16-9, KINGS ELECTRONICS. . . . .	20-51-15
795-20-9, KINGS ELECTRONICS. . . . .	20-51-15
795-21-9, KINGS ELECTRONICS. . . . .	20-51-15
795-23-9, KINGS ELECTRONICS. . . . .	20-51-15
795-29-9, KINGS ELECTRONICS. . . . .	20-51-15
795-30-9, KINGS ELECTRONICS. . . . .	20-51-15
795-33-9, KINGS ELECTRONICS. . . . .	20-51-15
796-15-9, KINGS ELECTRONICS. . . . .	20-51-15
796-17-9, KINGS ELECTRONICS. . . . .	20-51-15
796-18-9, KINGS ELECTRONICS. . . . .	20-51-15
796-19-9, KINGS ELECTRONICS. . . . .	20-51-15
796-4-9, KINGS ELECTRONICS. . . . .	20-51-15
82-175, AMPHENOL. . . . .	20-51-41
82-3292, AMPHENOL. . . . .	20-51-42
821-2-9, KINGS ELECTRONICS. . . . .	20-51-15
821-3-9, KINGS ELECTRONICS. . . . .	20-51-15
821-4-9, KINGS ELECTRONICS. . . . .	20-51-15
821-5-9, KINGS ELECTRONICS. . . . .	20-51-15
821-6-9, KINGS ELECTRONICS. . . . .	20-51-15
821-7-9, KINGS ELECTRONICS. . . . .	20-51-15
821-9-9, KINGS ELECTRONICS. . . . .	20-51-15
823-1-9, KINGS ELECTRONICS. . . . .	20-51-15
823-2-9, KINGS ELECTRONICS. . . . .	20-51-15
825-10-9, KINGS ELECTRONICS. . . . .	20-51-15
825-11-9, KINGS ELECTRONICS. . . . .	20-51-15
825-12-9, KINGS ELECTRONICS. . . . .	20-51-15
825-14-9, KINGS ELECTRONICS. . . . .	20-51-15
825-7-9, KINGS ELECTRONICS. . . . .	20-51-15
826-10-9, KINGS ELECTRONICS. . . . .	20-51-15
826-8-9, KINGS ELECTRONICS. . . . .	20-51-15
826-9-9, KINGS ELECTRONICS. . . . .	20-51-15
83-59, AMPHENOL. . . . .	20-53-05
84-() SERIES, AMPHENOL. . . . .	20-61-26
84-() SERIES, WIRE-PRO. . . . .	20-61-26
84-(), WIRE-PRO. . . . .	20-61-26
841-1-9, KINGS ELECTRONICS. . . . .	20-51-15
843-2-9, KINGS ELECTRONICS. . . . .	20-51-15
845-3-9, KINGS ELECTRONICS. . . . .	20-51-15
846-5-9, KINGS ELECTRONICS. . . . .	20-51-15
850-27-4, ROSEMOUNT. . . . .	20-64-15
871-59-3, KINGS ELECTRONICS. . . . .	20-51-15
875-100-3, KINGS ELECTRONICS. . . . .	20-51-15
875-105-3, KINGS ELECTRONICS. . . . .	20-51-15
875-91-3, KINGS ELECTRONICS. . . . .	20-51-15
875-92-3, KINGS ELECTRONICS. . . . .	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

875564, WALTER KIDDE . . . . .	20-62-16
876-64-3, KINGS ELECTRONICS. . . . .	20-51-15
876288, WALTER KIDDE . . . . .	20-62-16
876633, WALTER KIDDE . . . . .	20-62-16
876635, WALTER KIDDE . . . . .	20-62-16
877535, WALTER KIDDE . . . . .	20-62-16
877536, WALTER KIDDE . . . . .	20-62-16
878238-01, WALTER KIDDE . . . . .	20-62-16
878238-02, WALTER KIDDE . . . . .	20-62-16
878239-01, WALTER KIDDE . . . . .	20-62-16
878239-02, WALTER KIDDE . . . . .	20-62-16
878550-01, WALTER KIDDE . . . . .	20-62-16
878551-01, WALTER KIDDE . . . . .	20-62-16
878581-01, WALTER KIDDE . . . . .	20-62-16
878582-01, WALTER KIDDE . . . . .	20-62-16
892(), SOURIAU. . . . .	20-63-14
892-2-9, KINGS ELECTRONICS. . . . .	20-51-15
892-3-9, KINGS ELECTRONICS. . . . .	20-51-15
895-3-9, KINGS ELECTRONICS. . . . .	20-51-15
895-6-9, KINGS ELECTRONICS. . . . .	20-51-15
896-4-9, KINGS ELECTRONICS. . . . .	20-51-15
8D513M, SOURIAU . . . . .	20-63-19
9440(), MATRIX . . . . .	20-63-14
9446(), MATRIX . . . . .	20-63-14
9816(), MATRIX . . . . .	20-63-14
AA(), AMP. . . . .	20-71-12
AAY-()-12(), AMPHENOL-PYLE . . . . .	20-61-11
AAY-()-17(), AMPHENOL-PYLE . . . . .	20-61-11
AD(), AMP. . . . .	20-71-12
AFP30-0052-AA, AIRFONE . . . . .	20-64-17
AFP30-0054-AA, AIRFONE . . . . .	20-64-17
AM(), AMP . . . . .	20-71-12
AM1R57P6031, AMP . . . . .	20-72-18
AMC02PA03B, VIKING ELECTRONICS . . . . .	20-61-28
AMC02PA03R, VIKING ELECTRONICS . . . . .	20-61-28
AMC02PA03W, VIKING ELECTRONICS. . . . .	20-61-28
AMC02RA03B, VIKING ELECTRONICS. . . . .	20-61-28
AMC02RA03R, VIKING ELECTRONICS. . . . .	20-61-28
AMC02RA03RWC, VIKING ELECTRONICS . . . . .	20-61-28
AMC02RA03W, VIKING ELECTRONICS. . . . .	20-61-28
AMC12RA03B, VIKING ELECTRONICS . . . . .	20-61-28
AMC12RA03R, VIKING ELECTRONICS . . . . .	20-61-28
AMC12RA03W, VIKING ELECTRONICS. . . . .	20-61-28
AN3115-1, QPL . . . . .	20-62-19
AN3116-2, ITT CANNON. . . . .	20-62-22
APC32PS(), ARIZONA INTEGRATED ELECTRONICS. . . . .	20-72-19
APC32RP(), ARIZONA INTEGRATED ELECTRONICS. . . . .	20-72-19
APC60PS(), ARIZONA INTEGRATED ELECTRONICS. . . . .	20-72-19

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

APC60RP(), ARIZONA INTEGRATED ELECTRONICS. . . . .	20-72-19
ARINC 404, 117432-2001, SABRITEC. . . . .	20-83-02
ARINC 600, INSTALLATION CONDITIONS. . . . .	20-60-06
ASSEMBLY WITH 65B47866-() CABLE, 10-244(), BENDIX . . . . .	20-35-11
ASSEMBLY WITH 65B47866-() CABLE, 9816KS(), MATRIX . . . . .	20-35-11
ASSEMBLY WITH 65B47866-() CABLE, BACC45F(), BOEING. . . . .	20-35-11
ASSEMBLY WITH 65B47866-() CABLE, BACC63BN(), BOEING . . . . .	20-35-11
ASSEMBLY WITH 65B47866-() CABLE, BACC63BP(), BOEING . . . . .	20-35-11
ASSEMBLY WITH 65B47866-() CABLE, BACC63BR(), BOEING . . . . .	20-35-11
ASSEMBLY WITH 65B47866-() CABLE, BACC63BT(), BOEING. . . . .	20-35-11
ASSEMBLY WITH 65B47866-() CABLE, BACC63BV(), BOEING . . . . .	20-35-11
ASSEMBLY WITH 65B47866-() CABLE, BACC63CB(), BOEING . . . . .	20-35-11
ASSEMBLY WITH 65B47866-() CABLE, BACC63CC(), BOEING . . . . .	20-35-11
ASSEMBLY WITH 65B47866-() CABLE, BACC63CM(), BOEING . . . . .	20-35-11
ASSEMBLY WITH 65B47866-() CABLE, BACC63CN(), BOEING . . . . .	20-35-11
ASSEMBLY WITH 65B47866-() CABLE, CN0986-(), CINCH . . . . .	20-35-11
ASSEMBLY WITH 65B47866-() CABLE, FRF(), ITT CANNON . . . . .	20-35-11
ASSEMBLY WITH 65B47866-() CABLE, MT30K-(), MATRIX . . . . .	20-35-11
ASSEMBLY WITH 65B47866-() CABLE, MT37K-(), MATRIX . . . . .	20-35-11
ASSEMBLY, FRONT RELEASE CONTACTS . . . . .	20-61-00
ASSEMBLY, REAR RELEASE CONTACTS . . . . .	20-63-00
ATM08PA30, VIKING ELECTRONICS . . . . .	20-72-26
ATM08PA50, VIKING ELECTRONICS . . . . .	20-72-26
ATM08RA30, VIKING ELECTRONICS . . . . .	20-72-26
ATM08RA50, VIKING ELECTRONICS . . . . .	20-72-26
ATM12PA00, VIKING ELECTRONICS . . . . .	20-72-26
ATM12PA10, VIKING ELECTRONICS . . . . .	20-72-26
ATM12PA30, VIKING ELECTRONICS . . . . .	20-72-26
ATM12RA00, VIKING ELECTRONICS . . . . .	20-72-26
ATM12RA10, VIKING ELECTRONICS . . . . .	20-72-26
AV667, AVIBANK. . . . .	20-62-20
AV697, AVIBANK. . . . .	20-62-20
AXR-(), ITT CANNON. . . . .	20-64-12
BACC45F(), BOEING . . . . .	20-35-22
BACC45FL(), BOEING . . . . .	20-61-11
BACC45FM(), BOEING. . . . .	20-61-11
BACC45FM14-7P, BOEING. . . . .	20-35-13
BACC45FM16-10S, BOEING. . . . .	20-35-13
BACC45FN(), BOEING . . . . .	20-61-11
BACC45FP(), BOEING . . . . .	20-61-11
BACC45FS(), BOEING . . . . .	20-61-11
BACC45FT(), BOEING . . . . .	20-61-11
BACC63AE(), BOEING. . . . .	20-61-11
BACC63AE, BOEING . . . . .	20-35-26
BACC63AF(), BOEING . . . . .	20-61-11
BACC63AF, BOEING . . . . .	20-35-26
BACC63AF24-30P10, BOEING . . . . .	20-14-51
BACC63BD, BOEING. . . . .	20-61-19

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

BACC63BE, BOEING . . . . .	20-61-19
BACC63BN(), BOEING . . . . .	20-61-11
BACC63BP(), BOEING . . . . .	20-35-22
BACC63BP(), BOEING . . . . .	20-61-11
BACC63BP, BOEING . . . . .	20-35-17
BACC63BP18D8SN, BOEING . . . . .	20-61-11
BACC63BR(), BOEING . . . . .	20-63-13
BACC63BT(), BOEING . . . . .	20-63-13
BACC63BV(), BOEING . . . . .	20-35-22
BACC63BV(), BOEING . . . . .	20-61-11
BACC63BV14-7P, BOEING . . . . .	20-35-13
BACC63BV16-10S, BOEING . . . . .	20-35-13
BACC63BW, BOEING . . . . .	20-61-19
BACC63BY, BOEING . . . . .	20-61-19
BACC63CB(), BOEING . . . . .	20-61-11
BACC63CC(), BOEING . . . . .	20-61-11
BACC63CD, BOEING . . . . .	20-61-19
BACC63CE, BOEING . . . . .	20-61-19
BACC63CE24()22S, BOEING . . . . .	20-61-19
BACC63CM(), BOEING . . . . .	20-63-13
BACC63CN(), BOEING . . . . .	20-63-13
BACC63CP(), BOEING . . . . .	20-60-06
BACC63CR(), BOEING . . . . .	20-60-06
BACC63CS(), BOEING . . . . .	20-61-11
BACC63CT, BOEING . . . . .	20-63-19
BACC63CU, BOEING . . . . .	20-63-19
BACC63DB, BOEING . . . . .	20-63-19
BACC63DC, BOEING . . . . .	20-63-19
BACC63DE(), AMPHENOL PCD . . . . .	20-63-02
BACC63DF(), AMPHENOL PCD . . . . .	20-63-02
BACC63DG(), AMPHENOL PCD . . . . .	20-63-02
BACC63DH(), AMPHENOL PCD . . . . .	20-63-02
BACC63DP, GLENAIR . . . . .	20-62-23
BACC63DR, GLENAIR . . . . .	20-62-23
BACC63DT, GLENAIR . . . . .	20-62-23
BACC63DU, GLENAIR . . . . .	20-62-23
BACC63DV, GLENAIR . . . . .	20-62-23
BACC63DW(), BOEING . . . . .	20-61-11
BACC63DY(), BOEING . . . . .	20-61-11
BACC63ED(), AMPHENOL PCD . . . . .	20-63-03
BACC63EE(), AMPHENOL PCD . . . . .	20-63-03
BACC63EF(), AMPHENOL PCD . . . . .	20-63-03
BACC63X(), BOEING . . . . .	20-61-11
BACC63X, BOEING . . . . .	20-35-26
BACC63Y(), BOEING . . . . .	20-61-11
BACC63Y, BOEING . . . . .	20-35-26
BACC65AA(), BOEING . . . . .	20-74-12
BACC65AB(), BOEING . . . . .	20-74-12

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****CONNECTOR (continued)**

BACC65AJ(), BOEING	20-72-24
BACC65AK(), BOEING	20-72-24
BACC65AL(), BOEING	20-72-25
BACC65AN(), BOEING	20-74-13
BACC65AP(), BOEING	20-74-13
BACC65AV(), BOEING	20-74-13
BACC65AW(), BOEING	20-74-13
BACC65BC12( ), BOEING	20-74-16
BACC65BC2( ), BOEING	20-74-16
BACC65BD12( ), BOEING	20-74-16
BACC65BD2( ), BOEING	20-74-16
BACC65BJ-E, BOEING	20-74-14
BACC65BJ-F, BOEING	20-74-14
BACC65BK-E, BOEING	20-74-14
BACC65BK-F, BOEING	20-74-14
BACC65BP1, BOEING	20-74-18
BACC65BR1, BOEING	20-74-18
BACC65BU(), BOEING	20-74-19
BACC65BV(), BOEING	20-74-19
BACC65CA(), BOEING	20-74-19
BACC65K114, BOEING	20-82-13
BACC65K41, BOEING	20-82-13
BACC65K66, BOEING	20-82-13
BACC65L114, BOEING	20-82-13
BACC65L41, BOEING	20-82-13
BACC65L66, BOEING	20-82-13
BACC65M(), BOEING	20-73-00
BACC65M(), BOEING	20-73-01
BACC65N(), BOEING	20-73-00
BACC65N(), BOEING	20-73-01
BACC65P(), BOEING	20-73-00
BACC65P22244A(), BOEING	20-73-01
BACC65R(), BOEING	20-73-00
BACC65R22211A(), BOEING	20-73-01
BACC65T114, QPL	20-72-18
BACC65T66, QPL	20-72-18
BACC66(), BOEING	20-35-22
BACC66E, QPL	20-72-18
BACC66F11, BOEING	20-71-14
BACC66F12, BOEING	20-71-14
BACC66F13, BOEING	20-71-14
BACC66G, QPL	20-72-18
BACC66H122, BOEING	20-71-14
BACC66H123, BOEING	20-71-14
BACC66H125, BOEING	20-71-14
BACC66H21, BOEING	20-71-14
BACC66H22, BOEING	20-71-14
BACC66H23, BOEING	20-71-14

**20-CROSS REFERENCE INDEX**

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****CONNECTOR (continued)**

BACC66H24, BOEING	20-71-14
BACC66H25, BOEING	20-71-14
BACC66H26, BOEING	20-71-14
BACC66H27, BOEING	20-71-14
BACC66H28, BOEING	20-71-14
BACC66H29, BOEING	20-71-14
BACC66H30, BOEING	20-71-14
BACC66H31, BOEING	20-71-14
BACC66H32, BOEING	20-71-14
BACC66H33, BOEING	20-71-14
BACC66H34, BOEING	20-71-14
BACC66H35, BOEING	20-71-14
BACC66H36, BOEING	20-71-14
BACC66H37, BOEING	20-71-14
BACC66H38, BOEING	20-71-14
BACC66H39, BOEING	20-71-14
BACC66H40, BOEING	20-71-14
BACC66H41, BOEING	20-71-14
BACC66H42, BOEING	20-71-14
BACC66H43, BOEING	20-71-14
BACC66H44, BOEING	20-71-14
BACC66H45, BOEING	20-71-14
BACC66H46, BOEING	20-71-14
BACC66H47, BOEING	20-71-14
BACC66H48, BOEING	20-71-14
BACC66H49, BOEING	20-71-14
BACC66H50, BOEING	20-71-14
BACC66H51, BOEING	20-71-14
BACC66J, QPL	20-72-18
BACC66K31, BOEING	20-71-14
BACC66K32, BOEING	20-71-14
BACC66K33, BOEING	20-71-14
BACC66K34, BOEING	20-71-14
BACC66K35, BOEING	20-71-14
BACC66K36, BOEING	20-71-14
BACC66K37, BOEING	20-71-14
BACC66K38, BOEING	20-71-14
BACC66K39, BOEING	20-71-14
BACC66K40, BOEING	20-71-14
BACC66K41, BOEING	20-71-14
BACC68C(), BOEING	20-12-21
BACC68D(), BOEING	20-12-21
BD(), AMP.	20-71-12
BGG1P-044D0001, ITT CANNON	20-71-14
BGG1P-044D1001, ITT CANNON	20-71-14
BGG1P-069D0201, ITT CANNON	20-71-14
BGG1P-069D1201, ITT CANNON	20-71-14
BGG1P-134A1301, ITT CANNON	20-71-14

**20-CROSS REFERENCE INDEX**

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****CONNECTOR (continued)**

BGG2P-220D0101, ITT CANNON . . . . .	20-71-14
BGG2P-220D1101, ITT CANNON . . . . .	20-71-14
BGG2P-254D0101, ITT CANNON . . . . .	20-71-14
BGG2P-254D1101, ITT CANNON . . . . .	20-71-14
BGG2P-272D0101, ITT CANNON . . . . .	20-71-14
BGG2P-272D1101, ITT CANNON . . . . .	20-71-14
BGG2P-406D0101, ITT CANNON . . . . .	20-71-14
BGG2P-406D1101, ITT CANNON . . . . .	20-71-14
BGG3P-084D0101, ITT CANNON . . . . .	20-71-14
BGG3P-084D1101, ITT CANNON . . . . .	20-71-14
BKA()-155-3, ITT CANNON . . . . .	20-71-14
BKA()-234-3, ITT CANNON . . . . .	20-71-14
BKA()-A234-3, ITT CANNON . . . . .	20-71-14
BKA()1-100-3, ITT CANNON . . . . .	20-71-14
BKA()1-120-3, ITT CANNON . . . . .	20-71-14
BKA()1-124-3, ITT CANNON . . . . .	20-71-14
BKA()1-125-3, ITT CANNON . . . . .	20-71-14
BKA()2-042-3, ITT CANNON . . . . .	20-71-14
BKA()2-066-3, ITT CANNON . . . . .	20-71-14
BKA()2-105-3, ITT CANNON . . . . .	20-71-14
BKA()2-133-3, ITT CANNON . . . . .	20-71-14
BKA()2-137-3, ITT CANNON . . . . .	20-71-14
BKA()2-154-3, ITT CANNON . . . . .	20-71-14
BKA()2-155M-3, ITT CANNON . . . . .	20-71-14
BKA()2-158-3, ITT CANNON . . . . .	20-71-14
BKA()2-158M-3, ITT CANNON . . . . .	20-71-14
BKA()2-165M-3, ITT CANNON . . . . .	20-71-14
BKA()2-167-3, ITT CANNON . . . . .	20-71-14
BKA()2-167T-3, ITT CANNON . . . . .	20-71-14
BKA()2-187-3, ITT CANNON . . . . .	20-71-14
BKA()2-188-3, ITT CANNON . . . . .	20-71-14
BKA()2-215-3, ITT CANNON . . . . .	20-71-14
BKA()2-234M-3, ITT CANNON . . . . .	20-71-14
BKA()2-244-322130, ITT CANNON . . . . .	20-71-14
BKA()2-246-3, ITT CANNON . . . . .	20-71-14
BKA()2-248-3, ITT CANNON . . . . .	20-71-14
BKA()2-253-3, ITT CANNON . . . . .	20-71-14
BKA()2-313-3, ITT CANNON . . . . .	20-71-14
BKA()2-324-3, ITT CANNON . . . . .	20-71-14
BKA()2-340-3, ITT CANNON . . . . .	20-71-14
BKA()2-359-3, ITT CANNON . . . . .	20-71-14
BKA()2-370-3, ITT CANNON . . . . .	20-71-14
BKA()2-385-3, ITT CANNON . . . . .	20-71-14
BKA()2-400-3, ITT CANNON . . . . .	20-71-14
BKA()2-67402-203, ITT CANNON . . . . .	20-71-14
BKA()2-67402-229, ITT CANNON . . . . .	20-71-14
BKA()2-67402-316, ITT CANNON . . . . .	20-71-14
BKA()2-67403-22-51, ITT CANNON . . . . .	20-71-14

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

BKA()2-67403-22-56, ITT CANNON . . . . .	20-71-14
BKA()2-68134-101, ITT CANNON . . . . .	20-71-14
BKA()2-A137-3, ITT CANNON . . . . .	20-71-14
BKA()2-A158M-3, ITT CANNON . . . . .	20-71-14
BKA()2-A164-3, ITT CANNON . . . . .	20-71-14
BKA()2-A234M-3, ITT CANNON . . . . .	20-71-14
BKA()2-B234-3, ITT CANNON . . . . .	20-71-14
BKA()2-B234M-3, ITT CANNON . . . . .	20-71-14
BKA()2-BW234-3, ITT CANNON . . . . .	20-71-14
BKA()2-V155M-3, ITT CANNON . . . . .	20-71-14
BKA()3-067404-0080, ITT CANNON . . . . .	20-71-14
BKA()3-271C-3, ITT CANNON . . . . .	20-71-14
BKA()3-271T-3, ITT CANNON . . . . .	20-71-14
BKA()3-494-3, ITT CANNON . . . . .	20-71-14
BKA()3-496-3, ITT CANNON . . . . .	20-71-14
BKA()3-537-3, ITT CANNON . . . . .	20-71-14
BKA()3-608-3, ITT CANNON . . . . .	20-71-14
BKA()3-626-3, ITT CANNON . . . . .	20-71-14
BKA()3-67404-62, ITT CANNON . . . . .	20-71-14
BKA()3-67404-80, ITT CANNON . . . . .	20-71-14
BKA()3-67404-91, ITT CANNON . . . . .	20-71-14
BKA()3-67405-54, ITT CANNON . . . . .	20-71-14
BKA()3-67405-54-40, ITT CANNON . . . . .	20-71-14
BKA()3-68135-21, ITT CANNON . . . . .	20-71-14
BKA()3-68135-25, ITT CANNON . . . . .	20-71-14
BKA()3-68135-95, ITT CANNON . . . . .	20-71-14
BKA()3-713-3, ITT CANNON . . . . .	20-71-14
BKA()3-718-3, ITT CANNON . . . . .	20-71-14
BKA()3-770-3, ITT CANNON . . . . .	20-71-14
BKA()3-784-3, ITT CANNON . . . . .	20-71-14
BKA()3-800-3, ITT CANNON . . . . .	20-71-14
BKA()3-A713-3, ITT CANNON . . . . .	20-71-14
BKA()3-A759-3, ITT CANNON . . . . .	20-71-14
BMS24264R()-B(), DEUTSCH . . . . .	20-61-11
BMS24266R()-B(), DEUTSCH . . . . .	20-61-11
BSK-12( ), PYLE-NATIONAL . . . . .	20-63-13
BSK-17( ), PYLE-NATIONAL . . . . .	20-63-13
C-06()5-99, TRI-STAR . . . . .	20-71-14
C-06A3-B305-1100, TRI-STAR . . . . .	20-71-14
C-06A5-9940-1100, TRI-STAR . . . . .	20-71-14
C-06BC-01()-1112, TRI-STAR . . . . .	20-72-21
C0909(), CINCH . . . . .	20-61-11
C48-00R(), CINCH . . . . .	20-61-11
C48-03R(), CINCH . . . . .	20-61-11
C48-06R(), CINCH . . . . .	20-61-11
C48-10R(), CINCH . . . . .	20-61-11
C48-16R(), CINCH . . . . .	20-61-11
CA270-8, ITT CANNON . . . . .	20-62-22

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

CA3100KR(), ITT CANNON . . . . .	20-62-26
CA3106KR(), ITT CANNON . . . . .	20-62-26
CA66278-101, ITT CANNON . . . . .	20-61-19
CA66278-105, ITT CANNON . . . . .	20-61-19
CA66278-93, ITT CANNON . . . . .	20-61-19
CA66279-102, ITT CANNON . . . . .	20-61-19
CA66279-106, ITT CANNON . . . . .	20-23-01
CA66279-106, ITT CANNON . . . . .	20-61-19
CA66279-94, ITT CANNON . . . . .	20-61-19
CA66286-45, ITT CANNON . . . . .	20-61-19
CA66287-50, ITT CANNON . . . . .	20-61-19
CA66420-1, ITT CANNON . . . . .	20-61-19
CA66422-9, ITT CANNON . . . . .	20-61-19
CA66432-2, ITT CANNON . . . . .	20-61-19
CA66434-6, ITT CANNON . . . . .	20-61-19
CA80503-14, ITT CANNON . . . . .	20-61-19
CAMA(), CORY COMPONENTS . . . . .	20-72-10
CAMA(), TRI-STAR . . . . .	20-72-10
CB02-15P, CORY COMPONENTS . . . . .	20-72-22
CB02-15P, TRI-STAR . . . . .	20-72-22
CB02-15S, CORY COMPONENTS . . . . .	20-72-22
CB02-15S, TRI-STAR . . . . .	20-72-22
CB02C-15P, CORY COMPONENTS . . . . .	20-72-22
CB02C-15P, TRI-STAR . . . . .	20-72-22
CB02C-15S, CORY COMPONENTS . . . . .	20-72-22
CB02C-15S, TRI-STAR . . . . .	20-72-22
CB05-15P, CORY COMPONENTS . . . . .	20-72-22
CB05-15P, TRI-STAR . . . . .	20-72-22
CB05-15S, CORY COMPONENTS . . . . .	20-72-22
CB05-15S, TRI-STAR . . . . .	20-72-22
CB06-15P, CORY COMPONENTS . . . . .	20-72-22
CB06-15P, TRI-STAR . . . . .	20-72-22
CB06-15S, CORY COMPONENTS . . . . .	20-72-22
CB06-15S, TRI-STAR . . . . .	20-72-22
CB08-15P, CORY COMPONENTS . . . . .	20-72-22
CB08-15P, TRI-STAR . . . . .	20-72-22
CB08-15S, CORY COMPONENTS . . . . .	20-72-22
CB08-15S, TRI-STAR . . . . .	20-72-22
CB08T-15P, CORY COMPONENTS . . . . .	20-72-22
CB08T-15P, TRI-STAR . . . . .	20-72-22
CB08T-15S, CORY COMPONENTS . . . . .	20-72-22
CB08T-15S, TRI-STAR . . . . .	20-72-22
CB24P-4, CORY COMPONENTS . . . . .	20-72-22
CB24P-4, TRI-STAR . . . . .	20-72-22
CBCX12R-1, CORY COMPONENTS . . . . .	20-72-22
CBCX12R-1, TRI-STAR . . . . .	20-72-22
CBMA(), CORY COMPONENTS . . . . .	20-72-10
CBMA(), TRI-STAR . . . . .	20-72-10

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

CBME05-15S, CORY COMPONENTS . . . . .	20-72-22
CBME05-15S, TRI-STAR . . . . .	20-72-22
CBRE02-15P-1, CORY COMPONENTS . . . . .	20-72-22
CBRE02-15P-1, TRI-STAR . . . . .	20-72-22
CBRE02C-15P, CORY COMPONENTS . . . . .	20-72-22
CBRE02C-15P, TRI-STAR . . . . .	20-72-22
CBX12PM-1A, CORY COMPONENTS . . . . .	20-72-22
CBX12PM-1A, TRI-STAR . . . . .	20-72-22
CCMA(), CORY COMPONENTS . . . . .	20-72-10
CCMA(), TRI-STAR . . . . .	20-72-10
CDMA(), CORY COMPONENTS . . . . .	20-72-10
CDMA(), TRI-STAR . . . . .	20-72-10
CE9307-(), ITT CANNON . . . . .	20-40-00
CE9307-10, ITT CANNON . . . . .	20-71-11
CE9307-11, ITT CANNON . . . . .	20-71-11
CE9307-18, ITT CANNON . . . . .	20-71-11
CE9307-19, ITT CANNON . . . . .	20-71-11
CEMA(), CORY COMPONENTS . . . . .	20-72-10
CEMA(), TRI-STAR . . . . .	20-72-10
CG505M1-03, VIBRO-METER . . . . .	20-35-11
CG505M3-01, VIBRO-METER . . . . .	20-35-11
CLEANING, GENERAL CONDITIONS . . . . .	20-60-01
CN0900-329, CINCH . . . . .	20-61-11
CN0906-02E14-12S, CINCH . . . . .	20-61-12
CN0906-06E14-12P, CINCH . . . . .	20-61-12
CN0940-1, CINCH . . . . .	20-61-11
CN0940-12, CINCH . . . . .	20-61-11
CN0940-126, CINCH . . . . .	20-61-11
CN0940-127, CINCH . . . . .	20-61-11
CN0940-128, CINCH . . . . .	20-61-11
CN0940-129, CINCH . . . . .	20-61-11
CN0940-16, CINCH . . . . .	20-61-11
CN0940-17, CINCH . . . . .	20-61-11
CN0940-18, CINCH . . . . .	20-61-11
CN0940-19, CINCH . . . . .	20-61-11
CN0940-5, CINCH . . . . .	20-61-11
CN0940-6, CINCH . . . . .	20-61-11
CN0940-66, CINCH . . . . .	20-61-11
CN0940-67, CINCH . . . . .	20-61-11
CN0940-68, CINCH . . . . .	20-61-11
CN0940-69, CINCH . . . . .	20-61-11
CN0966(), CINCH . . . . .	20-61-11
CN0967(), CINCH . . . . .	20-61-11
CN0977(), CINCH . . . . .	20-61-11
CN0986(), CINCH . . . . .	20-61-11
CN1004-(), CINCH . . . . .	20-61-11
CN1020A(), CINCH . . . . .	20-61-11
CN1021A(), CINCH . . . . .	20-61-11

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### CONNECTOR (continued)

CN1068A22A55N, CINCH . . . . .	20-60-06
CN1156-2, CINCH. . . . .	20-61-11
CN1156-4, CINCH. . . . .	20-61-11
CN1159-11, CINCH. . . . .	20-61-11
CN1159-12, CINCH. . . . .	20-61-11
COAX, GENERAL CONDITIONS FOR ASSEMBLY. . . . .	20-51-00
COAX, L42ENT, ANDREWS, CONNECTOR ASSEMBLY. . . . .	20-51-52
COVER, WIRE WRAP. . . . .	20-72-18
CQ()MA(), CORY COMPONENTS . . . . .	20-72-23
CQ()MA(), TRI-STAR . . . . .	20-72-23
CQ()ME(), CORY COMPONENTS . . . . .	20-72-23
CQ()ME(), TRI-STAR . . . . .	20-72-23
CQ()RA(), CORY COMPONENTS . . . . .	20-72-23
CQ()RA(), TRI-STAR . . . . .	20-72-23
CQ()RE(), CORY COMPONENTS . . . . .	20-72-23
CQ()RE(), TRI-STAR. . . . .	20-72-23
CSF3440C()-()CD, CINCH . . . . .	20-61-19
CSF3446C()-()CE, CINCH . . . . .	20-61-19
CSLT2-21P(), CORY COMPONENTS . . . . .	20-63-22
CSLT2-21P(), TRI-STAR . . . . .	20-63-22
CTZ623-6CH, CORY. . . . .	20-64-11
CWC01-1206, CORY COMPONENTS . . . . .	20-64-16
CWC01-1210, CORY COMPONENTS . . . . .	20-64-16
CWC01-1210-1, CORY COMPONENTS . . . . .	20-64-16
CWC01-2006, CORY COMPONENTS . . . . .	20-64-16
CWC01-2010, CORY COMPONENTS . . . . .	20-64-16
CWC01-2010-1, CORY COMPONENTS . . . . .	20-64-16
CWC02-1206, CORY COMPONENTS . . . . .	20-64-16
CWC02-2006, CORY COMPONENTS . . . . .	20-64-16
CWC02-2010, CORY COMPONENTS . . . . .	20-64-16
CWC02-2010-1, CORY COMPONENTS . . . . .	20-64-16
D105A067-60, W. W. FISHER . . . . .	20-40-16
D38999/20, QPL . . . . .	20-63-19
D38999/24, QPL . . . . .	20-63-19
D38999/26, QPL . . . . .	20-63-19
D5653, GRAVINER. . . . .	20-62-15
D5653-1, GRAVINER . . . . .	20-62-15
D5653-2, GRAVINER . . . . .	20-62-15
D5922, GRAVINER. . . . .	20-62-15
D5922-1, GRAVINER . . . . .	20-62-15
D5922-2, GRAVINER . . . . .	20-62-15
DAMA(), ITT CANNON. . . . .	20-72-12
DAU( ), ITT CANNON. . . . .	20-72-16
DBMA(), ITT CANNON. . . . .	20-72-12
DBMAM(), ITT CANNON . . . . .	20-72-12
DBMM25P-F179A, ITT CANNON. . . . .	20-72-18
DBMM37P-F179A, ITT CANNON. . . . .	20-72-18
DBMM50P-F179A, ITT CANNON. . . . .	20-72-18

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

DBU( ), ITT CANNON . . . . .	20-72-16
DCMA(), ITT CANNON . . . . .	20-72-12
DCU( ), ITT CANNON . . . . .	20-72-16
DD()-(), DEUTSCH . . . . .	20-61-24
DDMA(), ITT CANNON . . . . .	20-72-12
DDMAM(), ITT CANNON . . . . .	20-72-12
DDU( ), ITT CANNON . . . . .	20-72-16
DEMA(), ITT CANNON . . . . .	20-72-12
DEU( ), ITT CANNON . . . . .	20-72-16
DISASSEMBLY, FRONT RELEASE CONTACTS . . . . .	20-61-00
DISASSEMBLY, REAR RELEASE CONTACTS . . . . .	20-63-00
DL60(), DEUTSCH . . . . .	20-63-01
DL64(), DEUTSCH . . . . .	20-63-01
DL66(), DEUTSCH . . . . .	20-63-01
DL68(), DEUTSCH . . . . .	20-63-01
DPA-32-33S, ITT CANNON . . . . .	20-71-11
DPA-32-33S3, ITT CANNON . . . . .	20-71-11
DPA-6-33S, ITT CANNON . . . . .	20-71-11
DPA-6-34P, ITT CANNON . . . . .	20-71-11
DPAF-2-33S, ITT CANNON . . . . .	20-71-11
DPAL-L24C2-33S, ITT CANNON . . . . .	20-71-11
DPAMA-32-33S, ITT CANNON . . . . .	20-71-11
DPAMA-32-33S-1B, ITT CANNON . . . . .	20-71-11
DPAMA-32-33SN, ITT CANNON . . . . .	20-71-11
DPAMA-L24C2-33S, ITT CANNON . . . . .	20-71-11
DPD-32-33S-(), ITT CANNON . . . . .	20-71-11
DPD-32-34P-(), ITT CANNON . . . . .	20-71-11
DPD-45-33S-(), ITT CANNON . . . . .	20-71-11
DPD-66-33S-(), ITT CANNON . . . . .	20-71-11
DPD-A15-33S-(), ITT CANNON . . . . .	20-71-11
DPD-A8-33S-(), ITT CANNON . . . . .	20-71-11
DPD-B18-33S-(), ITT CANNON . . . . .	20-71-11
DPD-G20-33S-(), ITT CANNON . . . . .	20-71-11
DPD-G20-34P-(), ITT CANNON . . . . .	20-71-11
DPD-N10-33S-(), ITT CANNON . . . . .	20-71-11
DPD2MA-152-33S-(), ITT CANNON . . . . .	20-71-11
DPD2MB-152-33S-(), ITT CANNON . . . . .	20-71-11
DPDB-20-34P-(), ITT CANNON . . . . .	20-71-11
DPDB-58-33S-(), ITT CANNON . . . . .	20-71-11
DPDB-58-34P-(), ITT CANNON . . . . .	20-71-11
DPDB-G20-34P-(), ITT CANNON . . . . .	20-71-11
DPDB18-33S1B, ITT CANNON . . . . .	20-40-00
DPDBMA-G20-33S-(), ITT CANNON . . . . .	20-71-11
DPDBMA-G20-34P-(), ITT CANNON . . . . .	20-71-11
DPDMA-32C2-33S-(), ITT CANNON . . . . .	20-71-11
DPDMA-45-33S-(), ITT CANNON . . . . .	20-71-11
DPDMA-76-33S-(), ITT CANNON . . . . .	20-71-11
DPDMA-A32-33S-(), ITT CANNON . . . . .	20-71-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

DPDMA-G20-33S-(), ITT CANNON . . . . .	20-71-11
DPDMA-U32C2-33S-(), ITT CANNON . . . . .	20-71-11
DPDMB-32-33S-(), ITT CANNON . . . . .	20-71-11
DPDMB-45-33S-(), ITT CANNON . . . . .	20-71-11
DPDMB-76-33S-(), ITT CANNON . . . . .	20-71-11
DPDMB-78-33S-(), ITT CANNON . . . . .	20-71-11
DPDMB-U32C2-33S-(), ITT CANNON . . . . .	20-71-11
DPDN10-33S1B, ITT CANNON . . . . .	20-40-00
DPE-MA(), CANNON . . . . .	20-71-13
DPE60-33S, ITT CANNON . . . . .	20-40-00
DPX(), ITT CANNON . . . . .	20-71-11
DPX-17-33S-(), ITT CANNON . . . . .	20-71-11
DPX-22017-(), ITT CANNON . . . . .	20-71-11
DPX2-67S32C2S-33S-(), ITT CANNON . . . . .	20-71-11
DPX2-B10C3SD32C2S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2-F40C1SF40C1S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2-ZA16C3S26S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2-ZA16C3SB10C3S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2AF-32S45S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2DA-26S7S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2DA-26S7S-33B-14(), ITT CANNON . . . . .	20-71-11
DPX2EF-AC3S67S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2EF-AC3S67S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2EF-C2ESD32C2S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-()-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-00P67P-34B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-00S32W4S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-00S57S-33-(), ITT CANNON . . . . .	20-71-11
DPX2MA-00S57S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-00SD32W4S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-106P106P-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-106P106P-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-106P106P-33M-01(), ITT CANNON . . . . .	20-71-11
DPX2MA-106P106P-34F-01(), ITT CANNON . . . . .	20-71-11
DPX2MA-106P57P-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-106PD32C2S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-106S00S-34B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-106S106S-34B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-106S106S-34F-01(), ITT CANNON . . . . .	20-71-11
DPX2MA-26P26P-34B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-26S26S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-26S45S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-26S45S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-26S57S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-32W4SD106P-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-40B1S40B1S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-40S40S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-40S40S-33B-00(), ITT CANNON . . . . .	20-71-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

DPX2MA-40W1S40W1S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-40W1S40W1S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-45S40S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-45S40S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-45S45S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-45S45S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-57P-106S-34B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-57P57P-34B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-57S00S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-57S106P-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-57S106P-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-57S26S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-57S40S-32B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-57S45S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-57S45S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-57S57S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-57S57S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-57S57S-34B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-57S67S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-57S67S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-57SD106P-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-67P67P-34B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-67S32A2S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-67S32C2S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-67S32W2S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-67S67S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-67S67S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-67SA106P-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-67SD8S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-A106PA106P-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-A106PA106P-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-AC3S67S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-AC3S67S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-C2MS57S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-C2MS57S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-C2MSF40C1S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-C2MSF40C1S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-C2S57S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-C8AS67S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-C8ASC8AS-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-C8ASC8AS-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-C8CS67S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-D106P40B1S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-D106PC8AS-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-D106PD106P-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-D106PD106P-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-D32C2S57S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-D32C2S57S-33B-00(), ITT CANNON . . . . .	20-71-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

DPX2MA-D32C2S67S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-D32C2S67S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-F40C1SF40C1S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-F40C1SF40C1S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MA-W8S67S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MA-W8S67S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MB-()-()-03(), ITT CANNON . . . . .	20-71-11
DPX2MB-00P67P-34B-00(), ITT CANNON . . . . .	20-71-11
DPX2MB-00S67S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MB-00S67S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MB-26P26P-34B-00(), ITT CANNON . . . . .	20-71-11
DPX2MB-26P8P-34B-00(), ITT CANNON . . . . .	20-71-11
DPX2MB-26S26S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MB-26S67S-33A-(), ITT CANNON . . . . .	20-71-11
DPX2MB-26S8S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MB-26S8S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MB-26SC8CS-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MB-26SC8CS-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MB-40B1S40B1S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MB-40B1S40B1S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MB-40S40S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MB-40S40S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MB-40S40S-33F-(), ITT CANNON . . . . .	20-71-11
DPX2MB-45S45S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MB-45S45S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MB-57P57P-34B-00(), ITT CANNON . . . . .	20-71-11
DPX2MB-57S00S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MB-57S57S-33-00(), ITT CANNON . . . . .	20-71-11
DPX2MB-57S57S-33A-(), ITT CANNON . . . . .	20-71-11
DPX2MB-57S57S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MB-57S57S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MB-67P67P-34B-00(), ITT CANNON . . . . .	20-71-11
DPX2MB-67S67S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MB-AC3S67S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MB-AC3S67S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2MB-C2DS57S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MB-D32C2S57S-33B-(), ITT CANNON . . . . .	20-71-11
DPX2MB-D32C2S57S-33B-00(), ITT CANNON . . . . .	20-71-11
DPX2P-67S32C2S-33B-(), ITT CANNON . . . . .	20-71-11
DPX3MA-32W4S-D106P-67S-33-(), ITT CANNON . . . . .	20-71-11
DPX3MA-A318-A318-33P-(), ITT CANNON . . . . .	20-71-11
DPX3MA-B32C4S-D106P-67S-33-(), ITT CANNON . . . . .	20-71-11
DPX3MA-B96-33S-(), ITT CANNON . . . . .	20-71-11
DPX3MA-D32C4S-D106P-67S-33-(), ITT CANNON . . . . .	20-71-11
DPX3MA-E96-33S-0001, ITT CANNON . . . . .	20-71-11
DPX3MA66565-252, ITT CANNON . . . . .	20-71-11
DPX3MB-26S-67S-67S-33B-(), ITT CANNON . . . . .	20-71-11
DPX3MB-26S67S67S-33B-0001, ITT CANNON . . . . .	20-71-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

DPX3MB-78-34P-00(), ITT CANNON . . . . .	20-71-11
DPX3ME-D205-33PS-(), ITT CANNON . . . . .	20-71-11
DPX4MA-105-33S-(), ITT CANNON . . . . .	20-71-11
DPX4MA-A307-33PS-(), ITT CANNON . . . . .	20-71-11
DPX51252-1-(), ITT CANNON . . . . .	20-71-11
DPX51252-2-(), ITT CANNON . . . . .	20-71-11
DPXA-32-33S-(), ITT CANNON . . . . .	20-71-11
DPXA-32-34P-(), ITT CANNON . . . . .	20-71-11
DPXA-8-33S-(), ITT CANNON . . . . .	20-71-11
DPXAMA-26-33S-(), ITT CANNON . . . . .	20-71-11
DPXAMA-26-34P, ITT CANNON . . . . .	20-71-11
DPXAMA-26-34P-(), ITT CANNON . . . . .	20-71-11
DPXAMA-32-33S-(), ITT CANNON . . . . .	20-71-11
DPXAMA-32-34P-(), ITT CANNON . . . . .	20-71-11
DPXAMA-32B2-33S-(), ITT CANNON . . . . .	20-71-11
DPXAMA-40-33P-(), ITT CANNON . . . . .	20-71-11
DPXAMA-40-33S-(), ITT CANNON . . . . .	20-71-11
DPXAMA-45-33S-(), ITT CANNON . . . . .	20-71-11
DPXAMA-57-34P-(), ITT CANNON . . . . .	20-71-11
DPXAMA-A10-33S-(), ITT CANNON . . . . .	20-71-11
DPXAMB-26-33S, ITT CANNON . . . . .	20-71-11
DPXAMB-26-33S-(), ITT CANNON . . . . .	20-71-11
DPXAMB-26-34P, ITT CANNON . . . . .	20-71-11
DPXAMB-32B2-33S, ITT CANNON . . . . .	20-71-11
DPXAMB-32B2-33S-(), ITT CANNON . . . . .	20-71-11
DPXAMB-32W2-33S, ITT CANNON . . . . .	20-71-11
DPXAMB-32W2-33S-(), ITT CANNON . . . . .	20-71-11
DPXAMB-57-33S, ITT CANNON . . . . .	20-71-11
DPXAMB-57-33S-(), ITT CANNON . . . . .	20-71-11
DPXAMB-67-33S, ITT CANNON . . . . .	20-71-11
DPXB-17-33S-(), ITT CANNON . . . . .	20-71-11
DPXB-32-33S-(), ITT CANNON . . . . .	20-71-11
DPXB-40-33S-(), ITT CANNON . . . . .	20-71-11
DPXB-45-33S-(), ITT CANNON . . . . .	20-71-11
DPXB-8-33S-(), ITT CANNON . . . . .	20-71-11
DPXB32-33S-00(), ITT CANNON . . . . .	20-71-11
DPXBMA-()-33S-00(), ITT CANNON . . . . .	20-71-11
DPXBMA-10-33P-(), ITT CANNON . . . . .	20-71-11
DPXBMA-32-33S-(), ITT CANNON . . . . .	20-71-11
DPXBMA-32-33S-00(), ITT CANNON . . . . .	20-71-11
DPXBMA-32W4-33S-(), ITT CANNON . . . . .	20-71-11
DPXBMA-32W4-33S-00(), ITT CANNON . . . . .	20-71-11
DPXBMA-40-33S-(), ITT CANNON . . . . .	20-71-11
DPXBMA-40-33S-00(), ITT CANNON . . . . .	20-71-11
DPXBMA-45-33S-(), ITT CANNON . . . . .	20-71-11
DPXBMA-45-33S-00(), ITT CANNON . . . . .	20-71-11
DPXBMA-57-33S-(), ITT CANNON . . . . .	20-71-11
DPXBMA-57-33S-00(), ITT CANNON . . . . .	20-71-11

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### CONNECTOR (continued)

DPXBMA-57-34P-00(), ITT CANNON . . . . .	20-71-11
DPXBMA-67-33S(), ITT CANNON . . . . .	20-71-11
DPXBMA-67-33S(), ITT CANNON . . . . .	20-71-11
DPXBMA-67-33S-00(), ITT CANNON . . . . .	20-71-11
DPXBMA-6733S(), ITT CANNON . . . . .	20-71-11
DPXBMA-8-33S(), ITT CANNON . . . . .	20-71-11
DPXBMA-8-33S-00(), ITT CANNON . . . . .	20-71-11
DPXBMA-8-34S(), ITT CANNON . . . . .	20-71-11
DPXBMA-B32C4-33S(), ITT CANNON . . . . .	20-71-11
DPXBMA-D106-33P(), ITT CANNON . . . . .	20-71-11
DPXBMA-D106-33P-00(), ITT CANNON . . . . .	20-71-11
DPXBMA-D32C4-33S(), ITT CANNON . . . . .	20-71-11
DPXBMA-D32C4-33S00(), ITT CANNON . . . . .	20-71-11
DPXBMA-D32C4-34P00(), ITT CANNON . . . . .	20-71-11
DPXBMA-D32W4-33S(), ITT CANNON . . . . .	20-71-11
DPXBMB()-33S-00(), ITT CANNON . . . . .	20-71-11
DPXBMB-40-33S(), ITT CANNON . . . . .	20-71-11
DPXBMB-40-33S-00(), ITT CANNON . . . . .	20-71-11
DPXBMB-45-33S(), ITT CANNON . . . . .	20-71-11
DPXBMB-45-33S-00(), ITT CANNON . . . . .	20-71-11
DPXBMB-57-33S(), ITT CANNON . . . . .	20-71-11
DPXBMB-57-33S-00(), ITT CANNON . . . . .	20-71-11
DPXBMB-57-34P-00(), ITT CANNON . . . . .	20-71-11
DPXBMB-67-33S(), ITT CANNON . . . . .	20-71-11
DPXBMB-67-33S-00(), ITT CANNON . . . . .	20-71-11
DPXBMB-8-33S(), ITT CANNON . . . . .	20-71-11
DPXBMB-8-33S-00(), ITT CANNON . . . . .	20-71-11
DPXBME-10-33S(), ITT CANNON . . . . .	20-71-11
DPXBME-40-33S(), ITT CANNON . . . . .	20-71-11
DPXBME-57-33S(), ITT CANNON . . . . .	20-71-11
DPXBNA-67M-33S(), ITT CANNON . . . . .	20-71-11
DPXF40C1S, ITT CANNON . . . . .	20-40-00
DPXMA-26-33S(), ITT CANNON . . . . .	20-71-11
DPXRC-20C5-33A1(), ITT CANNON . . . . .	20-71-11
DS07(), DEUTSCH . . . . .	20-61-15
DSX1(), RADIALL . . . . .	20-71-15
DSX2(), RADIALL . . . . .	20-71-15
DSX3(), RADIALL . . . . .	20-71-15
DSXE(), RADIALL . . . . .	20-71-15
DSXN(), RADIALL . . . . .	20-71-15
DSXT(), RADIALL . . . . .	20-71-15
ENVIRONMENTALLY SEALED . . . . .	20-60-08
ESC10( ), QPL . . . . .	20-23-01
ESC11( ), QPL . . . . .	20-23-01
EVD9F00000, POSITRONIC INDUSTRIES . . . . .	20-15-41
FC-3400D()-(), FLIGHT . . . . .	20-61-19
FC-3406D()-(), FLIGHT . . . . .	20-61-19
FC3400D()-(), FLIGHT . . . . .	20-61-19

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

FC3400D()-()-140, FLIGHT. . . . .	20-61-19
FC3406D()-(), FLIGHT. . . . .	20-61-19
FC3406D()-()-144, FLIGHT. . . . .	20-61-19
FIRE DETECTOR, WALTER KIDDE, CLEANING. . . . .	20-60-01
FIREWALL, ITT CANNON CA()KR. . . . .	20-62-26
FLAT CABLE, BACC65M(), BOEING. . . . .	20-73-00
FLAT CABLE, BACC65M(), BOEING. . . . .	20-73-01
FLAT CABLE, BACC65N(), BOEING. . . . .	20-73-00
FLAT CABLE, BACC65N(), BOEING. . . . .	20-73-01
FLAT CABLE, BACC65P(), BOEING. . . . .	20-73-00
FLAT CABLE, BACC65P22244A(), BOEING. . . . .	20-73-01
FLAT CABLE, BACC65R(), BOEING. . . . .	20-73-00
FLAT CABLE, BACC65R22211A(), BOEING. . . . .	20-73-01
FLAT CABLE, MTC100-KT2-0023, RAYCHEM. . . . .	20-73-01
FLAT CABLE, MTC100-KT2-0036, RAYCHEM. . . . .	20-73-01
FPK-11(), PYLE-NATIONAL. . . . .	20-61-11
FPK-17(), PYLE-NATIONAL. . . . .	20-61-11
FRA()-(), ITT CANNON. . . . .	20-61-19
FRA()36-5()-747, ITT CANNON. . . . .	20-61-19
FRF()-(), ITT CANNON. . . . .	20-61-19
FRF()36-5()-747, ITT CANNON. . . . .	20-61-19
FVA()-(), ITT CANNON. . . . .	20-61-19
FVA()36-5()-747, ITT CANNON. . . . .	20-61-19
FVF()-(), ITT CANNON. . . . .	20-61-19
FVF()36-5()-747, ITT CANNON. . . . .	20-61-19
G6G12-88PNH, BURNDY. . . . .	20-51-33
G6G12-88SNH, BURNDY. . . . .	20-51-33
GC501, GLENAIR. . . . .	20-35-11
HPF052UFZL0320-BEC, SI-TAC. . . . .	20-72-18
HPF160UFZL0320-BEC, SI-TAC. . . . .	20-72-18
HPW0920F0CA004, HYPERTAC. . . . .	20-15-43
HPW0920M0TA004, HYPERTAC. . . . .	20-15-43
HPW1070F0CA004, HYPERTAC. . . . .	20-15-43
HTBMF( ), ITT CANNON UK. . . . .	20-63-13
HTBMF00( ), ITT CANNON UK. . . . .	20-63-13
INSPECTION. . . . .	20-10-06
INSTALLATION, GENERAL CONDITIONS. . . . .	20-60-06
JBXEA1G06FCSDS, SOURIAU. . . . .	20-61-02
JJ-055, KINGS ELECTRONICS. . . . .	20-64-13
K-4932, KINGS ELECTRONICS. . . . .	20-62-22
K-4941, KINGS ELECTRONICS. . . . .	20-62-22
K-4942, KINGS ELECTRONICS. . . . .	20-62-22
K-4943, KINGS ELECTRONICS. . . . .	20-62-22
KA-19-102, KINGS ELECTRONICS. . . . .	20-51-15
KA-19-143, KINGS ELECTRONICS. . . . .	20-51-15
KA-19-143-M06, KINGS ELECTRONICS. . . . .	20-51-15
KA-19-162, KINGS ELECTRONICS. . . . .	20-51-15
KA-19-163, KINGS ELECTRONICS. . . . .	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

KA-19-193, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-195-M06, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-198-M06, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-21, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-213, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-213-M06, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-216, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-216-M06, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-23, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-24, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-25, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-48, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-50, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-51, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-63, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-68, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-83, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-100-M06, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-102-M06, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-12, KINGS ELECTRONICS . . . . .	20-51-11
KA-39-15, KINGS ELECTRONICS . . . . .	20-51-11
KA-39-31, KINGS ELECTRONICS . . . . .	20-51-11
KA-39-32, KINGS ELECTRONICS . . . . .	20-51-11
KA-39-44, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-82, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-83, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-85, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-94-M06, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-128, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-134, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-138, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-166, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-185, KINGS . . . . .	20-71-14
KA-59-185, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-185-MC7, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-186, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-187, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-188, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-189, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-230, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-236, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-251, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-260, KINGS . . . . .	20-71-14
KA-59-260, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-267, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-277, KINGS . . . . .	20-71-14
KA-59-277, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-29, KINGS ELECTRONICS . . . . .	20-51-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

KA-59-292, KINGS ELECTRONICS .....	20-51-15
KA-59-304, KINGS ELECTRONICS .....	20-51-15
KA-59-31, KINGS ELECTRONICS .....	20-51-11
KA-59-313, KINGS ELECTRONICS .....	20-51-15
KA-59-316, KINGS ELECTRONICS .....	20-51-15
KA-59-317, KINGS ELECTRONICS .....	20-51-15
KA-59-318, KINGS ELECTRONICS .....	20-51-11
KA-59-319, KINGS ELECTRONICS .....	20-51-11
KA-59-32, KINGS ELECTRONICS .....	20-51-11
KA-59-324, KINGS ELECTRONICS .....	20-51-15
KA-59-353-M06, KINGS .....	20-71-14
KA-59-353-M06, KINGS ELECTRONICS .....	20-51-15
KA-59-36, KINGS ELECTRONICS .....	20-51-11
KA-59-39, KINGS ELECTRONICS .....	20-51-11
KA-59-391-M06, KINGS .....	20-71-14
KA-59-391-M06, KINGS ELECTRONICS .....	20-51-15
KA-59-392-M06, KINGS .....	20-71-14
KA-59-392-M06, KINGS ELECTRONICS .....	20-51-15
KA-59-393-M06, KINGS ELECTRONICS .....	20-51-15
KA-59-40, KINGS ELECTRONICS .....	20-51-11
KA-59-41, KINGS ELECTRONICS .....	20-51-11
KA-59-437-M06, KINGS ELECTRONICS .....	20-51-15
KA-59-438-M06, KINGS ELECTRONICS .....	20-51-15
KA-59-439-M06, KINGS ELECTRONICS .....	20-51-15
KA-59-57, KINGS ELECTRONICS .....	20-51-15
KA-59-59, KINGS ELECTRONICS .....	20-51-11
KA-59-73, KINGS ELECTRONICS .....	20-51-15
KA-59-98, KINGS ELECTRONICS .....	20-51-11
KA-59-99, KINGS ELECTRONICS .....	20-51-11
KC-19-100, KINGS ELECTRONICS .....	20-51-11
KC-19-101, KINGS ELECTRONICS .....	20-51-11
KC-19-113, KINGS ELECTRONICS .....	20-51-11
KC-19-116, KINGS ELECTRONICS .....	20-51-11
KC-19-121, KINGS ELECTRONICS .....	20-51-11
KC-19-121, KINGS ELECTRONICS .....	20-51-15
KC-19-122, KINGS ELECTRONICS .....	20-51-15
KC-19-125, KINGS ELECTRONICS .....	20-51-11
KC-19-129, KINGS ELECTRONICS .....	20-51-15
KC-19-129-M06, KINGS ELECTRONICS .....	20-51-15
KC-19-136, KINGS ELECTRONICS .....	20-51-11
KC-19-161, KINGS ELECTRONICS .....	20-51-15
KC-19-169, KINGS ELECTRONICS .....	20-51-15
KC-19-170, KINGS ELECTRONICS .....	20-51-15
KC-19-177, KINGS ELECTRONICS .....	20-51-15
KC-19-177-M06, KINGS ELECTRONICS .....	20-51-15
KC-19-21, KINGS ELECTRONICS .....	20-51-11
KC-19-226, KINGS ELECTRONICS .....	20-51-15
KC-19-254, KINGS ELECTRONICS .....	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

KC-19-255, KINGS ELECTRONICS .....	20-51-15
KC-19-256, KINGS ELECTRONICS .....	20-51-15
KC-19-261, KINGS ELECTRONICS .....	20-51-15
KC-19-262, KINGS ELECTRONICS .....	20-51-15
KC-19-307-M06, KINGS ELECTRONICS .....	20-51-15
KC-19-308-M06, KINGS ELECTRONICS .....	20-51-15
KC-19-31, KINGS ELECTRONICS .....	20-51-11
KC-19-32, KINGS ELECTRONICS .....	20-51-11
KC-19-327-M06, KINGS ELECTRONICS .....	20-51-15
KC-19-328-M06, KINGS ELECTRONICS .....	20-51-15
KC-19-329-M06, KINGS ELECTRONICS .....	20-51-15
KC-19-33, KINGS ELECTRONICS .....	20-51-11
KC-19-34, KINGS ELECTRONICS .....	20-51-11
KC-19-57, KINGS ELECTRONICS .....	20-51-11
KC-19-69, KINGS ELECTRONICS .....	20-51-11
KC-39-102, KINGS ELECTRONICS .....	20-51-11
KC-39-108, KINGS ELECTRONICS .....	20-51-15
KC-39-109, KINGS ELECTRONICS .....	20-51-15
KC-39-110, KINGS ELECTRONICS .....	20-51-15
KC-39-111, KINGS ELECTRONICS .....	20-51-15
KC-39-14, KINGS ELECTRONICS .....	20-51-11
KC-39-140-M06, KINGS ELECTRONICS .....	20-51-15
KC-39-142-M06, KINGS ELECTRONICS .....	20-51-15
KC-39-20, KINGS ELECTRONICS .....	20-51-11
KC-39-21, KINGS ELECTRONICS .....	20-51-11
KC-39-22, KINGS ELECTRONICS .....	20-51-11
KC-39-25, KINGS ELECTRONICS .....	20-51-11
KC-39-29, KINGS ELECTRONICS .....	20-51-15
KC-39-31, KINGS ELECTRONICS .....	20-51-11
KC-39-36, KINGS ELECTRONICS .....	20-51-15
KC-39-44, KINGS ELECTRONICS .....	20-51-11
KC-39-45, KINGS ELECTRONICS .....	20-51-15
KC-39-48, KINGS ELECTRONICS .....	20-51-11
KC-39-56, KINGS ELECTRONICS .....	20-51-11
KC-39-57, KINGS ELECTRONICS .....	20-51-11
KC-39-81, KINGS ELECTRONICS .....	20-51-15
KC-59-104, KINGS ELECTRONICS .....	20-51-15
KC-59-111, KINGS ELECTRONICS .....	20-51-11
KC-59-128, KINGS ELECTRONICS .....	20-51-15
KC-59-136, KINGS ELECTRONICS .....	20-51-11
KC-59-152, KINGS ELECTRONICS .....	20-51-15
KC-59-172, KINGS ELECTRONICS .....	20-51-11
KC-59-177, KINGS ELECTRONICS .....	20-51-11
KC-59-178, KINGS ELECTRONICS .....	20-51-11
KC-59-188, KINGS ELECTRONICS .....	20-51-11
KC-59-191, KINGS ELECTRONICS .....	20-51-11
KC-59-194, KINGS ELECTRONICS .....	20-51-11
KC-59-218, KINGS ELECTRONICS .....	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

KC-59-222, KINGS ELECTRONICS	20-51-15
KC-59-259, KINGS ELECTRONICS	20-51-15
KC-59-261, KINGS ELECTRONICS	20-51-15
KC-59-262, KINGS ELECTRONICS	20-51-15
KC-59-263, KINGS ELECTRONICS	20-51-15
KC-59-265, KINGS ELECTRONICS	20-51-15
KC-59-267, KINGS ELECTRONICS	20-51-15
KC-59-281, KINGS ELECTRONICS	20-51-15
KC-59-287, KINGS ELECTRONICS	20-51-15
KC-59-291, KINGS ELECTRONICS	20-51-15
KC-59-33, KINGS ELECTRONICS	20-51-11
KC-59-38, KINGS ELECTRONICS	20-51-11
KC-59-383, KINGS ELECTRONICS	20-51-15
KC-59-41, KINGS ELECTRONICS	20-51-11
KC-59-411, KINGS ELECTRONICS	20-51-15
KC-59-42, KINGS ELECTRONICS	20-51-11
KC-59-425-M06, KINGS ELECTRONICS	20-51-15
KC-59-444, KINGS ELECTRONICS	20-51-15
KC-59-445, KINGS ELECTRONICS	20-51-15
KC-59-446, KINGS ELECTRONICS	20-51-15
KC-59-447, KINGS ELECTRONICS	20-51-15
KC-59-448, KINGS ELECTRONICS	20-51-15
KC-59-557-M06, KINGS ELECTRONICS	20-51-15
KC-59-585-M06, KINGS ELECTRONICS	20-51-15
KC-59-604-M06, KINGS ELECTRONICS	20-51-15
KC-59-605-M06, KINGS ELECTRONICS	20-51-15
KC-59-609, KINGS ELECTRONICS	20-51-15
KC-59-609-M06, KINGS ELECTRONICS	20-51-15
KC-59-61, KINGS ELECTRONICS	20-51-11
KC-59-62, KINGS ELECTRONICS	20-51-11
KC-59-63, KINGS ELECTRONICS	20-51-11
KC-59-64, KINGS ELECTRONICS	20-51-11
KC-59-660-M06, KINGS ELECTRONICS	20-51-15
KC-59-669-M06, KINGS ELECTRONICS	20-51-15
KC-59-85, KINGS ELECTRONICS	20-51-11
KC-59-96, KINGS ELECTRONICS	20-51-11
KD-19-08, KINGS ELECTRONICS	20-51-13
KD-19-104, KINGS ELECTRONICS	20-51-15
KD-19-104-M06, KINGS ELECTRONICS	20-51-15
KD-19-105-M06, KINGS ELECTRONICS	20-51-15
KD-19-107-M06, KINGS ELECTRONICS	20-51-15
KD-19-26, KINGS ELECTRONICS	20-51-11
KD-19-28, KINGS ELECTRONICS	20-51-11
KD-19-29, KINGS ELECTRONICS	20-51-11
KD-19-33, KINGS ELECTRONICS	20-51-11
KD-19-44, KINGS ELECTRONICS	20-51-11
KD-19-45, KINGS ELECTRONICS	20-51-11
KD-19-49, KINGS ELECTRONICS	20-51-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

KD-19-52, KINGS ELECTRONICS . . . . .	20-51-11
KD-19-55, KINGS ELECTRONICS . . . . .	20-51-15
KD-19-56, KINGS ELECTRONICS . . . . .	20-51-11
KD-19-66, KINGS ELECTRONICS . . . . .	20-51-15
KD-19-67, KINGS ELECTRONICS . . . . .	20-51-15
KD-19-68, KINGS ELECTRONICS . . . . .	20-51-15
KD-19-69, KINGS ELECTRONICS . . . . .	20-51-15
KD-19-90, KINGS ELECTRONICS . . . . .	20-51-15
KD-19-94, KINGS ELECTRONICS . . . . .	20-51-15
KD-19-95, KINGS ELECTRONICS . . . . .	20-51-15
KD-39-08, KINGS ELECTRONICS . . . . .	20-51-11
KD-39-09, KINGS ELECTRONICS . . . . .	20-51-11
KD-39-10, KINGS ELECTRONICS . . . . .	20-51-11
KD-39-21, KINGS ELECTRONICS . . . . .	20-51-11
KD-39-27, KINGS ELECTRONICS . . . . .	20-51-15
KD-39-28, KINGS ELECTRONICS . . . . .	20-51-15
KD-39-37, KINGS ELECTRONICS . . . . .	20-51-15
KD-39-42, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-100, KINGS ELECTRONICS . . . . .	20-51-11
KD-59-101, KINGS ELECTRONICS . . . . .	20-51-11
KD-59-110, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-120, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-125, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-126, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-128, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-129, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-155, KINGS ELECTRONICS . . . . .	20-51-11
KD-59-156, KINGS ELECTRONICS . . . . .	20-51-11
KD-59-161, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-163, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-164, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-165, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-166, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-180-M06, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-184-M06, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-185, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-185-M06, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-186, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-186-M06, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-187-M06, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-193-M06, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-199-M06, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-201, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-201-M06, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-202, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-202-M06, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-33, KINGS ELECTRONICS . . . . .	20-51-11
KD-59-35, KINGS ELECTRONICS . . . . .	20-51-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

KD-59-38, KINGS ELECTRONICS	20-51-11
KD-59-40, KINGS ELECTRONICS	20-51-11
KD-59-41, KINGS ELECTRONICS	20-51-11
KD-59-42, KINGS ELECTRONICS	20-51-11
KD-59-43, KINGS ELECTRONICS	20-51-11
KD-59-44, KINGS ELECTRONICS	20-51-11
KD-59-50, KINGS ELECTRONICS	20-51-11
KD-59-52, KINGS ELECTRONICS	20-51-15
KD-59-55, KINGS ELECTRONICS	20-51-11
KD-59-57, KINGS ELECTRONICS	20-51-11
KD-59-58, KINGS ELECTRONICS	20-51-15
KD-59-63, KINGS ELECTRONICS	20-51-15
KD-59-64, KINGS ELECTRONICS	20-51-15
KD-59-90, KINGS ELECTRONICS	20-51-11
KD-59-94, KINGS ELECTRONICS	20-51-11
KD-59-95, KINGS ELECTRONICS	20-51-11
KG-19-15-M06, KINGS ELECTRONICS	20-51-15
KG-59-16, KINGS ELECTRONICS	20-51-11
KG-59-22, KINGS ELECTRONICS	20-51-11
KG-59-23, KINGS ELECTRONICS	20-51-11
KG-59-25, KINGS ELECTRONICS	20-51-11
KG-59-26, KINGS ELECTRONICS	20-51-11
KG-59-28, KINGS ELECTRONICS	20-51-15
KG-59-31-M06, KINGS ELECTRONICS	20-51-15
KG-59-32-M06, KINGS ELECTRONICS	20-51-15
KG-59-33-M06, KINGS ELECTRONICS	20-51-15
KG-59-34-M06, KINGS ELECTRONICS	20-51-15
KH-19-12, KINGS ELECTRONICS	20-51-11
KH-19-13, KINGS ELECTRONICS	20-51-11
KH-19-14, KINGS ELECTRONICS	20-51-11
KH-19-18, KINGS ELECTRONICS	20-51-15
KH-19-22, KINGS ELECTRONICS	20-51-11
KH-39-11, KINGS ELECTRONICS	20-51-11
KH-39-12, KINGS ELECTRONICS	20-51-11
KH-39-21, KINGS ELECTRONICS	20-51-15
KH-39-22, KINGS ELECTRONICS	20-51-15
KH-39-25-M06, KINGS ELECTRONICS	20-51-15
KH-59-102-M06, KINGS ELECTRONICS	20-51-15
KH-59-103-M06, KINGS ELECTRONICS	20-51-15
KH-59-104-M06, KINGS ELECTRONICS	20-51-15
KH-59-19, KINGS ELECTRONICS	20-51-11
KH-59-20, KINGS ELECTRONICS	20-51-11
KH-59-21, KINGS ELECTRONICS	20-51-11
KH-59-24, KINGS ELECTRONICS	20-51-11
KH-59-28, KINGS ELECTRONICS	20-51-11
KH-59-31, KINGS ELECTRONICS	20-51-11
KH-59-47, KINGS ELECTRONICS	20-51-11
KH-59-50, KINGS ELECTRONICS	20-51-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

KH-59-53, KINGS ELECTRONICS	20-51-11
KH-59-54, KINGS ELECTRONICS	20-51-11
KH-59-56, KINGS ELECTRONICS	20-51-11
KH-59-60, KINGS ELECTRONICS	20-51-11
KH-59-63, KINGS ELECTRONICS	20-51-15
KH-59-64, KINGS ELECTRONICS	20-51-15
KH-59-65, KINGS ELECTRONICS	20-51-15
KH-59-66, KINGS ELECTRONICS	20-51-15
KH-59-69, KINGS ELECTRONICS	20-51-15
KH-59-78, KINGS ELECTRONICS	20-51-11
KH-59-99-M06, KINGS ELECTRONICS	20-51-15
KM-19-08, KINGS ELECTRONICS	20-51-15
KM-39-07, KINGS ELECTRONICS	20-51-15
KM-59-05, KINGS ELECTRONICS	20-51-13
KM-59-18, KINGS ELECTRONICS	20-51-15
KM-59-20, KINGS ELECTRONICS	20-51-15
KM-59-31, KINGS ELECTRONICS	20-51-15
KM-59-36, KINGS ELECTRONICS	20-51-15
KM-59-41, KINGS ELECTRONICS	20-51-15
KN-19-115, KINGS ELECTRONICS	20-51-15
KN-19-117, KINGS ELECTRONICS	20-51-15
KN-19-118, KINGS ELECTRONICS	20-51-15
KN-19-125, KINGS ELECTRONICS	20-51-15
KN-19-145, KINGS ELECTRONICS	20-51-15
KN-19-149, KINGS ELECTRONICS	20-51-15
KN-19-151, KINGS ELECTRONICS	20-51-15
KN-19-162, KINGS ELECTRONICS	20-51-15
KN-19-195-M06, KINGS ELECTRONICS	20-51-15
KN-19-196-M06, KINGS ELECTRONICS	20-51-15
KN-19-198-M06, KINGS ELECTRONICS	20-51-15
KN-19-199-M06, KINGS ELECTRONICS	20-51-15
KN-19-205-M06, KINGS ELECTRONICS	20-51-15
KN-19-206-M06, KINGS ELECTRONICS	20-51-15
KN-19-207-M06, KINGS ELECTRONICS	20-51-15
KN-19-208-M06, KINGS ELECTRONICS	20-51-15
KN-19-209-M06, KINGS ELECTRONICS	20-51-15
KN-19-30, KINGS ELECTRONICS	20-51-11
KN-19-31, KINGS ELECTRONICS	20-51-11
KN-19-331-M06, KINGS ELECTRONICS	20-51-15
KN-19-37, KINGS ELECTRONICS	20-51-11
KN-19-44, KINGS ELECTRONICS	20-51-11
KN-19-48, KINGS ELECTRONICS	20-51-11
KN-19-68, KINGS ELECTRONICS	20-51-11
KN-19-73, KINGS ELECTRONICS	20-51-11
KN-19-78, KINGS ELECTRONICS	20-51-11
KN-19-79, KINGS ELECTRONICS	20-51-11
KN-39-114-M06, KINGS ELECTRONICS	20-51-15
KN-39-121-M06, KINGS ELECTRONICS	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

KN-39-122-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-39-19, KINGS ELECTRONICS . . . . .	20-51-11
KN-39-20, KINGS ELECTRONICS . . . . .	20-51-11
KN-39-21, KINGS ELECTRONICS . . . . .	20-51-11
KN-39-23, KINGS ELECTRONICS . . . . .	20-51-11
KN-39-42, KINGS ELECTRONICS . . . . .	20-51-11
KN-39-48, KINGS ELECTRONICS . . . . .	20-51-11
KN-39-51, KINGS ELECTRONICS . . . . .	20-51-11
KN-39-55, KINGS ELECTRONICS . . . . .	20-51-11
KN-39-71, KINGS ELECTRONICS . . . . .	20-51-15
KN-39-72, KINGS ELECTRONICS . . . . .	20-51-15
KN-39-73, KINGS ELECTRONICS . . . . .	20-51-15
KN-39-87, KINGS ELECTRONICS . . . . .	20-51-15
KN-39-93, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-107, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-110, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-113, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-120, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-128, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-129, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-131, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-133, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-135, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-136, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-138, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-159, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-18, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-183, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-183-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-185, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-186, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-190, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-201-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-220, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-220-M07, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-237, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-238, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-239, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-242-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-247, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-261, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-262, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-263, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-264, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-264-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-28, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-29, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-31, KINGS ELECTRONICS . . . . .	20-51-11

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****CONNECTOR (continued)**

KN-59-313-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-329-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-330-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-331-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-332-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-34, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-361-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-367-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-368-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-369-M06, KINGS ELECTRONICS . . . . .	20-51-15
KN-59-46, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-47, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-48, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-49, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-50, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-53, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-56, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-57, KINGS ELECTRONICS . . . . .	20-51-11
KN-59-69, KINGS ELECTRONICS . . . . .	20-51-11
KO(), ITT CANNON . . . . .	20-40-00
KPSE(), DEUTSCH . . . . .	20-61-16
KS-89-108, KINGS ELECTRONICS . . . . .	20-51-15
KS-89-164, KINGS ELECTRONICS . . . . .	20-51-15
KS-89-31, KINGS ELECTRONICS . . . . .	20-51-11
KS-89-35, KINGS ELECTRONICS . . . . .	20-51-11
KS-89-42, KINGS ELECTRONICS . . . . .	20-51-11
KS-89-55, KINGS ELECTRONICS . . . . .	20-51-15
KU-59-03, KINGS ELECTRONICS . . . . .	20-51-15
KU-59-19, KINGS ELECTRONICS . . . . .	20-51-11
KU-59-21, KINGS ELECTRONICS . . . . .	20-51-11
KU-59-25, KINGS ELECTRONICS . . . . .	20-51-11
KU-59-32, KINGS ELECTRONICS . . . . .	20-51-11
KU-59-67, KINGS ELECTRONICS . . . . .	20-51-11
KY-59-02, KINGS ELECTRONICS . . . . .	20-51-13
L()T(), BURNDY . . . . .	20-61-16
L42ENT, ANDREWS . . . . .	20-51-52
L42EWT, ANDREWS . . . . .	20-51-52
LPT(), BURNDY . . . . .	20-61-16
M(), RADIAL . . . . .	20-71-16
M22T(), SOURIAU/BURNDY . . . . .	20-51-32
M24308/2-1, QPL . . . . .	20-72-13
M24308/2-11, QPL . . . . .	20-72-13
M24308/2-12, QPL . . . . .	20-72-13
M24308/2-13, QPL . . . . .	20-72-13
M24308/2-14, QPL . . . . .	20-72-13
M24308/2-15, QPL . . . . .	20-72-13
M24308/2-1F, QPL . . . . .	20-15-41
M24308/2-2, QPL . . . . .	20-72-13

**20-CROSS REFERENCE INDEX**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### CONNECTOR (continued)

I	M24308/2-281, QPL	20-72-13
I	M24308/2-282, QPL	20-72-13
I	M24308/2-288, QPL	20-72-13
	M24308/2-3, QPL	20-72-13
	M24308/2-32, QPL	20-72-13
	M24308/2-4, QPL	20-72-13
	M24308/2-5, QPL	20-72-13
	M24308/4-1, QPL	20-72-13
	M24308/4-11, QPL	20-72-13
	M24308/4-12, QPL	20-72-13
	M24308/4-14, QPL	20-72-13
	M24308/4-15, QPL	20-72-13
	M24308/4-2, QPL	20-72-13
	M24308/4-3, QPL	20-72-13
	M24308/4-4, QPL	20-72-13
	M24308/4-5, QPL	20-72-13
	M80-7160605, HYPERTAC	20-15-44
	M81511/(), QPL	20-61-30
	M83723/(), MATRIX	20-63-13
	MB10P-1, BURNDY	20-62-13
	MB10R-6, BURNDY	20-62-13
	MB12P-1, BURNDY	20-62-13
	MB12R-20, BURNDY	20-62-13
	MB12R-6, BURNDY	20-62-13
	MB13P-3, BURNDY	20-62-13
	MB13R-4, BURNDY	20-62-13
	MB24P, BURNDY	20-62-13
	MB6P-3, BURNDY	20-62-13
	MB6R-3, BURNDY	20-62-13
	MBG28P, BURNDY	20-61-23
	MBG28R, BURNDY	20-61-23
	MM(), RADIAL	20-71-16
	MME(), RADIAL	20-71-16
	MRM7935, MILES ROYSTONE	20-15-42
	MRM8439, MILES ROYSTONE	20-15-42
	MS24264R()-B(), QPL	20-61-11
	MS24264R()-T(), QPL	20-61-11
	MS24265R()-T(), QPL	20-61-11
	MS24266R()-B(), QPL	20-61-11
	MS24266R()-T(), QPL	20-61-11
	MS25182-2, QPL	20-62-25
	MS27466, QPL	20-63-19
	MS27467, QPL	20-63-19
	MS27468, QPL	20-63-19
	MS27472, QPL	20-63-19
	MS27473, QPL	20-63-19
	MS27474, QPL	20-63-19
	MS27484, QPL	20-63-19

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

MS27496, QPL . . . . .	20-63-19
MS27497, QPL . . . . .	20-63-19
MS27499, QPL . . . . .	20-63-19
MS27505, QPL . . . . .	20-63-19
MS27508, QPL . . . . .	20-63-19
MS27656, QPL . . . . .	20-63-19
MS3120(), QPL . . . . .	20-61-16
MS3126(), QPL . . . . .	20-61-16
MS3450(), QPL . . . . .	20-63-14
MS3452(), QPL . . . . .	20-63-14
MS3454(), QPL . . . . .	20-63-14
MS3456(), QPL . . . . .	20-63-14
MS3459(), QPL . . . . .	20-63-14
MS3470(), QPL . . . . .	20-63-21
MS3475(), QPL . . . . .	20-63-21
MS3476(), QPL . . . . .	20-63-21
MT17R-1, BURNDY . . . . .	20-86-00
MT30K( ), MATRIX . . . . .	20-63-13
MT30K-2219-299, MATRIX . . . . .	20-35-11
MT37K( ), MATRIX . . . . .	20-63-13
MT37K-1203-191, MATRIX . . . . .	20-35-11
MT37K-1203-299, MATRIX . . . . .	20-35-11
MTC100-JH1-P32-(), RAYCHEM . . . . .	20-74-11
MTC100-JH1-R32-(), RAYCHEM . . . . .	20-74-11
MTC100-JH2-P12-(), RAYCHEM . . . . .	20-74-11
MTC100-JH2-P32-(), RAYCHEM . . . . .	20-74-11
MTC100-JH2-R32-(), RAYCHEM . . . . .	20-74-11
MTC100-KT2-0023, RAYCHEM . . . . .	20-73-01
MTC100-KT2-0036, RAYCHEM . . . . .	20-73-01
MTC100-SH1-F32-(), RAYCHEM . . . . .	20-74-11
MTC100-SH2-F32-(), RAYCHEM . . . . .	20-74-11
MTCPQKT1P(), RAYCHEM . . . . .	20-74-11
MTCPQKT1R(), RAYCHEM . . . . .	20-74-11
MTCPQKT2P(), RAYCHEM . . . . .	20-74-11
MTCPQKT2R(), RAYCHEM . . . . .	20-74-11
NIC66F11()AA, AMP . . . . .	20-71-14
NIC66H20()AA, AMP . . . . .	20-71-14
NIC66H21()AA, AMP . . . . .	20-71-14
NIC66H22()AA, AMP . . . . .	20-71-14
NIC66H23()AA, AMP . . . . .	20-71-14
NIC66H25()AA, AMP . . . . .	20-71-14
NIC66H26()AA, AMP . . . . .	20-71-14
NIC66H28()AA, AMP . . . . .	20-71-14
NIC66K31()AA, AMP . . . . .	20-71-14
NIC66K32()AA, AMP . . . . .	20-71-14
NIC66K33()AA, AMP . . . . .	20-71-14
NIC66K34()AA, AMP . . . . .	20-71-14
NIC66K36()AA, AMP . . . . .	20-71-14

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****CONNECTOR (continued)**

NSX()1P101()00, RADIAL	20-71-14
NSX()1P110X00, RADIAL	20-71-14
NSX()2P201()00, RADIAL	20-71-14
NSX()2P202()00, RADIAL	20-71-14
NSX()2P203()00, RADIAL	20-71-14
NSX()2P204X00S, RADIAL	20-71-14
NSX()2P205()00, RADIAL	20-71-14
NSX()2P206()00, RADIAL	20-71-14
NSX()2P216()00, RADIAL	20-71-14
NSX()2P219()00, RADIAL	20-71-14
NSX()2P221()00, RADIAL	20-71-14
NSX()2P277X00, RADIAL	20-71-14
NSX()2P522()00, RADIAL	20-71-14
NSX()3P()301()00, RADIAL	20-71-14
NSX()3P()302()00, RADIAL	20-71-14
NSX()3P()303()00, RADIAL	20-71-14
NSX()3P()304()00, RADIAL	20-71-14
NSX()3P()310()00, RADIAL	20-71-14
NSX()3P366X00, RADIAL	20-71-14
NXS()2P286()00, RADIAL	20-71-14
PC()CE, BENDIX	20-61-20
PROTECTION, SPECIAL	20-60-03
PT()CE, BENDIX	20-61-20
PT()SE(), AMPHENOL/BENDIX	20-61-16
PT06E(), AMPHENOL	20-40-00
R(), RADIAL	20-71-16
R0700(), RMS	20-61-11
R0701(), RMS	20-61-11
R0710(), RMS	20-61-11
R0710(J), RMS	20-61-11
R0711(), RMS	20-61-11
R0711(M), RMS	20-61-11
R0712(), RMS	20-61-11
R0716(), RMS	20-61-11
R0717(), RMS	20-61-11
R0718(), RMS	20-61-11
R0719(), RMS	20-61-11
R0721(), RMS	20-61-11
R0726(), RMS	20-61-11
R0727(), RMS	20-61-11
R0760-1, RMS	20-61-11
R0760-12, RMS	20-61-11
R0760-126, RMS	20-61-11
R0760-127, RMS	20-61-11
R0760-128, RMS	20-61-11
R0760-129, RMS	20-61-11
R0760-16, RMS	20-61-11
R0760-17, RMS	20-61-11

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

R0760-18, RMS	20-61-11
R0760-19, RMS	20-61-11
R770(), RMS	20-61-11
RM(), RADIAL	20-71-16
RM342-011-581-5900, AIRBORN	20-14-52
RM342-023-581-5900, AIRBORN	20-14-52
RME(), RADIAL	20-71-16
RSCDEX-2, BURNDY	20-51-31
RSMDEX-1, BURNDY	20-51-31
S280W551-209, BOEING	20-71-14
S280W551-209A, BOEING	20-71-14
S280W551-211, BOEING	20-71-14
S280W551-211A, BOEING	20-71-14
S280W551-213A, BOEING	20-71-14
S280W551-401, BOEING	20-71-14
S280W551-401A, BOEING	20-71-14
S280W551-405, BOEING	20-71-14
S280W551-405A, BOEING	20-71-14
S280W551-407, BOEING	20-71-14
S280W551-407A, BOEING	20-71-14
S280W551-413, BOEING	20-71-14
S280W551-413A, BOEING	20-71-14
S280W551-503, BOEING	20-71-14
S280W551-503A, BOEING	20-71-14
S280W557-1(), BOEING	20-72-24
S280W557-2(), BOEING	20-72-24
S280W557-801, BOEING	20-72-25
S280W557-802, BOEING	20-72-25
S280W701-601, BOEING	20-12-11
S280W701-602, BOEING	20-12-11
S280W701-611, BOEING	20-12-11
S280W701-613, BOEING	20-12-11
S280W701-614, BOEING	20-12-11
S280W701-615, BOEING	20-12-11
S280W701-616, BOEING	20-12-11
S280W701-631, BOEING	20-12-11
S280W701-641, BOEING	20-12-11
S280W701-642, BOEING	20-12-11
S280W701-643, BOEING	20-12-11
S280W701-661, BOEING	20-12-11
S283A202-11, BOEING	20-61-11
S283A202-12, BOEING	20-61-11
S283T025-2, BOEING	20-61-11
S283T025-4, BOEING	20-61-11
S345T002-156, CINCH	20-62-21
SAFETY WIRE, INSTALLATION	20-60-07
SB6()1-MG-05()P00, SOURIAU	20-71-14
SB6()2-MG-13A1PE6, SOURIAU	20-71-14

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****CONNECTOR (continued)**

SB6()2-MG-13K5P00, SOURIAU . . . . .	20-71-14
SB6()2-MG-13K5P12, SOURIAU . . . . .	20-71-14
SB6()2-MG-13W2P00, SOURIAU . . . . .	20-71-14
SB6()2-MG-13W2P01, SOURIAU . . . . .	20-71-14
SB6()2-MG-13W2P02, SOURIAU . . . . .	20-71-14
SB6()2-MG-13W2P03, SOURIAU . . . . .	20-71-14
SB6()2-MG-13W2PF3, SOURIAU . . . . .	20-71-14
SB6()3-M()-13K1P00, SOURIAU . . . . .	20-71-14
SB6()3-M()-13K2P00, SOURIAU . . . . .	20-71-14
SB6()3-M()-13K2PE901, SOURIAU . . . . .	20-71-14
SB6()3-M()-13K3P00, SOURIAU . . . . .	20-71-14
SB6()3-M()-13W2P00, SOURIAU . . . . .	20-71-14
SEALS, GENERAL CONDITIONS . . . . .	20-60-08
SF3440C()-(), IPI . . . . .	20-61-19
SF3446C()-(), IPI . . . . .	20-61-19
SGA(), ITT CANNON . . . . .	20-72-21
SHELL, ELECTRICAL BONDS . . . . .	20-20-00
SM3106(), BENDIX . . . . .	20-40-00
SMP()-BC, J.S.T. . . . .	20-64-14
SMR()-B, J.S.T. . . . .	20-64-14
SP()SE(), AMPHENOL/BENDIX . . . . .	20-61-16
SRPA1N8AS1, BENDIX . . . . .	20-40-00
SWITCH, 09-530-9501, KORRY ELECTRONICS . . . . .	20-84-14
SWITCH, S231W240-301, BOEING . . . . .	20-84-14
SYSTRON DONNER ENGINE FIRE DETECTOR, INSTALLATION . . . . .	20-60-06
TV26RK9-98SN, AMPHENOL . . . . .	20-63-19
VB10-1PWC11-76, VIKING . . . . .	20-40-00
VMCG505M3-01, VIBRO-METER . . . . .	20-35-11
WALTER KIDDE FIRE DETECTOR, CLEANING . . . . .	20-60-01
WB0710, WALLACE-BLACK . . . . .	20-64-16
WB0720, WALLACE-BLACK . . . . .	20-64-16
WB0730, WALLACE-BLACK . . . . .	20-64-16
WB1220, WALLACE-BLACK . . . . .	20-64-16
WB1230, WALLACE-BLACK . . . . .	20-64-16
WB1240, WALLACE-BLACK . . . . .	20-64-16
WFB0()-(), ITT CANNON . . . . .	20-61-19
WFB0()-()CD, ITT CANNON . . . . .	20-61-19
WFB6()-(), ITT CANNON . . . . .	20-61-19
WFB6()-()CE, ITT CANNON . . . . .	20-61-19
WIRE WRAP . . . . .	20-72-18
WIRE WRAP, COVER . . . . .	20-72-18
WIRE WRAP, COVER, 285T0625-1, QPL . . . . .	20-72-18
WIRE WRAP, COVER, 285T0625-2, QPL . . . . .	20-72-18
WIRE WRAP, COVER, 285T0626-1, QPL . . . . .	20-72-18
WIRE WRAP, COVER, 285T0631-1, QPL . . . . .	20-72-18
WIRE WRAP, COVER, 285T0632-1, QPL . . . . .	20-72-18
WIRE WRAP, COVER, 285T0632-2, QPL . . . . .	20-72-18
WIRE WRAP, COVER, 285T0632-3, QPL . . . . .	20-72-18

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR (continued)

WIRE WRAP, COVER, 285U0173-1, QPL .....	20-72-18
WIRE WRAP, COVER, 285U0173-2, QPL .....	20-72-18
WIRE WRAP, LIFTER LATCH SYSTEM .....	20-72-17
XHP-(), J.S.T. ....	20-64-14
XLR-(), ITT CANNON .....	20-64-12
ZZB-R(), PYLE-NATIONAL .....	20-61-11
ZZL-R(), PYLE-NATIONAL .....	20-61-11
ZZW-()-10(), PYLE-NATIONAL .....	20-61-11
ZZW-()-17(), PYLE-NATIONAL .....	20-61-11
ZZW-R(), PYLE-NATIONAL .....	20-61-11
ZZY-()-10(), PYLE-NATIONAL .....	20-61-11
ZZY-()-12(), PYLE-NATIONAL .....	20-61-11
ZZY-()-15(), PYLE-NATIONAL .....	20-61-11
ZZY-()-17(), PYLE-NATIONAL .....	20-61-11
ZZY-R(), PYLE-NATIONAL .....	20-61-11

## CONNECTOR ASSEMBLY

002368-0802, VIKING ELECTRONICS .....	20-72-25
5020G3442 COAX CABLE, RAYCHEM .....	20-51-05
60B40052-(), BOEING .....	20-62-13
AIE APC() SERIES .....	20-72-19
AIRFONE AFP30-00()-AA CONNECTORS .....	20-64-17
AMP 2-329083-1, COAX .....	20-51-21
AMP 3-582151-() PWB CONNECTOR .....	20-82-12
AMP 331() COAXICLAMP .....	20-51-26
AMP AA CONNECTOR .....	20-71-12
AMP AD CONNECTOR .....	20-71-12
AMP AM CONNECTOR .....	20-71-12
AMP BD CONNECTOR .....	20-71-12
AMP NIC66 CONNECTORS .....	20-71-14
AMP RM, RME SERIES .....	20-71-16
AMPHENOL 17-() CONNECTORS .....	20-72-11
AMPHENOL 213 CONNECTOR .....	20-71-12
AMPHENOL 67 SERIES .....	20-61-12
AMPHENOL 69 SERIES .....	20-61-13
AMPHENOL 82-175, COAX .....	20-51-41
AMPHENOL 82-3292, COAX .....	20-51-42
AMPHENOL 84-() SERIES .....	20-61-26
AN3115 TYPE CONNECTORS .....	20-62-19
AN3116 TYPE CONNECTORS .....	20-62-22
ANDREWS 40229, COAX .....	20-51-51
ANDREWS 44ASN, COAX .....	20-51-51
ANDREWS L42ENT, COAX .....	20-51-52
ANDREWS L42EWT, COAX .....	20-51-52
ARINC 404 .....	20-71-11
ARINC 404, AMP .....	20-71-16
ARINC 404, RADIAL .....	20-71-15
ARINC 600 TYPE CONNECTORS .....	20-71-14
ARINC 600 TYPE, SINGLE GANG .....	20-72-21

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR ASSEMBLY (continued)

ARIZONA INTEGRATED ELECTRONICS APC() SERIES. . . . .	20-72-19
ATM(), VIKING ELECTRONICS. . . . .	20-72-26
AVIBANK AV6()7 CONNECTORS. . . . .	20-62-20
BA14349 COAX CABLE, ITT SURPRENANT. . . . .	20-51-05
BACC63DE, BACC63DF, BACC63DG, AND BACC63DH QUICK DISCONNECT CIRCULAR CONNECTORS	20-63-02
BACC63ED, BACC63EE, AND BACC63EF CIRCULAR CONNECTORS. . . . .	20-63-03
BACC65AA(), BOEING. . . . .	20-74-12
BACC65AB(), BOEING. . . . .	20-74-12
BACC65AJ(), BOEING. . . . .	20-72-24
BACC65AK(), BOEING. . . . .	20-72-24
BACC65AL, BOEING. . . . .	20-72-25
BACC65AN(), BOEING. . . . .	20-74-13
BACC65AP(), BOEING. . . . .	20-74-13
BACC65AV(), BOEING. . . . .	20-74-13
BACC65AW(), BOEING. . . . .	20-74-13
BACC65BC( ), BOEING. . . . .	20-74-16
BACC65BD( ), BOEING. . . . .	20-74-16
BACC65BJ( ), BOEING. . . . .	20-74-14
BACC65BK( ), BOEING. . . . .	20-74-14
BACC65BL( ), BOEING. . . . .	20-62-24
BACC65BP1, BOEING. . . . .	20-74-18
BACC65BR1, BOEING. . . . .	20-74-18
BACC65K(), BOEING. . . . .	20-82-13
BACC65L(), BOEING. . . . .	20-82-13
BACC66F CONNECTORS. . . . .	20-71-14
BACC66H CONNECTORS. . . . .	20-71-14
BACC66K CONNECTORS. . . . .	20-71-14
BACC68C(), BOEING. . . . .	20-12-21
BACC68D(), BOEING. . . . .	20-12-21
BACC68E(), BOEING. . . . .	20-12-21
BACC68F(), BOEING. . . . .	20-12-21
BACI10AL(), BOEING. . . . .	20-74-02
BACI10AM(), BOEING. . . . .	20-74-02
BACI10AP(), BOEING. . . . .	20-74-02
BACI10BC(), BOEING. . . . .	20-74-04
BATTERY CONNECTOR. . . . .	20-62-25
BENDIX 10-244() SERIES. . . . .	20-61-18
BENDIX PC()CE SERIES. . . . .	20-61-20
BENDIX PT()CE SERIES. . . . .	20-61-20
BOEING 280U00(). . . . .	20-72-17
BOEING 284U1147(). . . . .	20-72-17
BOEING S280W551 CONNECTORS. . . . .	20-71-14
BURNDY G6F12-88(), COAX. . . . .	20-51-33
BURNDY M22T(), COAX. . . . .	20-51-32
BURNDY MB CONNECTORS. . . . .	20-62-13
BURNDY MBG28 SERIES. . . . .	20-61-23
BURNDY MT17R-1. . . . .	20-86-00
BURNDY RSCDEX(), COAX. . . . .	20-51-31

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR ASSEMBLY (continued)

CABLEWAVE 7()-500, COAX . . . . .	20-51-90
CINCH ACIS CONNECTORS . . . . .	20-74-11
CINCH CN0906 SERIES . . . . .	20-61-12
CINCH S345T002-156 CONNECTOR . . . . .	20-62-21
COAX, GENERAL CONDITIONS . . . . .	20-51-00
CONDUIT ADAPTER . . . . .	20-61-00
CONTACT ASSEMBLY, CONDUCTOR SIZE ADJUSTMENT . . . . .	20-60-00
CONVULUTED TUBE, INSTALLATION . . . . .	20-61-00
CORY C()MA CONNECTORS . . . . .	20-72-10
CORY CB()-() SERIES . . . . .	20-72-22
CORY CQ() CONNECTORS . . . . .	20-72-23
DAGE 30382-1 WITH TRIAX CABLE . . . . .	20-53-05
DAGE 30391-1 WITH TRIAX CABLE . . . . .	20-53-05
DEUTSCH DD SERIES . . . . .	20-61-24
DEUTSCH DL TYPE CONNECTORS . . . . .	20-63-01
DEUTSCH DS SERIES . . . . .	20-61-15
FENWAL 35303-() SERIES CONNECTORS . . . . .	20-62-14
FLAT CABLE, GENERAL CONDITIONS . . . . .	20-73-00
FRONT RELEASE CONTACTS, GENERAL PROCEDURE . . . . .	20-61-00
FSJ4-50 COAX CABLE, ANDREWS . . . . .	20-51-51
GRAVINER CONNECTORS . . . . .	20-62-15
HUGHES 116706-()-() SERIES . . . . .	20-72-22
ITT CANNON AXR-() . . . . .	20-64-12
ITT CANNON BKA CONNECTORS . . . . .	20-71-14
ITT CANNON CA()KR FIREWALL CONNECTORS . . . . .	20-62-26
ITT CANNON D()MA CONNECTORS . . . . .	20-72-12
ITT CANNON D()U() D SUBMINITURE . . . . .	20-72-16
ITT CANNON DPA SERIES . . . . .	20-71-11
ITT CANNON DPD SERIES . . . . .	20-71-11
ITT CANNON DPE-MA SERIES . . . . .	20-71-13
ITT CANNON DPX SERIES . . . . .	20-71-11
ITT CANNON SGA() SERIES . . . . .	20-72-21
ITT CANNON XLR-() . . . . .	20-64-12
J.S.T. SMP-()-BC CONNECTORS . . . . .	20-64-14
J.S.T. SMR-()-B CONNECTORS . . . . .	20-64-14
J.S.T. XHP-() CONNECTORS . . . . .	20-64-14
KINGS 1965-12-9 WITH TRIAX CABLE . . . . .	20-53-05
KINGS CONVENTIONAL COAX CONNECTORS . . . . .	20-51-16
KINGS K-GRIP WEATHERPROOF COAX CONNECTORS . . . . .	20-51-11
KINGS K-LOC COAX CONNECTORS . . . . .	20-51-17
KINGS STANDARD K-GRIP COAX CONNECTORS . . . . .	20-51-13
KINGS WEATHERPROOF K-GRIP JUNIOR CONNECTORS . . . . .	20-51-15
KORRY ELECTRONICS 09-530-9501 CONNECTOR . . . . .	20-84-14
LAMP SOCKET CONNECTORS . . . . .	20-84-00
LINDBERG CONNECTORS . . . . .	20-62-17
M24308 CONNECTORS . . . . .	20-72-13
MIL-C-26482 SERIES I CONNECTORS . . . . .	20-61-16
MIL-C-26482 SERIES II CONNECTORS . . . . .	20-63-21

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CONNECTOR ASSEMBLY (continued)

MIL-C-26482 WITH TRIAX CABLE. . . . .	20-53-05
MIL-C-26500 TYPE CONNECTORS . . . . .	20-61-11
MIL-C-26500 WITH TRIAX CABLE. . . . .	20-53-05
MIL-C-38999 SERIES . . . . .	20-63-19
MIL-C-5015 TYPE CONNECTORS . . . . .	20-61-19
MIL-C-5015 TYPE CONNECTORS . . . . .	20-63-20
MIL-C-5015, REAR RELEASE CONTACTS. . . . .	20-63-14
MIL-C-81511 CONNECTORS. . . . .	20-61-30
MIL-C-81659 TYPE, AMP . . . . .	20-71-16
MIL-C-81659 TYPE, RADIAL . . . . .	20-71-15
MIL-C-83723 SERIES III CONNECTORS . . . . .	20-63-13
MIL-J-641/8 TELEPHONE JACK . . . . .	20-64-13
MOLEX 03-06-() CONNECTORS . . . . .	20-64-17
MOLEX 1625-() CONNECTORS. . . . .	20-64-17
MS25182 CONNECTOR . . . . .	20-62-25
PCB, AMP TAB-TERMINAL . . . . .	20-82-11
RADIAL DSX SERIES. . . . .	20-71-15
RADIAL NSX CONNECTORS . . . . .	20-71-14
RAYCHEM MTC100 CONNECTORS . . . . .	20-74-11
RAYCHEM MTCPQ CONNECTORS . . . . .	20-74-11
RB 211 TRENT 800 POWER PLANT . . . . .	20-23-37
REAR RELEASE CONTACTS, GENERAL PROCEDURES. . . . .	20-63-00
RM342(), AIRBORN . . . . .	20-14-52
ROSEMOUNT CERAMIC CONNECTORS. . . . .	20-64-15
S231W240-301, BOEING. . . . .	20-84-14
S280W557-1, BOEING . . . . .	20-72-24
S280W557-2, BOEING . . . . .	20-72-24
S280W557-8, BOEING . . . . .	20-72-25
SAFETY WIRE, GENERAL CONDITIONS. . . . .	20-60-07
SEAL OF GROMMET, GENERAL CONDITIONS. . . . .	20-60-08
SEAL WITH POTTING COMPOUND . . . . .	20-60-08
SOLDER TYPE CONTACTS . . . . .	20-40-00
SOURIAU 30-00053-() SERIES . . . . .	20-72-21
SOURIAU 30-00054-() SERIES . . . . .	20-72-21
SOURIAU S6, AND SB6 CONNECTORS . . . . .	20-71-14
SPARE CONTACTS, GENERAL CONDITIONS. . . . .	20-60-08
TRI-STAR C()MA CONNECTORS . . . . .	20-72-10
TRI-STAR C-06BC-01()-112 SERIES . . . . .	20-72-21
TRI-STAR CB()-() SERIES . . . . .	20-72-22
TRI-STAR CQ() CONNECTORS. . . . .	20-72-23
TRI-STAR CSLT2-21P() CONNECTORS. . . . .	20-63-22
TRIAx CABLE. . . . .	20-51-20
TRIAx CONNECTOR WITH TRIAX CABLE . . . . .	20-53-05
VEAM 115 SERIES. . . . .	20-62-12
VIKING ELECTRONICS AMC( ) SERIES . . . . .	20-61-28
WALTER KIDDE CONNECTORS. . . . .	20-62-16
WAVE LAB CONNECTORS . . . . .	20-62-18
WIRE O.D. LESS THAN SEAL DIAMETER. . . . .	20-60-08

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

CONNECTOR ASSEMBLY (continued)	
WIRE WRAP, CONNECTORS . . . . .	20-72-18
WIRE-PRO 84-() SERIES . . . . .	20-61-26
WPI 17-() CONNECTORS . . . . .	20-72-11
CONNECTOR ASSSEMBLY	
WINDOW HEAT, CONNECTORS . . . . .	20-64-16
CONNECTOR BACKSHELL	
380()001(), GLENAIR . . . . .	20-25-13
380()003, GLENAIR . . . . .	20-25-13
387(), GLENAIR . . . . .	20-25-13
387()A020, GLENAIR . . . . .	20-25-14
387()B020, GLENAIR . . . . .	20-25-14
387()S020, GLENAIR . . . . .	20-25-14
440()H031, GLENAIR . . . . .	20-25-14
440()J031, GLENAIR . . . . .	20-25-14
440()J069, GLENAIR . . . . .	20-25-14
440()S031, GLENAIR . . . . .	20-25-14
440()S069, GLENAIR . . . . .	20-25-14
467AH009LF10FR, GLENAIR . . . . .	20-25-13
467AJ009LF10FR, GLENAIR . . . . .	20-25-13
467AS009LF10FR, GLENAIR . . . . .	20-25-13
50031004-001, CINCH . . . . .	20-62-21
527-187(), GLENAIR . . . . .	20-25-14
527-212(), GLENAIR . . . . .	20-25-14
557-(), GLENAIR . . . . .	20-25-14
G387(), GLENAIR . . . . .	20-25-13
G4993, GLENAIR . . . . .	20-25-13
G9034(), GLENAIR . . . . .	20-25-13
G9166(), GLENAIR . . . . .	20-25-13
S280W603-1(), BOEING . . . . .	20-25-14
S280W603-2(), BOEING . . . . .	20-25-14
S280W603-3(), BOEING . . . . .	20-25-14
S280W604-1(), BOEING . . . . .	20-25-14
S280W604-2(), BOEING . . . . .	20-25-14
S280W604-3(), BOEING . . . . .	20-25-14
S280W605()-1, BOEING . . . . .	20-25-13
S280W605()-2, BOEING . . . . .	20-25-13
S280W605()-3, BOEING . . . . .	20-25-13
S3929()-34, SUNBANK . . . . .	20-25-14
S3929A()-34, SUNBANK . . . . .	20-25-14
S3929R()-34, SUNBANK . . . . .	20-25-14
S3930()-34, SUNBANK . . . . .	20-25-14
S3930A()-34, SUNBANK . . . . .	20-25-14
S3930R()-34, SUNBANK . . . . .	20-25-14
CONNECTOR DISASSEMBLY	
FRONT RELEASE CONTACTS, GENERAL PROCEDURE . . . . .	20-61-00
REAR RELEASE CONTACTS, GENERAL PROCEDURES . . . . .	20-63-00
CONNECTOR GROUND BLOCK	
S280W601-101, BOEING . . . . .	20-71-14

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****CONNECTOR GROUND BLOCK (continued)**

S280W601-103, BOEING . . . . .	20-71-14
S280W601-104, BOEING . . . . .	20-71-14
S280W601-105, BOEING . . . . .	20-71-14
S280W601-106, BOEING . . . . .	20-71-14
S280W601-116, BOEING . . . . .	20-71-14
S280W601-201, BOEING . . . . .	20-71-14
S280W601-202, BOEING . . . . .	20-71-14
S280W601-203, BOEING . . . . .	20-71-14
S280W601-213, BOEING . . . . .	20-71-14
S280W601-301, BOEING . . . . .	20-71-14

**CONNECTOR INSERT**

318-07-99-001, CINCH . . . . .	20-74-11
318-07-99-002, CINCH . . . . .	20-74-11
318-07-99-014, CINCH . . . . .	20-74-11
318-07-99-015, CINCH . . . . .	20-74-11
318-07-99-016, CINCH . . . . .	20-74-11
318-07-99-017, CINCH . . . . .	20-74-11
BACI10AL()A(), BOEING . . . . .	20-74-02
BACI10AL00-N, BOEING . . . . .	20-74-02
BACI10AM()AP, BOEING . . . . .	20-74-02
BACI10AP()A(), BOEING . . . . .	20-74-02
BACI10AP00-N, BOEING . . . . .	20-74-02
D-659-0004, RAYCHEM . . . . .	20-74-11
MTCP-116-05P2, RAYCHEM . . . . .	20-74-11
MTCP-116-05S2, RAYCHEM . . . . .	20-74-11
MTCP-122-20P, RAYCHEM . . . . .	20-74-11
MTCP-122-20P1, RAYCHEM . . . . .	20-74-11
MTCP-122-20P2, RAYCHEM . . . . .	20-74-11
MTCP-122-20PQ, RAYCHEM . . . . .	20-74-11
MTCP-122-20PQ1, RAYCHEM . . . . .	20-74-11
MTCP-122-20PQ2, RAYCHEM . . . . .	20-74-11
MTCP-122-20S, RAYCHEM . . . . .	20-74-11
MTCP-122-20S1, RAYCHEM . . . . .	20-74-11
MTCP-122-20S2, RAYCHEM . . . . .	20-74-11
MTCTQ-116-001P, RAYCHEM . . . . .	20-74-11
MTCTQ-116-001S, RAYCHEM . . . . .	20-74-11

**CONNECTOR INSTALLATION**

42839KS14S5SX-190, MATRIX . . . . .	20-60-06
CUTOUT ADAPTER PLATE . . . . .	20-60-06
FEEDTHROUGH . . . . .	20-60-06
GENERAL CONDITIONS . . . . .	20-60-06
INSTALLATION TORQUE . . . . .	20-60-06
SAFETY WIRE, GENERAL CONDITIONS . . . . .	20-60-07
SYSTRON DONNER ENGINE FIRE DETECTOR . . . . .	20-60-06

**CONTACT**

ASSEMBLY WITH CONDUCTOR SIZE ADJUSTMENT . . . . .	20-60-00
ASSEMBLY WITH WIRE SIZE SMALLER THAN CRIMP BARREL . . . . .	20-60-00
ESC30(), AMPHENOL . . . . .	20-23-01

# **20-CROSS REFERENCE INDEX**

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20**

CONTACT (continued)	
FRONT RELEASE, CONNECTOR ASSEMBLY . . . . .	20-61-00
REAR RELEASE, CONNECTOR ASSEMBLY . . . . .	20-63-00
REPLACEMENT, GENERAL CONDITIONS . . . . .	20-60-02
UNWIRED, CONNECTOR ASSEMBLY, GENERAL CONDITIONS . . . . .	20-60-08
CONTACT CAVITY SEAL PLUG	
ESC3616, QPL . . . . .	20-23-01
ESC3620, QPL . . . . .	20-23-01
CONTACTOR	
TERMINAL LUG, INSTALLATION TORQUE . . . . .	20-30-00
CONVOLUTED TEFLON TUBE	
CFT-06-0-00, ICORE . . . . .	20-10-16
CFT-09-0-00, ICORE . . . . .	20-10-16
CONVOLUTED TUBE	
120 SERIES, GLENAIR . . . . .	20-61-00
INSTALLATION, CONNECTOR ASSEMBLY . . . . .	20-61-00
MS48 SERIES, RAYCHEM . . . . .	20-61-00
REPAIR . . . . .	20-10-91
CONVOLUTED TUBE ADAPTER	
710 SERIES, GLENAIR . . . . .	20-61-00
CONVOLUTED TUBING	
SUPPLIERS . . . . .	20-00-11
COPALUM SPLICE	
277027-1, AMP . . . . .	20-30-13
277050-1, AMP . . . . .	20-30-13
277082-1, AMP . . . . .	20-30-13
277156-1, AMP . . . . .	20-30-13
277157-1, AMP . . . . .	20-30-13
277158-1, AMP . . . . .	20-30-13
277159-1, AMP . . . . .	20-30-13
277160-1, AMP . . . . .	20-30-13
277161-1, AMP . . . . .	20-30-13
277162-1, AMP . . . . .	20-30-13
277163-1, AMP . . . . .	20-30-13
277164-1, AMP . . . . .	20-30-13
277165-1, AMP . . . . .	20-30-13
277168-1, AMP . . . . .	20-30-13
52522, AMP . . . . .	20-30-13
52523, AMP . . . . .	20-30-13
52524, AMP . . . . .	20-30-13
52525, AMP . . . . .	20-30-13
52526, AMP . . . . .	20-30-13
52527, AMP . . . . .	20-30-13
53527-1, AMP . . . . .	20-30-13
53528-1, AMP . . . . .	20-30-13
COPALUM TERMINAL	
1-52521-0, AMP . . . . .	20-30-14
1-52521-1, AMP . . . . .	20-30-14
227155-1, AMP . . . . .	20-30-14

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## COPALUM TERMINAL (continued)

277028-2, AMP. ....	20-30-14
277147-1, AMP. ....	20-30-14
277147-3, AMP. ....	20-30-14
277147-4, AMP. ....	20-30-14
277147-5, AMP. ....	20-30-14
277148-1, AMP. ....	20-30-14
277148-2, AMP. ....	20-30-14
277148-3, AMP. ....	20-30-14
277148-4, AMP. ....	20-30-14
277148-5, AMP. ....	20-30-14
277148-7, AMP. ....	20-30-14
277149-1, AMP. ....	20-30-14
277149-2, AMP. ....	20-30-14
277149-3, AMP. ....	20-30-14
277149-4, AMP. ....	20-30-14
277149-5, AMP. ....	20-30-14
277150-1, AMP. ....	20-30-14
277150-2, AMP. ....	20-30-14
277150-3, AMP. ....	20-30-14
277151-1, AMP. ....	20-30-14
277151-2, AMP. ....	20-30-14
277151-3, AMP. ....	20-30-14
277151-5, AMP. ....	20-30-14
277151-6, AMP. ....	20-30-14
277152-2, AMP. ....	20-30-14
277152-3, AMP. ....	20-30-14
277152-4, AMP. ....	20-30-14
277152-5, AMP. ....	20-30-14
277153-1, AMP. ....	20-30-14
277154-1, AMP. ....	20-30-14
280U0021, BOEING .....	20-30-14
52516, AMP. ....	20-30-14
52517, AMP. ....	20-30-14
52517-1, AMP. ....	20-30-14
52517-2, AMP. ....	20-30-14
52517-3, AMP. ....	20-30-14
52517-4, AMP. ....	20-30-14
52518, AMP. ....	20-30-14
52518-1, AMP. ....	20-30-14
52518-2, AMP. ....	20-30-14
52518-3, AMP. ....	20-30-14
52518-4, AMP. ....	20-30-14
52519, AMP. ....	20-30-14
52519-1, AMP. ....	20-30-14
52519-2, AMP. ....	20-30-14
52520, AMP. ....	20-30-14
52520-1, AMP. ....	20-30-14
52520-2, AMP. ....	20-30-14

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### COPALUM TERMINAL (continued)

52520-3, AMP	20-30-14
52520-4, AMP	20-30-14
52520-5, AMP	20-30-14
52521-7, AMP	20-30-14
52521-9, AMP	20-30-14
52834-1, AMP	20-30-14
55832-1, AMP	20-30-14
55832-2, AMP	20-30-14
55833-1, AMP	20-30-14
55833-2, AMP	20-30-14
55834-1, AMP	20-30-14
55834-2, AMP	20-30-14
55835-1, AMP	20-30-14
55835-2, AMP	20-30-14
55836-1, AMP	20-30-14
55836-2, AMP	20-30-14
55837-1, AMP	20-30-14
55838-1, AMP	20-30-14
55839-1, AMP	20-30-14
55840-1, AMP	20-30-14
COPPER WIRE TO COPPER WIRE SPLICE ASSEMBLY	20-30-12
CORY	
CTZ623-6CH, CONNECTOR	20-64-11
CORY C()MA CONNECTORS CONNECTOR ASSEMBLY	20-72-10
CORY CB()-() SERIES CONNECTOR ASSEMBLY	20-72-22
CORY COMPONENTS	
CAMA(), CONNECTOR	20-72-10
CB02-15P, CONNECTOR	20-72-22
CB02-15S, CONNECTOR	20-72-22
CB02C-15P, CONNECTOR	20-72-22
CB02C-15S, CONNECTOR	20-72-22
CB05-15P, CONNECTOR	20-72-22
CB05-15S, CONNECTOR	20-72-22
CB06-15P, CONNECTOR	20-72-22
CB06-15S, CONNECTOR	20-72-22
CB08-15P, CONNECTOR	20-72-22
CB08-15S, CONNECTOR	20-72-22
CB08T-15P, CONNECTOR	20-72-22
CB08T-15S, CONNECTOR	20-72-22
CB24P-4, CONNECTOR	20-72-22
CBCX12R-1, CONNECTOR	20-72-22
CBJ-14, BACKSHELL	20-64-14
CBMA(), CONNECTOR	20-72-10
CBME05-15S, CONNECTOR	20-72-22
CBRE02-15P-1, CONNECTOR	20-72-22

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## CORY COMPONENTS (continued)

CBRE02C-15P, CONNECTOR . . . . .	20-72-22
CBX12PM-1A, CONNECTOR . . . . .	20-72-22
CCMA(), CONNECTOR . . . . .	20-72-10
CDMA(), CONNECTOR . . . . .	20-72-10
CEMA(), CONNECTOR . . . . .	20-72-10
CQ()MA(), CONNECTOR . . . . .	20-72-23
CQ()ME(), CONNECTOR . . . . .	20-72-23
CQ()RA(), CONNECTOR . . . . .	20-72-23
CQ()RE(), CONNECTOR . . . . .	20-72-23
CSLT2-21P(), CONNECTOR . . . . .	20-63-22
CWC01-1206, CONNECTOR . . . . .	20-64-16
CWC01-1210, CONNECTOR . . . . .	20-64-16
CWC01-1210-1, CONNECTOR . . . . .	20-64-16
CWC01-2006, CONNECTOR . . . . .	20-64-16
CWC01-2010, CONNECTOR . . . . .	20-64-16
CWC01-2010-1, CONNECTOR . . . . .	20-64-16
CWC02-1206, CONNECTOR . . . . .	20-64-16
CWC02-2006, CONNECTOR . . . . .	20-64-16
CWC02-2010, CONNECTOR . . . . .	20-64-16
CWC02-2010-1, CONNECTOR . . . . .	20-64-16
DSB-3, BACKSHELL . . . . .	20-72-08
DSB-4, BACKSHELL . . . . .	20-72-08
DSB-5, BACKSHELL . . . . .	20-72-08
CORY CQ() CONNECTORS	
CONNECTOR ASSEMBLY . . . . .	20-72-23
COUPLER	
ARINC 629, 5242500-100, SCI TECHNOLOGY . . . . .	20-11-11
ARINC 629, 5242500-101, SCI TECHNOLOGY . . . . .	20-11-11
ARINC 629, 5242500-102, SCI TECHNOLOGY . . . . .	20-11-11
ARINC 629, 5446500-001, SCI TECHNOLOGY . . . . .	20-11-11
ARINC 629, DB110777, AMPHENOL/BENDIX . . . . .	20-11-11
ARINC 629, S227W001-1, AMPHENOL/BENDIX . . . . .	20-11-11
ARINC 629, S227W001-2, SCI TECHNOLOGY . . . . .	20-11-11
ARINC 629, S227W001-4, SCI TECHNOLOGY . . . . .	20-11-11
ARINC 629, S227W001-6, SCI TECHNOLOGY . . . . .	20-11-11
ARINC 629, S227W001-8, SCI TECHNOLOGY . . . . .	20-11-11
COUPLER BASE	
ARINC 629, 5242515-100, SCI TECHNOLOGY . . . . .	20-11-11
ARINC 629, 5242515-101, SCI TECHNOLOGY . . . . .	20-11-11
ARINC 629, 5242515-102, SCI TECHNOLOGY . . . . .	20-11-11
ARINC 629, DB110778, AMPHENOL/BENDIX . . . . .	20-11-11
COUPLER COVER	
ARINC 629, 5242505-100, SCI TECHNOLOGY . . . . .	20-11-11
ARINC 629, 5242505-101, SCI TECHNOLOGY . . . . .	20-11-11
ARINC 629, 5242505-102, SCI TECHNOLOGY . . . . .	20-11-11
ARINC 629, DB110779, AMPHENOL/BENDIX . . . . .	20-11-11
COUPLING RING ADAPTER	
C0900-246-(), CINCH . . . . .	20-61-11

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

COVER PLATE	
312N5204-1, BOEING	20-10-21
CQ()MA(), CONNECTOR, CORY COMPONENTS	20-72-23
CQ()MA(), CONNECTOR, TRI-STAR	20-72-23
CQ()ME(), CONNECTOR, CORY COMPONENTS	20-72-23
CQ()ME(), CONNECTOR, TRI-STAR	20-72-23
CQ()RA(), CONNECTOR, CORY COMPONENTS	20-72-23
CQ()RA(), CONNECTOR, TRI-STAR	20-72-23
CQ()RE(), CONNECTOR, CORY COMPONENTS	20-72-23
CQ()RE(), CONNECTOR, TRI-STAR	20-72-23
CR2, CLIP, STRINGER, BOEING	20-10-12
CR4H, CLIP, STRINGER, BOEING	20-10-12
CRIMP TOOLS	
DESCRIPTION AND EQUIVALENT TOOLS	20-00-12
CRITICAL DESIGN CONFIGURATION CONTROL LIMITATION	20-10-11
CRITICAL DESIGN CONFIGURATION CONTROL LIMITATIONS	20-10-13
CRITICAL DESIGN CONFIGURATION CONTROL LIMITATIONS	20-14-12
CSCS, TIE STRAP MOUNTING PLATFORM, BOEING	20-10-12
CSF3440C()-()CD, CONNECTOR, CINCH	20-61-19
CSF3446C()-()CE, CONNECTOR, CINCH	20-61-19
CSLT2-21P(), CONNECTOR, CORY COMPONENTS	20-63-22
CSLT2-21P(), CONNECTOR, TRI-STAR	20-63-22
CTC-0039()-9/5-9 THERMOCOUPLE CABLE	
RAYCHEM, SHIELD TERMINATION	20-35-25
CTM-1001, SPLICE, RAYCHEM	20-73-00
CTZ623-6CH, CONNECTOR, CORY	20-64-11
CURRENT RETURN NETWORK	
INSTALLATION AND REMOVAL	20-20-14
CUTOUT ADAPTER PLATE	
287T0028-1, BOEING	20-60-06
287T0028-14, BOEING	20-60-06
287T0028-15, BOEING	20-60-06
287T0028-2, BOEING	20-60-06
287T0028-3, BOEING	20-60-06
287T0028-4, BOEING	20-60-06
287T0028-5, BOEING	20-60-06
66-13970-1, BOEING	20-60-06
66-14850-1, BOEING	20-60-06
66-18337-1, BOEING	20-60-06
69-37164-3, BOEING	20-60-06
BACA14BH10, BOEING	20-60-06
BACA14BH10A, BOEING	20-60-06
BACA14BH12, BOEING	20-60-06
BACA14BH14, BOEING	20-60-06
BACA14BH16A, BOEING	20-60-06
BACA14BH1A, BOEING	20-60-06
BACA14BH26A, BOEING	20-60-06
BACA14BH5, BOEING	20-60-06

## 20-CROSS REFERENCE INDEX



707, 727-787

STANDARD WIRING PRACTICES MANUAL

CHAPTER 20

CUTOUT ADAPTER PLATE (continued)

BACA14BH5A, BOEING . . . . .	20-60-06
BACA14BH6A, BOEING . . . . .	20-60-06
BACA14BH7, BOEING . . . . .	20-60-06
BACA14BH7A, BOEING . . . . .	20-60-06
BACA14BH8, BOEING . . . . .	20-60-06
CWC01-1206, CONNECTOR, CORY COMPONENTS . . . . .	20-64-16
CWC01-1210, CONNECTOR, CORY COMPONENTS . . . . .	20-64-16
CWC01-1210-1, CONNECTOR, CORY COMPONENTS . . . . .	20-64-16
CWC01-2006, CONNECTOR, CORY COMPONENTS . . . . .	20-64-16
CWC01-2010, CONNECTOR, CORY COMPONENTS . . . . .	20-64-16
CWC01-2010-1, CONNECTOR, CORY COMPONENTS . . . . .	20-64-16
CWC02-1206, CONNECTOR, CORY COMPONENTS . . . . .	20-64-16
CWC02-2006, CONNECTOR, CORY COMPONENTS . . . . .	20-64-16
CWC02-2010, CONNECTOR, CORY COMPONENTS . . . . .	20-64-16
CWC02-2010-1, CONNECTOR, CORY COMPONENTS . . . . .	20-64-16

20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### D

#### D SUBMINIATURE CONNECTOR

DAU( ), ITT CANNON . . . . .	20-72-16
DBU( ), ITT CANNON . . . . .	20-72-16
DCU( ), ITT CANNON . . . . .	20-72-16
DDU( ), ITT CANNON . . . . .	20-72-16
DEU( ), ITT CANNON . . . . .	20-72-16
D-141-0111, SOLDER SLEEVE, TERMAPOST, RAYCHEM . . . . .	20-72-18
D-141-0112, SOLDER SLEEVE, TERMAPOST, RAYCHEM . . . . .	20-72-18
D-141-0113, SOLDER SLEEVE, TERMAPOST, RAYCHEM . . . . .	20-72-18
D-141-0114, SOLDER SLEEVE, TERMAPOST, RAYCHEM . . . . .	20-72-18
D-144-25, SOLDER SLEEVE, RAYCHEM . . . . .	20-10-13
D-144-25, SOLDER SLEEVE, RAYCHEM . . . . .	20-10-15
D-144-25, SOLDER SLEEVE, RAYCHEM . . . . .	20-30-12
D-150-0251, SPLICE KIT, HIGH TEMPERATURE, RAYCHEM . . . . .	20-30-12
D-150-0272, SPLICE KIT, RAYCHEM . . . . .	20-30-12
D-436-36, SPLICE KIT, RAYCHEM . . . . .	20-30-12
D-436-37, SPLICE KIT, RAYCHEM . . . . .	20-30-12
D-436-38, SPLICE KIT, RAYCHEM . . . . .	20-30-12
D-436-60, SPLICE KIT, CLOSED END, RAYCHEM . . . . .	20-30-12
D-659-0004, CONNECTOR INSERT, RAYCHEM . . . . .	20-74-11
D-756-08, TERMINAL LUG, GENERAL PURPOSE, MOLEX . . . . .	20-15-21
D105A067-60, CONNECTOR, W. W. FISHER . . . . .	20-40-16
D38999/20, CONNECTOR, QPL . . . . .	20-63-19
D38999/24, CONNECTOR, QPL . . . . .	20-63-19
D38999/26, CONNECTOR, QPL . . . . .	20-63-19
D5653, CONNECTOR, GRAVINER . . . . .	20-62-15
D5653-1, CONNECTOR, GRAVINER . . . . .	20-62-15
D5653-2, CONNECTOR, GRAVINER . . . . .	20-62-15
D5922, CONNECTOR, GRAVINER . . . . .	20-62-15
D5922-1, CONNECTOR, GRAVINER . . . . .	20-62-15
D5922-2, CONNECTOR, GRAVINER . . . . .	20-62-15
DA19678-1, BACKSHELL, ITT CANNON . . . . .	20-72-08
DA19977-1, BACKSHELL, ITT CANNON . . . . .	20-72-08
DA20961, BACKSHELL, ITT CANNON . . . . .	20-72-08
DA24658, BACKSHELL, ITT CANNON . . . . .	20-72-08
DAGE	
30382-1, CONNECTOR . . . . .	20-51-20
30382-1, CONNECTOR . . . . .	20-53-05
30383-1, CONNECTOR . . . . .	20-51-20
30391-1, CONNECTOR . . . . .	20-53-05
DAMA(), CONNECTOR, ITT CANNON . . . . .	20-72-12
DANIELS	
A10-106, FERRULE - SAFETY CABLE . . . . .	20-60-07
A10-109, FERRULE - SAFETY CABLE . . . . .	20-60-07
A10-112, FERRULE - SAFETY CABLE . . . . .	20-60-07
A10-115, FERRULE - SAFETY CABLE . . . . .	20-60-07

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### DANIELS (continued)

A10-118, FERRULE - SAFETY CABLE . . . . .	20-60-07
A10-121, FERRULE - SAFETY CABLE . . . . .	20-60-07
A10-124, FERRULE - SAFETY CABLE . . . . .	20-60-07
C110-106, FERRULE - SAFETY CABLE . . . . .	20-60-07
C110-109, FERRULE - SAFETY CABLE . . . . .	20-60-07
C110-112, FERRULE - SAFETY CABLE . . . . .	20-60-07
C110-115, FERRULE - SAFETY CABLE . . . . .	20-60-07
C110-118, FERRULE - SAFETY CABLE . . . . .	20-60-07
C110-121, FERRULE - SAFETY CABLE . . . . .	20-60-07
C110-124, FERRULE - SAFETY CABLE . . . . .	20-60-07
F10-1, FERRULE - SAFETY CABLE . . . . .	20-60-07

### DATA BUS CABLE

ARINC 629, DAMAGE CONDITIONS AND REPAIR . . . . .	20-10-13
DAU( ), CONNECTOR, ITT CANNON . . . . .	20-72-16
DB110777, COUPLER, ARINC 629, AMPHENOL/BENDIX . . . . .	20-11-11
DB110778, COUPLER BASE, ARINC 629, AMPHENOL/BENDIX . . . . .	20-11-11
DB110779, COUPLER COVER, ARINC 629, AMPHENOL/BENDIX . . . . .	20-11-11
DB19678-2, BACKSHELL, ITT CANNON . . . . .	20-72-08
DB19977-2, BACKSHELL, ITT CANNON . . . . .	20-72-08
DB20962, BACKSHELL, ITT CANNON . . . . .	20-72-08
DB24659, BACKSHELL, ITT CANNON . . . . .	20-72-08
DBMA(), CONNECTOR, ITT CANNON . . . . .	20-72-12
DBMAM(), CONNECTOR, ITT CANNON . . . . .	20-72-12
DBMM25P-F179A, CONNECTOR, ITT CANNON . . . . .	20-72-18
DBMM37P-F179A, CONNECTOR, ITT CANNON . . . . .	20-72-18
DBMM50P-F179A, CONNECTOR, ITT CANNON . . . . .	20-72-18
DBU( ), CONNECTOR, ITT CANNON . . . . .	20-72-16
DC19678-3, BACKSHELL, ITT CANNON . . . . .	20-72-08
DC19977-3, BACKSHELL, ITT CANNON . . . . .	20-72-08
DC20963, BACKSHELL, ITT CANNON . . . . .	20-72-08
DC24660, BACKSHELL, ITT CANNON . . . . .	20-72-08
DCMA(), CONNECTOR, ITT CANNON . . . . .	20-72-12
DCU( ), CONNECTOR, ITT CANNON . . . . .	20-72-16
DD()-(), CONNECTOR, DEUTSCH . . . . .	20-61-24
DD19678-4, BACKSHELL, ITT CANNON . . . . .	20-72-08
DD19977-4, BACKSHELL, ITT CANNON . . . . .	20-72-08
DD20964, BACKSHELL, ITT CANNON . . . . .	20-72-08
DD24661, BACKSHELL, ITT CANNON . . . . .	20-72-08
DDMA(), CONNECTOR, ITT CANNON . . . . .	20-72-12
DDMAM(), CONNECTOR, ITT CANNON . . . . .	20-72-12
DDU( ), CONNECTOR, ITT CANNON . . . . .	20-72-16
DE19977-5, BACKSHELL, ITT CANNON . . . . .	20-72-08
DE24657, BACKSHELL, ITT CANNON . . . . .	20-72-08
DE44994, BACKSHELL, ITT CANNON . . . . .	20-72-08
DEMA(), CONNECTOR, ITT CANNON . . . . .	20-72-12
DEU( ), CONNECTOR, ITT CANNON . . . . .	20-72-16
DEUTSCH	
787-8055-10M, BACKSHELL . . . . .	20-74-19

# 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### DEUTSCH (continued)

787-8055-16M, BACKSHELL . . . . .	20-74-19
787-8055-20M, BACKSHELL . . . . .	20-74-19
787-8055-30M, BACKSHELL . . . . .	20-74-19
BMS24264R()-B(), CONNECTOR . . . . .	20-61-11
BMS24266R()-B(), CONNECTOR . . . . .	20-61-11
DD()-(), CONNECTOR . . . . .	20-61-24
DL60(), CONNECTOR . . . . .	20-63-01
DL64(), CONNECTOR . . . . .	20-63-01
DL66(), CONNECTOR . . . . .	20-63-01
DL68(), CONNECTOR . . . . .	20-63-01
DS07-(), CONNECTOR . . . . .	20-61-15
KPSE(), CONNECTOR . . . . .	20-61-16
TSE-12-01, JIFFY JUNCTION SPLICE . . . . .	20-90-14
TSE-16-01, JIFFY JUNCTION SPLICE . . . . .	20-90-14
TSE-20-01, JIFFY JUNCTION SPLICE . . . . .	20-90-14
DEUTSCH DD SERIES	
CONNECTOR ASSEMBLY . . . . .	20-61-24
DEUTSCH DL TYPE CONNECTOR	
CONNECTOR ASSEMBLY . . . . .	20-63-01
DEUTSCH DS SERIES	
CONNECTOR ASSEMBLY . . . . .	20-61-15
DIODE MODULE	
RBD20-1, SOURIAU . . . . .	20-90-15
RBD20-2, SOURIAU . . . . .	20-90-15
S280W555-751, BOEING . . . . .	20-90-15
S280W555-753, BOEING . . . . .	20-90-15
DIODE TERMINAL BLOCK MODRESISTOR TERMINAL BLOCK	
YHLZD-11, BURNDY . . . . .	20-90-11
YHLZD-14, BURNDY . . . . .	20-90-11
YHLZD-15, BURNDY . . . . .	20-90-11
YHLZD-23, BURNDY . . . . .	20-90-11
YHLZD-24, BURNDY . . . . .	20-90-11
YHLZD-26, BURNDY . . . . .	20-90-11
YHLZD-28, BURNDY . . . . .	20-90-11
YHLZD-29, BURNDY . . . . .	20-90-11
YHLZD-30, BURNDY . . . . .	20-90-11
YHLZD-31, BURNDY . . . . .	20-90-11
YHLZD-32, BURNDY . . . . .	20-90-11
YHLZD-33, BURNDY . . . . .	20-90-11
YHLZD-34, BURNDY . . . . .	20-90-11
YHLZD-35, BURNDY . . . . .	20-90-11
YHLZD-38, BURNDY . . . . .	20-90-11
YHLZD-39, BURNDY . . . . .	20-90-11
YHLZD-9, BURNDY . . . . .	20-90-11
DIODE TERMINAL MODULE	
001765-101-02, AIR LB . . . . .	20-15-48
40-718-5282, SMITHS INDUSTRIES . . . . .	20-15-48
DL60(), CONNECTOR, DEUTSCH . . . . .	20-63-01

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

DL64(), CONNECTOR, DEUTSCH . . . . .	20-63-01
DL66(), CONNECTOR, DEUTSCH . . . . .	20-63-01
DL68(), CONNECTOR, DEUTSCH . . . . .	20-63-01
DPA-32-33S, CONNECTOR, ITT CANNON . . . . .	20-71-11
DPA-32-33S3, CONNECTOR, ITT CANNON . . . . .	20-71-11
DPA-6-33S, CONNECTOR, ITT CANNON . . . . .	20-71-11
DPA-6-34P, CONNECTOR, ITT CANNON . . . . .	20-71-11
DPAF-2-33S, CONNECTOR, ITT CANNON . . . . .	20-71-11
DPAL-L24C2-33S, CONNECTOR, ITT CANNON . . . . .	20-71-11
DPAMA-32-33S, CONNECTOR, ITT CANNON . . . . .	20-71-11
DPAMA-32-33S-1B, CONNECTOR, ITT CANNON . . . . .	20-71-11
DPAMA-32-33SN, CONNECTOR, ITT CANNON . . . . .	20-71-11
DPAMA-L24C2-33S, CONNECTOR, ITT CANNON . . . . .	20-71-11
DPD-32-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPD-32-34P-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPD-45-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPD-66-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPD-A15-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPD-A8-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPD-B18-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPD-G20-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPD-G20-34P-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPD-N10-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPD2MA-152-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPD2MB-152-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPDB-20-34P-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPDB-58-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPDB-58-34P-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPDB-G20-34P-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPDB18-33S1B, CONNECTOR, ITT CANNON . . . . .	20-40-00
DPDBMA-G20-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPDBMA-G20-34P-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPDMA-32C2-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPDMA-45-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPDMA-76-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPDMA-A32-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPDMA-G20-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPDMA-U32C2-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPDMB-32-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPDMB-45-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPDMB-76-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPDMB-78-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPDMB-U32C2-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPDN10-33S1B, CONNECTOR, ITT CANNON . . . . .	20-40-00
DPE-MA(), CONNECTOR, CANNON . . . . .	20-71-13
DPE60-33S, CONNECTOR, ITT CANNON . . . . .	20-40-00
DPX(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX-17-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

DPX-22017-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2-67S32C2S-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2-B10C3SD32C2S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2-F40C1SF40C1S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2-ZA16C3S26S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2-ZA16C3SB10C3S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2AF-32S45S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2DA-26S7S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2DA-26S7S-33B-14(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2EF-AC3S67S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2EF-AC3S67S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2EF-C2ESD32C2S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-()-()-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-00P67P-34B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-00S32W4S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-00S57S-33-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-00S57S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-00SD32W4S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-106P106P-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-106P106P-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-106P106P-33M-01(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-106P106P-34F-01(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-106P57P-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-106PD32C2S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-106S00S-34B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-106S106S-34B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-106S106S-34F-01(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-26P26P-34B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-26S26S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-26S45S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-26S45S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-26S57S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-32W4SD106P-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-40B1S40B1S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-40S40S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-40S40S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-40W1S40W1S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-40W1S40W1S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-45S40S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-45S40S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-45S45S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-45S45S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-57P-106S-34B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-57P57P-34B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-57S00S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-57S106P-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-57S106P-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-57S26S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11

# 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

DPX2MA-57S40S-32B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-57S45S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-57S45S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-57S57S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-57S57S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-57S57S-34B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-57S67S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-57S67S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-57SD106P-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-67P67P-34B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-67S32A2S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-67S32C2S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-67S32W2S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-67S67S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-67S67S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-67SA106P-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-67SD8S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-A106PA106P-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-A106PA106P-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-AC3S67S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-AC3S67S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-C2MS57S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-C2MS57S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-C2MSF40C1S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-C2MSF40C1S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-C2S57S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-C8AS67S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-C8ASC8AS-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-C8ASC8AS-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-C8CS67S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-D106P40B1S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-D106PC8AS-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-D106PD106P-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-D106PD106P-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-D32C2S57S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-D32C2S57S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-D32C2S67S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-D32C2S67S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-F40C1SF40C1S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-F40C1SF40C1S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-W8S67S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MA-W8S67S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MB-()-()-03(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MB-00P67P-34B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MB-00S67S-33B-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MB-00S67S-33B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MB-26P26P-34B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPX2MB-26P8P-34B-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

DPX2MB-26S26S-33B-(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-26S67S-33A-(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-26S8S-33B-(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-26S8S-33B-00(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-26SC8CS-33B-(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-26SC8CS-33B-00(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-40B1S40B1S-33B-(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-40B1S40B1S-33B-00(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-40S40S-33B-(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-40S40S-33B-00(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-40S40S-33F-(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-45S45S-33B-(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-45S45S-33B-00(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-57P57P-34B-00(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-57S00S-33B-(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-57S57S-33-00(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-57S57S-33A-(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-57S57S-33B-(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-57S57S-33B-00(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-67P67P-34B-00(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-67S67S-33B-(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-AC3S67S-33B-(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-AC3S67S-33B-00(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-C2DS57S-33B-(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-D32C2S57S-33B-(), CONNECTOR, ITT CANNON	20-71-11
DPX2MB-D32C2S57S-33B-00(), CONNECTOR, ITT CANNON	20-71-11
DPX2P-67S32C2S-33B-(), CONNECTOR, ITT CANNON	20-71-11
DPX3MA-32W4S-D106P-67S-33-(), CONNECTOR, ITT CANNON	20-71-11
DPX3MA-A318-A318-33P-(), CONNECTOR, ITT CANNON	20-71-11
DPX3MA-B32C4S-D106P-67S-33-(), CONNECTOR, ITT CANNON	20-71-11
DPX3MA-B96-33S-(), CONNECTOR, ITT CANNON	20-71-11
DPX3MA-D32C4S-D106P-67S-33-(), CONNECTOR, ITT CANNON	20-71-11
DPX3MA-E96-33S-0001, CONNECTOR, ITT CANNON	20-71-11
DPX3MA66565-252, CONNECTOR, ITT CANNON	20-71-11
DPX3MB-26S-67S-67S-33B-(), CONNECTOR, ITT CANNON	20-71-11
DPX3MB-26S67S67S-33B-0001, CONNECTOR, ITT CANNON	20-71-11
DPX3MB-78-34P-00(), CONNECTOR, ITT CANNON	20-71-11
DPX3ME-D205-33PS-(), CONNECTOR, ITT CANNON	20-71-11
DPX4MA-105-33S-(), CONNECTOR, ITT CANNON	20-71-11
DPX4MA-A307-33PS-(), CONNECTOR, ITT CANNON	20-71-11
DPX51252-1-(), CONNECTOR, ITT CANNON	20-71-11
DPX51252-2-(), CONNECTOR, ITT CANNON	20-71-11
DPXA-32-33S-(), CONNECTOR, ITT CANNON	20-71-11
DPXA-32-34P-(), CONNECTOR, ITT CANNON	20-71-11
DPXA-8-33S-(), CONNECTOR, ITT CANNON	20-71-11
DPXAMA-26-33S-(), CONNECTOR, ITT CANNON	20-71-11
DPXAMA-26-34P, CONNECTOR, ITT CANNON	20-71-11
DPXAMA-26-34P-(), CONNECTOR, ITT CANNON	20-71-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

DPXAMA-32-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXAMA-32-34P-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXAMA-32B2-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXAMA-40-33P-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXAMA-40-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXAMA-45-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXAMA-57-34P-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXAMA-A10-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXAMB-26-33S, CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXAMB-26-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXAMB-26-34P, CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXAMB-32B2-33S, CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXAMB-32B2-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXAMB-32W2-33S, CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXAMB-32W2-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXAMB-57-33S, CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXAMB-57-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXAMB-67-33S, CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXB-17-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXB-32-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXB-40-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXB-45-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXB-8-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXB32-33S-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-()-33S-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-10-33P-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-32-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-32-33S-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-32W4-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-32W4-33S-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-40-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-40-33S-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-45-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-45-33S-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-57-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-57-33S-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-57-34P-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-67-33S(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-67-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-67-33S-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-6733S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-8-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-8-33S-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-8-34S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-B32C4-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-D106-33P-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-D106-33P-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-D32C4-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

DPXBMA-D32C4-33S00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-D32C4-34P00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMA-D32W4-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMB-()-33S-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMB-40-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMB-40-33S-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMB-45-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMB-45-33S-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMB-57-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMB-57-33S-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMB-57-34P-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMB-67-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMB-67-33S-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMB-8-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBMB-8-33S-00(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBME-10-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBME-40-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBME-57-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXBNA-67M-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXF40C1S, CONNECTOR, ITT CANNON . . . . .	20-40-00
DPXMA-26-33S-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DPXRC-20C5-33A1-(), CONNECTOR, ITT CANNON . . . . .	20-71-11
DS07-(), CONNECTOR, DEUTSCH . . . . .	20-61-15
DSB-3, BACKSHELL, CORY COMPONENTS . . . . .	20-72-08
DSB-3, BACKSHELL, TRI-STAR . . . . .	20-72-08
DSB-4, BACKSHELL, CORY COMPONENTS . . . . .	20-72-08
DSB-4, BACKSHELL, TRI-STAR . . . . .	20-72-08
DSB-5, BACKSHELL, CORY COMPONENTS . . . . .	20-72-08
DSB-5, BACKSHELL, TRI-STAR . . . . .	20-72-08
DSX1(), CONNECTOR, RADIAL . . . . .	20-71-15
DSX2(), CONNECTOR, RADIAL . . . . .	20-71-15
DSX3(), CONNECTOR, RADIAL . . . . .	20-71-15
DSXE(), CONNECTOR, RADIAL . . . . .	20-71-15
DSXN(), CONNECTOR, RADIAL . . . . .	20-71-15
DSXT(), CONNECTOR, RADIAL . . . . .	20-71-15
DUAL GROUND . . . . .	
ASSEMBLY . . . . .	20-20-12
CONFIGURATION . . . . .	20-20-00
DUAL HOLE TERMINAL GROUND STUD . . . . .	
INSTALLATION AND REMOVAL . . . . .	20-20-10
DUST COVER . . . . .	
667-047, GLENAIR . . . . .	20-40-16

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### E

E-760-08, TERMINAL LUG, GENERAL PURPOSE, MOLEX. . . . .	20-15-21
EATON	
851-30768-(), SWITCH, LIGHTED PUSHBUTTON . . . . .	20-83-00
851-35100-(), SWITCH, LIGHTED PUSHBUTTON . . . . .	20-83-00
851-37167-()-001, SWITCH, LIGHTED PUSH BUTTON. . . . .	20-84-13
851-37167-()-002, SWITCH, LIGHTED PUSH BUTTON. . . . .	20-84-13
851-37167-()-003, SWITCH, LIGHTED PUSH BUTTON. . . . .	20-84-13
851-37962-()-001, SWITCH, LIGHTED PUSH BUTTON. . . . .	20-84-13
851-37962-()-002, SWITCH, LIGHTED PUSH BUTTON. . . . .	20-84-13
851-37962-()-003, SWITCH, LIGHTED PUSH BUTTON. . . . .	20-84-13
851-37962-()-004, SWITCH, LIGHTED PUSH BUTTON. . . . .	20-84-13
851-37962-()-005, SWITCH, LIGHTED PUSH BUTTON. . . . .	20-84-13
851-37962-()-006, SWITCH, LIGHTED PUSH BUTTON. . . . .	20-84-13
851-37962-()-101, SWITCH, LIGHTED PUSH BUTTON. . . . .	20-84-13
851-37962-()-102, SWITCH, LIGHTED PUSH BUTTON. . . . .	20-84-13
851-37962-()-103, SWITCH, LIGHTED PUSH BUTTON. . . . .	20-84-13
851-37962-()-104, SWITCH, LIGHTED PUSH BUTTON. . . . .	20-84-13
851-37962-()-201, SWITCH, LIGHTED PUSH BUTTON. . . . .	20-84-13
851-37962-()-202, SWITCH, LIGHTED PUSH BUTTON. . . . .	20-84-13
851-37962-()-203, SWITCH, LIGHTED PUSH BUTTON. . . . .	20-84-13
851-37962-()-204, SWITCH, LIGHTED PUSH BUTTON. . . . .	20-84-13
EATON AEROSPACE	
8856K515, TOGGLE SWITCH . . . . .	20-83-11
8868K56, TOGGLE SWITCH . . . . .	20-83-11
ELCU	
TERMINAL LUG, INSTALLATION TORQUE. . . . .	20-30-00
ELECTRICAL BOND	
CLAMP . . . . .	20-20-00
CONNECTOR SHELL . . . . .	20-20-00
MAXIMUM RESISTANCE . . . . .	20-20-00
TEST PROCEDURES . . . . .	20-20-00
ELECTROMAGNETIC COMPATIBILITY (EMC)	
WIRE SEPARATION. . . . .	20-10-19
ELECTROSTATIC DISCHARGE (ESD)	
DEFINITION. . . . .	20-41-01
ELECTROSTATIC DISCHARGE SENSITIVE (ESDS)	
DEFINITION. . . . .	20-41-01
ELM655-1, BACKSHELL, SMITHS INDUSTRIES. . . . .	20-15-42
EMC GROUP SEPARATION	
WIRE HARNESS . . . . .	20-10-19
EMI BACKSHELL . . . . .	20-25-13
END CAP	
324484, AMP . . . . .	20-30-16
324485, AMP . . . . .	20-30-16
324486, AMP . . . . .	20-30-16
324487, AMP . . . . .	20-30-16

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### END CAP (continued)

328307, AMP	20-30-16
328308, AMP	20-30-16
328309, AMP	20-30-16
328854, AMP	20-30-16
328855, AMP	20-30-16
328856, AMP	20-30-16
328857, AMP	20-30-16
328858, AMP	20-30-16
328859, AMP	20-30-16
328860, AMP	20-30-16
328861, AMP	20-30-16
329638, AMP	20-30-16
HEAT SHRINKABLE, BACT63D1, BOEING	20-30-16
HEAT SHRINKABLE, BACT63D2, BOEING	20-30-16
HEAT SHRINKABLE, BACT63D3, BOEING	20-30-16

### ENDEVCO

16833 CABLE, VEAM 115 SERIES ASSEMBLY	20-62-12
16833, CABLE, AVM	20-35-26
26574, CONNECTOR	20-35-11

### ENGINE FIRE DETECTOR CONNECTOR

SYSTRON DONNER, INSTALLATION TORQUE	20-60-06
-------------------------------------	----------

### ENGINE WIRE HARNESS

CABLE REPAIR	20-10-13
DAMAGE CONDITIONS AND REPAIR	20-10-13
WIRE REPAIR	20-10-13

### EQUIPMENT

ESDS, CONDITIONS FOR INSTALLATION AND REMOVAL	20-41-01
---	----------

### EQUIPMENT INSTALLATION

ELECTRICAL CONNECTIONS	20-30-00
PHASE IDENTIFICATION	20-30-00
TERMINAL LUG, INSTALLATION	20-30-00
TERMINAL LUG, INSTALLATION TORQUE	20-30-00

ESC10( ), CONNECTOR, QPL	20-23-01
--------------------------	----------

ESC11( ), CONNECTOR, QPL	20-23-01
--------------------------	----------

ESC30(), CONTACT, AMPHENOL	20-23-01
----------------------------	----------

ESC3616, CONTACT CAVITY SEAL PLUG, QPL	20-23-01
--	----------

ESC3620, CONTACT CAVITY SEAL PLUG, QPL	20-23-01
--	----------

ESC75(), BACKSHELL, QPL	20-23-39
-------------------------	----------

ESC76(), BACKSHELL, QPL	20-23-39
-------------------------	----------

ESC77(), BACKSHELL, QPL	20-23-39
-------------------------	----------

### ESD

DEFINITION	20-41-01
------------	----------

### ESDS DEVICES

GENERAL CONDITIONS	20-41-01
IDENTIFICATION	20-41-01

### ESTERLINE-MASON

502-70T-02, LAMP SOCKET	20-84-00
514-74-13-02, CONNECTOR	20-84-00

# 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****ETC**

AA-820-04, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
AA-820-06, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
AA-821-08, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
AA-821-10, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
AA-822-14, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
AA-822-56, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
AA-826-38, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
AA-832-06, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BB-818-38, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BB-823-04, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BB-823-06, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BB-825-14, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BB-825-56, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BB-837-06, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BB-837-08, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
BB-839-10, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
C-828-06, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
C-828-08, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
C-828-10, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
C-830-14, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
C-830-56, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
C-840-38, TERMINAL LUG, GENERAL PURPOSE .....	20-30-11
EVD9F00000, CONNECTOR, POSITRONIC INDUSTRIES .....	20-15-41
EXTERNAL POWER CONNECTOR	
TERMINAL LUG, INSTALLATION TORQUE .....	20-30-00
EYELET	
CE46FC, CIRCON .....	20-60-00
CE46FC, CIRCON .....	20-81-16
CE66FC, CIRCON .....	20-60-00
CE66FC, CIRCON .....	20-81-16
CONTACT ASSEMBLY WITH CONDUCTOR SIZE ADJUSTMENT .....	20-60-00
S-5934CUAU, GLOBAL SUPPLY .....	20-81-16
S-6049CUAU, GLOBAL SUPPLY .....	20-81-16
Y-6015-C, INTERNATIONAL EYELETS .....	20-60-00
Y-9015-C, INTERNATIONAL EYELETS .....	20-60-00
Y6015-C, INTERNATIONAL EYELETS INC. ....	20-81-16
Y9015-C, INTERNATIONAL EYELETS INC. ....	20-81-16

**20-CROSS REFERENCE INDEX**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### F

F10-1, FERRULE - SAFETY CABLE, DANIELS . . . . .	20-60-07
F20B, FERRULE - SAFETY CABLE, BERGEN . . . . .	20-60-07
FAYING SURFACE	
ELECTRICAL BOND, PREPARATION . . . . .	20-20-00
FC-3400D()-(), CONNECTOR, FLIGHT . . . . .	20-61-19
FC-3406D()-(), CONNECTOR, FLIGHT . . . . .	20-61-19
FC3400D()-(), CONNECTOR, FLIGHT. . . . .	20-61-19
FC3400D()-()-140, CONNECTOR, FLIGHT. . . . .	20-61-19
FC3406D()-(), CONNECTOR, FLIGHT. . . . .	20-61-19
FC3406D()-()-144, CONNECTOR, FLIGHT. . . . .	20-61-19
FCI	
YAV1CL1NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV1CL2NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV1CLNK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV25L1NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV25L2NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV25L3NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV25L4NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV25LNK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV26L12NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV26L1NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV26L22NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV26L3NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV26LNK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV27L1NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV27LNK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV28L12NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV28L14NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV28LNK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV2CL1NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV2CL2NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV2CL3NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV2CL4NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV2CLNK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV4CL2NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV4CL3NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV4CL5NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV4CLNK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV6CL10NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV6CL1NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV6CL2NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV6CL4NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV6CLNK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV8CL14NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV8CL1NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV8CL2NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## FCI (continued)

YAV8CL3NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV8CL4NK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11
YAV8CLNK, TERMINAL LUG, HIGH TEMPERATURE . . . . .	20-30-11

## FEEDTHROUGH CONNECTOR

BACC63CP(), BOEING . . . . .	20-60-06
BACC63CR(), BOEING . . . . .	20-60-06
CN1068A22A55N, CINCH . . . . .	20-60-06

## FENWAL

04-035303-087, CONNECTOR . . . . .	20-62-14
35303-10, CONNECTOR . . . . .	20-62-14
35303-100, CONNECTOR . . . . .	20-62-14
35303-11, CONNECTOR . . . . .	20-62-14
35303-12, CONNECTOR . . . . .	20-62-14
35303-141, CONNECTOR . . . . .	20-62-14
35303-142, CONNECTOR . . . . .	20-62-14
35303-64, CONNECTOR . . . . .	20-62-14
35303-66, CONNECTOR . . . . .	20-62-14
35303-67, CONNECTOR . . . . .	20-62-14
35303-68, CONNECTOR . . . . .	20-62-14
35303-73, CONNECTOR . . . . .	20-62-14
35303-75, CONNECTOR . . . . .	20-62-14
35303-77, CONNECTOR . . . . .	20-62-14
35303-8, CONNECTOR . . . . .	20-62-14
35303-87, CONNECTOR . . . . .	20-62-14
35303-9, CONNECTOR . . . . .	20-62-14
35303-90, CONNECTOR . . . . .	20-62-14
35303-91, CONNECTOR . . . . .	20-62-14
35303-94, CONNECTOR . . . . .	20-62-14
35303-95, CONNECTOR . . . . .	20-62-14
35303-97, CONNECTOR . . . . .	20-62-14
35303-98, CONNECTOR . . . . .	20-62-14
35303-99, CONNECTOR . . . . .	20-62-14

## FENWAL 35303-() SERIES CONNECTORS

CONNECTOR ASSEMBLY . . . . .	20-62-14
------------------------------	----------

## FERRITE SUPPRESSOR

S280W752-1, BOEING . . . . .	20-11-11
------------------------------	----------

## FERRULE

MECHANICAL, BACS13S(), BOEING . . . . .	20-10-15
MECHANICAL, BACS13S()NP, BOEING . . . . .	20-10-15

## FERRULE - SAFETY CABLE

A10-106, DANIELS . . . . .	20-60-07
A10-109, DANIELS . . . . .	20-60-07
A10-112, DANIELS . . . . .	20-60-07
A10-115, DANIELS . . . . .	20-60-07
A10-118, DANIELS . . . . .	20-60-07
A10-121, DANIELS . . . . .	20-60-07
A10-124, DANIELS . . . . .	20-60-07
BACC13AT2C12, BOEING . . . . .	20-60-07

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## FERRULE - SAFETY CABLE (continued)

BACC13AT2C15, BOEING	20-60-07
BACC13AT2C18, BOEING	20-60-07
BACC13AT2C21, BOEING	20-60-07
BACC13AT2C24, BOEING	20-60-07
BACC13AT2C6, BOEING	20-60-07
BACC13AT2C9, BOEING	20-60-07
BACC13AT2F, BOEING	20-60-07
BACC13AT2K12, BOEING	20-60-07
BACC13AT2K15, BOEING	20-60-07
BACC13AT2K18, BOEING	20-60-07
BACC13AT2K21, BOEING	20-60-07
BACC13AT2K24, BOEING	20-60-07
BACC13AT2K6, BOEING	20-60-07
BACC13AT2K9, BOEING	20-60-07
C110-106, DANIELS	20-60-07
C110-109, DANIELS	20-60-07
C110-112, DANIELS	20-60-07
C110-115, DANIELS	20-60-07
C110-118, DANIELS	20-60-07
C110-121, DANIELS	20-60-07
C110-124, DANIELS	20-60-07
C20B06, BERGEN	20-60-07
C20B09, BERGEN	20-60-07
C20B12, BERGEN	20-60-07
C20B15, BERGEN	20-60-07
C20B18, BERGEN	20-60-07
C20B21, BERGEN	20-60-07
C20B24, BERGEN	20-60-07
F10-1, DANIELS	20-60-07
F20B, BERGEN	20-60-07
K20B06, BERGEN	20-60-07
K20B09, BERGEN	20-60-07
K20B12, BERGEN	20-60-07
K20B15, BERGEN	20-60-07
K20B18, BERGEN	20-60-07
K20B21, BERGEN	20-60-07
K20B24, BERGEN	20-60-07
FIBER OPTIC CABLE	
INSTALLATION	20-12-11
FIBER OPTIC CABLE ASSEMBLY	
140125-0000, ITT CANNON	20-12-11
140125-0001, ITT CANNON	20-12-11
140125-0002, ITT CANNON	20-12-11
140125-0003, ITT CANNON	20-12-11
140126-0002, ITT CANNON	20-12-11
140126-0003, ITT CANNON	20-12-11
140127-0003, ITT CANNON	20-12-11
140127-0004, ITT CANNON	20-12-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## FIBER OPTIC CABLE ASSEMBLY (continued)

140127-0005, ITT CANNON . . . . .	20-12-11
140127-0006, ITT CANNON . . . . .	20-12-11
140127-0007, ITT CANNON . . . . .	20-12-11
140127-0008, ITT CANNON . . . . .	20-12-11
140127-0009, ITT CANNON . . . . .	20-12-11
140127-0010, ITT CANNON . . . . .	20-12-11
140127-0011, ITT CANNON . . . . .	20-12-11
140127-0012, ITT CANNON . . . . .	20-12-11
140127-0020, ITT CANNON . . . . .	20-12-11
140127-0021, ITT CANNON . . . . .	20-12-11
140127-0022, ITT CANNON . . . . .	20-12-11
BACC69A AND BACC69C, BOEING . . . . .	20-12-20
BACC69A, GENERAL CONDITIONS . . . . .	20-10-11
S280W701-101, BOEING . . . . .	20-12-11
S280W701-102, BOEING . . . . .	20-12-11
S280W701-106, BOEING . . . . .	20-12-11
S280W701-107, BOEING . . . . .	20-12-11
S280W701-108, BOEING . . . . .	20-12-11
S280W701-110, BOEING . . . . .	20-12-11
S280W701-111, BOEING . . . . .	20-12-11
S280W701-112, BOEING . . . . .	20-12-11
S280W701-113, BOEING . . . . .	20-12-11
S280W701-114, BOEING . . . . .	20-12-11
S280W701-115, BOEING . . . . .	20-12-11
S280W701-116, BOEING . . . . .	20-12-11
S280W701-117, BOEING . . . . .	20-12-11
S280W701-118, BOEING . . . . .	20-12-11
S280W701-119, BOEING . . . . .	20-12-11
S280W701-120, BOEING . . . . .	20-12-11
S280W701-122, BOEING . . . . .	20-12-11
S280W701-123, BOEING . . . . .	20-12-11
S280W701-124, BOEING . . . . .	20-12-11
FIBER OPTIC CABLE CLAMP	
287T0011-1, BOEING . . . . .	20-12-11
287T0011-4, BOEING . . . . .	20-12-11
FIBER OPTIC CLAMP KIT	
CHA-1598, RAYCHEM . . . . .	20-74-11
CHA-1599, RAYCHEM . . . . .	20-74-11
FIBER OPTIC CONNECTOR	
140124-0022, ITT CANNON . . . . .	20-12-11
140124-0024, ITT CANNON . . . . .	20-12-11
140124-0028, ITT CANNON . . . . .	20-12-11
140124-0032, ITT CANNON . . . . .	20-12-11
140124-0039, ITT CANNON . . . . .	20-12-11
140124-0040, ITT CANNON . . . . .	20-12-11
140124-0041, ITT CANNON . . . . .	20-12-11
140124-0042, ITT CANNON . . . . .	20-12-11
140126-0005, ITT CANNON . . . . .	20-12-11

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### FIBER OPTIC CONNECTOR (continued)

140143-0000, ITT CANNON . . . . .	20-12-11
140143-0007, ITT CANNON . . . . .	20-12-11
140143-0008, ITT CANNON . . . . .	20-12-11
PLUG, MTCTQKT1P4FPF, RAYCHEM . . . . .	20-74-11
RECEPTACLE, MTCTQKT1R4FSF, RAYCHEM . . . . .	20-74-11
S280W701-601, BOEING . . . . .	20-12-11
S280W701-602, BOEING . . . . .	20-12-11
S280W701-611, BOEING . . . . .	20-12-11
S280W701-613, BOEING . . . . .	20-12-11
S280W701-614, BOEING . . . . .	20-12-11
S280W701-615, BOEING . . . . .	20-12-11
S280W701-616, BOEING . . . . .	20-12-11
S280W701-631, BOEING . . . . .	20-12-11
S280W701-641, BOEING . . . . .	20-12-11
S280W701-642, BOEING . . . . .	20-12-11
S280W701-643, BOEING . . . . .	20-12-11
S280W701-661, BOEING . . . . .	20-12-11
FIBER OPTIC CONNECTOR SHELL	
PLUG, MTCTQ-YH1-P22, RAYCHEM . . . . .	20-74-11
FIBERGLAS SLEEVES	
WIRE HARNESS ASSEMBLY . . . . .	20-10-18
FILLER ROD	
SUPPLIERS . . . . .	20-00-11
FILLER WIRE	
CONTACT ASSEMBLY WITH CONDUCTOR SIZE ADJUSTMENT . . . . .	20-60-00
FILLET SEAL	
ELECTRICAL BOND . . . . .	20-20-00
FILM STRIP	
SUPPLIERS . . . . .	20-00-11
FIRE DETECTOR CONNECTOR	
SYSTRON DONNER, INSTALLATION TORQUE . . . . .	20-60-06
WALTER KIDDE, CLEANING . . . . .	20-60-01
FIRE RESISTANT WIRE	
DAMAGE CONDITIONS AND REPAIR . . . . .	20-10-13
FIREWALL CONNECTOR	
CA3100KR(), ITT CANNON . . . . .	20-62-26
CA3106KR(), ITT CANNON . . . . .	20-62-26
FITTINGS	
MOLDED TEE . . . . .	20-10-16
FLAMMABLE LEAKAGE ZONE	
DEFINITION . . . . .	20-02-10
LOCATION . . . . .	20-02-10
PROTECTION OF ELECTRICAL CONNECTIONS . . . . .	20-30-00
FLAT CONDUCTOR CABLE ASSEMBLY . . . . .	20-73-00
FLAT CONDUCTOR CABLE ASSEMBLY	
DAMAGE CONDITIONS AND REPAIR . . . . .	20-10-13
FLEXIBLE CONDUIT	
REPAIR . . . . .	20-10-91

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20**

<b>FLIGHT</b>	
FC-3400D()-(), CONNECTOR . . . . .	20-61-19
FC-3406D()-(), CONNECTOR . . . . .	20-61-19
FC3400D()-(), CONNECTOR . . . . .	20-61-19
FC3400D()-()-140, CONNECTOR . . . . .	20-61-19
FC3406D()-(), CONNECTOR . . . . .	20-61-19
FC3406D()-()-144, CONNECTOR . . . . .	20-61-19
<b>FLIGHT RECORDER-AIDS</b>	
WIRE HARNESS ASSEMBLY . . . . .	20-14-51
FPK-11(), CONNECTOR, PYLE-NATIONAL . . . . .	20-61-11
FPK-17(), CONNECTOR, PYLE-NATIONAL . . . . .	20-61-11
<b>FQIS CABLE</b>	
DAMAGE CONDITIONS AND REPAIR. . . . .	20-10-13
<b>FQIS WIRE HARNESS BRACKET</b>	
WITH CARRIER, BACB20VE, BOEING . . . . .	20-10-12
WITHOUT CARRIER, BACB20VB, BOEING . . . . .	20-10-12
FRA()-(), CONNECTOR, ITT CANNON . . . . .	20-61-19
FRA()36-5()-747, CONNECTOR, ITT CANNON . . . . .	20-61-19
<b>FRAMATOME CONNECTORS INTERNATIONAL</b>	
MDTB20-4, TERMINAL MODULE . . . . .	20-90-15
MDTB20-8, TERMINAL MODULE . . . . .	20-90-15
FRF(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE, ITT CANNON . . . . .	20-35-11
FRF()-(), CONNECTOR, ITT CANNON . . . . .	20-61-19
FRF()36-5()-747, CONNECTOR, ITT CANNON . . . . .	20-61-19
<b>FSJ4-50 COAX CABLE</b>	
ANDREWS, CONNECTOR ASSEMBLY . . . . .	20-51-51
<b>FUEL FUMES</b>	
LEVELS, SAFETY . . . . .	20-00-10
<b>FUEL QUANTITY INDICATOR SYSTEM CABLE</b>	
DAMAGE CONDITIONS AND REPAIR. . . . .	20-10-13
<b>FUEL QUANTITY PROBE</b>	
TERMINAL LUG, INSTALLATION TORQUE. . . . .	20-30-00
<b>FUEL QUANTITY WIRE</b>	
10-60875, BOEING, SHIELD TERMINATION. . . . .	20-10-15
FVA()-(), CONNECTOR, ITT CANNON . . . . .	20-61-19
FVA()36-5()-747, CONNECTOR, ITT CANNON . . . . .	20-61-19
FVF()-(), CONNECTOR, ITT CANNON . . . . .	20-61-19
FVF()36-5()-747, CONNECTOR, ITT CANNON. . . . .	20-61-19

# **20-CROSS REFERENCE INDEX**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### G

G1504-(), ADAPTER, CABLE, GLENAIR . . . . .	20-85-12
G2636-(), CLAMP, GLENAIR . . . . .	20-85-11
G2918-(), CLAMP, GLENAIR . . . . .	20-85-11
G387(), BACKSHELL, GLENAIR . . . . .	20-25-13
G4993, BACKSHELL, GLENAIR . . . . .	20-25-13
G65217, BACKSHELL, GLENAIR . . . . .	20-60-09
G6G12-88PNH, CONNECTOR, BURNDY . . . . .	20-51-33
G6G12-88SNH, CONNECTOR, BURNDY . . . . .	20-51-33
G70259T77-(), LANYARD, GLENAIR . . . . .	20-85-12
G8148, CONDUIT ADAPTER, GLENAIR . . . . .	20-61-00
G87T325CU COAXITUBE COAX CABLE	
PRECISION TUBE COMPANY, CONNECTOR ASSEMBLY . . . . .	20-51-41
G8993-(), BACKSHELL, GLENAIR . . . . .	20-25-12
G8993-(), BACKSHELL, GLENAIR . . . . .	20-60-09
G8993M(), BACKSHELL, GLENAIR . . . . .	20-25-12
G8993M(), BACKSHELL, GLENAIR . . . . .	20-60-09
G8994-(), BACKSHELL, GLENAIR . . . . .	20-25-12
G8994-(), BACKSHELL, GLENAIR . . . . .	20-60-09
G8994M(), BACKSHELL, GLENAIR . . . . .	20-25-12
G8994M(), BACKSHELL, GLENAIR . . . . .	20-60-09
G9034(), BACKSHELL, GLENAIR . . . . .	20-25-13
G9166(), BACKSHELL, GLENAIR . . . . .	20-25-13
GALITE	
252-94102, THERMOCOUPLE WIRE . . . . .	20-35-27
GC501, CONNECTOR, GLENAIR . . . . .	20-35-11
GE AVATION	
40-742-6045, CONNECTOR . . . . .	20-15-44
GE90 POWER PLANT	
WIRING REPAIR, APPLICABLE CONDITIONS . . . . .	20-22-00
GLENAIR	
120 SERIES, CONVOLUTED TUBE . . . . .	20-61-00
319AS110BM, BACKSHELL . . . . .	20-25-15
319F064XO, BACKSHELL . . . . .	20-25-15
319HS110BM, BACKSHELL . . . . .	20-25-15
340FS001N-14-2F12B, BACKSHELL, STRAIN RELIEF . . . . .	20-15-33
380()001(), BACKSHELL . . . . .	20-25-13
380()003, BACKSHELL . . . . .	20-25-13
387(), BACKSHELL . . . . .	20-25-13
387()A020, BACKSHELL . . . . .	20-25-14
387()B020, BACKSHELL . . . . .	20-25-14
387()S020, BACKSHELL . . . . .	20-25-14
437-027, BACKSHELL . . . . .	20-40-16
440()H031, BACKSHELL . . . . .	20-25-14
440()J031, BACKSHELL . . . . .	20-25-14
440()J069, BACKSHELL . . . . .	20-25-14
440()S031, BACKSHELL . . . . .	20-25-14

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## GLENAIR (continued)

440()S069, BACKSHELL . . . . .	20-25-14
447HA557, BACKSHELL . . . . .	20-25-15
467AH009LF10FR, BACKSHELL . . . . .	20-25-13
467AJ009LF10FR, BACKSHELL . . . . .	20-25-13
467AS009LF10FR, BACKSHELL . . . . .	20-25-13
527-187(), BACKSHELL . . . . .	20-25-14
527-187(), BACKSHELL, EMI . . . . .	20-71-14
527-212(), BACKSHELL . . . . .	20-25-14
527-212(), BACKSHELL, EMI . . . . .	20-71-14
527-281ML, BACKSHELL . . . . .	20-74-12
557-(), BACKSHELL . . . . .	20-25-14
620AA028Z1-(), BACKSHELL . . . . .	20-25-12
620AA028Z1-(), BACKSHELL . . . . .	20-60-09
620AS048ZM-(), BACKSHELL . . . . .	20-25-12
620HA048ZM-(), BACKSHELL . . . . .	20-25-12
627AS152XO32, BACKSHELL . . . . .	20-60-09
667-047, DUST COVER . . . . .	20-40-16
687-062-01, BAND, SHIELD TERMINATOR . . . . .	20-25-14
687-062-02, BAND, SHIELD TERMINATOR . . . . .	20-25-14
687-062-03, BAND, SHIELD TERMINATOR . . . . .	20-25-14
687-062-04, BAND, SHIELD TERMINATOR . . . . .	20-25-14
687-062-05, BAND, SHIELD TERMINATOR . . . . .	20-25-14
687-062-06, BAND, SHIELD TERMINATOR . . . . .	20-25-14
710 SERIES, CONVOLUTED TUBE ADAPTER . . . . .	20-61-00
712-148, CONDUIT ADAPTER . . . . .	20-61-00
BACC63DP, CONNECTOR . . . . .	20-62-23
BACC63DR, CONNECTOR . . . . .	20-62-23
BACC63DT, CONNECTOR . . . . .	20-62-23
BACC63DU, CONNECTOR . . . . .	20-62-23
BACC63DV, CONNECTOR . . . . .	20-62-23
G1504-(), ADAPTER, CABLE . . . . .	20-85-12
G2636-(), CLAMP . . . . .	20-85-11
G2918-(), CLAMP . . . . .	20-85-11
G387(), BACKSHELL . . . . .	20-25-13
G4993, BACKSHELL . . . . .	20-25-13
G65217, BACKSHELL . . . . .	20-60-09
G70259T77-(), LANYARD . . . . .	20-85-12
G8148, CONDUIT ADAPTER . . . . .	20-61-00
G8993-(), BACKSHELL . . . . .	20-25-12
G8993-(), BACKSHELL . . . . .	20-60-09
G8993M(), BACKSHELL . . . . .	20-25-12
G8993M(), BACKSHELL . . . . .	20-60-09
G8994-(), BACKSHELL . . . . .	20-25-12
G8994-(), BACKSHELL . . . . .	20-60-09
G8994M(), BACKSHELL . . . . .	20-25-12
G8994M(), BACKSHELL . . . . .	20-60-09
G9034(), BACKSHELL . . . . .	20-25-13
G9166(), BACKSHELL . . . . .	20-25-13

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20**

GLENAIR (continued)	
GC501, CONNECTOR . . . . .	20-35-11
GTR21-(), BACKSHELL . . . . .	20-60-09
GLENAIR SERIES 800 MIGHTY MOUSE CONNECTORS	
CONNECTOR ASSEMBLY . . . . .	20-62-23
I GLOBAL SUPPLY	
I S-5934CUAU, EYELET . . . . .	20-81-16
I S-6049CUAU, EYELET . . . . .	20-81-16
GRAVINER	
51444-103, CONNECTOR . . . . .	20-62-15
51444-106, CONNECTOR . . . . .	20-62-15
51444-118, CONNECTOR . . . . .	20-62-15
51444-123-1D, CONNECTOR . . . . .	20-62-15
51444-124-1D, CONNECTOR . . . . .	20-62-15
51444-129, CONNECTOR . . . . .	20-62-15
51444-129-1D, CONNECTOR . . . . .	20-62-15
51444-130, CONNECTOR . . . . .	20-62-15
51444-130-1D, CONNECTOR . . . . .	20-62-15
51444-137, CONNECTOR . . . . .	20-62-15
51444-138, CONNECTOR . . . . .	20-62-15
51444-144, CONNECTOR . . . . .	20-62-15
51444-145, CONNECTOR . . . . .	20-62-15
D5653, CONNECTOR . . . . .	20-62-15
D5653-1, CONNECTOR . . . . .	20-62-15
D5653-2, CONNECTOR . . . . .	20-62-15
D5922, CONNECTOR . . . . .	20-62-15
D5922-1, CONNECTOR . . . . .	20-62-15
D5922-2, CONNECTOR . . . . .	20-62-15
GRIMES-HONEYWELL	
A-4135()-13(), LIGHT . . . . .	20-84-11
A-4135()-1810(), LIGHT . . . . .	20-84-11
A-4135()-1820(), LIGHT . . . . .	20-84-11
A-4135()-1864(), LIGHT . . . . .	20-84-11
A-4135()-24(), LIGHT . . . . .	20-84-11
A-4135()-6(), LIGHT . . . . .	20-84-11
A-8985-1, LIGHT . . . . .	20-84-10
A-8985-10, LIGHT . . . . .	20-84-10
A-8985-103, LIGHT . . . . .	20-84-10
A-8985-11, LIGHT . . . . .	20-84-10
A-8985-12, LIGHT . . . . .	20-84-10
A-8985-13, LIGHT . . . . .	20-84-10
A-8985-14, LIGHT . . . . .	20-84-10
A-8985-15, LIGHT . . . . .	20-84-10
A-8985-16, LIGHT . . . . .	20-84-10
A-8985-17, LIGHT . . . . .	20-84-10
A-8985-2, LIGHT . . . . .	20-84-10
A-8985-3, LIGHT . . . . .	20-84-10
A-8985-4, LIGHT . . . . .	20-84-10
A-8985-5, LIGHT . . . . .	20-84-10

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## GRIMES-HONEYWELL (continued)

A-8985-6, LIGHT	20-84-10
A-8985-7, LIGHT	20-84-10
A-8985-8, LIGHT	20-84-10
A-8985-9, LIGHT	20-84-10
B-9845-()-1665, LIGHT	20-84-10
B-9845-()-1691, LIGHT	20-84-10
B-9845-()-303, LIGHT	20-84-10
B-9845-()-305, LIGHT	20-84-10
B-9845-()-307, LIGHT	20-84-10
GROUND	
DUAL, ASSEMBLY	20-20-12
DUAL, CONFIGURATION	20-20-00
ELECTRICAL	20-20-00
JUMPER ASSEMBLY, DAMAGE CONDITIONS AND REPAIR	20-10-13
SEAL	20-20-00
TYPES, SEPARATION	20-20-00
GROUND BLOCK	
CONNECTOR, S280W601-101, BOEING	20-71-14
CONNECTOR, S280W601-103, BOEING	20-71-14
CONNECTOR, S280W601-104, BOEING	20-71-14
CONNECTOR, S280W601-105, BOEING	20-71-14
CONNECTOR, S280W601-106, BOEING	20-71-14
CONNECTOR, S280W601-116, BOEING	20-71-14
CONNECTOR, S280W601-201, BOEING	20-71-14
CONNECTOR, S280W601-202, BOEING	20-71-14
CONNECTOR, S280W601-203, BOEING	20-71-14
CONNECTOR, S280W601-213, BOEING	20-71-14
CONNECTOR, S280W601-301, BOEING	20-71-14
MODULE, ASSEMBLY	20-20-11
GROUND BLOCK MODULE	
YHLZG16-1, BURNDY	20-20-11
YHLZG16-2, BURNDY	20-20-11
YHLZG8-1, BURNDY	20-20-11
YHLZG8-2, BURNDY	20-20-11
GROUND MODULE	
001758-101-02, AIR LB	20-15-48
001758-202-02, AIR LB	20-15-48
40-718-5262, SMITHS INDUSTRIES	20-15-48
40-718-5263, SMITHS INDUSTRIES	20-15-48
40-718-5368-01, SMITHS INDUSTRIES	20-15-49
53710-005, SMITHS INDUSTRIES	20-15-49
BACC50AN16, BOEING	20-90-15
BACC50AN20, BOEING	20-90-15
BDX016016, SOURIAU	20-90-15
BDX016020, SOURIAU	20-90-15
M81714/63-16F, QPL	20-15-49
M81714/63-20F, QPL	20-15-49
RBG516-1, SOURIAU	20-90-15

## 20-CROSS REFERENCE INDEX



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

#### GROUND MODULE (continued)

RBG532-1, SOURIAU . . . . .	20-90-15
RBGB16-1, SOURIAU . . . . .	20-90-15
RBGB20-1, SOURIAU . . . . .	20-90-15
S280W555-16, BOEING . . . . .	20-90-15
S280W555-16S, BOEING . . . . .	20-90-15
S280W555-20, BOEING . . . . .	20-90-15
S280W555-401, BOEING . . . . .	20-90-15
S280W555-402, BOEING . . . . .	20-90-15

#### GROUND STUD

ASSEMBLY, GENERAL CONDITIONS . . . . .	20-20-00
BACS53B1EA1, BOEING . . . . .	20-20-10
BACS53B1EA2, BOEING . . . . .	20-20-10
CONFIGURATION . . . . .	20-20-00
GROUND ASSEMBLY, SEAL . . . . .	20-20-00
INSTALLATION AND REMOVAL . . . . .	20-20-10
TERMINAL LUG INSTALLATION, TORQUE . . . . .	20-20-00
GTR21-(), BACKSHELL, GLENAIR . . . . .	20-60-09

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## H

H22-4000 WIRE	
CERRO, BENDIX 10-244() SERIES ASSEMBLY . . . . .	20-61-18
CERRO, GRAVINER CONNECTOR ASSEMBLY . . . . .	20-62-15
HEAT SHRINKABLE BOOTS . . . . .	20-10-16
HEAT SHRINKABLE END CAP	
BACT63D1, BOEING . . . . .	20-30-16
BACT63D2, BOEING . . . . .	20-30-16
BACT63D3, BOEING . . . . .	20-30-16
HEAT SHRINKABLE SLEEVE	
SUPPLIERS . . . . .	20-00-11
HEAT SHRINKABLE SLEEVES	
INSTALLATION . . . . .	20-10-14
INSTALLATION . . . . .	20-10-27
SELECTION . . . . .	20-10-14
SELECTION . . . . .	20-10-27
HF ANTENNA LEAD ASSEMBLY	
69B41500, BOEING . . . . .	20-87-00
HF PROBE ANTENNA RECEPTACLE	
69-54481, BOEING . . . . .	20-87-00
HI-REL	
44267KS-10SL-3BN-745, CONNECTOR . . . . .	20-63-14
71550SE-12T-03SN-960, CONNECTOR . . . . .	20-63-14
HIGH TEMPERATURE AREAS	
LOCATIONS . . . . .	20-02-20
HIGH TEMPERATURE SPLICE	
ASSEMBLY . . . . .	20-30-12
HIGH VIBRATION AREA	
USUAL LOCATIONS . . . . .	20-02-30
WIRE HARNESS ASSEMBLY, GENERAL CONDITIONS . . . . .	20-10-11
WIRE HARNESS INSTALLATION, GENERAL CONDITIONS . . . . .	20-10-11
HOLLINGSWORTH	
R1880SN, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R1881SN, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R1885SN, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R1890SN, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R1891SN, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R1894SN, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R1895SN, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R1896SN, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R1901SN, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R1902SN, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R1903SN, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R1906SN, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R1907SN, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R1908SN, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R2441SN, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****HOLLINGSWORTH (continued)**

R2442SN, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R5107N, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R5108N, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R5109N, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R5110N, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R5111N, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R5112N, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
R5117N, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
<b>HOT AIR GUN</b>	
OPERATION . . . . .	20-10-13
SPLICE ASSEMBLY . . . . .	20-30-12
<b>HOT AIR GUNS</b>	
SAFETY . . . . .	20-00-10
HPF052UFZL0320-BEC, CONNECTOR, SI-TAC . . . . .	20-72-18
HPF160UFZL0320-BEC, CONNECTOR, SI-TAC . . . . .	20-72-18
HPW0920F0CA004, CONNECTOR, HYPERTAC . . . . .	20-15-43
HPW0920M0TA004, CONNECTOR, HYPERTAC . . . . .	20-15-43
HPW1070F0CA004, CONNECTOR, HYPERTAC . . . . .	20-15-43
HTBMF( ), CONNECTOR, ITT CANNON UK . . . . .	20-63-13
HTBMF00( ), CONNECTOR, ITT CANNON UK . . . . .	20-63-13
<b>HUGHES 116706-()-() SERIES</b>	
CONNECTOR ASSEMBLY . . . . .	20-72-22
<b>HUGHES AIRCRAFT</b>	
1167060, CONNECTOR . . . . .	20-72-22
1167061, CONNECTOR . . . . .	20-72-22
1167062-1, CONNECTOR . . . . .	20-72-22
1167062-2, CONNECTOR . . . . .	20-72-22
1167062-3, CONNECTOR . . . . .	20-72-22
1167063-1, CONNECTOR . . . . .	20-72-22
1167063-2, CONNECTOR . . . . .	20-72-22
1167063-3, CONNECTOR . . . . .	20-72-22
<b>HYPERTAC</b>	
HPW0920F0CA004, CONNECTOR . . . . .	20-15-43
HPW0920M0TA004, CONNECTOR . . . . .	20-15-43
HPW1070F0CA004, CONNECTOR . . . . .	20-15-43
M80-7160605, CONNECTOR . . . . .	20-15-44

**20-CROSS REFERENCE INDEX**

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****I****ICORE**

6930-06-(), CONDUIT ADAPTER .....	20-61-00
6930-09-(), CONDUIT ADAPTER .....	20-61-00
CFT-06-0-00, TUBE, TEFLON .....	20-10-16
CFT-09-0-00, TUBE, TEFLON .....	20-10-16

**IDENTIFICATION SLEEVE**

INSTALLATION .....	20-10-11
SUPPLIERS .....	20-10-11

**IDENTIFICATION TAPE**

INSTALLATION .....	20-10-11
SUPPLIERS .....	20-10-11

**IDG GENERATOR**

TERMINAL LUG, INSTALLATION TORQUE .....	20-30-00
---	----------

**IGNITION SOURCES**

SAFETY .....	20-00-10
--------------	----------

**IN-AXLE SYSTEM**

LANDING GEAR CABLES .....	20-85-12
---------------------------	----------

**INCON**

300044-001, CONNECTOR .....	20-82-13
300046-003, CONNECTOR .....	20-82-13
300048-004, CONNECTOR .....	20-82-13
300052-001, CONNECTOR .....	20-82-13
300055-001, CONNECTOR .....	20-82-13
300206-001, CONNECTOR .....	20-82-13

**INDICATOR**

FUSE DIODE MODULE REPLACEMENT .....	20-84-18
LAMP REPLACEMENT .....	20-84-18
LIGHTED, S231T300-(), BOEING .....	20-83-00
LIGHTED, S231T301-(), BOEING .....	20-83-00

**INDICATOR LIGHT**

CONNECTOR ASSEMBLY .....	20-84-00
LAMP SOCKETS .....	20-84-00
MS25257, TERMINAL ASSEMBLY .....	20-40-13
MS25257, TERMINAL ASSEMBLY .....	20-84-19

**INSERT**

CONNECTOR, BACI10AL()A(), BOEING .....	20-74-02
CONNECTOR, BACI10AL00-N, BOEING .....	20-74-02
CONNECTOR, BACI10AM()AP, BOEING .....	20-74-02
CONNECTOR, BACI10AP()A(), BOEING .....	20-74-02
CONNECTOR, BACI10AP00-N, BOEING .....	20-74-02

**INSPECTION**

GENERAL VISUAL .....	20-10-06
----------------------	----------

**INSULATED SPLICE**

ASSEMBLY .....	20-30-12
----------------	----------

**INSULATION**

WIRE, DAMAGE CONDITIONS .....	20-10-13
-------------------------------	----------

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

INSULATION (continued)	
WIRE, REMOVAL. . . . .	20-00-15
WIRE, REPAIR. . . . .	20-10-13
INSULATION SLEEVE	
SUPPLIERS. . . . .	20-00-11
INSULATION TAPE	
SUPPLIERS. . . . .	20-00-11
INSULATION TUBE	
SUPPLIERS. . . . .	20-00-11
INTEGRATED WIRING TERMINATION SYSTEM	
CONTACT ASSEMBLY. . . . .	20-83-00
INTERNATIONAL EYELETS	
Y-6015-C, EYELET . . . . .	20-60-00
Y-9015-C, EYELET . . . . .	20-60-00
INTERNATIONAL EYELETS INC.	
Y6015-C, EYELET . . . . .	20-81-16
Y9015-C, EYELET . . . . .	20-81-16
IPI	
SF3440C()-(), CONNECTOR . . . . .	20-61-19
SF3446C()-(), CONNECTOR . . . . .	20-61-19
ITT CANNON	
025-1121-001, PROTECTIVE CAP . . . . .	20-71-14
025-1122-001, PROTECTIVE CAP . . . . .	20-71-14
025-1123-001, PROTECTIVE CAP . . . . .	20-71-14
025-1124-001, PROTECTIVE CAP . . . . .	20-71-14
025-1183-000, PROTECTIVE CAP . . . . .	20-71-14
025-1218-000, PROTECTIVE CAP . . . . .	20-71-14
025-1218-001, PROTECTIVE CAP . . . . .	20-71-14
046-1000-000, BACKSHELL, EMI. . . . .	20-71-14
057-0872-000, BACKSHELL . . . . .	20-23-39
140124-0022, CONNECTOR . . . . .	20-12-11
140124-0024, CONNECTOR . . . . .	20-12-11
140124-0028, CONNECTOR . . . . .	20-12-11
140124-0032, CONNECTOR . . . . .	20-12-11
140124-0039, CONNECTOR . . . . .	20-12-11
140124-0040, CONNECTOR . . . . .	20-12-11
140124-0041, CONNECTOR . . . . .	20-12-11
140124-0042, CONNECTOR . . . . .	20-12-11
140125-0000, CABLE ASSEMBLY, FIBER OPTIC . . . . .	20-12-11
140125-0001, CABLE ASSEMBLY, FIBER OPTIC . . . . .	20-12-11
140125-0002, CABLE ASSEMBLY, FIBER OPTIC . . . . .	20-12-11
140125-0003, CABLE ASSEMBLY, FIBER OPTIC . . . . .	20-12-11
140126-0002, CABLE ASSEMBLY, FIBER OPTIC . . . . .	20-12-11
140126-0003, CABLE ASSEMBLY, FIBER OPTIC . . . . .	20-12-11
140126-0005, CONNECTOR . . . . .	20-12-11
140127-0003, CABLE ASSEMBLY, FIBER OPTIC . . . . .	20-12-11
140127-0004, CABLE ASSEMBLY, FIBER OPTIC . . . . .	20-12-11
140127-0005, CABLE ASSEMBLY, FIBER OPTIC . . . . .	20-12-11
140127-0006, CABLE ASSEMBLY, FIBER OPTIC . . . . .	20-12-11

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### ITT CANNON (continued)

140127-0007, CABLE ASSEMBLY, FIBER OPTIC . . . . .	20-12-11
140127-0008, CABLE ASSEMBLY, FIBER OPTIC . . . . .	20-12-11
140127-0009, CABLE ASSEMBLY, FIBER OPTIC . . . . .	20-12-11
140127-0010, CABLE ASSEMBLY, FIBER OPTIC . . . . .	20-12-11
140127-0011, CABLE ASSEMBLY, FIBER OPTIC . . . . .	20-12-11
140127-0012, CABLE ASSEMBLY, FIBER OPTIC . . . . .	20-12-11
140127-0020, CABLE ASSEMBLY, FIBER OPTIC . . . . .	20-12-11
140127-0021, CABLE ASSEMBLY, FIBER OPTIC . . . . .	20-12-11
140127-0022, CABLE ASSEMBLY, FIBER OPTIC . . . . .	20-12-11
140143-0000, CONNECTOR . . . . .	20-12-11
140143-0007, CONNECTOR . . . . .	20-12-11
140143-0008, CONNECTOR . . . . .	20-12-11
252-1230-000, ADAPTER, CRIMP BARREL . . . . .	20-62-26
AN3116-2, CONNECTOR . . . . .	20-62-22
AXR-(), CONNECTOR. . . . .	20-64-12
BGG1P-044D0001, CONNECTOR . . . . .	20-71-14
BGG1P-044D1001, CONNECTOR . . . . .	20-71-14
BGG1P-069D0201, CONNECTOR . . . . .	20-71-14
BGG1P-069D1201, CONNECTOR . . . . .	20-71-14
BGG1P-134A1301, CONNECTOR . . . . .	20-71-14
BGG2P-220D0101, CONNECTOR . . . . .	20-71-14
BGG2P-220D1101, CONNECTOR . . . . .	20-71-14
BGG2P-254D0101, CONNECTOR . . . . .	20-71-14
BGG2P-254D1101, CONNECTOR . . . . .	20-71-14
BGG2P-272D0101, CONNECTOR . . . . .	20-71-14
BGG2P-272D1101, CONNECTOR . . . . .	20-71-14
BGG2P-406D0101, CONNECTOR . . . . .	20-71-14
BGG2P-406D1101, CONNECTOR . . . . .	20-71-14
BGG3P-084D0101, CONNECTOR . . . . .	20-71-14
BGG3P-084D1101, CONNECTOR . . . . .	20-71-14
BKA()-155-3, CONNECTOR. . . . .	20-71-14
BKA()-234-3, CONNECTOR. . . . .	20-71-14
BKA()-A234-3, CONNECTOR . . . . .	20-71-14
BKA()1-100-3, CONNECTOR. . . . .	20-71-14
BKA()1-120-3, CONNECTOR. . . . .	20-71-14
BKA()1-124-3, CONNECTOR. . . . .	20-71-14
BKA()1-125-3, CONNECTOR. . . . .	20-71-14
BKA()2-042-3, CONNECTOR. . . . .	20-71-14
BKA()2-066-3, CONNECTOR. . . . .	20-71-14
BKA()2-105-3, CONNECTOR. . . . .	20-71-14
BKA()2-133-3, CONNECTOR. . . . .	20-71-14
BKA()2-137-3, CONNECTOR. . . . .	20-71-14
BKA()2-154-3, CONNECTOR. . . . .	20-71-14
BKA()2-155M-3, CONNECTOR . . . . .	20-71-14
BKA()2-158-3, CONNECTOR. . . . .	20-71-14
BKA()2-158M-3, CONNECTOR . . . . .	20-71-14
BKA()2-165M-3, CONNECTOR . . . . .	20-71-14
BKA()2-167-3, CONNECTOR. . . . .	20-71-14

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20**

## ITT CANNON (continued)

BKA()2-167T-3, CONNECTOR . . . . .	20-71-14
BKA()2-187-3, CONNECTOR . . . . .	20-71-14
BKA()2-188-3, CONNECTOR . . . . .	20-71-14
BKA()2-215-3, CONNECTOR . . . . .	20-71-14
BKA()2-234M-3, CONNECTOR . . . . .	20-71-14
BKA()2-244-322130, CONNECTOR . . . . .	20-71-14
BKA()2-246-3, CONNECTOR . . . . .	20-71-14
BKA()2-248-3, CONNECTOR . . . . .	20-71-14
BKA()2-253-3, CONNECTOR . . . . .	20-71-14
BKA()2-313-3, CONNECTOR . . . . .	20-71-14
BKA()2-324-3, CONNECTOR . . . . .	20-71-14
BKA()2-340-3, CONNECTOR . . . . .	20-71-14
BKA()2-359-3, CONNECTOR . . . . .	20-71-14
BKA()2-370-3, CONNECTOR . . . . .	20-71-14
BKA()2-385-3, CONNECTOR . . . . .	20-71-14
BKA()2-400-3, CONNECTOR . . . . .	20-71-14
BKA()2-67402-203, CONNECTOR . . . . .	20-71-14
BKA()2-67402-229, CONNECTOR . . . . .	20-71-14
BKA()2-67402-316, CONNECTOR . . . . .	20-71-14
BKA()2-67403-22-51, CONNECTOR . . . . .	20-71-14
BKA()2-67403-22-56, CONNECTOR . . . . .	20-71-14
BKA()2-68134-101, CONNECTOR . . . . .	20-71-14
BKA()2-A137-3, CONNECTOR . . . . .	20-71-14
BKA()2-A158M-3, CONNECTOR . . . . .	20-71-14
BKA()2-A164-3, CONNECTOR . . . . .	20-71-14
BKA()2-A234M-3, CONNECTOR . . . . .	20-71-14
BKA()2-B234-3, CONNECTOR . . . . .	20-71-14
BKA()2-B234M-3, CONNECTOR . . . . .	20-71-14
BKA()2-BW234-3, CONNECTOR . . . . .	20-71-14
BKA()2-V155M-3, CONNECTOR . . . . .	20-71-14
BKA()3-067404-0080, CONNECTOR . . . . .	20-71-14
BKA()3-271C-3, CONNECTOR . . . . .	20-71-14
BKA()3-271T-3, CONNECTOR . . . . .	20-71-14
BKA()3-494-3, CONNECTOR . . . . .	20-71-14
BKA()3-496-3, CONNECTOR . . . . .	20-71-14
BKA()3-537-3, CONNECTOR . . . . .	20-71-14
BKA()3-608-3, CONNECTOR . . . . .	20-71-14
BKA()3-626-3, CONNECTOR . . . . .	20-71-14
BKA()3-67404-62, CONNECTOR . . . . .	20-71-14
BKA()3-67404-80, CONNECTOR . . . . .	20-71-14
BKA()3-67404-91, CONNECTOR . . . . .	20-71-14
BKA()3-67405-54, CONNECTOR . . . . .	20-71-14
BKA()3-67405-54-40, CONNECTOR . . . . .	20-71-14
BKA()3-68135-21, CONNECTOR . . . . .	20-71-14
BKA()3-68135-25, CONNECTOR . . . . .	20-71-14
BKA()3-68135-95, CONNECTOR . . . . .	20-71-14
BKA()3-713-3, CONNECTOR . . . . .	20-71-14
BKA()3-718-3, CONNECTOR . . . . .	20-71-14

**20-CROSS REFERENCE INDEX**

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20**

## ITT CANNON (continued)

BKA()3-770-3, CONNECTOR . . . . .	20-71-14
BKA()3-784-3, CONNECTOR . . . . .	20-71-14
BKA()3-800-3, CONNECTOR . . . . .	20-71-14
BKA()3-A713-3, CONNECTOR . . . . .	20-71-14
BKA()3-A759-3, CONNECTOR . . . . .	20-71-14
CA270-8, CONNECTOR . . . . .	20-62-22
CA3100KR(), CONNECTOR . . . . .	20-62-26
CA3106KR(), CONNECTOR . . . . .	20-62-26
CA66278-101, CONNECTOR . . . . .	20-61-19
CA66278-105, CONNECTOR . . . . .	20-61-19
CA66278-93, CONNECTOR . . . . .	20-61-19
CA66279-102, CONNECTOR . . . . .	20-61-19
CA66279-106, CONNECTOR . . . . .	20-23-01
CA66279-106, CONNECTOR . . . . .	20-61-19
CA66279-94, CONNECTOR . . . . .	20-61-19
CA66286-45, CONNECTOR . . . . .	20-61-19
CA66287-50, CONNECTOR . . . . .	20-61-19
CA66420-1, CONNECTOR . . . . .	20-61-19
CA66422-9, CONNECTOR . . . . .	20-61-19
CA66432-2, CONNECTOR . . . . .	20-61-19
CA66434-6, CONNECTOR . . . . .	20-61-19
CA80503-14, CONNECTOR . . . . .	20-61-19
CE9307-(), CONNECTOR . . . . .	20-40-00
CE9307-10, CONNECTOR . . . . .	20-71-11
CE9307-11, CONNECTOR . . . . .	20-71-11
CE9307-18, CONNECTOR . . . . .	20-71-11
CE9307-19, CONNECTOR . . . . .	20-71-11
DA19678-1, BACKSHELL . . . . .	20-72-08
DA19977-1, BACKSHELL . . . . .	20-72-08
DA20961, BACKSHELL . . . . .	20-72-08
DA24658, BACKSHELL . . . . .	20-72-08
DAMA(), CONNECTOR . . . . .	20-72-12
DAU( ), CONNECTOR . . . . .	20-72-16
DB19678-2, BACKSHELL . . . . .	20-72-08
DB19977-2, BACKSHELL . . . . .	20-72-08
DB20962, BACKSHELL . . . . .	20-72-08
DB24659, BACKSHELL . . . . .	20-72-08
DBMA(), CONNECTOR . . . . .	20-72-12
DBMAM(), CONNECTOR . . . . .	20-72-12
DBMM25P-F179A, CONNECTOR . . . . .	20-72-18
DBMM37P-F179A, CONNECTOR . . . . .	20-72-18
DBMM50P-F179A, CONNECTOR . . . . .	20-72-18
DBU( ), CONNECTOR . . . . .	20-72-16
DC19678-3, BACKSHELL . . . . .	20-72-08
DC19977-3, BACKSHELL . . . . .	20-72-08
DC20963, BACKSHELL . . . . .	20-72-08
DC24660, BACKSHELL . . . . .	20-72-08
DCMA(), CONNECTOR . . . . .	20-72-12

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## ITT CANNON (continued)

DCU( ), CONNECTOR . . . . .	20-72-16
DD19678-4, BACKSHELL . . . . .	20-72-08
DD19977-4, BACKSHELL . . . . .	20-72-08
DD20964, BACKSHELL . . . . .	20-72-08
DD24661, BACKSHELL . . . . .	20-72-08
DDMA(), CONNECTOR . . . . .	20-72-12
DDMAM(), CONNECTOR . . . . .	20-72-12
DDU( ), CONNECTOR . . . . .	20-72-16
DE19977-5, BACKSHELL . . . . .	20-72-08
DE24657, BACKSHELL . . . . .	20-72-08
DE44994, BACKSHELL . . . . .	20-72-08
DEMA(), CONNECTOR . . . . .	20-72-12
DEU( ), CONNECTOR . . . . .	20-72-16
DPA-32-33S, CONNECTOR . . . . .	20-71-11
DPA-32-33S3, CONNECTOR . . . . .	20-71-11
DPA-6-33S, CONNECTOR . . . . .	20-71-11
DPA-6-34P, CONNECTOR . . . . .	20-71-11
DPAF-2-33S, CONNECTOR . . . . .	20-71-11
DPAL-L24C2-33S, CONNECTOR . . . . .	20-71-11
DPAMA-32-33S, CONNECTOR . . . . .	20-71-11
DPAMA-32-33S-1B, CONNECTOR . . . . .	20-71-11
DPAMA-32-33SN, CONNECTOR . . . . .	20-71-11
DPAMA-L24C2-33S, CONNECTOR . . . . .	20-71-11
DPD-32-33S-(), CONNECTOR . . . . .	20-71-11
DPD-32-34P-(), CONNECTOR . . . . .	20-71-11
DPD-45-33S-(), CONNECTOR . . . . .	20-71-11
DPD-66-33S-(), CONNECTOR . . . . .	20-71-11
DPD-A15-33S-(), CONNECTOR . . . . .	20-71-11
DPD-A8-33S-(), CONNECTOR . . . . .	20-71-11
DPD-B18-33S-(), CONNECTOR . . . . .	20-71-11
DPD-G20-33S-(), CONNECTOR . . . . .	20-71-11
DPD-G20-34P-(), CONNECTOR . . . . .	20-71-11
DPD-N10-33S-(), CONNECTOR . . . . .	20-71-11
DPD2MA-152-33S-(), CONNECTOR . . . . .	20-71-11
DPD2MB-152-33S-(), CONNECTOR . . . . .	20-71-11
DPDB-20-34P-(), CONNECTOR . . . . .	20-71-11
DPDB-58-33S-(), CONNECTOR . . . . .	20-71-11
DPDB-58-34P-(), CONNECTOR . . . . .	20-71-11
DPDB-G20-34P-(), CONNECTOR . . . . .	20-71-11
DPDB18-33S1B, CONNECTOR . . . . .	20-40-00
DPDBMA-G20-33S-(), CONNECTOR . . . . .	20-71-11
DPDBMA-G20-34P-(), CONNECTOR . . . . .	20-71-11
DPDMA-32C2-33S-(), CONNECTOR . . . . .	20-71-11
DPDMA-45-33S-(), CONNECTOR . . . . .	20-71-11
DPDMA-76-33S-(), CONNECTOR . . . . .	20-71-11
DPDMA-A32-33S-(), CONNECTOR . . . . .	20-71-11
DPDMA-G20-33S-(), CONNECTOR . . . . .	20-71-11
DPDMA-U32C2-33S-(), CONNECTOR . . . . .	20-71-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## ITT CANNON (continued)

DPDMB-32-33S-(), CONNECTOR . . . . .	20-71-11
DPDMB-45-33S-(), CONNECTOR . . . . .	20-71-11
DPDMB-76-33S-(), CONNECTOR . . . . .	20-71-11
DPDMB-78-33S-(), CONNECTOR . . . . .	20-71-11
DPDMB-U32C2-33S-(), CONNECTOR . . . . .	20-71-11
DPDN10-33S1B, CONNECTOR . . . . .	20-40-00
DPE60-33S, CONNECTOR . . . . .	20-40-00
DPX(), CONNECTOR . . . . .	20-71-11
DPX-17-33S-(), CONNECTOR . . . . .	20-71-11
DPX-22017-(), CONNECTOR . . . . .	20-71-11
DPX2-67S32C2S-33S-(), CONNECTOR . . . . .	20-71-11
DPX2-B10C3SD32C2S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2-F40C1SF40C1S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2-ZA16C3S26S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2-ZA16C3SB10C3S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2AF-32S45S-33B-00(), CONNECTOR . . . . .	20-71-11
DPX2DA-26S7S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2DA-26S7S-33B-14(), CONNECTOR . . . . .	20-71-11
DPX2EF-AC3S67S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2EF-AC3S67S-33B-00(), CONNECTOR . . . . .	20-71-11
DPX2EF-C2ESD32C2S-33B-00(), CONNECTOR . . . . .	20-71-11
DPX2MA-()-()-00(), CONNECTOR . . . . .	20-71-11
DPX2MA-00P67P-34B-00(), CONNECTOR . . . . .	20-71-11
DPX2MA-00S32W4S-33B-00(), CONNECTOR . . . . .	20-71-11
DPX2MA-00S57S-33-(), CONNECTOR . . . . .	20-71-11
DPX2MA-00S57S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MA-00SD32W4S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MA-106P106P-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MA-106P106P-33B-00(), CONNECTOR . . . . .	20-71-11
DPX2MA-106P106P-33M-01(), CONNECTOR . . . . .	20-71-11
DPX2MA-106P106P-34F-01(), CONNECTOR . . . . .	20-71-11
DPX2MA-106P57P-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MA-106PD32C2S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MA-106S00S-34B-(), CONNECTOR . . . . .	20-71-11
DPX2MA-106S106S-34B-(), CONNECTOR . . . . .	20-71-11
DPX2MA-106S106S-34F-01(), CONNECTOR . . . . .	20-71-11
DPX2MA-26P26P-34B-(), CONNECTOR . . . . .	20-71-11
DPX2MA-26S26S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MA-26S45S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MA-26S45S-33B-00(), CONNECTOR . . . . .	20-71-11
DPX2MA-26S57S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MA-32W4SD106P-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MA-40B1S40B1S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MA-40S40S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MA-40S40S-33B-00(), CONNECTOR . . . . .	20-71-11
DPX2MA-40W1S40W1S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MA-40W1S40W1S-33B-00(), CONNECTOR . . . . .	20-71-11
DPX2MA-45S40S-33B-(), CONNECTOR . . . . .	20-71-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## ITT CANNON (continued)

DPX2MA-45S40S-33B-00(), CONNECTOR .....	20-71-11
DPX2MA-45S45S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-45S45S-33B-00(), CONNECTOR .....	20-71-11
DPX2MA-57P-106S-34B-(), CONNECTOR .....	20-71-11
DPX2MA-57P57P-34B-00(), CONNECTOR .....	20-71-11
DPX2MA-57S00S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-57S106P-33B-(), CONNECTOR .....	20-71-11
DPX2MA-57S106P-33B-00(), CONNECTOR .....	20-71-11
DPX2MA-57S26S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-57S40S-32B-(), CONNECTOR .....	20-71-11
DPX2MA-57S45S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-57S45S-33B-00(), CONNECTOR .....	20-71-11
DPX2MA-57S57S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-57S57S-33B-00(), CONNECTOR .....	20-71-11
DPX2MA-57S57S-34B-(), CONNECTOR .....	20-71-11
DPX2MA-57S67S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-57S67S-33B-00(), CONNECTOR .....	20-71-11
DPX2MA-57SD106P-33B-(), CONNECTOR .....	20-71-11
DPX2MA-67P67P-34B-00(), CONNECTOR .....	20-71-11
DPX2MA-67S32A2S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-67S32C2S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-67S32W2S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-67S67S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-67S67S-33B-00(), CONNECTOR .....	20-71-11
DPX2MA-67SA106P-33B-(), CONNECTOR .....	20-71-11
DPX2MA-67SD8S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-A106PA106P-33B-(), CONNECTOR .....	20-71-11
DPX2MA-A106PA106P-33B-00(), CONNECTOR .....	20-71-11
DPX2MA-AC3S67S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-AC3S67S-33B-00(), CONNECTOR .....	20-71-11
DPX2MA-C2MS57S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-C2MS57S-33B-00(), CONNECTOR .....	20-71-11
DPX2MA-C2MSF40C1S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-C2MSF40C1S-33B-00(), CONNECTOR .....	20-71-11
DPX2MA-C2S57S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-C8AS67S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-C8ASC8AS-33B-(), CONNECTOR .....	20-71-11
DPX2MA-C8ASC8AS-33B-00(), CONNECTOR .....	20-71-11
DPX2MA-C8CS67S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-D106P40B1S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-D106PC8AS-33B-(), CONNECTOR .....	20-71-11
DPX2MA-D106PD106P-33B-(), CONNECTOR .....	20-71-11
DPX2MA-D106PD106P-33B-00(), CONNECTOR .....	20-71-11
DPX2MA-D32C2S57S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-D32C2S57S-33B-00(), CONNECTOR .....	20-71-11
DPX2MA-D32C2S67S-33B-(), CONNECTOR .....	20-71-11
DPX2MA-D32C2S67S-33B-00(), CONNECTOR .....	20-71-11
DPX2MA-F40C1SF40C1S-33B-(), CONNECTOR .....	20-71-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## ITT CANNON (continued)

DPX2MA-F40C1SF40C1S-33B-00(), CONNECTOR . . . . .	20-71-11
DPX2MA-W8S67S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MA-W8S67S-33B-00(), CONNECTOR . . . . .	20-71-11
DPX2MB-()-()-03(), CONNECTOR . . . . .	20-71-11
DPX2MB-00P67P-34B-00(), CONNECTOR . . . . .	20-71-11
DPX2MB-00S67S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MB-00S67S-33B-00(), CONNECTOR . . . . .	20-71-11
DPX2MB-26P26P-34B-00(), CONNECTOR . . . . .	20-71-11
DPX2MB-26P8P-34B-00(), CONNECTOR . . . . .	20-71-11
DPX2MB-26S26S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MB-26S67S-33A-(), CONNECTOR . . . . .	20-71-11
DPX2MB-26S8S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MB-26S8S-33B-00(), CONNECTOR . . . . .	20-71-11
DPX2MB-26SC8CS-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MB-26SC8CS-33B-00(), CONNECTOR . . . . .	20-71-11
DPX2MB-40B1S40B1S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MB-40B1S40B1S-33B-00(), CONNECTOR . . . . .	20-71-11
DPX2MB-40S40S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MB-40S40S-33B-00(), CONNECTOR . . . . .	20-71-11
DPX2MB-40S40S-33F-(), CONNECTOR . . . . .	20-71-11
DPX2MB-45S45S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MB-45S45S-33B-00(), CONNECTOR . . . . .	20-71-11
DPX2MB-57P57P-34B-00(), CONNECTOR . . . . .	20-71-11
DPX2MB-57S00S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MB-57S57S-33-00(), CONNECTOR . . . . .	20-71-11
DPX2MB-57S57S-33A-(), CONNECTOR . . . . .	20-71-11
DPX2MB-57S57S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MB-57S57S-33B-00(), CONNECTOR . . . . .	20-71-11
DPX2MB-67P67P-34B-00(), CONNECTOR . . . . .	20-71-11
DPX2MB-67S67S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MB-AC3S67S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MB-AC3S67S-33B-00(), CONNECTOR . . . . .	20-71-11
DPX2MB-C2DS57S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MB-D32C2S57S-33B-(), CONNECTOR . . . . .	20-71-11
DPX2MB-D32C2S57S-33B-00(), CONNECTOR . . . . .	20-71-11
DPX2P-67S32C2S-33B-(), CONNECTOR . . . . .	20-71-11
DPX3MA-32W4S-D106P-67S-33-(), CONNECTOR . . . . .	20-71-11
DPX3MA-A318-A318-33P-(), CONNECTOR . . . . .	20-71-11
DPX3MA-B32C4S-D106P-67S-33-(), CONNECTOR . . . . .	20-71-11
DPX3MA-B96-33S-(), CONNECTOR . . . . .	20-71-11
DPX3MA-D32C4S-D106P-67S-33-(), CONNECTOR . . . . .	20-71-11
DPX3MA-E96-33S-0001, CONNECTOR . . . . .	20-71-11
DPX3MA66565-252, CONNECTOR . . . . .	20-71-11
DPX3MB-26S-67S-67S-33B-(), CONNECTOR . . . . .	20-71-11
DPX3MB-26S67S67S-33B-0001, CONNECTOR . . . . .	20-71-11
DPX3MB-78-34P-00(), CONNECTOR . . . . .	20-71-11
DPX3ME-D205-33PS-(), CONNECTOR . . . . .	20-71-11
DPX4MA-105-33S-(), CONNECTOR . . . . .	20-71-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## ITT CANNON (continued)

DPX4MA-A307-33PS-(), CONNECTOR . . . . .	20-71-11
DPX51252-1-(), CONNECTOR . . . . .	20-71-11
DPX51252-2-(), CONNECTOR . . . . .	20-71-11
DPXA-32-33S-(), CONNECTOR . . . . .	20-71-11
DPXA-32-34P-(), CONNECTOR . . . . .	20-71-11
DPXA-8-33S-(), CONNECTOR . . . . .	20-71-11
DPXAMA-26-33S-(), CONNECTOR . . . . .	20-71-11
DPXAMA-26-34P, CONNECTOR . . . . .	20-71-11
DPXAMA-26-34P-(), CONNECTOR. . . . .	20-71-11
DPXAMA-32-33S-(), CONNECTOR . . . . .	20-71-11
DPXAMA-32-34P-(), CONNECTOR. . . . .	20-71-11
DPXAMA-32B2-33S-(), CONNECTOR. . . . .	20-71-11
DPXAMA-40-33P-(), CONNECTOR. . . . .	20-71-11
DPXAMA-40-33S-(), CONNECTOR . . . . .	20-71-11
DPXAMA-45-33S-(), CONNECTOR . . . . .	20-71-11
DPXAMA-57-34P-(), CONNECTOR. . . . .	20-71-11
DPXAMA-A10-33S-(), CONNECTOR . . . . .	20-71-11
DPXAMB-26-33S, CONNECTOR . . . . .	20-71-11
DPXAMB-26-33S-(), CONNECTOR . . . . .	20-71-11
DPXAMB-26-34P, CONNECTOR . . . . .	20-71-11
DPXAMB-32B2-33S, CONNECTOR . . . . .	20-71-11
DPXAMB-32B2-33S-(), CONNECTOR. . . . .	20-71-11
DPXAMB-32W2-33S, CONNECTOR . . . . .	20-71-11
DPXAMB-32W2-33S-(), CONNECTOR . . . . .	20-71-11
DPXAMB-57-33S, CONNECTOR . . . . .	20-71-11
DPXAMB-57-33S-(), CONNECTOR . . . . .	20-71-11
DPXAMB-67-33S, CONNECTOR . . . . .	20-71-11
DPXB-17-33S-(), CONNECTOR . . . . .	20-71-11
DPXB-32-33S-(), CONNECTOR . . . . .	20-71-11
DPXB-40-33S-(), CONNECTOR . . . . .	20-71-11
DPXB-45-33S-(), CONNECTOR . . . . .	20-71-11
DPXB-8-33S-(), CONNECTOR . . . . .	20-71-11
DPXB32-33S-00(), CONNECTOR . . . . .	20-71-11
DPXBMA-()-33S-00(), CONNECTOR . . . . .	20-71-11
DPXBMA-10-33P-(), CONNECTOR. . . . .	20-71-11
DPXBMA-32-33S-(), CONNECTOR . . . . .	20-71-11
DPXBMA-32-33S-00(), CONNECTOR. . . . .	20-71-11
DPXBMA-32W4-33S-(), CONNECTOR . . . . .	20-71-11
DPXBMA-32W4-33S-00(), CONNECTOR. . . . .	20-71-11
DPXBMA-40-33S-(), CONNECTOR . . . . .	20-71-11
DPXBMA-40-33S-00(), CONNECTOR . . . . .	20-71-11
DPXBMA-45-33S-(), CONNECTOR . . . . .	20-71-11
DPXBMA-45-33S-00(), CONNECTOR . . . . .	20-71-11
DPXBMA-57-33S-(), CONNECTOR . . . . .	20-71-11
DPXBMA-57-33S-00(), CONNECTOR. . . . .	20-71-11
DPXBMA-57-34P-00(), CONNECTOR . . . . .	20-71-11
DPXBMA-67-33S(), CONNECTOR . . . . .	20-71-11
DPXBMA-67-33S-(), CONNECTOR . . . . .	20-71-11

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20**

## ITT CANNON (continued)

DPXBMA-67-33S-00(), CONNECTOR . . . . .	20-71-11
DPXBMA-6733S-(), CONNECTOR . . . . .	20-71-11
DPXBMA-8-33S-(), CONNECTOR . . . . .	20-71-11
DPXBMA-8-33S-00(), CONNECTOR . . . . .	20-71-11
DPXBMA-8-34S-(), CONNECTOR . . . . .	20-71-11
DPXBMA-B32C4-33S-(), CONNECTOR . . . . .	20-71-11
DPXBMA-D106-33P-(), CONNECTOR . . . . .	20-71-11
DPXBMA-D106-33P-00(), CONNECTOR . . . . .	20-71-11
DPXBMA-D32C4-33S-(), CONNECTOR . . . . .	20-71-11
DPXBMA-D32C4-33S00(), CONNECTOR . . . . .	20-71-11
DPXBMA-D32C4-34P00(), CONNECTOR . . . . .	20-71-11
DPXBMA-D32W4-33S-(), CONNECTOR . . . . .	20-71-11
DPXBMB-()-33S-00(), CONNECTOR . . . . .	20-71-11
DPXBMB-40-33S-(), CONNECTOR . . . . .	20-71-11
DPXBMB-40-33S-00(), CONNECTOR . . . . .	20-71-11
DPXBMB-45-33S-(), CONNECTOR . . . . .	20-71-11
DPXBMB-45-33S-00(), CONNECTOR . . . . .	20-71-11
DPXBMB-57-33S-(), CONNECTOR . . . . .	20-71-11
DPXBMB-57-33S-00(), CONNECTOR . . . . .	20-71-11
DPXBMB-57-34P-00(), CONNECTOR . . . . .	20-71-11
DPXBMB-67-33S-(), CONNECTOR . . . . .	20-71-11
DPXBMB-67-33S-00(), CONNECTOR . . . . .	20-71-11
DPXBMB-8-33S-(), CONNECTOR . . . . .	20-71-11
DPXBMB-8-33S-00(), CONNECTOR . . . . .	20-71-11
DPXBME-10-33S-(), CONNECTOR . . . . .	20-71-11
DPXBME-40-33S-(), CONNECTOR . . . . .	20-71-11
DPXBME-57-33S-(), CONNECTOR . . . . .	20-71-11
DPXBNA-67M-33S-(), CONNECTOR . . . . .	20-71-11
DPXF40C1S, CONNECTOR . . . . .	20-40-00
DPXMA-26-33S-(), CONNECTOR . . . . .	20-71-11
DPXRC-20C5-33A1-(), CONNECTOR . . . . .	20-71-11
FRA()-(), CONNECTOR . . . . .	20-61-19
FRA()36-5()-747, CONNECTOR . . . . .	20-61-19
FRF(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE . . . . .	20-35-11
FRF()-(), CONNECTOR . . . . .	20-61-19
FRF()36-5()-747, CONNECTOR . . . . .	20-61-19
FVA()-(), CONNECTOR . . . . .	20-61-19
FVA()36-5()-747, CONNECTOR . . . . .	20-61-19
FVF()-(), CONNECTOR . . . . .	20-61-19
FVF()36-5()-747, CONNECTOR . . . . .	20-61-19
KO(), CONNECTOR . . . . .	20-40-00
SGA(), CONNECTOR . . . . .	20-72-21
WFB0()-(), CONNECTOR . . . . .	20-61-19
WFB0()-()CD, CONNECTOR . . . . .	20-61-19
WFB6()-(), CONNECTOR . . . . .	20-61-19
WFB6()-()CE, CONNECTOR . . . . .	20-61-19
XLR-(), CONNECTOR . . . . .	20-64-12

**20-CROSS REFERENCE INDEX**



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

ITT CANNON D()MA CONNECTORS	
CONNECTOR ASSEMBLY .....	20-72-12
ITT CANNON DPA SERIES	
CONNECTOR ASSEMBLY .....	20-71-11
ITT CANNON DPD SERIES	
CONNECTOR ASSEMBLY .....	20-71-11
ITT CANNON DPE-MA SERIES	
CONNECTOR ASSEMBLY .....	20-71-13
ITT CANNON DPX SERIES	
CONNECTOR ASSEMBLY .....	20-71-11
ITT CANNON SGA() SERIES	
CONNECTOR ASSEMBLY .....	20-72-21
ITT CANNON UK	
HTBMF( ), CONNECTOR .....	20-63-13
HTBMF00( ), CONNECTOR .....	20-63-13
ITT GREMAR	
150900-0302, CONNECTOR .....	20-40-15
150900-0303, CONNECTOR .....	20-40-15
150900-2341, CONNECTOR .....	20-40-15
150900-2342, CONNECTOR .....	20-40-15
150900-2343, CONNECTOR .....	20-40-15
ITT SURPRENANT	
BA14349, COAX CABLE, CONNECTOR ASSEMBLY .....	20-51-05
BA14349, COAX CABLE, CONNECTOR ASSEMBLY .....	20-51-42
ITW SWITCHES	
09-530-(), SWITCH, LIGHTED PUSHBUTTON .....	20-84-14

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****J**

J.S.T.	
SMP-()-BC, CONNECTOR . . . . .	20-64-14
SMR-()-B, CONNECTOR . . . . .	20-64-14
XHP-(), CONNECTOR . . . . .	20-64-14
JACKET	
CABLE, DAMAGE CONDITIONS . . . . .	20-10-13
CABLE, REMOVAL . . . . .	20-00-15
CABLE, REPAIR . . . . .	20-10-13
WIRE, DAMAGE CONDITIONS . . . . .	20-10-13
WIRE, REPAIR . . . . .	20-10-13
JANCO	
AC30-(), SWITCH . . . . .	20-83-00
AC45-(), SWITCH . . . . .	20-83-00
AC60-(), SWITCH . . . . .	20-83-00
AC90-(), SWITCH . . . . .	20-83-00
AD45-(), SWITCH . . . . .	20-84-17
JAY-EL	
10648()-(), SWITCH, LIGHTED PUSHBUTTON . . . . .	20-83-00
JBX TYPE MINIATURE PUSH-PULL	
CONNECTOR ASSEMBLY . . . . .	20-61-02
CONNECTOR ASSEMBLY . . . . .	20-61-02
JBXEA1G06FCSDS, CONNECTOR, SOURIAU . . . . .	20-61-02
JEFFY JUNCTION SPLICE	
TSE-12-01, DEUTSCH . . . . .	20-90-14
TSE-16-01, DEUTSCH . . . . .	20-90-14
TSE-20-01, DEUTSCH . . . . .	20-90-14
JJ-055, CONNECTOR, KINGS ELECTRONICS . . . . .	20-64-13
JOHNSON	
105-0303-001, TIP PLUG CONNECTOR . . . . .	20-40-14
JUMPER ASSEMBLY	
BOND, DAMAGE LIMITS . . . . .	20-20-00

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## K

K-4932, CONNECTOR, KINGS ELECTRONICS . . . . .	20-62-22
K-4941, CONNECTOR, KINGS ELECTRONICS . . . . .	20-62-22
K-4942, CONNECTOR, KINGS ELECTRONICS . . . . .	20-62-22
K-4943, CONNECTOR, KINGS ELECTRONICS . . . . .	20-62-22
K20B06, FERRULE - SAFETY CABLE, BERGEN . . . . .	20-60-07
K20B09, FERRULE - SAFETY CABLE, BERGEN . . . . .	20-60-07
K20B12, FERRULE - SAFETY CABLE, BERGEN . . . . .	20-60-07
K20B15, FERRULE - SAFETY CABLE, BERGEN . . . . .	20-60-07
K20B18, FERRULE - SAFETY CABLE, BERGEN . . . . .	20-60-07
K20B21, FERRULE - SAFETY CABLE, BERGEN . . . . .	20-60-07
K20B24, FERRULE - SAFETY CABLE, BERGEN . . . . .	20-60-07
KA-19-102, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-143, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-143-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-162, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-163, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-193, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-195-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-198-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-21, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-213, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-213-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-216, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-216-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-23, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-24, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-25, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-48, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-50, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-51, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-63, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-19-68, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-19-83, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-100-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-102-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-12, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-39-15, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-39-31, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-39-32, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-39-44, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-82, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-83, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-85, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-39-94-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-128, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-134, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

KA-59-138, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-166, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-185, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-185, CONNECTOR, KINGS . . . . .	20-71-14
KA-59-185-MC7, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-186, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-187, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-188, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-189, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-230, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-236, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-251, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-260, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-260, CONNECTOR, KINGS . . . . .	20-71-14
KA-59-267, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-277, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-277, CONNECTOR, KINGS . . . . .	20-71-14
KA-59-29, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-292, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-304, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-31, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-313, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-316, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-317, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-318, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-319, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-32, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-324, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-353-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-353-M06, CONNECTOR, KINGS . . . . .	20-71-14
KA-59-36, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-39, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-391-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-391-M06, CONNECTOR, KINGS . . . . .	20-71-14
KA-59-392-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-392-M06, CONNECTOR, KINGS . . . . .	20-71-14
KA-59-393-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-40, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-41, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-437-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-438-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-439-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-57, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-59, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-73, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KA-59-98, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KA-59-99, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-19-100, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

KC-19-101, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-19-113, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-19-116, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-19-121, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-19-121, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-122, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-125, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-19-129, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-129-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-136, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-19-161, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-169, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-170, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-177, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-177-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-21, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-19-226, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-254, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-255, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-256, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-261, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-262, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-307-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-308-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-31, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-19-32, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-19-327-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-328-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-329-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-19-33, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-19-34, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-19-57, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-19-69, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-39-102, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-39-108, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-39-109, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-39-110, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-39-111, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-39-14, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-39-140-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-39-142-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-39-20, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-39-21, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-39-22, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-39-25, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-39-29, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KC-39-31, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KC-39-36, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

KC-39-44, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-39-45, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-39-48, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-39-56, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-39-57, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-39-81, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-104, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-111, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-59-128, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-136, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-59-152, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-172, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-59-177, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-59-178, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-59-188, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-59-191, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-59-194, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-59-218, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-222, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-259, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-261, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-262, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-263, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-265, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-267, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-281, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-287, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-291, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-33, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-59-38, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-59-383, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-41, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-59-411, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-42, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-59-425-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-444, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-445, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-446, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-447, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-448, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-557-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-585-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-604-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-605-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-609, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-609-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-61, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-59-62, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20**

KC-59-63, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-59-64, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-59-660-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-669-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KC-59-85, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KC-59-96, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KD-19-08, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-13
KD-19-104, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-19-104-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-19-105-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-19-107-M06, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-19-26, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KD-19-28, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KD-19-29, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KD-19-33, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KD-19-44, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KD-19-45, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KD-19-49, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KD-19-52, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KD-19-55, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-19-56, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KD-19-66, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-19-67, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-19-68, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-19-69, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-19-90, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-19-94, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-19-95, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-39-08, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KD-39-09, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KD-39-10, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KD-39-21, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KD-39-27, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-39-28, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-39-37, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-39-42, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-100, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KD-59-101, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KD-59-110, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-120, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-125, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-126, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-128, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-129, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-155, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KD-59-156, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KD-59-161, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KD-59-163, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

KD-59-164, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-165, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-166, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-180-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-184-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-185, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-185-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-186, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-186-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-187-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-193-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-199-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-201, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-201-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-202, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-202-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-33, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KD-59-35, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KD-59-38, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KD-59-40, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KD-59-41, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KD-59-42, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KD-59-43, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KD-59-44, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KD-59-50, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KD-59-52, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-55, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KD-59-57, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KD-59-58, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-63, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-64, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KD-59-90, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KD-59-94, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KD-59-95, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KG-19-15-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KG-59-16, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KG-59-22, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KG-59-23, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KG-59-25, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KG-59-26, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KG-59-28, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KG-59-31-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KG-59-32-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KG-59-33-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KG-59-34-M06, COAX CONNECTOR, KINGS ELECTRONICS	20-51-15
KH-19-12, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KH-19-13, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11
KH-19-14, COAX CONNECTOR, KINGS ELECTRONICS	20-51-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

KH-19-18, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KH-19-22, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KH-39-11, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KH-39-12, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KH-39-21, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KH-39-22, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KH-39-25-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KH-59-102-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KH-59-103-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KH-59-104-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KH-59-19, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KH-59-20, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KH-59-21, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KH-59-24, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KH-59-28, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KH-59-31, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KH-59-47, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KH-59-50, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KH-59-53, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KH-59-54, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KH-59-56, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KH-59-60, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KH-59-63, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KH-59-64, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KH-59-65, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KH-59-66, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KH-59-69, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KH-59-78, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KH-59-99-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KINGS	
125-101-9, CONNECTOR .....	20-71-14
125-105-9, CONNECTOR .....	20-71-14
125-92-9, CONNECTOR .....	20-71-14
125-94-9, CONNECTOR .....	20-71-14
125-96-9, CONNECTOR .....	20-71-14
125-98-9, CONNECTOR .....	20-71-14
1965-12-9, CONNECTOR .....	20-53-05
KA-59-185, CONNECTOR .....	20-71-14
KA-59-260, CONNECTOR .....	20-71-14
KA-59-277, CONNECTOR .....	20-71-14
KA-59-353-M06, CONNECTOR .....	20-71-14
KA-59-391-M06, CONNECTOR .....	20-71-14
KA-59-392-M06, CONNECTOR .....	20-71-14
KINGS ELECTRONICS	
1075-13-9, COAX CONNECTOR .....	20-51-15
1075-13-9, COAX CONNECTOR .....	20-51-17
1201-11-9, COAX CONNECTOR .....	20-51-15
1201-12-9, COAX CONNECTOR .....	20-51-15

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****KINGS ELECTRONICS (continued)**

1201-13-9, COAX CONNECTOR .....	20-51-15
1201-14-9, COAX CONNECTOR .....	20-51-15
1201-20-9, COAX CONNECTOR .....	20-51-15
1201-21-9, COAX CONNECTOR .....	20-51-15
1201-22-9, COAX CONNECTOR .....	20-51-15
1201-23-9, COAX CONNECTOR .....	20-51-15
1201-24-9, COAX CONNECTOR .....	20-51-15
1201-25-9, COAX CONNECTOR .....	20-51-15
1201-6-9, COAX CONNECTOR .....	20-51-15
1202-20-9, COAX CONNECTOR .....	20-51-15
1202-23-9, COAX CONNECTOR .....	20-51-15
1202-26-9, COAX CONNECTOR .....	20-51-15
1203-13-9, COAX CONNECTOR .....	20-51-15
1203-14-9, COAX CONNECTOR .....	20-51-15
1203-15-9, COAX CONNECTOR .....	20-51-15
1203-16-9, COAX CONNECTOR .....	20-51-15
1203-19-9, COAX CONNECTOR .....	20-51-15
1203-20-9, COAX CONNECTOR .....	20-51-15
1203-21-9, COAX CONNECTOR .....	20-51-15
1203-4-9, COAX CONNECTOR .....	20-51-15
1205-20-9, COAX CONNECTOR .....	20-51-15
1205-31-9, COAX CONNECTOR .....	20-51-15
1205-47-9, COAX CONNECTOR .....	20-51-15
1205-48-9, COAX CONNECTOR .....	20-51-15
1205-49-9, COAX CONNECTOR .....	20-51-15
1205-61-9, COAX CONNECTOR .....	20-51-15
1205-62-9, COAX CONNECTOR .....	20-51-15
1206-11-9, COAX CONNECTOR .....	20-51-15
1206-21-9, COAX CONNECTOR .....	20-51-15
1206-22-9, COAX CONNECTOR .....	20-51-15
1206-26-9, COAX CONNECTOR .....	20-51-15
1206-29-9, COAX CONNECTOR .....	20-51-15
1206-30-9, COAX CONNECTOR .....	20-51-15
121-11-9, COAX CONNECTOR .....	20-51-15
121-24-9, COAX CONNECTOR .....	20-51-15
121-35-9, COAX CONNECTOR .....	20-51-15
121-36-9, COAX CONNECTOR .....	20-51-15
121-37-9, COAX CONNECTOR .....	20-51-15
121-38-9, COAX CONNECTOR .....	20-51-15
121-39-9, COAX CONNECTOR .....	20-51-15
121-40-9, COAX CONNECTOR .....	20-51-15
121-44-9, COAX CONNECTOR .....	20-51-15
121-45-9, COAX CONNECTOR .....	20-51-15
121-46-9, COAX CONNECTOR .....	20-51-15
121-52-9, COAX CONNECTOR .....	20-51-15
122-37-9, COAX CONNECTOR .....	20-51-15
123-22-5, COAX CONNECTOR .....	20-51-15
123-23-9, COAX CONNECTOR .....	20-51-15

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## KINGS ELECTRONICS (continued)

123-24-9, COAX CONNECTOR .....	20-51-15
123-26-9, COAX CONNECTOR .....	20-51-15
125-101-9, COAX CONNECTOR .....	20-51-15
125-105-9, COAX CONNECTOR .....	20-51-15
125-126-9, COAX CONNECTOR .....	20-51-15
125-60-9, COAX CONNECTOR .....	20-51-15
125-61-9, COAX CONNECTOR .....	20-51-15
125-69-9, COAX CONNECTOR .....	20-51-15
125-88-9, COAX CONNECTOR .....	20-51-15
125-89-9, COAX CONNECTOR .....	20-51-15
125-91-9, COAX CONNECTOR .....	20-51-15
125-92-9, COAX CONNECTOR .....	20-51-15
125-94-9, COAX CONNECTOR .....	20-51-15
125-95-9, COAX CONNECTOR .....	20-51-15
125-96-9, COAX CONNECTOR .....	20-51-15
126-14-5, COAX CONNECTOR .....	20-51-15
126-50-9, COAX CONNECTOR .....	20-51-15
126-58-9, COAX CONNECTOR .....	20-51-15
126-59-9, COAX CONNECTOR .....	20-51-15
126-64-9, COAX CONNECTOR .....	20-51-15
126-67-9, COAX CONNECTOR .....	20-51-15
126-70-9, COAX CONNECTOR .....	20-51-15
126-71-9, COAX CONNECTOR .....	20-51-15
126-73-9, COAX CONNECTOR .....	20-51-15
126-74-9, COAX CONNECTOR .....	20-51-15
126-78-1, COAX CONNECTOR .....	20-51-15
126-78-6, COAX CONNECTOR .....	20-51-15
126-85-9, COAX CONNECTOR .....	20-51-15
1525-4-9, COAX CONNECTOR .....	20-51-15
2430-1-(), COAX CONNECTOR .....	20-51-15
2430-2-(), COAX CONNECTOR .....	20-51-15
2431-74-(), COAX CONNECTOR .....	20-51-15
2431-76-(), COAX CONNECTOR .....	20-51-15
2431-80-(), COAX CONNECTOR .....	20-51-15
2431-81-(), COAX CONNECTOR .....	20-51-15
2431-82-(), COAX CONNECTOR .....	20-51-15
2431-83-(), COAX CONNECTOR .....	20-51-15
2431-84-(), COAX CONNECTOR .....	20-51-15
2431-85-(), COAX CONNECTOR .....	20-51-15
2431-87-(), COAX CONNECTOR .....	20-51-15
2431-88-(), COAX CONNECTOR .....	20-51-15
2431-89-(), COAX CONNECTOR .....	20-51-15
2435-74-(), COAX CONNECTOR .....	20-51-15
2435-77-(), COAX CONNECTOR .....	20-51-15
2435-81-(), COAX CONNECTOR .....	20-51-15
2435-82-(), COAX CONNECTOR .....	20-51-15
2435-83-(), COAX CONNECTOR .....	20-51-15
2435-84-(), COAX CONNECTOR .....	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## KINGS ELECTRONICS (continued)

2435-87-(), COAX CONNECTOR . . . . .	20-51-15
2436-81-(), COAX CONNECTOR . . . . .	20-51-15
2436-83-(), COAX CONNECTOR . . . . .	20-51-15
2436-85-(), COAX CONNECTOR . . . . .	20-51-15
2971-2-(), COAX CONNECTOR . . . . .	20-51-15
2971-3-(), COAX CONNECTOR . . . . .	20-51-15
2971-4-(), COAX CONNECTOR . . . . .	20-51-15
2971-5-(), COAX CONNECTOR . . . . .	20-51-15
2971-6-(), COAX CONNECTOR . . . . .	20-51-15
2971-7-(), COAX CONNECTOR . . . . .	20-51-15
2971-8-(), COAX CONNECTOR . . . . .	20-51-15
2975-2-(), COAX CONNECTOR . . . . .	20-51-15
2975-4-(), COAX CONNECTOR . . . . .	20-51-15
2975-5-(), COAX CONNECTOR . . . . .	20-51-15
2975-6-(), COAX CONNECTOR . . . . .	20-51-15
2976-1-(), COAX CONNECTOR . . . . .	20-51-15
2976-3-(), COAX CONNECTOR . . . . .	20-51-15
2981-1-(), COAX CONNECTOR . . . . .	20-51-15
2981-3-(), COAX CONNECTOR . . . . .	20-51-15
2981-4-(), COAX CONNECTOR . . . . .	20-51-15
2981-5-(), COAX CONNECTOR . . . . .	20-51-15
2981-6-(), COAX CONNECTOR . . . . .	20-51-15
2981-7-(), COAX CONNECTOR . . . . .	20-51-15
2981-8-(), COAX CONNECTOR . . . . .	20-51-15
2985-2-(), COAX CONNECTOR . . . . .	20-51-15
2985-3-(), COAX CONNECTOR . . . . .	20-51-15
2985-4-(), COAX CONNECTOR . . . . .	20-51-15
2986-1-(), COAX CONNECTOR . . . . .	20-51-15
2986-3-(), COAX CONNECTOR . . . . .	20-51-15
751-10-9, COAX CONNECTOR . . . . .	20-51-15
751-11-9, COAX CONNECTOR . . . . .	20-51-15
751-2-9, COAX CONNECTOR . . . . .	20-51-15
751-20-9, COAX CONNECTOR . . . . .	20-51-15
751-22-9, COAX CONNECTOR . . . . .	20-51-15
751-3-9, COAX CONNECTOR . . . . .	20-51-15
751-4-9, COAX CONNECTOR . . . . .	20-51-15
752-43-9, COAX CONNECTOR . . . . .	20-51-15
755-129-9, COAX CONNECTOR . . . . .	20-51-15
755-78-9, COAX CONNECTOR . . . . .	20-51-15
755-79-9, COAX CONNECTOR . . . . .	20-51-15
755-93-9, COAX CONNECTOR . . . . .	20-51-15
756-10-9, COAX CONNECTOR . . . . .	20-51-15
756-16-9, COAX CONNECTOR . . . . .	20-51-15
756-4-9, COAX CONNECTOR . . . . .	20-51-15
791-10-9, COAX CONNECTOR . . . . .	20-51-15
791-11-9, COAX CONNECTOR . . . . .	20-51-15
791-5-9, COAX CONNECTOR . . . . .	20-51-15
791-6-9, COAX CONNECTOR . . . . .	20-51-15

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****KINGS ELECTRONICS (continued)**

791-7-9, COAX CONNECTOR . . . . .	20-51-15
791-8-9, COAX CONNECTOR . . . . .	20-51-15
791-9-9, COAX CONNECTOR . . . . .	20-51-15
795-15-9, COAX CONNECTOR . . . . .	20-51-15
795-16-9, COAX CONNECTOR . . . . .	20-51-15
795-20-9, COAX CONNECTOR . . . . .	20-51-15
795-21-9, COAX CONNECTOR . . . . .	20-51-15
795-23-9, COAX CONNECTOR . . . . .	20-51-15
795-29-9, COAX CONNECTOR . . . . .	20-51-15
795-30-9, COAX CONNECTOR . . . . .	20-51-15
795-33-9, COAX CONNECTOR . . . . .	20-51-15
796-15-9, COAX CONNECTOR . . . . .	20-51-15
796-17-9, COAX CONNECTOR . . . . .	20-51-15
796-18-9, COAX CONNECTOR . . . . .	20-51-15
796-19-9, COAX CONNECTOR . . . . .	20-51-15
796-4-9, COAX CONNECTOR . . . . .	20-51-15
821-2-9, COAX CONNECTOR . . . . .	20-51-15
821-3-9, COAX CONNECTOR . . . . .	20-51-15
821-4-9, COAX CONNECTOR . . . . .	20-51-15
821-5-9, COAX CONNECTOR . . . . .	20-51-15
821-6-9, COAX CONNECTOR . . . . .	20-51-15
821-7-9, COAX CONNECTOR . . . . .	20-51-15
821-9-9, COAX CONNECTOR . . . . .	20-51-15
823-1-9, COAX CONNECTOR . . . . .	20-51-15
823-2-9, COAX CONNECTOR . . . . .	20-51-15
825-10-9, COAX CONNECTOR . . . . .	20-51-15
825-11-9, COAX CONNECTOR . . . . .	20-51-15
825-12-9, COAX CONNECTOR . . . . .	20-51-15
825-14-9, COAX CONNECTOR . . . . .	20-51-15
825-7-9, COAX CONNECTOR . . . . .	20-51-15
826-10-9, COAX CONNECTOR . . . . .	20-51-15
826-8-9, COAX CONNECTOR . . . . .	20-51-15
826-9-9, COAX CONNECTOR . . . . .	20-51-15
841-1-9, COAX CONNECTOR . . . . .	20-51-15
843-2-9, COAX CONNECTOR . . . . .	20-51-15
845-3-9, COAX CONNECTOR . . . . .	20-51-15
846-5-9, COAX CONNECTOR . . . . .	20-51-15
871-59-3, COAX CONNECTOR . . . . .	20-51-15
875-100-3, COAX CONNECTOR . . . . .	20-51-15
875-105-3, COAX CONNECTOR . . . . .	20-51-15
875-91-3, COAX CONNECTOR . . . . .	20-51-15
875-92-3, COAX CONNECTOR . . . . .	20-51-15
876-64-3, COAX CONNECTOR . . . . .	20-51-15
892-2-9, COAX CONNECTOR . . . . .	20-51-15
892-3-9, COAX CONNECTOR . . . . .	20-51-15
895-3-9, COAX CONNECTOR . . . . .	20-51-15
895-6-9, COAX CONNECTOR . . . . .	20-51-15
896-4-9, COAX CONNECTOR . . . . .	20-51-15

**20-CROSS REFERENCE INDEX**

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****KINGS ELECTRONICS (continued)**

JJ-055, CONNECTOR . . . . .	20-64-13
K-4932, CONNECTOR . . . . .	20-62-22
K-4941, CONNECTOR . . . . .	20-62-22
K-4942, CONNECTOR . . . . .	20-62-22
K-4943, CONNECTOR . . . . .	20-62-22
KA-19-102, COAX CONNECTOR . . . . .	20-51-15
KA-19-143, COAX CONNECTOR . . . . .	20-51-15
KA-19-143-M06, COAX CONNECTOR . . . . .	20-51-15
KA-19-162, COAX CONNECTOR . . . . .	20-51-15
KA-19-163, COAX CONNECTOR . . . . .	20-51-15
KA-19-193, COAX CONNECTOR . . . . .	20-51-15
KA-19-195-M06, COAX CONNECTOR . . . . .	20-51-15
KA-19-198-M06, COAX CONNECTOR . . . . .	20-51-15
KA-19-21, COAX CONNECTOR . . . . .	20-51-11
KA-19-213, COAX CONNECTOR . . . . .	20-51-15
KA-19-213-M06, COAX CONNECTOR . . . . .	20-51-15
KA-19-216, COAX CONNECTOR . . . . .	20-51-15
KA-19-216-M06, COAX CONNECTOR . . . . .	20-51-15
KA-19-23, COAX CONNECTOR . . . . .	20-51-11
KA-19-24, COAX CONNECTOR . . . . .	20-51-11
KA-19-25, COAX CONNECTOR . . . . .	20-51-11
KA-19-48, COAX CONNECTOR . . . . .	20-51-11
KA-19-50, COAX CONNECTOR . . . . .	20-51-11
KA-19-51, COAX CONNECTOR . . . . .	20-51-11
KA-19-63, COAX CONNECTOR . . . . .	20-51-11
KA-19-68, COAX CONNECTOR . . . . .	20-51-15
KA-19-83, COAX CONNECTOR . . . . .	20-51-15
KA-39-100-M06, COAX CONNECTOR . . . . .	20-51-15
KA-39-102-M06, COAX CONNECTOR . . . . .	20-51-15
KA-39-12, COAX CONNECTOR . . . . .	20-51-11
KA-39-15, COAX CONNECTOR . . . . .	20-51-11
KA-39-31, COAX CONNECTOR . . . . .	20-51-11
KA-39-32, COAX CONNECTOR . . . . .	20-51-11
KA-39-44, COAX CONNECTOR . . . . .	20-51-15
KA-39-82, COAX CONNECTOR . . . . .	20-51-15
KA-39-83, COAX CONNECTOR . . . . .	20-51-15
KA-39-85, COAX CONNECTOR . . . . .	20-51-15
KA-39-94-M06, COAX CONNECTOR . . . . .	20-51-15
KA-59-128, COAX CONNECTOR . . . . .	20-51-11
KA-59-134, COAX CONNECTOR . . . . .	20-51-11
KA-59-138, COAX CONNECTOR . . . . .	20-51-11
KA-59-166, COAX CONNECTOR . . . . .	20-51-11
KA-59-185, COAX CONNECTOR . . . . .	20-51-15
KA-59-185-MC7, COAX CONNECTOR . . . . .	20-51-15
KA-59-186, COAX CONNECTOR . . . . .	20-51-15
KA-59-187, COAX CONNECTOR . . . . .	20-51-15
KA-59-188, COAX CONNECTOR . . . . .	20-51-15
KA-59-189, COAX CONNECTOR . . . . .	20-51-15

**20-CROSS REFERENCE INDEX**

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****KINGS ELECTRONICS (continued)**

KA-59-230, COAX CONNECTOR . . . . .	20-51-15
KA-59-236, COAX CONNECTOR . . . . .	20-51-15
KA-59-251, COAX CONNECTOR . . . . .	20-51-15
KA-59-260, COAX CONNECTOR . . . . .	20-51-15
KA-59-267, COAX CONNECTOR . . . . .	20-51-11
KA-59-277, COAX CONNECTOR . . . . .	20-51-15
KA-59-29, COAX CONNECTOR . . . . .	20-51-11
KA-59-292, COAX CONNECTOR . . . . .	20-51-15
KA-59-304, COAX CONNECTOR . . . . .	20-51-15
KA-59-31, COAX CONNECTOR . . . . .	20-51-11
KA-59-313, COAX CONNECTOR . . . . .	20-51-15
KA-59-316, COAX CONNECTOR . . . . .	20-51-15
KA-59-317, COAX CONNECTOR . . . . .	20-51-15
KA-59-318, COAX CONNECTOR . . . . .	20-51-11
KA-59-319, COAX CONNECTOR . . . . .	20-51-11
KA-59-32, COAX CONNECTOR . . . . .	20-51-11
KA-59-324, COAX CONNECTOR . . . . .	20-51-15
KA-59-353-M06, COAX CONNECTOR . . . . .	20-51-15
KA-59-36, COAX CONNECTOR . . . . .	20-51-11
KA-59-39, COAX CONNECTOR . . . . .	20-51-11
KA-59-391-M06, COAX CONNECTOR . . . . .	20-51-15
KA-59-392-M06, COAX CONNECTOR . . . . .	20-51-15
KA-59-393-M06, COAX CONNECTOR . . . . .	20-51-15
KA-59-40, COAX CONNECTOR . . . . .	20-51-11
KA-59-41, COAX CONNECTOR . . . . .	20-51-11
KA-59-437-M06, COAX CONNECTOR . . . . .	20-51-15
KA-59-438-M06, COAX CONNECTOR . . . . .	20-51-15
KA-59-439-M06, COAX CONNECTOR . . . . .	20-51-15
KA-59-57, COAX CONNECTOR . . . . .	20-51-15
KA-59-59, COAX CONNECTOR . . . . .	20-51-11
KA-59-73, COAX CONNECTOR . . . . .	20-51-15
KA-59-98, COAX CONNECTOR . . . . .	20-51-11
KA-59-99, COAX CONNECTOR . . . . .	20-51-11
KC-19-100, COAX CONNECTOR . . . . .	20-51-11
KC-19-101, COAX CONNECTOR . . . . .	20-51-11
KC-19-113, COAX CONNECTOR . . . . .	20-51-11
KC-19-116, COAX CONNECTOR . . . . .	20-51-11
KC-19-121, COAX CONNECTOR . . . . .	20-51-11
KC-19-121, COAX CONNECTOR . . . . .	20-51-15
KC-19-122, COAX CONNECTOR . . . . .	20-51-15
KC-19-125, COAX CONNECTOR . . . . .	20-51-11
KC-19-129, COAX CONNECTOR . . . . .	20-51-15
KC-19-129-M06, COAX CONNECTOR . . . . .	20-51-15
KC-19-136, COAX CONNECTOR . . . . .	20-51-11
KC-19-161, COAX CONNECTOR . . . . .	20-51-15
KC-19-169, COAX CONNECTOR . . . . .	20-51-15
KC-19-170, COAX CONNECTOR . . . . .	20-51-15
KC-19-177, COAX CONNECTOR . . . . .	20-51-15

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## KINGS ELECTRONICS (continued)

KC-19-177-M06, COAX CONNECTOR . . . . .	20-51-15
KC-19-21, COAX CONNECTOR . . . . .	20-51-11
KC-19-226, COAX CONNECTOR . . . . .	20-51-15
KC-19-254, COAX CONNECTOR . . . . .	20-51-15
KC-19-255, COAX CONNECTOR . . . . .	20-51-15
KC-19-256, COAX CONNECTOR . . . . .	20-51-15
KC-19-261, COAX CONNECTOR . . . . .	20-51-15
KC-19-262, COAX CONNECTOR . . . . .	20-51-15
KC-19-307-M06, COAX CONNECTOR . . . . .	20-51-15
KC-19-308-M06, COAX CONNECTOR . . . . .	20-51-15
KC-19-31, COAX CONNECTOR . . . . .	20-51-11
KC-19-32, COAX CONNECTOR . . . . .	20-51-11
KC-19-327-M06, COAX CONNECTOR . . . . .	20-51-15
KC-19-328-M06, COAX CONNECTOR . . . . .	20-51-15
KC-19-329-M06, COAX CONNECTOR . . . . .	20-51-15
KC-19-33, COAX CONNECTOR . . . . .	20-51-11
KC-19-34, COAX CONNECTOR . . . . .	20-51-11
KC-19-57, COAX CONNECTOR . . . . .	20-51-11
KC-19-69, COAX CONNECTOR . . . . .	20-51-11
KC-39-102, COAX CONNECTOR . . . . .	20-51-11
KC-39-108, COAX CONNECTOR . . . . .	20-51-15
KC-39-109, COAX CONNECTOR . . . . .	20-51-15
KC-39-110, COAX CONNECTOR . . . . .	20-51-15
KC-39-111, COAX CONNECTOR . . . . .	20-51-15
KC-39-14, COAX CONNECTOR . . . . .	20-51-11
KC-39-140-M06, COAX CONNECTOR . . . . .	20-51-15
KC-39-142-M06, COAX CONNECTOR . . . . .	20-51-15
KC-39-20, COAX CONNECTOR . . . . .	20-51-11
KC-39-21, COAX CONNECTOR . . . . .	20-51-11
KC-39-22, COAX CONNECTOR . . . . .	20-51-11
KC-39-25, COAX CONNECTOR . . . . .	20-51-11
KC-39-29, COAX CONNECTOR . . . . .	20-51-15
KC-39-31, COAX CONNECTOR . . . . .	20-51-11
KC-39-36, COAX CONNECTOR . . . . .	20-51-15
KC-39-44, COAX CONNECTOR . . . . .	20-51-11
KC-39-45, COAX CONNECTOR . . . . .	20-51-15
KC-39-48, COAX CONNECTOR . . . . .	20-51-11
KC-39-56, COAX CONNECTOR . . . . .	20-51-11
KC-39-57, COAX CONNECTOR . . . . .	20-51-11
KC-39-81, COAX CONNECTOR . . . . .	20-51-15
KC-59-104, COAX CONNECTOR . . . . .	20-51-15
KC-59-111, COAX CONNECTOR . . . . .	20-51-11
KC-59-128, COAX CONNECTOR . . . . .	20-51-15
KC-59-136, COAX CONNECTOR . . . . .	20-51-11
KC-59-152, COAX CONNECTOR . . . . .	20-51-15
KC-59-172, COAX CONNECTOR . . . . .	20-51-11
KC-59-177, COAX CONNECTOR . . . . .	20-51-11
KC-59-178, COAX CONNECTOR . . . . .	20-51-11

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****KINGS ELECTRONICS (continued)**

KC-59-188, COAX CONNECTOR . . . . .	20-51-11
KC-59-191, COAX CONNECTOR . . . . .	20-51-11
KC-59-194, COAX CONNECTOR . . . . .	20-51-11
KC-59-218, COAX CONNECTOR . . . . .	20-51-15
KC-59-222, COAX CONNECTOR . . . . .	20-51-15
KC-59-259, COAX CONNECTOR . . . . .	20-51-15
KC-59-261, COAX CONNECTOR . . . . .	20-51-15
KC-59-262, COAX CONNECTOR . . . . .	20-51-15
KC-59-263, COAX CONNECTOR . . . . .	20-51-15
KC-59-265, COAX CONNECTOR . . . . .	20-51-15
KC-59-267, COAX CONNECTOR . . . . .	20-51-15
KC-59-281, COAX CONNECTOR . . . . .	20-51-15
KC-59-287, COAX CONNECTOR . . . . .	20-51-15
KC-59-291, COAX CONNECTOR . . . . .	20-51-15
KC-59-33, COAX CONNECTOR . . . . .	20-51-11
KC-59-38, COAX CONNECTOR . . . . .	20-51-11
KC-59-383, COAX CONNECTOR . . . . .	20-51-15
KC-59-41, COAX CONNECTOR . . . . .	20-51-11
KC-59-411, COAX CONNECTOR . . . . .	20-51-15
KC-59-42, COAX CONNECTOR . . . . .	20-51-11
KC-59-425-M06, COAX CONNECTOR . . . . .	20-51-15
KC-59-444, COAX CONNECTOR . . . . .	20-51-15
KC-59-445, COAX CONNECTOR . . . . .	20-51-15
KC-59-446, COAX CONNECTOR . . . . .	20-51-15
KC-59-447, COAX CONNECTOR . . . . .	20-51-15
KC-59-448, COAX CONNECTOR . . . . .	20-51-15
KC-59-557-M06, COAX CONNECTOR . . . . .	20-51-15
KC-59-585-M06, COAX CONNECTOR . . . . .	20-51-15
KC-59-604-M06, COAX CONNECTOR . . . . .	20-51-15
KC-59-605-M06, COAX CONNECTOR . . . . .	20-51-15
KC-59-609, COAX CONNECTOR . . . . .	20-51-15
KC-59-609-M06, COAX CONNECTOR . . . . .	20-51-15
KC-59-61, COAX CONNECTOR . . . . .	20-51-11
KC-59-62, COAX CONNECTOR . . . . .	20-51-11
KC-59-63, COAX CONNECTOR . . . . .	20-51-11
KC-59-64, COAX CONNECTOR . . . . .	20-51-11
KC-59-660-M06, COAX CONNECTOR . . . . .	20-51-15
KC-59-669-M06, COAX CONNECTOR . . . . .	20-51-15
KC-59-85, COAX CONNECTOR . . . . .	20-51-11
KC-59-96, COAX CONNECTOR . . . . .	20-51-11
KD-19-08, COAX CONNECTOR . . . . .	20-51-13
KD-19-104, COAX CONNECTOR . . . . .	20-51-15
KD-19-104-M06, COAX CONNECTOR . . . . .	20-51-15
KD-19-105-M06, COAX CONNECTOR . . . . .	20-51-15
KD-19-107-M06, COAX CONNECTOR . . . . .	20-51-15
KD-19-26, COAX CONNECTOR . . . . .	20-51-11
KD-19-28, COAX CONNECTOR . . . . .	20-51-11
KD-19-29, COAX CONNECTOR . . . . .	20-51-11

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## KINGS ELECTRONICS (continued)

KD-19-33, COAX CONNECTOR . . . . .	20-51-11
KD-19-44, COAX CONNECTOR . . . . .	20-51-11
KD-19-45, COAX CONNECTOR . . . . .	20-51-11
KD-19-49, COAX CONNECTOR . . . . .	20-51-11
KD-19-52, COAX CONNECTOR . . . . .	20-51-11
KD-19-55, COAX CONNECTOR . . . . .	20-51-15
KD-19-56, COAX CONNECTOR . . . . .	20-51-11
KD-19-66, COAX CONNECTOR . . . . .	20-51-15
KD-19-67, COAX CONNECTOR . . . . .	20-51-15
KD-19-68, COAX CONNECTOR . . . . .	20-51-15
KD-19-69, COAX CONNECTOR . . . . .	20-51-15
KD-19-90, COAX CONNECTOR . . . . .	20-51-15
KD-19-94, COAX CONNECTOR . . . . .	20-51-15
KD-19-95, COAX CONNECTOR . . . . .	20-51-15
KD-39-08, COAX CONNECTOR . . . . .	20-51-11
KD-39-09, COAX CONNECTOR . . . . .	20-51-11
KD-39-10, COAX CONNECTOR . . . . .	20-51-11
KD-39-21, COAX CONNECTOR . . . . .	20-51-11
KD-39-27, COAX CONNECTOR . . . . .	20-51-15
KD-39-28, COAX CONNECTOR . . . . .	20-51-15
KD-39-37, COAX CONNECTOR . . . . .	20-51-15
KD-39-42, COAX CONNECTOR . . . . .	20-51-15
KD-59-100, COAX CONNECTOR . . . . .	20-51-11
KD-59-101, COAX CONNECTOR . . . . .	20-51-11
KD-59-110, COAX CONNECTOR . . . . .	20-51-15
KD-59-120, COAX CONNECTOR . . . . .	20-51-15
KD-59-125, COAX CONNECTOR . . . . .	20-51-15
KD-59-126, COAX CONNECTOR . . . . .	20-51-15
KD-59-128, COAX CONNECTOR . . . . .	20-51-15
KD-59-129, COAX CONNECTOR . . . . .	20-51-15
KD-59-155, COAX CONNECTOR . . . . .	20-51-11
KD-59-156, COAX CONNECTOR . . . . .	20-51-11
KD-59-161, COAX CONNECTOR . . . . .	20-51-15
KD-59-163, COAX CONNECTOR . . . . .	20-51-15
KD-59-164, COAX CONNECTOR . . . . .	20-51-15
KD-59-165, COAX CONNECTOR . . . . .	20-51-15
KD-59-166, COAX CONNECTOR . . . . .	20-51-15
KD-59-180-M06, COAX CONNECTOR . . . . .	20-51-15
KD-59-184-M06, COAX CONNECTOR . . . . .	20-51-15
KD-59-185, COAX CONNECTOR . . . . .	20-51-15
KD-59-185-M06, COAX CONNECTOR . . . . .	20-51-15
KD-59-186, COAX CONNECTOR . . . . .	20-51-15
KD-59-186-M06, COAX CONNECTOR . . . . .	20-51-15
KD-59-187-M06, COAX CONNECTOR . . . . .	20-51-15
KD-59-193-M06, COAX CONNECTOR . . . . .	20-51-15
KD-59-199-M06, COAX CONNECTOR . . . . .	20-51-15
KD-59-201, COAX CONNECTOR . . . . .	20-51-15
KD-59-201-M06, COAX CONNECTOR . . . . .	20-51-15

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****KINGS ELECTRONICS (continued)**

KD-59-202, COAX CONNECTOR . . . . .	20-51-15
KD-59-202-M06, COAX CONNECTOR . . . . .	20-51-15
KD-59-33, COAX CONNECTOR . . . . .	20-51-11
KD-59-35, COAX CONNECTOR . . . . .	20-51-11
KD-59-38, COAX CONNECTOR . . . . .	20-51-11
KD-59-40, COAX CONNECTOR . . . . .	20-51-11
KD-59-41, COAX CONNECTOR . . . . .	20-51-11
KD-59-42, COAX CONNECTOR . . . . .	20-51-11
KD-59-43, COAX CONNECTOR . . . . .	20-51-11
KD-59-44, COAX CONNECTOR . . . . .	20-51-11
KD-59-50, COAX CONNECTOR . . . . .	20-51-11
KD-59-52, COAX CONNECTOR . . . . .	20-51-15
KD-59-55, COAX CONNECTOR . . . . .	20-51-11
KD-59-57, COAX CONNECTOR . . . . .	20-51-11
KD-59-58, COAX CONNECTOR . . . . .	20-51-15
KD-59-63, COAX CONNECTOR . . . . .	20-51-15
KD-59-64, COAX CONNECTOR . . . . .	20-51-15
KD-59-90, COAX CONNECTOR . . . . .	20-51-11
KD-59-94, COAX CONNECTOR . . . . .	20-51-11
KD-59-95, COAX CONNECTOR . . . . .	20-51-11
KG-19-15-M06, COAX CONNECTOR . . . . .	20-51-15
KG-59-16, COAX CONNECTOR . . . . .	20-51-11
KG-59-22, COAX CONNECTOR . . . . .	20-51-11
KG-59-23, COAX CONNECTOR . . . . .	20-51-11
KG-59-25, COAX CONNECTOR . . . . .	20-51-11
KG-59-26, COAX CONNECTOR . . . . .	20-51-11
KG-59-28, COAX CONNECTOR . . . . .	20-51-15
KG-59-31-M06, COAX CONNECTOR . . . . .	20-51-15
KG-59-32-M06, COAX CONNECTOR . . . . .	20-51-15
KG-59-33-M06, COAX CONNECTOR . . . . .	20-51-15
KG-59-34-M06, COAX CONNECTOR . . . . .	20-51-15
KH-19-12, COAX CONNECTOR . . . . .	20-51-11
KH-19-13, COAX CONNECTOR . . . . .	20-51-11
KH-19-14, COAX CONNECTOR . . . . .	20-51-11
KH-19-18, COAX CONNECTOR . . . . .	20-51-15
KH-19-22, COAX CONNECTOR . . . . .	20-51-11
KH-39-11, COAX CONNECTOR . . . . .	20-51-11
KH-39-12, COAX CONNECTOR . . . . .	20-51-11
KH-39-21, COAX CONNECTOR . . . . .	20-51-15
KH-39-22, COAX CONNECTOR . . . . .	20-51-15
KH-39-25-M06, COAX CONNECTOR . . . . .	20-51-15
KH-59-102-M06, COAX CONNECTOR . . . . .	20-51-15
KH-59-103-M06, COAX CONNECTOR . . . . .	20-51-15
KH-59-104-M06, COAX CONNECTOR . . . . .	20-51-15
KH-59-19, COAX CONNECTOR . . . . .	20-51-11
KH-59-20, COAX CONNECTOR . . . . .	20-51-11
KH-59-21, COAX CONNECTOR . . . . .	20-51-11
KH-59-24, COAX CONNECTOR . . . . .	20-51-11

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## KINGS ELECTRONICS (continued)

KH-59-28, COAX CONNECTOR . . . . .	20-51-11
KH-59-31, COAX CONNECTOR . . . . .	20-51-11
KH-59-47, COAX CONNECTOR . . . . .	20-51-11
KH-59-50, COAX CONNECTOR . . . . .	20-51-11
KH-59-53, COAX CONNECTOR . . . . .	20-51-11
KH-59-54, COAX CONNECTOR . . . . .	20-51-11
KH-59-56, COAX CONNECTOR . . . . .	20-51-11
KH-59-60, COAX CONNECTOR . . . . .	20-51-11
KH-59-63, COAX CONNECTOR . . . . .	20-51-15
KH-59-64, COAX CONNECTOR . . . . .	20-51-15
KH-59-65, COAX CONNECTOR . . . . .	20-51-15
KH-59-66, COAX CONNECTOR . . . . .	20-51-15
KH-59-69, COAX CONNECTOR . . . . .	20-51-15
KH-59-78, COAX CONNECTOR . . . . .	20-51-11
KH-59-99-M06, COAX CONNECTOR . . . . .	20-51-15
KM-19-08, COAX CONNECTOR . . . . .	20-51-15
KM-39-07, COAX CONNECTOR . . . . .	20-51-15
KM-59-05, COAX CONNECTOR . . . . .	20-51-13
KM-59-18, COAX CONNECTOR . . . . .	20-51-15
KM-59-20, COAX CONNECTOR . . . . .	20-51-15
KM-59-31, COAX CONNECTOR . . . . .	20-51-15
KM-59-36, COAX CONNECTOR . . . . .	20-51-15
KM-59-41, COAX CONNECTOR . . . . .	20-51-15
KN-19-115, COAX CONNECTOR . . . . .	20-51-15
KN-19-117, COAX CONNECTOR . . . . .	20-51-15
KN-19-118, COAX CONNECTOR . . . . .	20-51-15
KN-19-125, COAX CONNECTOR . . . . .	20-51-15
KN-19-145, COAX CONNECTOR . . . . .	20-51-15
KN-19-149, COAX CONNECTOR . . . . .	20-51-15
KN-19-151, COAX CONNECTOR . . . . .	20-51-15
KN-19-162, COAX CONNECTOR . . . . .	20-51-15
KN-19-195-M06, COAX CONNECTOR . . . . .	20-51-15
KN-19-196-M06, COAX CONNECTOR . . . . .	20-51-15
KN-19-198-M06, COAX CONNECTOR . . . . .	20-51-15
KN-19-199-M06, COAX CONNECTOR . . . . .	20-51-15
KN-19-205-M06, COAX CONNECTOR . . . . .	20-51-15
KN-19-206-M06, COAX CONNECTOR . . . . .	20-51-15
KN-19-207-M06, COAX CONNECTOR . . . . .	20-51-15
KN-19-208-M06, COAX CONNECTOR . . . . .	20-51-15
KN-19-209-M06, COAX CONNECTOR . . . . .	20-51-15
KN-19-30, COAX CONNECTOR . . . . .	20-51-11
KN-19-31, COAX CONNECTOR . . . . .	20-51-11
KN-19-331-M06, COAX CONNECTOR . . . . .	20-51-15
KN-19-37, COAX CONNECTOR . . . . .	20-51-11
KN-19-44, COAX CONNECTOR . . . . .	20-51-11
KN-19-48, COAX CONNECTOR . . . . .	20-51-11
KN-19-68, COAX CONNECTOR . . . . .	20-51-11
KN-19-73, COAX CONNECTOR . . . . .	20-51-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## KINGS ELECTRONICS (continued)

KN-19-78, COAX CONNECTOR . . . . .	20-51-11
KN-19-79, COAX CONNECTOR . . . . .	20-51-11
KN-39-114-M06, COAX CONNECTOR . . . . .	20-51-15
KN-39-121-M06, COAX CONNECTOR . . . . .	20-51-15
KN-39-122-M06, COAX CONNECTOR . . . . .	20-51-15
KN-39-19, COAX CONNECTOR . . . . .	20-51-11
KN-39-20, COAX CONNECTOR . . . . .	20-51-11
KN-39-21, COAX CONNECTOR . . . . .	20-51-11
KN-39-23, COAX CONNECTOR . . . . .	20-51-11
KN-39-42, COAX CONNECTOR . . . . .	20-51-11
KN-39-48, COAX CONNECTOR . . . . .	20-51-11
KN-39-51, COAX CONNECTOR . . . . .	20-51-11
KN-39-55, COAX CONNECTOR . . . . .	20-51-11
KN-39-71, COAX CONNECTOR . . . . .	20-51-15
KN-39-72, COAX CONNECTOR . . . . .	20-51-15
KN-39-73, COAX CONNECTOR . . . . .	20-51-15
KN-39-87, COAX CONNECTOR . . . . .	20-51-15
KN-39-93, COAX CONNECTOR . . . . .	20-51-15
KN-59-107, COAX CONNECTOR . . . . .	20-51-11
KN-59-110, COAX CONNECTOR . . . . .	20-51-11
KN-59-113, COAX CONNECTOR . . . . .	20-51-11
KN-59-120, COAX CONNECTOR . . . . .	20-51-15
KN-59-128, COAX CONNECTOR . . . . .	20-51-11
KN-59-129, COAX CONNECTOR . . . . .	20-51-11
KN-59-131, COAX CONNECTOR . . . . .	20-51-11
KN-59-133, COAX CONNECTOR . . . . .	20-51-11
KN-59-135, COAX CONNECTOR . . . . .	20-51-11
KN-59-136, COAX CONNECTOR . . . . .	20-51-11
KN-59-138, COAX CONNECTOR . . . . .	20-51-11
KN-59-159, COAX CONNECTOR . . . . .	20-51-15
KN-59-18, COAX CONNECTOR . . . . .	20-51-11
KN-59-183, COAX CONNECTOR . . . . .	20-51-15
KN-59-183-M06, COAX CONNECTOR . . . . .	20-51-15
KN-59-185, COAX CONNECTOR . . . . .	20-51-15
KN-59-186, COAX CONNECTOR . . . . .	20-51-15
KN-59-190, COAX CONNECTOR . . . . .	20-51-15
KN-59-201-M06, COAX CONNECTOR . . . . .	20-51-15
KN-59-220, COAX CONNECTOR . . . . .	20-51-15
KN-59-220-M07, COAX CONNECTOR . . . . .	20-51-15
KN-59-237, COAX CONNECTOR . . . . .	20-51-11
KN-59-238, COAX CONNECTOR . . . . .	20-51-11
KN-59-239, COAX CONNECTOR . . . . .	20-51-15
KN-59-242-M06, COAX CONNECTOR . . . . .	20-51-15
KN-59-247, COAX CONNECTOR . . . . .	20-51-15
KN-59-261, COAX CONNECTOR . . . . .	20-51-15
KN-59-262, COAX CONNECTOR . . . . .	20-51-15
KN-59-263, COAX CONNECTOR . . . . .	20-51-15
KN-59-264, COAX CONNECTOR . . . . .	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## KINGS ELECTRONICS (continued)

KN-59-264-M06, COAX CONNECTOR . . . . .	20-51-15
KN-59-28, COAX CONNECTOR. . . . .	20-51-11
KN-59-29, COAX CONNECTOR. . . . .	20-51-11
KN-59-31, COAX CONNECTOR. . . . .	20-51-11
KN-59-313-M06, COAX CONNECTOR . . . . .	20-51-15
KN-59-329-M06, COAX CONNECTOR . . . . .	20-51-15
KN-59-330-M06, COAX CONNECTOR . . . . .	20-51-15
KN-59-331-M06, COAX CONNECTOR . . . . .	20-51-15
KN-59-332-M06, COAX CONNECTOR . . . . .	20-51-15
KN-59-34, COAX CONNECTOR. . . . .	20-51-11
KN-59-361-M06, COAX CONNECTOR . . . . .	20-51-15
KN-59-367-M06, COAX CONNECTOR . . . . .	20-51-15
KN-59-368-M06, COAX CONNECTOR . . . . .	20-51-15
KN-59-369-M06, COAX CONNECTOR . . . . .	20-51-15
KN-59-46, COAX CONNECTOR. . . . .	20-51-11
KN-59-47, COAX CONNECTOR. . . . .	20-51-11
KN-59-48, COAX CONNECTOR. . . . .	20-51-11
KN-59-49, COAX CONNECTOR. . . . .	20-51-11
KN-59-50, COAX CONNECTOR. . . . .	20-51-11
KN-59-53, COAX CONNECTOR. . . . .	20-51-11
KN-59-56, COAX CONNECTOR. . . . .	20-51-11
KN-59-57, COAX CONNECTOR. . . . .	20-51-11
KN-59-69, COAX CONNECTOR. . . . .	20-51-11
KS-89-108, COAX CONNECTOR . . . . .	20-51-15
KS-89-164, COAX CONNECTOR . . . . .	20-51-15
KS-89-31, COAX CONNECTOR. . . . .	20-51-11
KS-89-35, COAX CONNECTOR. . . . .	20-51-11
KS-89-42, COAX CONNECTOR. . . . .	20-51-11
KS-89-55, COAX CONNECTOR. . . . .	20-51-15
KU-59-03, COAX CONNECTOR. . . . .	20-51-15
KU-59-19, COAX CONNECTOR. . . . .	20-51-11
KU-59-21, COAX CONNECTOR. . . . .	20-51-11
KU-59-25, COAX CONNECTOR. . . . .	20-51-11
KU-59-32, COAX CONNECTOR. . . . .	20-51-11
KU-59-67, COAX CONNECTOR. . . . .	20-51-11
KY-59-02, COAX CONNECTOR. . . . .	20-51-13
KM-19-08, COAX CONNECTOR, KINGS ELECTRONICS. . . . .	20-51-15
KM-39-07, COAX CONNECTOR, KINGS ELECTRONICS. . . . .	20-51-15
KM-59-05, COAX CONNECTOR, KINGS ELECTRONICS. . . . .	20-51-13
KM-59-18, COAX CONNECTOR, KINGS ELECTRONICS. . . . .	20-51-15
KM-59-20, COAX CONNECTOR, KINGS ELECTRONICS. . . . .	20-51-15
KM-59-31, COAX CONNECTOR, KINGS ELECTRONICS. . . . .	20-51-15
KM-59-36, COAX CONNECTOR, KINGS ELECTRONICS. . . . .	20-51-15
KM-59-41, COAX CONNECTOR, KINGS ELECTRONICS. . . . .	20-51-15
KN-19-115, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-117, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-118, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KN-19-125, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

KN-19-145, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-19-149, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-19-151, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-19-162, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-19-195-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-19-196-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-19-198-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-19-199-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-19-205-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-19-206-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-19-207-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-19-208-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-19-209-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-19-30, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-19-31, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-19-331-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-19-37, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-19-44, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-19-48, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-19-68, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-19-73, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-19-78, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-19-79, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-39-114-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-39-121-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-39-122-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-39-19, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-39-20, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-39-21, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-39-23, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-39-42, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-39-48, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-39-51, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-39-55, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-39-71, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-39-72, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-39-73, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-39-87, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-39-93, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-107, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-110, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-113, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-120, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-128, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-129, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-131, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-133, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-135, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

KN-59-136, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-138, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-159, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-18, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-183, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-183-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-185, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-186, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-190, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-201-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-220, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-220-M07, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-237, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-238, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-239, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-242-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-247, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-261, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-262, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-263, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-264, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-264-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-28, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-29, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-31, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-313-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-329-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-330-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-331-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-332-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-34, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-361-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-367-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-368-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-369-M06, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-15
KN-59-46, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-47, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-48, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-49, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-50, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-53, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-56, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-57, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KN-59-69, COAX CONNECTOR, KINGS ELECTRONICS .....	20-51-11
KO(), CONNECTOR, ITT CANNON .....	20-40-00
KORRY ELECTRONICS	
09-530-(), SWITCH, LIGHTED PUSHBUTTON .....	20-84-14
09-530-9501, CONNECTOR, SWITCH .....	20-84-14

## 20-CROSS REFERENCE INDEX



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

#### KORRY ELECTRONICS (continued)

432-632-1089-00(), SWITCH, LIGHTED PUSHBUTTON . . . . .	20-83-00
433-673-()-(), SWITCH, LIGHTED PUSHBUTTON . . . . .	20-83-00
434-674-()-(), LIGHTED INDICATOR. . . . .	20-83-00
KPSE(), CONNECTOR, DEUTSCH. . . . .	20-61-16
KS-89-108, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KS-89-164, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KS-89-31, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KS-89-35, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KS-89-42, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KS-89-55, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KU-59-03, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-15
KU-59-19, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KU-59-21, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KU-59-25, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KU-59-32, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KU-59-67, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-11
KY-59-02, COAX CONNECTOR, KINGS ELECTRONICS . . . . .	20-51-13

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### L

L()T(), CONNECTOR, BURNDY . . . . .	20-61-16
L42ENT, CONNECTOR, ANDREWS . . . . .	20-51-52
L42EWT, CONNECTOR, ANDREWS . . . . .	20-51-52
LACING TAPE	
BMS 13-54, SUPPLIERS . . . . .	20-10-11
WIRE HARNESS ASSEMBLY . . . . .	20-10-11
LAMP SOCKET	
502-70T-02, ESTERLINE-MASON . . . . .	20-84-00
502-70T-02, WESTERN INDICATOR . . . . .	20-84-00
LANDING GEAR CABLES	
MODEL 747, 767, 777 . . . . .	20-85-12
LANYARD	
G70259T77-(), GLENAIR . . . . .	20-85-12
LEACH	
RSF116200, RELAY SOCKET . . . . .	20-81-12
SO-1048-8308, RELAY SOCKET . . . . .	20-81-16
SO-1048-8308, RELAY SOCKET . . . . .	20-81-18
SO-1048-8308, RELAY SOCKET . . . . .	20-81-22
SO-1048-8779, RELAY SOCKET . . . . .	20-81-22
SO-1049-8772, RELAY SOCKET . . . . .	20-81-22
SO-1055-8690, RELAY SOCKET . . . . .	20-81-16
SO-1055-8690, RELAY SOCKET . . . . .	20-81-21
SO-1055-8690, RELAY SOCKET . . . . .	20-81-22
SO-1056-8691, RELAY SOCKET . . . . .	20-81-16
SO-1056-8691, RELAY SOCKET . . . . .	20-81-22
SO-1057-8912, RELAY SOCKET . . . . .	20-81-16
SO-1057-8912, RELAY SOCKET . . . . .	20-81-17
SO-1057-8912, RELAY SOCKET . . . . .	20-81-22
SO-1058-8913, RELAY SOCKET . . . . .	20-81-22
SO-1059-8914, RELAY SOCKET . . . . .	20-81-16
SO-1059-8914, RELAY SOCKET . . . . .	20-81-22
SO-1061-8916, RELAY SOCKET . . . . .	20-81-16
SO-1061-8916, RELAY SOCKET . . . . .	20-81-22
SO-1062-8917, RELAY SOCKET . . . . .	20-81-16
SO-1062-8917, RELAY SOCKET . . . . .	20-81-22
SO-1063-9033, RELAY SOCKET . . . . .	20-81-22
SO-1064-(), RELAY SOCKET . . . . .	20-81-22
SO-1064-001, RELAY SOCKET . . . . .	20-81-16
SO-1064-003, RELAY SOCKET . . . . .	20-81-16
SO-1064-007, RELAY SOCKET . . . . .	20-81-16
SO-1066-(), RELAY SOCKET . . . . .	20-81-22
SO-1066-001, RELAY SOCKET . . . . .	20-81-16
SO-1066-003, RELAY SOCKET . . . . .	20-81-16
SO-1066-10197, RELAY SOCKET . . . . .	20-81-16
LIFTER LATCH SYSTEM	
WIRE WRAP CONNECTOR . . . . .	20-72-17

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## LIGHT

A-4135()-13(), GRIMES-HONEYWELL .....	20-84-11
A-4135()-1810(), GRIMES-HONEYWELL .....	20-84-11
A-4135()-1820(), GRIMES-HONEYWELL .....	20-84-11
A-4135()-1864(), GRIMES-HONEYWELL .....	20-84-11
A-4135()-24(), GRIMES-HONEYWELL .....	20-84-11
A-4135()-6(), GRIMES-HONEYWELL .....	20-84-11
A-8985-1, GRIMES-HONEYWELL .....	20-84-10
A-8985-10, GRIMES-HONEYWELL .....	20-84-10
A-8985-103, GRIMES-HONEYWELL .....	20-84-10
A-8985-11, GRIMES-HONEYWELL .....	20-84-10
A-8985-12, GRIMES-HONEYWELL .....	20-84-10
A-8985-13, GRIMES-HONEYWELL .....	20-84-10
A-8985-14, GRIMES-HONEYWELL .....	20-84-10
A-8985-15, GRIMES-HONEYWELL .....	20-84-10
A-8985-16, GRIMES-HONEYWELL .....	20-84-10
A-8985-17, GRIMES-HONEYWELL .....	20-84-10
A-8985-2, GRIMES-HONEYWELL .....	20-84-10
A-8985-3, GRIMES-HONEYWELL .....	20-84-10
A-8985-4, GRIMES-HONEYWELL .....	20-84-10
A-8985-5, GRIMES-HONEYWELL .....	20-84-10
A-8985-6, GRIMES-HONEYWELL .....	20-84-10
A-8985-7, GRIMES-HONEYWELL .....	20-84-10
A-8985-8, GRIMES-HONEYWELL .....	20-84-10
A-8985-9, GRIMES-HONEYWELL .....	20-84-10
B-9845()-1665, GRIMES-HONEYWELL .....	20-84-10
B-9845()-1691, GRIMES-HONEYWELL .....	20-84-10
B-9845()-303, GRIMES-HONEYWELL .....	20-84-10
B-9845()-305, GRIMES-HONEYWELL .....	20-84-10
B-9845()-307, GRIMES-HONEYWELL .....	20-84-10

## LIGHTED INDICATOR

434-674()-(), KORRY ELECTRONICS .....	20-83-00
---------------------------------------	----------

## LIGHTED PUSH BUTTON SWITCH

851-37167()-001, EATON .....	20-84-13
851-37167()-002, EATON .....	20-84-13
851-37167()-003, EATON .....	20-84-13
851-37962()-001, EATON .....	20-84-13
851-37962()-002, EATON .....	20-84-13
851-37962()-003, EATON .....	20-84-13
851-37962()-004, EATON .....	20-84-13
851-37962()-005, EATON .....	20-84-13
851-37962()-006, EATON .....	20-84-13
851-37962()-101, EATON .....	20-84-13
851-37962()-102, EATON .....	20-84-13
851-37962()-103, EATON .....	20-84-13
851-37962()-104, EATON .....	20-84-13
851-37962()-201, EATON .....	20-84-13
851-37962()-202, EATON .....	20-84-13

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

LIGHTED PUSH BUTTON SWITCH (continued)	
851-37962()-203, EATON . . . . .	20-84-13
851-37962()-204, EATON . . . . .	20-84-13
LIGHTNING PROTECTION	
AREAS SUSCEPTIBLE TO DAMAGE . . . . .	20-25-11
SHIELD GROUND WIRE ASSEMBLY . . . . .	20-25-11
LINDBERG	
1039, CONNECTOR . . . . .	20-62-17
2564-3, CONNECTOR . . . . .	20-62-17
2564-4, CONNECTOR . . . . .	20-62-17
LINE REPLACEABLE UNIT (LRU)	
ESDS, CONDITIONS FOR INSTALLATION AND REMOVAL . . . . .	20-41-01
LOCKWIRE	
CONNECTOR, INSTALLATION . . . . .	20-60-07
LOOP CLAMP	
287T0011-(), BOEING . . . . .	20-10-12
BACC10BU(), BOEING . . . . .	20-10-12
BACC10DK(), BOEING . . . . .	20-10-12
BACC10GE(), BOEING . . . . .	20-10-12
BACC10GE8A, BOEING . . . . .	20-11-11
BACC10GU(), BOEING . . . . .	20-10-12
BACC10HS(), BOEING . . . . .	20-10-12
BACC10JU(), BOEING . . . . .	20-10-12
BACC10KL(), BOEING . . . . .	20-10-12
TA025041-(), TA MANUFACTURING . . . . .	20-10-12
TA025097(), TA MANUFACTURING . . . . .	20-10-12
LPT(), CONNECTOR, BURNDY . . . . .	20-61-16
LUBRICANT	
SUPPLIERS . . . . .	20-00-11
LUG	
TERMINAL, GENERAL PURPOSE, ASSEMBLY WITH COPPER WIRE . . . . .	20-30-11
TERMINAL, HIGH TEMPERATURE, ASSEMBLY WITH COPPER WIRE . . . . .	20-30-11

# 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### M

M(), CONNECTOR, RADIAL	20-71-16
M22520/1-01 CRIMP TOOL	
EQUIVALENT M22520/2-01 AND ST2220-() CRIMP TOOLS.	20-00-12
M22520/2-01 CRIMP TOOL	
EQUIVALENT M22520/1-01 AND ST2220-() CRIMP TOOLS.	20-00-12
M22T(), CONNECTOR, SOURIAU/BURNDY	20-51-32
M24308 CONNECTORS	
CONNECTOR ASSEMBLY	20-72-13
M24308/2-1, CONNECTOR, QPL	20-72-13
M24308/2-11, CONNECTOR, QPL	20-72-13
M24308/2-12, CONNECTOR, QPL	20-72-13
M24308/2-13, CONNECTOR, QPL	20-72-13
M24308/2-14, CONNECTOR, QPL	20-72-13
M24308/2-15, CONNECTOR, QPL	20-72-13
M24308/2-1F, CONNECTOR, QPL	20-15-41
M24308/2-2, CONNECTOR, QPL	20-72-13
■ M24308/2-281, CONNECTOR, QPL	20-72-13
■ M24308/2-282, CONNECTOR, QPL	20-72-13
■ M24308/2-288, CONNECTOR, QPL	20-72-13
M24308/2-3, CONNECTOR, QPL	20-72-13
M24308/2-32, CONNECTOR, QPL	20-72-13
M24308/2-4, CONNECTOR, QPL	20-72-13
M24308/2-5, CONNECTOR, QPL	20-72-13
M24308/4-1, CONNECTOR, QPL	20-72-13
M24308/4-11, CONNECTOR, QPL	20-72-13
M24308/4-12, CONNECTOR, QPL	20-72-13
M24308/4-14, CONNECTOR, QPL	20-72-13
M24308/4-15, CONNECTOR, QPL	20-72-13
M24308/4-2, CONNECTOR, QPL	20-72-13
M24308/4-3, CONNECTOR, QPL	20-72-13
M24308/4-4, CONNECTOR, QPL	20-72-13
M24308/4-5, CONNECTOR, QPL	20-72-13
M27724-23, SWITCH, TOGGLE, QPL	20-83-00
M27724-24, SWITCH, TOGGLE, QPL	20-83-00
M39029/10-521, THERMOCOUPLE CONTACT, QPL	20-63-13
M39029/10-522, THERMOCOUPLE CONTACT, QPL	20-63-13
M39029/9-516, THERMOCOUPLE CONTACT, QPL	20-63-13
M39029/9-517, THERMOCOUPLE CONTACT, QPL	20-63-13
M80-7160605, CONNECTOR, HYPERTAC	20-15-44
M81511/(), CONNECTOR, QPL	20-61-30
M81714	
INTEGRATED WIRING TERMINATION SYSTEM	20-83-00
M81714() SERIES I	
TERMINAL JUNCTION SYSTEM ASSEMBLY	20-83-01
M81714() SERIES II	
TERMINAL JUNCTION SYSTEM ASSEMBLY	20-83-02

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

M81714/1-(), TERMINAL MODULE, QPL	20-83-01
M81714/10-(), TERMINAL MODULE TRACK, QPL	20-83-01
M81714/11-20, SPLICE, DISCONNECTABLE WIRE, QPL	20-83-00
M81714/14-(), TERMINAL MODULE TRACK, QPL	20-83-01
M81714/16-(), TERMINAL MODULE TRACK, QPL	20-83-01
M81714/17-(), TERMINAL MODULE, QPL	20-83-01
M81714/2-(), TERMINAL MODULE, QPL	20-83-01
M81714/29-(), TERMINAL MODULE BRACKET, QPL	20-83-01
M81714/3-(), TERMINAL MODULE, QPL	20-83-01
M81714/4-(), TERMINAL MODULE, QPL	20-83-01
M81714/5-(), TERMINAL MODULE TRACK, QPL	20-83-01
M81714/6(), TERMINAL BLOCK MODULE, QPL	20-83-02
M81714/6-(), TERMINAL MODULE, QPL	20-83-01
M81714/60-22-01, TERMINAL MODULE, QPL	20-15-49
M81714/60-22-02, TERMINAL MODULE, QPL	20-15-49
M81714/60-22-06, TERMINAL MODULE, QPL	20-15-49
M81714/63-16F, GROUND MODULE, QPL	20-15-49
M81714/63-20F, GROUND MODULE, QPL	20-15-49
M81714/67-04, TERMINAL MODULE TRACK, QPL	20-15-49
M81714/67-07, TERMINAL MODULE TRACK, QPL	20-15-49
M81714/67-08, TERMINAL MODULE TRACK, QPL	20-15-49
M81714/7-(), TERMINAL MODULE, QPL	20-83-01
M81714/8-(), TERMINAL MODULE, QPL	20-83-01
M81714/9-(), TERMINAL MODULE, QPL	20-83-01
M83413/8-A(), BOND AND GROUND JUMPER ASSEMBLY, QPL	20-20-00
M83413/8-B(), BOND AND GROUND JUMPER ASSEMBLY, QPL	20-20-00
M83413/8-D(), BOND AND GROUND JUMPER ASSEMBLY, QPL	20-20-00
M83413/8-E(), BOND AND GROUND JUMPER ASSEMBLY, QPL	20-20-00
M83413/8-F(), BOND AND GROUND JUMPER ASSEMBLY, QPL	20-20-00
M83413/8-G(), BOND AND GROUND JUMPER ASSEMBLY, QPL	20-20-00
M83413/8-H(), BOND AND GROUND JUMPER ASSEMBLY, QPL	20-20-00
M83519/1-2, SOLDER SLEEVE, QPL	20-10-13
M83519/1-2, SOLDER SLEEVE, QPL	20-10-15
M83519/1-2, SOLDER SLEEVE, QPL	20-30-12
M83519/1-3, SOLDER SLEEVE, QPL	20-10-13
M83519/1-3, SOLDER SLEEVE, QPL	20-10-15
M83519/1-3, SOLDER SLEEVE, QPL	20-30-12
M83519/1-4, SOLDER SLEEVE, QPL	20-10-13
M83519/1-4, SOLDER SLEEVE, QPL	20-10-15
M83519/1-5, SOLDER SLEEVE, QPL	20-10-13
M83519/1-5, SOLDER SLEEVE, QPL	20-10-15
M83519/2-2, SOLDER SLEEVE, QPL	20-10-15
M83519/2-3, SOLDER SLEEVE, QPL	20-10-15
M83519/2-5, SOLDER SLEEVE, QPL	20-10-15
M83519/2-6, SOLDER SLEEVE, QPL	20-10-15
M83723/( ), CONNECTOR, MATRIX	20-63-13
M85049-38S(), BACKSHELL, QPL	20-25-12
M85049-38S(), BACKSHELL, QPL	20-60-09

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20**

MATE-N-LOK CONNECTOR	
AMP, CONNECTOR ASSEMBLY . . . . .	20-42-01
MATERIAL CLASS	
BMS 3-11 FLUID RESISTANCE. . . . .	20-00-11
MATERIAL GRADE	
TEMPERATURE. . . . .	20-00-11
MATERIALS	
CONNECTOR CLEANING. . . . .	20-60-01
ESDS PROTECTIVE. . . . .	20-41-01
MATERIALS AND PARTS	
CEMENT . . . . .	20-00-11
COATING AND VARNISH. . . . .	20-00-11
FILLER ROD . . . . .	20-00-11
FILM STRIP. . . . .	20-00-11
LUBRICANT . . . . .	20-00-11
POTTING COMPOUND. . . . .	20-00-11
SEAL PLUG . . . . .	20-00-11
SEAL ROD . . . . .	20-00-11
SHIELD MATERIAL . . . . .	20-00-11
SHIELD TERMINATION RING. . . . .	20-00-11
SHIELD TERMINATOR BAND. . . . .	20-00-11
SLEEVE, FLEXIBLE . . . . .	20-00-11
SLEEVE, INSULATION . . . . .	20-00-11
SLEEVE, PROTECTIVE . . . . .	20-00-11
SOLDER . . . . .	20-00-11
SOLVENT . . . . .	20-00-11
TAPE . . . . .	20-00-11
THREAD LOCKING COMPOUND . . . . .	20-00-11
TUBE, INSULATION. . . . .	20-00-11
MATRIX	
42250KS(), CONNECTOR . . . . .	20-63-14
42839KS(), CONNECTOR . . . . .	20-63-14
42839KS14S5SX-190 CONNECTOR, INSTALLATION TORQUE . . . . .	20-60-06
52752-( ), CONNECTOR . . . . .	20-63-13
52753-( ), CONNECTOR . . . . .	20-63-13
52761-( ), CONNECTOR . . . . .	20-63-13
9440(), CONNECTOR . . . . .	20-63-14
9446(), CONNECTOR . . . . .	20-63-14
9816(), CONNECTOR . . . . .	20-63-14
9816KS(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE . . . . .	20-35-11
M83723/( ), CONNECTOR. . . . .	20-63-13
MT30K( ), CONNECTOR. . . . .	20-63-13
MT30K-(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE . . . . .	20-35-11
MT30K-2219-299, CONNECTOR . . . . .	20-35-11
MT37K( ), CONNECTOR. . . . .	20-63-13
MT37K-(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE . . . . .	20-35-11
MT37K-1203-191, CONNECTOR . . . . .	20-35-11
MT37K-1203-299, CONNECTOR . . . . .	20-35-11

**20-CROSS REFERENCE INDEX**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### MATRIX SCIENCE

8400-0()-(), TERMINAL MODULE BRACKET . . . . .	20-83-01
99537-(), TERMINAL MODULE TRACK . . . . .	20-83-01
MRFB()E(), TERMINAL MODULE . . . . .	20-83-01
MRTB()E(), TERMINAL MODULE . . . . .	20-83-01
MB10P-1, CONNECTOR, BURNDY . . . . .	20-62-13
MB10R-6, CONNECTOR, BURNDY . . . . .	20-62-13
MB12P-1, CONNECTOR, BURNDY . . . . .	20-62-13
MB12R-20, CONNECTOR, BURNDY . . . . .	20-62-13
MB12R-6, CONNECTOR, BURNDY . . . . .	20-62-13
MB13P-3, CONNECTOR, BURNDY . . . . .	20-62-13
MB13R-4, CONNECTOR, BURNDY . . . . .	20-62-13
MB24P, CONNECTOR, BURNDY . . . . .	20-62-13
MB6P-3, CONNECTOR, BURNDY . . . . .	20-62-13
MB6R-3, CONNECTOR, BURNDY . . . . .	20-62-13
MBG28P, CONNECTOR, BURNDY . . . . .	20-61-23
MBG28R, CONNECTOR, BURNDY . . . . .	20-61-23
MDTB20-4, TERMINAL MODULE, FRAMATOME CONNECTORS INTERNATIONAL . . . . .	20-90-15
MDTB20-8, TERMINAL MODULE, FRAMATOME CONNECTORS INTERNATIONAL . . . . .	20-90-15

### METHODE

105-100-02, RELAY SOCKET . . . . .	20-81-11
133-158-02, RELAY SOCKET . . . . .	20-81-13
133-158-03, RELAY SOCKET . . . . .	20-81-13
133-179-03, RELAY SOCKET . . . . .	20-81-13
191-314-0001, CONNECTOR . . . . .	20-82-13
191-341-0003, CONNECTOR . . . . .	20-82-13
191-366-0006, CONNECTOR . . . . .	20-82-13
192-314-0007, CONNECTOR . . . . .	20-82-13
192-341-0005, CONNECTOR . . . . .	20-82-13
192-366-0010, CONNECTOR . . . . .	20-82-13

### ■ MICRO SWITCH/HONEYWELL

■ 101TL(), TOGGLE SWITCH . . . . .	20-83-11
■ 101TL2887-3, TOGGLE SWITCH . . . . .	20-83-11
■ 101TL2887-51, TOGGLE SWITCH . . . . .	20-83-11
■ 102TL(), TOGGLE SWITCH . . . . .	20-83-11
■ 102TL2887-3, TOGGLE SWITCH . . . . .	20-83-11
■ 102TL2887-3D, TOGGLE SWITCH . . . . .	20-83-11
■ 102TL2887-7E, TOGGLE SWITCH . . . . .	20-83-11
■ 104TL(), TOGGLE SWITCH . . . . .	20-83-11

### MICRODOT

202-3836-000, CABLE, AVM . . . . .	20-35-22
------------------------------------	----------

### MIL-C-26482

CONNECTOR ASSEMBLY WITH TRIAX CABLE . . . . .	20-53-05
---	----------

### MIL-C-26482 SERIES I CONNECTORS

CONNECTOR ASSEMBLY . . . . .	20-61-16
------------------------------	----------

### MIL-C-26482 SERIES II CONNECTORS

CONNECTOR ASSEMBLY . . . . .	20-63-21
------------------------------	----------

# 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20**

MIL-C-26500	
CONNECTOR ASSEMBLY WITH TRIAX CABLE . . . . .	20-53-05
MIL-C-26500 TYPE CONNECTORS	
CONNECTOR ASSEMBLY . . . . .	20-61-11
MIL-C-38999 SERIES	
CONNECTOR ASSEMBLY . . . . .	20-63-19
MIL-C-5015	
CONNECTOR ASSEMBLY . . . . .	20-61-19
CONNECTOR ASSEMBLY . . . . .	20-63-20
MIL-C-5015 SERIES	
CONNECTOR ASSEMBLY, REAR RELEASE CONTACTS. . . . .	20-63-14
MIL-C-81511 SERIES	
CONNECTOR ASSEMBLY . . . . .	20-61-30
MIL-C-81569 TYPE	
DSXE(), RADIALL . . . . .	20-71-15
DSXN(), RADIALL . . . . .	20-71-15
DSXT(), RADIALL . . . . .	20-71-15
MIL-C-81659 TYPE	
AMP, CONNECTOR ASSEMBLY . . . . .	20-71-16
RADIALL, CONNECTOR ASSEMBLY . . . . .	20-71-15
MIL-C-83723 SERIES III CONNECTORS	
CONNECTOR ASSEMBLY . . . . .	20-63-13
MIL-J-641/8 TELEPHONE JACK	
CONNECTOR ASSEMBLY . . . . .	20-64-13
MIL-W-16878 CABLE	
VEAM 115 SERIES ASSEMBLY . . . . .	20-62-12
MILES ROYSTONE	
MRM7935, CONNECTOR . . . . .	20-15-42
MRM8439, CONNECTOR . . . . .	20-15-42
MM(), CONNECTOR, RADIALL . . . . .	20-71-16
MME(), CONNECTOR, RADIALL . . . . .	20-71-16
MOLDED TEE	
301A022, RAYCHEM . . . . .	20-10-16
MOLDED TEE FITTINGS . . . . .	20-10-16
MOLEX	
03-06-1022, CONNECTOR. . . . .	20-64-17
03-06-1121, CONNECTOR. . . . .	20-64-17
03-06-1122, CONNECTOR. . . . .	20-64-17
03-06-2022, CONNECTOR. . . . .	20-64-17
03-06-2024, CONNECTOR. . . . .	20-64-17
03-06-2121, CONNECTOR. . . . .	20-64-17
03-06-2122, CONNECTOR. . . . .	20-64-17
1625-02P, CONNECTOR. . . . .	20-64-17
1625-12P, CONNECTOR. . . . .	20-64-17
1625-12P1, CONNECTOR . . . . .	20-64-17
1625-12R, CONNECTOR. . . . .	20-64-17
1625-12R1, CONNECTOR. . . . .	20-64-17
1625-2R2, CONNECTOR. . . . .	20-64-17

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

MOLEX (continued)	
D-756-08, TERMINAL LUG, GENERAL PURPOSE .....	20-15-21
E-760-08, TERMINAL LUG, GENERAL PURPOSE .....	20-15-21
MOUNT	
CABLE TIE, ADHESIVE BONDED, BACM14L(), BOEING .....	20-10-12
MOUNTING PLATE	
BACS38AA(), BOEING .....	20-10-12
MOUNTING PLATFORM	
TIE STRAP, CSCS, BOEING .....	20-10-12
TIE STRAP, STBP19M, BOEING .....	20-10-12
MRFB()E(), TERMINAL MODULE, MATRIX SCIENCE .....	20-83-01
MRM7935, CONNECTOR, MILES ROYSTONE .....	20-15-42
MRM8439, CONNECTOR, MILES ROYSTONE .....	20-15-42
MRTB()E(), TERMINAL MODULE, MATRIX SCIENCE .....	20-83-01
MS20659-101, TERMINAL LUG, QPL .....	20-30-11
MS20659-102, TERMINAL LUG, QPL .....	20-30-11
MS20659-103, TERMINAL LUG, QPL .....	20-30-11
MS20659-104, TERMINAL LUG, QPL .....	20-30-11
MS20659-105, TERMINAL LUG, QPL .....	20-30-11
MS20659-106, TERMINAL LUG, QPL .....	20-30-11
MS20659-107, TERMINAL LUG, QPL .....	20-30-11
MS20659-108, TERMINAL LUG, QPL .....	20-30-11
MS20659-109, TERMINAL LUG, QPL .....	20-30-11
MS20659-110, TERMINAL LUG, QPL .....	20-30-11
MS20659-111, TERMINAL LUG, QPL .....	20-30-11
MS20659-112, TERMINAL LUG, QPL .....	20-30-11
MS20659-113, TERMINAL LUG, QPL .....	20-30-11
MS20659-114, TERMINAL LUG, QPL .....	20-30-11
MS20659-115, TERMINAL LUG, QPL .....	20-30-11
MS20659-116, TERMINAL LUG, QPL .....	20-30-11
MS20659-117, TERMINAL LUG, QPL .....	20-30-11
MS20659-118, TERMINAL LUG, QPL .....	20-30-11
MS20659-119, TERMINAL LUG, QPL .....	20-30-11
MS20659-120, TERMINAL LUG, QPL .....	20-30-11
MS20659-121, TERMINAL LUG, QPL .....	20-30-11
MS20659-122, TERMINAL LUG, QPL .....	20-30-11
MS20659-123, TERMINAL LUG, QPL .....	20-30-11
MS20659-124, TERMINAL LUG, QPL .....	20-30-11
MS20659-125, TERMINAL LUG, QPL .....	20-30-11
MS20659-126, TERMINAL LUG, QPL .....	20-30-11
MS20659-127, TERMINAL LUG, QPL .....	20-30-11
MS20659-128, TERMINAL LUG, QPL .....	20-30-11
MS20659-129, TERMINAL LUG, QPL .....	20-30-11
MS20659-130, TERMINAL LUG, QPL .....	20-30-11
MS20659-131, TERMINAL LUG, QPL .....	20-30-11
MS20659-132, TERMINAL LUG, QPL .....	20-30-11
MS20659-133, TERMINAL LUG, QPL .....	20-30-11
MS20659-134, TERMINAL LUG, QPL .....	20-30-11
MS20659-135, TERMINAL LUG, QPL .....	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

MS20659-136, TERMINAL LUG, QPL. ....	20-30-11
MS20659-137, TERMINAL LUG, QPL. ....	20-30-11
MS20659-138, TERMINAL LUG, QPL. ....	20-30-11
MS20659-139, TERMINAL LUG, QPL. ....	20-30-11
MS20659-140, TERMINAL LUG, QPL. ....	20-30-11
MS20659-141, TERMINAL LUG, QPL. ....	20-30-11
MS20659-142, TERMINAL LUG, QPL. ....	20-30-11
MS20659-143, TERMINAL LUG, QPL. ....	20-30-11
MS20659-144, TERMINAL LUG, QPL. ....	20-30-11
MS20659-145, TERMINAL LUG, QPL. ....	20-30-11
MS20659-146, TERMINAL LUG, QPL. ....	20-30-11
MS20659-147, TERMINAL LUG, QPL. ....	20-30-11
MS20659-148, TERMINAL LUG, QPL. ....	20-30-11
MS20659-149, TERMINAL LUG, QPL. ....	20-30-11
MS20659-150, TERMINAL LUG, QPL. ....	20-30-11
MS20659-151, TERMINAL LUG, QPL. ....	20-30-11
MS20659-152, TERMINAL LUG, QPL. ....	20-30-11
MS20659-153, TERMINAL LUG, QPL. ....	20-30-11
MS20659-154, TERMINAL LUG, QPL. ....	20-30-11
MS20659-155, TERMINAL LUG, QPL. ....	20-30-11
MS20659-156, TERMINAL LUG, QPL. ....	20-30-11
MS20659-157, TERMINAL LUG, QPL. ....	20-30-11
MS20659-158, TERMINAL LUG, QPL. ....	20-30-11
MS20659-159, TERMINAL LUG, QPL. ....	20-30-11
MS20659-160, TERMINAL LUG, QPL. ....	20-30-11
MS20659-161, TERMINAL LUG, QPL. ....	20-30-11
MS20659-162, TERMINAL LUG, QPL. ....	20-30-11
MS20659-163, TERMINAL LUG, QPL. ....	20-30-11
MS20659-164, TERMINAL LUG, QPL. ....	20-30-11
MS20659-165, TERMINAL LUG, QPL. ....	20-30-11
MS20659-166, TERMINAL LUG, QPL. ....	20-30-11
■ MS21346-281, TOGGLE SWITCH, QPL. ....	20-83-11
■ MS21347-A211, TOGGLE SWITCH, QPL. ....	20-83-11
MS24264R()-B(), CONNECTOR, QPL. ....	20-61-11
MS24264R()-T(), CONNECTOR, QPL. ....	20-61-11
MS24265R()-T(), CONNECTOR, QPL. ....	20-61-11
MS24266R()-B(), CONNECTOR, QPL. ....	20-61-11
MS24266R()-T(), CONNECTOR, QPL. ....	20-61-11
MS25036-115 FLAT STOCK, TERMINAL LUG, GENERAL PURPOSE, QPL. ....	20-15-21
MS25036-116 FLAT STOCK, TERMINAL LUG, GENERAL PURPOSE, QPL. ....	20-15-21
MS25036-118 FLAT STOCK, TERMINAL LUG, GENERAL PURPOSE, QPL. ....	20-15-21
MS25036-123 FLAT STOCK, TERMINAL LUG, GENERAL PURPOSE, QPL. ....	20-15-21
MS25036-125 FLAT STOCK, TERMINAL LUG, GENERAL PURPOSE, QPL. ....	20-15-21
MS25036-126 FLAT STOCK, TERMINAL LUG, GENERAL PURPOSE, QPL. ....	20-15-21
MS25036-127 FLAT STOCK, TERMINAL LUG, GENERAL PURPOSE, QPL. ....	20-15-21
MS25083-2(), BOND AND GROUND JUMPER ASSEMBLY, QPL. ....	20-20-00
MS25083-3(), BOND AND GROUND JUMPER ASSEMBLY, QPL. ....	20-20-00
MS25083-4(), BOND AND GROUND JUMPER ASSEMBLY, QPL. ....	20-20-00

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

MS25083-5(), BOND AND GROUND JUMPER ASSEMBLY, QPL . . . . .	20-20-00
MS25083-6(), BOND AND GROUND JUMPER ASSEMBLY, QPL . . . . .	20-20-00
MS25182-2, CONNECTOR, QPL . . . . .	20-62-25
MS25257	
INDICATOR LIGHT, TERMINAL ASSEMBLY . . . . .	20-40-13
INDICATOR LIGHT, TERMINAL ASSEMBLY . . . . .	20-84-19
MS25435-11, TERMINAL, ALUMINUM, QPL . . . . .	20-30-14
MS25435-7, TERMINAL, ALUMINUM, QPL . . . . .	20-30-14
MS27466, CONNECTOR, QPL . . . . .	20-63-19
MS27467, CONNECTOR, QPL . . . . .	20-63-19
MS27468, CONNECTOR, QPL . . . . .	20-63-19
MS27472, CONNECTOR, QPL . . . . .	20-63-19
MS27473, CONNECTOR, QPL . . . . .	20-63-19
MS27474, CONNECTOR, QPL . . . . .	20-63-19
MS27484, CONNECTOR, QPL . . . . .	20-63-19
MS27496, CONNECTOR, QPL . . . . .	20-63-19
MS27497, CONNECTOR, QPL . . . . .	20-63-19
MS27499, CONNECTOR, QPL . . . . .	20-63-19
MS27505, CONNECTOR, QPL . . . . .	20-63-19
MS27508, CONNECTOR, QPL . . . . .	20-63-19
MS27557, CONDUIT ADAPTER, QPL . . . . .	20-61-00
MS27656, CONNECTOR, QPL . . . . .	20-63-19
I MS27789-21A, TOGGLE SWITCH, QPL . . . . .	20-83-11
MS3120(), CONNECTOR, QPL . . . . .	20-61-16
MS3126(), CONNECTOR, QPL . . . . .	20-61-16
MS3450(), CONNECTOR, QPL . . . . .	20-63-14
MS3452(), CONNECTOR, QPL . . . . .	20-63-14
MS3454(), CONNECTOR, QPL . . . . .	20-63-14
MS3456(), CONNECTOR, QPL . . . . .	20-63-14
MS3459(), CONNECTOR, QPL . . . . .	20-63-14
MS3470(), CONNECTOR, QPL . . . . .	20-63-21
MS3475(), CONNECTOR, QPL . . . . .	20-63-21
MS3476(), CONNECTOR, QPL . . . . .	20-63-21
MS48 SERIES, CONVOLUTED TUBE, RAYCHEM . . . . .	20-61-00
MSC	
851-30768-(), SWITCH, LIGHTED PUSHBUTTON . . . . .	20-83-00
851-35100-(), SWITCH, LIGHTED PUSHBUTTON . . . . .	20-83-00
MT17R-1, CONNECTOR, BURNDY . . . . .	20-86-00
MT30K( ), CONNECTOR, MATRIX . . . . .	20-63-13
MT30K-(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE, MATRIX . . . . .	20-35-11
MT30K-2219-299, CONNECTOR, MATRIX . . . . .	20-35-11
MT37K( ), CONNECTOR, MATRIX . . . . .	20-63-13
MT37K-(), CONNECTOR, ASSEMBLY WITH 65B47866-() CABLE, MATRIX . . . . .	20-35-11
MT37K-1203-191, CONNECTOR, MATRIX . . . . .	20-35-11
MT37K-1203-299, CONNECTOR, MATRIX . . . . .	20-35-11
MTC100-JH1-P32-(), CONNECTOR, RAYCHEM . . . . .	20-74-11
MTC100-JH1-R32-(), CONNECTOR, RAYCHEM . . . . .	20-74-11
MTC100-JH2-P12-(), CONNECTOR, RAYCHEM . . . . .	20-74-11

# 20-CROSS REFERENCE INDEX



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

MTC100-JH2-P32-(), CONNECTOR, RAYCHEM . . . . .	20-74-11
MTC100-JH2-R32-(), CONNECTOR, RAYCHEM . . . . .	20-74-11
MTC100-KT2-0023, CONNECTOR, RAYCHEM . . . . .	20-73-01
MTC100-KT2-0036, CONNECTOR, RAYCHEM . . . . .	20-73-01
MTC100-SH1-F32-(), CONNECTOR, RAYCHEM . . . . .	20-74-11
MTC100-SH2-F32-(), CONNECTOR, RAYCHEM . . . . .	20-74-11
MTCP-116-05P2, CONNECTOR INSERT, RAYCHEM . . . . .	20-74-11
MTCP-116-05S2, CONNECTOR INSERT, RAYCHEM . . . . .	20-74-11
MTCP-122-20P, CONNECTOR INSERT, RAYCHEM . . . . .	20-74-11
MTCP-122-20P1, CONNECTOR INSERT, RAYCHEM . . . . .	20-74-11
MTCP-122-20P2, CONNECTOR INSERT, RAYCHEM . . . . .	20-74-11
MTCP-122-20PQ, CONNECTOR INSERT, RAYCHEM . . . . .	20-74-11
MTCP-122-20PQ1, CONNECTOR INSERT, RAYCHEM . . . . .	20-74-11
MTCP-122-20PQ2, CONNECTOR INSERT, RAYCHEM . . . . .	20-74-11
MTCP-122-20S, CONNECTOR INSERT, RAYCHEM . . . . .	20-74-11
MTCP-122-20S1, CONNECTOR INSERT, RAYCHEM . . . . .	20-74-11
MTCP-122-20S2, CONNECTOR INSERT, RAYCHEM . . . . .	20-74-11
MTCPQKT1P(), CONNECTOR, RAYCHEM . . . . .	20-74-11
MTCPQKT1R(), CONNECTOR, RAYCHEM . . . . .	20-74-11
MTCPQKT2P(), CONNECTOR, RAYCHEM . . . . .	20-74-11
MTCPQKT2R(), CONNECTOR, RAYCHEM . . . . .	20-74-11
MTCTQ-116-001P, CONNECTOR INSERT, RAYCHEM . . . . .	20-74-11
MTCTQ-116-001S, CONNECTOR INSERT, RAYCHEM . . . . .	20-74-11
MTCTQ-YH1-P22, FIBER OPTIC CONNECTOR SHELL, PLUG, RAYCHEM . . . . .	20-74-11
MTCTQKT1P4FPF, FIBER OPTIC CONNECTOR, PLUG, RAYCHEM . . . . .	20-74-11
MTCTQKT1R4FSF, FIBER OPTIC CONNECTOR, RECEPTACLE, RAYCHEM . . . . .	20-74-11
MWS(), SPLICE, DISCONNECTABLE WIRE, AMP . . . . .	20-83-00

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****N**

NAS1144C0563R, WASHER, QPL . . . . .	20-10-21
NAS1387-(), SPLICE, BUTT, INSULATED, QPL . . . . .	20-30-12
NAS1388-(), SPLICE, BUTT, INSULATED, QPL . . . . .	20-30-12
NAS1389-(), SPLICE, BUTT, INSULATED, QPL . . . . .	20-30-12
NAS1802-3-10, SCREW, QPL . . . . .	20-10-21
NAS1805-5, NUT, QPL . . . . .	20-10-21
NIC66F11()AA, CONNECTOR, AMP . . . . .	20-71-14
NIC66H20()AA, CONNECTOR, AMP . . . . .	20-71-14
NIC66H21()AA, CONNECTOR, AMP . . . . .	20-71-14
NIC66H22()AA, CONNECTOR, AMP . . . . .	20-71-14
NIC66H23()AA, CONNECTOR, AMP . . . . .	20-71-14
NIC66H25()AA, CONNECTOR, AMP . . . . .	20-71-14
NIC66H26()AA, CONNECTOR, AMP . . . . .	20-71-14
NIC66H28()AA, CONNECTOR, AMP . . . . .	20-71-14
NIC66K31()AA, CONNECTOR, AMP . . . . .	20-71-14
NIC66K32()AA, CONNECTOR, AMP . . . . .	20-71-14
NIC66K33()AA, CONNECTOR, AMP . . . . .	20-71-14
NIC66K34()AA, CONNECTOR, AMP . . . . .	20-71-14
NIC66K36()AA, CONNECTOR, AMP . . . . .	20-71-14
NSX()1P101()00, CONNECTOR, RADIAL . . . . .	20-71-14
NSX()1P110X00, CONNECTOR, RADIAL . . . . .	20-71-14
NSX()2P201()00, CONNECTOR, RADIAL . . . . .	20-71-14
NSX()2P202()00, CONNECTOR, RADIAL . . . . .	20-71-14
NSX()2P203()00, CONNECTOR, RADIAL . . . . .	20-71-14
NSX()2P204X00S, CONNECTOR, RADIAL . . . . .	20-71-14
NSX()2P205()00, CONNECTOR, RADIAL . . . . .	20-71-14
NSX()2P206()00, CONNECTOR, RADIAL . . . . .	20-71-14
NSX()2P216()00, CONNECTOR, RADIAL . . . . .	20-71-14
NSX()2P219()00, CONNECTOR, RADIAL . . . . .	20-71-14
NSX()2P221()00, CONNECTOR, RADIAL . . . . .	20-71-14
NSX()2P277X00, CONNECTOR, RADIAL . . . . .	20-71-14
NSX()2P522()00, CONNECTOR, RADIAL . . . . .	20-71-14
NSX()3P()301()00, CONNECTOR, RADIAL . . . . .	20-71-14
NSX()3P()302()00, CONNECTOR, RADIAL . . . . .	20-71-14
NSX()3P()303()00, CONNECTOR, RADIAL . . . . .	20-71-14
NSX()3P()304()00, CONNECTOR, RADIAL . . . . .	20-71-14
NSX()3P()310()00, CONNECTOR, RADIAL . . . . .	20-71-14
NSX()3P366X00, CONNECTOR, RADIAL . . . . .	20-71-14
NUT	
NAS1805-5, QPL . . . . .	20-10-21
NXS()2P286()00, CONNECTOR, RADIAL . . . . .	20-71-14

**20-CROSS REFERENCE INDEX**



707, 727-787

STANDARD WIRING PRACTICES MANUAL

CHAPTER 20

O

OPTIC FIBER  
REPLACEMENT. . . . . 20-12-11

OVERBRAID SHIELDS  
WIRE HARNESS ASSEMBLY . . . . . 20-25-11

For training purposes only!

20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### P

PARALLEL SPLICE	
CIRCULAR AREA UNITS (CAU) . . . . .	20-30-22
PC()CE, CONNECTOR, BENDIX . . . . .	20-61-20
I PCD	
I RSE112(), RELAY SOCKET . . . . .	20-81-22
I RSE112315, RELAY SOCKET . . . . .	20-81-16
I RSE116(), RELAY SOCKET . . . . .	20-81-22
RSE116135, RELAY SOCKET . . . . .	20-81-18
I RSE120(), RELAY SOCKET . . . . .	20-81-22
RSE120028, RELAY SOCKET . . . . .	20-15-46
RSE120049, RELAY SOCKET . . . . .	20-15-46
RSE500201, RELAY SOCKET . . . . .	20-15-46
RSE500202, RELAY SOCKET . . . . .	20-15-46
RSE500211, RELAY SOCKET . . . . .	20-15-46
RSE500212, RELAY SOCKET . . . . .	20-15-46
RSE500301, RELAY SOCKET . . . . .	20-15-46
RSE500302, RELAY SOCKET . . . . .	20-15-46
RSE500304, RELAY SOCKET . . . . .	20-15-46
RSE500305, RELAY SOCKET . . . . .	20-15-46
RSE500306, RELAY SOCKET . . . . .	20-15-46
RSE500311, RELAY SOCKET . . . . .	20-15-46
RSE500312, RELAY SOCKET . . . . .	20-15-46
RSE500314, RELAY SOCKET . . . . .	20-15-46
RSE500315, RELAY SOCKET . . . . .	20-15-46
RSE500316, RELAY SOCKET . . . . .	20-15-46
RSE500401, RELAY SOCKET . . . . .	20-15-46
RSE500402, RELAY SOCKET . . . . .	20-15-46
RSE500403, RELAY SOCKET . . . . .	20-15-46
RSE500404, RELAY SOCKET . . . . .	20-15-46
RSE500411, RELAY SOCKET . . . . .	20-15-46
RSE500412, RELAY SOCKET . . . . .	20-15-46
RSE500413, RELAY SOCKET . . . . .	20-15-46
RSE500414, RELAY SOCKET . . . . .	20-15-46
TJSE20551, RESISTIVE SPLICE . . . . .	20-15-49
TJSE20552, RESISTIVE SPLICE . . . . .	20-15-49
TJSE20554, RESISTIVE SPLICE . . . . .	20-15-49
PFCS WIRE HARNESS	
287W1619-() VAPOR SEAL, INSTALLATION . . . . .	20-14-11
REPAIR. . . . .	20-14-11
PHASE IDENTIFICATION	
EQUIPMENT INSTALLATION . . . . .	20-30-00
PIRELLI	
852-4000311, THERMOCOUPLE WIRE. . . . .	20-35-27
852-4985321, THERMOCOUPLE WIRE. . . . .	20-35-27
PLASTIC HINGE CLAMP	
DOUBLE LEG, BACC10NB(), BOEING . . . . .	20-10-12

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

PLASTIC HINGE CLAMP (continued)	
SINGLE LEG, BACC10NA(), BOEING . . . . .	20-10-12
PLASTIC TIE STRAP MOUNTING PLATE	
BACS38AA(), BOEING . . . . .	20-10-12
POSITRONIC INDUSTRIES	
EVD9F00000, CONNECTOR . . . . .	20-15-41
POTTING COMPOUND	
SUPPLIERS . . . . .	20-00-11
POWER FEEDER	
ALUMINUM WIRE, CLAMP CONFIGURATION . . . . .	20-10-11
SPLICE CONFIGURATION, GENERAL CONDITIONS . . . . .	20-30-13
POWER FEEDER WIRE	
COPPER, DAMAGE CONDITIONS AND REPAIR . . . . .	20-10-13
POWER FEEDER WIRE HARNESS	
FEEDTHROUGH, FEEDTHROUGH, POWER FEEDER WIRE HARNESS . . . . .	20-10-21
POWER FEEDER WIRE HARNESS FEEDTHROUGH	
RACEWAY SEAL . . . . .	20-10-21
POWER PLANT	
GE90, WIRING REPAIR, APPLICABLE CONDITIONS . . . . .	20-22-00
PW4000/777, BACKSHELL REPLACEMENT . . . . .	20-24-20
PW4000/777, CABLE JACKET REPAIR . . . . .	20-24-22
PW4000/777, COMPONENT AND TOOL SUPPLIERS . . . . .	20-24-02
PW4000/777, CONNECTOR ADAPTER PLATE REPLACEMENT . . . . .	20-24-25
PW4000/777, CONNECTOR DATA . . . . .	20-24-12
PW4000/777, CONNECTOR REPLACEMENT . . . . .	20-24-20
PW4000/777, CONTACT REPLACEMENT . . . . .	20-24-21
PW4000/777, FAN OVERHEAT TERMINAL LUG ASSEMBLY . . . . .	20-24-26
PW4000/777, GROUND WIRE TERMINAL LUG ASSEMBLY . . . . .	20-24-26
PW4000/777, SHIELDED CABLE REPLACEMENT . . . . .	20-24-24
PW4000/777, WIRE HARNESS TIE ASSEMBLY . . . . .	20-24-14
PW4000/777, WIRING IDENTIFICATION REPAIR . . . . .	20-24-27
PW4000/777, WIRING REPAIR, APPLICABLE CONDITIONS . . . . .	20-24-00
PW4000/777, WIRING REPAIR, GENERAL DATA . . . . .	20-24-01
RB 211 TRENT 800, ALTERNATOR LEAD WIRE . . . . .	20-23-19
RB 211 TRENT 800, BACKSHELL ASSEMBLY . . . . .	20-23-39
RB 211 TRENT 800, CONNECTOR ASSEMBLY . . . . .	20-23-37
RB 211 TRENT 800, CONNECTOR DATA . . . . .	20-23-01
RB 211 TRENT 800, SHIELDED CABLES . . . . .	20-23-17
RB 211 TRENT 800, TERMINAL LUG ASSEMBLY . . . . .	20-23-32
RB 211 TRENT 800, WIRE HARNESS ASSEMBLY . . . . .	20-23-30
RB 211 TRENT 800, WIRE HARNESS IDENTIFICATION . . . . .	20-23-16
RB 211 TRENT 800, WIRE SPECIFICATIONS . . . . .	20-23-03
RB 211 TRENT 800, WIRING DAMAGE CONDITIONS . . . . .	20-23-15
RB 211 TRENT 800, WIRING REPAIR, APPLICABLE CONDITIONS . . . . .	20-23-00
PRECISION CONNECTOR DESIGN	
421120-450, TERMINAL BLOCK MODULE . . . . .	20-90-11
421120-452, TERMINAL BLOCK MODULE . . . . .	20-90-11
421120-454, TERMINAL BLOCK MODULE . . . . .	20-90-11
TJM11260(), TERMINAL MODULE . . . . .	20-83-01

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

PRECISION TUBE COMPANY	
G87T325CU, COAX CABLE, CONNECTOR ASSEMBLY . . . . .	20-51-41
PRESSURE BULKHEAD	
SEAL, ASSEMBLY . . . . .	20-10-20
SEAL, ASSEMBLY . . . . .	20-10-24
SEAL, ASSEMBLY . . . . .	20-14-14
PRIMARY FLIGHT CONTROL SYSTEM	
WIRE HARNESS, REPAIR . . . . .	20-14-11
PRINTED CIRCUIT BOARD CONNECTOR	
582551-1, AMP. . . . .	20-82-11
582583-1, AMP. . . . .	20-82-11
582591-1, AMP. . . . .	20-82-11
PRINTED CIRCUIT BOARD TERMINAL RECEPTACLE	
60789-2, AMP . . . . .	20-30-17
60790-1, AMP . . . . .	20-30-17
60790-2, AMP . . . . .	20-30-17
60888-4, AMP . . . . .	20-30-17
60983-3, AMP . . . . .	20-30-17
640024-1, AMP. . . . .	20-30-17
PRINTED WIRING BOARD	
ESDS, CONDITIONS FOR INSTALLATION AND REMOVAL . . . . .	20-41-01
PRINTED WIRING BOARD CONNECTOR	
191-314-0001, METHODE . . . . .	20-82-13
191-341-0003, METHODE . . . . .	20-82-13
191-366-0006, METHODE . . . . .	20-82-13
192-314-0007, METHODE . . . . .	20-82-13
192-341-0005, METHODE . . . . .	20-82-13
192-366-0010, METHODE . . . . .	20-82-13
300044-001, INCON . . . . .	20-82-13
300046-003, INCON . . . . .	20-82-13
300048-004, INCON . . . . .	20-82-13
300052-001, INCON . . . . .	20-82-13
300055-001, INCON . . . . .	20-82-13
300206-001, INCON . . . . .	20-82-13
BACC65K114, BOEING . . . . .	20-82-13
BACC65K41, BOEING . . . . .	20-82-13
BACC65K66, BOEING . . . . .	20-82-13
BACC65L114, BOEING. . . . .	20-82-13
BACC65L41, BOEING . . . . .	20-82-13
BACC65L66, BOEING . . . . .	20-82-13
PRODELIN	
64-500, COAX CABLE, CONNECTOR ASSEMBLY . . . . .	20-51-90
PROTECTION . . . . .	20-00-08
PROTECTION	
LIGHTNING. . . . .	20-25-11
SPECIAL, CONNECTORS. . . . .	20-60-03
PROTECTIVE CAP	
025-1121-001, ITT CANNON . . . . .	20-71-14

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

PROTECTIVE CAP (continued)	
025-1122-001, ITT CANNON	20-71-14
025-1123-001, ITT CANNON	20-71-14
025-1124-001, ITT CANNON	20-71-14
025-1183-000, ITT CANNON	20-71-14
025-1218-000, ITT CANNON	20-71-14
025-1218-001, ITT CANNON	20-71-14
211600-1, AMP.	20-71-14
211600-2, AMP.	20-71-14
240-92-702, RADIAL	20-71-14
240-92-703, RADIAL	20-71-14
240-92-706, RADIAL	20-71-14
240-92-707, RADIAL	20-71-14
PROTECTIVE SLEEVE	
SUPPLIERS	20-00-11
PROTECTIVE TAPE	
SUPPLIERS	20-00-11
PT()CE, CONNECTOR, BENDIX	20-61-20
PT()SE(), CONNECTOR, AMPHENOL/BENDIX	20-61-16
PT06E(), CONNECTOR, AMPHENOL	20-40-00
PW4000/777 POWER PLANT	
BACKSHELL REPLACEMENT	20-24-20
CABLE JACKET REPAIR	20-24-22
COMPONENT AND TOOL SUPPLIERS	20-24-02
CONNECTOR ADAPTER PLATE REPLACEMENT	20-24-25
CONNECTOR DATA	20-24-12
CONNECTOR REPLACEMENT	20-24-20
CONTACT REPLACEMENT	20-24-21
FAN OVERHEAT TERMINAL LUG ASSEMBLY	20-24-26
GROUND WIRE TERMINAL LUG ASSEMBLY	20-24-26
SHIELDED CABLE REPLACEMENT	20-24-24
WIRE HARNESS TIE ASSEMBLY	20-24-14
WIRING IDENTIFICATION REPAIR	20-24-27
WIRING REPAIR, APPLICABLE CONDITIONS	20-24-00
WIRING REPAIR, GENERAL DATA	20-24-01
PYLE-NATIONAL	
BSK-12( ), CONNECTOR	20-63-13
BSK-17( ), CONNECTOR	20-63-13
FPK-11(), CONNECTOR	20-61-11
FPK-17(), CONNECTOR	20-61-11
ZZB-R(), CONNECTOR	20-61-11
ZZL-R(), CONNECTOR	20-61-11
ZZW-()-10(), CONNECTOR	20-61-11
ZZW-()-17(), CONNECTOR	20-61-11
ZZW-R(), CONNECTOR	20-61-11
ZZY-()-10(), CONNECTOR	20-61-11
ZZY-()-12(), CONNECTOR	20-61-11
ZZY-()-15(), CONNECTOR	20-61-11
ZZY-()-17(), CONNECTOR	20-61-11

## 20-CROSS REFERENCE INDEX



707, 727-787

STANDARD WIRING PRACTICES MANUAL

CHAPTER 20

PYLE-NATIONAL (continued)  
ZZY-R(), CONNECTOR. . . . . 20-61-11

For training purposes only!

20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## Q

## QPL

285T0625-1, CONNECTOR, WIRE WRAP, COVER .....	20-72-18
285T0625-2, CONNECTOR, WIRE WRAP, COVER .....	20-72-18
285T0626-1, CONNECTOR, WIRE WRAP, COVER .....	20-72-18
285T0631-1, CONNECTOR, WIRE WRAP, COVER .....	20-72-18
285T0632-1, CONNECTOR, WIRE WRAP, COVER .....	20-72-18
285T0632-2, CONNECTOR, WIRE WRAP, COVER .....	20-72-18
285T0632-3, CONNECTOR, WIRE WRAP, COVER .....	20-72-18
285U0173-1, CONNECTOR, WIRE WRAP, COVER .....	20-72-18
285U0173-2, CONNECTOR, WIRE WRAP, COVER .....	20-72-18
AN3115-1, CONNECTOR .....	20-62-19
AN960CIOL, WASHER .....	20-10-21
AS85049-38S(), BACKSHELL .....	20-25-12
AS85049-38S(), BACKSHELL .....	20-60-09
BACC65T114, CONNECTOR .....	20-72-18
BACC65T66, CONNECTOR .....	20-72-18
BACC66E, CONNECTOR .....	20-72-18
BACC66G, CONNECTOR .....	20-72-18
BACC66J, CONNECTOR .....	20-72-18
BACS12HN3U10, SCREW .....	20-10-21
D38999/20, CONNECTOR .....	20-63-19
D38999/24, CONNECTOR .....	20-63-19
D38999/26, CONNECTOR .....	20-63-19
ESC10( ), CONNECTOR .....	20-23-01
ESC11( ), CONNECTOR .....	20-23-01
ESC3616, CONTACT CAVITY SEAL PLUG .....	20-23-01
ESC3620, CONTACT CAVITY SEAL PLUG .....	20-23-01
ESC75(), BACKSHELL .....	20-23-39
ESC76(), BACKSHELL .....	20-23-39
ESC77(), BACKSHELL .....	20-23-39
M24308/2-1, CONNECTOR .....	20-72-13
M24308/2-11, CONNECTOR .....	20-72-13
M24308/2-12, CONNECTOR .....	20-72-13
M24308/2-13, CONNECTOR .....	20-72-13
M24308/2-14, CONNECTOR .....	20-72-13
M24308/2-15, CONNECTOR .....	20-72-13
M24308/2-1F, CONNECTOR .....	20-15-41
M24308/2-2, CONNECTOR .....	20-72-13
I M24308/2-281, CONNECTOR .....	20-72-13
I M24308/2-282, CONNECTOR .....	20-72-13
I M24308/2-288, CONNECTOR .....	20-72-13
M24308/2-3, CONNECTOR .....	20-72-13
M24308/2-32, CONNECTOR .....	20-72-13
M24308/2-4, CONNECTOR .....	20-72-13
M24308/2-5, CONNECTOR .....	20-72-13
M24308/4-1, CONNECTOR .....	20-72-13

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****QPL (continued)**

M24308/4-11, CONNECTOR . . . . .	20-72-13
M24308/4-12, CONNECTOR . . . . .	20-72-13
M24308/4-14, CONNECTOR . . . . .	20-72-13
M24308/4-15, CONNECTOR . . . . .	20-72-13
M24308/4-2, CONNECTOR . . . . .	20-72-13
M24308/4-3, CONNECTOR . . . . .	20-72-13
M24308/4-4, CONNECTOR . . . . .	20-72-13
M24308/4-5, CONNECTOR . . . . .	20-72-13
M27724-23, SWITCH, TOGGLE . . . . .	20-83-00
M27724-24, SWITCH, TOGGLE . . . . .	20-83-00
M39029/10-521, THERMOCOUPLE CONTACT . . . . .	20-63-13
M39029/10-522, THERMOCOUPLE CONTACT . . . . .	20-63-13
M39029/9-516, THERMOCOUPLE CONTACT . . . . .	20-63-13
M39029/9-517, THERMOCOUPLE CONTACT . . . . .	20-63-13
M81511/(), CONNECTOR . . . . .	20-61-30
M81714/1-(), TERMINAL MODULE . . . . .	20-83-01
M81714/10-(), TERMINAL MODULE TRACK . . . . .	20-83-01
M81714/11-20, SPLICE, DISCONNECTABLE WIRE . . . . .	20-83-00
M81714/14-(), TERMINAL MODULE TRACK . . . . .	20-83-01
M81714/16-(), TERMINAL MODULE TRACK . . . . .	20-83-01
M81714/17-(), TERMINAL MODULE . . . . .	20-83-01
M81714/2-(), TERMINAL MODULE . . . . .	20-83-01
M81714/29-(), TERMINAL MODULE BRACKET . . . . .	20-83-01
M81714/3-(), TERMINAL MODULE . . . . .	20-83-01
M81714/4-(), TERMINAL MODULE . . . . .	20-83-01
M81714/5-(), TERMINAL MODULE TRACK . . . . .	20-83-01
M81714/6(), TERMINAL BLOCK MODULE . . . . .	20-83-02
M81714/6-(), TERMINAL MODULE . . . . .	20-83-01
M81714/60-22-01, TERMINAL MODULE . . . . .	20-15-49
M81714/60-22-02, TERMINAL MODULE . . . . .	20-15-49
M81714/60-22-06, TERMINAL MODULE . . . . .	20-15-49
M81714/63-16F, GROUND MODULE . . . . .	20-15-49
M81714/63-20F, GROUND MODULE . . . . .	20-15-49
M81714/67-04, TERMINAL MODULE TRACK . . . . .	20-15-49
M81714/67-07, TERMINAL MODULE TRACK . . . . .	20-15-49
M81714/67-08, TERMINAL MODULE TRACK . . . . .	20-15-49
M81714/7-(), TERMINAL MODULE . . . . .	20-83-01
M81714/8-(), TERMINAL MODULE . . . . .	20-83-01
M81714/9-(), TERMINAL MODULE . . . . .	20-83-01
M83413/8-A(), BOND AND GROUND JUMPER ASSEMBLY . . . . .	20-20-00
M83413/8-B(), BOND AND GROUND JUMPER ASSEMBLY . . . . .	20-20-00
M83413/8-D(), BOND AND GROUND JUMPER ASSEMBLY . . . . .	20-20-00
M83413/8-E(), BOND AND GROUND JUMPER ASSEMBLY . . . . .	20-20-00
M83413/8-F(), BOND AND GROUND JUMPER ASSEMBLY . . . . .	20-20-00
M83413/8-G(), BOND AND GROUND JUMPER ASSEMBLY . . . . .	20-20-00
M83413/8-H(), BOND AND GROUND JUMPER ASSEMBLY . . . . .	20-20-00
M83519/1-2, SOLDER SLEEVE . . . . .	20-10-13
M83519/1-2, SOLDER SLEEVE . . . . .	20-10-15

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## QPL (continued)

M83519/1-2, SOLDER SLEEVE .....	20-30-12
M83519/1-3, SOLDER SLEEVE .....	20-10-13
M83519/1-3, SOLDER SLEEVE .....	20-10-15
M83519/1-3, SOLDER SLEEVE .....	20-30-12
M83519/1-4, SOLDER SLEEVE .....	20-10-13
M83519/1-4, SOLDER SLEEVE .....	20-10-15
M83519/1-5, SOLDER SLEEVE .....	20-10-13
M83519/1-5, SOLDER SLEEVE .....	20-10-15
M83519/2-2, SOLDER SLEEVE .....	20-10-15
M83519/2-3, SOLDER SLEEVE .....	20-10-15
M83519/2-5, SOLDER SLEEVE .....	20-10-15
M83519/2-6, SOLDER SLEEVE .....	20-10-15
M85049-38S(), BACKSHELL .....	20-25-12
M85049-38S(), BACKSHELL .....	20-60-09
MS20659-101, TERMINAL LUG .....	20-30-11
MS20659-102, TERMINAL LUG .....	20-30-11
MS20659-103, TERMINAL LUG .....	20-30-11
MS20659-104, TERMINAL LUG .....	20-30-11
MS20659-105, TERMINAL LUG .....	20-30-11
MS20659-106, TERMINAL LUG .....	20-30-11
MS20659-107, TERMINAL LUG .....	20-30-11
MS20659-108, TERMINAL LUG .....	20-30-11
MS20659-109, TERMINAL LUG .....	20-30-11
MS20659-110, TERMINAL LUG .....	20-30-11
MS20659-111, TERMINAL LUG .....	20-30-11
MS20659-112, TERMINAL LUG .....	20-30-11
MS20659-113, TERMINAL LUG .....	20-30-11
MS20659-114, TERMINAL LUG .....	20-30-11
MS20659-115, TERMINAL LUG .....	20-30-11
MS20659-116, TERMINAL LUG .....	20-30-11
MS20659-117, TERMINAL LUG .....	20-30-11
MS20659-118, TERMINAL LUG .....	20-30-11
MS20659-119, TERMINAL LUG .....	20-30-11
MS20659-120, TERMINAL LUG .....	20-30-11
MS20659-121, TERMINAL LUG .....	20-30-11
MS20659-122, TERMINAL LUG .....	20-30-11
MS20659-123, TERMINAL LUG .....	20-30-11
MS20659-124, TERMINAL LUG .....	20-30-11
MS20659-125, TERMINAL LUG .....	20-30-11
MS20659-126, TERMINAL LUG .....	20-30-11
MS20659-127, TERMINAL LUG .....	20-30-11
MS20659-128, TERMINAL LUG .....	20-30-11
MS20659-129, TERMINAL LUG .....	20-30-11
MS20659-130, TERMINAL LUG .....	20-30-11
MS20659-131, TERMINAL LUG .....	20-30-11
MS20659-132, TERMINAL LUG .....	20-30-11
MS20659-133, TERMINAL LUG .....	20-30-11
MS20659-134, TERMINAL LUG .....	20-30-11

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### QPL (continued)

MS20659-135, TERMINAL LUG . . . . .	20-30-11
MS20659-136, TERMINAL LUG . . . . .	20-30-11
MS20659-137, TERMINAL LUG . . . . .	20-30-11
MS20659-138, TERMINAL LUG . . . . .	20-30-11
MS20659-139, TERMINAL LUG . . . . .	20-30-11
MS20659-140, TERMINAL LUG . . . . .	20-30-11
MS20659-141, TERMINAL LUG . . . . .	20-30-11
MS20659-142, TERMINAL LUG . . . . .	20-30-11
MS20659-143, TERMINAL LUG . . . . .	20-30-11
MS20659-144, TERMINAL LUG . . . . .	20-30-11
MS20659-145, TERMINAL LUG . . . . .	20-30-11
MS20659-146, TERMINAL LUG . . . . .	20-30-11
MS20659-147, TERMINAL LUG . . . . .	20-30-11
MS20659-148, TERMINAL LUG . . . . .	20-30-11
MS20659-149, TERMINAL LUG . . . . .	20-30-11
MS20659-150, TERMINAL LUG . . . . .	20-30-11
MS20659-151, TERMINAL LUG . . . . .	20-30-11
MS20659-152, TERMINAL LUG . . . . .	20-30-11
MS20659-153, TERMINAL LUG . . . . .	20-30-11
MS20659-154, TERMINAL LUG . . . . .	20-30-11
MS20659-155, TERMINAL LUG . . . . .	20-30-11
MS20659-156, TERMINAL LUG . . . . .	20-30-11
MS20659-157, TERMINAL LUG . . . . .	20-30-11
MS20659-158, TERMINAL LUG . . . . .	20-30-11
MS20659-159, TERMINAL LUG . . . . .	20-30-11
MS20659-160, TERMINAL LUG . . . . .	20-30-11
MS20659-161, TERMINAL LUG . . . . .	20-30-11
MS20659-162, TERMINAL LUG . . . . .	20-30-11
MS20659-163, TERMINAL LUG . . . . .	20-30-11
MS20659-164, TERMINAL LUG . . . . .	20-30-11
MS20659-165, TERMINAL LUG . . . . .	20-30-11
MS20659-166, TERMINAL LUG . . . . .	20-30-11
MS21346-281, TOGGLE SWITCH . . . . .	20-83-11
MS21347-A211, TOGGLE SWITCH . . . . .	20-83-11
MS24264R()-B(), CONNECTOR . . . . .	20-61-11
MS24264R()-T(), CONNECTOR . . . . .	20-61-11
MS24265R()-T(), CONNECTOR . . . . .	20-61-11
MS24266R()-B(), CONNECTOR . . . . .	20-61-11
MS24266R()-T(), CONNECTOR . . . . .	20-61-11
MS25036-115 FLAT STOCK, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
MS25036-116 FLAT STOCK, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
MS25036-118 FLAT STOCK, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
MS25036-123 FLAT STOCK, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
MS25036-125 FLAT STOCK, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
MS25036-126 FLAT STOCK, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
MS25036-127 FLAT STOCK, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
MS25083-2(), BOND AND GROUND JUMPER ASSEMBLY . . . . .	20-20-00
MS25083-3(), BOND AND GROUND JUMPER ASSEMBLY . . . . .	20-20-00

# 20-CROSS REFERENCE INDEX



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

#### QPL (continued)

MS25083-4(), BOND AND GROUND JUMPER ASSEMBLY . . . . .	20-20-00
MS25083-5(), BOND AND GROUND JUMPER ASSEMBLY . . . . .	20-20-00
MS25083-6(), BOND AND GROUND JUMPER ASSEMBLY . . . . .	20-20-00
MS25182-2, CONNECTOR . . . . .	20-62-25
MS25435-11, TERMINAL, ALUMINUM . . . . .	20-30-14
MS25435-7, TERMINAL, ALUMINUM . . . . .	20-30-14
MS27466, CONNECTOR . . . . .	20-63-19
MS27467, CONNECTOR . . . . .	20-63-19
MS27468, CONNECTOR . . . . .	20-63-19
MS27472, CONNECTOR . . . . .	20-63-19
MS27473, CONNECTOR . . . . .	20-63-19
MS27474, CONNECTOR . . . . .	20-63-19
MS27484, CONNECTOR . . . . .	20-63-19
MS27496, CONNECTOR . . . . .	20-63-19
MS27497, CONNECTOR . . . . .	20-63-19
MS27499, CONNECTOR . . . . .	20-63-19
MS27505, CONNECTOR . . . . .	20-63-19
MS27508, CONNECTOR . . . . .	20-63-19
MS27557, CONDUIT ADAPTER . . . . .	20-61-00
MS27656, CONNECTOR . . . . .	20-63-19
I MS27789-21A, TOGGLE SWITCH . . . . .	20-83-11
MS3120(), CONNECTOR . . . . .	20-61-16
MS3126(), CONNECTOR . . . . .	20-61-16
MS3450(), CONNECTOR . . . . .	20-63-14
MS3452(), CONNECTOR . . . . .	20-63-14
MS3454(), CONNECTOR . . . . .	20-63-14
MS3456(), CONNECTOR . . . . .	20-63-14
MS3459(), CONNECTOR . . . . .	20-63-14
MS3470(), CONNECTOR . . . . .	20-63-21
MS3475(), CONNECTOR . . . . .	20-63-21
MS3476(), CONNECTOR . . . . .	20-63-21
NAS1144C0563R, WASHER . . . . .	20-10-21
NAS1387-(), SPLICE, BUTT, INSULATED . . . . .	20-30-12
NAS1388-(), SPLICE, BUTT, INSULATED . . . . .	20-30-12
NAS1389-(), SPLICE, BUTT, INSULATED . . . . .	20-30-12
NAS1802-3-10, SCREW . . . . .	20-10-21
NAS1805-5, NUT . . . . .	20-10-21

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## R

R(), CONNECTOR, RADIAL	20-71-16
R0700(), CONNECTOR, RMS	20-61-11
R0701(), CONNECTOR, RMS	20-61-11
R0710(), CONNECTOR, RMS	20-61-11
R0710()J(), CONNECTOR, RMS	20-61-11
R0711(), CONNECTOR, RMS	20-61-11
R0711()M(), CONNECTOR, RMS	20-61-11
R0712(), CONNECTOR, RMS	20-61-11
R0716(), CONNECTOR, RMS	20-61-11
R0717(), CONNECTOR, RMS	20-61-11
R0718(), CONNECTOR, RMS	20-61-11
R0719(), CONNECTOR, RMS	20-61-11
R0721(), CONNECTOR, RMS	20-61-11
R0726(), CONNECTOR, RMS	20-61-11
R0727(), CONNECTOR, RMS	20-61-11
R0760-1, CONNECTOR, RMS	20-61-11
R0760-12, CONNECTOR, RMS	20-61-11
R0760-126, CONNECTOR, RMS	20-61-11
R0760-127, CONNECTOR, RMS	20-61-11
R0760-128, CONNECTOR, RMS	20-61-11
R0760-129, CONNECTOR, RMS	20-61-11
R0760-16, CONNECTOR, RMS	20-61-11
R0760-17, CONNECTOR, RMS	20-61-11
R0760-18, CONNECTOR, RMS	20-61-11
R0760-19, CONNECTOR, RMS	20-61-11
R1880SN, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R1881SN, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R1885SN, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R1890SN, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R1891SN, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R1894SN, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R1895SN, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R1896SN, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R1901SN, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R1902SN, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R1903SN, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R1906SN, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R1907SN, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R1908SN, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R2441SN, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R2442SN, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R5107N, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R5108N, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R5109N, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R5110N, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11
R5111N, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

R5112N, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH . . . . .	20-30-11
R5117N, TERMINAL LUG, GENERAL PURPOSE, HOLLINGSWORTH . . . . .	20-30-11
R770(), CONNECTOR, RMS . . . . .	20-61-11
RACEWAY BRACKET	
BACB20VG, BOEING . . . . .	20-10-12
RACEWAY CHANNEL	
BACC10DR(), BOEING . . . . .	20-10-12
RACEWAY CHANNEL SUPPORT	
BACS31M(), BOEING . . . . .	20-10-12
RACEWAY CLAMP	
BACC10DS(), BOEING . . . . .	20-10-12
RACEWAY WIRING SUPPORT	
BACS31K(), BOEING . . . . .	20-10-12
RADIALL	
240-92-702, PROTECTIVE CAP . . . . .	20-71-14
240-92-703, PROTECTIVE CAP . . . . .	20-71-14
240-92-706, PROTECTIVE CAP . . . . .	20-71-14
240-92-707, PROTECTIVE CAP . . . . .	20-71-14
617924013, BACKSHELL . . . . .	20-74-13
617925062, BACKSHELL . . . . .	20-74-12
617927007, BACKSHELL . . . . .	20-74-13
620410207, CONNECTOR . . . . .	20-71-14
620600694, CONNECTOR . . . . .	20-71-14
DSX1(), CONNECTOR . . . . .	20-71-15
DSX2(), CONNECTOR . . . . .	20-71-15
DSX3(), CONNECTOR . . . . .	20-71-15
DSXE(), CONNECTOR . . . . .	20-71-15
DSXN(), CONNECTOR . . . . .	20-71-15
DSXT(), CONNECTOR . . . . .	20-71-15
M(), CONNECTOR . . . . .	20-71-16
MM(), CONNECTOR . . . . .	20-71-16
MME(), CONNECTOR . . . . .	20-71-16
NSX()1P101()00, CONNECTOR . . . . .	20-71-14
NSX()1P110X00, CONNECTOR . . . . .	20-71-14
NSX()2P201()00, CONNECTOR . . . . .	20-71-14
NSX()2P202()00, CONNECTOR . . . . .	20-71-14
NSX()2P203()00, CONNECTOR . . . . .	20-71-14
NSX()2P204X00S, CONNECTOR . . . . .	20-71-14
NSX()2P205()00, CONNECTOR . . . . .	20-71-14
NSX()2P206()00, CONNECTOR . . . . .	20-71-14
NSX()2P216()00, CONNECTOR . . . . .	20-71-14
NSX()2P219()00, CONNECTOR . . . . .	20-71-14
NSX()2P221()00, CONNECTOR . . . . .	20-71-14
NSX()2P277X00, CONNECTOR . . . . .	20-71-14
NSX()2P522()00, CONNECTOR . . . . .	20-71-14
NSX()3P()301()00, CONNECTOR . . . . .	20-71-14
NSX()3P()302()00, CONNECTOR . . . . .	20-71-14
NSX()3P()303()00, CONNECTOR . . . . .	20-71-14

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

RADIALL (continued)	
NSX()3P()304()00, CONNECTOR . . . . .	20-71-14
NSX()3P()310()00, CONNECTOR . . . . .	20-71-14
NSX()3P366X00, CONNECTOR . . . . .	20-71-14
NXS()2P286()00, CONNECTOR . . . . .	20-71-14
R(), CONNECTOR . . . . .	20-71-16
RM(), CONNECTOR . . . . .	20-71-16
RME(), CONNECTOR . . . . .	20-71-16
RADIALL DSX SERIES	
CONNECTOR ASSEMBLY . . . . .	20-71-15
RAYCHEM	
0024A0014, CABLE, BALANCED LINE . . . . .	20-35-14
10363 TRIAX CABLE, CONNECTOR ASSEMBLY . . . . .	20-53-05
10599, TWINAX CABLE . . . . .	20-40-15
202A()-3-00, STRAIGHT BOOT . . . . .	20-10-16
222A()-3-00, 90 DEGREE BOOT . . . . .	20-10-16
301A022, MOLDED TEE . . . . .	20-10-16
44A7620, THERMOCOUPLE WIRE, SHIELD TERMINATION . . . . .	20-10-15
5020G3442, COAX CABLE, CONNECTOR ASSEMBLY . . . . .	20-51-05
5516160-20, CABLE . . . . .	20-35-20
55A6087, CABLE . . . . .	20-35-17
55A6088, CABLE . . . . .	20-35-19
55A6090, CABLE . . . . .	20-35-18
55A6160, CABLE . . . . .	20-35-20
7524D5011 TRIAX CABLE, CONNECTOR ASSEMBLY . . . . .	20-53-05
CHA-1598, FIBER OPTIC CLAMP KIT . . . . .	20-74-11
CHA-1599, FIBER OPTIC CLAMP KIT . . . . .	20-74-11
CTC-0039()-9/5-9, THERMOCOUPLE CABLE . . . . .	20-35-25
CTM-1001, SPLICE . . . . .	20-73-00
D-141-0111, SOLDER SLEEVE, TERMAPOST . . . . .	20-72-18
D-141-0112, SOLDER SLEEVE, TERMAPOST . . . . .	20-72-18
D-141-0113, SOLDER SLEEVE, TERMAPOST . . . . .	20-72-18
D-141-0114, SOLDER SLEEVE, TERMAPOST . . . . .	20-72-18
D-144-25, SOLDER SLEEVE . . . . .	20-10-13
D-144-25, SOLDER SLEEVE . . . . .	20-10-15
D-144-25, SOLDER SLEEVE . . . . .	20-30-12
D-150-0251, SPLICE KIT, HIGH TEMPERATURE . . . . .	20-30-12
D-150-0272, SPLICE KIT . . . . .	20-30-12
D-436-36, SPLICE KIT . . . . .	20-30-12
D-436-37, SPLICE KIT . . . . .	20-30-12
D-436-38, SPLICE KIT . . . . .	20-30-12
D-436-60, SPLICE KIT, CLOSED END . . . . .	20-30-12
D-659-0004, CONNECTOR INSERT . . . . .	20-74-11
MS48 SERIES, CONVOLUTED TUBE . . . . .	20-61-00
MTC100-JH1-P32-(), CONNECTOR . . . . .	20-74-11
MTC100-JH1-R32-(), CONNECTOR . . . . .	20-74-11
MTC100-JH2-P12-(), CONNECTOR . . . . .	20-74-11
MTC100-JH2-P32-(), CONNECTOR . . . . .	20-74-11
MTC100-JH2-R32-(), CONNECTOR . . . . .	20-74-11

# 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### RAYCHEM (continued)

MTC100-KT2-0023, CONNECTOR . . . . .	20-73-01
MTC100-KT2-0036, CONNECTOR . . . . .	20-73-01
MTC100-SH1-F32-(), CONNECTOR . . . . .	20-74-11
MTC100-SH2-F32-(), CONNECTOR . . . . .	20-74-11
MTCP-116-05P2, CONNECTOR INSERT . . . . .	20-74-11
MTCP-116-05S2, CONNECTOR INSERT . . . . .	20-74-11
MTCP-122-20P, CONNECTOR INSERT . . . . .	20-74-11
MTCP-122-20P1, CONNECTOR INSERT . . . . .	20-74-11
MTCP-122-20P2, CONNECTOR INSERT . . . . .	20-74-11
MTCP-122-20PQ, CONNECTOR INSERT . . . . .	20-74-11
MTCP-122-20PQ1, CONNECTOR INSERT . . . . .	20-74-11
MTCP-122-20PQ2, CONNECTOR INSERT . . . . .	20-74-11
MTCP-122-20S, CONNECTOR INSERT . . . . .	20-74-11
MTCP-122-20S1, CONNECTOR INSERT . . . . .	20-74-11
MTCP-122-20S2, CONNECTOR INSERT . . . . .	20-74-11
MTCPQKT1P(), CONNECTOR. . . . .	20-74-11
MTCPQKT1R(), CONNECTOR. . . . .	20-74-11
MTCPQKT2P(), CONNECTOR. . . . .	20-74-11
MTCPQKT2R(), CONNECTOR. . . . .	20-74-11
MTCTQ-116-001P, CONNECTOR INSERT . . . . .	20-74-11
MTCTQ-116-001S, CONNECTOR INSERT . . . . .	20-74-11
MTCTQ-YH1-P22, FIBER OPTIC CONNECTOR SHELL, PLUG . . . . .	20-74-11
MTCTQKT1P4FPF, FIBER OPTIC CONNECTOR, PLUG . . . . .	20-74-11
MTCTQKT1R4FSF, FIBER OPTIC CONNECTOR, RECEPTACLE . . . . .	20-74-11
RAYCHEM MTC100 CONNECTORS	
CONNECTOR ASSEMBLY . . . . .	20-74-11
RAYCHEM MTCPQ CONNECTORS	
CONNECTOR ASSEMBLY . . . . .	20-74-11
RB 211 TRENT 800 POWER PLANT	
ALTERNATOR LEAD WIRE . . . . .	20-23-19
BACKSHELL ASSEMBLY. . . . .	20-23-39
CONNECTOR ASSEMBLY . . . . .	20-23-37
CONNECTOR DATA . . . . .	20-23-01
SHIELDED CABLES. . . . .	20-23-17
TERMINAL LUG ASSEMBLY . . . . .	20-23-32
WIRE HARNESS IDENTIFICATION . . . . .	20-23-16
WIRE SPECIFICATIONS. . . . .	20-23-03
WIRING DAMAGE CONDITIONS. . . . .	20-23-15
WIRING REPAIR, APPLICABLE CONDITIONS. . . . .	20-23-00
WIRING REPAIR, WIRE HARNESS ASSEMBLY. . . . .	20-23-30
RBD20-1, DIODE MODULE, SOURIAU . . . . .	20-90-15
RBD20-2, DIODE MODULE, SOURIAU . . . . .	20-90-15
RBDSC-(), SWITCH MODULE ASSEMBLY, BURNDY. . . . .	20-90-16
RBG516-1, GROUND MODULE, SOURIAU . . . . .	20-90-15
RBG532-1, GROUND MODULE, SOURIAU . . . . .	20-90-15
RBGB16-1, GROUND MODULE, SOURIAU . . . . .	20-90-15
RBGB20-1, GROUND MODULE, SOURIAU . . . . .	20-90-15
RBGT10, TERMINAL MODULE TRACK, SOURIAU . . . . .	20-90-15

# 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

RBGT14, TERMINAL MODULE TRACK, SOURIAU	20-90-15
RBGT16, TERMINAL MODULE TRACK, SOURIAU	20-90-15
RBGT2, TERMINAL MODULE TRACK, SOURIAU	20-90-15
RBGT22, TERMINAL MODULE TRACK, SOURIAU	20-90-15
RBGT26, TERMINAL MODULE TRACK, SOURIAU	20-90-15
RBGT4, TERMINAL MODULE TRACK, SOURIAU	20-90-15
RBGT6, TERMINAL MODULE TRACK, SOURIAU	20-90-15
RBGT8, TERMINAL MODULE TRACK, SOURIAU	20-90-15
RBMT10, TERMINAL MODULE TRACK, SOURIAU	20-90-15
RBMT14, TERMINAL MODULE TRACK, SOURIAU	20-90-15
RBMT16, TERMINAL MODULE TRACK, SOURIAU	20-90-15
RBMT2, TERMINAL MODULE TRACK, SOURIAU	20-90-15
RBMT22, TERMINAL MODULE TRACK, SOURIAU	20-90-15
RBMT26, TERMINAL MODULE TRACK, SOURIAU	20-90-15
RBMT4, TERMINAL MODULE TRACK, SOURIAU	20-90-15
RBMT6, TERMINAL MODULE TRACK, SOURIAU	20-90-15
RBMT8, TERMINAL MODULE TRACK, SOURIAU	20-90-15
RBR20-2, RESISTOR MODULE, SOURIAU	20-90-15
RBR20-3, RESISTOR MODULE, SOURIAU	20-90-15
RBR20-4, RESISTOR MODULE, SOURIAU	20-90-15
RBR20-5, RESISTOR MODULE, SOURIAU	20-90-15
RBR20-6, RESISTOR MODULE, SOURIAU	20-90-15
RBR20-7, RESISTOR MODULE, SOURIAU	20-90-15
RBTB16-3, TERMINAL MODULE, SOURIAU	20-90-15
RBTB16-6, TERMINAL MODULE, SOURIAU	20-90-15
RBTB20-2, TERMINAL MODULE, SOURIAU	20-90-15
RBTB20-4, TERMINAL MODULE, SOURIAU	20-90-15
RBTB20-8, TERMINAL MODULE, SOURIAU	20-90-15
RD9361, TERMINAL LUG, GENERAL PURPOSE, THOMAS & BETTS	20-30-11
RD9711, TERMINAL LUG, GENERAL PURPOSE, THOMAS & BETTS	20-30-11
RD9721, TERMINAL LUG, GENERAL PURPOSE, THOMAS & BETTS	20-30-11
RD9731, TERMINAL LUG, GENERAL PURPOSE, THOMAS & BETTS	20-30-11
RE9261, TERMINAL LUG, GENERAL PURPOSE, THOMAS & BETTS	20-30-11
RE9711, TERMINAL LUG, GENERAL PURPOSE, THOMAS & BETTS	20-30-11
RE9721, TERMINAL LUG, GENERAL PURPOSE, THOMAS & BETTS	20-30-11
RE9731, TERMINAL LUG, GENERAL PURPOSE, THOMAS & BETTS	20-30-11
RELAY	
TERMINAL LUG, INSTALLATION TORQUE	20-30-00
RELAY SOCKET	
000300-0445, VIKING	20-81-11
000300-1180, VIKING	20-81-14
000300-1181, VIKING	20-81-14
000300-1182, VIKING	20-81-14
000300-1538, VIKING	20-81-12
000300-1539, VIKING	20-81-12
000300-1540, VIKING	20-81-12
000300-1541, VIKING	20-81-12
000300-1542, VIKING	20-81-12

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## RELAY SOCKET (continued)

000300-1543, VIKING	20-81-12
000300-1544, VIKING	20-81-12
000300-1545, VIKING	20-81-12
000300-1560, VIKING	20-81-12
I 003017-0001, VIKING	20-81-16
003019-0001, VIKING	20-81-18
10-60450, BOEING	20-81-11
102 005-1, BURNDY	20-81-12
102 006-1, BURNDY	20-81-12
102 007-1, BURNDY	20-81-12
102 009-1, BURNDY	20-81-12
102 010-1, BURNDY	20-81-12
102 011-1, BURNDY	20-81-12
102 012-1, BURNDY	20-81-12
102 013-1, BURNDY	20-81-12
105-100-02, METHODE	20-81-11
133-158-02, METHODE	20-81-13
133-158-03, METHODE	20-81-13
133-179-03, METHODE	20-81-13
40-617-2010, SMITHS INDUSTRIES	20-15-46
40-617-286, SMITHS INDUSTRIES	20-15-46
40-617-287, SMITHS INDUSTRIES	20-15-46
40-617-288, SMITHS INDUSTRIES	20-15-46
40-617-289, SMITHS INDUSTRIES	20-15-46
40-617-290, SMITHS INDUSTRIES	20-15-46
40-617-291, SMITHS INDUSTRIES	20-15-46
40-617-292, SMITHS INDUSTRIES	20-15-46
40-617-293, SMITHS INDUSTRIES	20-15-46
40-617-294, SMITHS INDUSTRIES	20-15-46
40-617-295, SMITHS INDUSTRIES	20-15-46
40-617-296, SMITHS INDUSTRIES	20-15-46
40-617-298, SMITHS INDUSTRIES	20-15-46
I 451120-026, AMPHENOL/ PCD	20-81-19
I 451120-027, AMPHENOL/ PCD	20-81-19
I 451120-028, AMPHENOL/ PCD	20-81-19
82164-1F, CLOVER	20-81-11
BACS16AF1, BOEING	20-81-19
BACS16AG1, BOEING	20-81-19
BACS16AH1, BOEING	20-81-19
BACS16W1A, BOEING	20-81-12
BACS16W2A, BOEING	20-81-12
BACS16W3A, BOEING	20-81-12
BACS16W4A, BOEING	20-81-12
BACS16W5A, BOEING	20-81-12
BACS16X1A, BOEING	20-81-12
BACS16X2A, BOEING	20-81-12
BACS16X3A, BOEING	20-81-12
BACS16X4A, BOEING	20-81-12

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## RELAY SOCKET (continued)

BACS16X5A, BOEING	20-81-12
BACS16X6A, BOEING	20-81-12
FRONT RELEASE, 000300-0445, VIKING	20-81-11
FRONT RELEASE, 10-60450, BOEING	20-81-11
FRONT RELEASE, 105-100-02, METHODE	20-81-11
FRONT RELEASE, 82164-1F, CLOVER	20-81-11
FRONT RELEASE, BACS16W, BOEING	20-81-12
FRONT RELEASE, BACS16X, BOEING	20-81-12
FRONT RELEASE, INSTALLATION	20-81-22
FRONT RELEASE, METHODE 133-()	20-81-13
FRONT RELEASE, VIKING 000300-118()	20-81-14
INSTALLATION	20-81-22
REAR RELEASE, BACS16A()1, BOEING	20-81-19
REAR RELEASE, INSTALLATION	20-81-22
REAR RELEASE, LEACH SO-10()-()	20-81-16
REAR RELEASE, LEACH SO-1048-8308	20-81-18
REAR RELEASE, LEACH SO-1055-8690	20-81-21
REAR RELEASE, LEACH SO-1057-8912	20-81-17
REAR RELEASE, PRECISION CONNECTOR DESIGN 45451120-()	20-81-19
RSE112(), PCD	20-81-22
RSE112305, AMPHENOL/PCD	20-81-16
RSE112310, AMPHENOL/PCD	20-81-16
RSE112315, PCD	20-81-16
RSE112320, AMPHENOL/PCD	20-81-16
RSE116(), PCD	20-81-22
RSE116135, AMPHENOL/PCD	20-81-16
RSE116135, PCD	20-81-18
RSE116332, AMPHENOL/PCD	20-81-16
RSE116521, AMPHENOL/PCD	20-81-16
RSE116755, AMPHENOL/PCD	20-81-16
RSE120(), PCD	20-81-22
RSE120026, AMPHENOL/PCD	20-81-19
RSE120027, AMPHENOL/PCD	20-81-19
RSE120028, AMPHENOL/PCD	20-81-19
RSE120028, PCD	20-15-46
RSE120049, PCD	20-15-46
RSE120172, AMPHENOL/PCD	20-81-16
RSE120180, AMPHENOL/PCD	20-81-16
RSE120185, AMPHENOL/PCD	20-81-16
RSE120190, AMPHENOL/PCD	20-81-16
RSE500201, PCD	20-15-46
RSE500202, PCD	20-15-46
RSE500211, PCD	20-15-46
RSE500212, PCD	20-15-46
RSE500301, PCD	20-15-46
RSE500302, PCD	20-15-46
RSE500304, PCD	20-15-46
RSE500305, PCD	20-15-46

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### RELAY SOCKET (continued)

RSE500306, PCD	20-15-46
RSE500311, PCD	20-15-46
RSE500312, PCD	20-15-46
RSE500314, PCD	20-15-46
RSE500315, PCD	20-15-46
RSE500316, PCD	20-15-46
RSE500401, PCD	20-15-46
RSE500402, PCD	20-15-46
RSE500403, PCD	20-15-46
RSE500404, PCD	20-15-46
RSE500411, PCD	20-15-46
RSE500412, PCD	20-15-46
RSE500413, PCD	20-15-46
RSE500414, PCD	20-15-46
RSF116200, LEACH	20-81-12
I SO-1048-8308, LEACH	20-81-16
SO-1048-8308, LEACH	20-81-18
I SO-1048-8308, LEACH	20-81-22
I SO-1048-8779, LEACH	20-81-22
I SO-1049-8772, LEACH	20-81-22
I SO-1055-8690, LEACH	20-81-16
SO-1055-8690, LEACH	20-81-21
I SO-1055-8690, LEACH	20-81-22
SO-1056-8691, LEACH	20-81-16
I SO-1056-8691, LEACH	20-81-22
I SO-1057-8912, LEACH	20-81-16
SO-1057-8912, LEACH	20-81-17
I SO-1057-8912, LEACH	20-81-22
I SO-1058-8913, LEACH	20-81-22
I SO-1059-8914, LEACH	20-81-16
I SO-1059-8914, LEACH	20-81-22
I SO-1061-8916, LEACH	20-81-16
I SO-1061-8916, LEACH	20-81-22
I SO-1062-8917, LEACH	20-81-16
I SO-1062-8917, LEACH	20-81-22
I SO-1063-9033, LEACH	20-81-22
I SO-1064-(), LEACH	20-81-22
I SO-1064-001, LEACH	20-81-16
SO-1064-003, LEACH	20-81-16
SO-1064-007, LEACH	20-81-16
I SO-1066-(), LEACH	20-81-22
SO-1066-001, LEACH	20-81-16
I SO-1066-003, LEACH	20-81-16
SO-1066-10197, LEACH	20-81-16
RESISTANCE	
ELECTRICAL BONDS, TEST PROCEDURES	20-20-00
RESISTIVE SPLICE	
40-716-6206, SMITHS INDUSTRIES	20-15-49

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## RESISTIVE SPLICE (continued)

40-716-6207, SMITHS INDUSTRIES . . . . .	20-15-49
40-716-6208, SMITHS INDUSTRIES . . . . .	20-15-49
TJSE20551, PCD . . . . .	20-15-49
TJSE20552, PCD . . . . .	20-15-49
TJSE20554, PCD . . . . .	20-15-49

## RESISTOR MODULE

RBR20-2, SOURIAU . . . . .	20-90-15
RBR20-3, SOURIAU . . . . .	20-90-15
RBR20-4, SOURIAU . . . . .	20-90-15
RBR20-5, SOURIAU . . . . .	20-90-15
RBR20-6, SOURIAU . . . . .	20-90-15
RBR20-7, SOURIAU . . . . .	20-90-15
S280W555-702, BOEING . . . . .	20-90-15
S280W555-703, BOEING . . . . .	20-90-15
S280W555-704, BOEING . . . . .	20-90-15
S280W555-705, BOEING . . . . .	20-90-15
S280W555-706, BOEING . . . . .	20-90-15
S280W555-707, BOEING . . . . .	20-90-15

## RESISTOR TERMINAL BLOCK

YHLZR-1, BURNDY . . . . .	20-90-11
YHLZR-10, BURNDY . . . . .	20-90-11
YHLZR-11, BURNDY . . . . .	20-90-11
YHLZR-13, BURNDY . . . . .	20-90-11
YHLZR-14, BURNDY . . . . .	20-90-11
YHLZR-15, BURNDY . . . . .	20-90-11
YHLZR-16, BURNDY . . . . .	20-90-11
YHLZR-17, BURNDY . . . . .	20-90-11
YHLZR-18, BURNDY . . . . .	20-90-11
YHLZR-19, BURNDY . . . . .	20-90-11
YHLZR-2, BURNDY . . . . .	20-90-11
YHLZR-20, BURNDY . . . . .	20-90-11
YHLZR-21, BURNDY . . . . .	20-90-11
YHLZR-22, BURNDY . . . . .	20-90-11
YHLZR-23, BURNDY . . . . .	20-90-11
YHLZR-24, BURNDY . . . . .	20-90-11
YHLZR-25, BURNDY . . . . .	20-90-11
YHLZR-26, BURNDY . . . . .	20-90-11
YHLZR-27, BURNDY . . . . .	20-90-11
YHLZR-28, BURNDY . . . . .	20-90-11
YHLZR-29, BURNDY . . . . .	20-90-11
YHLZR-3, BURNDY . . . . .	20-90-11
YHLZR-30, BURNDY . . . . .	20-90-11
YHLZR-31, BURNDY . . . . .	20-90-11
YHLZR-32, BURNDY . . . . .	20-90-11
YHLZR-33, BURNDY . . . . .	20-90-11
YHLZR-34, BURNDY . . . . .	20-90-11
YHLZR-35, BURNDY . . . . .	20-90-11
YHLZR-36, BURNDY . . . . .	20-90-11

## 20-CROSS REFERENCE INDEX



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

#### RESISTOR TERMINAL BLOCK (continued)

YHLZR-37, BURNDY .....	20-90-11
YHLZR-38, BURNDY .....	20-90-11
YHLZR-39, BURNDY .....	20-90-11
YHLZR-4, BURNDY .....	20-90-11
YHLZR-40, BURNDY .....	20-90-11
YHLZR-41, BURNDY .....	20-90-11
YHLZR-42, BURNDY .....	20-90-11
YHLZR-43, BURNDY .....	20-90-11
YHLZR-44, BURNDY .....	20-90-11
YHLZR-47, BURNDY .....	20-90-11
YHLZR-5, BURNDY .....	20-90-11
YHLZR-6, BURNDY .....	20-90-11
YHLZR-7, BURNDY .....	20-90-11
YHLZR-8, BURNDY .....	20-90-11
YHLZR-9, BURNDY .....	20-90-11

#### RESISTOR TERMINAL MODULE

001766-101-02, AIR LB .....	20-15-48
001766-103-02, AIR LB .....	20-15-48
001766-107-02, AIR LB .....	20-15-48
001766-108-02, AIR LB .....	20-15-48
001766-111-02, AIR LB .....	20-15-48
001766-112-02, AIR LB .....	20-15-48
001767-101-02, AIR LB .....	20-15-48
001767-102-02, AIR LB .....	20-15-48
001767-103-02, AIR LB .....	20-15-48
001767-107-02, AIR LB .....	20-15-48
001767-109-02, AIR LB .....	20-15-48
001767-110-02, AIR LB .....	20-15-48
001767-111-02, AIR LB .....	20-15-48
001768-101-02, AIR LB .....	20-15-48
001768-103-02, AIR LB .....	20-15-48
40-718-5266, SMITHS INDUSTRIES .....	20-15-48
40-718-5268, SMITHS INDUSTRIES .....	20-15-48
40-718-5269, SMITHS INDUSTRIES .....	20-15-48
40-718-5270, SMITHS INDUSTRIES .....	20-15-48
40-718-5271, SMITHS INDUSTRIES .....	20-15-48
40-718-5272, SMITHS INDUSTRIES .....	20-15-48
40-718-5273, SMITHS INDUSTRIES .....	20-15-48
40-718-5274, SMITHS INDUSTRIES .....	20-15-48
40-718-5276, SMITHS INDUSTRIES .....	20-15-48
40-718-5278, SMITHS INDUSTRIES .....	20-15-48
40-718-5290, SMITHS INDUSTRIES .....	20-15-48
40-718-5404, SMITHS INDUSTRIES .....	20-15-48
40-718-5405, SMITHS INDUSTRIES .....	20-15-48
40-718-5406, SMITHS INDUSTRIES .....	20-15-48
40-718-5407, SMITHS INDUSTRIES .....	20-15-48

#### REVERE

WC-94102, THERMOCOUPLE WIRE .....	20-35-27
-----------------------------------	----------

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

RF9261, TERMINAL LUG, GENERAL PURPOSE, THOMAS & BETTS .....	20-30-11
RF9711, TERMINAL LUG, GENERAL PURPOSE, THOMAS & BETTS .....	20-30-11
RF9721, TERMINAL LUG, GENERAL PURPOSE, THOMAS & BETTS .....	20-30-11
RF9731, TERMINAL LUG, GENERAL PURPOSE, THOMAS & BETTS .....	20-30-11
RG115A COAX CABLE	
ITT CANNON DP SERIES ASSEMBLY .....	20-71-11
RG223 COAX CABLE	
ITT CANNON DP SERIES ASSEMBLY .....	20-71-11
RG231 COAX CABLE	
REPAIR. ....	20-51-26
RING POST SUPPORT	
WIRE HARNESS, BACS31H(), BOEING. ....	20-10-12
RM(), CONNECTOR, RADIAL. ....	20-71-16
RM342-011-581-5900, CONNECTOR, AIRBORN .....	20-14-52
RM342-011-581-5900-E47, CABLE ASSEMBLY, AIRBORN .....	20-14-52
RM342-023-581-5900, CONNECTOR, AIRBORN .....	20-14-52
RM342-023-581-5900-E58, CABLE ASSEMBLY, AIRBORN .....	20-14-52
RME(), CONNECTOR, RADIAL. ....	20-71-16
RMS	
R0700(), CONNECTOR .....	20-61-11
R0701(), CONNECTOR .....	20-61-11
R0710(), CONNECTOR .....	20-61-11
R0710()J(), CONNECTOR .....	20-61-11
R0711(), CONNECTOR .....	20-61-11
R0711()M(), CONNECTOR .....	20-61-11
R0712(), CONNECTOR .....	20-61-11
R0716(), CONNECTOR .....	20-61-11
R0717(), CONNECTOR .....	20-61-11
R0718(), CONNECTOR .....	20-61-11
R0719(), CONNECTOR .....	20-61-11
R0721(), CONNECTOR .....	20-61-11
R0726(), CONNECTOR .....	20-61-11
R0727(), CONNECTOR .....	20-61-11
R0760-1, CONNECTOR .....	20-61-11
R0760-12, CONNECTOR .....	20-61-11
R0760-126, CONNECTOR .....	20-61-11
R0760-127, CONNECTOR .....	20-61-11
R0760-128, CONNECTOR .....	20-61-11
R0760-129, CONNECTOR .....	20-61-11
R0760-16, CONNECTOR .....	20-61-11
R0760-17, CONNECTOR .....	20-61-11
R0760-18, CONNECTOR .....	20-61-11
R0760-19, CONNECTOR .....	20-61-11
R770(), CONNECTOR .....	20-61-11
ROD	
FILLER, SUPPLIERS .....	20-00-11
SEAL, CONNECTOR ASSEMBLY .....	20-60-08
SEAL, SUPPLIERS. ....	20-00-11

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## ROSEMOUNT

00850-0027-0004, CONNECTOR . . . . .	20-64-15
00855-0478-0001, CONNECTOR . . . . .	20-64-15
00855-0488-0003, CONNECTOR . . . . .	20-64-15
00855-1727-0001, CONNECTOR . . . . .	20-64-15
850-27-4, CONNECTOR . . . . .	20-64-15
RSCDEX-2, CONNECTOR, BURNDY . . . . .	20-51-31
I RSE112(), RELAY SOCKET, PCD . . . . .	20-81-22
I RSE112305, RELAY SOCKET, AMPHENOL/PCD . . . . .	20-81-16
I RSE112310, RELAY SOCKET, AMPHENOL/PCD . . . . .	20-81-16
I RSE112315, RELAY SOCKET, PCD . . . . .	20-81-16
I RSE112320, RELAY SOCKET, AMPHENOL/PCD . . . . .	20-81-16
I RSE116(), RELAY SOCKET, PCD . . . . .	20-81-22
I RSE116135, RELAY SOCKET, AMPHENOL/PCD . . . . .	20-81-16
RSE116135, RELAY SOCKET, PCD . . . . .	20-81-18
I RSE116332, RELAY SOCKET, AMPHENOL/PCD . . . . .	20-81-16
I RSE116521, RELAY SOCKET, AMPHENOL/PCD . . . . .	20-81-16
I RSE116755, RELAY SOCKET, AMPHENOL/PCD . . . . .	20-81-16
I RSE120(), RELAY SOCKET, PCD . . . . .	20-81-22
I RSE120026, RELAY SOCKET, AMPHENOL/ PCD . . . . .	20-81-19
I RSE120027, RELAY SOCKET, AMPHENOL/ PCD . . . . .	20-81-19
I RSE120028, RELAY SOCKET, AMPHENOL/ PCD . . . . .	20-81-19
RSE120028, RELAY SOCKET, PCD . . . . .	20-15-46
RSE120049, RELAY SOCKET, PCD . . . . .	20-15-46
I RSE120172, RELAY SOCKET, AMPHENOL/PCD . . . . .	20-81-16
I RSE120180, RELAY SOCKET, AMPHENOL/PCD . . . . .	20-81-16
I RSE120185, RELAY SOCKET, AMPHENOL/PCD . . . . .	20-81-16
I RSE120190, RELAY SOCKET, AMPHENOL/PCD . . . . .	20-81-16
RSE500201, RELAY SOCKET, PCD . . . . .	20-15-46
RSE500202, RELAY SOCKET, PCD . . . . .	20-15-46
RSE500211, RELAY SOCKET, PCD . . . . .	20-15-46
RSE500212, RELAY SOCKET, PCD . . . . .	20-15-46
RSE500301, RELAY SOCKET, PCD . . . . .	20-15-46
RSE500302, RELAY SOCKET, PCD . . . . .	20-15-46
RSE500304, RELAY SOCKET, PCD . . . . .	20-15-46
RSE500305, RELAY SOCKET, PCD . . . . .	20-15-46
RSE500306, RELAY SOCKET, PCD . . . . .	20-15-46
RSE500311, RELAY SOCKET, PCD . . . . .	20-15-46
RSE500312, RELAY SOCKET, PCD . . . . .	20-15-46
RSE500314, RELAY SOCKET, PCD . . . . .	20-15-46
RSE500315, RELAY SOCKET, PCD . . . . .	20-15-46
RSE500316, RELAY SOCKET, PCD . . . . .	20-15-46
RSE500401, RELAY SOCKET, PCD . . . . .	20-15-46
RSE500402, RELAY SOCKET, PCD . . . . .	20-15-46
RSE500403, RELAY SOCKET, PCD . . . . .	20-15-46
RSE500404, RELAY SOCKET, PCD . . . . .	20-15-46
RSE500411, RELAY SOCKET, PCD . . . . .	20-15-46
RSE500412, RELAY SOCKET, PCD . . . . .	20-15-46

## 20-CROSS REFERENCE INDEX



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

RSE500413, RELAY SOCKET, PCD. ....	20-15-46
RSE500414, RELAY SOCKET, PCD. ....	20-15-46
RSF116200, RELAY SOCKET, LEACH. ....	20-81-12
RSK SHIELD-KON	
RSK101, THOMAS & BETTS. ....	20-30-12
RSK201, THOMAS & BETTS. ....	20-30-12
RSK301, THOMAS & BETTS. ....	20-30-12
RSK401, THOMAS & BETTS. ....	20-30-12
RSK101, RSK SHIELD-KON, THOMAS & BETTS. ....	20-30-12
RSK101, SHIELD-KON, THOMAS & BETTS. ....	20-10-15
RSK201, RSK SHIELD-KON, THOMAS & BETTS. ....	20-30-12
RSK201, SHIELD-KON, THOMAS & BETTS. ....	20-10-15
RSK301, RSK SHIELD-KON, THOMAS & BETTS. ....	20-30-12
RSK301, SHIELD-KON, THOMAS & BETTS. ....	20-10-15
RSK401, RSK SHIELD-KON, THOMAS & BETTS. ....	20-30-12
RSK401, SHIELD-KON, THOMAS & BETTS. ....	20-10-15
RSMDEX-1, CONNECTOR, BURNDY. ....	20-51-31

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## S

I S-5934CUAU, EYELET, GLOBAL SUPPLY . . . . .	20-81-16
I S-6049CUAU, EYELET, GLOBAL SUPPLY . . . . .	20-81-16
S1347-(), BACKSHELL, SUNBANK . . . . .	20-25-12
S1347-(), BACKSHELL, SUNBANK . . . . .	20-60-09
S2277-(), BACKSHELL, SUNBANK . . . . .	20-25-12
S2277-(), BACKSHELL, SUNBANK . . . . .	20-60-09
S227W001-1, COUPLER, ARINC 629, AMPHENOL/BENDIX . . . . .	20-11-11
S227W001-2, COUPLER, ARINC 629, SCI TECHNOLOGY . . . . .	20-11-11
S227W001-4, COUPLER, ARINC 629, SCI TECHNOLOGY . . . . .	20-11-11
S227W001-6, COUPLER, ARINC 629, SCI TECHNOLOGY . . . . .	20-11-11
S227W001-8, COUPLER, ARINC 629, SCI TECHNOLOGY . . . . .	20-11-11
S231T290-() . . . . .	
FUSE DIODE MODULE REPLACEMENT . . . . .	20-84-18
LAMP REPLACEMENT . . . . .	20-84-18
S231T290-(), SWITCH, LIGHTED PUSHBUTTON, BOEING . . . . .	20-83-00
S231T300-() . . . . .	
FUSE DIODE MODULE REPLACEMENT . . . . .	20-84-18
LAMP REPLACEMENT . . . . .	20-84-18
S231T300-(), INDICATOR, LIGHTED, BOEING . . . . .	20-83-00
S231T301-() . . . . .	
FUSE DIODE MODULE REPLACEMENT . . . . .	20-84-18
LAMP REPLACEMENT . . . . .	20-84-18
S231T301-(), INDICATOR, LIGHTED, BOEING . . . . .	20-83-00
S231W240-(), SWITCH, LIGHTED PUSHBUTTON, BOEING . . . . .	20-84-14
S231W240-301, CONNECTOR, SWITCH, BOEING . . . . .	20-84-14
S2408-(), BACKSHELL, SUNBANK . . . . .	20-25-12
S2408-(), BACKSHELL, SUNBANK . . . . .	20-60-09
S280T004-1 AUDIO CABLE . . . . .	
BOEING, PREPARATION . . . . .	20-35-12
S280T006-1 . . . . .	
SPOILER CABLE, BOEING, CONNECTOR ASSEMBLY . . . . .	20-35-13
S280T006-2 . . . . .	
SPOILER CABLE, BOEING, CONNECTOR ASSEMBLY . . . . .	20-35-13
S280W501-() . . . . .	
CABLE, BOEING, REPAIR . . . . .	20-14-11
S280W502 . . . . .	
ARINC 629 STUB CABLE, DAMAGE CONDITIONS AND REPAIR . . . . .	20-10-13
S280W502-1, STUB CABLE, ARINC 629, BOEING . . . . .	20-11-11
S280W502-4, STUB CABLE, ARINC 629, BOEING . . . . .	20-11-11
S280W503-1 COAX CABLE . . . . .	
BOEING, ITT CANNON DP SERIES ASSEMBLY . . . . .	20-71-11
S280W551-209, CONNECTOR, BOEING . . . . .	20-71-14
S280W551-209A, CONNECTOR, BOEING . . . . .	20-71-14
S280W551-211, CONNECTOR, BOEING . . . . .	20-71-14
S280W551-211A, CONNECTOR, BOEING . . . . .	20-71-14
S280W551-213A, CONNECTOR, BOEING . . . . .	20-71-14

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

S280W551-401, CONNECTOR, BOEING . . . . .	20-71-14
S280W551-401A, CONNECTOR, BOEING . . . . .	20-71-14
S280W551-405, CONNECTOR, BOEING . . . . .	20-71-14
S280W551-405A, CONNECTOR, BOEING . . . . .	20-71-14
S280W551-407, CONNECTOR, BOEING . . . . .	20-71-14
S280W551-407A, CONNECTOR, BOEING . . . . .	20-71-14
S280W551-413, CONNECTOR, BOEING . . . . .	20-71-14
S280W551-413A, CONNECTOR, BOEING . . . . .	20-71-14
S280W551-503, CONNECTOR, BOEING . . . . .	20-71-14
S280W551-503A, CONNECTOR, BOEING . . . . .	20-71-14
S280W555-102, TERMINAL MODULE, BOEING . . . . .	20-90-15
S280W555-104, TERMINAL MODULE, BOEING . . . . .	20-90-15
S280W555-108, TERMINAL MODULE, BOEING . . . . .	20-90-15
S280W555-16, GROUND MODULE, BOEING . . . . .	20-90-15
S280W555-16S, GROUND MODULE, BOEING . . . . .	20-90-15
S280W555-20, GROUND MODULE, BOEING . . . . .	20-90-15
S280W555-203, TERMINAL MODULE, BOEING . . . . .	20-90-15
S280W555-206, TERMINAL MODULE, BOEING . . . . .	20-90-15
S280W555-401, GROUND MODULE, BOEING . . . . .	20-90-15
S280W555-402, GROUND MODULE, BOEING . . . . .	20-90-15
S280W555-502, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-504, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-506, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-508, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-510, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-514, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-516, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-522, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-526, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-5502, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-5504, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-5506, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-5508, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-5510, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-5514, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-5516, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-5518, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-5522, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-5526, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-602, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-604, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-606, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-608, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-610, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-614, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-616, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-622, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15
S280W555-626, TERMINAL MODULE TRACK, BOEING . . . . .	20-90-15

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

S280W555-6602, TERMINAL MODULE TRACK, BOEING	20-90-15
S280W555-6604, TERMINAL MODULE TRACK, BOEING	20-90-15
S280W555-6606, TERMINAL MODULE TRACK, BOEING	20-90-15
S280W555-6610, TERMINAL MODULE TRACK, BOEING	20-90-15
S280W555-6614, TERMINAL MODULE TRACK, BOEING	20-90-15
S280W555-6616, TERMINAL MODULE TRACK, BOEING	20-90-15
S280W555-702, RESISTOR MODULE, BOEING	20-90-15
S280W555-703, RESISTOR MODULE, BOEING	20-90-15
S280W555-704, RESISTOR MODULE, BOEING	20-90-15
S280W555-705, RESISTOR MODULE, BOEING	20-90-15
S280W555-706, RESISTOR MODULE, BOEING	20-90-15
S280W555-707, RESISTOR MODULE, BOEING	20-90-15
S280W555-751, DIODE MODULE, BOEING	20-90-15
S280W555-753, DIODE MODULE, BOEING	20-90-15
S280W557-1(), CONNECTOR, BOEING	20-72-24
S280W557-2(), CONNECTOR, BOEING	20-72-24
S280W557-801, CONNECTOR, BOEING	20-72-25
S280W557-802, CONNECTOR, BOEING	20-72-25
S280W601-101, GROUND BLOCK, CONNECTOR, BOEING	20-71-14
S280W601-103, GROUND BLOCK, CONNECTOR, BOEING	20-71-14
S280W601-104, GROUND BLOCK, CONNECTOR, BOEING	20-71-14
S280W601-105, GROUND BLOCK, CONNECTOR, BOEING	20-71-14
S280W601-106, GROUND BLOCK, CONNECTOR, BOEING	20-71-14
S280W601-116, GROUND BLOCK, CONNECTOR, BOEING	20-71-14
S280W601-201, GROUND BLOCK, CONNECTOR, BOEING	20-71-14
S280W601-202, GROUND BLOCK, CONNECTOR, BOEING	20-71-14
S280W601-203, GROUND BLOCK, CONNECTOR, BOEING	20-71-14
S280W601-213, GROUND BLOCK, CONNECTOR, BOEING	20-71-14
S280W601-301, GROUND BLOCK, CONNECTOR, BOEING	20-71-14
S280W603 BACKSHELL	
BOEING, CONNECTOR ASSEMBLY WITH 65B47866-() CABLE	20-35-11
S280W603-1(), BACKSHELL, BOEING	20-25-14
S280W603-2(), BACKSHELL, BOEING	20-25-14
S280W603-3(), BACKSHELL, BOEING	20-25-14
S280W604-1(), BACKSHELL, BOEING	20-25-14
S280W604-2(), BACKSHELL, BOEING	20-25-14
S280W604-3(), BACKSHELL, BOEING	20-25-14
S280W605()-1, BACKSHELL, BOEING	20-25-13
S280W605()-2, BACKSHELL, BOEING	20-25-13
S280W605()-3, BACKSHELL, BOEING	20-25-13
S280W651	
CABLE ASSEMBLY, DAMAGE CONDITIONS AND REPAIR	20-10-13
S280W651-(), CABLE ASSEMBLY, ARINC 629 DATA BUS, BOEING	20-11-11
S280W654-()	
CABLE ASSEMBLY, BOEING, REPAIR	20-14-11
S280W655-()	
CABLE ASSEMBLY, BOEING, REPAIR	20-14-11

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

S280W657-()	
CABLE ASSEMBLY, BOEING, REPAIR . . . . .	20-14-11
S280W701-101, CABLE ASSEMBLY, 3-CHANNEL TRUNK, BOEING . . . . .	20-12-11
S280W701-101, CABLE ASSEMBLY, FIBER OPTIC, BOEING . . . . .	20-12-11
S280W701-102, CABLE ASSEMBLY, 3-CHANNEL TRUNK, BOEING . . . . .	20-12-11
S280W701-102, CABLE ASSEMBLY, FIBER OPTIC, BOEING . . . . .	20-12-11
S280W701-106, CABLE ASSEMBLY, 5-CHANNEL STUB, BOEING . . . . .	20-12-11
S280W701-106, CABLE ASSEMBLY, FIBER OPTIC, BOEING . . . . .	20-12-11
S280W701-107, CABLE ASSEMBLY, 5-CHANNEL STUB, BOEING . . . . .	20-12-11
S280W701-107, CABLE ASSEMBLY, FIBER OPTIC, BOEING . . . . .	20-12-11
S280W701-108, CABLE ASSEMBLY, 5-CHANNEL STUB, BOEING . . . . .	20-12-11
S280W701-108, CABLE ASSEMBLY, FIBER OPTIC, BOEING . . . . .	20-12-11
S280W701-110, CABLE ASSEMBLY, 5-CHANNEL STUB, BOEING . . . . .	20-12-11
S280W701-110, CABLE ASSEMBLY, FIBER OPTIC, BOEING . . . . .	20-12-11
S280W701-111, CABLE ASSEMBLY, 5-CHANNEL STUB, BOEING . . . . .	20-12-11
S280W701-111, CABLE ASSEMBLY, FIBER OPTIC, BOEING . . . . .	20-12-11
S280W701-112, CABLE ASSEMBLY, 5-CHANNEL STUB, BOEING . . . . .	20-12-11
S280W701-112, CABLE ASSEMBLY, FIBER OPTIC, BOEING . . . . .	20-12-11
S280W701-113, CABLE ASSEMBLY, 5-CHANNEL STUB, BOEING . . . . .	20-12-11
S280W701-113, CABLE ASSEMBLY, FIBER OPTIC, BOEING . . . . .	20-12-11
S280W701-114, CABLE ASSEMBLY, 3-CHANNEL TRUNK, BOEING . . . . .	20-12-11
S280W701-114, CABLE ASSEMBLY, FIBER OPTIC, BOEING . . . . .	20-12-11
S280W701-115, CABLE ASSEMBLY, 3-CHANNEL TRUNK, BOEING . . . . .	20-12-11
S280W701-115, CABLE ASSEMBLY, FIBER OPTIC, BOEING . . . . .	20-12-11
S280W701-116, CABLE ASSEMBLY, 5-CHANNEL STUB, BOEING . . . . .	20-12-11
S280W701-116, CABLE ASSEMBLY, FIBER OPTIC, BOEING . . . . .	20-12-11
S280W701-117, CABLE ASSEMBLY, 5-CHANNEL STUB, BOEING . . . . .	20-12-11
S280W701-117, CABLE ASSEMBLY, FIBER OPTIC, BOEING . . . . .	20-12-11
S280W701-118, CABLE ASSEMBLY, 5-CHANNEL STUB, BOEING . . . . .	20-12-11
S280W701-118, CABLE ASSEMBLY, FIBER OPTIC, BOEING . . . . .	20-12-11
S280W701-119, CABLE ASSEMBLY, 5-CHANNEL GATELINK, BOEING . . . . .	20-12-11
S280W701-119, CABLE ASSEMBLY, FIBER OPTIC, BOEING . . . . .	20-12-11
S280W701-120, CABLE ASSEMBLY, 5-CHANNEL GATELINK, BOEING . . . . .	20-12-11
S280W701-120, CABLE ASSEMBLY, FIBER OPTIC, BOEING . . . . .	20-12-11
S280W701-122, CABLE ASSEMBLY, 5-CHANNEL STUB, BOEING . . . . .	20-12-11
S280W701-122, CABLE ASSEMBLY, FIBER OPTIC, BOEING . . . . .	20-12-11
S280W701-123, CABLE ASSEMBLY, 5-CHANNEL STUB, BOEING . . . . .	20-12-11
S280W701-123, CABLE ASSEMBLY, FIBER OPTIC, BOEING . . . . .	20-12-11
S280W701-124, CABLE ASSEMBLY, 5-CHANNEL STUB, BOEING . . . . .	20-12-11
S280W701-124, CABLE ASSEMBLY, FIBER OPTIC, BOEING . . . . .	20-12-11
S280W701-601, CONNECTOR, BOEING . . . . .	20-12-11
S280W701-602, CONNECTOR, BOEING . . . . .	20-12-11
S280W701-611, CONNECTOR, BOEING . . . . .	20-12-11
S280W701-613, CONNECTOR, BOEING . . . . .	20-12-11
S280W701-614, CONNECTOR, BOEING . . . . .	20-12-11
S280W701-615, CONNECTOR, BOEING . . . . .	20-12-11
S280W701-616, CONNECTOR, BOEING . . . . .	20-12-11
S280W701-631, CONNECTOR, BOEING . . . . .	20-12-11

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

S280W701-641, CONNECTOR, BOEING . . . . .	20-12-11
S280W701-642, CONNECTOR, BOEING . . . . .	20-12-11
S280W701-643, CONNECTOR, BOEING . . . . .	20-12-11
S280W701-661, CONNECTOR, BOEING . . . . .	20-12-11
S280W752-1, FERRITE SUPPRESSOR, BOEING . . . . .	20-11-11
S283A202-11, CONNECTOR, BOEING . . . . .	20-61-11
S283A202-12, CONNECTOR, BOEING . . . . .	20-61-11
S283T022-(), SWITCH, BOEING . . . . .	20-83-00
S283T025-2, CONNECTOR, BOEING . . . . .	20-61-11
S283T025-4, CONNECTOR, BOEING . . . . .	20-61-11
S345T002-156, CONNECTOR, CINCH . . . . .	20-62-21
S3929()-34, BACKSHELL, SUNBANK . . . . .	20-25-14
S3929A()-34, BACKSHELL, SUNBANK . . . . .	20-25-14
S3929R()-34, BACKSHELL, SUNBANK . . . . .	20-25-14
S3930()-34, BACKSHELL, SUNBANK . . . . .	20-25-14
S3930A()-34, BACKSHELL, SUNBANK . . . . .	20-25-14
S3930R()-34, BACKSHELL, SUNBANK . . . . .	20-25-14
SABRITEC	
017832-3000, CONNECTOR . . . . .	20-61-19
117432-2001, CONNECTOR, ARINC 404 . . . . .	20-83-02
SADDLE CLAMP	
TA0930034-(), TA MANUFACTURING . . . . .	20-10-12
SAFETY	
FUEL VAPOR LEVELS . . . . .	20-00-10
HOT AIR GUNS . . . . .	20-00-10
IGNITION SOURCES . . . . .	20-00-10
SOLDERING GUNS AND IRONS . . . . .	20-00-10
SAFETY CABLE	
CONNECTOR, INSTALLATION . . . . .	20-60-07
SAFETY PRACTICES . . . . .	20-00-10
SAFETY WIRE	
CONNECTOR, INSTALLATION . . . . .	20-60-07
SB6()1-MG-05()P00, CONNECTOR, SOURIAU . . . . .	20-71-14
SB6()2-MG-13A1PE6, CONNECTOR, SOURIAU . . . . .	20-71-14
SB6()2-MG-13K5P00, CONNECTOR, SOURIAU . . . . .	20-71-14
SB6()2-MG-13K5P12, CONNECTOR, SOURIAU . . . . .	20-71-14
SB6()2-MG-13W2P00, CONNECTOR, SOURIAU . . . . .	20-71-14
SB6()2-MG-13W2P01, CONNECTOR, SOURIAU . . . . .	20-71-14
SB6()2-MG-13W2P02, CONNECTOR, SOURIAU . . . . .	20-71-14
SB6()2-MG-13W2P03, CONNECTOR, SOURIAU . . . . .	20-71-14
SB6()2-MG-13W2PF3, CONNECTOR, SOURIAU . . . . .	20-71-14
SB6()3-M()-13K1P00, CONNECTOR, SOURIAU . . . . .	20-71-14
SB6()3-M()-13K2P00, CONNECTOR, SOURIAU . . . . .	20-71-14
SB6()3-M()-13K2PE901, CONNECTOR, SOURIAU . . . . .	20-71-14
SB6()3-M()-13K3P00, CONNECTOR, SOURIAU . . . . .	20-71-14
SB6()3-M()-13W2P00, CONNECTOR, SOURIAU . . . . .	20-71-14
SCI TECHNOLOGY	
5242500-100, COUPLER, ARINC 629 . . . . .	20-11-11

# 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### SCI TECHNOLOGY (continued)

5242500-101, COUPLER, ARINC 629 . . . . .	20-11-11
5242500-102, COUPLER, ARINC 629 . . . . .	20-11-11
5242505-100, COUPLER COVER, ARINC 629 . . . . .	20-11-11
5242505-101, COUPLER COVER, ARINC 629 . . . . .	20-11-11
5242505-102, COUPLER COVER, ARINC 629 . . . . .	20-11-11
5242515-100, COUPLER BASE, ARINC 629 . . . . .	20-11-11
5242515-101, COUPLER BASE, ARINC 629 . . . . .	20-11-11
5242515-102, COUPLER BASE, ARINC 629 . . . . .	20-11-11
5446500-001, COUPLER, ARINC 629 . . . . .	20-11-11
S227W001-2, COUPLER, ARINC 629 . . . . .	20-11-11
S227W001-4, COUPLER, ARINC 629 . . . . .	20-11-11
S227W001-6, COUPLER, ARINC 629 . . . . .	20-11-11
S227W001-8, COUPLER, ARINC 629 . . . . .	20-11-11

### SCREW

BACS12HN3U10, QPL . . . . .	20-10-21
NAS1802-3-10, QPL . . . . .	20-10-21

### SEAL

312N5205-1, BOEING . . . . .	20-10-21
CONNECTOR ASSEMBLY, POTTING COMPOUND . . . . .	20-60-08
CONNECTOR GROMMET . . . . .	20-60-08
FILLET, ELECTRICAL BOND . . . . .	20-20-00
GROUND STUD GROUND . . . . .	20-20-00
PRESSURE BULKHEAD, ASSEMBLY . . . . .	20-10-20
PRESSURE BULKHEAD, ASSEMBLY . . . . .	20-10-24
PRESSURE BULKHEAD, ASSEMBLY . . . . .	20-14-14
VAPOR, 287W1619-(), PFCS . . . . .	20-14-11
WIRE HARNESS, BACS45A(), BOEING . . . . .	20-10-20
WIRE HARNESS, BACS45B(), BOEING . . . . .	20-10-20

### SEAL HOUSING

312T2202-1, BOEING . . . . .	20-10-21
------------------------------	----------

### SEAL PLUG

CONNECTOR ASSEMBLY . . . . .	20-60-08
SUPPLIERS . . . . .	20-00-11

### SEAL ROD

CONNECTOR ASSEMBLY . . . . .	20-60-08
SUPPLIERS . . . . .	20-00-11

### SEALED SPLICE

ASSEMBLY . . . . .	20-30-12
--------------------	----------

### SEALOK TERMINAL BLOCK

TBS12-22-1, BURNDY . . . . .	20-90-12
TBS12-44-1, BURNDY . . . . .	20-90-12
TBS12-8-1, BURNDY . . . . .	20-90-12
TBS16-22-1, BURNDY . . . . .	20-90-12
TBS16-44-1, BURNDY . . . . .	20-90-12
TBS16-8-1, BURNDY . . . . .	20-90-12
TBS1620-22-1, BURNDY . . . . .	20-90-12
TBS1620-44-1, BURNDY . . . . .	20-90-12
TBS1620-8-1, BURNDY . . . . .	20-90-12

# 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

SEALOK TERMINAL BLOCK (continued)	
TBS20-22-1, BURNDY	20-90-12
TBS20-42-1, BURNDY	20-90-12
TBS20-44-1, BURNDY	20-90-12
TBS20-62-1, BURNDY	20-90-12
TBS20-8-1, BURNDY	20-90-12
SENSOR UNIT	
AUTOBRIGHT INDICATOR, 285T0112, BOEING	20-83-00
SEPARATION	
FUNCTIONAL, WIRE HARNESS	20-10-19
SF3440C()-(), CONNECTOR, IPI	20-61-19
SF3446C()-(), CONNECTOR, IPI	20-61-19
SGA(), CONNECTOR, ITT CANNON	20-72-21
SHIELD	
CABLE REPAIR	20-10-13
DEAD END, ASSEMBLY	20-10-15
EXTENSION, ASSEMBLY	20-10-15
GROUND WIRE, ASSEMBLY	20-10-15
OVERBRAID, LIGHTNING PROTECTION	20-25-11
WIRE REPAIR	20-10-13
SHIELD DEAD END	
ASSEMBLY	20-10-15
SHIELD EXTENSION	
ASSEMBLY	20-10-15
SHIELD GROUND WIRE	
ASSEMBLY	20-10-15
DAMAGE CONDITIONS AND REPAIR	20-10-13
LIGHTNING PROTECTION	20-25-11
SHIELD MATERIAL	
SUPPLIERS	20-00-11
SHIELD MATERIALS	
SUPPLIERS	20-00-11
SHIELD TERMINATION	
10-60875, BOEING, FUEL QUANTITY WIRE	20-10-15
44A7620, RAYCHEM, THERMOCOUPLE WIRE	20-10-15
GENERAL CONDITIONS	20-10-15
SHIELD TERMINATION RING	
SUPPLIERS	20-00-11
SHIELD TERMINATOR BAND	
687-062-01, GLENAIR	20-25-14
687-062-02, GLENAIR	20-25-14
687-062-03, GLENAIR	20-25-14
687-062-04, GLENAIR	20-25-14
687-062-05, GLENAIR	20-25-14
687-062-06, GLENAIR	20-25-14
BACB42F3, BOEING	20-00-11
BACB42F3, BOEING	20-25-14
BACB42F4, BOEING	20-00-11
BACB42F4, BOEING	20-25-14

# 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

SHIELD TERMINATOR BAND (continued)	
SUPPLIERS . . . . .	20-00-11
SHIELD-KON	
RSK101, THOMAS & BETTS . . . . .	20-10-15
RSK201, THOMAS & BETTS . . . . .	20-10-15
RSK301, THOMAS & BETTS . . . . .	20-10-15
RSK401, THOMAS & BETTS . . . . .	20-10-15
SK501HT, THOMAS & BETTS . . . . .	20-10-15
SK601HT, THOMAS & BETTS . . . . .	20-10-15
SHIELDED CABLE	
GENERAL DATA . . . . .	20-25-00
SHIELD CONNECTION TO BACKSHELL . . . . .	20-25-00
SI-TAC	
HPF052UFZL0320-BEC, CONNECTOR . . . . .	20-72-18
HPF160UFZL0320-BEC, CONNECTOR . . . . .	20-72-18
SK501HT, SHIELD-KON, THOMAS & BETTS . . . . .	20-10-15
SK601HT, SHIELD-KON, THOMAS & BETTS . . . . .	20-10-15
SLEEVE	
ADAPTER, CIRCULAR AREA UNITS (CAU) . . . . .	20-30-22
COLD SHRINKABLE . . . . .	20-10-14
COLD SHRINKABLE . . . . .	20-10-27
COLD SHRINKABLE, SUPPLIERS . . . . .	20-00-11
CONFIGURATION, WIRE HARNESS ASSEMBLY . . . . .	20-10-18
FIBERGLAS . . . . .	20-10-18
FLEXIBLE, INSULATION AND PROTECTIVE, SUPPLIERS . . . . .	20-00-11
HEAT SHRINKABLE . . . . .	20-10-14
HEAT SHRINKABLE . . . . .	20-10-27
HEAT SHRINKABLE, SUPPLIERS . . . . .	20-00-11
IDENTIFICATION, SUPPLIERS . . . . .	20-10-11
INSTALLATION, WIRE HARNESS ASSEMBLY . . . . .	20-10-18
INSULATION, SUPPLIERS . . . . .	20-00-11
PROTECTIVE, SUPPLIERS . . . . .	20-00-11
SPLIT, INSTALLATION . . . . .	20-10-11
WIRE HARNESS ASSEMBLY . . . . .	20-10-18
SM3106(), CONNECTOR, BENDIX . . . . .	20-40-00
SMITHS INDUSTRIES	
40-416-6132U, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
40-617-2010, RELAY SOCKET . . . . .	20-15-46
40-617-286, RELAY SOCKET . . . . .	20-15-46
40-617-287, RELAY SOCKET . . . . .	20-15-46
40-617-288, RELAY SOCKET . . . . .	20-15-46
40-617-289, RELAY SOCKET . . . . .	20-15-46
40-617-290, RELAY SOCKET . . . . .	20-15-46
40-617-291, RELAY SOCKET . . . . .	20-15-46
40-617-292, RELAY SOCKET . . . . .	20-15-46
40-617-293, RELAY SOCKET . . . . .	20-15-46
40-617-294, RELAY SOCKET . . . . .	20-15-46
40-617-295, RELAY SOCKET . . . . .	20-15-46
40-617-296, RELAY SOCKET . . . . .	20-15-46

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## SMITHS INDUSTRIES (continued)

40-617-298, RELAY SOCKET . . . . .	20-15-46
40-716-1140, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1155, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1156, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1157, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1158, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1159, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1160, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1161, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1162, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1163, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1164, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1165, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1166, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1167, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1168, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1169, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1170, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1172, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1173, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1174, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1175, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1177, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1178, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1179, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1180, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-1181, TERMINAL LUG, RESTRICTIVE ENTRY . . . . .	20-15-21
40-716-6079, SPLICE KIT, BUTT . . . . .	20-15-26
40-716-6080, SPLICE KIT, BUTT . . . . .	20-15-26
40-716-6096, SPLICE KIT, BUTT . . . . .	20-15-26
40-716-6120, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
40-716-6120U, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
40-716-6121U, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
40-716-6123, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
40-716-6123U, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
40-716-6128U, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
40-716-6130U, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
40-716-6131U, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
40-716-6157-02, SPLICE, PARALLEL . . . . .	20-15-26
40-716-6157-03, SPLICE, PARALLEL . . . . .	20-15-26
40-716-6157-04, SPLICE, PARALLEL . . . . .	20-15-26
40-716-6199, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
40-716-6201, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
40-716-6206, RESISTIVE SPLICE . . . . .	20-15-49
40-716-6207, RESISTIVE SPLICE . . . . .	20-15-49
40-716-6208, RESISTIVE SPLICE . . . . .	20-15-49
40-718-5238, TERMINAL MODULE . . . . .	20-15-48
40-718-5240, TERMINAL MODULE . . . . .	20-15-48

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## SMITHS INDUSTRIES (continued)

40-718-5254, TERMINAL MODULE .....	20-15-48
40-718-5256, TERMINAL MODULE .....	20-15-48
40-718-5257, TERMINAL MODULE .....	20-15-48
40-718-5258, TERMINAL MODULE .....	20-15-48
40-718-5259, TERMINAL MODULE .....	20-15-48
40-718-5262, GROUND MODULE .....	20-15-48
40-718-5263, GROUND MODULE .....	20-15-48
40-718-5266, RESISTOR TERMINAL MODULE .....	20-15-48
40-718-5268, RESISTOR TERMINAL MODULE .....	20-15-48
40-718-5269, RESISTOR TERMINAL MODULE .....	20-15-48
40-718-5270, RESISTOR TERMINAL MODULE .....	20-15-48
40-718-5271, RESISTOR TERMINAL MODULE .....	20-15-48
40-718-5272, RESISTOR TERMINAL MODULE .....	20-15-48
40-718-5273, RESISTOR TERMINAL MODULE .....	20-15-48
40-718-5274, RESISTOR TERMINAL MODULE .....	20-15-48
40-718-5276, RESISTOR TERMINAL MODULE .....	20-15-48
40-718-5278, RESISTOR TERMINAL MODULE .....	20-15-48
40-718-5282, DIODE TERMINAL MODULE .....	20-15-48
40-718-5285, TERMINAL STUD MODULE .....	20-15-48
40-718-5290, RESISTOR TERMINAL MODULE .....	20-15-48
40-718-5368-01, GROUND MODULE .....	20-15-49
40-718-5404, RESISTOR TERMINAL MODULE .....	20-15-48
40-718-5405, RESISTOR TERMINAL MODULE .....	20-15-48
40-718-5406, RESISTOR TERMINAL MODULE .....	20-15-48
40-718-5407, RESISTOR TERMINAL MODULE .....	20-15-48
40-718-938, TERMINAL MODULE TRACK .....	20-15-48
40-718-939, TERMINAL MODULE TRACK .....	20-15-48
40-718-940, TERMINAL MODULE TRACK .....	20-15-48
40-718-942, TERMINAL MODULE TRACK .....	20-15-48
40-718-944, TERMINAL MODULE TRACK .....	20-15-48
40-718-946, TERMINAL MODULE TRACK .....	20-15-48
40-718-950, TERMINAL MODULE TRACK .....	20-15-48
40-718-960, TERMINAL MODULE TRACK .....	20-15-48
40-741-1603-08U, CLAMP, STRAIN RELIEF .....	20-15-33
40-741-1603-09U, CLAMP, STRAIN RELIEF .....	20-15-33
40-741-1604-04U, CLAMP, STRAIN RELIEF .....	20-15-33
40-741-1604-08U, CLAMP, STRAIN RELIEF .....	20-15-33
40-741-1604-09U, CLAMP, STRAIN RELIEF .....	20-15-33
40-741-1632, BACKSHELL, STRAIN RELIEF .....	20-15-33
40-742-2045-00, CONNECTOR .....	20-15-31
40-742-2045-26, CONNECTOR .....	20-15-31
40-742-2046-00, CONNECTOR .....	20-15-31
40-742-2046-26, CONNECTOR .....	20-15-31
40-742-3211-00U, CONNECTOR .....	20-15-35
40-742-4026-00U, CONNECTOR .....	20-15-35
40-742-4026-01U, CONNECTOR .....	20-15-35
40-742-4028-00, CONNECTOR .....	20-15-31
40-742-4030-00U, CONNECTOR .....	20-15-35

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****SMITHS INDUSTRIES (continued)**

40-742-6024-00, CONNECTOR. . . . .	20-15-31
40-742-6024-26, CONNECTOR. . . . .	20-15-31
40-742-6025-29, CONNECTOR. . . . .	20-15-31
40-742-7044-01U, CONNECTOR. . . . .	20-15-35
40-742-7045-01U, CONNECTOR. . . . .	20-15-35
40-742-7056, CONNECTOR. . . . .	20-15-41
40-743-1158-26, CONNECTOR. . . . .	20-15-31
40-743-1159-00, CONNECTOR. . . . .	20-15-31
40-743-1521-00, CONNECTOR. . . . .	20-15-31
40-743-1521-26, CONNECTOR. . . . .	20-15-31
40-743-1521-27, CONNECTOR. . . . .	20-15-31
40-743-1521-28, CONNECTOR. . . . .	20-15-31
40-743-1521-29, CONNECTOR. . . . .	20-15-31
40-743-1530-00, CONNECTOR. . . . .	20-15-31
40-743-1641-00, CONNECTOR. . . . .	20-15-31
40-743-1641-27, CONNECTOR. . . . .	20-15-31
40-743-1641-28, CONNECTOR. . . . .	20-15-31
40-743-1644-28, CONNECTOR. . . . .	20-15-31
40-743-1656-28, CONNECTOR. . . . .	20-15-31
40-743-2325-26, CONNECTOR. . . . .	20-15-31
40-743-3182-29, CONNECTOR. . . . .	20-15-31
40-743-3189-00U, CONNECTOR. . . . .	20-15-33
40-743-3196-00U, CONNECTOR. . . . .	20-15-33
40-743-4761-00, CONNECTOR. . . . .	20-15-31
40-743-4761-26, CONNECTOR. . . . .	20-15-31
40-743-4761-27, CONNECTOR. . . . .	20-15-31
40-743-4761-28, CONNECTOR. . . . .	20-15-31
40-743-4768-28, CONNECTOR. . . . .	20-15-31
40-743-4773-00, CONNECTOR. . . . .	20-15-31
40-743-4773-26, CONNECTOR. . . . .	20-15-31
40-743-5103-26, CONNECTOR. . . . .	20-15-31
40-743-5120-00, CONNECTOR. . . . .	20-15-31
40-743-6213-26, CONNECTOR. . . . .	20-15-31
40-743-6213-27, CONNECTOR. . . . .	20-15-31
40-743-6217-28, CONNECTOR. . . . .	20-15-31
40-743-6347-00, CONNECTOR. . . . .	20-15-31
40-743-6347-26, CONNECTOR. . . . .	20-15-31
40-743-6348-00, CONNECTOR. . . . .	20-15-31
40-743-6821-00U, CONNECTOR. . . . .	20-15-33
40-743-6987-00U, CONNECTOR. . . . .	20-15-33
40-743-7396-00, CONNECTOR. . . . .	20-15-31
40-743-7396-26, CONNECTOR. . . . .	20-15-31
40-743-7396-27, CONNECTOR. . . . .	20-15-31
40-743-7396-28, CONNECTOR. . . . .	20-15-31
40-743-7396-29, CONNECTOR. . . . .	20-15-31
40-743-7399-00, CONNECTOR. . . . .	20-15-31
40-743-7399-26, CONNECTOR. . . . .	20-15-31
40-743-7413-26, CONNECTOR. . . . .	20-15-31

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## SMITHS INDUSTRIES (continued)

40-743-7416-00, CONNECTOR . . . . .	20-15-31
40-743-7416-28, CONNECTOR . . . . .	20-15-31
40-743-7419-00, CONNECTOR . . . . .	20-15-31
40-743-8581-29, CONNECTOR . . . . .	20-15-31
40-743-862, CONNECTOR . . . . .	20-15-42
40-743-9136-29, CONNECTOR . . . . .	20-15-31
40-743-9137-26, CONNECTOR . . . . .	20-15-31
40-743-9137-27, CONNECTOR . . . . .	20-15-31
40-743-9142-00, CONNECTOR . . . . .	20-15-31
40-743-9142-29, CONNECTOR . . . . .	20-15-31
40-743-9414-00U, CONNECTOR . . . . .	20-15-33
40-743-9414-05U, CONNECTOR . . . . .	20-15-33
40-743-9414-06U, CONNECTOR . . . . .	20-15-33
40-743-9414-07U, CONNECTOR . . . . .	20-15-33
40-743-9445-00U, CONNECTOR . . . . .	20-15-33
40-743-9445-05U, CONNECTOR . . . . .	20-15-33
40-743-9445-06U, CONNECTOR . . . . .	20-15-33
40-743-9445-07U, CONNECTOR . . . . .	20-15-33
40-743-9525, CONNECTOR . . . . .	20-15-43
40-743-9698, CONNECTOR . . . . .	20-15-43
40-743-9699, CONNECTOR . . . . .	20-15-43
40-743-9734-00U, CONNECTOR . . . . .	20-15-33
40-743-9734-05U, CONNECTOR . . . . .	20-15-33
40-743-9734-06U, CONNECTOR . . . . .	20-15-33
40-743-9734-07U, CONNECTOR . . . . .	20-15-33
40-743-9744-00U, CONNECTOR . . . . .	20-15-33
40-743-9744-05U, CONNECTOR . . . . .	20-15-33
40-743-9744-06U, CONNECTOR . . . . .	20-15-33
40-743-9744-07U, CONNECTOR . . . . .	20-15-33
51408-016, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
51408-017, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-15-21
53270-002, TERMINAL MODULE TRACK . . . . .	20-15-49
53270-003, TERMINAL MODULE TRACK . . . . .	20-15-49
53270-005, TERMINAL MODULE TRACK . . . . .	20-15-49
53710-001, TERMINAL MODULE . . . . .	20-15-49
53710-002, TERMINAL MODULE . . . . .	20-15-49
53710-003, TERMINAL MODULE . . . . .	20-15-49
53710-005, GROUND MODULE . . . . .	20-15-49
ELM655-1, BACKSHELL . . . . .	20-15-42
SMP-()-BC, CONNECTOR, J.S.T. . . . .	20-64-14
SMR-()-B, CONNECTOR, J.S.T. . . . .	20-64-14
SO-1048-8308, RELAY SOCKET, LEACH . . . . .	20-81-16
SO-1048-8308, RELAY SOCKET, LEACH . . . . .	20-81-18
SO-1048-8308, RELAY SOCKET, LEACH . . . . .	20-81-22
SO-1048-8779, RELAY SOCKET, LEACH . . . . .	20-81-22
SO-1049-8772, RELAY SOCKET, LEACH . . . . .	20-81-22
SO-1055-8690, RELAY SOCKET, LEACH . . . . .	20-81-16
SO-1055-8690, RELAY SOCKET, LEACH . . . . .	20-81-21

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

I SO-1055-8690, RELAY SOCKET, LEACH . . . . .	20-81-22
SO-1056-8691, RELAY SOCKET, LEACH . . . . .	20-81-16
I SO-1056-8691, RELAY SOCKET, LEACH . . . . .	20-81-22
I SO-1057-8912, RELAY SOCKET, LEACH . . . . .	20-81-16
SO-1057-8912, RELAY SOCKET, LEACH . . . . .	20-81-17
I SO-1057-8912, RELAY SOCKET, LEACH . . . . .	20-81-22
I SO-1058-8913, RELAY SOCKET, LEACH . . . . .	20-81-22
I SO-1059-8914, RELAY SOCKET, LEACH . . . . .	20-81-16
I SO-1059-8914, RELAY SOCKET, LEACH . . . . .	20-81-22
I SO-1061-8916, RELAY SOCKET, LEACH . . . . .	20-81-16
I SO-1061-8916, RELAY SOCKET, LEACH . . . . .	20-81-22
I SO-1062-8917, RELAY SOCKET, LEACH . . . . .	20-81-16
I SO-1062-8917, RELAY SOCKET, LEACH . . . . .	20-81-22
I SO-1063-9033, RELAY SOCKET, LEACH . . . . .	20-81-22
I SO-1064-(), RELAY SOCKET, LEACH . . . . .	20-81-22
I SO-1064-001, RELAY SOCKET, LEACH . . . . .	20-81-16
SO-1064-003, RELAY SOCKET, LEACH . . . . .	20-81-16
SO-1064-007, RELAY SOCKET, LEACH . . . . .	20-81-16
I SO-1066-(), RELAY SOCKET, LEACH . . . . .	20-81-22
SO-1066-001, RELAY SOCKET, LEACH . . . . .	20-81-16
I SO-1066-003, RELAY SOCKET, LEACH . . . . .	20-81-16
SO-1066-10197, RELAY SOCKET, LEACH . . . . .	20-81-16
SOLDER	
SUPPLIERS . . . . .	20-00-11
SOLDER ADAPTER	
460-3094-01-01-00, CAMBION . . . . .	20-40-00
BACA14AB164, BOEING . . . . .	20-40-00
SOLDER SLEEVE	
BACS13BH1, BOEING . . . . .	20-10-15
BACS13BH2, BOEING . . . . .	20-10-15
BACS13BH3, BOEING . . . . .	20-10-15
BACS13CT1A, BOEING . . . . .	20-10-15
BACS13CT1B, BOEING . . . . .	20-10-15
BACS13CT1C, BOEING . . . . .	20-10-15
BACS13CT1N, BOEING . . . . .	20-10-13
BACS13CT1N, BOEING . . . . .	20-10-15
BACS13CT1N, BOEING . . . . .	20-30-12
BACS13CT2A, BOEING . . . . .	20-10-15
BACS13CT2B, BOEING . . . . .	20-10-15
BACS13CT2C, BOEING . . . . .	20-10-15
BACS13CT2D, BOEING . . . . .	20-10-15
BACS13CT2N, BOEING . . . . .	20-10-13
BACS13CT2N, BOEING . . . . .	20-10-15
BACS13CT2N, BOEING . . . . .	20-30-12
BACS13CT3A, BOEING . . . . .	20-10-15
BACS13CT3B, BOEING . . . . .	20-10-15
BACS13CT3C, BOEING . . . . .	20-10-15
BACS13CT3D, BOEING . . . . .	20-10-15

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## SOLDER SLEEVE (continued)

BACS13CT3N, BOEING	20-10-13
BACS13CT3N, BOEING	20-10-15
BACS13CT3N, BOEING	20-30-12
BACS13CT4A, BOEING	20-10-15
BACS13CT4B, BOEING	20-10-15
BACS13CT4C, BOEING	20-10-15
BACS13CT4D, BOEING	20-10-15
BACS13CT4N, BOEING	20-10-13
BACS13CT4N, BOEING	20-10-15
BACS13CT5A, BOEING	20-10-15
BACS13CT5B, BOEING	20-10-15
BACS13CT5C, BOEING	20-10-15
BACS13CT5D, BOEING	20-10-15
BACS13CT5N, BOEING	20-10-13
BACS13CT5N, BOEING	20-10-15
D-144-25, RAYCHEM	20-10-13
D-144-25, RAYCHEM	20-10-15
D-144-25, RAYCHEM	20-30-12
M83519/1-2, QPL	20-10-13
M83519/1-2, QPL	20-10-15
M83519/1-2, QPL	20-30-12
M83519/1-3, QPL	20-10-13
M83519/1-3, QPL	20-10-15
M83519/1-3, QPL	20-30-12
M83519/1-4, QPL	20-10-13
M83519/1-4, QPL	20-10-15
M83519/1-5, QPL	20-10-13
M83519/1-5, QPL	20-10-15
M83519/2-2, QPL	20-10-15
M83519/2-3, QPL	20-10-15
M83519/2-5, QPL	20-10-15
M83519/2-6, QPL	20-10-15
TERMAPOST, D-141-0111, RAYCHEM	20-72-18
TERMAPOST, D-141-0112, RAYCHEM	20-72-18
TERMAPOST, D-141-0113, RAYCHEM	20-72-18
TERMAPOST, D-141-0114, RAYCHEM	20-72-18
SOLDER TYPE CONTACTS	
CONNECTOR ASSEMBLY	20-40-00
SOLDERING GUNS AND IRONS	
SAFETY	20-00-10
SOLVENT	
SUPPLIERS	20-00-11
SOURIAU	
30-00053-(), CONNECTOR	20-72-21
30-00054-(), CONNECTOR	20-72-21
892(), CONNECTOR	20-63-14
8D513M, CONNECTOR	20-63-19
BDX016016, GROUND MODULE	20-90-15

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****SOURIAU (continued)**

BDX016020, GROUND MODULE . . . . .	20-90-15
JBXEA1G06FCSDS, CONNECTOR . . . . .	20-61-02
RBD20-1, DIODE MODULE . . . . .	20-90-15
RBD20-2, DIODE MODULE . . . . .	20-90-15
RBG516-1, GROUND MODULE . . . . .	20-90-15
RBG532-1, GROUND MODULE . . . . .	20-90-15
RBGB16-1, GROUND MODULE . . . . .	20-90-15
RBGB20-1, GROUND MODULE . . . . .	20-90-15
RBGT10, TERMINAL MODULE TRACK . . . . .	20-90-15
RBGT14, TERMINAL MODULE TRACK . . . . .	20-90-15
RBGT16, TERMINAL MODULE TRACK . . . . .	20-90-15
RBGT2, TERMINAL MODULE TRACK . . . . .	20-90-15
RBGT22, TERMINAL MODULE TRACK . . . . .	20-90-15
RBGT26, TERMINAL MODULE TRACK . . . . .	20-90-15
RBGT4, TERMINAL MODULE TRACK . . . . .	20-90-15
RBGT6, TERMINAL MODULE TRACK . . . . .	20-90-15
RBGT8, TERMINAL MODULE TRACK . . . . .	20-90-15
RBMT10, TERMINAL MODULE TRACK . . . . .	20-90-15
RBMT14, TERMINAL MODULE TRACK . . . . .	20-90-15
RBMT16, TERMINAL MODULE TRACK . . . . .	20-90-15
RBMT2, TERMINAL MODULE TRACK . . . . .	20-90-15
RBMT22, TERMINAL MODULE TRACK . . . . .	20-90-15
RBMT26, TERMINAL MODULE TRACK . . . . .	20-90-15
RBMT4, TERMINAL MODULE TRACK . . . . .	20-90-15
RBMT6, TERMINAL MODULE TRACK . . . . .	20-90-15
RBMT8, TERMINAL MODULE TRACK . . . . .	20-90-15
RBR20-2, RESISTOR MODULE . . . . .	20-90-15
RBR20-3, RESISTOR MODULE . . . . .	20-90-15
RBR20-4, RESISTOR MODULE . . . . .	20-90-15
RBR20-5, RESISTOR MODULE . . . . .	20-90-15
RBR20-6, RESISTOR MODULE . . . . .	20-90-15
RBR20-7, RESISTOR MODULE . . . . .	20-90-15
RBTB16-3, TERMINAL MODULE . . . . .	20-90-15
RBTB16-6, TERMINAL MODULE . . . . .	20-90-15
RBTB20-2, TERMINAL MODULE . . . . .	20-90-15
RBTB20-4, TERMINAL MODULE . . . . .	20-90-15
RBTB20-8, TERMINAL MODULE . . . . .	20-90-15
SB6()1-MG-05()P00, CONNECTOR . . . . .	20-71-14
SB6()2-MG-13A1PE6, CONNECTOR . . . . .	20-71-14
SB6()2-MG-13K5P00, CONNECTOR . . . . .	20-71-14
SB6()2-MG-13K5P12, CONNECTOR . . . . .	20-71-14
SB6()2-MG-13W2P00, CONNECTOR . . . . .	20-71-14
SB6()2-MG-13W2P01, CONNECTOR . . . . .	20-71-14
SB6()2-MG-13W2P02, CONNECTOR . . . . .	20-71-14
SB6()2-MG-13W2P03, CONNECTOR . . . . .	20-71-14
SB6()2-MG-13W2PF3, CONNECTOR . . . . .	20-71-14
SB6()3-M()-13K1P00, CONNECTOR . . . . .	20-71-14
SB6()3-M()-13K2P00, CONNECTOR . . . . .	20-71-14

**20-CROSS REFERENCE INDEX**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

SOURIAU (continued)	
SB6()3-M()-13K2PE901, CONNECTOR . . . . .	20-71-14
SB6()3-M()-13K3P00, CONNECTOR . . . . .	20-71-14
SB6()3-M()-13W2P00, CONNECTOR . . . . .	20-71-14
SOURIAU 30-00053-() SERIES	
CONNECTOR ASSEMBLY . . . . .	20-72-21
SOURIAU 30-00054-() SERIES	
CONNECTOR ASSEMBLY . . . . .	20-72-21
SOURIAU/BURNDY	
M22T(), CONNECTOR . . . . .	20-51-32
SP()SE(), CONNECTOR, AMPHENOL/BENDIX . . . . .	20-61-16
SPACER	
COIL, BACS18AY(), BOEING . . . . .	20-10-20
COIL, BACS45A(), BOEING . . . . .	20-10-20
STAR, BACS18AX(), BOEING . . . . .	20-10-20
STAR, BACS45A(), BOEING . . . . .	20-10-20
SPARE CONTACT	
CONNECTOR ASSEMBLY, GENERAL CONDITIONS . . . . .	20-60-08
SPLICE	
ALUMEL . . . . .	20-10-13
AMP COAXICLAMP, COAX CABLE REPAIR . . . . .	20-51-26
BACS52H1B-B1-1, BOEING . . . . .	20-73-00
BUTT, HIGH TEMPERATURE, BACT12C11, BOEING . . . . .	20-30-12
BUTT, HIGH TEMPERATURE, BACT12C15, BOEING . . . . .	20-30-12
BUTT, HIGH TEMPERATURE, BACT12C20, BOEING . . . . .	20-30-12
BUTT, INSULATED, NAS1387-(), QPL . . . . .	20-30-12
BUTT, INSULATED, NAS1388-(), QPL . . . . .	20-30-12
BUTT, INSULATED, NAS1389-(), QPL . . . . .	20-30-12
CHROMEL . . . . .	20-10-13
CIRCULAR AREA UNITS (CAU) . . . . .	20-30-22
COAX, 331713, AMP . . . . .	20-51-26
CONDITIONS FOR CABLE REPAIR . . . . .	20-10-13
CONDITIONS FOR WIRE REPAIR . . . . .	20-10-13
COPALUM, 277027-1, AMP . . . . .	20-30-13
COPALUM, 277050-1, AMP . . . . .	20-30-13
COPALUM, 277082-1, AMP . . . . .	20-30-13
COPALUM, 277156-1, AMP . . . . .	20-30-13
COPALUM, 277157-1, AMP . . . . .	20-30-13
COPALUM, 277158-1, AMP . . . . .	20-30-13
COPALUM, 277159-1, AMP . . . . .	20-30-13
COPALUM, 277160-1, AMP . . . . .	20-30-13
COPALUM, 277161-1, AMP . . . . .	20-30-13
COPALUM, 277162-1, AMP . . . . .	20-30-13
COPALUM, 277163-1, AMP . . . . .	20-30-13
COPALUM, 277164-1, AMP . . . . .	20-30-13
COPALUM, 277165-1, AMP . . . . .	20-30-13
COPALUM, 277168-1, AMP . . . . .	20-30-13
COPALUM, 52522, AMP . . . . .	20-30-13
COPALUM, 52523, AMP . . . . .	20-30-13

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## SPlice (continued)

COPALUM, 52524, AMP . . . . .	20-30-13
COPALUM, 52525, AMP . . . . .	20-30-13
COPALUM, 52526, AMP . . . . .	20-30-13
COPALUM, 52527, AMP . . . . .	20-30-13
COPALUM, 53527-1, AMP . . . . .	20-30-13
COPALUM, 53528-1, AMP . . . . .	20-30-13
COPPER WIRE TO COPPER WIRE . . . . .	20-30-12
CTM-1001, RAYCHEM . . . . .	20-73-00
DISCONNECTABLE WIRE, 592584-(), AMP . . . . .	20-83-00
DISCONNECTABLE WIRE, M81714/11-20, QPL . . . . .	20-83-00
DISCONNECTABLE WIRE, MWS(), AMP . . . . .	20-83-00
INSULATED, ASSEMBLY . . . . .	20-30-12
INSULATION REPAIR . . . . .	20-10-13
JEFFY JUNCTION, TSE-12-01, DEUTSCH . . . . .	20-90-14
JEFFY JUNCTION, TSE-16-01, DEUTSCH . . . . .	20-90-14
JEFFY JUNCTION, TSE-20-01, DEUTSCH . . . . .	20-90-14
MULTIPLE TERMINATION, BACS52H1B-B1-1, BOEING . . . . .	20-73-00
MULTIPLE TERMINATION, CTM-1001, RAYCHEM . . . . .	20-73-00
PARALLEL, 34137, AMP . . . . .	20-30-12
PARALLEL, 34138, AMP . . . . .	20-30-12
PARALLEL, 40-716-6157-02, SMITHS INDUSTRIES . . . . .	20-15-26
PARALLEL, 40-716-6157-03, SMITHS INDUSTRIES . . . . .	20-15-26
PARALLEL, 40-716-6157-04, SMITHS INDUSTRIES . . . . .	20-15-26
REMOVABLE CONTACT, 48-7190, AMPHENOL . . . . .	20-30-12
REMOVABLE CONTACT, 48-7190-1, AMPHENOL . . . . .	20-30-12
REMOVABLE CONTACT, 48-7191, AMPHENOL . . . . .	20-30-12
REMOVABLE CONTACT, 48-7191-1, AMPHENOL . . . . .	20-30-12
SEALED, ASSEMBLY . . . . .	20-30-12
THERMOCOUPLE, 1-322325-0, AMP . . . . .	20-10-13
THERMOCOUPLE, 1-322325-1, AMP . . . . .	20-10-13
WIRE REPAIR, GENERAL CONDITIONS . . . . .	20-10-13
SPlice ADAPTER	
BACA14AN(), BOEING . . . . .	20-30-22
CIRCULAR AREA UNITS (CAU) . . . . .	20-30-22
SPlice ASSEMBLY	
AMP COAXICLAMP, COAX CABLE REPAIR . . . . .	20-51-26
AWG AND CAU CONVERSION . . . . .	20-30-12
COPPER WIRE TO COPPER WIRE . . . . .	20-30-12
MORE THAN ONE WIRE . . . . .	20-30-22
WIRE INSULATION SMALLER THAN INSULATION GRIP . . . . .	20-30-22
WIRE SIZE SMALLER THAN CRIMP BARREL SIZE . . . . .	20-30-22
SPlice KIT	
BUTT, 40-716-6079, SMITHS INDUSTRIES . . . . .	20-15-26
BUTT, 40-716-6080, SMITHS INDUSTRIES . . . . .	20-15-26
BUTT, 40-716-6096, SMITHS INDUSTRIES . . . . .	20-15-26
CLOSED END, D-436-60, RAYCHEM . . . . .	20-30-12
D-150-0272, RAYCHEM . . . . .	20-30-12
D-436-36, RAYCHEM . . . . .	20-30-12

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

SPLICE KIT (continued)	
D-436-37, RAYCHEM	20-30-12
D-436-38, RAYCHEM	20-30-12
HIGH TEMPERATURE, D-150-0251, RAYCHEM	20-30-12
SPOILER CABLE	
S280T006-1, BOEING, CONNECTOR ASSEMBLY	20-35-13
S280T006-2, BOEING, CONNECTOR ASSEMBLY	20-35-13
SRPA1N8AS1, CONNECTOR, BENDIX	20-40-00
ST2220-() CRIMP TOOL	
EQUIVALENT M22520/1-01 AND M22520/2-01 CRIMP TOOLS	20-00-12
STBP19M, TIE STRAP MOUNTING PLATFORM, BOEING	20-10-12
STOW	
FREE END OF WIRING	20-10-11
STRAIGHT BOOT	
202A()-3-00, RAYCHEM	20-10-16
STRAIN RELIEF CLAMP	
BACC10LL1, BOEING	20-74-13
BACC10LL2, BOEING	20-74-13
BACC10LM1F, BOEING	20-74-13
BACC10LM2F, BOEING	20-74-13
BACC10LV2, BOEING	20-74-13
BACC10MY1, BOEING	20-74-18
STRINGER CLIP	
BACS38AB(), BOEING	20-10-12
BACS38J(), BOEING	20-10-12
BACS38J4, BOEING	20-10-12
BACS38J5, BOEING	20-10-12
BACS38J7, BOEING	20-10-12
CR2, BOEING	20-10-12
CR4H, BOEING	20-10-12
DUAL INSERT, BACS38J5, BOEING	20-10-12
LONG SINGLE INSERT, BACS38J7, BOEING	20-10-12
SINGLE INSERT, BACS38J4, BOEING	20-10-12
STUB CABLE	
ARINC 629, S280W502-1, BOEING	20-11-11
ARINC 629, S280W502-4, BOEING	20-11-11
STUB WIRE	
ASSEMBLY	20-60-08
SUNBANK	
S1347-(), BACKSHELL	20-25-12
S1347-(), BACKSHELL	20-60-09
S2277-(), BACKSHELL	20-25-12
S2277-(), BACKSHELL	20-60-09
S2408-(), BACKSHELL	20-25-12
S2408-(), BACKSHELL	20-60-09
S3929()-34, BACKSHELL	20-25-14
S3929A()-34, BACKSHELL	20-25-14
S3929R()-34, BACKSHELL	20-25-14
S3930()-34, BACKSHELL	20-25-14

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

SUNBANK (continued)	
S3930A()-34, BACKSHELL . . . . .	20-25-14
S3930R()-34, BACKSHELL . . . . .	20-25-14
SUPPORT	
RACEWAY CHANNEL, BACS31M(), BOEING . . . . .	20-10-12
RACEWAY WIRING, BACS31K(), BOEING. . . . .	20-10-12
SUPPORT ASSEMBLY	
WIRE HARNESS, BACS31J(), BOEING . . . . .	20-10-12
SUPPRESSOR	
FERRITE, S280W752-1, BOEING. . . . .	20-11-11
SURPRENANT	
BA5903 COAX CABLE, ITT CANNON DP SERIES ASSEMBLY. . . . .	20-71-11
BA6416A TRIAX CABLE, CONNECTOR ASSEMBLY . . . . .	20-53-05
SWITCH	
AC30-(), JANCO. . . . .	20-83-00
AC45-(), JANCO. . . . .	20-83-00
AC60-(), JANCO. . . . .	20-83-00
AC90-(), JANCO. . . . .	20-83-00
AD45-(), JANCO. . . . .	20-84-17
LIGHTED PUSH BUTTON, 851-37167-()-001, EATON . . . . .	20-84-13
LIGHTED PUSH BUTTON, 851-37167-()-002, EATON . . . . .	20-84-13
LIGHTED PUSH BUTTON, 851-37167-()-003, EATON . . . . .	20-84-13
LIGHTED PUSH BUTTON, 851-37962-()-001, EATON . . . . .	20-84-13
LIGHTED PUSH BUTTON, 851-37962-()-002, EATON . . . . .	20-84-13
LIGHTED PUSH BUTTON, 851-37962-()-003, EATON . . . . .	20-84-13
LIGHTED PUSH BUTTON, 851-37962-()-004, EATON . . . . .	20-84-13
LIGHTED PUSH BUTTON, 851-37962-()-005, EATON . . . . .	20-84-13
LIGHTED PUSH BUTTON, 851-37962-()-006, EATON . . . . .	20-84-13
LIGHTED PUSH BUTTON, 851-37962-()-101, EATON . . . . .	20-84-13
LIGHTED PUSH BUTTON, 851-37962-()-102, EATON . . . . .	20-84-13
LIGHTED PUSH BUTTON, 851-37962-()-103, EATON . . . . .	20-84-13
LIGHTED PUSH BUTTON, 851-37962-()-104, EATON . . . . .	20-84-13
LIGHTED PUSH BUTTON, 851-37962-()-201, EATON . . . . .	20-84-13
LIGHTED PUSH BUTTON, 851-37962-()-202, EATON . . . . .	20-84-13
LIGHTED PUSH BUTTON, 851-37962-()-203, EATON . . . . .	20-84-13
LIGHTED PUSH BUTTON, 851-37962-()-204, EATON . . . . .	20-84-13
LIGHTED PUSHBUTTON, 09-530-(), ITW SWITCHES . . . . .	20-84-14
LIGHTED PUSHBUTTON, 09-530-(), KORRY ELECTRONICS. . . . .	20-84-14
LIGHTED PUSHBUTTON, 10648-()-(), JAY-EL . . . . .	20-83-00
LIGHTED PUSHBUTTON, 432-632-1089-00(), KORRY ELECTRONICS . . . . .	20-83-00
LIGHTED PUSHBUTTON, 433-673-()-(), KORRY ELECTRONICS . . . . .	20-83-00
LIGHTED PUSHBUTTON, 60B40122-(), BOEING . . . . .	20-83-00
LIGHTED PUSHBUTTON, 851-30768-(), EATON . . . . .	20-83-00
LIGHTED PUSHBUTTON, 851-30768-(), MSC. . . . .	20-83-00
LIGHTED PUSHBUTTON, 851-35100-(), EATON . . . . .	20-83-00
LIGHTED PUSHBUTTON, 851-35100-(), MSC. . . . .	20-83-00
LIGHTED PUSHBUTTON, S231T290-(), BOEING . . . . .	20-83-00
LIGHTED PUSHBUTTON, S231W240-(), BOEING . . . . .	20-84-14
S283T022-(), BOEING. . . . .	20-83-00

## 20-CROSS REFERENCE INDEX



707, 727-787

STANDARD WIRING PRACTICES MANUAL

CHAPTER 20

SWITCH (continued)

TOGGLE, M27724-23, QPL . . . . . 20-83-00

TOGGLE, M27724-24, QPL . . . . . 20-83-00

SWITCH ASSEMBLY

851-37()-(), EATON, LIGHTED PUSH BUTTON . . . . . 20-84-13

FUSE DIODE MODULE REPLACEMENT . . . . . 20-84-18

LAMP REPLACEMENT . . . . . 20-84-18

MICRO SWITCH 10()TL() SERIES . . . . . 20-83-11

SWITCH MODULE ASSEMBLY

RBDSC-(), BURNDY . . . . . 20-90-16

SYSTRON DONNER ENGINE FIRE DETECTOR

CONNECTOR, INSTALLATION TORQUE . . . . . 20-60-06

For training purposes only!

20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## T

## TA MANUFACTURING

TA025041-(), CLAMP, LOOP . . . . .	20-10-12
TA025097(), CLAMP, LOOP . . . . .	20-10-12
TA0930034-(), CLAMP, SADDLE . . . . .	20-10-12
TA025041-(), CLAMP, LOOP, TA MANUFACTURING . . . . .	20-10-12
TA025097(), CLAMP, LOOP, TA MANUFACTURING. . . . .	20-10-12
TA0930034-(), CLAMP, SADDLE, TA MANUFACTURING . . . . .	20-10-12

## TAPE

ADHESIVE, WIRE HARNESS TIE, BMS8-389, BOEING. . . . .	20-10-12
BMS 13-54 LACING, SUPPLIERS . . . . .	20-10-11
IDENTIFICATION, SUPPLIERS . . . . .	20-10-11
INSULATION, SUPPLIERS . . . . .	20-00-11
PROTECTIVE, SUPPLIERS. . . . .	20-00-11
TBS12-22-1, TERMINAL BLOCK, BURNDY . . . . .	20-90-12
TBS12-44-1, TERMINAL BLOCK, BURNDY . . . . .	20-90-12
TBS12-8-1, TERMINAL BLOCK, BURNDY . . . . .	20-90-12
TBS16-22-1, TERMINAL BLOCK, BURNDY . . . . .	20-90-12
TBS16-44-1, TERMINAL BLOCK, BURNDY . . . . .	20-90-12
TBS16-8-1, TERMINAL BLOCK, BURNDY . . . . .	20-90-12
TBS1620-22-1, TERMINAL BLOCK, BURNDY . . . . .	20-90-12
TBS1620-44-1, TERMINAL BLOCK, BURNDY . . . . .	20-90-12
TBS1620-8-1, TERMINAL BLOCK, BURNDY . . . . .	20-90-12
TBS20-22-1, TERMINAL BLOCK, BURNDY . . . . .	20-90-12
TBS20-42-1, TERMINAL BLOCK, BURNDY . . . . .	20-90-12
TBS20-44-1, TERMINAL BLOCK, BURNDY . . . . .	20-90-12
TBS20-62-1, TERMINAL BLOCK, BURNDY . . . . .	20-90-12
TBS20-8-1, TERMINAL BLOCK, BURNDY . . . . .	20-90-12

## TELEPHONE JACK CONNECTOR

JJ-055, KINGS ELECTRONICS . . . . .	20-64-13
-------------------------------------	----------

## TEMPERATURE AREAS

HIGH TEMPERATURE, LOCATIONS. . . . .	20-02-20
--------------------------------------	----------

## TEMPERATURE GRADE

MATERIAL . . . . .	20-00-11
--------------------	----------

## TERMAPOST SOLDER SLEEVE

D-141-0111, RAYCHEM . . . . .	20-72-18
D-141-0112, RAYCHEM . . . . .	20-72-18
D-141-0113, RAYCHEM . . . . .	20-72-18
D-141-0114, RAYCHEM . . . . .	20-72-18

## TERMINAL

69B41501-(), BOEING. . . . .	20-87-00
ALUMEL, 1-321898-1, AMP. . . . .	20-35-27
ALUMEL, 1387-4, THERMO-ELECTRIC . . . . .	20-35-27
ALUMINUM, 277148-3, AMP. . . . .	20-30-14
ALUMINUM, 277149-3, AMP. . . . .	20-30-14
ALUMINUM, 277151-1, AMP. . . . .	20-30-14
ALUMINUM, 60124, THOMAS & BETTS . . . . .	20-30-14

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****TERMINAL (continued)**

ALUMINUM, 65007, THOMAS & BETTS .....	20-30-14
ALUMINUM, 65011, THOMAS & BETTS .....	20-30-14
ALUMINUM, MS25435-11, QPL .....	20-30-14
ALUMINUM, MS25435-7, QPL .....	20-30-14
ASSEMBLY WITH 65B47866-() CABLE, 321893, AMP .....	20-35-11
BACT12G102, BOEING .....	20-20-12
BACT12G202, BOEING .....	20-20-12
BACT12G23, BOEING .....	20-20-12
BACT12G24, BOEING .....	20-20-12
BACT12G42, BOEING .....	20-20-12
BACT12G44, BOEING .....	20-20-12
BACT12G62, BOEING .....	20-20-12
BACT12G64, BOEING .....	20-20-12
BACT12G81, BOEING .....	20-20-12
BACT12G82, BOEING .....	20-20-12
CHROMEL, 1-321897-0, AMP .....	20-35-27
CHROMEL, 1387-3, THERMO-ELECTRIC .....	20-35-27
CIRCULAR AREA UNITS (CAU) .....	20-30-22
COPALUM, 1-52521-0, AMP .....	20-30-14
COPALUM, 1-52521-1, AMP .....	20-30-14
COPALUM, 227155-1, AMP .....	20-30-14
COPALUM, 277028-2, AMP .....	20-30-14
COPALUM, 277147-1, AMP .....	20-30-14
COPALUM, 277147-3, AMP .....	20-30-14
COPALUM, 277147-4, AMP .....	20-30-14
COPALUM, 277147-5, AMP .....	20-30-14
COPALUM, 277148-1, AMP .....	20-30-14
COPALUM, 277148-2, AMP .....	20-30-14
COPALUM, 277148-3, AMP .....	20-30-14
COPALUM, 277148-4, AMP .....	20-30-14
COPALUM, 277148-5, AMP .....	20-30-14
COPALUM, 277148-7, AMP .....	20-30-14
COPALUM, 277149-1, AMP .....	20-30-14
COPALUM, 277149-2, AMP .....	20-30-14
COPALUM, 277149-3, AMP .....	20-30-14
COPALUM, 277149-4, AMP .....	20-30-14
COPALUM, 277149-5, AMP .....	20-30-14
COPALUM, 277150-1, AMP .....	20-30-14
COPALUM, 277150-2, AMP .....	20-30-14
COPALUM, 277150-3, AMP .....	20-30-14
COPALUM, 277151-1, AMP .....	20-30-14
COPALUM, 277151-2, AMP .....	20-30-14
COPALUM, 277151-3, AMP .....	20-30-14
COPALUM, 277151-5, AMP .....	20-30-14
COPALUM, 277151-6, AMP .....	20-30-14
COPALUM, 277152-2, AMP .....	20-30-14
COPALUM, 277152-3, AMP .....	20-30-14
COPALUM, 277152-4, AMP .....	20-30-14

**20-CROSS REFERENCE INDEX**

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****TERMINAL (continued)**

COPALUM, 277152-5, AMP. . . . .	20-30-14
COPALUM, 277153-1, AMP. . . . .	20-30-14
COPALUM, 277154-1, AMP. . . . .	20-30-14
COPALUM, 280U0021, BOEING . . . . .	20-30-14
COPALUM, 52516, AMP. . . . .	20-30-14
COPALUM, 52517, AMP. . . . .	20-30-14
COPALUM, 52517-1, AMP. . . . .	20-30-14
COPALUM, 52517-2, AMP. . . . .	20-30-14
COPALUM, 52517-3, AMP. . . . .	20-30-14
COPALUM, 52517-4, AMP. . . . .	20-30-14
COPALUM, 52518, AMP. . . . .	20-30-14
COPALUM, 52518-1, AMP. . . . .	20-30-14
COPALUM, 52518-2, AMP. . . . .	20-30-14
COPALUM, 52518-3, AMP. . . . .	20-30-14
COPALUM, 52518-4, AMP. . . . .	20-30-14
COPALUM, 52519, AMP. . . . .	20-30-14
COPALUM, 52519-1, AMP. . . . .	20-30-14
COPALUM, 52519-2, AMP. . . . .	20-30-14
COPALUM, 52520, AMP. . . . .	20-30-14
COPALUM, 52520-1, AMP. . . . .	20-30-14
COPALUM, 52520-2, AMP. . . . .	20-30-14
COPALUM, 52520-3, AMP. . . . .	20-30-14
COPALUM, 52520-4, AMP. . . . .	20-30-14
COPALUM, 52520-5, AMP. . . . .	20-30-14
COPALUM, 52521-7, AMP. . . . .	20-30-14
COPALUM, 52521-9, AMP. . . . .	20-30-14
COPALUM, 52834-1, AMP. . . . .	20-30-14
COPALUM, 55832-1, AMP. . . . .	20-30-14
COPALUM, 55832-2, AMP. . . . .	20-30-14
COPALUM, 55833-1, AMP. . . . .	20-30-14
COPALUM, 55833-2, AMP. . . . .	20-30-14
COPALUM, 55834-1, AMP. . . . .	20-30-14
COPALUM, 55834-2, AMP. . . . .	20-30-14
COPALUM, 55835-1, AMP. . . . .	20-30-14
COPALUM, 55835-2, AMP. . . . .	20-30-14
COPALUM, 55836-1, AMP. . . . .	20-30-14
COPALUM, 55836-2, AMP. . . . .	20-30-14
COPALUM, 55837-1, AMP. . . . .	20-30-14
COPALUM, 55838-1, AMP. . . . .	20-30-14
COPALUM, 55839-1, AMP. . . . .	20-30-14
COPALUM, 55840-1, AMP. . . . .	20-30-14
DUAL GROUND, BACT12G102, BOEING. . . . .	20-20-12
DUAL GROUND, BACT12G202, BOEING. . . . .	20-20-12
DUAL GROUND, BACT12G23, BOEING . . . . .	20-20-12
DUAL GROUND, BACT12G24, BOEING . . . . .	20-20-12
DUAL GROUND, BACT12G42, BOEING . . . . .	20-20-12
DUAL GROUND, BACT12G44, BOEING . . . . .	20-20-12
DUAL GROUND, BACT12G62, BOEING . . . . .	20-20-12

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## TERMINAL (continued)

DUAL GROUND, BACT12G64, BOEING .....	20-20-12
DUAL GROUND, BACT12G81, BOEING .....	20-20-12
DUAL GROUND, BACT12G82, BOEING .....	20-20-12
DUAL GROUND, YBM25-L, BURNDY .....	20-20-12
DUAL GROUND, YBM25L, BURNDY .....	20-20-12
DUAL GROUND, YBM26-L, BURNDY .....	20-20-12
DUAL GROUND, YBM26L, BURNDY .....	20-20-12
DUAL GROUND, YBM2C-L, BURNDY .....	20-20-12
DUAL GROUND, YBM2C-L1, BURNDY .....	20-20-12
DUAL GROUND, YBM2CL, BURNDY .....	20-20-12
DUAL GROUND, YBM2CL1, BURNDY .....	20-20-12
DUAL GROUND, YBM4C-L, BURNDY .....	20-20-12
DUAL GROUND, YBM4C-L2, BURNDY .....	20-20-12
DUAL GROUND, YBM4CL, BURNDY .....	20-20-12
DUAL GROUND, YBM4CL2, BURNDY .....	20-20-12
DUAL GROUND, YBM6C-L, BURNDY .....	20-20-12
DUAL GROUND, YBM6C-L2, BURNDY .....	20-20-12
DUAL GROUND, YBM6CL, BURNDY .....	20-20-12
DUAL GROUND, YBM6CL2, BURNDY .....	20-20-12
DUAL GROUND, YBM8C, BURNDY .....	20-20-12
DUAL GROUND, YBM8C-T2, BURNDY .....	20-20-12
DUAL GROUND, YBM8CT2, BURNDY .....	20-20-12
RECEPTACLE, 60789-2, AMP .....	20-30-17
RECEPTACLE, 60790-1, AMP .....	20-30-17
RECEPTACLE, 60790-2, AMP .....	20-30-17
RECEPTACLE, 60888-4, AMP .....	20-30-17
RECEPTACLE, 60983-3, AMP .....	20-30-17
RECEPTACLE, 640024-1, AMP .....	20-30-17
SHIELD GROUND ASSEMBLY, BACT12AC12, BOEING .....	20-25-11
SHIELD GROUND ASSEMBLY, BACT12AC15, BOEING .....	20-25-11
SHIELD GROUND ASSEMBLY, BACT12AC19, BOEING .....	20-25-11
SHIELD GROUND ASSEMBLY, BACT12AC3, BOEING .....	20-25-11
SHIELD GROUND ASSEMBLY, BACT12AC8, BOEING .....	20-25-11
THERMOCOUPLE, 1-321897-0, AMP .....	20-35-27
THERMOCOUPLE, 1-321898-0, AMP .....	20-35-27
THERMOCOUPLE, 1387-3, THERMO-ELECTRIC .....	20-35-27
THERMOCOUPLE, 1387-4, THERMO-ELECTRIC .....	20-35-27
YBM25-L, BURNDY .....	20-20-12
YBM25L, BURNDY .....	20-20-12
YBM26-L, BURNDY .....	20-20-12
YBM26L, BURNDY .....	20-20-12
YBM2C-L, BURNDY .....	20-20-12
YBM2C-L1, BURNDY .....	20-20-12
YBM2CL, BURNDY .....	20-20-12
YBM2CL1, BURNDY .....	20-20-12
YBM4C-L, BURNDY .....	20-20-12
YBM4C-L2, BURNDY .....	20-20-12
YBM4CL, BURNDY .....	20-20-12

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20**

TERMINAL (continued)	
YBM4CL2, BURNDY .....	20-20-12
YBM6C-L, BURNDY .....	20-20-12
YBM6C-L2, BURNDY .....	20-20-12
YBM6CL, BURNDY .....	20-20-12
YBM6CL2, BURNDY .....	20-20-12
YBM8C, BURNDY .....	20-20-12
YBM8C-T2, BURNDY .....	20-20-12
YBM8CT2, BURNDY .....	20-20-12
TERMINAL ASSEMBLY	
ALUMEL TERMINAL .....	20-35-27
CHROMEL TERMINAL .....	20-35-27
MORE THAN ONE WIRE .....	20-30-22
MS25257 INDICATOR LIGHTS .....	20-40-13
MS25257 INDICATOR LIGHTS .....	20-84-19
THERMOCOUPLE WIRE .....	20-35-27
WIRE INSULATION SMALLER THAN INSULATION GRIP .....	20-30-22
WIRE SIZE SMALLER THAN CRIMP BARREL SIZE .....	20-30-22
WITH 65B47866-() SHIELDED CABLE .....	20-35-11
TERMINAL BLOCK	
TBS12-22-1, BURNDY .....	20-90-12
TBS12-44-1, BURNDY .....	20-90-12
TBS12-8-1, BURNDY .....	20-90-12
TBS16-22-1, BURNDY .....	20-90-12
TBS16-44-1, BURNDY .....	20-90-12
TBS16-8-1, BURNDY .....	20-90-12
TBS1620-22-1, BURNDY .....	20-90-12
TBS1620-44-1, BURNDY .....	20-90-12
TBS1620-8-1, BURNDY .....	20-90-12
TBS20-22-1, BURNDY .....	20-90-12
TBS20-42-1, BURNDY .....	20-90-12
TBS20-44-1, BURNDY .....	20-90-12
TBS20-62-1, BURNDY .....	20-90-12
TBS20-8-1, BURNDY .....	20-90-12
TERMINAL BLOCK MODULE	
280-30001-(), BOEING .....	20-83-02
421120-450, PRECISION CONNECTOR DESIGN .....	20-90-11
421120-452, PRECISION CONNECTOR DESIGN .....	20-90-11
421120-454, PRECISION CONNECTOR DESIGN .....	20-90-11
BACM15C1A, BOEING .....	20-90-11
BACM15C1B, BOEING .....	20-90-11
BACM15C2A, BOEING .....	20-90-11
BACM15C3A, BOEING .....	20-90-11
BACM15C3B, BOEING .....	20-90-11
BACM15C3C, BOEING .....	20-90-11
BACM15C3D, BOEING .....	20-90-11
BACM15C3E, BOEING .....	20-90-11
BACM15C3F, BOEING .....	20-90-11
M81714/6(), QPL .....	20-83-02

**20-CROSS REFERENCE INDEX**

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****TERMINAL BLOCK MODULE (continued)**

YHLZ-22, BURNDY .....	20-90-11
YHLZ-44, BURNDY .....	20-90-11
YHLZ-8, BURNDY .....	20-90-11
YHLZ16-2, BURNDY .....	20-90-11
YHLZ16-4, BURNDY .....	20-90-11
YHLZ16-8, BURNDY .....	20-90-11
YHLZD-11, BURNDY .....	20-90-11
YHLZD-14, BURNDY .....	20-90-11
YHLZD-15, BURNDY .....	20-90-11
YHLZD-23, BURNDY .....	20-90-11
YHLZD-24, BURNDY .....	20-90-11
YHLZD-26, BURNDY .....	20-90-11
YHLZD-28, BURNDY .....	20-90-11
YHLZD-29, BURNDY .....	20-90-11
YHLZD-30, BURNDY .....	20-90-11
YHLZD-31, BURNDY .....	20-90-11
YHLZD-32, BURNDY .....	20-90-11
YHLZD-33, BURNDY .....	20-90-11
YHLZD-34, BURNDY .....	20-90-11
YHLZD-35, BURNDY .....	20-90-11
YHLZD-38, BURNDY .....	20-90-11
YHLZD-39, BURNDY .....	20-90-11
YHLZD-9, BURNDY .....	20-90-11
YHLZR-1, BURNDY .....	20-90-11
YHLZR-10, BURNDY .....	20-90-11
YHLZR-11, BURNDY .....	20-90-11
YHLZR-13, BURNDY .....	20-90-11
YHLZR-14, BURNDY .....	20-90-11
YHLZR-15, BURNDY .....	20-90-11
YHLZR-16, BURNDY .....	20-90-11
YHLZR-17, BURNDY .....	20-90-11
YHLZR-18, BURNDY .....	20-90-11
YHLZR-19, BURNDY .....	20-90-11
YHLZR-2, BURNDY .....	20-90-11
YHLZR-20, BURNDY .....	20-90-11
YHLZR-21, BURNDY .....	20-90-11
YHLZR-22, BURNDY .....	20-90-11
YHLZR-23, BURNDY .....	20-90-11
YHLZR-24, BURNDY .....	20-90-11
YHLZR-25, BURNDY .....	20-90-11
YHLZR-26, BURNDY .....	20-90-11
YHLZR-27, BURNDY .....	20-90-11
YHLZR-28, BURNDY .....	20-90-11
YHLZR-29, BURNDY .....	20-90-11
YHLZR-3, BURNDY .....	20-90-11
YHLZR-30, BURNDY .....	20-90-11
YHLZR-31, BURNDY .....	20-90-11
YHLZR-32, BURNDY .....	20-90-11

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## TERMINAL BLOCK MODULE (continued)

YHLZR-33, BURNDY .....	20-90-11
YHLZR-34, BURNDY .....	20-90-11
YHLZR-35, BURNDY .....	20-90-11
YHLZR-36, BURNDY .....	20-90-11
YHLZR-37, BURNDY .....	20-90-11
YHLZR-38, BURNDY .....	20-90-11
YHLZR-39, BURNDY .....	20-90-11
YHLZR-4, BURNDY .....	20-90-11
YHLZR-40, BURNDY .....	20-90-11
YHLZR-41, BURNDY .....	20-90-11
YHLZR-42, BURNDY .....	20-90-11
YHLZR-43, BURNDY .....	20-90-11
YHLZR-44, BURNDY .....	20-90-11
YHLZR-47, BURNDY .....	20-90-11
YHLZR-5, BURNDY .....	20-90-11
YHLZR-6, BURNDY .....	20-90-11
YHLZR-7, BURNDY .....	20-90-11
YHLZR-8, BURNDY .....	20-90-11
YHLZR-9, BURNDY .....	20-90-11

## TERMINAL JUNCTION SYSTEM ASSEMBLY

M81714() SERIES I. ....	20-83-01
M81714() SERIES II .....	20-83-02

## TERMINAL LUG

10-60806-() CIRCUIT BREAKER, INSTALLATION TORQUE .....	20-30-00
10-61445-21 RELAY, INSTALLATION TORQUE .....	20-30-00
150456, AMP .....	20-30-11
150471, AMP .....	20-30-11
170-006-140 CIRCUIT BREAKER, INSTALLATION TORQUE .....	20-30-00
322334, AMP .....	20-23-39
60B00010-() CONTACTOR, INSTALLATION TORQUE .....	20-30-00
60B00021-() CONTACTOR, INSTALLATION TORQUE .....	20-30-00
60B00176-() ELCU, INSTALLATION TORQUE .....	20-30-00
90 DEGREE, UPRIGHT, BACT12E10, BOEING .....	20-30-11
90 DEGREE, UPRIGHT, BACT12E101, BOEING .....	20-30-11
90 DEGREE, UPRIGHT, BACT12E102, BOEING .....	20-30-11
90 DEGREE, UPRIGHT, BACT12E11, BOEING .....	20-30-11
90 DEGREE, UPRIGHT, BACT12E14, BOEING .....	20-30-11
90 DEGREE, UPRIGHT, BACT12E18, BOEING .....	20-30-11
90 DEGREE, UPRIGHT, BACT12E2, BOEING .....	20-30-11
90 DEGREE, UPRIGHT, BACT12E201, BOEING .....	20-30-11
90 DEGREE, UPRIGHT, BACT12E300, BOEING .....	20-30-11
90 DEGREE, UPRIGHT, BACT12E4, BOEING .....	20-30-11
90 DEGREE, UPRIGHT, BACT12E401, BOEING .....	20-30-11
90 DEGREE, UPRIGHT, BACT12E402, BOEING .....	20-30-11
90 DEGREE, UPRIGHT, BACT12E6, BOEING .....	20-30-11
90 DEGREE, UPRIGHT, BACT12E81, BOEING .....	20-30-11
ALUMINUM, INSTALLATION TORQUE .....	20-30-00
BACC18() CIRCUIT BREAKER, INSTALLATION TORQUE .....	20-30-00

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## TERMINAL LUG (continued)

CONNECTION TO EQUIPMENT . . . . .	20-30-00
COPPER, INSTALLATION TORQUE . . . . .	20-30-00
DUAL HOLE, YAV25-2L38-NK, BURNDY . . . . .	20-30-11
DUAL HOLE, YAV26-2L38-30-NK, BURNDY . . . . .	20-30-11
DUAL HOLE, YAV26-2L38-NK, BURNDY . . . . .	20-30-11
DUAL HOLE, YAV27-2L38-30-NK, BURNDY . . . . .	20-30-11
DUAL HOLE, YAV27-2L38-NK, BURNDY . . . . .	20-30-11
DUAL HOLE, YAV2C-2L38-NK, BURNDY . . . . .	20-30-11
DUAL HOLE, YAV4C-2L38-30-NK, BURNDY . . . . .	20-30-11
DUAL HOLE, YAV4C-2L38-NK, BURNDY . . . . .	20-30-11
DUAL HOLE, YAV6C-2L38-NK, BURNDY . . . . .	20-30-11
FLAG, BACT12G102, BOEING . . . . .	20-30-11
FLAG, BACT12G202, BOEING . . . . .	20-30-11
FLAG, BACT12G23, BOEING . . . . .	20-30-11
FLAG, BACT12G24, BOEING . . . . .	20-30-11
FLAG, BACT12G42, BOEING . . . . .	20-30-11
FLAG, BACT12G44, BOEING . . . . .	20-30-11
FLAG, BACT12G62, BOEING . . . . .	20-30-11
FLAG, BACT12G64, BOEING . . . . .	20-30-11
FLAG, BACT12G81, BOEING . . . . .	20-30-11
FLAG, BACT12G82, BOEING . . . . .	20-30-11
FUEL QUANTITY PROBE, INSTALLATION TORQUE . . . . .	20-30-00
GENERAL PURPOSE, 1-331456-0, AMP . . . . .	20-30-11
GENERAL PURPOSE, 1-331456-1, AMP . . . . .	20-30-11
GENERAL PURPOSE, 1-331457-0, AMP . . . . .	20-30-11
GENERAL PURPOSE, 1-331458-0, AMP . . . . .	20-30-11
GENERAL PURPOSE, 1-331458-1, AMP . . . . .	20-30-11
GENERAL PURPOSE, 1-331459-0, AMP . . . . .	20-30-11
GENERAL PURPOSE, 1-331460-0, AMP . . . . .	20-30-11
GENERAL PURPOSE, 1-331460-1, AMP . . . . .	20-30-11
GENERAL PURPOSE, 1-331461-0, AMP . . . . .	20-30-11
GENERAL PURPOSE, 320551, AMP . . . . .	20-30-11
GENERAL PURPOSE, 320553, AMP . . . . .	20-30-11
GENERAL PURPOSE, 320561, AMP . . . . .	20-30-11
GENERAL PURPOSE, 320563, AMP . . . . .	20-30-11
GENERAL PURPOSE, 320564, AMP . . . . .	20-30-11
GENERAL PURPOSE, 320567, AMP . . . . .	20-30-11
GENERAL PURPOSE, 320568, AMP . . . . .	20-30-11
GENERAL PURPOSE, 320569, AMP . . . . .	20-30-11
GENERAL PURPOSE, 320571, AMP . . . . .	20-30-11
GENERAL PURPOSE, 320572, AMP . . . . .	20-30-11
GENERAL PURPOSE, 320573, AMP . . . . .	20-30-11
GENERAL PURPOSE, 320576, AMP . . . . .	20-30-11
GENERAL PURPOSE, 320577, AMP . . . . .	20-30-11
GENERAL PURPOSE, 323912, AMP . . . . .	20-30-11
GENERAL PURPOSE, 323914, AMP . . . . .	20-30-11
GENERAL PURPOSE, 323915, AMP . . . . .	20-30-11
GENERAL PURPOSE, 323916, AMP . . . . .	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## TERMINAL LUG (continued)

GENERAL PURPOSE, 324043, AMP . . . . .	20-15-21
GENERAL PURPOSE, 324043, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324044, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324045, AMP . . . . .	20-15-21
GENERAL PURPOSE, 324045, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324046, AMP . . . . .	20-15-21
GENERAL PURPOSE, 324046, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324047, AMP . . . . .	20-15-21
GENERAL PURPOSE, 324047, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324048, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324049, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324050, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324051, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324052, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324053, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324054, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324055, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324056, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324057, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324058, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324075, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324082, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324083, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324084, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324085, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324114, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324159, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324187, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324188, AMP . . . . .	20-30-11
GENERAL PURPOSE, 324189, AMP . . . . .	20-30-11
GENERAL PURPOSE, 328849, AMP . . . . .	20-30-11
GENERAL PURPOSE, 328975, AMP . . . . .	20-30-11
GENERAL PURPOSE, 328998, AMP . . . . .	20-30-11
GENERAL PURPOSE, 329150, AMP . . . . .	20-30-11
GENERAL PURPOSE, 329151, AMP . . . . .	20-30-11
GENERAL PURPOSE, 331456, AMP . . . . .	20-30-11
GENERAL PURPOSE, 331457, AMP . . . . .	20-30-11
GENERAL PURPOSE, 331458, AMP . . . . .	20-30-11
GENERAL PURPOSE, 331459, AMP . . . . .	20-30-11
GENERAL PURPOSE, 331460, AMP . . . . .	20-30-11
GENERAL PURPOSE, 331461, AMP . . . . .	20-30-11
GENERAL PURPOSE, 331467, AMP . . . . .	20-30-11
GENERAL PURPOSE, 36149, AMP . . . . .	20-30-11
GENERAL PURPOSE, 36153, AMP . . . . .	20-30-11
GENERAL PURPOSE, 36161, AMP . . . . .	20-30-11
GENERAL PURPOSE, 40-416-6132U, SMITHS INDUSTRIES . . . . .	20-15-21
GENERAL PURPOSE, 40-716-6120, SMITHS INDUSTRIES . . . . .	20-15-21
GENERAL PURPOSE, 40-716-6120U, SMITHS INDUSTRIES . . . . .	20-15-21

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## TERMINAL LUG (continued)

GENERAL PURPOSE, 40-716-6121U, SMITHS INDUSTRIES . . . . .	20-15-21
GENERAL PURPOSE, 40-716-6123, SMITHS INDUSTRIES . . . . .	20-15-21
GENERAL PURPOSE, 40-716-6123U, SMITHS INDUSTRIES . . . . .	20-15-21
GENERAL PURPOSE, 40-716-6128U, SMITHS INDUSTRIES . . . . .	20-15-21
GENERAL PURPOSE, 40-716-6130U, SMITHS INDUSTRIES . . . . .	20-15-21
GENERAL PURPOSE, 40-716-6131U, SMITHS INDUSTRIES . . . . .	20-15-21
GENERAL PURPOSE, 40-716-6199, SMITHS INDUSTRIES . . . . .	20-15-21
GENERAL PURPOSE, 40-716-6201, SMITHS INDUSTRIES . . . . .	20-15-21
GENERAL PURPOSE, 51408-016, SMITHS INDUSTRIES . . . . .	20-15-21
GENERAL PURPOSE, 51408-017, SMITHS INDUSTRIES . . . . .	20-15-21
GENERAL PURPOSE, 51863, AMP . . . . .	20-30-11
GENERAL PURPOSE, 51864, AMP . . . . .	20-30-11
GENERAL PURPOSE, 51864-1, AMP. . . . .	20-30-11
GENERAL PURPOSE, 51864-2, AMP. . . . .	20-30-11
GENERAL PURPOSE, 53041, AMP . . . . .	20-30-11
GENERAL PURPOSE, 690-52622-1, THOMAS & BETTS . . . . .	20-30-11
GENERAL PURPOSE, 690-52622-2, THOMAS & BETTS . . . . .	20-30-11
GENERAL PURPOSE, 690-52622-3, THOMAS & BETTS . . . . .	20-30-11
GENERAL PURPOSE, AA-820-04, ETC . . . . .	20-30-11
GENERAL PURPOSE, AA-820-06, ETC . . . . .	20-30-11
GENERAL PURPOSE, AA-821-08, ETC . . . . .	20-30-11
GENERAL PURPOSE, AA-821-10, ETC . . . . .	20-30-11
GENERAL PURPOSE, AA-822-14, ETC . . . . .	20-30-11
GENERAL PURPOSE, AA-822-56, ETC . . . . .	20-30-11
GENERAL PURPOSE, AA-826-38, ETC . . . . .	20-30-11
GENERAL PURPOSE, AA-832-06, ETC . . . . .	20-30-11
GENERAL PURPOSE, ASSEMBLY WITH COPPER WIRE. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC1, BOEING . . . . .	20-30-11
GENERAL PURPOSE, BACT12AC10, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC11, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC12, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC13, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC14, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC15, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC16, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC17, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC18, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC19, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC2, BOEING . . . . .	20-30-11
GENERAL PURPOSE, BACT12AC20, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC21, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC22, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC23, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC24, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC25, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC26, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC27, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC28, BOEING. . . . .	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## TERMINAL LUG (continued)

GENERAL PURPOSE, BACT12AC3, BOEING . . . . .	20-30-11
GENERAL PURPOSE, BACT12AC32, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC33, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC34, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC35, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC36, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC37, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC4, BOEING . . . . .	20-30-11
GENERAL PURPOSE, BACT12AC40, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC41, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC42, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC43, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC44, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC45, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC46, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC47, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC48, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC49, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC5, BOEING . . . . .	20-30-11
GENERAL PURPOSE, BACT12AC50, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC51, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC52, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC53, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC54, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC55, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC56, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC57, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC58, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC59, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC6, BOEING . . . . .	20-30-11
GENERAL PURPOSE, BACT12AC60, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC61, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC62, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AC7, BOEING . . . . .	20-30-11
GENERAL PURPOSE, BACT12AC8, BOEING . . . . .	20-30-11
GENERAL PURPOSE, BACT12AC9, BOEING . . . . .	20-30-11
GENERAL PURPOSE, BACT12AL10, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AL11, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AL12, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AL13, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AL15, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AL16, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AL17, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AL18, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AL19, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AL2, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AL3, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AL4, BOEING. . . . .	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## TERMINAL LUG (continued)

GENERAL PURPOSE, BACT12AL5, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AL6, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BACT12AL9, BOEING. . . . .	20-30-11
GENERAL PURPOSE, BB-818-38, ETC . . . . .	20-30-11
GENERAL PURPOSE, BB-823-04, ETC . . . . .	20-30-11
GENERAL PURPOSE, BB-823-06, ETC . . . . .	20-30-11
GENERAL PURPOSE, BB-825-14, ETC . . . . .	20-30-11
GENERAL PURPOSE, BB-825-56, ETC . . . . .	20-30-11
GENERAL PURPOSE, BB-837-06, ETC . . . . .	20-30-11
GENERAL PURPOSE, BB-837-08, ETC . . . . .	20-30-11
GENERAL PURPOSE, BB-839-10, ETC . . . . .	20-30-11
GENERAL PURPOSE, C-828-06, ETC . . . . .	20-30-11
GENERAL PURPOSE, C-828-08, ETC . . . . .	20-30-11
GENERAL PURPOSE, C-828-10, ETC . . . . .	20-30-11
GENERAL PURPOSE, C-830-14, ETC . . . . .	20-30-11
GENERAL PURPOSE, C-830-56, ETC . . . . .	20-30-11
GENERAL PURPOSE, C-840-38, ETC . . . . .	20-30-11
GENERAL PURPOSE, D-756-08, MOLEX. . . . .	20-15-21
GENERAL PURPOSE, E-760-08, MOLEX. . . . .	20-15-21
GENERAL PURPOSE, MS25036-115 FLAT STOCK, QPL . . . . .	20-15-21
GENERAL PURPOSE, MS25036-116 FLAT STOCK, QPL . . . . .	20-15-21
GENERAL PURPOSE, MS25036-118 FLAT STOCK, QPL . . . . .	20-15-21
GENERAL PURPOSE, MS25036-123 FLAT STOCK, QPL . . . . .	20-15-21
GENERAL PURPOSE, MS25036-125 FLAT STOCK, QPL . . . . .	20-15-21
GENERAL PURPOSE, MS25036-126 FLAT STOCK, QPL . . . . .	20-15-21
GENERAL PURPOSE, MS25036-127 FLAT STOCK, QPL . . . . .	20-15-21
GENERAL PURPOSE, R1880SN, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R1881SN, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R1885SN, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R1890SN, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R1891SN, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R1894SN, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R1895SN, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R1896SN, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R1901SN, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R1902SN, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R1903SN, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R1906SN, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R1907SN, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R1908SN, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R2441SN, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R2442SN, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R5107N, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R5108N, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R5109N, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R5110N, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R5111N, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, R5112N, HOLLINGSWORTH . . . . .	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## TERMINAL LUG (continued)

GENERAL PURPOSE, R5117N, HOLLINGSWORTH . . . . .	20-30-11
GENERAL PURPOSE, RD9361, THOMAS & BETTS . . . . .	20-30-11
GENERAL PURPOSE, RD9711, THOMAS & BETTS . . . . .	20-30-11
GENERAL PURPOSE, RD9721, THOMAS & BETTS . . . . .	20-30-11
GENERAL PURPOSE, RD9731, THOMAS & BETTS . . . . .	20-30-11
GENERAL PURPOSE, RE9261, THOMAS & BETTS . . . . .	20-30-11
GENERAL PURPOSE, RE9711, THOMAS & BETTS . . . . .	20-30-11
GENERAL PURPOSE, RE9721, THOMAS & BETTS . . . . .	20-30-11
GENERAL PURPOSE, RE9731, THOMAS & BETTS . . . . .	20-30-11
GENERAL PURPOSE, RF9261, THOMAS & BETTS . . . . .	20-30-11
GENERAL PURPOSE, RF9711, THOMAS & BETTS . . . . .	20-30-11
GENERAL PURPOSE, RF9721, THOMAS & BETTS . . . . .	20-30-11
GENERAL PURPOSE, RF9731, THOMAS & BETTS . . . . .	20-30-11
GENERAL PURPOSE, YAEV25-G24, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV25-G25, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV25-G26, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV26-L, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV26-L2, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV26-L3, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV28-G1, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV28-G2, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV28-G3, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV28-G4, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV28-G5, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV2C-L, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV2C-L1, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV2C-L4, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV4C-L, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV6C-L, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV6C-L1, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV6C-L2, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV6C-L4, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV8C-L, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV8C-L1, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV8C-L14, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV8C-L2, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEV8C-L3, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEVAC-L2, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEVAC-L4, BURNDY . . . . .	20-30-11
GENERAL PURPOSE, YAEVAC-L5, BURNDY . . . . .	20-30-11
HARTMAN D-31C CONTACTOR, INSTALLATION TORQUE . . . . .	20-30-00
HEAVY DUTY, YAV14-H, BURNDY . . . . .	20-30-11
HEAVY DUTY, YAV14-H1, BURNDY . . . . .	20-30-11
HEAVY DUTY, YAV14G82, BURNDY . . . . .	20-30-11
HEAVY DUTY, YAV14G88, BURNDY . . . . .	20-30-11
HEAVY DUTY, YAV18-H, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, 280U0010-1, BOEING . . . . .	20-30-11
HIGH TEMPERATURE, 322344, AMP . . . . .	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## TERMINAL LUG (continued)

HIGH TEMPERATURE, 322362, AMP	20-30-11
HIGH TEMPERATURE, 322363, AMP	20-30-11
HIGH TEMPERATURE, 322364, AMP	20-30-11
HIGH TEMPERATURE, 322366, AMP	20-30-11
HIGH TEMPERATURE, 322367, AMP	20-30-11
HIGH TEMPERATURE, 322369, AMP	20-30-11
HIGH TEMPERATURE, 322371, AMP	20-30-11
HIGH TEMPERATURE, 322373, AMP	20-30-11
HIGH TEMPERATURE, 322374, AMP	20-30-11
HIGH TEMPERATURE, 322375, AMP	20-30-11
HIGH TEMPERATURE, 322376, AMP	20-30-11
HIGH TEMPERATURE, 322378, AMP	20-30-11
HIGH TEMPERATURE, 323064, AMP	20-30-11
HIGH TEMPERATURE, 323065, AMP	20-30-11
HIGH TEMPERATURE, 323066, AMP	20-30-11
HIGH TEMPERATURE, 323069, AMP	20-30-11
HIGH TEMPERATURE, 323199, AMP	20-30-11
HIGH TEMPERATURE, 323747, AMP	20-30-11
HIGH TEMPERATURE, 323752, AMP	20-30-11
HIGH TEMPERATURE, 325154, AMP	20-30-11
HIGH TEMPERATURE, 325155, AMP	20-30-11
HIGH TEMPERATURE, 325156, AMP	20-30-11
HIGH TEMPERATURE, 325157, AMP	20-30-11
HIGH TEMPERATURE, ASSEMBLY WITH COPPER WIRE	20-30-11
HIGH TEMPERATURE, BACT12M1-1, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M1-2, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M1-3, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M1-4, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M1-5, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M130, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M139, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M140, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M141, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M144, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M145, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M147, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M148, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M173, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M198, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M2, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M2-1, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M2-2, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M2-3, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M2-4, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M2-5, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M25-1, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M25-2, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M25-3, BOEING	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## TERMINAL LUG (continued)

HIGH TEMPERATURE, BACT12M25-4, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M25-5, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M26-1, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M26-2, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M26-3, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M26-4, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M26-5, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M26-6, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M27-1, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M27-2, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M27-3, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M27-4, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M28-1, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M28-2, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M28-3, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M28-4, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M28-5, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M28-6, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M4, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M4-1, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M4-2, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M4-3, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M4-4, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M4-5, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M5, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M6-1, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M6-2, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M6-3, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M6-4, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M6-5, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M7, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M8, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M8-1, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M8-2, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M8-3, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M8-4, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M8-5, BOEING	20-30-11
HIGH TEMPERATURE, BACT12M8-6, BOEING	20-30-11
HIGH TEMPERATURE, YAD18HNK, BURNDY	20-30-11
HIGH TEMPERATURE, YAV14G88, BURNDY	20-30-11
HIGH TEMPERATURE, YAV1C-L1NK, BURNDY	20-30-11
HIGH TEMPERATURE, YAV1C-L2NK, BURNDY	20-30-11
HIGH TEMPERATURE, YAV1C-L3NK, BURNDY	20-30-11
HIGH TEMPERATURE, YAV1C-L6NK, BURNDY	20-30-11
HIGH TEMPERATURE, YAV1C-LNK, BURNDY	20-30-11
HIGH TEMPERATURE, YAV1CL1NK, FCI	20-30-11
HIGH TEMPERATURE, YAV1CL2NK, FCI	20-30-11
HIGH TEMPERATURE, YAV1CLNK, FCI	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## TERMINAL LUG (continued)

HIGH TEMPERATURE, YAV25-L1NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV25-L2NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV25-L3NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV25-L4NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV25-LNK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV25L1NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV25L2NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV25L3NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV25L4NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV25LNK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV26-L12NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV26-L1NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV26-L22NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV26-L2NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV26-L3NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV26-LNK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV26L12NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV26L1NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV26L22NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV26L3NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV26LNK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV27-L15NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV27-L1NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV27-L20NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV27-LNK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV27L1NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV27LNK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV28-L12NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV28-L13NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV28-L14NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV28-L54NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV28-L56NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV28-LNK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV28L12NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV28L14NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV28LNK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV2C-L1NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV2C-L2NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV2C-L3NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV2C-L4NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV2C-LNK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV2CL1NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV2CL2NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV2CL3NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV2CL4NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV2CLNK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV4C-L2NK, BURNDY . . . . .	20-30-11
HIGH TEMPERATURE, YAV4C-L3NK, BURNDY . . . . .	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## TERMINAL LUG (continued)

HIGH TEMPERATURE, YAV4C-L4NK, BURNDY. . . . .	20-30-11
HIGH TEMPERATURE, YAV4C-L5NK, BURNDY. . . . .	20-30-11
HIGH TEMPERATURE, YAV4C-LNK, BURNDY. . . . .	20-30-11
HIGH TEMPERATURE, YAV4CL2NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV4CL3NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV4CL5NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV4CLNK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV6C-L10NK, BURNDY. . . . .	20-30-11
HIGH TEMPERATURE, YAV6C-L1NK, BURNDY. . . . .	20-30-11
HIGH TEMPERATURE, YAV6C-L2NK, BURNDY. . . . .	20-30-11
HIGH TEMPERATURE, YAV6C-L4NK, BURNDY. . . . .	20-30-11
HIGH TEMPERATURE, YAV6C-LNK, BURNDY. . . . .	20-30-11
HIGH TEMPERATURE, YAV6CL10NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV6CL1NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV6CL2NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV6CL4NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV6CLNK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV8C-L14NK, BURNDY. . . . .	20-30-11
HIGH TEMPERATURE, YAV8C-L1NK, BURNDY. . . . .	20-30-11
HIGH TEMPERATURE, YAV8C-L2NK, BURNDY. . . . .	20-30-11
HIGH TEMPERATURE, YAV8C-L3NK, BURNDY. . . . .	20-30-11
HIGH TEMPERATURE, YAV8C-L4NK, BURNDY. . . . .	20-30-11
HIGH TEMPERATURE, YAV8C-LNK, BURNDY. . . . .	20-30-11
HIGH TEMPERATURE, YAV8CL14NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV8CL1NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV8CL2NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV8CL3NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV8CL4NK, FCI . . . . .	20-30-11
HIGH TEMPERATURE, YAV8CLNK, FCI . . . . .	20-30-11
IDG GENERATOR, INSTALLATION TORQUE . . . . .	20-30-00
INSTALLATION, GROUND STUD, TORQUE. . . . .	20-20-00
INSTALLATION, PERMITTED BENDS . . . . .	20-30-00
JAY-EL 10167 TIME DELAY, INSTALLATION. . . . .	20-30-00
LEACH HT-C7N-060 RELAY, INSTALLATION TORQUE . . . . .	20-30-00
MS20659-101, QPL. . . . .	20-30-11
MS20659-102, QPL. . . . .	20-30-11
MS20659-103, QPL. . . . .	20-30-11
MS20659-104, QPL. . . . .	20-30-11
MS20659-105, QPL. . . . .	20-30-11
MS20659-106, QPL. . . . .	20-30-11
MS20659-107, QPL. . . . .	20-30-11
MS20659-108, QPL. . . . .	20-30-11
MS20659-109, QPL. . . . .	20-30-11
MS20659-110, QPL. . . . .	20-30-11
MS20659-111, QPL. . . . .	20-30-11
MS20659-112, QPL. . . . .	20-30-11
MS20659-113, QPL. . . . .	20-30-11
MS20659-114, QPL. . . . .	20-30-11

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****TERMINAL LUG (continued)**

MS20659-115, QPL. ....	20-30-11
MS20659-116, QPL. ....	20-30-11
MS20659-117, QPL. ....	20-30-11
MS20659-118, QPL. ....	20-30-11
MS20659-119, QPL. ....	20-30-11
MS20659-120, QPL. ....	20-30-11
MS20659-121, QPL. ....	20-30-11
MS20659-122, QPL. ....	20-30-11
MS20659-123, QPL. ....	20-30-11
MS20659-124, QPL. ....	20-30-11
MS20659-125, QPL. ....	20-30-11
MS20659-126, QPL. ....	20-30-11
MS20659-127, QPL. ....	20-30-11
MS20659-128, QPL. ....	20-30-11
MS20659-129, QPL. ....	20-30-11
MS20659-130, QPL. ....	20-30-11
MS20659-131, QPL. ....	20-30-11
MS20659-132, QPL. ....	20-30-11
MS20659-133, QPL. ....	20-30-11
MS20659-134, QPL. ....	20-30-11
MS20659-135, QPL. ....	20-30-11
MS20659-136, QPL. ....	20-30-11
MS20659-137, QPL. ....	20-30-11
MS20659-138, QPL. ....	20-30-11
MS20659-139, QPL. ....	20-30-11
MS20659-140, QPL. ....	20-30-11
MS20659-141, QPL. ....	20-30-11
MS20659-142, QPL. ....	20-30-11
MS20659-143, QPL. ....	20-30-11
MS20659-144, QPL. ....	20-30-11
MS20659-145, QPL. ....	20-30-11
MS20659-146, QPL. ....	20-30-11
MS20659-147, QPL. ....	20-30-11
MS20659-148, QPL. ....	20-30-11
MS20659-149, QPL. ....	20-30-11
MS20659-150, QPL. ....	20-30-11
MS20659-151, QPL. ....	20-30-11
MS20659-152, QPL. ....	20-30-11
MS20659-153, QPL. ....	20-30-11
MS20659-154, QPL. ....	20-30-11
MS20659-155, QPL. ....	20-30-11
MS20659-156, QPL. ....	20-30-11
MS20659-157, QPL. ....	20-30-11
MS20659-158, QPL. ....	20-30-11
MS20659-159, QPL. ....	20-30-11
MS20659-160, QPL. ....	20-30-11
MS20659-161, QPL. ....	20-30-11
MS20659-162, QPL. ....	20-30-11

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## TERMINAL LUG (continued)

MS20659-163, QPL. . . . .	20-30-11
MS20659-164, QPL. . . . .	20-30-11
MS20659-165, QPL. . . . .	20-30-11
MS20659-166, QPL. . . . .	20-30-11
MS27212-() TERMINAL STRIP, INSTALLATION TORQUE. . . . .	20-30-00
MS27751-2 RELAY, INSTALLATION TORQUE. . . . .	20-30-00
MS90362-() EXTERNAL POWER CONNECTOR, INSTALLATION TORQUE. . . . .	20-30-00
NICKEL, HIGH TEMPERATURE, 321892, AMP. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, 321893, AMP. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, 321894, AMP. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, 321897, AMP. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, 321898, AMP. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, 322320, AMP. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, 322332, AMP. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, 322337, AMP. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, 322338, AMP. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, 322341, AMP. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, 323749, AMP. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, 323750, AMP. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, 323751, AMP. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, BACT12AV011, BOEING. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, BACT12AV012, BOEING. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, BACT12AV013, BOEING. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, BACT12AV014, BOEING. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, BACT12AV021, BOEING. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, BACT12AV022, BOEING. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, BACT12AV023, BOEING. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, BACT12AV024, BOEING. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, BACT12AV031, BOEING. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, BACT12AV032, BOEING. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, BACT12AV033, BOEING. . . . .	20-30-11
NICKEL, HIGH TEMPERATURE, BACT12AV034, BOEING. . . . .	20-30-11
RESTRICTIVE ENTRY, 1-320551-2, AMP. . . . .	20-15-21
RESTRICTIVE ENTRY, 1-320551-2, AMP. . . . .	20-30-11
RESTRICTIVE ENTRY, 1-320551-3, AMP. . . . .	20-15-21
RESTRICTIVE ENTRY, 1-320551-3, AMP. . . . .	20-30-11
RESTRICTIVE ENTRY, 1-320551-4, AMP. . . . .	20-15-21
RESTRICTIVE ENTRY, 1-320551-4, AMP. . . . .	20-30-11
RESTRICTIVE ENTRY, 1-51864-0, AMP. . . . .	20-15-21
RESTRICTIVE ENTRY, 1-51864-0, AMP. . . . .	20-30-11
RESTRICTIVE ENTRY, 1-51864-1, AMP. . . . .	20-15-21
RESTRICTIVE ENTRY, 1-51864-1, AMP. . . . .	20-30-11
RESTRICTIVE ENTRY, 2-320563-3, AMP. . . . .	20-30-11
RESTRICTIVE ENTRY, 2-320568-2, AMP. . . . .	20-15-21
RESTRICTIVE ENTRY, 2-320568-2, AMP. . . . .	20-30-11
RESTRICTIVE ENTRY, 2-320568-3, AMP. . . . .	20-15-21
RESTRICTIVE ENTRY, 2-320568-3, AMP. . . . .	20-30-11
RESTRICTIVE ENTRY, 2-320569-5, AMP. . . . .	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## TERMINAL LUG (continued)

RESTRICTIVE ENTRY, 2-320569-6, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-320571-3, AMP . . . . .	20-15-21
RESTRICTIVE ENTRY, 2-320571-3, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-320571-4, AMP . . . . .	20-15-21
RESTRICTIVE ENTRY, 2-320571-4, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-320571-5, AMP . . . . .	20-15-21
RESTRICTIVE ENTRY, 2-320571-5, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-320572-2, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-320572-3, AMP . . . . .	20-15-21
RESTRICTIVE ENTRY, 2-320572-3, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-320572-4, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-320573-1, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-320573-2, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-320573-3, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-320575-2, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-320575-3, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-320576-2, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-320576-3, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-320577-1, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-320577-2, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-36153-3, AMP . . . . .	20-15-21
RESTRICTIVE ENTRY, 2-36153-3, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-36153-4, AMP . . . . .	20-15-21
RESTRICTIVE ENTRY, 2-36153-4, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-36153-5, AMP . . . . .	20-15-21
RESTRICTIVE ENTRY, 2-36153-5, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-36161-3, AMP . . . . .	20-15-21
RESTRICTIVE ENTRY, 2-36161-3, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-36161-4, AMP . . . . .	20-15-21
RESTRICTIVE ENTRY, 2-36161-4, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-36161-5, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 2-36161-6, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 3-320564-1, AMP . . . . .	20-30-11
RESTRICTIVE ENTRY, 40-716-1140, SMITHS INDUSTRIES . . . . .	20-15-21
RESTRICTIVE ENTRY, 40-716-1155, SMITHS INDUSTRIES . . . . .	20-15-21
RESTRICTIVE ENTRY, 40-716-1156, SMITHS INDUSTRIES . . . . .	20-15-21
RESTRICTIVE ENTRY, 40-716-1157, SMITHS INDUSTRIES . . . . .	20-15-21
RESTRICTIVE ENTRY, 40-716-1158, SMITHS INDUSTRIES . . . . .	20-15-21
RESTRICTIVE ENTRY, 40-716-1159, SMITHS INDUSTRIES . . . . .	20-15-21
RESTRICTIVE ENTRY, 40-716-1160, SMITHS INDUSTRIES . . . . .	20-15-21
RESTRICTIVE ENTRY, 40-716-1161, SMITHS INDUSTRIES . . . . .	20-15-21
RESTRICTIVE ENTRY, 40-716-1162, SMITHS INDUSTRIES . . . . .	20-15-21
RESTRICTIVE ENTRY, 40-716-1163, SMITHS INDUSTRIES . . . . .	20-15-21
RESTRICTIVE ENTRY, 40-716-1164, SMITHS INDUSTRIES . . . . .	20-15-21
RESTRICTIVE ENTRY, 40-716-1165, SMITHS INDUSTRIES . . . . .	20-15-21
RESTRICTIVE ENTRY, 40-716-1166, SMITHS INDUSTRIES . . . . .	20-15-21
RESTRICTIVE ENTRY, 40-716-1167, SMITHS INDUSTRIES . . . . .	20-15-21
RESTRICTIVE ENTRY, 40-716-1168, SMITHS INDUSTRIES . . . . .	20-15-21

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## TERMINAL LUG (continued)

RESTRICTIVE ENTRY, 40-716-1169, SMITHS INDUSTRIES. ....	20-15-21
RESTRICTIVE ENTRY, 40-716-1170, SMITHS INDUSTRIES. ....	20-15-21
RESTRICTIVE ENTRY, 40-716-1172, SMITHS INDUSTRIES. ....	20-15-21
RESTRICTIVE ENTRY, 40-716-1173, SMITHS INDUSTRIES. ....	20-15-21
RESTRICTIVE ENTRY, 40-716-1174, SMITHS INDUSTRIES. ....	20-15-21
RESTRICTIVE ENTRY, 40-716-1175, SMITHS INDUSTRIES. ....	20-15-21
RESTRICTIVE ENTRY, 40-716-1177, SMITHS INDUSTRIES. ....	20-15-21
RESTRICTIVE ENTRY, 40-716-1178, SMITHS INDUSTRIES. ....	20-15-21
RESTRICTIVE ENTRY, 40-716-1179, SMITHS INDUSTRIES. ....	20-15-21
RESTRICTIVE ENTRY, 40-716-1180, SMITHS INDUSTRIES. ....	20-15-21
RESTRICTIVE ENTRY, 40-716-1181, SMITHS INDUSTRIES. ....	20-15-21
RESTRICTIVE ENTRY, 51863-2, AMP. ....	20-15-21
RESTRICTIVE ENTRY, 51863-2, AMP. ....	20-30-11
RESTRICTIVE ENTRY, 51863-3, AMP. ....	20-15-21
RESTRICTIVE ENTRY, 51863-3, AMP. ....	20-30-11
RESTRICTIVE ENTRY, 51863-4, AMP. ....	20-15-21
RESTRICTIVE ENTRY, 51863-4, AMP. ....	20-30-11
RESTRICTIVE ENTRY, 51864-6, AMP. ....	20-15-21
RESTRICTIVE ENTRY, 51864-6, AMP. ....	20-30-11
RESTRICTIVE ENTRY, 51864-7, AMP. ....	20-15-21
RESTRICTIVE ENTRY, 51864-7, AMP. ....	20-30-11
RESTRICTIVE ENTRY, 51864-8, AMP. ....	20-15-21
RESTRICTIVE ENTRY, 51864-8, AMP. ....	20-30-11
RESTRICTIVE ENTRY, 51864-9, AMP. ....	20-15-21
RESTRICTIVE ENTRY, 51864-9, AMP. ....	20-30-11
RESTRICTIVE ENTRY, 52273, AMP. ....	20-15-21
RESTRICTIVE ENTRY, 52273, AMP. ....	20-30-11
RESTRICTIVE ENTRY, 52273-1, AMP. ....	20-15-21
RESTRICTIVE ENTRY, 52273-1, AMP. ....	20-30-11
RESTRICTIVE ENTRY, 52273-2, AMP. ....	20-15-21
RESTRICTIVE ENTRY, 52273-2, AMP. ....	20-30-11
RESTRICTIVE ENTRY, 53054, AMP. ....	20-30-11
RESTRICTIVE ENTRY, 53055, AMP. ....	20-30-11
RESTRICTIVE ENTRY, 53056, AMP. ....	20-30-11
RESTRICTIVE ENTRY, 53057, AMP. ....	20-30-11
RESTRICTIVE ENTRY, BACT12AR101, BOEING. ....	20-30-11
RESTRICTIVE ENTRY, BACT12AR102, BOEING. ....	20-30-11
RESTRICTIVE ENTRY, BACT12AR103, BOEING. ....	20-30-11
RESTRICTIVE ENTRY, BACT12AR104, BOEING. ....	20-30-11
RESTRICTIVE ENTRY, BACT12AR105, BOEING. ....	20-30-11
RESTRICTIVE ENTRY, BACT12AR106, BOEING. ....	20-30-11
RESTRICTIVE ENTRY, BACT12AR121, BOEING. ....	20-30-11
RESTRICTIVE ENTRY, BACT12AR122, BOEING. ....	20-30-11
RESTRICTIVE ENTRY, BACT12AR123, BOEING. ....	20-30-11
RESTRICTIVE ENTRY, BACT12AR124, BOEING. ....	20-30-11
RESTRICTIVE ENTRY, BACT12AR125, BOEING. ....	20-30-11
RESTRICTIVE ENTRY, BACT12AR126, BOEING. ....	20-30-11
RESTRICTIVE ENTRY, BACT12AR141, BOEING. ....	20-30-11

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### TERMINAL LUG (continued)

RESTRICTIVE ENTRY, BACT12AR142, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR143, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR144, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR161, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR162, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR163, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR164, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR165, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR166, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR181, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR182, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR183, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR184, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR185, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR186, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR187, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR201, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR202, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR203, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR204, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR205, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR206, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR207, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR221, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR222, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR223, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR224, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR225, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR226, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR227, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR241, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR242, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR243, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR244, BOEING	20-30-11
RESTRICTIVE ENTRY, BACT12AR245, BOEING	20-30-11
S281T003-() ELCU, INSTALLATION TORQUE	20-30-00
TRANSFORMER, INSTALLATION TORQUE	20-30-00
UPRIGHT, YAV25RSNK, BURNDY	20-30-11
UPRIGHT, YAV4CRS2NK, BURNDY	20-30-11

### TERMINAL MODULE

001755-101-02, AIR LB	20-15-48
001755-305-02, AIR LB	20-15-48
001756-202-02, AIR LB	20-15-48
001756-204-02, AIR LB	20-15-48
001756-205-02, AIR LB	20-15-48
001756-206-02, AIR LB	20-15-48
001756-207-02, AIR LB	20-15-48
40-718-5238, SMITHS INDUSTRIES	20-15-48

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## TERMINAL MODULE (continued)

40-718-5240, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5254, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5256, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5257, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5258, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-5259, SMITHS INDUSTRIES . . . . .	20-15-48
53710-001, SMITHS INDUSTRIES . . . . .	20-15-49
53710-002, SMITHS INDUSTRIES . . . . .	20-15-49
53710-003, SMITHS INDUSTRIES . . . . .	20-15-49
DIODE, 001765-101-02, AIR LB . . . . .	20-15-48
DIODE, 40-718-5282, SMITHS INDUSTRIES . . . . .	20-15-48
M81714/1-(), QPL . . . . .	20-83-01
M81714/17-(), QPL . . . . .	20-83-01
M81714/2-(), QPL . . . . .	20-83-01
M81714/3-(), QPL . . . . .	20-83-01
M81714/4-(), QPL . . . . .	20-83-01
M81714/6-(), QPL . . . . .	20-83-01
M81714/60-22-01, QPL . . . . .	20-15-49
M81714/60-22-02, QPL . . . . .	20-15-49
M81714/60-22-06, QPL . . . . .	20-15-49
M81714/7-(), QPL . . . . .	20-83-01
M81714/8-(), QPL . . . . .	20-83-01
M81714/9-(), QPL . . . . .	20-83-01
MDTB20-4, FRAMATOME CONNECTORS INTERNATIONAL . . . . .	20-90-15
MDTB20-8, FRAMATOME CONNECTORS INTERNATIONAL . . . . .	20-90-15
MRFB()E(), MATRIX SCIENCE . . . . .	20-83-01
MRTB()E(), MATRIX SCIENCE . . . . .	20-83-01
RBTB16-3, SOURIAU . . . . .	20-90-15
RBTB16-6, SOURIAU . . . . .	20-90-15
RBTB20-2, SOURIAU . . . . .	20-90-15
RBTB20-4, SOURIAU . . . . .	20-90-15
RBTB20-8, SOURIAU . . . . .	20-90-15
RESISTOR, 001766-101-02, AIR LB . . . . .	20-15-48
RESISTOR, 001766-103-02, AIR LB . . . . .	20-15-48
RESISTOR, 001766-107-02, AIR LB . . . . .	20-15-48
RESISTOR, 001766-108-02, AIR LB . . . . .	20-15-48
RESISTOR, 001766-111-02, AIR LB . . . . .	20-15-48
RESISTOR, 001766-112-02, AIR LB . . . . .	20-15-48
RESISTOR, 001767-101-02, AIR LB . . . . .	20-15-48
RESISTOR, 001767-102-02, AIR LB . . . . .	20-15-48
RESISTOR, 001767-103-02, AIR LB . . . . .	20-15-48
RESISTOR, 001767-107-02, AIR LB . . . . .	20-15-48
RESISTOR, 001767-109-02, AIR LB . . . . .	20-15-48
RESISTOR, 001767-110-02, AIR LB . . . . .	20-15-48
RESISTOR, 001767-111-02, AIR LB . . . . .	20-15-48
RESISTOR, 001768-101-02, AIR LB . . . . .	20-15-48
RESISTOR, 001768-103-02, AIR LB . . . . .	20-15-48
RESISTOR, 40-718-5266, SMITHS INDUSTRIES . . . . .	20-15-48

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### TERMINAL MODULE (continued)

RESISTOR, 40-718-5268, SMITHS INDUSTRIES . . . . .	20-15-48
RESISTOR, 40-718-5269, SMITHS INDUSTRIES . . . . .	20-15-48
RESISTOR, 40-718-5270, SMITHS INDUSTRIES . . . . .	20-15-48
RESISTOR, 40-718-5271, SMITHS INDUSTRIES . . . . .	20-15-48
RESISTOR, 40-718-5272, SMITHS INDUSTRIES . . . . .	20-15-48
RESISTOR, 40-718-5273, SMITHS INDUSTRIES . . . . .	20-15-48
RESISTOR, 40-718-5274, SMITHS INDUSTRIES . . . . .	20-15-48
RESISTOR, 40-718-5276, SMITHS INDUSTRIES . . . . .	20-15-48
RESISTOR, 40-718-5278, SMITHS INDUSTRIES . . . . .	20-15-48
RESISTOR, 40-718-5290, SMITHS INDUSTRIES . . . . .	20-15-48
RESISTOR, 40-718-5404, SMITHS INDUSTRIES . . . . .	20-15-48
RESISTOR, 40-718-5405, SMITHS INDUSTRIES . . . . .	20-15-48
RESISTOR, 40-718-5406, SMITHS INDUSTRIES . . . . .	20-15-48
RESISTOR, 40-718-5407, SMITHS INDUSTRIES . . . . .	20-15-48
S280W555-102, BOEING . . . . .	20-90-15
S280W555-104, BOEING . . . . .	20-90-15
S280W555-108, BOEING . . . . .	20-90-15
S280W555-203, BOEING . . . . .	20-90-15
S280W555-206, BOEING . . . . .	20-90-15
STUD, 0011-0000-053BB, AIR LB . . . . .	20-15-48
STUD, 40-718-5285, SMITHS INDUSTRIES . . . . .	20-15-48
TJM11260(), PRECISION CONNECTOR DESIGN . . . . .	20-83-01
TERMINAL MODULE BRACKET	
8400-0()-(), MATRIX SCIENCE . . . . .	20-83-01
M81714/29-(), QPL . . . . .	20-83-01
TERMINAL MODULE TRACK	
001751-102-00, AIR LB . . . . .	20-15-48
001751-103-00, AIR LB . . . . .	20-15-48
001751-104-00, AIR LB . . . . .	20-15-48
001751-106-00, AIR LB . . . . .	20-15-48
001751-108-00, AIR LB . . . . .	20-15-48
001751-110-00, AIR LB . . . . .	20-15-48
001751-114-00, AIR LB . . . . .	20-15-48
001751-118-00, AIR LB . . . . .	20-15-48
40-718-938, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-939, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-940, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-942, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-944, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-946, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-950, SMITHS INDUSTRIES . . . . .	20-15-48
40-718-960, SMITHS INDUSTRIES . . . . .	20-15-48
53270-002, SMITHS INDUSTRIES . . . . .	20-15-49
53270-003, SMITHS INDUSTRIES . . . . .	20-15-49
53270-005, SMITHS INDUSTRIES . . . . .	20-15-49
99537-(), MATRIX SCIENCE . . . . .	20-83-01
M81714/10-(), QPL . . . . .	20-83-01
M81714/14-(), QPL . . . . .	20-83-01

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## TERMINAL MODULE TRACK (continued)

M81714/16-(), QPL . . . . .	20-83-01
M81714/5-(), QPL . . . . .	20-83-01
M81714/67-04, QPL . . . . .	20-15-49
M81714/67-07, QPL . . . . .	20-15-49
M81714/67-08, QPL . . . . .	20-15-49
RBGT10, SOURIAU . . . . .	20-90-15
RBGT14, SOURIAU . . . . .	20-90-15
RBGT16, SOURIAU . . . . .	20-90-15
RBGT2, SOURIAU . . . . .	20-90-15
RBGT22, SOURIAU . . . . .	20-90-15
RBGT26, SOURIAU . . . . .	20-90-15
RBGT4, SOURIAU . . . . .	20-90-15
RBGT6, SOURIAU . . . . .	20-90-15
RBGT8, SOURIAU . . . . .	20-90-15
RBMT10, SOURIAU . . . . .	20-90-15
RBMT14, SOURIAU . . . . .	20-90-15
RBMT16, SOURIAU . . . . .	20-90-15
RBMT2, SOURIAU . . . . .	20-90-15
RBMT22, SOURIAU . . . . .	20-90-15
RBMT26, SOURIAU . . . . .	20-90-15
RBMT4, SOURIAU . . . . .	20-90-15
RBMT6, SOURIAU . . . . .	20-90-15
RBMT8, SOURIAU . . . . .	20-90-15
S280W555-502, BOEING . . . . .	20-90-15
S280W555-504, BOEING . . . . .	20-90-15
S280W555-506, BOEING . . . . .	20-90-15
S280W555-508, BOEING . . . . .	20-90-15
S280W555-510, BOEING . . . . .	20-90-15
S280W555-514, BOEING . . . . .	20-90-15
S280W555-516, BOEING . . . . .	20-90-15
S280W555-522, BOEING . . . . .	20-90-15
S280W555-526, BOEING . . . . .	20-90-15
S280W555-5502, BOEING . . . . .	20-90-15
S280W555-5504, BOEING . . . . .	20-90-15
S280W555-5506, BOEING . . . . .	20-90-15
S280W555-5508, BOEING . . . . .	20-90-15
S280W555-5510, BOEING . . . . .	20-90-15
S280W555-5514, BOEING . . . . .	20-90-15
S280W555-5516, BOEING . . . . .	20-90-15
S280W555-5518, BOEING . . . . .	20-90-15
S280W555-5522, BOEING . . . . .	20-90-15
S280W555-5526, BOEING . . . . .	20-90-15
S280W555-602, BOEING . . . . .	20-90-15
S280W555-604, BOEING . . . . .	20-90-15
S280W555-606, BOEING . . . . .	20-90-15
S280W555-608, BOEING . . . . .	20-90-15
S280W555-610, BOEING . . . . .	20-90-15
S280W555-614, BOEING . . . . .	20-90-15

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

## TERMINAL MODULE TRACK (continued)

S280W555-616, BOEING . . . . .	20-90-15
S280W555-622, BOEING . . . . .	20-90-15
S280W555-626, BOEING . . . . .	20-90-15
S280W555-6602, BOEING . . . . .	20-90-15
S280W555-6604, BOEING . . . . .	20-90-15
S280W555-6606, BOEING . . . . .	20-90-15
S280W555-6610, BOEING . . . . .	20-90-15
S280W555-6614, BOEING . . . . .	20-90-15
S280W555-6616, BOEING . . . . .	20-90-15
TERMINAL STUD MODULE	
0011-0000-053BB, AIR LB. . . . .	20-15-48
40-718-5285, SMITHS INDUSTRIES . . . . .	20-15-48
THERMO-ELECTRIC	
1387-3, TERMINAL, THERMOCOUPLE . . . . .	20-35-27
1387-4, TERMINAL, THERMOCOUPLE . . . . .	20-35-27
THERMOCOUPLE CABLE	
CTC-0039-()-9/5-9, RAYCHEM. . . . .	20-35-25
THERMOCOUPLE CONTACT	
M39029/10-521, QPL . . . . .	20-63-13
M39029/10-522, QPL . . . . .	20-63-13
M39029/9-516, QPL . . . . .	20-63-13
M39029/9-517, QPL . . . . .	20-63-13
THERMOCOUPLE SPLICE	
1-322325-0, AMP . . . . .	20-10-13
1-322325-1, AMP . . . . .	20-10-13
THERMOCOUPLE TERMINAL	
1-321897-0, AMP . . . . .	20-35-27
1-321898-0, AMP . . . . .	20-35-27
1387-3, THERMO-ELECTRIC. . . . .	20-35-27
1387-4, THERMO-ELECTRIC. . . . .	20-35-27
THERMOCOUPLE WIRE	
252-94102, GALITE. . . . .	20-35-27
44A7620, RAYCHEM, SHIELD TERMINATION . . . . .	20-10-15
852-4000311, PIRELLI. . . . .	20-35-27
852-4985321, PIRELLI. . . . .	20-35-27
DAMAGE CONDITIONS AND REPAIR. . . . .	20-10-13
REPAIR. . . . .	20-10-13
WC-94102, REVERE. . . . .	20-35-27
THOMAS & BETTS	
60124, TERMINAL, ALUMINUM . . . . .	20-30-14
65007, TERMINAL, ALUMINUM . . . . .	20-30-14
65011, TERMINAL, ALUMINUM . . . . .	20-30-14
690-52622-1, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
690-52622-2, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
690-52622-3, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
RD9361, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
RD9711, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
RD9721, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### THOMAS & BETTS (continued)

RD9731, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
RE9261, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
RE9711, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
RE9721, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
RE9731, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
RF9261, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
RF9711, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
RF9721, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
RF9731, TERMINAL LUG, GENERAL PURPOSE . . . . .	20-30-11
RSK101, RSK SHIELD-KON . . . . .	20-30-12
RSK101, SHIELD-KON . . . . .	20-10-15
RSK201, RSK SHIELD-KON . . . . .	20-30-12
RSK201, SHIELD-KON . . . . .	20-10-15
RSK301, RSK SHIELD-KON . . . . .	20-30-12
RSK301, SHIELD-KON . . . . .	20-10-15
RSK401, RSK SHIELD-KON . . . . .	20-30-12
RSK401, SHIELD-KON . . . . .	20-10-15
SK501HT, SHIELD-KON . . . . .	20-10-15
SK601HT, SHIELD-KON . . . . .	20-10-15
THREAD LOCKING COMPOUND	
SUPPLIERS . . . . .	20-00-11
TIE STRAP MOUNTING PLATFORM	
CSCS, BOEING . . . . .	20-10-12
STBP19M, BOEING . . . . .	20-10-12
TIP PLUG CONNECTOR	
105-0303-001, JOHNSON . . . . .	20-40-14
TIRE PRESSURE SYSTEM	
LANDING GEAR CABLES . . . . .	20-85-12
TJM11260(), TERMINAL MODULE, PRECISION CONNECTOR DESIGN. . . . .	20-83-01
TJSE20551, RESISTIVE SPLICE, PCD . . . . .	20-15-49
TJSE20552, RESISTIVE SPLICE, PCD . . . . .	20-15-49
TJSE20554, RESISTIVE SPLICE, PCD . . . . .	20-15-49
TOGGLE SWITCH	
101TL(), MICRO SWITCH/HONEYWELL . . . . .	20-83-11
101TL2887-3, MICRO SWITCH/HONEYWELL . . . . .	20-83-11
101TL2887-51, MICRO SWITCH/HONEYWELL . . . . .	20-83-11
102TL(), MICRO SWITCH/HONEYWELL . . . . .	20-83-11
102TL2887-3, MICRO SWITCH/HONEYWELL . . . . .	20-83-11
102TL2887-3D, MICRO SWITCH/HONEYWELL . . . . .	20-83-11
102TL2887-7E, MICRO SWITCH/HONEYWELL . . . . .	20-83-11
104TL(), MICRO SWITCH/HONEYWELL . . . . .	20-83-11
8856K515, EATON AEROSPACE . . . . .	20-83-11
8868K56, EATON AEROSPACE . . . . .	20-83-11
MS21346-281, QPL . . . . .	20-83-11
MS21347-A211, QPL . . . . .	20-83-11
MS27789-21A, QPL . . . . .	20-83-11
TRACK	
TERMINAL MODULE, 001751-102-00, AIR LB . . . . .	20-15-48

# 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20**

## TRACK (continued)

TERMINAL MODULE, 001751-103-00, AIR LB .....	20-15-48
TERMINAL MODULE, 001751-104-00, AIR LB .....	20-15-48
TERMINAL MODULE, 001751-106-00, AIR LB .....	20-15-48
TERMINAL MODULE, 001751-108-00, AIR LB .....	20-15-48
TERMINAL MODULE, 001751-110-00, AIR LB .....	20-15-48
TERMINAL MODULE, 001751-114-00, AIR LB .....	20-15-48
TERMINAL MODULE, 001751-118-00, AIR LB .....	20-15-48
TERMINAL MODULE, 40-718-938, SMITHS INDUSTRIES .....	20-15-48
TERMINAL MODULE, 40-718-939, SMITHS INDUSTRIES .....	20-15-48
TERMINAL MODULE, 40-718-940, SMITHS INDUSTRIES .....	20-15-48
TERMINAL MODULE, 40-718-942, SMITHS INDUSTRIES .....	20-15-48
TERMINAL MODULE, 40-718-944, SMITHS INDUSTRIES .....	20-15-48
TERMINAL MODULE, 40-718-946, SMITHS INDUSTRIES .....	20-15-48
TERMINAL MODULE, 40-718-950, SMITHS INDUSTRIES .....	20-15-48
TERMINAL MODULE, 40-718-960, SMITHS INDUSTRIES .....	20-15-48
TERMINAL MODULE, 53270-002, SMITHS INDUSTRIES .....	20-15-49
TERMINAL MODULE, 53270-003, SMITHS INDUSTRIES .....	20-15-49
TERMINAL MODULE, 53270-005, SMITHS INDUSTRIES .....	20-15-49
TERMINAL MODULE, 99537-(), MATRIX SCIENCE .....	20-83-01
TERMINAL MODULE, M81714/10-(), QPL .....	20-83-01
TERMINAL MODULE, M81714/14-(), QPL .....	20-83-01
TERMINAL MODULE, M81714/16-(), QPL .....	20-83-01
TERMINAL MODULE, M81714/5-(), QPL .....	20-83-01
TERMINAL MODULE, M81714/67-04, QPL .....	20-15-49
TERMINAL MODULE, M81714/67-07, QPL .....	20-15-49
TERMINAL MODULE, M81714/67-08, QPL .....	20-15-49
TERMINAL MODULE, RBGT10, SOURIAU .....	20-90-15
TERMINAL MODULE, RBGT14, SOURIAU .....	20-90-15
TERMINAL MODULE, RBGT16, SOURIAU .....	20-90-15
TERMINAL MODULE, RBGT2, SOURIAU .....	20-90-15
TERMINAL MODULE, RBGT22, SOURIAU .....	20-90-15
TERMINAL MODULE, RBGT26, SOURIAU .....	20-90-15
TERMINAL MODULE, RBGT4, SOURIAU .....	20-90-15
TERMINAL MODULE, RBGT6, SOURIAU .....	20-90-15
TERMINAL MODULE, RBGT8, SOURIAU .....	20-90-15
TERMINAL MODULE, RBMT10, SOURIAU .....	20-90-15
TERMINAL MODULE, RBMT14, SOURIAU .....	20-90-15
TERMINAL MODULE, RBMT16, SOURIAU .....	20-90-15
TERMINAL MODULE, RBMT2, SOURIAU .....	20-90-15
TERMINAL MODULE, RBMT22, SOURIAU .....	20-90-15
TERMINAL MODULE, RBMT26, SOURIAU .....	20-90-15
TERMINAL MODULE, RBMT4, SOURIAU .....	20-90-15
TERMINAL MODULE, RBMT6, SOURIAU .....	20-90-15
TERMINAL MODULE, RBMT8, SOURIAU .....	20-90-15
TERMINAL MODULE, S280W555-502, BOEING .....	20-90-15
TERMINAL MODULE, S280W555-504, BOEING .....	20-90-15
TERMINAL MODULE, S280W555-506, BOEING .....	20-90-15
TERMINAL MODULE, S280W555-508, BOEING .....	20-90-15

**20-CROSS REFERENCE INDEX**

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****TRACK (continued)**

TERMINAL MODULE, S280W555-510, BOEING	20-90-15
TERMINAL MODULE, S280W555-514, BOEING	20-90-15
TERMINAL MODULE, S280W555-516, BOEING	20-90-15
TERMINAL MODULE, S280W555-522, BOEING	20-90-15
TERMINAL MODULE, S280W555-526, BOEING	20-90-15
TERMINAL MODULE, S280W555-5502, BOEING	20-90-15
TERMINAL MODULE, S280W555-5504, BOEING	20-90-15
TERMINAL MODULE, S280W555-5506, BOEING	20-90-15
TERMINAL MODULE, S280W555-5508, BOEING	20-90-15
TERMINAL MODULE, S280W555-5510, BOEING	20-90-15
TERMINAL MODULE, S280W555-5514, BOEING	20-90-15
TERMINAL MODULE, S280W555-5516, BOEING	20-90-15
TERMINAL MODULE, S280W555-5518, BOEING	20-90-15
TERMINAL MODULE, S280W555-5522, BOEING	20-90-15
TERMINAL MODULE, S280W555-5526, BOEING	20-90-15
TERMINAL MODULE, S280W555-602, BOEING	20-90-15
TERMINAL MODULE, S280W555-604, BOEING	20-90-15
TERMINAL MODULE, S280W555-606, BOEING	20-90-15
TERMINAL MODULE, S280W555-608, BOEING	20-90-15
TERMINAL MODULE, S280W555-610, BOEING	20-90-15
TERMINAL MODULE, S280W555-614, BOEING	20-90-15
TERMINAL MODULE, S280W555-616, BOEING	20-90-15
TERMINAL MODULE, S280W555-622, BOEING	20-90-15
TERMINAL MODULE, S280W555-626, BOEING	20-90-15
TERMINAL MODULE, S280W555-6602, BOEING	20-90-15
TERMINAL MODULE, S280W555-6604, BOEING	20-90-15
TERMINAL MODULE, S280W555-6606, BOEING	20-90-15
TERMINAL MODULE, S280W555-6610, BOEING	20-90-15
TERMINAL MODULE, S280W555-6614, BOEING	20-90-15
TERMINAL MODULE, S280W555-6616, BOEING	20-90-15

**TRANSFORMER**

TERMINAL LUG, INSTALLATION TORQUE	20-30-00
-----------------------------------	----------

**TRI-STAR**

C-06()5-99, CONNECTOR	20-71-14
C-06A3-B305-1100, CONNECTOR	20-71-14
C-06A5-9940-1100, CONNECTOR	20-71-14
C-06BC-01()-1112, CONNECTOR	20-72-21
CAMA(), CONNECTOR	20-72-10
CB02-15P, CONNECTOR	20-72-22
CB02-15S, CONNECTOR	20-72-22
CB02C-15P, CONNECTOR	20-72-22
CB02C-15S, CONNECTOR	20-72-22
CB05-15P, CONNECTOR	20-72-22
CB05-15S, CONNECTOR	20-72-22
CB06-15P, CONNECTOR	20-72-22
CB06-15S, CONNECTOR	20-72-22
CB08-15P, CONNECTOR	20-72-22
CB08-15S, CONNECTOR	20-72-22

**20-CROSS REFERENCE INDEX**

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

TRI-STAR (continued)	
CB08T-15P, CONNECTOR . . . . .	20-72-22
CB08T-15S, CONNECTOR . . . . .	20-72-22
CB24P-4, CONNECTOR . . . . .	20-72-22
CBCX12R-1, CONNECTOR . . . . .	20-72-22
CBJ-14, BACKSHELL . . . . .	20-64-14
CBMA(), CONNECTOR . . . . .	20-72-10
CBME05-15S, CONNECTOR . . . . .	20-72-22
CBRE02-15P-1, CONNECTOR . . . . .	20-72-22
CBRE02C-15P, CONNECTOR . . . . .	20-72-22
CBX12PM-1A, CONNECTOR . . . . .	20-72-22
CCMA(), CONNECTOR . . . . .	20-72-10
CDMA(), CONNECTOR . . . . .	20-72-10
CEMA(), CONNECTOR . . . . .	20-72-10
CQ()MA(), CONNECTOR . . . . .	20-72-23
CQ()ME(), CONNECTOR . . . . .	20-72-23
CQ()RA(), CONNECTOR . . . . .	20-72-23
CQ()RE(), CONNECTOR . . . . .	20-72-23
CSLT2-21P(), CONNECTOR . . . . .	20-63-22
DSB-3, BACKSHELL . . . . .	20-72-08
DSB-4, BACKSHELL . . . . .	20-72-08
DSB-5, BACKSHELL . . . . .	20-72-08
TRI-STAR C()MA	
CONNECTOR ASSEMBLY . . . . .	20-72-10
TRI-STAR C-06BC-01()-112 SERIES	
CONNECTOR ASSEMBLY . . . . .	20-72-21
TRI-STAR CB()-() SERIES	
CONNECTOR ASSEMBLY . . . . .	20-72-22
TRI-STAR CQ() CONNECTORS	
CONNECTOR ASSEMBLY . . . . .	20-72-23
TRIAX CABLE	
10363, RAYCHEM, CONNECTOR ASSEMBLY . . . . .	20-53-05
7524D5011, RAYCHEM, CONNECTOR ASSEMBLY . . . . .	20-53-05
BA6416A, SURPRENANT, CONNECTOR ASSEMBLY . . . . .	20-53-05
CONNECTOR ASSEMBLY . . . . .	20-51-20
TRIAX CABLE ADAPTER	
83-185, AMPHENOL . . . . .	20-53-05
TSE-12-01, JIFFY JUNCTION SPLICE, DEUTSCH . . . . .	20-90-14
TSE-16-01, JIFFY JUNCTION SPLICE, DEUTSCH . . . . .	20-90-14
TSE-20-01, JIFFY JUNCTION SPLICE, DEUTSCH . . . . .	20-90-14
TUBE	
CONVOLUTED, INSTALLATION, CONNECTOR ASSEMBLY . . . . .	20-61-00
CONVOLUTED, REPAIR . . . . .	20-10-91
INSULATION AND PROTECTIVE, SUPPLIERS . . . . .	20-00-11
TEFLON, CFT-06-0-00, ICORE . . . . .	20-10-16
TEFLON, CFT-09-0-00, ICORE . . . . .	20-10-16
TV26RK9-98SN, CONNECTOR, AMPHENOL . . . . .	20-63-19
TWINAX CABLE	
10599, RAYCHEM . . . . .	20-40-15

# 20-CROSS REFERENCE INDEX



707, 727-787

STANDARD WIRING PRACTICES MANUAL

CHAPTER 20

TWINAX CONNECTOR

150900-0302, ITT GREMAR.....	20-40-15
150900-0303, ITT GREMAR.....	20-40-15
150900-2341, ITT GREMAR.....	20-40-15
150900-2342, ITT GREMAR.....	20-40-15
150900-2343, ITT GREMAR.....	20-40-15
204-18291-2, BOEING.....	20-40-15

For training purposes only!

20-CROSS REFERENCE INDEX



707, 727-787

STANDARD WIRING PRACTICES MANUAL

CHAPTER 20

U

UNWIRED CONTACT  
CONNECTOR ASSEMBLY, GENERAL CONDITIONS . . . . . 20-60-08

For training purposes only!

20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****V**

VAPOR SEAL	
287W1619-(), BOEING, PFCS . . . . .	20-14-11
VARNISH	
SUPPLIERS. . . . .	20-00-11
VB10-1PWC11-76, CONNECTOR, VIKING . . . . .	20-40-00
VEAM	
115-5051, CONNECTOR . . . . .	20-62-12
115-5051-1, CONNECTOR. . . . .	20-62-12
115-5066, CONNECTOR . . . . .	20-62-12
115-5074, CONNECTOR . . . . .	20-62-12
VEAM 115 SERIES	
CONNECTOR ASSEMBLY . . . . .	20-62-12
VIBRO-METER	
60-116-000, BENDIX 10-244() SERIES ASSEMBLY . . . . .	20-61-18
80-116-000, BENDIX 10-244() SERIES ASSEMBLY . . . . .	20-61-18
CG505M1-03, CONNECTOR . . . . .	20-35-11
CG505M3-01, CONNECTOR . . . . .	20-35-11
VMCG505M3-01, CONNECTOR. . . . .	20-35-11
VIKING	
000300-0445, RELAY SOCKET . . . . .	20-81-11
000300-1180, RELAY SOCKET . . . . .	20-81-14
000300-1181, RELAY SOCKET . . . . .	20-81-14
000300-1182, RELAY SOCKET . . . . .	20-81-14
000300-1538, RELAY SOCKET . . . . .	20-81-12
000300-1539, RELAY SOCKET . . . . .	20-81-12
000300-1540, RELAY SOCKET . . . . .	20-81-12
000300-1541, RELAY SOCKET . . . . .	20-81-12
000300-1542, RELAY SOCKET . . . . .	20-81-12
000300-1543, RELAY SOCKET . . . . .	20-81-12
000300-1544, RELAY SOCKET . . . . .	20-81-12
000300-1545, RELAY SOCKET . . . . .	20-81-12
000300-1560, RELAY SOCKET . . . . .	20-81-12
003017-0001, RELAY SOCKET . . . . .	20-81-16
003019-0001, RELAY SOCKET . . . . .	20-81-18
VB10-1PWC11-76, CONNECTOR. . . . .	20-40-00
VIKING ELECTRONICS	
002368-0802, CONNECTOR . . . . .	20-72-25
AMC02PA03B, CONNECTOR . . . . .	20-61-28
AMC02PA03R, CONNECTOR . . . . .	20-61-28
AMC02PA03W, CONNECTOR. . . . .	20-61-28
AMC02RA03B, CONNECTOR . . . . .	20-61-28
AMC02RA03R, CONNECTOR . . . . .	20-61-28
AMC02RA03RWC, CONNECTOR . . . . .	20-61-28
AMC02RA03W, CONNECTOR. . . . .	20-61-28
AMC12RA03B, CONNECTOR . . . . .	20-61-28
AMC12RA03R, CONNECTOR . . . . .	20-61-28

**20-CROSS REFERENCE INDEX**



707, 727-787

STANDARD WIRING PRACTICES MANUAL

CHAPTER 20

VIKING ELECTRONICS (continued)

AMC12RA03W, CONNECTOR . . . . .	20-61-28
ATM08PA30, CONNECTOR . . . . .	20-72-26
ATM08PA50, CONNECTOR . . . . .	20-72-26
ATM08RA30, CONNECTOR . . . . .	20-72-26
ATM08RA50, CONNECTOR . . . . .	20-72-26
ATM12PA00, CONNECTOR . . . . .	20-72-26
ATM12PA10, CONNECTOR . . . . .	20-72-26
ATM12PA30, CONNECTOR . . . . .	20-72-26
ATM12RA00, CONNECTOR . . . . .	20-72-26
ATM12RA10, CONNECTOR . . . . .	20-72-26
VMCG505M3-01, CONNECTOR, VIBRO-METER. . . . .	20-35-11

For training purposes only!

20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20****W**

W. W. FISHER	
D105A067-60, CONNECTOR . . . . .	20-40-16
WALLACE-BLACK	
WB0710, CONNECTOR . . . . .	20-64-16
WB0720, CONNECTOR . . . . .	20-64-16
WB0730, CONNECTOR . . . . .	20-64-16
WB1220, CONNECTOR . . . . .	20-64-16
WB1230, CONNECTOR . . . . .	20-64-16
WB1240, CONNECTOR . . . . .	20-64-16
WALTER KIDDE	
875564, CONNECTOR . . . . .	20-62-16
876288, CONNECTOR . . . . .	20-62-16
876633, CONNECTOR . . . . .	20-62-16
876635, CONNECTOR . . . . .	20-62-16
877535, CONNECTOR . . . . .	20-62-16
877536, CONNECTOR . . . . .	20-62-16
878238-01, CONNECTOR . . . . .	20-62-16
878238-02, CONNECTOR . . . . .	20-62-16
878239-01, CONNECTOR . . . . .	20-62-16
878239-02, CONNECTOR . . . . .	20-62-16
878550-01, CONNECTOR . . . . .	20-62-16
878551-01, CONNECTOR . . . . .	20-62-16
878581-01, CONNECTOR . . . . .	20-62-16
878582-01, CONNECTOR . . . . .	20-62-16
FIRE DETECTOR CONNECTOR, CLEANING . . . . .	20-60-01
WALTER KIDDE CONNECTORS	
CONNECTOR ASSEMBLY . . . . .	20-62-16
WASHER	
AN960CIOL, QPL . . . . .	20-10-21
NAS1144C0563R, QPL . . . . .	20-10-21
WAVE LAB	
169493, CONNECTOR . . . . .	20-62-18
400015, CONNECTOR . . . . .	20-62-18
WAVE LAB CONNECTORS	
CONNECTOR ASSEMBLY . . . . .	20-62-18
WB0710, CONNECTOR, WALLACE-BLACK . . . . .	20-64-16
WB0720, CONNECTOR, WALLACE-BLACK . . . . .	20-64-16
WB0730, CONNECTOR, WALLACE-BLACK . . . . .	20-64-16
WB1220, CONNECTOR, WALLACE-BLACK . . . . .	20-64-16
WB1230, CONNECTOR, WALLACE-BLACK . . . . .	20-64-16
WB1240, CONNECTOR, WALLACE-BLACK . . . . .	20-64-16
WC-94102 THERMOCOUPLE WIRE	
REVERE, TERMINAL ASSEMBLY . . . . .	20-35-27
WESTERN INDICATOR	
502-70T-02, LAMP SOCKET . . . . .	20-84-00
514-74-13-02, CONNECTOR . . . . .	20-84-00

**20-CROSS REFERENCE INDEX**

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

WFB0()-(), CONNECTOR, ITT CANNON . . . . .	20-61-19
WFB0()-()CD, CONNECTOR, ITT CANNON . . . . .	20-61-19
WFB6()-(), CONNECTOR, ITT CANNON . . . . .	20-61-19
WFB6()-()CE, CONNECTOR, ITT CANNON . . . . .	20-61-19
WINDOW HEAT CONNECTOR	
CONNECTOR ASSEMBLY . . . . .	20-64-16
WINDOW HEAT CONNECTORS	
M39029/57-() SOCKET CONTACT ASSEMBLY . . . . .	20-64-18
WIRE	
ALTERNATIVE. . . . .	20-00-13
ALUMINUM, DAMAGE CONDITIONS AND REPAIR. . . . .	20-10-13
CLEANING . . . . .	20-10-04
CONDUCTOR SIZE ADJUSTMENT FOR CONTACT ASSEMBLY . . . . .	20-60-00
DAMAGE CONDITIONS AND REPAIR. . . . .	20-10-13
ELECTROMAGNETIC COMPATIBILITY (EMC). . . . .	20-10-19
END CAP ASSEMBLY, CRIMP TYPE . . . . .	20-30-16
END CAP ASSEMBLY, HEAT SHRINKABLE . . . . .	20-30-16
FILLER, CONTACT ASSEMBLY . . . . .	20-60-00
FIRE RESISTANT, 24-00033, CHAMPLAIN, MIL-C-5015 ASSEMBLY . . . . .	20-63-14
FIRE RESISTANT, 24-00034, CHAMPLAIN, GRAVINER CONNECTOR ASSEMBLY . . . . .	20-62-15
FIRE RESISTANT, 24-00034, CHAMPLAIN, MIL-C-5015 ASSEMBLY . . . . .	20-63-14
FIRE RESISTANT, DAMAGE CONDITIONS AND REPAIR. . . . .	20-10-13
FIRE RESISTANT, H22-4000, CERRO, BENDIX 10-244() SERIES ASSEMBLY . . . . .	20-61-18
FIRE RESISTANT, H22-4000, CERRO, GRAVINER CONNECTOR ASSEMBLY . . . . .	20-62-15
FUNCTIONAL SEPARATION. . . . .	20-10-19
GENERAL CONDITIONS FOR SEPARATION. . . . .	20-10-19
IDENTIFICATION . . . . .	20-10-11
INSTALLATION, NEW . . . . .	20-10-11
INSULATION REMOVAL . . . . .	20-00-15
INSULATION REPAIR . . . . .	20-10-13
JACKET REPAIR . . . . .	20-10-13
O.D. LESS THAN SEAL DIAMETER, CONNECTOR ASSEMBLY . . . . .	20-60-08
O.D. OF SPECIFIED WIRE . . . . .	20-00-16
PART NUMBERS AND WIRE TYPE CODES . . . . .	20-00-13
POWER FEEDER, DAMAGE CONDITIONS AND REPAIR. . . . .	20-10-13
REMOVAL FROM OPERATION . . . . .	20-10-11
ROUTING, WIRE WRAP CONNECTIONS. . . . .	20-72-18
SHIELD DEAD END, ASSEMBLY . . . . .	20-10-15
SHIELD EXTENSION, ASSEMBLY . . . . .	20-10-15
SHIELD GROUND WIRE, ASSEMBLY . . . . .	20-10-15
SHIELD GROUND, DAMAGE CONDITIONS AND REPAIR . . . . .	20-10-13
SHIELD REPAIR . . . . .	20-10-13
SHIELDED, SPLICE ASSEMBLY. . . . .	20-30-12
SPECIFICATIONS AND WIRE TYPE CODES . . . . .	20-00-13
SPLICE ASSEMBLY. . . . .	20-30-12
STANDARD WIRE REPLACEMENT. . . . .	20-00-14
STUB, ASSEMBLY . . . . .	20-60-08
THERMOCOUPLE, 252-94102, GALITE . . . . .	20-35-27

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

WIRE (continued)	
THERMOCOUPLE, 852-4000311, PIRELLI	20-35-27
THERMOCOUPLE, 852-4985321, PIRELLI	20-35-27
THERMOCOUPLE, DAMAGE CONDITIONS AND REPAIR	20-10-13
THERMOCOUPLE, WC-94102, REVERE	20-35-27
UNSHIELDED, SPLICE ASSEMBLY	20-30-12
WIRE WRAP, REPAIR	20-72-18
WIRE AND CABLE	
ALTERNATIVE	20-00-13
CLEANING	20-10-04
END CAP ASSEMBLY, CRIMP TYPE	20-30-16
END CAP ASSEMBLY, HEAT SHRINKABLE	20-30-16
IDENTIFICATION	20-10-11
INSTALLATION, NEW	20-10-11
INSULATION AND JACKET REMOVAL	20-00-15
O.D. OF SPECIFIED WIRE	20-00-16
PART NUMBERS AND WIRE TYPE CODES	20-00-13
REMOVAL FROM OPERATION	20-10-11
SHIELD TERMINATION	20-10-15
SPECIFICATIONS AND WIRE TYPE CODES	20-00-13
SPLICE ASSEMBLY	20-30-12
STANDARD WIRE REPLACEMENT	20-00-14
WIRE TYPE CODES	20-00-13
WIRE DAMAGE	
WIRE WRAP	20-72-18
WIRE HARNESS	
CLAMP, INSTALLATION	20-10-12
CLAMP, SELECTION	20-10-12
CLEANING	20-10-04
DAMAGE, CAUSES	20-10-11
IDENTIFICATION	20-10-11
INSTALLATION	20-10-11
PRESSURE BULKHEAD SEAL	20-10-20
PRESSURE BULKHEAD SEAL	20-10-24
PRESSURE BULKHEAD SEAL	20-14-14
REMOVAL FROM OPERATION	20-10-11
WIRE HARNESS ASSEMBLY	
ADDITION OF WIRES	20-10-19
FIBERGLAS SLEEVES	20-10-18
FLIGHT RECORDER-AIDS	20-14-51
GENERAL CONDITIONS	20-10-11
HIGH VIBRATION AREAS	20-10-11
OVERBRAID SHIELD, ASSEMBLY	20-25-11
SLEEVE CONFIGURATION	20-10-18
SLEEVE INSTALLATION	20-10-18
WIRE HARNESS REPAIR	
GE90 POWER PLANT, APPLICABLE CONDITIONS	20-22-00
PW4000/777 POWER PLANT, APPLICABLE CONDITIONS	20-24-00
PW4000/777 POWER PLANT, BACKSHELL REPLACEMENT	20-24-20

# 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### WIRE HARNESS REPAIR (continued)

PW4000/777 POWER PLANT, CABLE JACKET REPAIR . . . . .	20-24-22
PW4000/777 POWER PLANT, COMPONENT AND TOOL SUPPLIERS . . . . .	20-24-02
PW4000/777 POWER PLANT, CONNECTOR ADAPTER PLATE REPLACEMENT . . . . .	20-24-25
PW4000/777 POWER PLANT, CONNECTOR DATA . . . . .	20-24-12
PW4000/777 POWER PLANT, CONNECTOR REPLACEMENT . . . . .	20-24-20
PW4000/777 POWER PLANT, CONTACT REPLACEMENT . . . . .	20-24-21
PW4000/777 POWER PLANT, FAN OVERHEAT TERMINAL LUG ASSEMBLY . . . . .	20-24-26
PW4000/777 POWER PLANT, GROUND WIRE TERMINAL LUG ASSEMBLY . . . . .	20-24-26
PW4000/777 POWER PLANT, SHIELDED CABLE REPLACEMENT . . . . .	20-24-24
PW4000/777 POWER PLANT, WIRE HARNESS TIE ASSEMBLY . . . . .	20-24-14
PW4000/777 POWER PLANT, WIRING IDENTIFICATION REPAIR . . . . .	20-24-27
PW4000/777 POWER PLANT, WIRING REPAIR, GENERAL DATA . . . . .	20-24-01
RB 211 TRENT 800 POWER PLANT, ALTERNATOR LEAD WIRE . . . . .	20-23-19
RB 211 TRENT 800 POWER PLANT, APPLICABLE CONDITIONS . . . . .	20-23-00
RB 211 TRENT 800 POWER PLANT, BACKSHELL ASSEMBLY . . . . .	20-23-39
RB 211 TRENT 800 POWER PLANT, CONNECTOR ASSEMBLY . . . . .	20-23-37
RB 211 TRENT 800 POWER PLANT, CONNECTOR DATA . . . . .	20-23-01
RB 211 TRENT 800 POWER PLANT, DAMAGE CONDITIONS . . . . .	20-23-15
RB 211 TRENT 800 POWER PLANT, SHIELDED CABLES . . . . .	20-23-17
RB 211 TRENT 800 POWER PLANT, TERMINAL LUG ASSEMBLY . . . . .	20-23-32
RB 211 TRENT 800 POWER PLANT, WIRE HARNESS ASSEMBLY . . . . .	20-23-30
RB 211 TRENT 800 POWER PLANT, WIRE HARNESS IDENTIFICATION . . . . .	20-23-16
RB 211 TRENT 800 POWER PLANT, WIRE SPECIFICATIONS . . . . .	20-23-03
S280W654(-), BOEING . . . . .	20-14-11
S280W655(-), BOEING . . . . .	20-14-11
S280W657(-), BOEING . . . . .	20-14-11
WIRE HARNESS SEAL	
BACS45A(), BOEING . . . . .	20-10-20
BACS45B(), BOEING . . . . .	20-10-20
WIRE HARNESS SUPPORT	
INSTALLATION, GENERAL CONDITIONS . . . . .	20-10-11
RING POST, BACS31H(), BOEING . . . . .	20-10-12
WIRE HARNESS SUPPORT ASSEMBLY	
BACS31J(), BOEING . . . . .	20-10-12
WIRE HARNESS SUPPORTS	
INSTALLATION . . . . .	20-10-12
SELECTION . . . . .	20-10-12
WIRE HARNESS TIE	
GENERAL CONDITIONS AND ASSEMBLY . . . . .	20-10-11
WIRE INSULATION	
DAMAGE CONDITIONS AND REPAIR . . . . .	20-10-13
WIRE INTEGRATION UNIT (WIU)	
MODIFICATION . . . . .	20-72-18
WIRE REPAIR	
ALUMEL-CHROMEL THERMOCOUPLE WIRE . . . . .	20-10-13
ALUMINUM WIRE . . . . .	20-10-13
ARINC 629 DATA BUS CABLE . . . . .	20-10-13
ARINC 629 DATA BUS CABLE . . . . .	20-11-11

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

WIRE REPAIR (continued)	
ARINC 629 STUB CABLE . . . . .	20-10-13
DAMAGE CONDITIONS . . . . .	20-10-13
ENGINE WIRE HARNESS . . . . .	20-10-13
FIRE RESISTANT WIRE . . . . .	20-10-13
INSULATION . . . . .	20-10-13
JACKET . . . . .	20-10-13
POWER FEEDER . . . . .	20-10-13
REPAIR OF SPLICE INSULATION . . . . .	20-10-13
S280W502 STUB CABLE . . . . .	20-10-13
S280W504 DATA BUS CABLE . . . . .	20-10-13
S280W651 CABLE ASSEMBLY . . . . .	20-10-13
SHIELD . . . . .	20-10-13
SHIELD GROUND WIRE . . . . .	20-10-13
THERMOCOUPLE WIRE . . . . .	20-10-13
WIRE WRAP . . . . .	20-72-18
WIRE REPLACEMENT	
RB 211 TRENT 800 POWER PLANT . . . . .	20-23-03
STANDARD WIRE TYPES . . . . .	20-00-14
WIRE ROUTING	
WIRE WRAP . . . . .	20-72-18
WIRE SEPARATION	
ALL MODELS . . . . .	20-10-19
WIRE SPECIFICATIONS . . . . .	20-00-13
WIRE TYPE CODES . . . . .	20-00-13
WIRE WRAP CONNECTION	
CONFIGURATION . . . . .	20-72-18
TEST PROCEDURES . . . . .	20-72-18
WIRE WRAP CONNECTOR	
AM1R57P6031, AMP . . . . .	20-72-18
BACC65T114, QPL . . . . .	20-72-18
BACC65T66, QPL . . . . .	20-72-18
BACC66E, QPL . . . . .	20-72-18
BACC66G, QPL . . . . .	20-72-18
BACC66J, QPL . . . . .	20-72-18
CONNECTOR ASSEMBLY . . . . .	20-72-18
DBMM25P-F179A, ITT CANNON . . . . .	20-72-18
DBMM37P-F179A, ITT CANNON . . . . .	20-72-18
DBMM50P-F179A, ITT CANNON . . . . .	20-72-18
HPF052UFZL0320-BEC, SI-TAC . . . . .	20-72-18
HPF160UFZL0320-BEC, SI-TAC . . . . .	20-72-18
LIFTER LATCH SYSTEM . . . . .	20-72-17
WIRE ROUTING . . . . .	20-72-18
WIRE WRAP CONNECTOR COVER	
285T0625-1, QPL . . . . .	20-72-18
285T0625-2, QPL . . . . .	20-72-18
285T0626-1, QPL . . . . .	20-72-18
285T0631-1, QPL . . . . .	20-72-18
285T0632-1, QPL . . . . .	20-72-18

# 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20**

WIRE WRAP CONNECTOR COVER (continued)	
285T0632-2, QPL .....	20-72-18
285T0632-3, QPL .....	20-72-18
285U0173-1, QPL .....	20-72-18
285U0173-2, QPL .....	20-72-18
WIRE WRAP POST	
CONDITIONS FOR REPAIR .....	20-72-18
WIRE-PRO	
84-(), CONNECTOR .....	20-61-26
WIRE-PRO 84-() SERIES	
CONNECTOR ASSEMBLY .....	20-61-26
WIRING	
CAP AND STOW .....	20-10-11
GENERAL CONDITIONS FOR CHANGES .....	20-10-19
IDENTIFICATION .....	20-10-11
INSTALLATION, NEW .....	20-10-11
PHASE IDENTIFICATION .....	20-30-00
REMOVAL FROM OPERATION .....	20-10-11
WIRING INSPECTION	
CONNECTOR CORROSION .....	20-10-06
WIRING REPAIR	
CONTACT REPLACEMENT .....	20-60-02
GE90 POWER PLANT, APPLICABLE CONDITIONS .....	20-22-00
PW4000/777 POWER PLANT, APPLICABLE CONDITIONS .....	20-24-00
PW4000/777 POWER PLANT, BACKSHELL REPLACEMENT .....	20-24-20
PW4000/777 POWER PLANT, CABLE JACKET REPAIR .....	20-24-22
PW4000/777 POWER PLANT, COMPONENT AND TOOL SUPPLIERS .....	20-24-02
PW4000/777 POWER PLANT, CONNECTOR ADAPTER PLATE REPLACEMENT .....	20-24-25
PW4000/777 POWER PLANT, CONNECTOR DATA .....	20-24-12
PW4000/777 POWER PLANT, CONNECTOR REPLACEMENT .....	20-24-20
PW4000/777 POWER PLANT, CONTACT REPLACEMENT .....	20-24-21
PW4000/777 POWER PLANT, FAN OVERHEAT TERMINAL LUG ASSEMBLY .....	20-24-26
PW4000/777 POWER PLANT, GROUND WIRE TERMINAL LUG ASSEMBLY .....	20-24-26
PW4000/777 POWER PLANT, SHIELDED CABLE REPLACEMENT .....	20-24-24
PW4000/777 POWER PLANT, WIRE HARNESS TIE ASSEMBLY .....	20-24-14
PW4000/777 POWER PLANT, WIRING IDENTIFICATION REPAIR .....	20-24-27
PW4000/777 POWER PLANT, WIRING REPAIR, GENERAL DATA .....	20-24-01
RB 211 TRENT 800 POWER PLANT, ALTERNATOR LEAD WIRE .....	20-23-19
RB 211 TRENT 800 POWER PLANT, APPLICABLE CONDITIONS .....	20-23-00
RB 211 TRENT 800 POWER PLANT, BACKSHELL ASSEMBLY .....	20-23-39
RB 211 TRENT 800 POWER PLANT, CONNECTOR ASSEMBLY .....	20-23-37
RB 211 TRENT 800 POWER PLANT, CONNECTOR DATA .....	20-23-01
RB 211 TRENT 800 POWER PLANT, DAMAGE CONDITIONS .....	20-23-15
RB 211 TRENT 800 POWER PLANT, SHIELDED CABLES .....	20-23-17
RB 211 TRENT 800 POWER PLANT, TERMINAL LUG ASSEMBLY .....	20-23-32
RB 211 TRENT 800 POWER PLANT, WIRE HARNESS ASSEMBLY .....	20-23-30
RB 211 TRENT 800 POWER PLANT, WIRE HARNESS IDENTIFICATION .....	20-23-16
RB 211 TRENT 800 POWER PLANT, WIRE SPECIFICATIONS .....	20-23-03

**20-CROSS REFERENCE INDEX**



707, 727-787

## STANDARD WIRING PRACTICES MANUAL

### CHAPTER 20

WIU	
MODIFICATION . . . . .	20-72-18
WPI	
17-10090, CONNECTOR . . . . .	20-72-11
17-10090-1, CONNECTOR . . . . .	20-72-11
17-10150, CONNECTOR . . . . .	20-72-11
17-10150-1, CONNECTOR . . . . .	20-72-11
17-10250, CONNECTOR . . . . .	20-72-11
17-10250-1, CONNECTOR . . . . .	20-72-11
17-10370, CONNECTOR . . . . .	20-72-11
17-10370-1, CONNECTOR . . . . .	20-72-11
17-10500, CONNECTOR . . . . .	20-72-11
17-10500-1, CONNECTOR . . . . .	20-72-11
17-20090, CONNECTOR . . . . .	20-72-11
17-20090-1, CONNECTOR . . . . .	20-72-11
17-20150, CONNECTOR . . . . .	20-72-11
17-20150-1, CONNECTOR . . . . .	20-72-11
17-20250, CONNECTOR . . . . .	20-72-11
17-20250-1, CONNECTOR . . . . .	20-72-11
17-20370, CONNECTOR . . . . .	20-72-11
17-20370-1, CONNECTOR . . . . .	20-72-11
17-20500, CONNECTOR . . . . .	20-72-11
17-20500-1, CONNECTOR . . . . .	20-72-11
17-300-1, CONNECTOR . . . . .	20-72-11
17-301-1, CONNECTOR . . . . .	20-72-11
17-302-1, CONNECTOR . . . . .	20-72-11
17-303-1, CONNECTOR . . . . .	20-72-11
17-304-1, CONNECTOR . . . . .	20-72-11
17-305-1, CONNECTOR . . . . .	20-72-11
17-306-1, CONNECTOR . . . . .	20-72-11
17-307-1, CONNECTOR . . . . .	20-72-11
17-308-1, CONNECTOR . . . . .	20-72-11
17-309-1, CONNECTOR . . . . .	20-72-11
17-310-1, BACKSHELL . . . . .	20-72-08
17-311-1, BACKSHELL . . . . .	20-72-08
17-312-1, BACKSHELL . . . . .	20-72-08
17-313-1, BACKSHELL . . . . .	20-72-08
17-314-1, BACKSHELL . . . . .	20-72-08
WPI 17-() CONNECTORS	
CONNECTOR ASSEMBLY . . . . .	20-72-11

## 20-CROSS REFERENCE INDEX



707, 727-787

STANDARD WIRING PRACTICES MANUAL

CHAPTER 20

X

XHP-(), CONNECTOR, J.S.T. . . . . 20-64-14

XLR-(), CONNECTOR, ITT CANNON . . . . . 20-64-12

For training purposes only!

20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

### Y

Y-6015-C, EYELET, INTERNATIONAL EYELETS. . . . .	20-60-00
Y-9015-C, EYELET, INTERNATIONAL EYELETS. . . . .	20-60-00
Y6015-C, EYELET, INTERNATIONAL EYELETS INC. . . . .	20-81-16
Y9015-C, EYELET, INTERNATIONAL EYELETS INC. . . . .	20-81-16
YAD18HNK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY. . . . .	20-30-11
YAEV25-G24, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV25-G25, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV25-G26, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV26-L, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV26-L2, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV26-L3, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV28-G1, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV28-G2, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV28-G3, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV28-G4, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV28-G5, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV2C-L, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV2C-L1, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV2C-L4, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV4C-L, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV6C-L, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV6C-L1, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV6C-L2, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV6C-L4, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV8C-L, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV8C-L1, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV8C-L14, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV8C-L2, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEV8C-L3, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEVAC-L2, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEVAC-L4, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAEVAC-L5, TERMINAL LUG, GENERAL PURPOSE, BURNDY. . . . .	20-30-11
YAV14-H, TERMINAL LUG, HEAVY DUTY, BURNDY. . . . .	20-30-11
YAV14-H1, TERMINAL LUG, HEAVY DUTY, BURNDY. . . . .	20-30-11
YAV14G82, TERMINAL LUG, HEAVY DUTY, BURNDY. . . . .	20-30-11
YAV14G88, TERMINAL LUG, HEAVY DUTY, BURNDY. . . . .	20-30-11
YAV14G88, TERMINAL LUG, HIGH TEMPERATURE, BURNDY. . . . .	20-30-11
YAV18-H, TERMINAL LUG, HEAVY DUTY, BURNDY. . . . .	20-30-11
YAV1C-L1NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY. . . . .	20-30-11
YAV1C-L2NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY. . . . .	20-30-11
YAV1C-L3NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY. . . . .	20-30-11
YAV1C-L6NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY. . . . .	20-30-11
YAV1C-LNK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY. . . . .	20-30-11
YAV1CL1NK, TERMINAL LUG, HIGH TEMPERATURE, FCI. . . . .	20-30-11
YAV1CL2NK, TERMINAL LUG, HIGH TEMPERATURE, FCI. . . . .	20-30-11
YAV1CLNK, TERMINAL LUG, HIGH TEMPERATURE, FCI. . . . .	20-30-11

## 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

YAV25-2L38-NK, TERMINAL LUG, DUAL HOLE, BURNDY . . . . .	20-30-11
YAV25-L1NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV25-L2NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV25-L3NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV25-L4NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV25-LNK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV25L1NK, TERMINAL LUG, HIGH TEMPERATURE, FCI . . . . .	20-30-11
YAV25L2NK, TERMINAL LUG, HIGH TEMPERATURE, FCI . . . . .	20-30-11
YAV25L3NK, TERMINAL LUG, HIGH TEMPERATURE, FCI . . . . .	20-30-11
YAV25L4NK, TERMINAL LUG, HIGH TEMPERATURE, FCI . . . . .	20-30-11
YAV25LNK, TERMINAL LUG, HIGH TEMPERATURE, FCI . . . . .	20-30-11
YAV25RSNK, TERMINAL LUG, UPRIGHT, BURNDY . . . . .	20-30-11
YAV26-2L38-30-NK, TERMINAL LUG, DUAL HOLE, BURNDY . . . . .	20-30-11
YAV26-2L38-NK, TERMINAL LUG, DUAL HOLE, BURNDY . . . . .	20-30-11
YAV26-L12NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV26-L1NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV26-L22NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV26-L2NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV26-L3NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV26-LNK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV26L12NK, TERMINAL LUG, HIGH TEMPERATURE, FCI . . . . .	20-30-11
YAV26L1NK, TERMINAL LUG, HIGH TEMPERATURE, FCI . . . . .	20-30-11
YAV26L22NK, TERMINAL LUG, HIGH TEMPERATURE, FCI . . . . .	20-30-11
YAV26L3NK, TERMINAL LUG, HIGH TEMPERATURE, FCI . . . . .	20-30-11
YAV26LNK, TERMINAL LUG, HIGH TEMPERATURE, FCI . . . . .	20-30-11
YAV27-2L38-30-NK, TERMINAL LUG, DUAL HOLE, BURNDY . . . . .	20-30-11
YAV27-2L38-NK, TERMINAL LUG, DUAL HOLE, BURNDY . . . . .	20-30-11
YAV27-L15NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV27-L1NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV27-L20NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV27-LNK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV27L1NK, TERMINAL LUG, HIGH TEMPERATURE, FCI . . . . .	20-30-11
YAV27LNK, TERMINAL LUG, HIGH TEMPERATURE, FCI . . . . .	20-30-11
YAV28-L12NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV28-L13NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV28-L14NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV28-L54NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV28-L56NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV28-LNK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV28L12NK, TERMINAL LUG, HIGH TEMPERATURE, FCI . . . . .	20-30-11
YAV28L14NK, TERMINAL LUG, HIGH TEMPERATURE, FCI . . . . .	20-30-11
YAV28LNK, TERMINAL LUG, HIGH TEMPERATURE, FCI . . . . .	20-30-11
YAV2C-2L38-NK, TERMINAL LUG, DUAL HOLE, BURNDY . . . . .	20-30-11
YAV2C-L1NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV2C-L2NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV2C-L3NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV2C-L4NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11
YAV2C-LNK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY . . . . .	20-30-11

## 20-CROSS REFERENCE INDEX

# STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

YAV2CL1NK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YAV2CL2NK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YAV2CL3NK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YAV2CL4NK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YAV2CLNK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YAV4C-2L38-30-NK, TERMINAL LUG, DUAL HOLE, BURNDY	20-30-11
YAV4C-2L38-NK, TERMINAL LUG, DUAL HOLE, BURNDY	20-30-11
YAV4C-L2NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY	20-30-11
YAV4C-L3NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY	20-30-11
YAV4C-L4NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY	20-30-11
YAV4C-L5NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY	20-30-11
YAV4C-LNK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY	20-30-11
YAV4CL2NK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YAV4CL3NK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YAV4CL5NK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YAV4CLNK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YAV4CRS2NK, TERMINAL LUG, UPRIGHT, BURNDY	20-30-11
YAV6C-2L38-NK, TERMINAL LUG, DUAL HOLE, BURNDY	20-30-11
YAV6C-L10NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY	20-30-11
YAV6C-L1NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY	20-30-11
YAV6C-L2NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY	20-30-11
YAV6C-L4NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY	20-30-11
YAV6C-LNK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY	20-30-11
YAV6CL10NK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YAV6CL1NK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YAV6CL2NK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YAV6CL4NK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YAV6CLNK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YAV8C-L14NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY	20-30-11
YAV8C-L1NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY	20-30-11
YAV8C-L2NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY	20-30-11
YAV8C-L3NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY	20-30-11
YAV8C-L4NK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY	20-30-11
YAV8C-LNK, TERMINAL LUG, HIGH TEMPERATURE, BURNDY	20-30-11
YAV8CL14NK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YAV8CL1NK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YAV8CL2NK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YAV8CL3NK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YAV8CL4NK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YAV8CLNK, TERMINAL LUG, HIGH TEMPERATURE, FCI	20-30-11
YBM25-L, TERMINAL, BURNDY	20-20-12
YBM25L, TERMINAL, BURNDY	20-20-12
YBM26-L, TERMINAL, BURNDY	20-20-12
YBM26L, TERMINAL, BURNDY	20-20-12
YBM2C-L, TERMINAL, BURNDY	20-20-12
YBM2C-L1, TERMINAL, BURNDY	20-20-12
YBM2CL, TERMINAL, BURNDY	20-20-12
YBM2CL1, TERMINAL, BURNDY	20-20-12

# 20-CROSS REFERENCE INDEX

## STANDARD WIRING PRACTICES MANUAL

## CHAPTER 20

YBM4C-L, TERMINAL, BURNDY . . . . .	20-20-12
YBM4C-L2, TERMINAL, BURNDY . . . . .	20-20-12
YBM4CL, TERMINAL, BURNDY . . . . .	20-20-12
YBM4CL2, TERMINAL, BURNDY . . . . .	20-20-12
YBM6C-L, TERMINAL, BURNDY . . . . .	20-20-12
YBM6C-L2, TERMINAL, BURNDY . . . . .	20-20-12
YBM6CL, TERMINAL, BURNDY . . . . .	20-20-12
YBM6CL2, TERMINAL, BURNDY . . . . .	20-20-12
YBM8C, TERMINAL, BURNDY . . . . .	20-20-12
YBM8C-T2, TERMINAL, BURNDY . . . . .	20-20-12
YBM8CT2, TERMINAL, BURNDY . . . . .	20-20-12
YHLZ-22, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZ-44, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZ-8, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZ16-2, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZ16-4, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZ16-8, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZD-11, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZD-14, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZD-15, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZD-23, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZD-24, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZD-26, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZD-28, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZD-29, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZD-30, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZD-31, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZD-32, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZD-33, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZD-34, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZD-35, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZD-38, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZD-39, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZD-9, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZG16-1, GROUND BLOCK MODULE, BURNDY . . . . .	20-20-11
YHLZG16-2, GROUND BLOCK MODULE, BURNDY . . . . .	20-20-11
YHLZG8-1, GROUND BLOCK MODULE, BURNDY . . . . .	20-20-11
YHLZG8-2, GROUND BLOCK MODULE, BURNDY . . . . .	20-20-11
YHLZR-1, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-10, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-11, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-13, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-14, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-15, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-16, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-17, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-18, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-19, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11

## 20-CROSS REFERENCE INDEX

**STANDARD WIRING PRACTICES MANUAL****CHAPTER 20**

YHLZR-2, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-20, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-21, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-22, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-23, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-24, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-25, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-26, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-27, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-28, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-29, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-3, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-30, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-31, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-32, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-33, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-34, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-35, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-36, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-37, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-38, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-39, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-4, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-40, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-41, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-42, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-43, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-44, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-47, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-5, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-6, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-7, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-8, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11
YHLZR-9, TERMINAL BLOCK MODULE, BURNDY . . . . .	20-90-11

## 20-CROSS REFERENCE INDEX



707, 727-787

STANDARD WIRING PRACTICES MANUAL

CHAPTER 20

Z

ZIPPERTUBING

INSTALLATION . . . . .	20-10-17
ZTZ-1125-SH3FEP5-P250, ZIPPERTUBING COMPANY . . . . .	20-10-17
ZTZ-1380-SH3FEP5-P250, ZIPPERTUBING COMPANY . . . . .	20-10-17
ZTZ-1500-SH3FEP5-P250, ZIPPERTUBING COMPANY . . . . .	20-10-17

ZIPPERTUBING COMPANY

ZTZ-1125-SH3FEP5-P250, ZIPPERTUBING . . . . .	20-10-17
ZTZ-1380-SH3FEP5-P250, ZIPPERTUBING . . . . .	20-10-17
ZTZ-1500-SH3FEP5-P250, ZIPPERTUBING . . . . .	20-10-17
ZTZ-1125-SH3FEP5-P250, ZIPPERTUBING, ZIPPERTUBING COMPANY . . . . .	20-10-17
ZTZ-1380-SH3FEP5-P250, ZIPPERTUBING, ZIPPERTUBING COMPANY . . . . .	20-10-17
ZTZ-1500-SH3FEP5-P250, ZIPPERTUBING, ZIPPERTUBING COMPANY . . . . .	20-10-17
ZZB-R(), CONNECTOR, PYLE-NATIONAL . . . . .	20-61-11
ZZL-R(), CONNECTOR, PYLE-NATIONAL . . . . .	20-61-11
ZZW-()-10(), CONNECTOR, PYLE-NATIONAL . . . . .	20-61-11
ZZW-()-17(), CONNECTOR, PYLE-NATIONAL . . . . .	20-61-11
ZZW-R(), CONNECTOR, PYLE-NATIONAL . . . . .	20-61-11
ZZY-()-10(), CONNECTOR, PYLE-NATIONAL . . . . .	20-61-11
ZZY-()-12(), CONNECTOR, PYLE-NATIONAL . . . . .	20-61-11
ZZY-()-15(), CONNECTOR, PYLE-NATIONAL . . . . .	20-61-11
ZZY-()-17(), CONNECTOR, PYLE-NATIONAL . . . . .	20-61-11
ZZY-R(), CONNECTOR, PYLE-NATIONAL . . . . .	20-61-11

20-CROSS REFERENCE INDEX