

**CHAPTER**

**32**

**LANDING GEAR**

For training purposes only!



737-700/800

## WIRING DIAGRAM MANUAL

CHAPTER 32  
LANDING GEAR

CH-SC-SU	Schem	Page	Sheet	Date	CH-SC-SU	Schem	Page	Sheet	Date
32-EFFECTIVE PAGES					32-31-12 (cont.)				
		1 thru 2		Nov 12/2012			4		
32-CONTENTS								2	Aug 11/2008
R		1		Nov 12/2012				3	Aug 11/2008
R		2		Nov 12/2012		5	1	1	May 11/2009
R		3		Nov 12/2012				2	May 11/2009
R		4		Nov 12/2012				3	May 11/2009
32-ALPHABETICAL INDEX						6	1		Aug 03/2009
		1		Aug 30/2007				2	Aug 03/2009
		2		BLANK				3	Aug 03/2009
	32-31-11					7	1		Feb 01/2010
		1	1	Oct 06/2010				2	Feb 01/2010
			2	Oct 06/2010				3	Feb 01/2010
			3	Oct 06/2010		8	1		Aug 03/2009
		1.1	1	Feb 10/2005				2	Aug 03/2009
			2	Feb 10/2005				3	Aug 03/2009
			3	Feb 10/2005		9	1		Dec 01/2010
		1.2	1	Oct 06/2010				2	Dec 01/2010
			2	Oct 06/2010				3	Dec 01/2010
			3	Oct 06/2010		10	1		Dec 01/2010
R		2	1	Nov 12/2012				2	Dec 01/2010
R			2	Nov 12/2012	R			3	Dec 01/2010
R			3	Nov 12/2012	R		11	1	Nov 12/2012
		3	1	Oct 27/2011	R			2	Nov 12/2012
			2	Oct 27/2011	R			3	Nov 12/2012
			3	Oct 27/2011		32-35-11			
		4	1	Feb 01/2010	R		1		Nov 12/2012
			2	Feb 01/2010	R		2		Nov 12/2012
			3	Feb 01/2010		32-41-11			
		5	1	Dec 19/2011	R		1	1	Nov 12/2012
			2	Dec 19/2011	R			2	Nov 12/2012
			3	Dec 19/2011	R		2	1	Nov 12/2012
		6	1	Oct 06/2010	R			2	Nov 12/2012
			2	Oct 06/2010		32-42-11			
			3	Oct 06/2010			1	1	Oct 06/2010
		7	1	Aug 14/2012	R			2	Oct 06/2010
			2	Aug 14/2012	R		2	1	Nov 12/2012
			3	Aug 14/2012				2	Nov 12/2012
R		8	1	Nov 12/2012		32-44-11			
R			2	Nov 12/2012	R		1		Nov 12/2012
R			3	Nov 12/2012			2		Oct 27/2011
	32-31-12				R		3		Nov 12/2012
		1	1	Oct 06/2010		32-51-11			
			2	Oct 06/2010	R		1		Nov 12/2012
			3	Oct 06/2010		32-64-11			
R		2	1	Nov 12/2012			1	1	Feb 10/2005
R			2	Nov 12/2012				2	Feb 10/2005
R			3	Nov 12/2012			2	1	Oct 06/2010
		3	1	Oct 27/2011				2	Oct 06/2010
			2	Oct 27/2011	R		3	1	Nov 12/2012
			3	Oct 27/2011	R			2	Nov 12/2012
		4	1	Aug 11/2008			4	1	Oct 27/2011
								2	Oct 27/2011

A = Added, R = Revised, D = Deleted, O = Overflow

## 32-EFFECTIVE PAGES

Page 1

Nov 12/2012

D280A108



737-700/800

## WIRING DIAGRAM MANUAL

### CHAPTER 32 LANDING GEAR

CH-SC-SU	Schem	Page	Sheet	Date	CH-SC-SU	Schem	Page	Sheet	Date
32-64-11 (cont.)									
		5	1	May 03/2010					
			2	May 03/2010					
		6	1	Dec 19/2011					
			2	Dec 19/2011					
R		7	1	Nov 12/2012					
R			2	Nov 12/2012					
32-64-12									
		1	1	Oct 06/2010					
			2	Oct 06/2010					
R		2	1	Nov 12/2012					
R			2	Nov 12/2012					
		3	1	Feb 01/2010					
			2	Feb 01/2010					
R		4	1	Nov 12/2012					
R			2	Nov 12/2012					
32-64-21									
R		1		Nov 12/2012					
		2		May 11/2009					
		3		May 11/2009					
R		4		Nov 12/2012					
		5		Dec 19/2011					

A = Added, R = Revised, D = Deleted, O = Overflow

**32-EFFECTIVE PAGES**

D280A108

Page 2  
Nov 12/2012



737-700/800

## WIRING DIAGRAM MANUAL

### CHAPTER 32 LANDING GEAR

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
<b>LANDING GEAR CONTROL SYSTEM</b>						
AIR/GND SYSTEM 1 & LEVER LATCH	32-31-11		1	1	Oct 06/2010	YC051-YD152
				2	Oct 06/2010	YC051-YD152
				3	Oct 06/2010	YC051-YD152
		1.1	1		Feb 10/2005	YC051-YC054
			2		Feb 10/2005	YC051-YC054
			3		Feb 10/2005	YC051-YC054
		1.2	1		Oct 06/2010	YC060-YC064
			2		Oct 06/2010	YC060-YC064
			3		Oct 06/2010	YC060-YC064
		2	1		Nov 12/2012	YD153-YD157
			2		Nov 12/2012	YD153-YD157
			3		Nov 12/2012	YD153-YD157
		3	1		Oct 27/2011	YD158
			2		Oct 27/2011	YD158
			3		Oct 27/2011	YD158
		4	1		Feb 01/2010	YL951-YL999
			2		Feb 01/2010	YL951-YL999
			3		Feb 01/2010	YL951-YL999
		5	1		Dec 19/2011	YN231-YN260
			2		Dec 19/2011	YN231-YN260
			3		Dec 19/2011	YN231-YN260
		6	1		Oct 06/2010	YN501
			2		Oct 06/2010	YN501
			3		Oct 06/2010	YN501
		7	1		Aug 14/2012	YR301-YR316 YR319
			2		Aug 14/2012	YR301-YR316 YR319
			3		Aug 14/2012	YR301-YR316 YR319
		8	1		Nov 12/2012	YR317-YR318 YR320-YR328
			2		Nov 12/2012	YR317-YR318 YR320-YR328
			3		Nov 12/2012	YR317-YR318 YR320-YR328

## 32-CONTENTS

Page 1  
Nov 12/2012

D280A108



737-700/800

## WIRING DIAGRAM MANUAL

### CHAPTER 32 LANDING GEAR

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity	
AIR/GND SYSTEM 2 AND NOSE GEAR GROUND SENSING RELAYS	32-31-12		1	1	Oct 06/2010	YC051-YD152	
				2	Oct 06/2010	YC051-YD152	
				3	Oct 06/2010	YC051-YD152	
				2	1	Nov 12/2012	YD153-YD157
					2	Nov 12/2012	YD153-YD157
					3	Nov 12/2012	YD153-YD157
				3	1	Oct 27/2011	YD158
					2	Oct 27/2011	YD158
					3	Oct 27/2011	YD158
				4	1	Aug 11/2008	YL951-YL952
					2	Aug 11/2008	YL951-YL952
					3	Aug 11/2008	YL951-YL952
				5	1	May 11/2009	YL953-YL954
					2	May 11/2009	YL953-YL954
					3	May 11/2009	YL953-YL954
				6	1	Aug 03/2009	YL955
					2	Aug 03/2009	YL955
					3	Aug 03/2009	YL955
				7	1	Feb 01/2010	YL956-YL999
					2	Feb 01/2010	YL956-YL999
					3	Feb 01/2010	YL956-YL999
				8	1	Aug 03/2009	YN231-YN235
					2	Aug 03/2009	YN231-YN235
					3	Aug 03/2009	YN231-YN235
				9	1	Dec 01/2010	YN236-YN260
					2	Dec 01/2010	YN236-YN260
					3	Dec 01/2010	YN236-YN260
				10	1	Dec 01/2010	YN501
					2	Dec 01/2010	YN501
					3	Dec 01/2010	YN501
				11	1	Nov 12/2012	YR301-YR328
					2	Nov 12/2012	YR301-YR328

## 32-CONTENTS

Page 2  
Nov 12/2012

D280A108



737-700/800

## WIRING DIAGRAM MANUAL

### CHAPTER 32 LANDING GEAR

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
AIR/GND SYSTEM 2 AND NOSE GEAR GROUND SENSING RELAYS (cont.)	32-31-12			3	Nov 12/2012	YR301-YR328
<b><u>ALTERNATE EXTENSION</u></b>						
ALTERNATE LANDING GEAR EXTENSION SYSTEM	32-35-11		1		Nov 12/2012	YC051-YL968 YN231-YN236 YN501
			2		Nov 12/2012	YL969-YL999 YN237-YN260 YR301-YR328
<b><u>ANTISKID BRAKE SYSTEM</u></b>						
ANTISKID SYSTEM	32-41-11		1	1	Nov 12/2012	YC051-YD158
				2	Nov 12/2012	YC051-YD158
			2	1	Nov 12/2012	YD160-YR328
				2	Nov 12/2012	YD160-YR328
<b><u>AUTOBRAKE SYSTEM</u></b>						
AUTOBRAKE SYSTEM	32-42-11		1	1	Oct 06/2010	YC051-YD152
				2	Oct 06/2010	YC051-YD152
			2	1	Nov 12/2012	YD153-YR328
				2	Nov 12/2012	YD153-YR328
<b><u>PARKING BRAKE SYSTEM</u></b>						
PARKING BRAKE SYSTEM	32-44-11		1		Nov 12/2012	YC051-YD157
			2		Oct 27/2011	YD158
			3		Nov 12/2012	YD160-YR328
<b><u>NOSE WHEEL STEERING SYSTEM</u></b>						
NOSE GEAR STEERING	32-51-11		1		Nov 12/2012	ALL
<b><u>LANDING GEAR POSITION INDICATING AND WARNING SYSTEM</u></b>						
LANDING GEAR POSITION INDICATING SYSTEM 1	32-64-11		1	1	Feb 10/2005	YC051-YC061
				2	Feb 10/2005	YC051-YC061
			2	1	Oct 06/2010	YC062-YD152
				2	Oct 06/2010	YC062-YD152
			3	1	Nov 12/2012	YD153-YD157
				2	Nov 12/2012	YD153-YD157
			4	1	Oct 27/2011	YD158-YD170
				2	Oct 27/2011	YD158-YD170

## 32-CONTENTS

Page 3  
Nov 12/2012

D280A108



737-700/800

## WIRING DIAGRAM MANUAL

### CHAPTER 32 LANDING GEAR

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
LANDING GEAR POSITION INDICATING SYSTEM 1 (cont.)	32-64-11		5	1	May 03/2010	YL951-YL959 YN231-YN235
				2	May 03/2010	YL951-YL959 YN231-YN235
			6	1	Dec 19/2011	YL963-YL999 YN236-YN260
				2	Dec 19/2011	YL963-YL999 YN236-YN260
			7	1	Nov 12/2012	YN501-YR328
				2	Nov 12/2012	YN501-YR328
LANDING GEAR POSITION INDICATING SYSTEM 2	32-64-12		1	1	Oct 06/2010	YC051-YD152
				2	Oct 06/2010	YC051-YD152
			2	1	Nov 12/2012	YD153-YL952 YN231-YN232
				2	Nov 12/2012	YD153-YL952 YN231-YN232
			3	1	Feb 01/2010	YL953-YL963 YN233-YN235
				2	Feb 01/2010	YL953-YL963 YN233-YN235
			4	1	Nov 12/2012	YL964-YL999 YN236-YR328
				2	Nov 12/2012	YL964-YL999 YN236-YR328
LANDING GEAR WARNING	32-64-21		1		Nov 12/2012	YC051-YD170 YN231
				2	May 11/2009	YL951-YL952 YN232-YN235
			3		May 11/2009	YL953-YL954
			4		Nov 12/2012	YL955-YL999 YR301-YR328
			5		Dec 19/2011	YN236-YN501

## 32-CONTENTS

D280A108

Page 4  
Nov 12/2012



737-700/800

## WIRING DIAGRAM MANUAL

### CHAPTER 32 LANDING GEAR

CH-SC-SU	Title
32-31-11	AIR/GND SYSTEM 1 & LEVER LATCH
32-31-12	AIR/GND SYSTEM 2 AND NOSE GEAR GROUND SENSING RELAYS
32-35-11	ALTERNATE LANDING GEAR EXTENSION SYSTEM
32-41-11	ANTISKID SYSTEM
32-42-11	AUTOBRAKE SYSTEM
32-64-11	LANDING GEAR POSITION INDICATING SYSTEM 1
32-64-12	LANDING GEAR POSITION INDICATING SYSTEM 2
32-64-21	LANDING GEAR WARNING
32-51-11	NOSE GEAR STEERING
32-44-11	PARKING BRAKE SYSTEM


## 32-ALPHABETICAL INDEX

D280A108

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 1  
Aug 30/2007



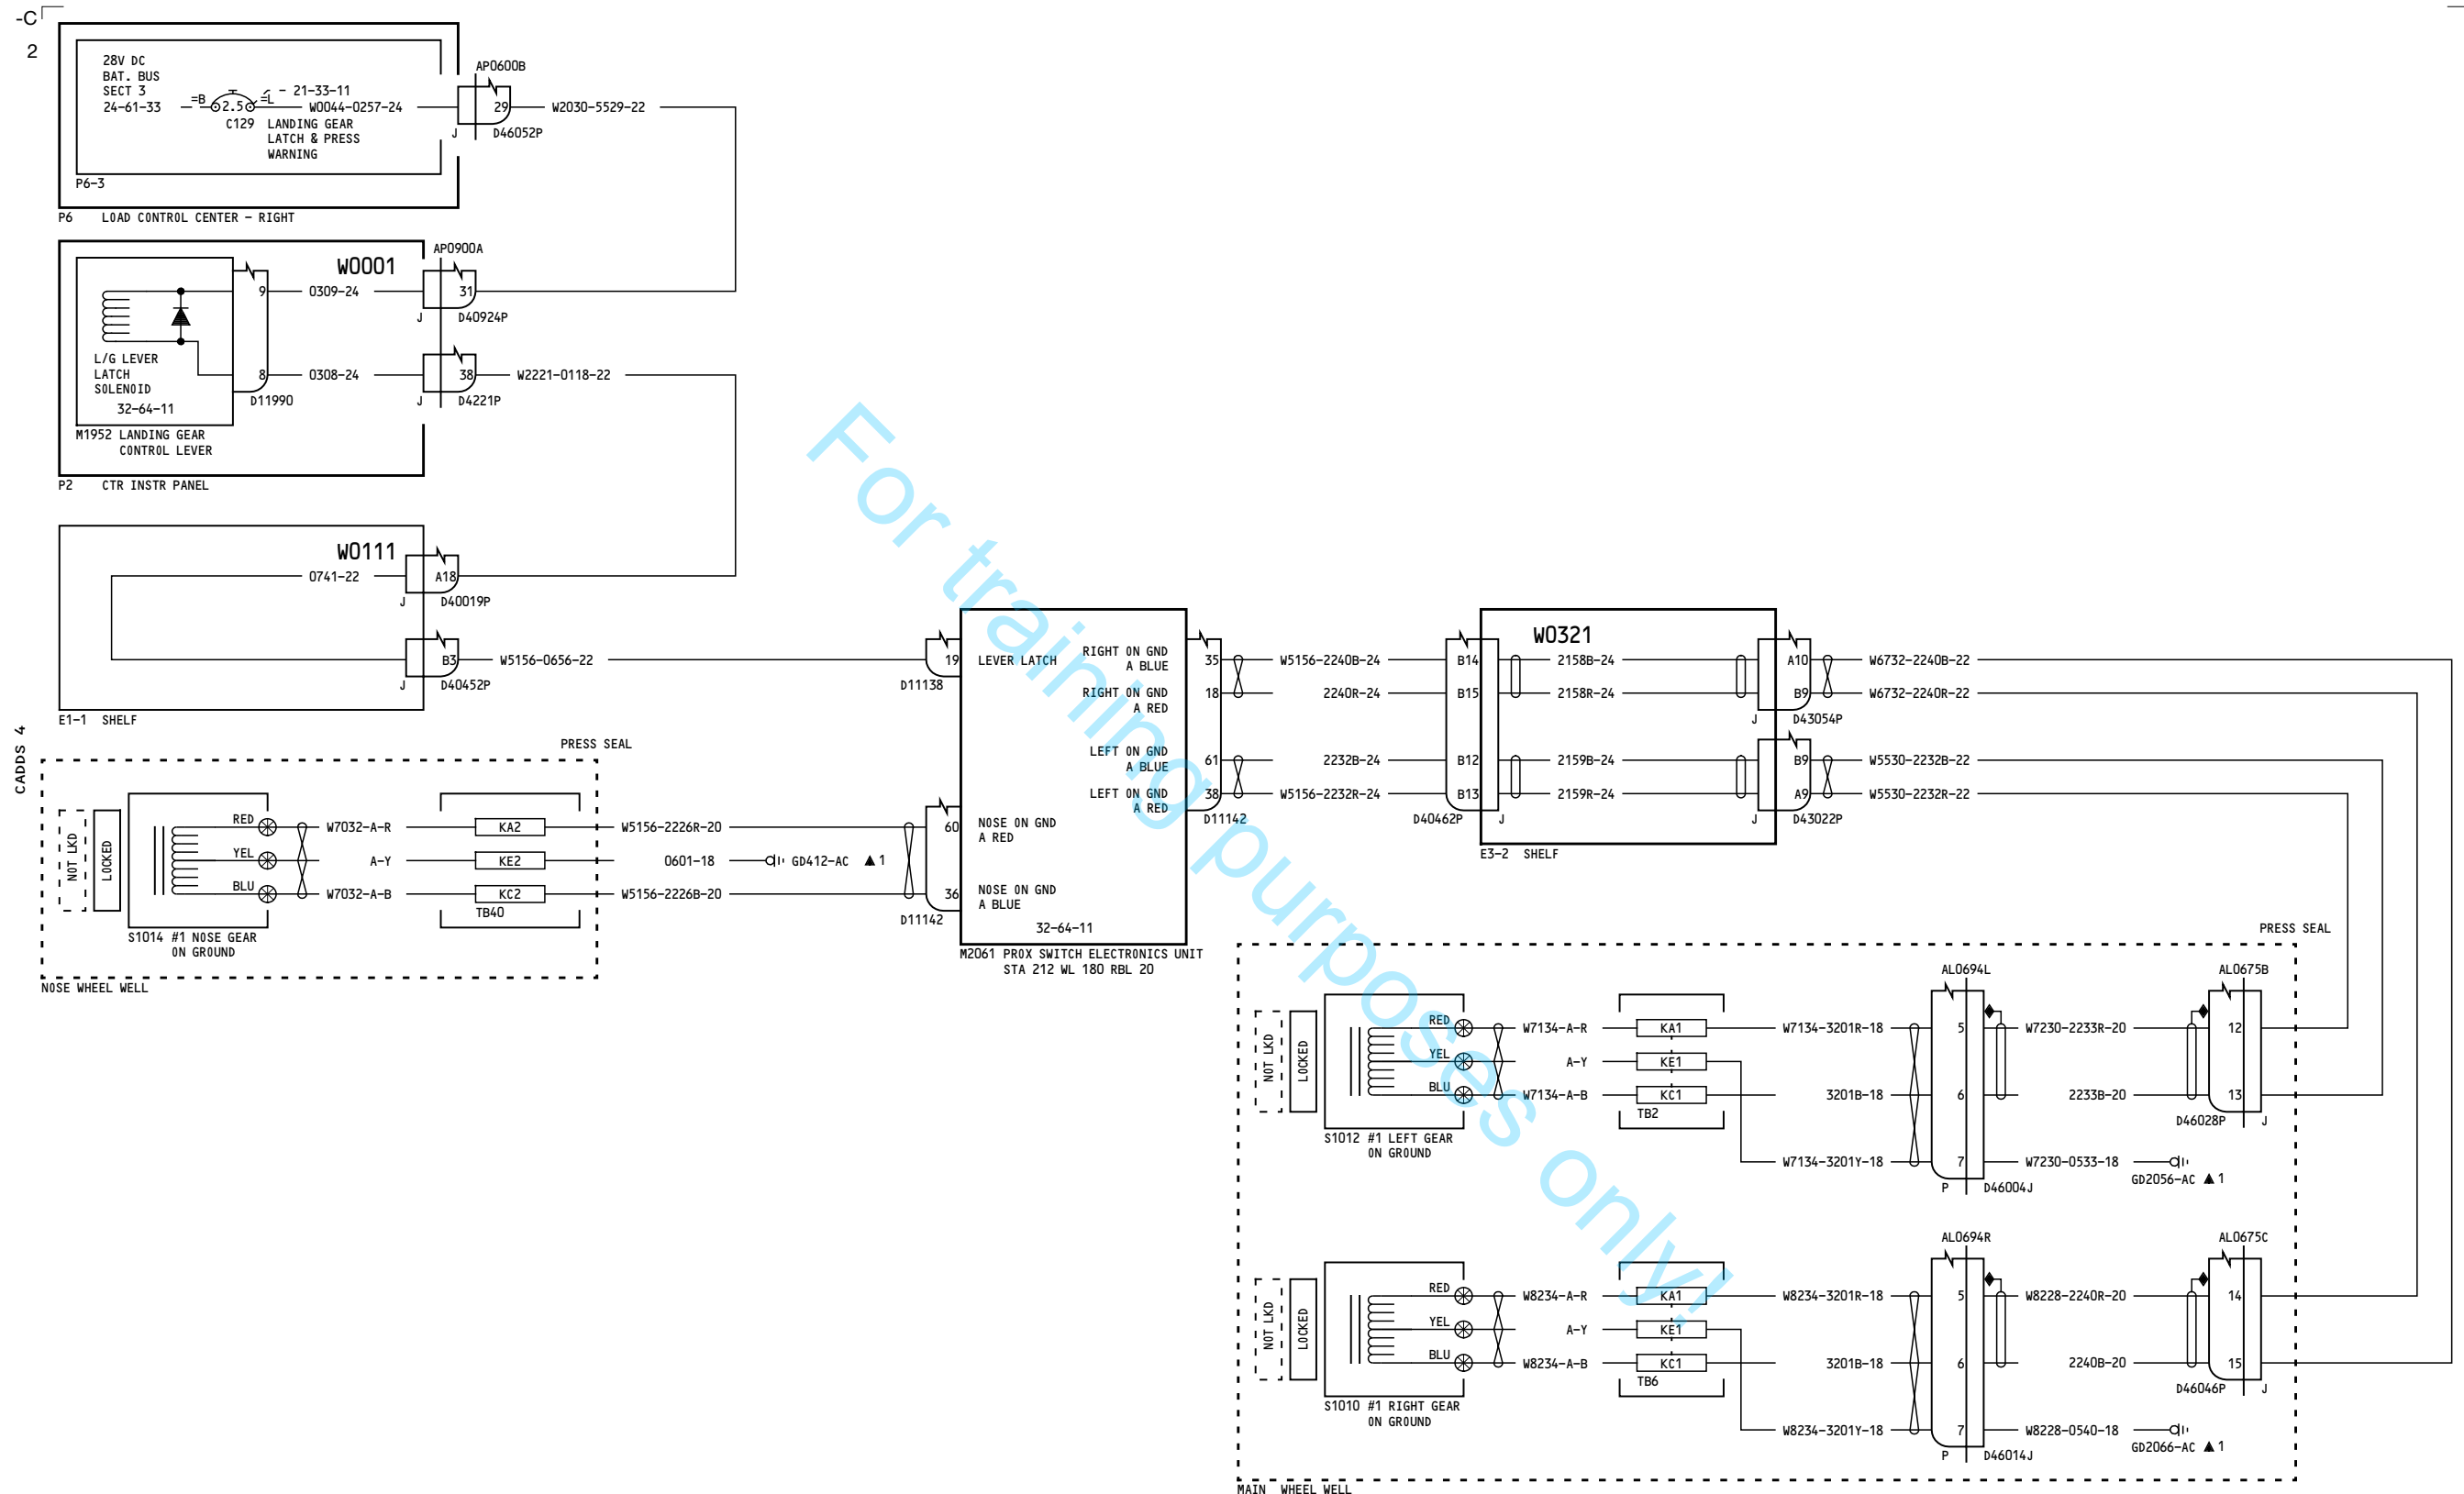

YC051-YD152

**AIR/GND SYSTEM 1 & LEVER LATCH**


D280A108

**32-31-11**

Page 1  
Sheet 1  
Oct 06/2010

**32-31-11**

Page 1  
Sheet 1  
Oct 06/2010

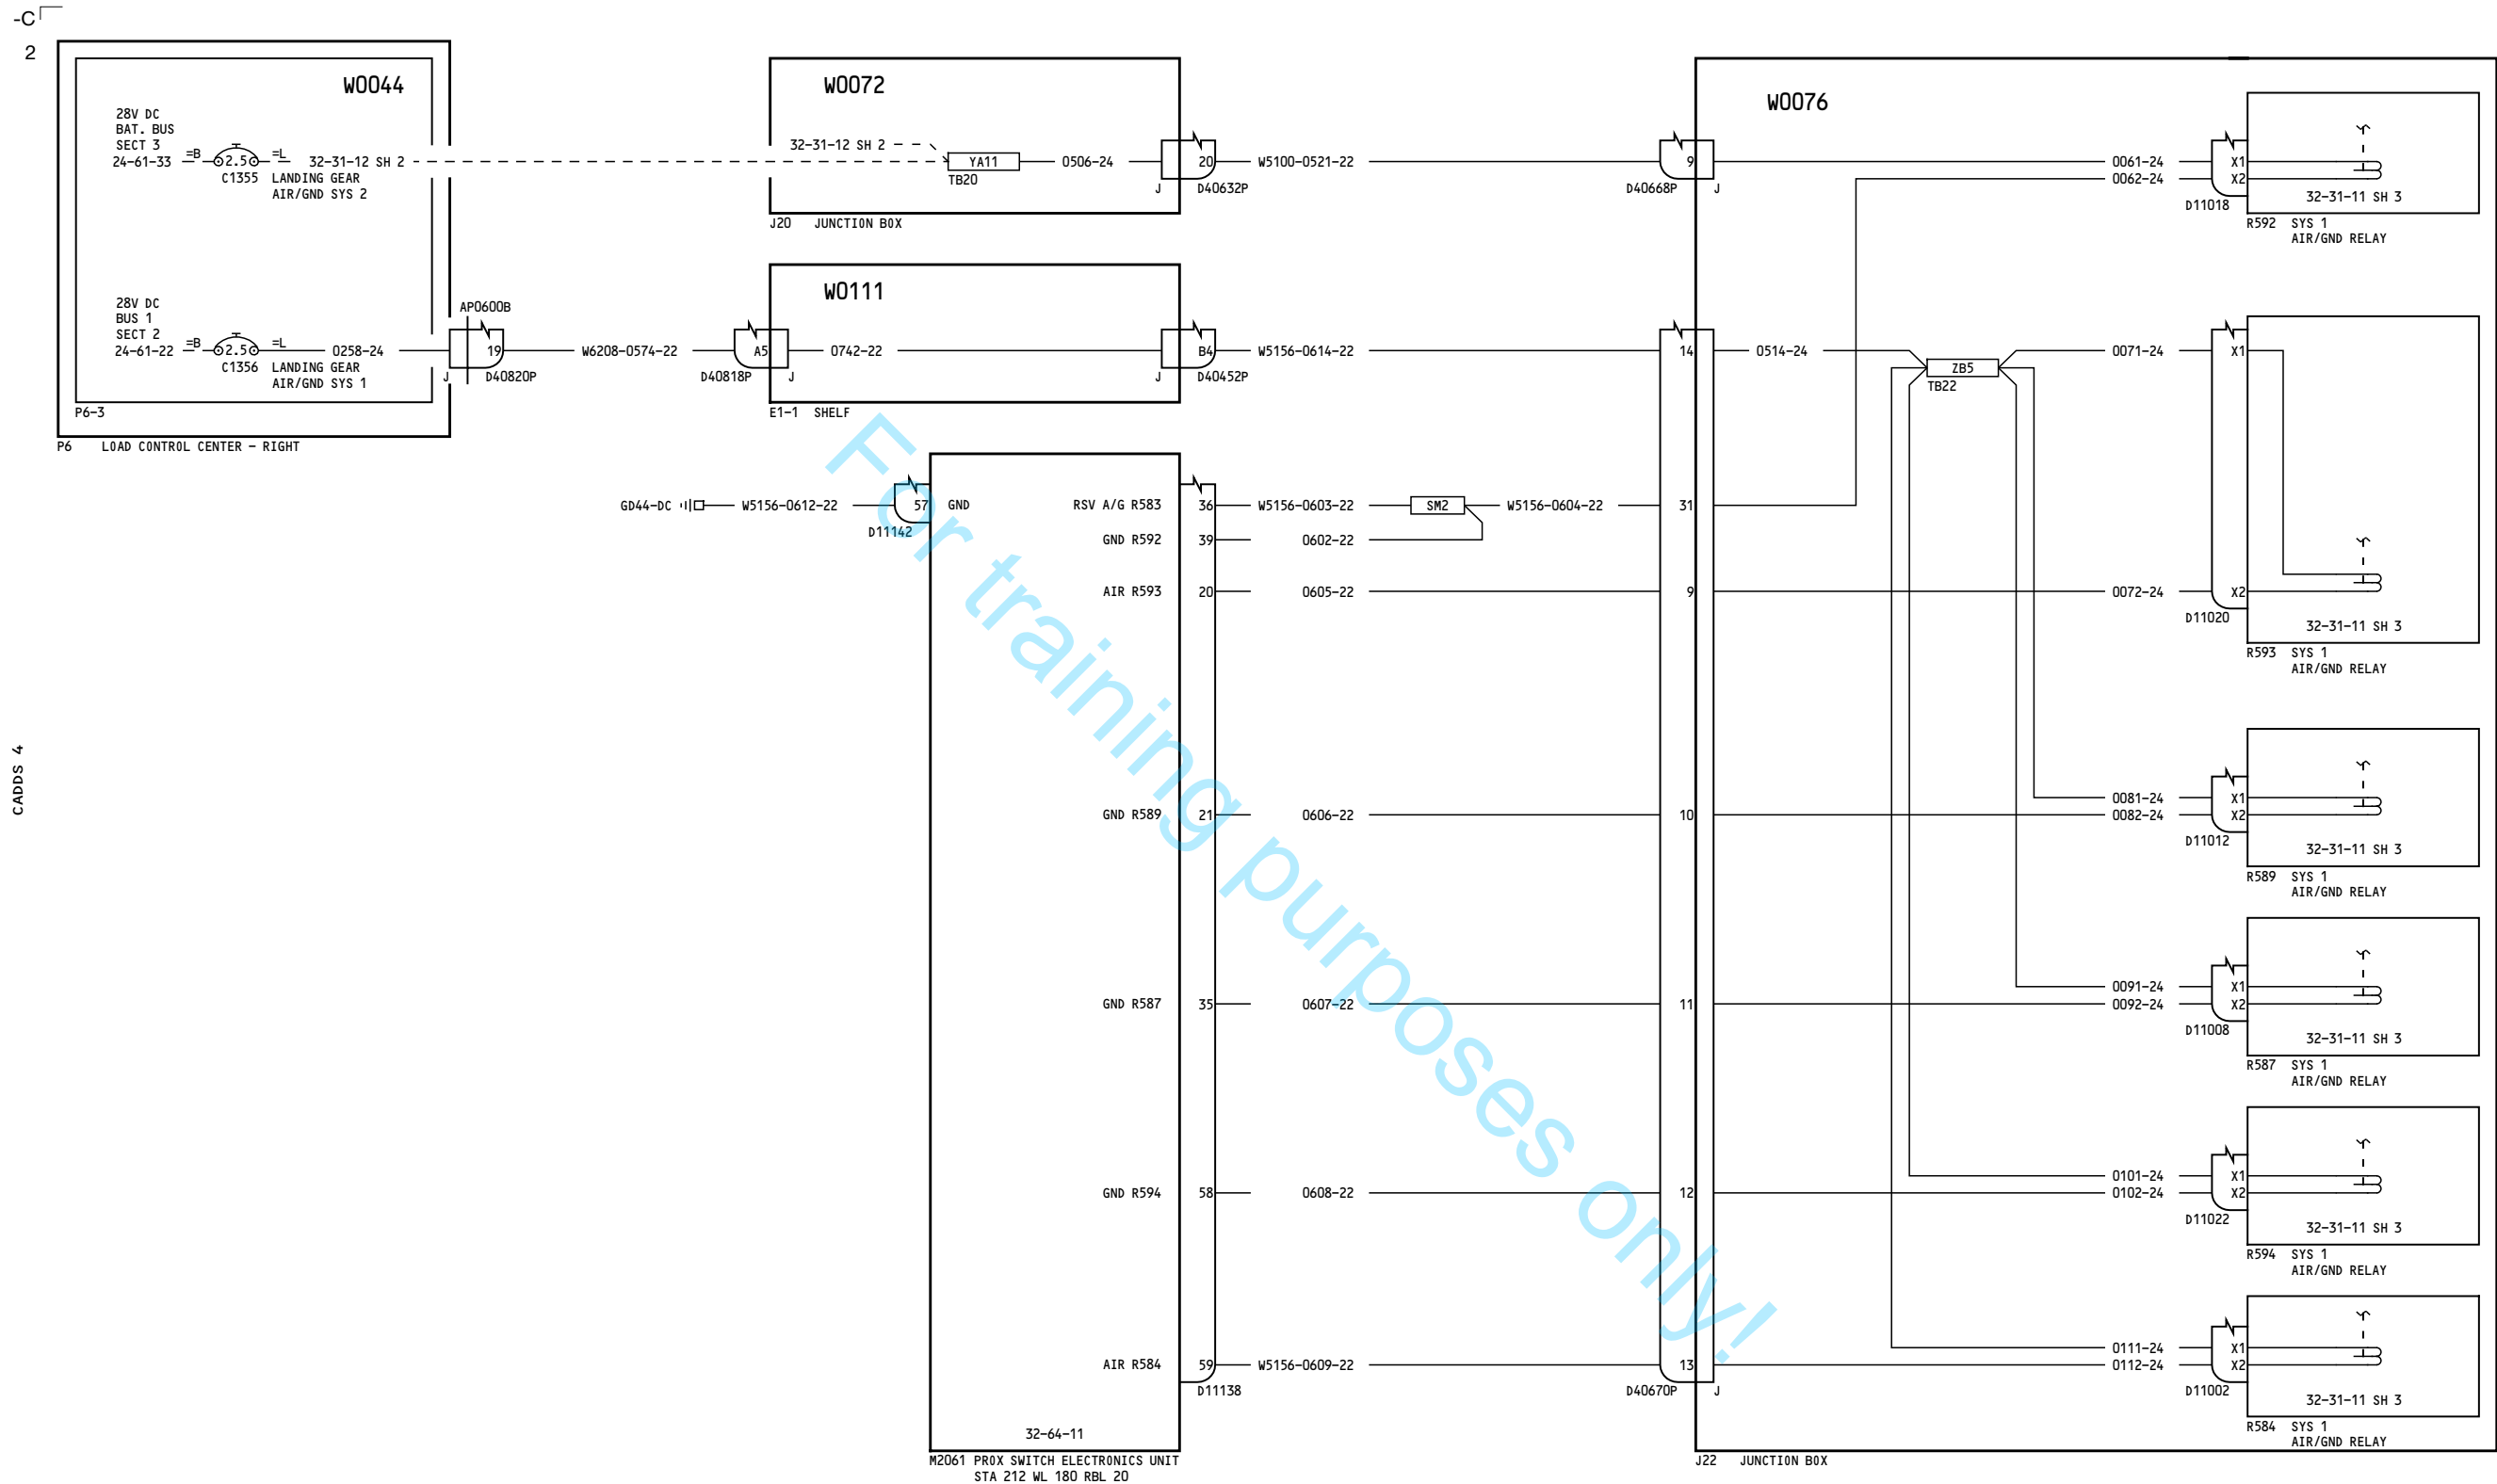

YC051-YD152

**AIR/GND SYSTEM 1 & LEVER  
LATCH**

D280A108



**32-31-11**

Page 1  
Sheet 2  
Oct 06/2010

**32-31-11**

Page 1  
Sheet 2  
Oct 06/2010

-F  
2

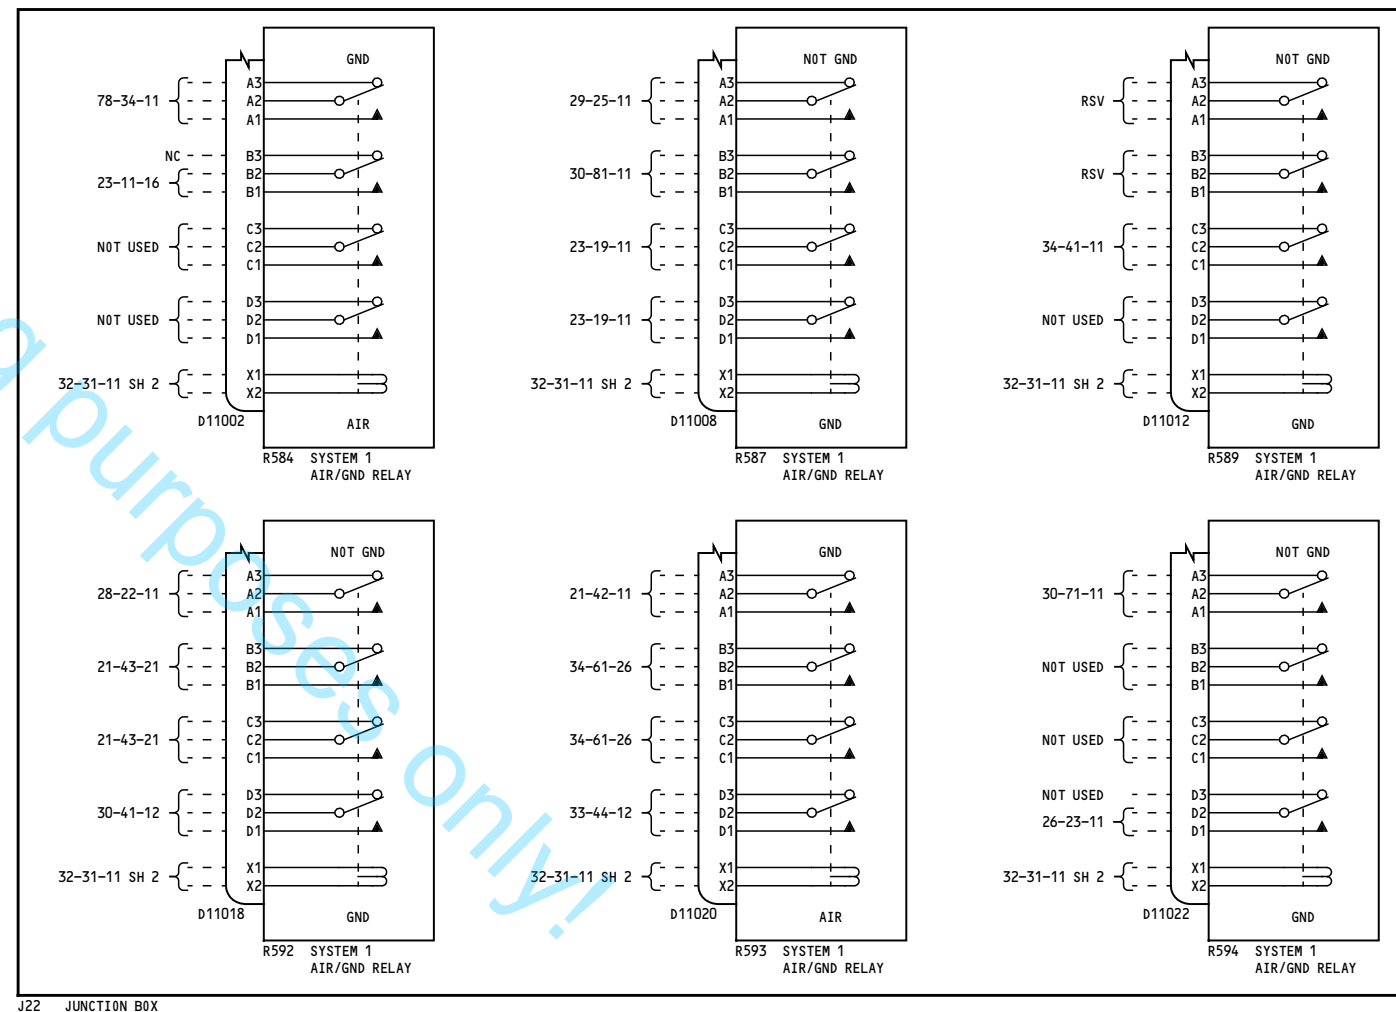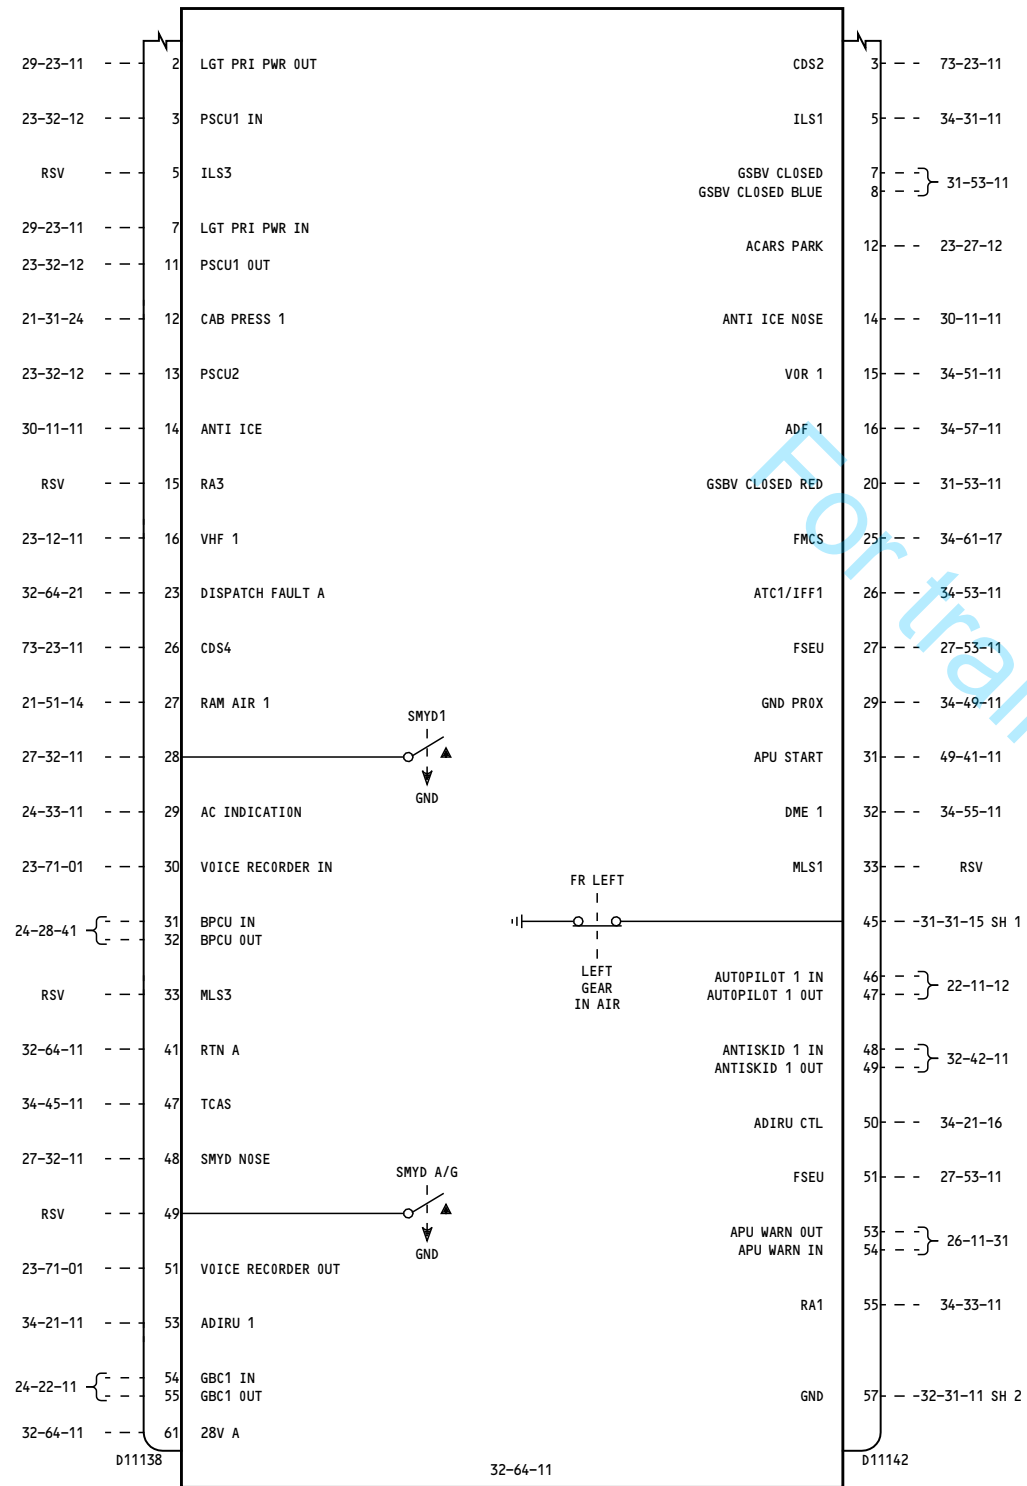

## NOTES:

THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

YC051-YD152

**AIR/GND SYSTEM 1 & LEVER  
LATCH**


D280A108

**32-31-11**

Page 1  
Sheet 3  
Oct 06/2010

**32-31-11**

Page 1  
Sheet 3  
Oct 06/2010

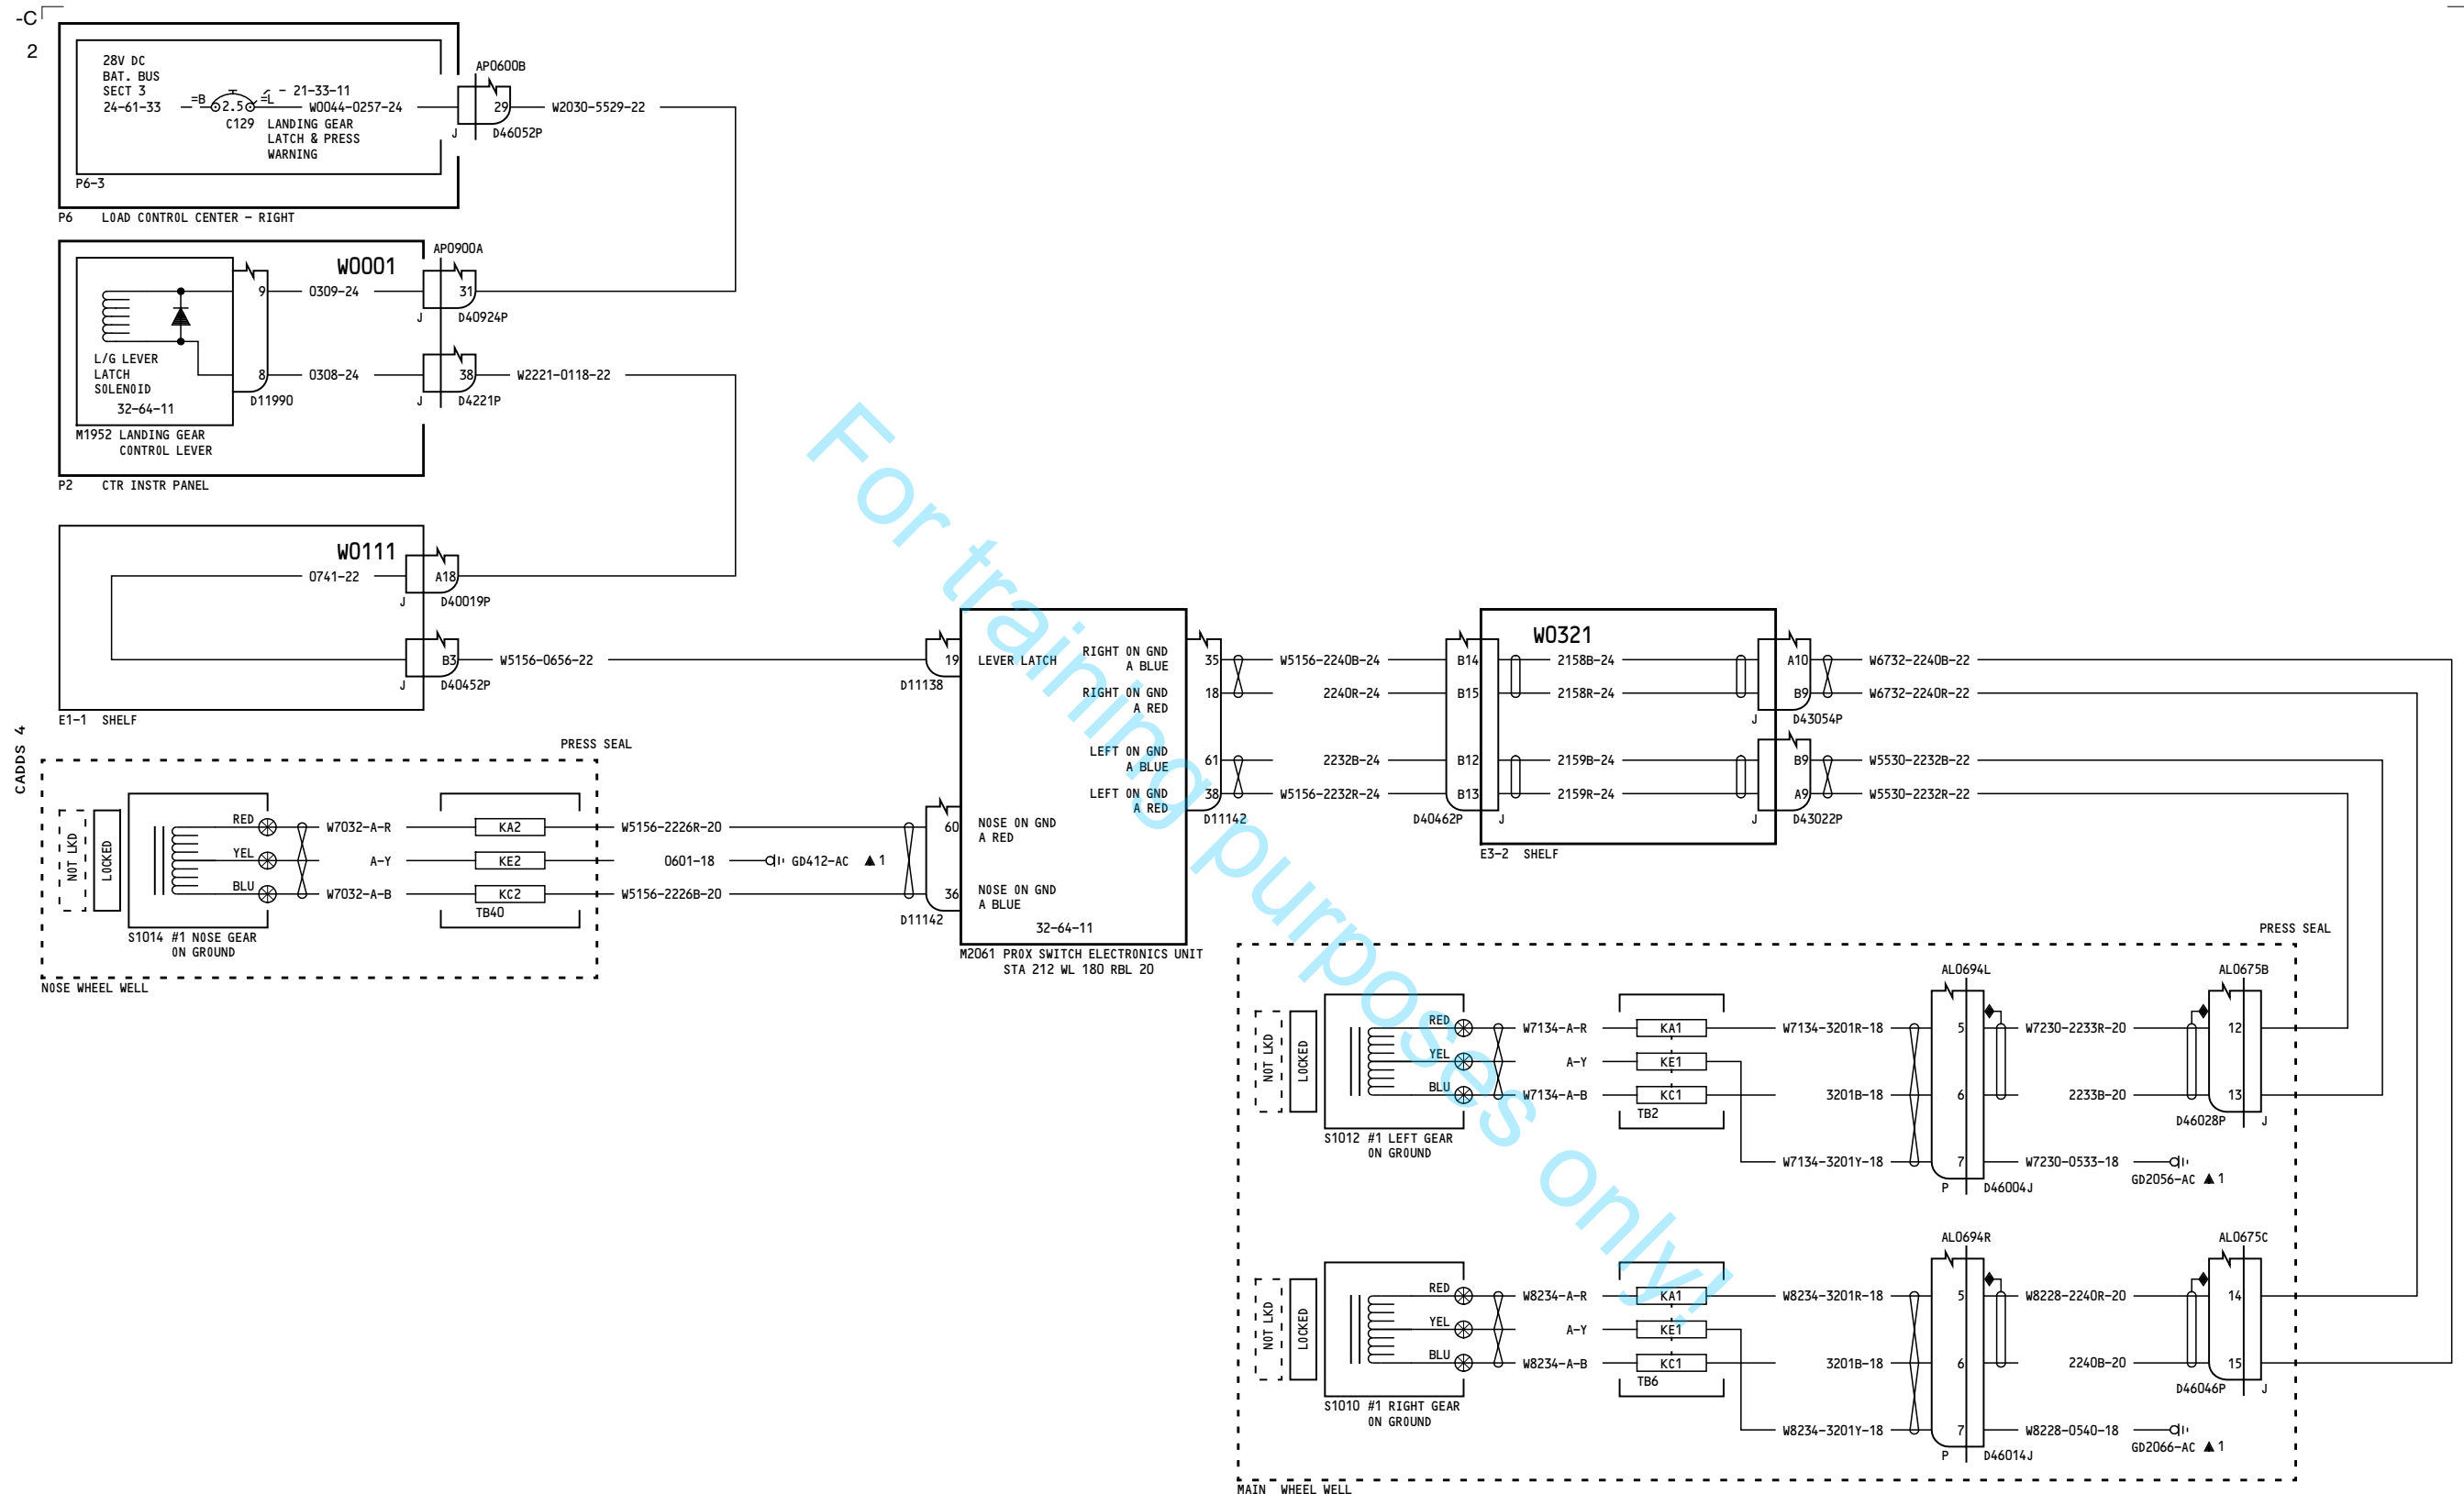

YC051-YC054

**AIR/GND SYSTEM 1 & LEVER LATCH**


D280A108

**32-31-11**

Page 1.1  
Sheet 1  
Feb 10/2005

**32-31-11**

Page 1.1  
Sheet 1  
Feb 10/2005

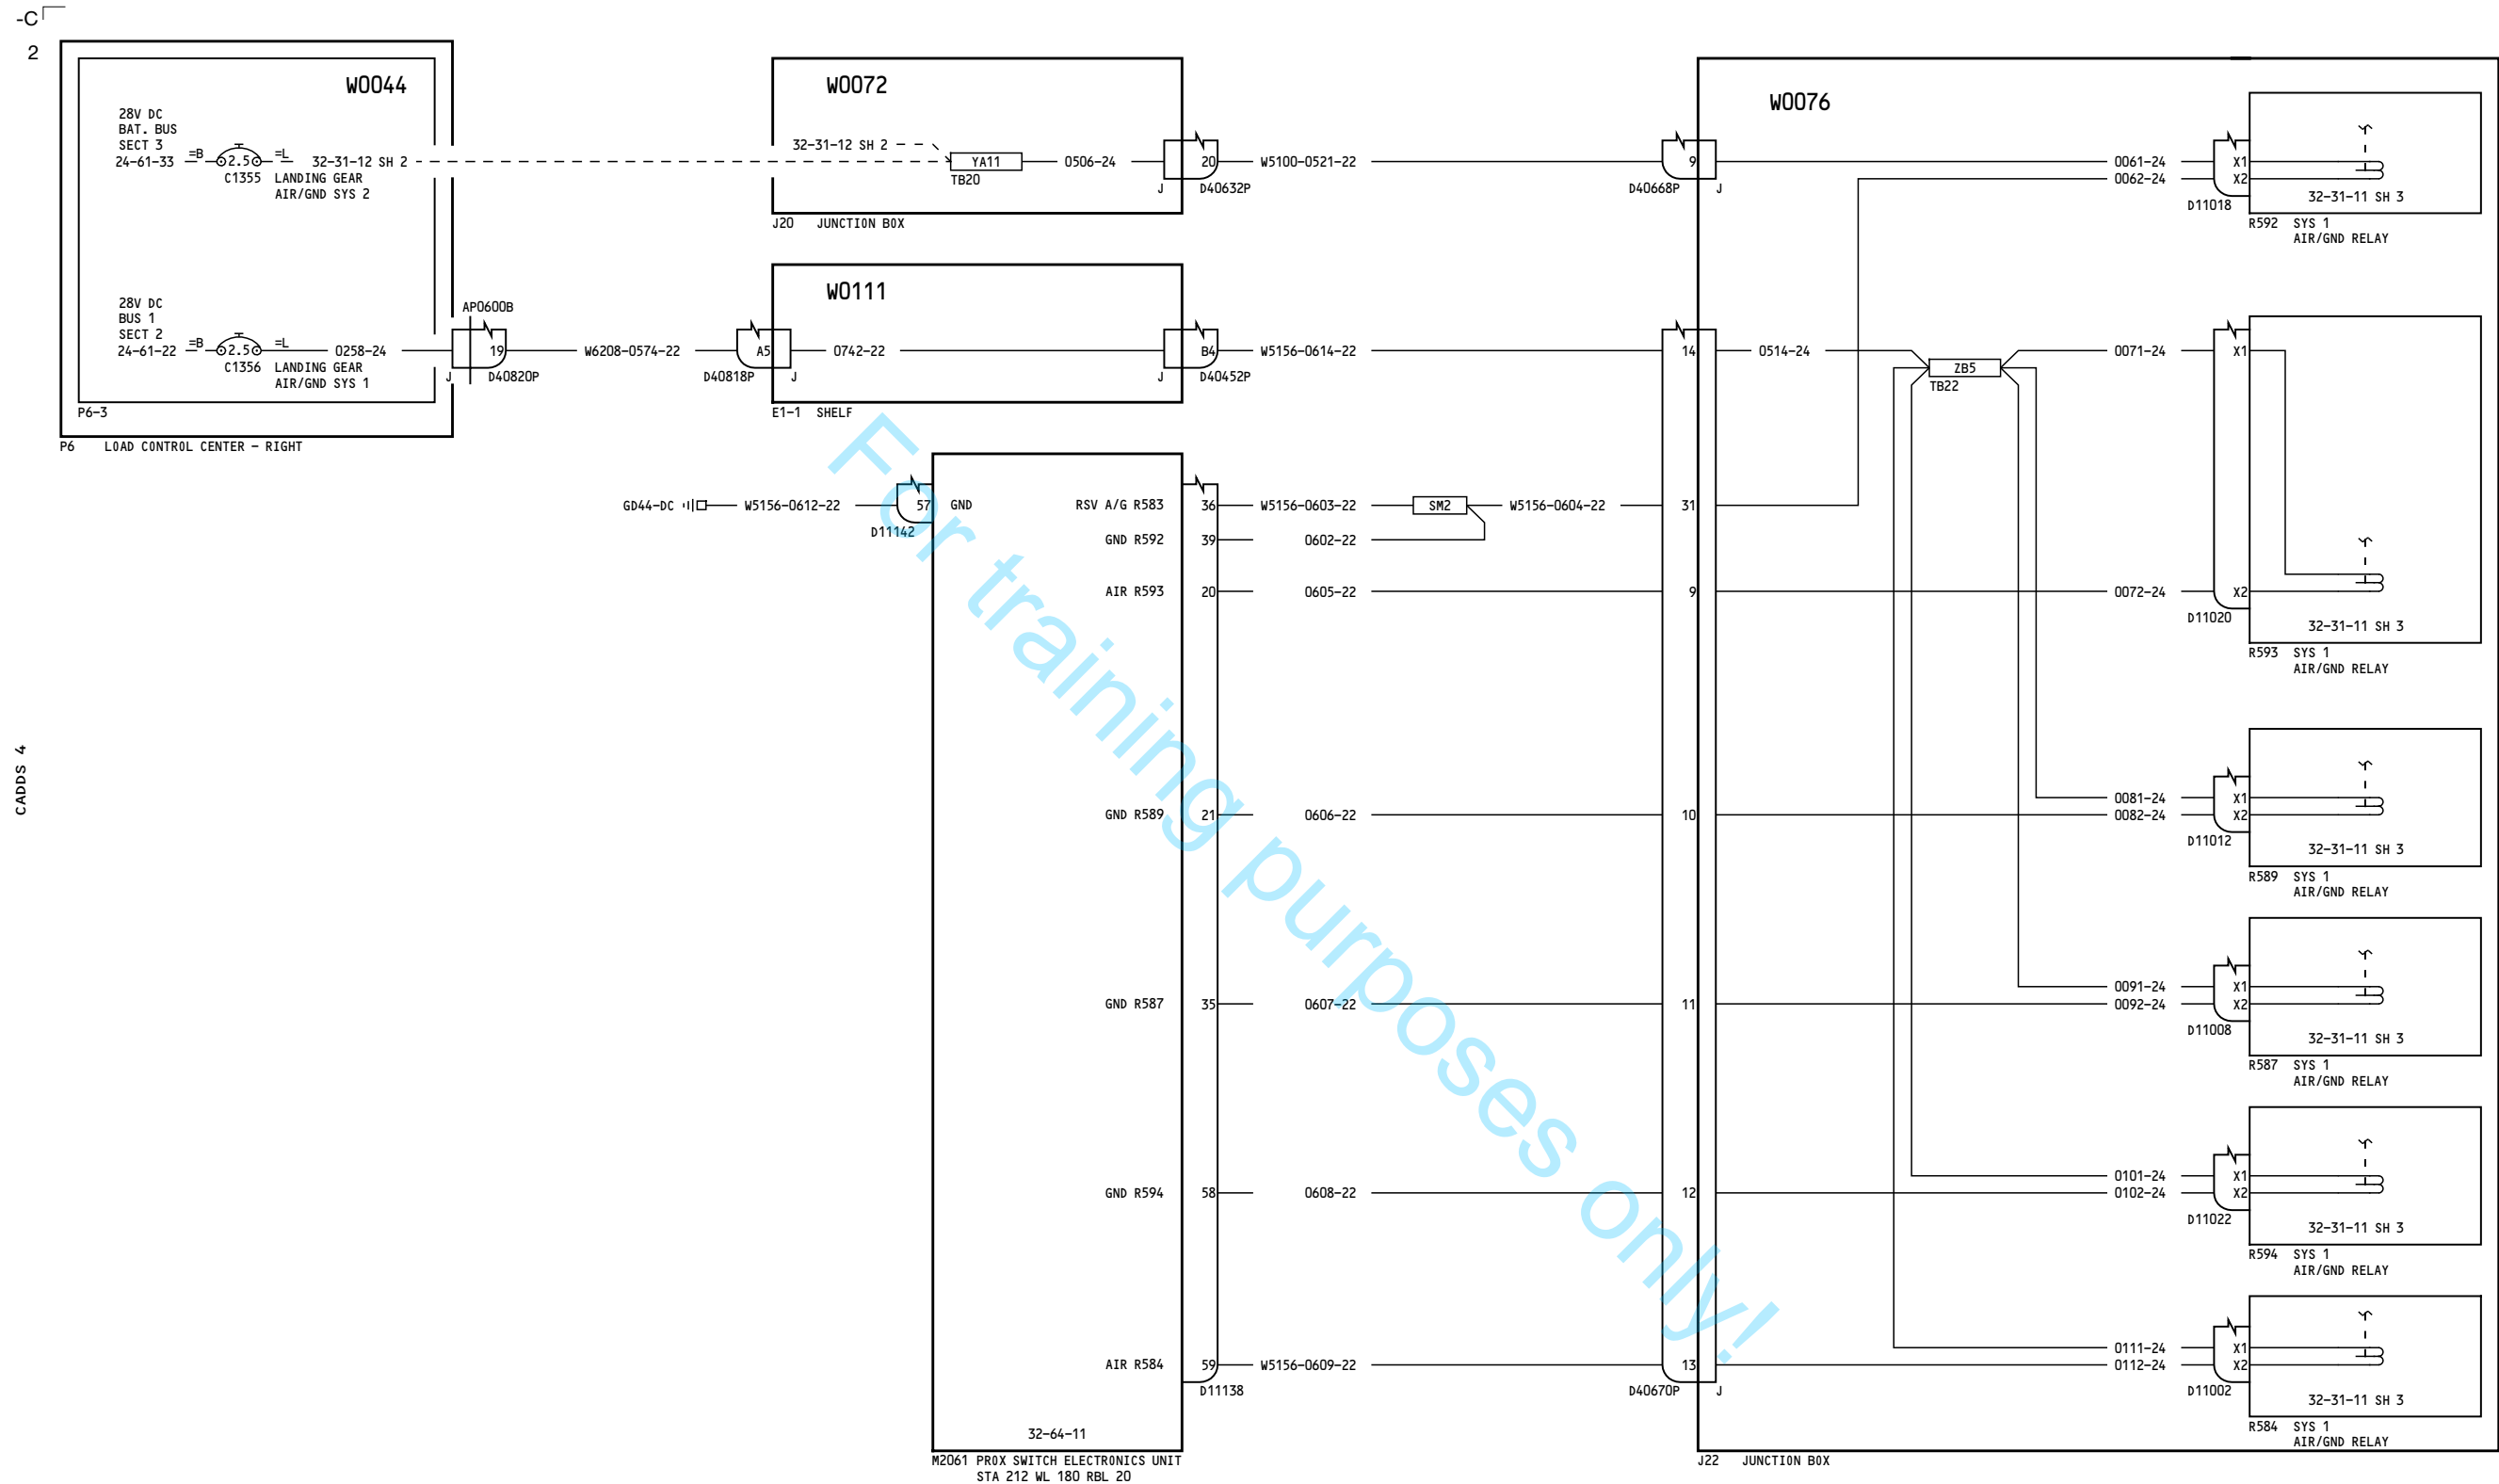

YC051-YC054

AIR/GND SYSTEM 1 & LEVER LATCH

D280A108


32-31-11

Page 1.1  
Sheet 2  
Feb 10/2005

32-31-11

Page 1.1  
Sheet 2  
Feb 10/2005


-E  
6

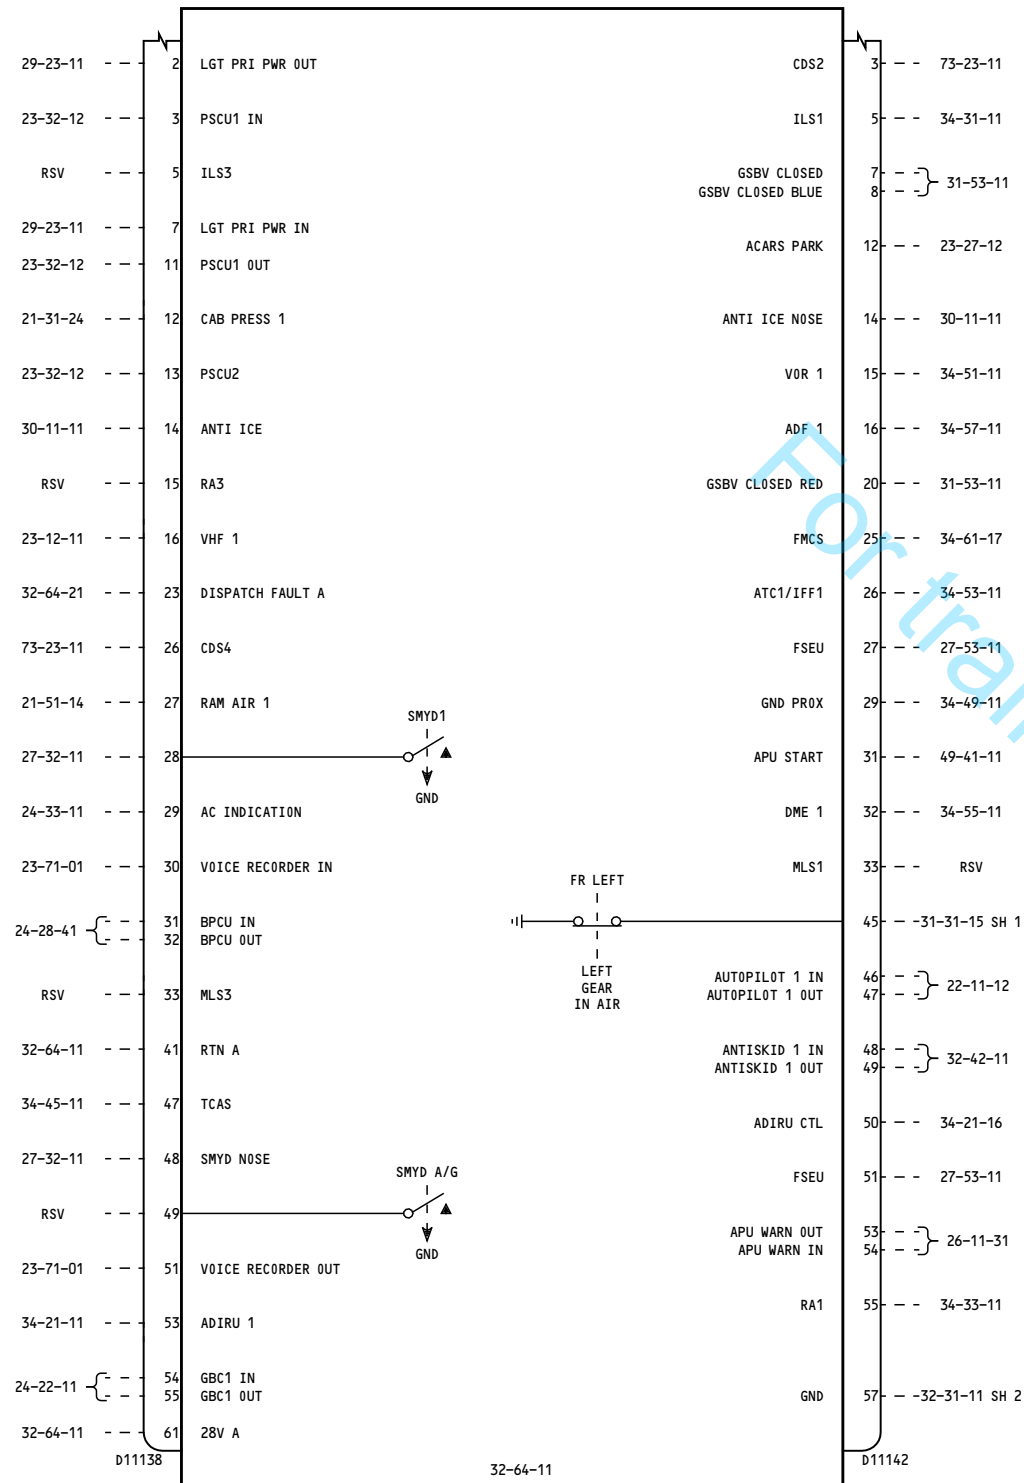

**NOTES:**

THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

1 D11142: FSEU REVISED FROM PIN 27 TO 51 PER SB 27A1219

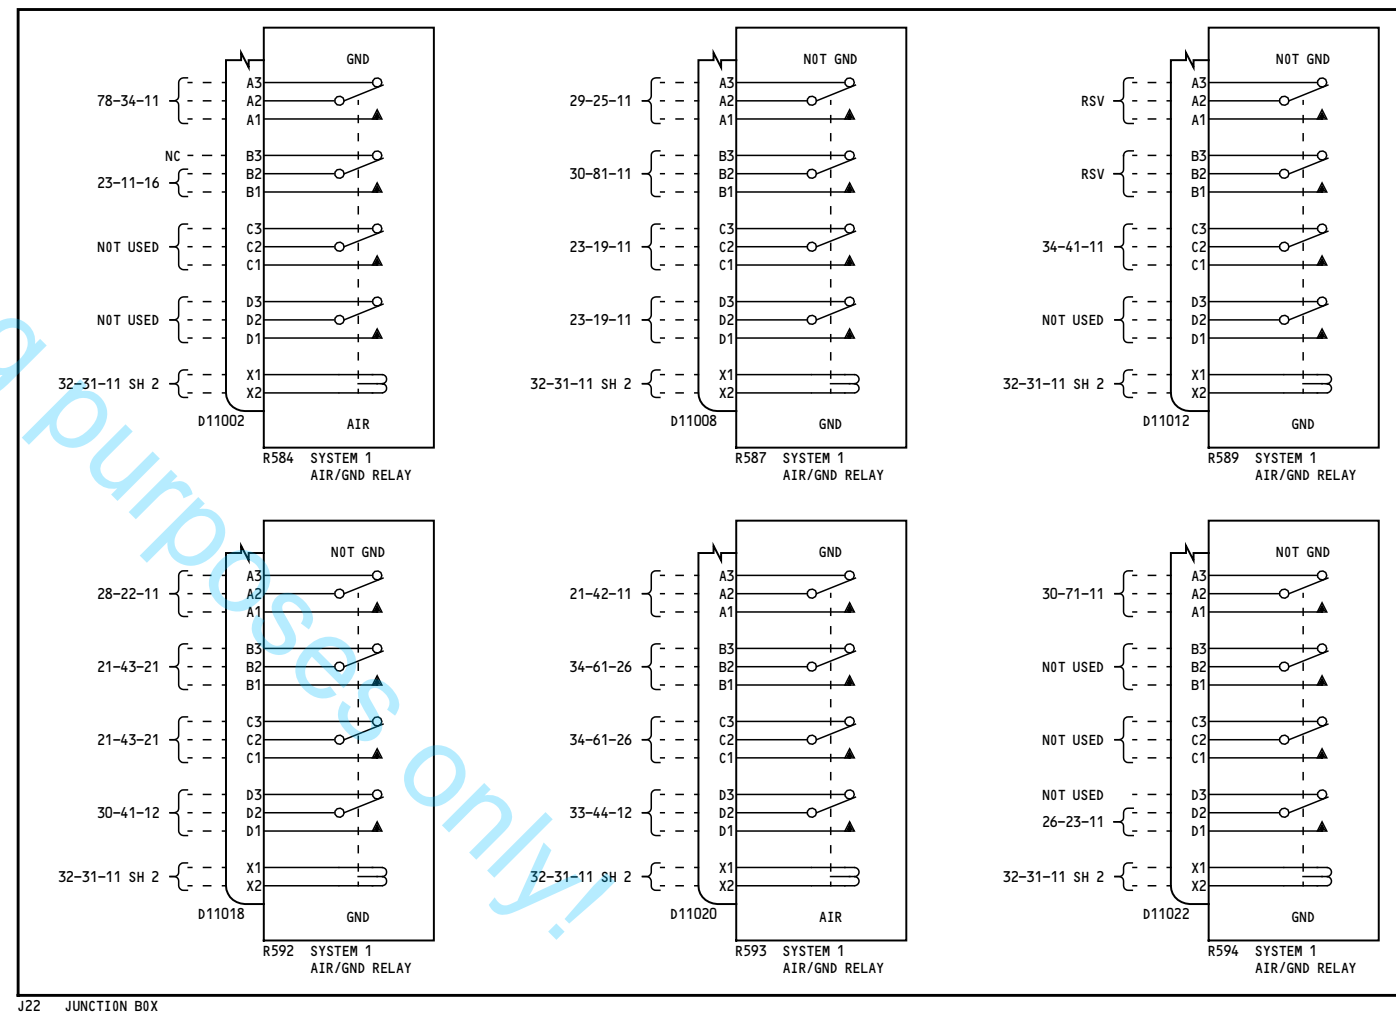

YC051-YC054

**AIR/GND SYSTEM 1 & LEVER  
LATCH**

D280A108


**32-31-11**

Page 1.1  
Sheet 3  
Feb 10/2005

Incorporates  
27A1219

**32-31-11**

Page 1.1  
Sheet 3  
Feb 10/2005

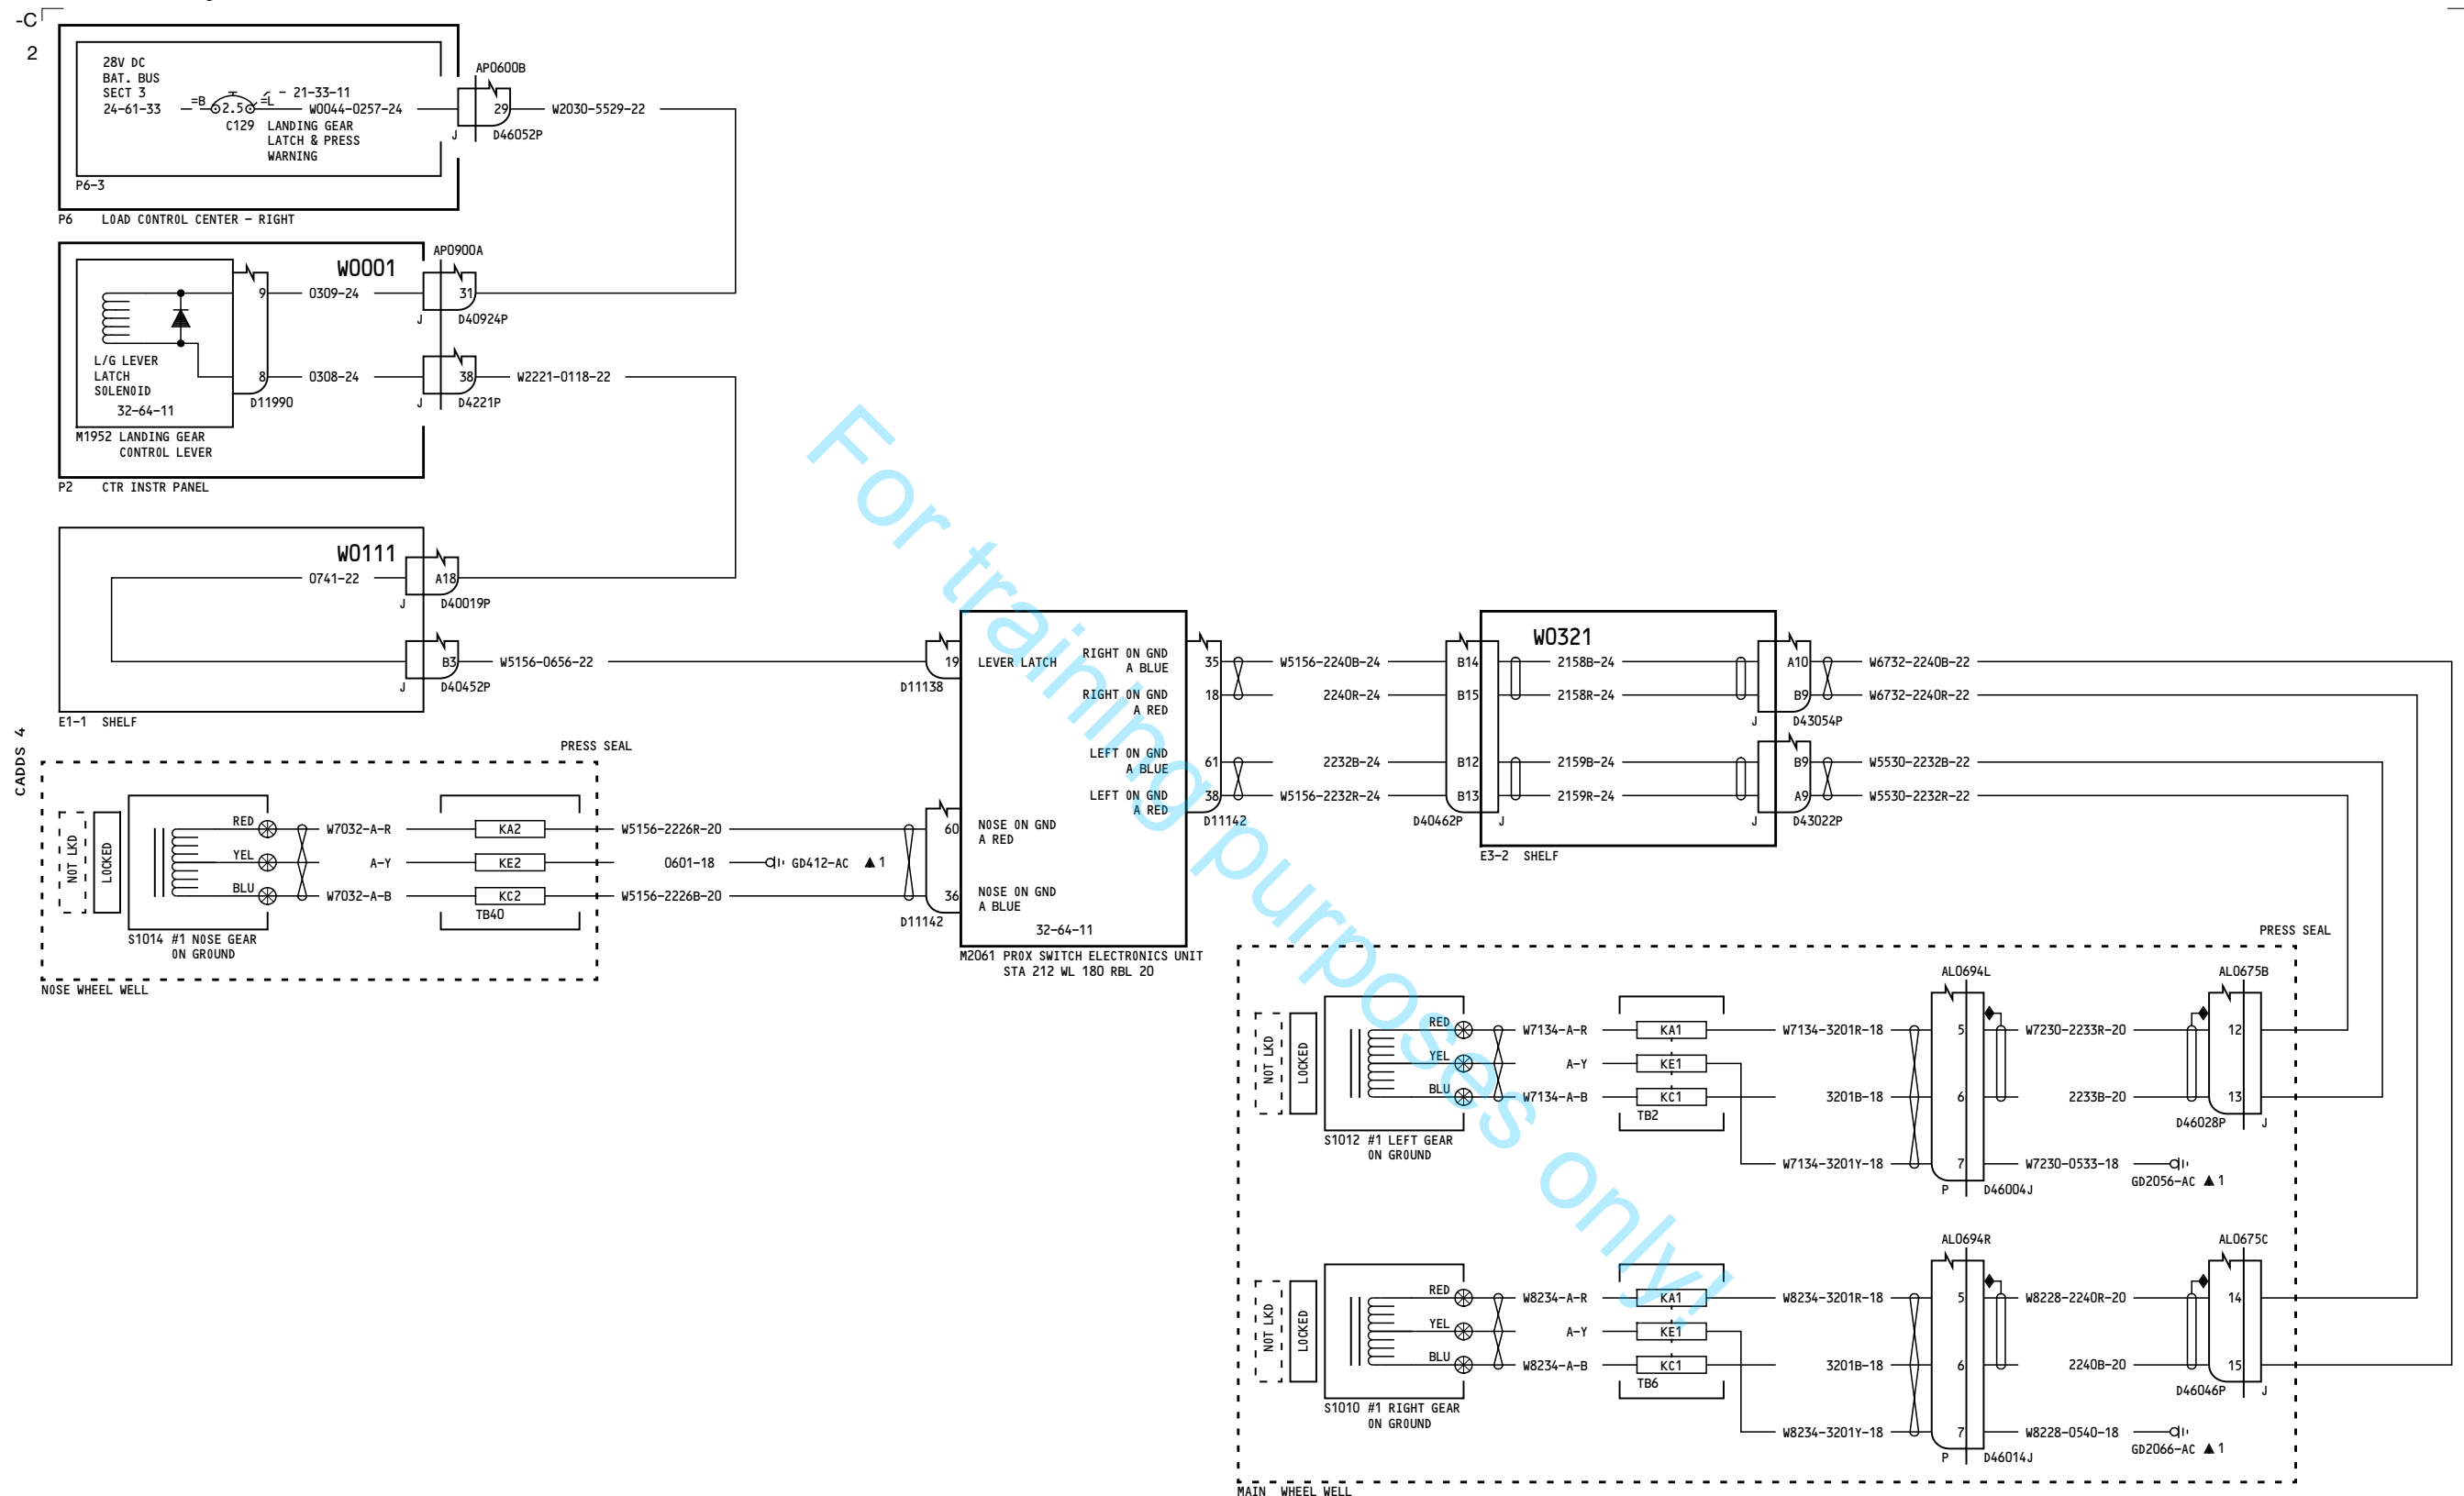

YC060-YC064

**AIR/GND SYSTEM 1 & LEVER LATCH**


D280A108

**32-31-11**

Page 1.2  
Sheet 1  
Oct 06/2010

**32-31-11**

Page 1.2  
Sheet 1  
Oct 06/2010

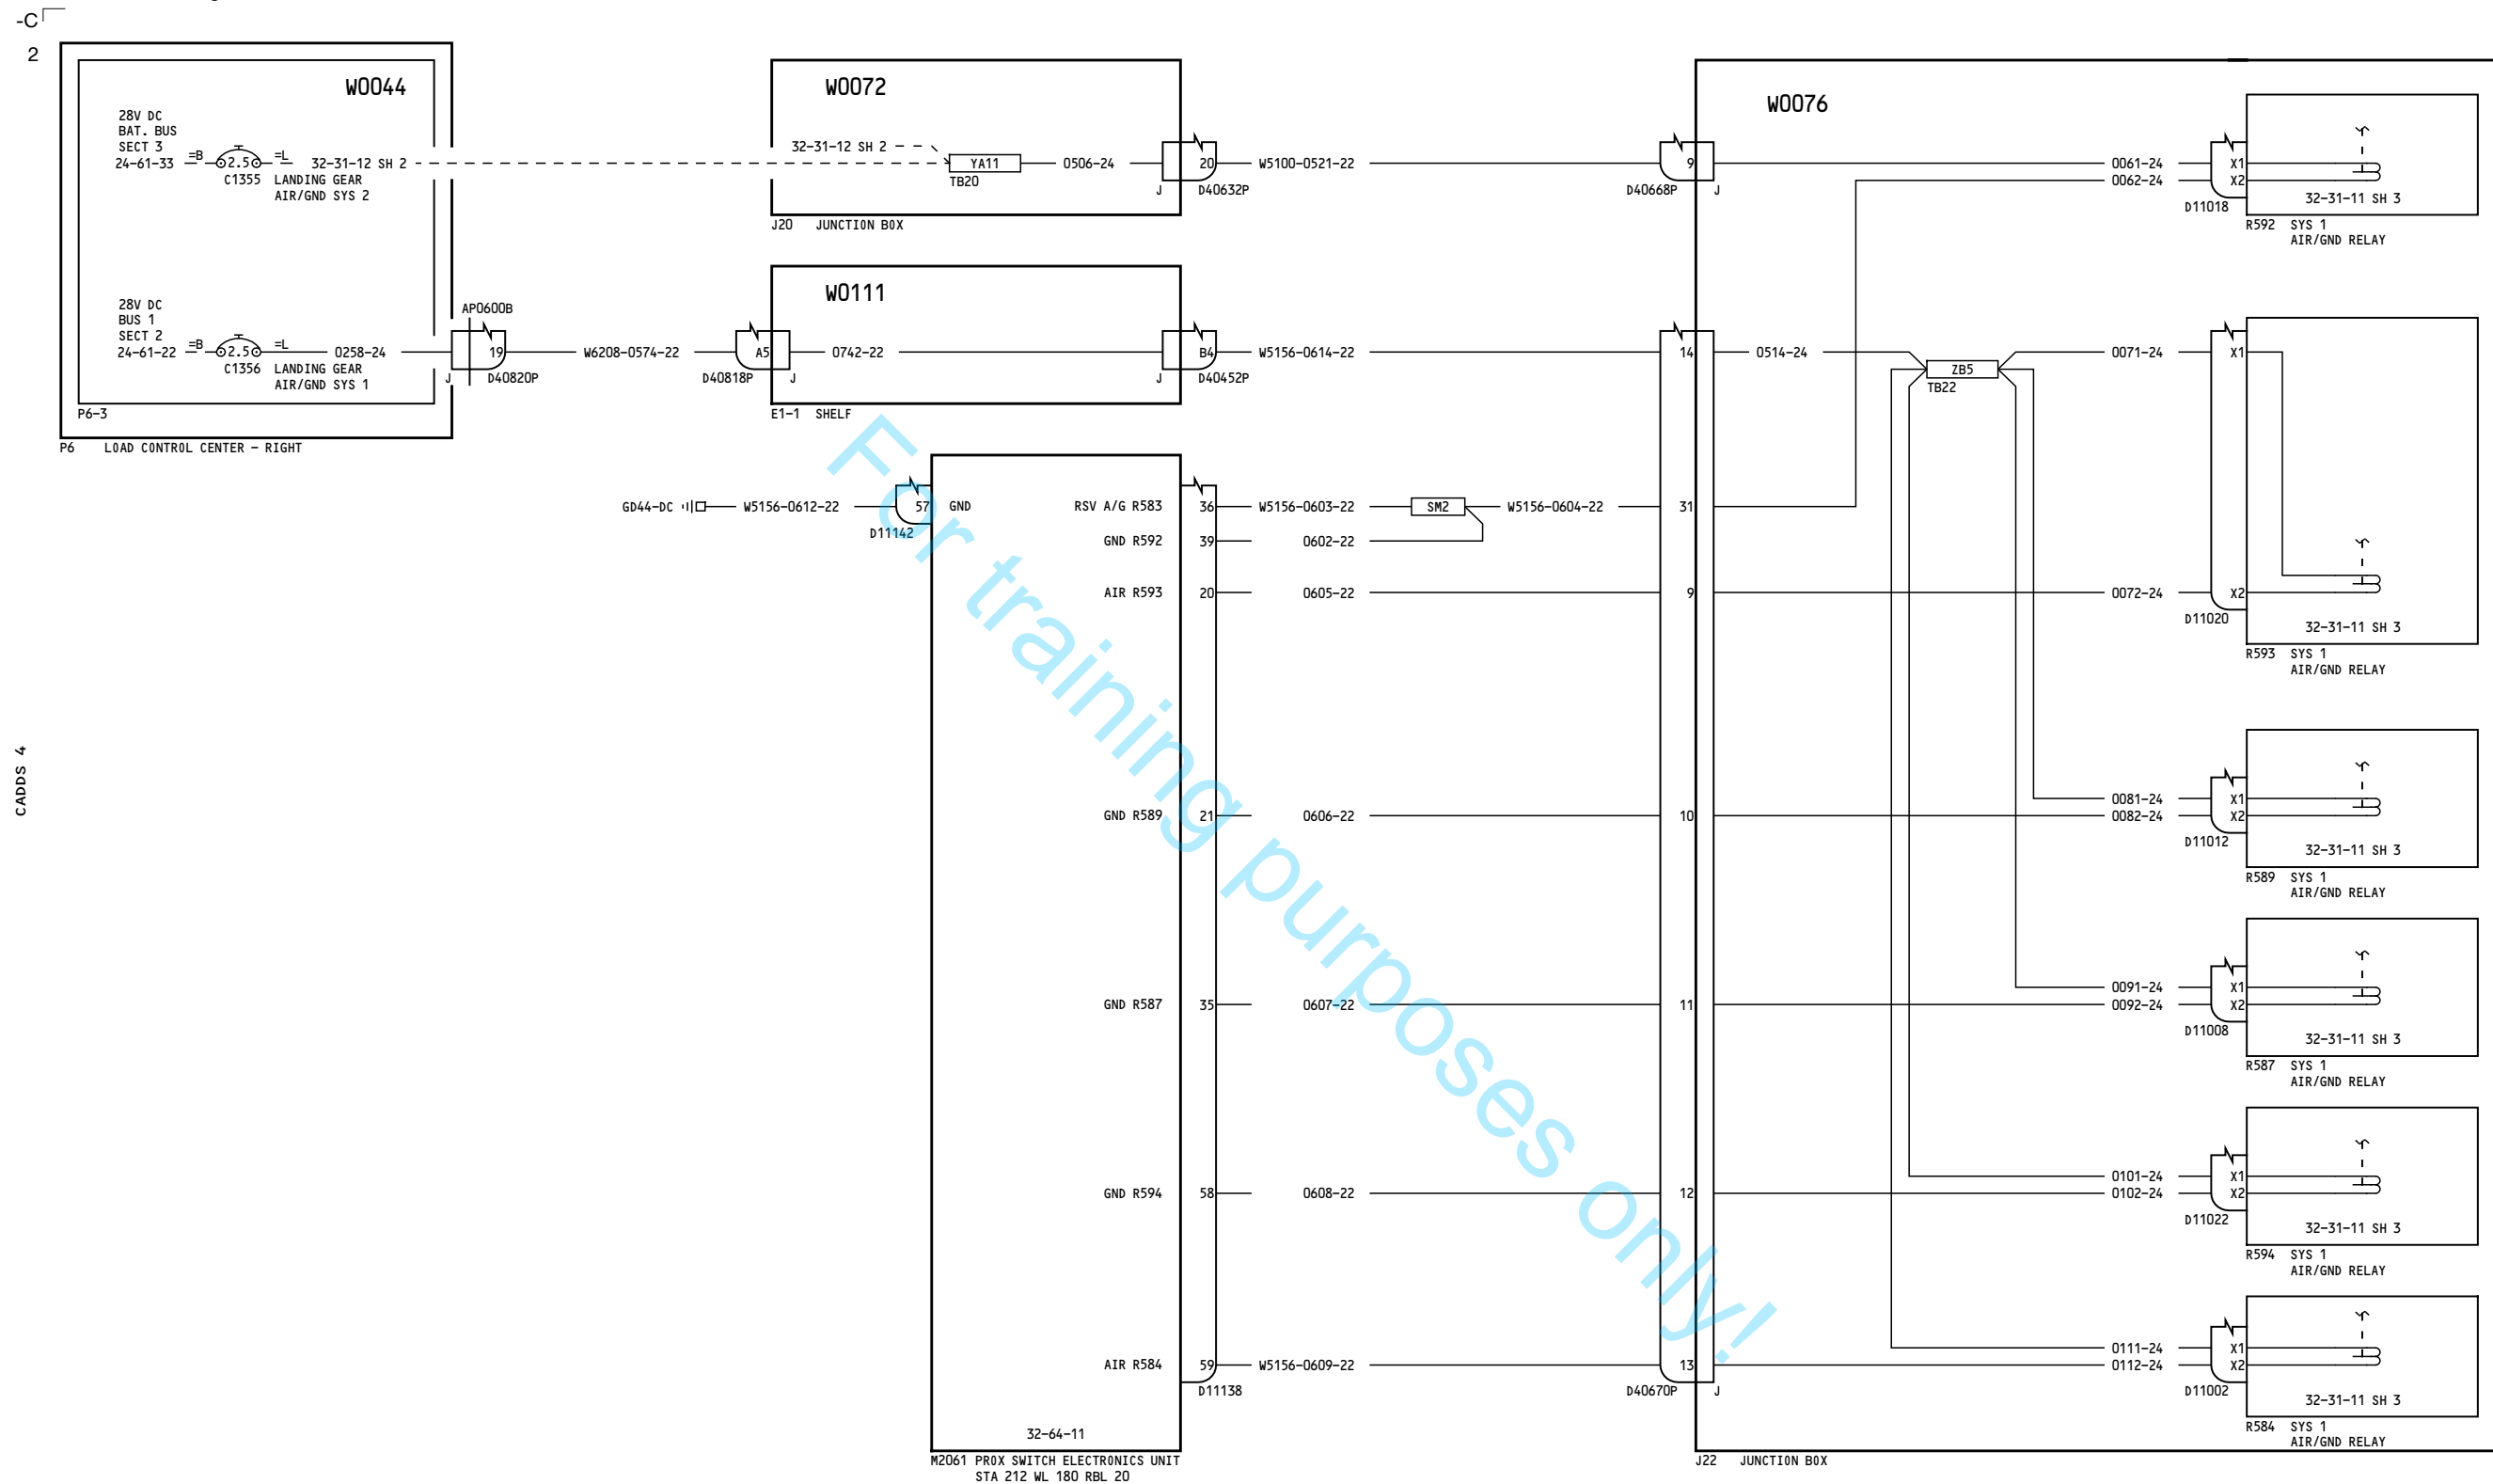

YC060-YC064

AIR/GND SYSTEM 1 & LEVER LATCH

D280A108


32-31-11

Page 1.2  
Sheet 2  
Oct 06/2010

32-31-11


Page 1.2  
Sheet 2  
Oct 06/2010



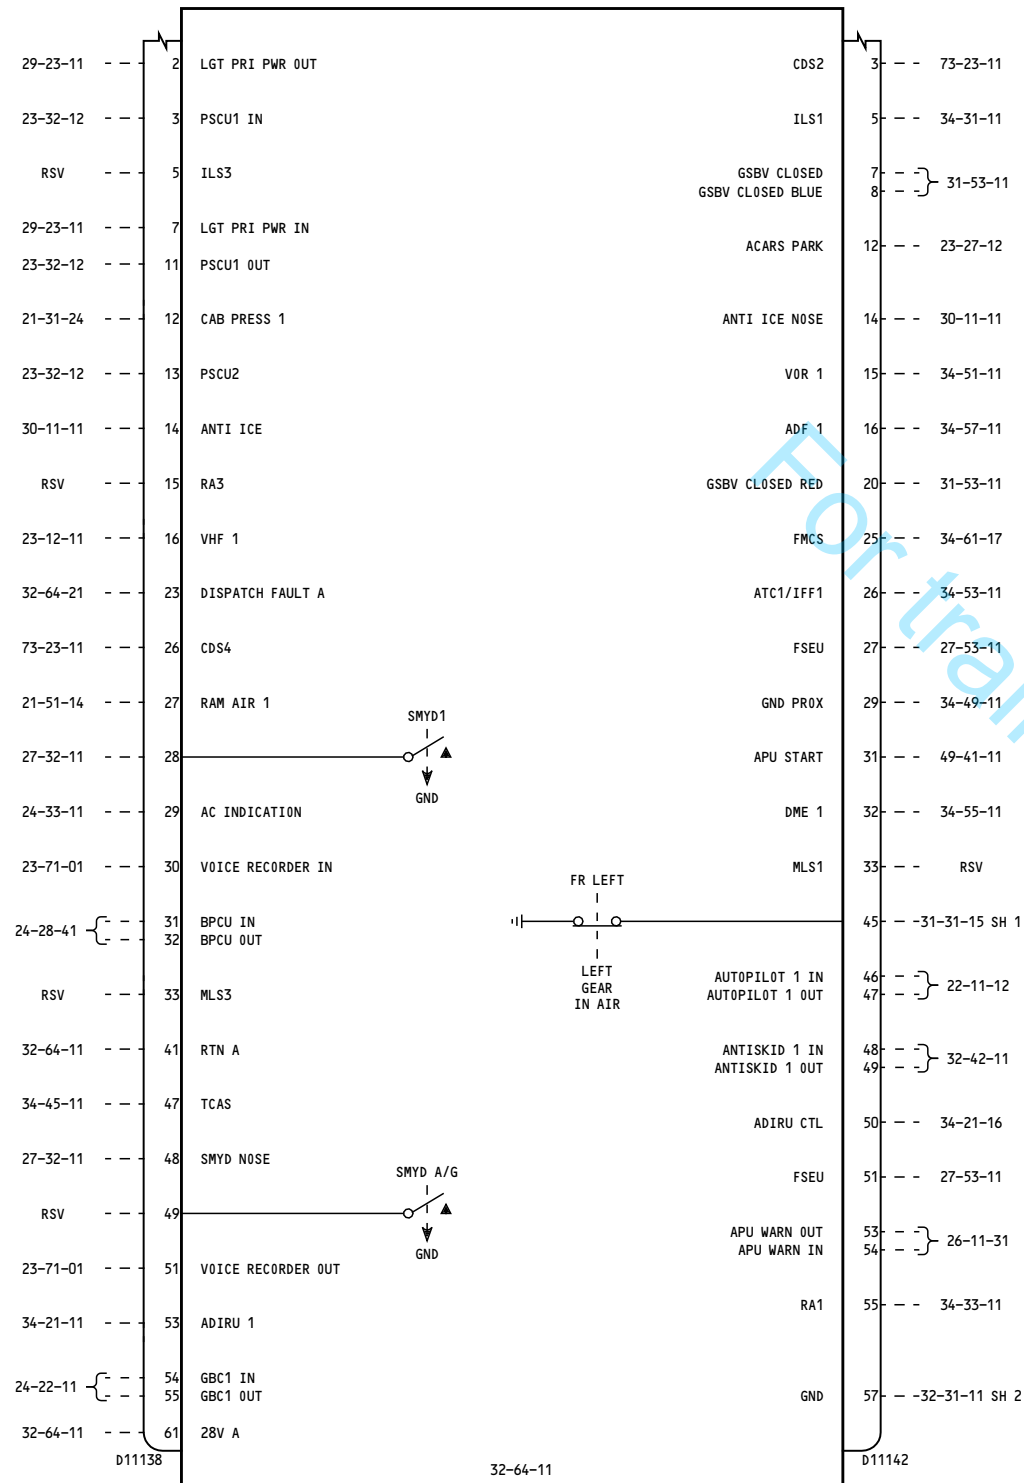

**NOTES:**

THE DIAGRAM REFERENCES REPRESENT A MAXIMUM CONFIGURATION. FOR INDIVIDUAL AIRPLANES, SEE HOOKUP CHART.

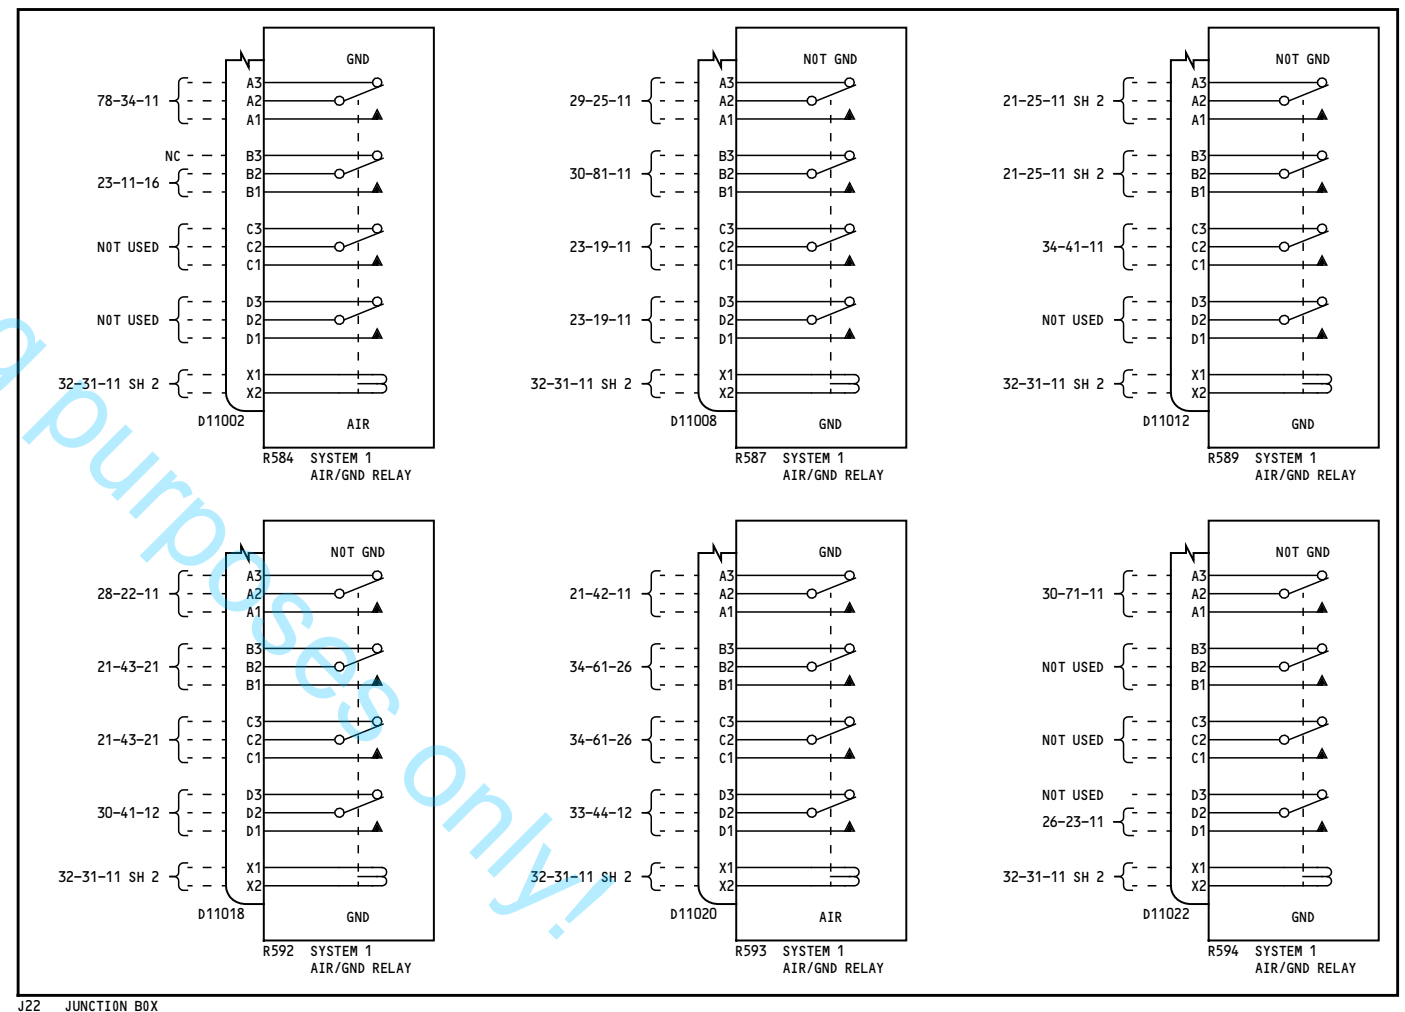

J22 JUNCTION BOX

YC060-YC064

**AIR/GND SYSTEM 1 & LEVER LATCH**

D280A108


**32-31-11**

Page 1.2  
Sheet 3  
Oct 06/2010

Incorporates  
26-1122 R01

**32-31-11**

Page 1.2  
Sheet 3  
Oct 06/2010

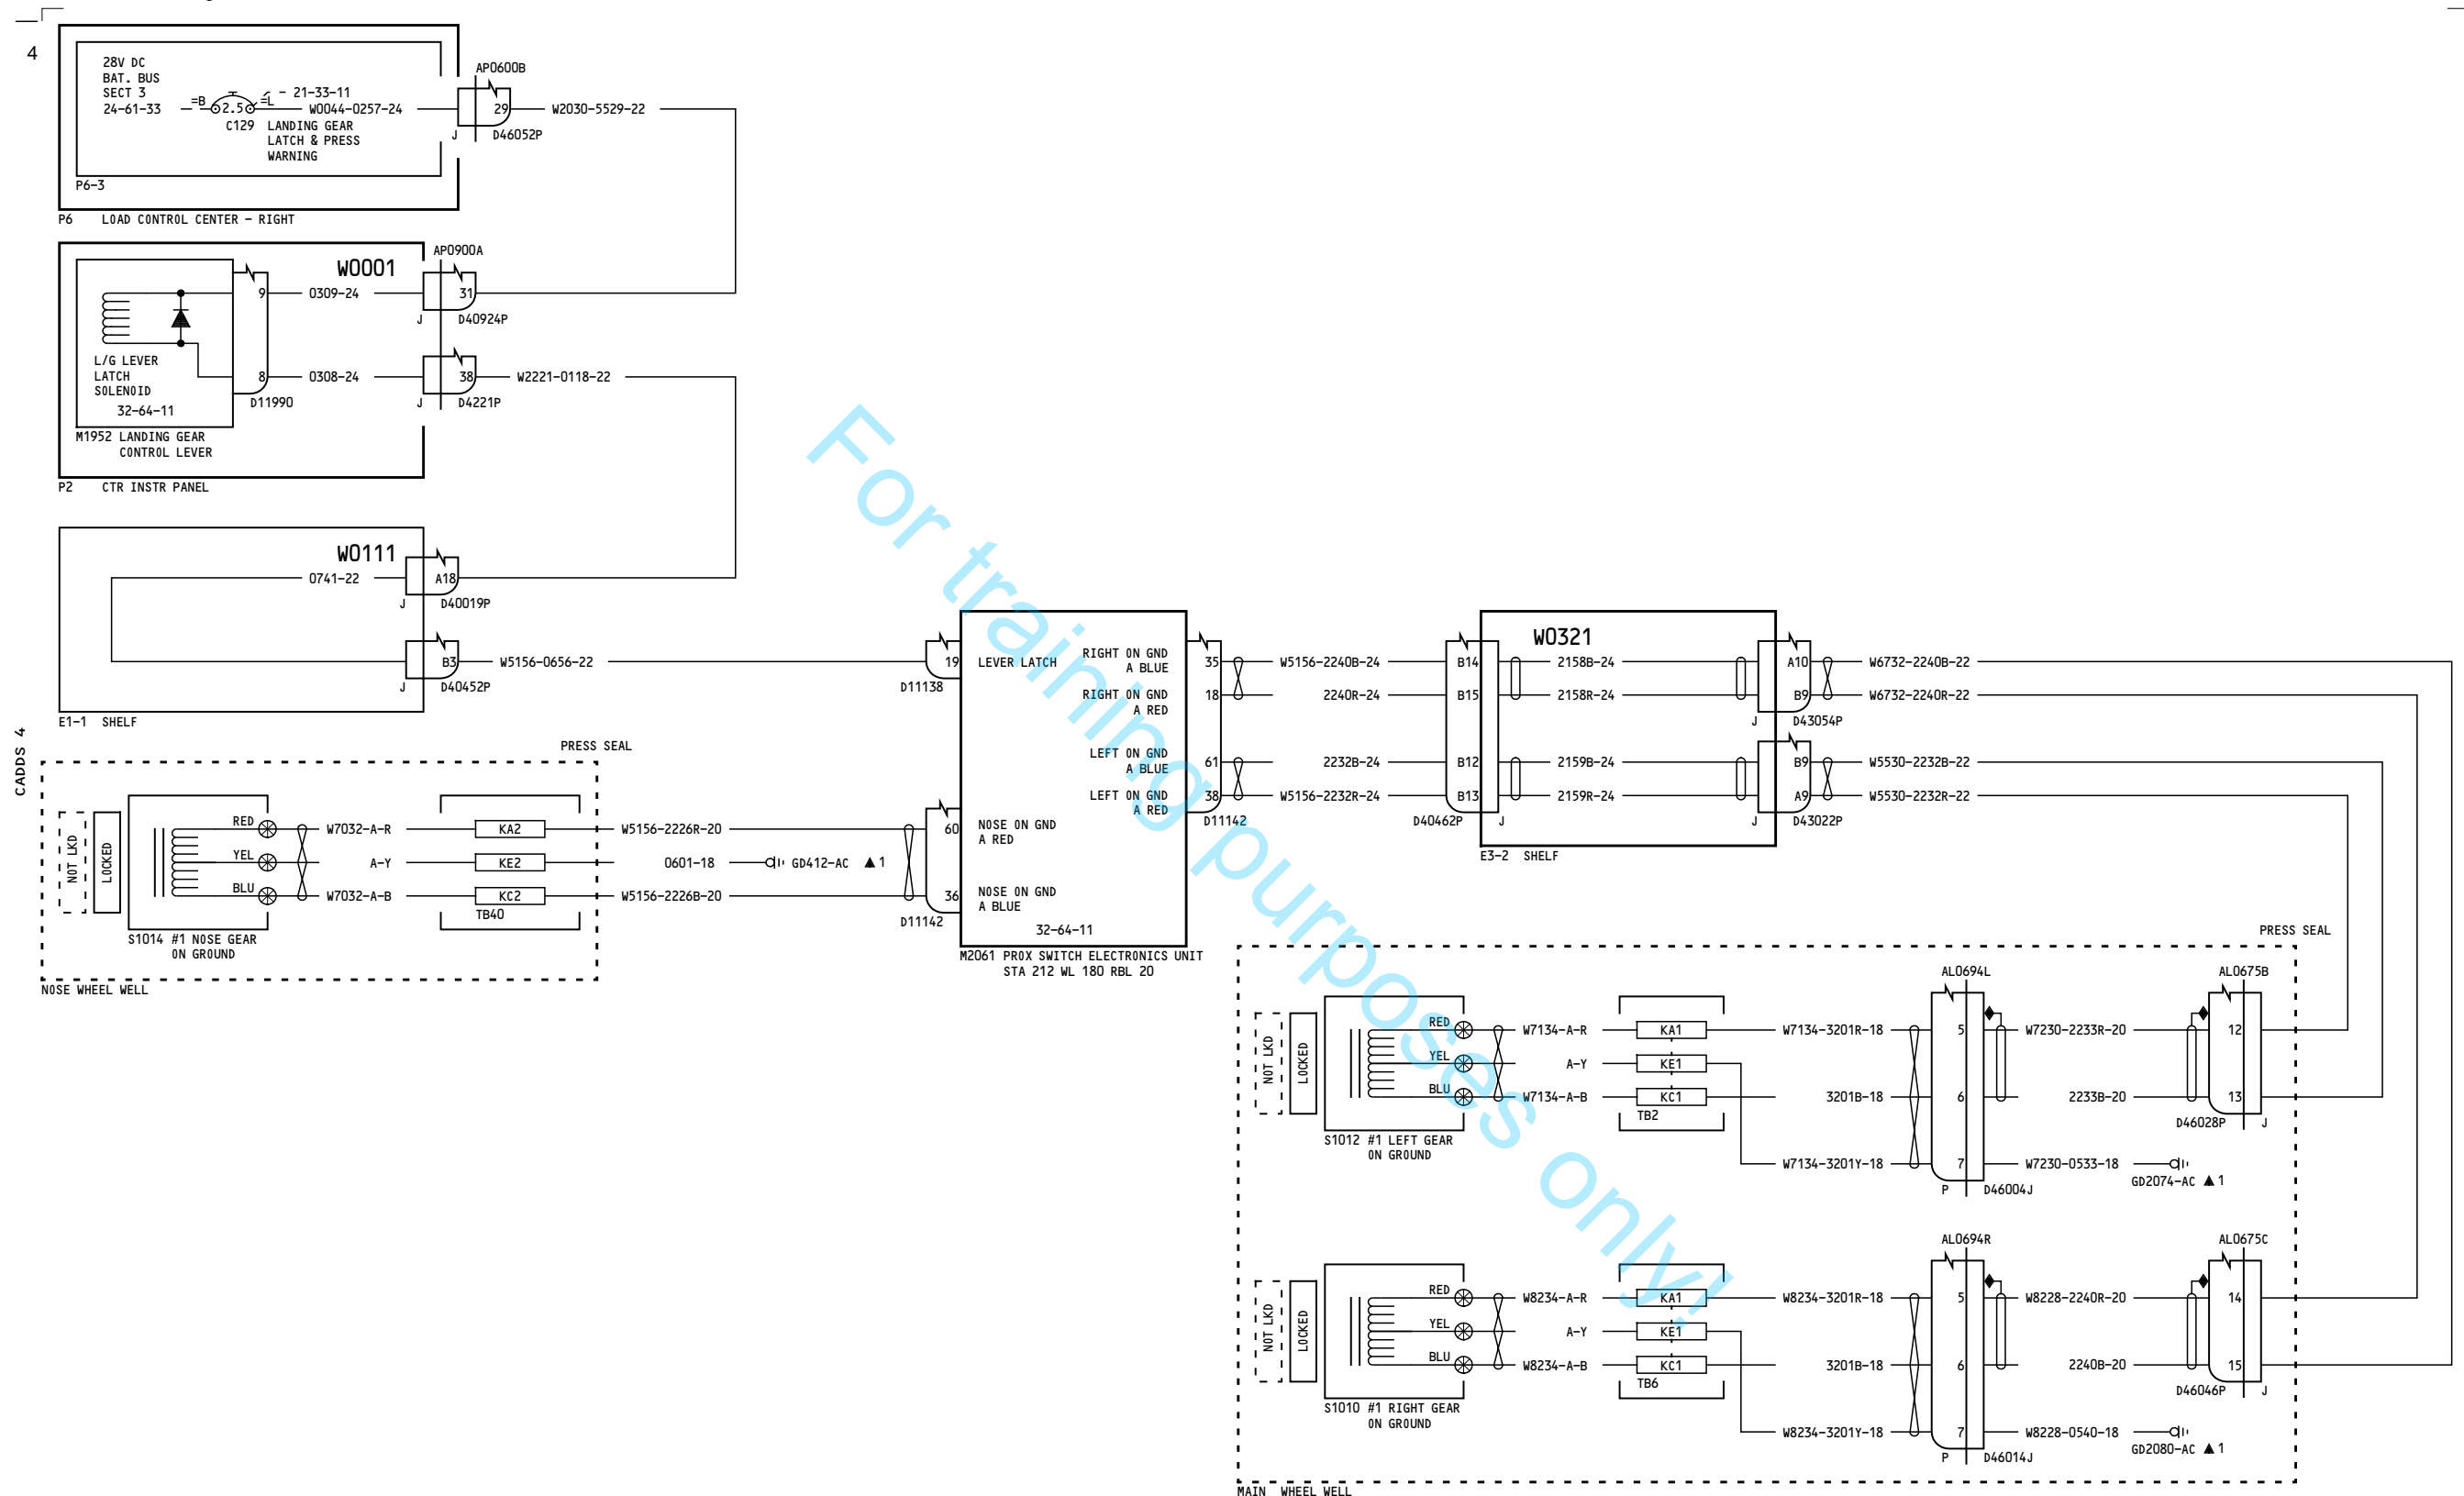

YD153-YD157

**AIR/GND SYSTEM 1 & LEVER LATCH**


D280A108

**32-31-11**

Page 2  
Sheet 1  
Nov 12/2012

**32-31-11**

Page 2  
Sheet 1  
Nov 12/2012

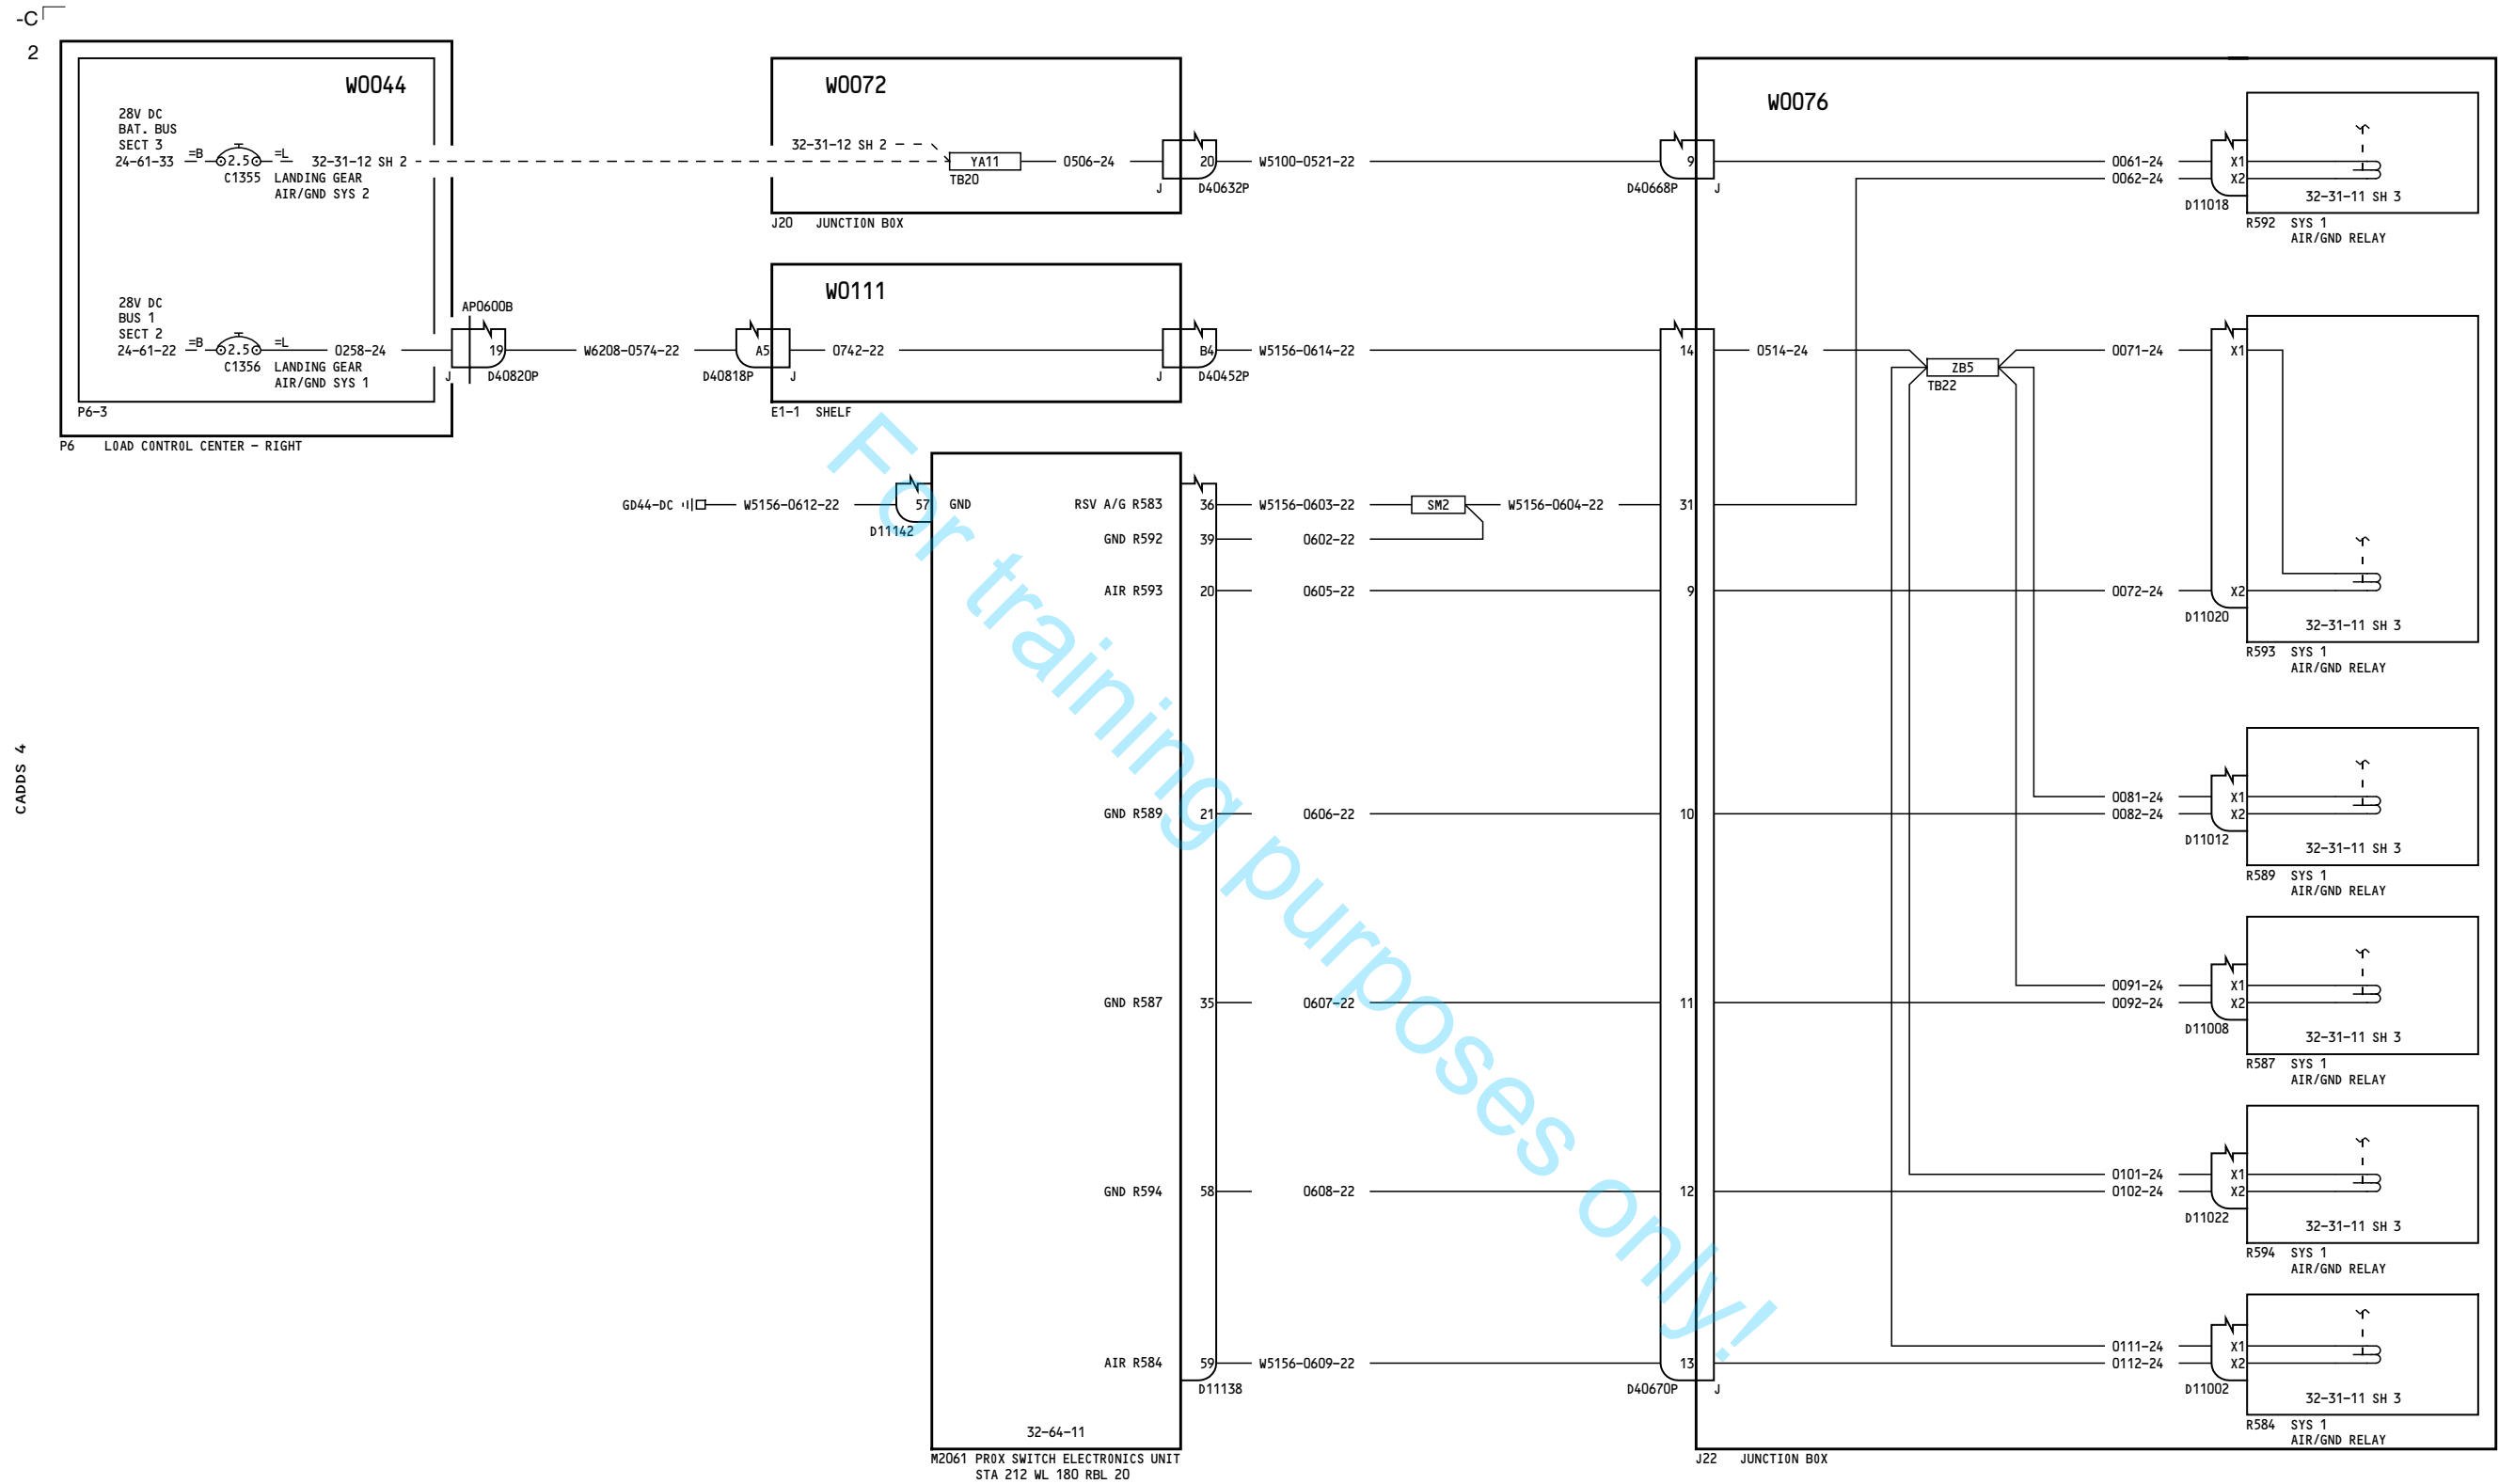

YD153-YD157

AIR/GND SYSTEM 1 & LEVER  
LATCH

D280A108



32-31-11

Page 2  
Sheet 2  
Nov 12/2012

32-31-11

Page 2  
Sheet 2  
Nov 12/2012

-F  
2

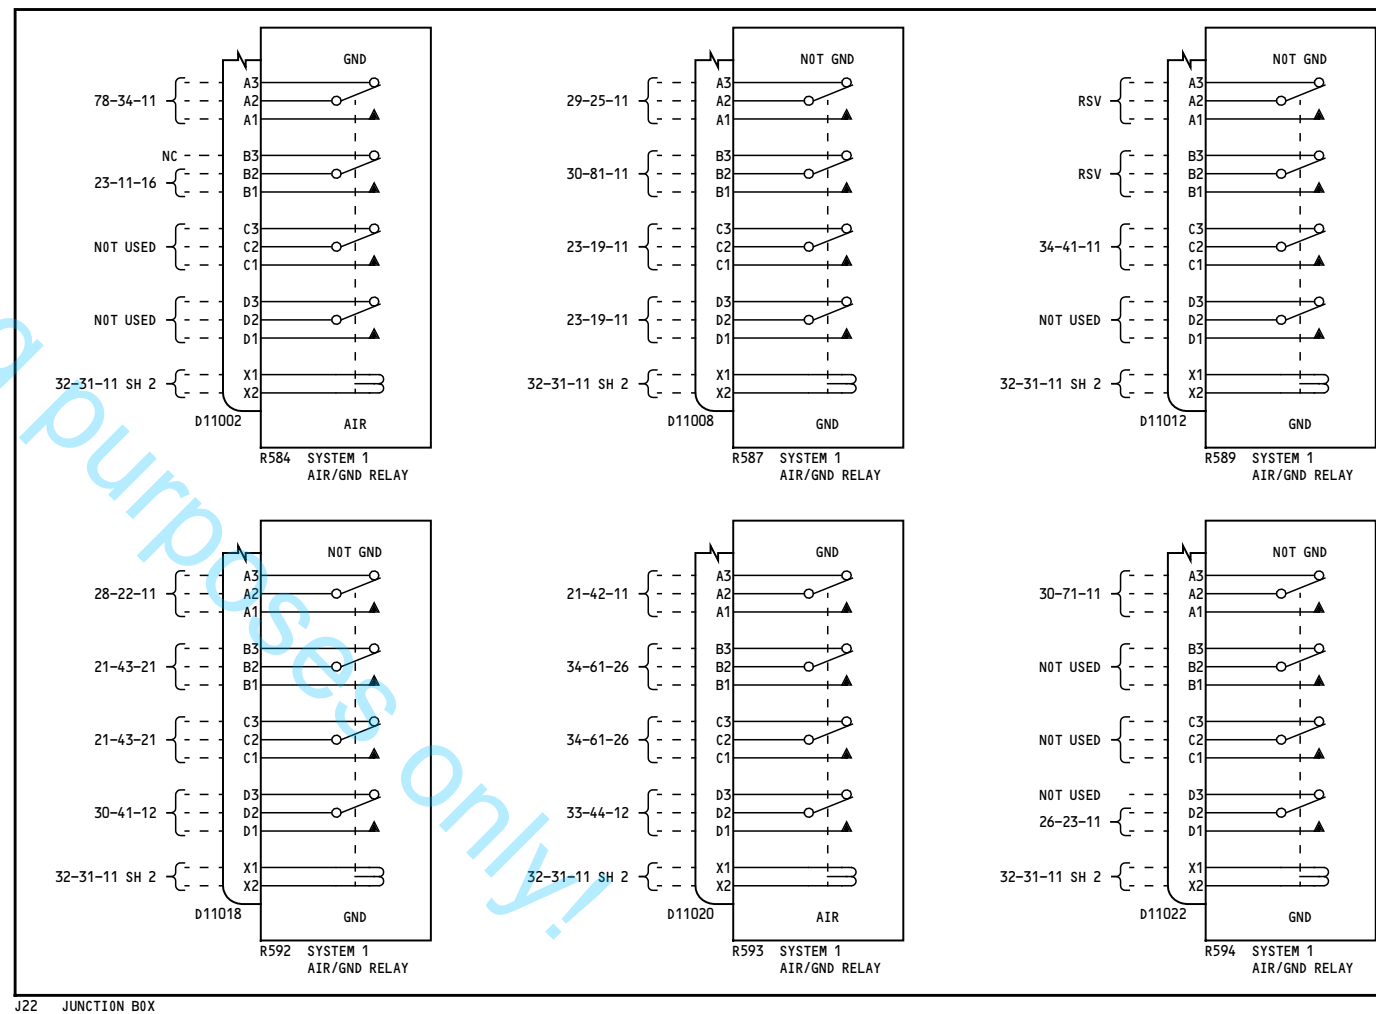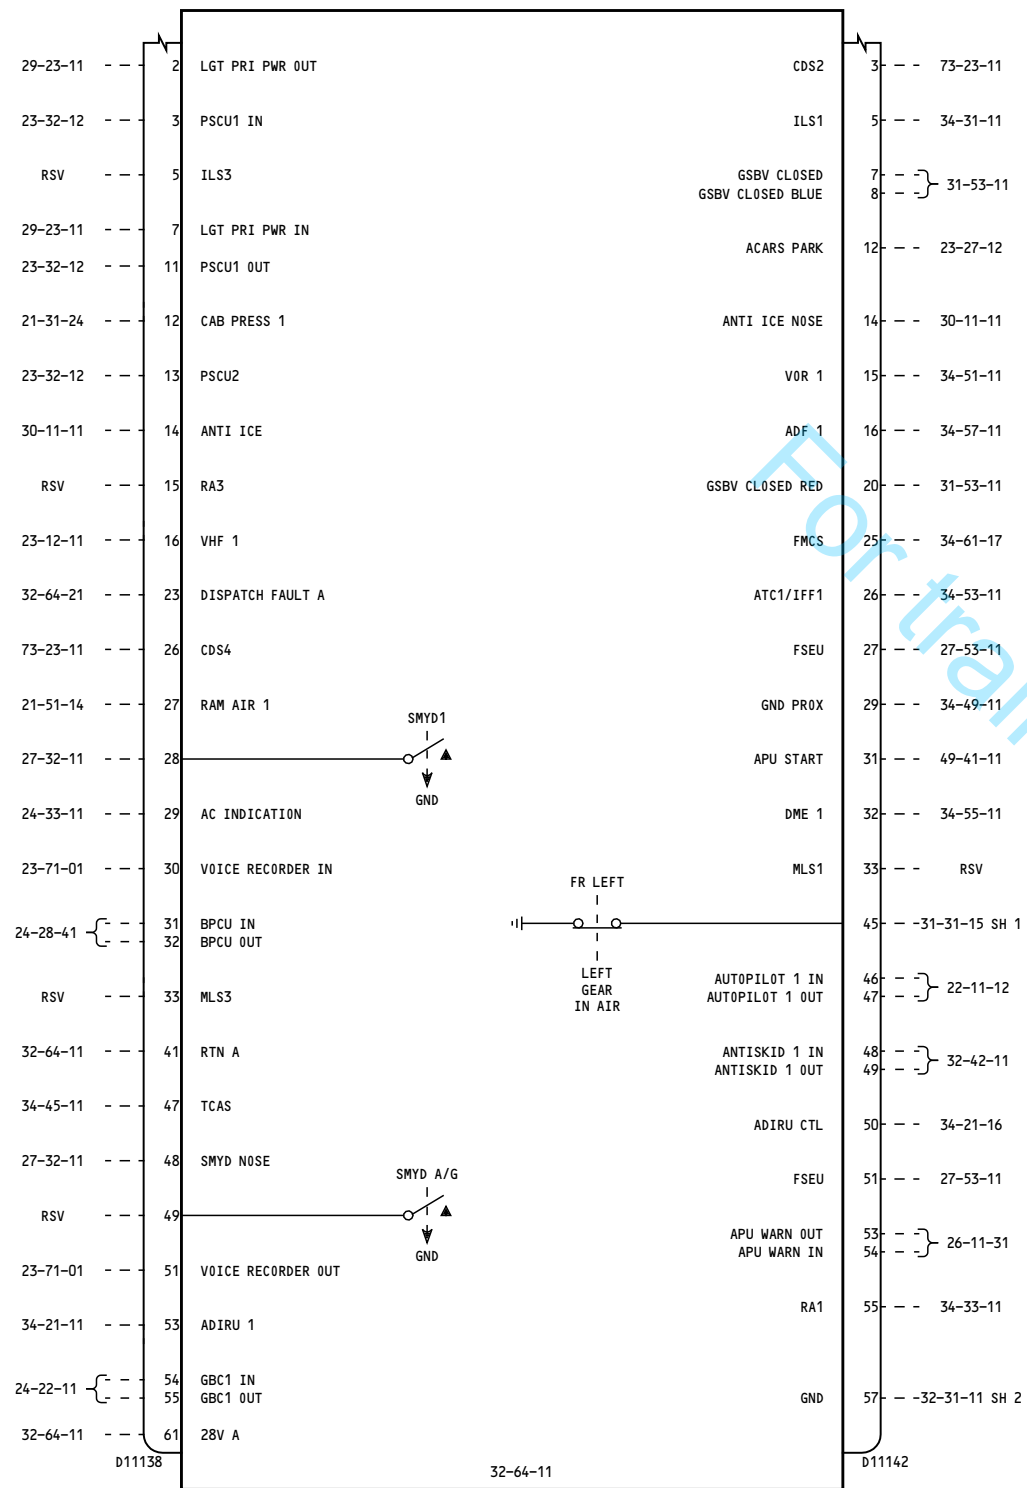

**NOTES:**

THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

YD153-YD157

**AIR/GND SYSTEM 1 & LEVER  
LATCH**


D280A108

**32-31-11**

Page 2  
Sheet 3  
Nov 12/2012

**32-31-11**

Page 2  
Sheet 3  
Nov 12/2012

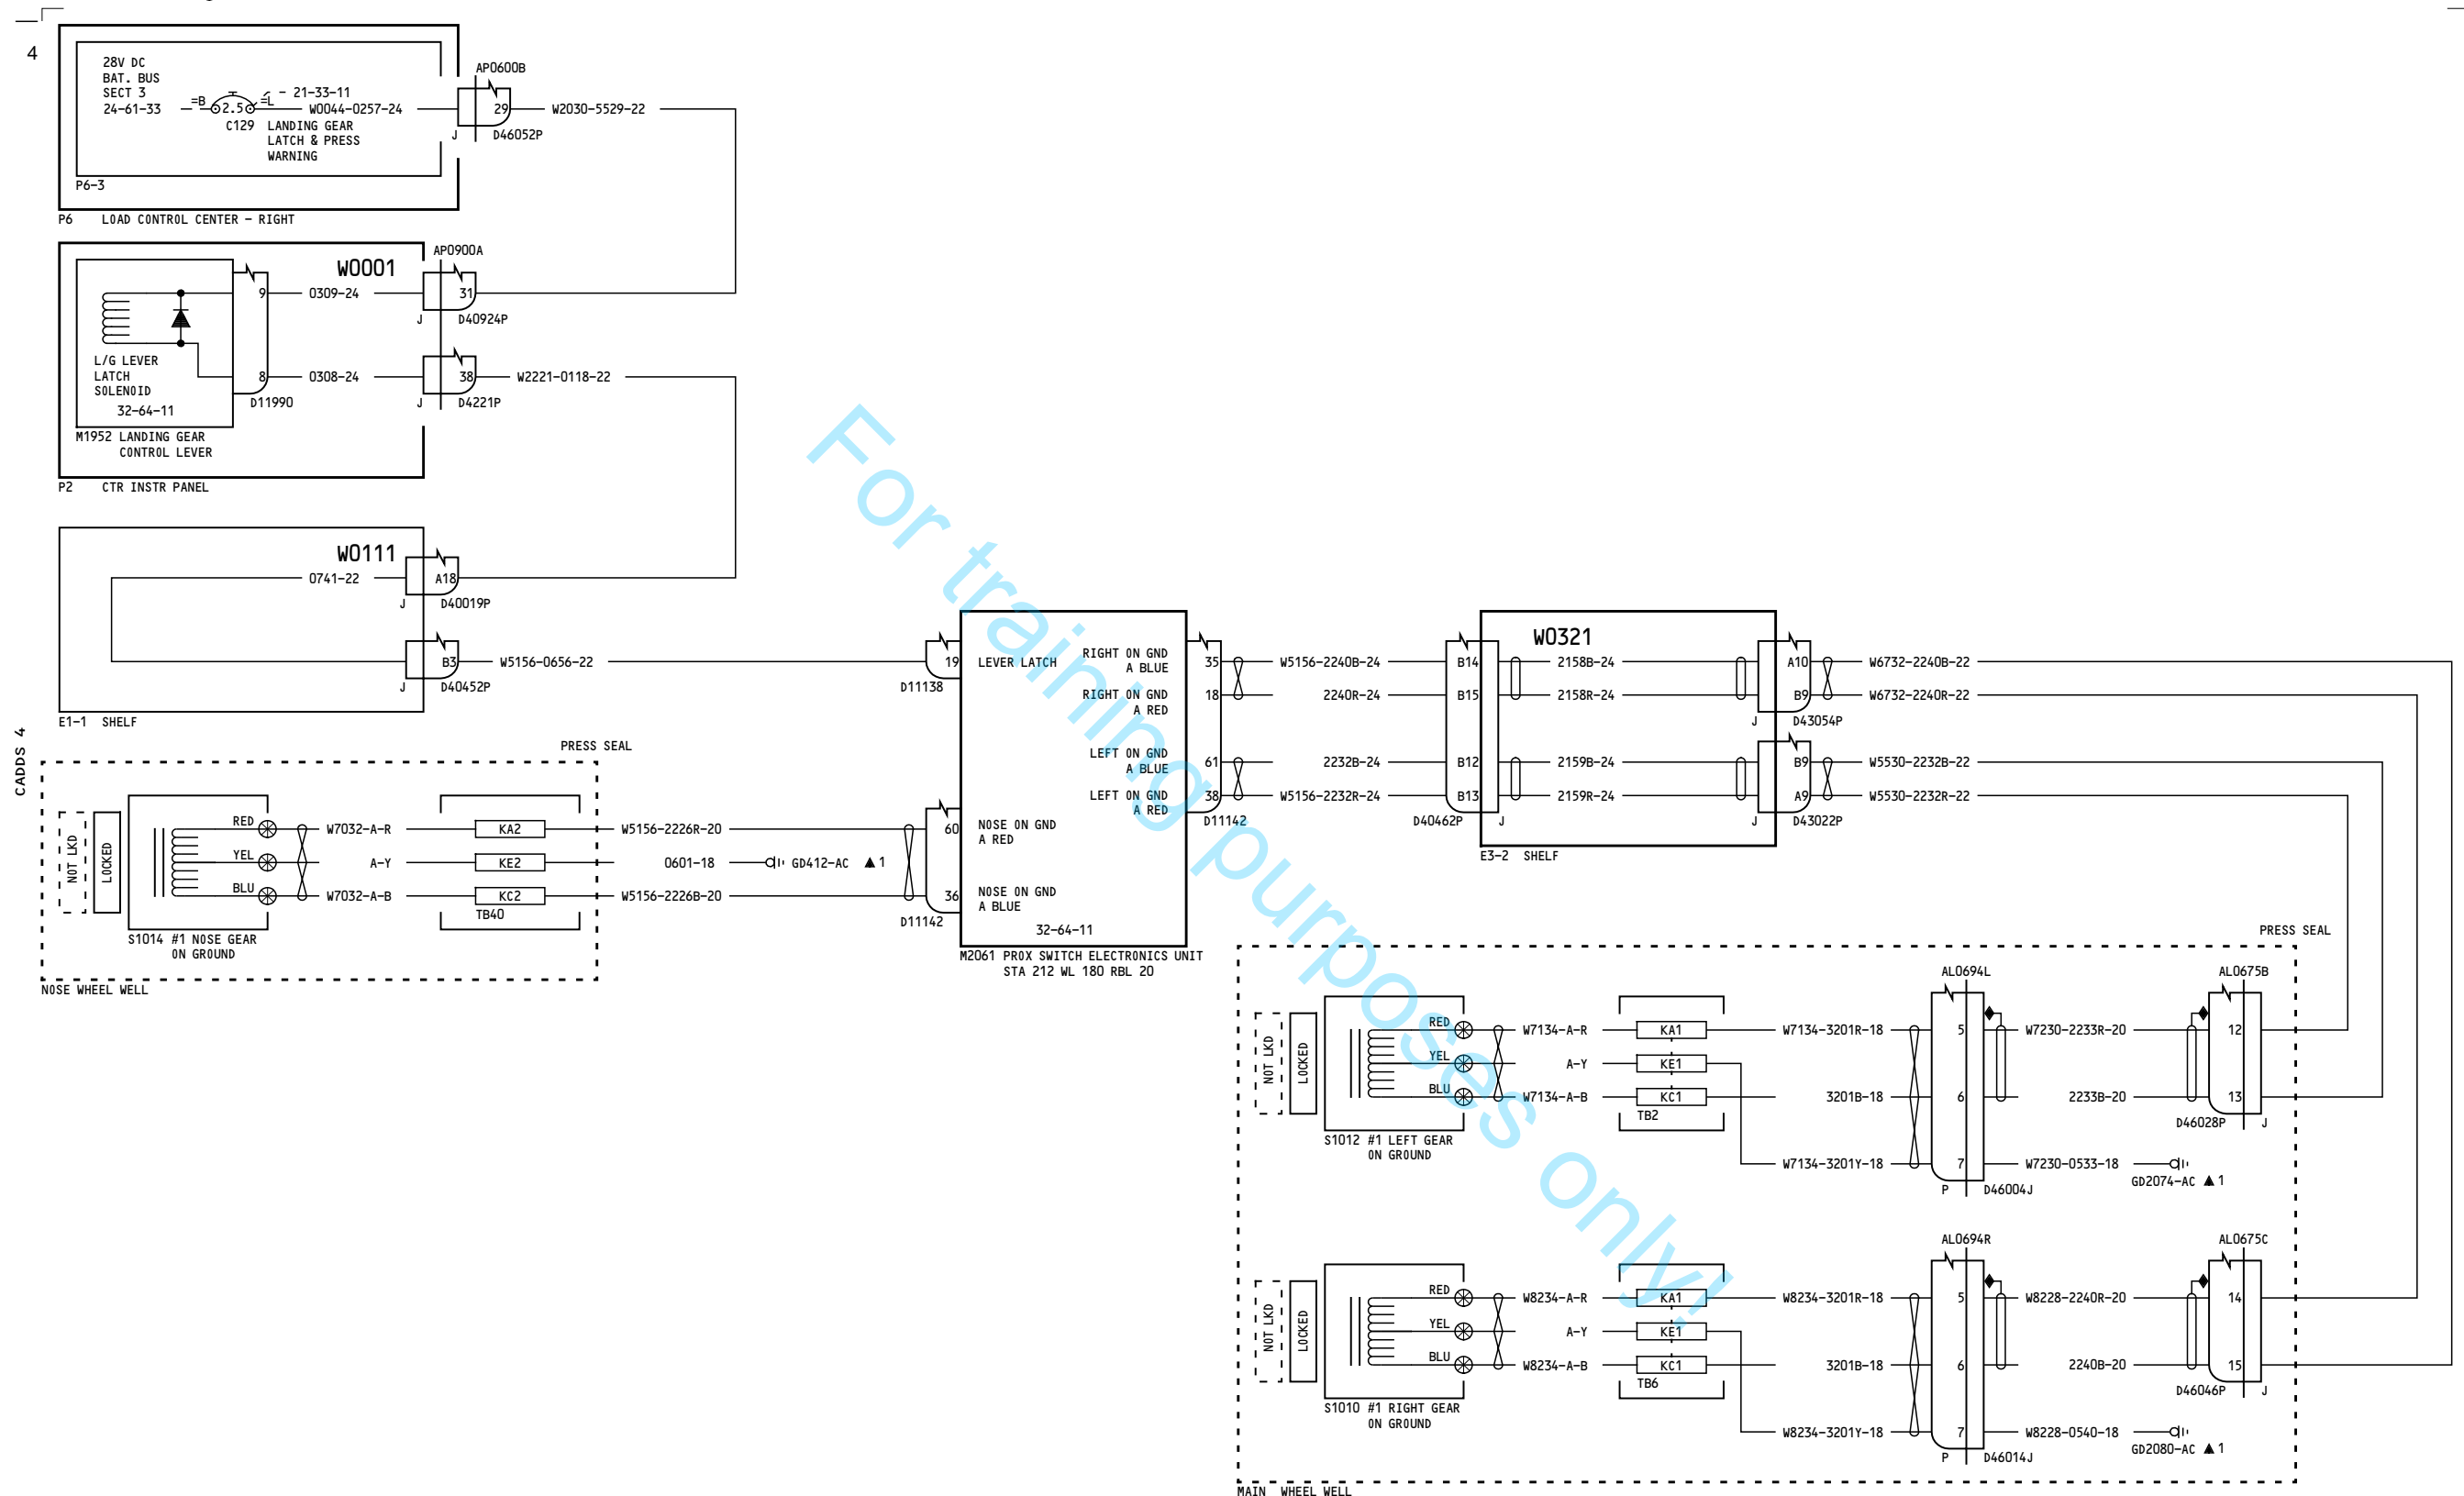

YD158

**AIR/GND SYSTEM 1 & LEVER LATCH**


D280A108

**32-31-11**

Page 3  
Sheet 1  
Oct 27/2011

**32-31-11**

Page 3  
Sheet 1  
Oct 27/2011

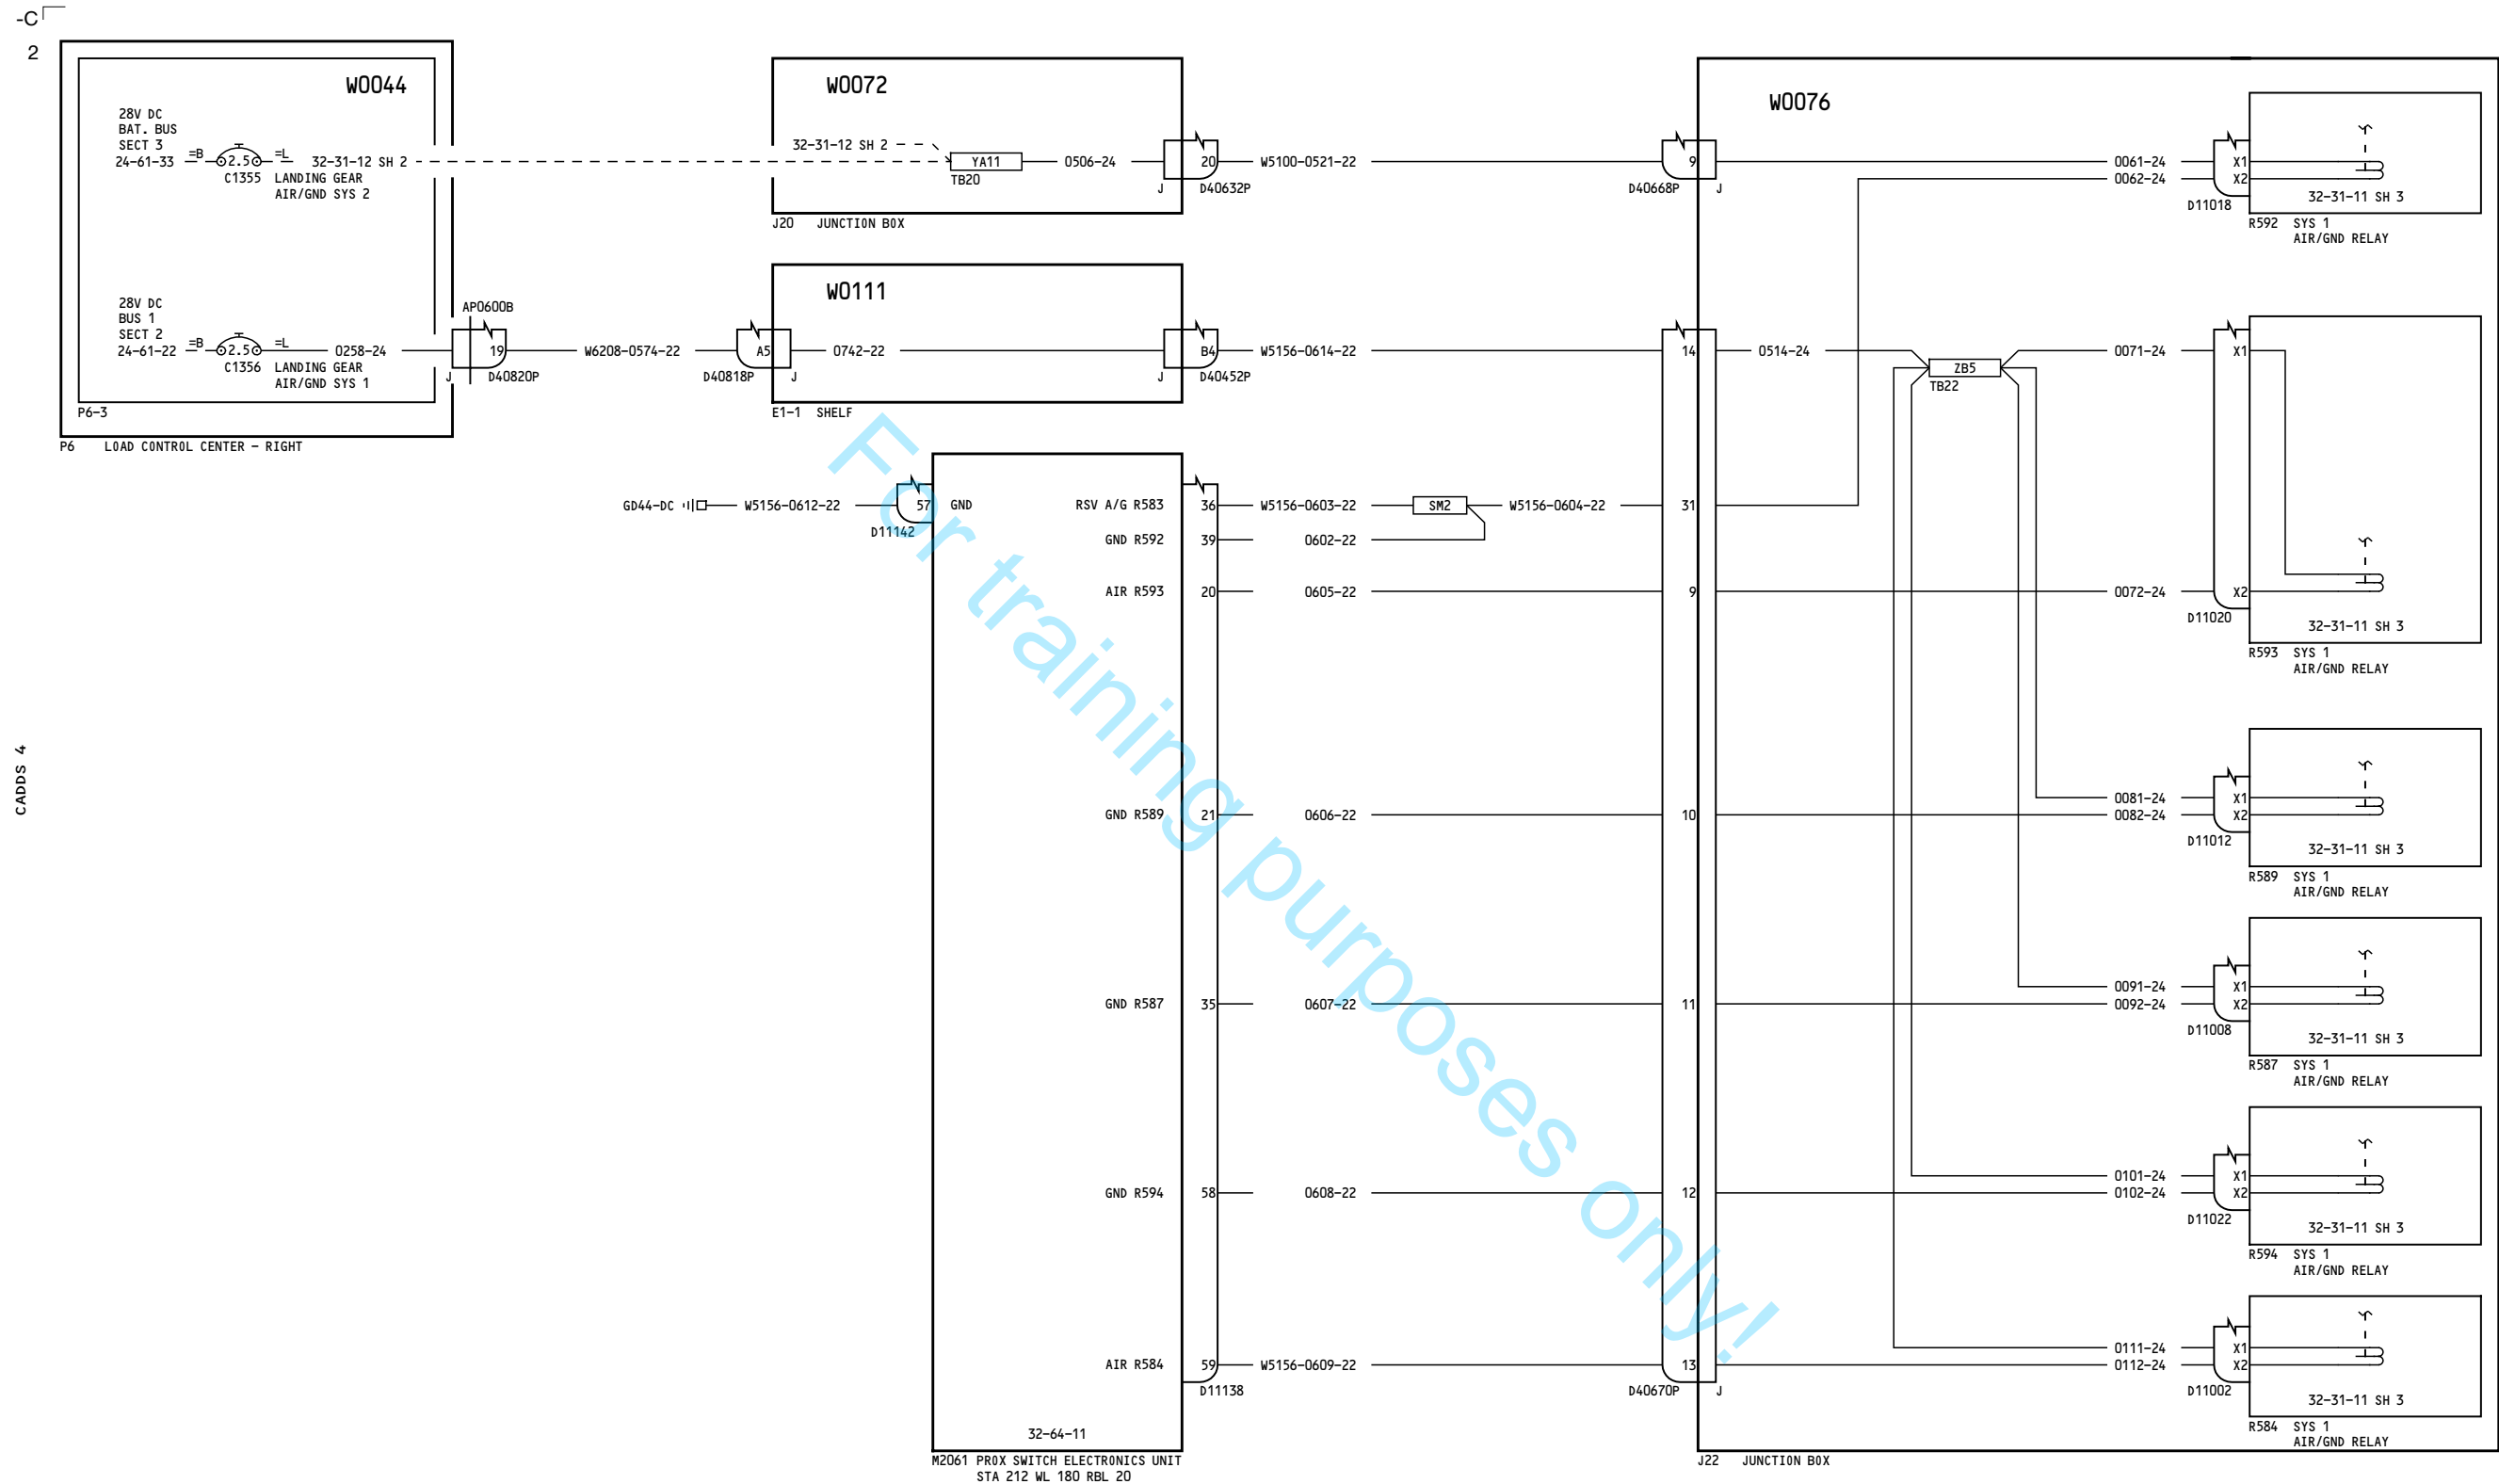

YD158

AIR/GND SYSTEM 1 & LEVER LATCH

D280A108



32-31-11

Page 3  
Sheet 2  
Oct 27/2011

32-31-11

Page 3  
Sheet 2  
Oct 27/2011

-A  
19

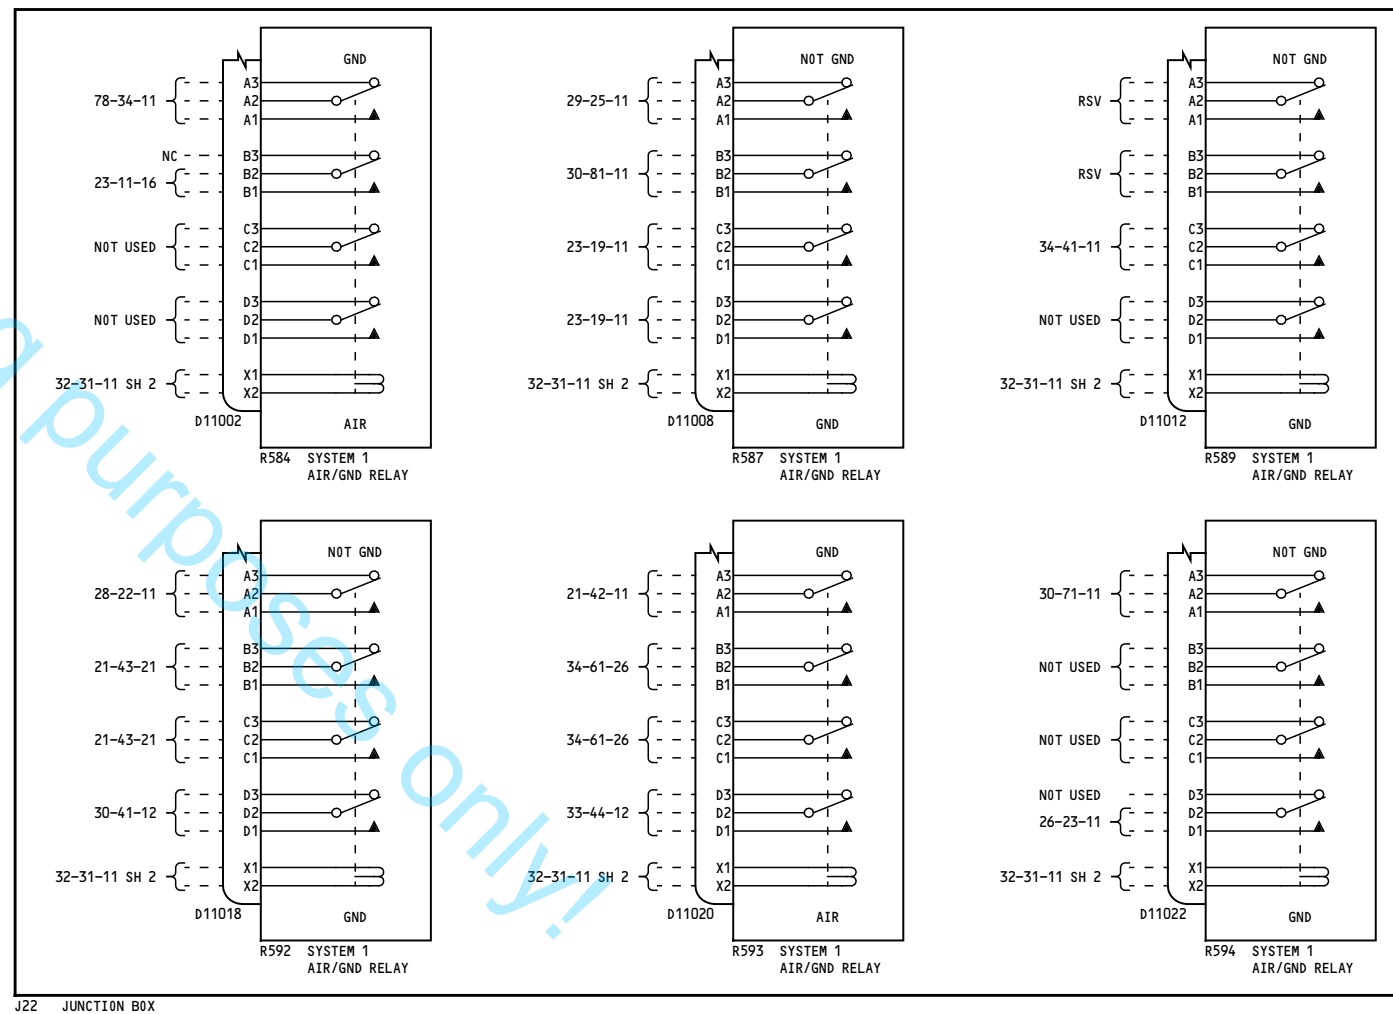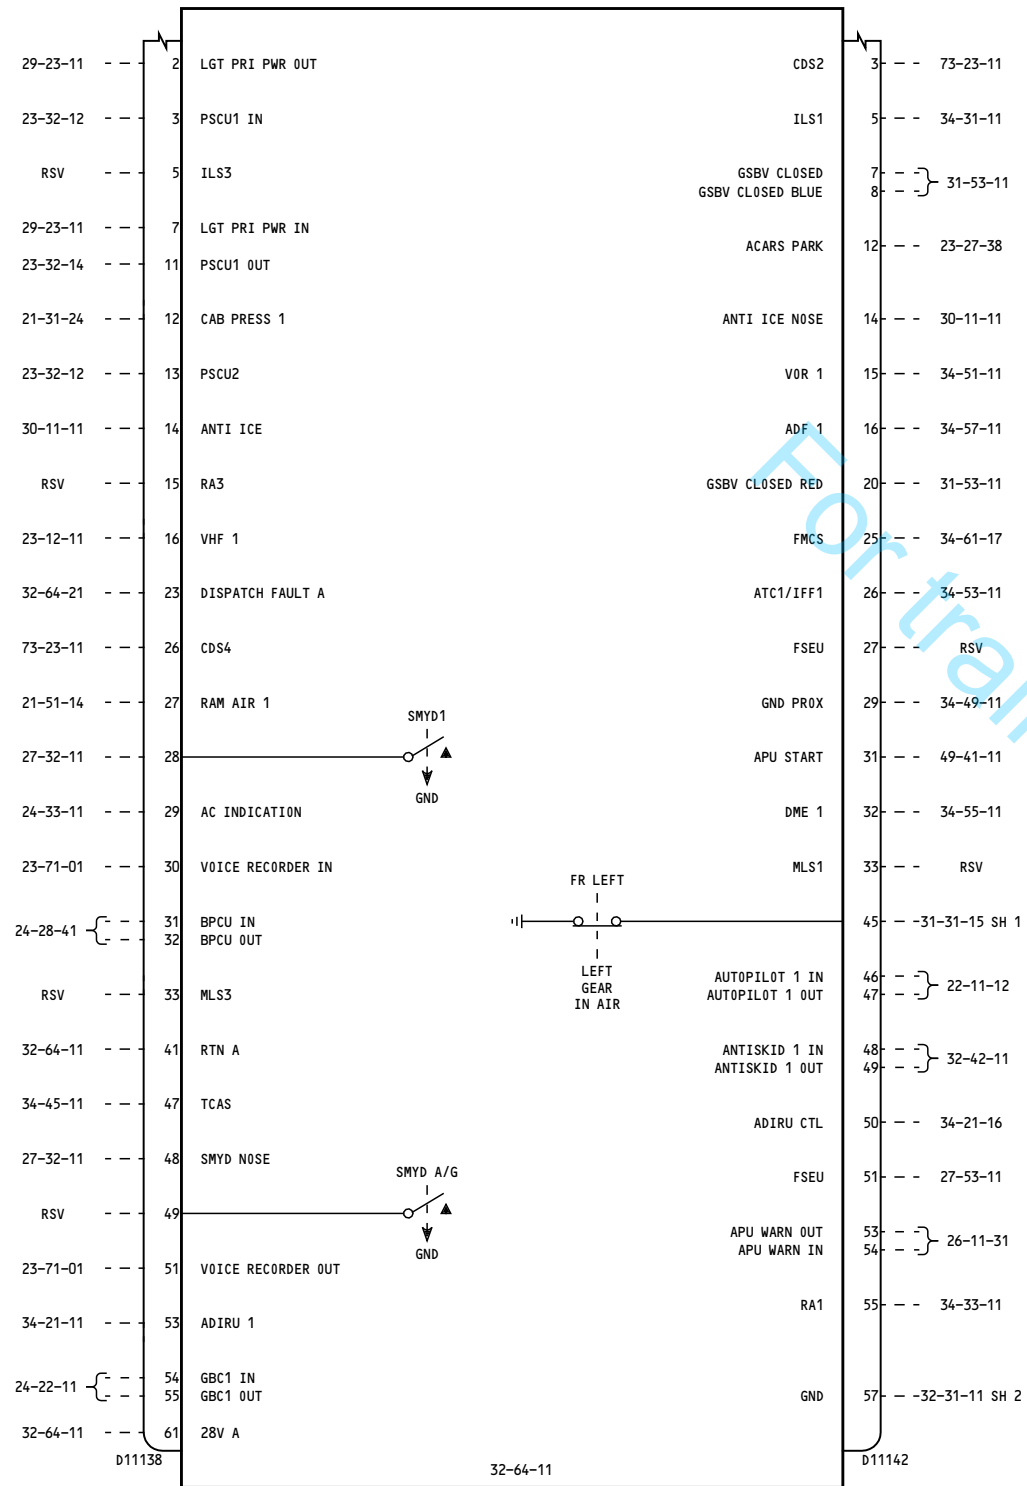

**NOTES:**

THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

YD158

**AIR/GND SYSTEM 1 & LEVER  
LATCH**


D280A108

**32-31-11**

Page 3  
Sheet 3  
Oct 27/2011

**32-31-11**

Page 3  
Sheet 3  
Oct 27/2011

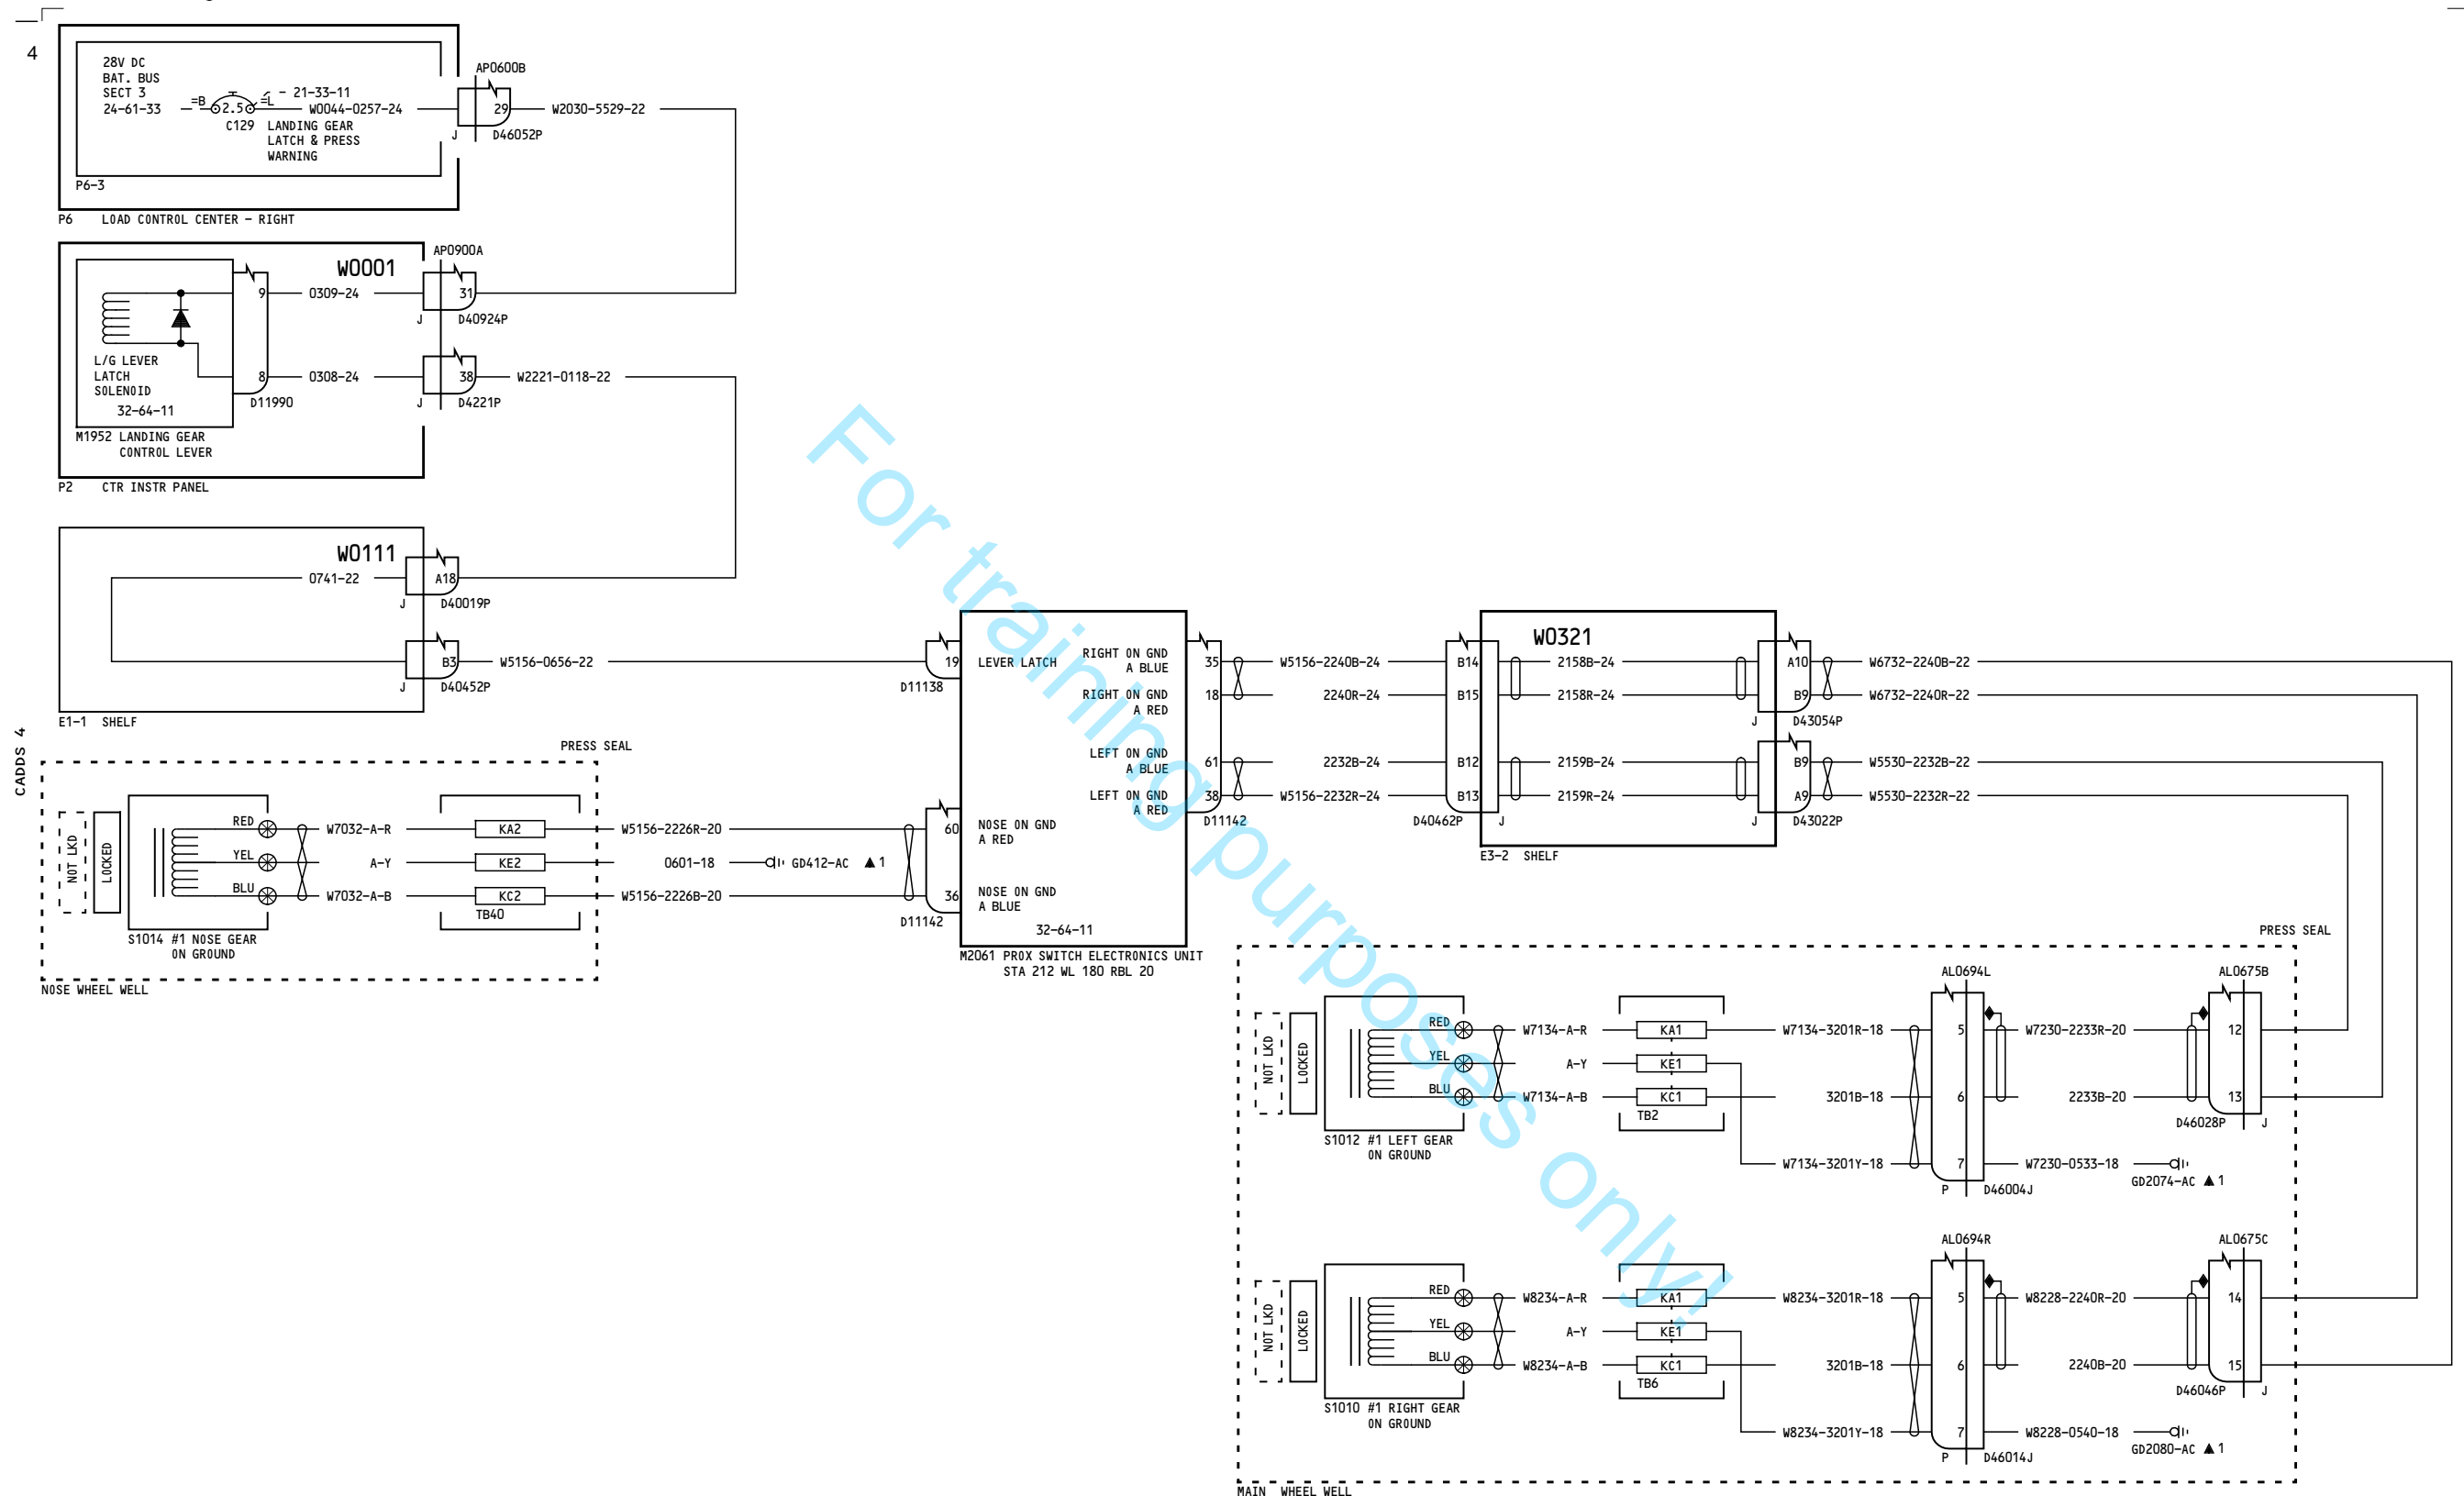

YL951-YL999

AIR/GND SYSTEM 1 & LEVER LATCH

D280A108


32-31-11

Page 4  
Sheet 1  
Feb 01/2010

32-31-11

Page 4  
Sheet 1  
Feb 01/2010



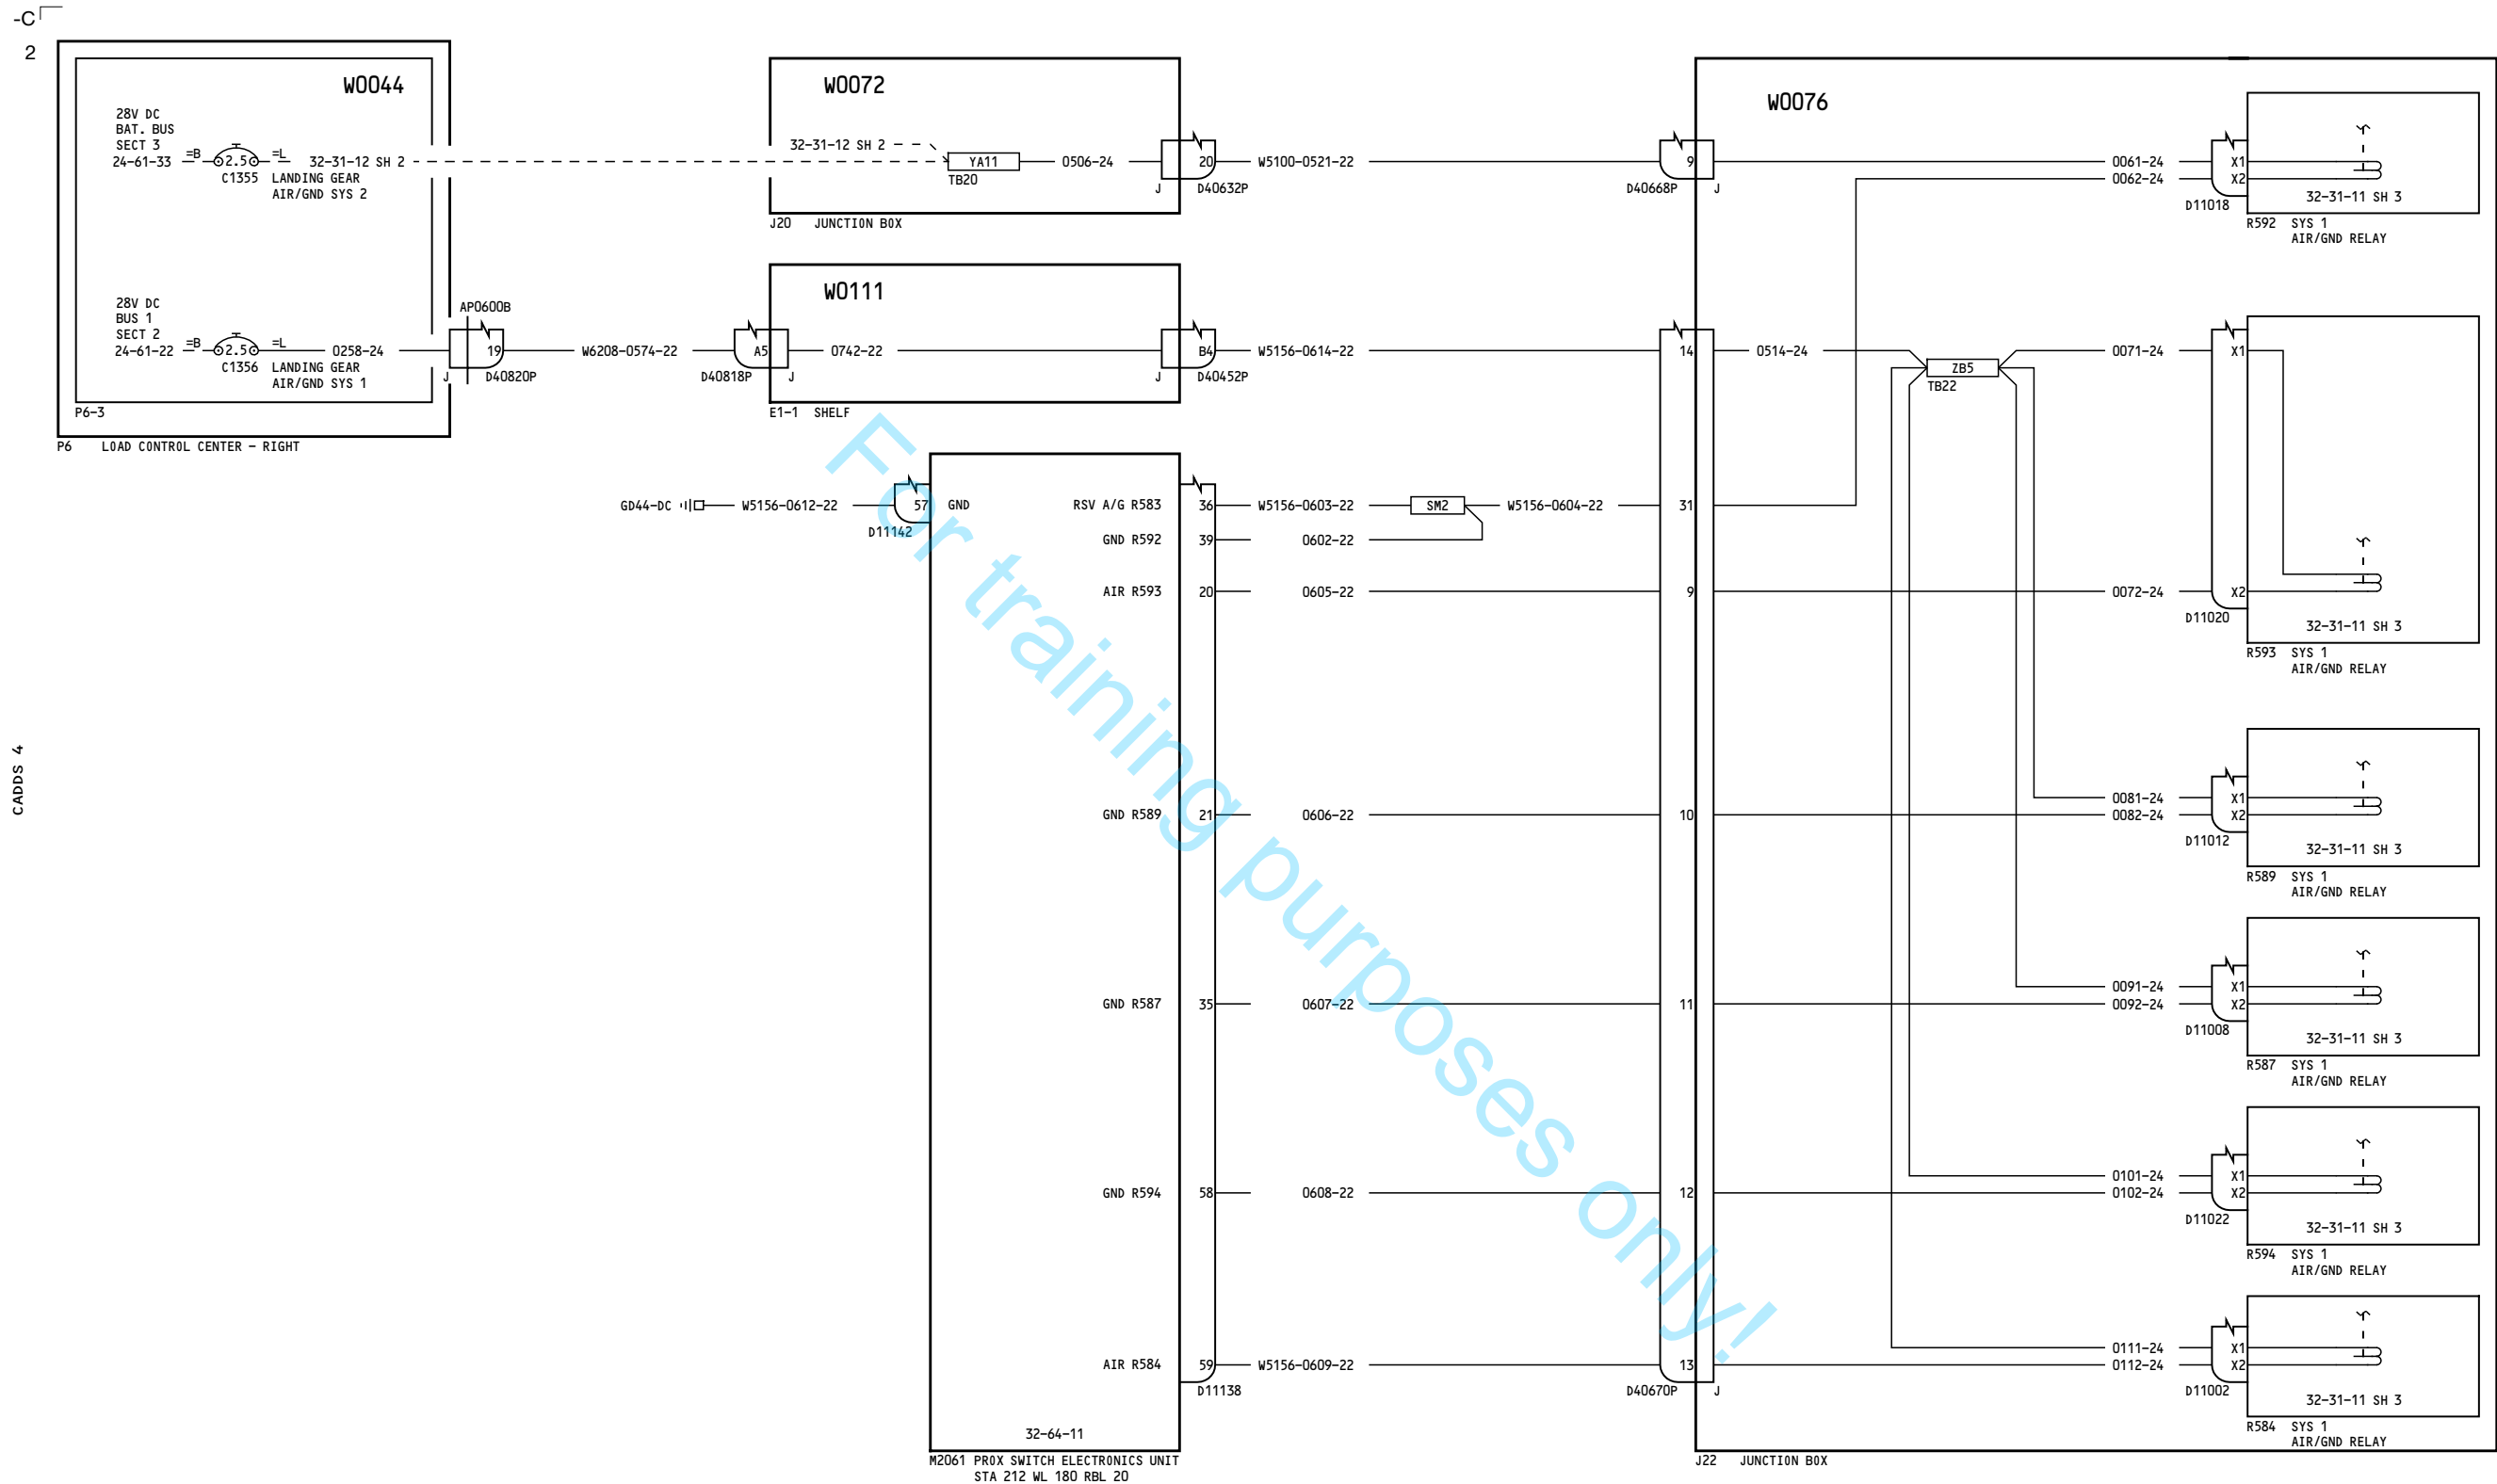

YL951-YL999

AIR/GND SYSTEM 1 & LEVER  
LATCH

D280A108



32-31-11

Page 4  
Sheet 2  
Feb 01/2010

32-31-11

Page 4  
Sheet 2  
Feb 01/2010

-A  
80

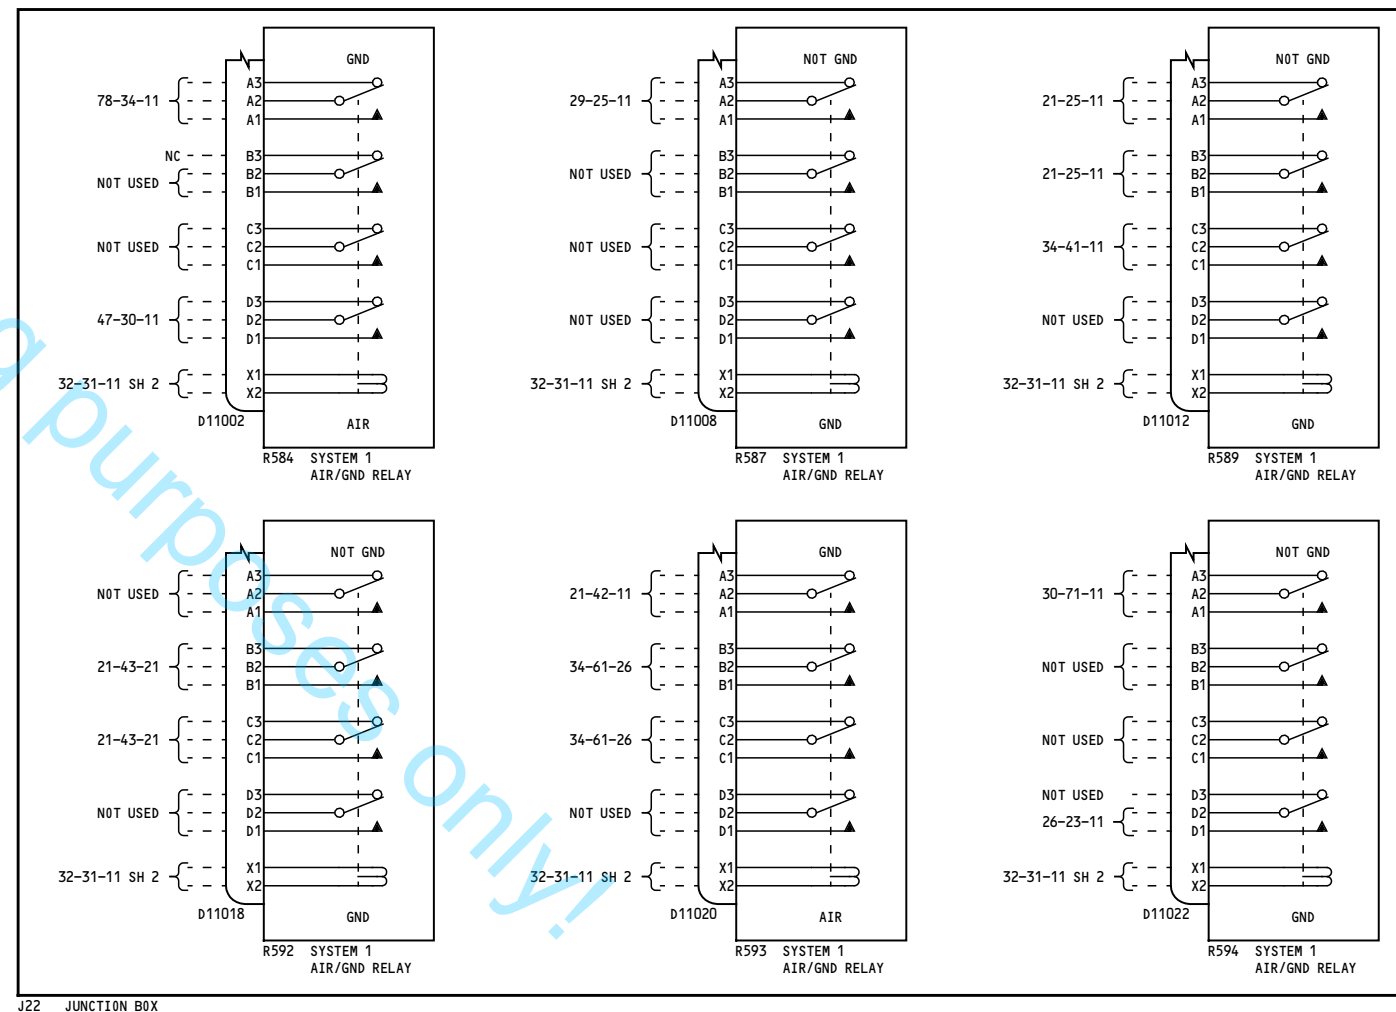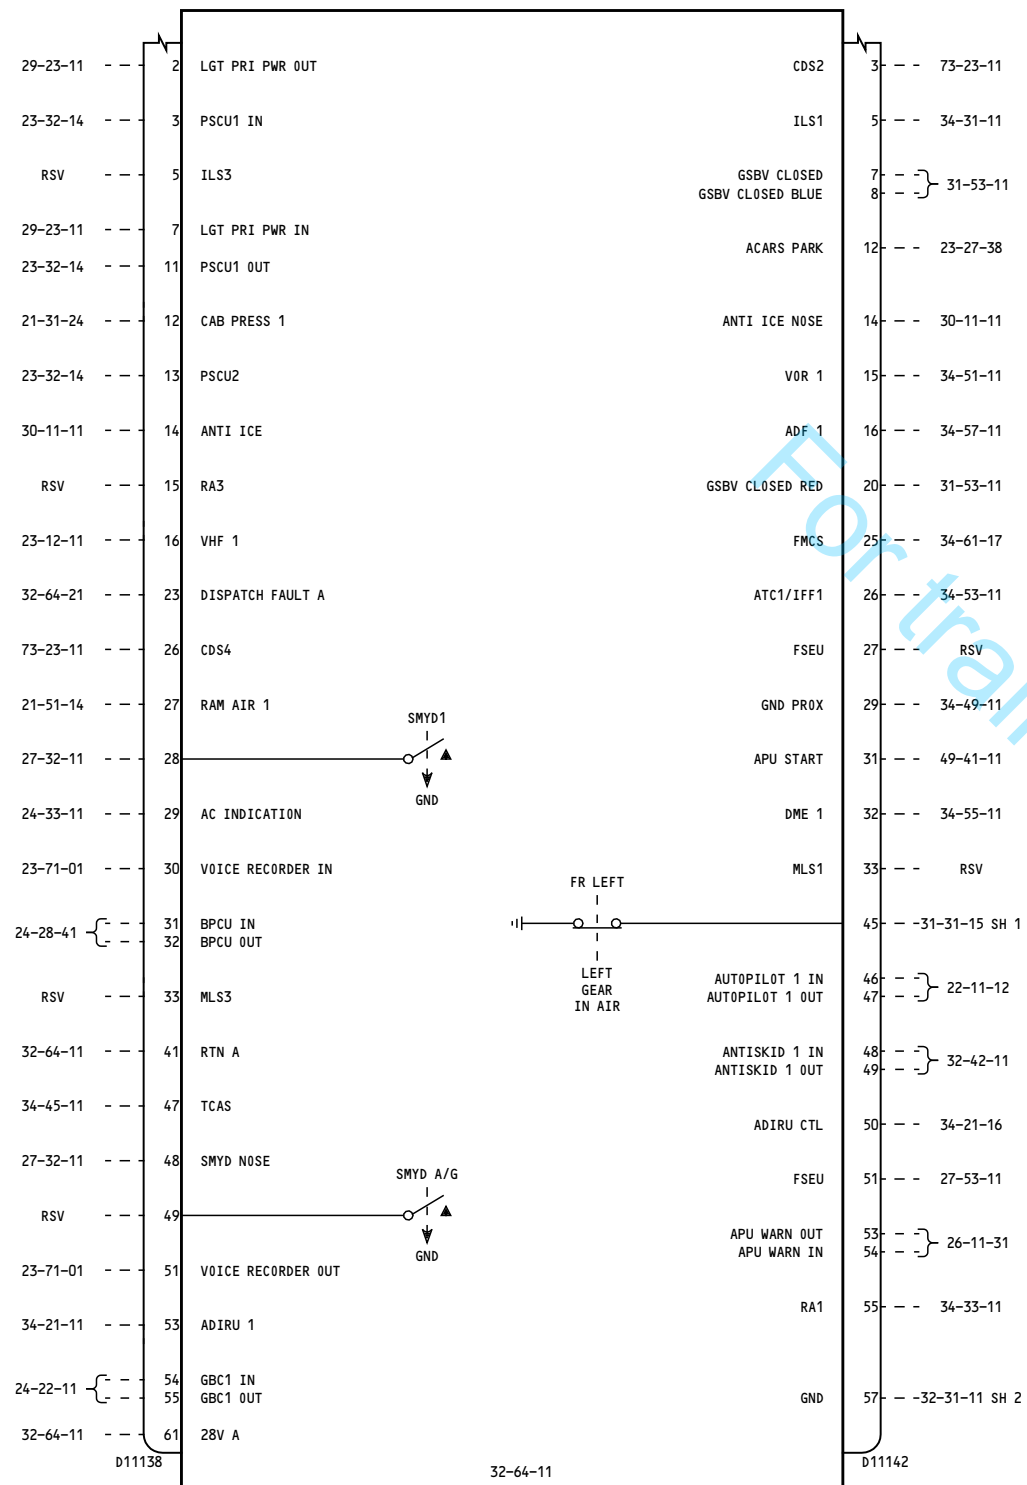

**NOTES:**

THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

YL951-YL999

**AIR/GND SYSTEM 1 & LEVER  
LATCH**


D280A108

**32-31-11**

Page 4  
Sheet 3  
Feb 01/2010

**32-31-11**

Page 4  
Sheet 3  
Feb 01/2010

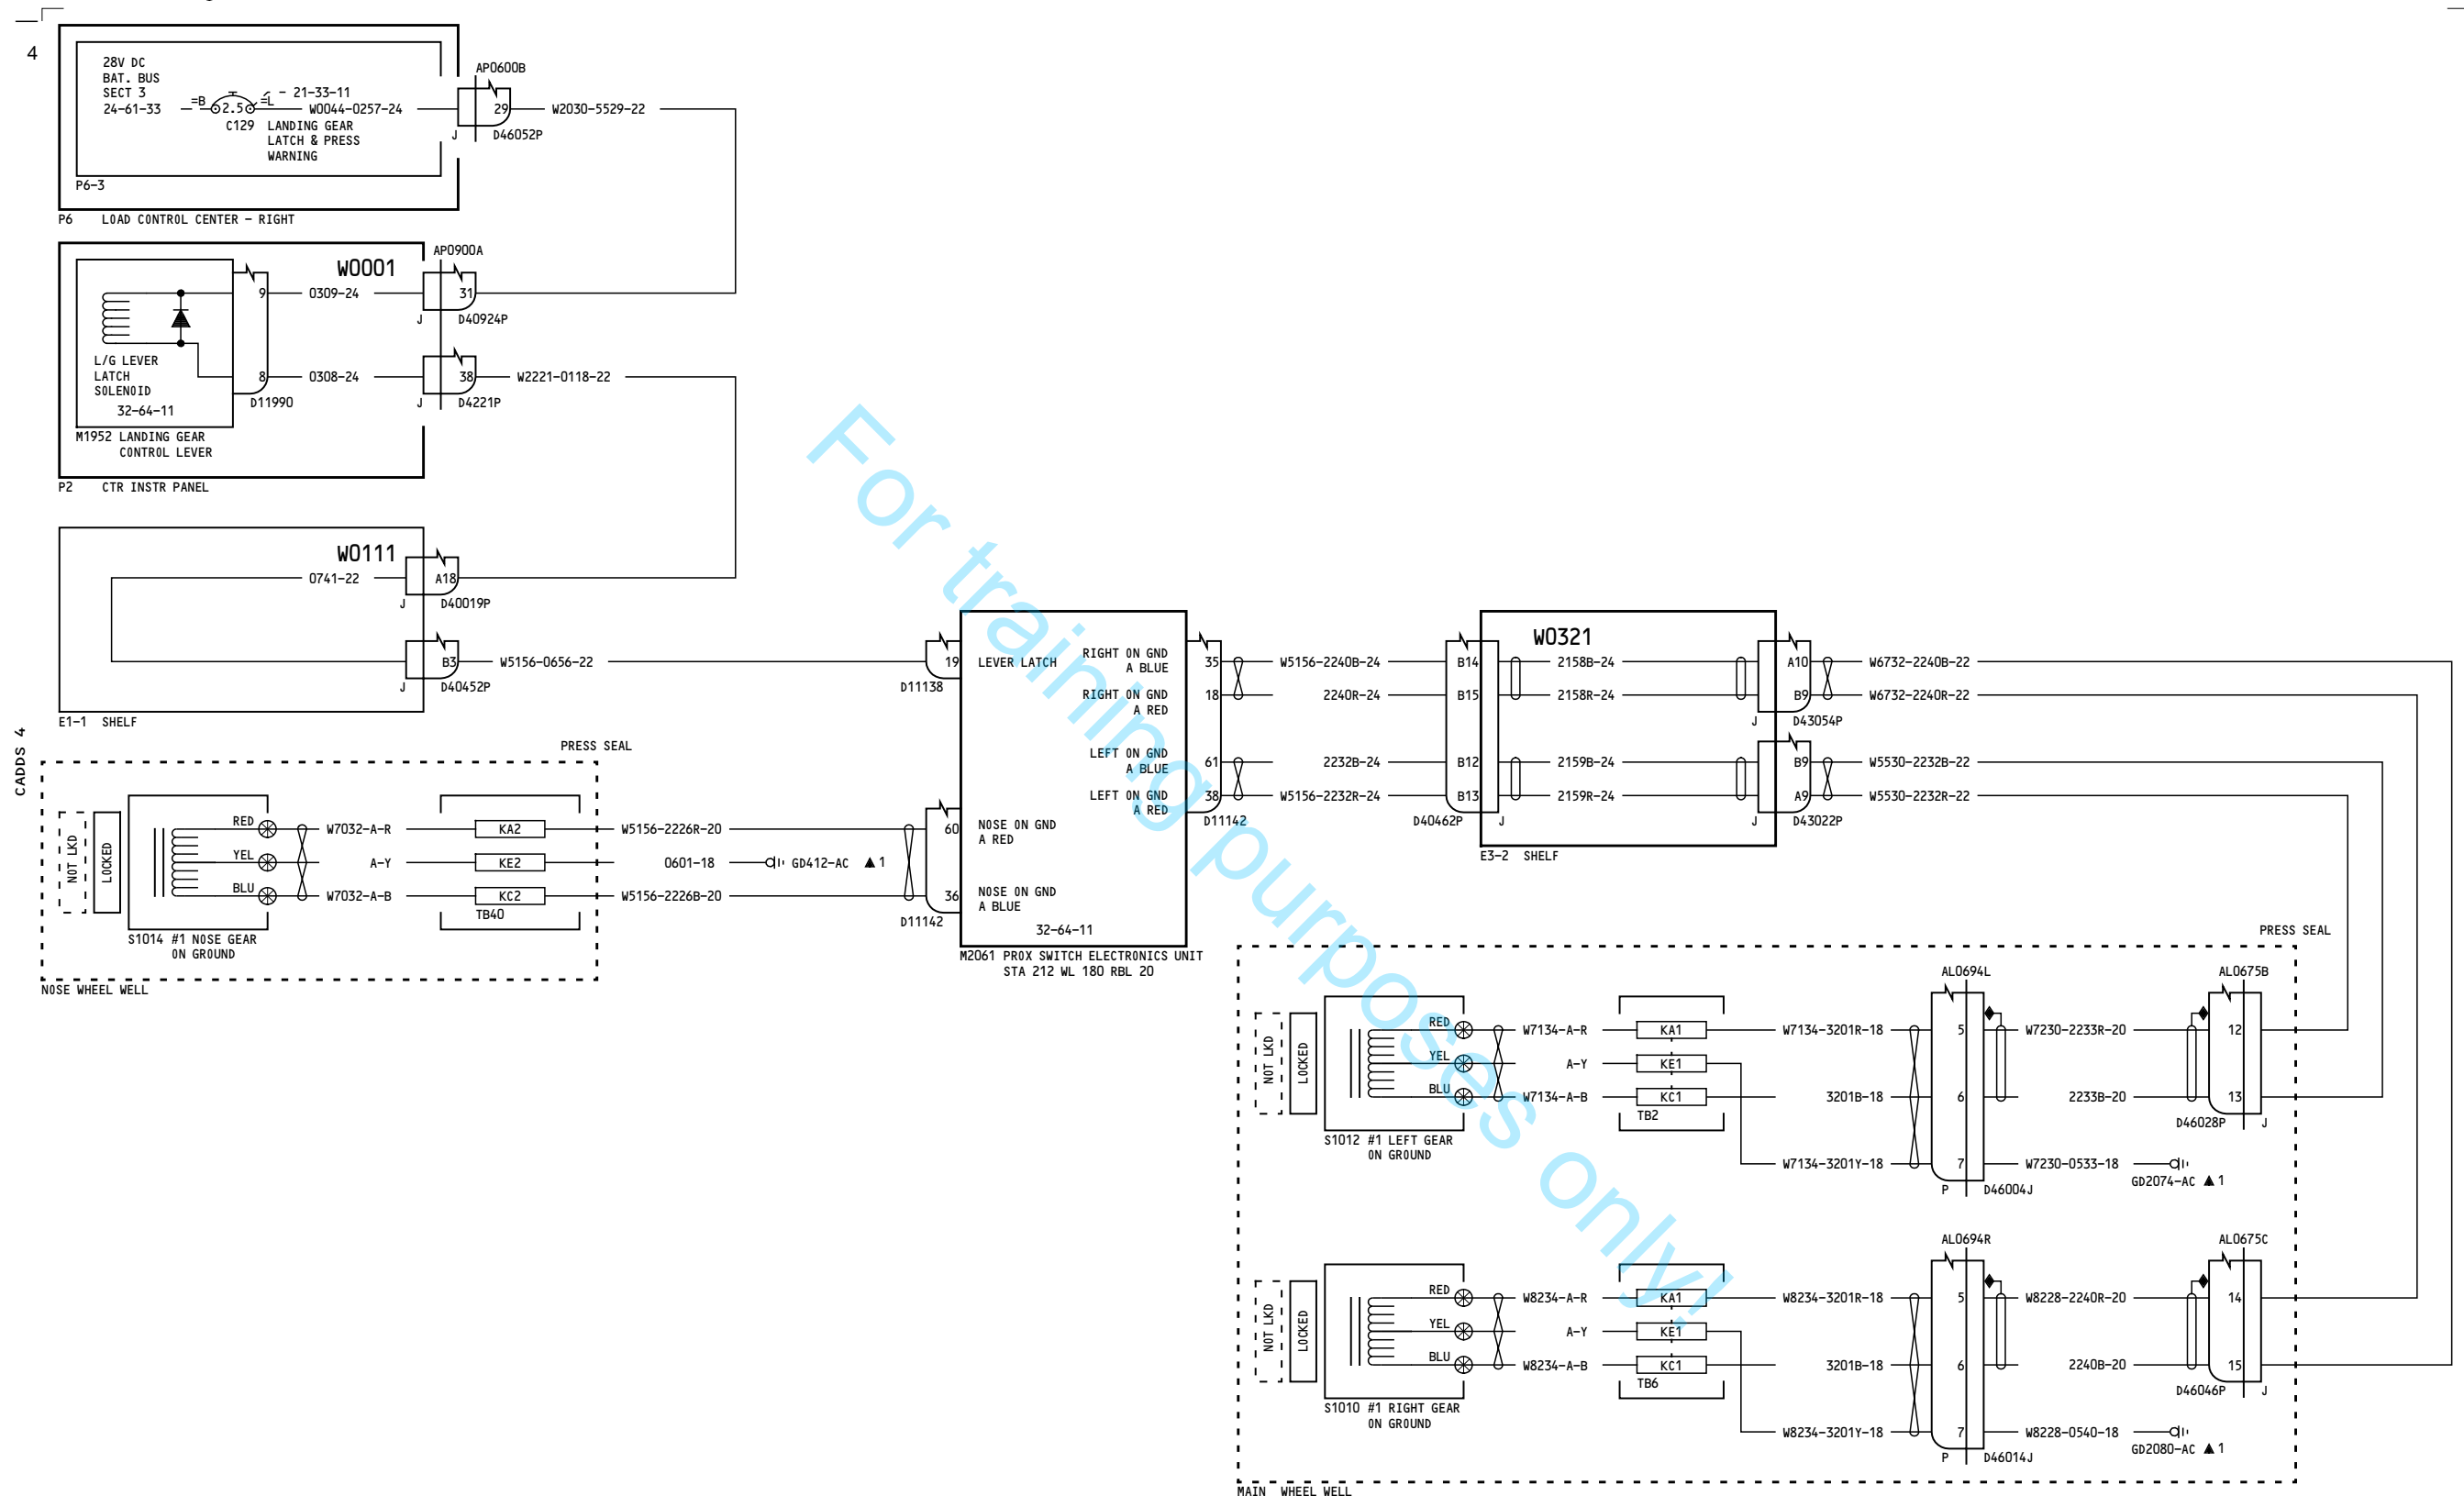

YN231-YN260

**AIR/GND SYSTEM 1 & LEVER LATCH**


D280A108

**32-31-11**

Page 5  
Sheet 1  
Dec 19/2011

**32-31-11**

Page 5  
Sheet 1  
Dec 19/2011

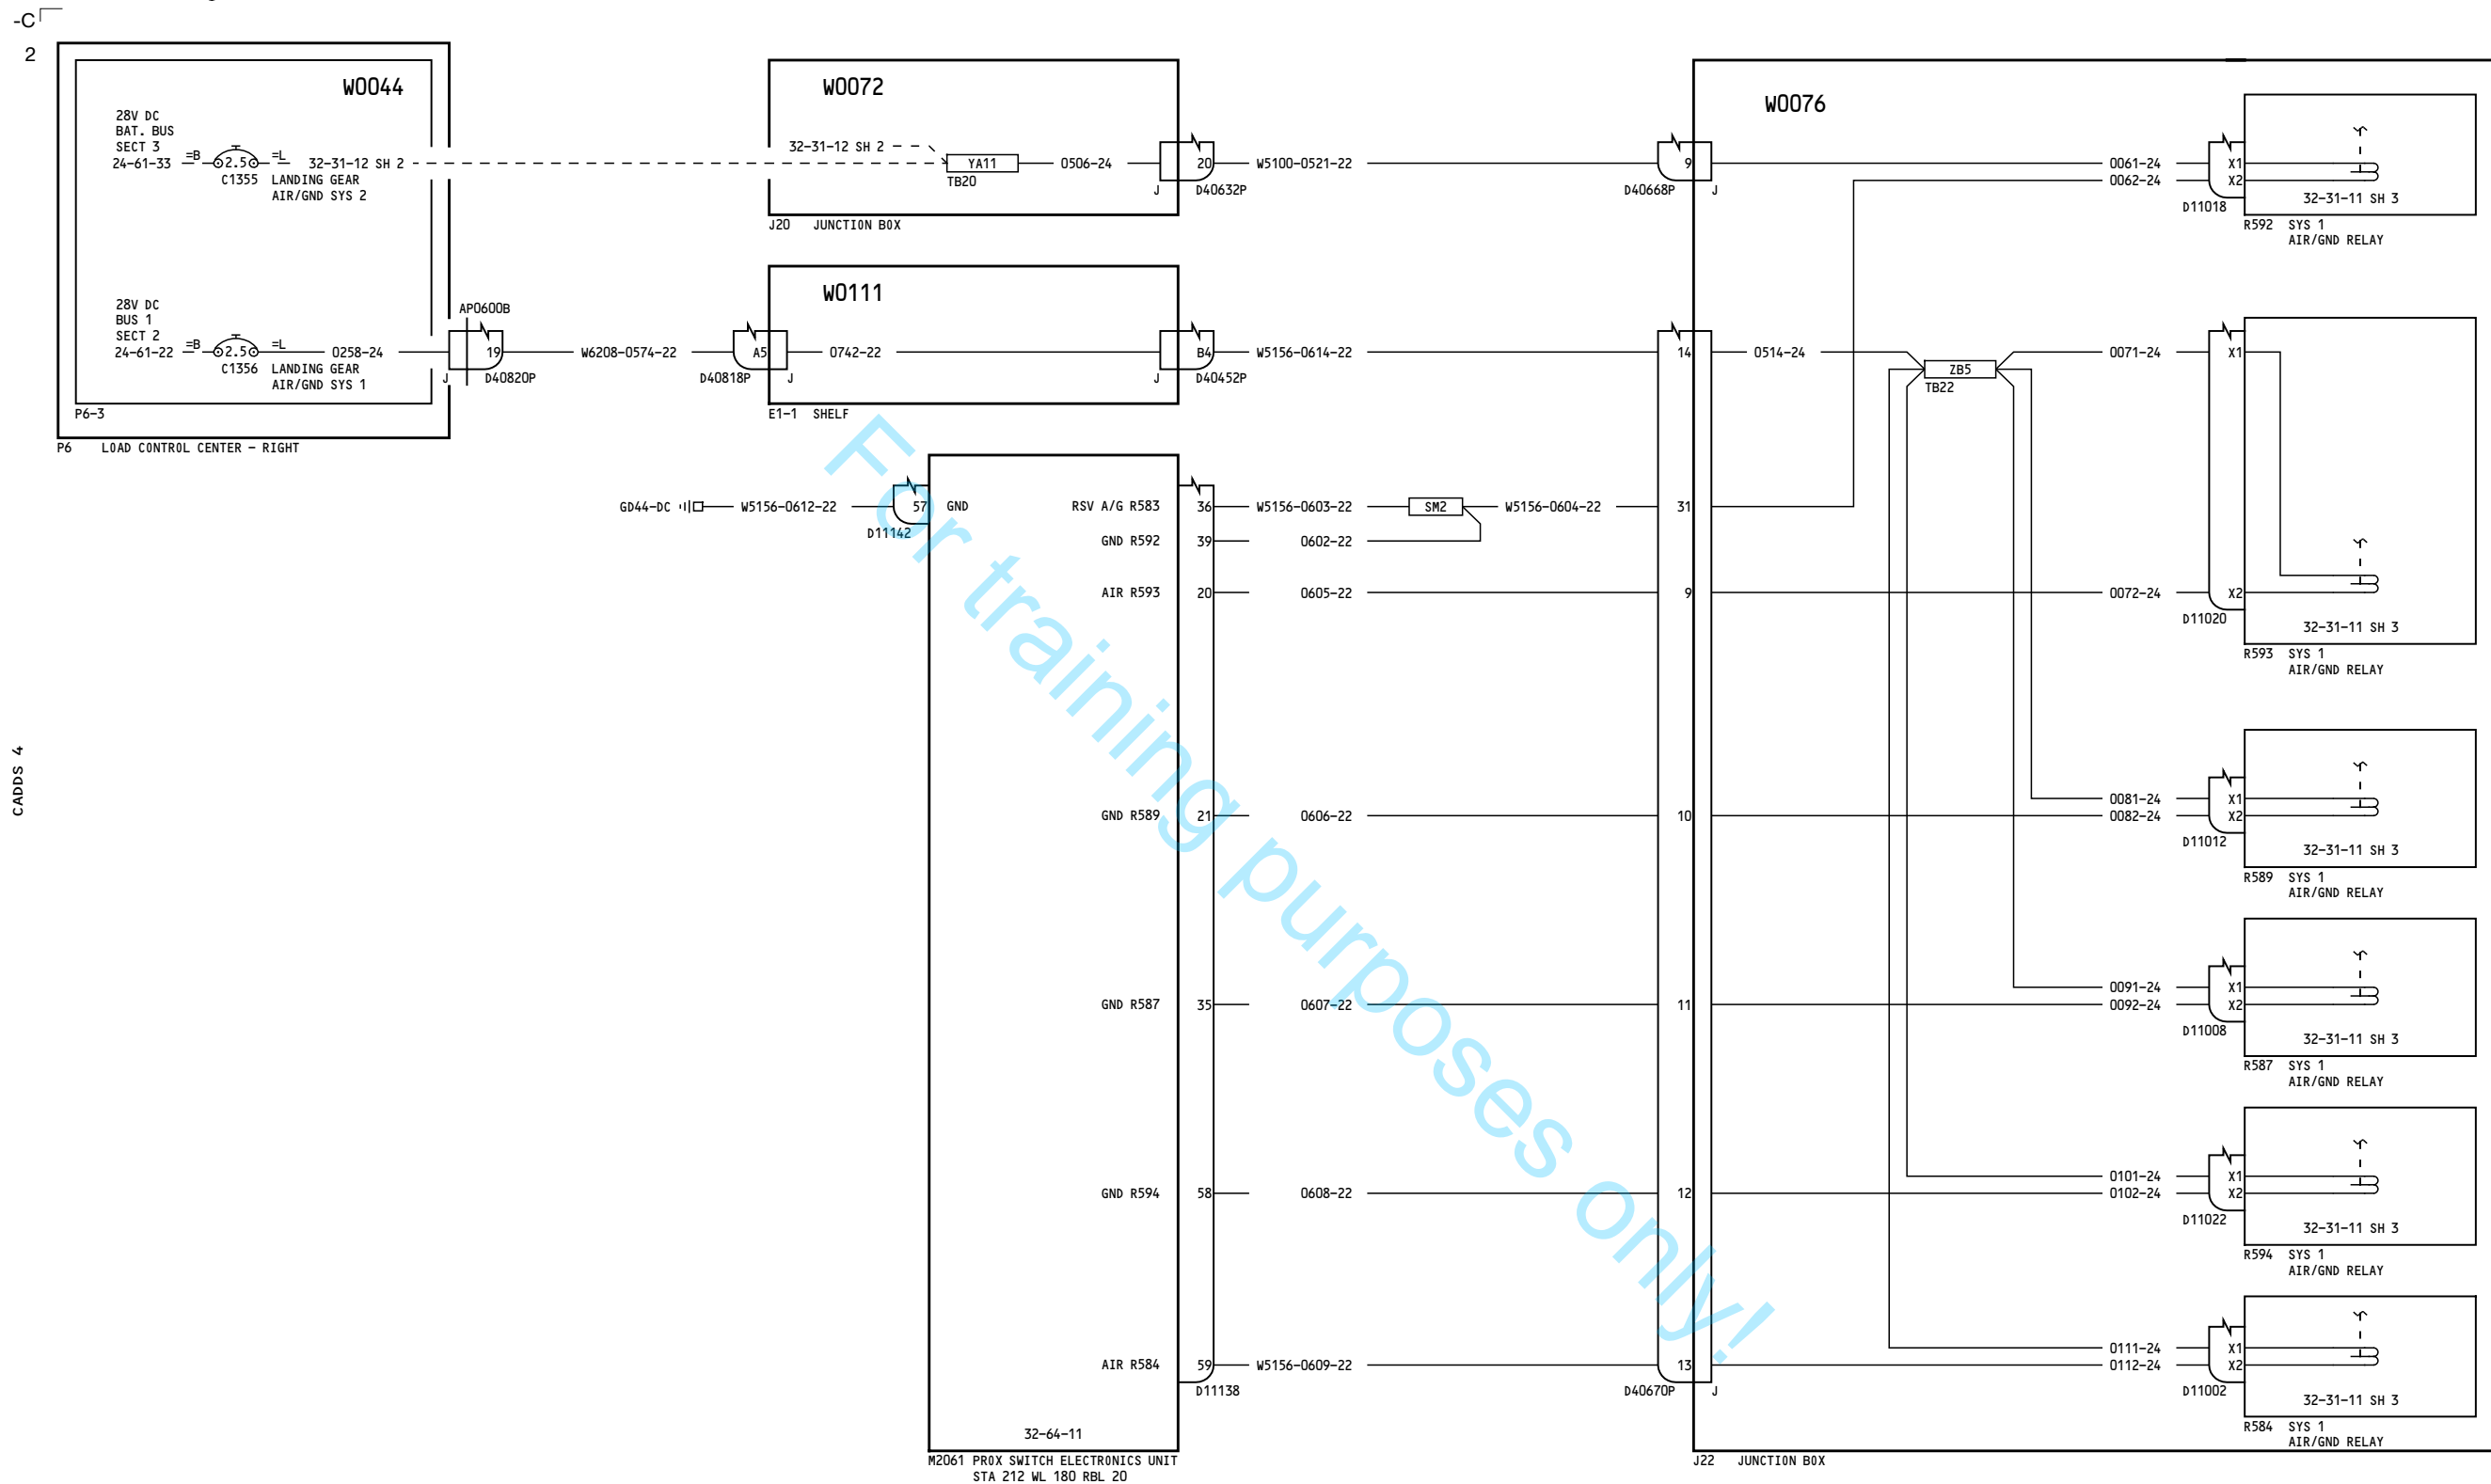

YN231-YN260

AIR/GND SYSTEM 1 & LEVER  
LATCH

D280A108


32-31-11

Page 5  
Sheet 2  
Dec 19/2011

32-31-11

Page 5  
Sheet 2  
Dec 19/2011


-A  
28

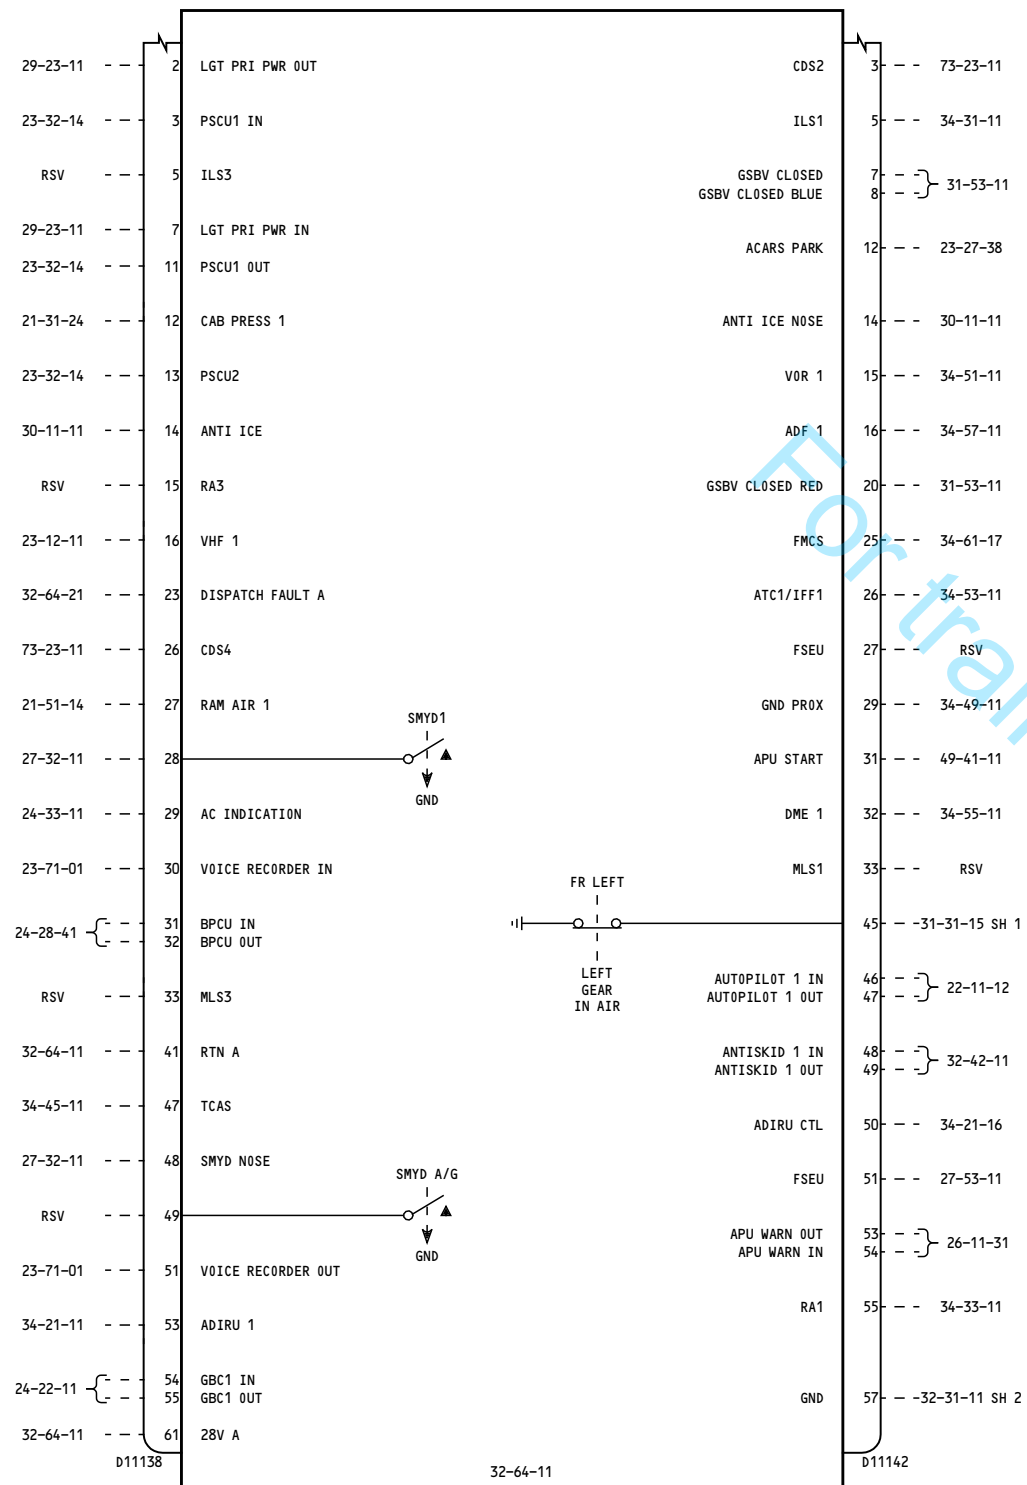

M2061 PROX SWITCH ELECTRONICS UNIT  
STA 212 WL 180 RBL 20

**NOTES:**

THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

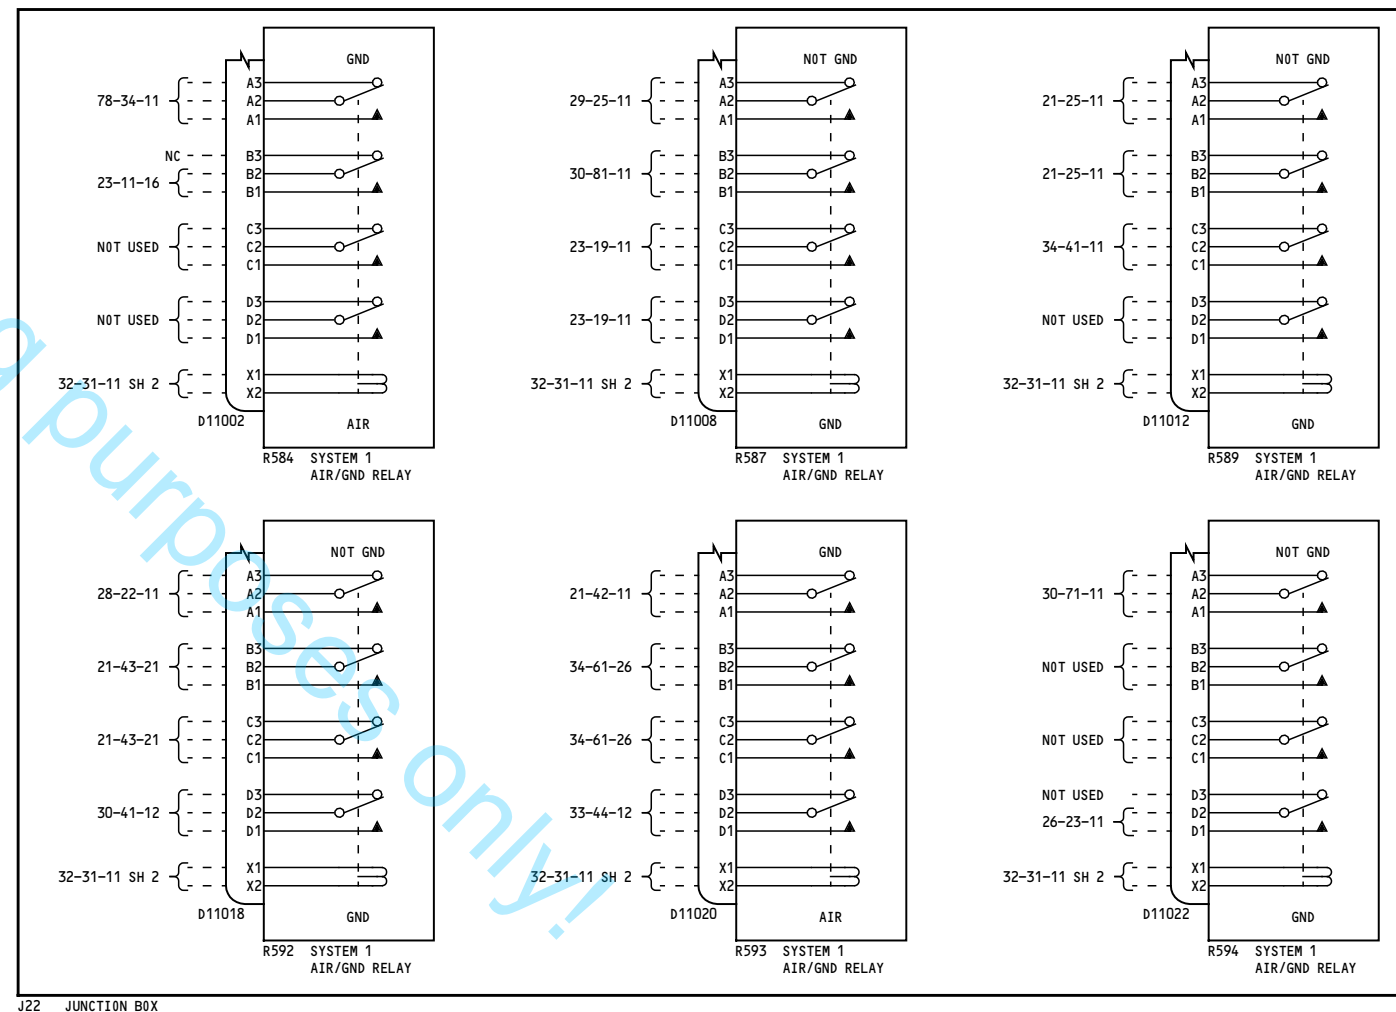

J22 JUNCTION BOX

YN231-YN260

**AIR/GND SYSTEM 1 & LEVER  
LATCH**


D280A108

**32-31-11**

Page 5  
Sheet 3  
Dec 19/2011

**32-31-11**

Page 5  
Sheet 3  
Dec 19/2011

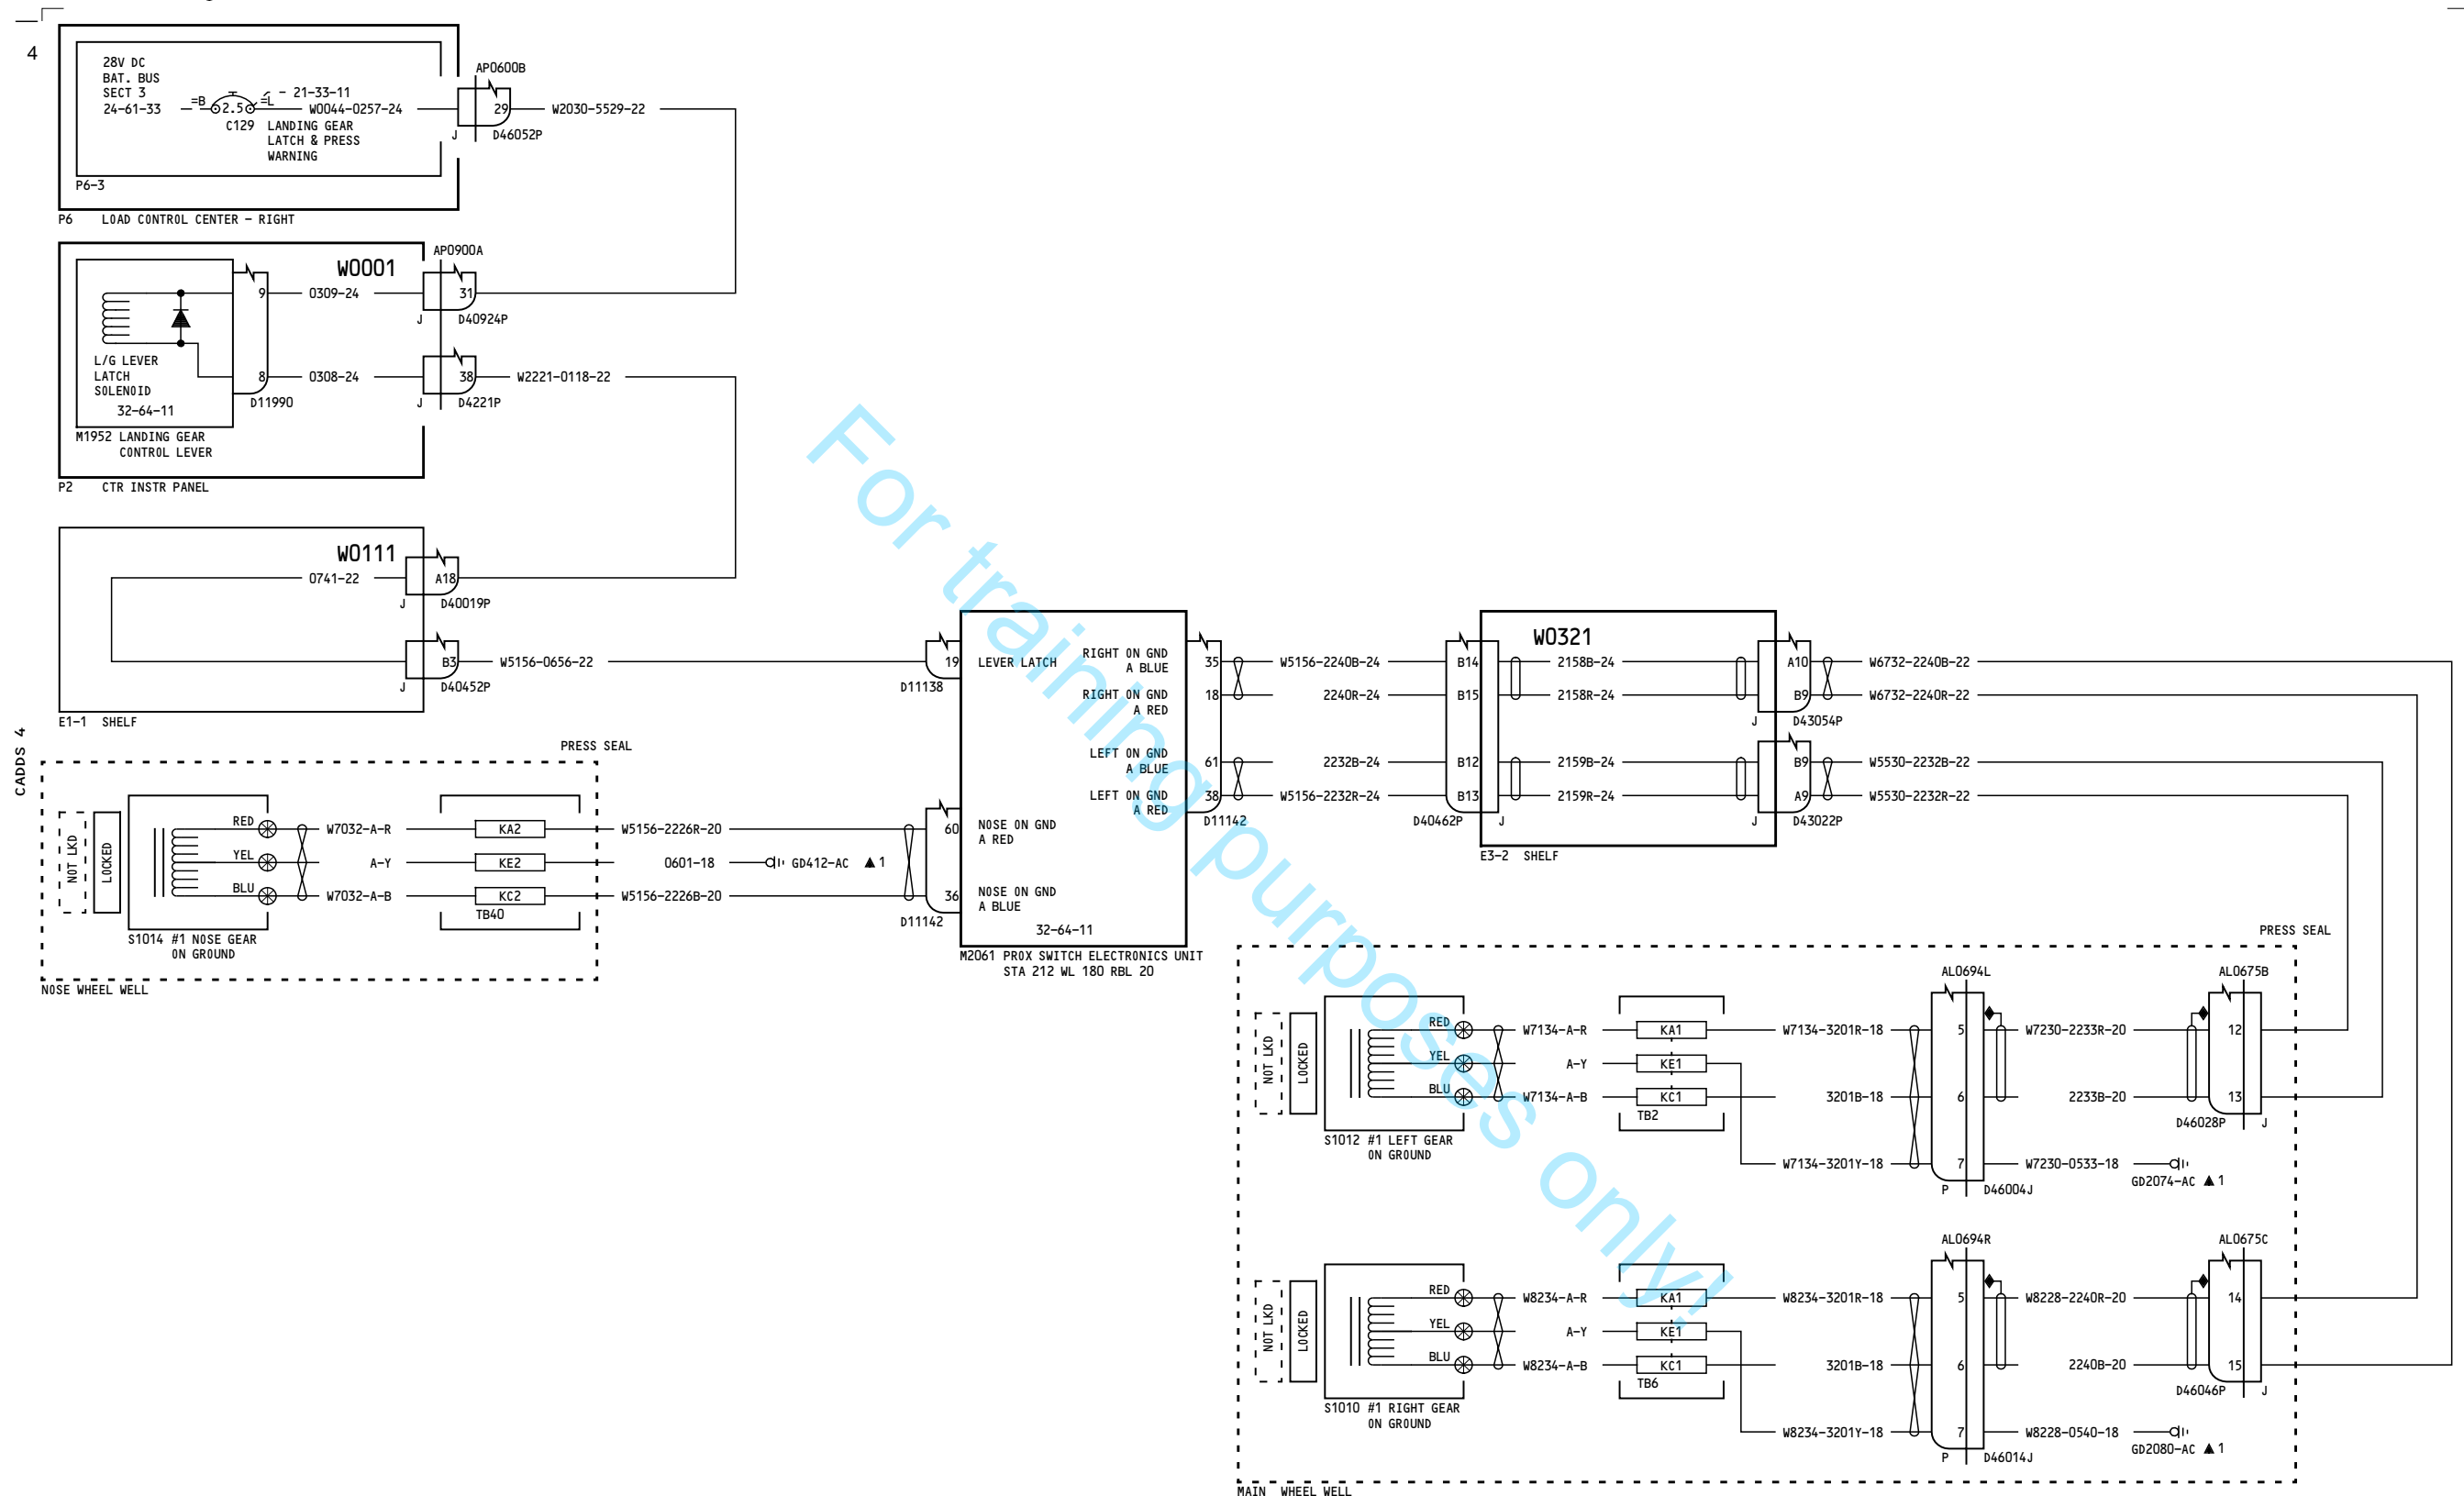

YN501

**AIR/GND SYSTEM 1 & LEVER LATCH**


D280A108

**32-31-11**

Page 6  
Sheet 1  
Oct 06/2010

**32-31-11**

Page 6  
Sheet 1  
Oct 06/2010

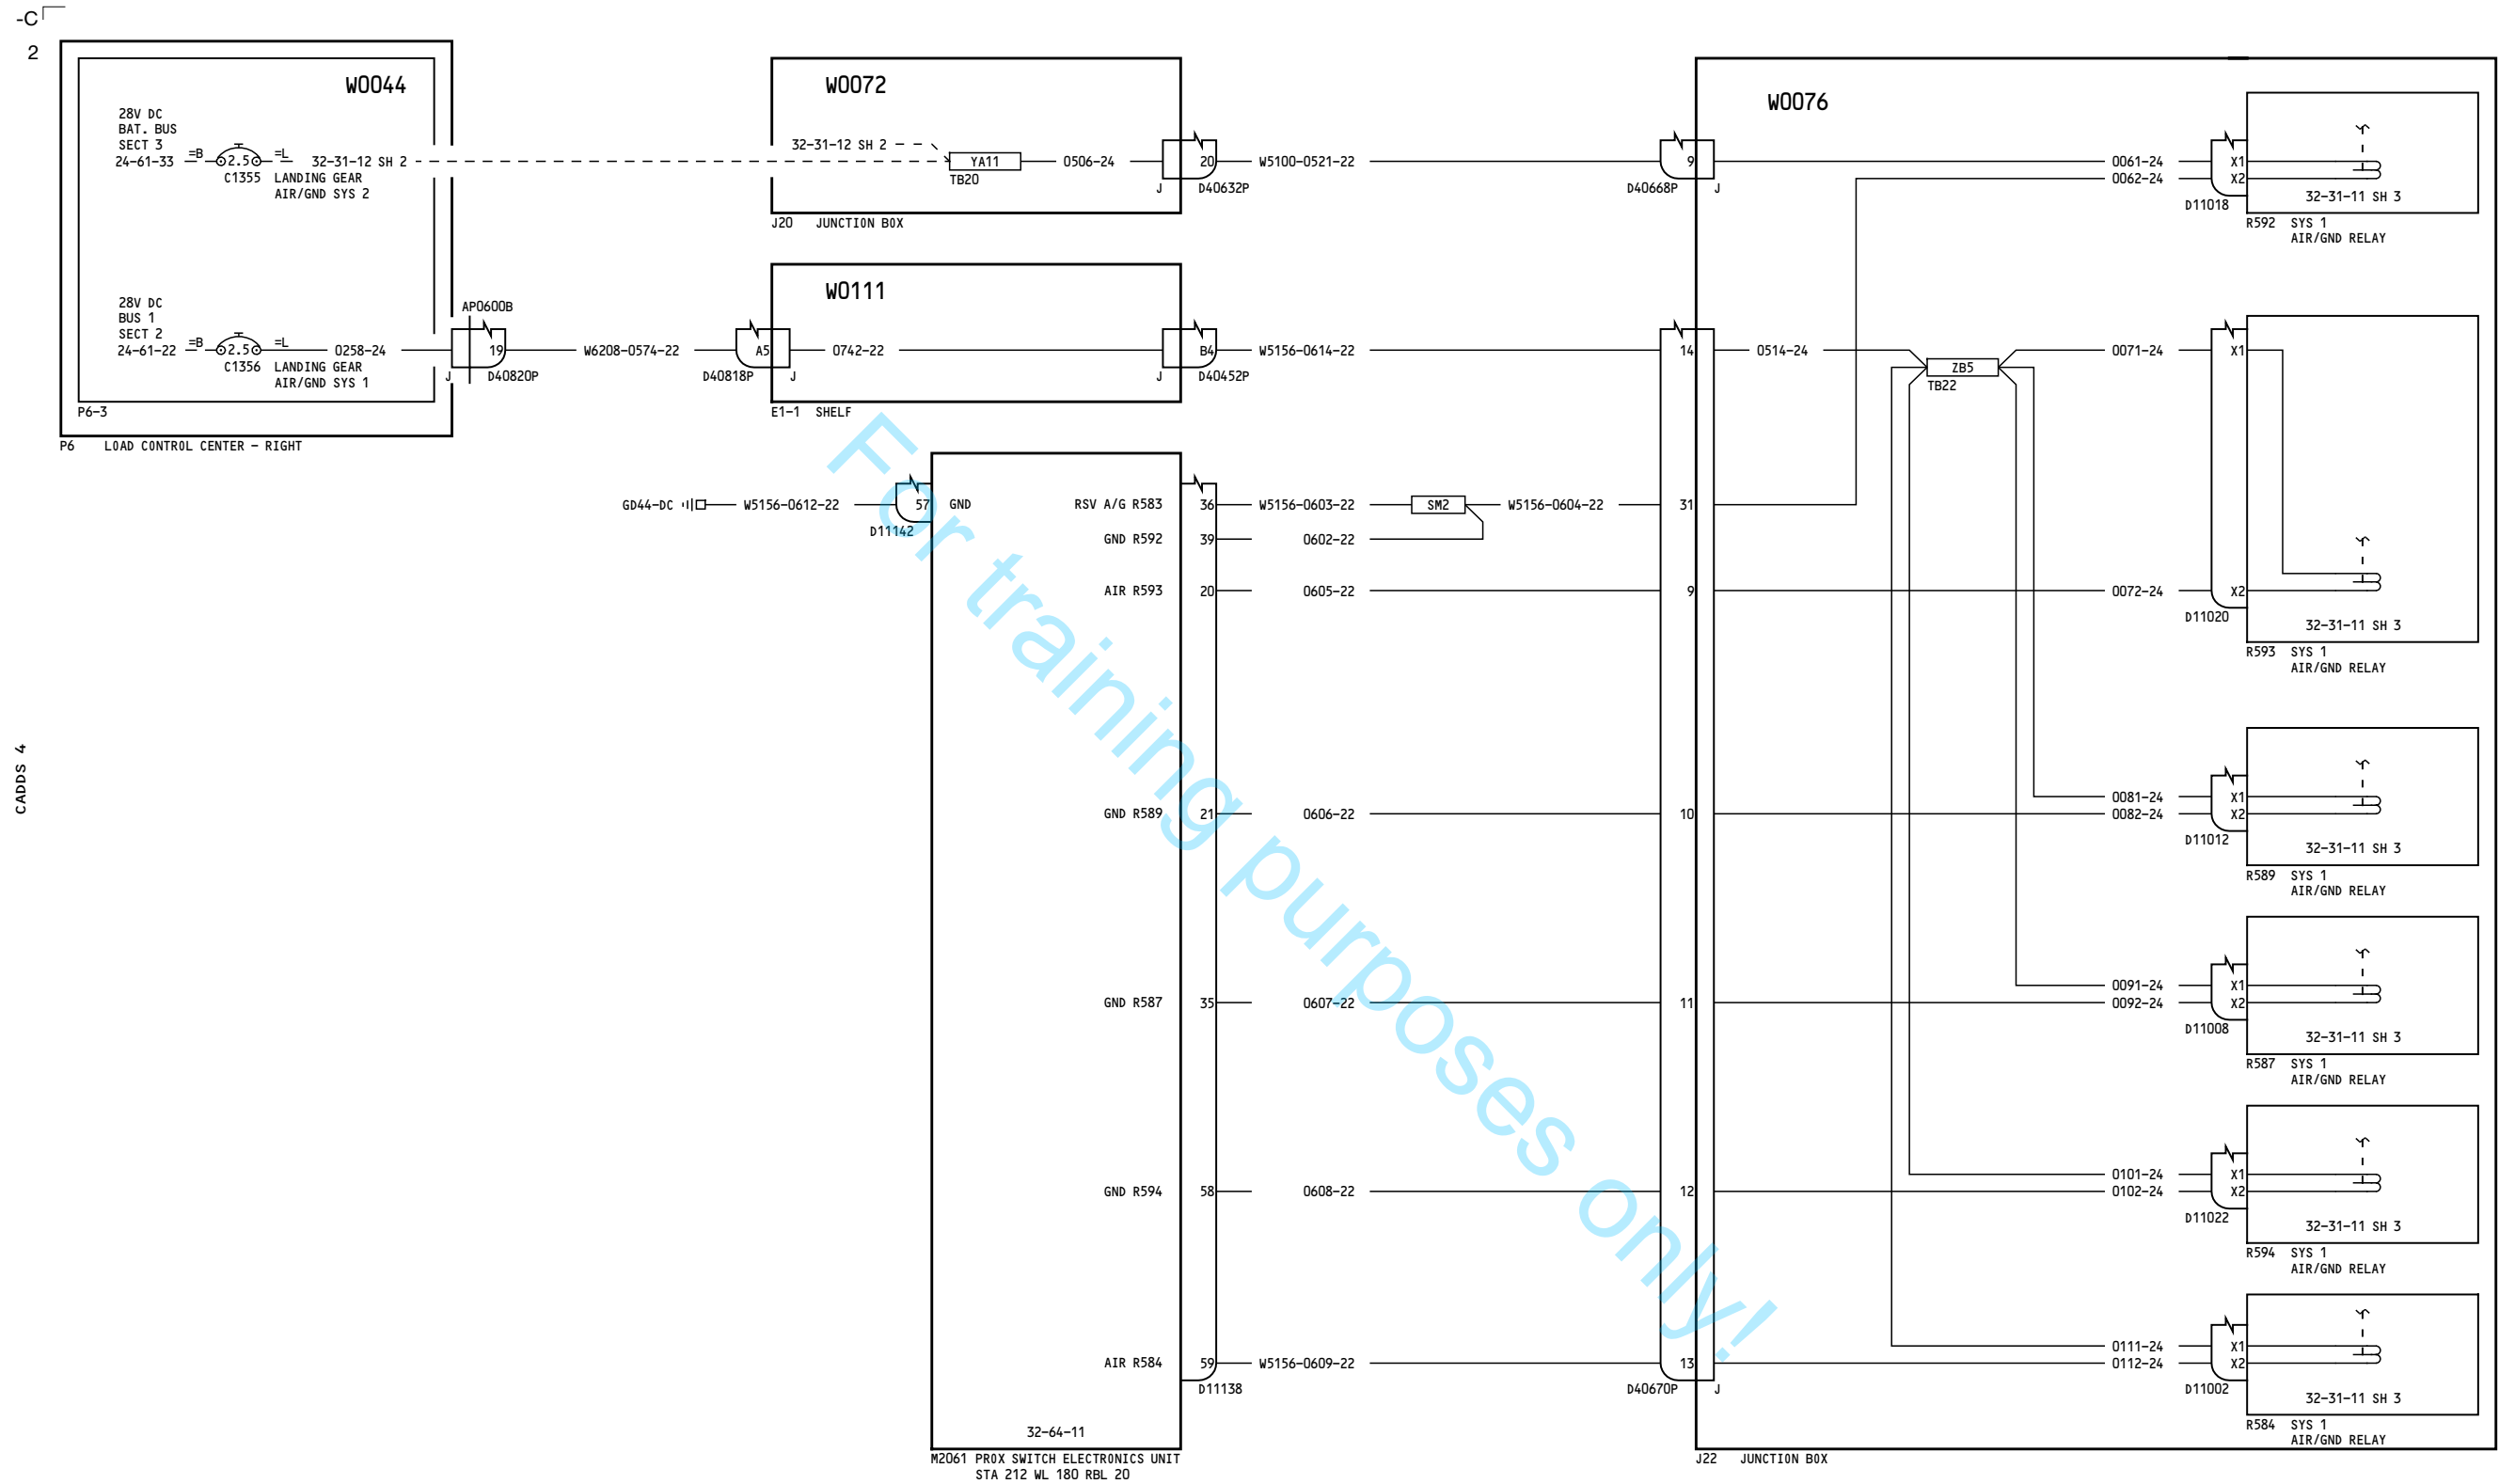

YN501

AIR/GND SYSTEM 1 & LEVER  
LATCH

D280A108


32-31-11

Page 6  
Sheet 2  
Oct 06/2010

32-31-11

Page 6  
Sheet 2  
Oct 06/2010


-A  
93

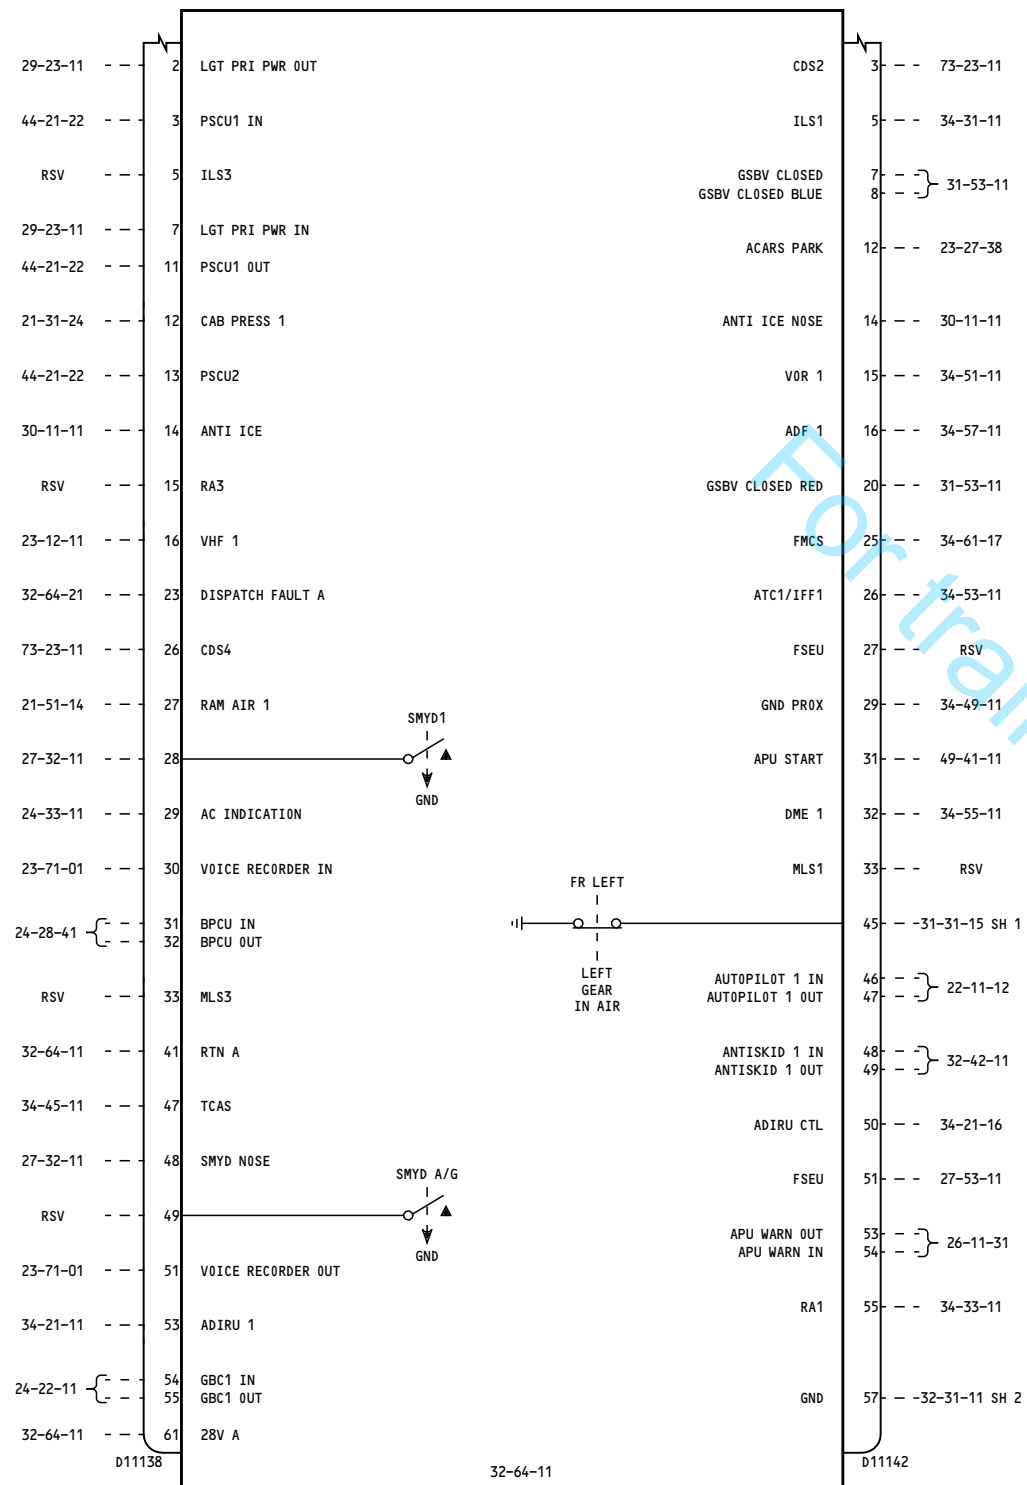

M2061 PROX SWITCH ELECTRONICS UNIT  
STA 212 WL 180 RBL 20

**NOTES:**

THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

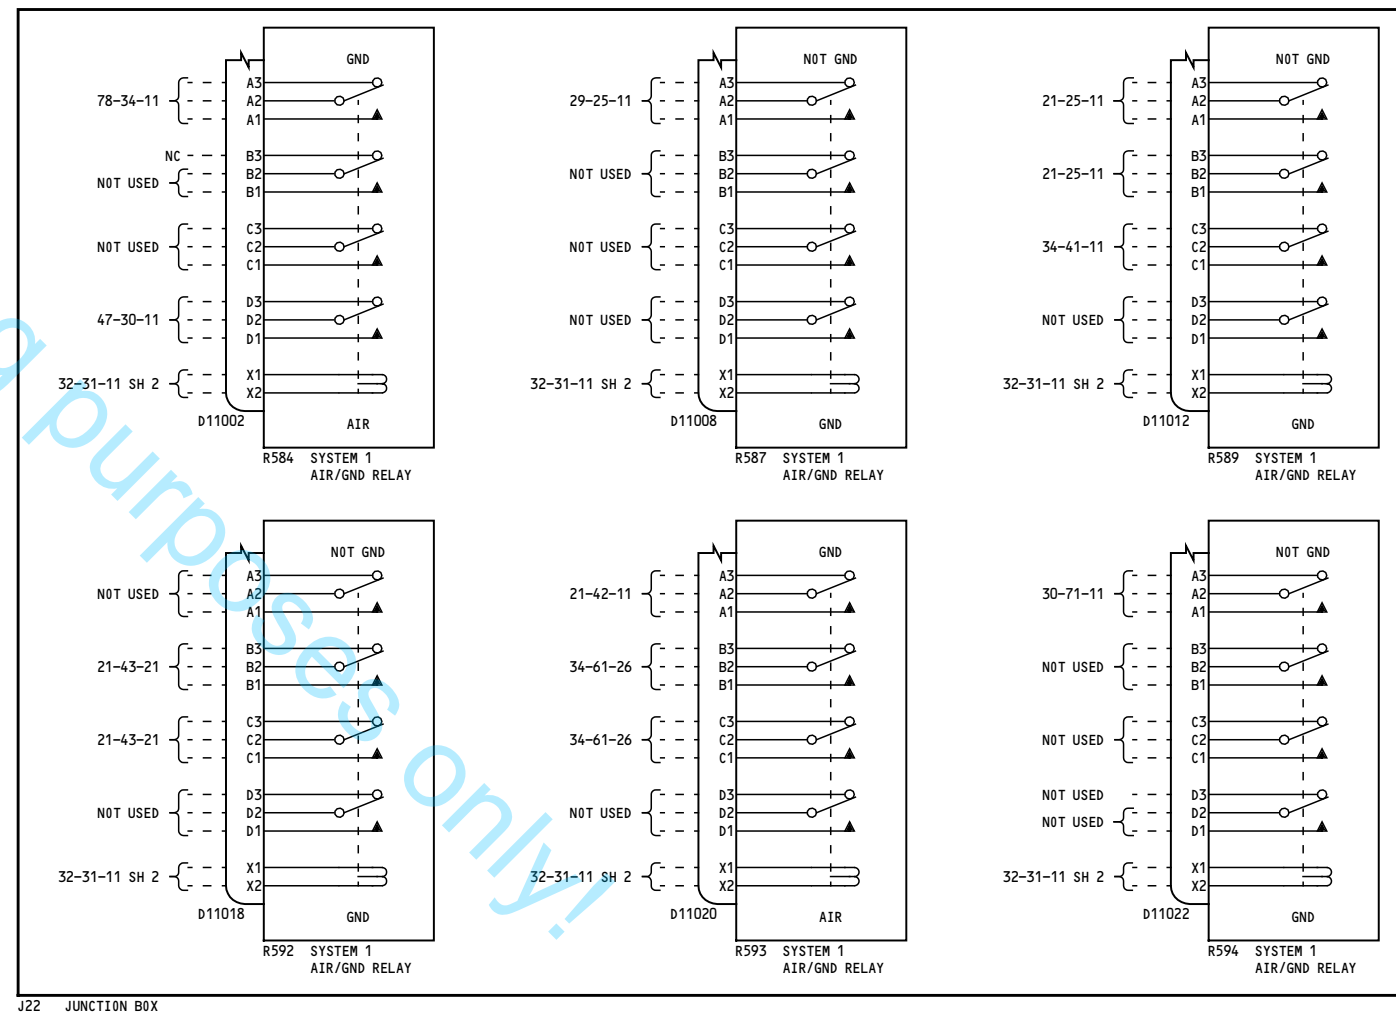

J22 JUNCTION BOX

YN501

**AIR/GND SYSTEM 1 & LEVER  
LATCH**

D280A108


**32-31-11**

Page 6  
Sheet 3  
Oct 06/2010

**32-31-11**

Page 6  
Sheet 3  
Oct 06/2010



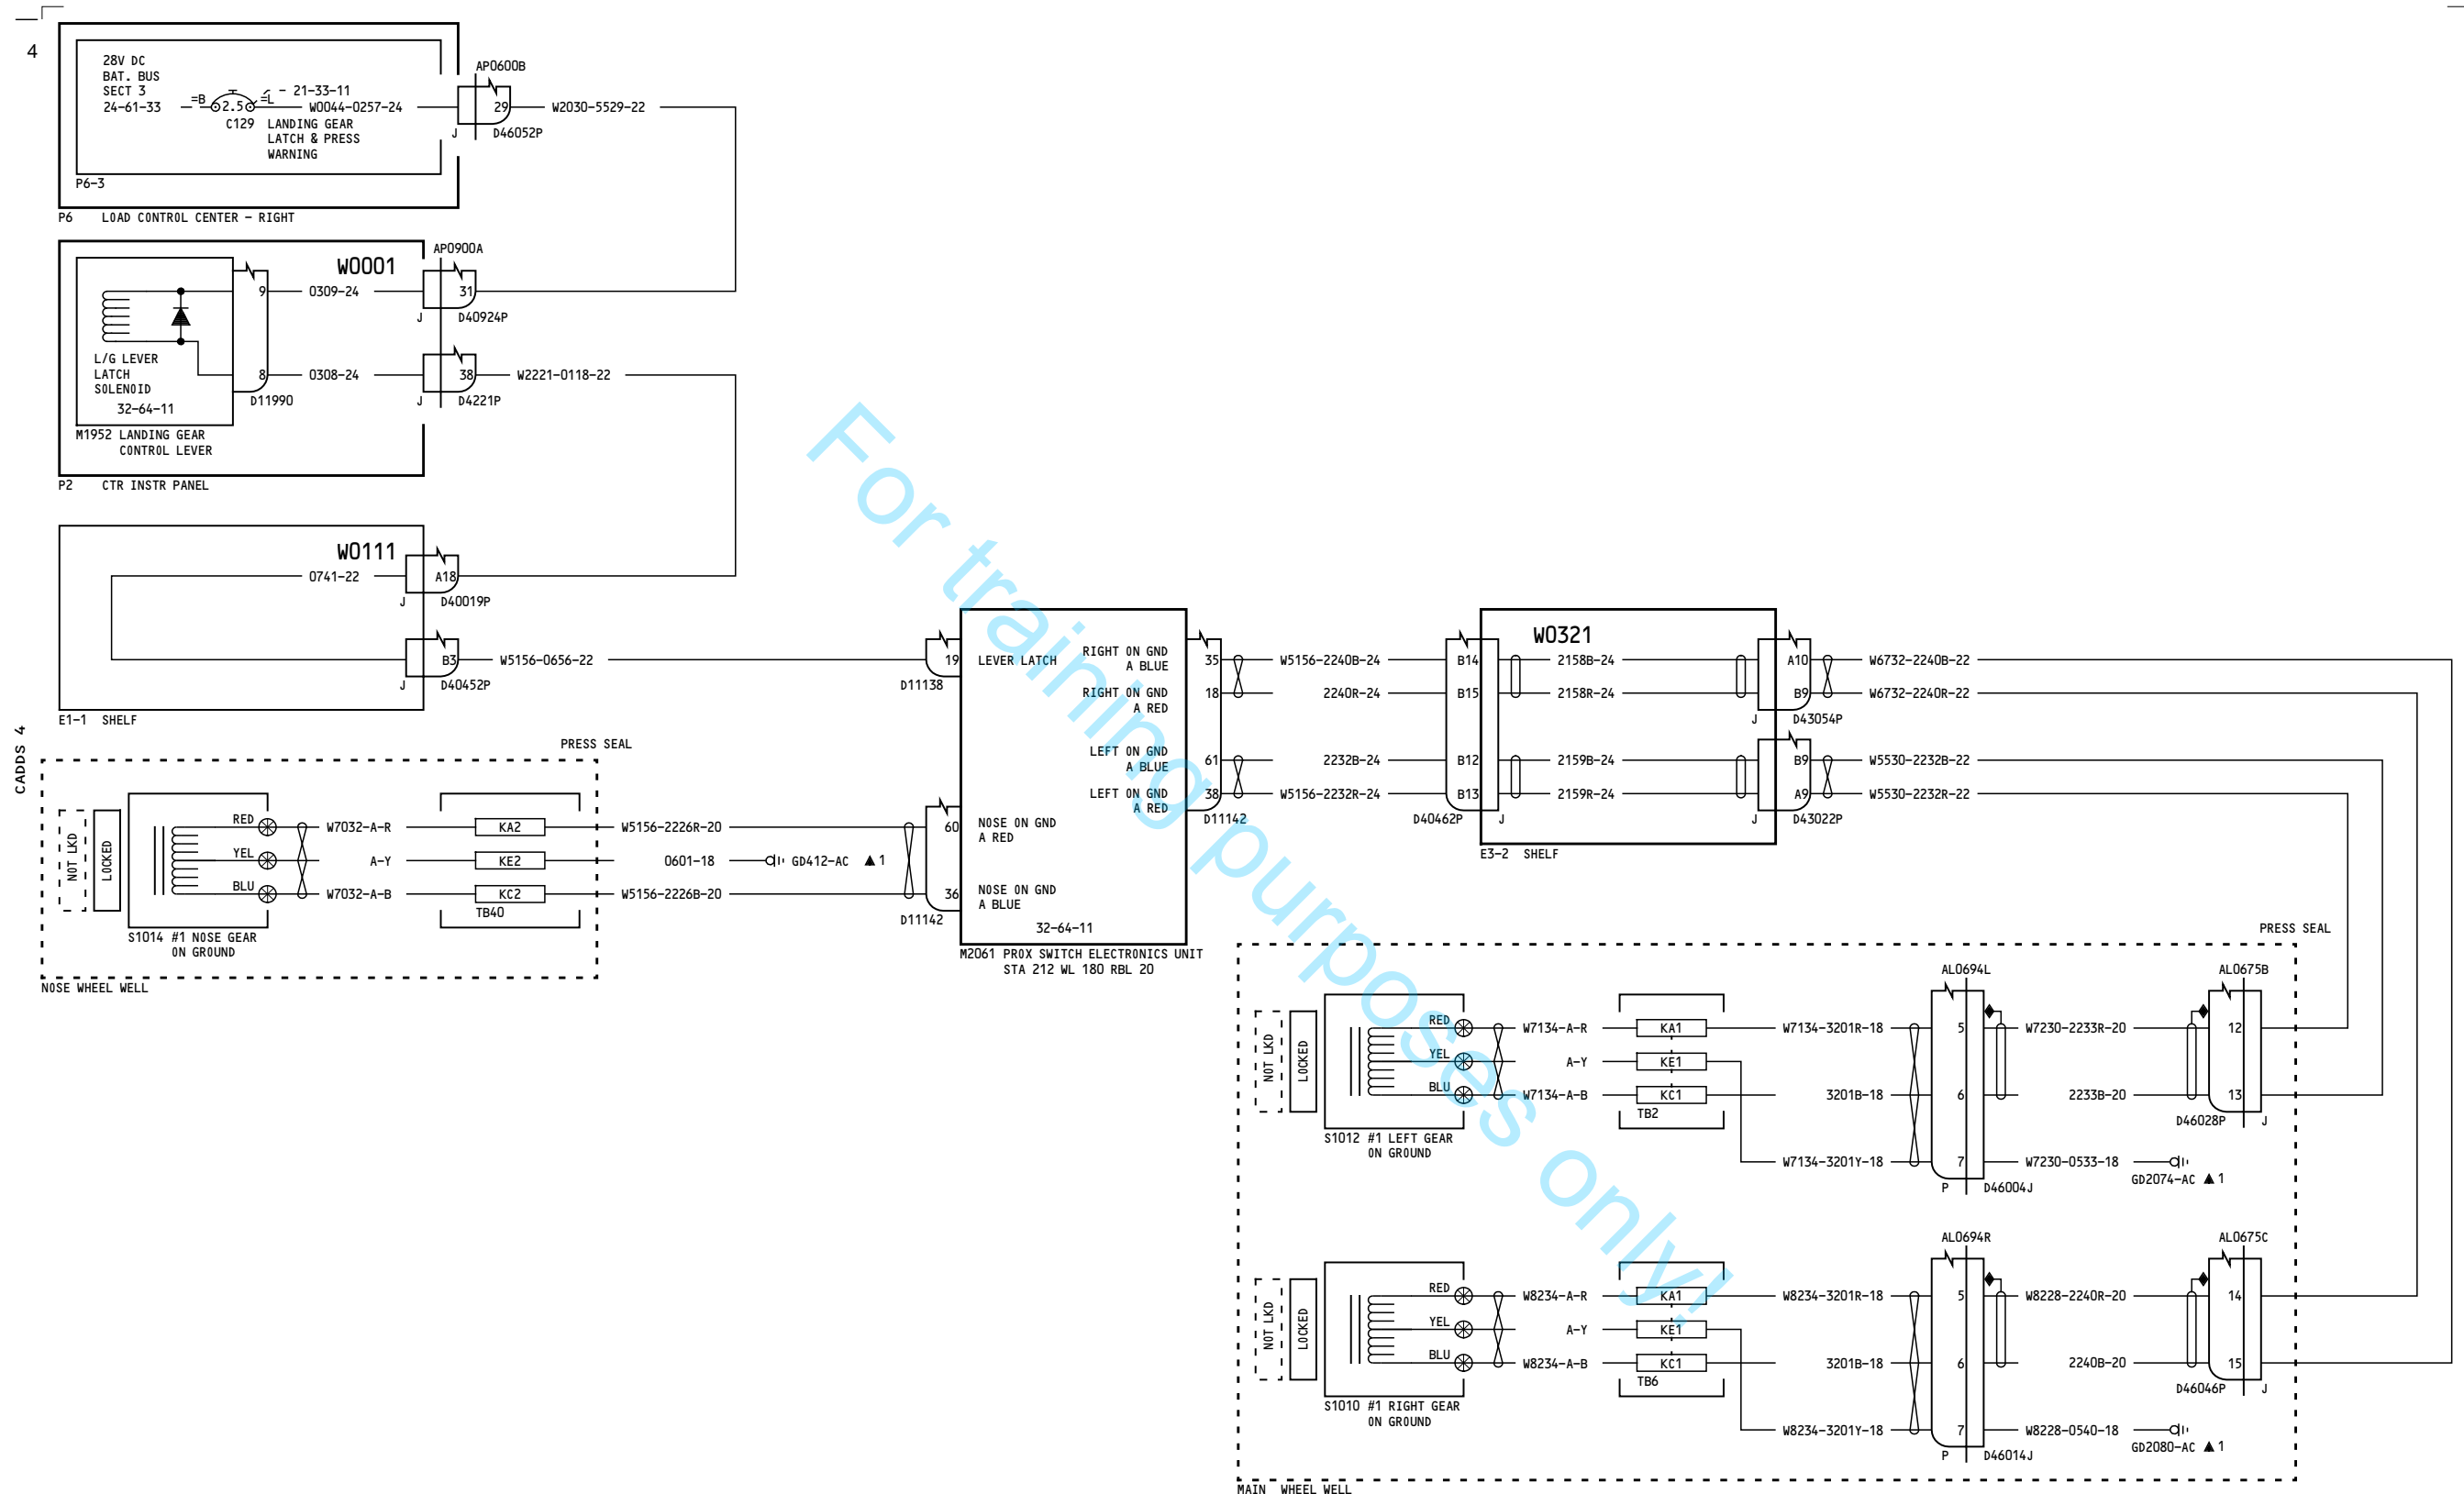

YR301-YR316, YR319

AIR/GND SYSTEM 1 & LEVER LATCH


D280A108

32-31-11

Page 7  
Sheet 1  
Aug 14/2012

32-31-11

Page 7  
Sheet 1  
Aug 14/2012

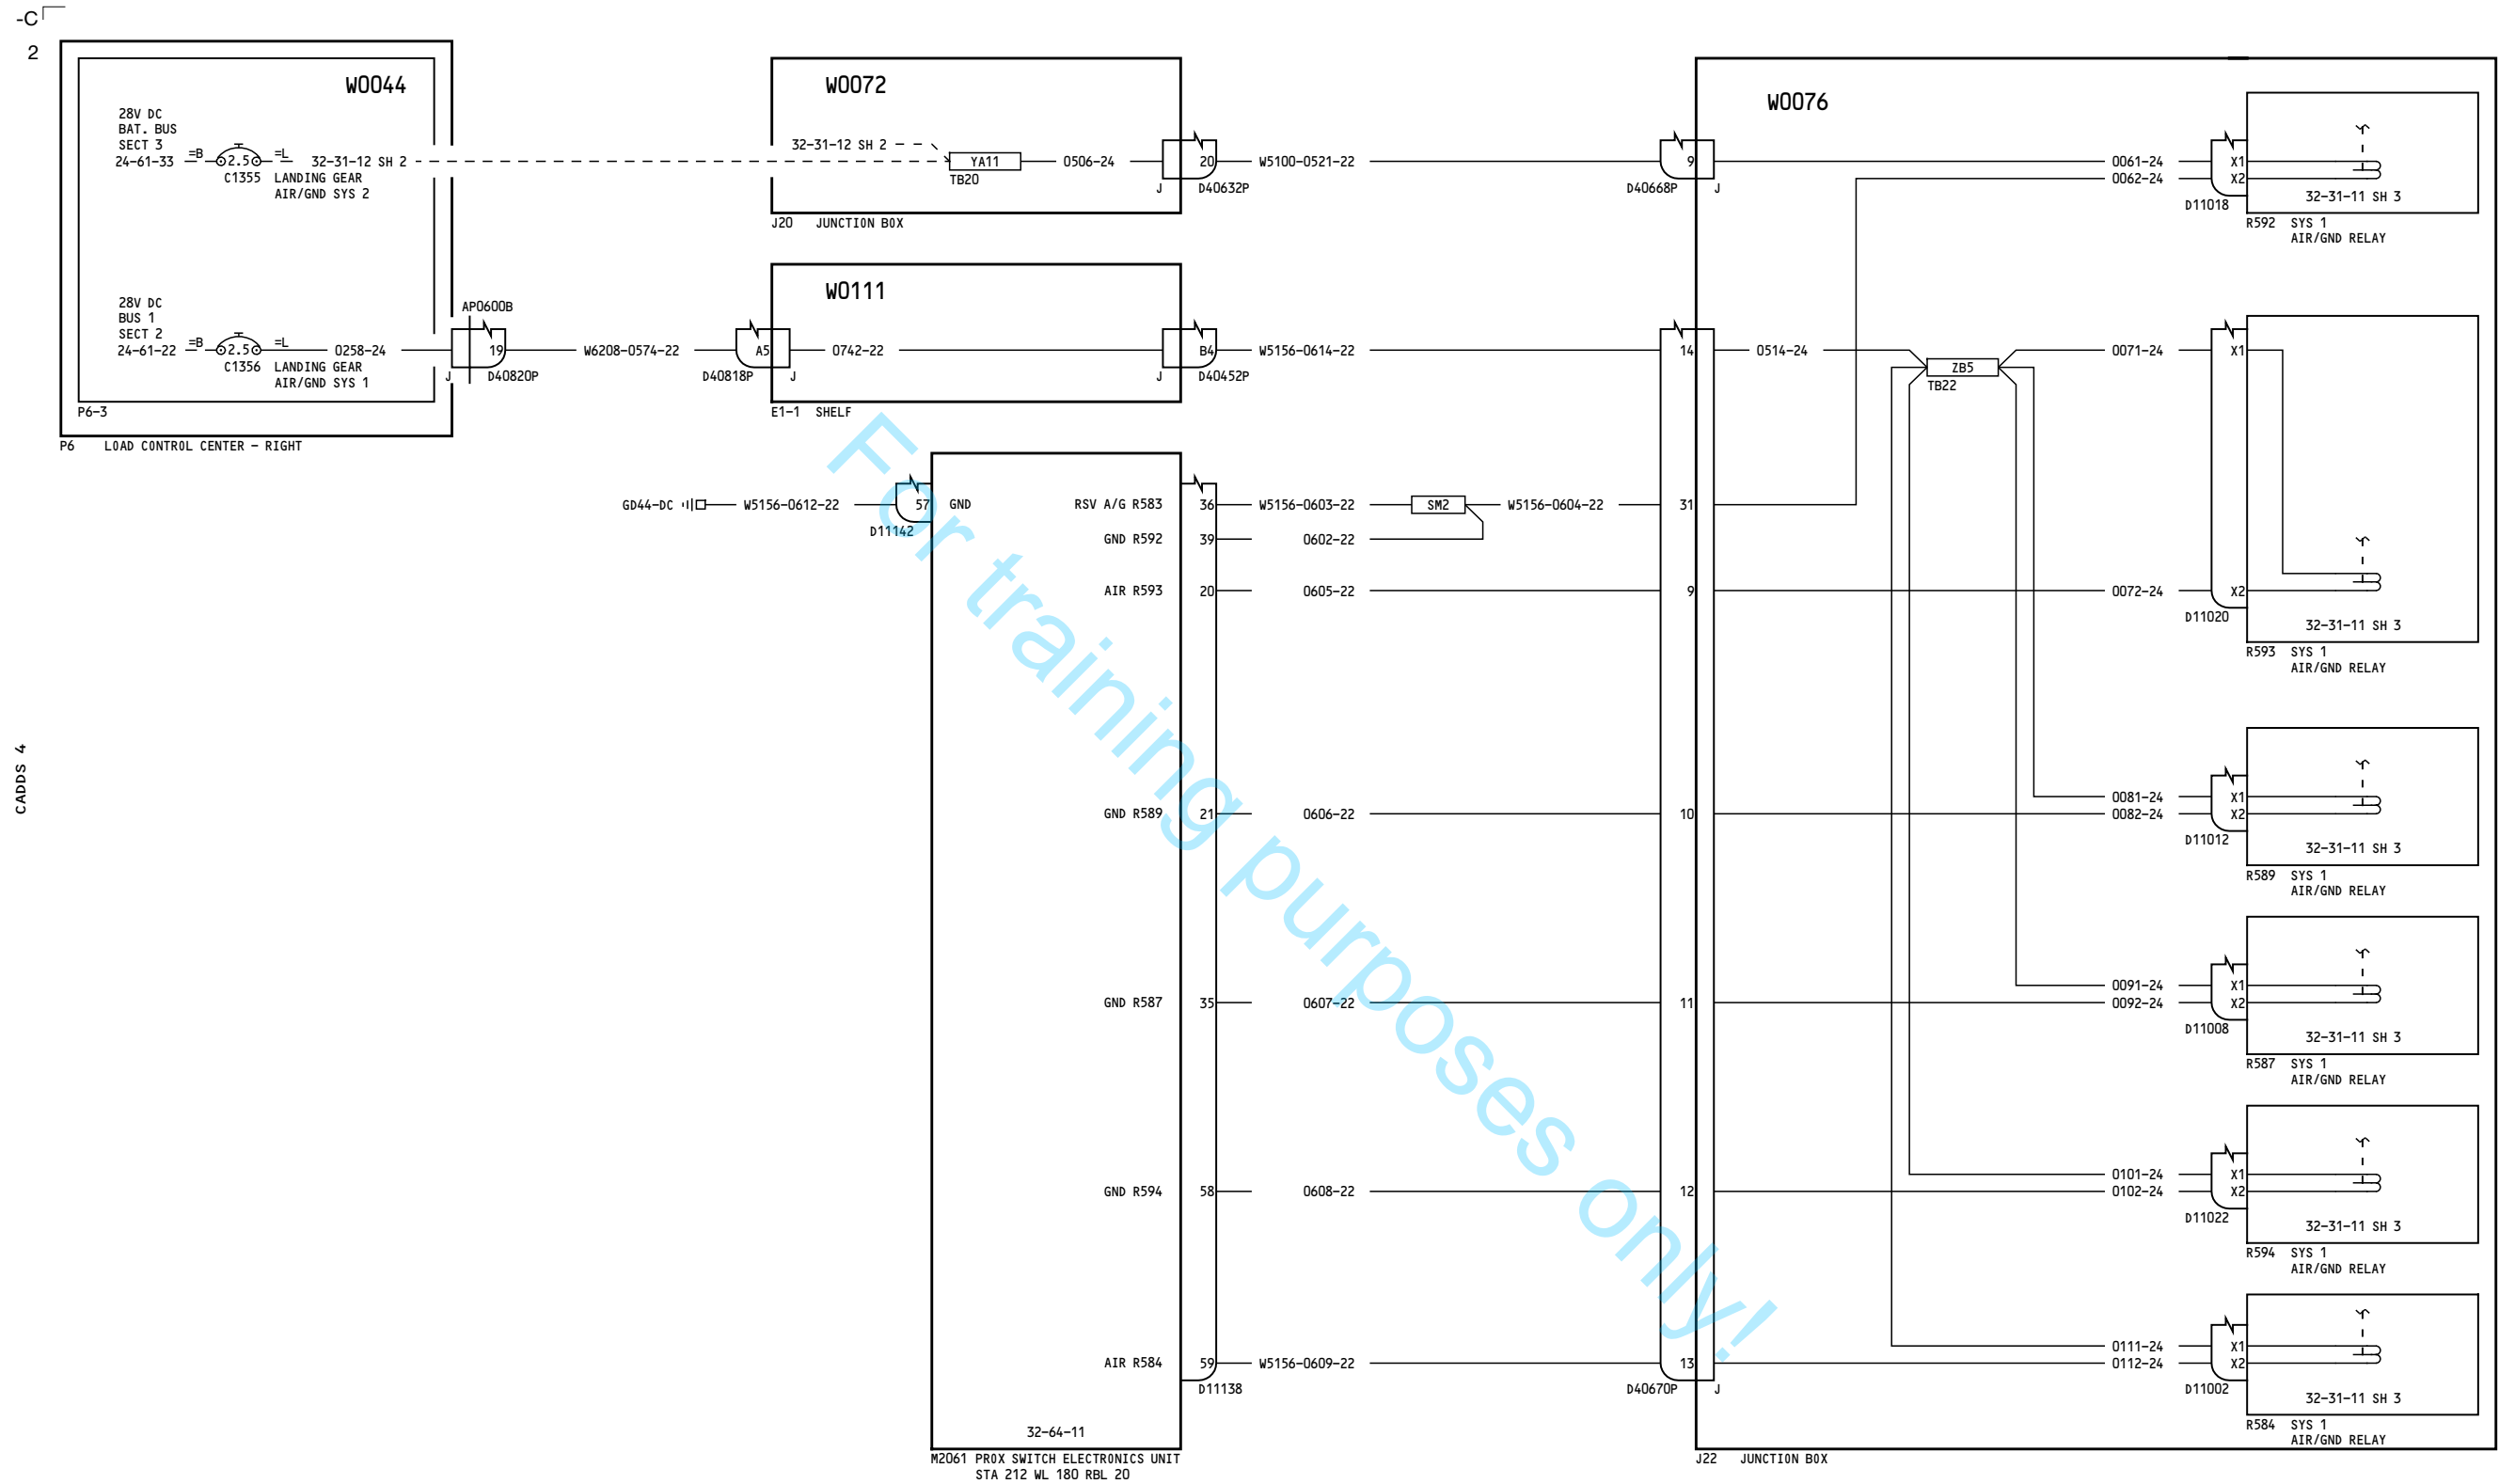

YR301-YR316, YR319

**AIR/GND SYSTEM 1 & LEVER  
LATCH**

D280A108


**32-31-11**

Page 7  
Sheet 2  
Aug 14/2012

**32-31-11**


Page 7  
Sheet 2  
Aug 14/2012

-A  
65

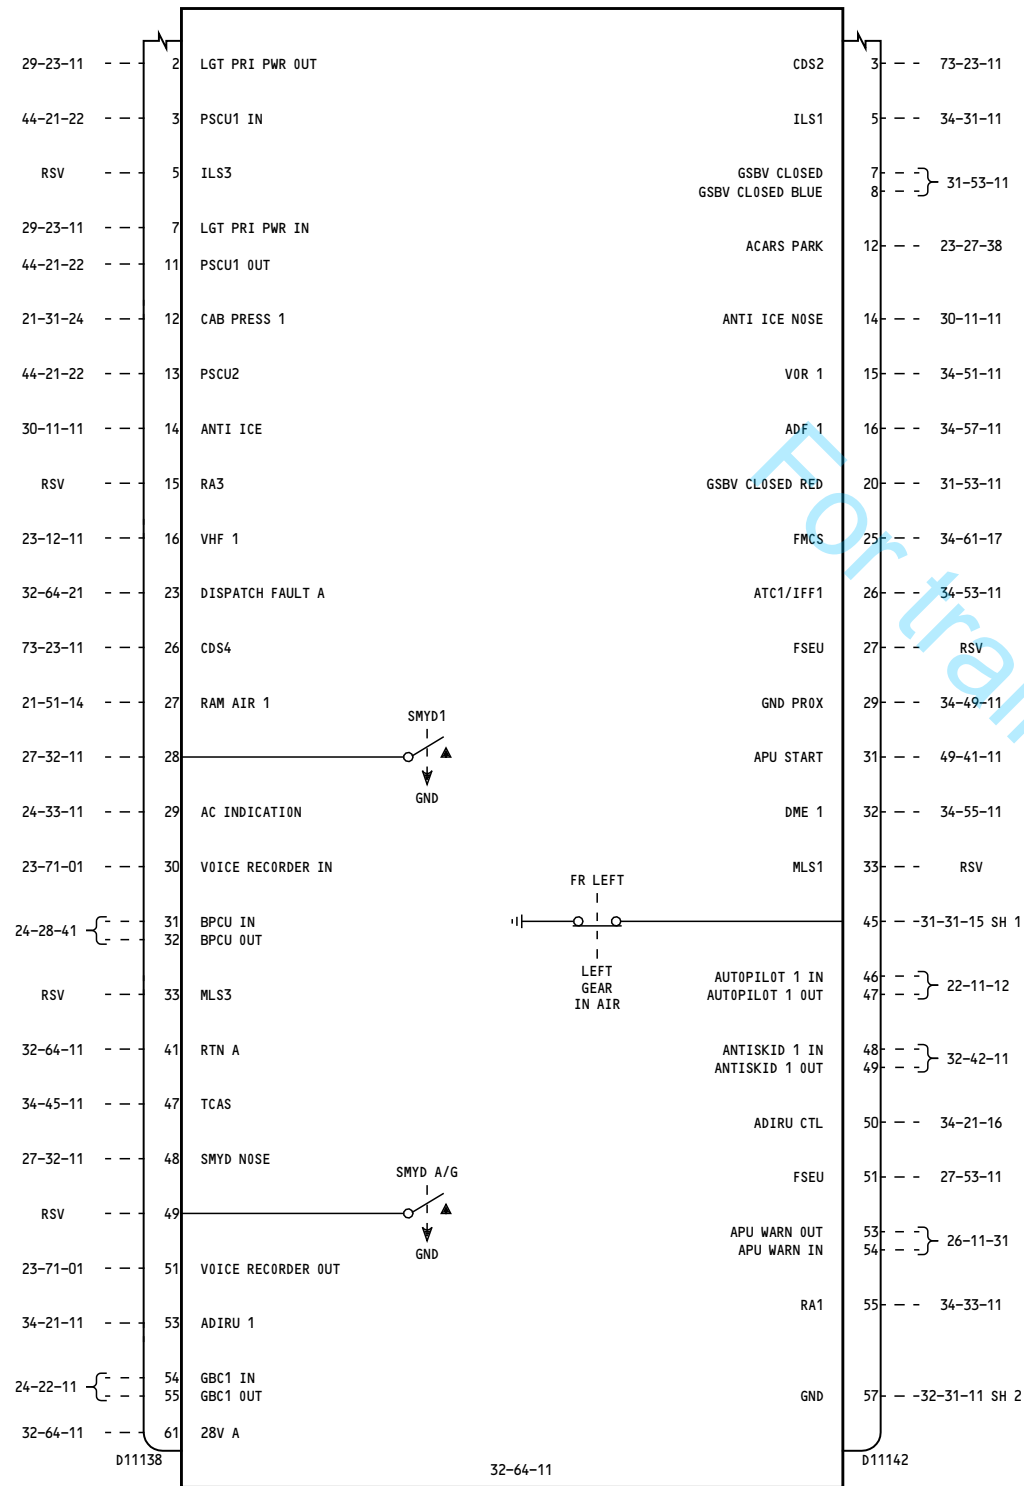

**NOTES:**

THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

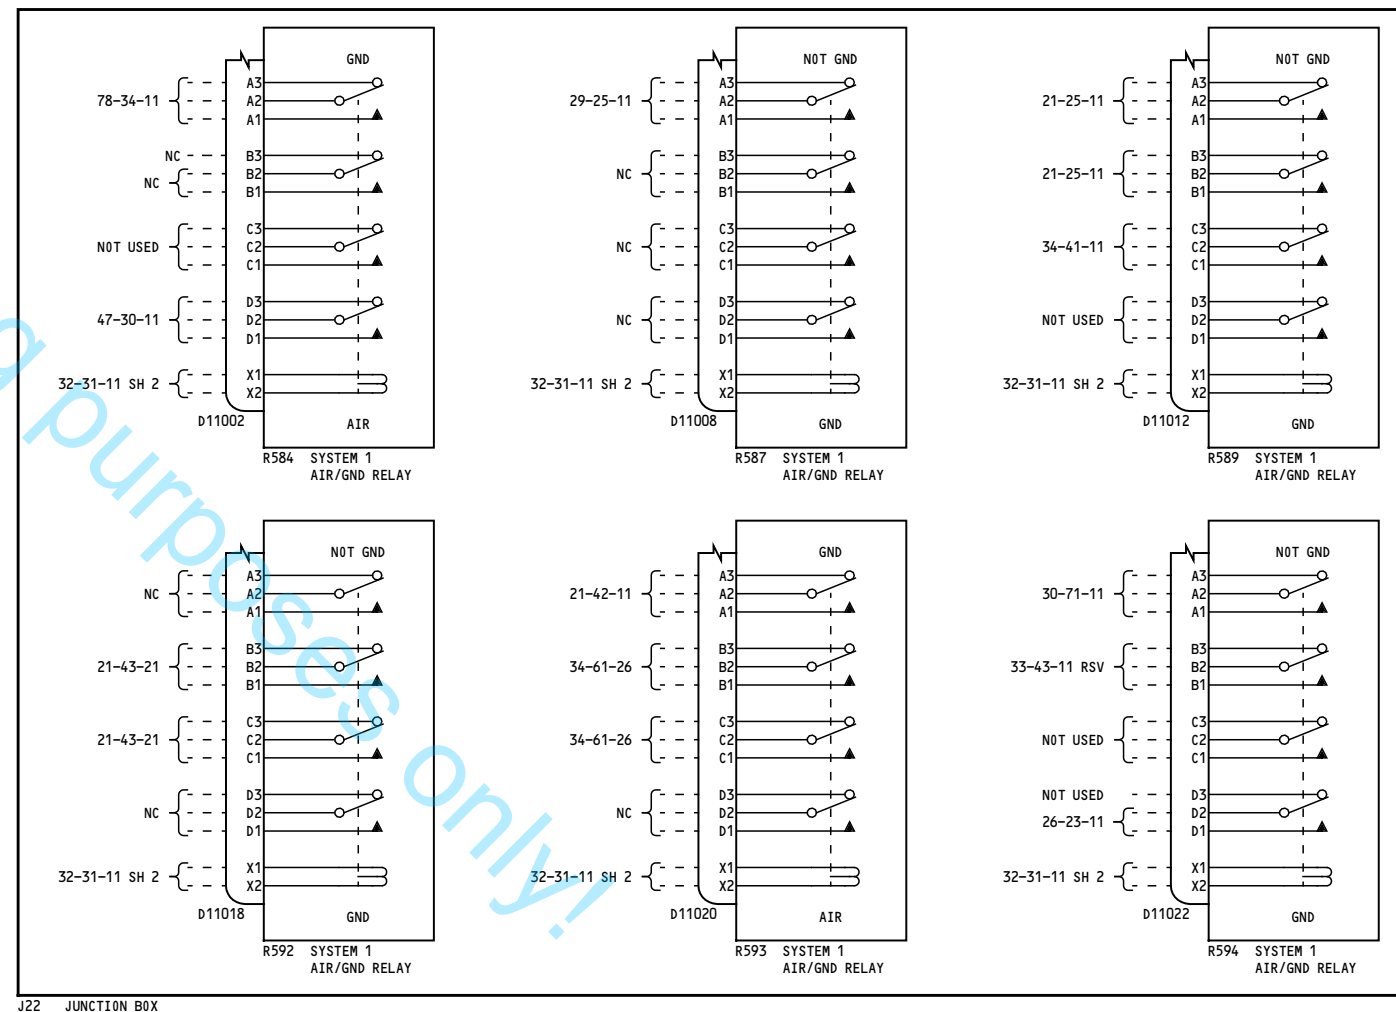

YR301-YR316, YR319

**AIR/GND SYSTEM 1 & LEVER  
LATCH**


D280A108

**32-31-11**

Page 7  
Sheet 3  
Aug 14/2012

**32-31-11**

Page 7  
Sheet 3  
Aug 14/2012

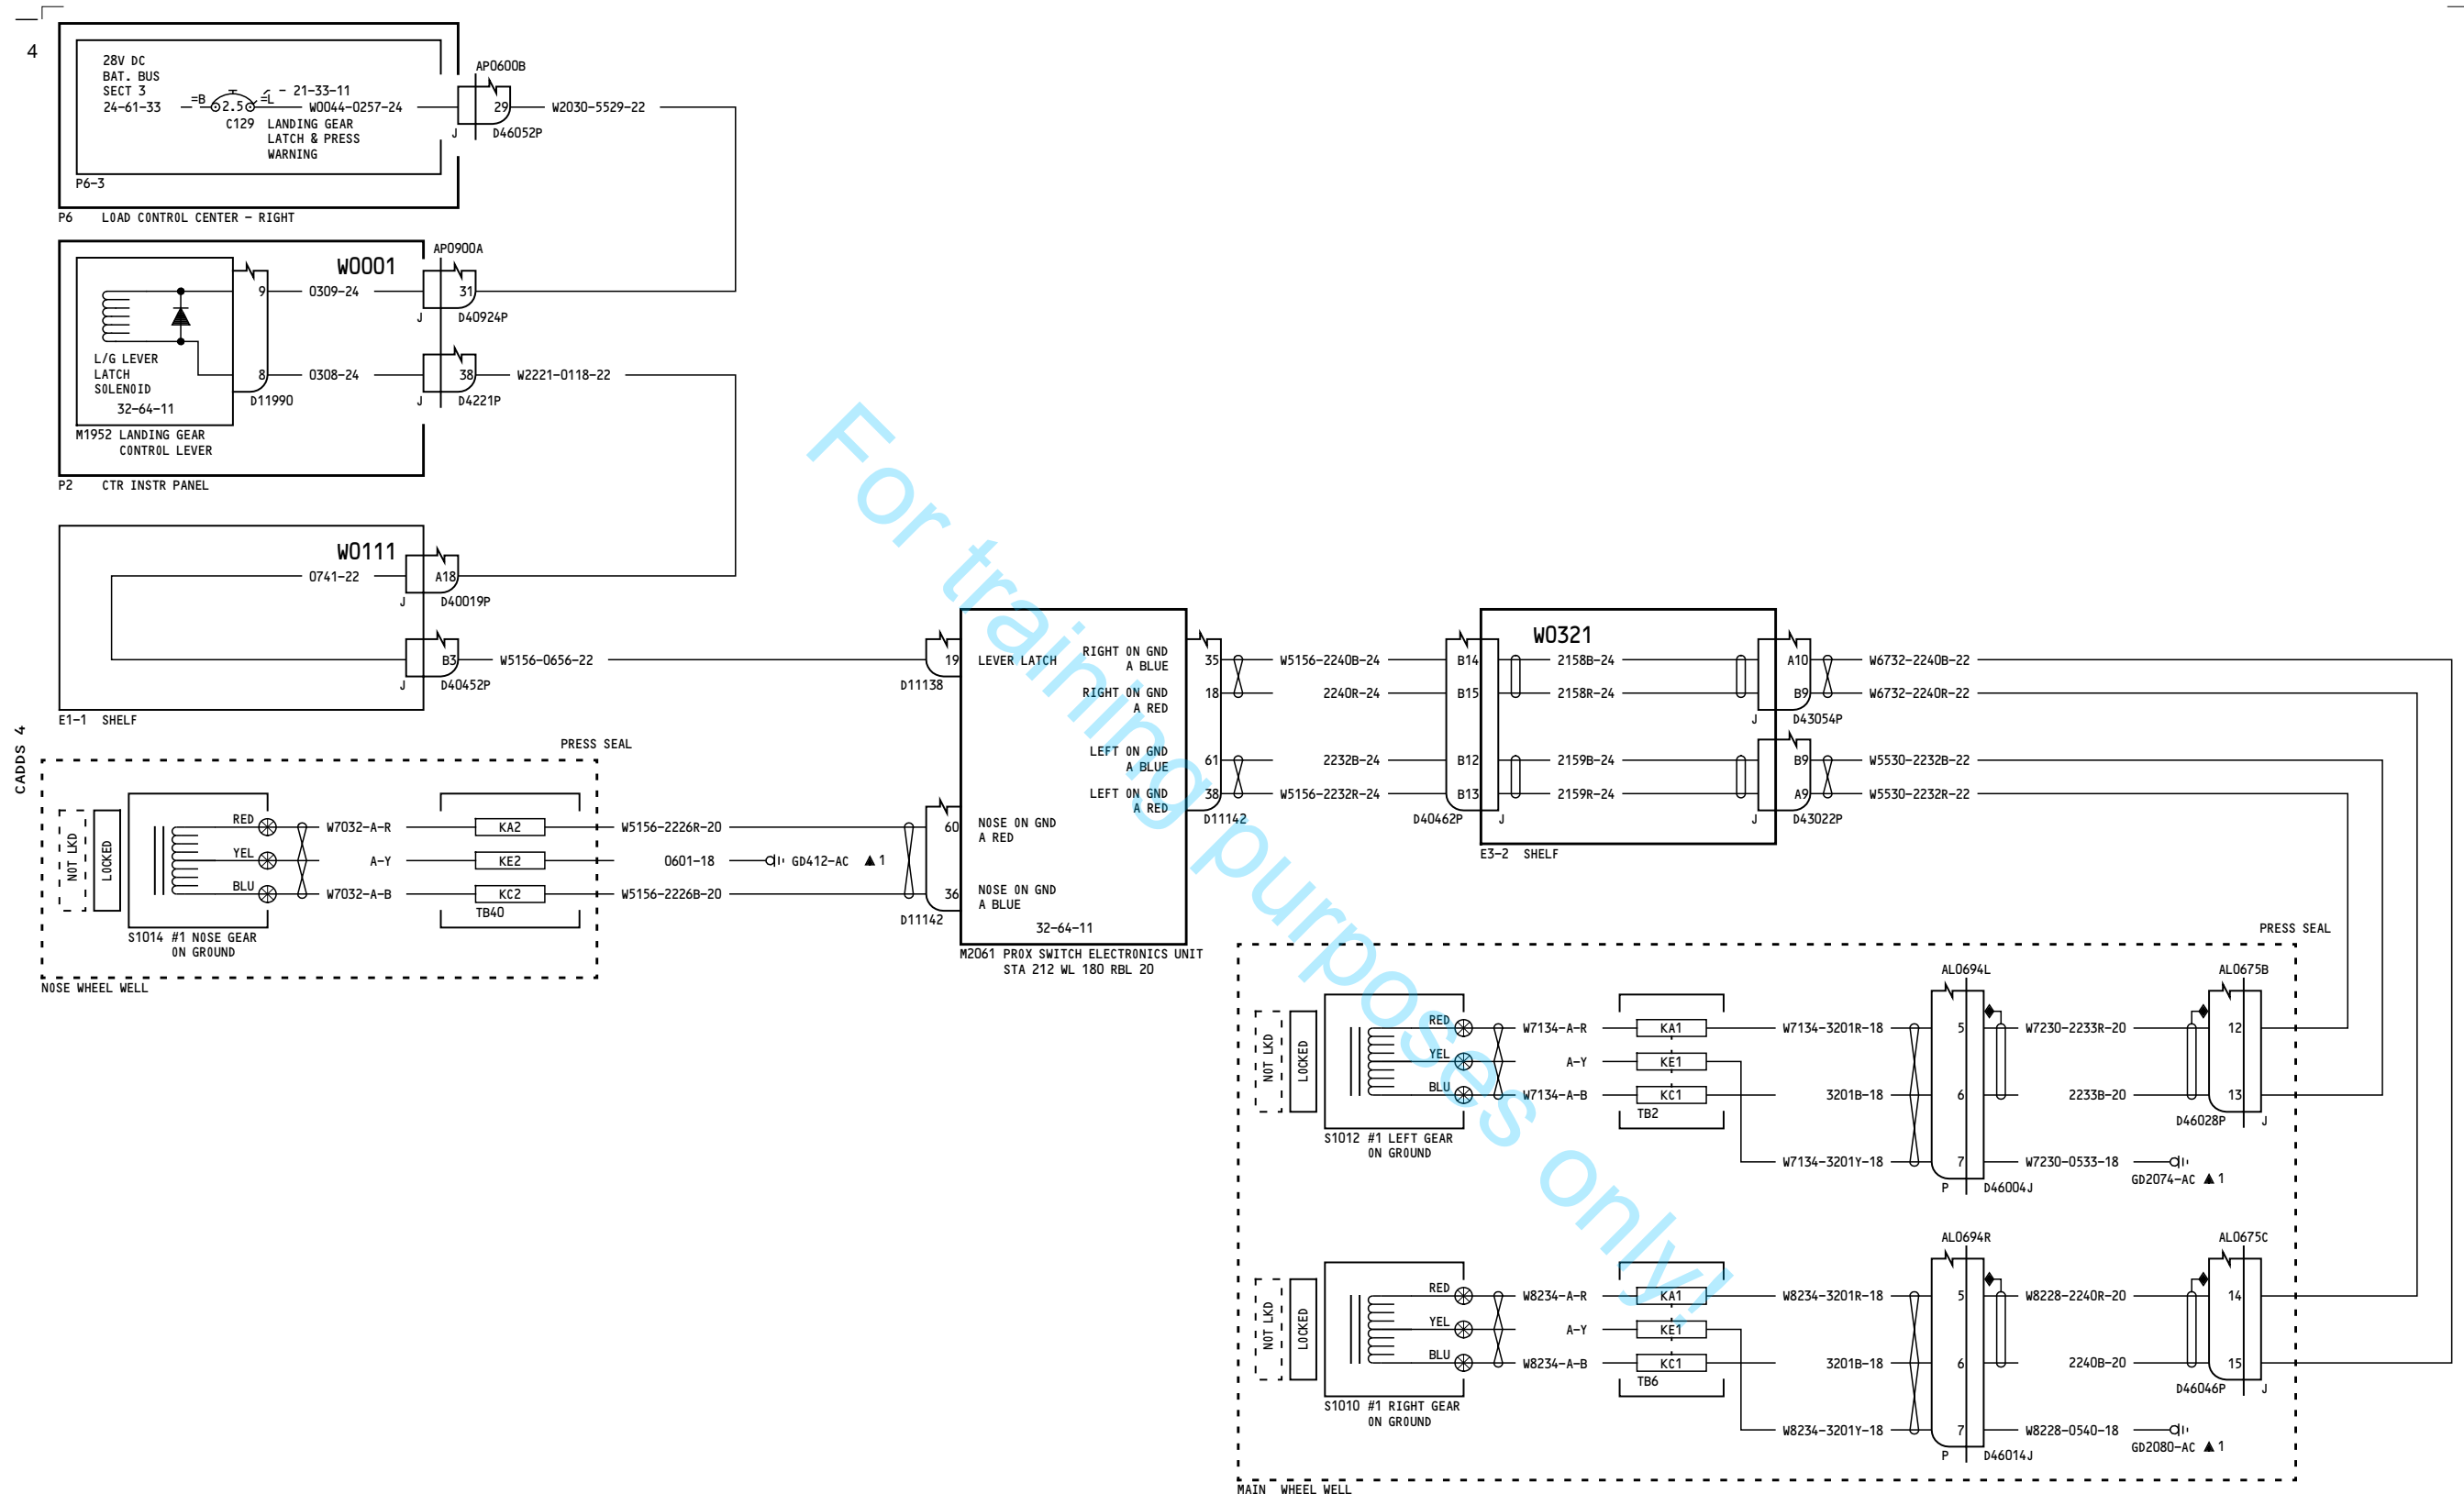

YR317-YR318, YR320-YR328

## AIR/GND SYSTEM 1 & LEVER LATCH


D280A108

**32-31-11**

Page 8  
Sheet 1  
Nov 12/2012

**32-31-11**

Page 8  
Sheet 1  
Nov 12/2012

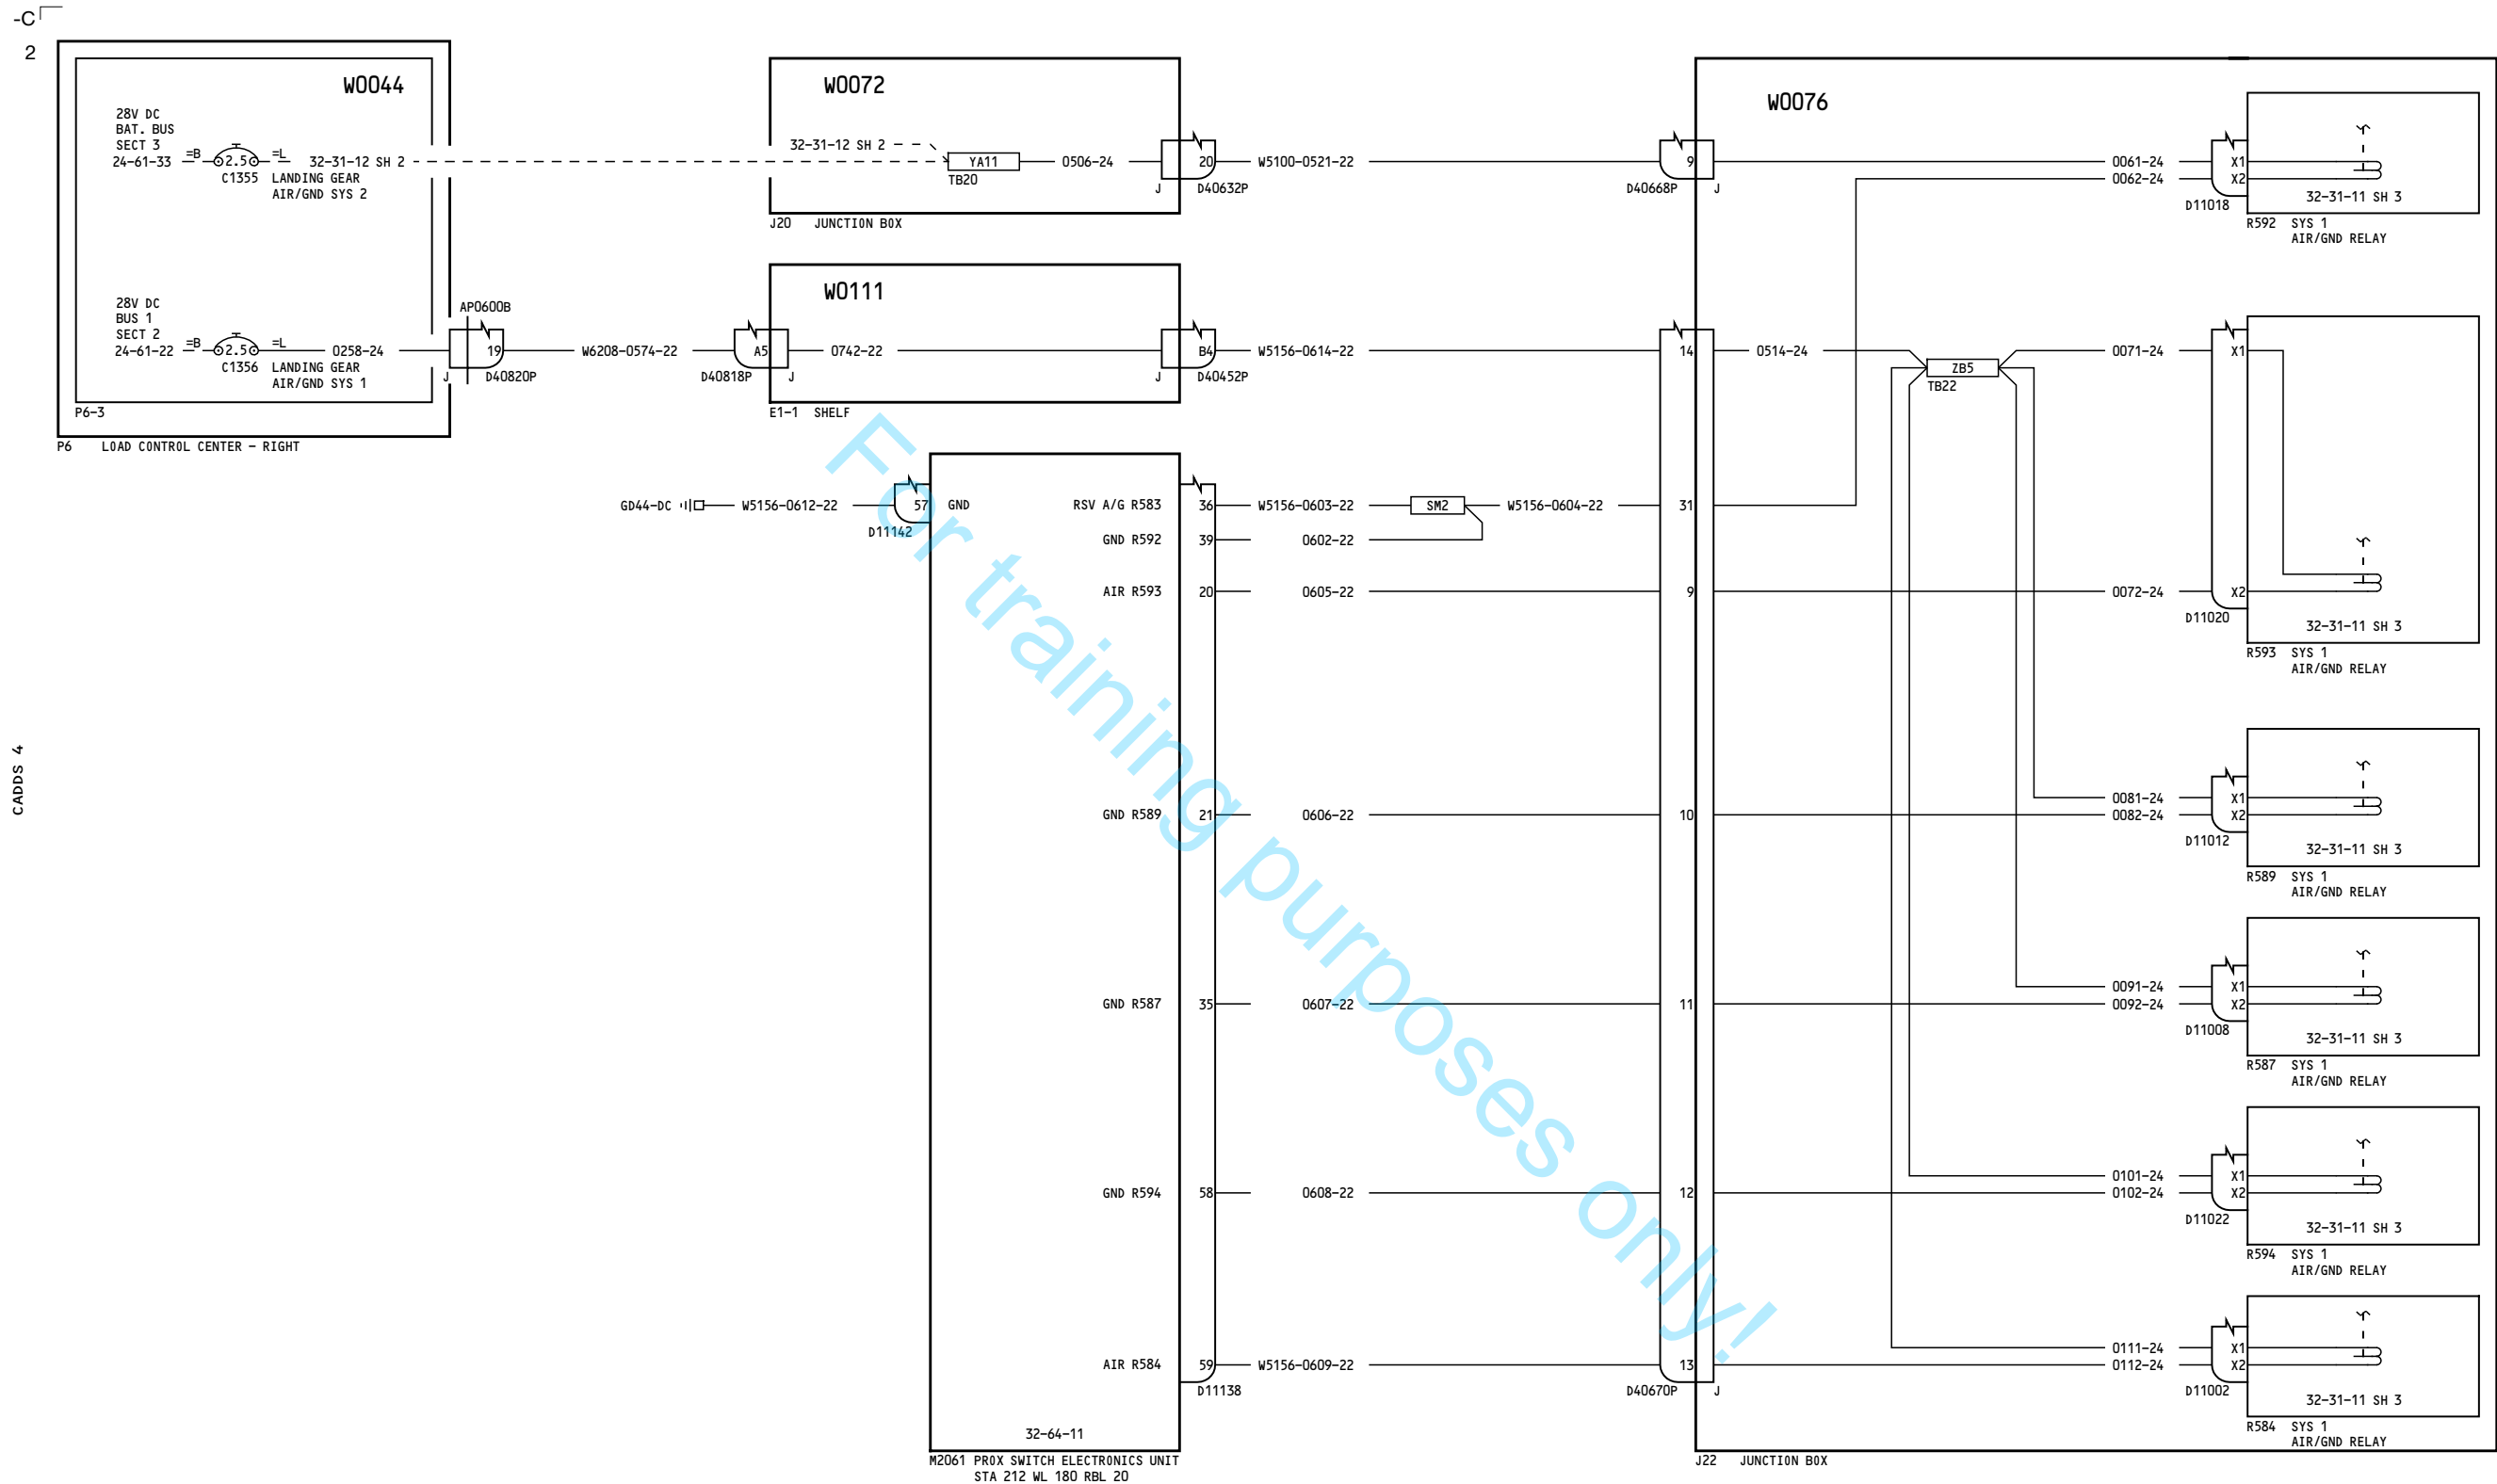

YR317-YR318, YR320-YR328

AIR/GND SYSTEM 1 & LEVER LATCH

D280A108



32-31-11

Page 8  
Sheet 2  
Nov 12/2012

32-31-11

Page 8  
Sheet 2  
Nov 12/2012

-B  
86

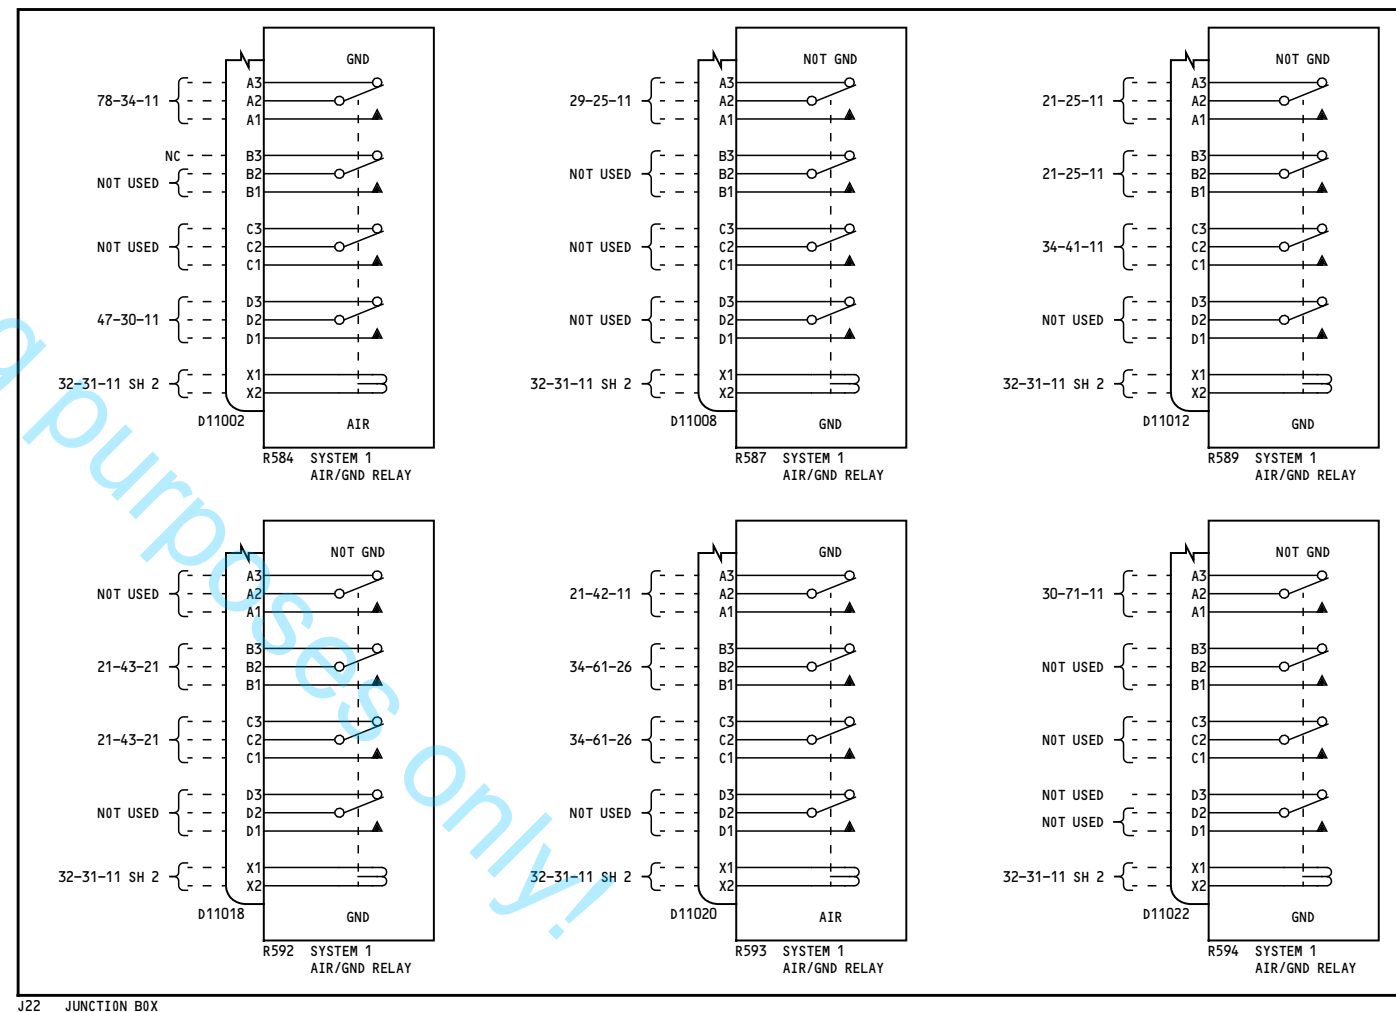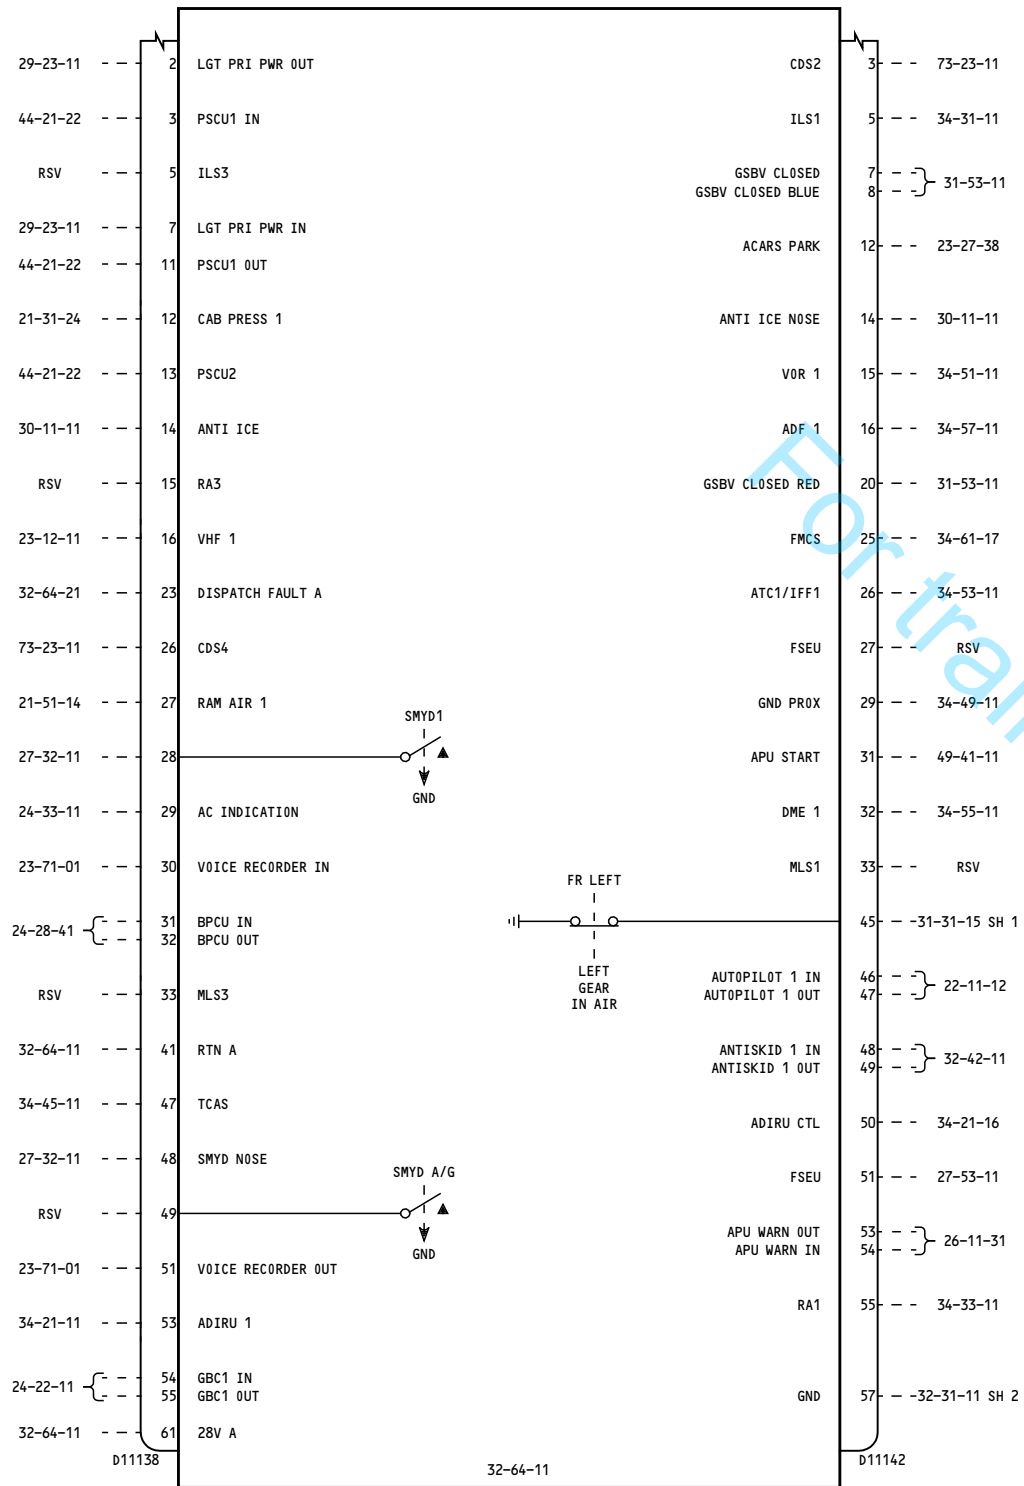

**NOTES:**

THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

YR317-YR318, YR320-YR328

**AIR/GND SYSTEM 1 & LEVER  
LATCH**

D280A108


**32-31-11**

Page 8  
Sheet 3  
Nov 12/2012

**32-31-11**

Page 8  
Sheet 3  
Nov 12/2012

-B  
2

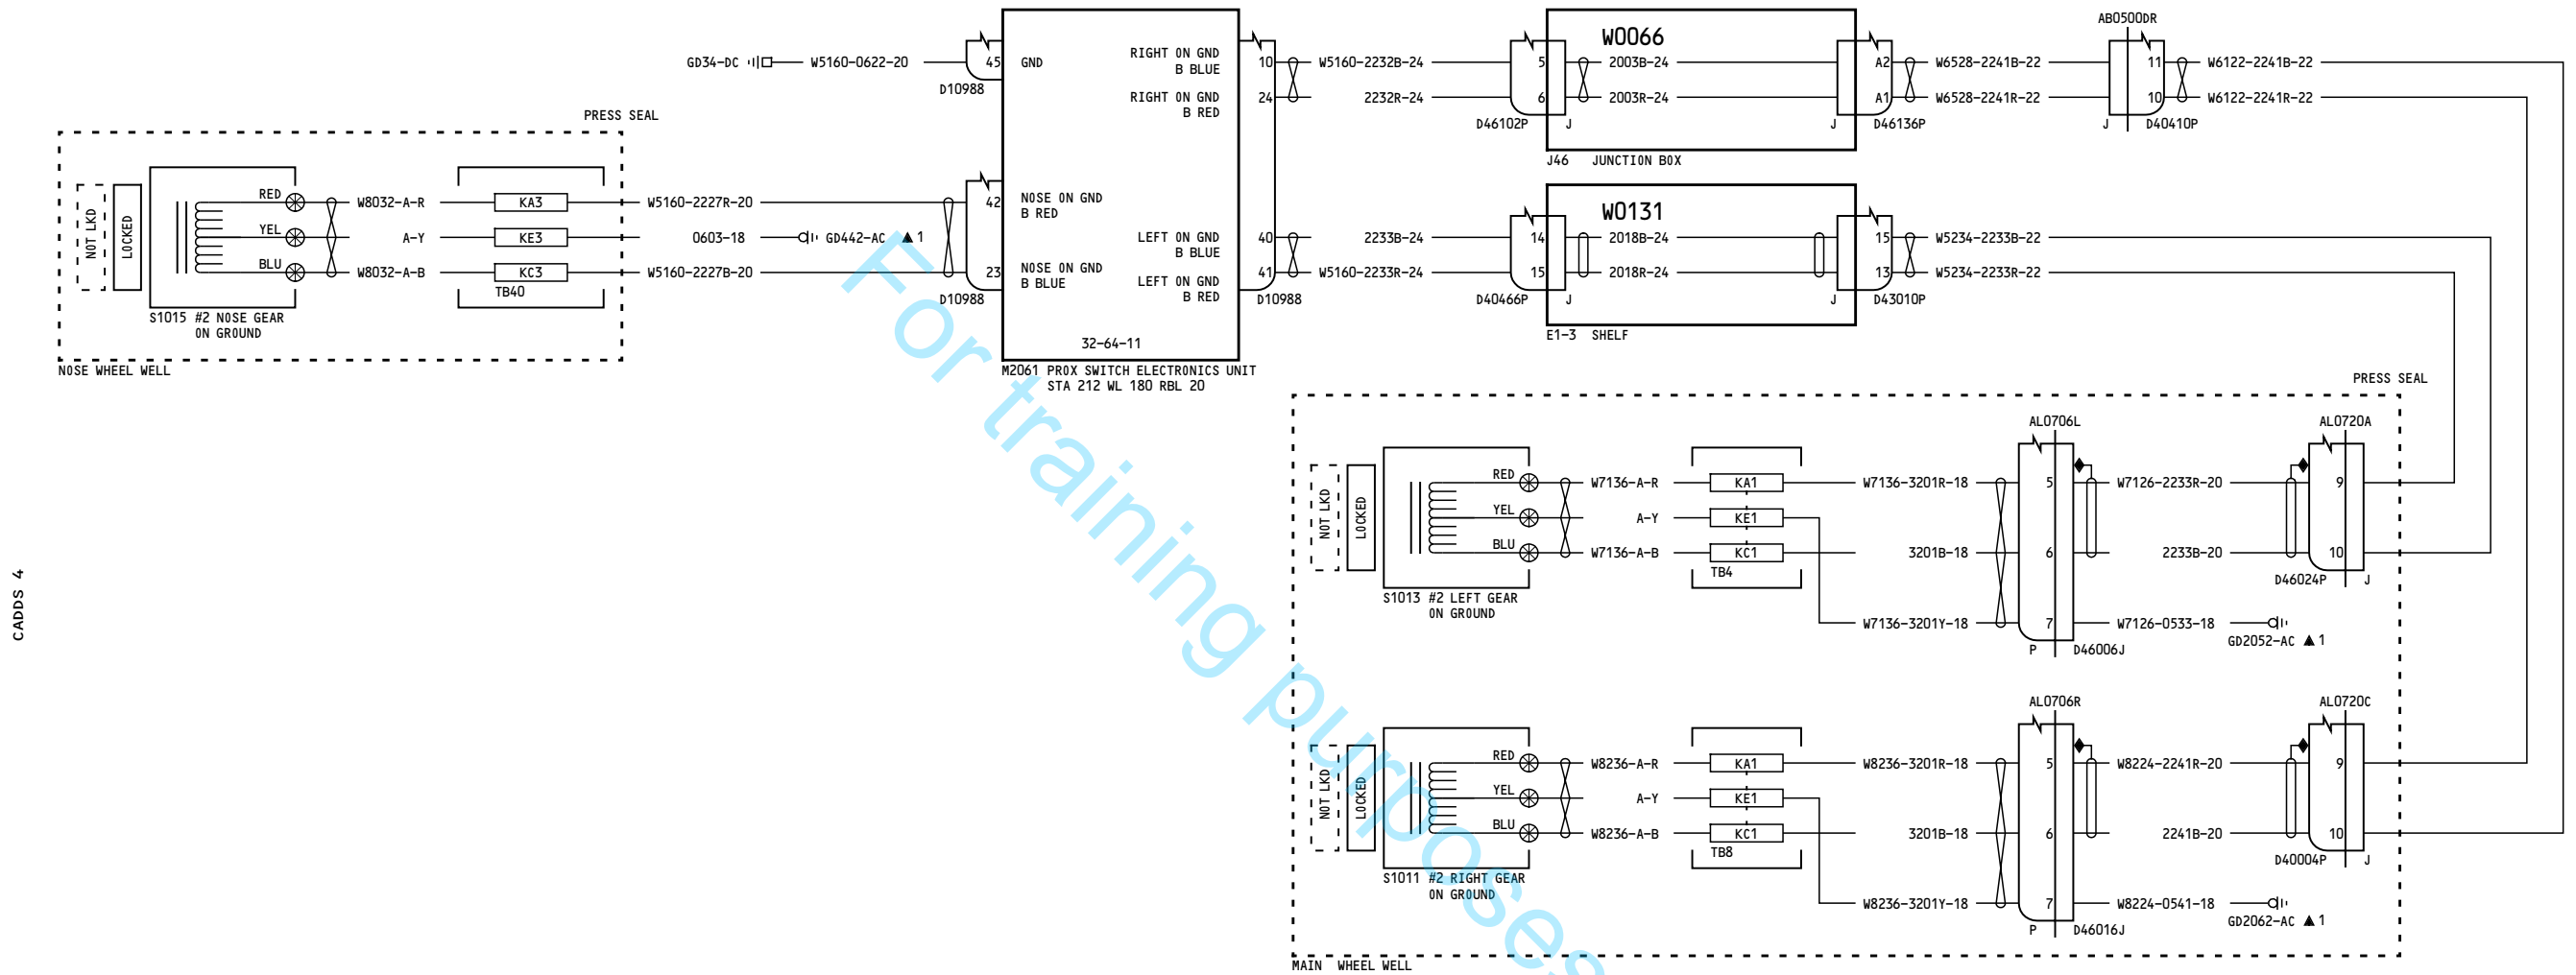

YC051-YD152

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**


D280A108

**32-31-12**

Page 1  
Sheet 1  
Oct 06/2010

**32-31-12**

Page 1  
Sheet 1  
Oct 06/2010

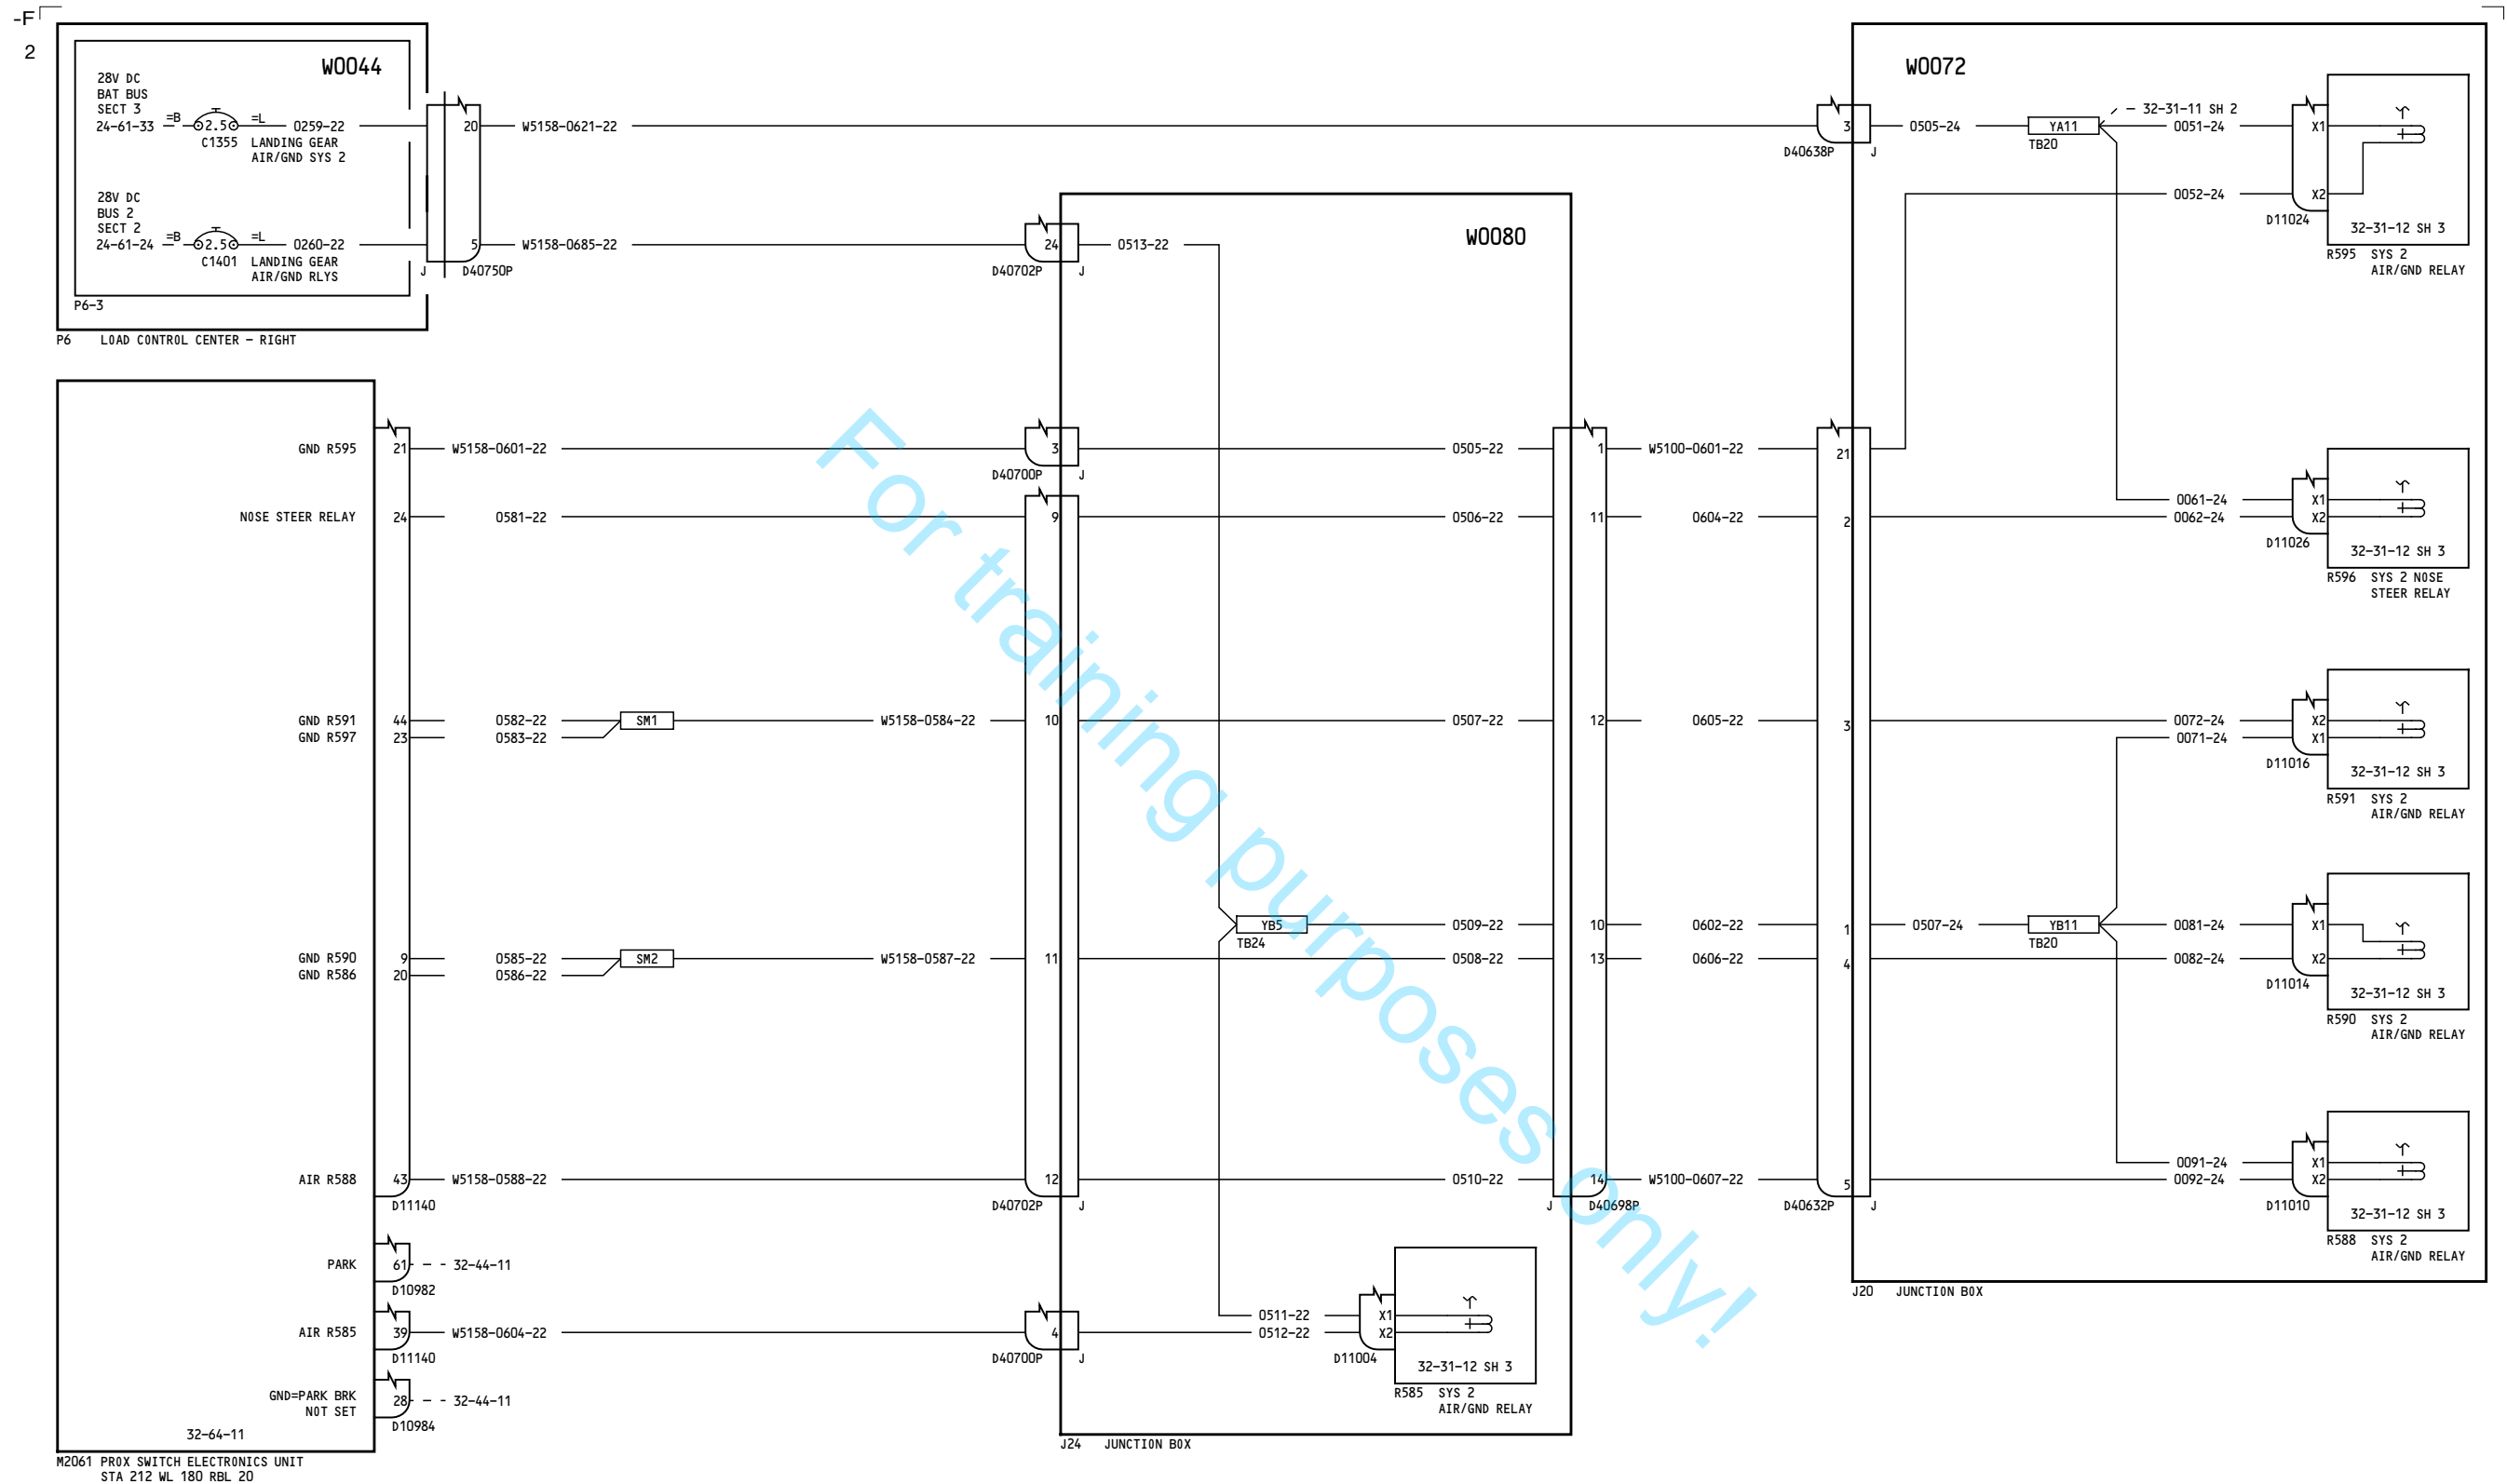

YC051-YD152

AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS

D280A108

32-31-12


Page 1  
Sheet 2  
Oct 06/2010

32-31-12



Page 1  
Sheet 2  
Oct 06/2010



-R  
1

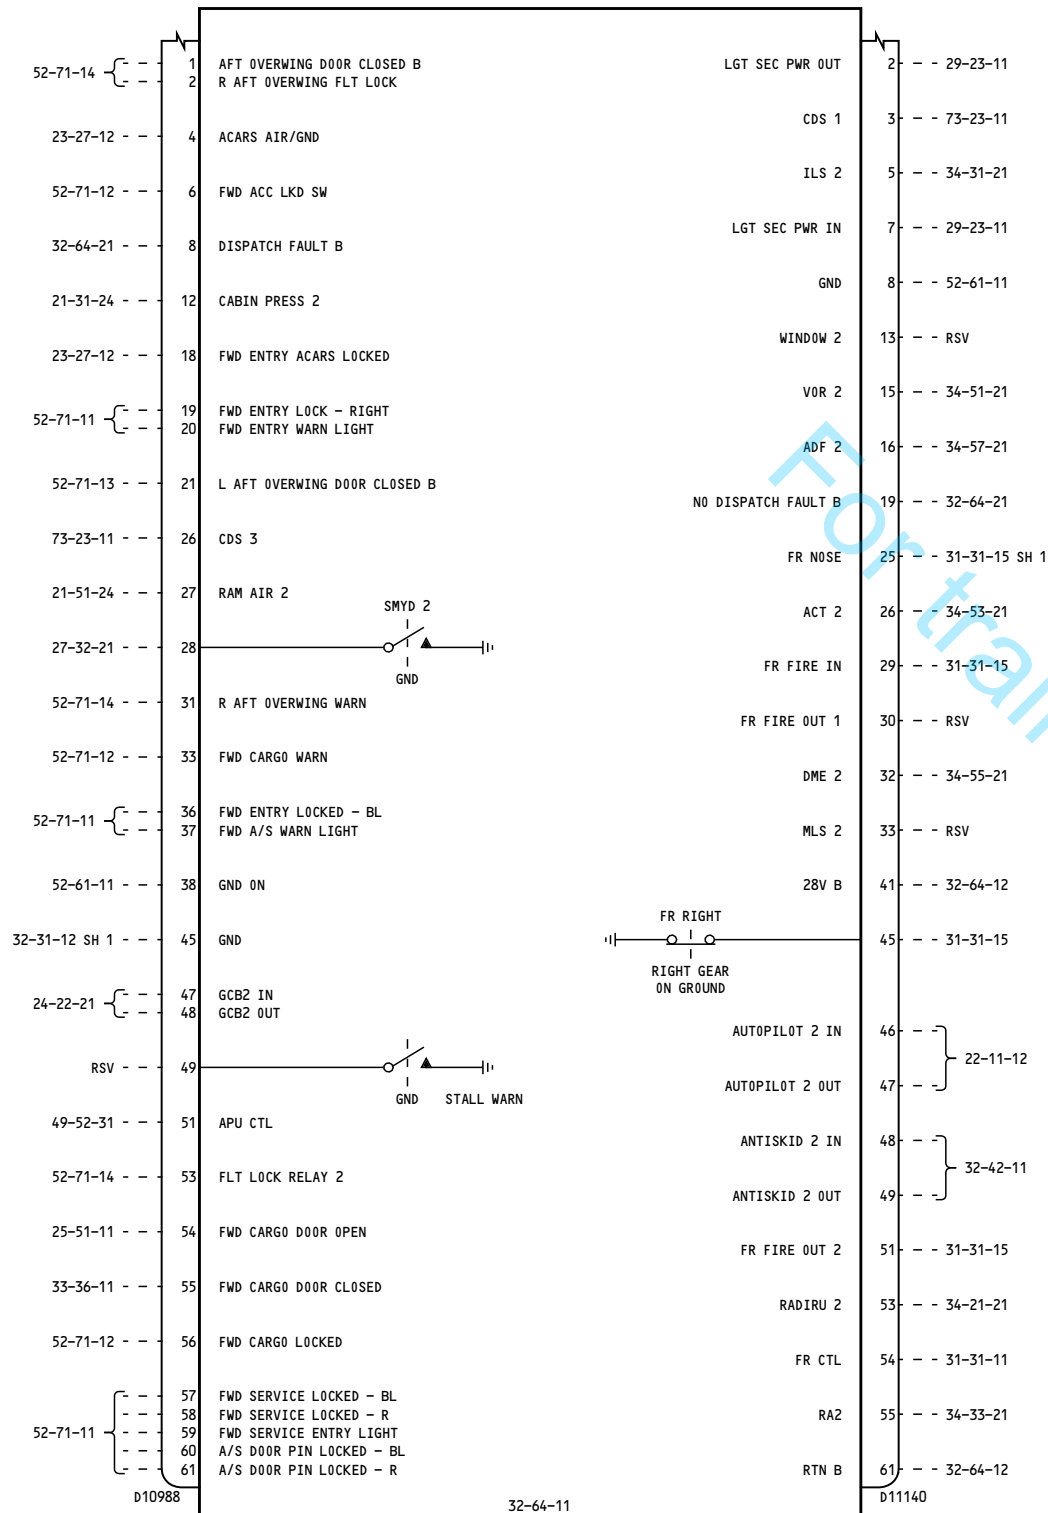

**NOTES:**  
M2061 PROX SWITCH ELECTRONICS UNIT  
STA 212 WL 180 RBL 20  
THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

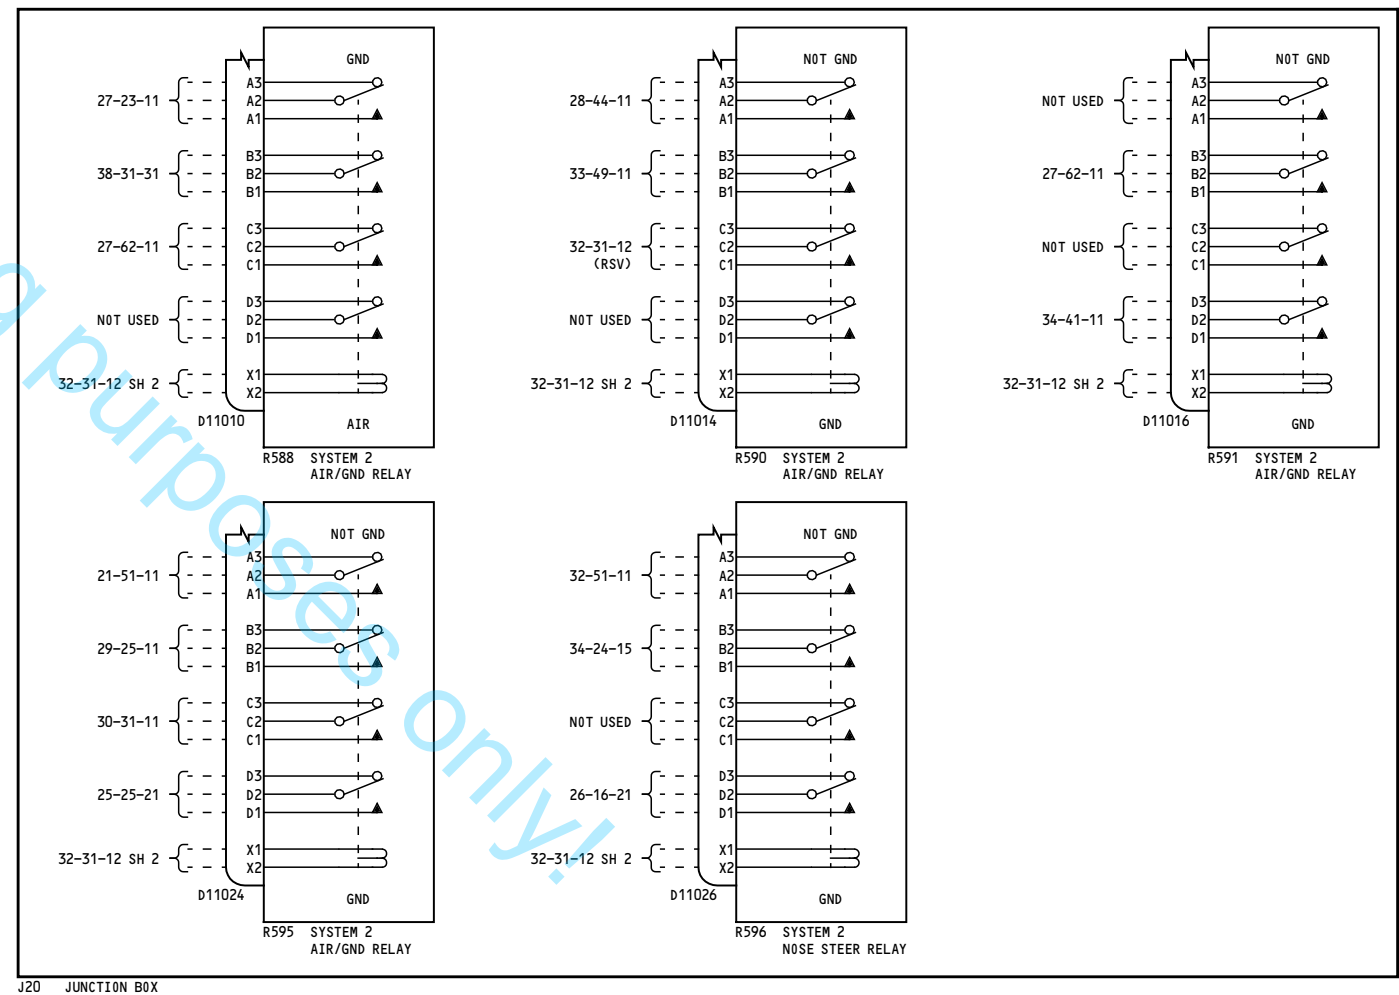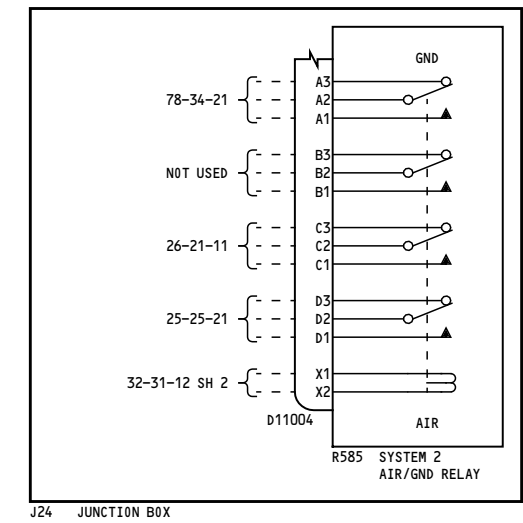

YC051-YD152

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**


D280A108

**32-31-12**

Page 1  
Sheet 3  
Oct 06/2010

**32-31-12**

Page 1  
Sheet 3  
Oct 06/2010

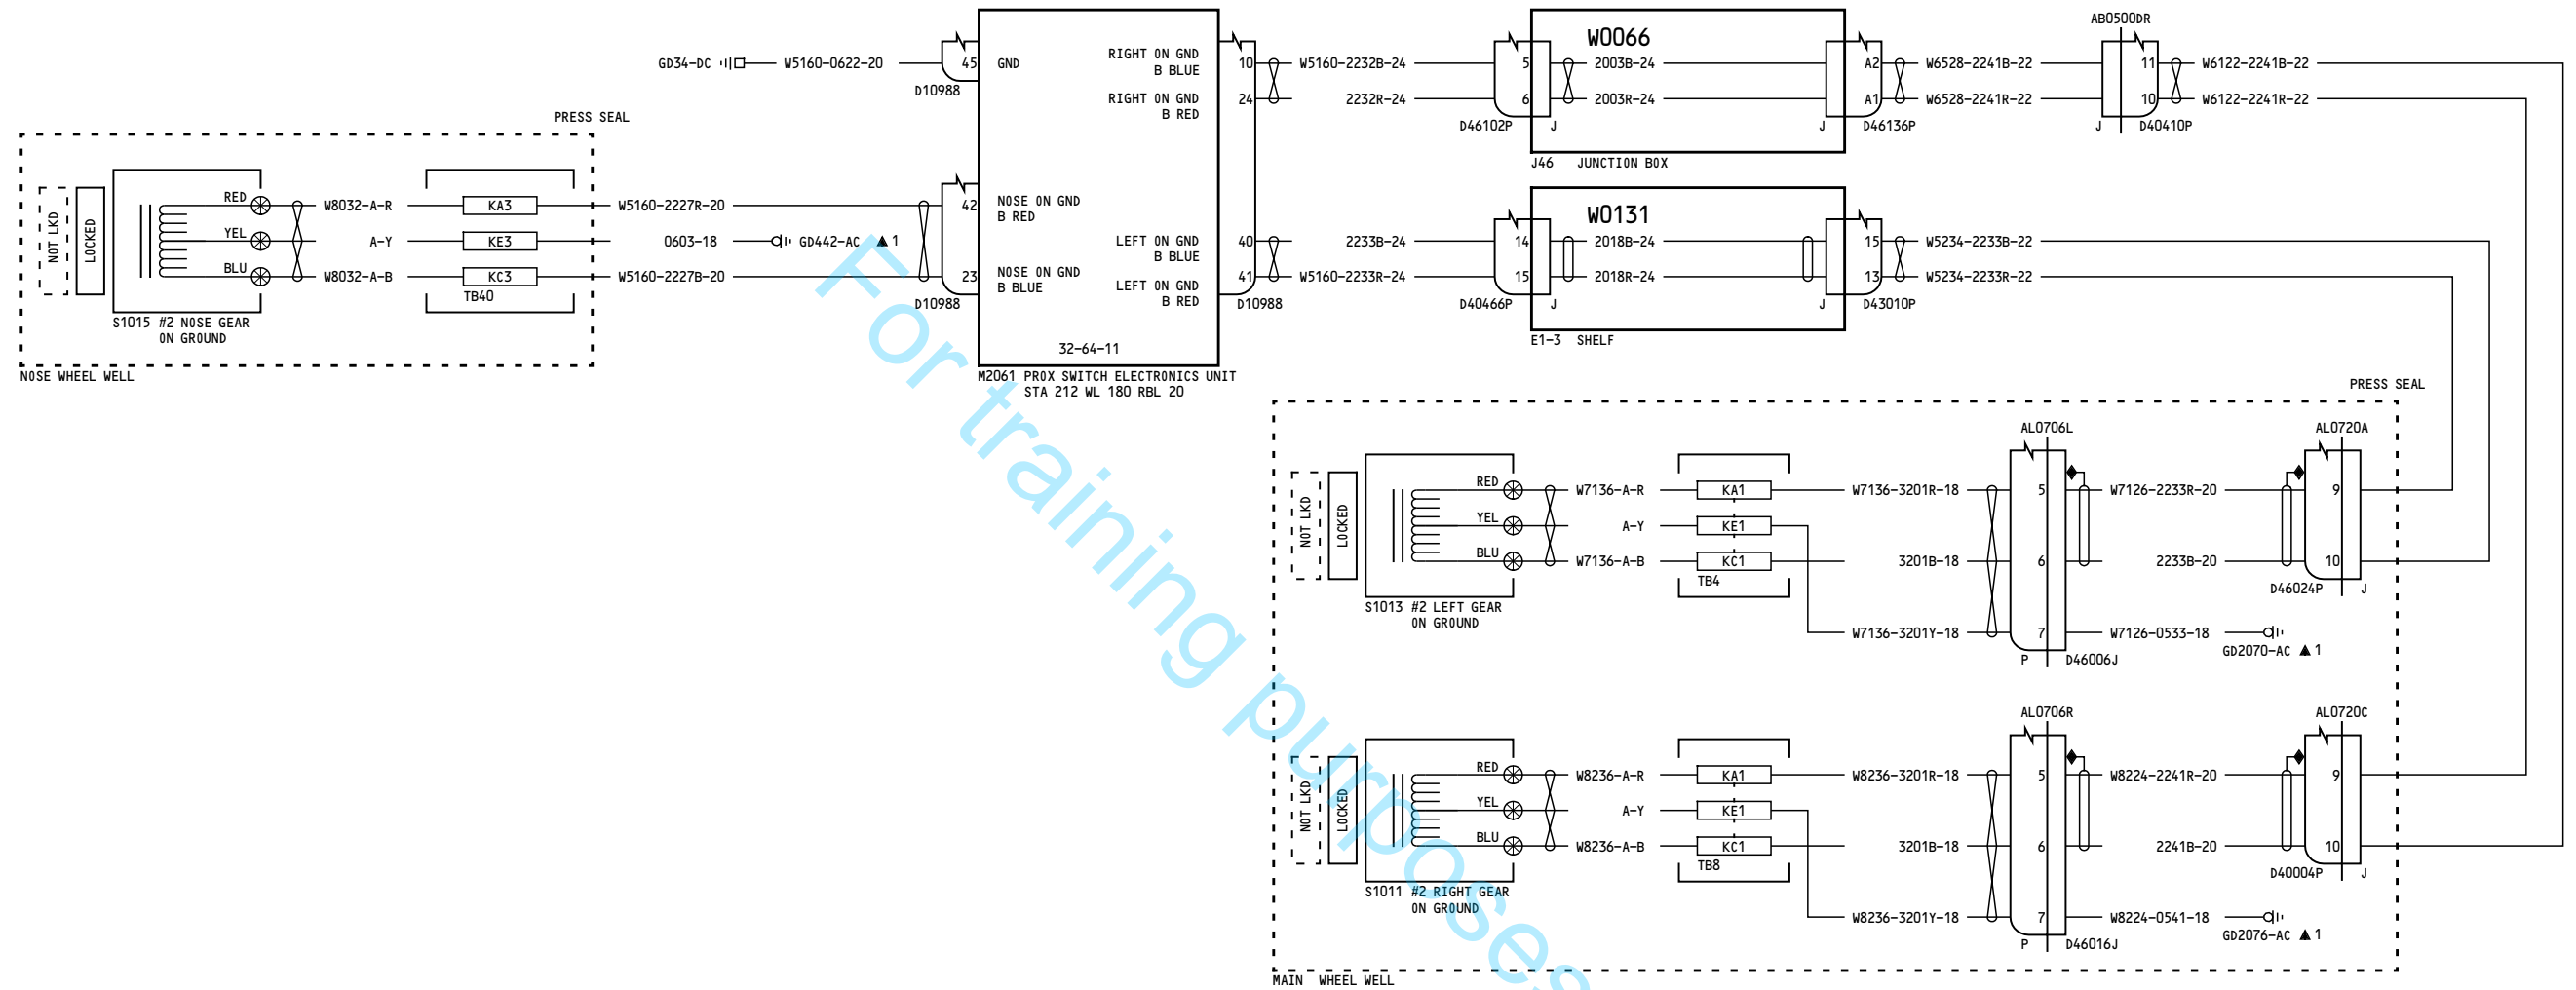

YD153-YD157

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**

D280A108

**32-31-12**


Page 2  
Sheet 1  
Nov 12/2012

**32-31-12**



Page 2  
Sheet 1  
Nov 12/2012



-R  
1

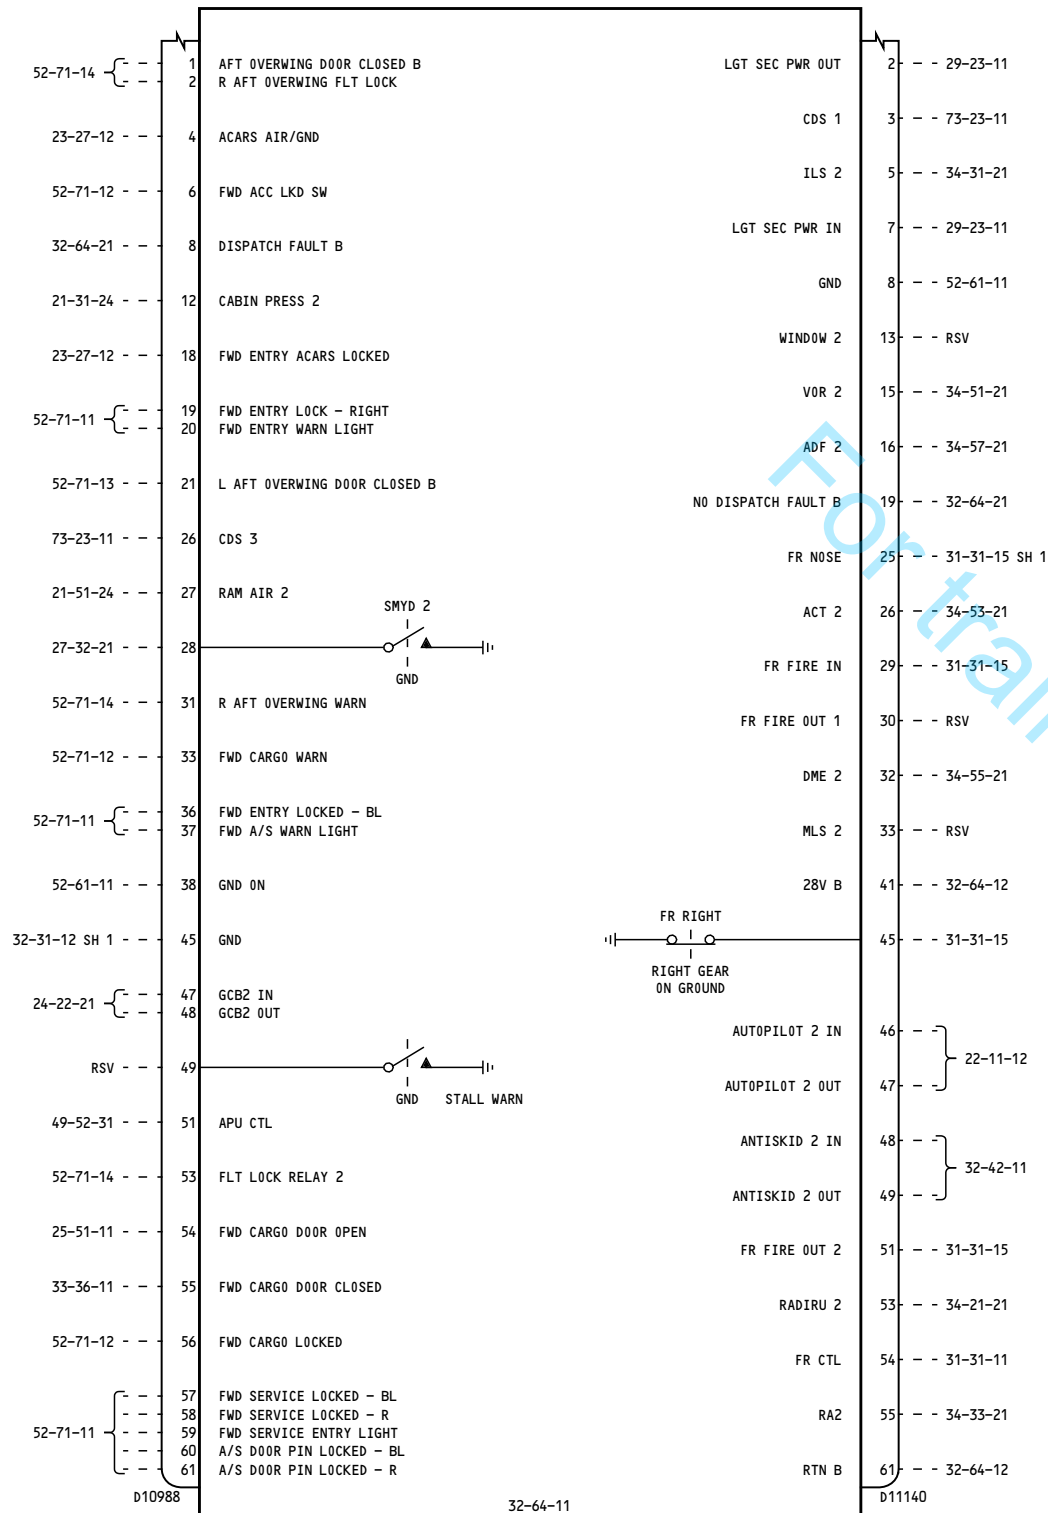

**NOTES:**  
M2061 PROX SWITCH ELECTRONICS UNIT  
STA 212 WL 180 RBL 20  
THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

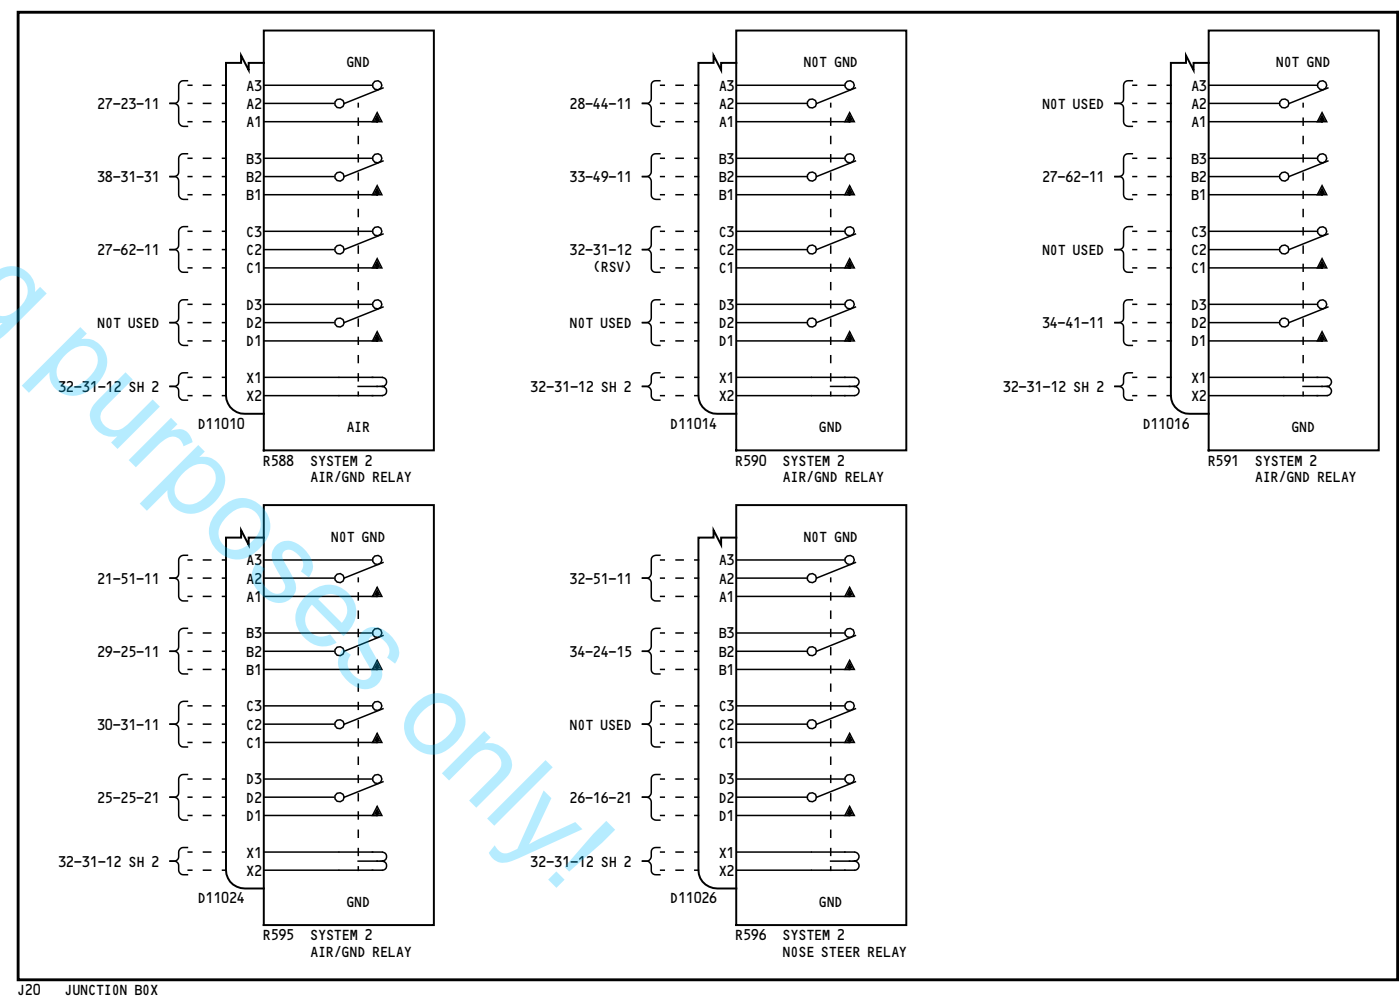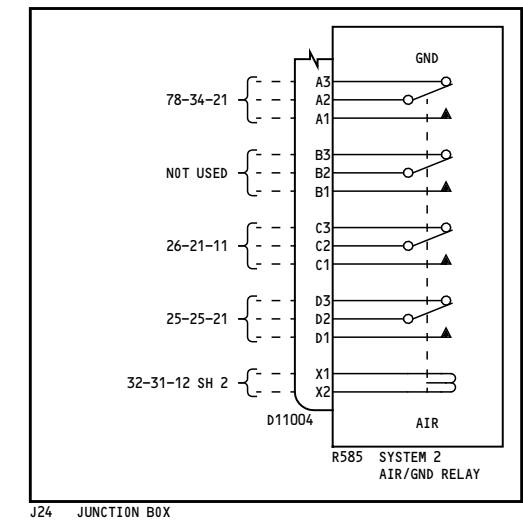

YD153-YD157

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**


D280A108

**32-31-12**

Page 2  
Sheet 3  
Nov 12/2012

**32-31-12**

Page 2  
Sheet 3  
Nov 12/2012

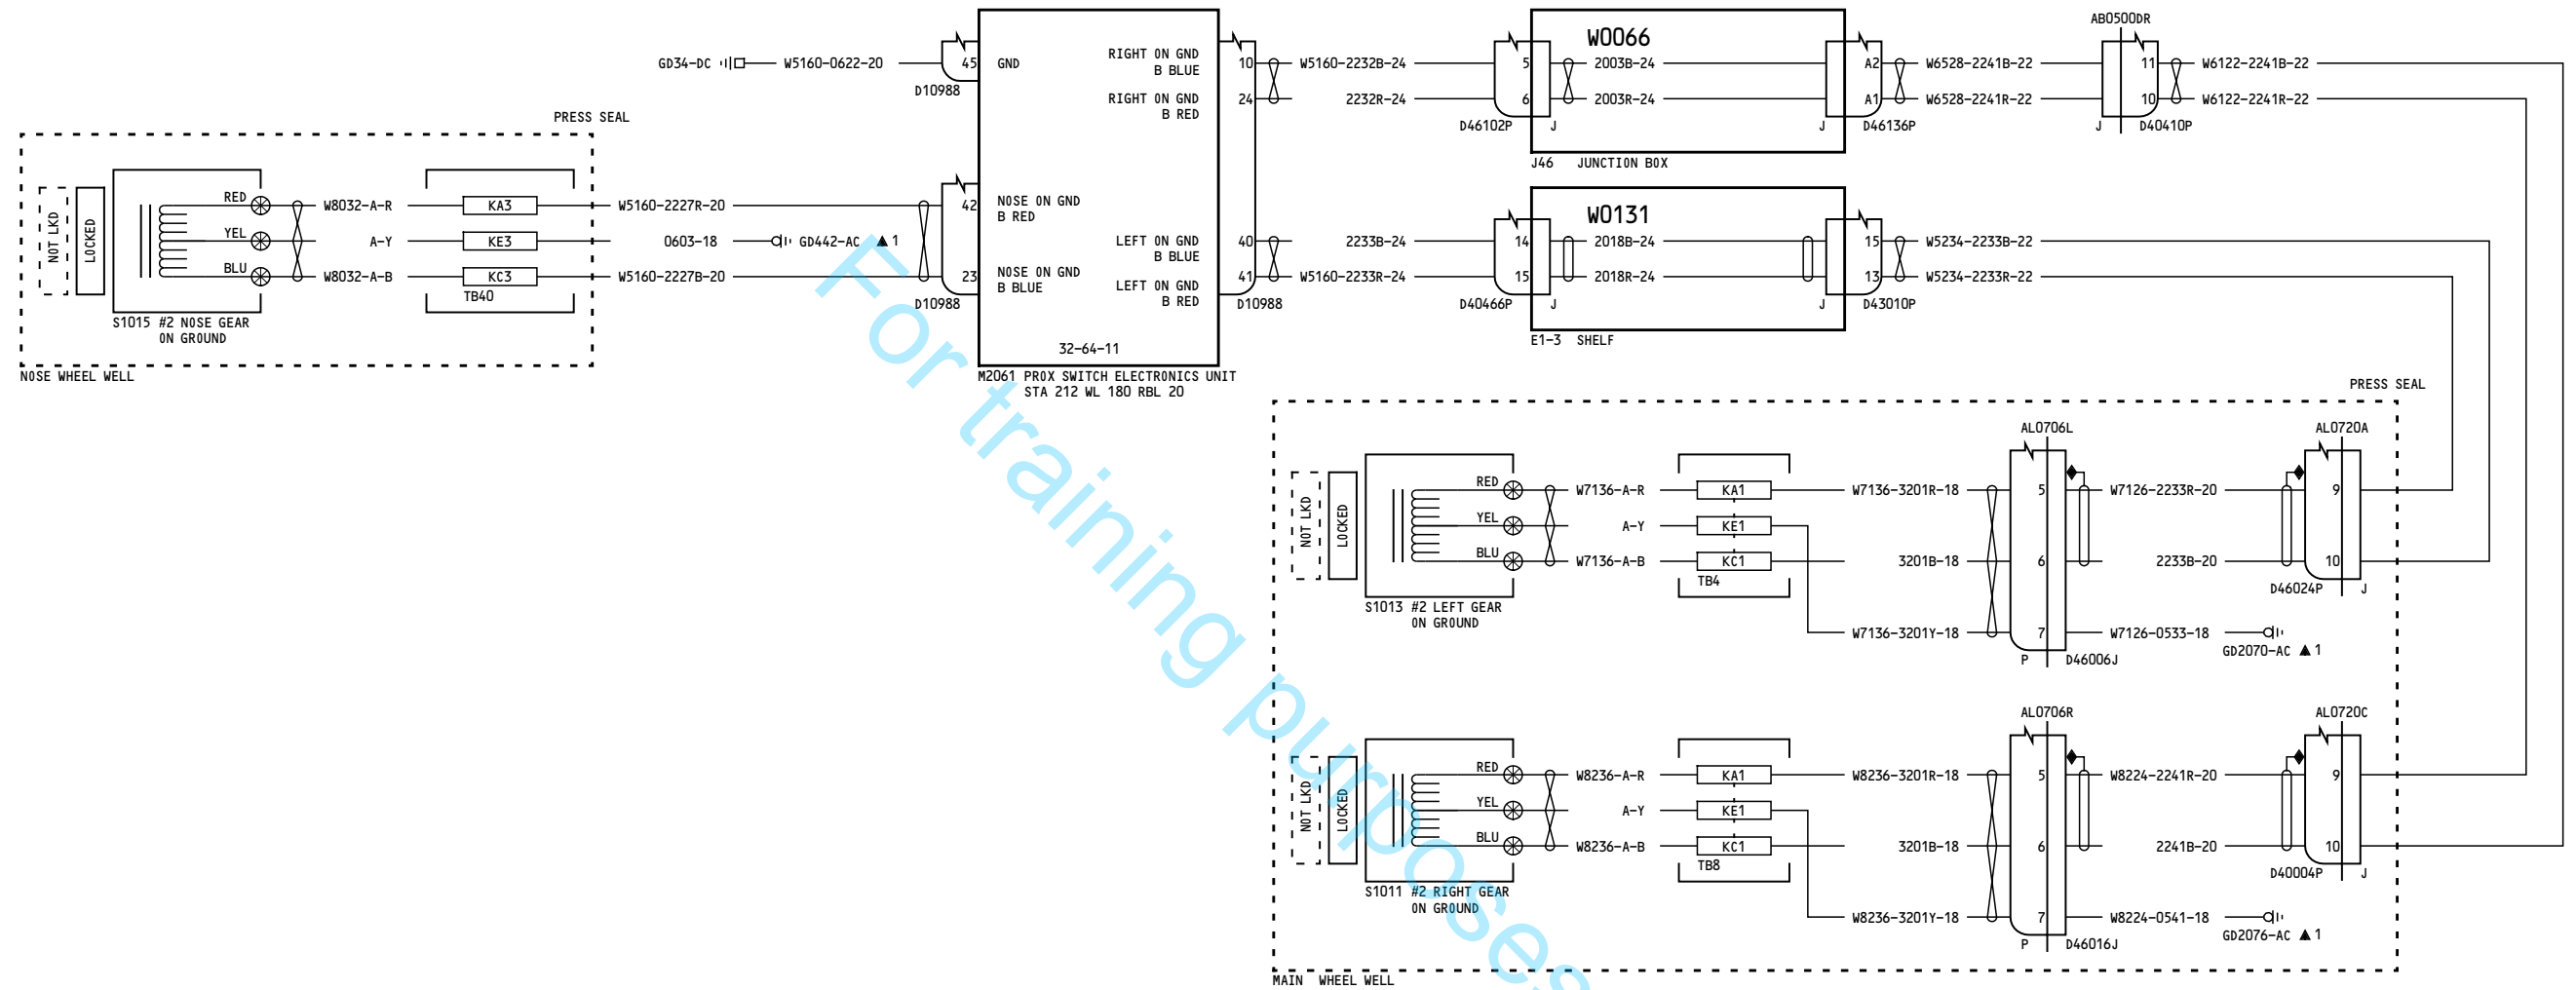

YD158

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**


D280A108

**32-31-12**

Page 3  
Sheet 1  
Oct 27/2011

**32-31-12**

Page 3  
Sheet 1  
Oct 27/2011

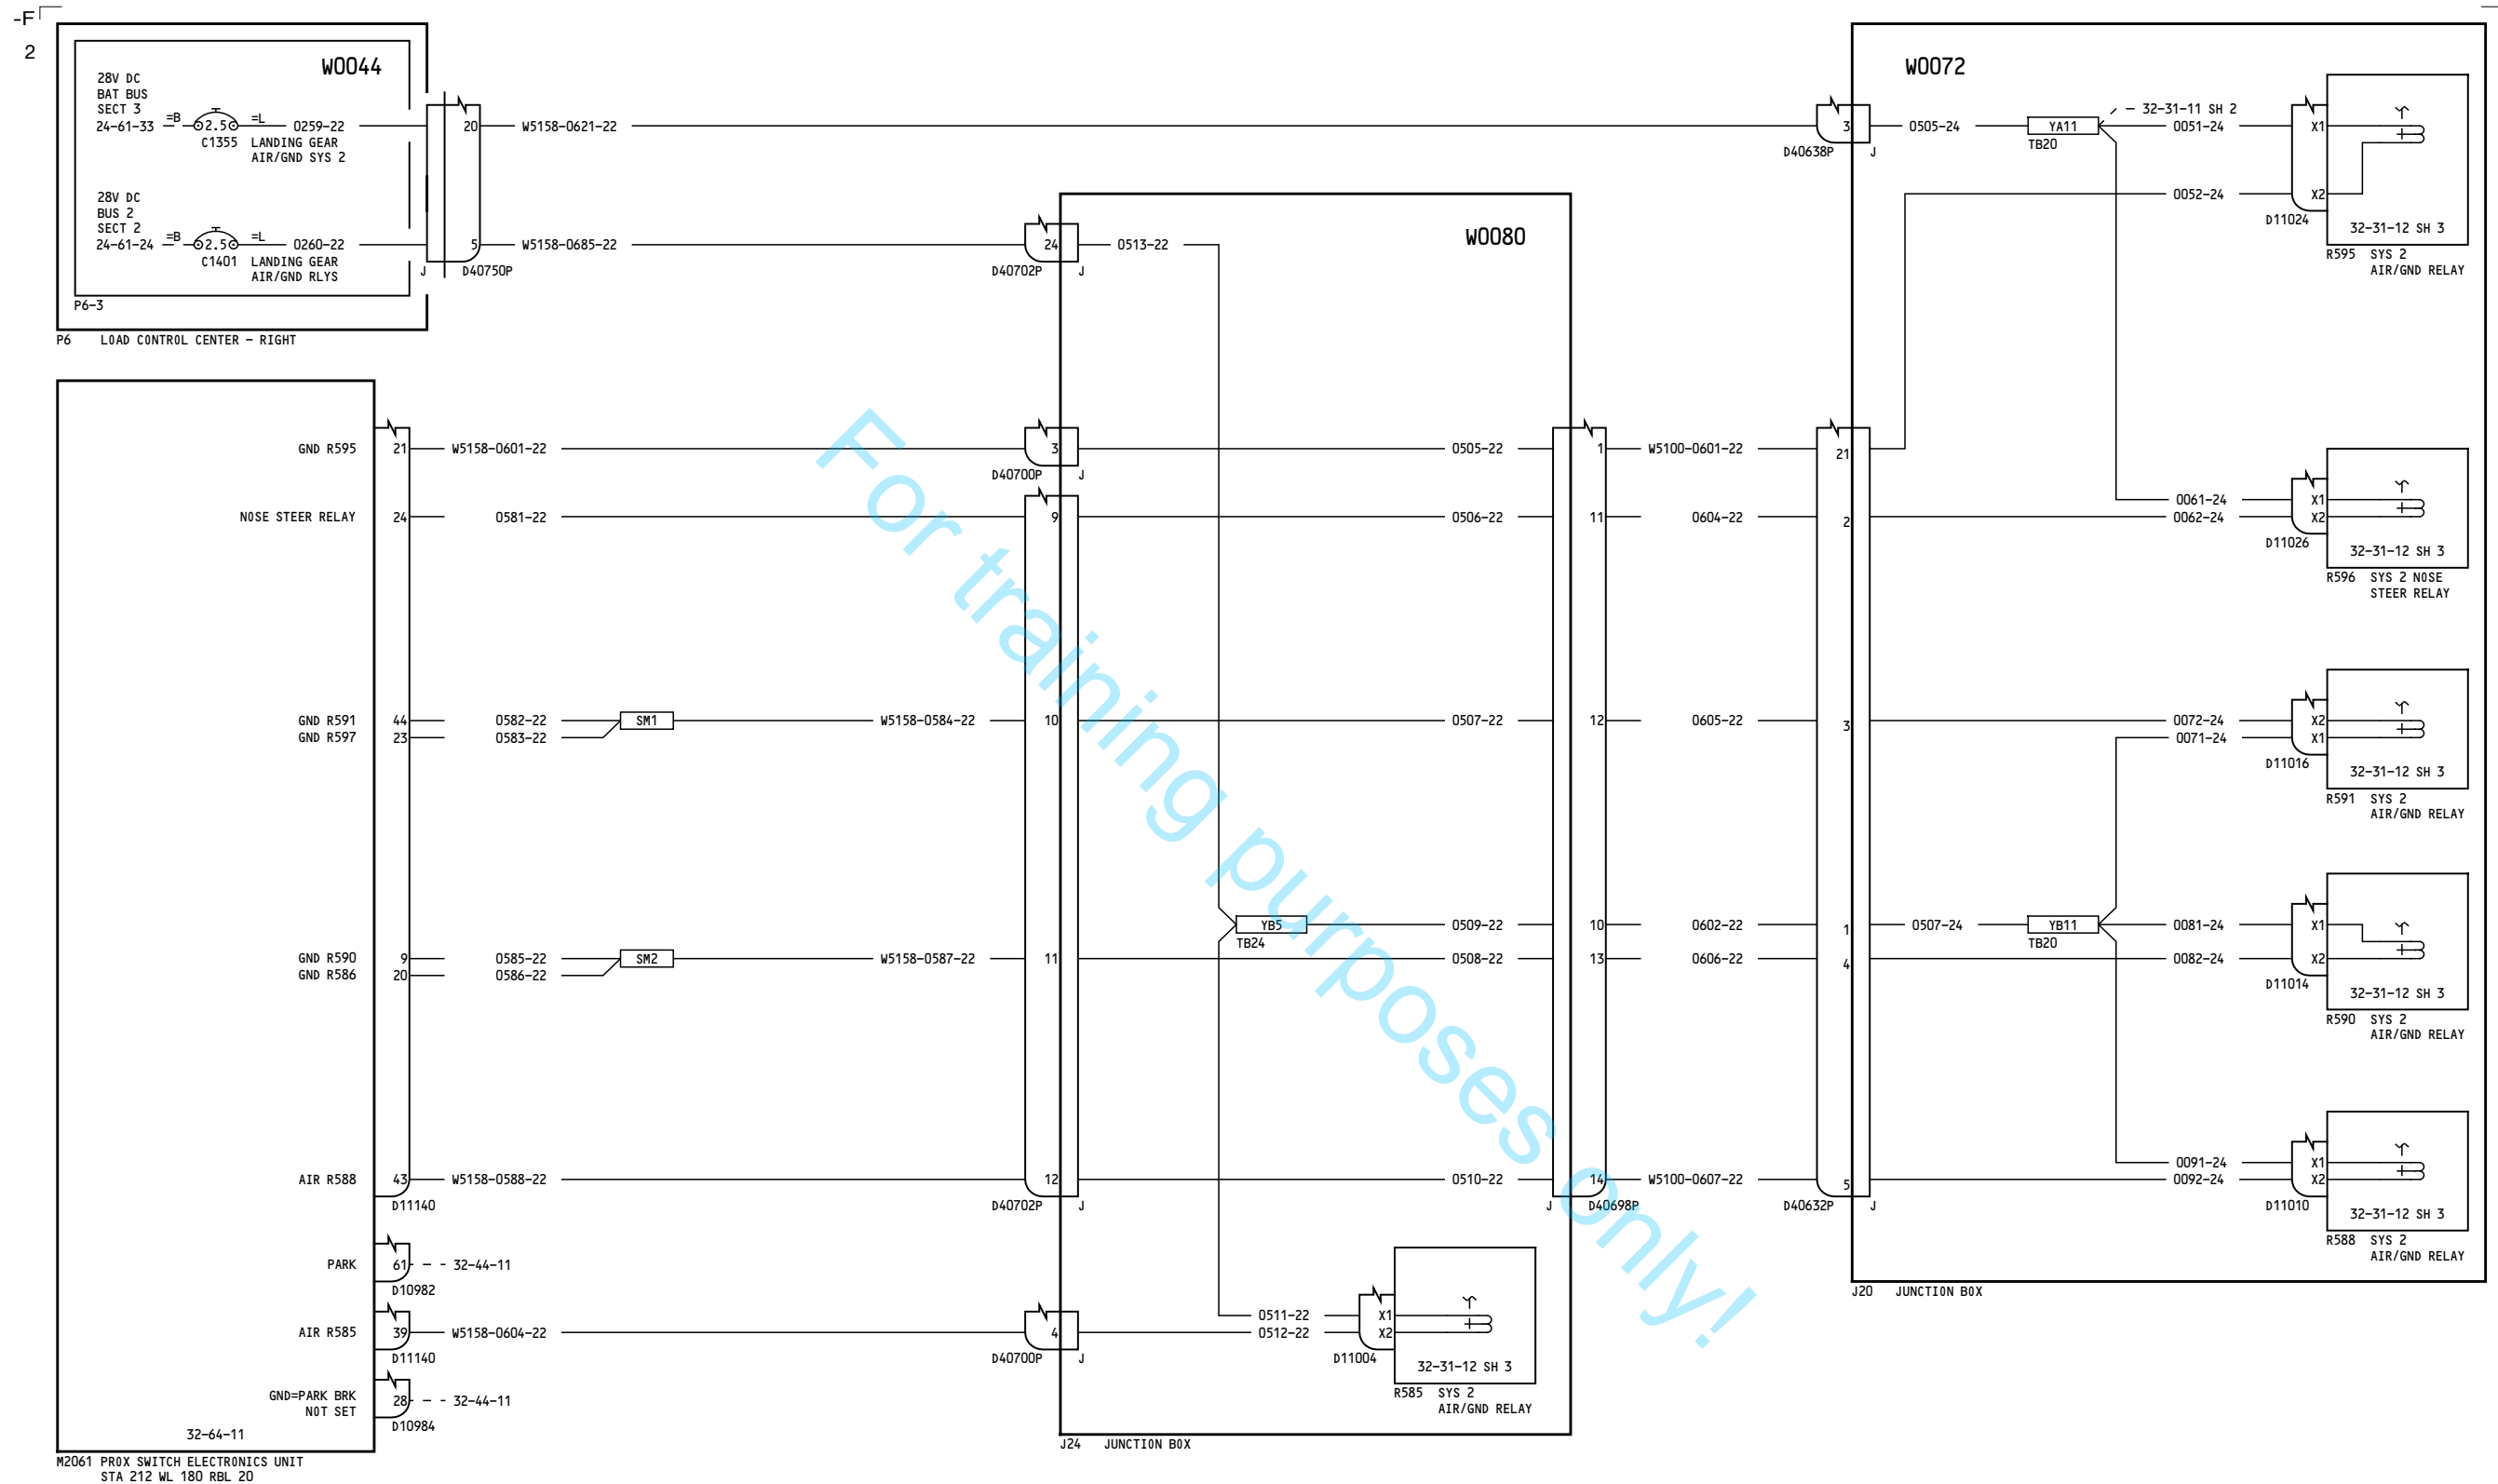

YD158

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**

D280A108


**32-31-12**

Page 3  
Sheet 2  
Oct 27/2011



**32-31-12**

Page 3  
Sheet 2  
Oct 27/2011

-G  
2

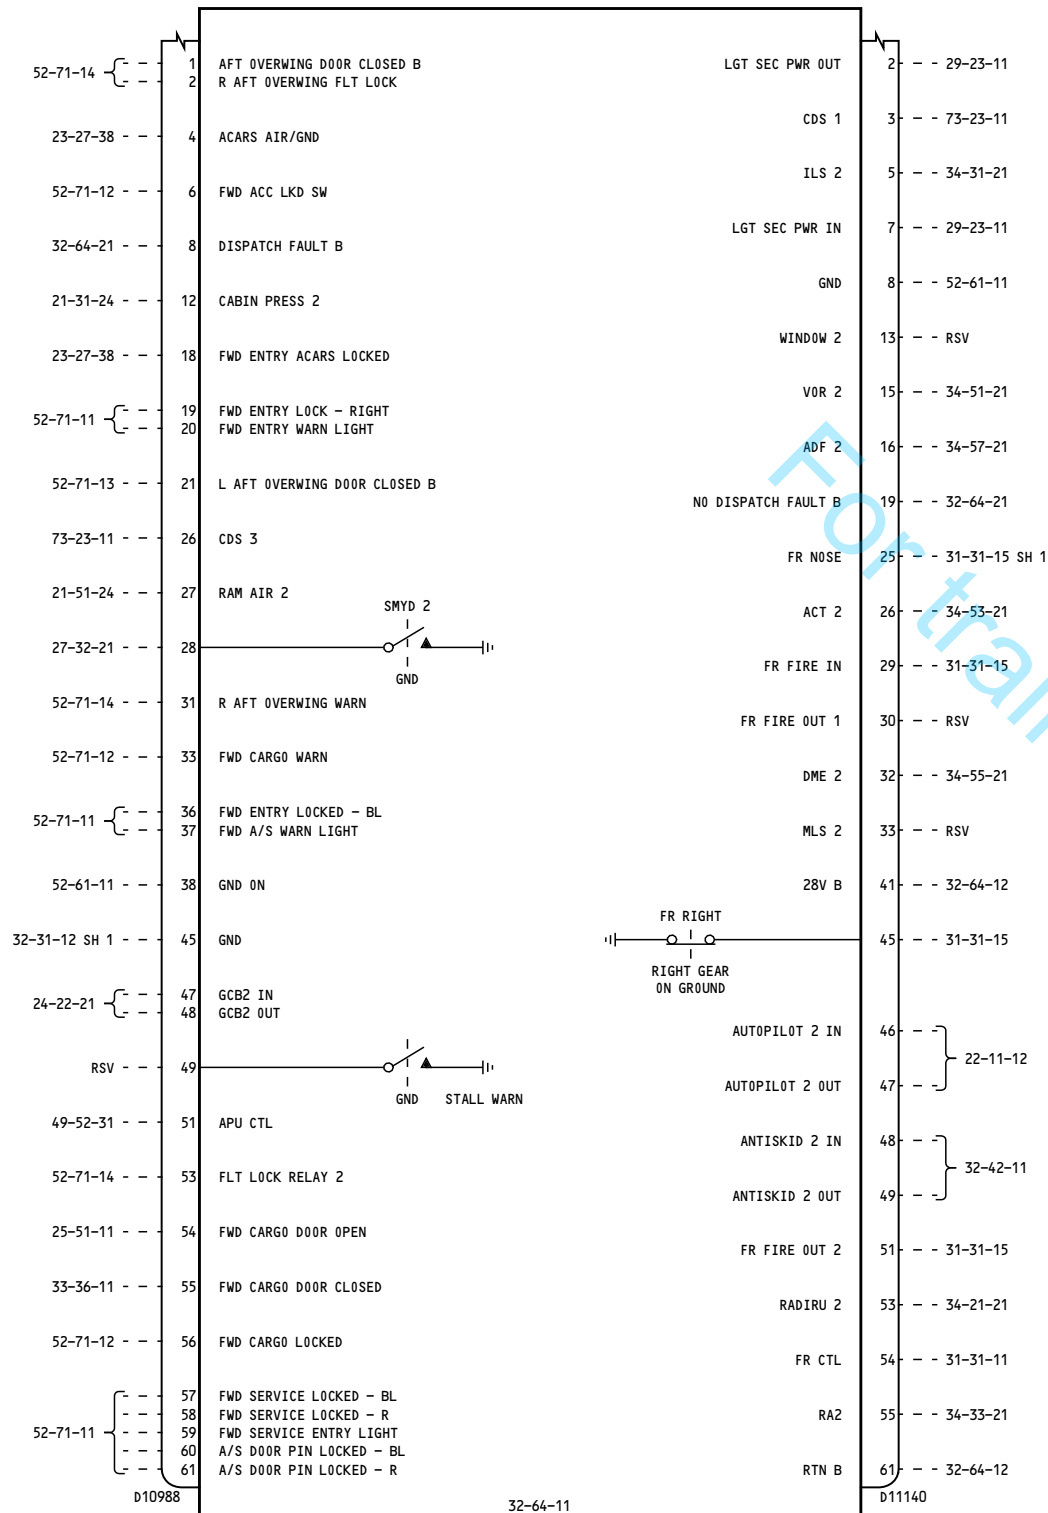

**NOTES:**  
M2061 PROX SWITCH ELECTRONICS UNIT  
STA 212 WL 180 RBL 20  
THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

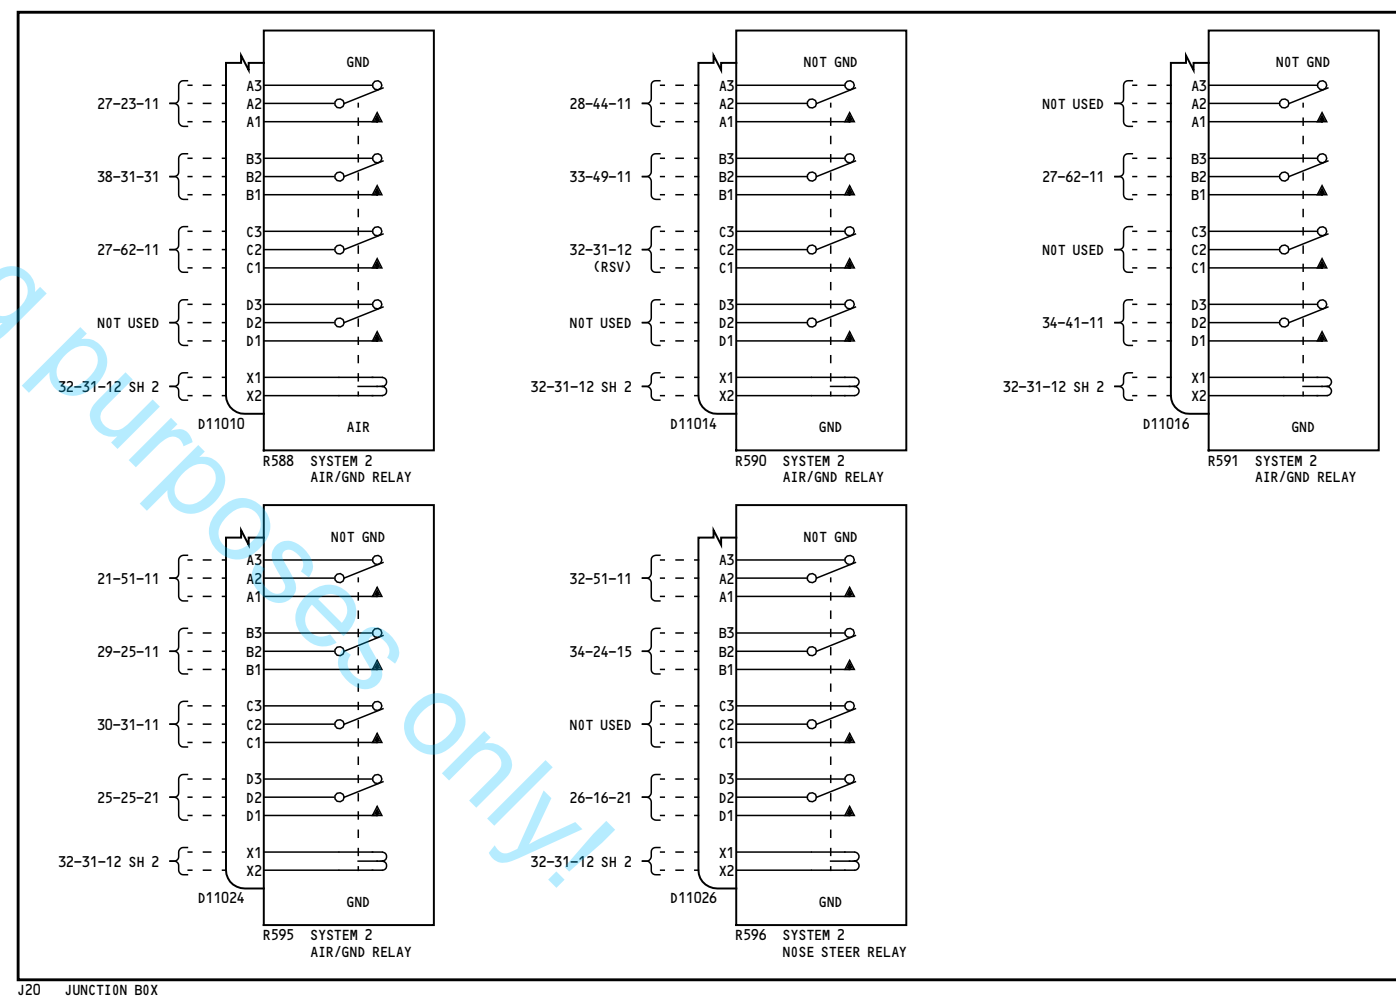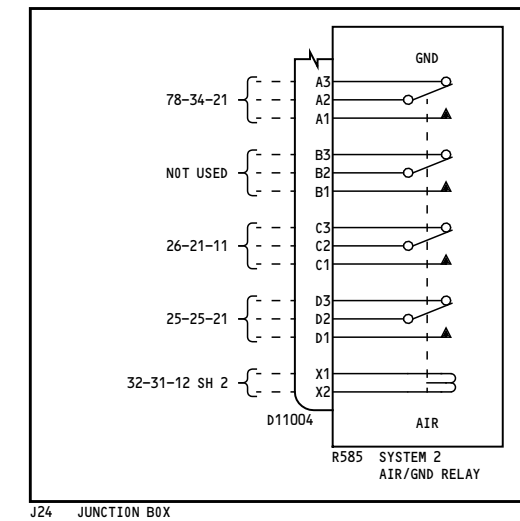

YD158

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**


D280A108

**32-31-12**

Page 3  
Sheet 3  
Oct 27/2011

**32-31-12**

Page 3  
Sheet 3  
Oct 27/2011

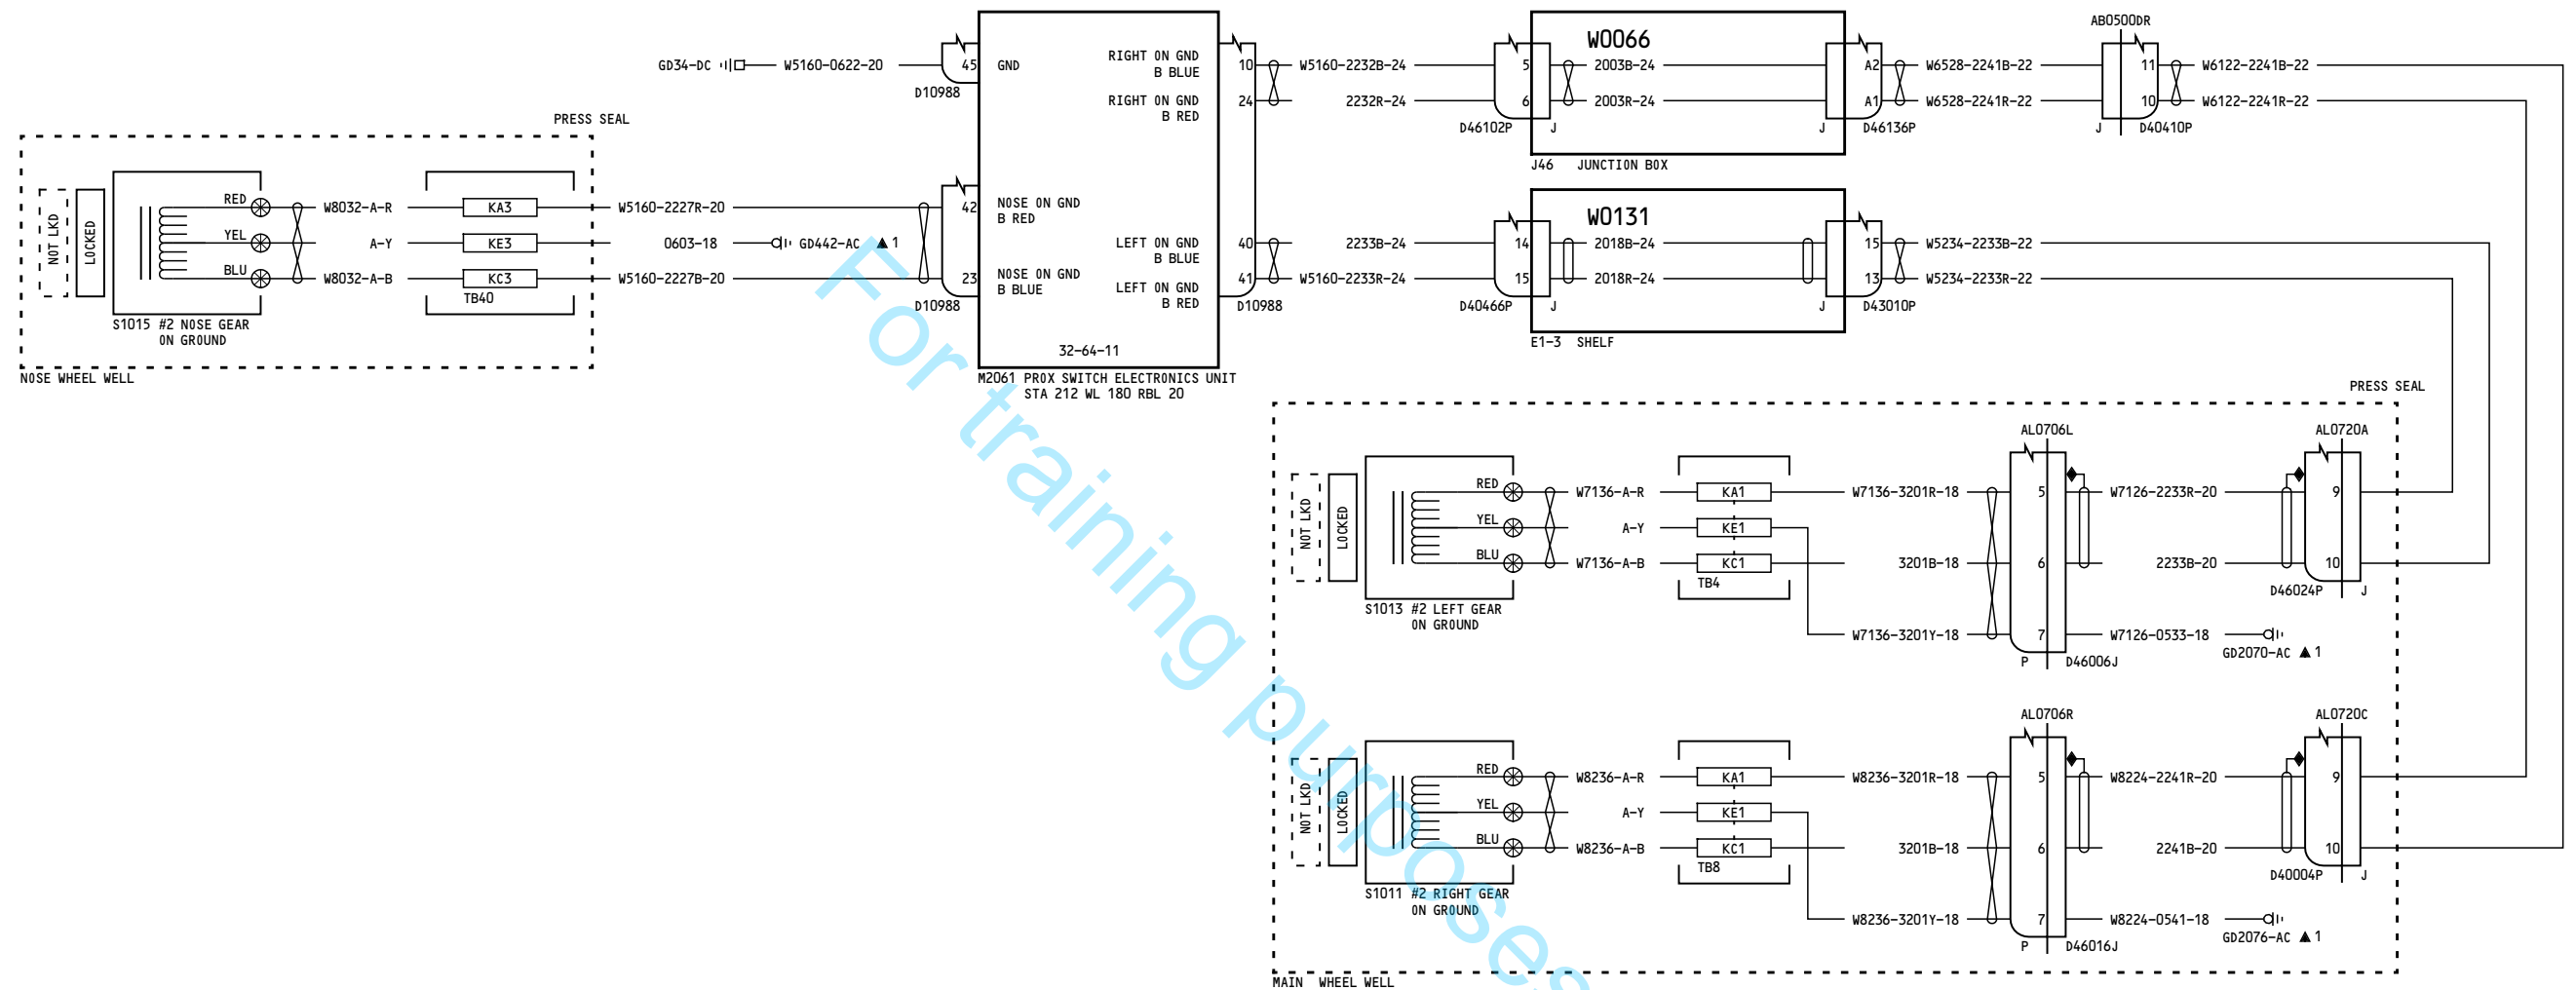

YL951-YL952

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**

D280A108


**32-31-12**

Page 4  
Sheet 1  
Aug 11/2008

**32-31-12**

Page 4  
Sheet 1  
Aug 11/2008



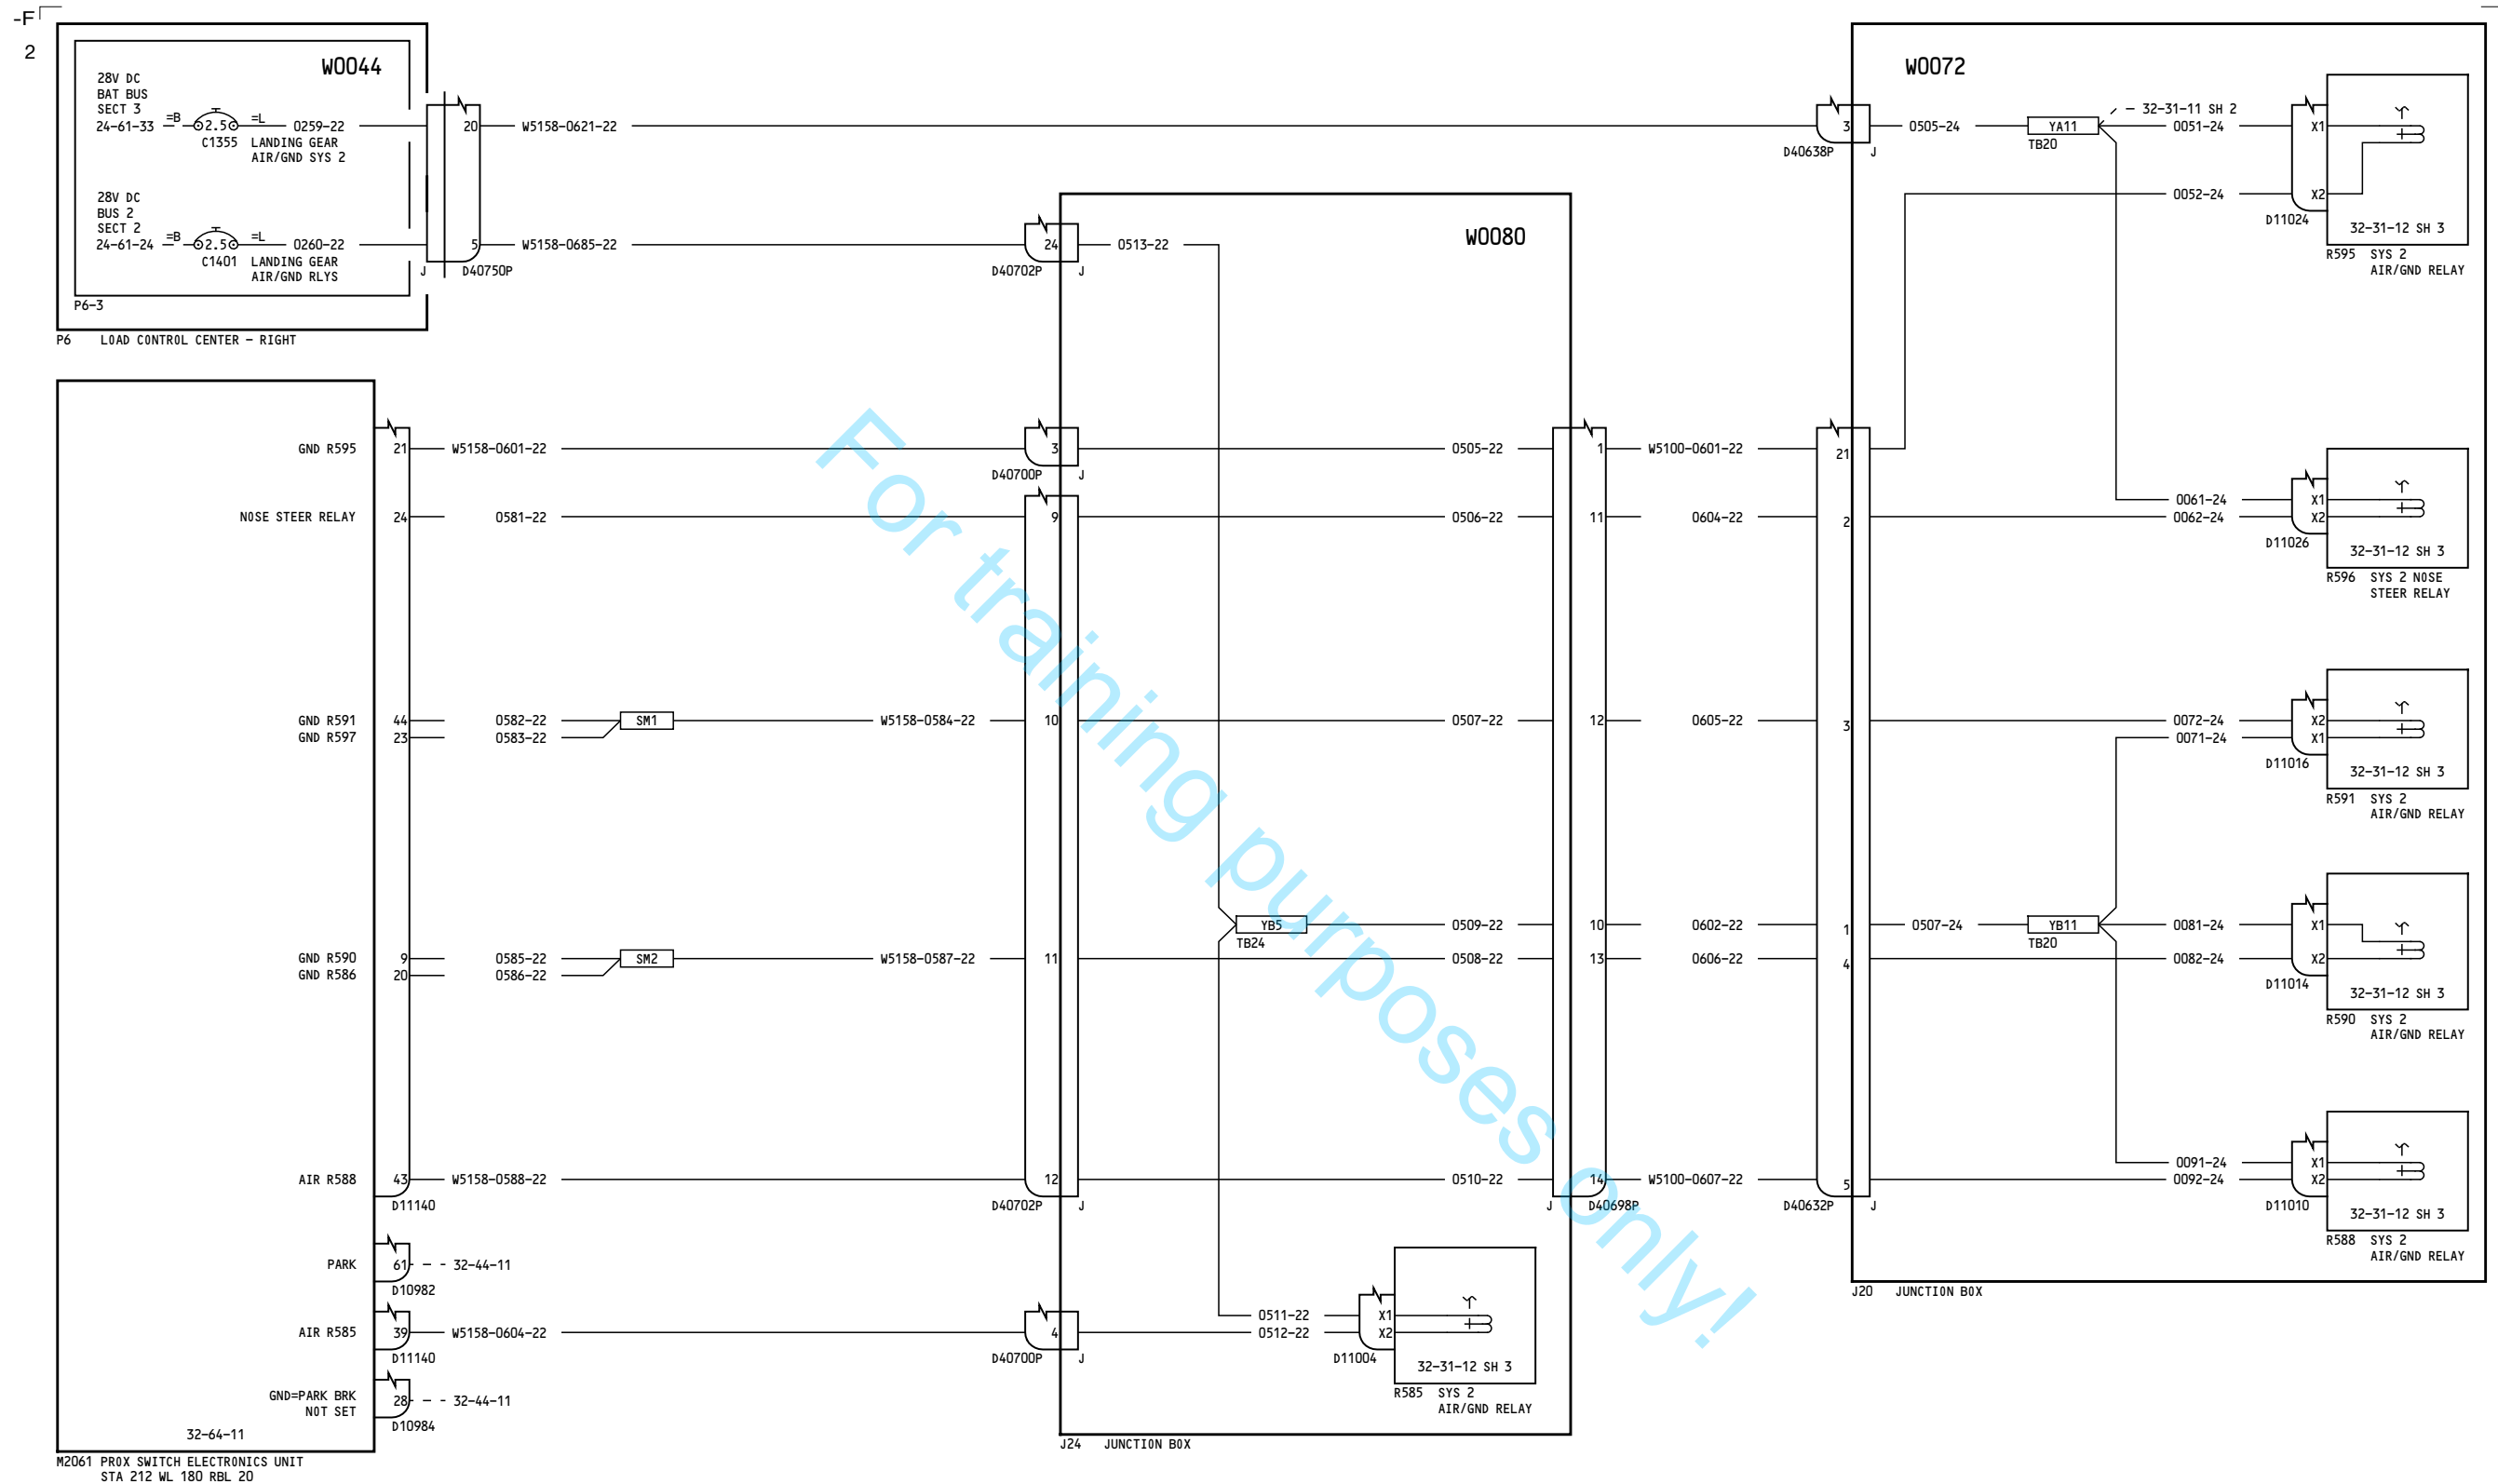

YL951-YL952

AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS


D280A108

32-31-12



Page 4  
Sheet 2  
Aug 11/2008

32-31-12

Page 4  
Sheet 2  
Aug 11/2008

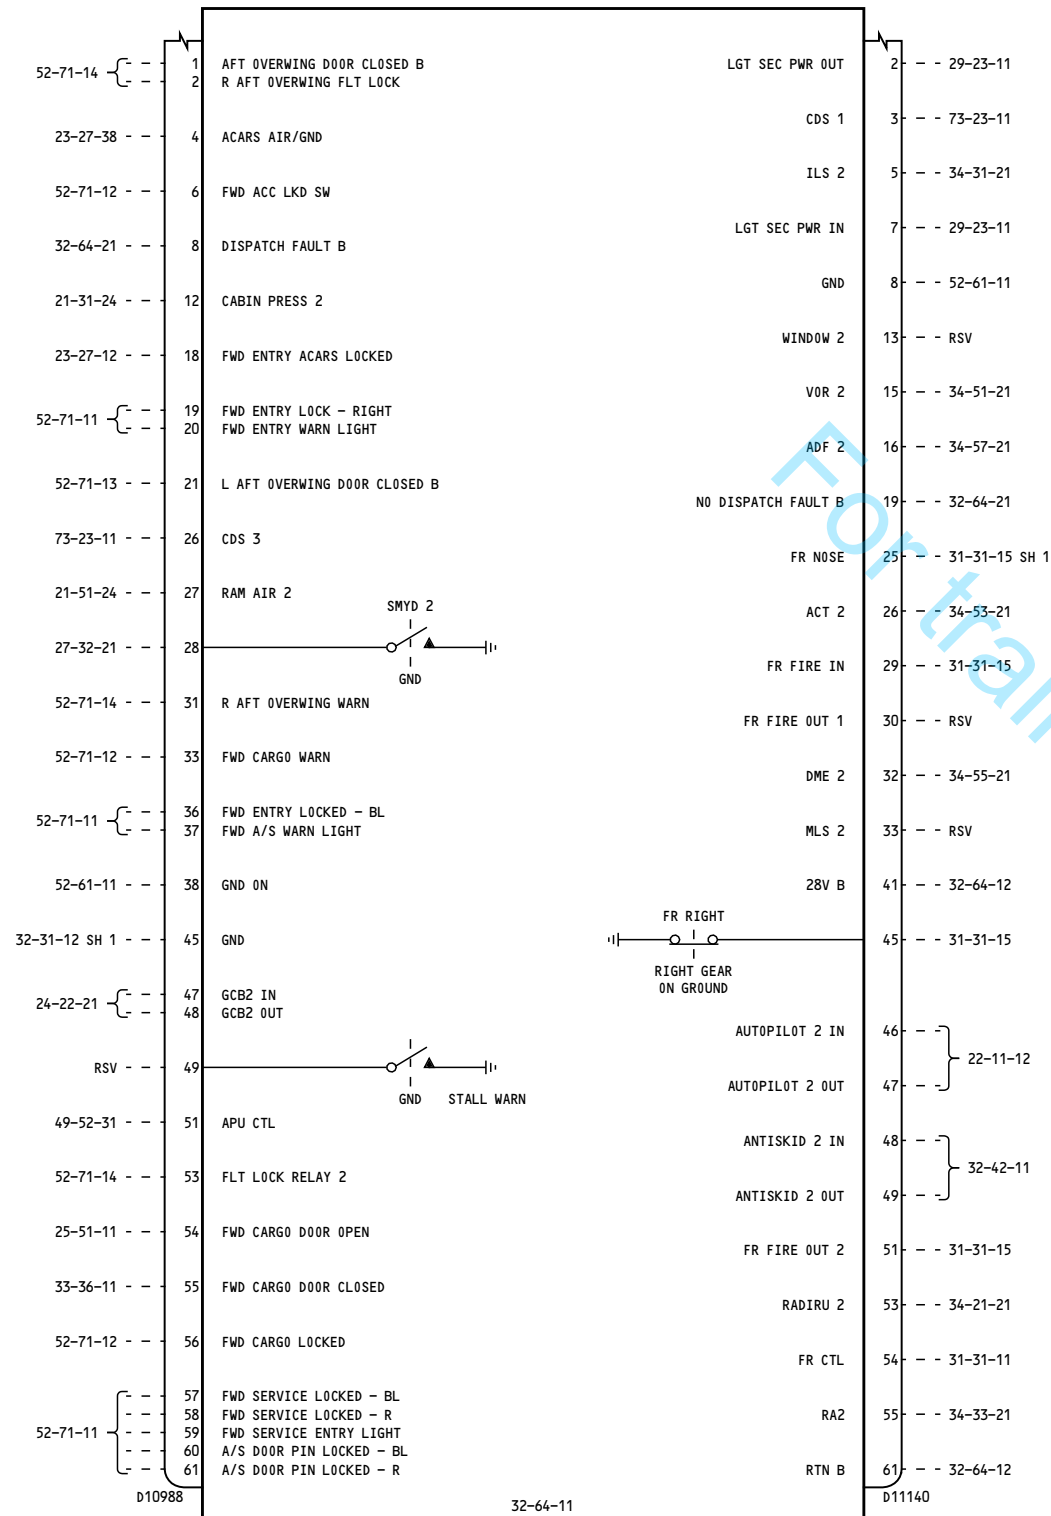

NOTES:  
M2061 PROX SWITCH ELECTRONICS UNIT  
STA 212 WL 180 RBL 20  
THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

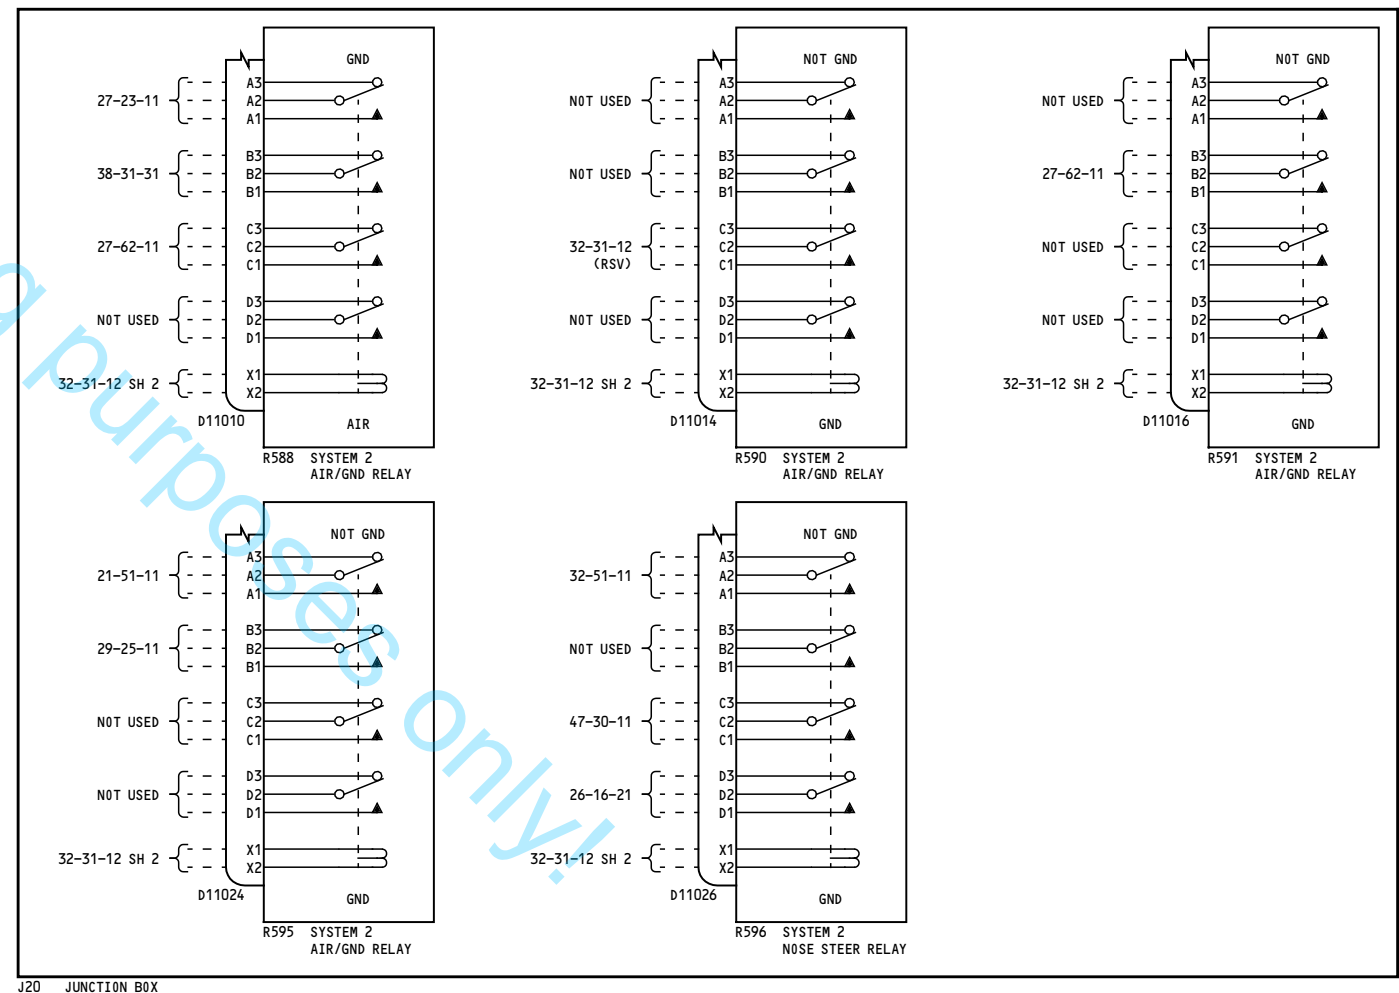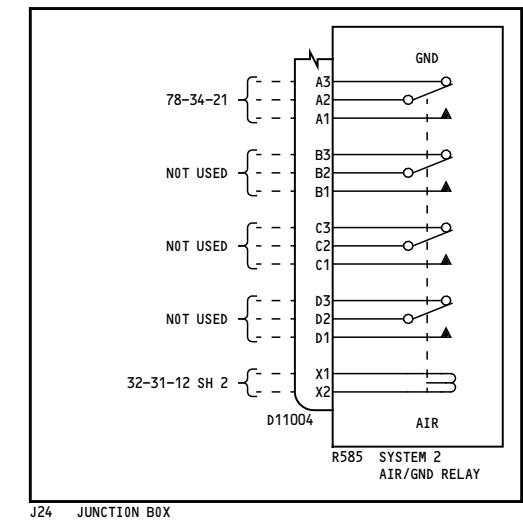

YL951-YL952

AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS


D280A108

32-31-12

Page 4  
Sheet 3  
Aug 11/2008

32-31-12

Page 4  
Sheet 3  
Aug 11/2008

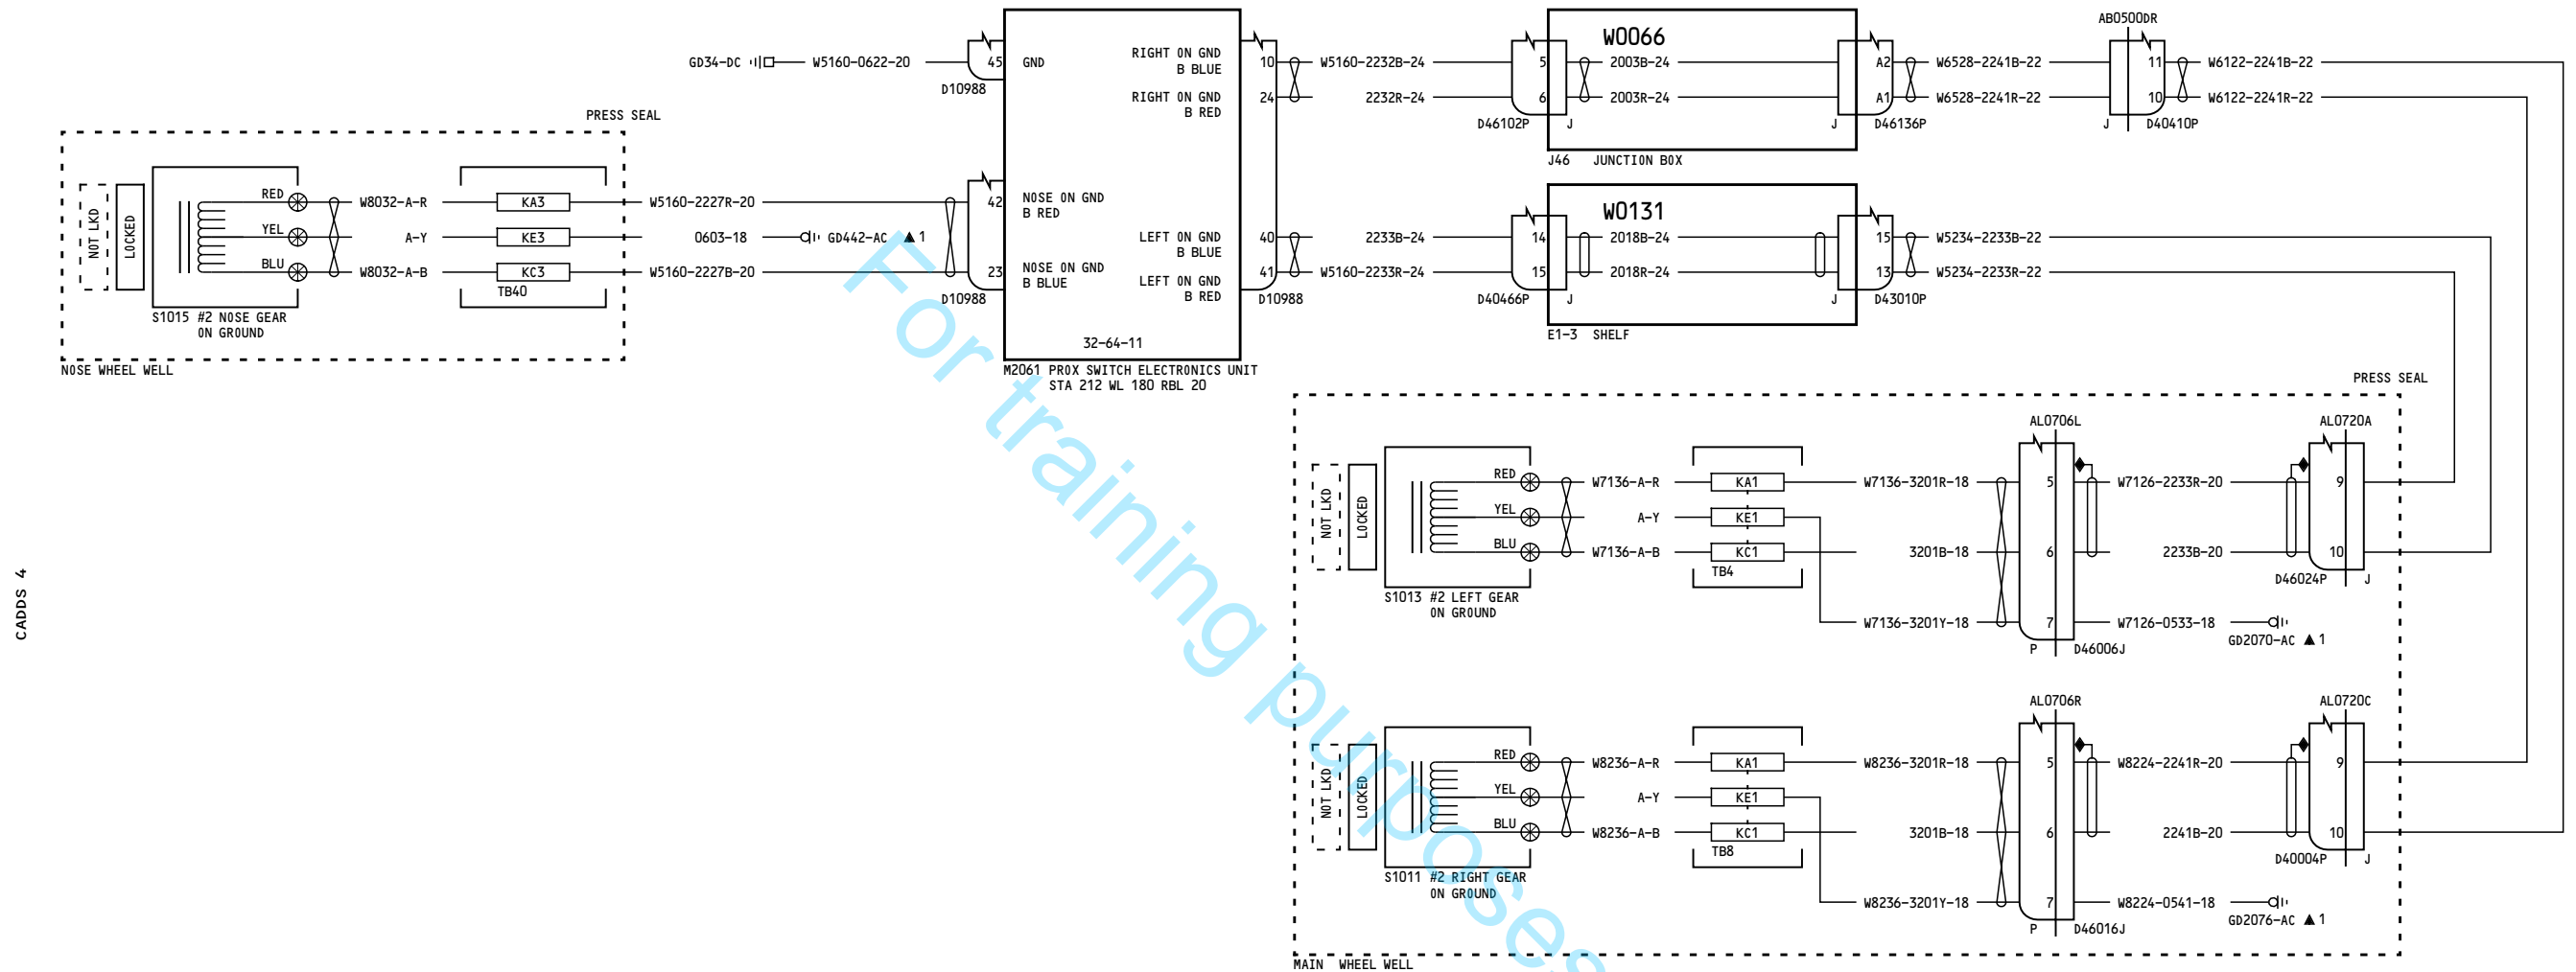

YL953-YL954

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**


D280A108

**32-31-12**

Page 5  
Sheet 1  
May 11/2009

**32-31-12**

Page 5  
Sheet 1  
May 11/2009

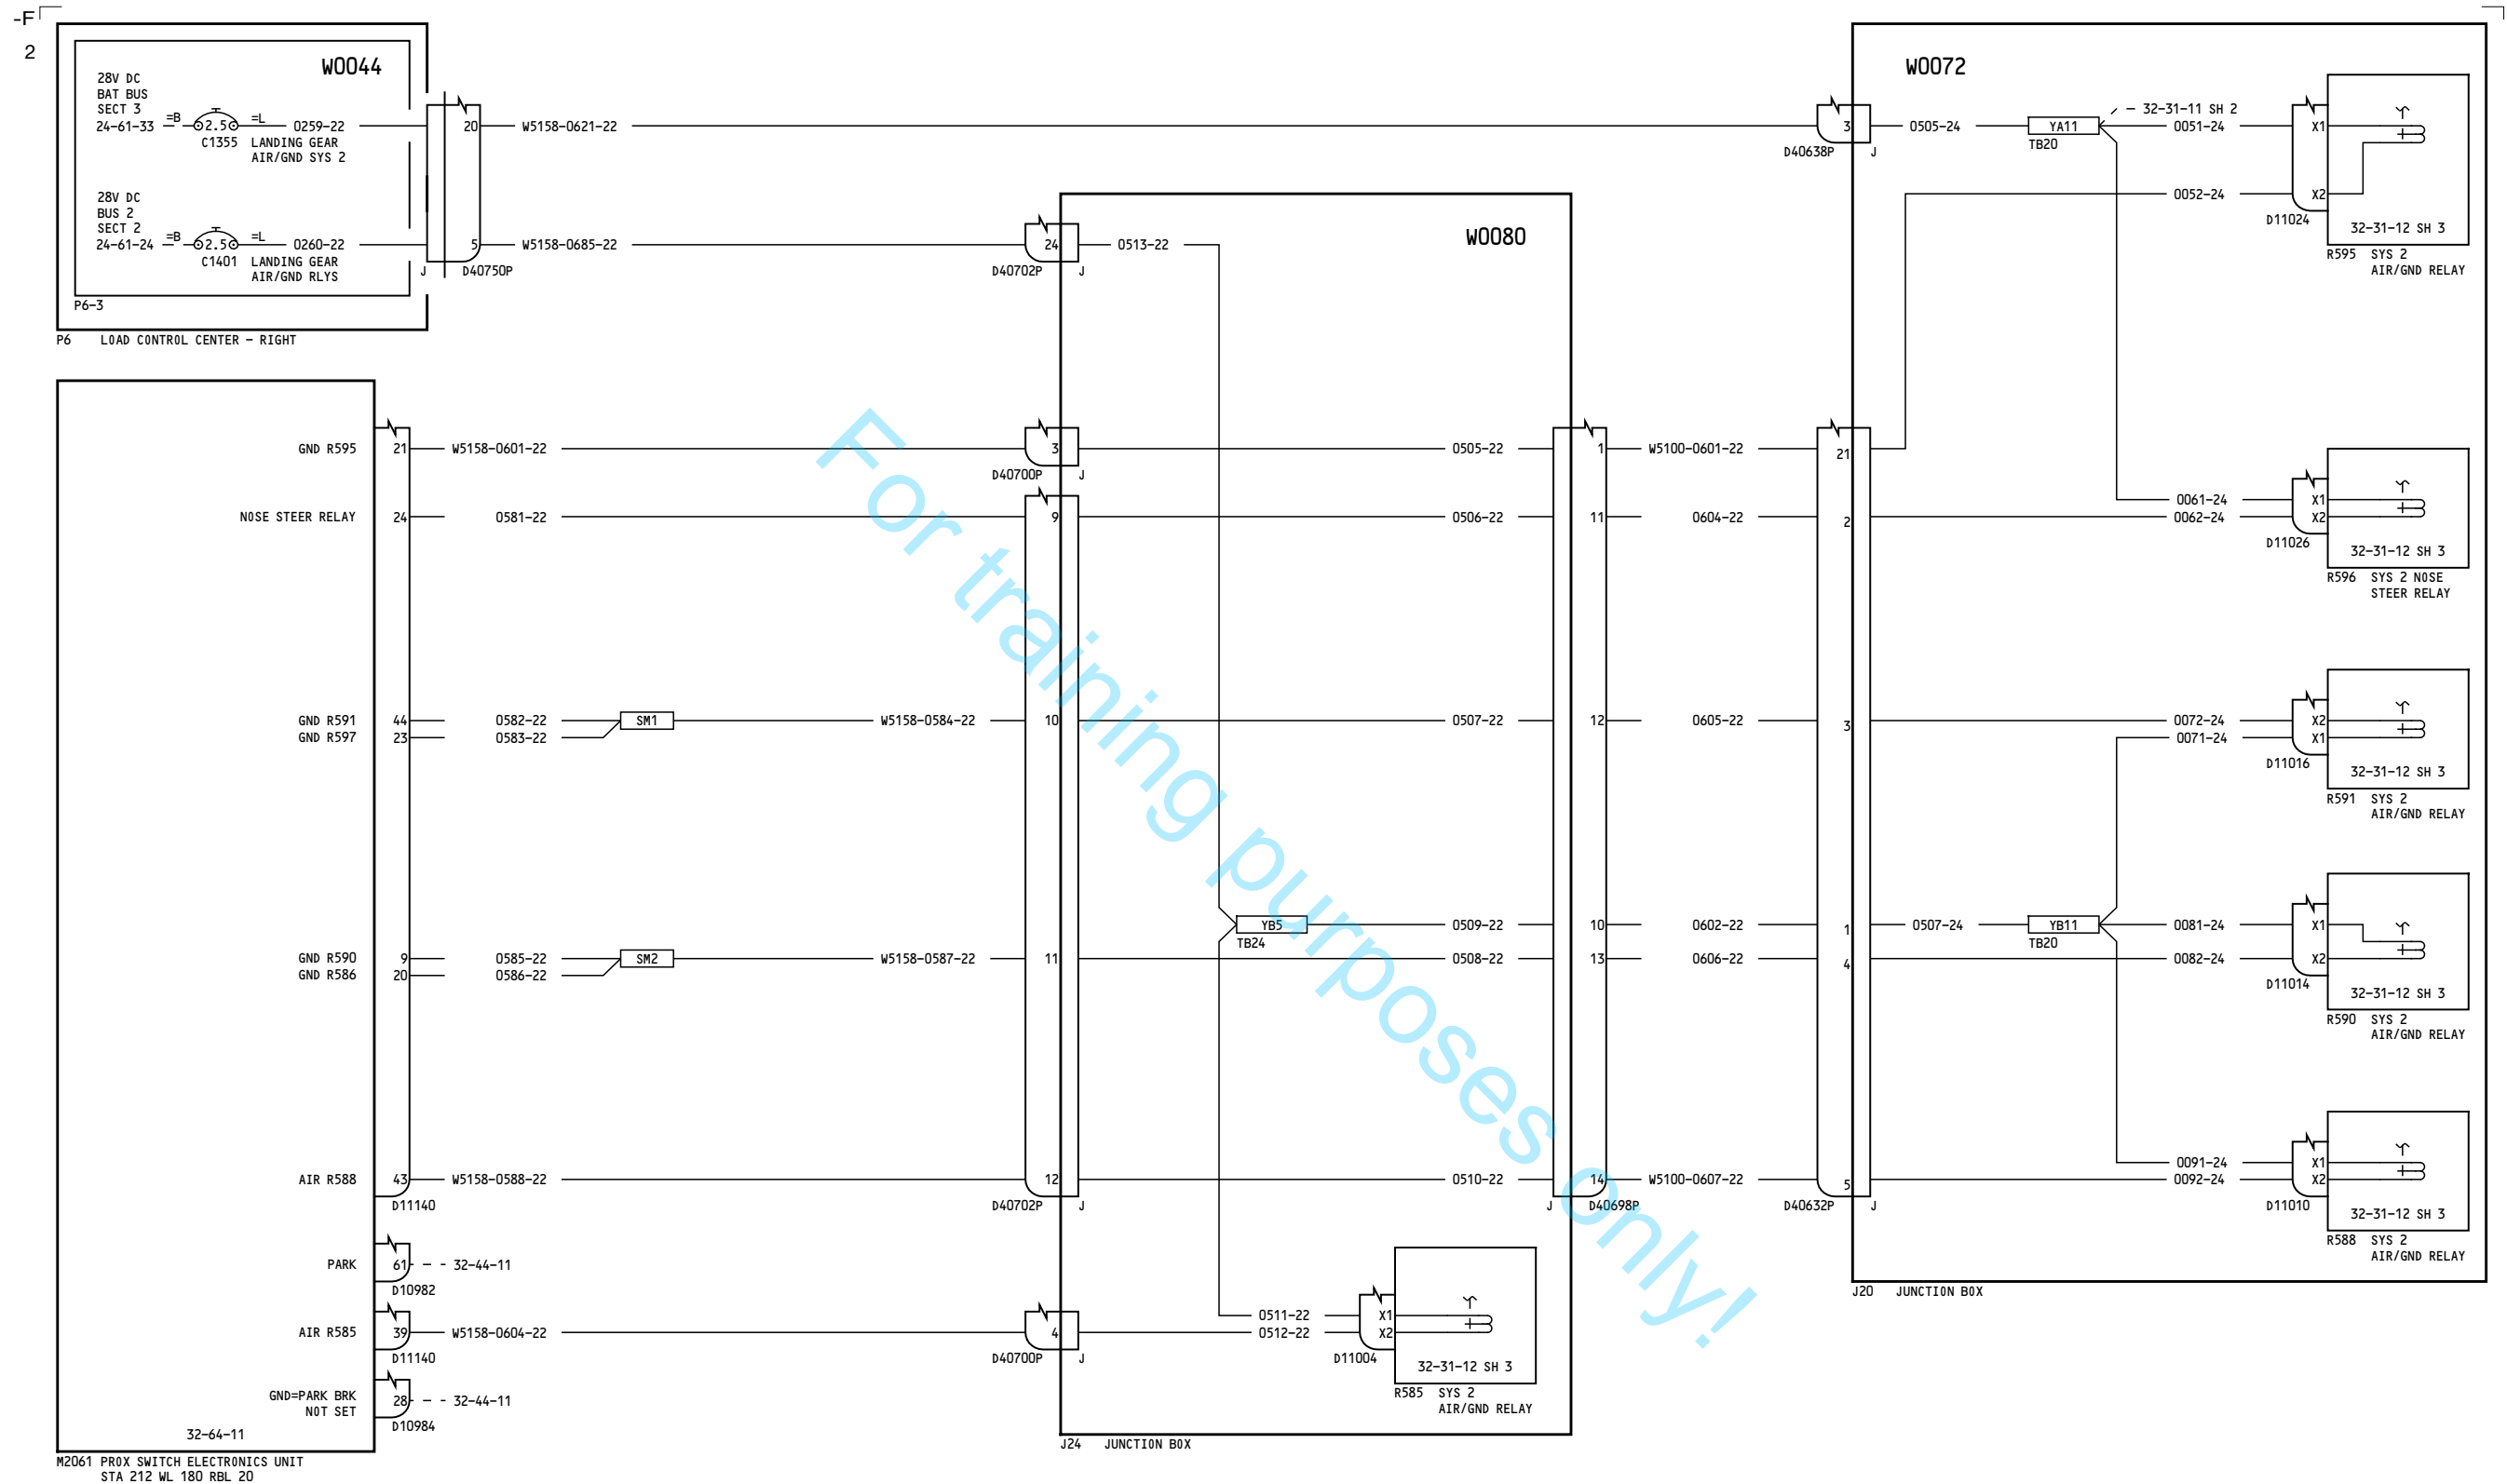

YL953-YL954

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**


D280A108

**32-31-12**



Page 5  
Sheet 2  
May 11/2009

**32-31-12**

Page 5  
Sheet 2  
May 11/2009

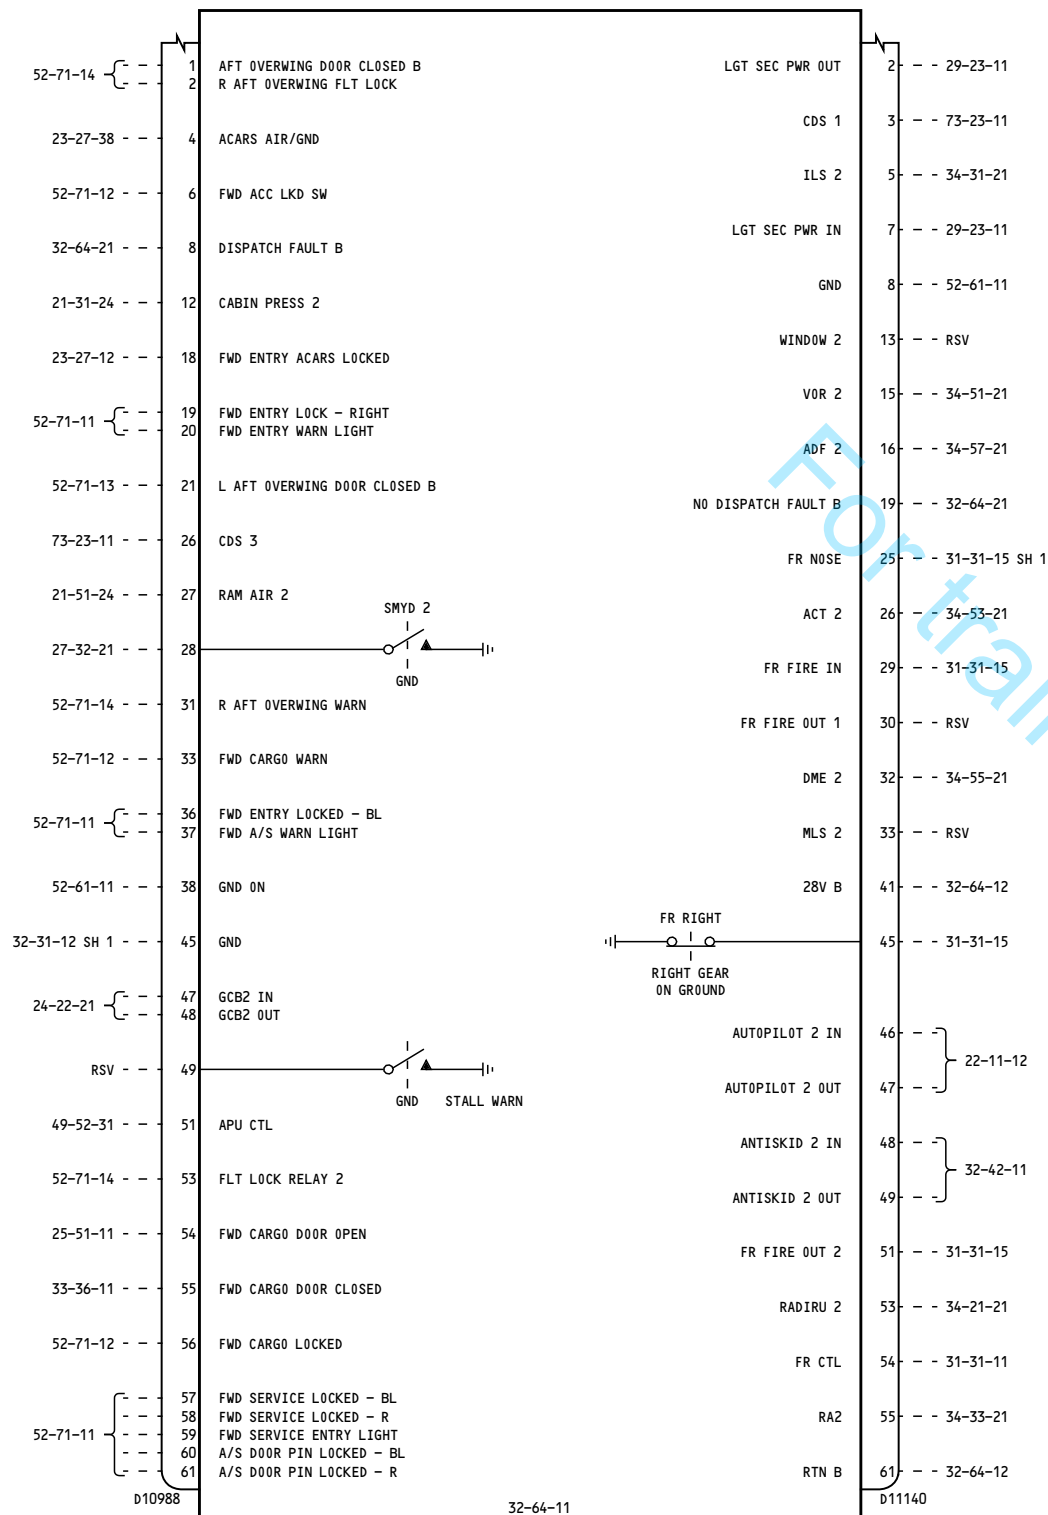

**NOTES:**  
M2061 PROX SWITCH ELECTRONICS UNIT  
STA 212 WL 180 RBL 20  
THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

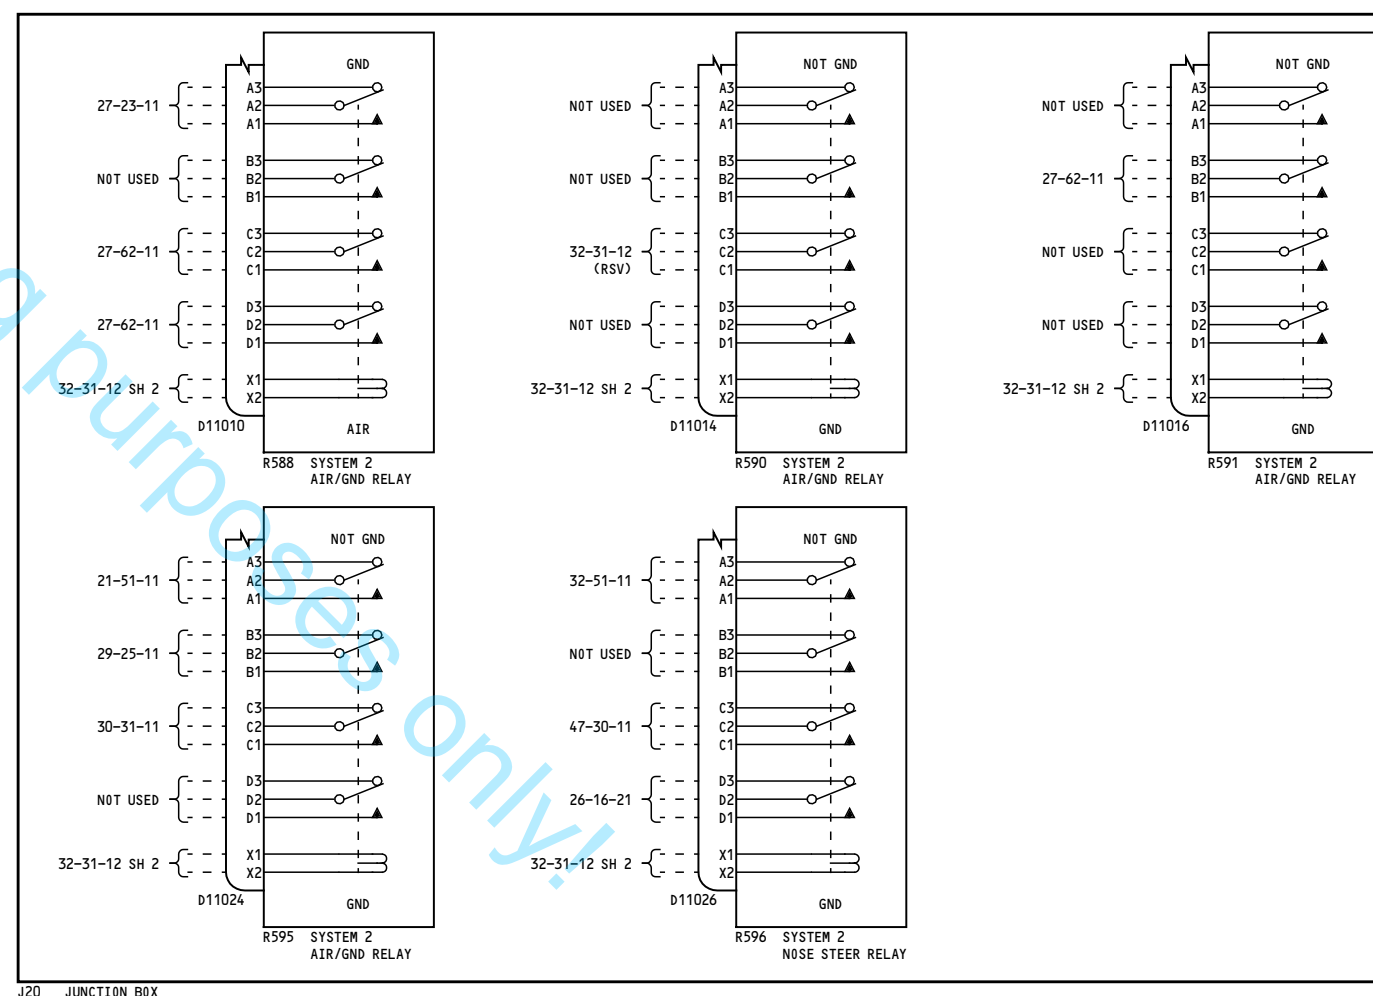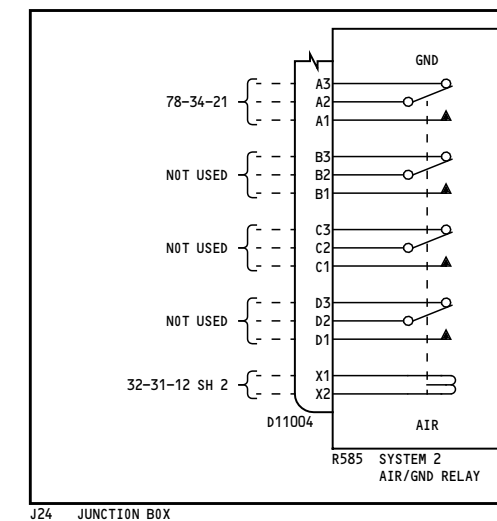

YL953-YL954

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**


D280A108

**32-31-12**

Page 5  
Sheet 3  
May 11/2009

**32-31-12**

Page 5  
Sheet 3  
May 11/2009

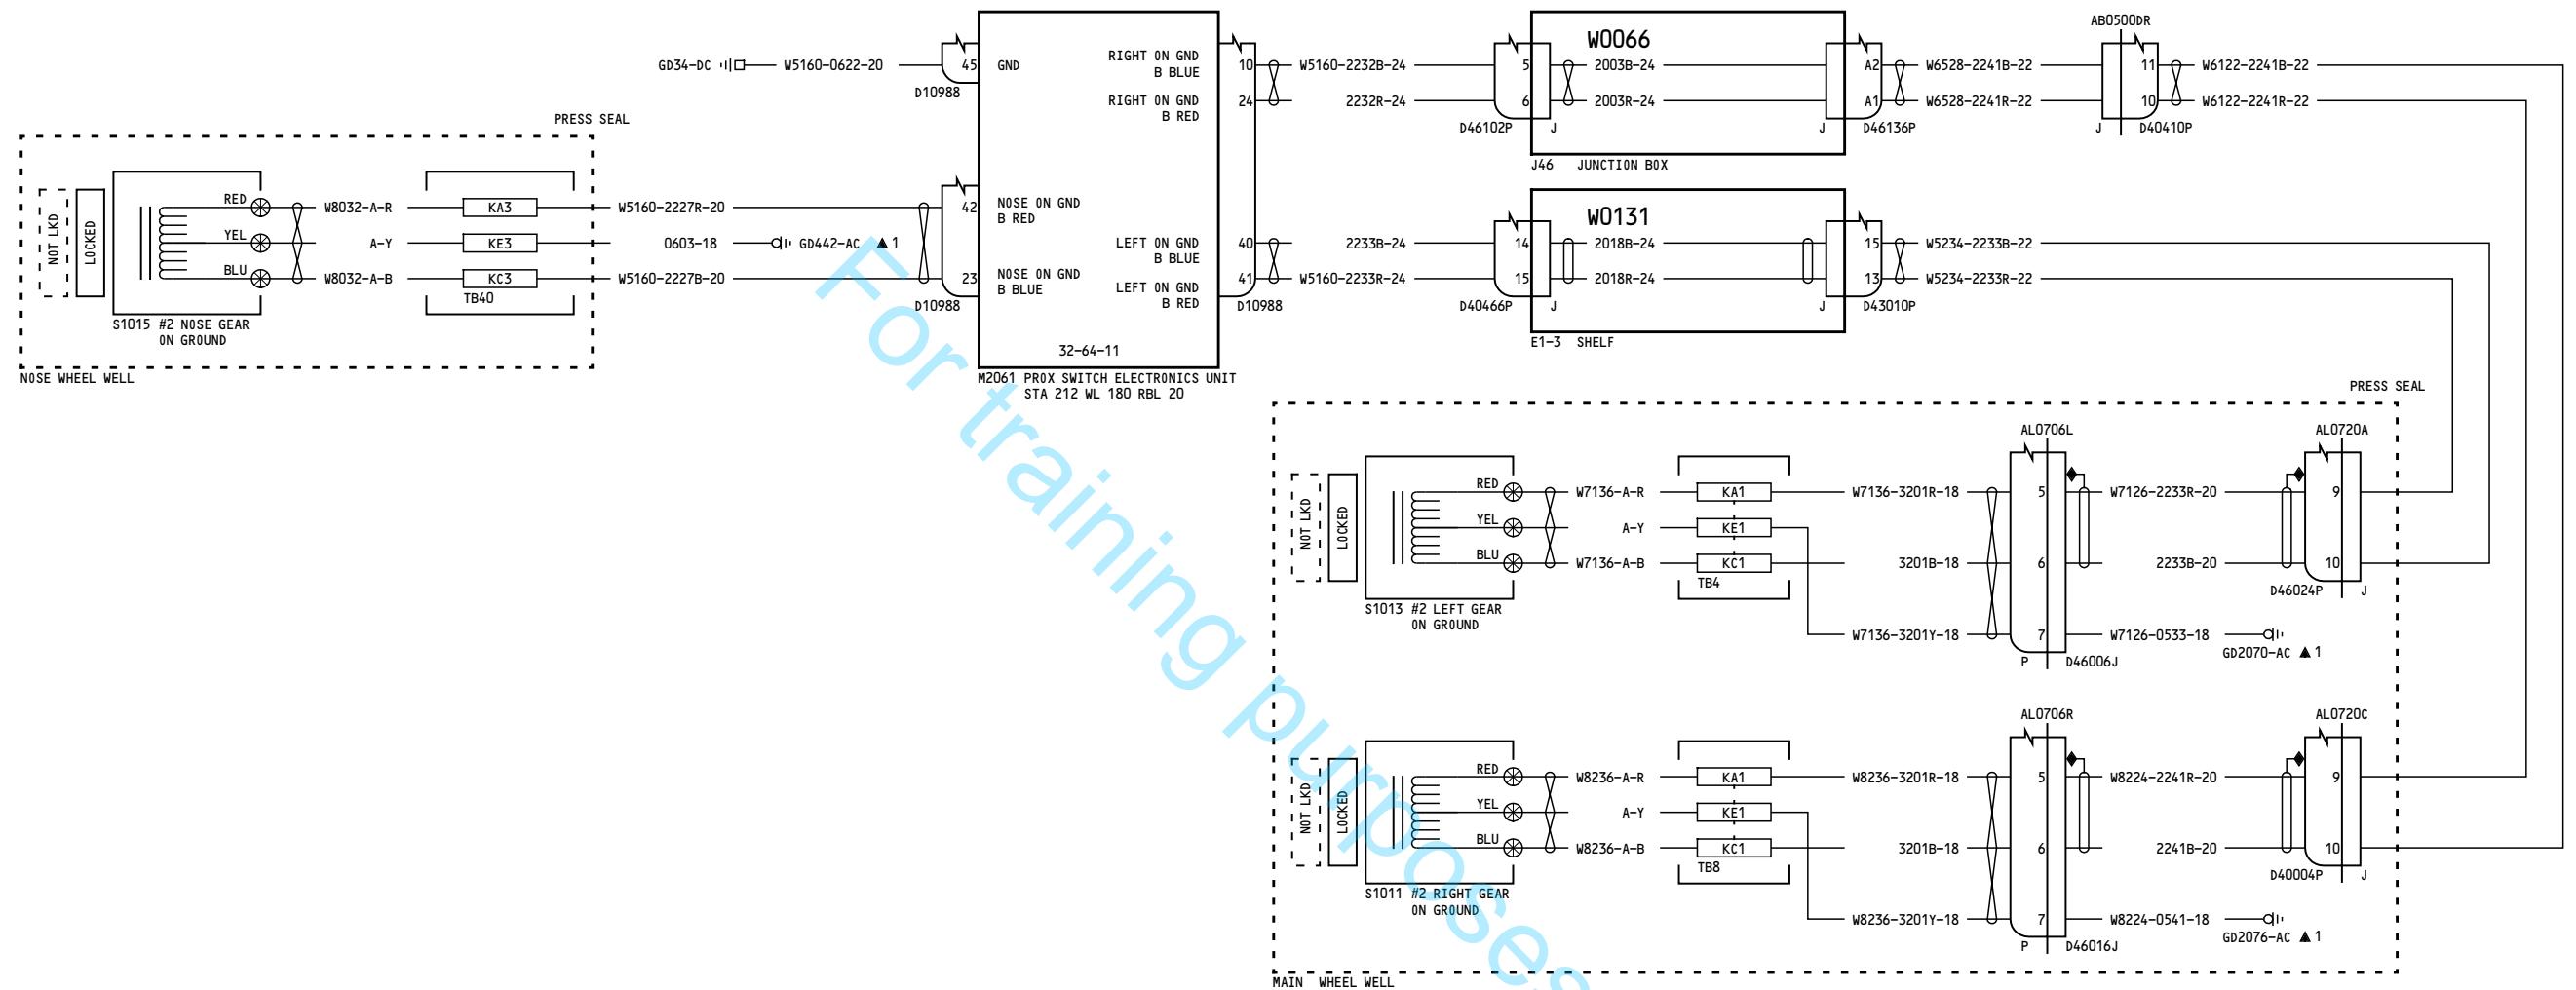

YL955

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**


D280A108

**32-31-12**

Page 6  
Sheet 1  
Aug 03/2009

**32-31-12**

Page 6  
Sheet 1  
Aug 03/2009

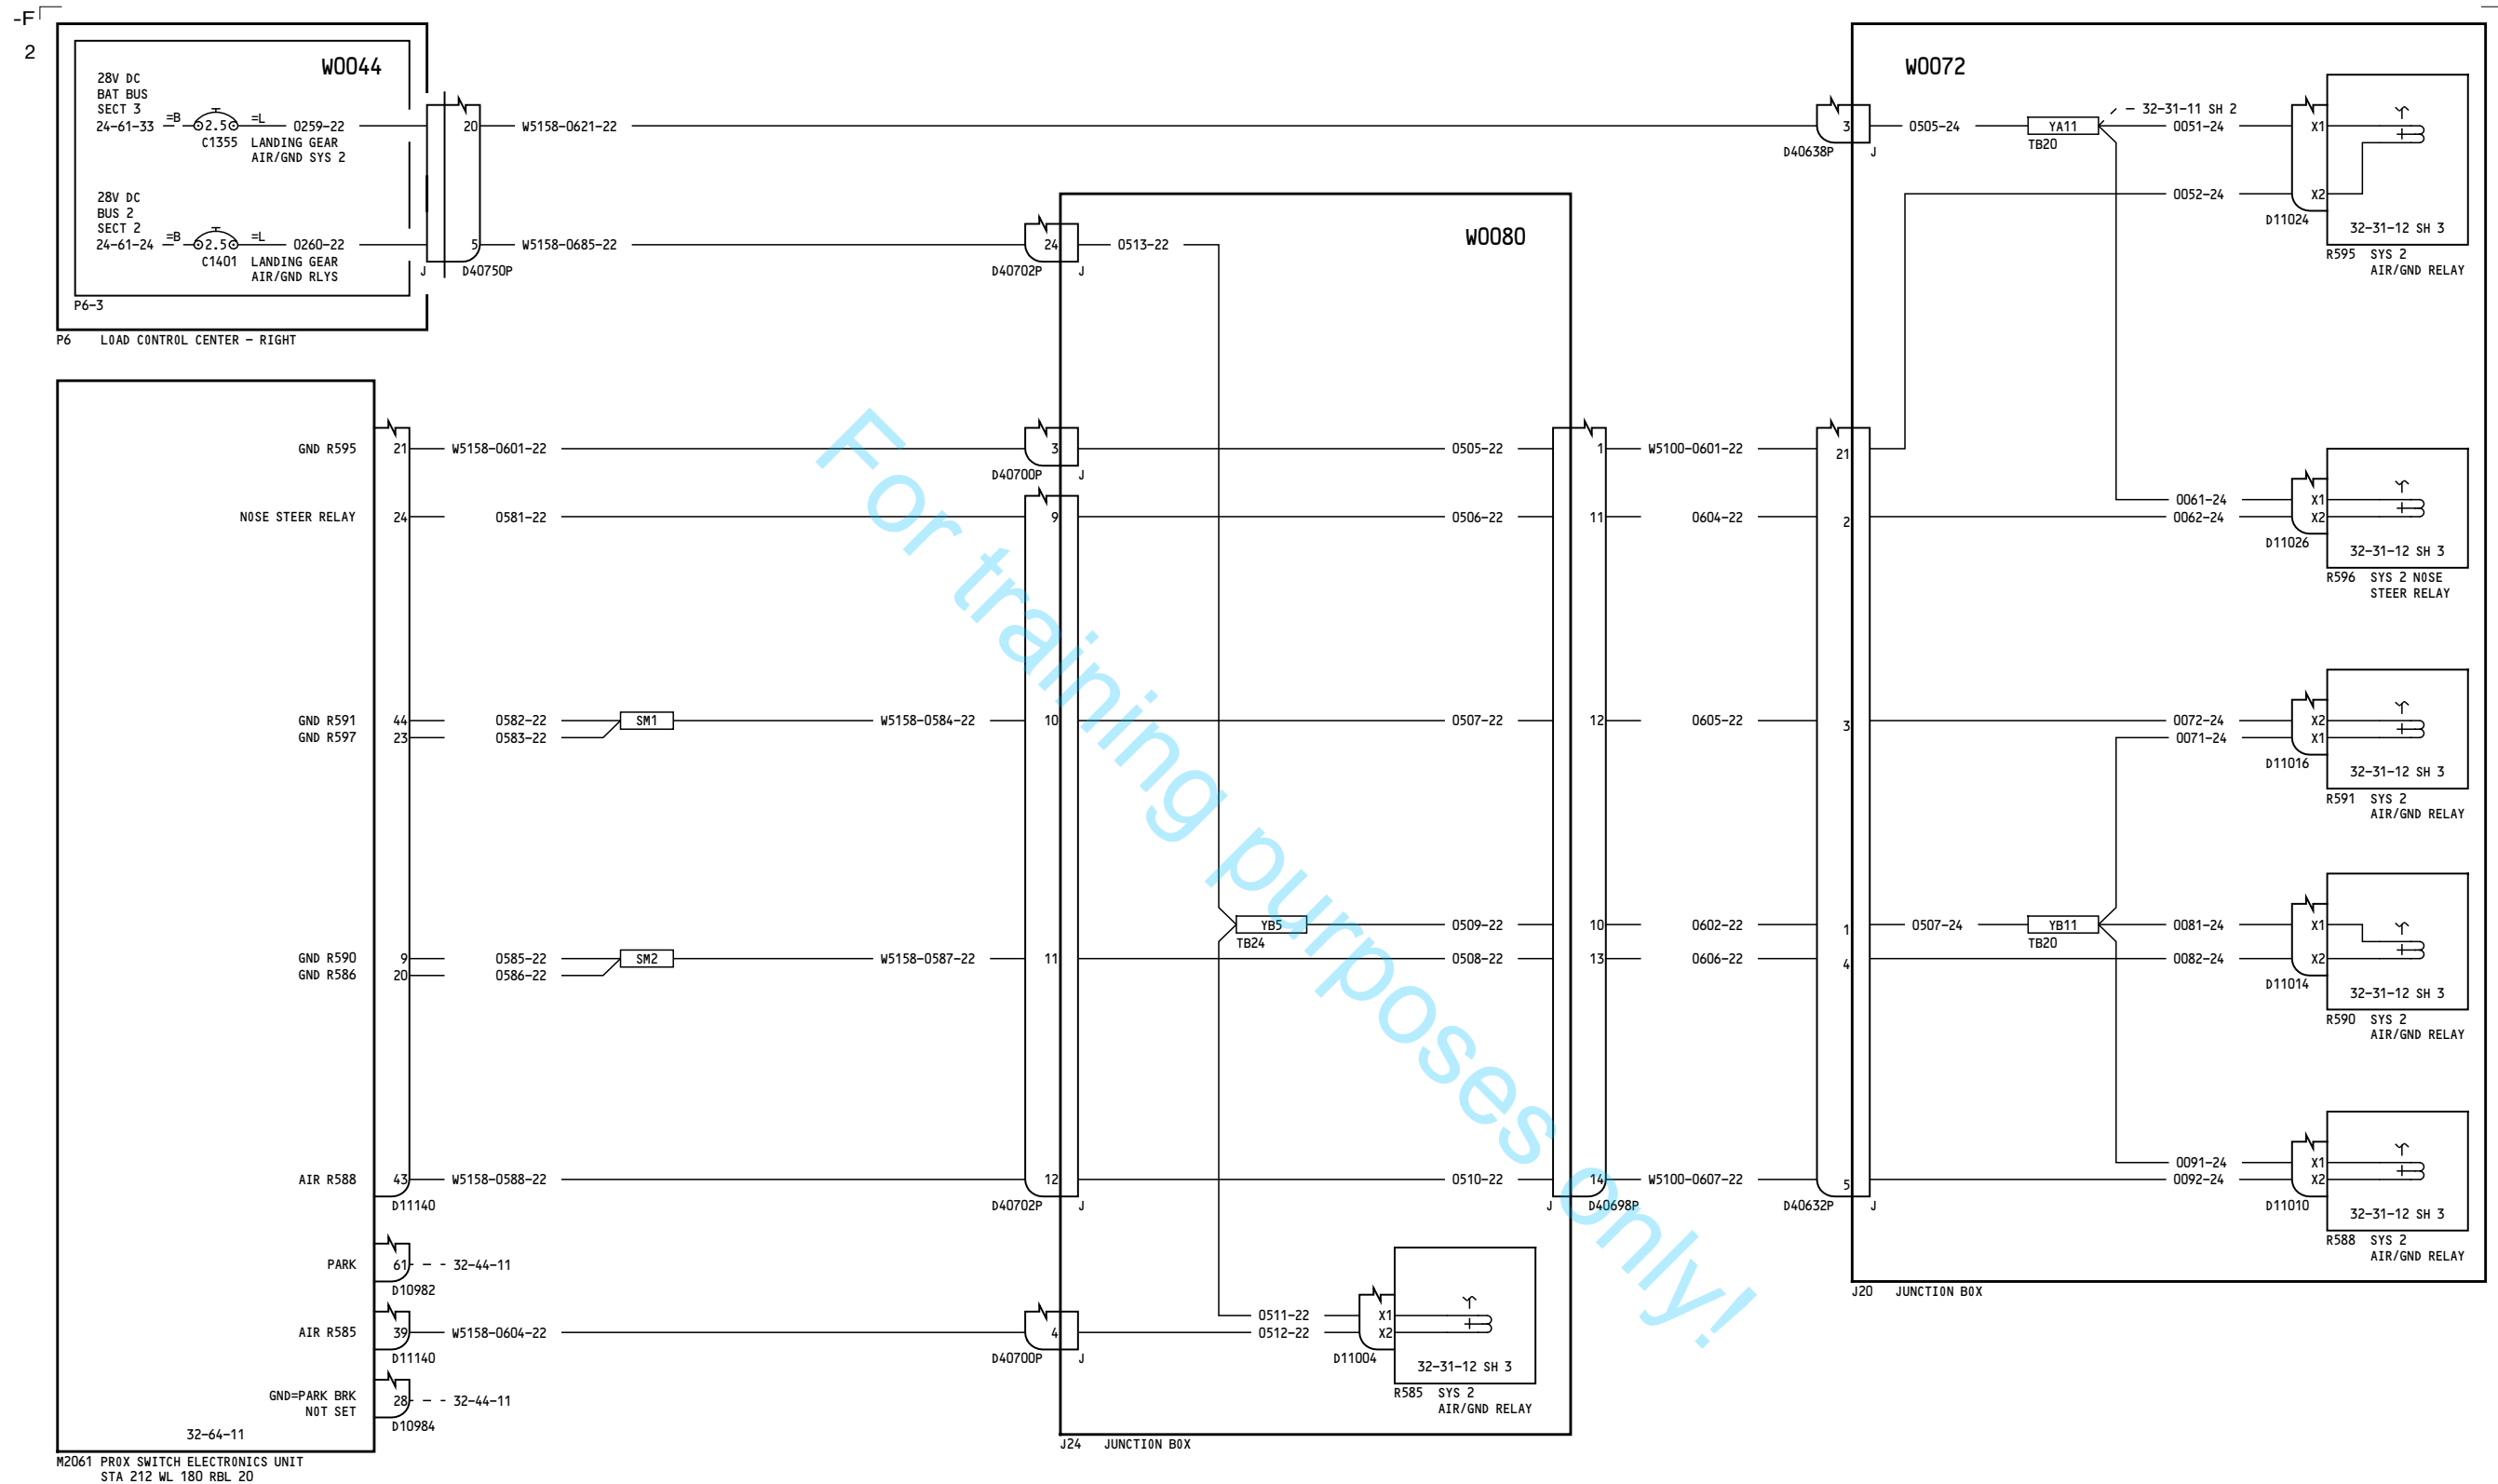

YL955

AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS

D280A108


32-31-12

Page 6  
Sheet 2  
Aug 03/2009



32-31-12

Page 6  
Sheet 2  
Aug 03/2009

100

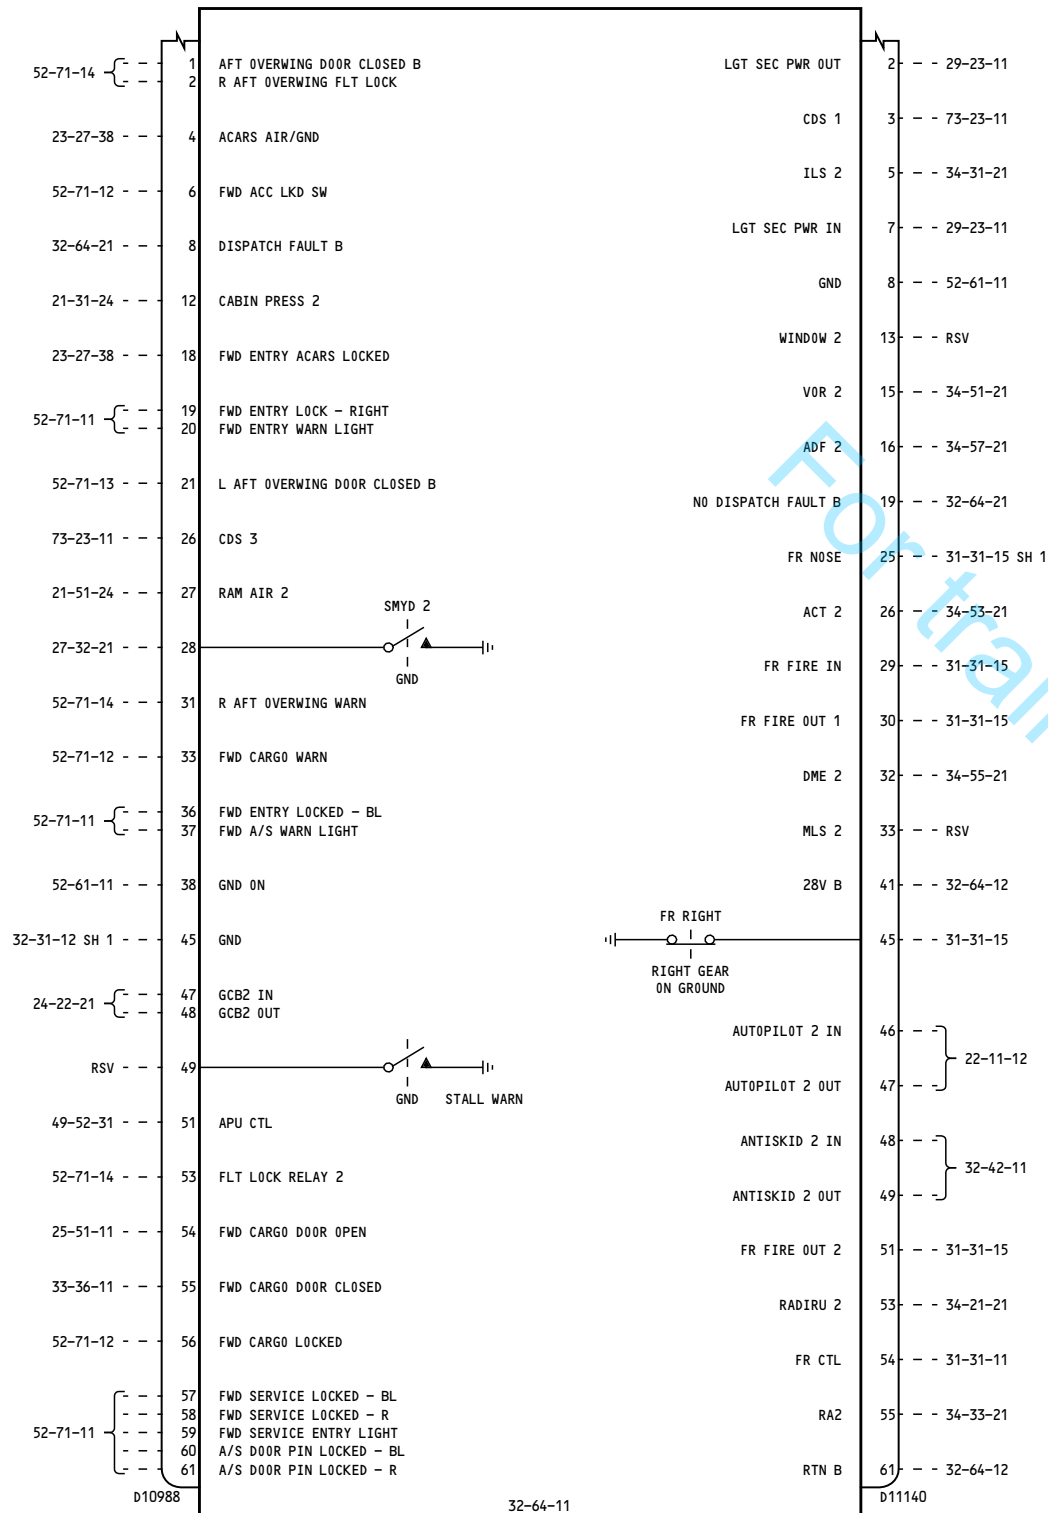

**NOTES:**  
M2061 PROX SWITCH ELECTRONICS UNIT  
STA 212 WL 180 RBL 20  
THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

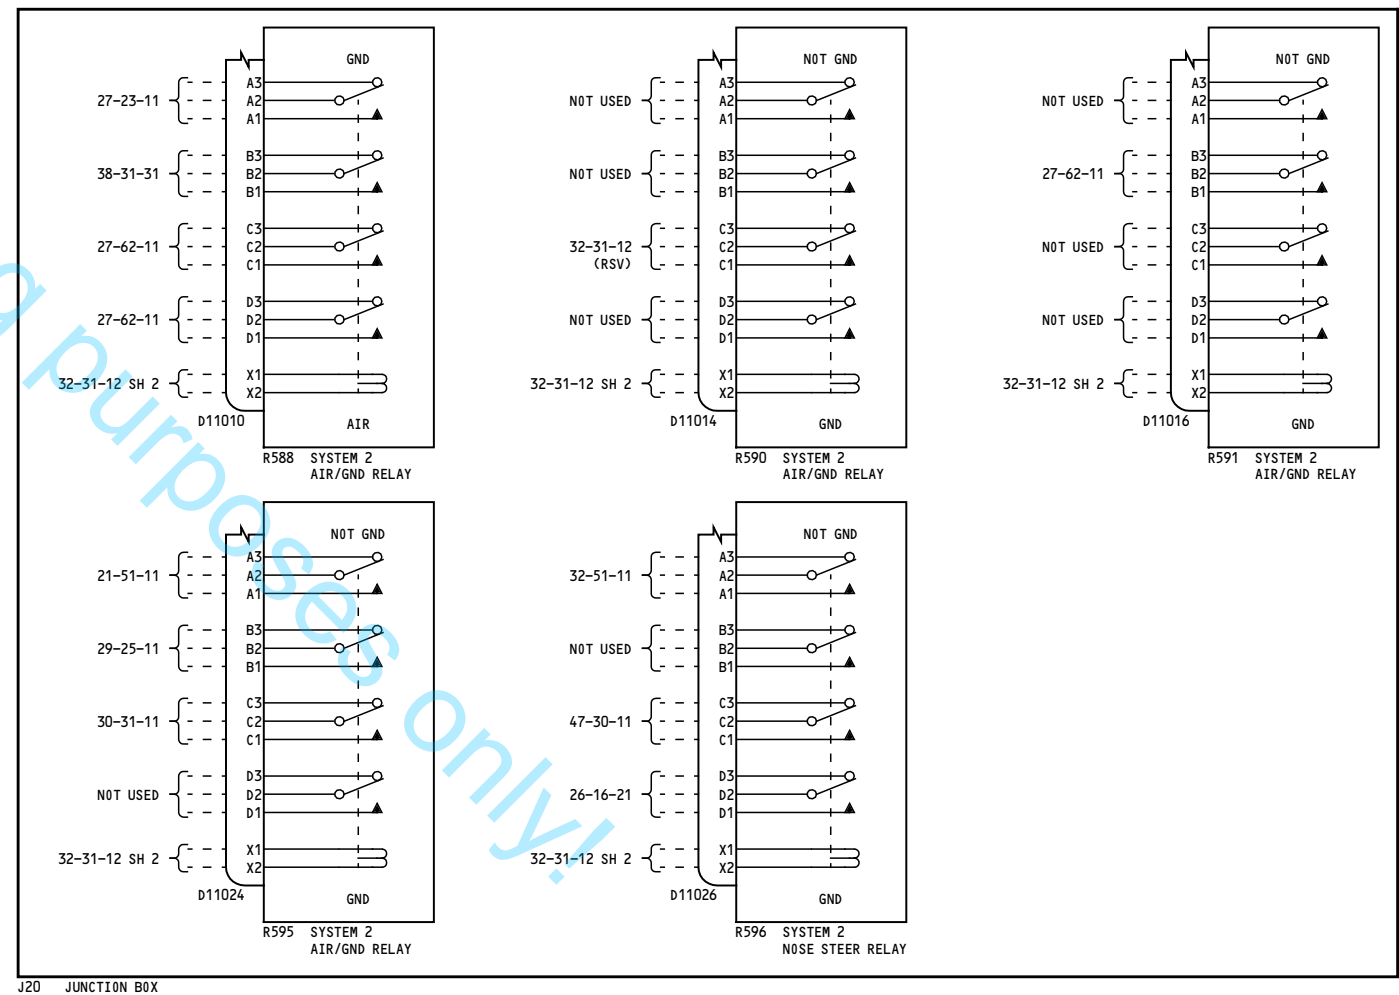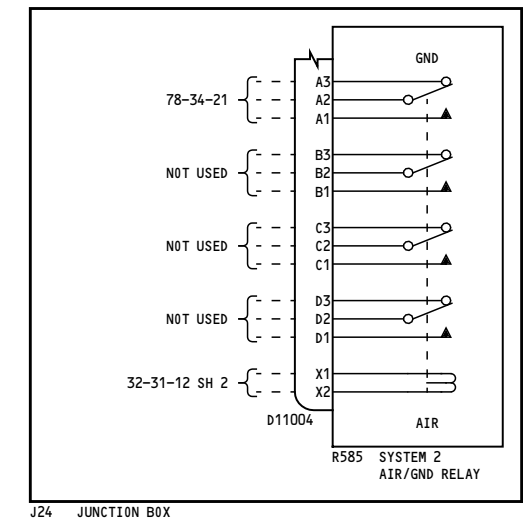

YL955

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**

D280A108


**32-31-12**

Page 6  
Sheet 3  
Aug 03/2009

**32-31-12**

Page 6  
Sheet 3  
Aug 03/2009



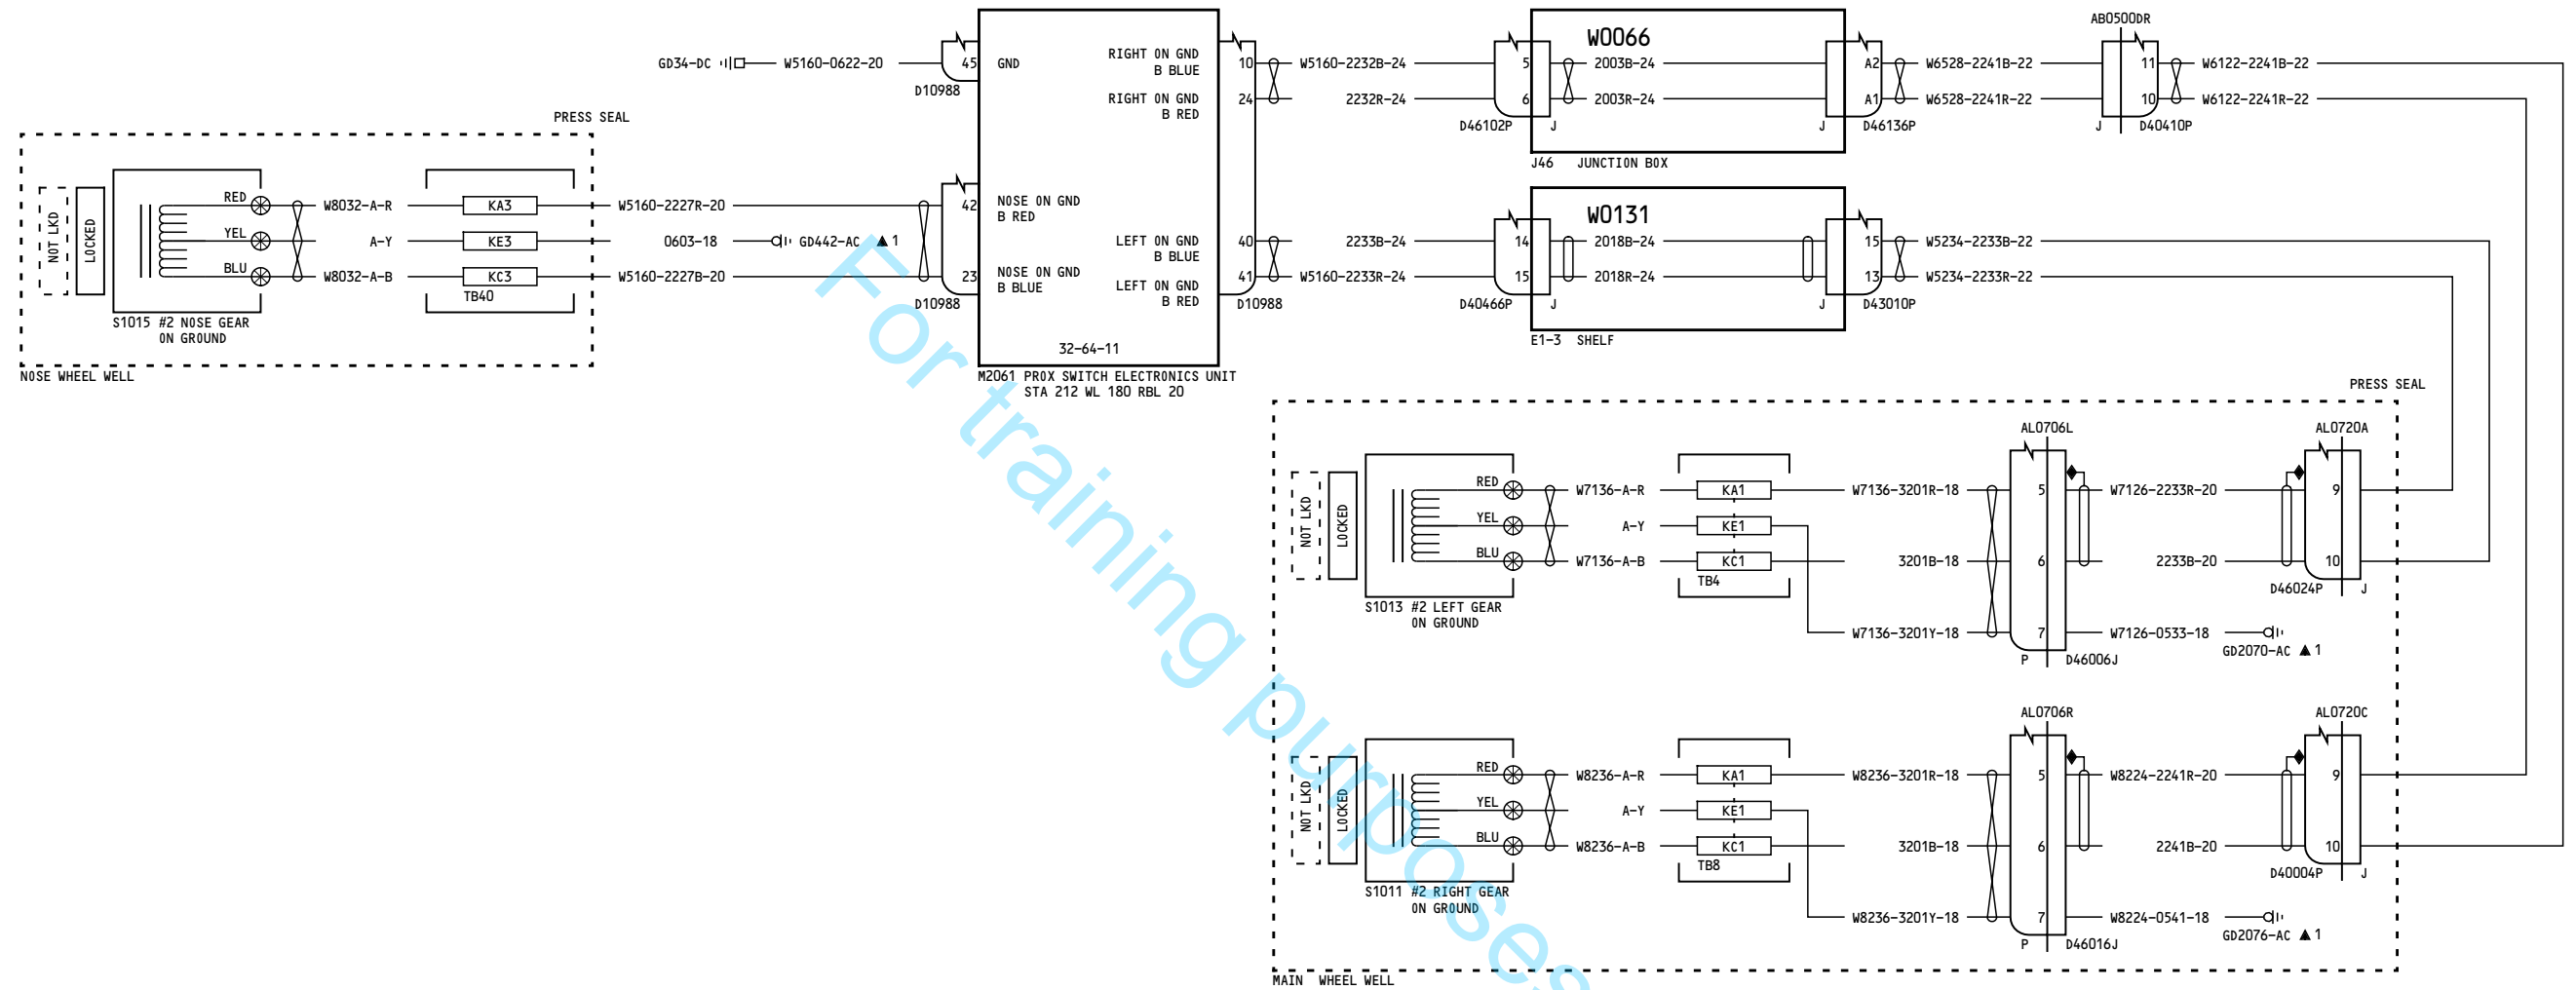

YL956-YL999

AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS


D280A108

32-31-12

Page 7  
Sheet 1  
Feb 01/2010

32-31-12

Page 7  
Sheet 1  
Feb 01/2010

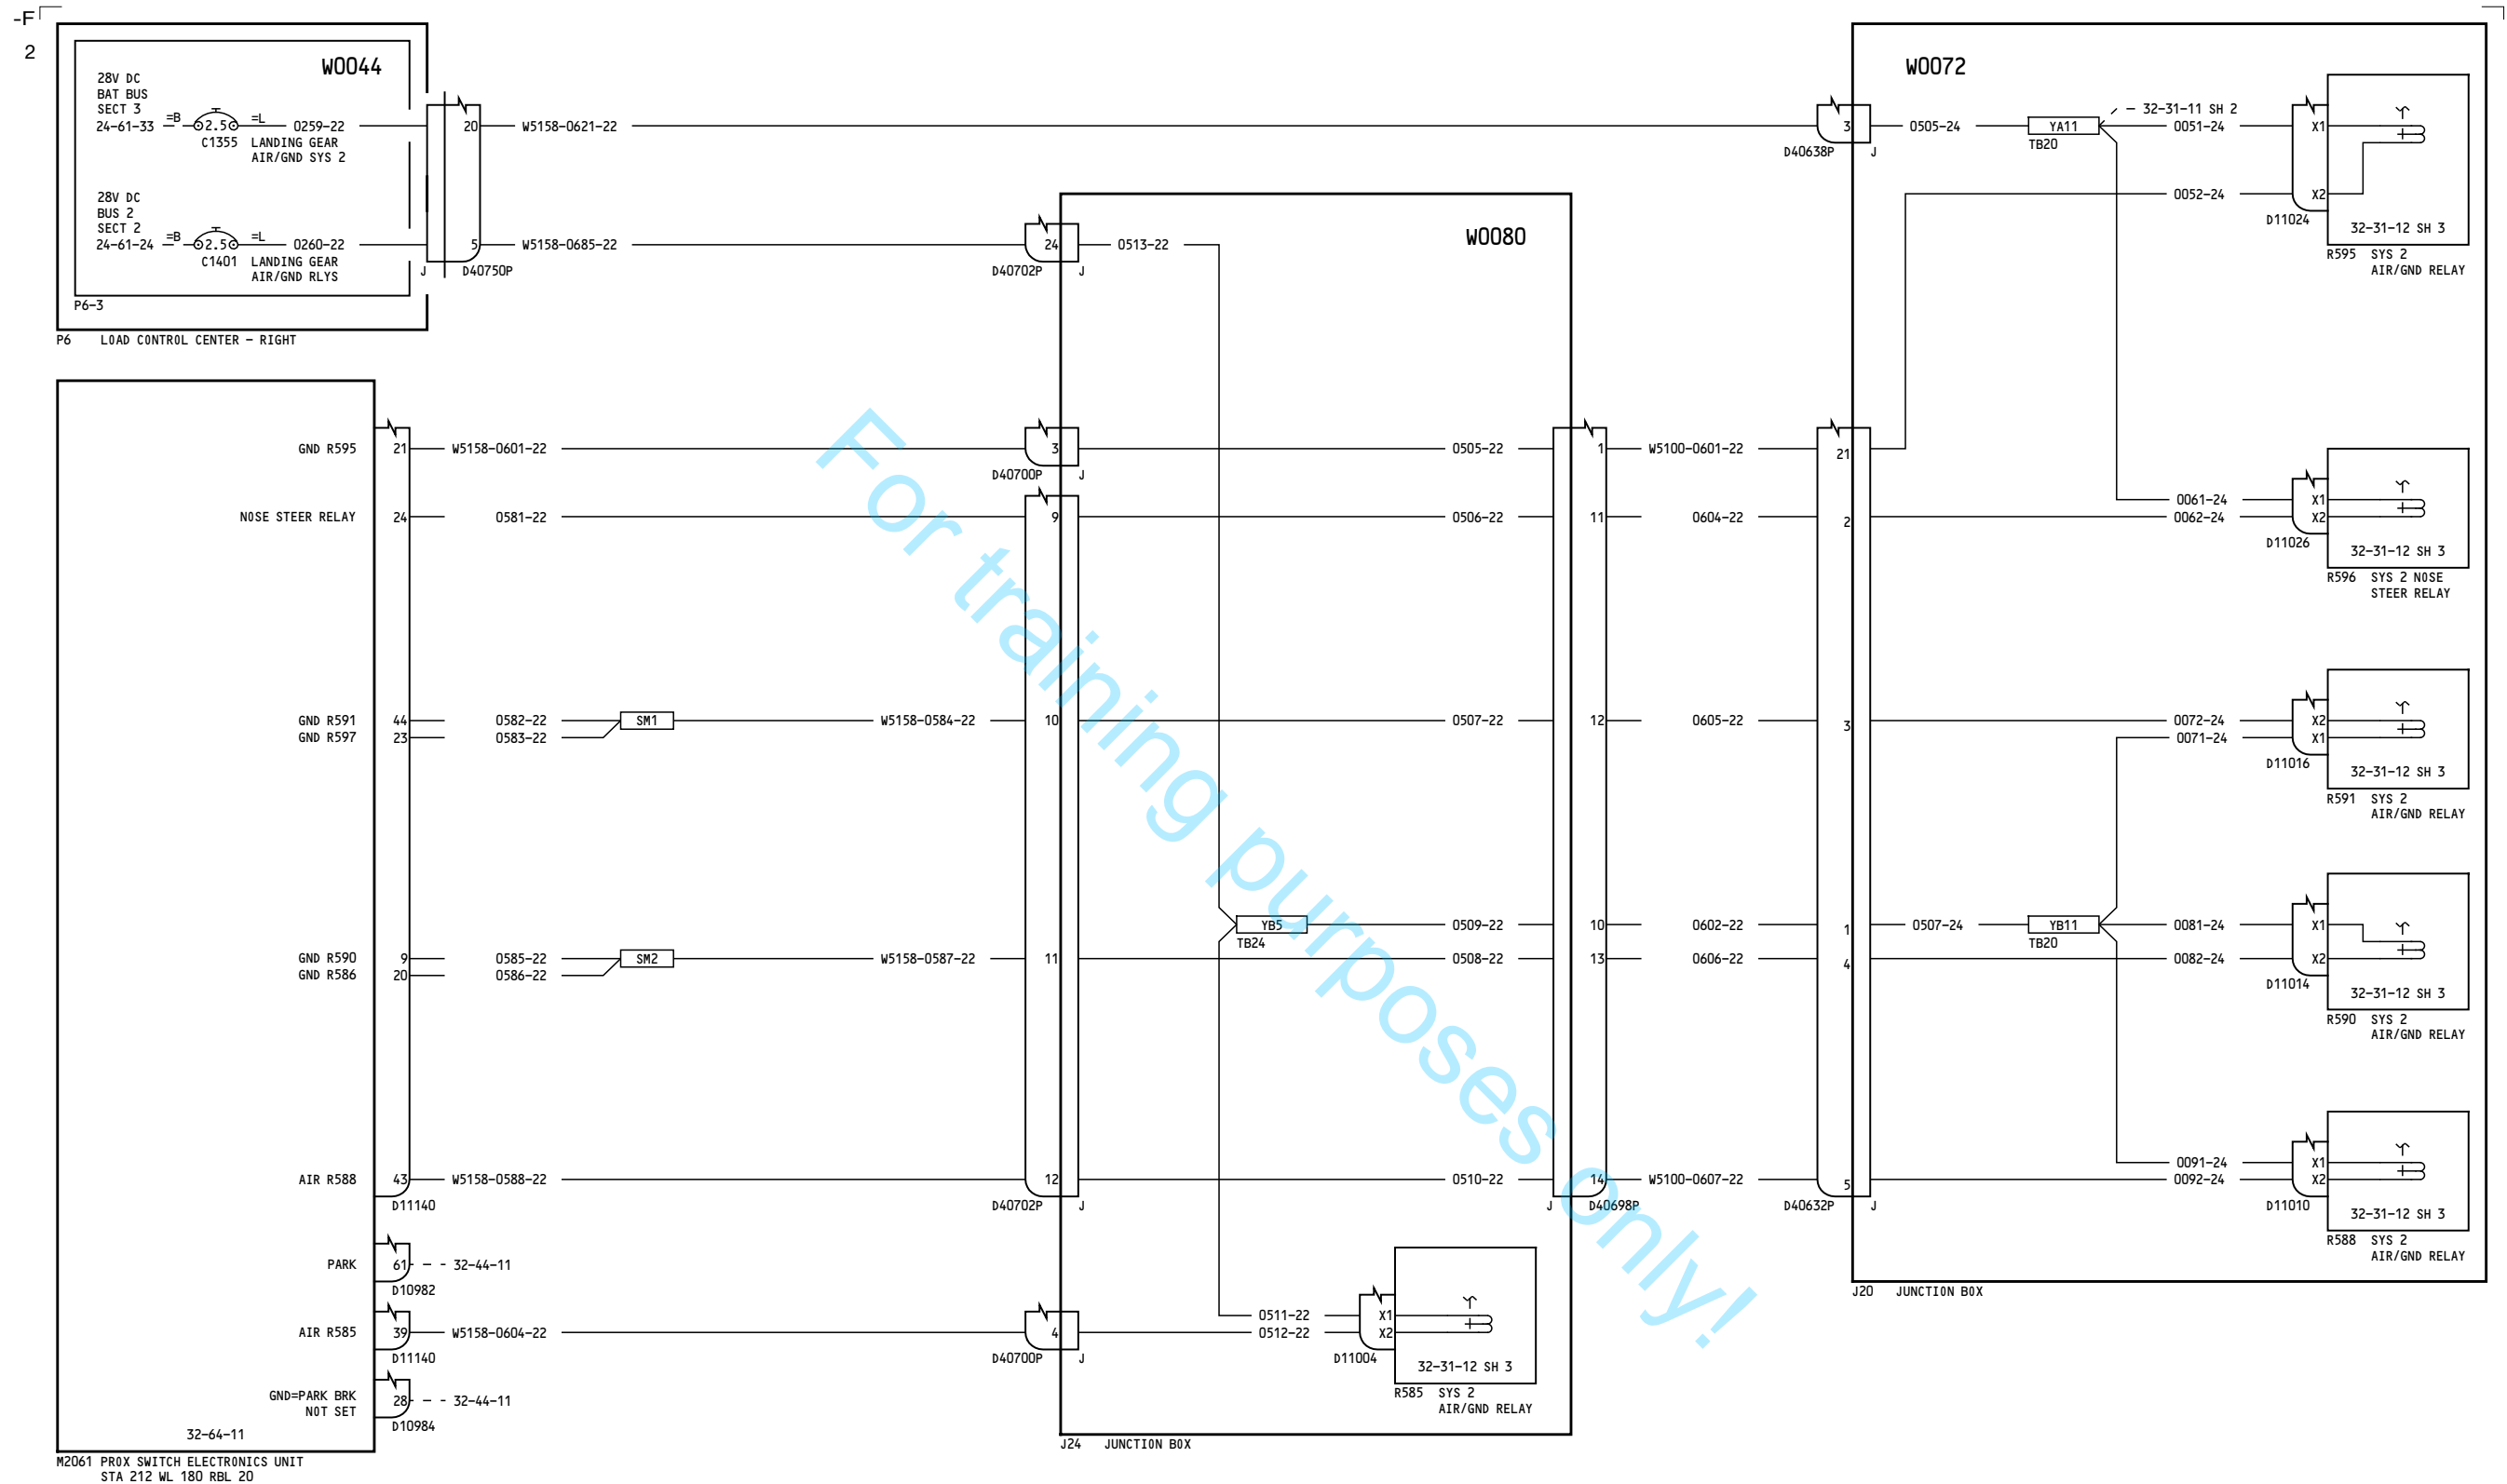

YL956-YL999

AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS


D280A108

32-31-12



Page 7  
Sheet 2  
Feb 01/2010


32-31-12

Page 7  
Sheet 2  
Feb 01/2010

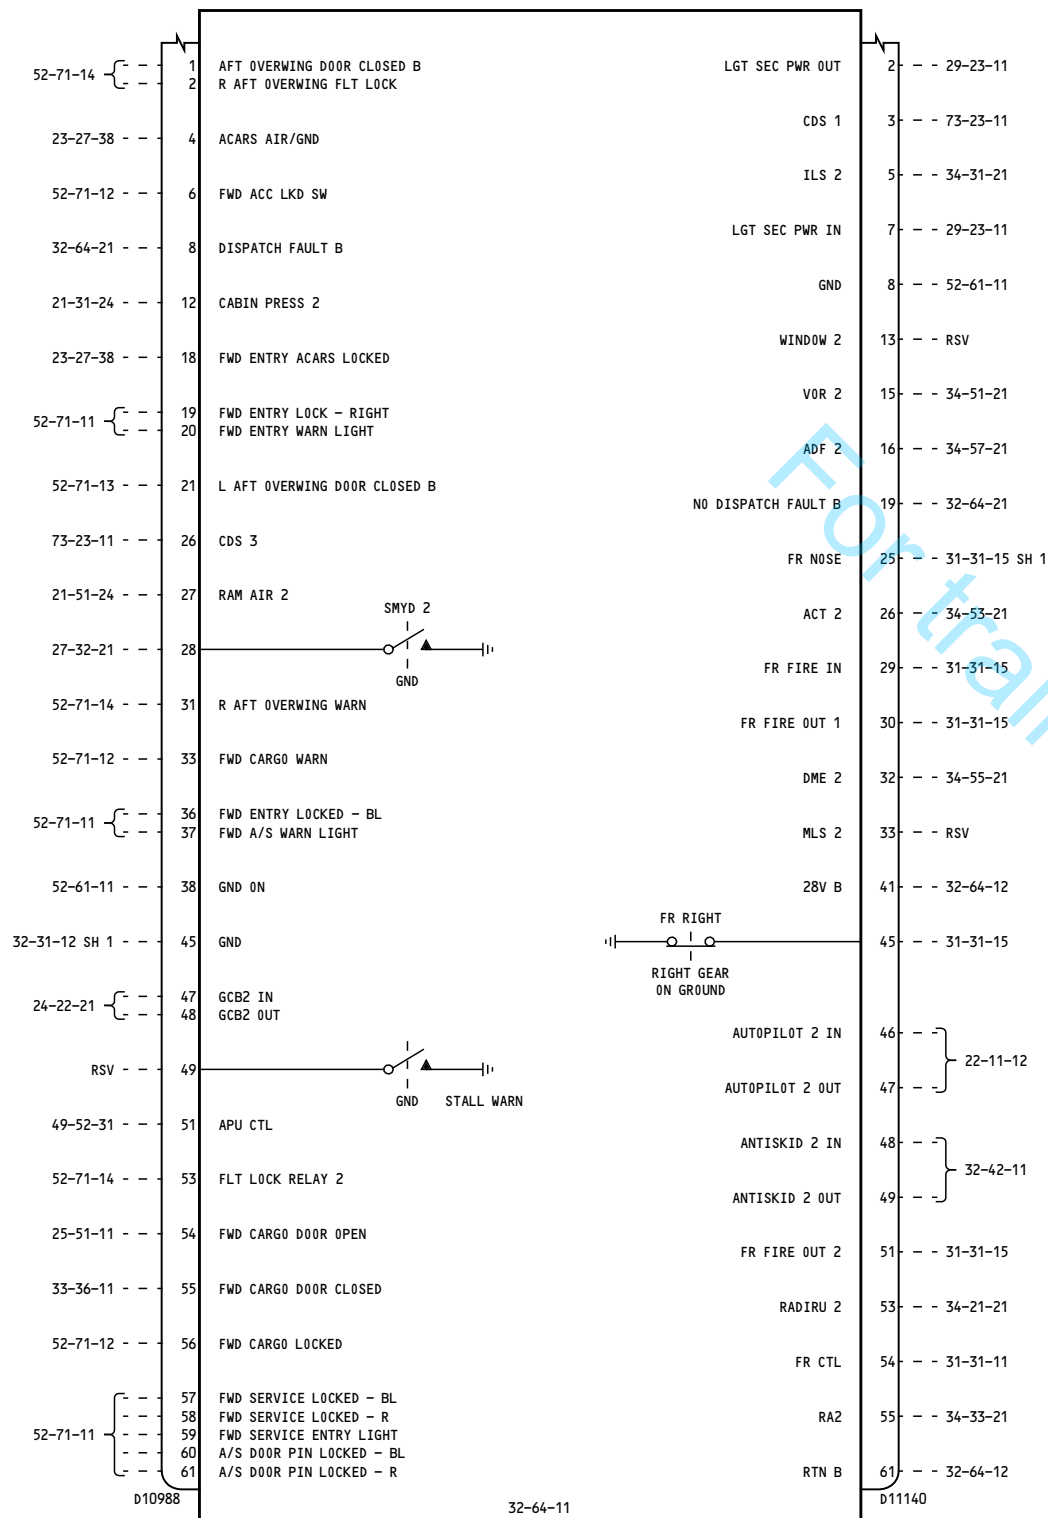

NOTES:  
M2061 PROX SWITCH ELECTRONICS UNIT  
STA 212 WL 180 RBL 20  
THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

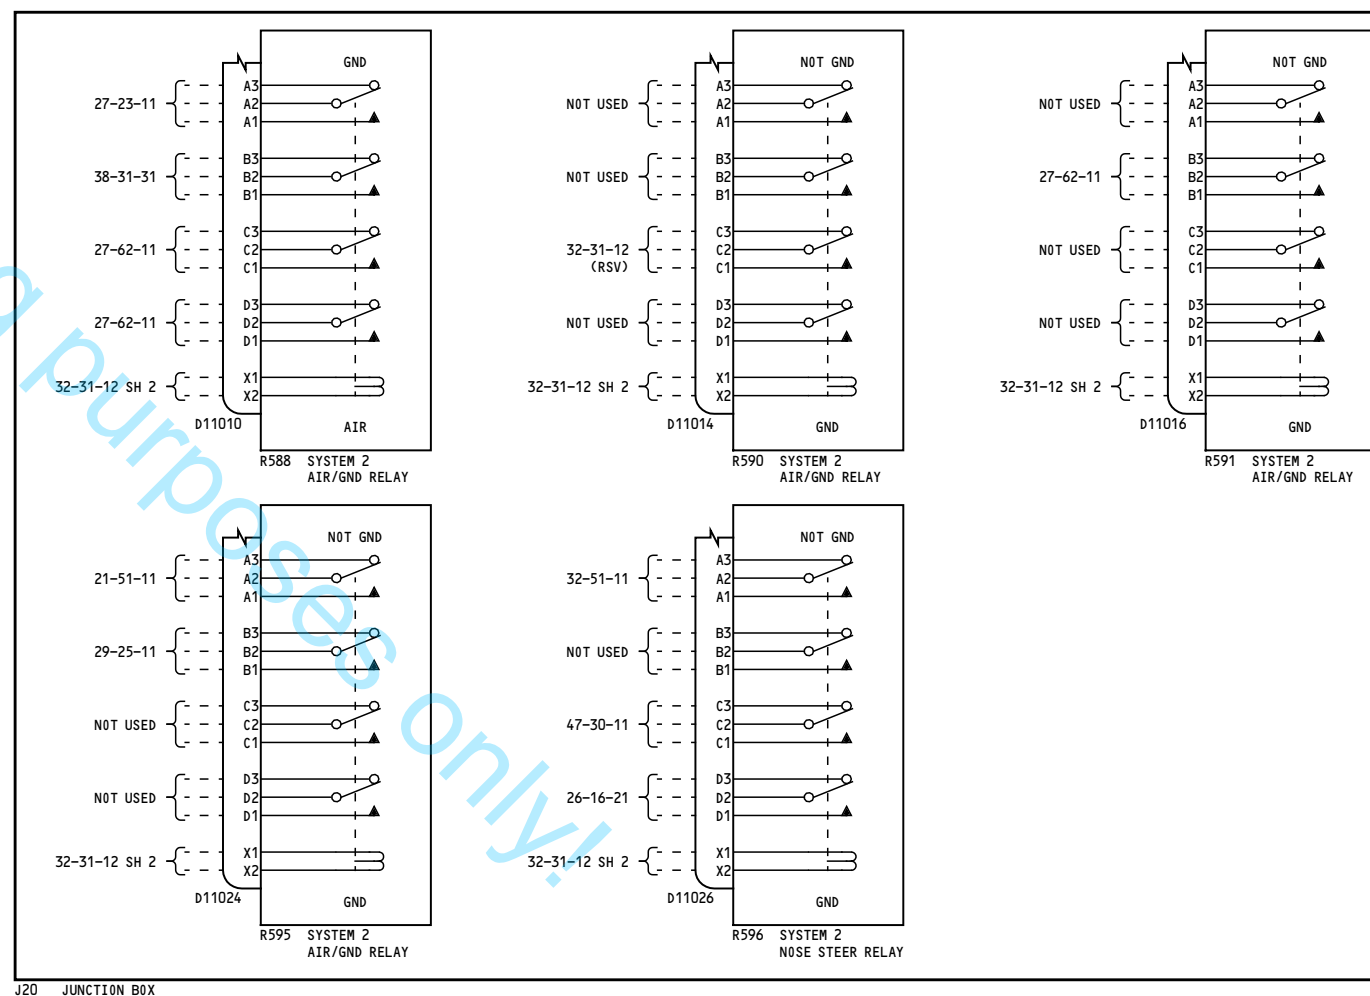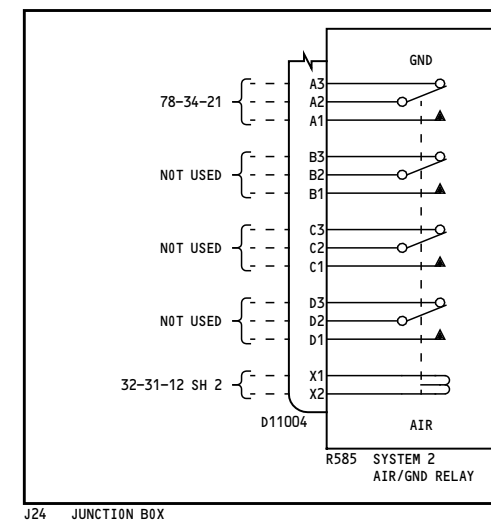

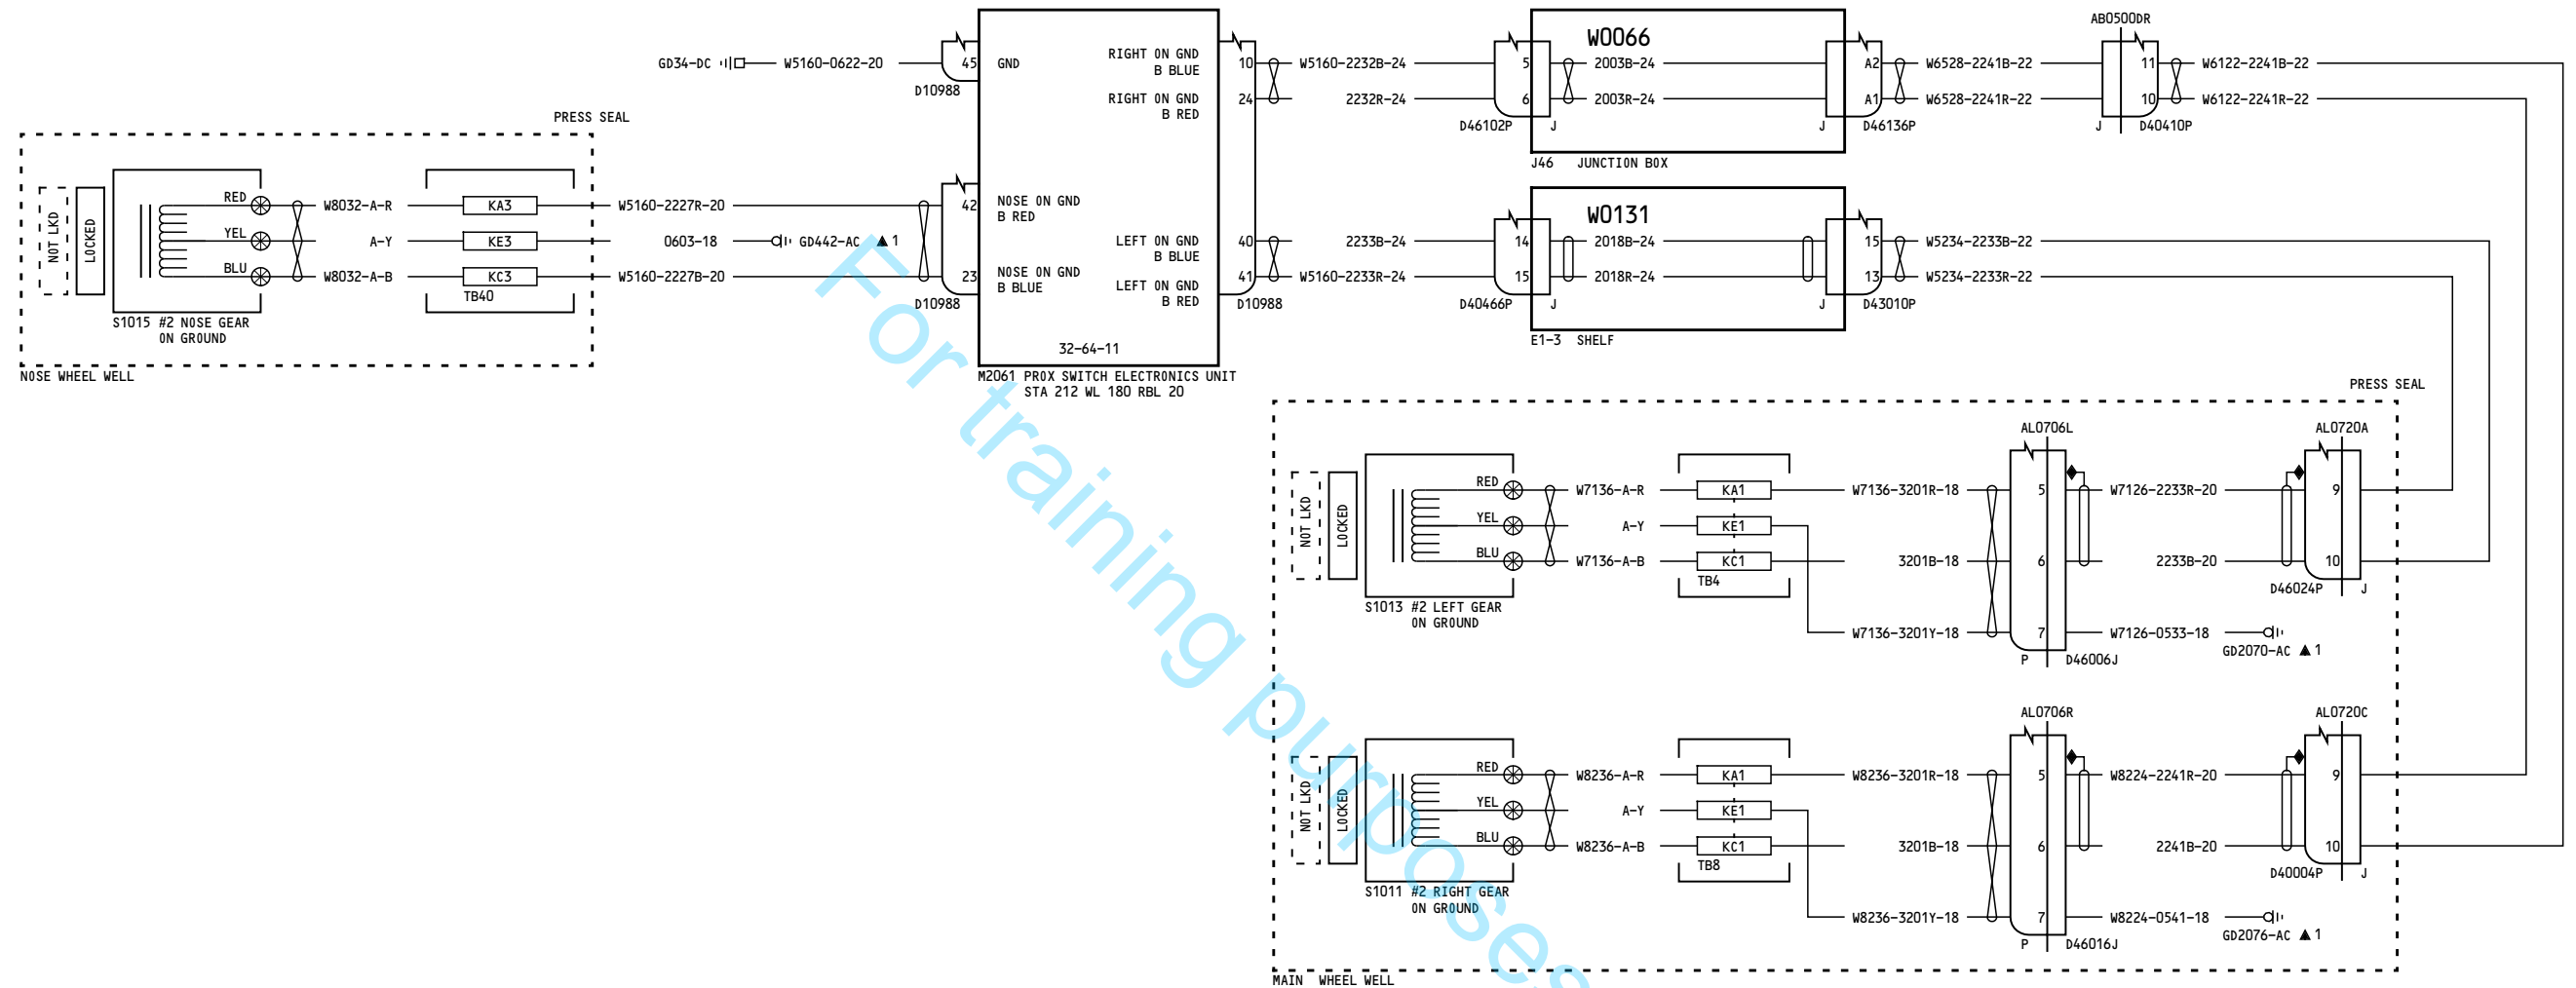

YN231-YN235

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**


D280A108

**32-31-12**

Page 8  
Sheet 1  
Aug 03/2009

**32-31-12**

 Page 8  
Sheet 1  
Aug 03/2009




## D280A108



Page 8  
Sheet 2  
Aug 03/2009

Page 8  
Sheet 2  
Aug 03/2009

-B  
15

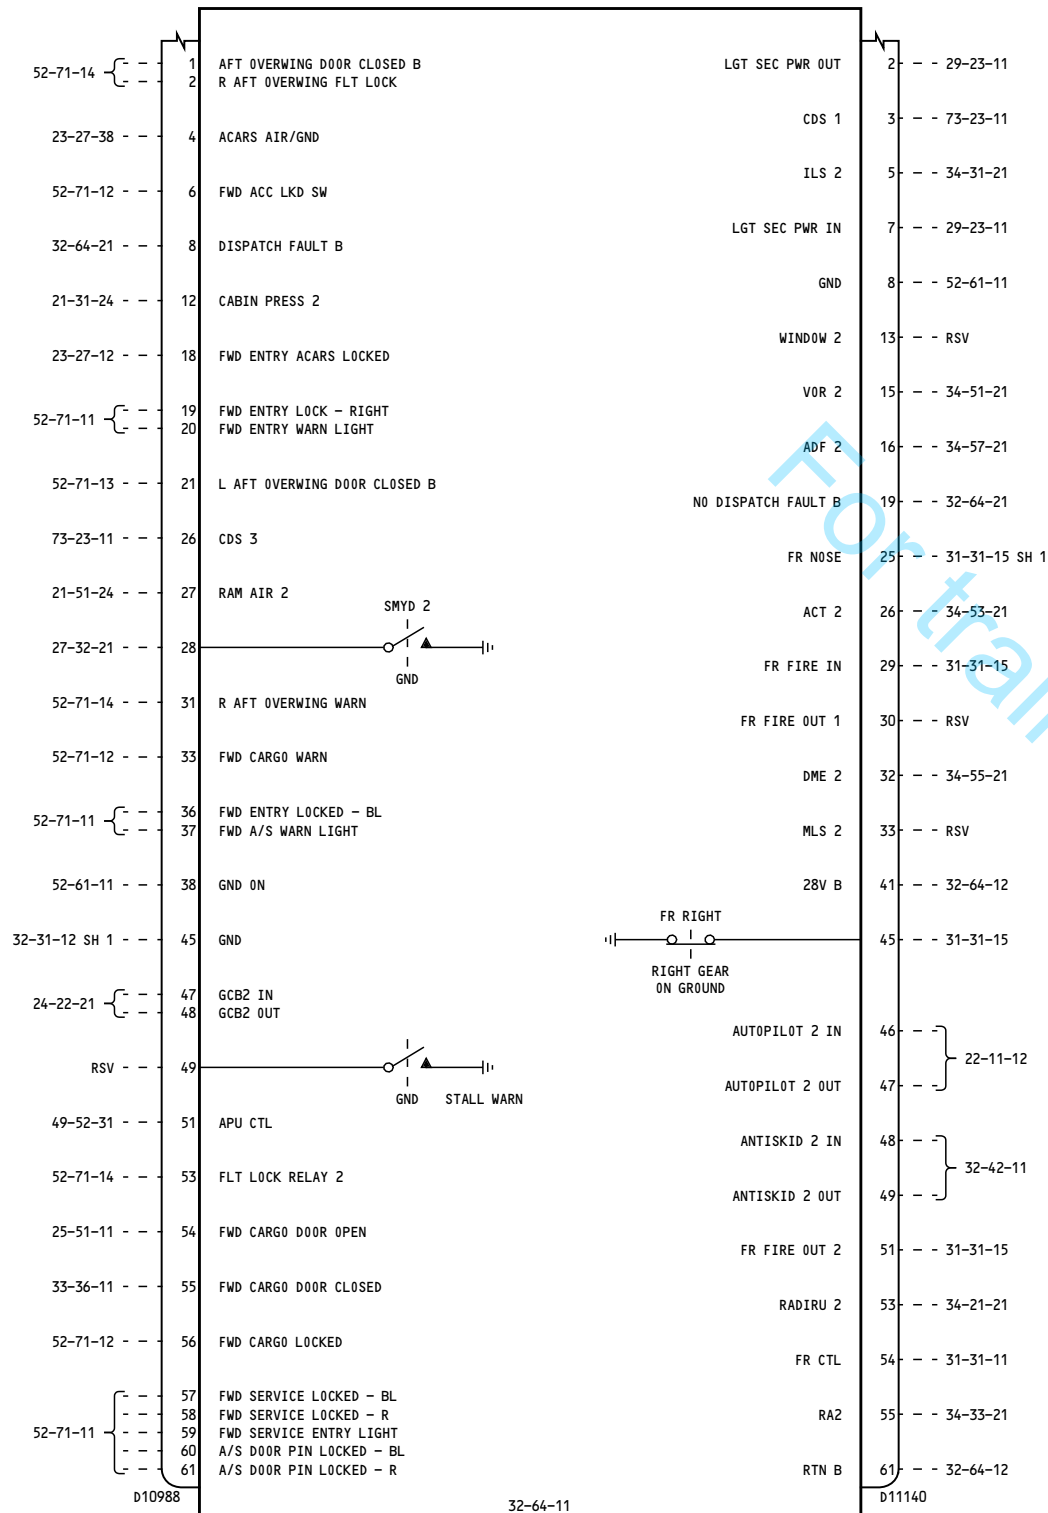

**NOTES:**  
M2061 PROX SWITCH ELECTRONICS UNIT  
STA 212 WL 180 RBL 20  
THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

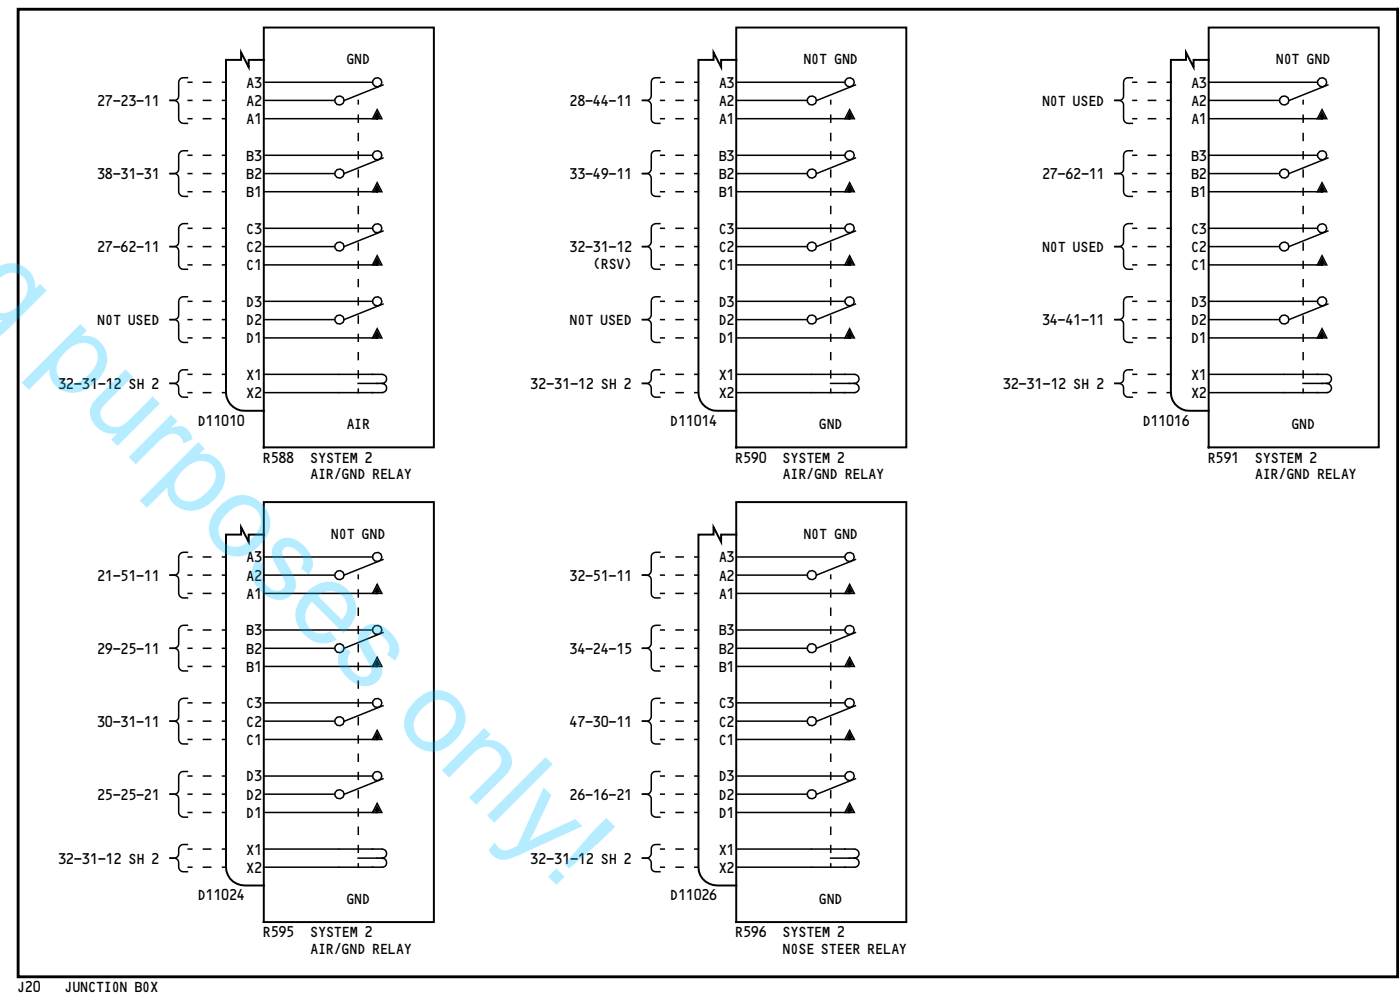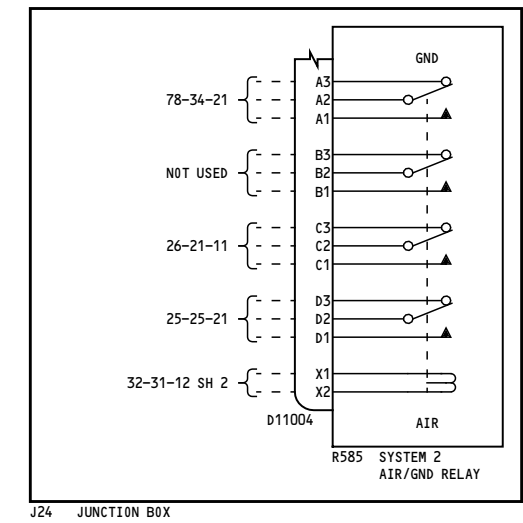

YN231-YN235

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**


D280A108

**32-31-12**

Page 8  
Sheet 3  
Aug 03/2009

**32-31-12**

Page 8  
Sheet 3  
Aug 03/2009

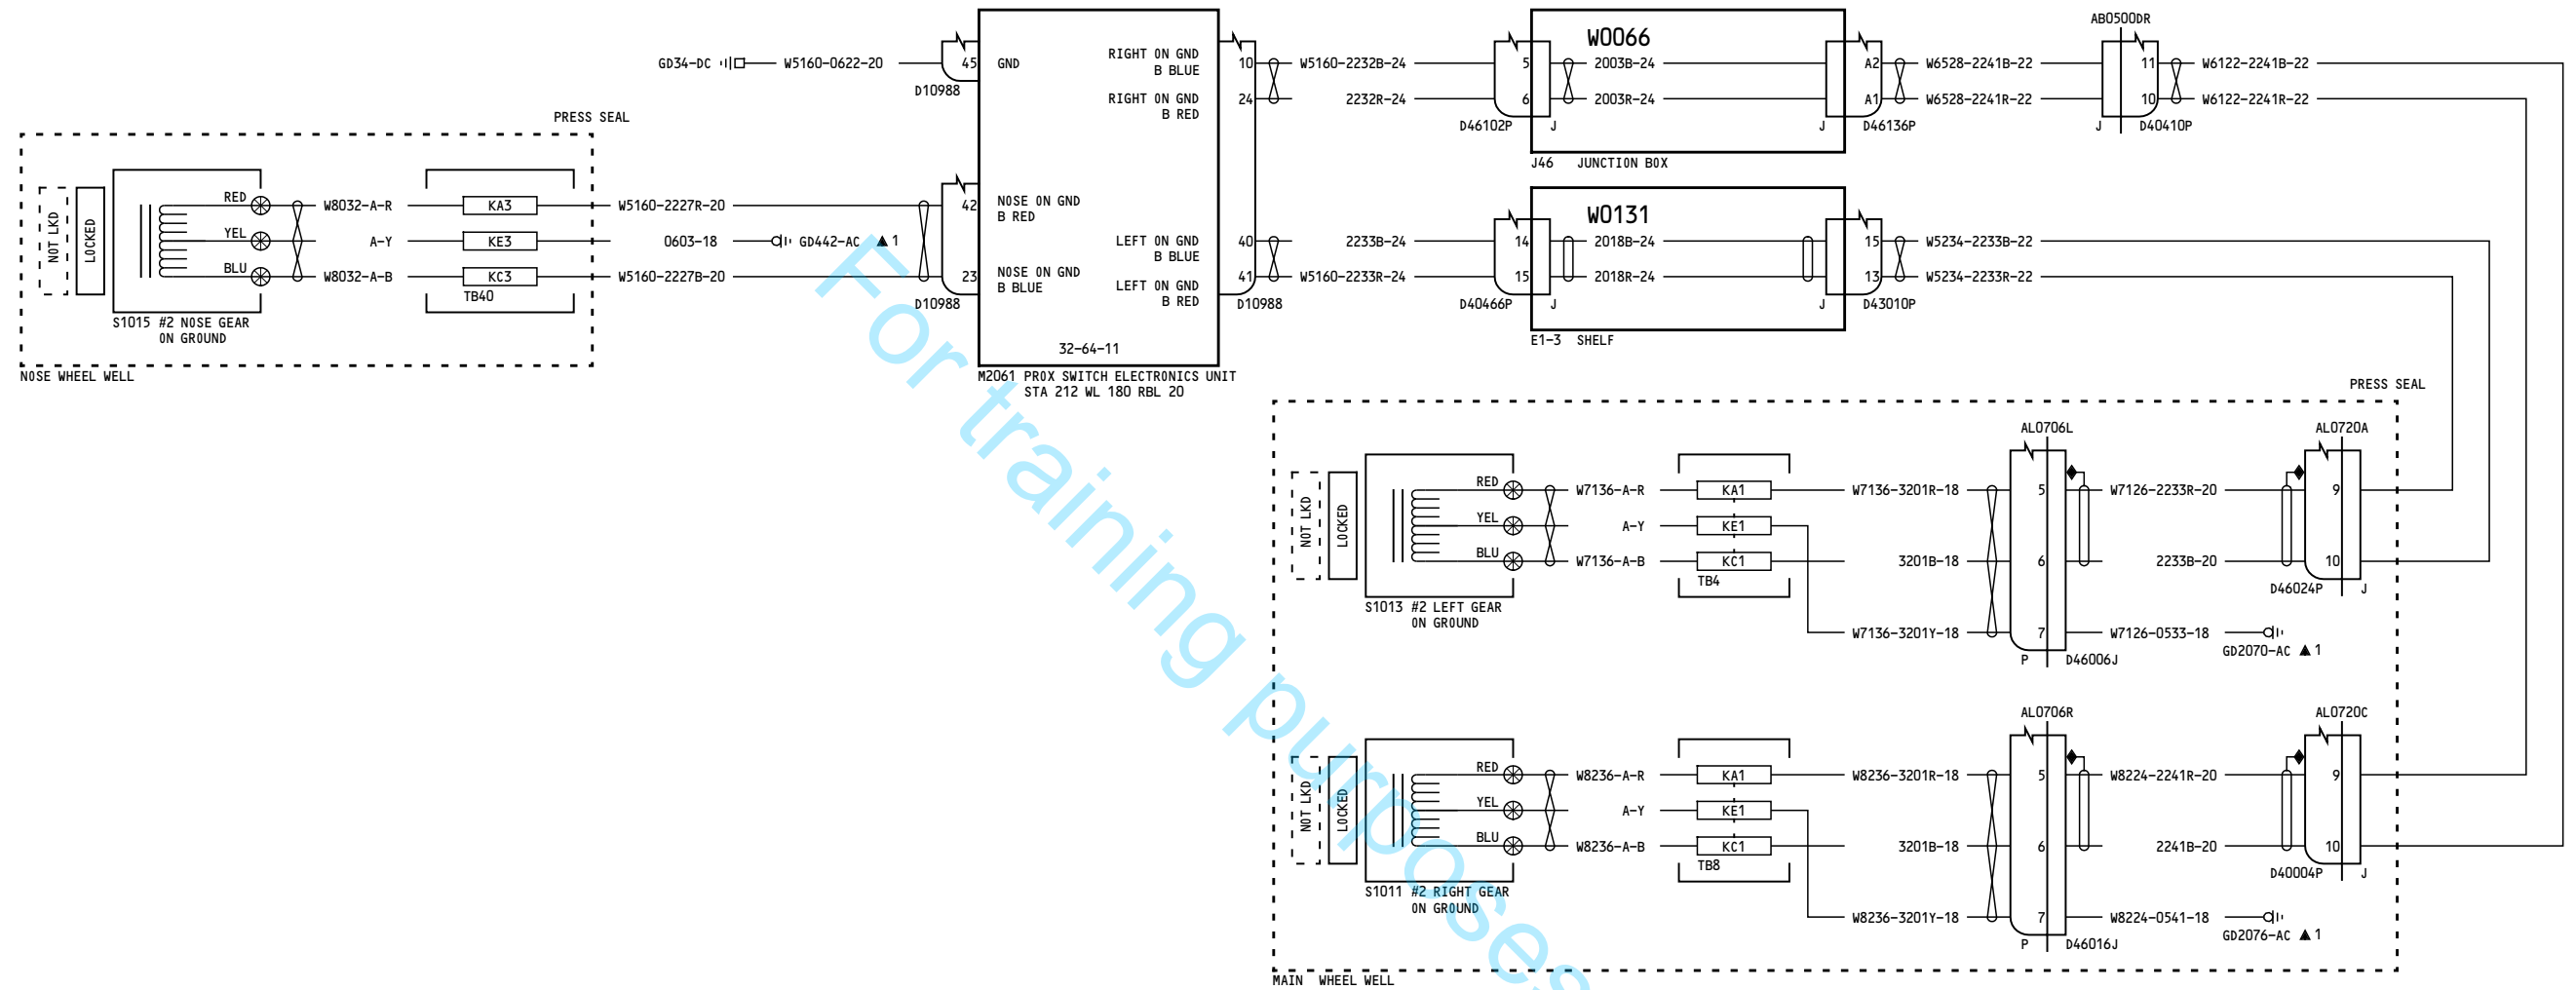

YN236-YN260

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**

D280A108

**32-31-12**


Page 9  
Sheet 1  
Dec 01/2010

**32-31-12**



Page 9  
Sheet 1  
Dec 01/2010





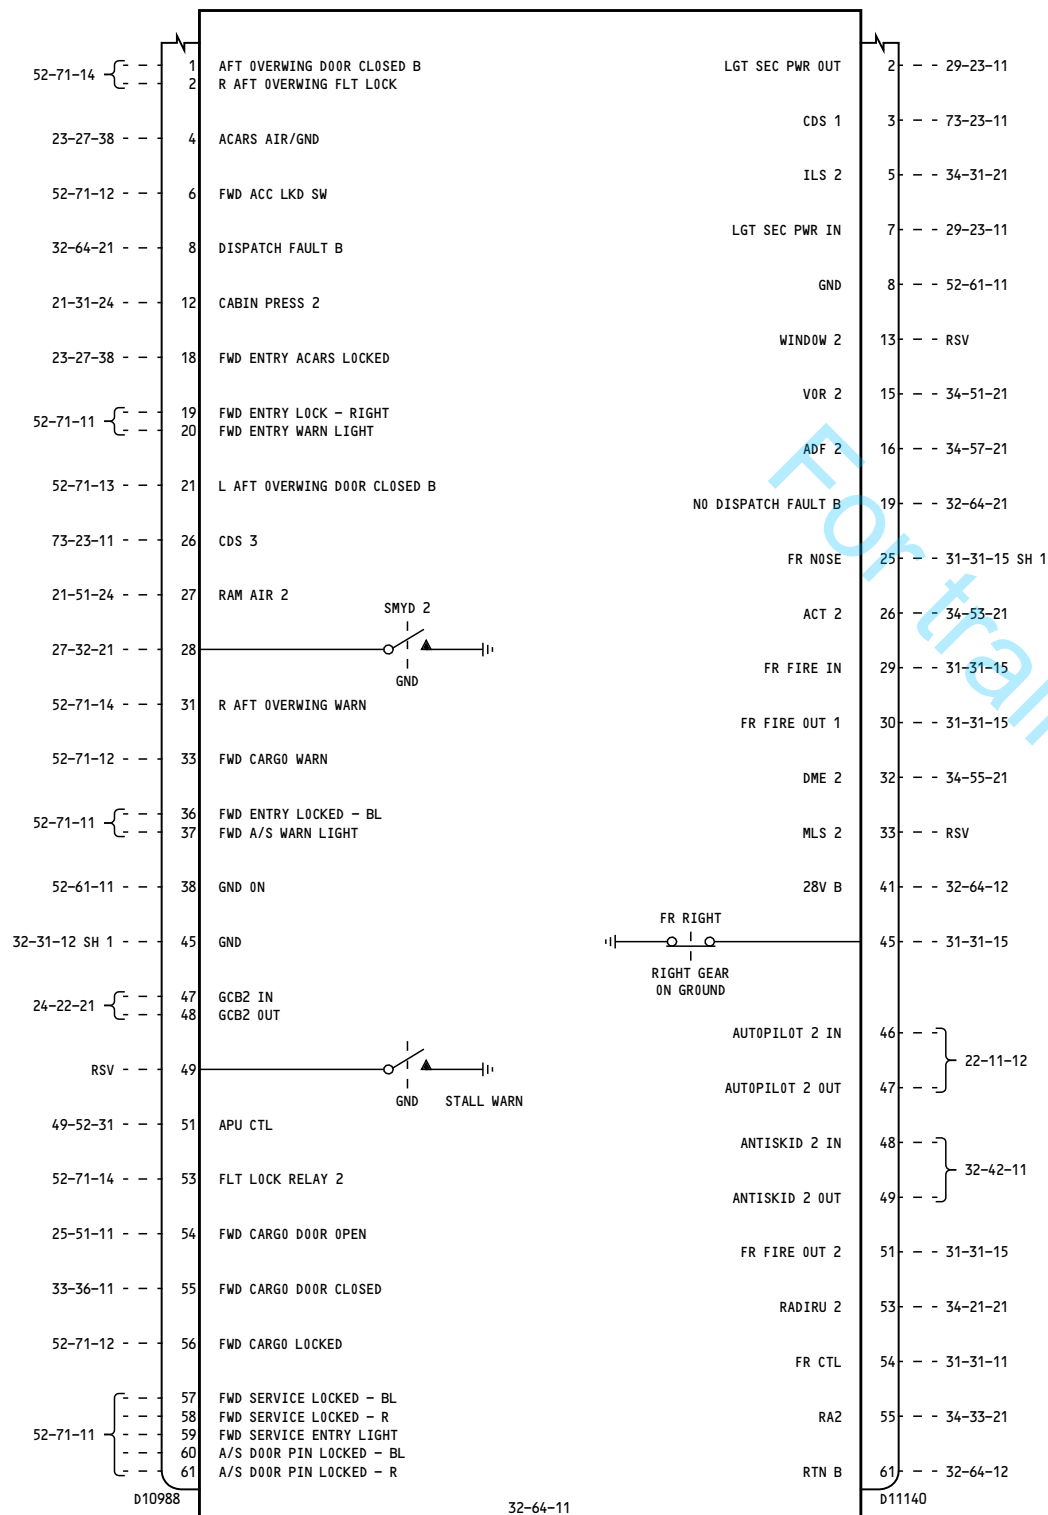

**NOTES:**  
M2061 PROX SWITCH ELECTRONICS UNIT  
STA 212 WL 180 RBL 20  
THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

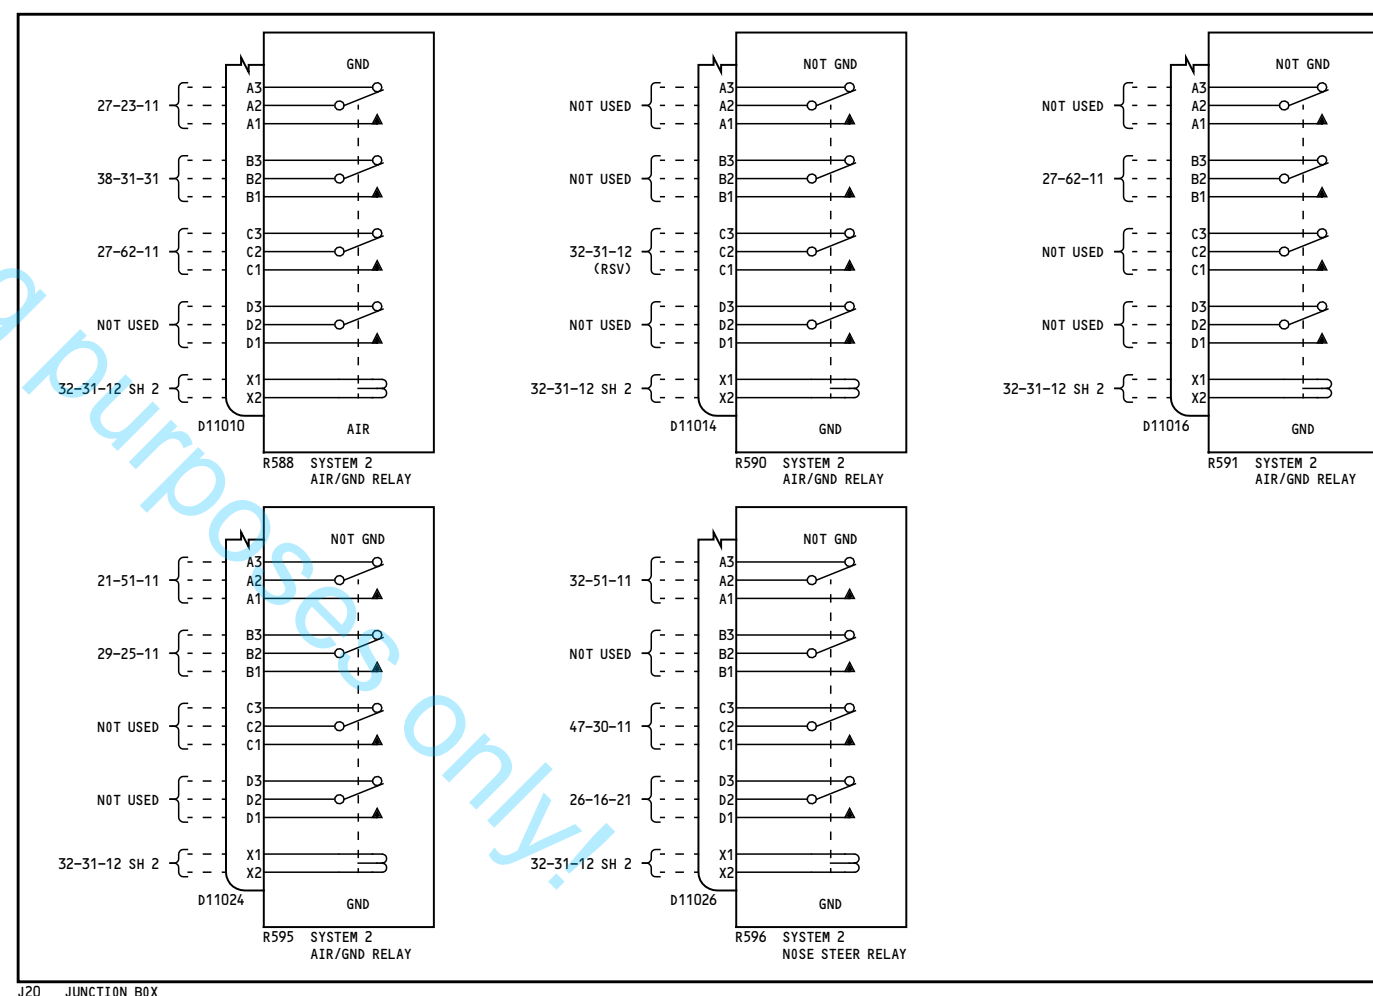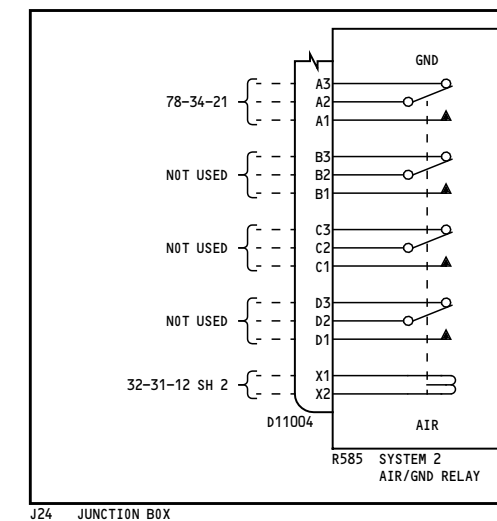

YN236-YN260

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**


D280A108

**32-31-12**

Page 9  
Sheet 3  
Dec 01/2010

**32-31-12**

Page 9  
Sheet 3  
Dec 01/2010

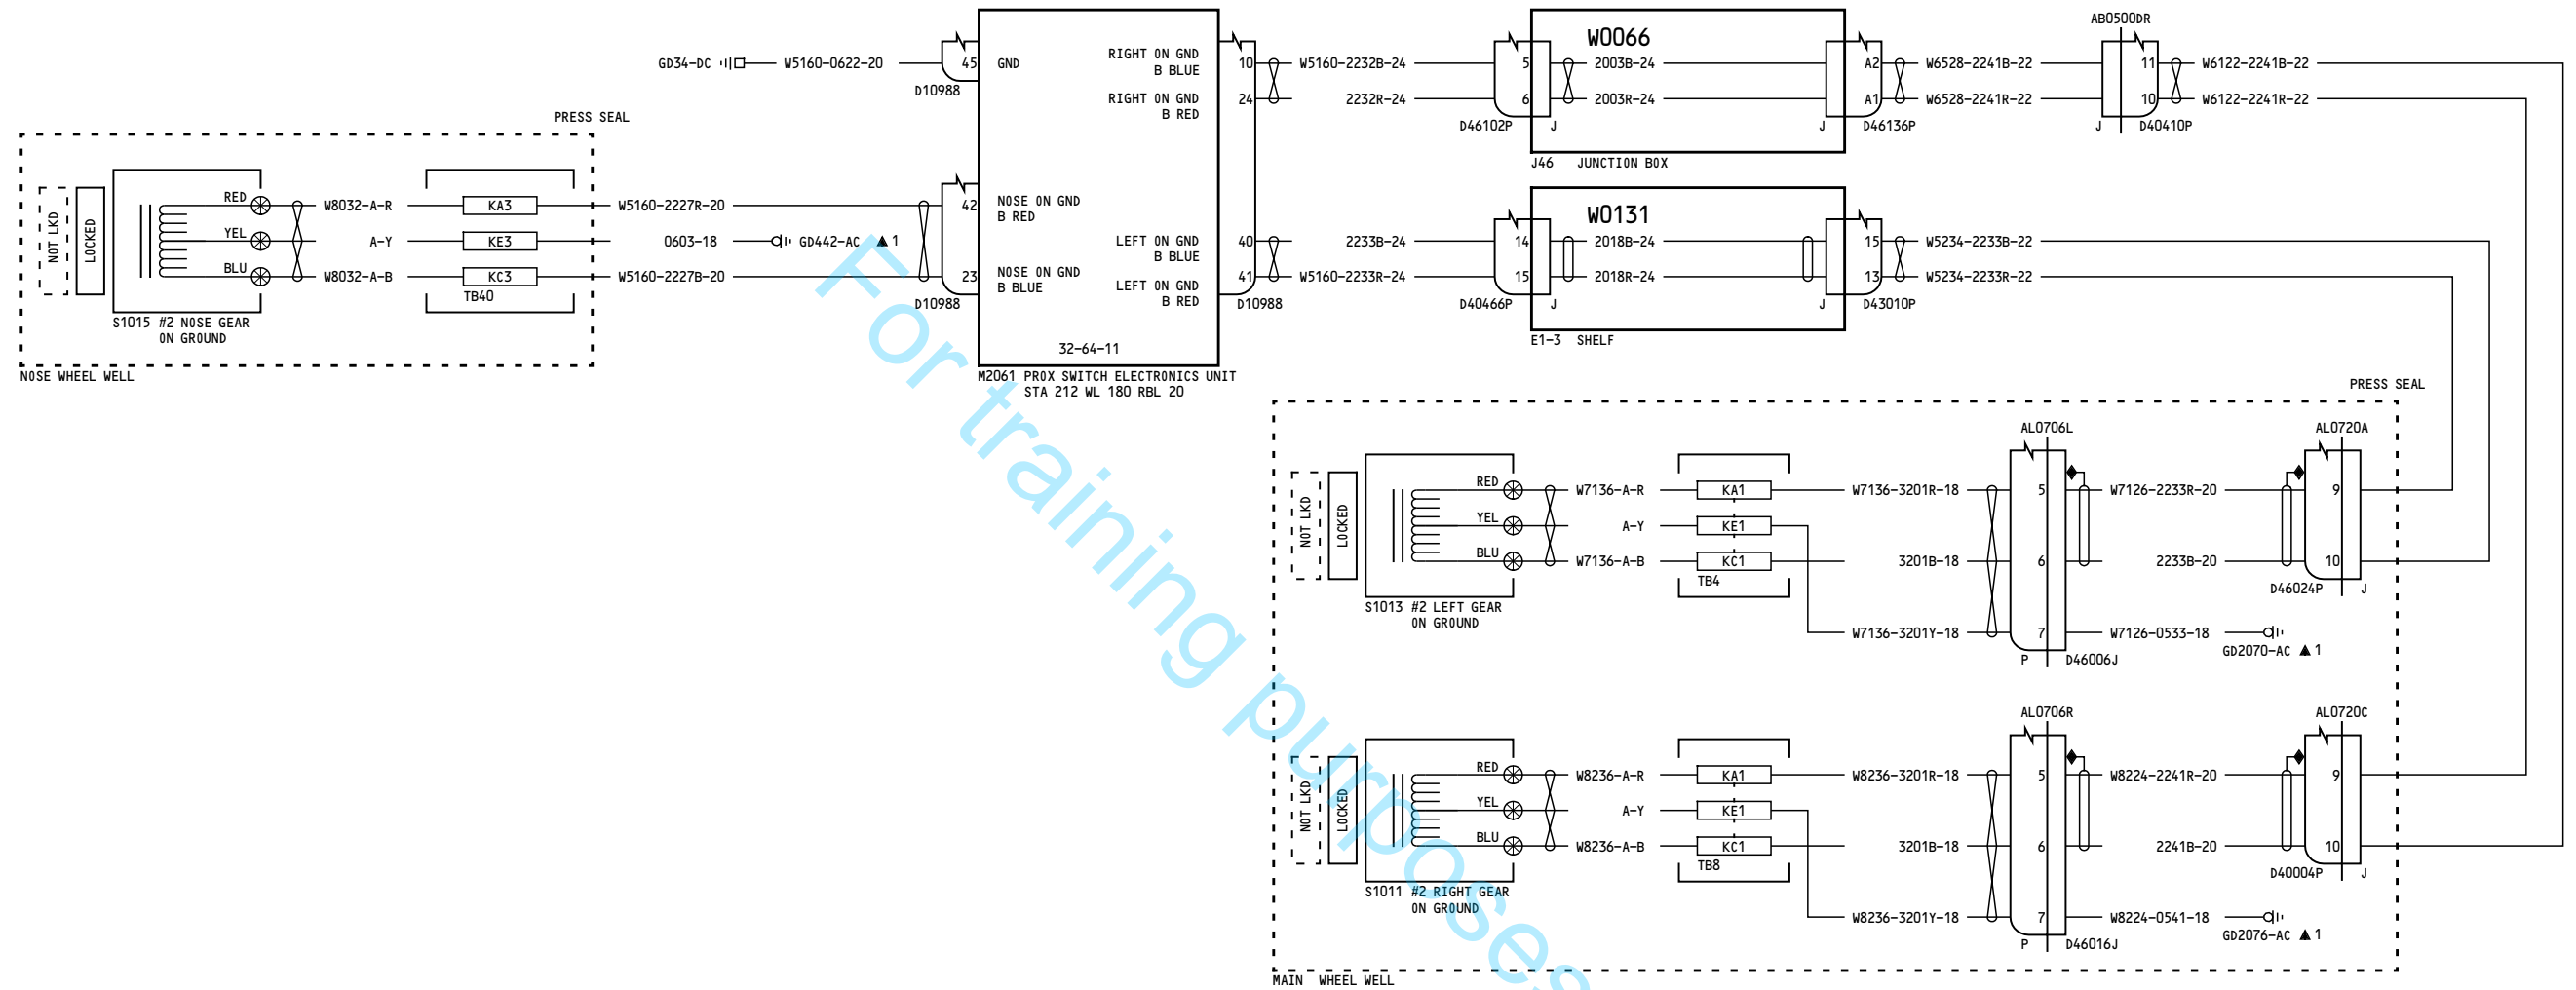

YN501

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**


D280A108

**32-31-12**

Page 10  
Sheet 1  
Dec 01/2010

**32-31-12**

Page 10  
Sheet 1  
Dec 01/2010

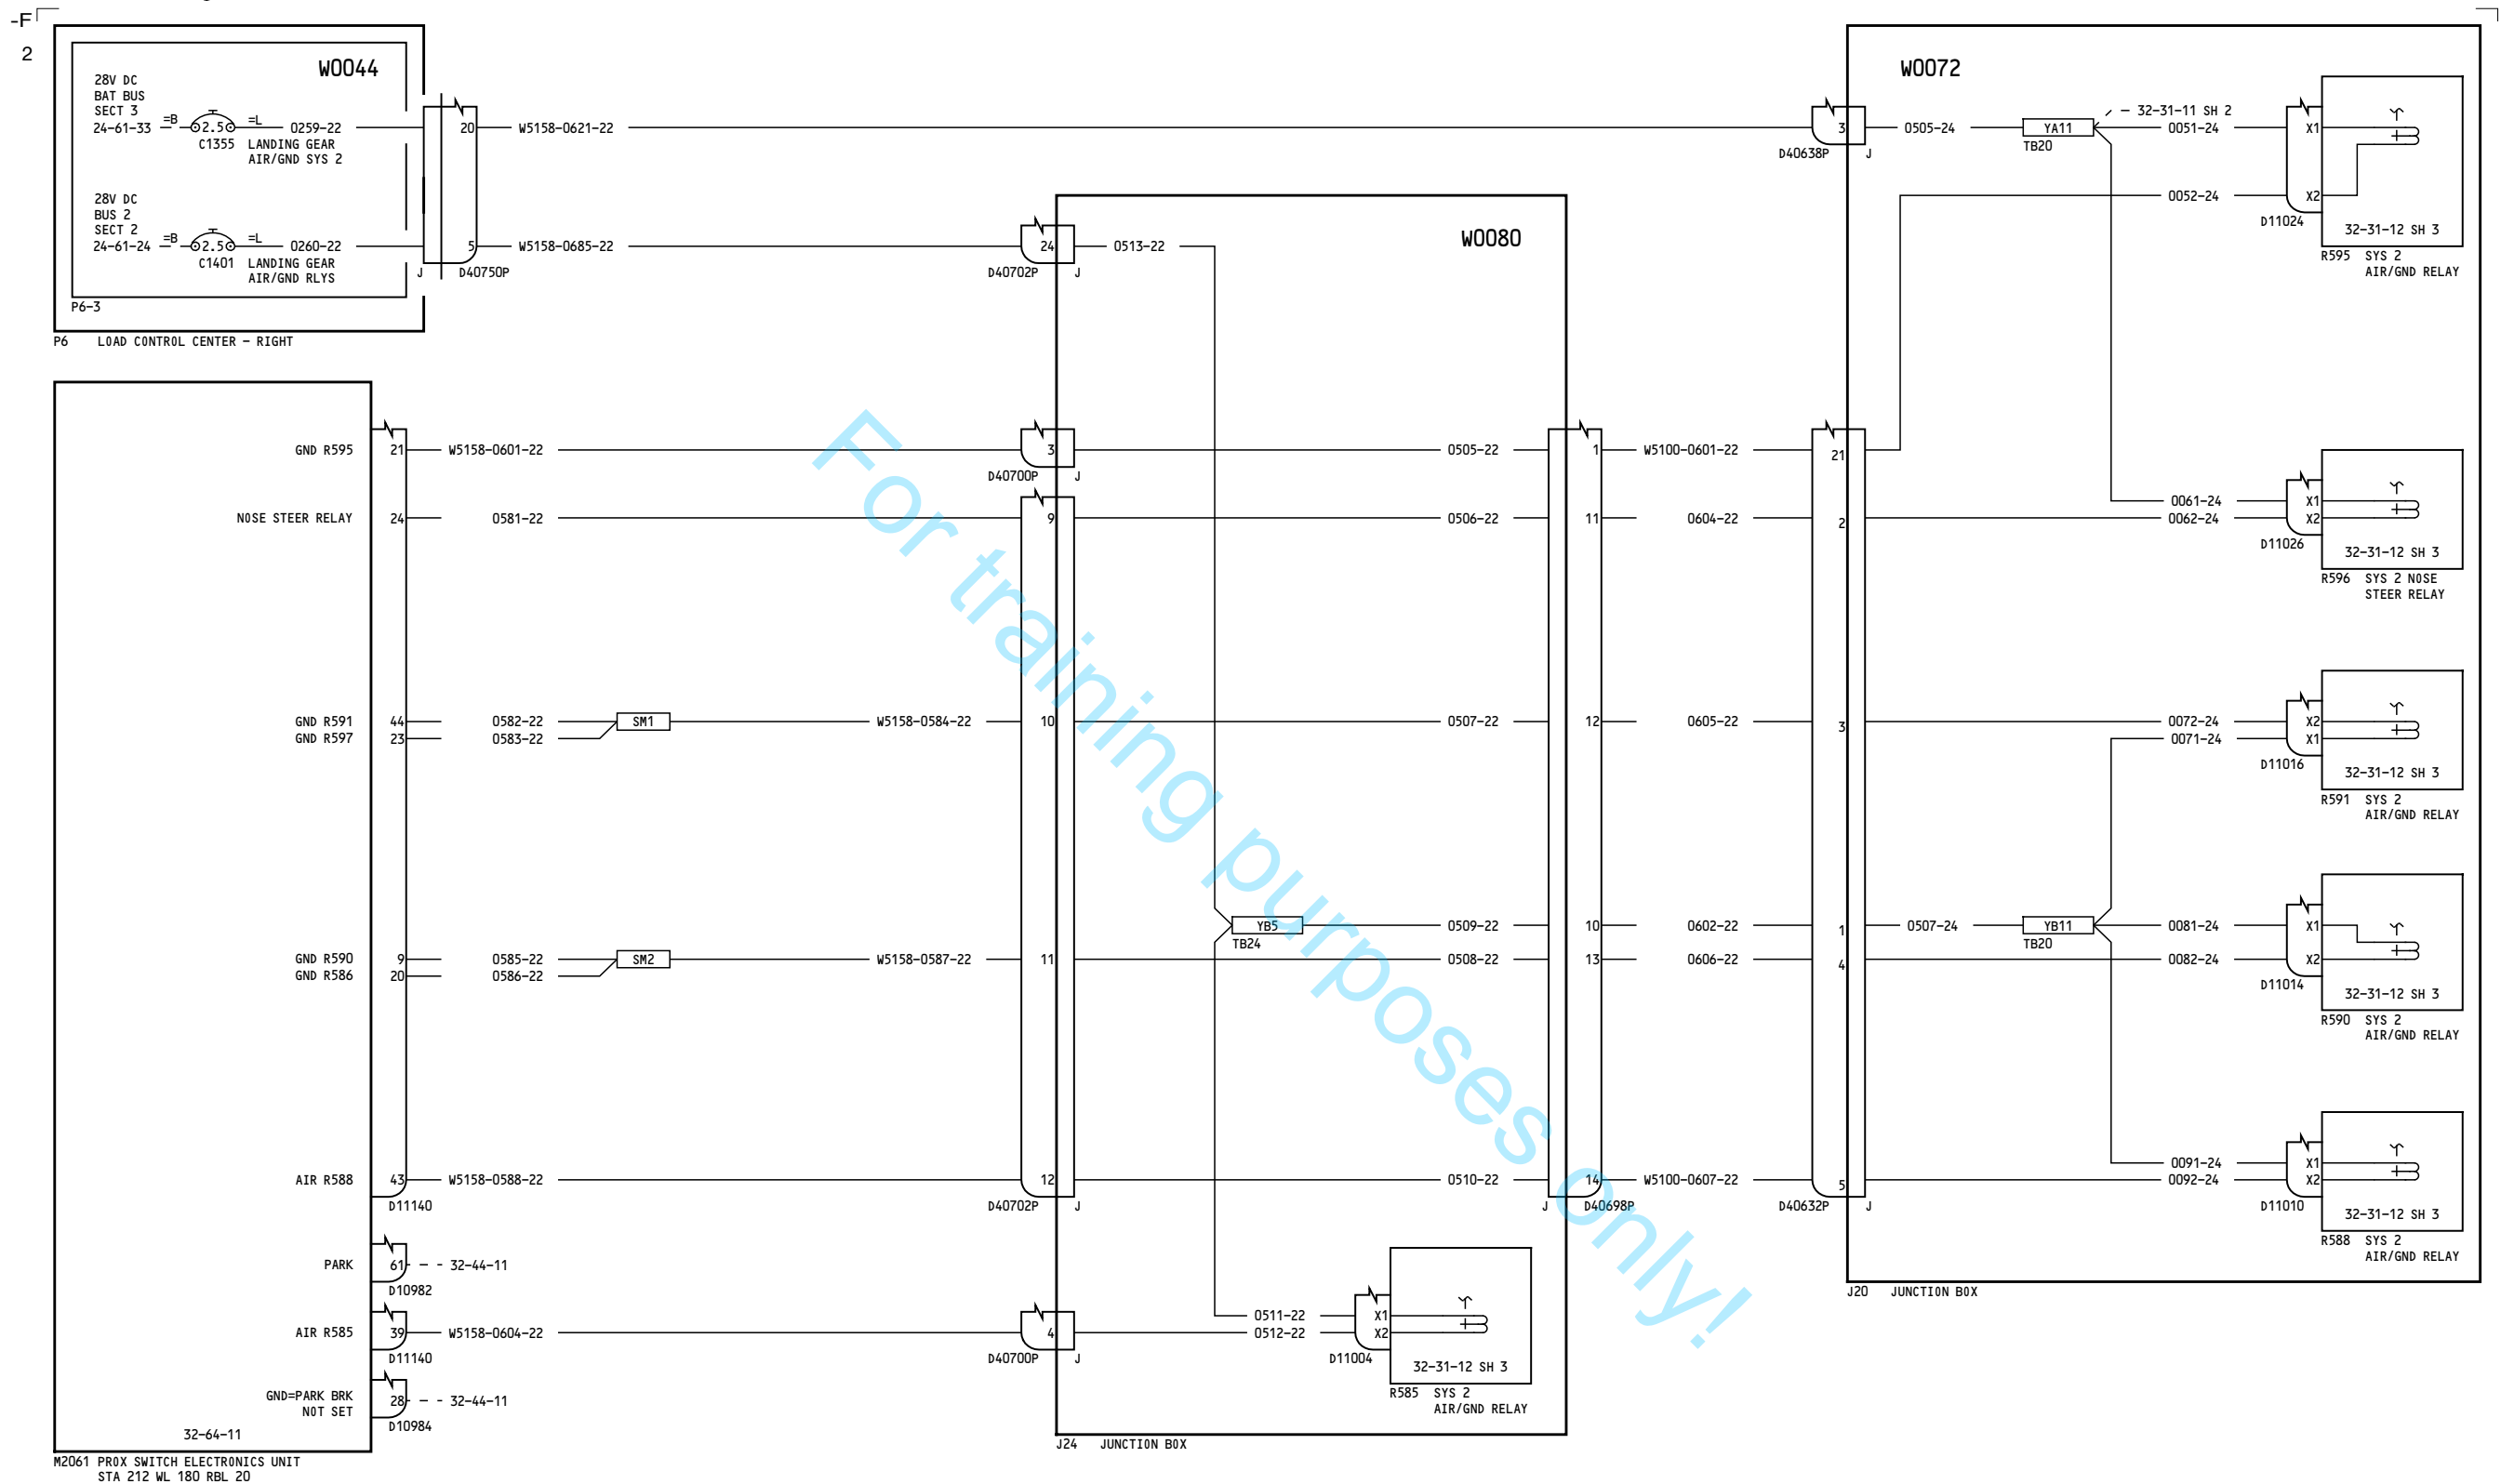

YN501

AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS


D280A108

32-31-12



Page 10  
Sheet 2  
Dec 01/2010


32-31-12

Page 10  
Sheet 2  
Dec 01/2010

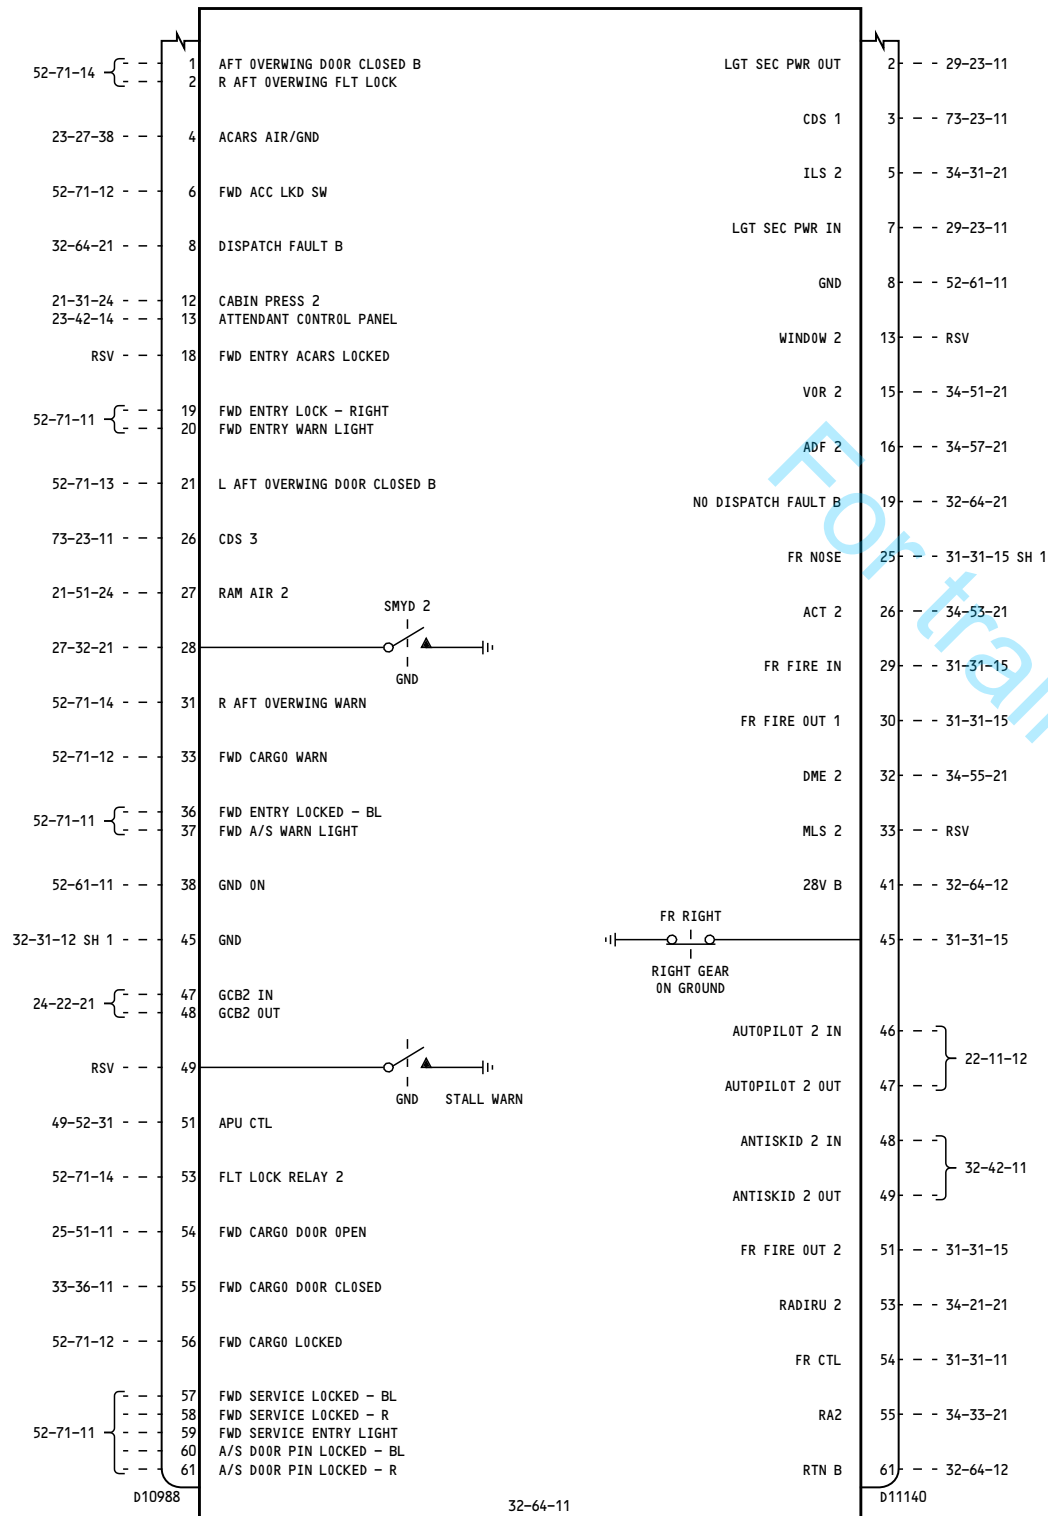

NOTES:  
M2061 PROX SWITCH ELECTRONICS UNIT  
STA 212 WL 180 RBL 20  
THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

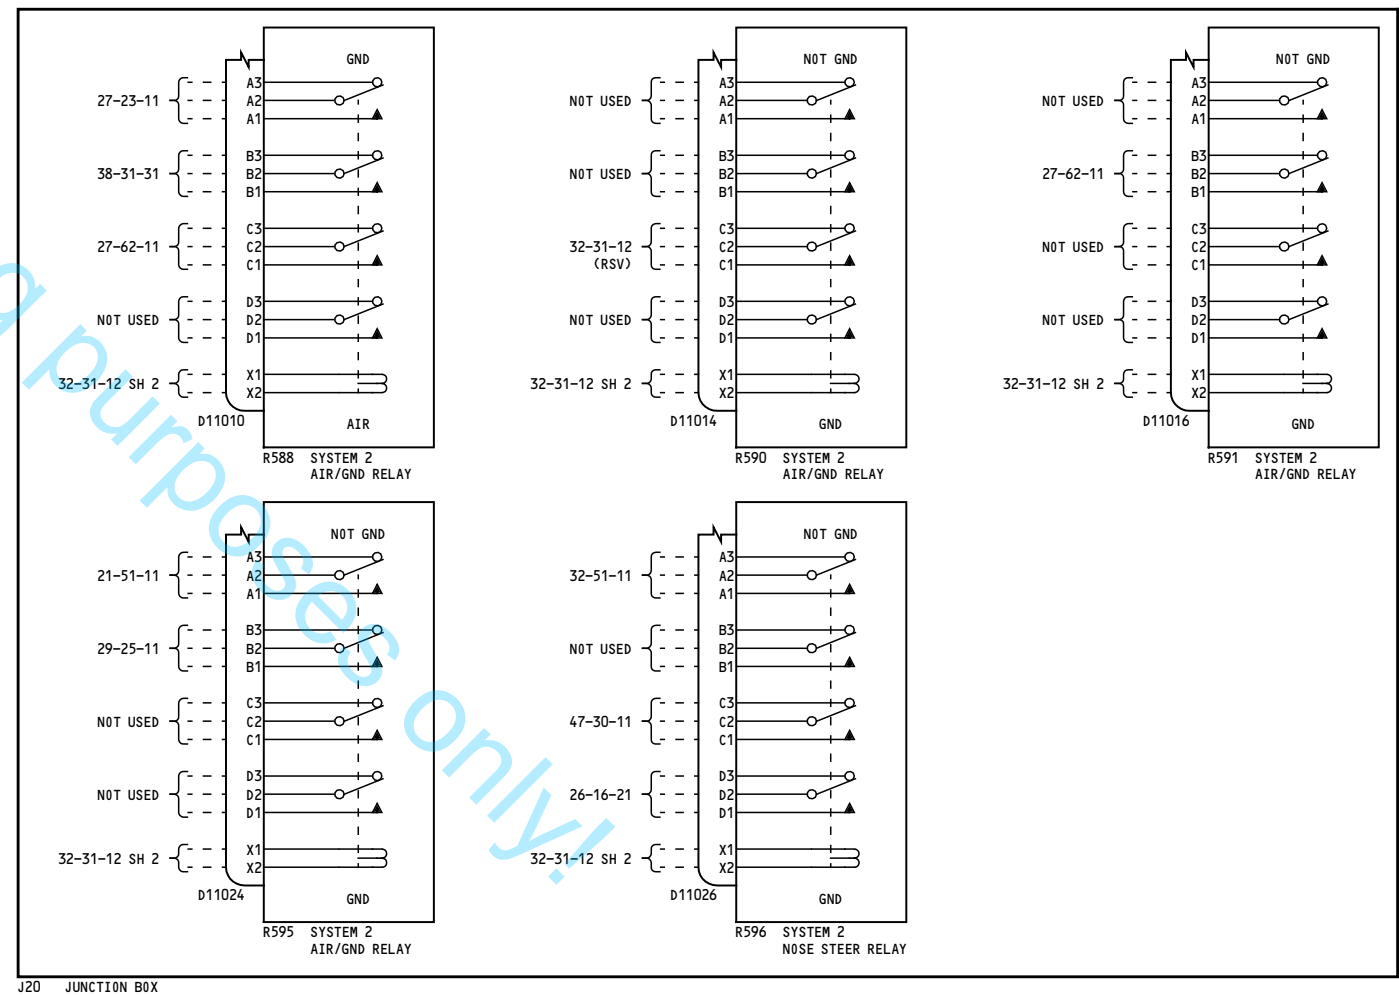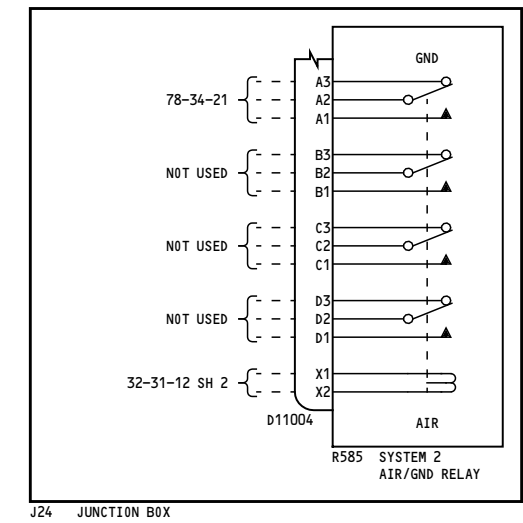

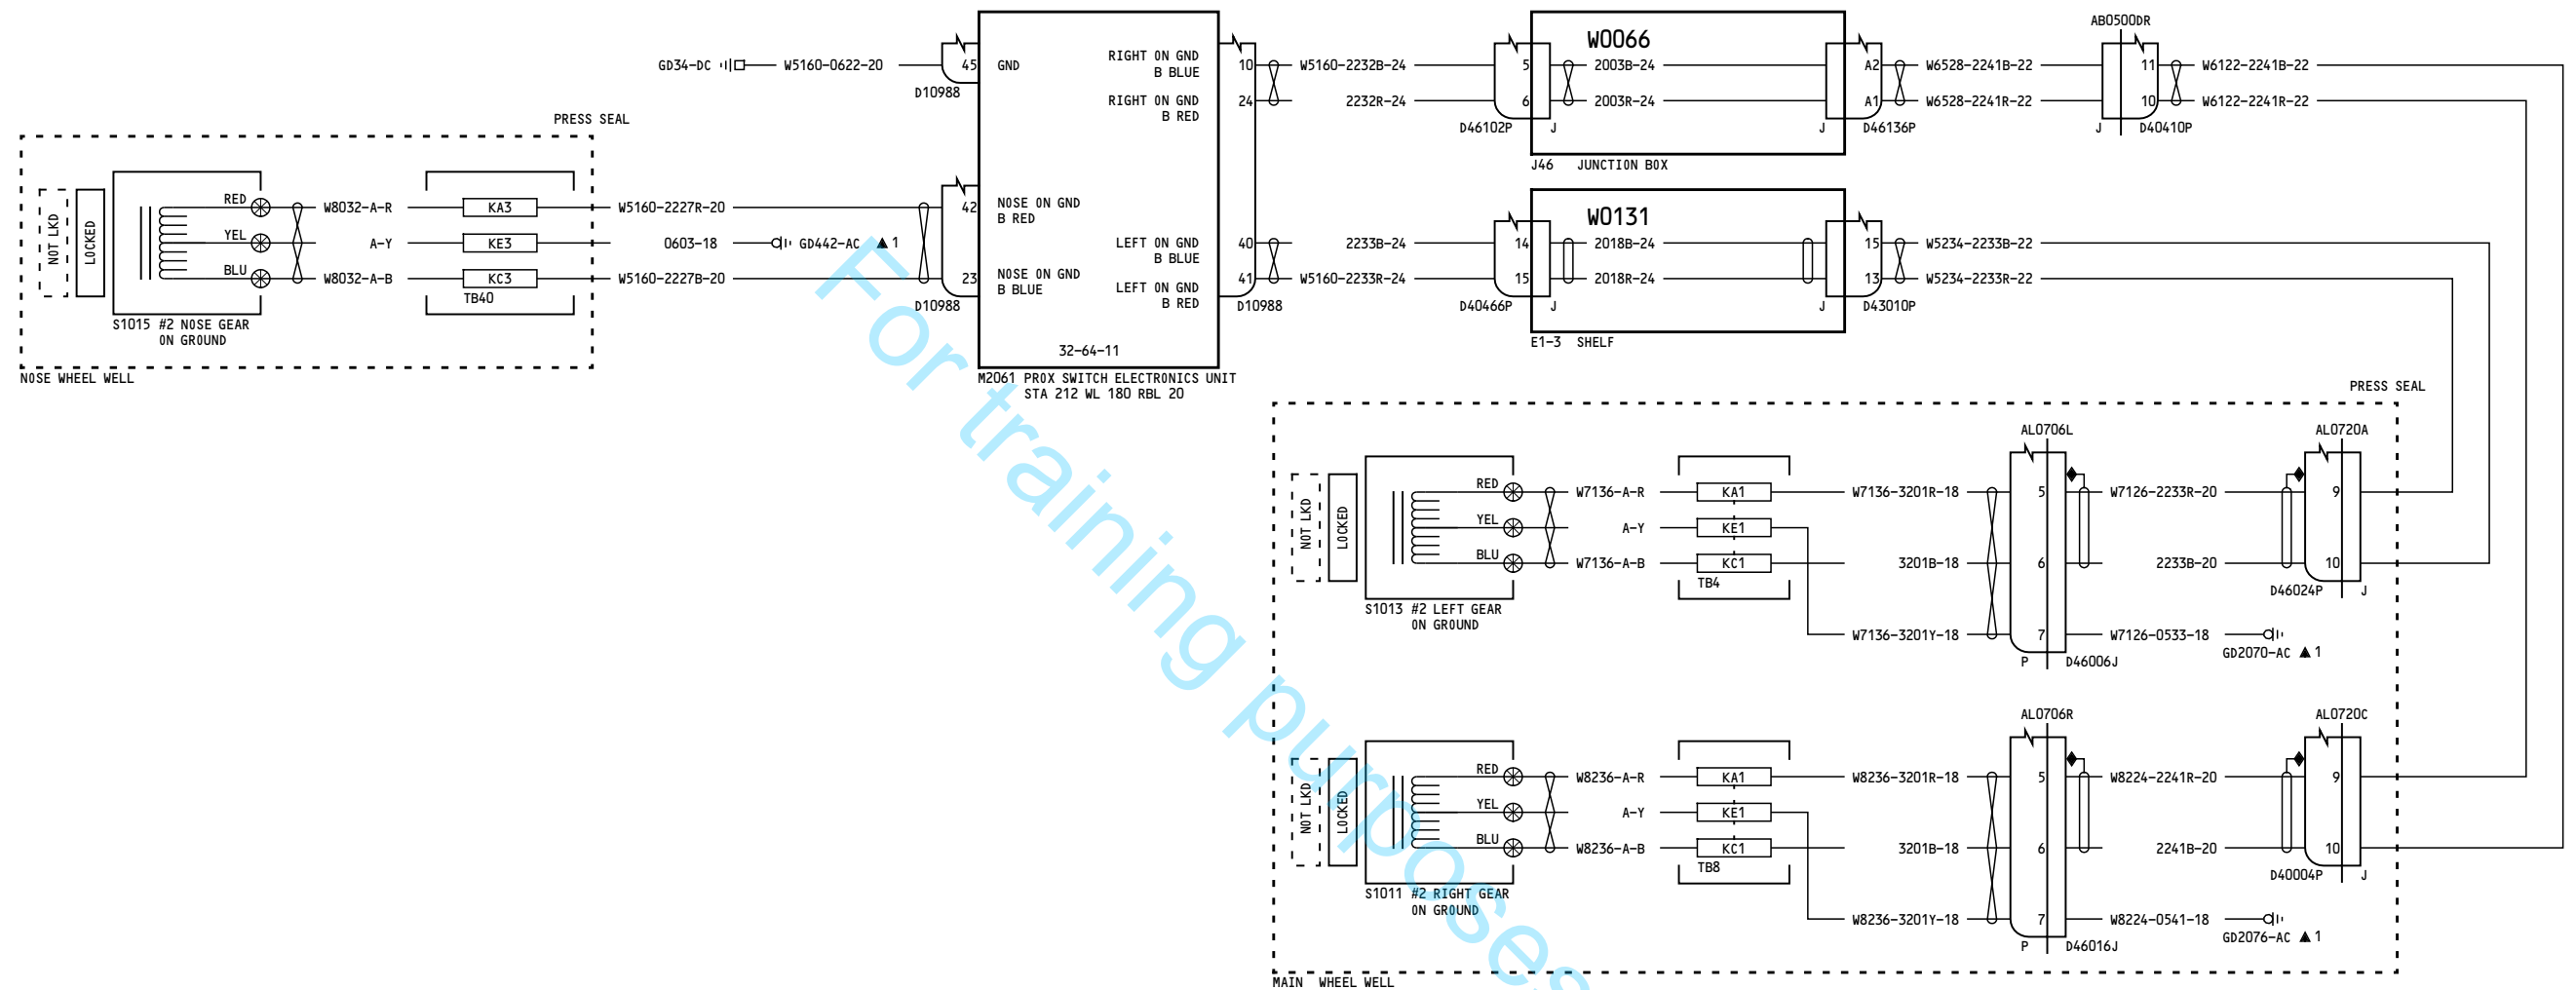

YR301-YR328

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**

D280A108


**32-31-12**

Page 11  
Sheet 1  
Nov 12/2012



**32-31-12**

Page 11  
Sheet 1  
Nov 12/2012



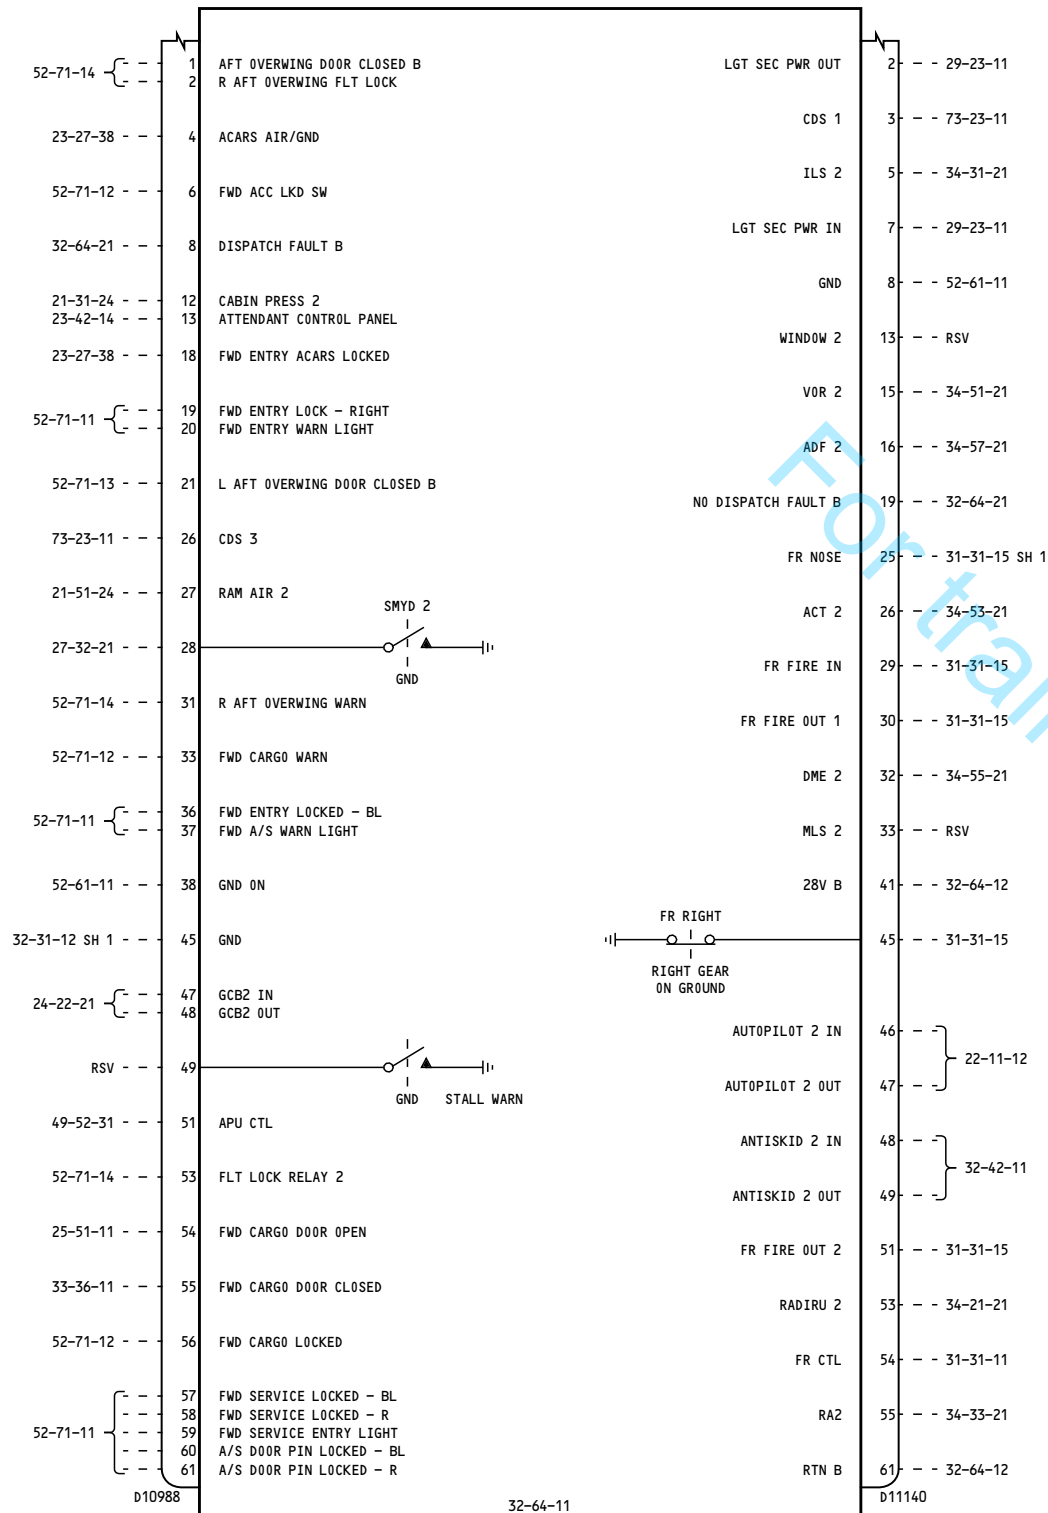

**NOTES:**  
M2061 PROX SWITCH ELECTRONICS UNIT  
STA 212 WL 180 RBL 20  
THE DIAGRAM REFERENCES REPRESENT A  
MAXIMUM CONFIGURATION. FOR INDIVIDUAL  
AIRPLANES, SEE HOOKUP CHART.

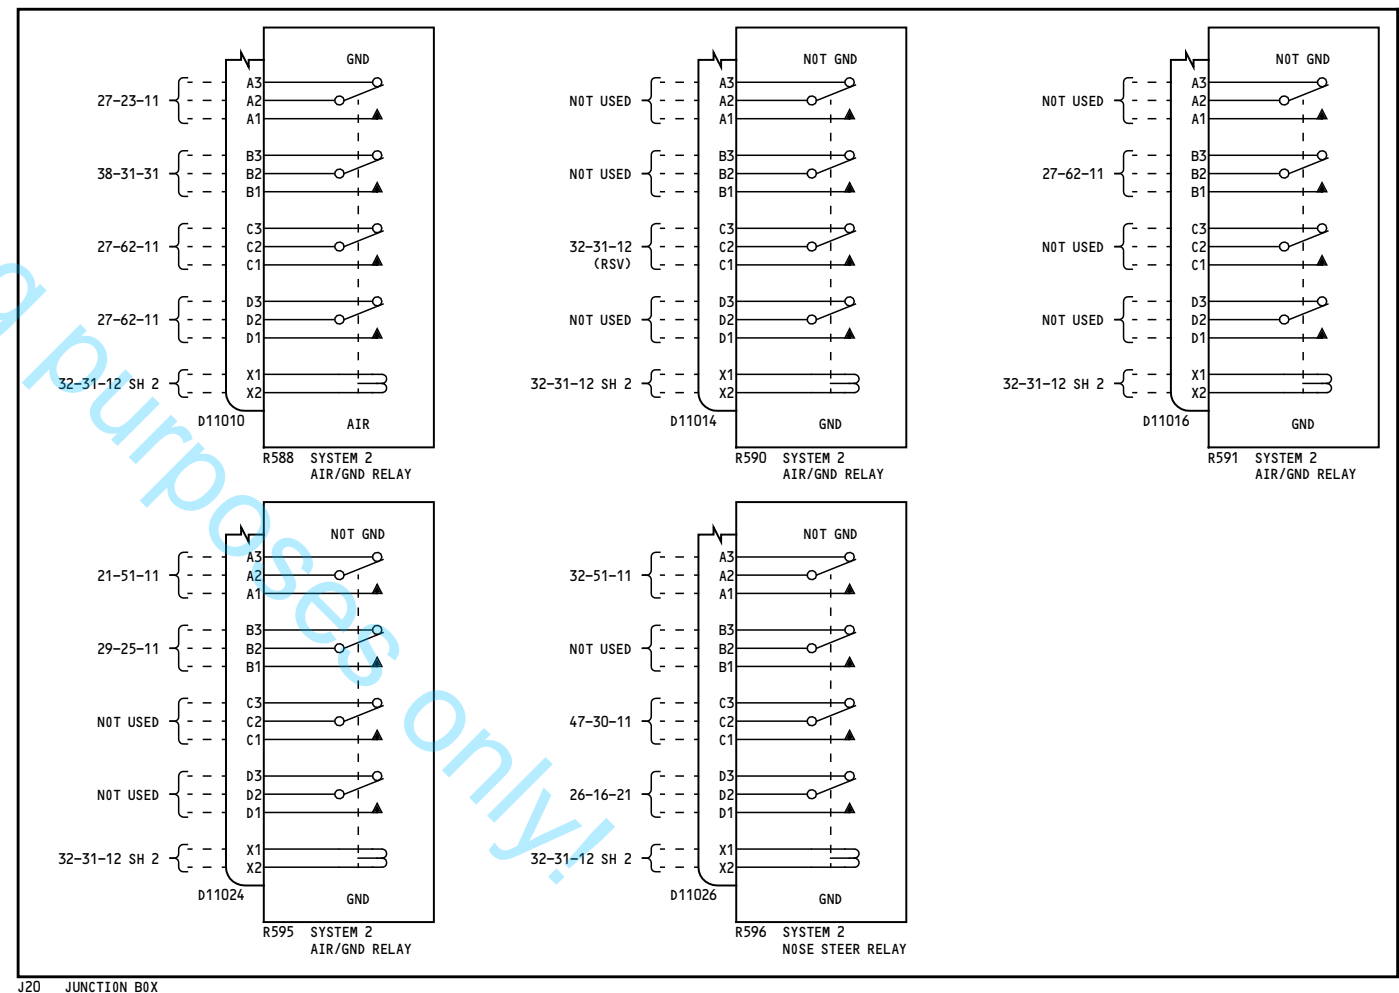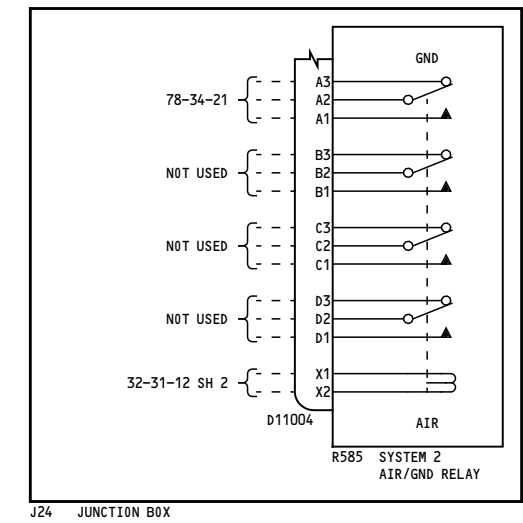

YR301-YR328

**AIR/GND SYSTEM 2 AND  
NOSE GEAR GROUND SENSING  
RELAYS**


D280A108

**32-31-12**

Page 11  
Sheet 3  
Nov 12/2012

**32-31-12**

Page 11  
Sheet 3  
Nov 12/2012

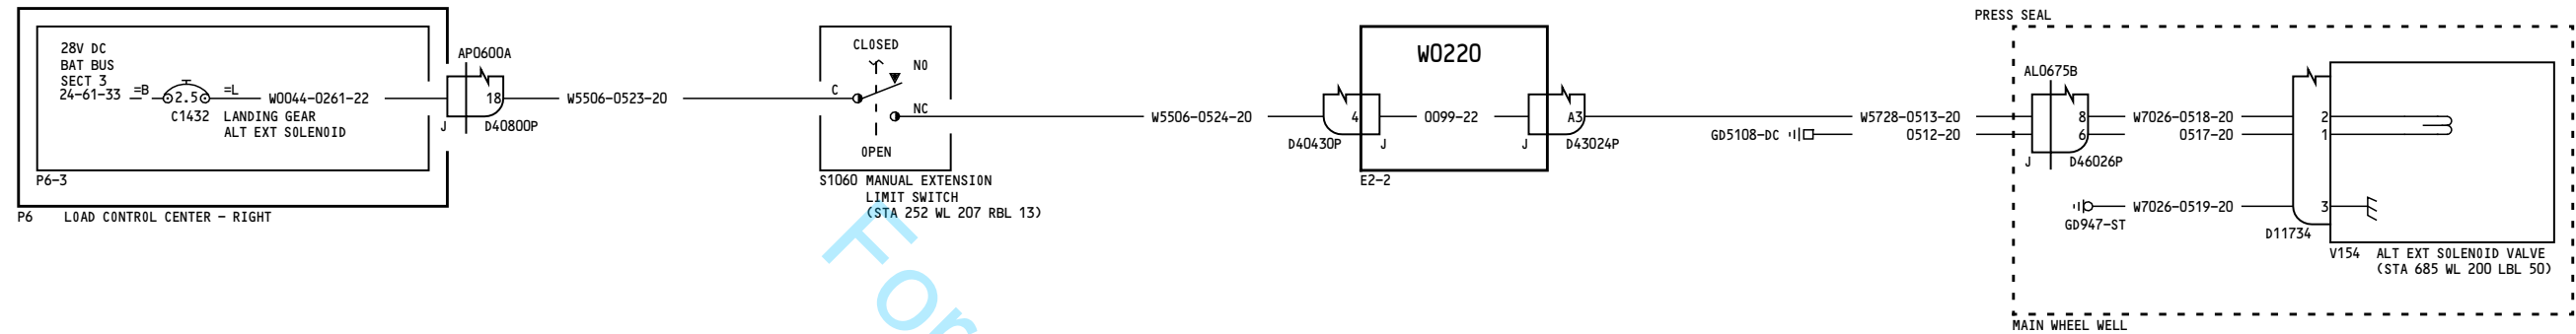

YC051-YL968, YN231-YN236, YN501

**ALTERNATE LANDING GEAR  
EXTENSION SYSTEM**

D280A108

**32-35-11**

Page 1


Nov 12/2012

**32-35-11**

Page 1

Nov 12/2012



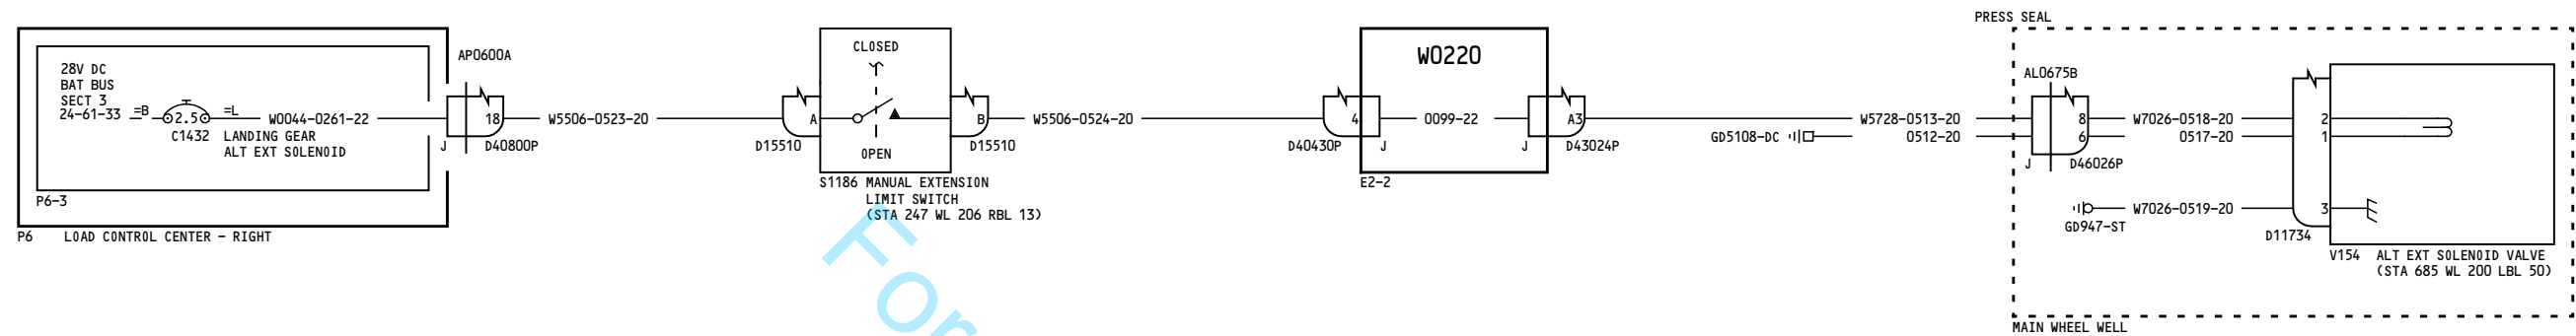

YL969-YL999, YN237-YN260, YR301-YR328

**ALTERNATE LANDING GEAR  
EXTENSION SYSTEM**

D280A108

**32-35-11**

Page 2

Nov 12/2012


**32-35-11**

Page 2

Nov 12/2012



 2



## ANTISKID SYSTEM

D280A108

**32-41-11**

Page 1  
Sheet 1  
Nov 12/2012


**32-41-11**

Page 1  
Sheet 1  
Nov 12/2012

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

-E

2

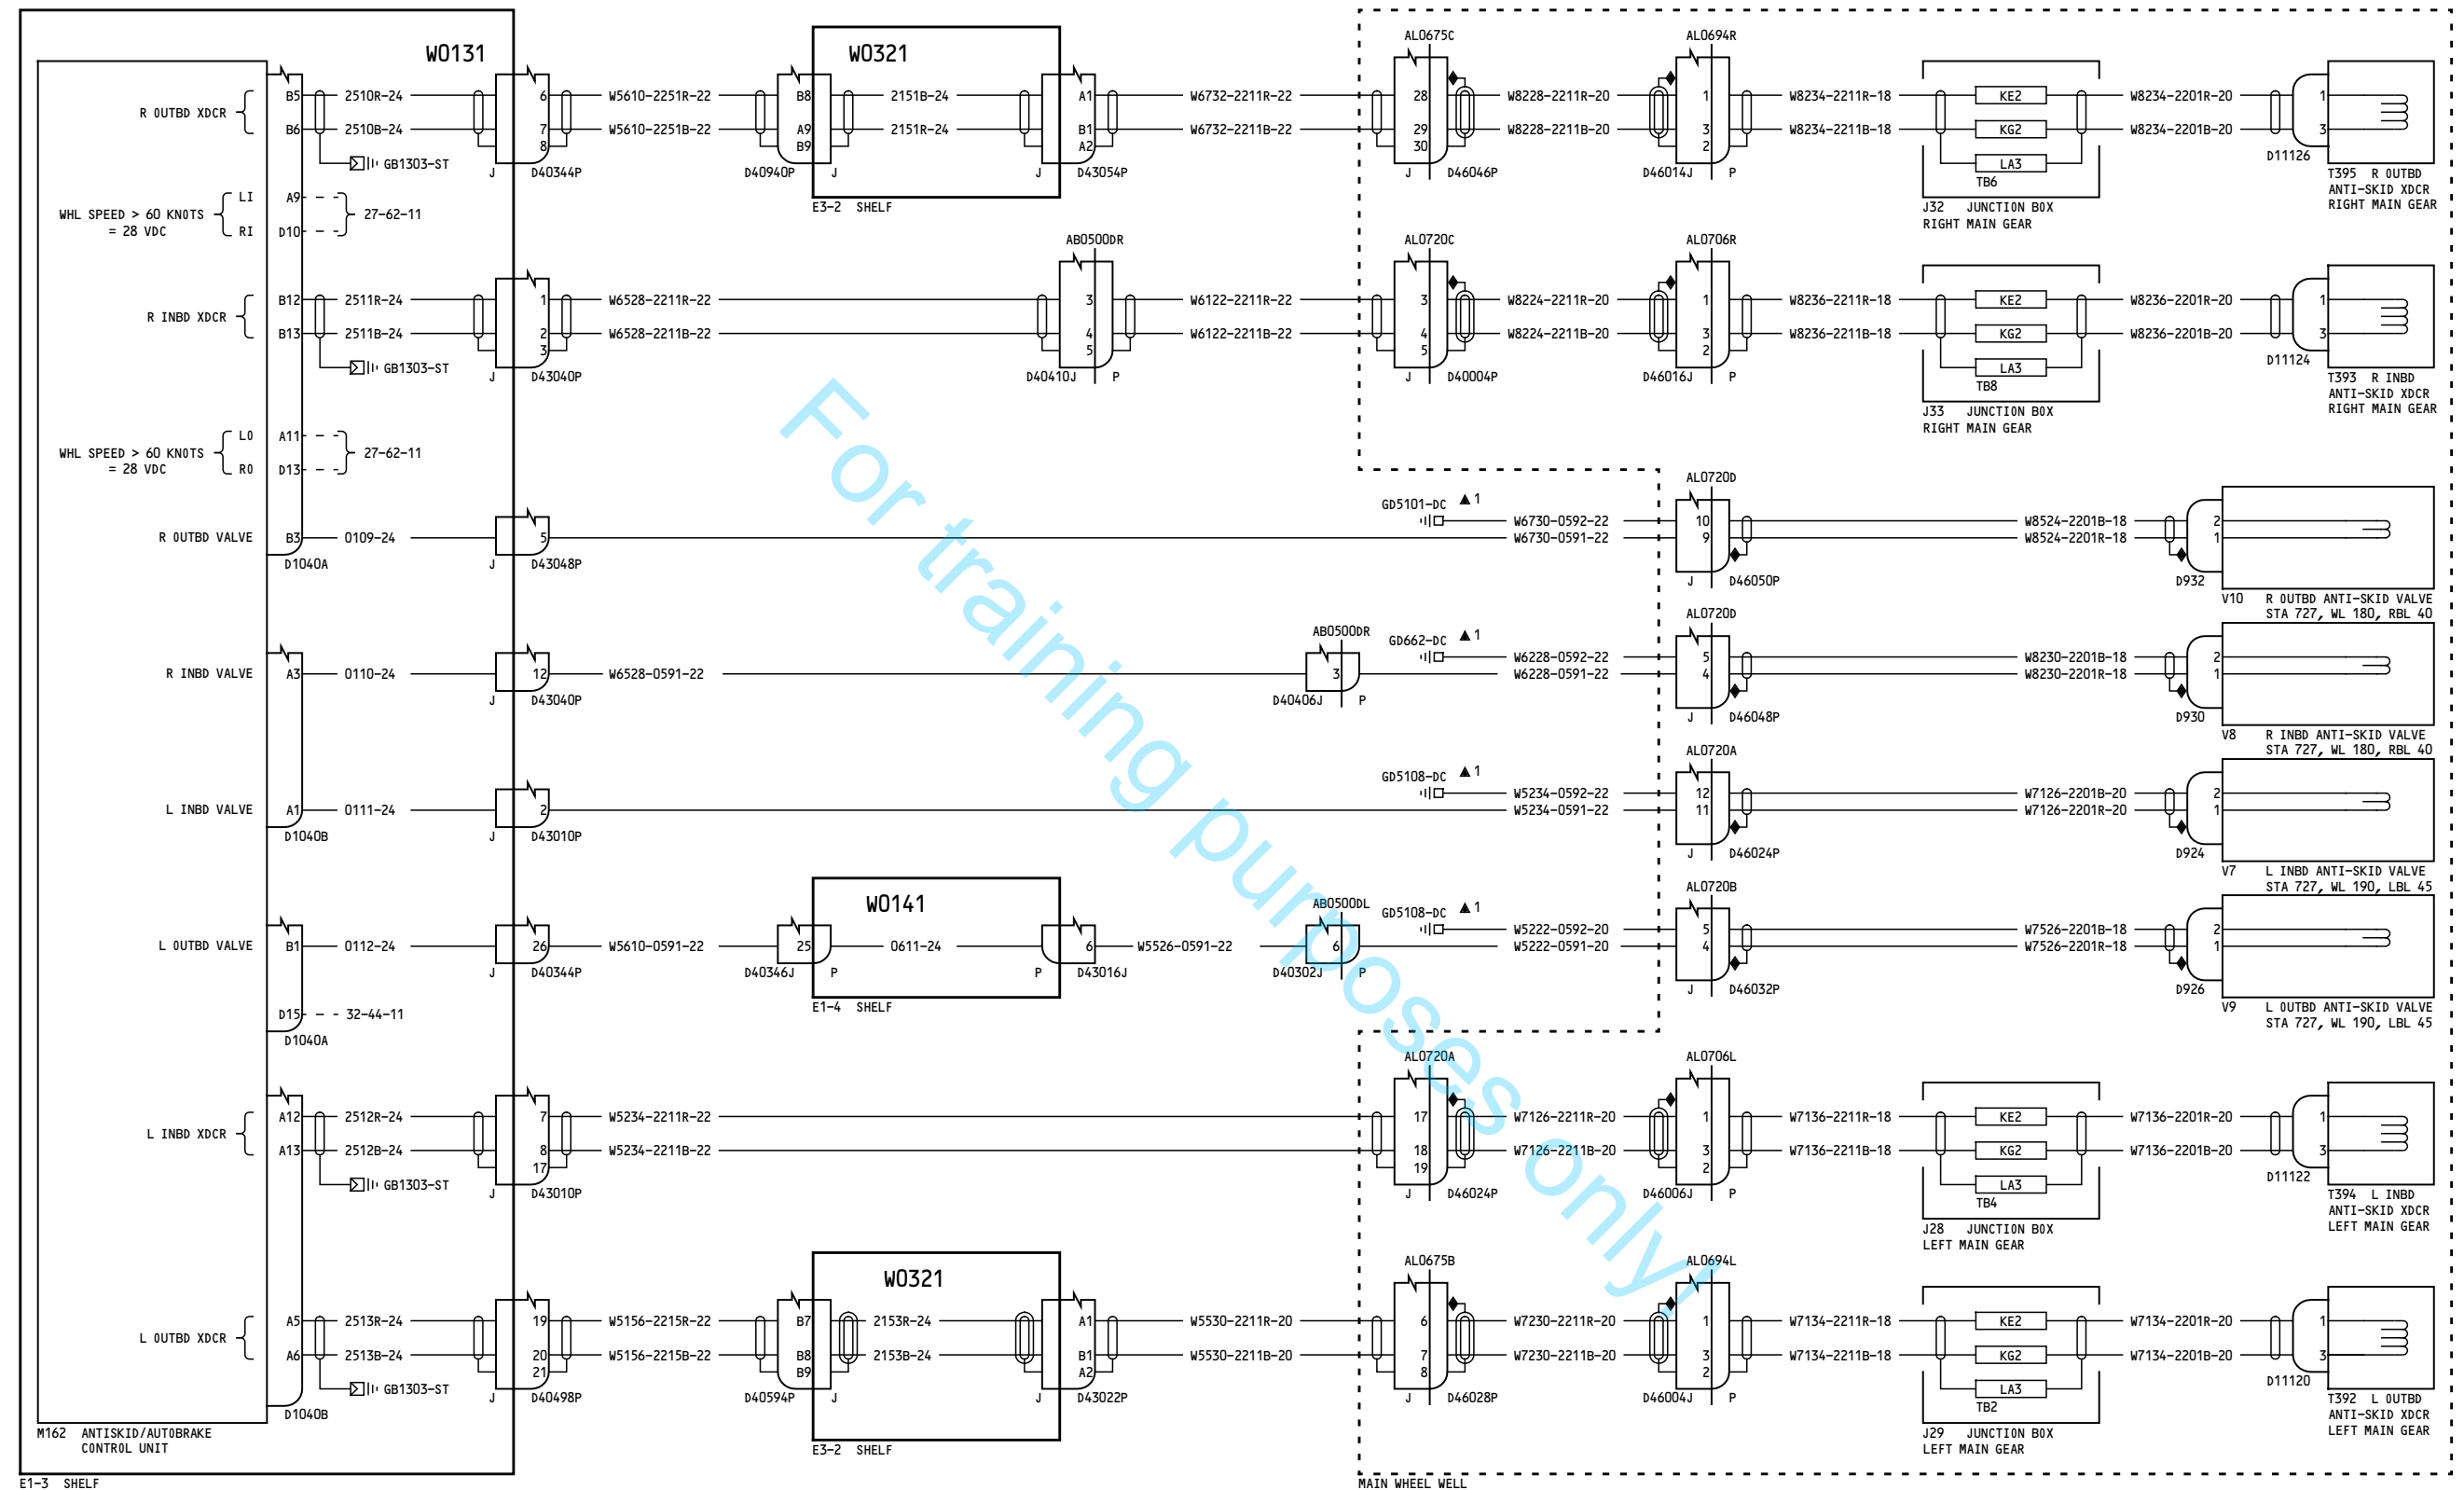

YC051-YD158

ANTISKID SYSTEM


D280A108

32-41-11

Page 1  
Sheet 2  
Nov 12/2012

32-41-11

Page 1  
Sheet 2  
Nov 12/2012
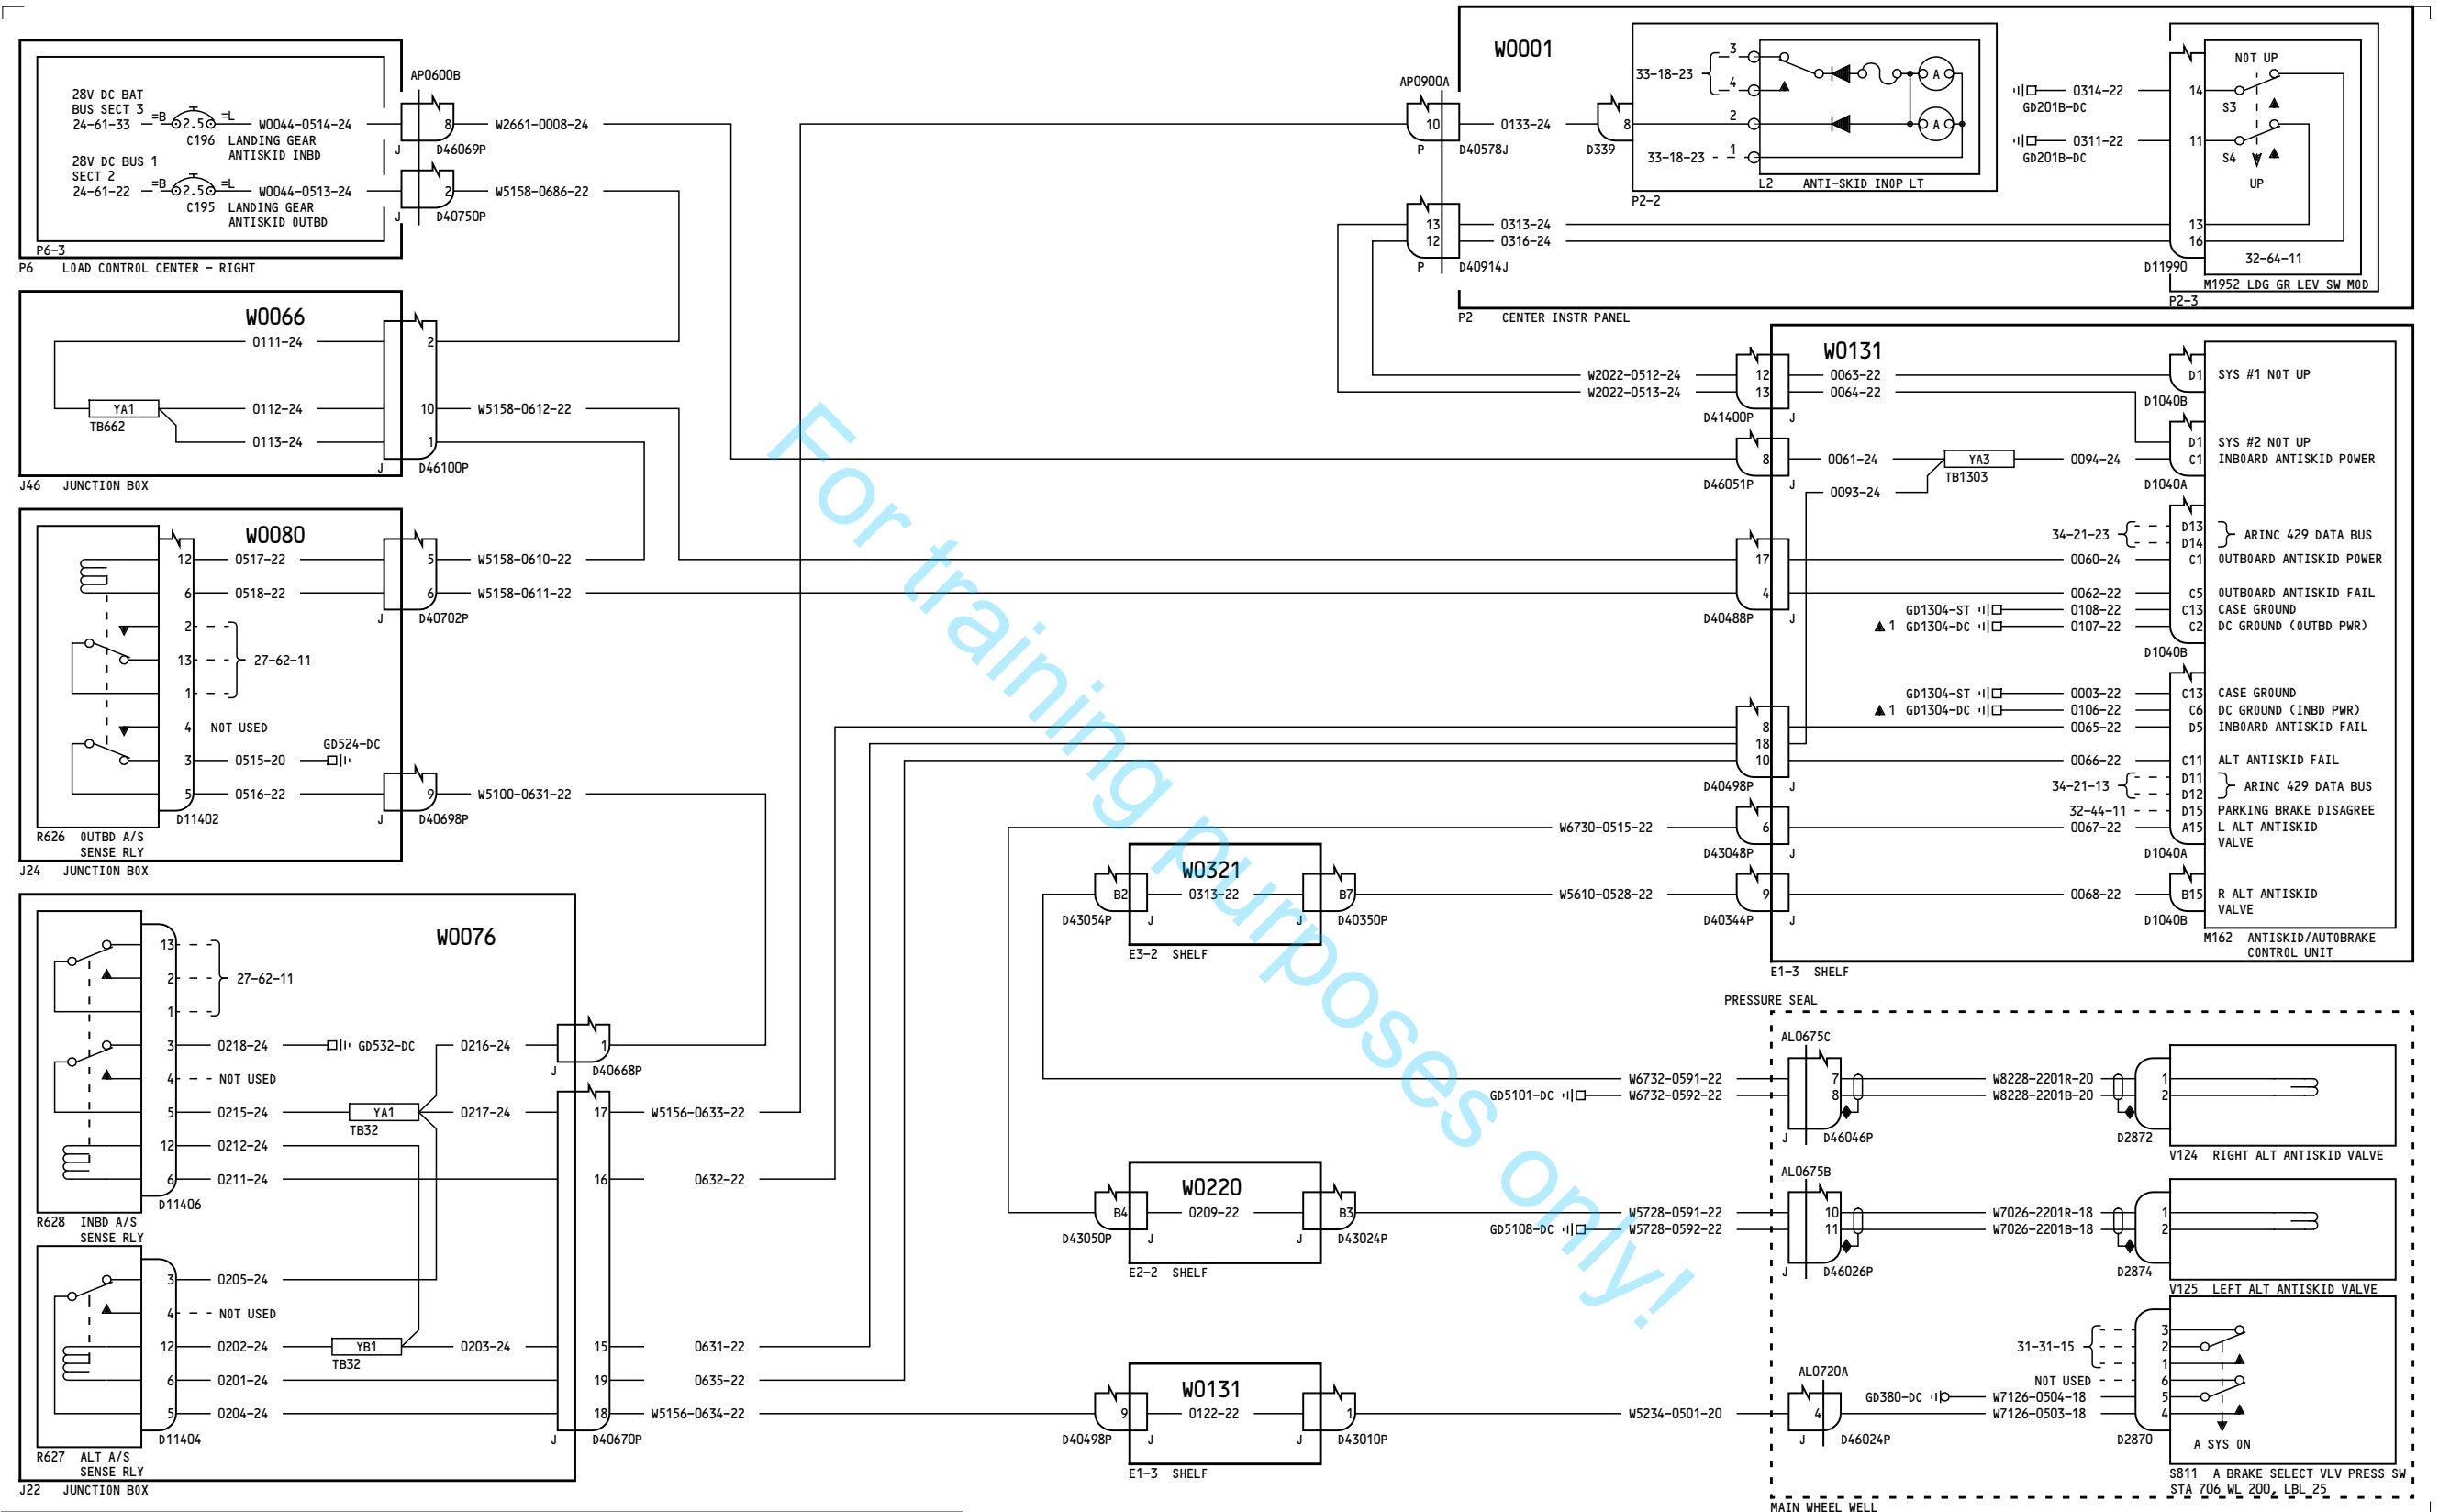
$$-\frac{B}{2}$$


YD160-YR328

## ANTISKID SYSTEM

D280A108


**32-41-11**

Page 2  
Sheet 1  
Nov 12/2012

**32-41-11**

Page 2  
Sheet 1  
Nov 12/2012

9

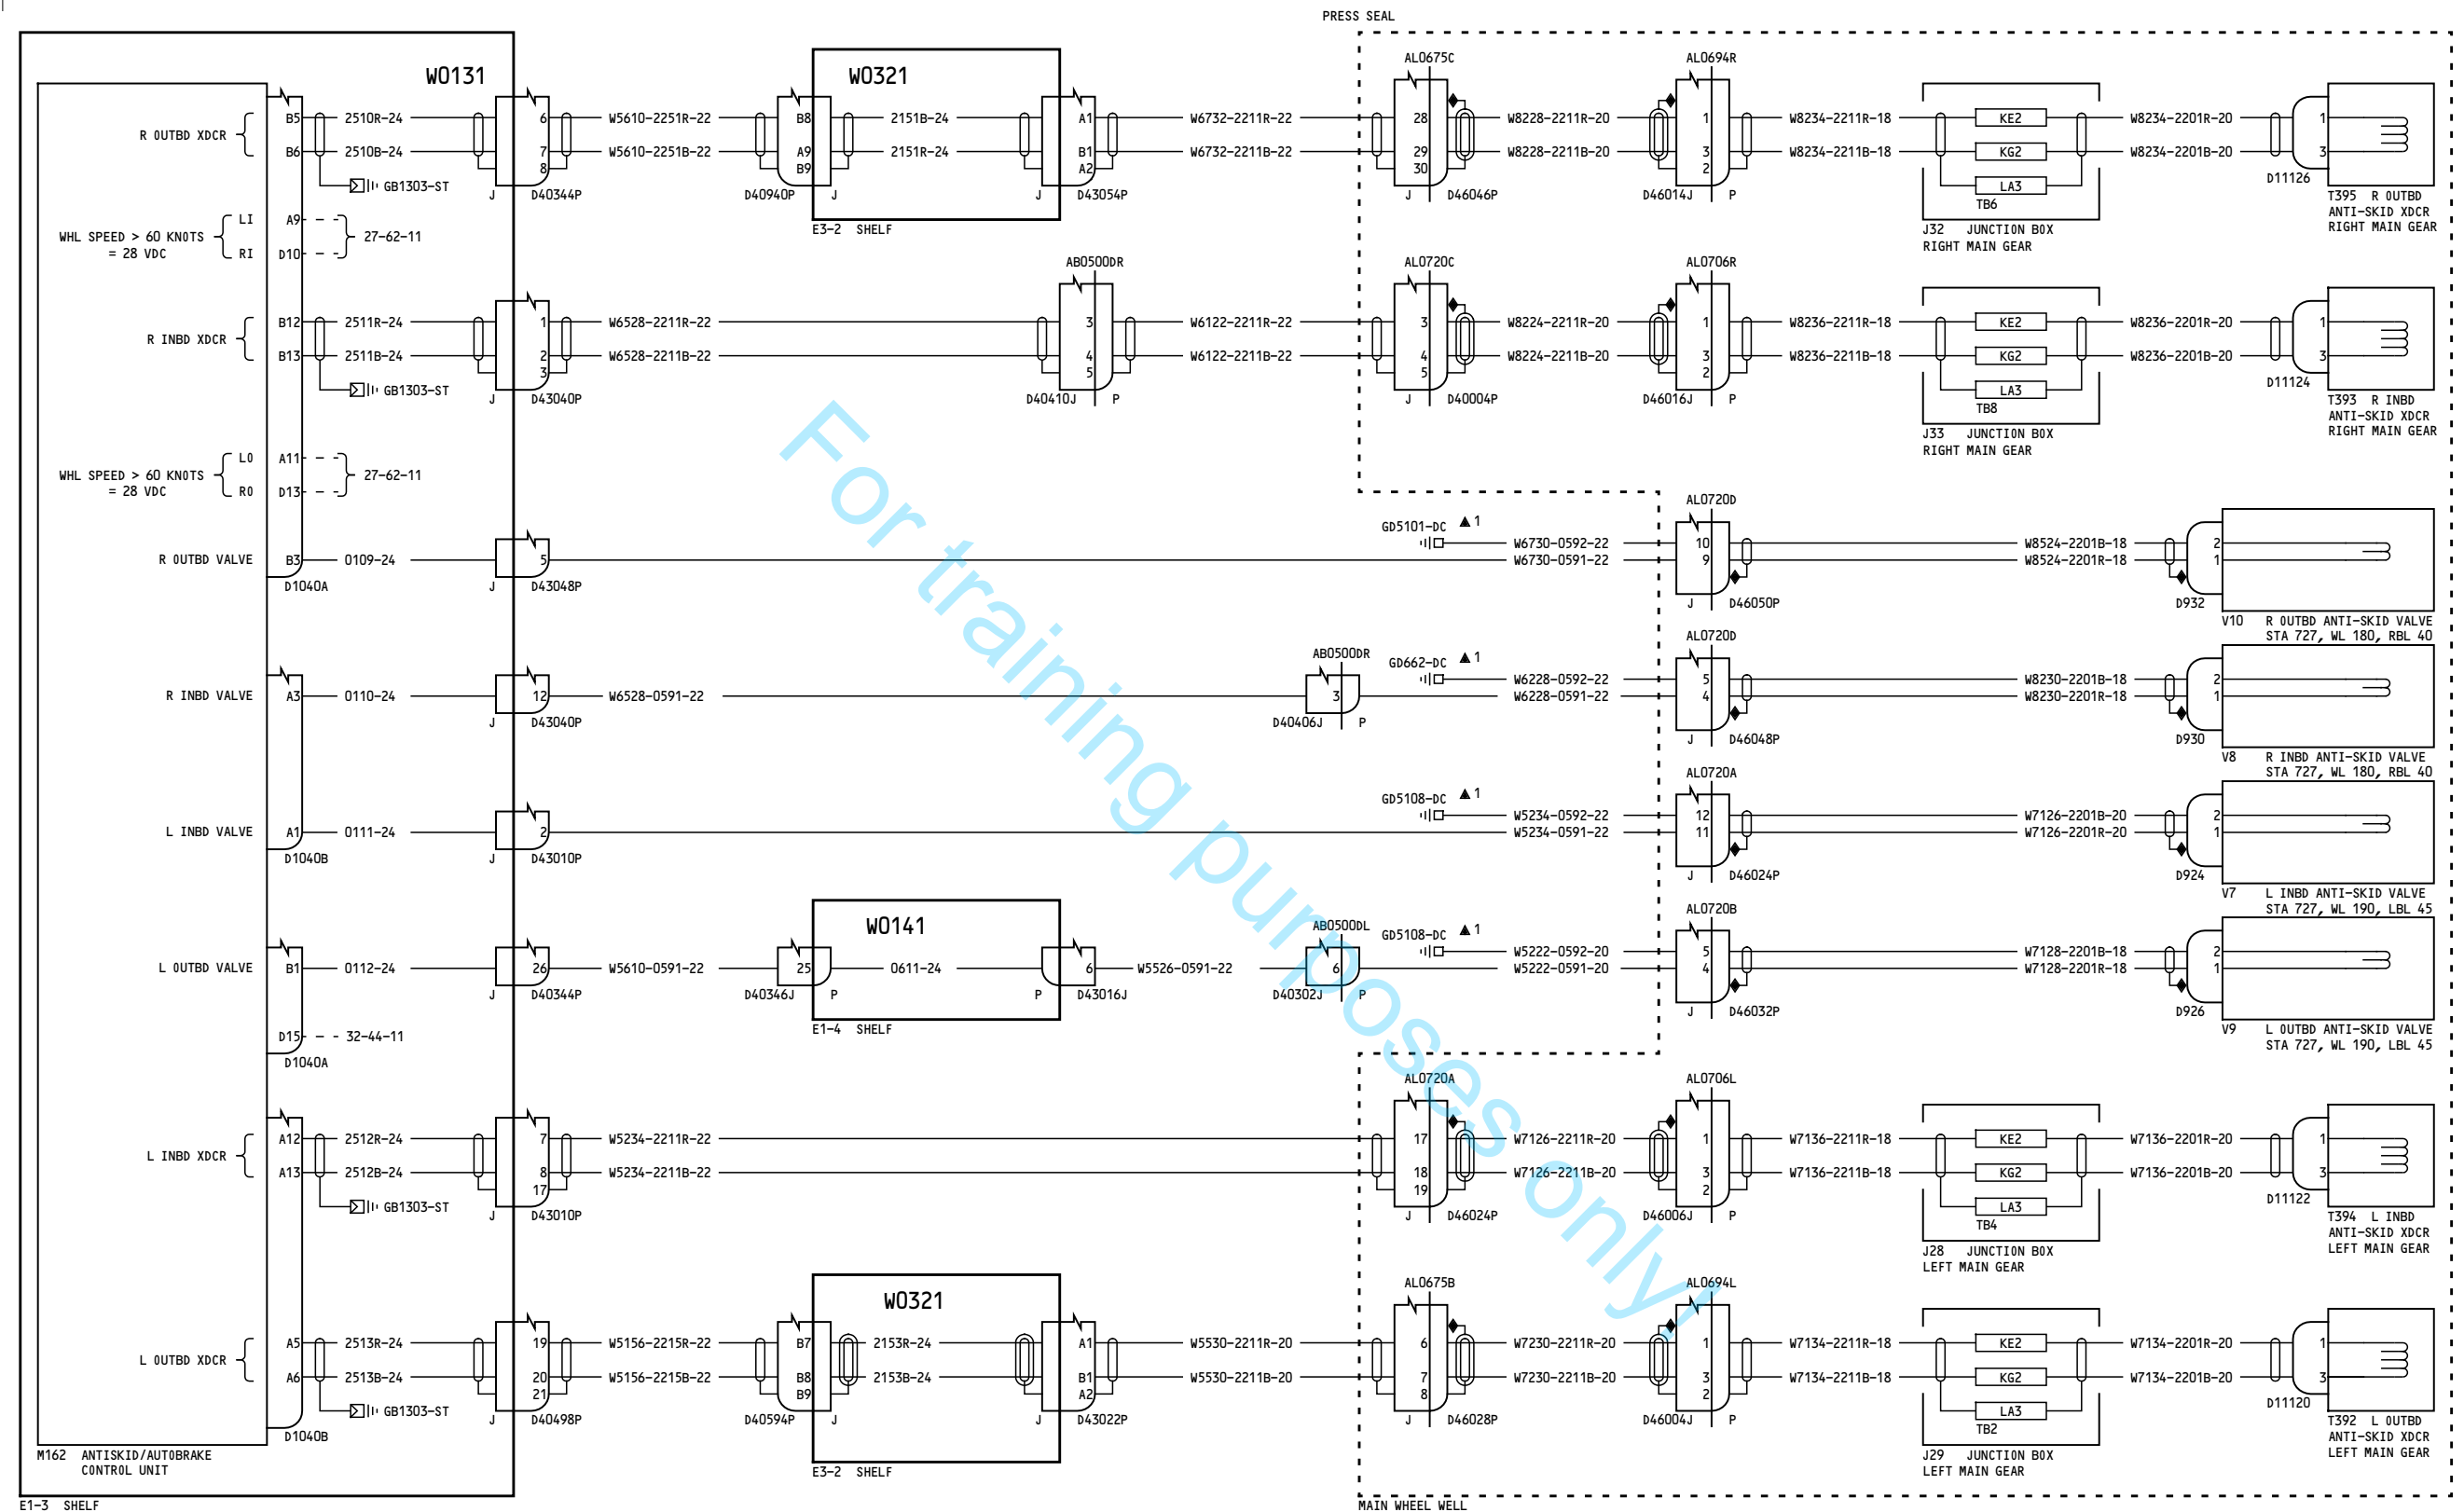

YD160-YR328

ANTISKID SYSTEM


D280A108

32-41-11

Page 2  
Sheet 2  
Nov 12/2012

32-41-11

Page 2  
Sheet 2  
Nov 12/2012

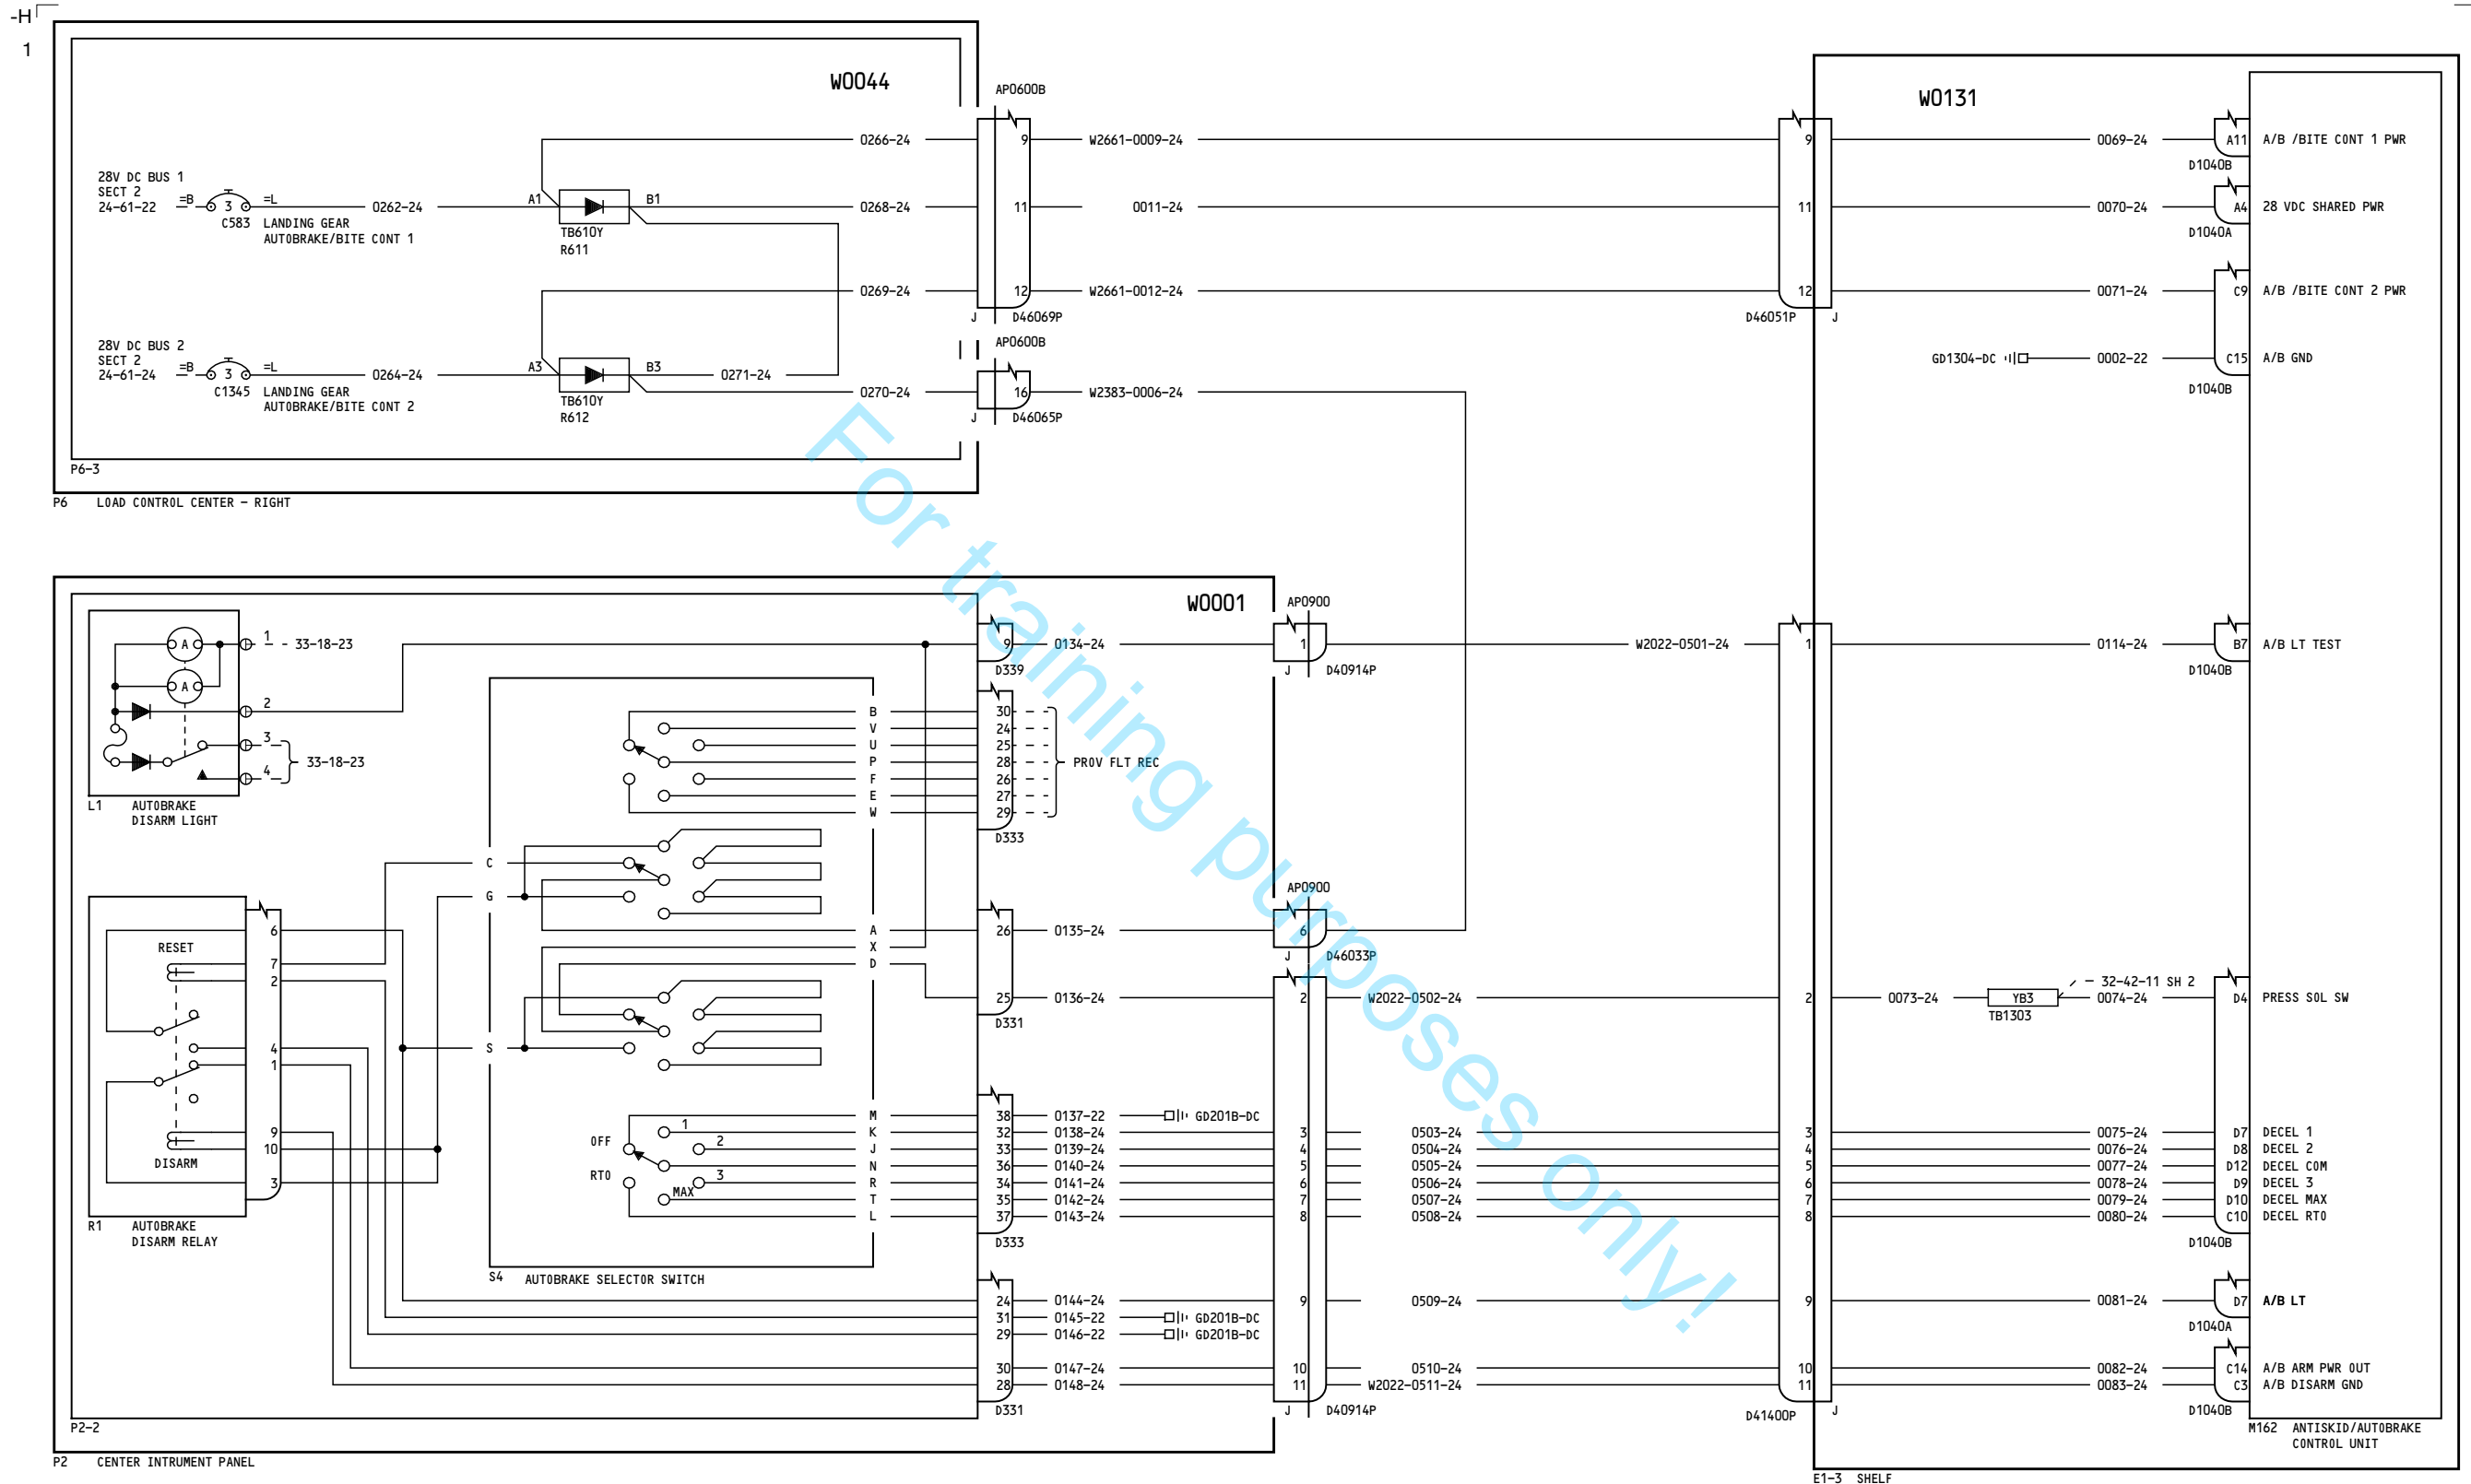

YC051-YD152

**AUTOBRAKE SYSTEM**


D280A108

**32-42-11**

Page 1  
Sheet 1  
Oct 06/2010

**32-42-11**

Page 1  
Sheet 1  
Oct 06/2010

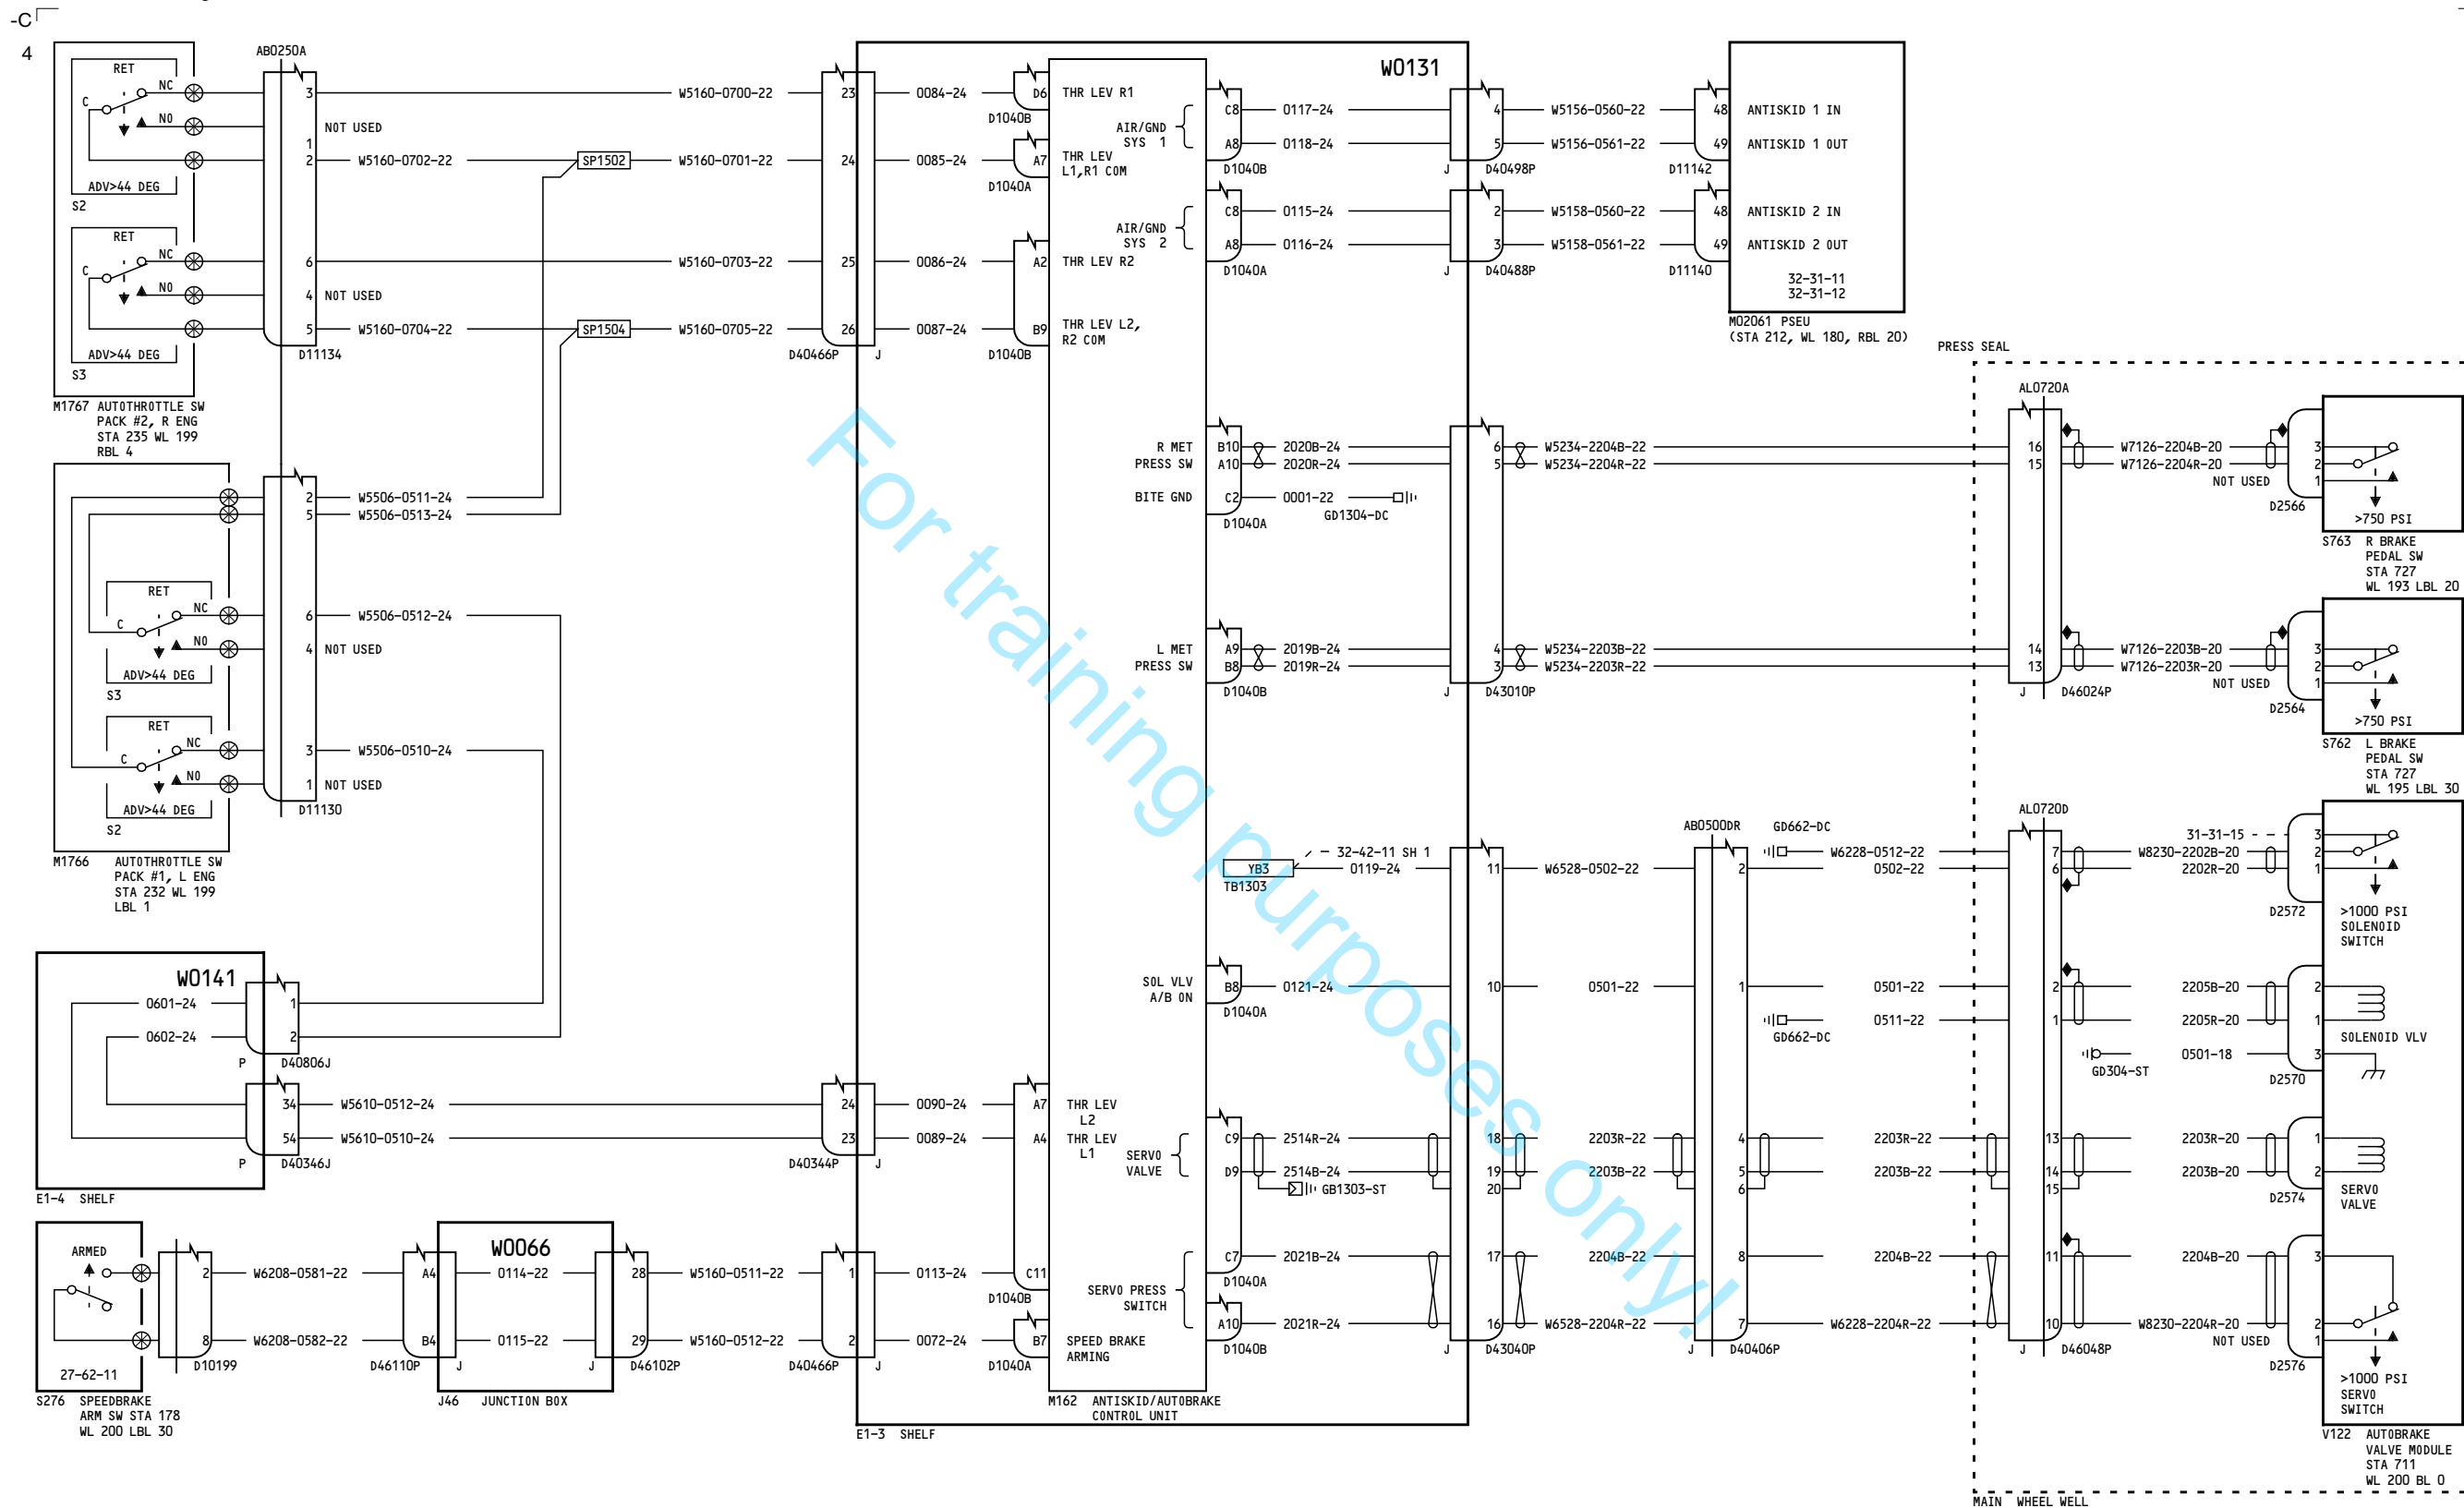

YC051-YD152

AUTOBRAKE SYSTEM


D280A108

32-42-11

Page 1  
Sheet 2  
Oct 06/2010

32-42-11

Page 1  
Sheet 2  
Oct 06/2010

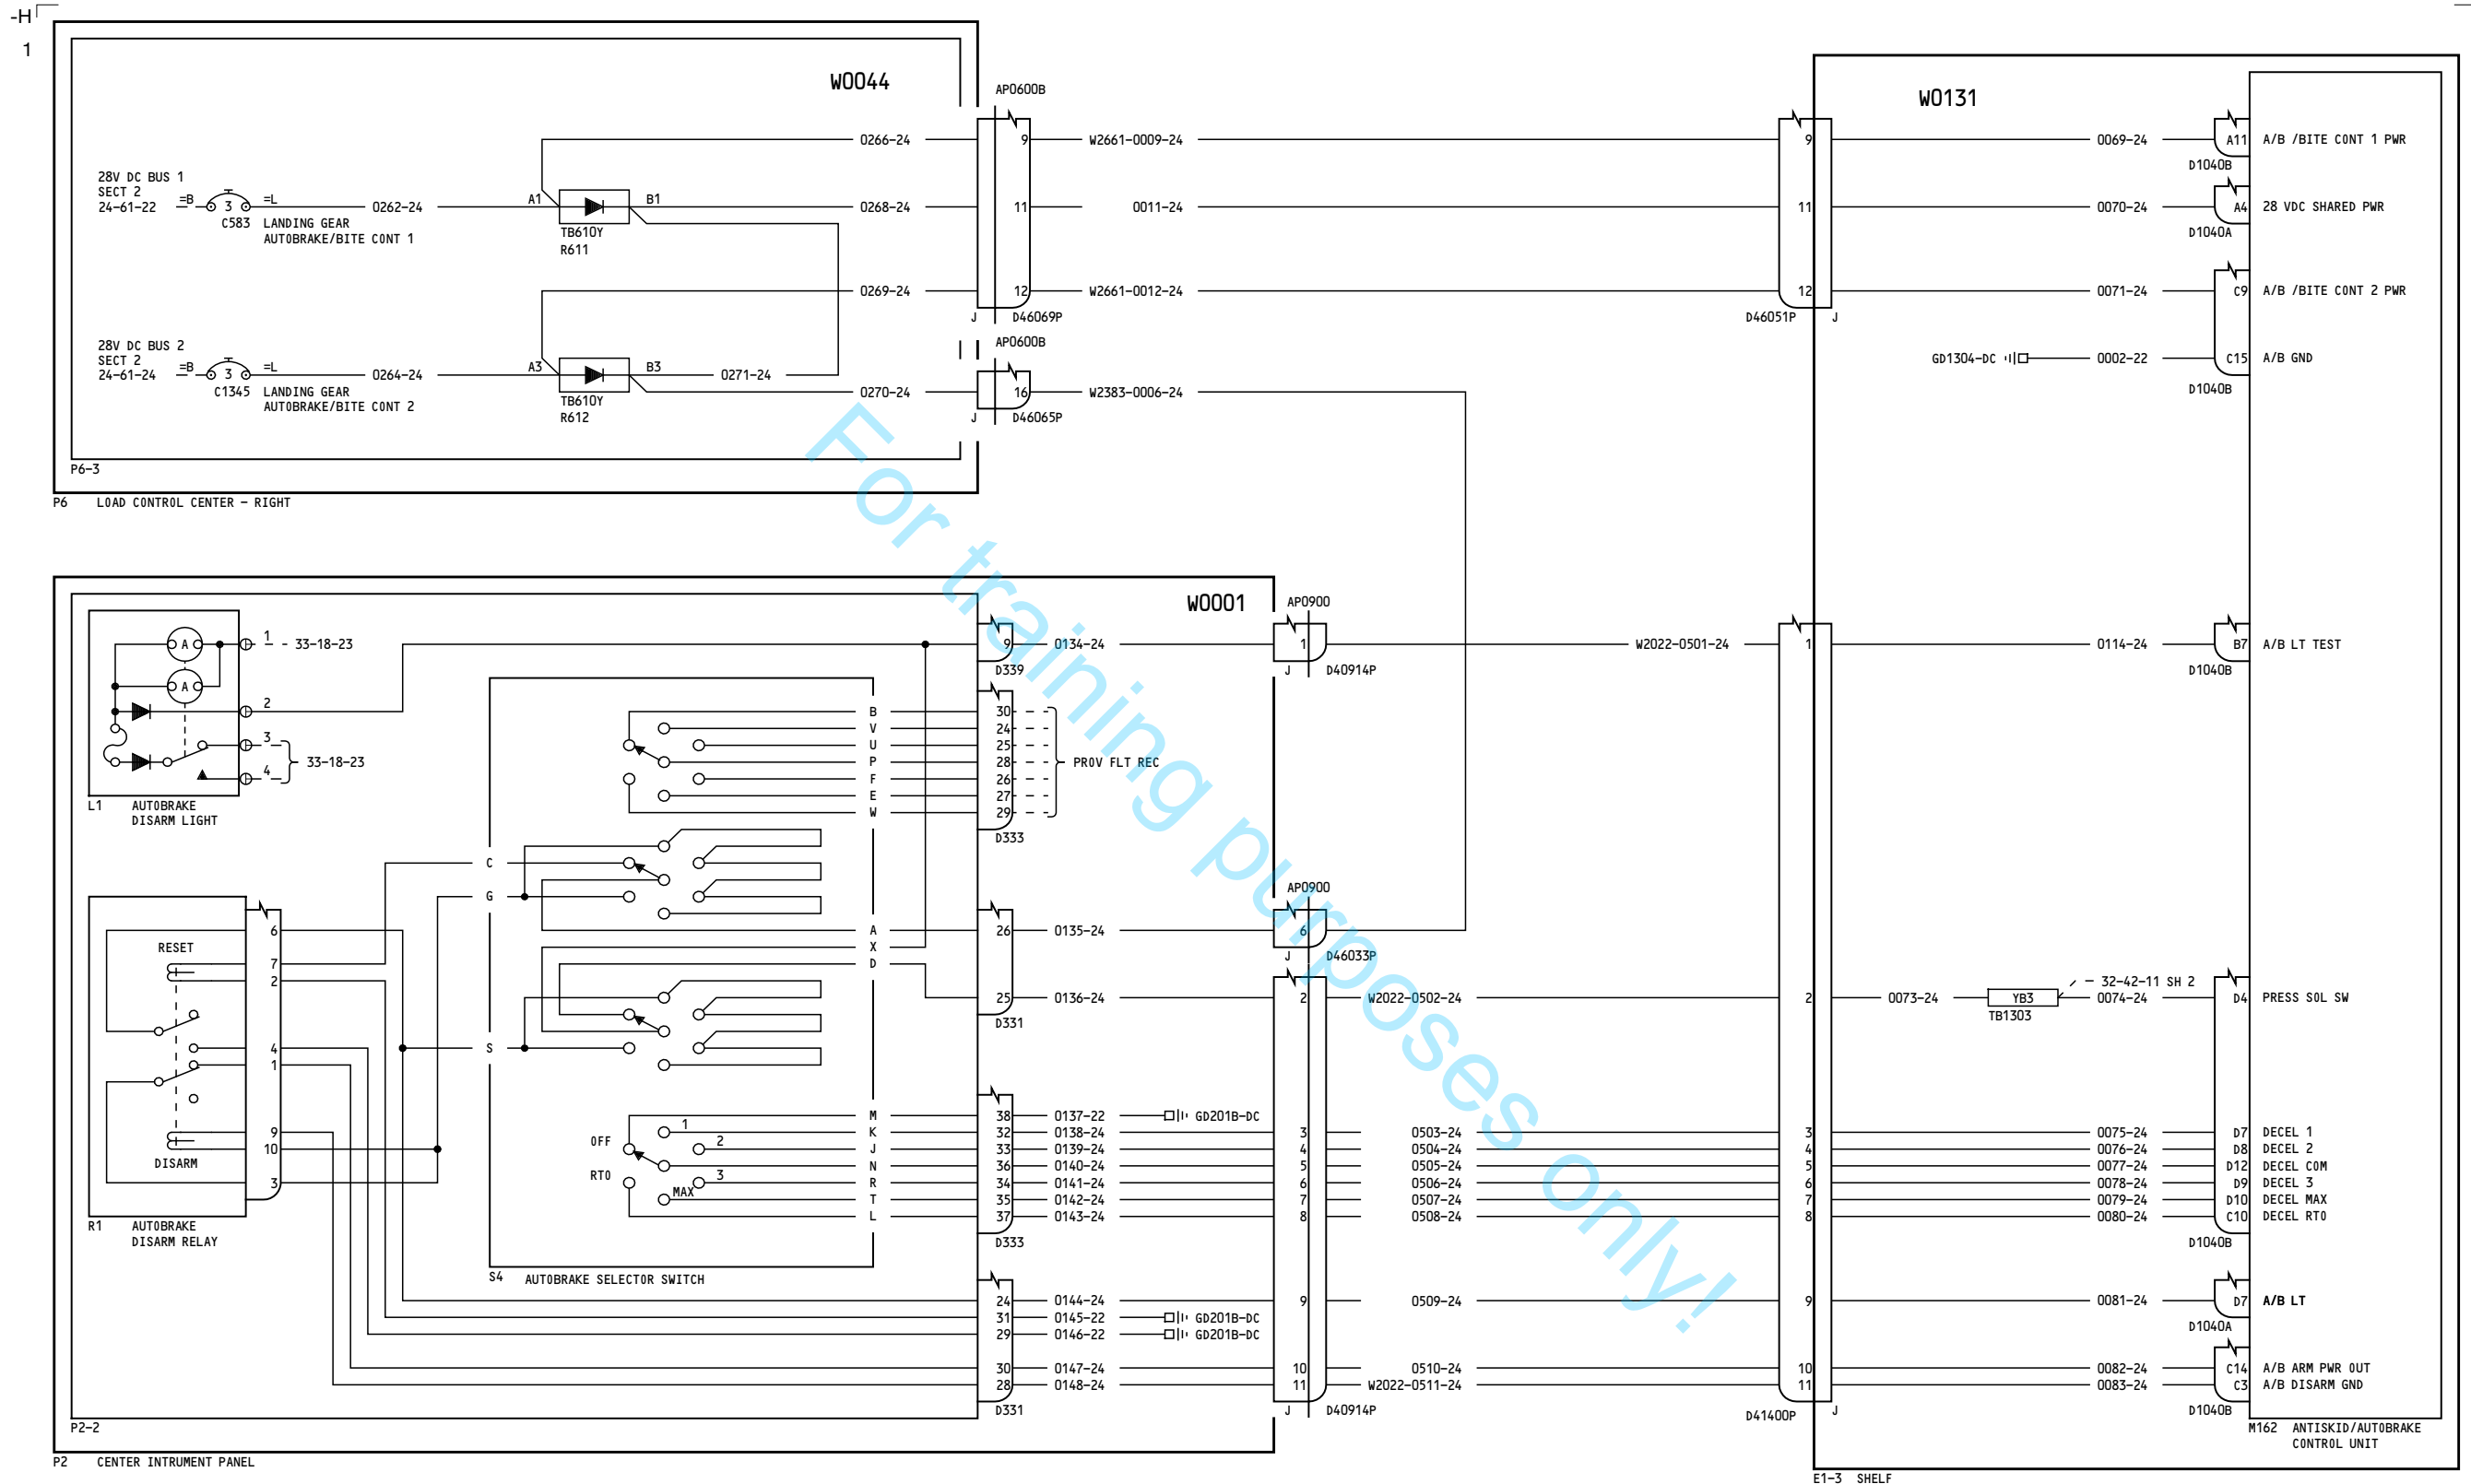

YD153-YR328

**AUTOBRAKE SYSTEM**

D280A108


**32-42-11**

Page 2  
Sheet 1  
Nov 12/2012

**32-42-11**

Page 2  
Sheet 1  
Nov 12/2012



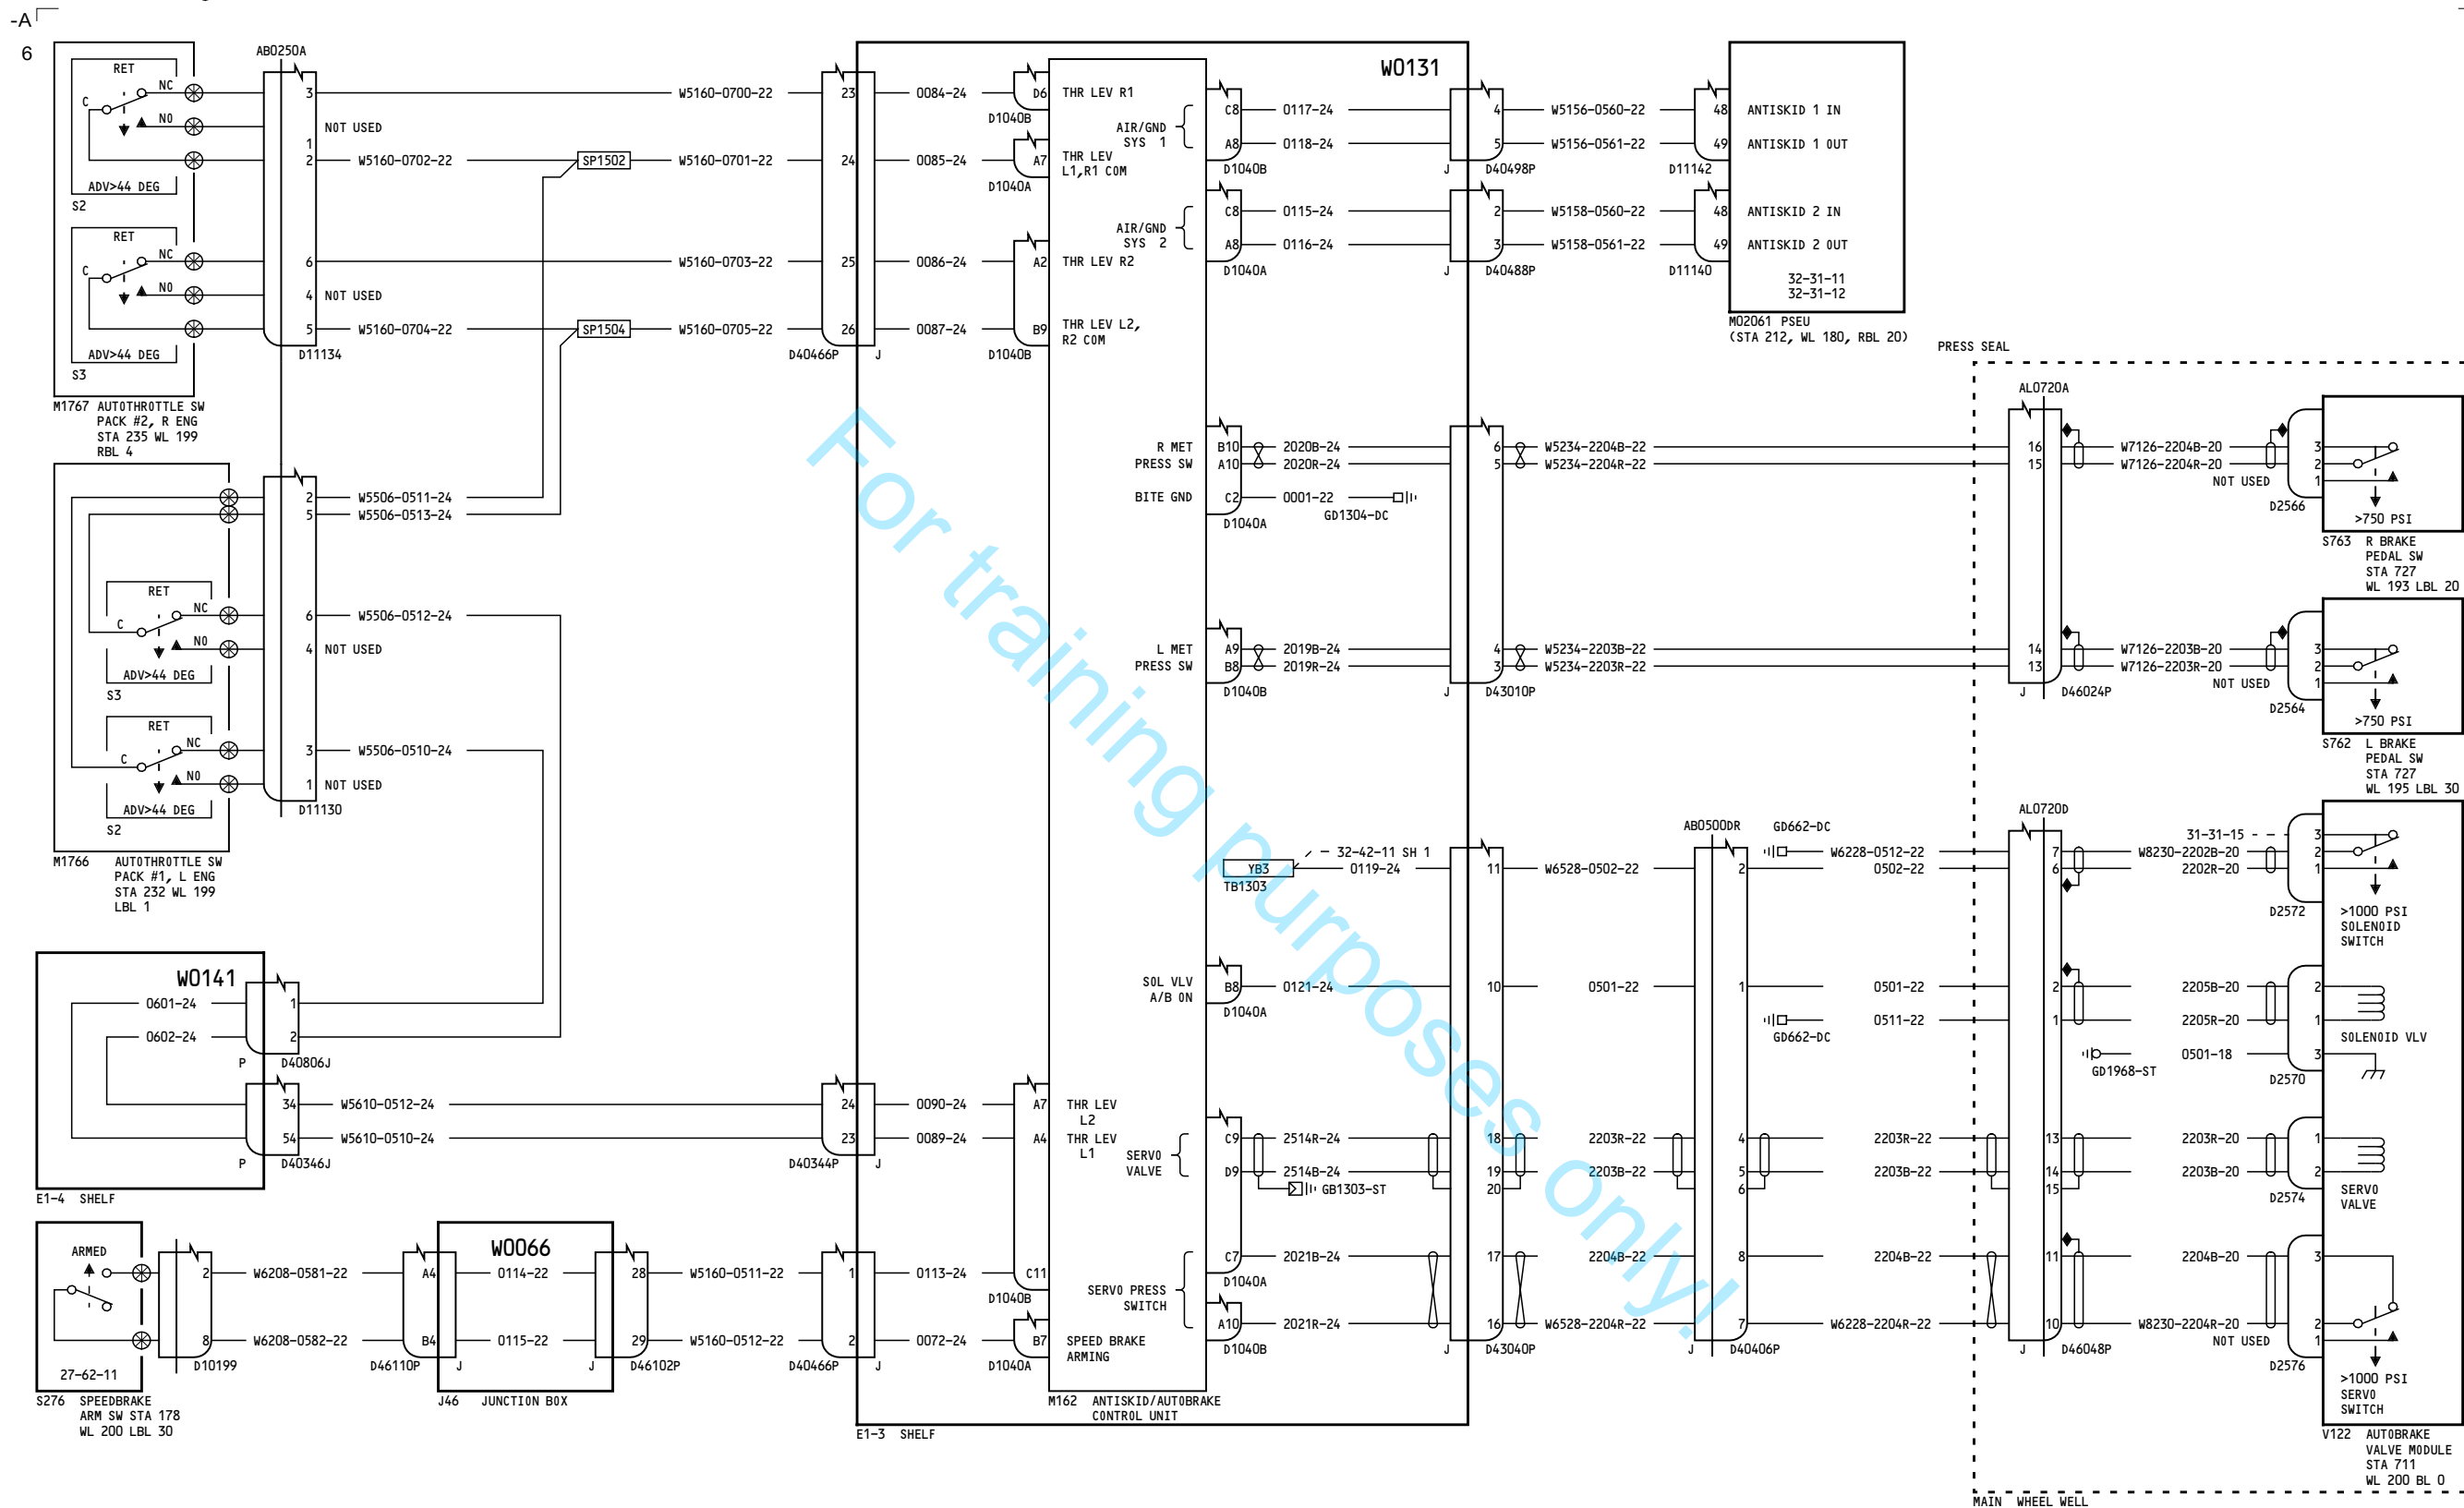

YD153-YR328

**AUTOBRAKE SYSTEM**


D280A108

**32-42-11**

Page 2  
Sheet 2  
Nov 12/2012

**32-42-11**

Page 2  
Sheet 2  
Nov 12/2012

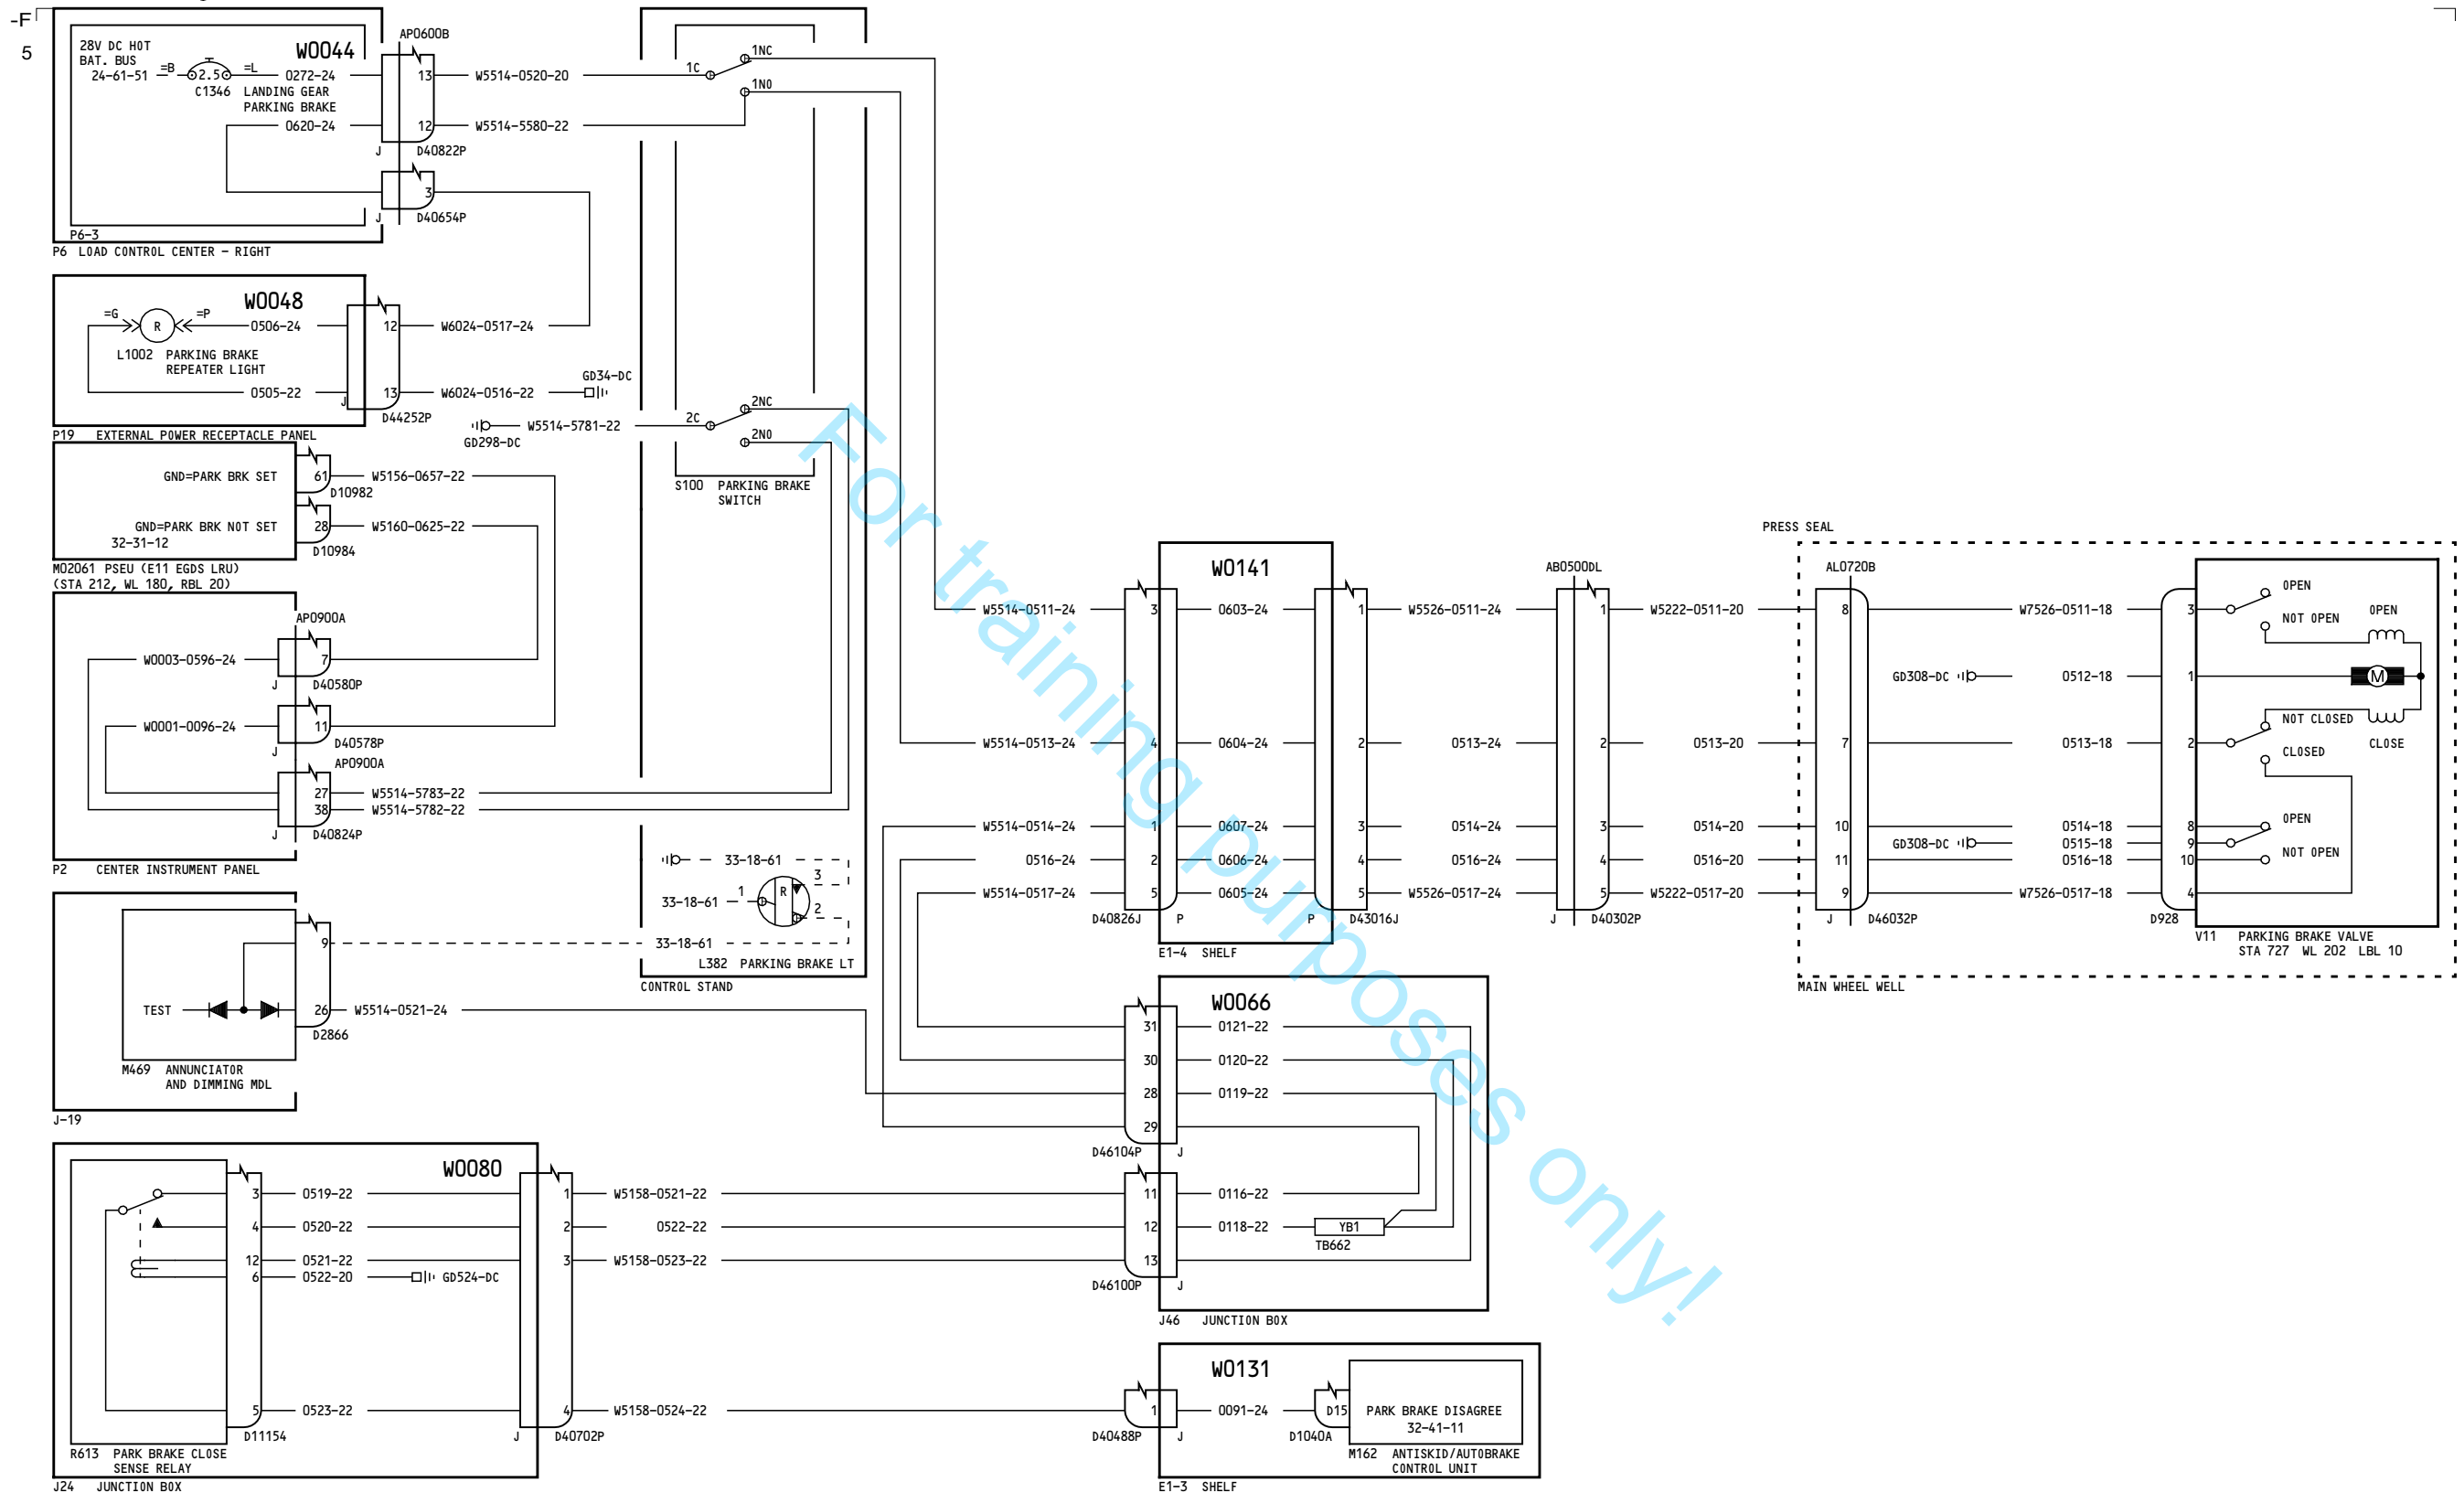

YC051-YD157

## PARKING BRAKE SYSTEM

32-44-11

Page 1

Nov 12/2012


D280A108

32-44-11

Page 1

 Nov 12/2012





**32-44-11**


D280A108

**32-44-11**

Nov 12/2012

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

Nov 12/2012

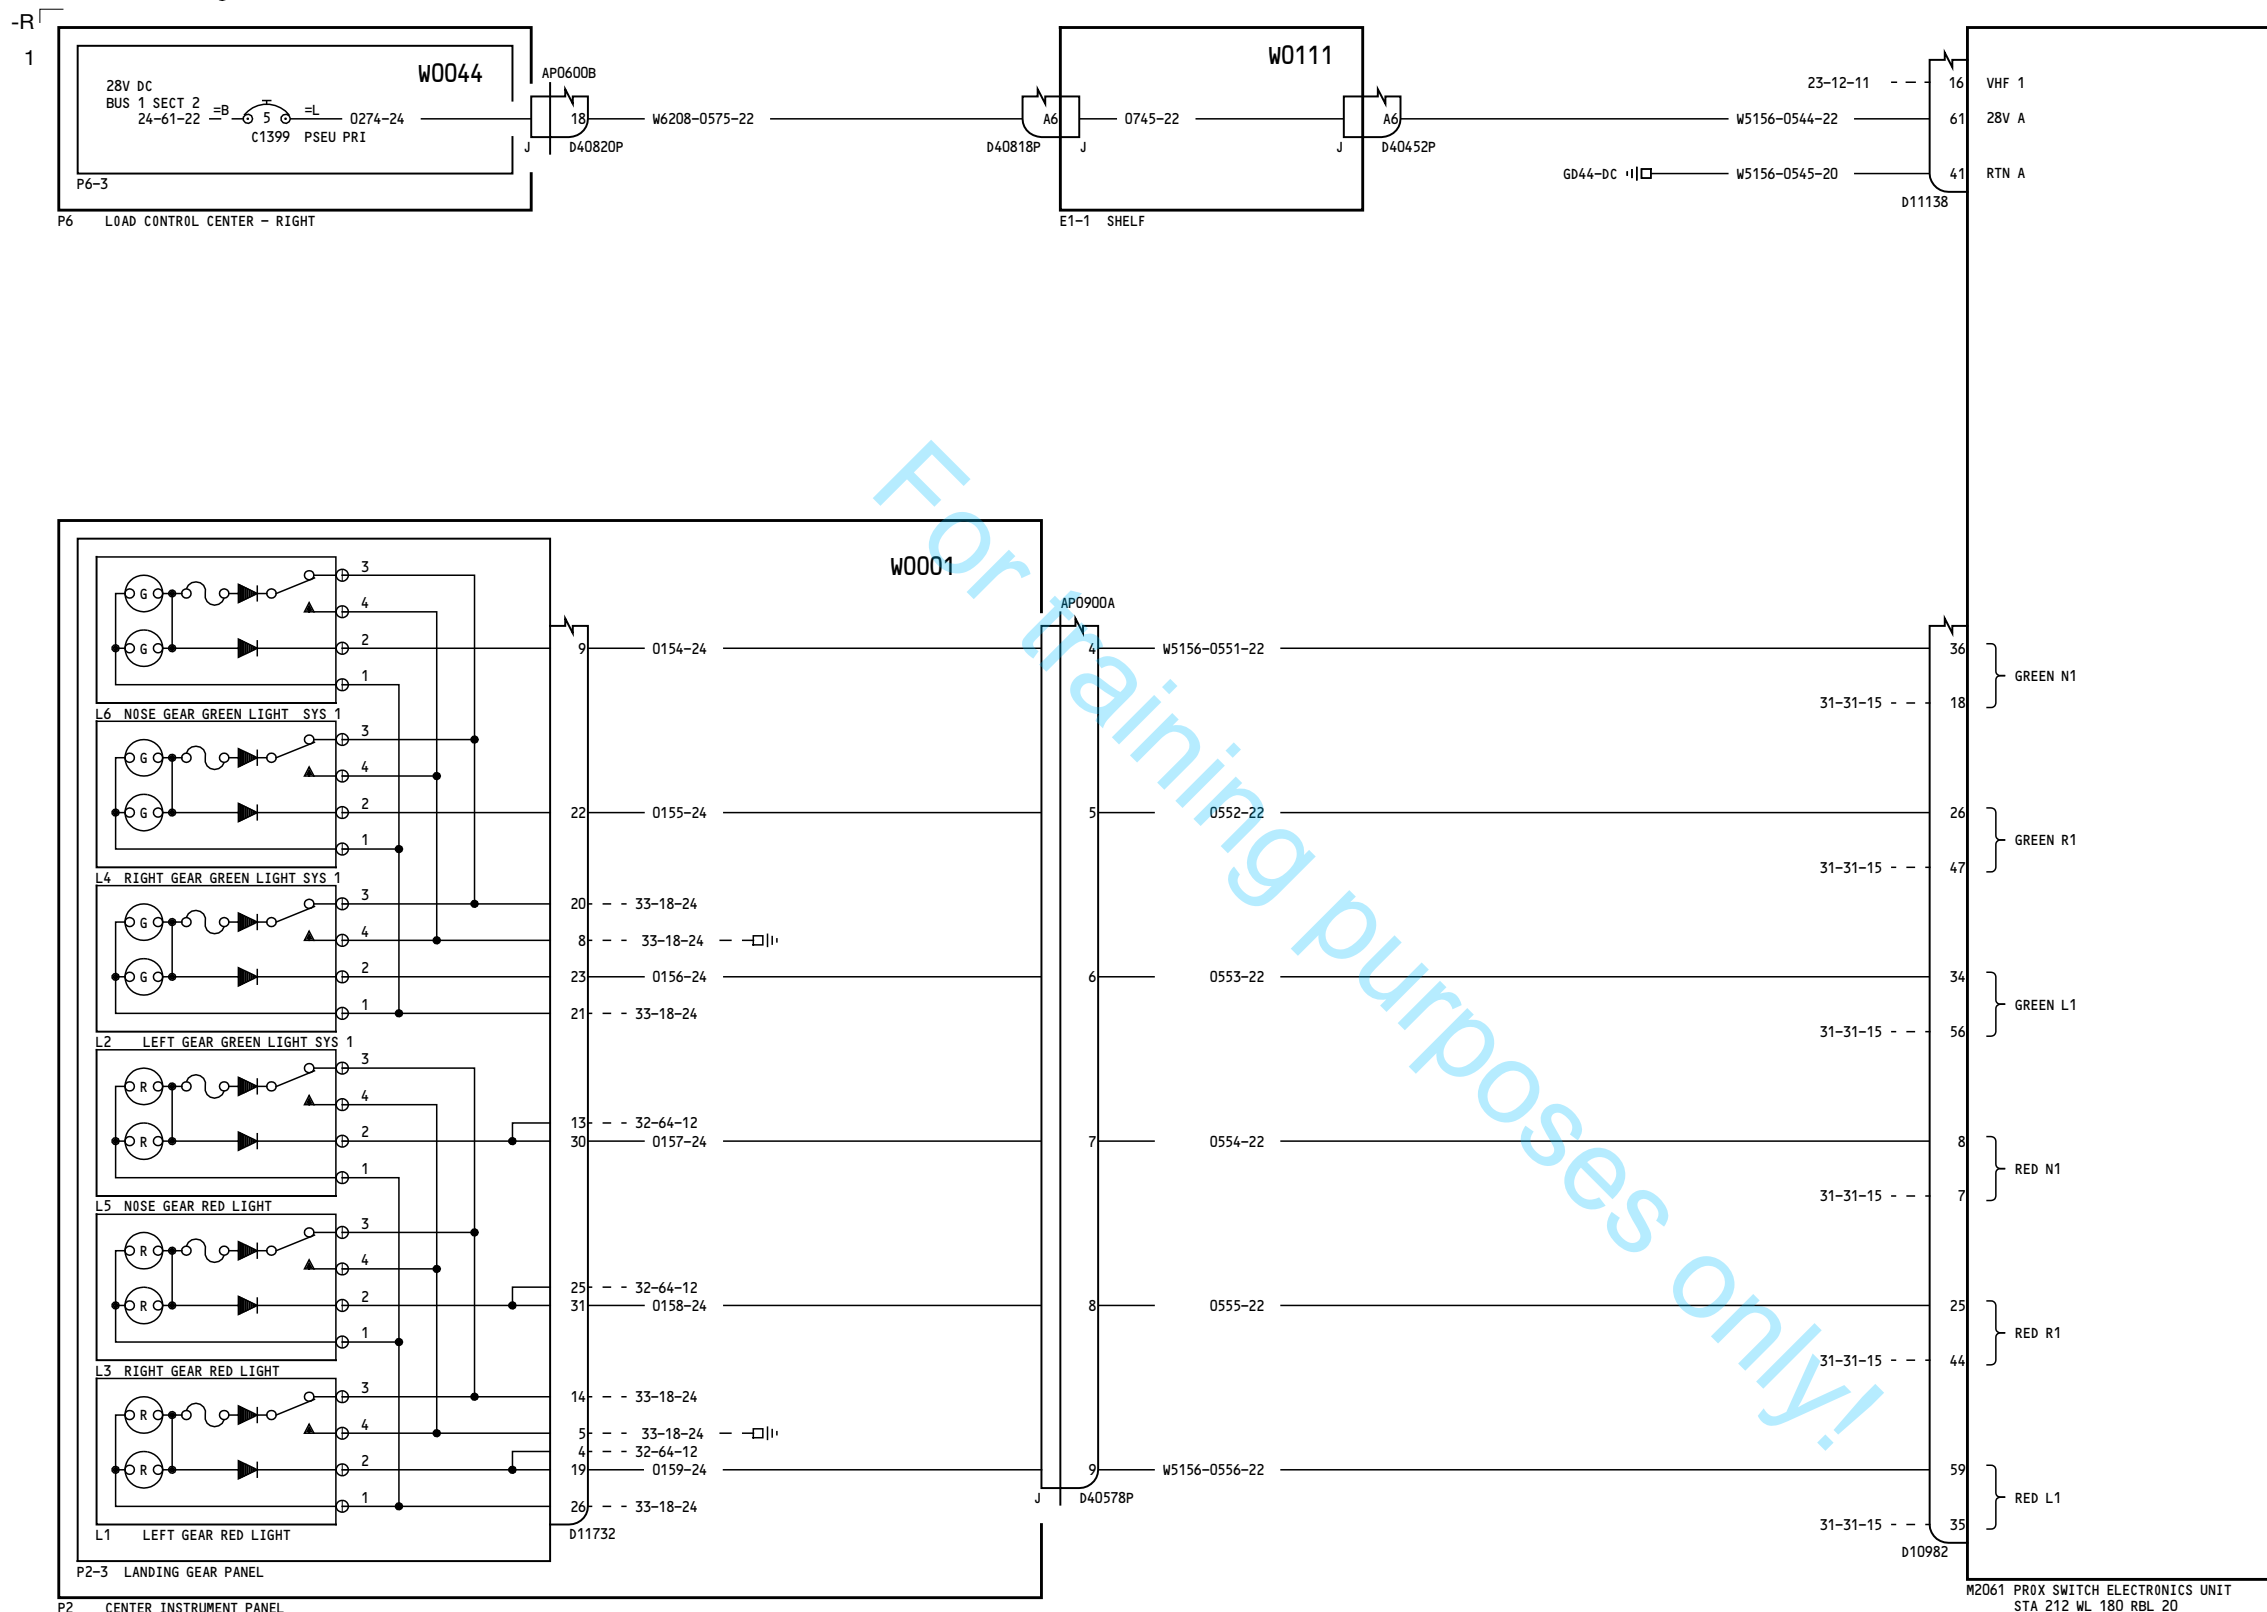

YC051-YC061

**LANDING GEAR POSITION  
INDICATING SYSTEM 1**

D280A108

**32-64-11**


Page 1  
Sheet 1  
Feb 10/2005

**32-64-11**



Page 1  
Sheet 1  
Feb 10/2005

-K


2

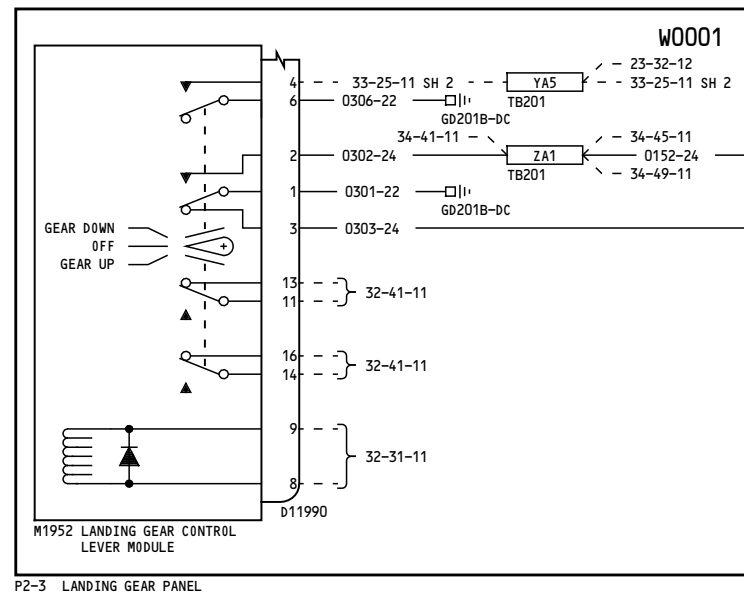

For training purposes only

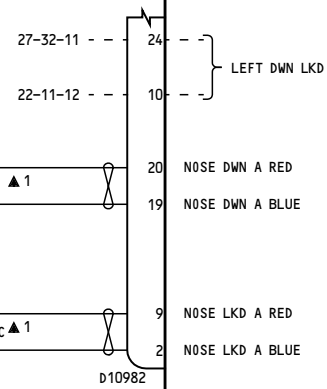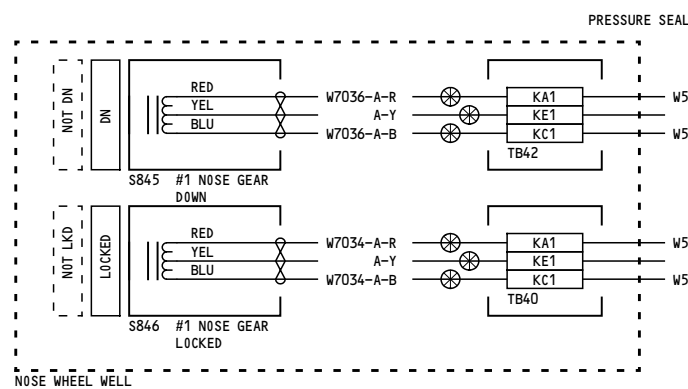

M2061 PROX SWITCH ELECTRONICS UNIT  
STA 212 WL 180 RBL 20

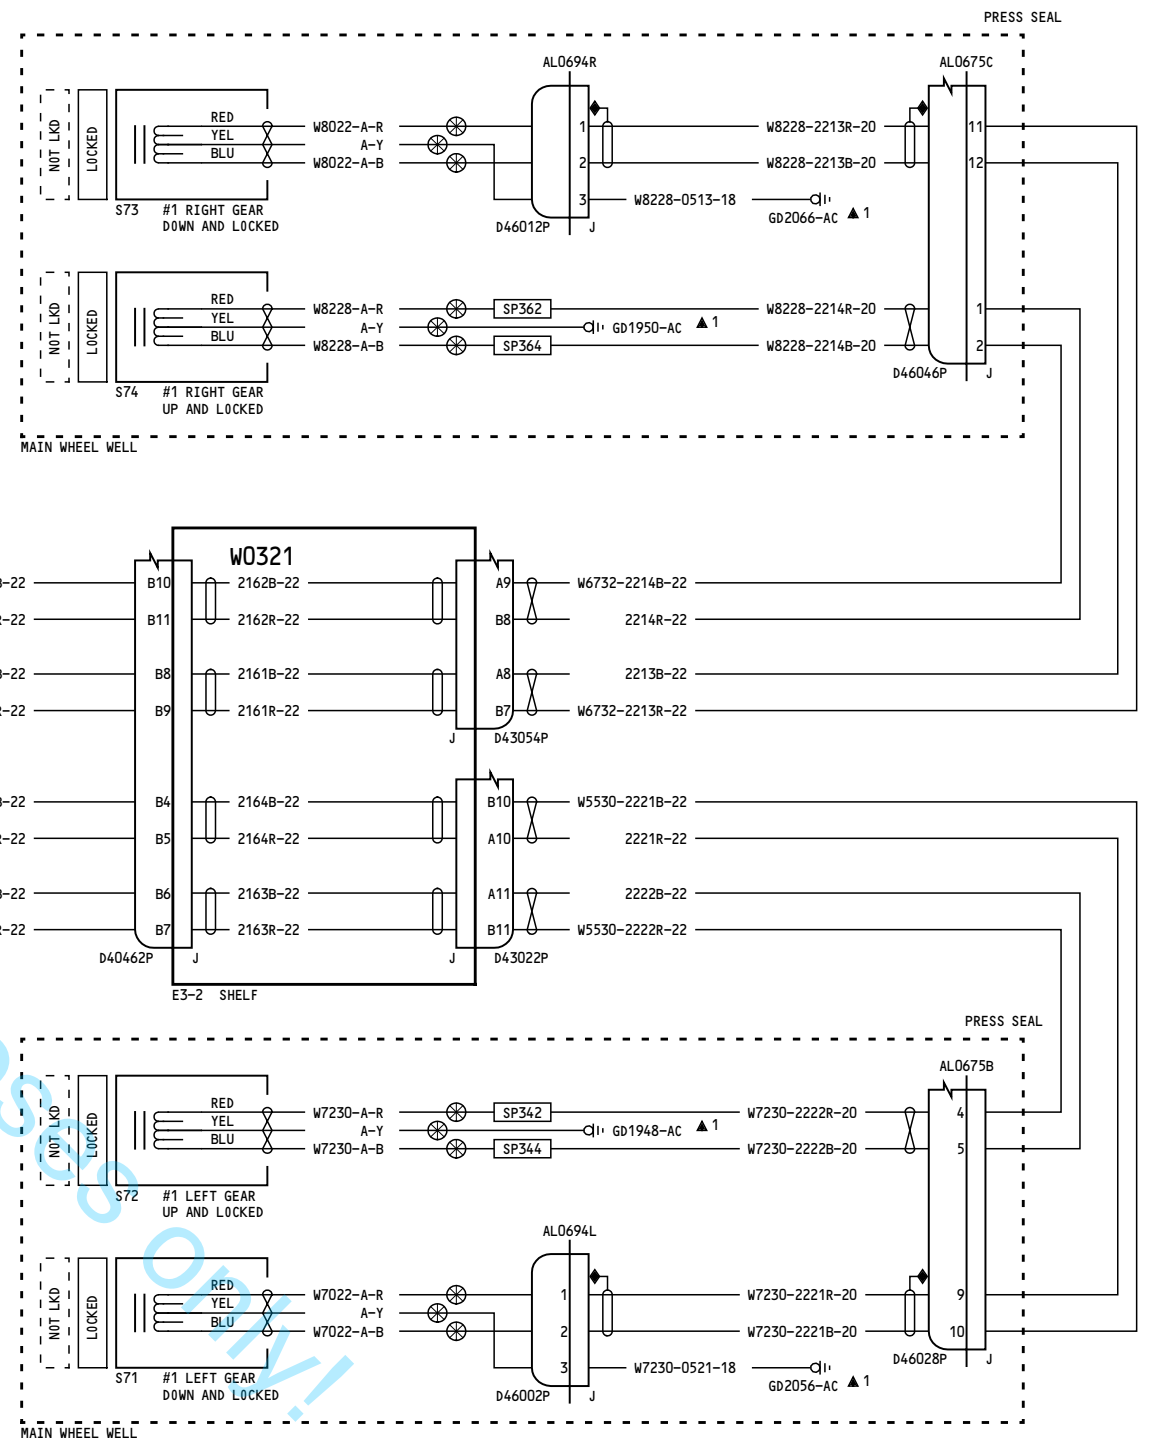

YC051-YC061

**LANDING GEAR POSITION  
INDICATING SYSTEM 1**


D280A108

**32-64-11**

Page 1  
Sheet 2  
Feb 10/2005

**32-64-11**

Page 1  
Sheet 2  
Feb 10/2005

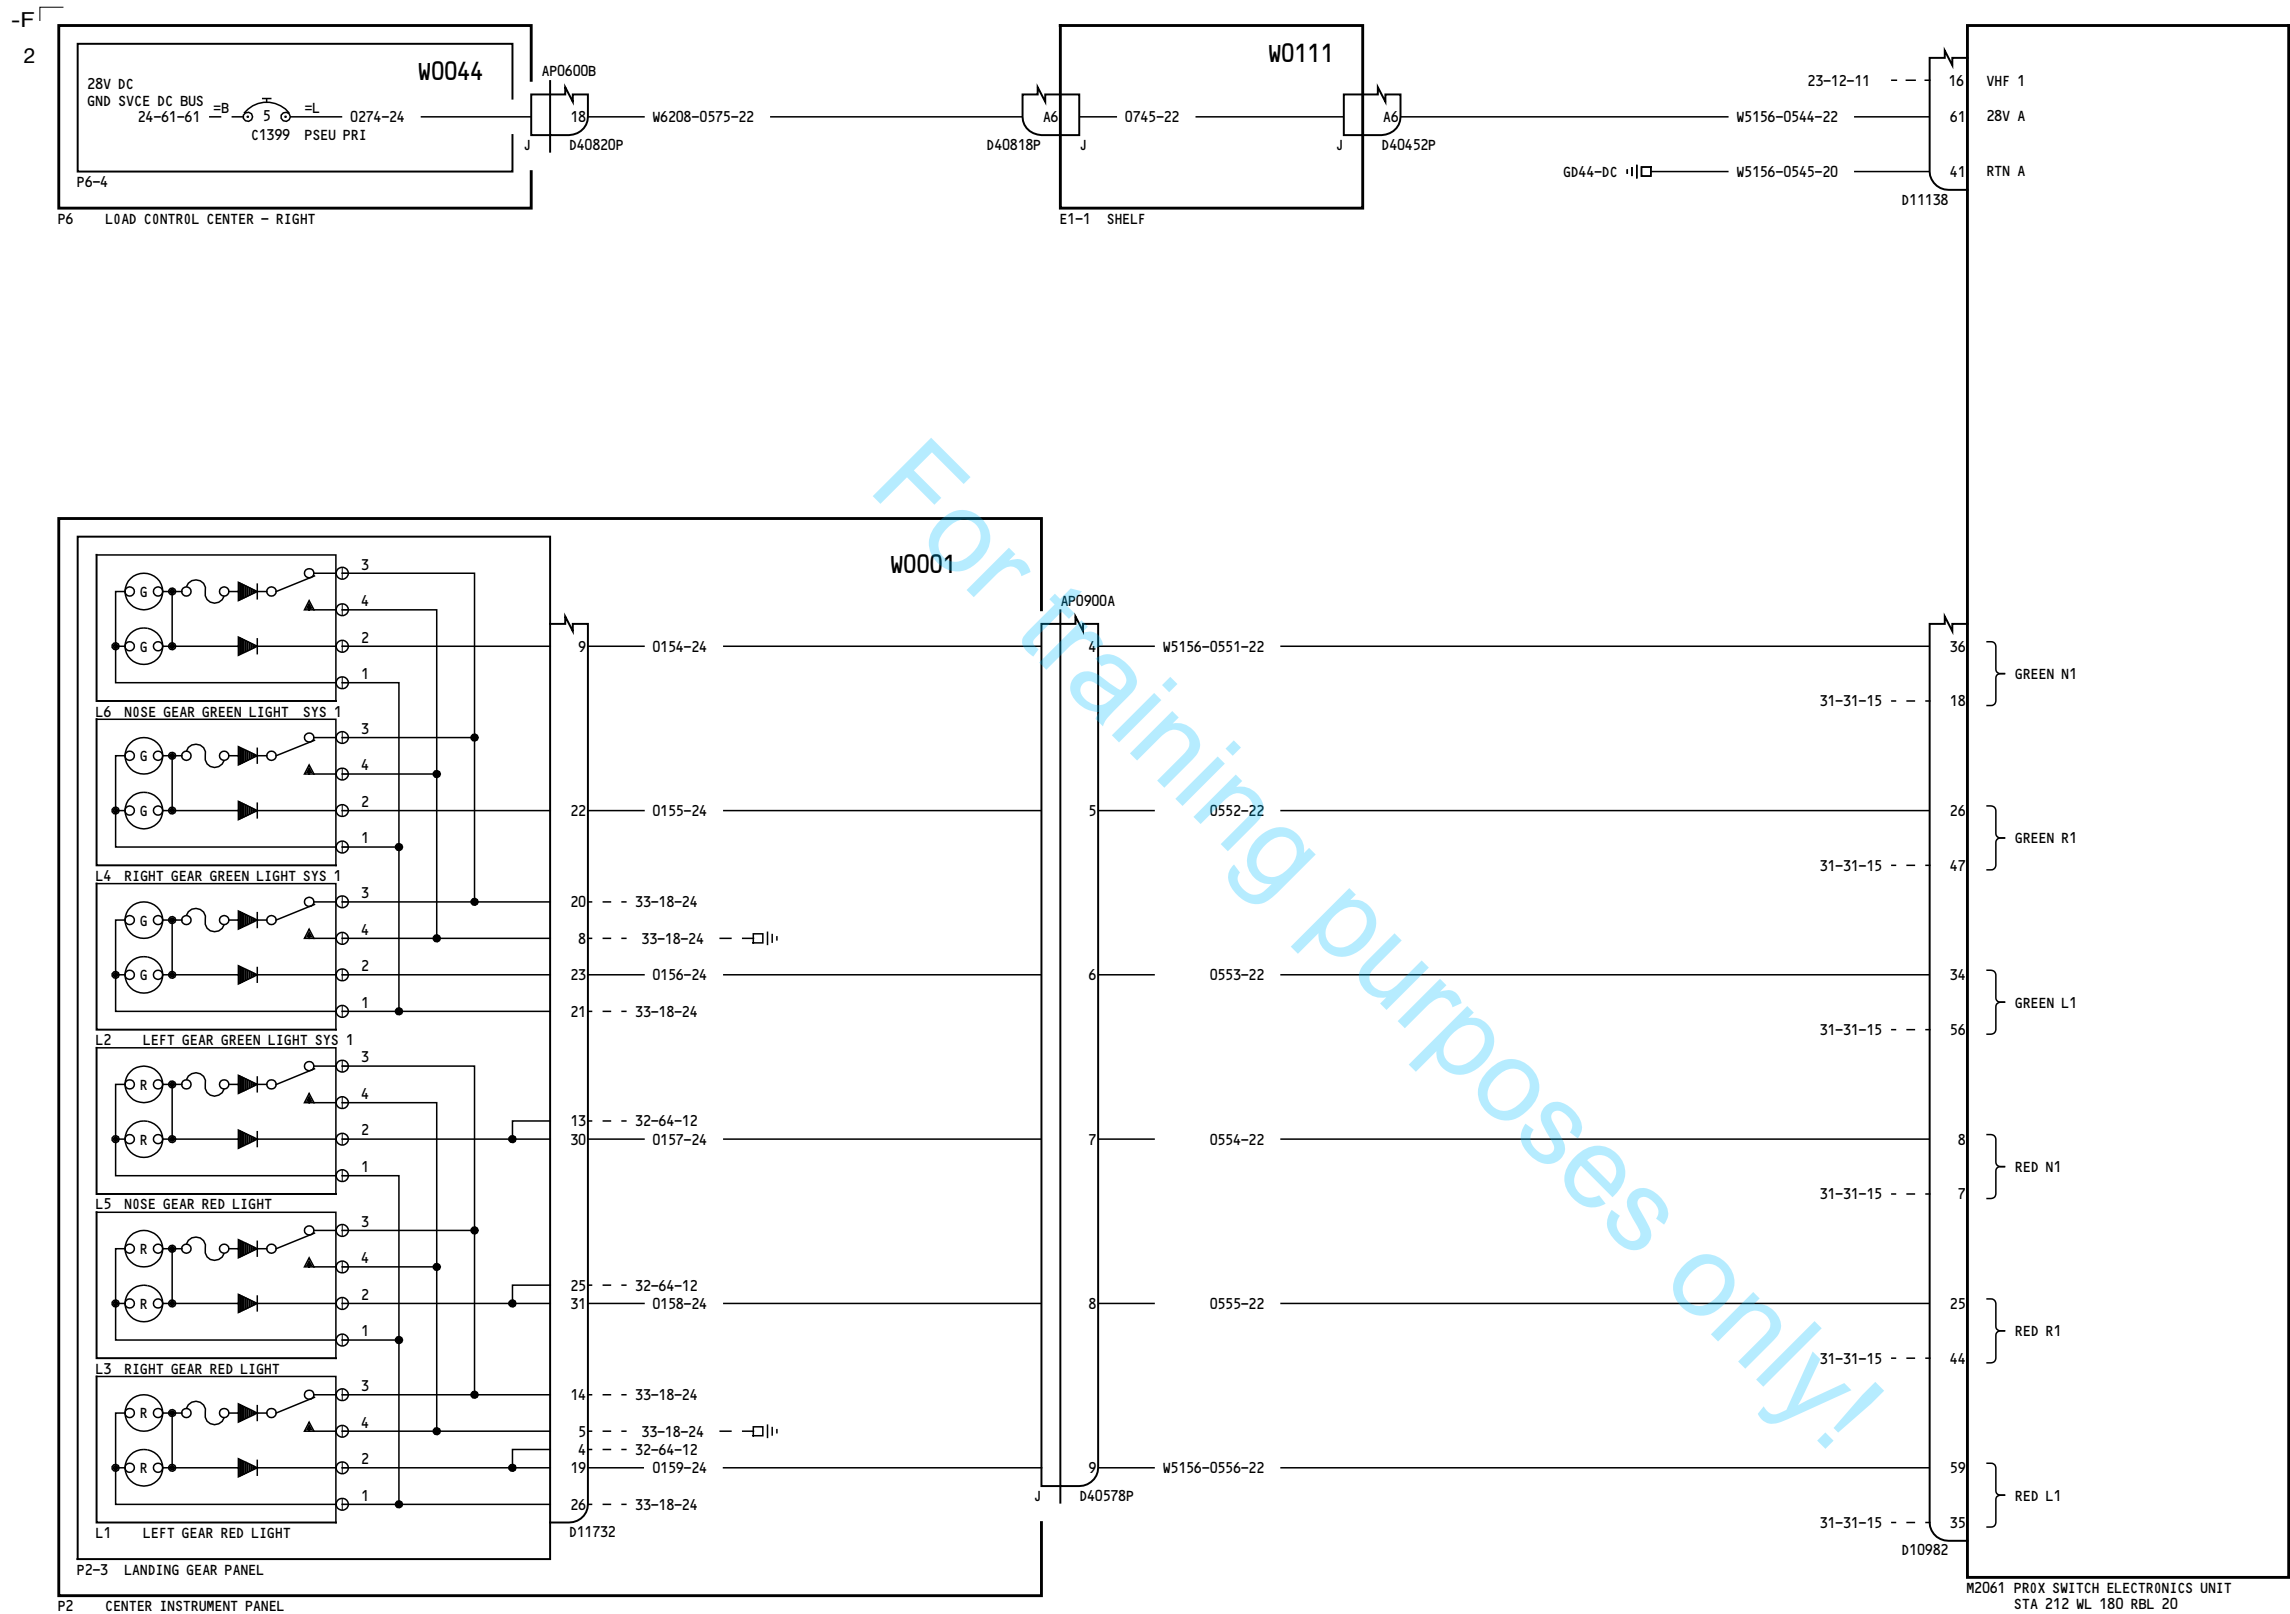

YC062-YD152

**LANDING GEAR POSITION  
INDICATING SYSTEM 1**

D280A108

**32-64-11**

Page 2  
Sheet 1  
Oct 06/2010


**32-64-11**

Page 2  
Sheet 1  
Oct 06/2010





-K




2

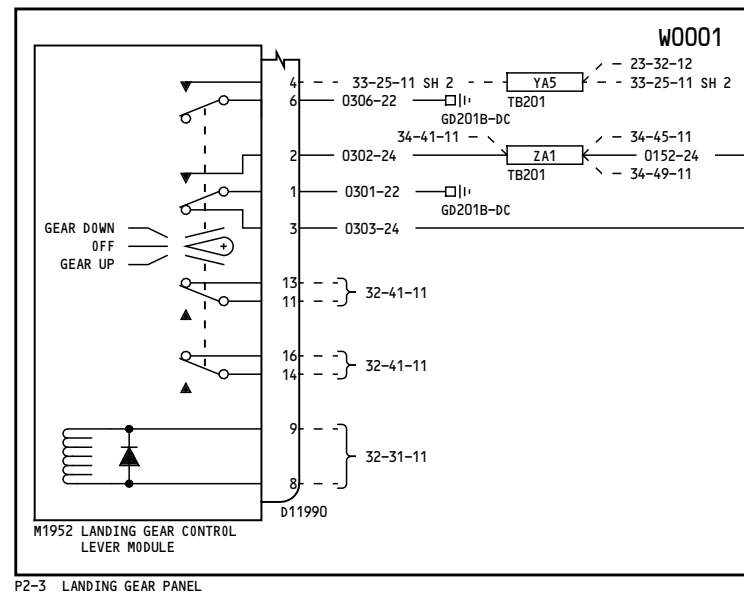

For training purposes only

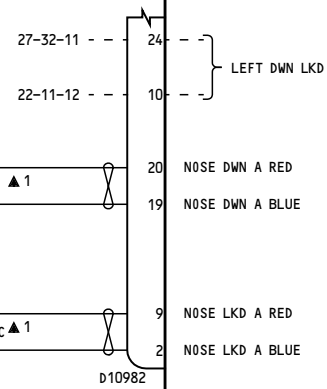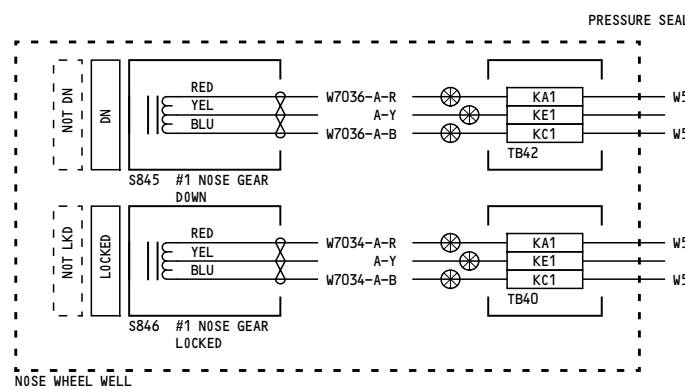

M2061 PROX SWITCH ELECTRONICS UNIT  
STA 212 WL 180 RBL 20

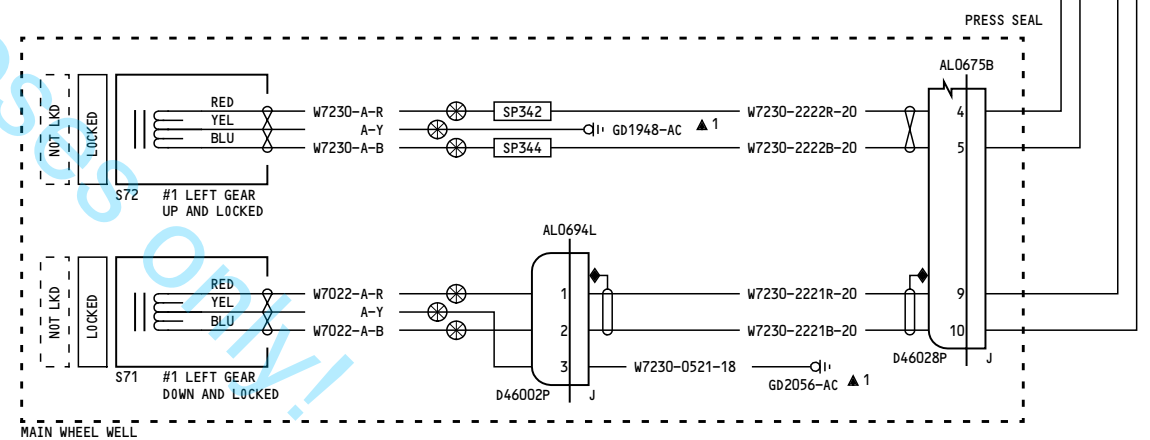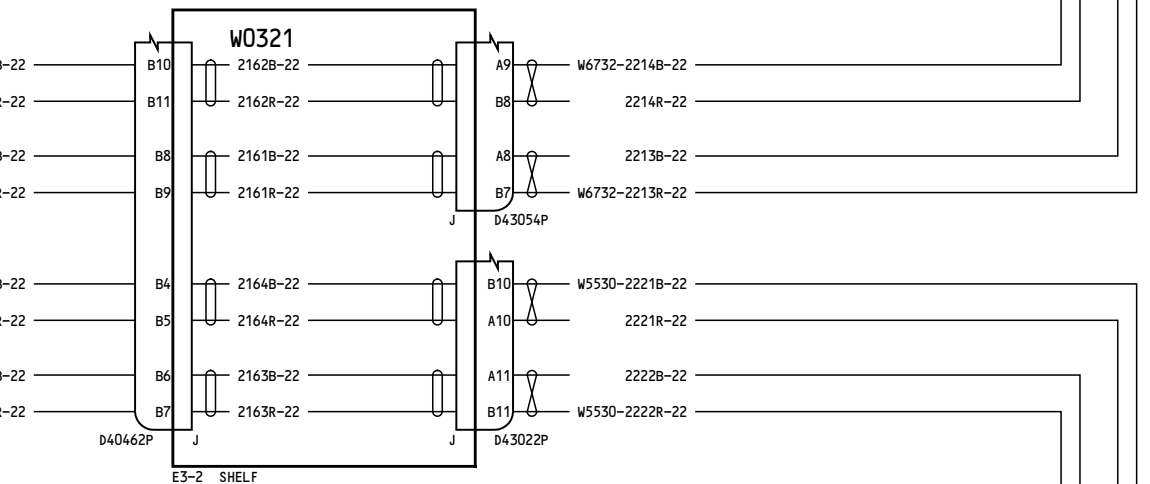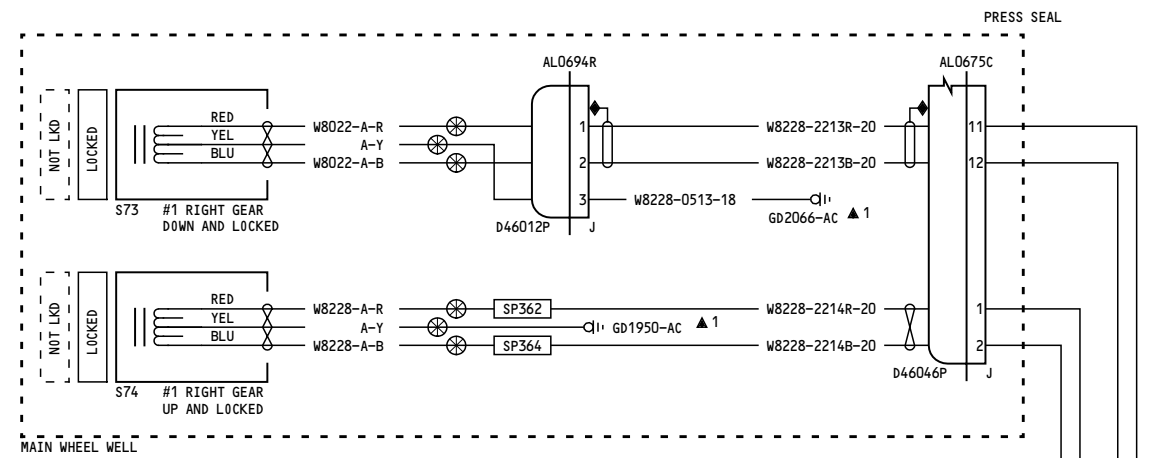

YC062-YD152

**LANDING GEAR POSITION  
INDICATING SYSTEM 1**


D280A108

**32-64-11**

Page 2  
Sheet 2  
Oct 06/2010

**32-64-11**

Page 2  
Sheet 2  
Oct 06/2010

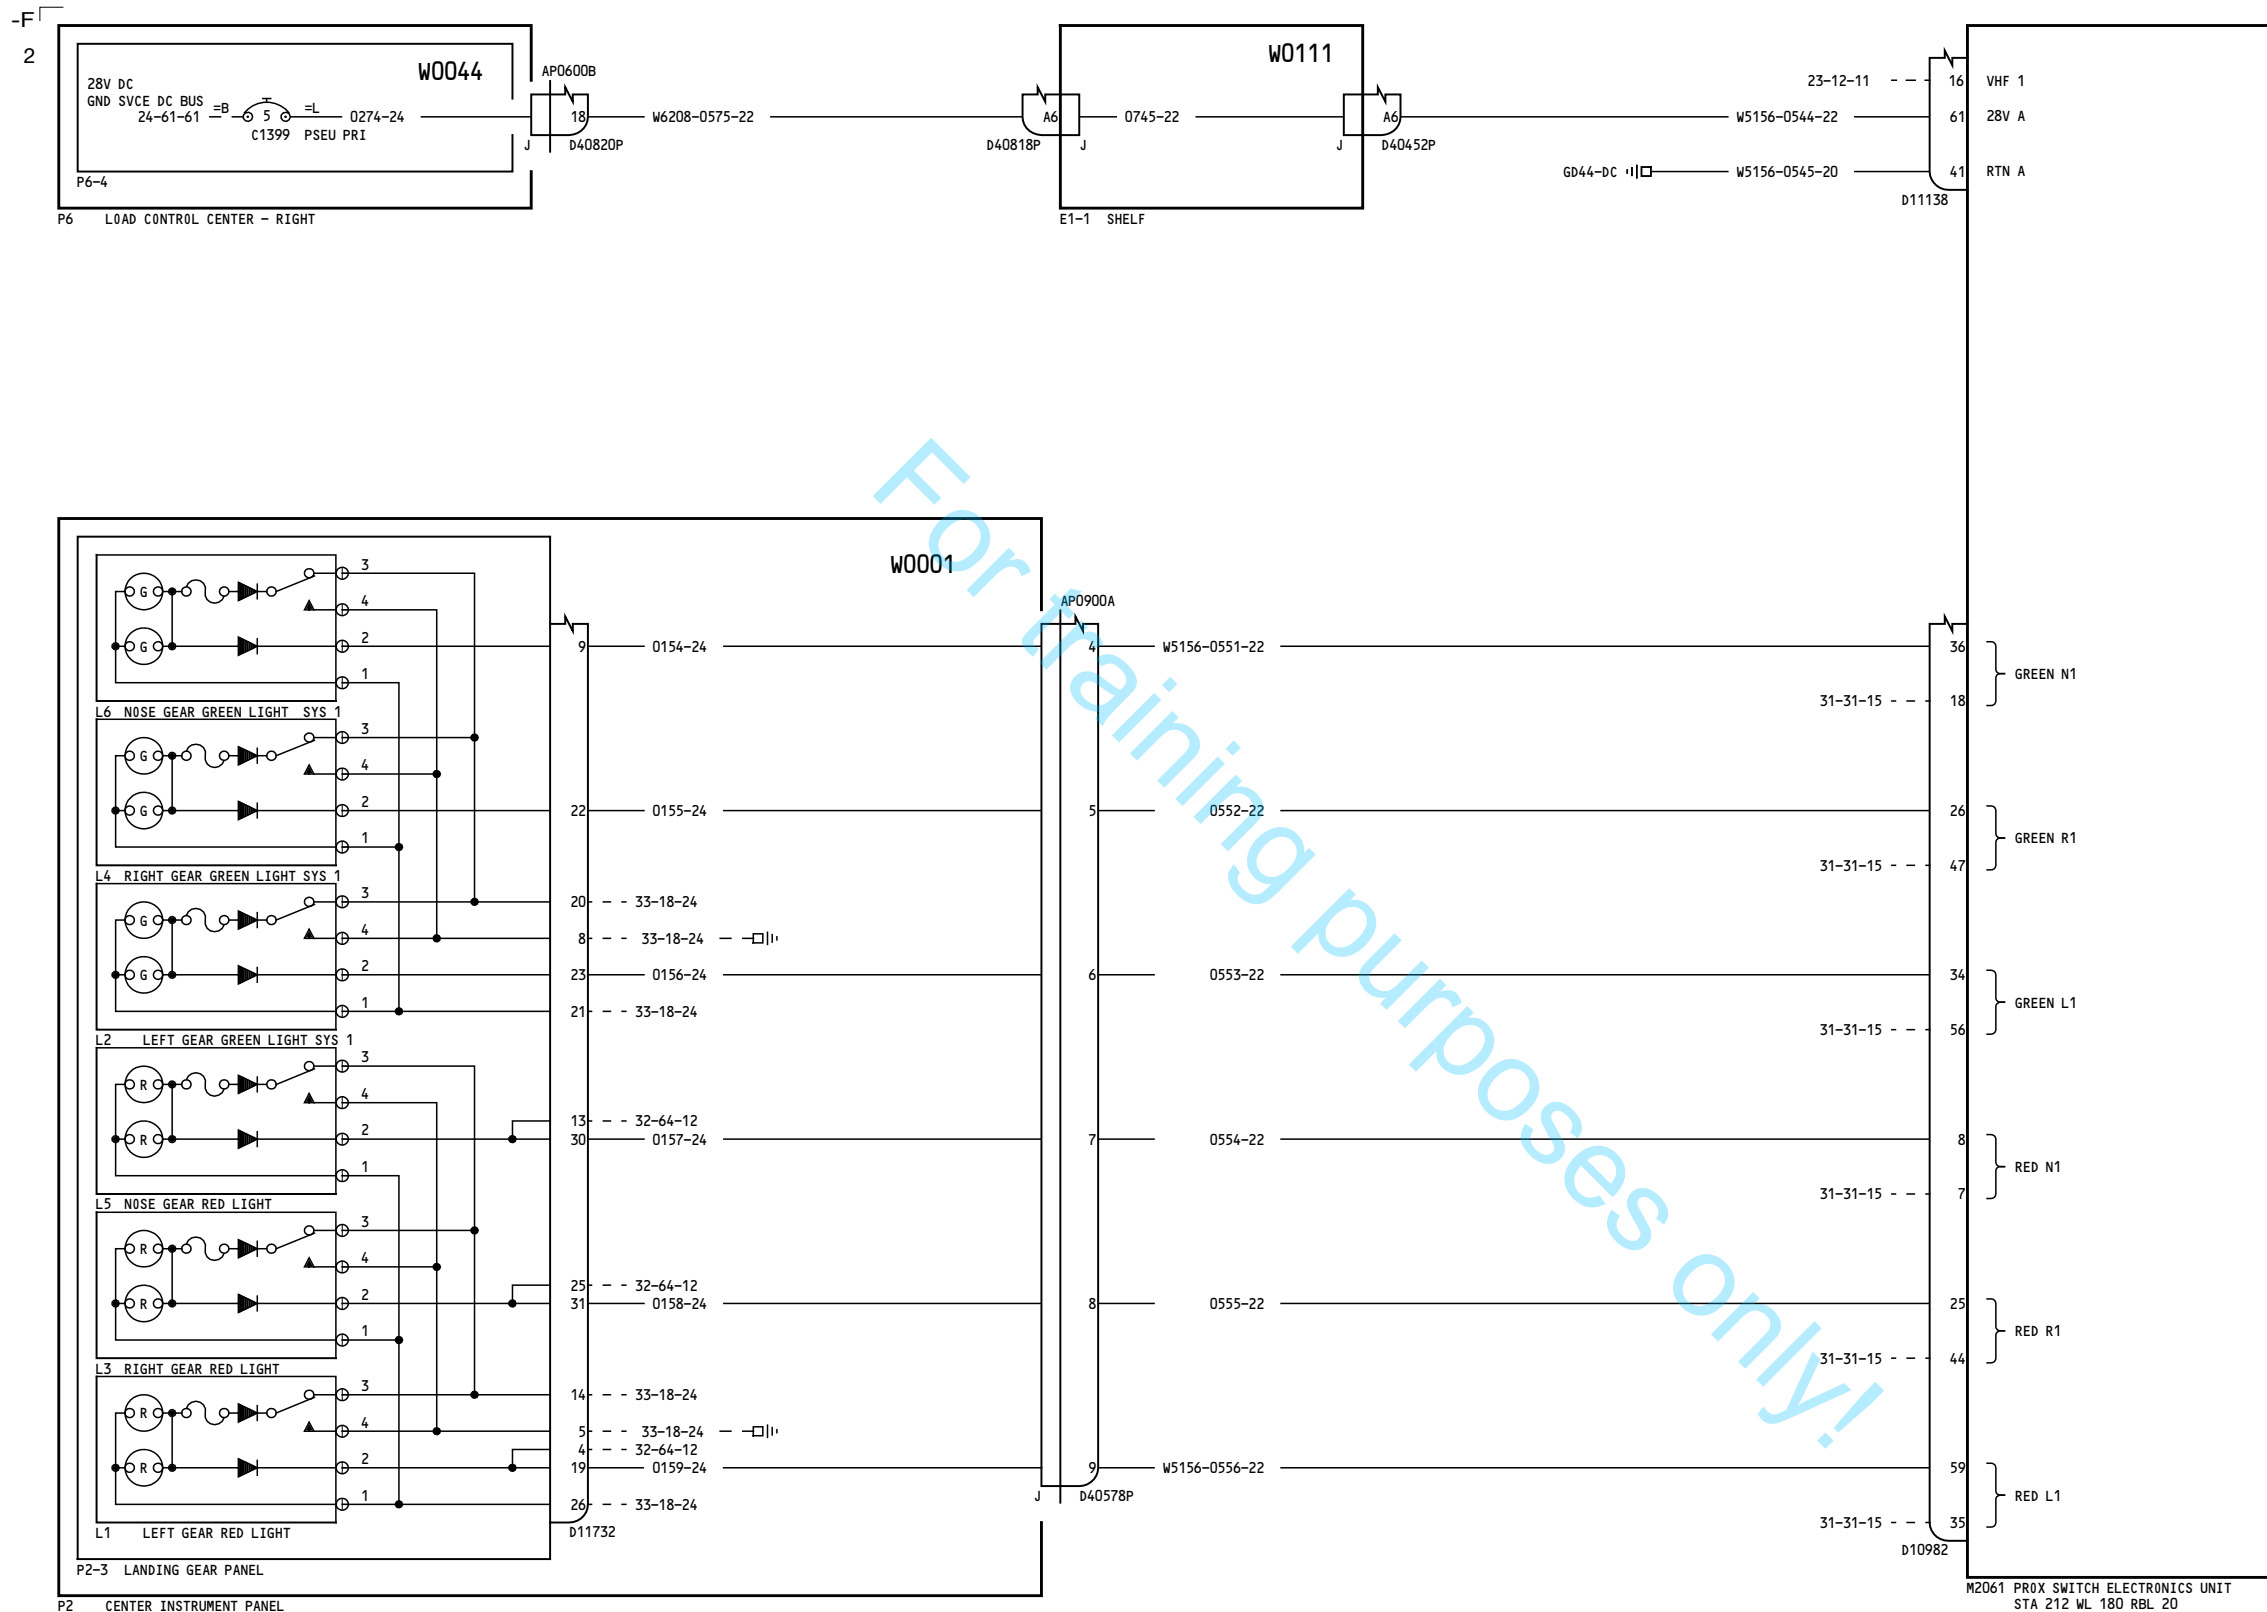

YD153-YD157

**LANDING GEAR POSITION  
INDICATING SYSTEM 1**

D280A108

**32-64-11**


Page 3  
Sheet 1  
Nov 12/2012

**32-64-11**


Page 3  
Sheet 1  
Nov 12/2012

-B





13

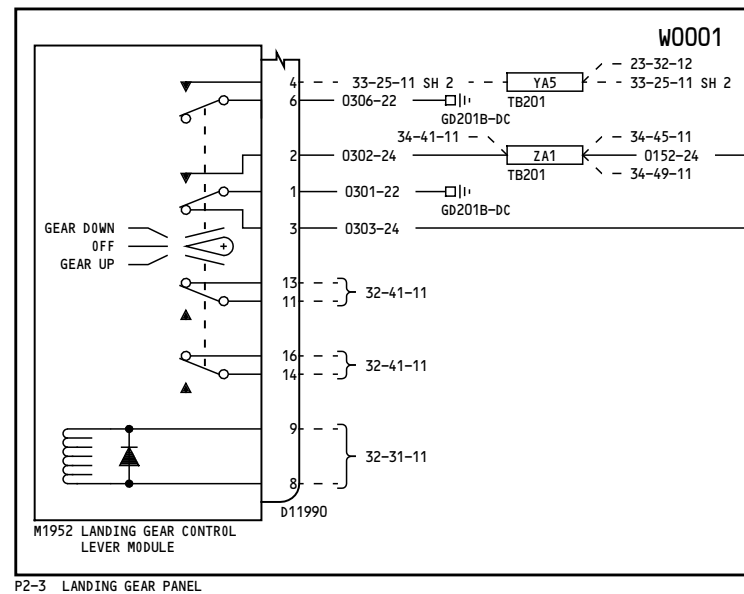

For training purposes only

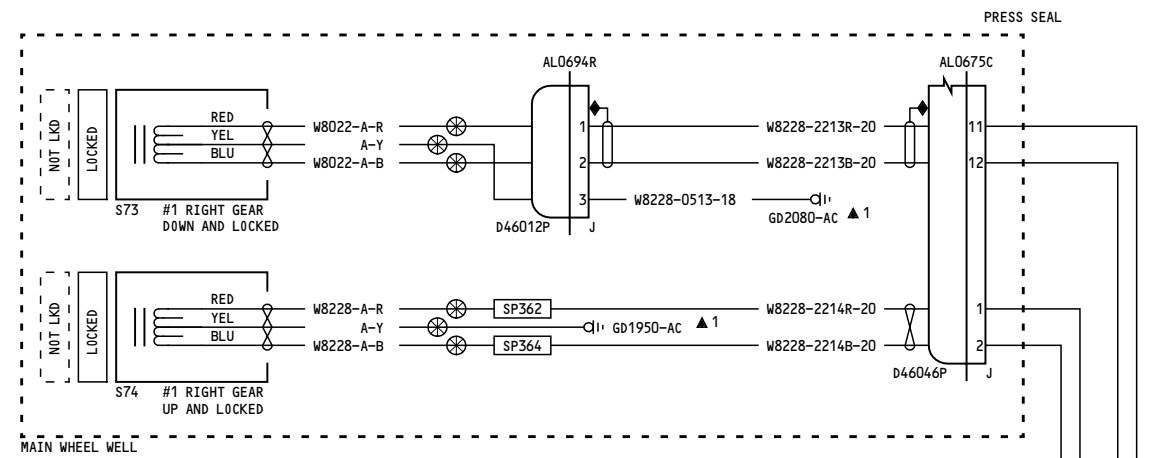

RIGHT UP LKD A BLUE  
RIGHT UP LKD A RED  
RIGHT DWN LKD A BLUE  
RIGHT DWN LKD A RED  
NOSE DWN LKD  
LEFT DWN LKD A BLUE  
LEFT DWN LKD A RED  
LEFT UP LKD A BLUE  
LEFT UP LKD A RED

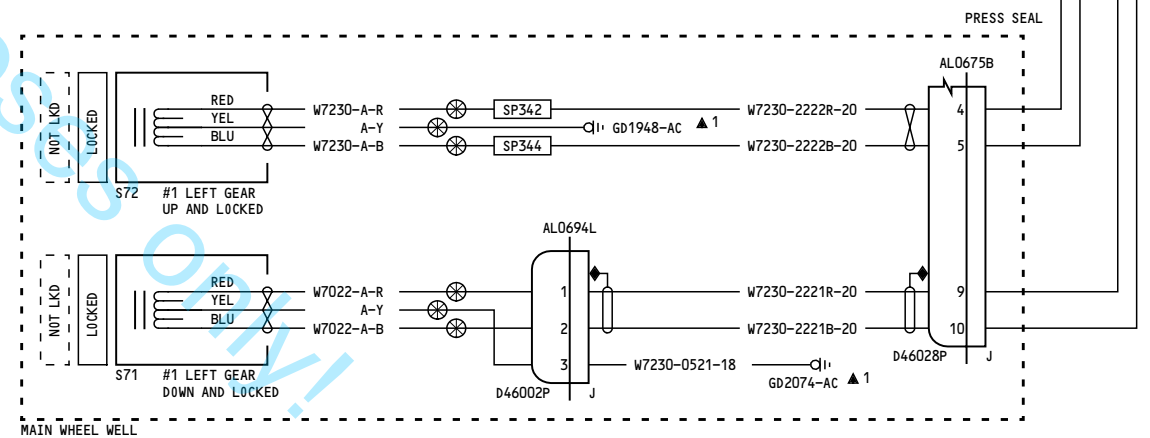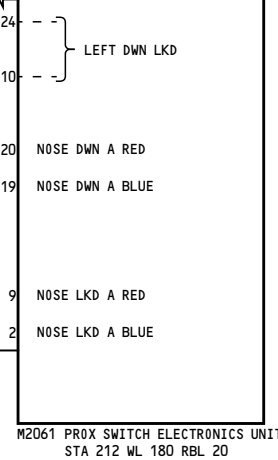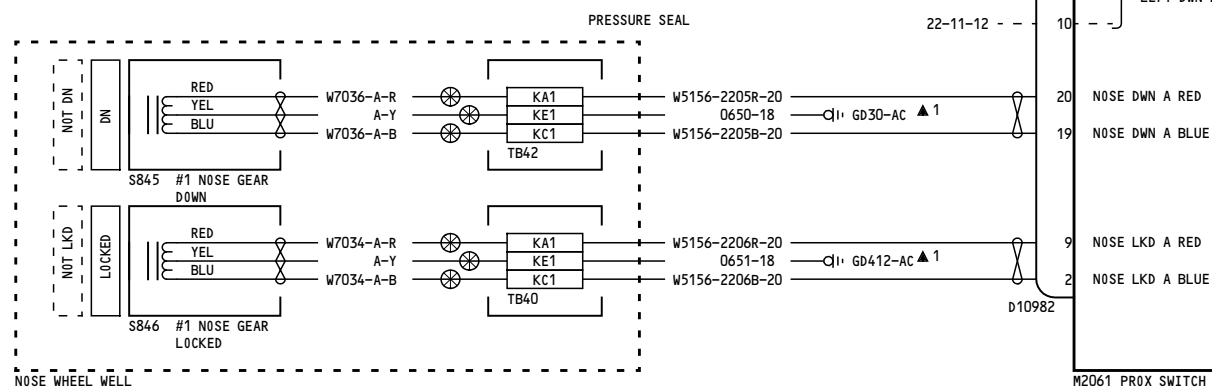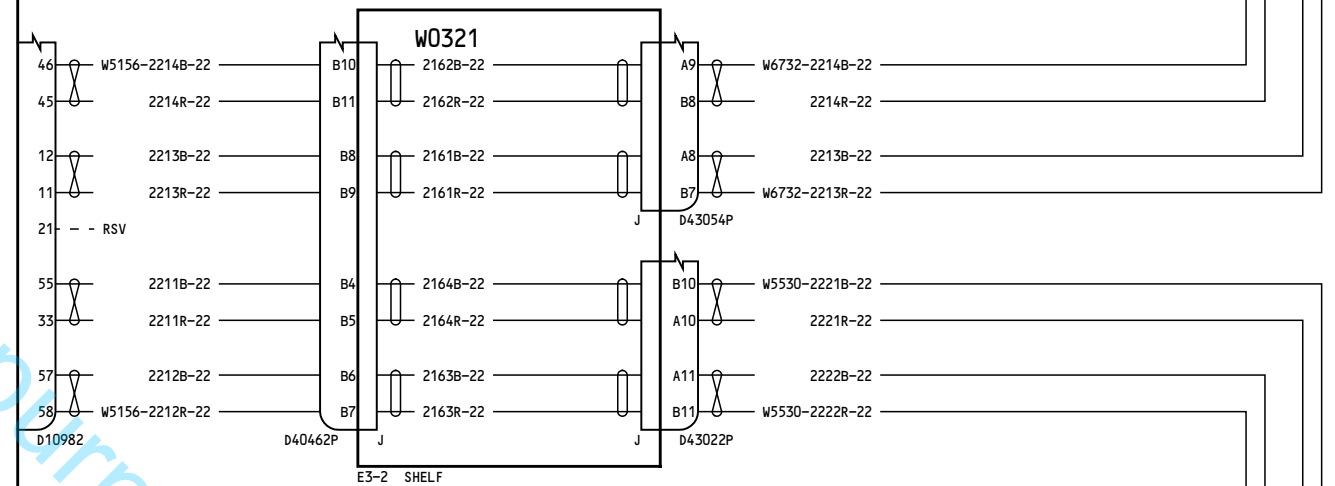

YD153-YD157

**LANDING GEAR POSITION INDICATING SYSTEM 1**

D280A108



**32-64-11**

Page 3  
Sheet 2  
Nov 12/2012

**32-64-11**

Page 3  
Sheet 2  
Nov 12/2012



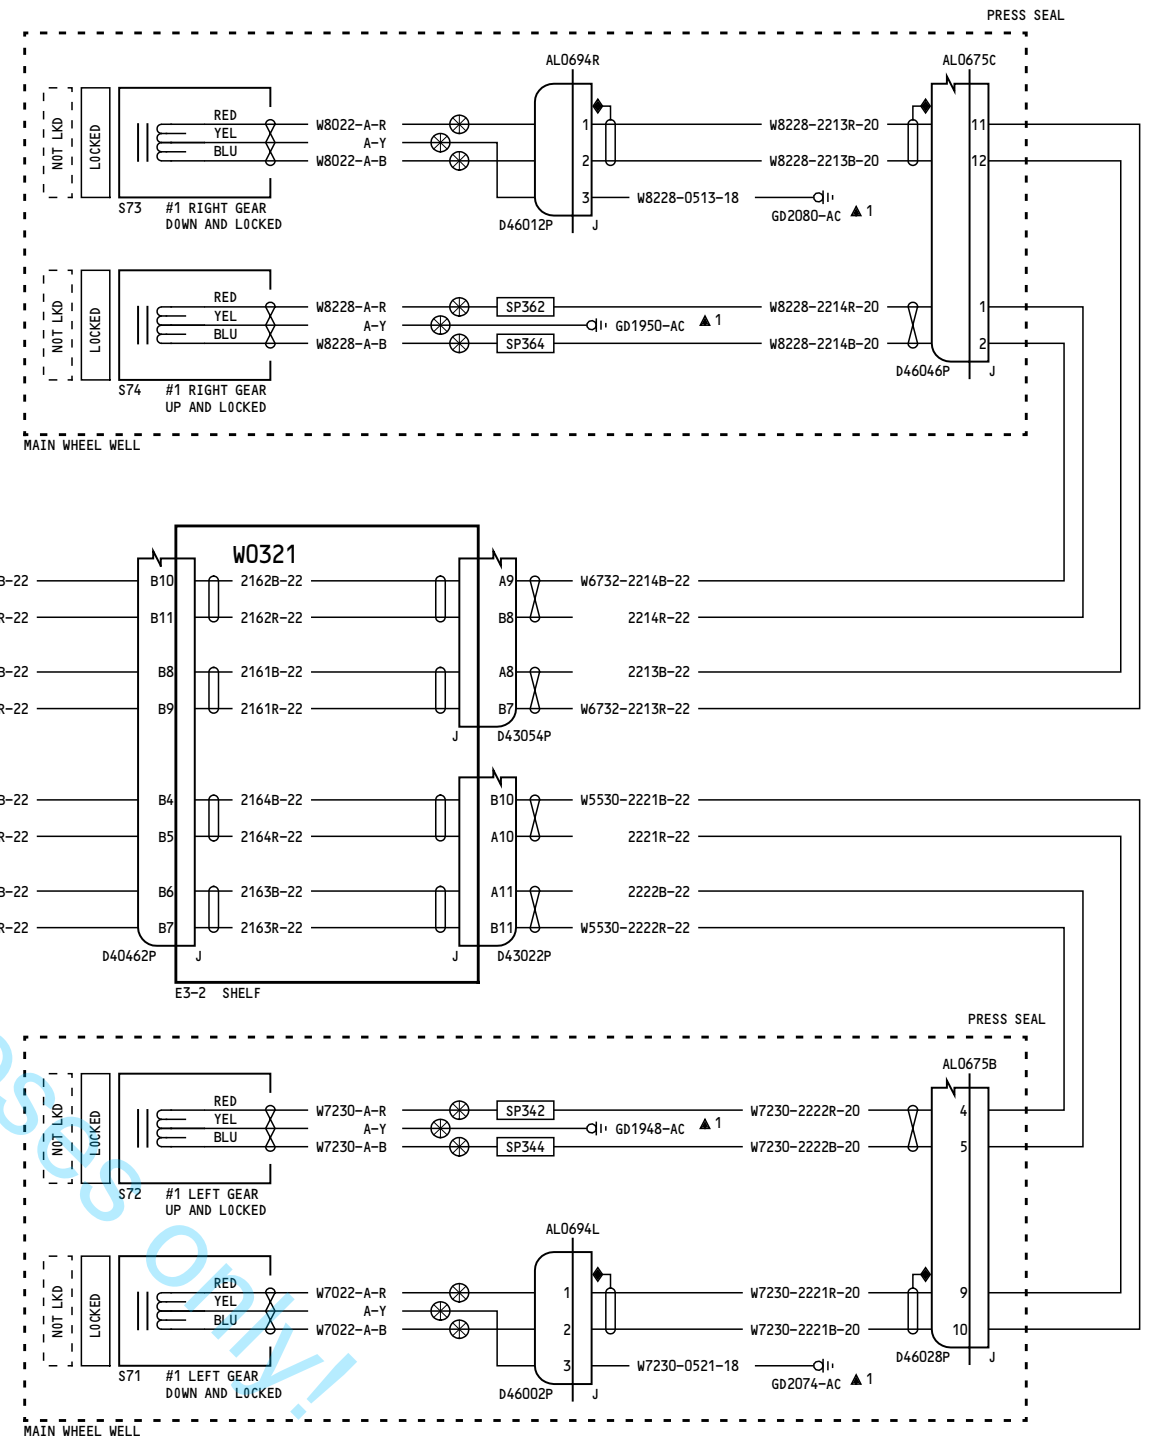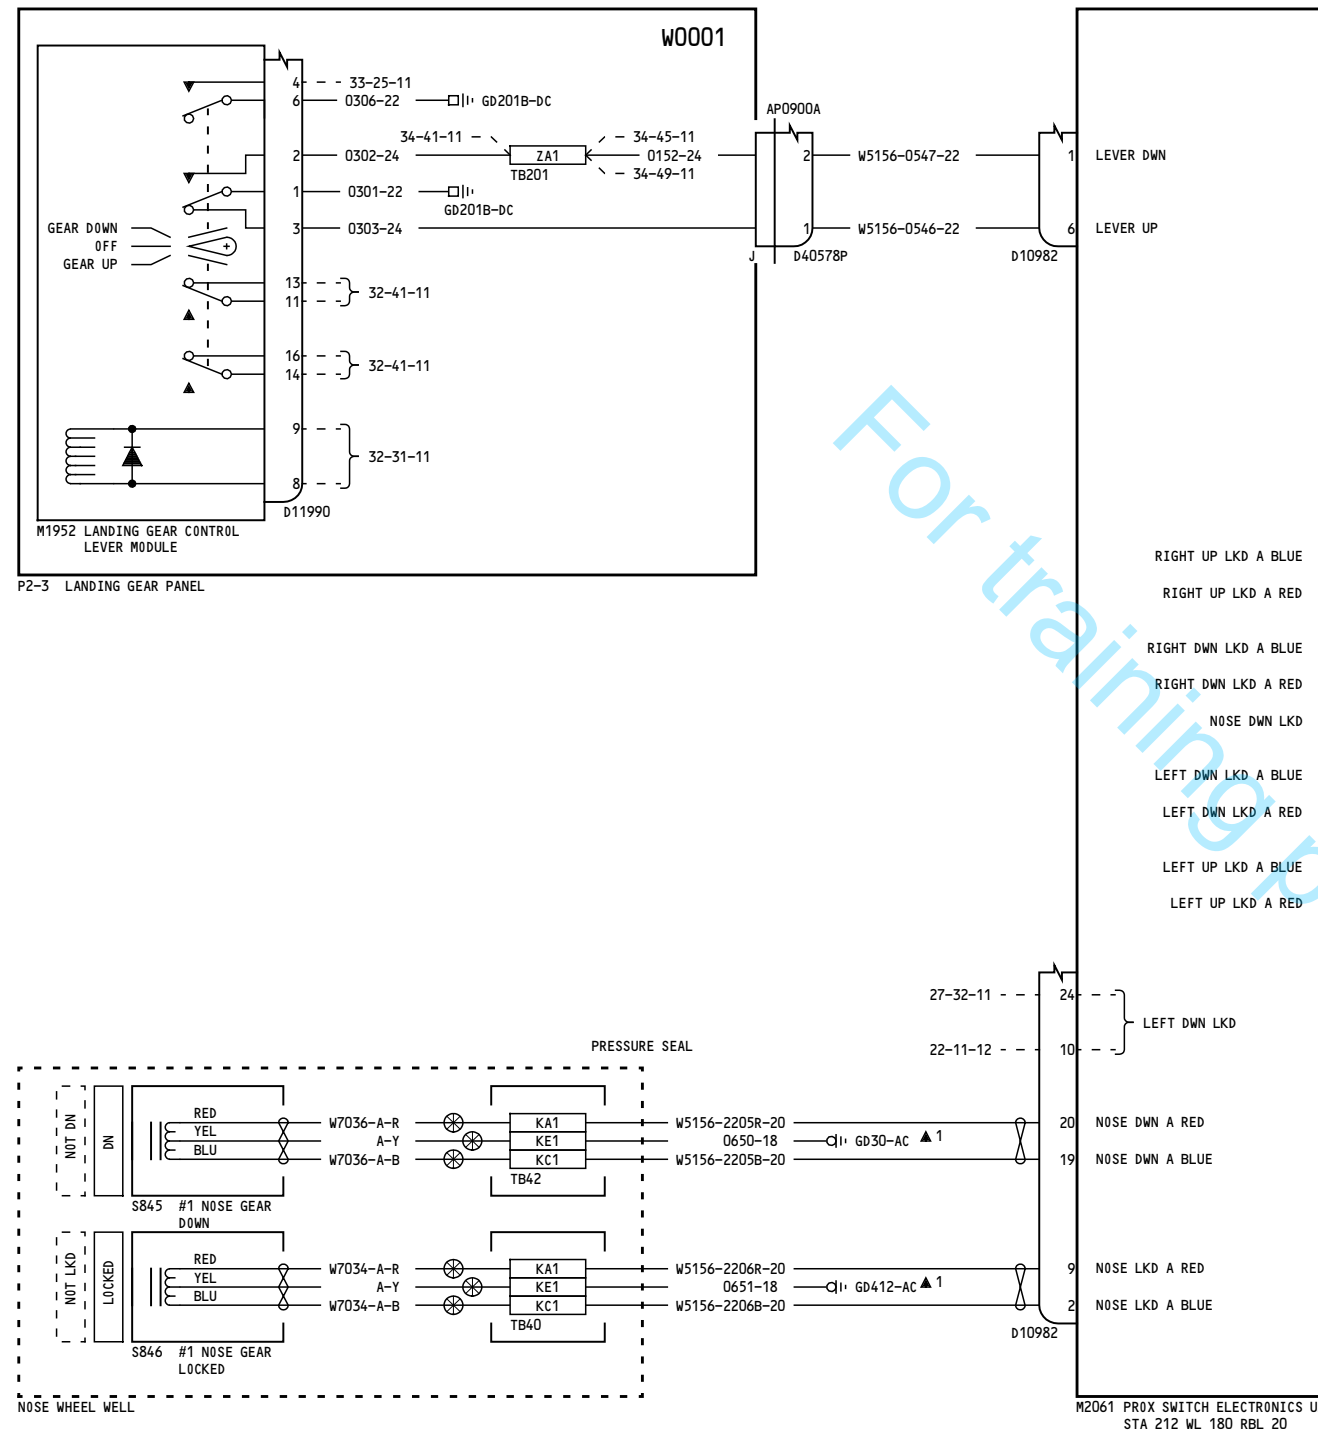

YD158-YD170

## LANDING GEAR POSITION INDICATING SYSTEM 1


D280A108

**32-64-11**

Page 4  
Sheet 2  
Oct 27/2011

**32-64-11**

Page 4  
Sheet 2  
Oct 27/2011

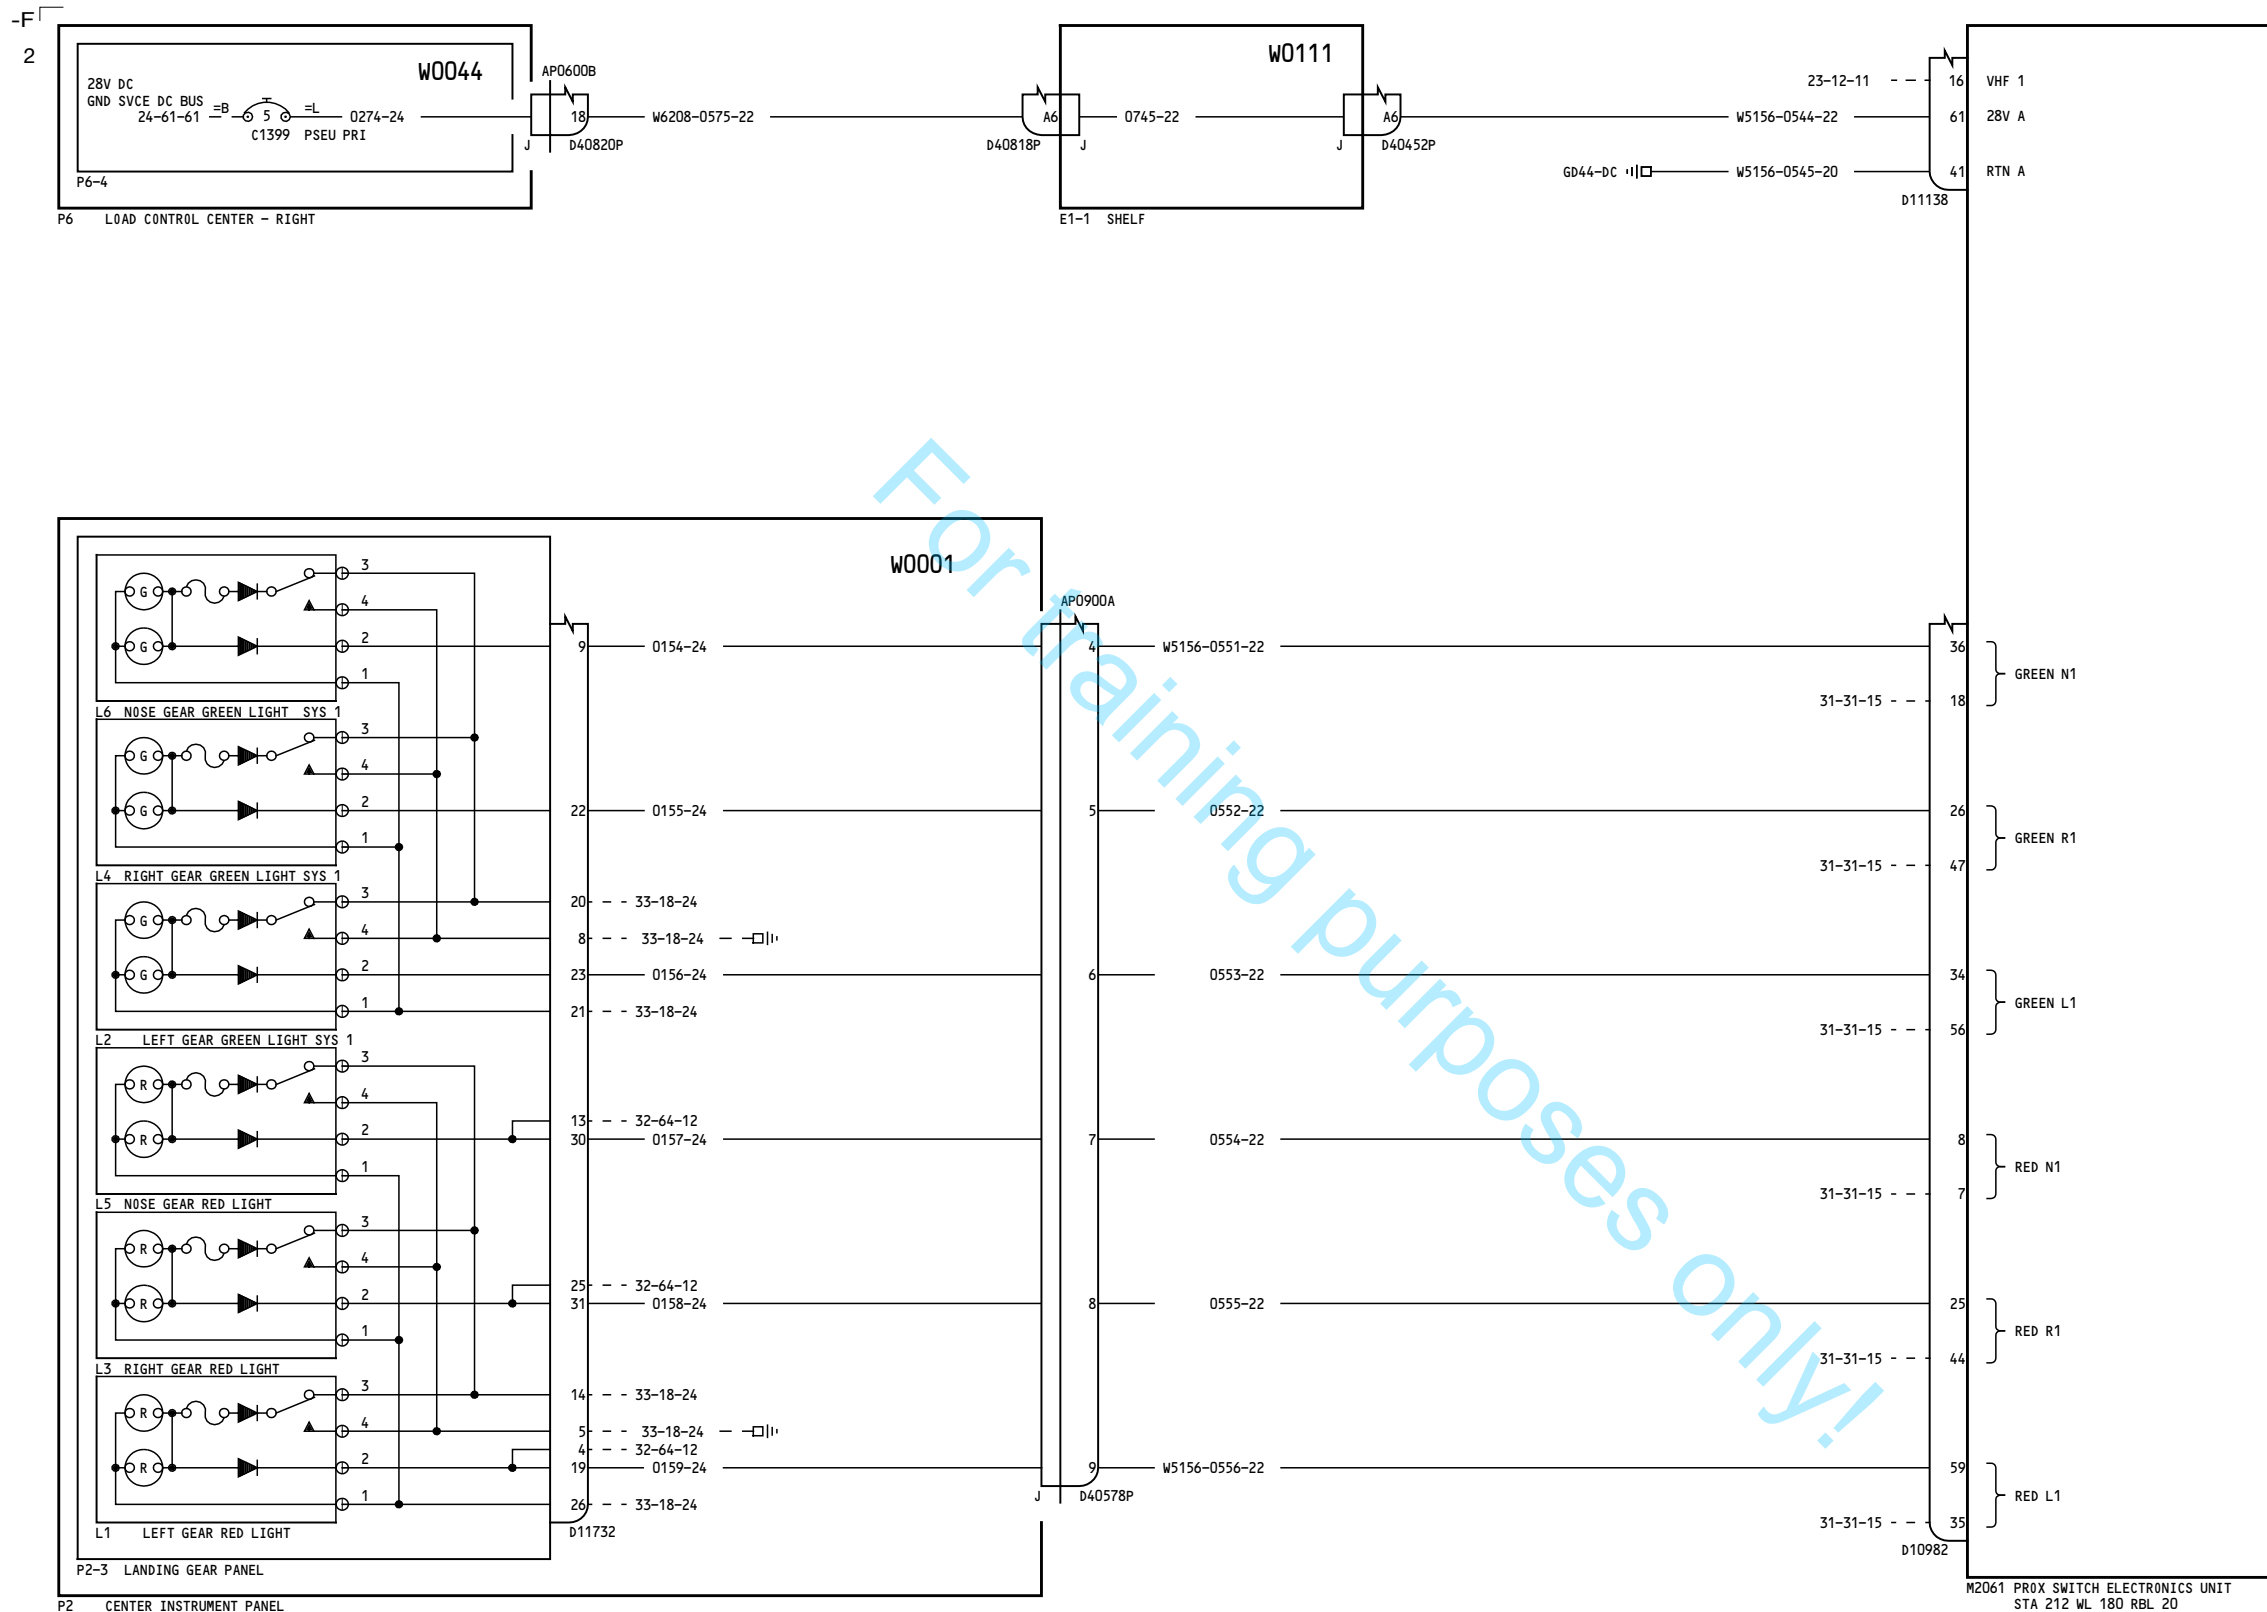

YL951-YL959, YN231-YN235

**LANDING GEAR POSITION  
INDICATING SYSTEM 1**

D280A108


**32-64-11**

Page 5  
Sheet 1  
May 03/2010


**32-64-11**

Page 5  
Sheet 1  
May 03/2010

19

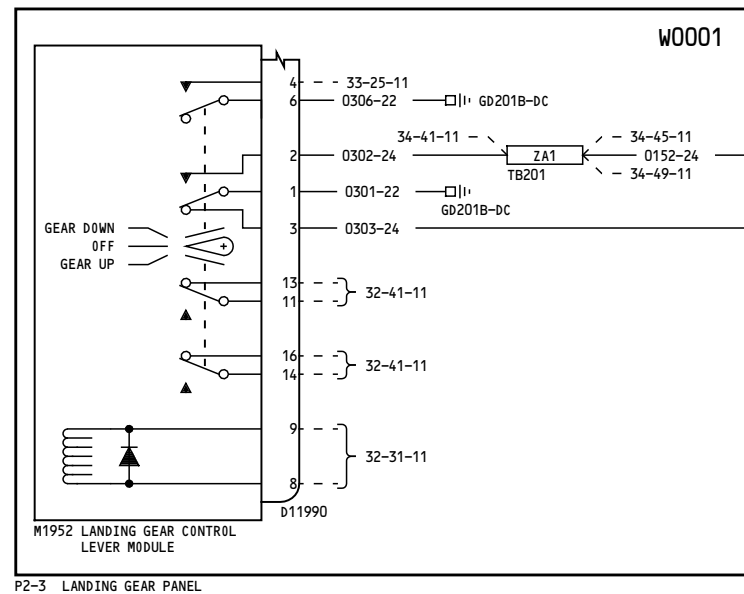

P2-3 LANDING GEAR PANEL

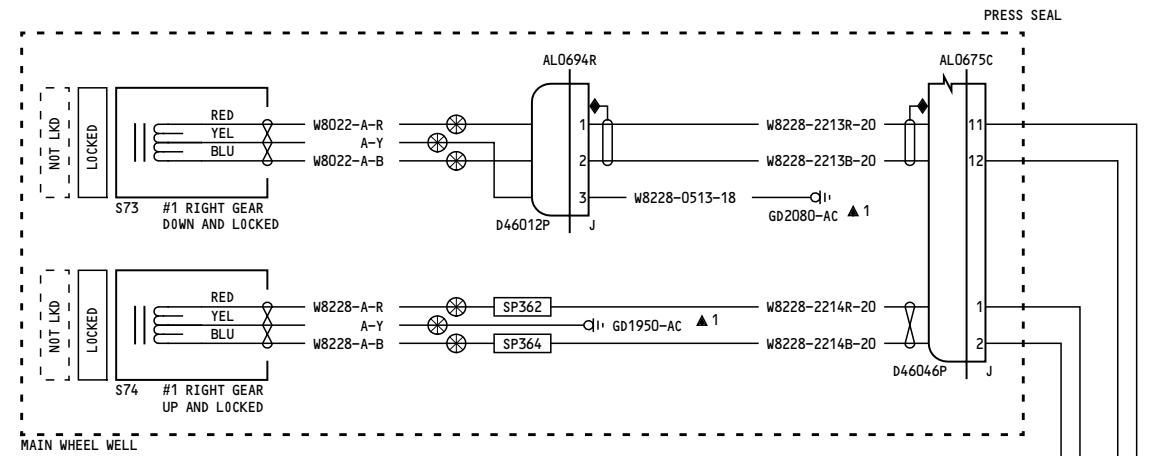

RIGHT UP LKD A BLUE

RIGHT UP LKD A RED

RIGHT DWN LKD A BLUE

RIGHT DWN LKD A RED



NOSE DWN LKD

LEFT DWN LKD A BLUE


LEFT DWN LKD A RED

LEFT UP LKD A BLUE

LEFT UP LKD A RED

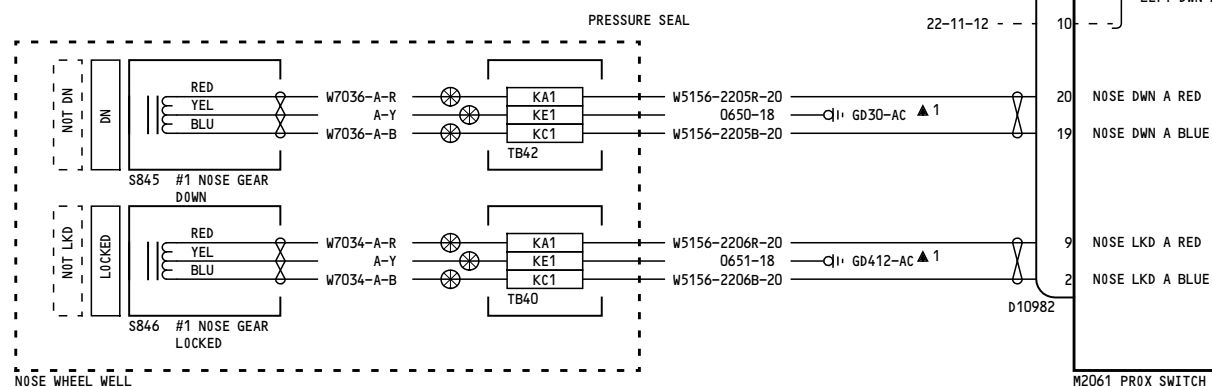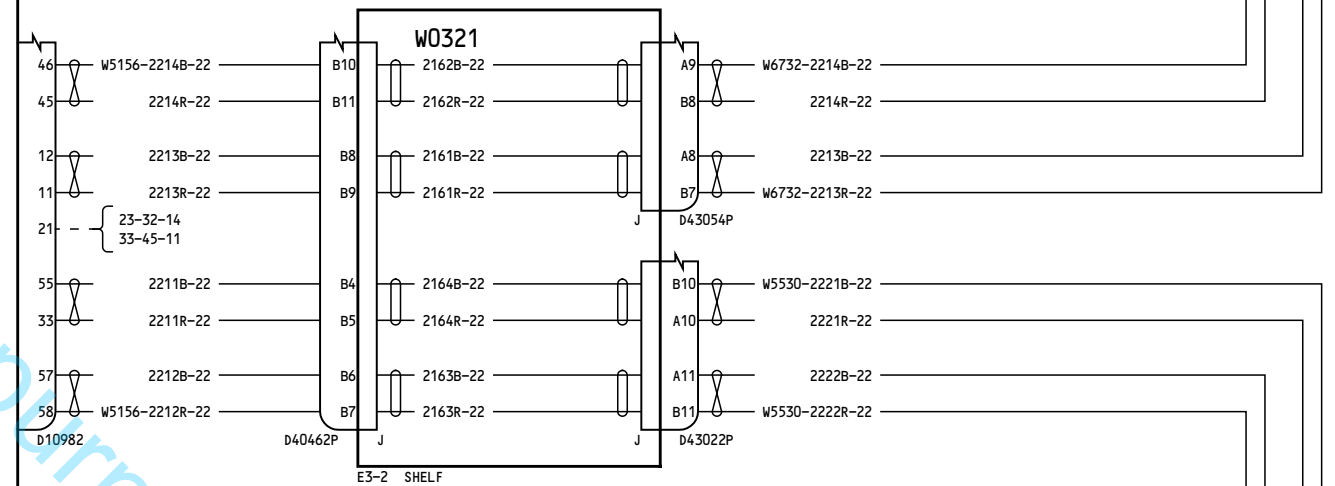

M2061 PROX SWITCH ELECTRONICS UNIT  
STA 212 WL 180 RBL 20

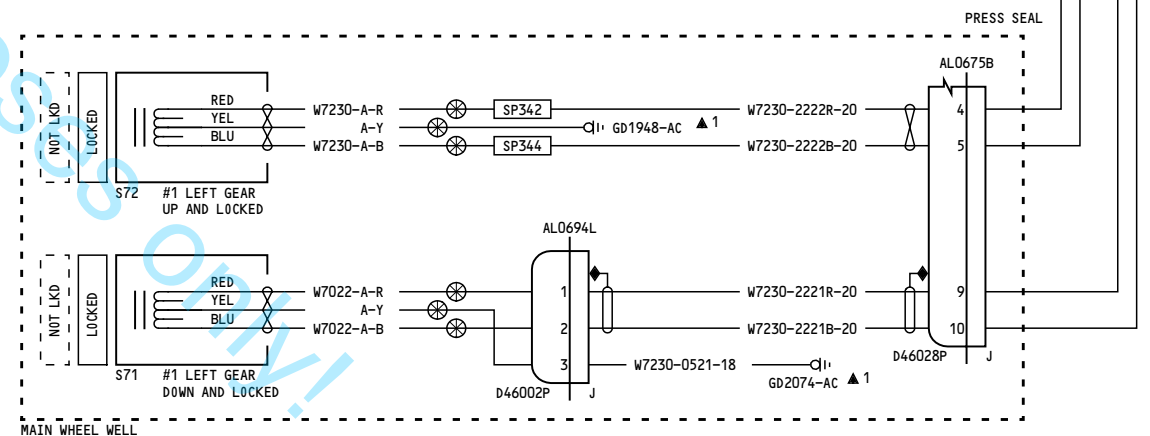

YL951-YL959, YN231-YN235

**LANDING GEAR POSITION  
INDICATING SYSTEM 1**


D280A108

**32-64-11**

Page 5  
Sheet 2  
May 03/2010

**32-64-11**

 Page 5  
Sheet 2  
May 03/2010




**32-64-11**

D280A108



**32-64-11**

Page 6  
Sheet 1  
Dec 19/2011






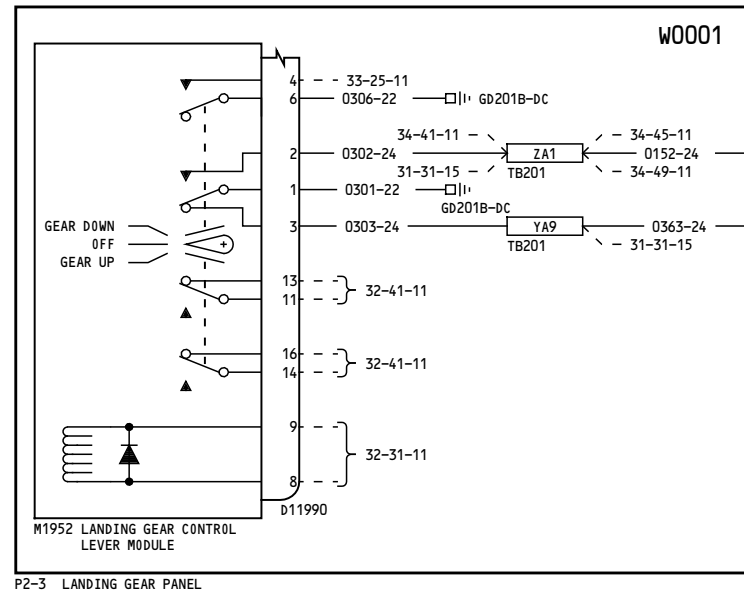


For training purposes only

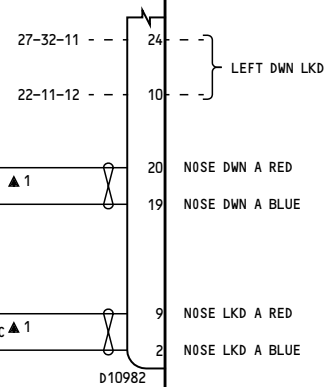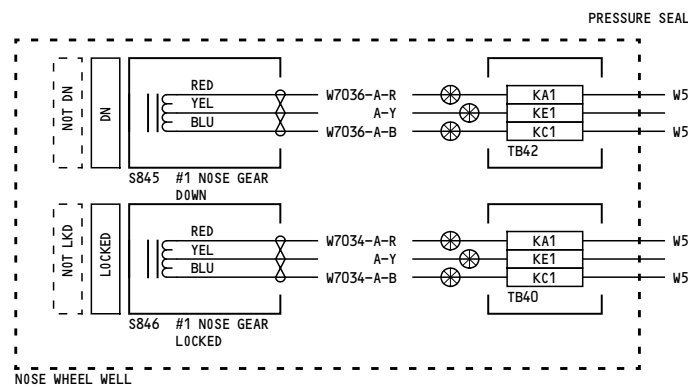

M2061 PROX SWITCH ELECTRONICS UNIT  
STA 212 WL 180 RBL 20

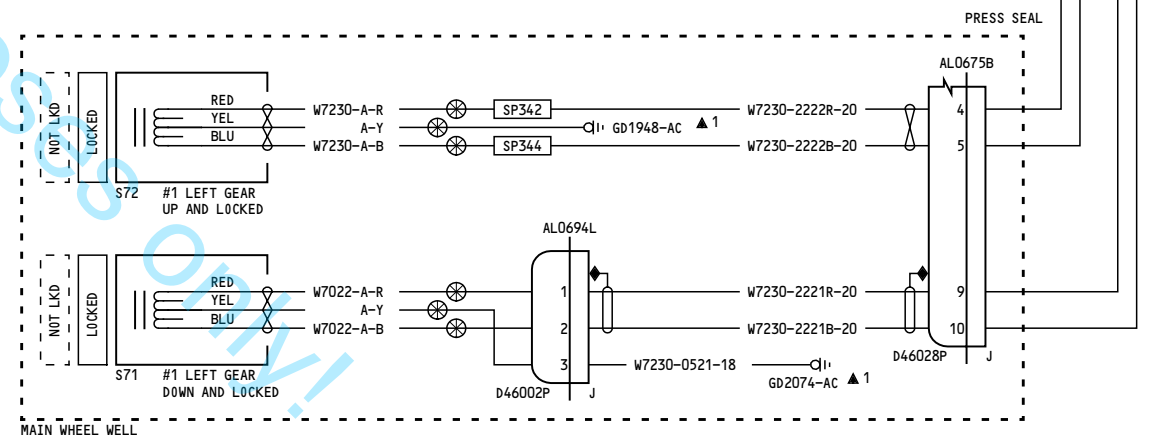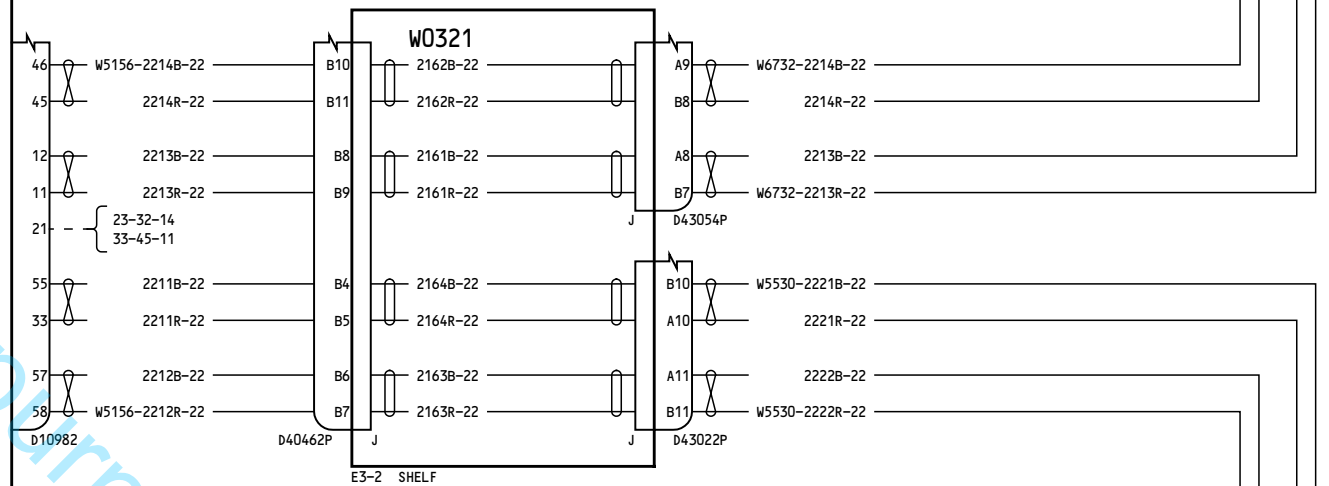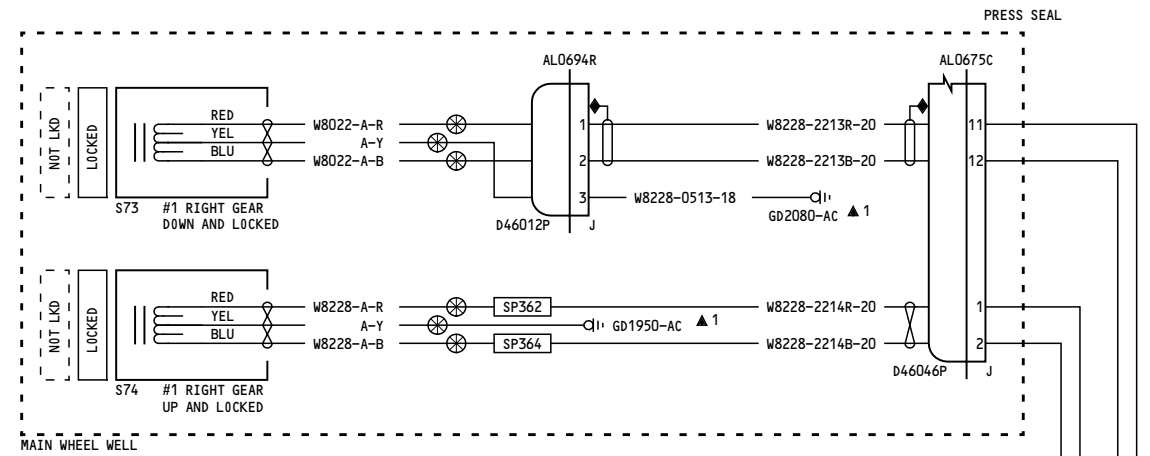

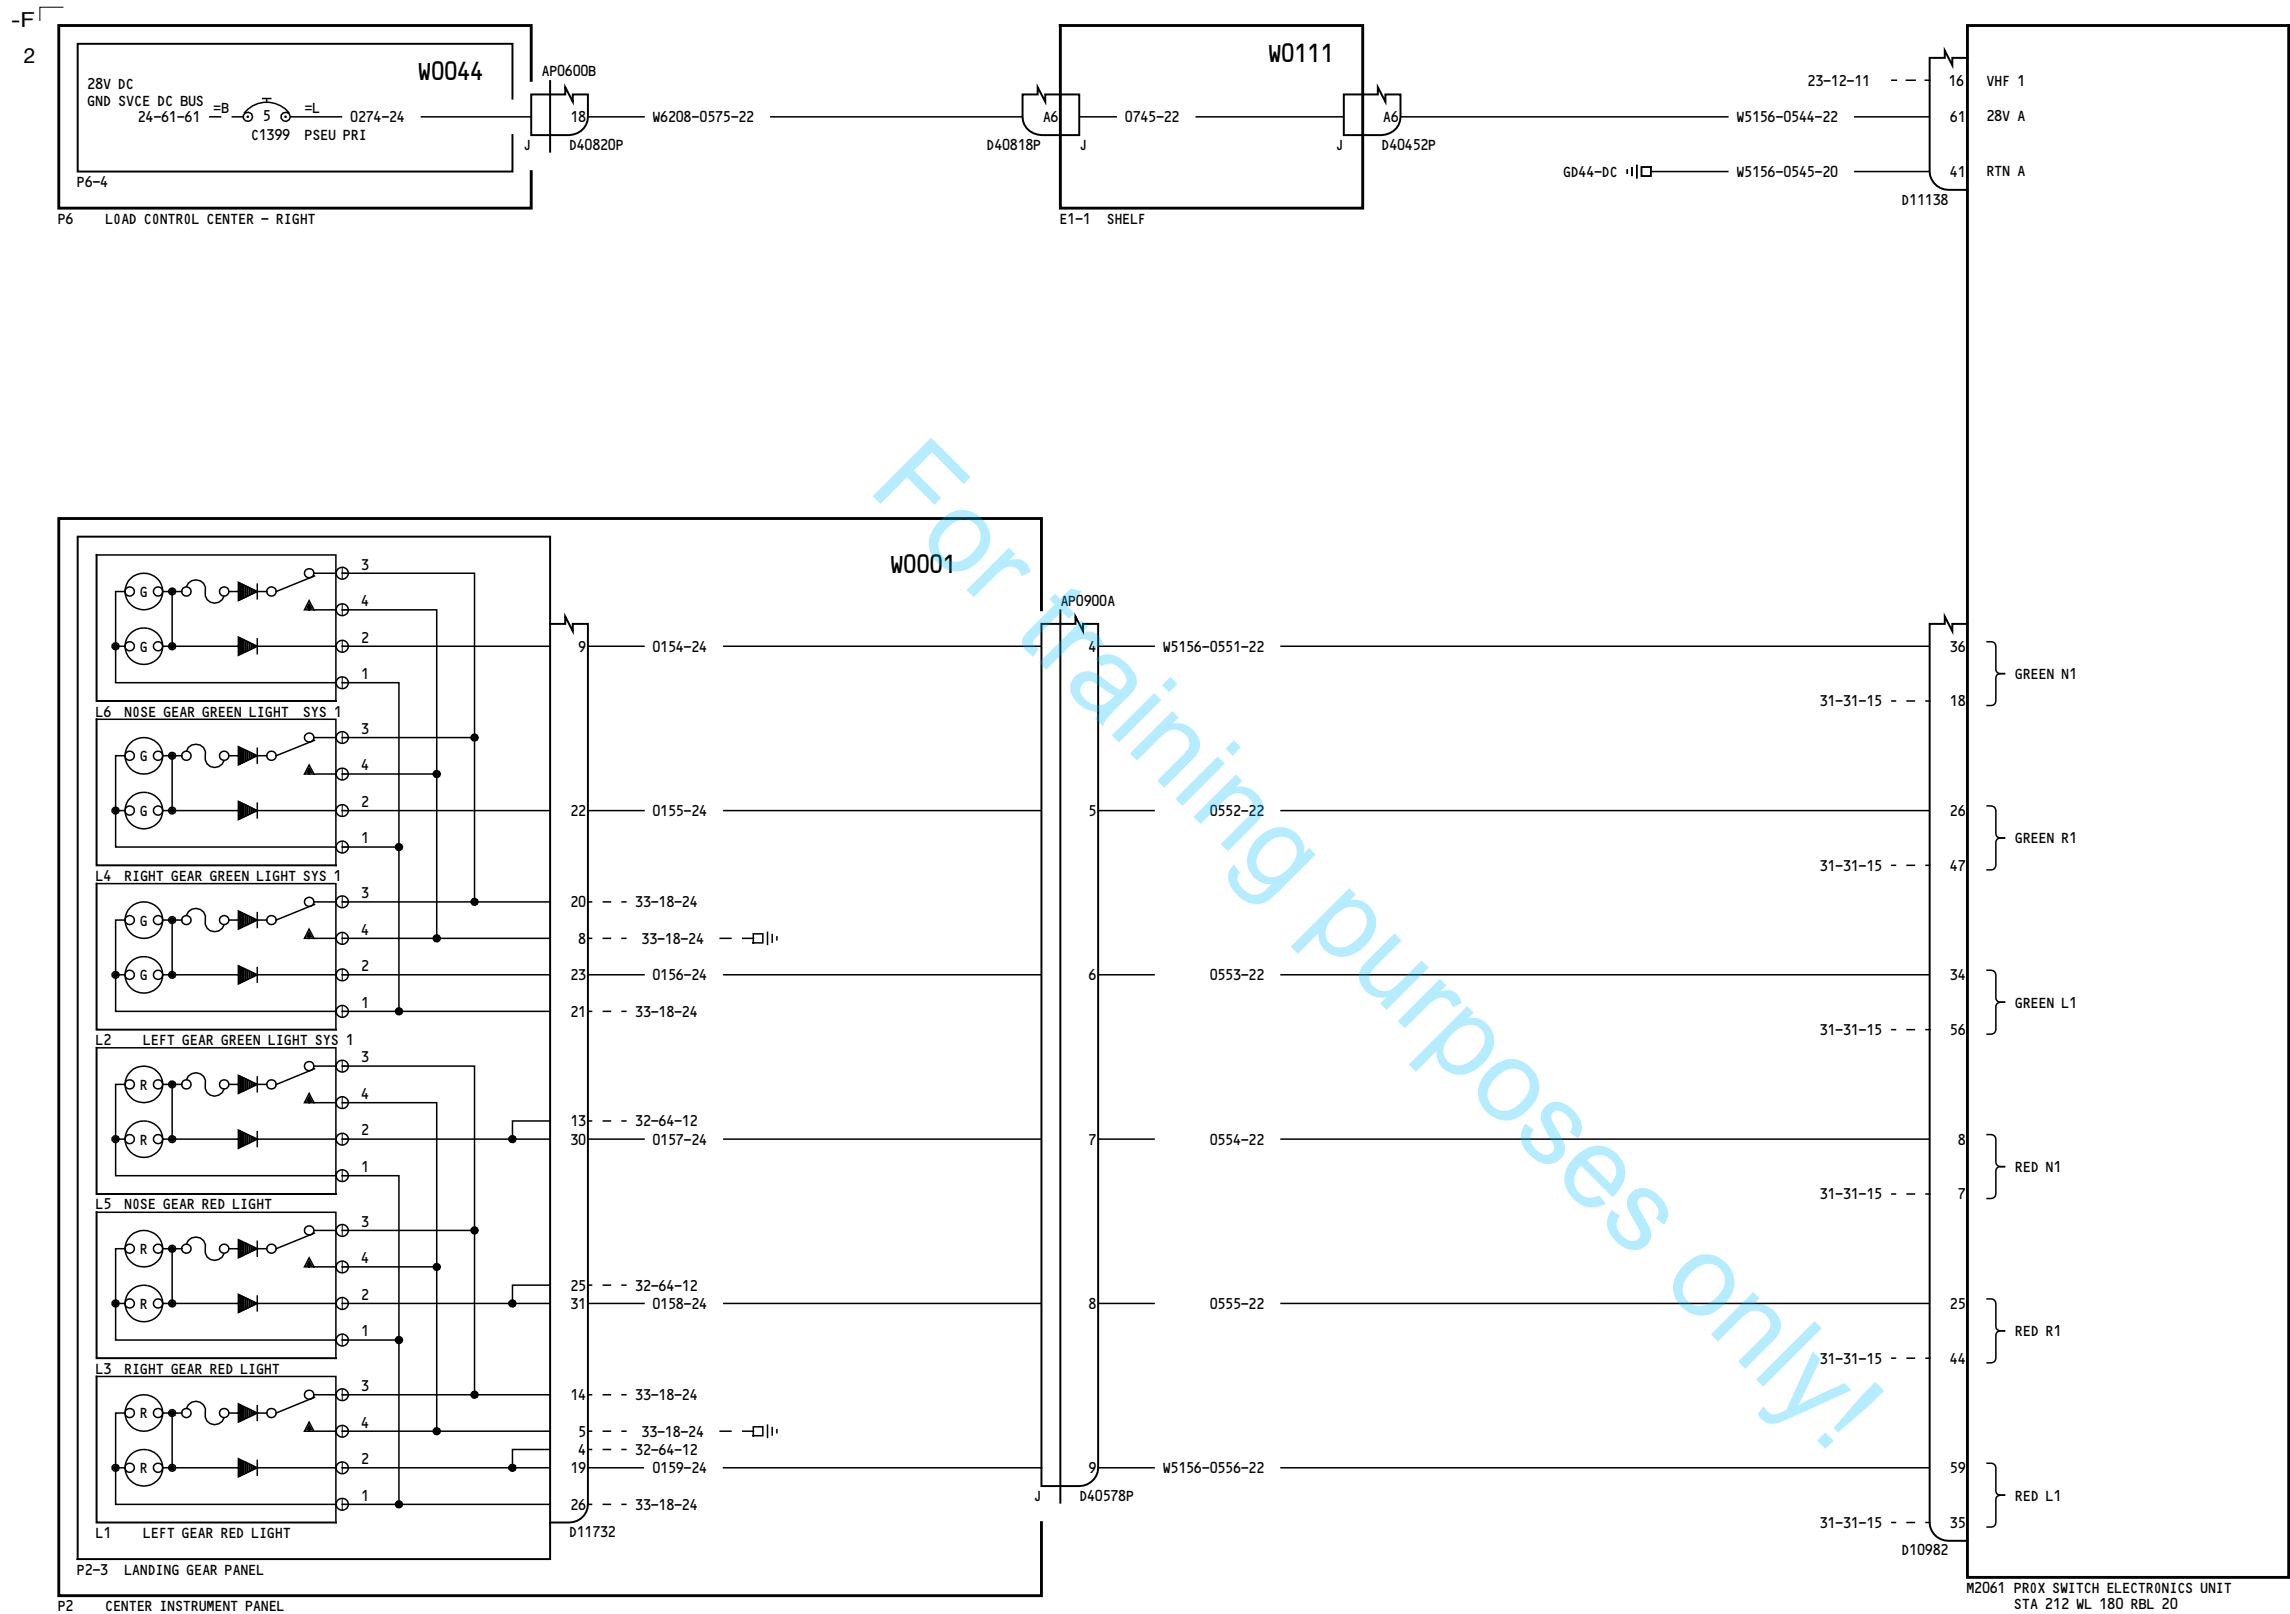

YN501-YR328

**LANDING GEAR POSITION  
INDICATING SYSTEM 1**


D280A108

**32-64-11**



Page 7  
Sheet 1  
Nov 12/2012

**32-64-11**





Page 7  
Sheet 1  
Nov 12/2012

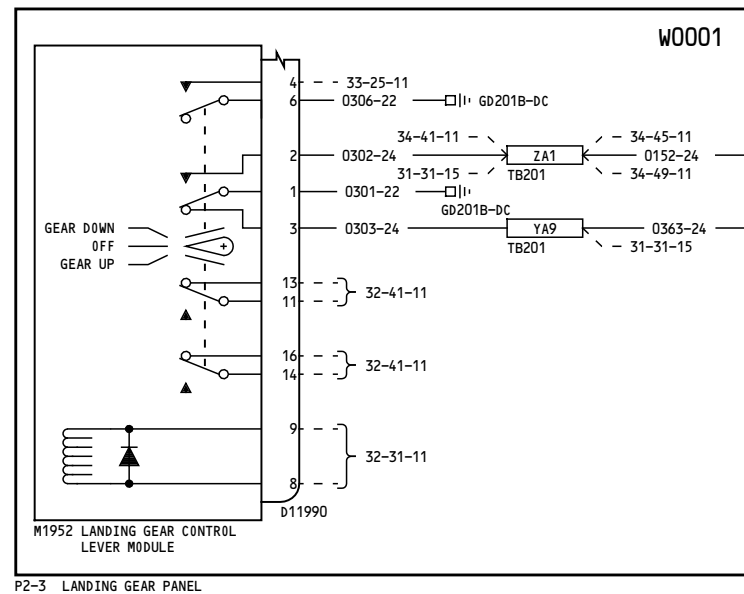


For training purposes only

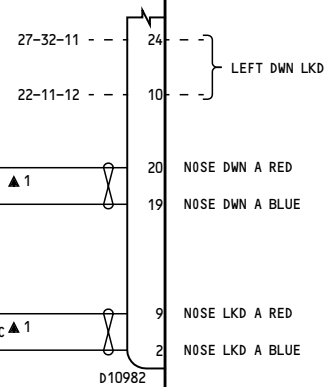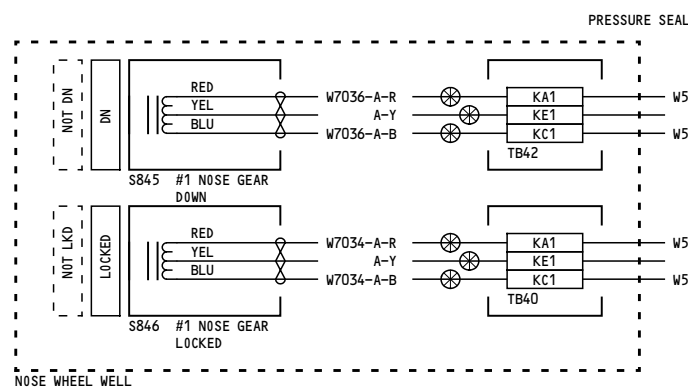

M2061 PROX SWITCH ELECTRONICS UNIT  
STA 212 WL 180 RBL 20

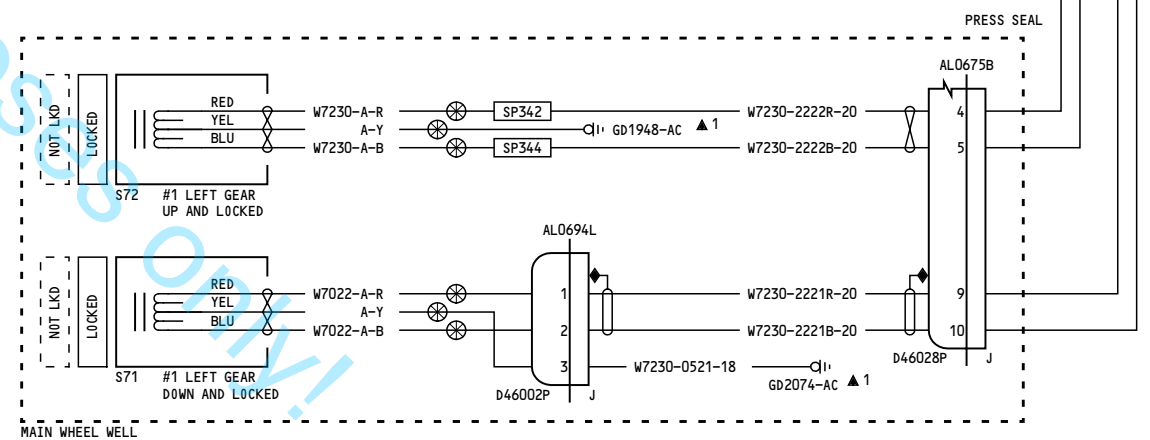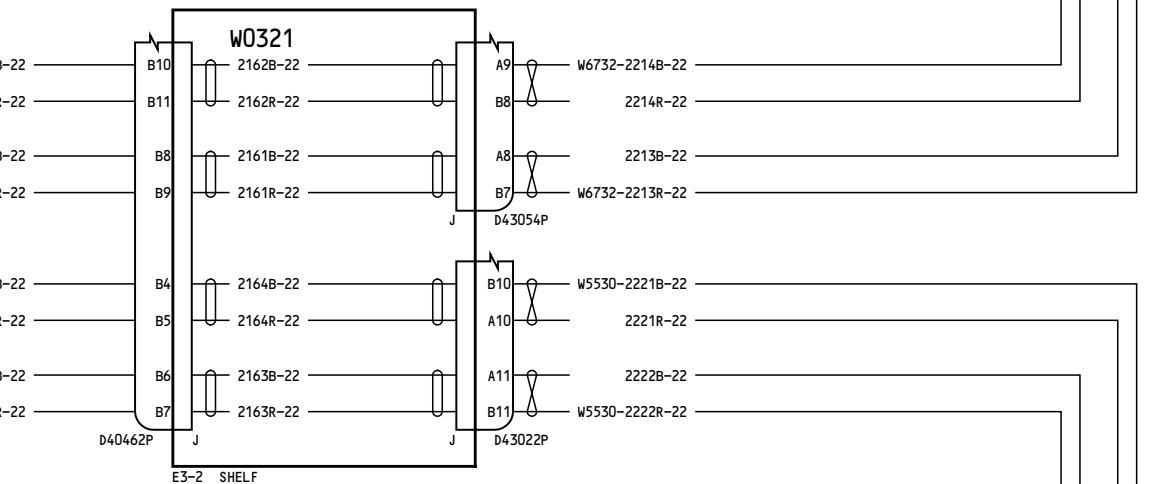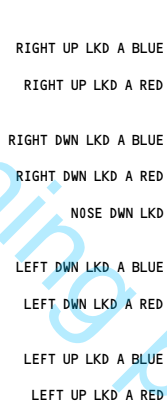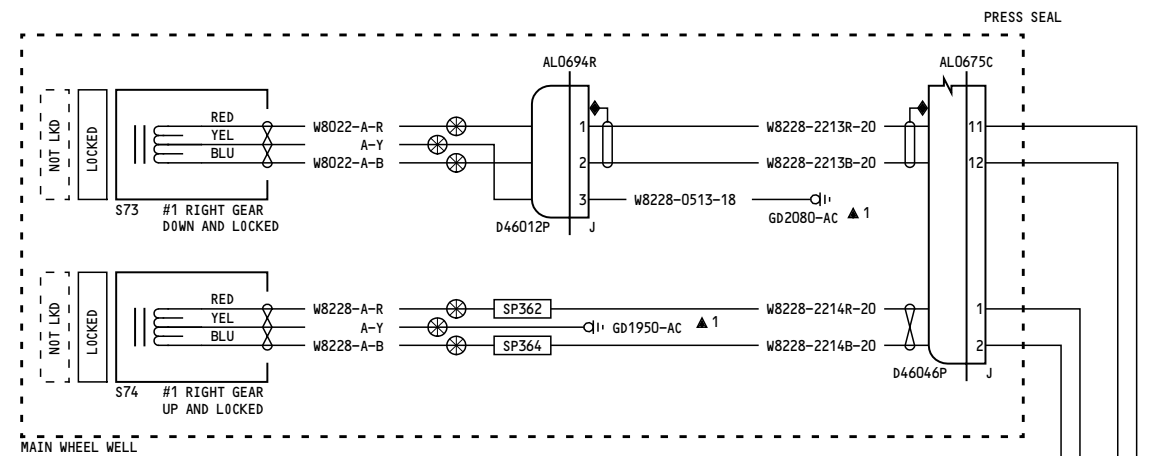

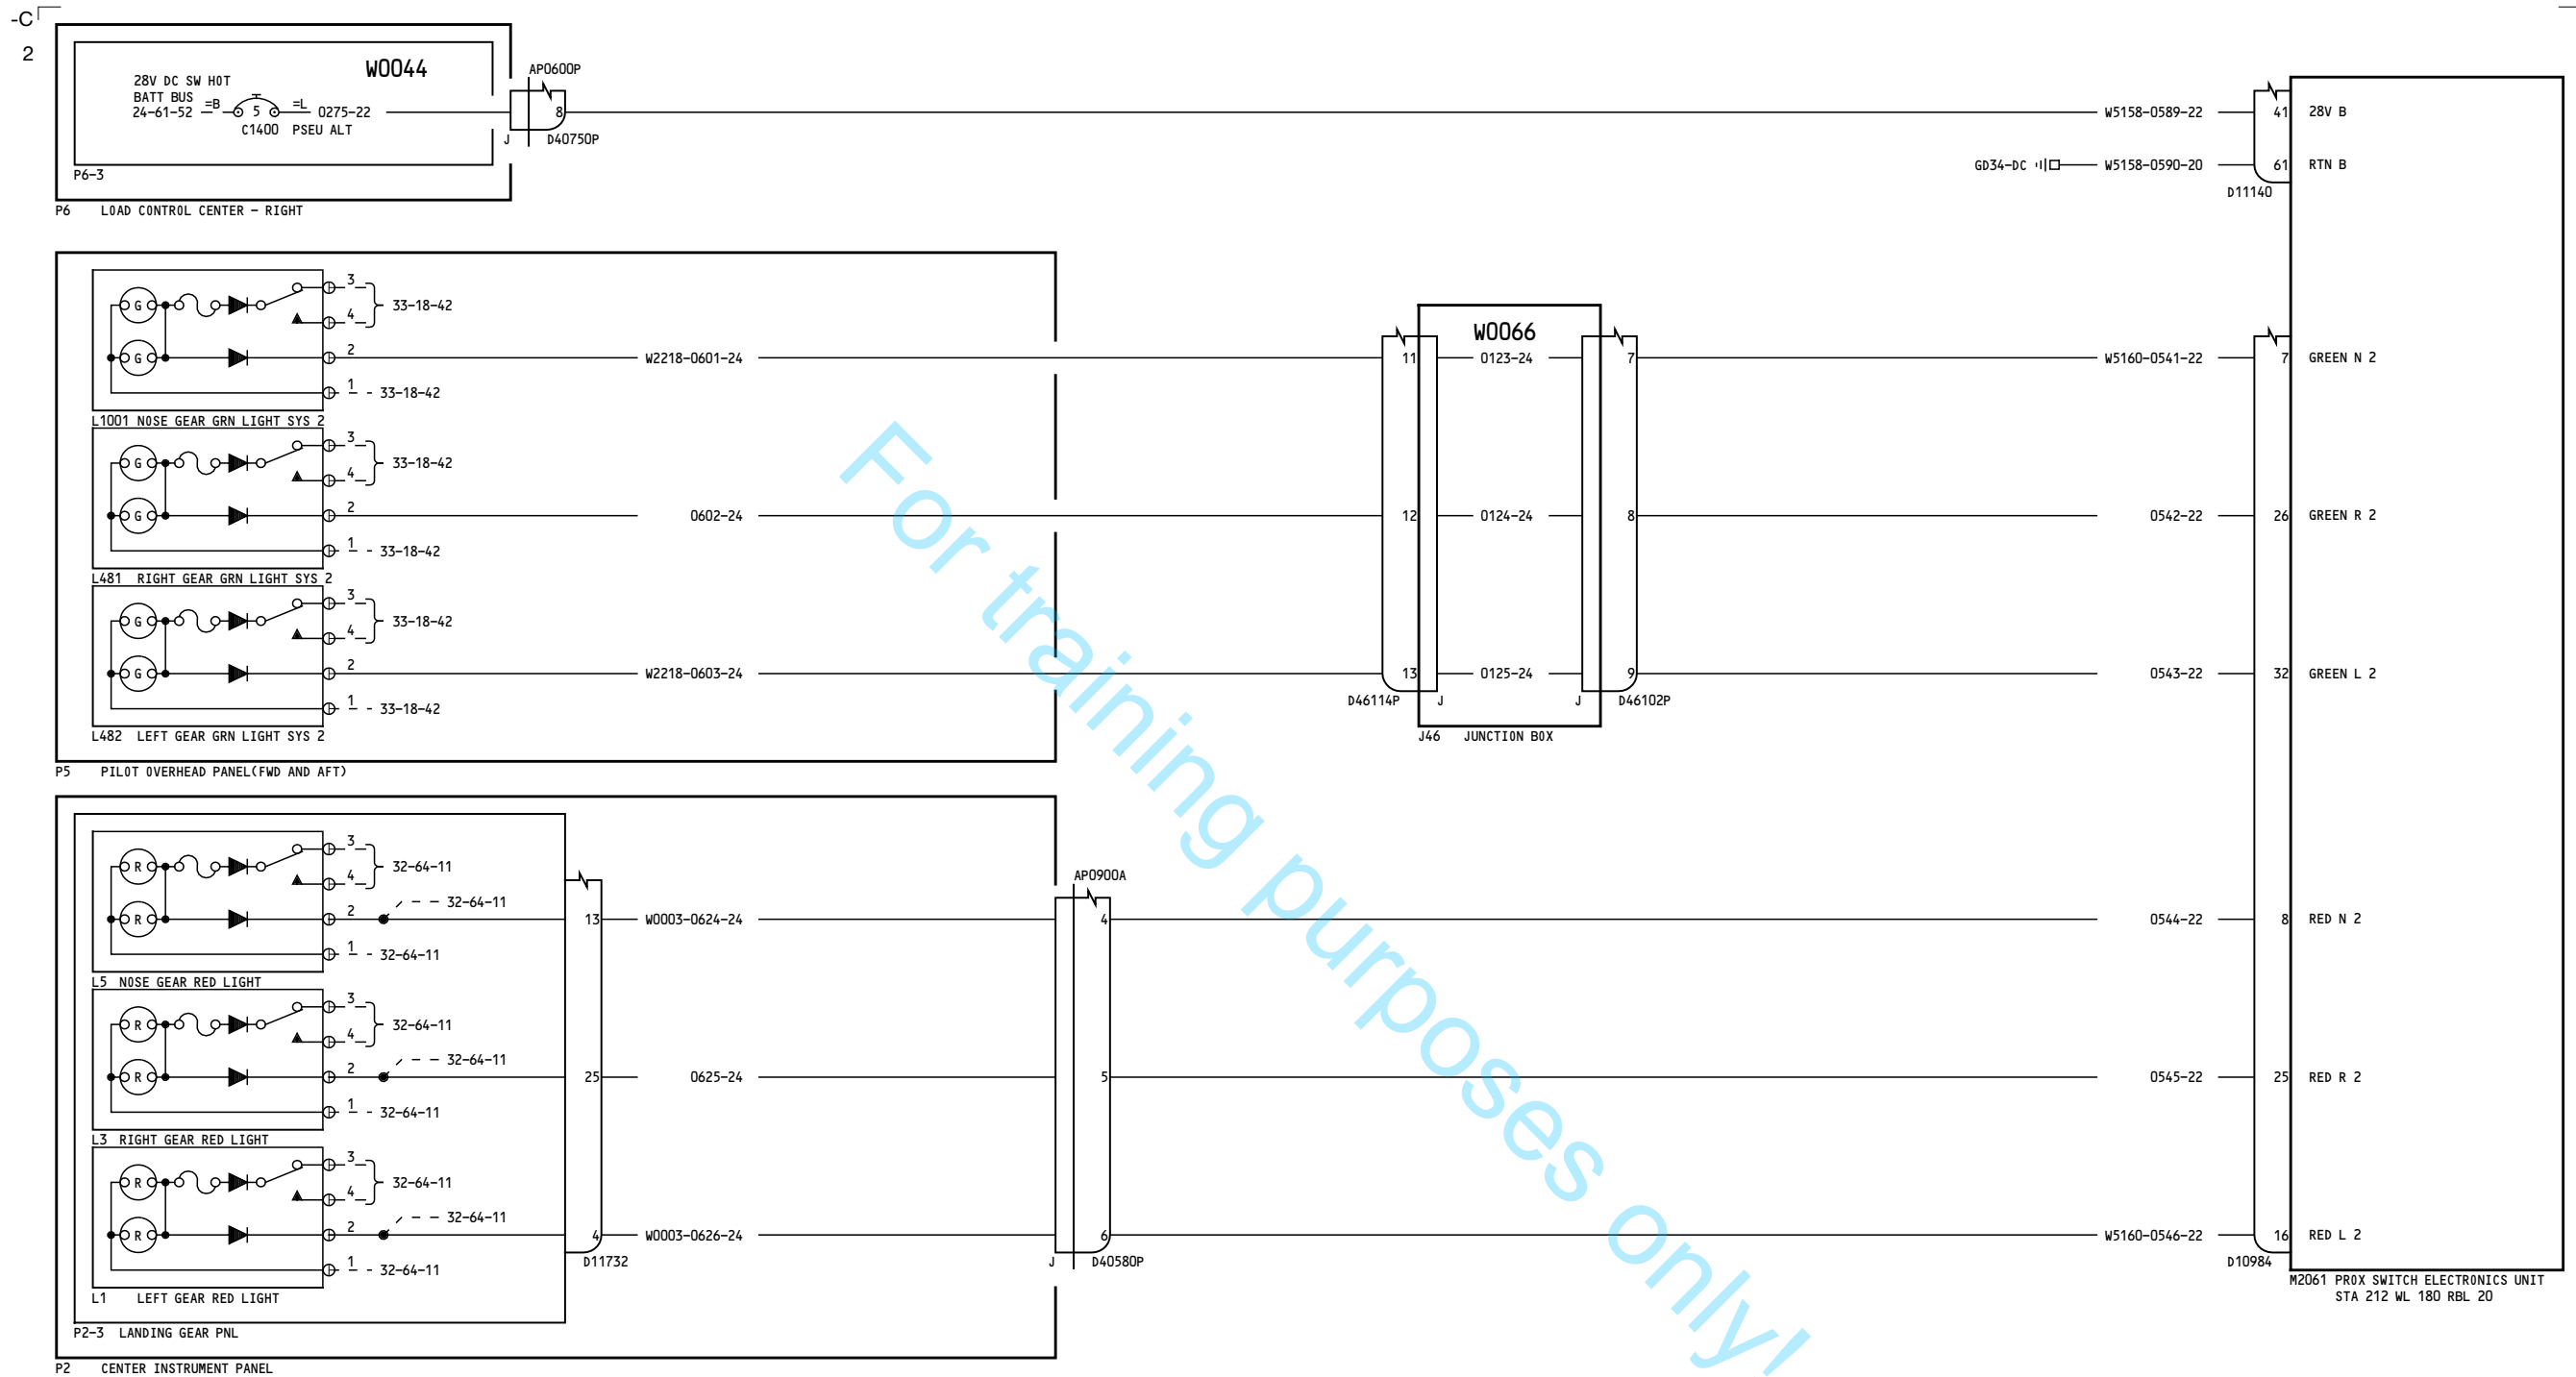

YC051-YD152

**LANDING GEAR POSITION  
INDICATING SYSTEM 2**

D280A108


**32-64-12**

Page 1  
Sheet 1  
Oct 06/2010

**32-64-12**

Page 1  
Sheet 1  
Oct 06/2010

-E  
3

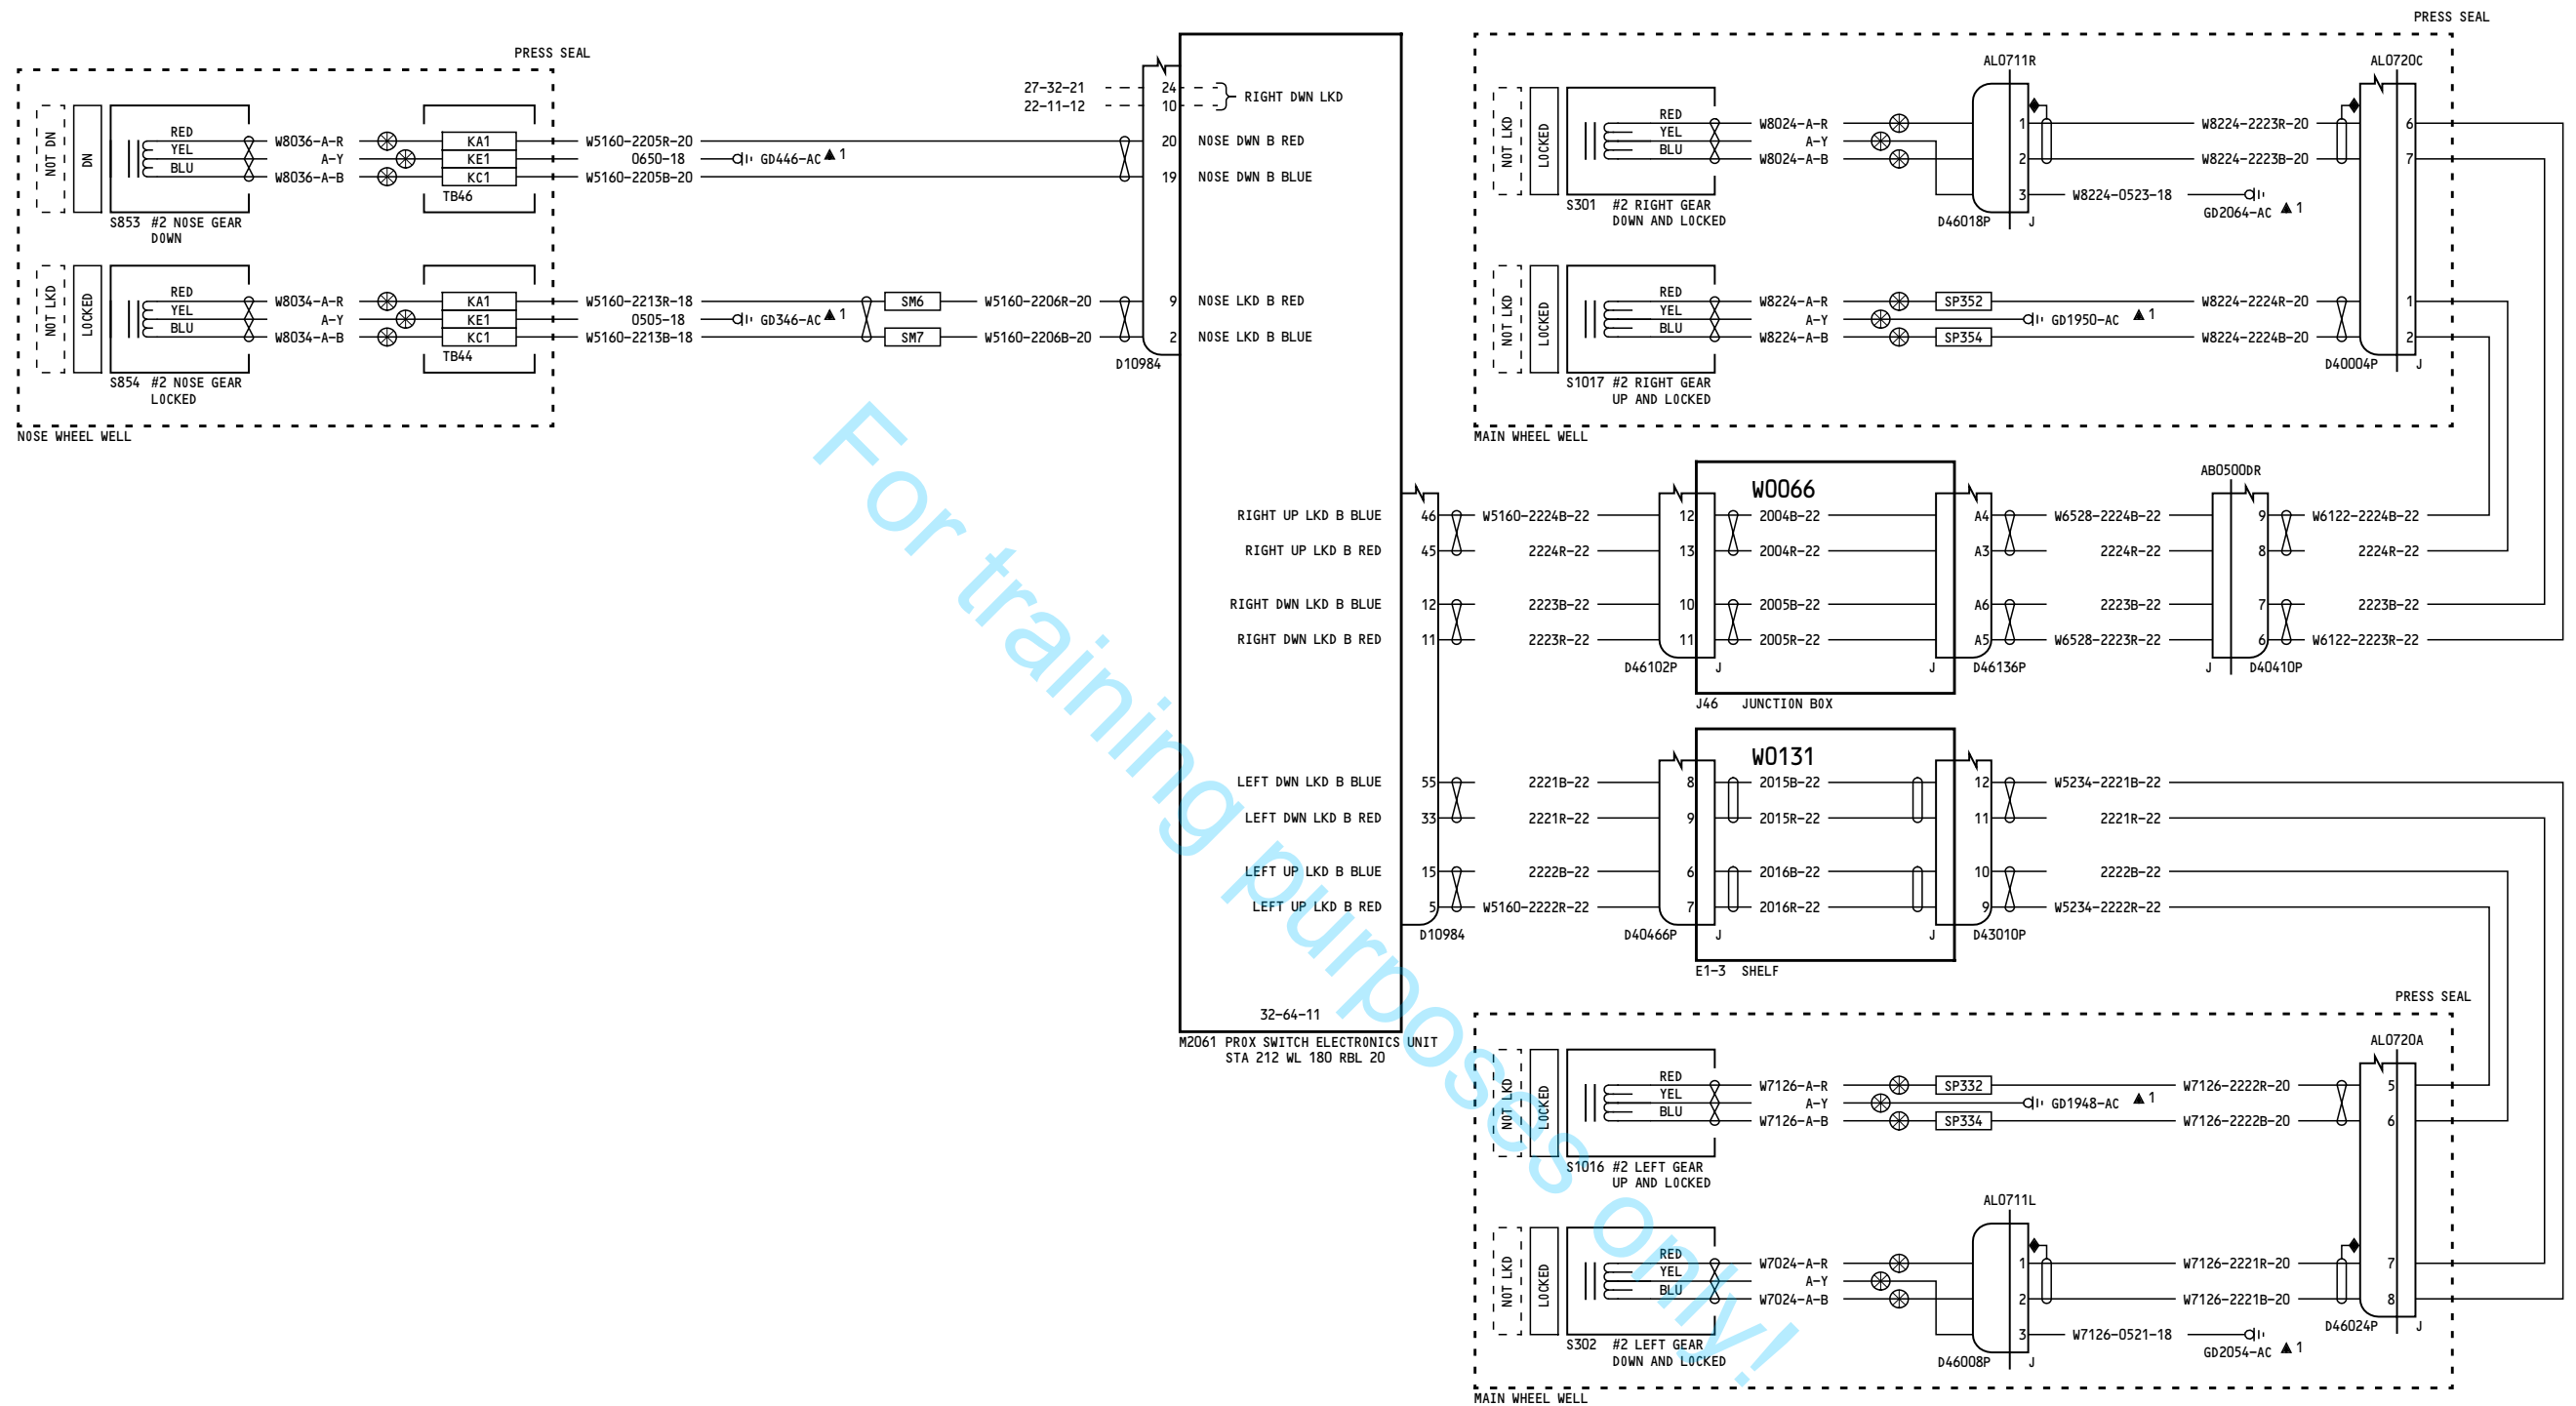

YC051-YD152

**LANDING GEAR POSITION  
INDICATING SYSTEM 2**


D280A108

**32-64-12**

Page 1  
Sheet 2  
Oct 06/2010

**32-64-12**

Page 1  
Sheet 2  
Oct 06/2010

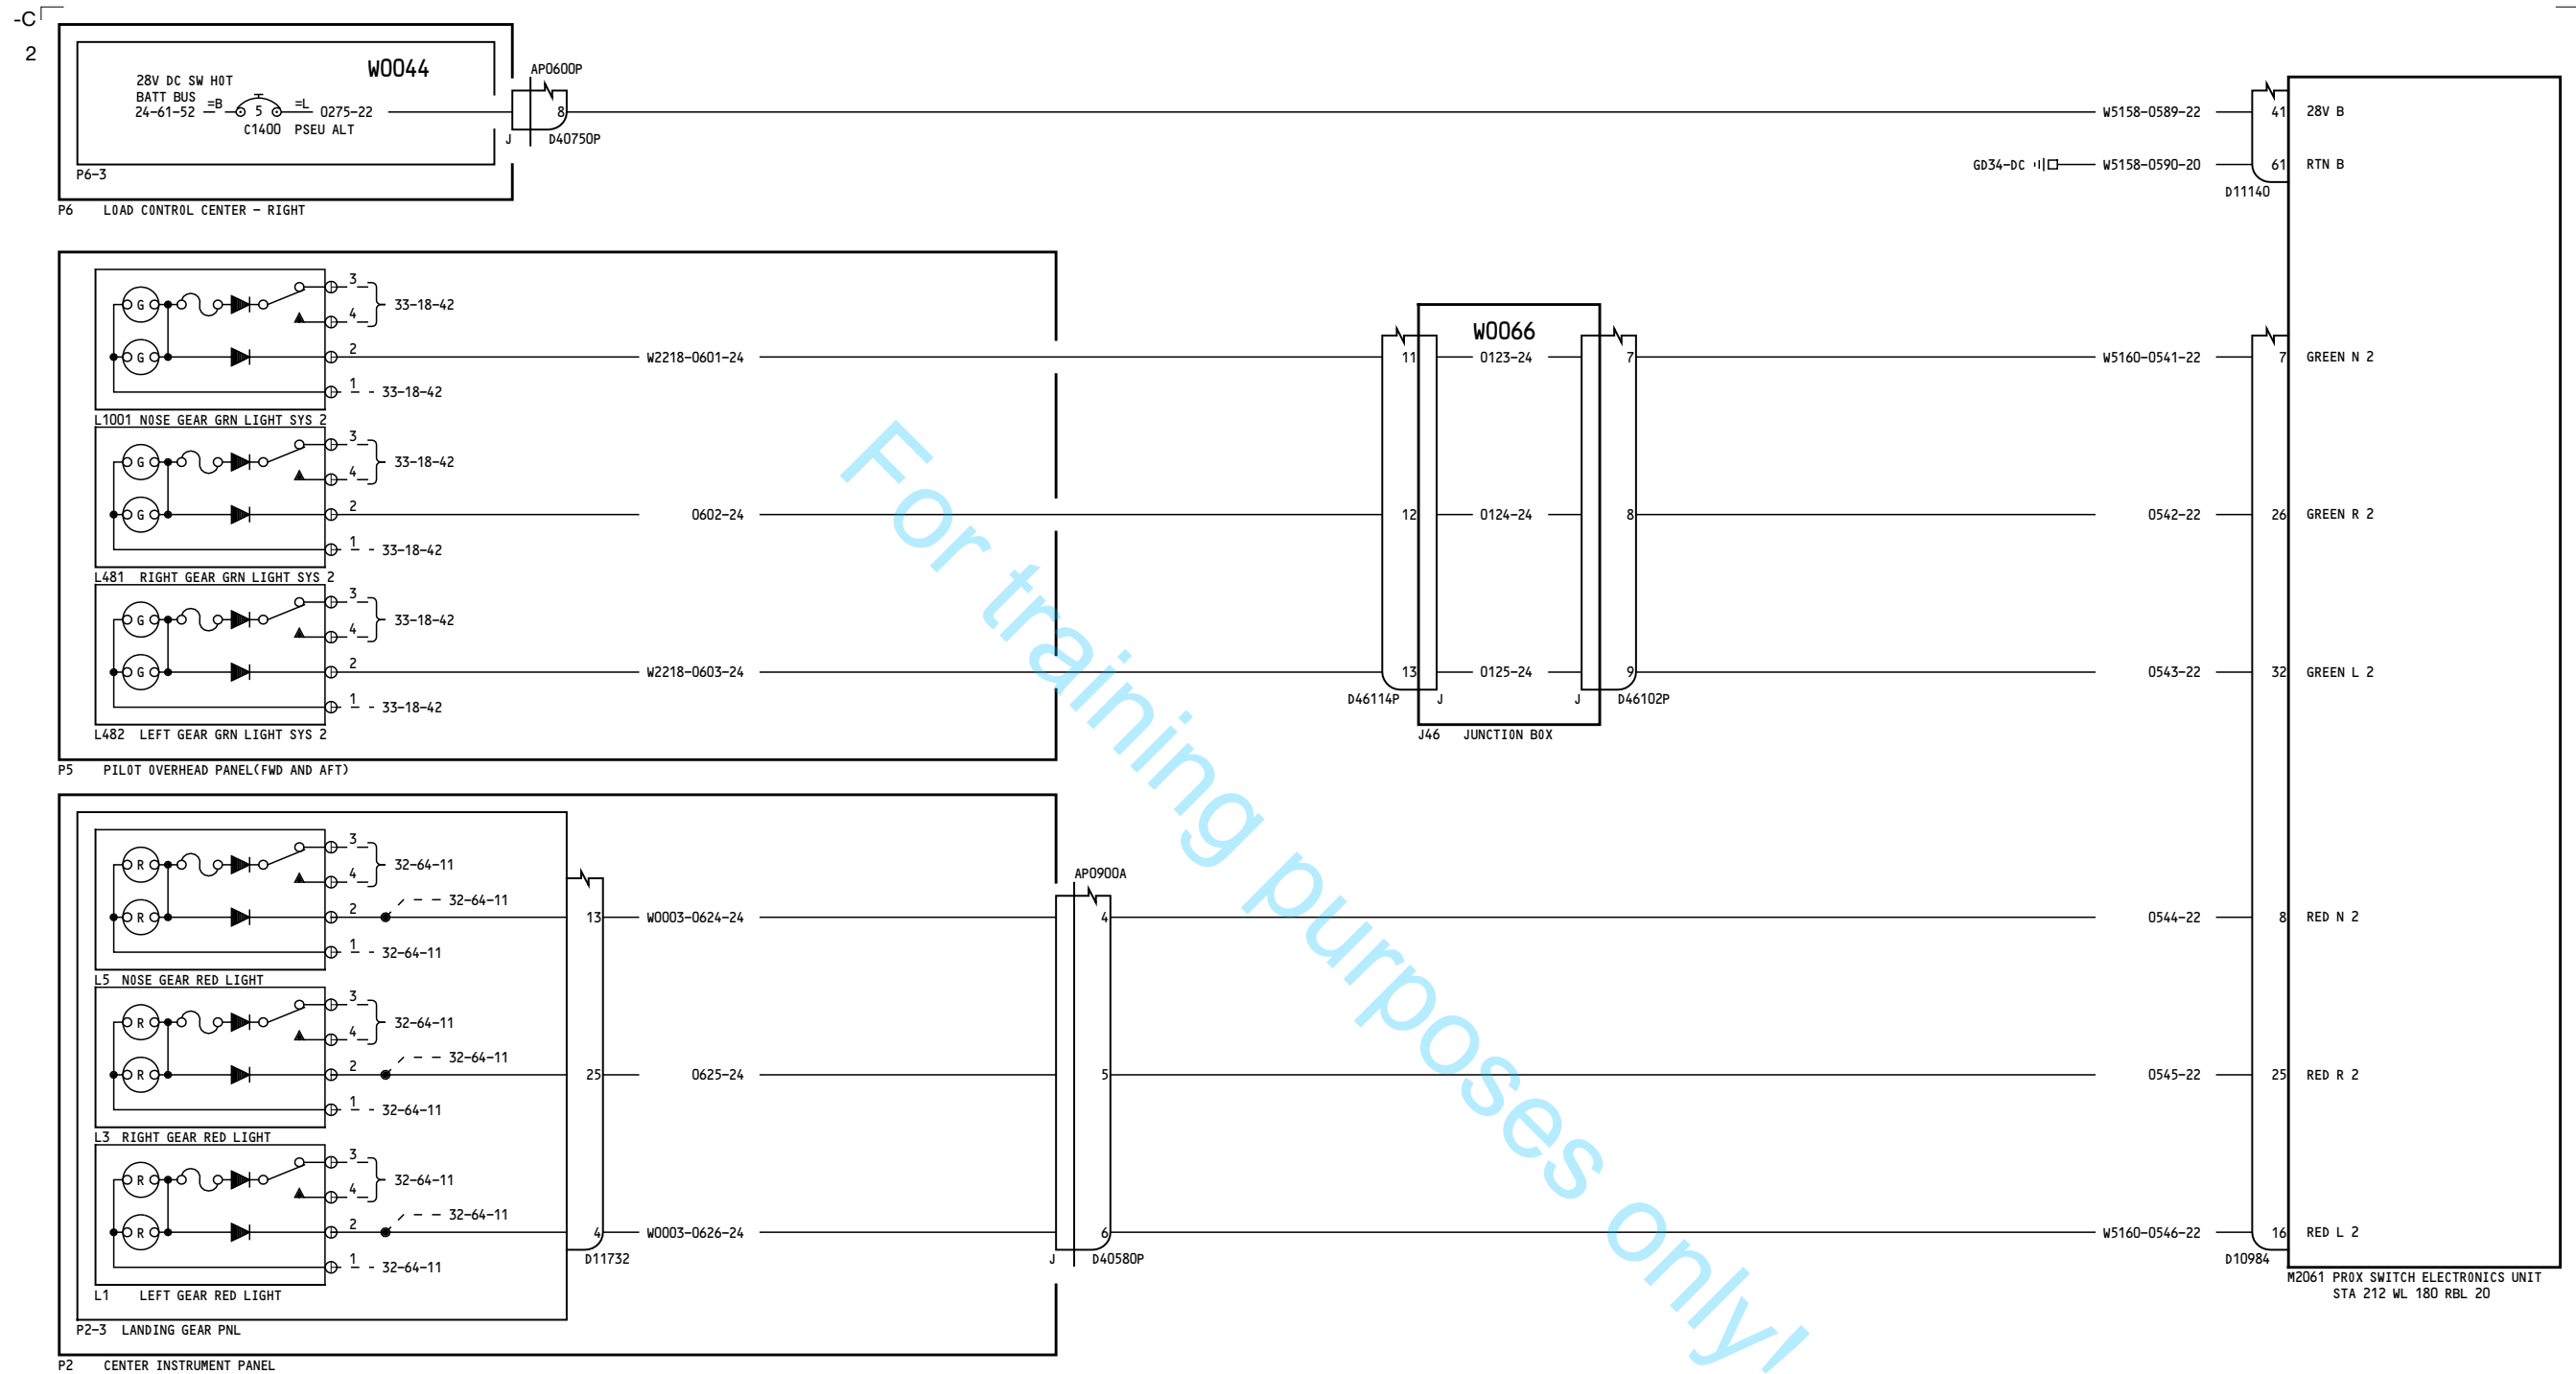

YD153-YL952, YN231-YN232

**LANDING GEAR POSITION  
INDICATING SYSTEM 2**


D280A108

**32-64-12**

Page 2  
Sheet 1  
Nov 12/2012

**32-64-12**

Page 2  
Sheet 1  
Nov 12/2012

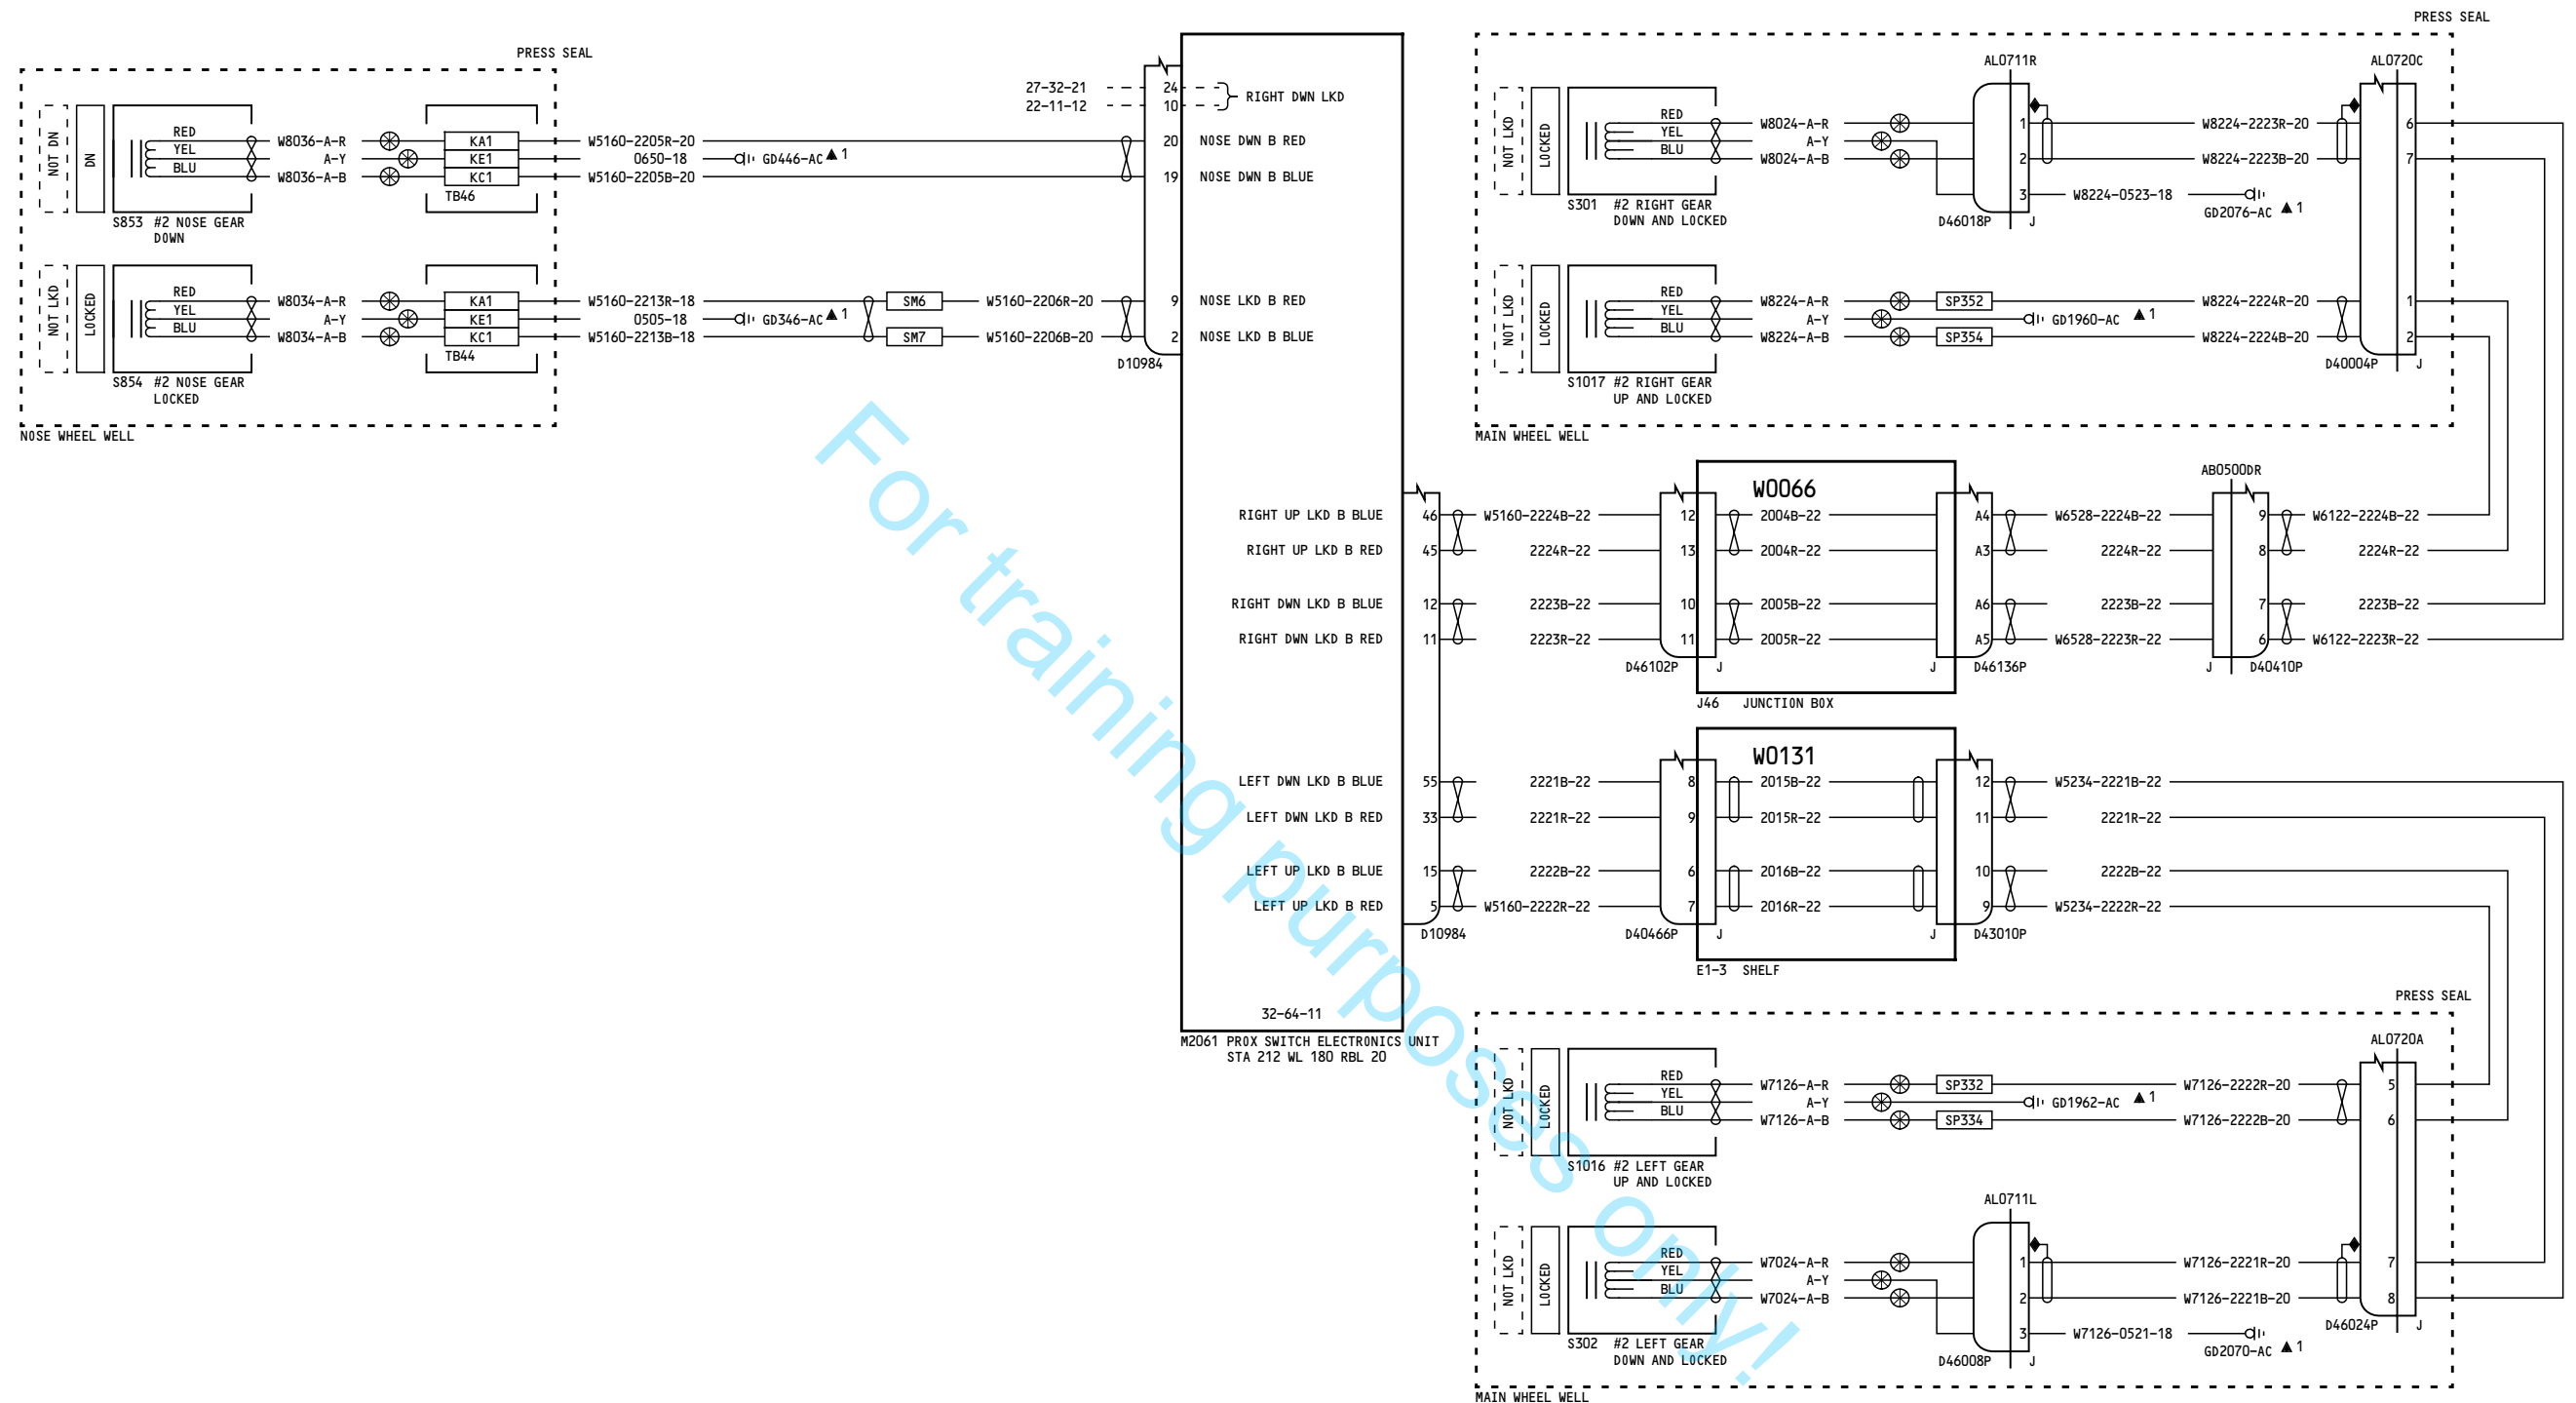

YD153-YL952, YN231-YN232

## LANDING GEAR POSITION INDICATING SYSTEM 2


D280A108

**32-64-12**

Page 2  
Sheet 2  
Nov 12/2012

**32-64-12**

Page 2  
Sheet 2  
Nov 12/2012

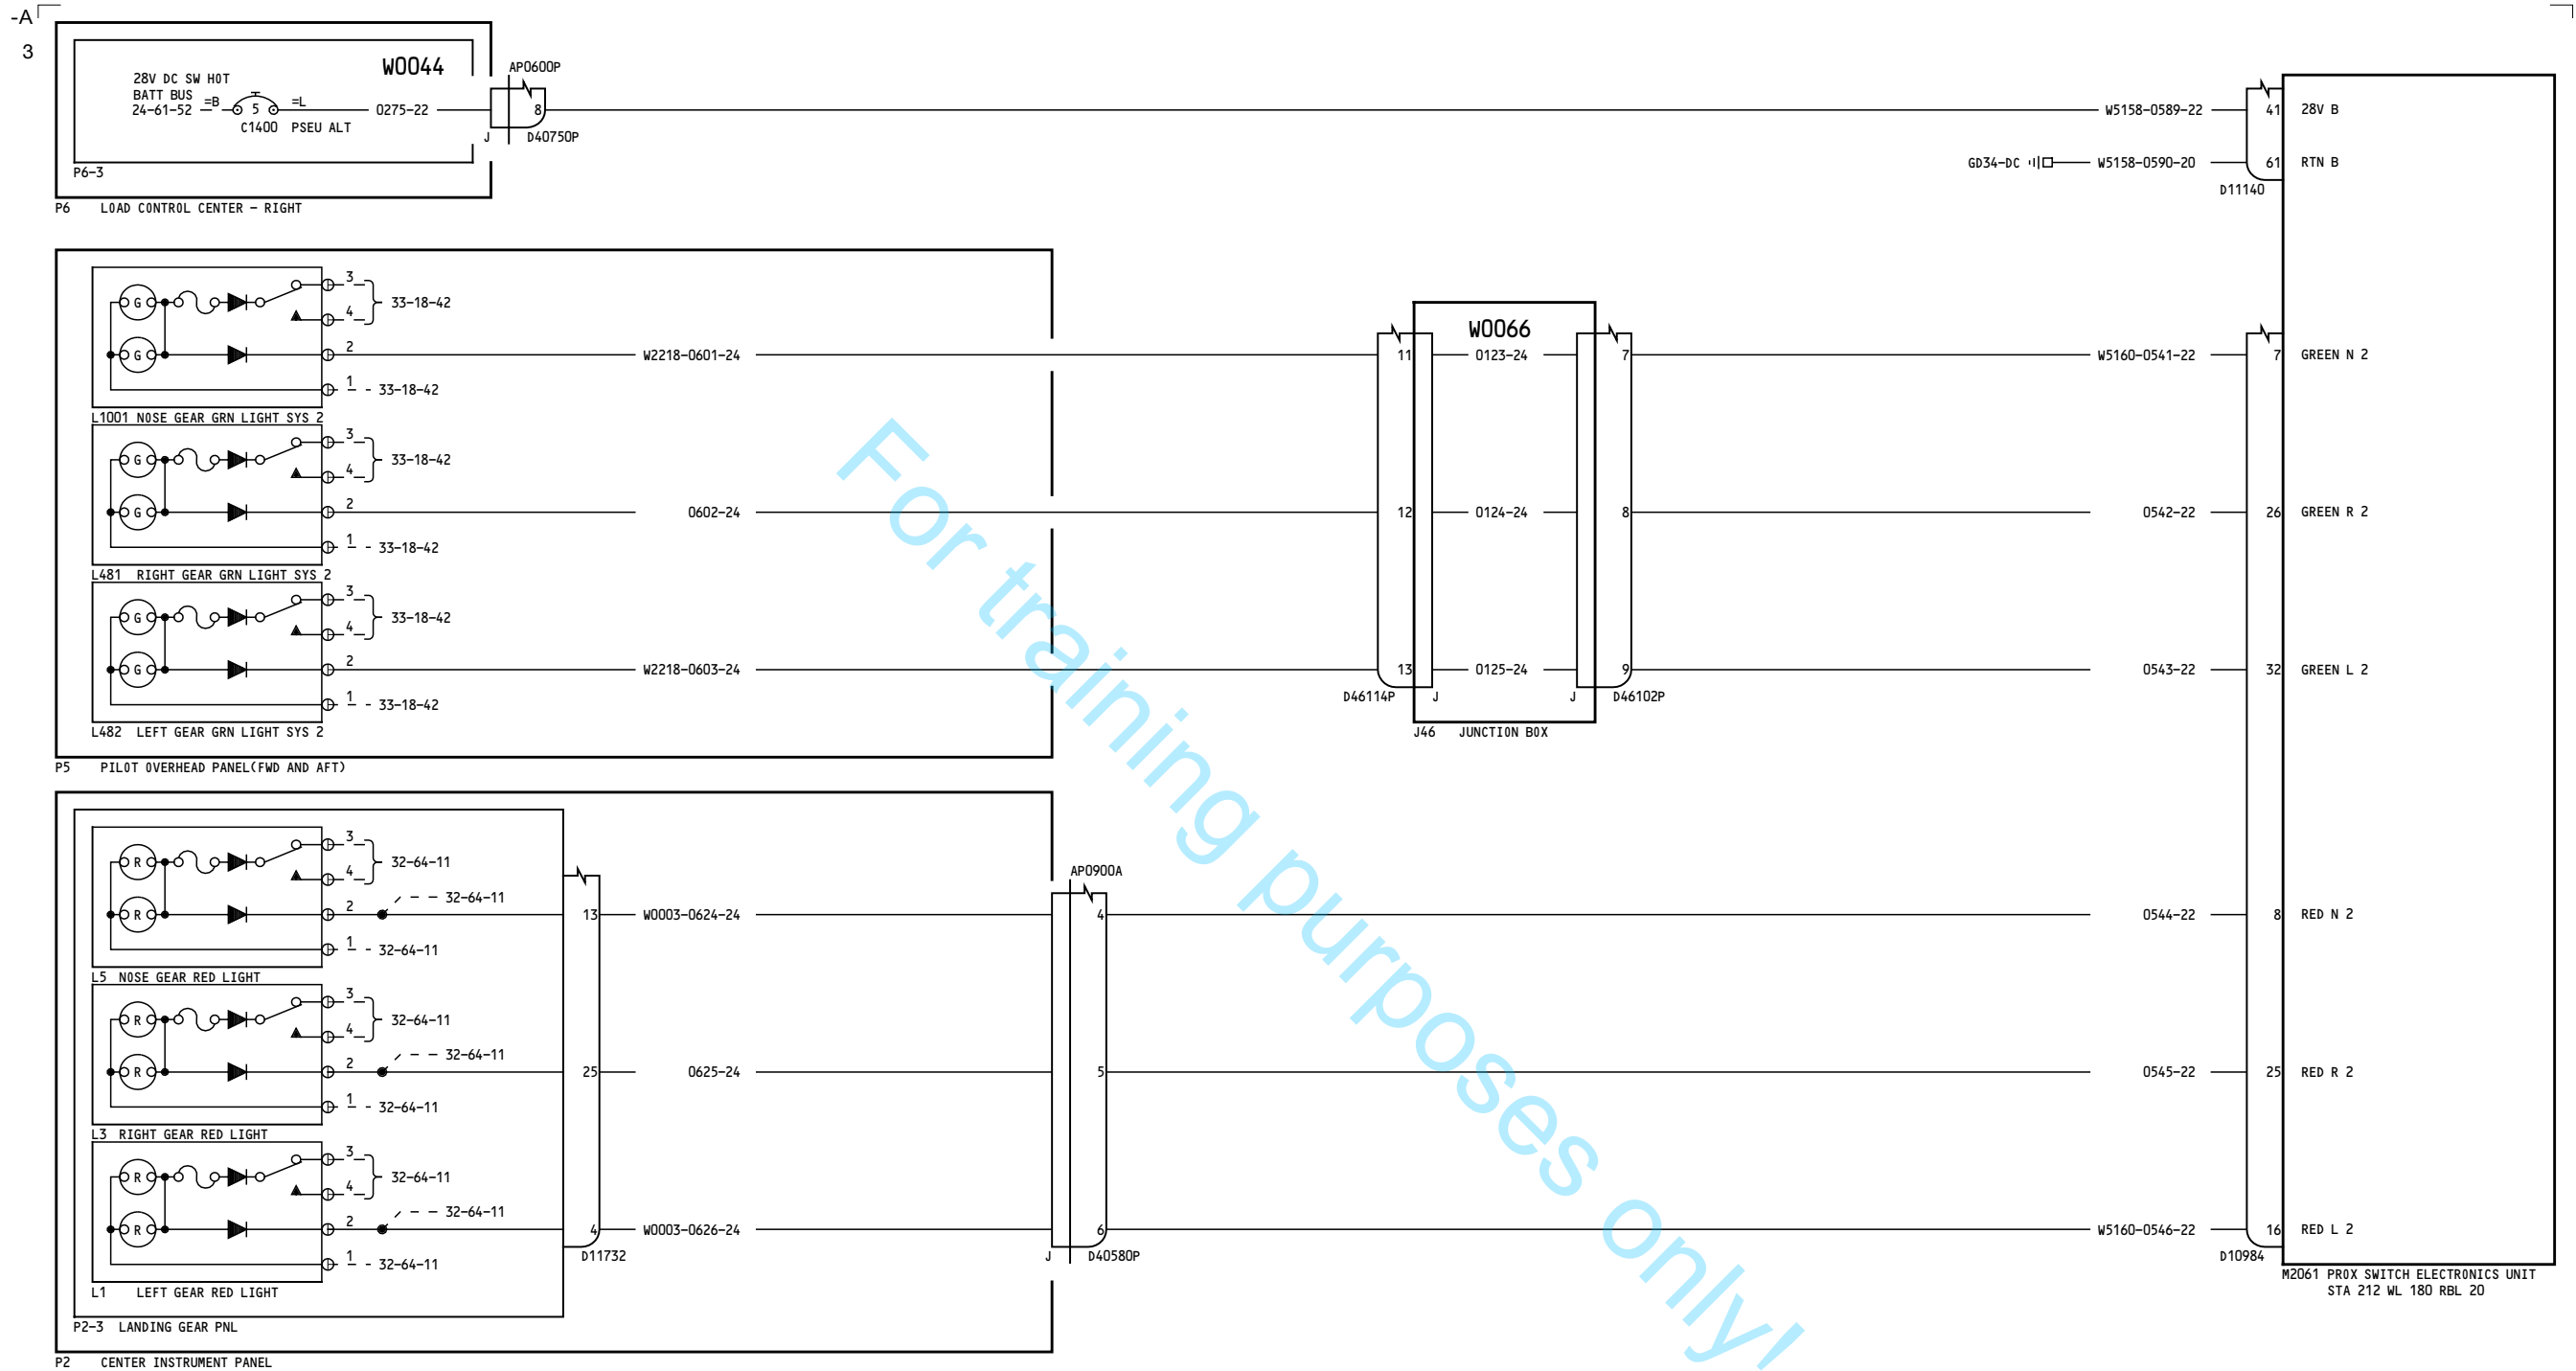

YL953-YL963, YN233-YN235

**LANDING GEAR POSITION  
INDICATING SYSTEM 2**

D280A108


**32-64-12**


Page 3  
Sheet 1  
Feb 01/2010

**32-64-12**

Page 3  
Sheet 1  
Feb 01/2010



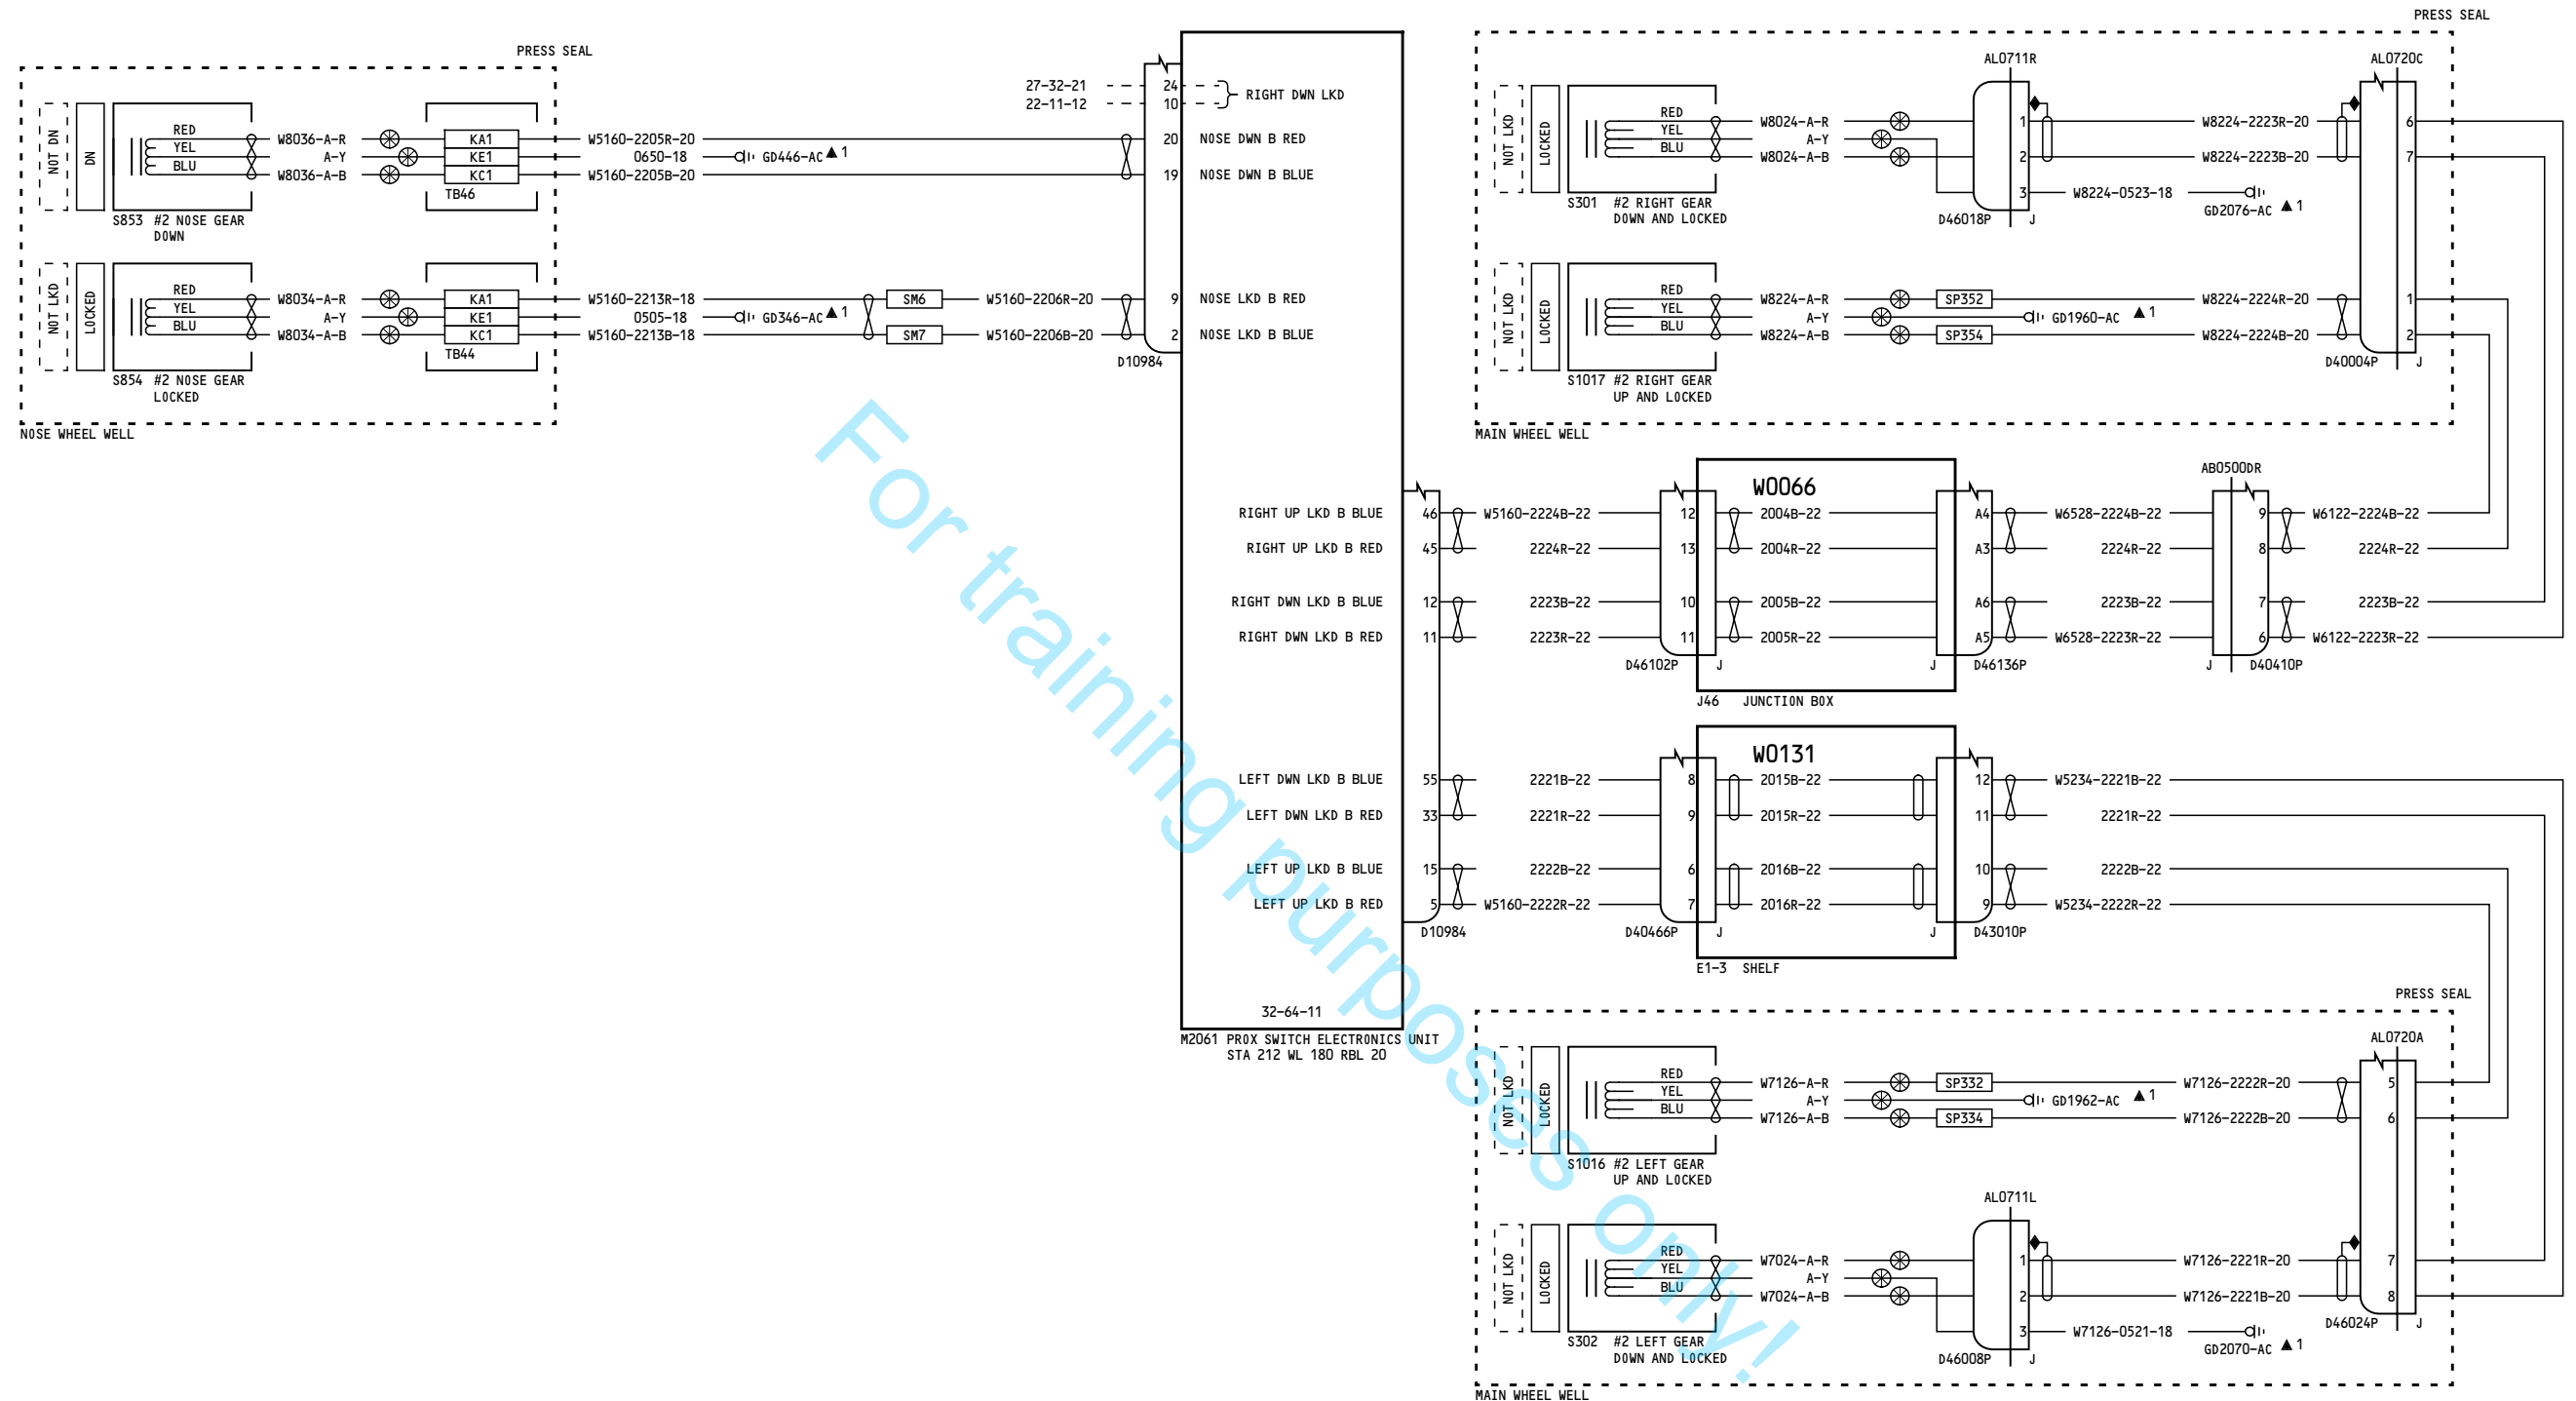

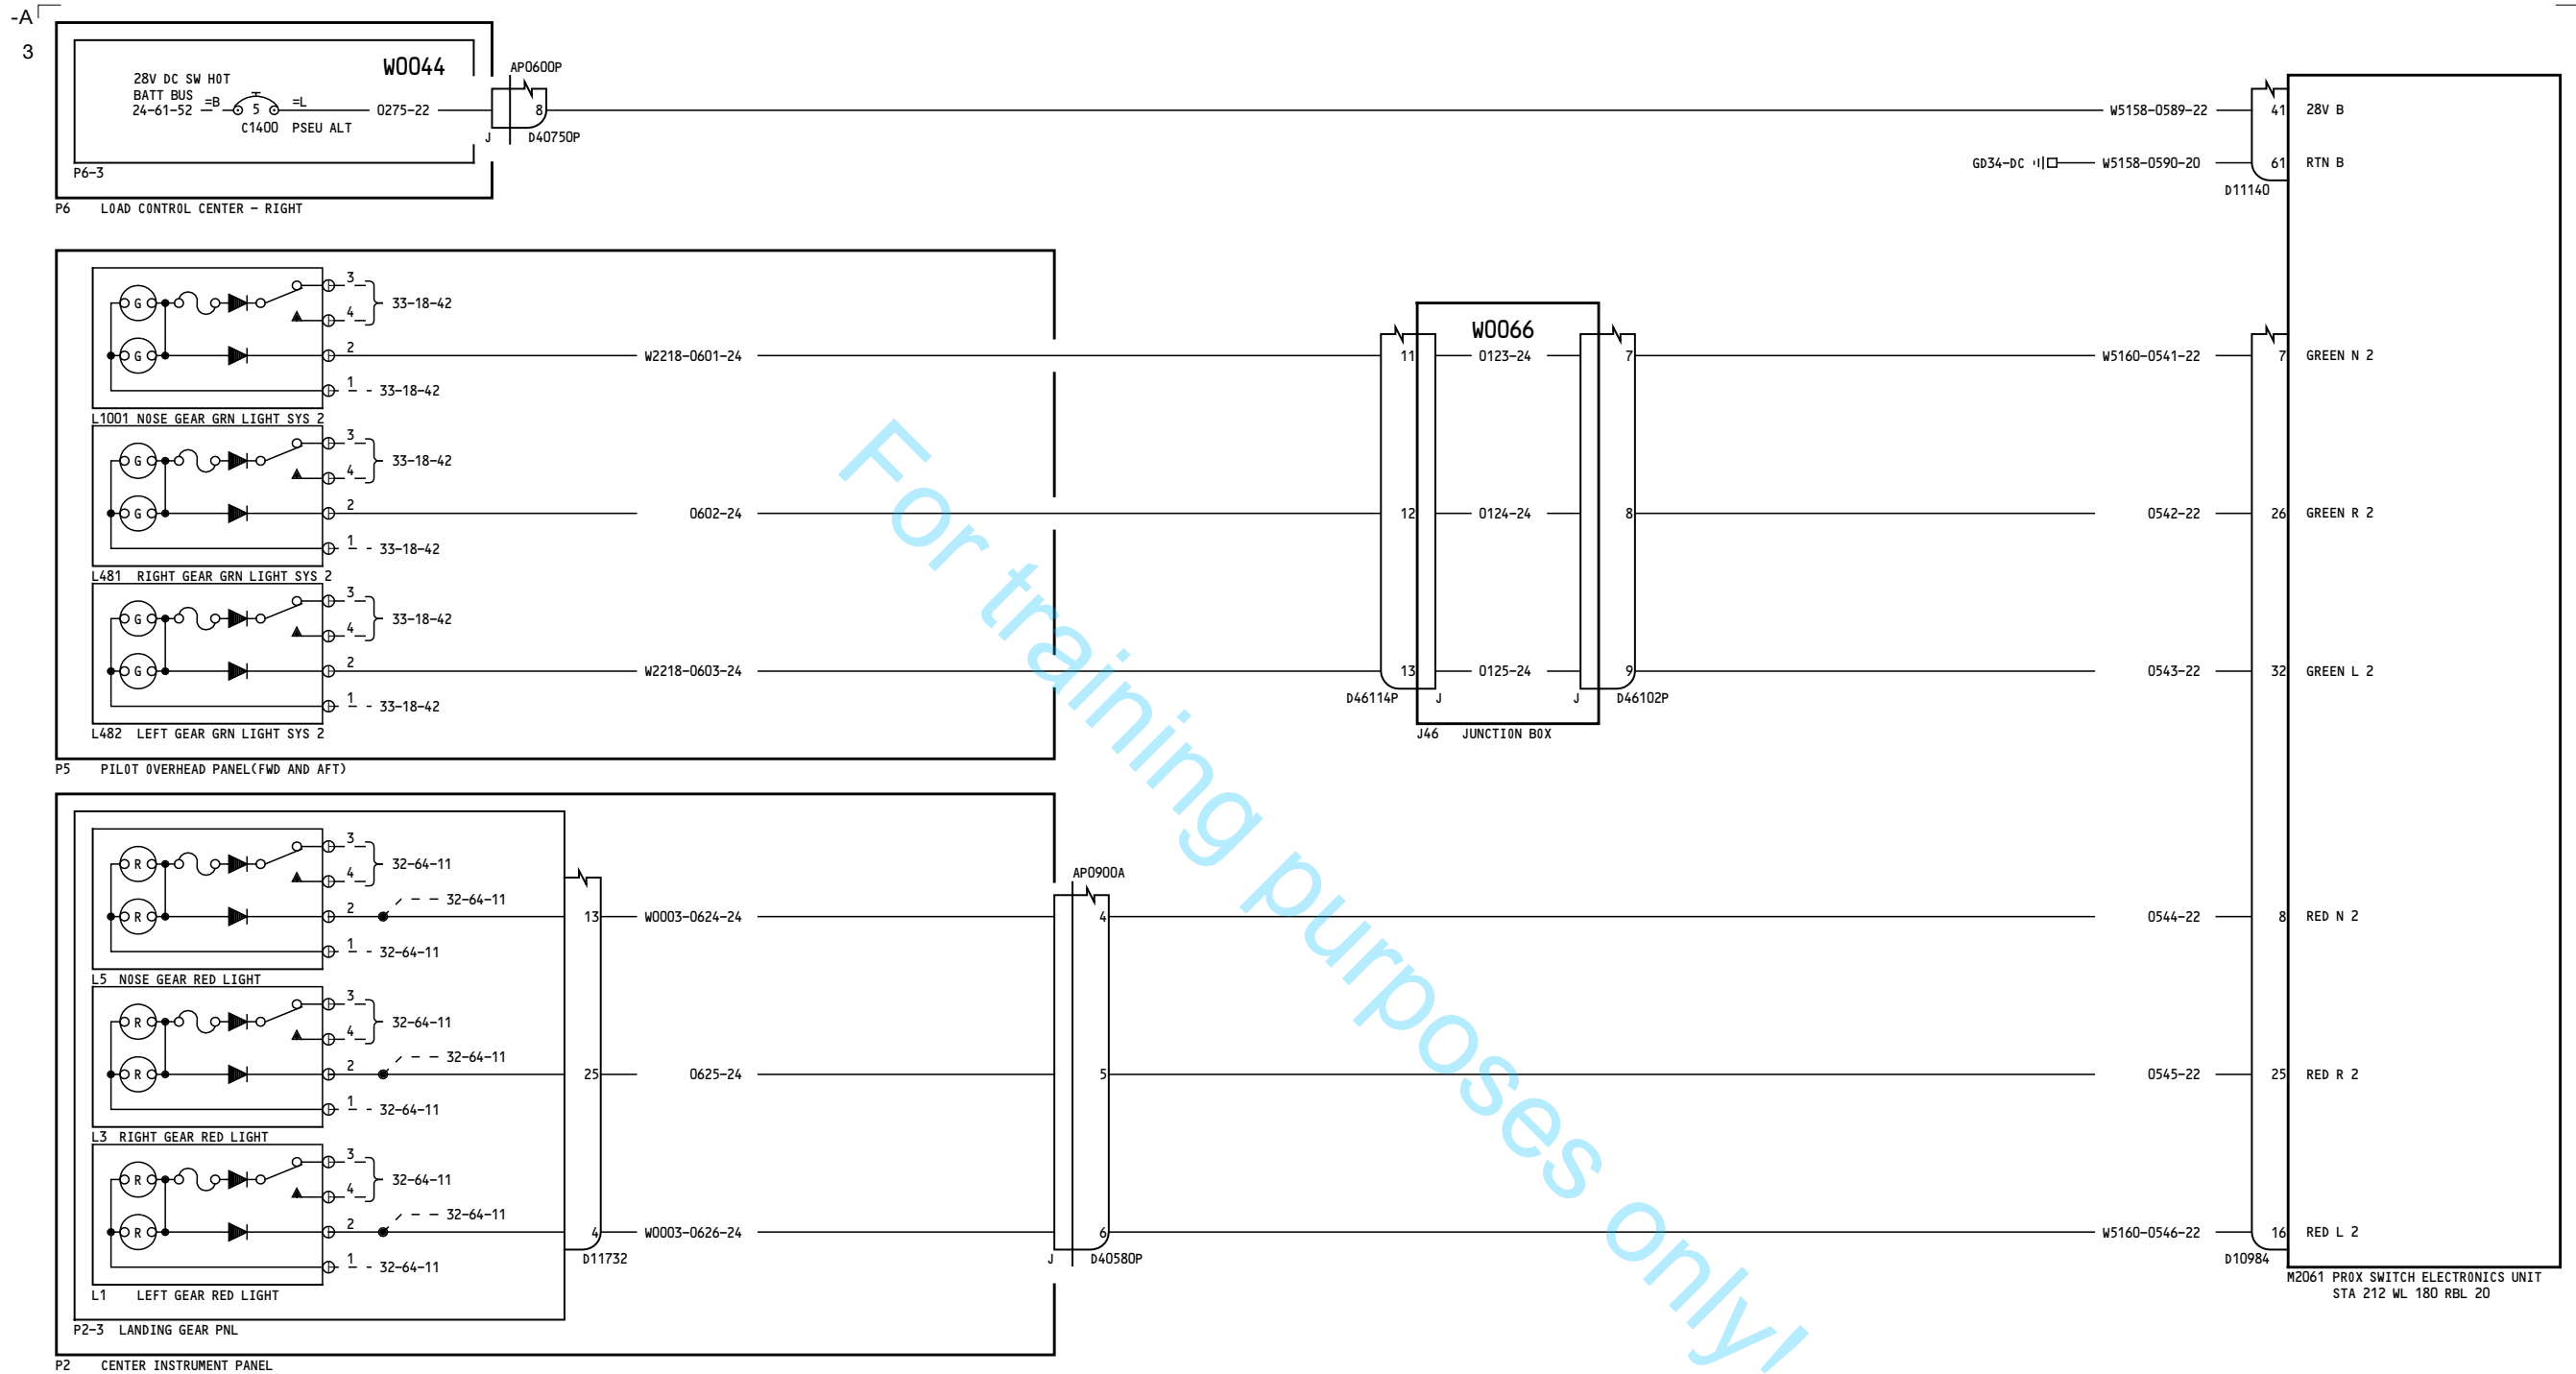

YL964-YL999, YN236-YR328

**LANDING GEAR POSITION  
INDICATING SYSTEM 2**


D280A108


**32-64-12**

Page 4  
Sheet 1  
Nov 12/2012

**32-64-12**

Page 4  
Sheet 1  
Nov 12/2012

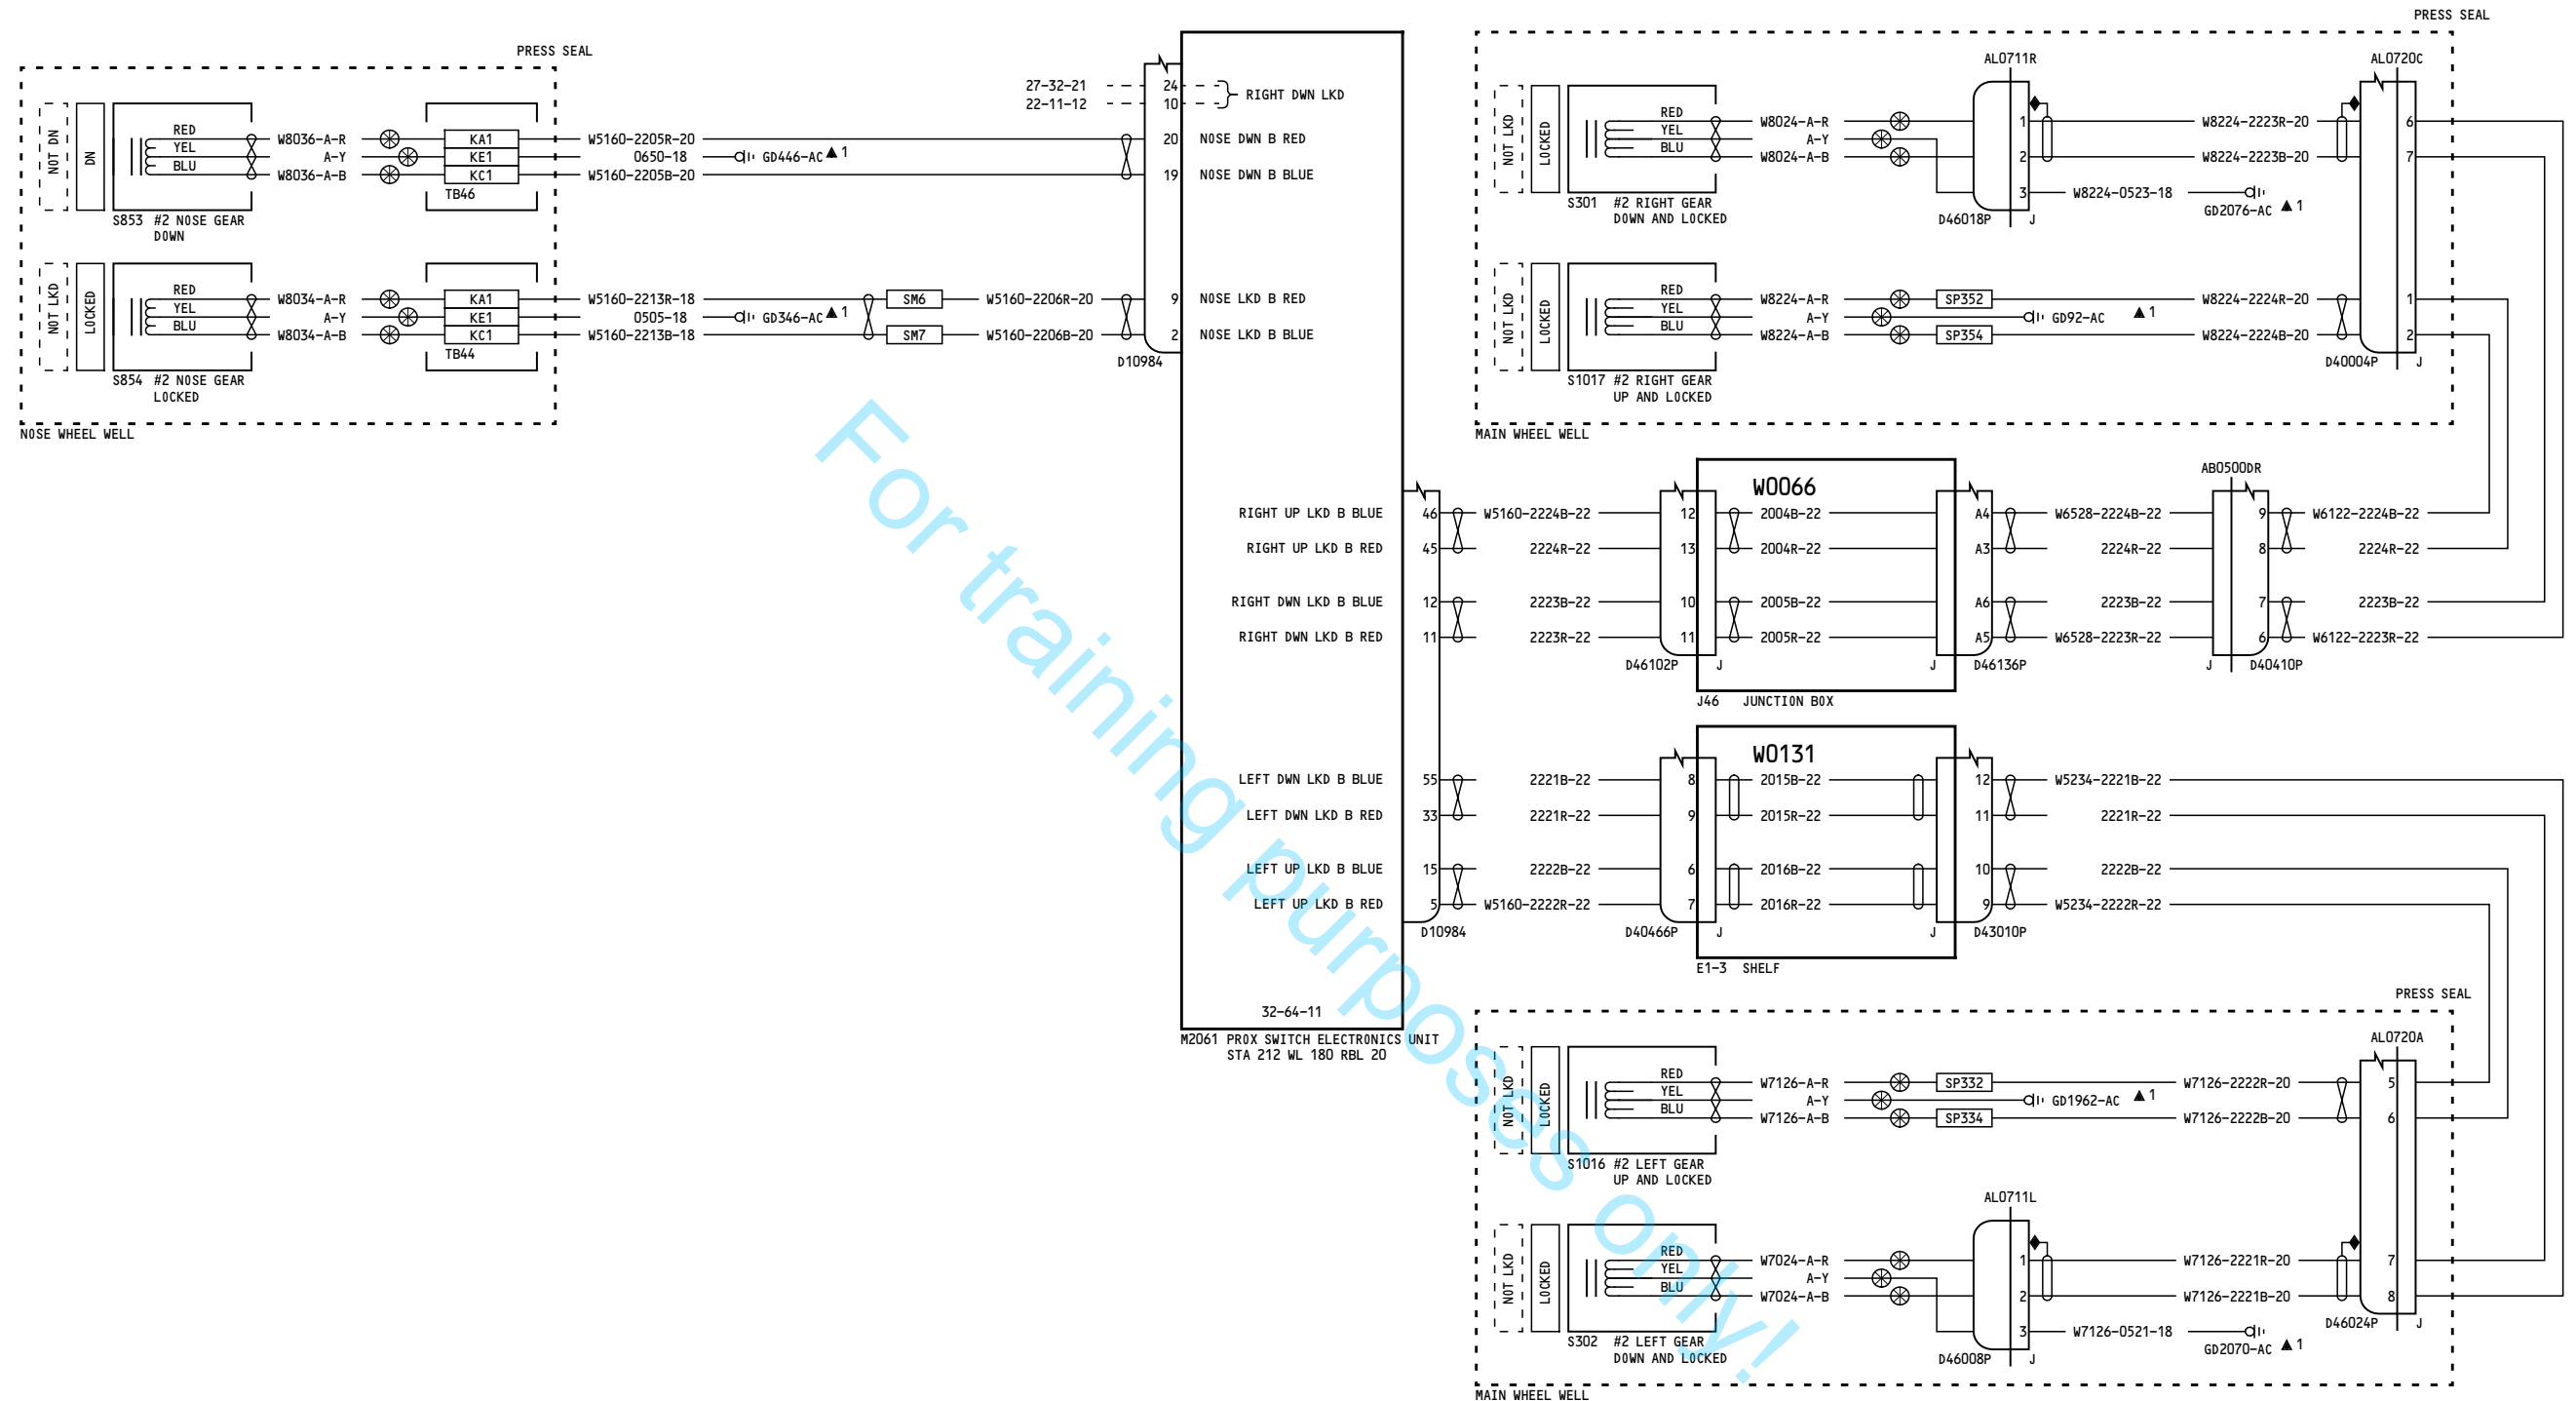

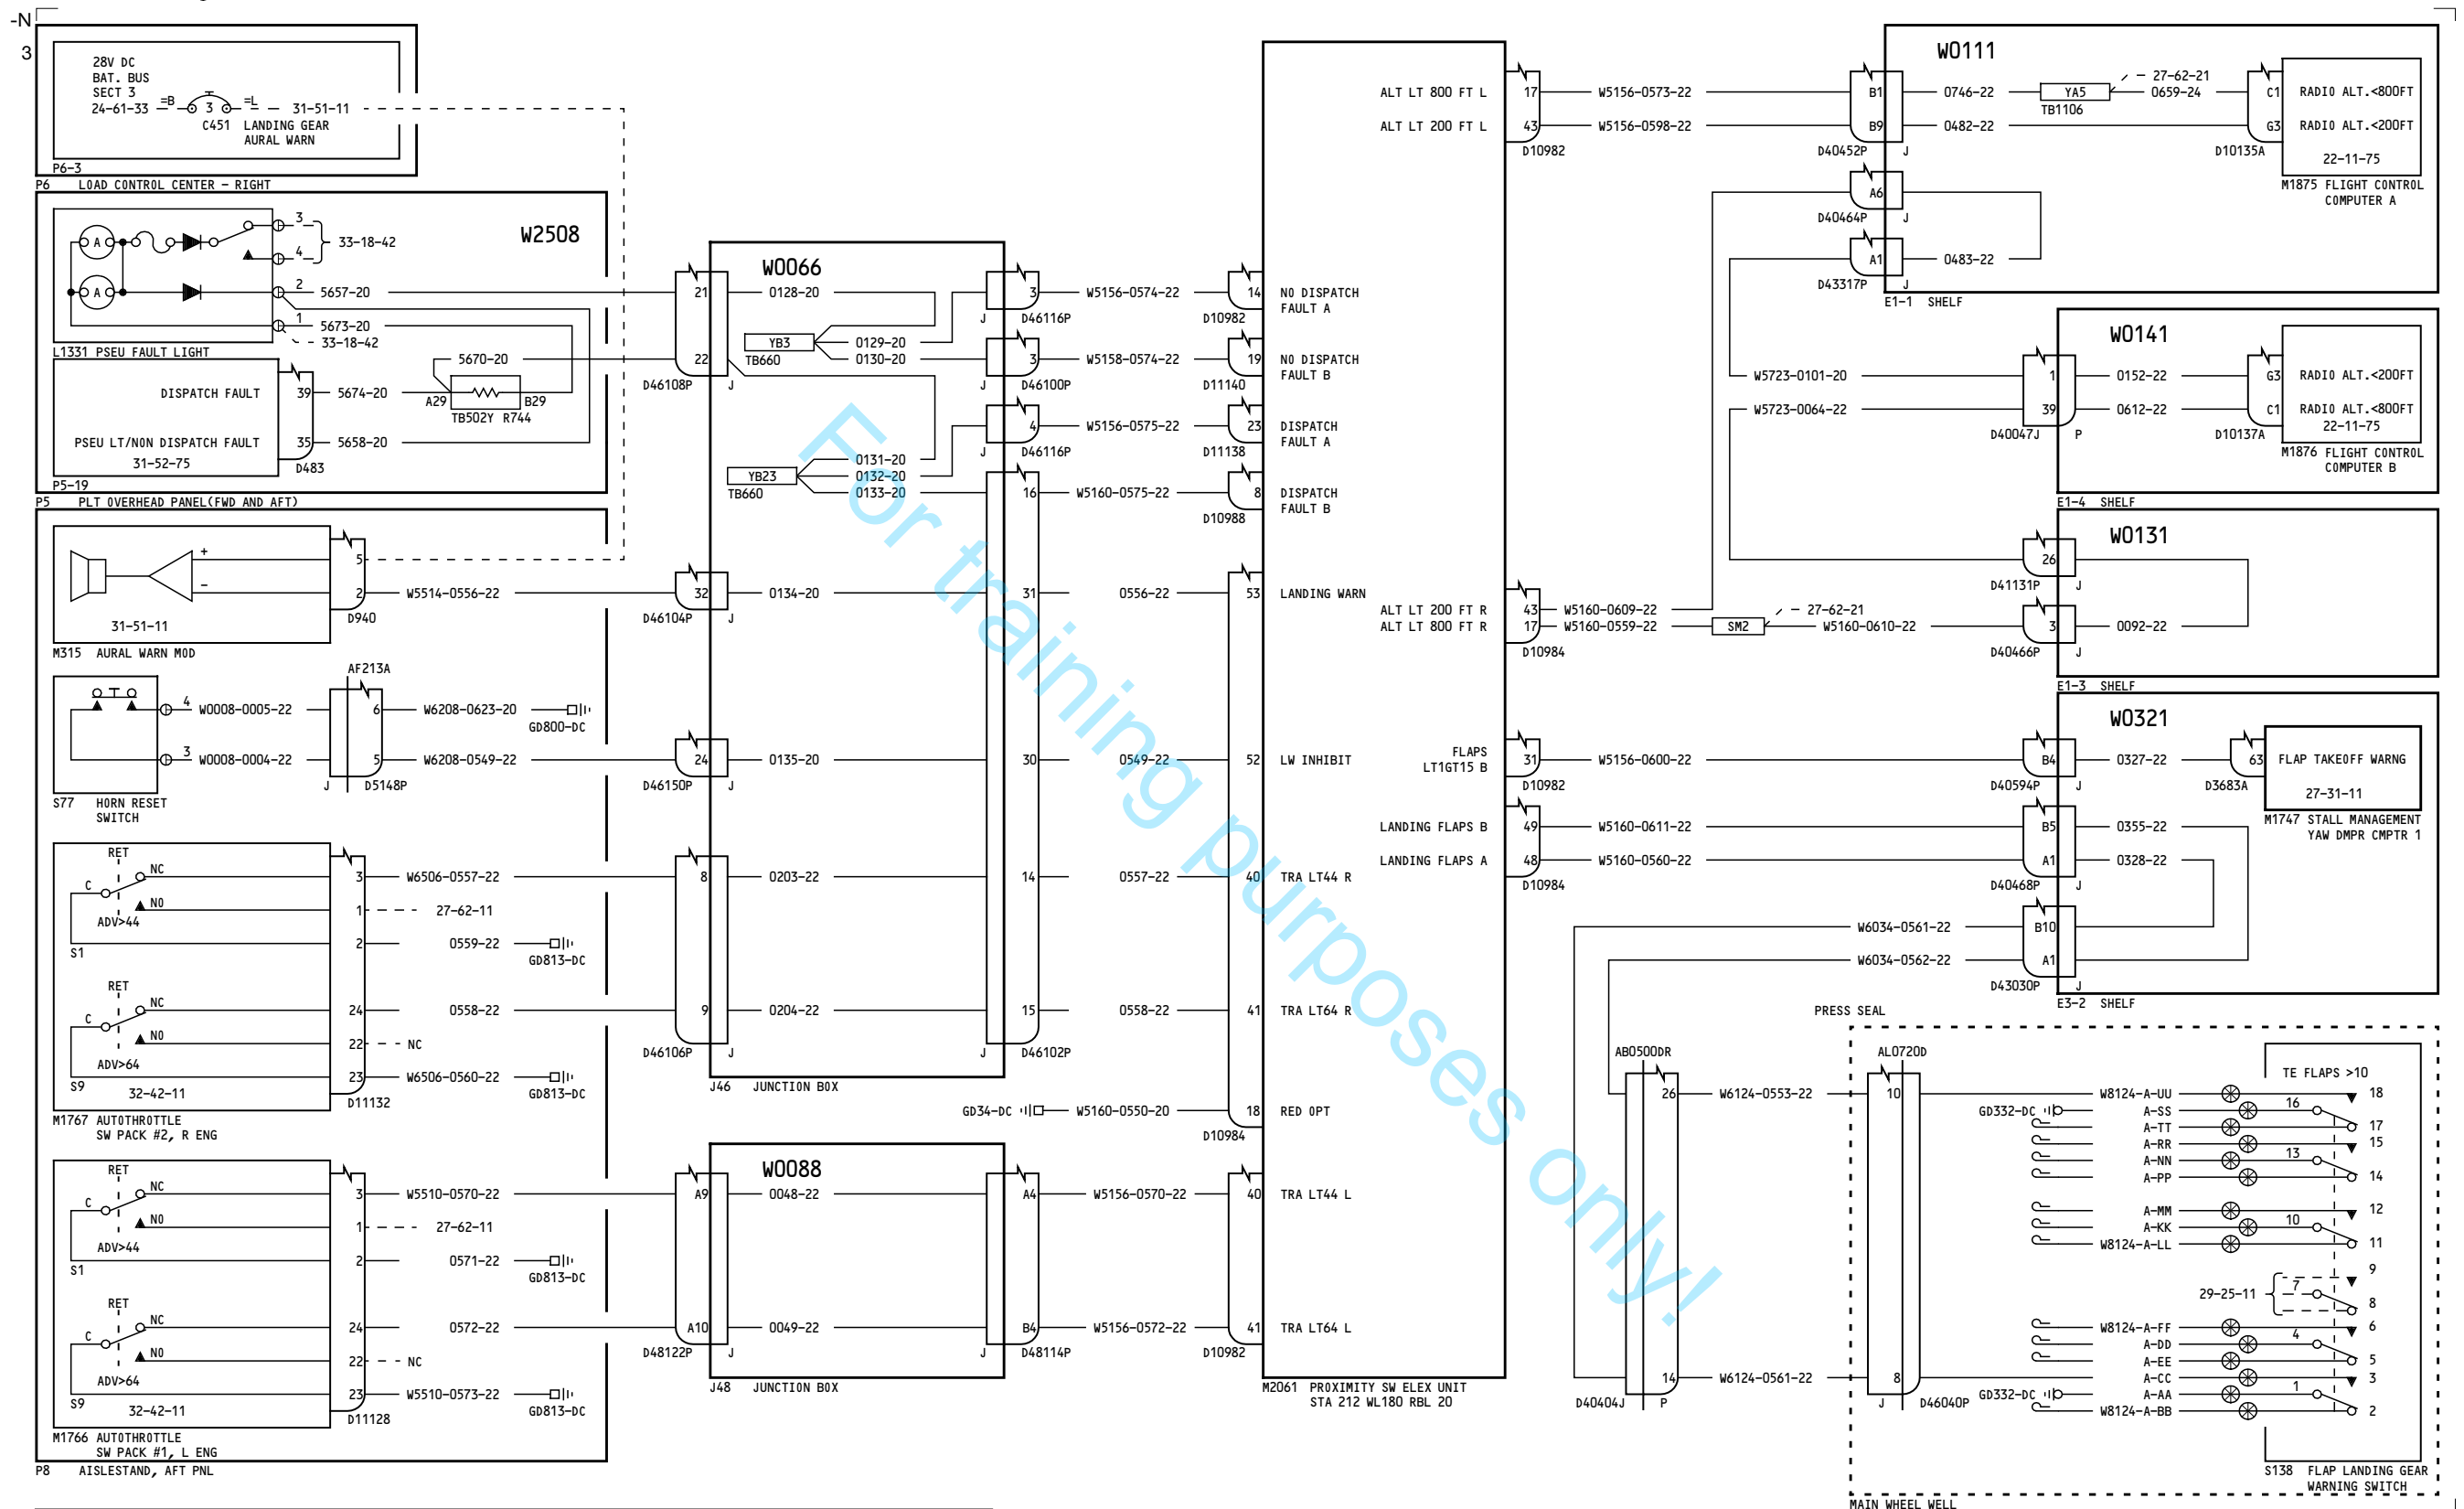

YC051-YD170, YN231

### LANDING GEAR WARNING

32-64-21

Page 1


D280A108

Nov 12/2012

32-64-21

Page 1

 Nov 12/2012



## LANDING GEAR WARNING

**32-64-21**

Page 2


May 11/2009

D280A108

**32-64-21**

Page 2

 May 11/2009



## LANDING GEAR WARNING

**32-64-21**

Page 3


May 11/2009

D280A108

**32-64-21**

Page 3

 May 11/2009



## LANDING GEAR WARNING

**32-64-21**

Page 4

Nov 12/2012


D280A108

**32-64-21**

Page 4

 Nov 12/2012





## LANDING GEAR WARNING

**32-64-21**

Page 5

Dec 19/2011

D280A108

**32-64-21**

Page 5

Dec 19/2011