

91-21-21

GROUND LIST

91-21-21
GROUND LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
EFFECTIVE PAGES			R GB01500	1	Nov 12/2012	GD00000 cont.		
	1 thru 3	Nov 12/2012	R GB01800	1	Nov 12/2012	R	10	Nov 12/2012
	4	BLANK	R GB02100	1	Nov 12/2012	R GD00100	1	Nov 12/2012
R GB00000	1	Nov 12/2012	R GB02200	1	Nov 12/2012	R	2	Nov 12/2012
R GB00100	1	Nov 12/2012	R GB03000	1	Nov 12/2012	R	3	Nov 12/2012
R GB00200	1	Nov 12/2012	R GB03100	1	Nov 12/2012	R	4	Nov 12/2012
R GB00300	1	Nov 12/2012	R	2	Nov 12/2012	R	5	Nov 12/2012
R GB00500	1	Nov 12/2012	R	3	Nov 12/2012	R	6	Nov 12/2012
R	2	Nov 12/2012	R	4	Nov 12/2012	R GD00200	1	Nov 12/2012
R	3	Nov 12/2012	R	5	Nov 12/2012	R	2	Nov 12/2012
R	4	Nov 12/2012	R	6	Nov 12/2012	R	3	Nov 12/2012
R	5	Nov 12/2012	R GB03200	1	Nov 12/2012	R	4	Nov 12/2012
R	6	Nov 12/2012	R	2	Nov 12/2012	R GD00300	1	Nov 12/2012
R GB00600	1	Nov 12/2012	R GB03300	1	Nov 12/2012	R	2	Nov 12/2012
R GB00800	1	Nov 12/2012	R GB03900	1	Nov 12/2012	R	3	Nov 12/2012
R GB01000	1	Nov 12/2012	R GB04100	1	Nov 12/2012	R	4	Nov 12/2012
R GB01100	1	Nov 12/2012	R GB04200	1	Nov 12/2012	R	5	Nov 12/2012
R	2	Nov 12/2012	R GB06100	1	Nov 12/2012	A	6	Nov 12/2012
R	3	Nov 12/2012	R GB08100	1	Nov 12/2012	R GD00400	1	Nov 12/2012
R	4	Nov 12/2012	R GD00000	1	Nov 12/2012	R	2	Nov 12/2012
R	5	Nov 12/2012	R	2	Nov 12/2012	R	3	Nov 12/2012
R	6	Nov 12/2012	R	3	Nov 12/2012	R	4	Nov 12/2012
R GB01200	1	Nov 12/2012	R	4	Nov 12/2012	R GD00500	1	Nov 12/2012
R	2	Nov 12/2012	R	5	Nov 12/2012	R	2	Nov 12/2012
R GB01300	1	Nov 12/2012	R	6	Nov 12/2012	R	3	Nov 12/2012
R GB01400	1	Nov 12/2012	R	7	Nov 12/2012	R	4	Nov 12/2012
R	2	Nov 12/2012	R	8	Nov 12/2012	R	5	Nov 12/2012
R	3	Nov 12/2012	R	9	Nov 12/2012	R	6	Nov 12/2012

A = Added, R = Revised, D = Deleted, O = Overflow

GROUND LIST

D280A108

EFFECTIVE PAGES

Page 1
Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

91-21-21 GROUND LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
GD00500 cont.			GD01100 cont.			R GD02900	1	Nov 12/2012
R	7	Nov 12/2012	R	3	Nov 12/2012	R GD03000	1	Nov 12/2012
R	8	Nov 12/2012	R	4	Nov 12/2012	R	2	Nov 12/2012
R	9	Nov 12/2012	R GD01200	1	Nov 12/2012	R GD03100	1	Nov 12/2012
R	10	Nov 12/2012	R	2	Nov 12/2012	R GD03200	1	Nov 12/2012
R	11	Nov 12/2012	R	3	Nov 12/2012	R	2	Nov 12/2012
R	12	Nov 12/2012	R GD01300	1	Nov 12/2012	R	3	Nov 12/2012
R GD00600	1	Nov 12/2012	R GD01400	1	Nov 12/2012	R	4	Nov 12/2012
R	2	Nov 12/2012	R	2	Nov 12/2012	A	5	Nov 12/2012
R	3	Nov 12/2012	R GD01500	1	Nov 12/2012	R GD03300	1	Nov 12/2012
R	4	Nov 12/2012	R GD01600	1	Nov 12/2012	R	2	Nov 12/2012
R	5	Nov 12/2012	R GD01700	1	Nov 12/2012	R GD03400	1	Nov 12/2012
R GD00700	1	Nov 12/2012	R GD01800	1	Nov 12/2012	R GD03700	1	Nov 12/2012
R	2	Nov 12/2012	R GD01900	1	Nov 12/2012	R	2	Nov 12/2012
R GD00800	1	Nov 12/2012	R	2	Nov 12/2012	R	3	Nov 12/2012
R	2	Nov 12/2012	R GD02000	1	Nov 12/2012	R	4	Nov 12/2012
R	3	Nov 12/2012	R	2	Nov 12/2012	R	5	Nov 12/2012
R	4	Nov 12/2012	R GD02100	1	Nov 12/2012	R	6	Nov 12/2012
R	5	Nov 12/2012	R	2	Nov 12/2012	R	7	Nov 12/2012
R	6	Nov 12/2012	R GD02200	1	Nov 12/2012	R	8	Nov 12/2012
R GD00900	1	Nov 12/2012	R	2	Nov 12/2012	R GD03800	1	Nov 12/2012
R	2	Nov 12/2012	R GD02300	1	Nov 12/2012	R	2	Nov 12/2012
R GD01000	1	Nov 12/2012	R	2	Nov 12/2012	R	3	Nov 12/2012
R	2	Nov 12/2012	R	3	Nov 12/2012	R	4	Nov 12/2012
R	3	Nov 12/2012	R	4	Nov 12/2012	R	5	Nov 12/2012
R	4	Nov 12/2012	R	5	Nov 12/2012	R	6	Nov 12/2012
R GD01100	1	Nov 12/2012	R GD02500	1	Nov 12/2012	R	7	Nov 12/2012
R	2	Nov 12/2012	R GD02800	1	Nov 12/2012	R	8	Nov 12/2012

A = Added, R = Revised, D = Deleted, O = Overflow

GROUND LIST

D280A108

EFFECTIVE PAGES

Page 2
Nov 12/2012

91-21-21
GROUND LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
GD03800 cont.			GD05000 cont.			R GD11100	1	Nov 12/2012
R	9	Nov 12/2012	R	2	Nov 12/2012	R GD11300	1	Nov 12/2012
A	10	Nov 12/2012	R GD05100	1	Nov 12/2012	R GD11700	1	Nov 12/2012
R GD03900	1	Nov 12/2012	R	2	Nov 12/2012	R GD11800	1	Nov 12/2012
R	2	Nov 12/2012	R GD05200	1	Nov 12/2012	R GD11900	1	Nov 12/2012
R	3	Nov 12/2012	R	2	Nov 12/2012	R GD30100	1	Nov 12/2012
R	4	Nov 12/2012	R GD05500	1	Nov 12/2012	D	2	BLANK
R	5	Nov 12/2012	R GD06100	1	Nov 12/2012			
R	6	Nov 12/2012	R GD06200	1	Nov 12/2012			
R	7	Nov 12/2012	R GD06300	1	Nov 12/2012			
R GD04000	1	Nov 12/2012	R GD06500	1	Nov 12/2012			
R	2	Nov 12/2012	R GD07000	1	Nov 12/2012			
R	3	Nov 12/2012	R GD07200	1	Nov 12/2012			
R	4	Nov 12/2012	R GD08000	1	Nov 12/2012			
R GD04100	1	Nov 12/2012	R	2	Nov 12/2012			
R	2	Nov 12/2012	R	3	Nov 12/2012			
R	3	Nov 12/2012	R	4	Nov 12/2012			
R	4	Nov 12/2012	R	5	Nov 12/2012			
R	5	Nov 12/2012	R	6	Nov 12/2012			
R GD04200	1	Nov 12/2012	R GD08100	1	Nov 12/2012			
R	2	Nov 12/2012	R	2	Nov 12/2012			
R	3	Nov 12/2012	R GD08200	1	Nov 12/2012			
R GD04300	1	Nov 12/2012	R GD09000	1	Nov 12/2012			
R GD04400	1	Nov 12/2012	R GD09100	1	Nov 12/2012			
R GD04800	1	Nov 12/2012	R GD09200	1	Nov 12/2012			
R	2	Nov 12/2012	R GD10000	1	Nov 12/2012			
R	3	Nov 12/2012	R GD10100	1	Nov 12/2012			
R GD05000	1	Nov 12/2012	R GD11000	1	Nov 12/2012			

A = Added, R = Revised, D = Deleted, O = Overflow

GROUND LIST

D280A108

EFFECTIVE PAGES

Page 3
Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number		Wire No.	GA	CO	Station / WL / BL	Effectivity
Term	Type	Bundle					Diagram	
I	GB00020		PARTOFTB0020				J020-0B/ /	ALL
I	ST..	1A	W0072	2001Z			73-21-11	ALL
I	ST..	1A	W0072	2011Z			31-32-15	ALL
I	ST..	1A	W0072	2012Z			73-24-12	ALL
I	ST..	1A	W0072	2013Z			73-24-12	ALL
I	GB00022		PARTOFTB0022				J022-00/ /	ALL
I	GB00023		PARTOFTB0023				J023-00/ /	ALL
I	ST..	1A	W0078	0099	20		73-21-11	YC056-YR328
I	GB00024		PARTOFTB0024				J024-00/ /	ALL
I	GB00028		PARTOFTB00028				J020-0A/ /	YC067-YR328
I	GB00032		PARTOFTB0032				J022-00/ /	ALL
I	GB00033		PARTOFTB0033				J023-00/ /	YL951-YR328
I	GB00034		PARTOFTB0034				J024-00/ /	ALL
I	ST..	1A	W0080	1301Z			73-22-11	ALL
I	ST..	1A	W0080	1302Z			73-22-11	ALL

GROUND LIST

D280A108

91-21-21

Section GB00000

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number		Wire No.	GA	CO	Station / WL / BL	Effectivity
Term	Type	Bundle					Diagram	
I	GB00101		PARTOFTB0101				P001-00/ /	ALL
I	ST..	1A	W0001	1009Z			33-11-32	YL951-YL999, YN232-YR328
I	ST..	1A	W0001	2001Z			31-62-11	YC051-YD158, YL951-YR328
I	ST..	1A	W0001	2005Z			31-62-13	YC051-YD158, YL951-YR328
I	ST..	1A	W0001	2006Z			31-62-13	YC051-YD158, YL951-YR328
I	ST..	1A	W0001	2007Z			31-62-13	YC051-YC052
I	ST..	1A	W0001	2010Z			31-62-11	YC051-YD158, YL951-YR328
I	ST..	1A	W0001	2011Z			31-62-11	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GB00100

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number		Station / WL / BL		Effectivity
Term	Type	Bundle	Wire No.	GA	CO	
I	GB00201	PARTOFTB0201		P002-00/ /		ALL
I	GB00261	PARTOTTB0261		261/282/R005		ALL
I	ST..	1A	W2112	2601Z	73-21-12	YC053-YR328
I	DC..	1A	W2114	A-AG	33-51-12	YC053-YR328
I	ST..	1A	W2216	2601Z	73-21-12	YC051-YR323, YR325-YR328
I	ST..	1A	W2508	2003Z	34-61-15	YC051-YD158
I	ST..	1A	W2589	2001Z	34-61-15	YC051-YD170
I	ST..	1A	W2589	2001Z	SPARE	YN231-YN501
I	ST..	1A	W5172	2610Z	73-21-12	ALL
I	ST..	1A	W5172	2617Z	74-31-11	ALL
I	ST..	1A	W6172	2611Z	73-21-12	ALL
I	ST..	1A	W6172	2614Z	74-31-11	ALL
I	GB00262	PARTOFTB0262		/ /		ALL

GROUND LIST

D280A108

91-21-21

Section GB00200

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number				Station / WL / BL	
Term	Type	Bundle	Wire No.	GA	CO	Diagram	Effectivity
I	GB00301		PARTOFTB0301			P003-00/ /	ALL
I	ST..	1A	W0003	2501Z		31-62-21	YC051-YD158, YL951-YR328
I	ST..	1A	W0003	2505Z		31-62-23	YC051-YD158, YL951-YR328
I	ST..	1A	W0003	2506Z		31-62-23	YC051-YD158, YL951-YR328
	ST..	1A	W0003	2507Z		31-62-23	YC051-YC052
I	ST..	1A	W0003	2510Z		31-62-21	YC051-YD158, YL951-YR328
I	ST..	1A	W0003	2511Z		31-62-21	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GB00300

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB00521		PARTOFTB0521				E005-02/ /	ALL
ST..	1A	W0521	2502Z			34-61-11	ALL
ST..	1A	W0521	2506Z			34-61-12	ALL
ST..	1A	W0521	2507Z			34-61-12	ALL
ST..	1A	W0521	2576Z			31-62-15	ALL
ST..	1A	W0521	2590Z			31-22-11	ALL
ST..	1A	W0521	2614Z			34-58-11	ALL
ST..	1A	W0521	2628Z			34-61-11	ALL
ST..	1A	W0521	2637Z			34-61-11	ALL
ST..	1A	W0521	2638Z			34-61-11	ALL
ST..	1A	W0523	2702Z			34-61-11	ALL
ST..	1A	W0523	2703Z			34-61-11	ALL
ST..	1A	W0523	2707Z			34-61-14	ALL
ST..	1A	W0523	2712Z			34-61-14	ALL
ST..	1A	W0523	2713Z			34-61-14	ALL
ST..	1A	W0523	2716Z			34-61-15	ALL
ST..	1A	W0523	2717Z			34-61-18	ALL
ST..	1A	W0523	2724Z			34-21-23	ALL
ST..	1A	W0523	2725Z			34-21-23	YC051-YC052
ST..	1A	W0523	2726Z			34-21-23	ALL
ST..	1A	W0523	2727Z			34-21-23	ALL
ST..	1A	W0523	2728Z			34-21-23	ALL
ST..	1A	W0523	2729Z			34-21-23	YC051-YD158, YL951-YR328
ST..	1A	W0523	2730Z			34-21-23	ALL
ST..	1A	W0523	2732Z			34-21-23	ALL
ST..	1A	W0523	2733Z			34-21-23	ALL
ST..	1A	W0523	2734Z			34-21-23	ALL
ST..	1A	W0523	2735Z			34-21-23	ALL
ST..	1A	W0523	2736Z			34-21-23	ALL
ST..	1A	W0523	2737Z			34-21-23	ALL
ST..	1A	W0523	2739Z			34-21-24	ALL
ST..	1A	W0523	2740Z			34-21-24	ALL
ST..	1A	W0523	2742Z			34-21-24	ALL
ST..	1A	W0523	2743Z			34-21-24	ALL
ST..	1A	W0523	2745Z			34-21-24	ALL
ST..	1A	W0523	2747Z			34-21-24	ALL
ST..	1A	W0523	2749Z			34-21-24	ALL
ST..	1A	W0523	2756Z			31-62-25	ALL
ST..	1A	W0523	2760Z			34-31-21	ALL
ST..	1A	W0523	2772Z			34-21-23	ALL
ST..	1A	W0523	2776Z			34-21-24	ALL

GROUND LIST

D280A108

91-21-21

Section GB00500

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB00521		PARTOFTB0521 (continued)				E005-02/ /	ALL
ST..	1A	W0523	2784Z			34-58-21	YL951-YR328
ST..	1A	W0523	2794Z			34-21-24	ALL
ST..	1A	W0523	2797Z			34-61-14	YD158-YD170
ST..	1A	W0523	2798Z			34-61-15	YC056-YR328
ST..	1A	W0523	2799Z			34-61-15	YC056-YR328
ST..	1A	W0523	2802Z			34-61-21	ALL
ST..	1A	W0523	2803Z			34-61-21	ALL
ST..	1A	W0523	2817Z			34-61-24	YC051-YD157
ST..	1A	W0523	2818Z			31-33-01	ALL
ST..	1A	W0523	2820Z			34-21-24	YC053-YR328
ST..	1A	W0523	2839Z			34-21-23	YL951-YR328
GB00522		PARTOFTB0522				E005-02/ /	ALL
ST..	1A	W0521	2506ZO			34-61-12	ALL
ST..	1A	W0521	2507ZO			34-61-12	ALL
ST..	1A	W0521	2515Z			34-61-18	YC051-YC058
ST..	1A	W0521	2529Z			34-61-15	YC056-YR328
ST..	1A	W0521	2565Z			34-61-18	YC051-YC058
ST..	1A	W0521	2566Z			22-11-51	ALL
ST..	1A	W0521	2569Z			28-41-11	ALL
ST..	1A	W0521	2580Z			34-31-11	ALL
ST..	1A	W0521	2582Z			34-51-11	ALL
ST..	1A	W0521	2585Z			22-31-52	ALL
ST..	1A	W0521	2586Z			22-31-52	ALL
ST..	1A	W0521	2587Z			34-55-11	ALL
ST..	1A	W0521	2588Z			34-55-11	ALL
ST..	1A	W0521	2589Z			34-55-11	ALL
ST..	1A	W0521	2591Z			31-22-11	ALL
ST..	1A	W0521	2596Z			34-61-18	YC051-YC058
ST..	1A	W0521	2597Z			22-31-52	ALL
ST..	1A	W0521	2598Z			31-22-11	ALL
ST..	1A	W0521	2599Z			31-22-11	ALL
ST..	1A	W0521	2608Z			34-58-11	ALL
ST..	1A	W0521	2615Z			34-58-11	ALL
ST..	1A	W0521	2616Z			34-58-11	ALL
ST..	1A	W0521	2648Z			34-61-15	YC056-YR328
ST..	1A	W0521	2649Z			34-61-15	YC056-YR328
ST..	1A	W0521	2685Z			23-15-12	YC051-YD157
ST..	1A	W0521	2695Z			23-15-12	YC051-YD157
ST..	1A	W0521	2696Z			23-15-12	YC051-YD157

GROUND LIST

D280A108

91-21-21

Section GB00500

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB00522		PARTOFTB0522 (continued)				E005-02/ /	ALL
ST..	1A	W0521	2699Z			23-15-12	YC051-YD157
ST..	1A	W0521	2913Z			34-61-18	YC059-YR328
ST..	1A	W0521	2914Z			34-61-18	YC059-YR328
ST..	1A	W0521	2915Z			34-61-18	YC059-YR328
ST..	1A	W0521	2919Z			34-61-12	YC065-YR328
ST..	1A	W0521	2920Z			34-61-12	YC065-YR328
ST..	1A	W0523	2714Z			34-61-15	ALL
ST..	1A	W0523	2715Z			34-61-15	ALL
ST..	1A	W0523	2762Z			34-51-21	ALL
ST..	1A	W0523	2764Z			34-55-21	ALL
ST..	1A	W0523	2765Z			34-55-21	ALL
ST..	1A	W0523	2770Z			34-61-15	ALL
ST..	1A	W0523	2771Z			34-55-21	ALL
ST..	1A	W0523	2828Z			31-32-15	YC059-YR328
ST..	1A	W0523	2829Z			31-32-15	YC059-YR328
ST..	1A	W0523	2831Z			34-61-18	YC059-YR328
ST..	1A	W0523	2833Z			34-61-26	YC059-YR328
ST..	1A	W0523	3601Z			34-21-22	ALL
ST..	1A	W0523	3602Z			34-21-22	ALL
ST..	1A	W0523	3603Z			34-21-22	ALL
GB00523		PARTOFTB0523				E005-02/ /	ALL
ST..	1A	W0521	2501Z			34-61-22	ALL
ST..	1A	W0521	2503Z			34-61-11	ALL
ST..	1A	W0521	2505Z			34-61-14	ALL
ST..	1A	W0521	2506Z			34-61-12	ALL
ST..	1A	W0521	2507Z			34-61-12	ALL
ST..	1A	W0521	2509Z			34-61-14	ALL
ST..	1A	W0521	2510Z			34-61-14	ALL
ST..	1A	W0521	2511Z			34-61-14	ALL
ST..	1A	W0521	2512Z			34-61-14	ALL
ST..	1A	W0521	2513Z			34-61-14	ALL
ST..	1A	W0521	2517Z			34-61-22	ALL
ST..	1A	W0521	2518Z			34-61-14	ALL
ST..	1A	W0521	2519Z			34-61-14	ALL
ST..	1A	W0521	2520Z			34-61-14	ALL
ST..	1A	W0521	2521Z			34-61-14	ALL
ST..	1A	W0521	2522Z			34-61-14	ALL
ST..	1A	W0521	2523Z			34-61-15	ALL
ST..	1A	W0521	2524Z			34-61-15	ALL

GROUND LIST

D280A108

91-21-21

Section GB00500

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB00523		PARTOFTB0523 (continued)				E005-02/ /	ALL
ST..	1A	W0521	2525Z			34-61-15	ALL
ST..	1A	W0521	2526Z			34-61-15	ALL
ST..	1A	W0521	2528Z			34-61-14	ALL
ST..	1A	W0521	2530Z			34-61-15	ALL
ST..	1A	W0521	2543Z			34-21-13	YC065-YD170
ST..	1A	W0521	2548Z			34-21-14	ALL
ST..	1A	W0521	2549Z			34-21-14	ALL
ST..	1A	W0521	2550Z			34-21-14	ALL
ST..	1A	W0521	2551Z			34-21-14	ALL
ST..	1A	W0521	2554Z			34-21-14	ALL
ST..	1A	W0521	2556Z			34-21-14	ALL
ST..	1A	W0521	2557Z			34-21-14	ALL
ST..	1A	W0521	2558Z			34-21-14	ALL
ST..	1A	W0521	2559Z			34-21-14	ALL
ST..	1A	W0521	2575Z			31-62-15	ALL
ST..	1A	W0521	2579Z			34-31-11	ALL
ST..	1A	W0521	2581Z			34-51-11	ALL
ST..	1A	W0521	2591Z			31-22-11	ALL
ST..	1A	W0521	2592Z			34-61-22	ALL
ST..	1A	W0521	2593Z			34-61-14	ALL
ST..	1A	W0521	2594Z			34-61-14	ALL
ST..	1A	W0521	2595Z			34-61-15	ALL
ST..	1A	W0521	2604Z			34-21-14	ALL
ST..	1A	W0521	2624Z			34-61-21	ALL
ST..	1A	W0521	2625Z			34-61-21	ALL
ST..	1A	W0521	2640Z			34-61-22	ALL
ST..	1A	W0521	2647Z			34-61-14	YD158-YD170
ST..	1A	W0521	2677Z			34-21-14	YL951-YR328
ST..	1A	W0521	2901Z			34-21-13	YC065-YD157
ST..	1A	W0521	2922Z			34-21-13	YD158-YD170
ST..	1A	W0523	2755Z			31-62-25	ALL
ST..	1A	W0523	2764Z			34-55-21	ALL
ST..	1A	W0523	2804Z			34-61-15	YC051-YD157
GB00524		PARTOFTB0524				E005-02/ /	ALL
ST..	1A	W0521	2504Z			34-61-11	ALL
ST..	1A	W0521	2506ZO			34-61-12	ALL
ST..	1A	W0521	2507ZO			34-61-12	ALL
ST..	1A	W0521	2527Z			34-61-18	ALL
ST..	1A	W0521	2529Z			34-61-15	ALL

GROUND LIST

D280A108

91-21-21

Section GB00500

Page 4

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB00524		PARTOFTB0524 (continued)				E005-02/ /	ALL
ST..	1A	W0521	2533Z			34-21-13	ALL
ST..	1A	W0521	2534Z			34-21-13	YC051-YC052
ST..	1A	W0521	2535Z			34-21-13	ALL
ST..	1A	W0521	2536Z			34-21-13	ALL
ST..	1A	W0521	2537Z			34-21-13	ALL
ST..	1A	W0521	2538Z			34-21-13	YC051-YC058, YL951-YR328
ST..	1A	W0521	2540Z			34-21-13	YD158-YD170
ST..	1A	W0521	2541Z			34-21-13	YC051-YC064
ST..	1A	W0521	2542Z			34-21-13	YC051-YC058
ST..	1A	W0521	2543Z			34-21-13	YC051-YC064
ST..	1A	W0521	2544Z			34-21-13	ALL
ST..	1A	W0521	2545Z			34-21-13	ALL
ST..	1A	W0521	2546Z			34-21-13	ALL
ST..	1A	W0521	2547Z			34-21-13	ALL
ST..	1A	W0521	2567Z			22-11-51	ALL
ST..	1A	W0521	2569Z			28-41-11	ALL
ST..	1A	W0521	2570Z			28-41-11	ALL
ST..	1A	W0521	2571Z			28-41-11	ALL
ST..	1A	W0521	2611Z			34-58-11	YL951-YR328
ST..	1A	W0521	2615Z			34-58-11	ALL
ST..	1A	W0521	2631Z			23-27-13	YC051-YD157
ST..	1A	W0521	2632Z			23-27-14	YC051-YD157
ST..	1A	W0521	2633Z			23-27-14	YC051-YD157
ST..	1A	W0521	2665Z			34-61-24	YC051-YD157
ST..	1A	W0521	2666Z			31-33-01	ALL
ST..	1A	W0521	2674Z			34-21-13	YC051-YD157
ST..	1A	W0521	2680Z			34-21-13	YL951-YR328
ST..	1A	W0521	2901Z			34-21-13	YC051-YC064
ST..	1A	W0521	2919Z			34-61-12	YC065-YR328
ST..	1A	W0521	2920Z			34-61-12	YC065-YR328
ST..	1A	W0521	3501Z			34-21-12	ALL
ST..	1A	W0521	3502Z			34-21-12	ALL
ST..	1A	W0521	3503Z			34-21-12	ALL
ST..	1A	W0523	2701Z			34-61-11	ALL
ST..	1A	W0523	2705Z			34-61-14	ALL
ST..	1A	W0523	2706Z			34-61-14	ALL
ST..	1A	W0523	2709Z			34-61-14	ALL
ST..	1A	W0523	2710Z			34-61-14	ALL
ST..	1A	W0523	2711Z			34-61-14	ALL
ST..	1A	W0523	2718Z			34-61-14	ALL

GROUND LIST

D280A108

91-21-21

Section GB00500

Page 5

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB00524		PARTOFTB0524 (continued)				E005-02/ /	ALL
ST..	1A	W0523	2759Z			34-31-21	ALL
ST..	1A	W0523	2761Z			34-51-21	ALL
ST..	1A	W0523	2766Z			34-61-11	ALL
ST..	1A	W0523	2767Z			34-61-11	ALL
ST..	1A	W0523	2768Z			34-61-14	ALL
ST..	1A	W0523	2769Z			34-61-14	ALL
ST..	1A	W0523	2786Z			34-61-14	ALL
ST..	1A	W0523	2787Z			34-58-21	ALL
ST..	1A	W0523	2795Z			34-61-14	ALL
ST..	1A	W0523	2796Z			34-61-21	ALL
ST..	1A	W0523	2804Z			34-61-15	YD158-YD170
ST..	1A	W0523	2832Z			34-61-26	YC059-YR328
ST..	1A	W0523	2835Z			34-61-15	YD158-YD170

GROUND LIST

D280A108

91-21-21

Section GB00500

Page 6 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I	GB00606	PARTOFTB0606				270/176/R027	ALL
I	ST..	1A	W2216	1301Z		73-21-12	YC051-YR323, YR325-YR328
I	ST..	1A	W5158	2601Z		78-32-61	ALL
I	ST..	1A	W5158	2602Z		78-32-61	ALL
I	ST..	1A	W6162	1301Z		73-21-12	YC054-YR328
I	ST..	1A	W6172	1301Z		73-21-12	ALL
I	ST..	1A	W6172	2601Z		78-32-61	ALL
I	ST..	1A	W6172	2602Z		78-32-61	ALL
I	GB00608	PARTOFTB0608				//	ALL
I	GB00610	PARTOFTB0610				P006-00/ /	YR303-YR328
I	ST..	1A	W0041	2504Z		31-32-15	YR303-YR328
I	ST..	1A	W0041	2533Z		31-32-15	YR303-YR328
I	ST..	1A	W0054	2011Z		23-42-14	YR303-YR324
I	GB00621	PARTOFTB0621				E006-02/ /	YL951-YR328
I	ST..	1A	W0621	2020ZO		23-22-11	YL951-YR328
I	ST..	1A	W0621	2501ZO		23-11-11	YL951-YR328
I	ST..	1A	W0621	2502ZO		23-11-11	YL951-YR328
I	ST..	1A	W0621	2506Z		23-11-11	YL951-YR328
I	ST..	1A	W0621	2508Z		23-12-41	YL951-YR328
I	ST..	1A	W0621	2509Z		23-12-41	YL951-YR328
I	ST..	1A	W0621	2510Z		23-12-41	YL951-YR328
I	ST..	1A	W0621	2511Z		23-12-41	YL951-YR328
I	ST..	1A	W0621	2519Z		23-12-41	YL951-YR328
I	ST..	1A	W0621	2529Z		23-12-41	YL951-YR328
I	GB00660	PARTOFTB0660				//	ALL
I	GB00662	PARTOFTB0662				//	ALL
I	GB00664	PARTOFTB0664				//	ALL
I	GB00666	PARTOFTB0666				//	ALL

GROUND LIST

D280A108

91-21-21

Section GB00600

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB00801		PARTOFTB0801				J38/ /	ALL
ST..	1A	W5506	2201Z			24-22-11	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
ST..	1A	W5510	2201Z			24-22-11	ALL
GB00803		PARTOFTB0803				*/*/*	ALL
GB00804		PARTOFTB0804				*/*/*	ALL
GB00812		PARTOFTB00812				E008-01/ /	YD158-YD170
ST..	1A	W0811	2015Z			23-12-41	YD158-YD170
ST..	1A	W0811	2026Z			23-27-36	YD158-YD170
ST..	1A	W0811	2029Z			23-27-36	YD158-YD170
ST..	1A	W0811	2030Z			23-27-36	YD158-YD170
ST..	1A	W0811	2036Z			23-11-26	YD158-YD170
ST..	1A	W0811	2037Z			23-11-26	YD158-YD170
ST..	1A	W0811	2039Z			23-11-26	YD158-YD170
ST..	1A	W0811	2508Z			23-12-41	YD158-YD170
ST..	1A	W0811	2509Z			23-12-41	YD158-YD170
ST..	1A	W0811	2510Z			23-12-41	YD158-YD170
ST..	1A	W0811	2511Z			23-12-41	YD158-YD170
ST..	1A	W0811	2519Z			23-12-41	YD158-YD170
ST..	1A	W0811	2531Z			23-11-16	YD158-YD170
ST..	1A	W0811	2532Z			23-11-16	YD158-YD170
ST..	1A	W0811	2533Z			23-11-16	YD158-YD170

GROUND LIST

D280A108

91-21-21

Section GB00800

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number		Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
		Bundle						
I GB01092		PARTOFTB1092					P001-01/ /	ALL

GROUND LIST

D280A108

91-21-21

Section GB01000

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB01101		PARTOFTB1101				E001-01/ /	ALL
ST..	1A	W0111	2003Z			34-33-21	ALL
ST..	1A	W0111	2004Z			34-33-21	ALL
ST..	1A	W0111	2005Z			34-33-21	ALL
GB01102		PARTOFTB1102				E001-01/ /	ALL
ST..	1A	W0111	1029Z			27-25-11	YD154-YD155
ST..	1A	W0111	1031Z			27-25-11	YD154-YD155
ST..	1A	W0111	1032Z			27-25-11	ALL
ST..	1A	W0111	1033Z			27-25-11	ALL
ST..	1A	W0111	1035Z			27-25-11	ALL
ST..	1A	W0111	1036Z			27-25-11	ALL
GB01103		PARTOFTB1103				E001-01/ /	ALL
ST..	1A	W0111	2058Z			34-45-11	ALL
ST..	1A	W0111	2070Z			34-45-21	ALL
ST..	1A	W0111	2071Z			34-45-21	ALL
ST..	1A	W0111	2072Z			34-45-21	ALL
ST..	1A	W0111	2073Z			34-45-21	ALL
ST..	1A	W0111	2175ZO			34-45-21	ALL
GB01104		PARTOFTB1104				E001-01/ /	ALL
ST..	1A	W0111	1001Z			22-11-11	YC053-YR328
ST..	1A	W0111	1002Z			22-11-11	YC053-YR328
ST..	1A	W0111	1014Z			22-12-31	YC053-YR328
ST..	1A	W0111	1015Z			22-12-31	YC053-YD158
ST..	1A	W0111	1018Z			22-11-31	YC053-YD158
ST..	1A	W0111	1021Z			22-11-31	YC053-YD158
ST..	1A	W0111	1037Z			22-11-81	YD157-YD158
ST..	1A	W0111	1038Z			22-11-81	YD157-YR328
ST..	1A	W0111	2002Z			34-33-21	YD157-YR328
ST..	1A	W0111	2006Z			22-11-31	YC053-YD158
ST..	1A	W0111	2007Z			22-11-31	YC053-YD158
ST..	1A	W0111	2008Z			22-11-31	YC053-YD158
ST..	1A	W0111	2012Z			22-11-31	YC053-YD158
ST..	1A	W0111	2013Z			22-11-31	YC053-YD158
ST..	1A	W0111	2014Z			22-11-31	YC051-YD155
ST..	1A	W0111	2016Z			22-11-51	YC053-YD158
ST..	1A	W0111	2021Z			22-11-51	YC053-YD158
ST..	1A	W0111	2030Z			22-11-51	ALL
ST..	1A	W0111	2031Z			22-11-51	ALL

GROUND LIST

D280A108

91-21-21

Section GB01100

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB01104		PARTOFTB1104 (continued)				E001-01/ /	ALL
ST..	1A	W0111	2032Z			22-11-51	YC051-YD158
ST..	1A	W0111	2033Z			22-11-51	YC051-YD158
ST..	1A	W0111	2034ZI			22-12-31	YC051-YD155
ST..	1A	W0111	2034ZO			22-12-31	YC051-YD155
ST..	1A	W0111	2037Z			22-12-31	YC053-YR328
ST..	1A	W0111	2038Z			22-12-31	YC053-YD158, YL951-YR328
ST..	1A	W0111	2039Z			22-12-31	YC053-YR328
ST..	1A	W0111	2040Z			22-12-31	YC053-YD170
ST..	1A	W0111	2041ZI			22-12-41	YD151-YD155
ST..	1A	W0111	2041ZO			22-12-41	YC053-YD155
ST..	1A	W0111	2042Z			22-18-11	YC070-YR328
ST..	1A	W0111	2060Z			22-11-31	YC051-YD155
ST..	1A	W0111	2060Z			22-11-51	YD157-YD158
ST..	1A	W0111	2078Z			34-55-11	ALL
ST..	1A	W0111	2088Z			22-31-52	ALL
ST..	1A	W0111	2089Z			22-31-52	ALL
ST..	1A	W0111	2090Z			22-31-52	ALL
ST..	1A	W0111	2091Z			22-31-52	ALL
ST..	1A	W0111	2092Z			22-31-52	ALL
ST..	1A	W0111	2093Z			22-31-52	ALL
ST..	1A	W0111	2094Z			22-31-52	ALL
ST..	1A	W0111	2103Z			34-21-13	ALL
ST..	1A	W0111	2108Z			34-21-14	ALL
ST..	1A	W0111	2122Z			34-31-11	ALL
ST..	1A	W0111	2124Z			34-31-21	ALL
ST..	1A	W0111	2126Z			34-51-11	ALL
ST..	1A	W0111	2128Z			31-62-15	ALL
ST..	1A	W0111	2130Z			31-62-25	ALL
ST..	1A	W0111	2219Z			22-11-53	YC059-YR328
ST..	1A	W0111	2221Z			31-32-15	YC059-YR328
ST..	1A	W0111	2223Z			22-11-81	YD157-YD158
ST..	1A	W0111	2224Z			22-11-81	YD157-YD158
ST..	1A	W0111	2225Z			22-11-81	YD157-YR328
ST..	1A	W0111	2226Z			22-11-81	YD157-YR328
ST..	1A	W0111	2229Z			22-12-31	YD157-YR328
ST..	1A	W0111	2230Z			22-11-51	YD157-YD158
ST..	1A	W0111	2333Z			22-11-51	YC053-YD158
ST..	1A	W0111	3001Z			22-11-31	YC053-YD158
ST..	1A	W0111	3002Z			22-11-31	YC053-YD158
ST..	1A	W0111	3003Z			22-12-31	YC051-YD158

GROUND LIST

D280A108

91-21-21

Section GB01100

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB01104		PARTOFTB1104 (continued)				E001-01/ /	ALL
ST..	1A	W0111	3004Z			22-12-31	YC053-YR328
ST..	1A	W0111	3005Z			22-12-31	YC053-YD170
ST..	1A	W0111	3010Z			22-11-81	YD157-YR328
GB01105		PARTOFTB1105				E001-01/ /	ALL
ST..	1A	W0111	1021Z			22-11-31	YL951-YR328
ST..	1A	W0111	1037Z			22-11-81	YL951-YR328
ST..	1A	W0111	2006Z			22-11-31	YL951-YR328
ST..	1A	W0111	2007Z			22-11-31	YL951-YR328
ST..	1A	W0111	2012Z			22-11-31	YL951-YR328
ST..	1A	W0111	2013Z			22-11-31	YL951-YR328
ST..	1A	W0111	2032Z			22-11-51	YL951-YR328
ST..	1A	W0111	2033Z			22-11-51	YL951-YR328
ST..	1A	W0111	2060Z			22-11-51	YL951-YR328
ST..	1A	W0111	2084Z			22-31-31	YL951-YL999, YN232-YR328
ST..	1A	W0111	2085Z			22-31-41	YL951-YL999, YN232-YR328
ST..	1A	W0111	2086Z			22-31-41	YL951-YL999, YN232-YR328
ST..	1A	W0111	2087Z			22-31-41	YL951-YL999, YN232-YR328
ST..	1A	W0111	2116Z			34-21-24	YL951-YL999, YN232-YR328
ST..	1A	W0111	2133Z			73-24-11	YL951-YL999, YN232-YR328
ST..	1A	W0111	2134Z			73-24-11	YL951-YL999, YN232-YR328
ST..	1A	W0111	2135Z			73-24-21	YL951-YL999, YN232-YR328
ST..	1A	W0111	2136Z			73-24-21	YL951-YL999, YN232-YR328
ST..	1A	W0111	2220Z			31-32-15	YC059-YR328
ST..	1A	W0111	2221Z			31-32-15	YC059-YR328
ST..	1A	W0111	2222Z			31-32-15	YC059-YR328
ST..	1A	W0111	2223Z			22-11-81	YL951-YR328
ST..	1A	W0111	2224Z			22-11-81	YL951-YR328
ST..	1A	W0111	2333Z			22-11-51	YL951-YR328
ST..	1A	W0111	3001Z			22-11-31	YL951-YR328
ST..	1A	W0111	3002Z			22-11-31	YL951-YR328
ST..	1A	W0111	3003Z			22-12-31	YL951-YR328
GB01106		PARTOFTB1106				E001-01/ /	ALL
ST..	1A	W0111	1017Z			22-11-31	YC053-YR328
ST..	1A	W0111	1018Z			22-11-31	YC053-YD158, YL951-YR328
ST..	1A	W0111	1019Z			22-11-31	YC053-YR328
ST..	1A	W0111	2015Z			22-11-51	ALL
ST..	1A	W0111	2016Z			22-11-51	YC051-YD158, YL951-YR328
ST..	1A	W0111	2017Z			22-11-51	ALL

GROUND LIST

D280A108

91-21-21

Section GB01100

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB01106		PARTOFTB1106 (continued)				E001-01/ /	ALL
ST..	1A	W0111	2018Z			22-11-51	ALL
ST..	1A	W0111	2019Z			22-11-51	ALL
ST..	1A	W0111	2055Z			34-33-11	ALL
ST..	1A	W0111	2056Z			34-33-11	ALL
ST..	1A	W0111	2057Z			34-33-11	ALL
ST..	1A	W0111	2067Z			34-45-11	ALL
ST..	1A	W0111	2068Z			34-45-11	ALL
ST..	1A	W0111	2069Z			34-45-11	ALL
GB01107		PARTOFTB1107				E001-01/ /	ALL
ST..	1A	W0111	1012Z			22-12-31	ALL
ST..	1A	W0111	1013Z			22-12-31	ALL
ST..	1A	W0111	1015Z			22-12-31	YC051-YD158, YL951-YR328
ST..	1A	W0111	2008Z			22-11-31	YD151-YD158, YL951-YR328
ST..	1A	W0111	2009Z			22-11-31	YC053-YR328
ST..	1A	W0111	2010Z			22-11-31	YC053-YR328
ST..	1A	W0111	2011Z			22-11-31	YD151-YR328
ST..	1A	W0111	2042Z			22-18-11	YC070-YR328
ST..	1A	W0111	2043Z			22-18-11	YC070-YR328
ST..	1A	W0111	2044Z			22-18-11	YC070-YR328
GB01108		PARTOFTB1108				E001-01/ /	ALL
ST..	1A	W0111	2064Z			34-33-11	ALL
ST..	1A	W0111	2065Z			34-33-11	ALL
ST..	1A	W0111	2066Z			34-33-11	ALL
ST..	1A	W0111	2075Z			34-49-11	ALL
ST..	1A	W0111	2076Z			34-49-11	ALL
ST..	1A	W0111	2077Z			34-49-11	ALL
GB01109		PARTOFTB1109				E001-01/ /	ALL
ST..	1A	W0111	2051Z			27-32-12	ALL
ST..	1A	W0111	2052Z			27-32-12	YC051-YD155
ST..	1A	W0111	2053Z			27-32-12	ALL
ST..	1A	W0111	2054Z			27-32-12	ALL
ST..	1A	W0111	2079Z			22-31-31	ALL
ST..	1A	W0111	2080Z			22-31-31	ALL
ST..	1A	W0111	2081Z			22-31-41	ALL
ST..	1A	W0111	2084Z			22-31-31	YC051-YD170, YN231
ST..	1A	W0111	2085Z			22-31-41	YC051-YD170, YN231
ST..	1A	W0111	2086Z			22-31-41	YC051-YD170, YN231

GROUND LIST

D280A108

91-21-21

Section GB01100

Page 4

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB01109		PARTOFTB1109 (continued)				E001-01/ /	ALL
ST..	1A	W0111	2087Z			22-31-41	YC051-YD170, YN231
ST..	1A	W0111	2111Z			34-21-23	ALL
ST..	1A	W0111	2112Z			34-21-23	YC051-YD155
ST..	1A	W0111	2113Z			34-21-23	ALL
ST..	1A	W0111	2114Z			34-21-23	ALL
ST..	1A	W0111	2115Z			34-21-23	ALL
ST..	1A	W0111	2116Z			34-21-24	YC051-YD170, YN231
ST..	1A	W0111	2207Z			34-21-23	YC053-YR328
GB01110		PARTOFTB1110				E001-01/ /	ALL
ST..	1A	W0111	2002Z			34-33-21	YC051-YD155
ST..	1A	W0111	2020Z			22-11-51	ALL
ST..	1A	W0111	2021Z			22-11-51	YC051-YD158, YL951-YR328
ST..	1A	W0111	2022Z			22-11-51	ALL
ST..	1A	W0111	2023Z			22-11-51	ALL
ST..	1A	W0111	2024Z			22-11-51	ALL
ST..	1A	W0111	2025Z			22-11-51	ALL
ST..	1A	W0111	2026Z			22-11-51	ALL
ST..	1A	W0111	2027Z			22-11-51	YC051-YD155
ST..	1A	W0111	2028Z			22-11-51	ALL
ST..	1A	W0111	2029Z			22-11-51	ALL
ST..	1A	W0111	2045Z			22-11-51	YD158-YR328
ST..	1A	W0111	2046Z			22-11-51	YD158-YR328
ST..	1A	W0111	2059Z			22-11-51	ALL
ST..	1A	W0111	2061Z			27-32-22	YC051-YD155
ST..	1A	W0111	2062Z			27-32-22	YC051-YD155
ST..	1A	W0111	2063Z			27-32-22	YC051-YD155
ST..	1A	W0111	2095Z			34-21-13	ALL
ST..	1A	W0111	2096Z			34-21-13	YC051-YD155
ST..	1A	W0111	2097Z			34-21-13	ALL
ST..	1A	W0111	2098Z			34-21-13	ALL
ST..	1A	W0111	2099Z			34-21-13	ALL
ST..	1A	W0111	2101Z			34-21-13	ALL
ST..	1A	W0111	2102Z			34-21-13	ALL
ST..	1A	W0111	2104Z			34-21-14	ALL
ST..	1A	W0111	2105Z			34-21-14	ALL
ST..	1A	W0111	2106Z			34-21-14	ALL
ST..	1A	W0111	2107Z			34-21-14	ALL
ST..	1A	W0111	2109Z			34-21-14	YC051-YD155
ST..	1A	W0111	2117Z			34-61-14	YC051-YD155

GROUND LIST

D280A108

91-21-21

Section GB01100

Page 5

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB01110		PARTOFTB1110 (continued)				E001-01/ /	ALL
ST..	1A	W0111	2118Z			34-61-14	YC051-YD155
ST..	1A	W0111	2119Z			34-61-14	YC051-YD155
ST..	1A	W0111	2133Z			73-24-11	YC051-YD170, YN231
ST..	1A	W0111	2134Z			73-24-11	YC051-YD170, YN231
ST..	1A	W0111	2135Z			73-24-21	YC051-YD170, YN231
ST..	1A	W0111	2136Z			73-24-21	YC051-YD170, YN231
ST..	1A	W0111	2171Z			22-11-51	ALL
ST..	1A	W0111	2230Z			22-11-51	YD157-YD158, YL951-YR328
GB01111		PARTOFTB1111				E001-01/ /	YD158-YR328
ST..	1A	W0111	2241Z			21-31-24	YD158-YR328
ST..	1A	W0111	2242Z			21-31-24	YD158-YR328
ST..	1A	W0111	2243Z			21-31-24	YD158-YR328
ST..	1A	W0111	2244Z			21-31-24	YD158-YR328
ST..	1A	W0111	2245Z			21-31-24	YD158-YR328
ST..	1A	W0111	2246Z			21-31-24	YD158-YR328
ST..	1A	W0111	2247Z			21-31-24	YD158-YR328
ST..	1A	W0111	2248Z			21-31-24	YD158-YR328
ST..	1A	W0111	2253Z			27-32-22	YD158-YR328
ST..	1A	W0111	2254Z			27-32-12	YD158-YR328
ST..	1A	W0111	2255Z			34-21-14	YD158-YR328
ST..	1A	W0111	2256Z			34-21-24	YD158-YR328

GROUND LIST

D280A108

91-21-21

Section GB01100

Page 6 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB01201		PARTOFTB1201				E001-02/ /	ALL
ST..	1A	W0121	2014Z			34-31-11	ALL
ST..	1A	W0121	2015Z			34-31-11	ALL
ST..	1A	W0121	2016Z			34-31-11	ALL
ST..	1A	W0121	2017Z			34-31-11	ALL
ST..	1A	W0121	2018Z			34-31-11	ALL
ST..	1A	W0121	2020Z			34-31-11	YC051-YD158, YL951-YR328
ST..	1A	W0121	2021Z			34-31-11	ALL
ST..	1A	W0121	2023Z			34-51-11	ALL
ST..	1A	W0121	2024Z			34-51-11	ALL
ST..	1A	W0121	2025Z			34-51-11	ALL
ST..	1A	W0121	2026Z			34-51-11	ALL
ST..	1A	W0121	2027Z			34-51-11	ALL
ST..	1A	W0121	2028Z			34-51-11	ALL
ST..	1A	W0121	2029Z			34-51-11	ALL
ST..	1A	W0121	2030Z			34-51-11	ALL
ST..	1A	W0121	2031Z			34-51-11	ALL
ST..	1A	W0121	2032Z			34-51-11	ALL
ST..	1A	W0121	2036Z			34-31-11	ALL
ST..	1A	W0121	2037Z			34-31-11	ALL
ST..	1A	W0121	2038Z			34-31-11	ALL
ST..	1A	W0121	2059Z			34-58-11	YC053-YR328
ST..	1A	W0121	2065Z			34-58-11	YC053-YR328
ST..	1A	W0121	2066Z			34-58-11	YC053-YR328
ST..	1A	W0121	2085Z			34-31-11	YL951-YR328
ST..	1A	W0121	2086Z			34-31-11	YL951-YR328
ST..	1A	W0121	2515Z			34-53-11	YD158-YR328
GB01202		PARTOFTB1202				E001-02/ /	ALL
ST..	1A	W0121	2001Z			34-53-11	ALL
ST..	1A	W0121	2004Z			34-45-21	ALL
ST..	1A	W0121	2005Z			34-45-21	ALL
ST..	1A	W0121	2035Z			34-21-14	ALL
ST..	1A	W0121	2044Z			34-21-24	ALL
ST..	1A	W0121	2062Z			34-45-21	YD158-YR328
ST..	1A	W0121	2064Z			34-45-21	YD158-YR328
ST..	1A	W0121	2510Z			22-11-51	YD158-YR328
ST..	1A	W0121	2511Z			34-21-13	YD158-YR328
ST..	1A	W0121	2514Z			34-61-14	YD158-YR328
ST..	1A	W0121	2515Z			34-53-11	YD158-YR328
ST..	1A	W0121	2516Z			31-31-13	YL963-YL999, YN236-YR328

GROUND LIST

D280A108

91-21-21

Section GB01200

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number		Station / WL / BL		Effectivity
Term	Type	Bundle	Wire No.	GA	CO	
I	GB01203	PARTOFTB1203		E001-02/ /		ALL
I	GB01204	PARTOFTB1204		E001-02/ /		ALL
I	ST..	1A	W0121	2006Z	34-55-11	ALL
I	ST..	1A	W0121	2007Z	34-55-11	ALL
I	ST..	1A	W0121	2008Z	34-55-11	ALL
I	ST..	1A	W0121	2009ZO	34-55-11	ALL
I	ST..	1A	W0121	2011Z	34-55-11	ALL
I	ST..	1A	W0121	2012Z	34-55-11	ALL
I	ST..	1A	W0121	2013Z	34-55-11	ALL
I	ST..	1A	W0121	2025Z	34-51-11	ALL
I	ST..	1A	W0121	2034Z	34-55-11	ALL
I	ST..	1A	W0121	2045Z	34-61-14	ALL
I	ST..	1A	W0121	2514Z	34-61-14	YD158-YR328

GROUND LIST

D280A108

91-21-21

Section GB01200

Page 2 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB01301		PARTOFTB1301				E001-03/ /	ALL
ST..	1A	W0131	2501Z			23-12-11	YC051-YD157
ST..	1A	W0131	2501Z			23-12-41	YD158-YR328
ST..	1A	W0131	2502ZO			23-12-11	ALL
ST..	1A	W0131	2503ZO			23-12-11	ALL
ST..	1A	W0131	2504ZO			23-22-11	ALL
ST..	1A	W0131	2519Z			23-12-41	YD158-YR328
ST..	1A	W0131	2525Z			23-12-11	YD158-YR328
GB01303		PARTOFTB1303				E001-03/ /	ALL
ST..	1A	W0131	2508Z			34-21-13	ALL
ST..	1A	W0131	2509Z			34-21-23	ALL
ST..	1A	W0131	2510Z			32-41-11	ALL
ST..	1A	W0131	2511Z			32-41-11	ALL
ST..	1A	W0131	2512Z			32-41-11	ALL
ST..	1A	W0131	2513Z			32-41-11	ALL
ST..	1A	W0131	2514Z			32-42-11	ALL

GROUND LIST

D280A108

91-21-21

Section GB01300

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB01401		PARTOFTB1401				E001-04/ /	ALL
ST..	1A	W0141	0066Z			22-11-31	ALL
ST..	1A	W0141	0067Z			22-11-31	ALL
ST..	1A	W0141	0068Z			22-11-31	ALL
ST..	1A	W0141	0089Z			22-12-41	ALL
ST..	1A	W0141	0090Z			22-12-41	ALL
ST..	1A	W0141	0091Z			22-12-41	ALL
ST..	1A	W0141	0092Z			22-12-41	ALL
ST..	1A	W0141	1012Z			22-11-11	ALL
ST..	1A	W0141	1014Z			22-11-81	YD157-YR328
ST..	1A	W0141	2010Z			22-11-31	ALL
ST..	1A	W0141	2012Z			22-11-31	ALL
ST..	1A	W0141	2013Z			22-11-31	ALL
ST..	1A	W0141	2014Z			22-11-31	ALL
ST..	1A	W0141	2017Z			22-11-51	ALL
ST..	1A	W0141	2018Z			22-11-51	ALL
ST..	1A	W0141	2019Z			22-11-51	ALL
ST..	1A	W0141	2024Z			22-11-51	ALL
ST..	1A	W0141	2027Z			22-11-51	ALL
ST..	1A	W0141	2028Z			22-11-51	ALL
ST..	1A	W0141	2029ZO			22-12-31	YC051-YD155
ST..	1A	W0141	2030ZO			22-12-41	YC051-YD155
ST..	1A	W0141	2033Z			22-12-41	ALL
ST..	1A	W0141	2034Z			22-12-41	ALL
ST..	1A	W0141	2035Z			22-12-41	ALL
ST..	1A	W0141	2036Z			22-12-41	ALL
ST..	1A	W0141	2054Z			22-11-81	YD157-YR328
ST..	1A	W0141	2057Z			34-21-14	YD157-YR328
ST..	1A	W0141	2152Z			34-55-21	ALL
ST..	1A	W0141	2301Z			34-31-11	ALL
ST..	1A	W0141	2362Z			31-62-15	ALL
ST..	1A	W0141	3004Z			22-12-41	ALL
ST..	1A	W0141	3005Z			22-12-41	ALL
ST..	1A	W0141	3006Z			22-11-81	YD157-YR328
GB01402		PARTOFTB1402				E001-04/ /	ALL
ST..	1A	W0141	0065Z			22-11-31	ALL
ST..	1A	W0141	0066Z			22-11-31	ALL
ST..	1A	W0141	1011Z			22-11-11	ALL
ST..	1A	W0141	1013Z			22-11-81	YD157-YR328
ST..	1A	W0141	2001Z			22-11-11	YL954-YL999, YN236-YR328

GROUND LIST

D280A108

91-21-21

Section GB01400

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB01402		PARTOFTB1402 (continued)				E001-04/ /	ALL
ST..	1A	W0141	2006Z			22-11-31	YC051-YD155
ST..	1A	W0141	2007Z			22-11-31	YC051-YD155
ST..	1A	W0141	2008Z			22-11-31	ALL
ST..	1A	W0141	2009Z			22-11-31	ALL
ST..	1A	W0141	2010Z			22-11-31	ALL
ST..	1A	W0141	2011Z			22-11-31	ALL
ST..	1A	W0141	2015Z			22-11-31	ALL
ST..	1A	W0141	2016Z			22-11-51	ALL
ST..	1A	W0141	2020Z			22-11-51	ALL
ST..	1A	W0141	2021Z			22-11-51	ALL
ST..	1A	W0141	2022Z			22-11-51	ALL
ST..	1A	W0141	2023Z			22-11-51	ALL
ST..	1A	W0141	2025Z			22-11-51	ALL
ST..	1A	W0141	2026Z			22-11-51	ALL
ST..	1A	W0141	2030ZI			22-12-41	YC051-YD155
ST..	1A	W0141	2034Z			22-12-41	YD157-YR328
ST..	1A	W0141	2039Z			27-32-22	ALL
ST..	1A	W0141	2045Z			31-62-21	YC051-YD157
ST..	1A	W0141	2046Z			31-62-21	YC051-YD157
ST..	1A	W0141	2048Z			31-32-15	YC059-YR328
ST..	1A	W0141	2049Z			31-32-15	YC059-YR328
ST..	1A	W0141	2050Z			31-32-15	YC059-YR328
ST..	1A	W0141	2051Z			22-11-53	YC059-YR328
ST..	1A	W0141	2053Z			22-11-81	YD157-YR328
ST..	1A	W0141	2055Z			22-11-81	YD157-YR328
ST..	1A	W0141	2056Z			22-11-81	YD157-YR328
ST..	1A	W0141	2058Z			34-33-11	YD157-YR328
ST..	1A	W0141	2059Z			22-12-41	YD157-YR328
ST..	1A	W0141	2060Z			22-11-51	YD157-YR328
ST..	1A	W0141	2101Z			22-31-52	YL954-YL999, YN236-YR328
ST..	1A	W0141	2102Z			34-21-13	YL954-YL999, YN236-YR328
ST..	1A	W0141	2104Z			34-21-24	YL954-YL999, YN236-YR328
ST..	1A	W0141	2304Z			34-31-21	ALL
ST..	1A	W0141	2318Z			34-51-21	ALL
ST..	1A	W0141	2363Z			31-62-25	ALL
ST..	1A	W0141	2364Z			31-62-21	YC051-YD157
ST..	1A	W0141	3001Z			22-11-31	ALL
ST..	1A	W0141	3002Z			22-11-31	ALL
ST..	1A	W0141	3003Z			22-12-41	ALL

GROUND LIST

D280A108

91-21-21

Section GB01400

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number		Wire No.	GA	CO	Station / WL / BL	Effectivity
		Bundle					Diagram	
I	GB01403		PARTOFTB1403				E001-04/ /	ALL
I	ST..	1A	W0141	2041Z			34-58-21	YC053-YR328
I	ST..	1A	W0141	2043Z			34-58-21	YC053-YR328
I	ST..	1A	W0141	2044Z			34-58-21	YC053-YR328
I	ST..	1A	W0141	2063Z			34-58-21	YD158-YR328
I	ST..	1A	W0141	2304Z			34-31-21	ALL
I	ST..	1A	W0141	2305Z			34-31-21	ALL
I	ST..	1A	W0141	2306Z			34-31-21	ALL
I	ST..	1A	W0141	2307Z			34-31-21	ALL
I	ST..	1A	W0141	2308Z			34-31-21	YC051-YC052, YC065-YR328
I	ST..	1A	W0141	2309Z			34-31-21	ALL
I	ST..	1A	W0141	2310Z			34-31-21	ALL
I	ST..	1A	W0141	2311Z			34-31-21	ALL
I	ST..	1A	W0141	2312Z			34-31-21	ALL
I	ST..	1A	W0141	2313Z			34-31-21	YL951-YR328
I	ST..	1A	W0141	2314Z			34-51-21	ALL
I	ST..	1A	W0141	2315Z			34-51-21	ALL
I	ST..	1A	W0141	2316Z			34-51-21	ALL
I	ST..	1A	W0141	2318Z			34-51-21	ALL
I	ST..	1A	W0141	2319Z			34-51-21	ALL
I	ST..	1A	W0141	2320Z			34-51-21	ALL
I	ST..	1A	W0141	2321Z			34-51-21	ALL
I	ST..	1A	W0141	2322Z			34-51-21	ALL
I	ST..	1A	W0141	2323Z			34-51-21	ALL
I	ST..	1A	W0141	2324Z			34-51-21	ALL
I	ST..	1A	W0141	2325Z			34-51-21	ALL
I	GB01404		PARTOFTB1404				E001-04/ /	ALL
I	ST..	1A	W0141	2317ZO			34-51-21	YL954-YL999, YN236-YR328

GROUND LIST

D280A108

91-21-21

Section GB01400

Page 3 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB01501		PARTOFTB1501				E005-01/ /	ALL
ST..	1A	W0151	2006Z			34-55-21	ALL
ST..	1A	W0151	2007Z			34-55-21	ALL
ST..	1A	W0151	2008Z			34-55-21	ALL
ST..	1A	W0151	2009ZO			34-55-21	ALL
ST..	1A	W0151	2011Z			34-55-21	ALL
ST..	1A	W0151	2012Z			34-55-21	ALL
ST..	1A	W0151	2013Z			34-55-21	ALL
ST..	1A	W0151	2014Z			34-51-21	ALL
ST..	1A	W0151	2015Z			34-55-21	ALL
ST..	1A	W0151	2020Z			34-61-14	ALL
ST..	1A	W0151	2058Z			34-61-14	YD158-YR328
GB01502		PARTOFTB1501				E005-02/ /	ALL
GB01503		PARTOFTB1501				E005-02/ /	ALL
GB01504		PARTOFTB1501				E005-01/ /	ALL
ST..	1A	W0151	2001Z			34-53-21	ALL
ST..	1A	W0151	2002Z			34-21-23	YD158-YR328
ST..	1A	W0151	2004Z			34-45-21	ALL
ST..	1A	W0151	2005Z			34-45-21	ALL
ST..	1A	W0151	2016Z			34-21-14	ALL
ST..	1A	W0151	2017Z			34-21-24	ALL
ST..	1A	W0151	2018Z			34-21-24	ALL
ST..	1A	W0151	2019Z			34-21-24	ALL
ST..	1A	W0151	2023Z			34-45-21	YD158-YR328
ST..	1A	W0151	2024Z			34-45-21	YD158-YD170
ST..	1A	W0151	2048Z			34-45-21	YL951-YR328
ST..	1A	W0151	2056Z			22-11-51	YD158-YR328
ST..	1A	W0151	2058Z			34-61-14	YD158-YR328
ST..	1A	W0151	2059Z			34-53-21	YD158-YR328

GROUND LIST

D280A108

91-21-21

Section GB01500

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number		Wire No.	GA	CO	Station / WL / BL	Effectivity
Term	Type	Bundle					Diagram	
I	GB01806		PARTOFTB1806				261/ /	ALL
I	ST..	1A	W2207	2011Z			28-41-11	ALL
I	ST..	1A	W2207	2012Z			28-41-11	ALL
I	ST..	1A	W2363	1026Z			33-18-51	ALL
I	ST..	1A	W5562	2601Z			28-41-11	ALL
I	ST..	1A	W5580	2601Z			28-41-11	ALL
I	GB01808		PARTOFTB1808				261/172/L025	ALL
I	ST..	1A	W3323	2504ZO			34-41-11	ALL
I	ST..	1A	W5172	2601Z			78-32-51	ALL
I	ST..	1A	W5172	2602Z			78-32-51	ALL
I	ST..	1A	W5510	2601Z			78-32-51	ALL
I	ST..	1A	W5510	2602Z			78-32-51	ALL
I	ST..	1A	W6491	2201ZO			34-41-11	YC051-YD158, YL951-YR328
I	GB01882		PARTOFTB1882				XXX XXX/ /	ALL
I	ST..	1A	W0088	1001Z			73-21-12	ALL
I	ST..	1A	W0088	1002Z			73-21-12	ALL
I	ST..	1A	W0088	1003Z			73-21-12	ALL
I	GB01884		PARTOFTB1884				/ /	ALL

GROUND LIST

D280A108

91-21-21

Section GB01800

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

	Ground No.	Type	Part Number		GA	CO	Station / WL / BL	Effectivity
	Term		Bundle	Wire No.			Diagram	
I	GB02101		PARTOFTB2101				E002-01/ /	ALL
I	ST..	1A	W0210	2002Z			30-41-11	ALL
I	ST..	1A	W0210	2004Z			30-41-11	ALL
I	ST..	1A	W0210	2005Z			30-41-11	ALL

GROUND LIST

D280A108

91-21-21

Section GB02100

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number		Station / WL / BL		Effectivity
Term	Type	Bundle	Wire No.	GA	CO	
Diagram						
I	GB02201	PARTOFTB2201			E002-02/ /	ALL
I	ST..	1A	W0220	2031Z	73-24-11	YC051-YD158, YL951-YR328
I	ST..	1A	W0220	2032Z	73-24-11	YC051-YD158, YL951-YR328
I	ST..	1A	W0220	2033Z	73-24-11	YC051-YD158, YL951-YR328
I	ST..	1A	W0220	2044Z	73-24-11	YC051-YD158, YL951-YR328
I	ST..	1A	W0220	2045Z	73-24-11	YC051-YD158, YL951-YR328
I	ST..	1A	W0220	2046Z	73-24-11	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GB02200

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I GB03092		PARTOFTB3092				P003-01/ /	ALL

GROUND LIST

D280A108

91-21-21

Section GB03000

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB03101		PARTOFTB3101				E003-01/ /	ALL
ST..	1A	W0311	2001Z			31-62-12	ALL
ST..	1A	W0311	2002Z			31-62-12	ALL
ST..	1A	W0311	2003Z			31-62-12	ALL
ST..	1A	W0311	2004Z			31-62-12	ALL
ST..	1A	W0311	2005Z			31-62-12	ALL
ST..	1A	W0311	2006Z			31-62-12	ALL
ST..	1A	W0311	2007Z			31-62-12	ALL
ST..	1A	W0311	2008Z			31-62-12	ALL
ST..	1A	W0311	2009Z			31-62-12	ALL
ST..	1A	W0311	2010Z			31-62-13	ALL
ST..	1A	W0311	2011Z			31-62-13	ALL
ST..	1A	W0311	2012Z			31-62-13	ALL
ST..	1A	W0311	2014Z			31-62-15	ALL
ST..	1A	W0311	2015Z			31-62-15	ALL
ST..	1A	W0311	2016Z			31-62-15	ALL
ST..	1A	W0311	2017Z			31-62-15	ALL
ST..	1A	W0311	2018Z			31-62-15	ALL
ST..	1A	W0311	2019Z			31-62-15	ALL
ST..	1A	W0311	2020Z			31-62-15	ALL
ST..	1A	W0311	2021Z			31-62-15	ALL
ST..	1A	W0311	2022Z			31-62-15	ALL
ST..	1A	W0311	2026Z			31-62-15	ALL
ST..	1A	W0311	2027Z			31-62-15	ALL
ST..	1A	W0311	2028Z			31-62-15	ALL
ST..	1A	W0311	2029Z			31-62-15	ALL
ST..	1A	W0311	2075Z			34-33-11	ALL
ST..	1A	W0311	2076Z			34-33-11	ALL
ST..	1A	W0311	2077Z			34-33-11	ALL
ST..	1A	W0311	2078Z			34-33-11	ALL
ST..	1A	W0311	2079Z			34-33-11	ALL
ST..	1A	W0311	2081Z			34-57-11	ALL
ST..	1A	W0311	2082Z			34-57-11	ALL
ST..	1A	W0311	2083Z			34-57-11	ALL
ST..	1A	W0311	2085Z			31-35-02	ALL
ST..	1A	W0311	2086Z			31-35-02	ALL
ST..	1A	W0311	2087Z			31-35-02	ALL
ST..	1A	W0311	2093Z			34-55-11	ALL
ST..	1A	W0311	2094Z			34-55-11	ALL
ST..	1A	W0311	2095Z			34-55-11	ALL
ST..	1A	W0311	2096Z			34-31-11	ALL

GROUND LIST

D280A108

91-21-21

Section GB03100

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB03101		PARTOFTB3101 (continued)				E003-01/ /	ALL
ST..	1A	W0311	2097Z			34-31-11	ALL
ST..	1A	W0311	2098Z			34-31-11	ALL
ST..	1A	W0311	2099Z			34-31-11	ALL
ST..	1A	W0311	2100Z			34-31-11	ALL
ST..	1A	W0311	2103Z			34-61-15	ALL
ST..	1A	W0311	2104Z			34-61-15	ALL
ST..	1A	W0311	2105Z			34-61-15	ALL
ST..	1A	W0311	2106Z			34-61-15	ALL
ST..	1A	W0311	2107Z			34-61-15	ALL
ST..	1A	W0311	2108Z			34-61-15	ALL
ST..	1A	W0311	2109Z			34-61-18	YC051-YC058
ST..	1A	W0311	2109Z			31-32-15	YC059-YR328
ST..	1A	W0311	2110Z			34-61-18	YC051-YC058
ST..	1A	W0311	2110Z			31-32-15	YC059-YR328
ST..	1A	W0311	2111Z			34-61-18	YC051-YC058
ST..	1A	W0311	2112Z			34-61-18	YC051-YC058
ST..	1A	W0311	2112Z			31-32-15	YC059-YR328
ST..	1A	W0311	2117Z			34-21-14	ALL
ST..	1A	W0311	2118Z			34-21-14	ALL
ST..	1A	W0311	2119Z			34-21-14	ALL
ST..	1A	W0311	2120Z			34-21-14	ALL
ST..	1A	W0311	2121Z			34-21-14	ALL
ST..	1A	W0311	2122Z			34-21-14	ALL
ST..	1A	W0311	2136Z			34-45-11	ALL
ST..	1A	W0311	2137Z			34-45-11	ALL
ST..	1A	W0311	2138Z			34-45-11	ALL
ST..	1A	W0311	2142Z			34-41-11	YC051-YC052
ST..	1A	W0311	2143Z			34-41-11	YC051-YC052
ST..	1A	W0311	2144Z			34-41-11	ALL
ST..	1A	W0311	2145Z			34-41-11	ALL
ST..	1A	W0311	2155Z			31-35-02	ALL
ST..	1A	W0311	2156Z			27-81-41	ALL
ST..	1A	W0311	2157Z			27-81-41	ALL
ST..	1A	W0311	2159Z			23-27-38	YD158-YR328
ST..	1A	W0311	2160Z			23-27-38	YD158-YR328
ST..	1A	W0311	2161Z			23-27-38	YD158-YR328
ST..	1A	W0313	2501Z			31-62-22	ALL
ST..	1A	W0313	2502Z			31-62-22	ALL
ST..	1A	W0313	2503Z			31-62-22	ALL
ST..	1A	W0313	2504Z			31-62-22	ALL

GROUND LIST

D280A108

91-21-21

Section GB03100

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB03101		PARTOFTB3101 (continued)				E003-01/ /	ALL
ST..	1A	W0313	2505Z			31-62-22	ALL
ST..	1A	W0313	2506Z			31-62-22	ALL
ST..	1A	W0313	2507Z			31-62-22	ALL
ST..	1A	W0313	2508Z			31-62-22	ALL
ST..	1A	W0313	2509Z			31-62-22	ALL
ST..	1A	W0313	2510Z			31-62-23	ALL
ST..	1A	W0313	2511Z			31-62-23	ALL
ST..	1A	W0313	2512Z			31-62-23	ALL
ST..	1A	W0313	2514Z			31-62-25	ALL
ST..	1A	W0313	2515Z			31-62-25	ALL
ST..	1A	W0313	2516Z			31-62-25	ALL
ST..	1A	W0313	2517Z			31-62-25	ALL
ST..	1A	W0313	2518Z			31-62-25	ALL
ST..	1A	W0313	2519Z			31-62-25	ALL
ST..	1A	W0313	2520Z			31-62-25	ALL
ST..	1A	W0313	2521Z			31-62-25	ALL
ST..	1A	W0313	2522Z			31-62-25	ALL
ST..	1A	W0313	2526Z			31-62-25	ALL
ST..	1A	W0313	2527Z			31-62-25	ALL
ST..	1A	W0313	2529Z			31-62-25	ALL
ST..	1A	W0313	2581Z			34-57-21	ALL
ST..	1A	W0313	2582Z			34-57-21	ALL
ST..	1A	W0313	2583Z			34-57-21	ALL
ST..	1A	W0313	2593Z			34-55-21	ALL
ST..	1A	W0313	2594Z			34-55-21	ALL
ST..	1A	W0313	2595Z			34-55-21	ALL
ST..	1A	W0313	2596Z			34-31-21	ALL
ST..	1A	W0313	2597Z			34-31-21	ALL
ST..	1A	W0313	2598Z			34-31-21	ALL
ST..	1A	W0313	2599Z			34-31-21	ALL
ST..	1A	W0313	2600Z			34-31-21	ALL
ST..	1A	W0313	2603Z			34-61-15	ALL
ST..	1A	W0313	2604Z			34-61-15	ALL
ST..	1A	W0313	2605Z			34-61-15	ALL
ST..	1A	W0313	2606Z			34-61-15	ALL
ST..	1A	W0313	2607Z			34-61-15	ALL
ST..	1A	W0313	2608Z			34-61-15	ALL
ST..	1A	W0313	2617Z			34-21-24	ALL
ST..	1A	W0313	2618Z			34-21-24	ALL
ST..	1A	W0313	2619Z			34-21-24	ALL

GROUND LIST

D280A108

91-21-21

Section GB03100

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB03101		PARTOFTB3101 (continued)				E003-01/ /	ALL
ST..	1A	W0313	2620Z			34-21-24	ALL
ST..	1A	W0313	2621Z			34-21-24	ALL
ST..	1A	W0313	2622Z			34-21-24	ALL
ST..	1A	W0313	2636Z			34-45-11	ALL
ST..	1A	W0313	2637Z			34-45-11	ALL
ST..	1A	W0313	2638Z			34-45-11	ALL
ST..	1A	W0313	2639Z			34-49-11	ALL
ST..	1A	W0313	2640Z			34-49-11	ALL
ST..	1A	W0313	2641Z			34-49-11	ALL
ST..	1A	W0313	2643Z			34-41-11	ALL
ST..	1A	W0313	2644Z			34-41-11	ALL
ST..	1A	W0313	2645Z			34-41-11	ALL
ST..	1A	W0313	2648Z			22-11-51	ALL
ST..	1A	W0313	2649Z			22-11-51	ALL
ST..	1A	W0313	2650Z			22-11-51	ALL
ST..	1A	W0313	2657Z			27-81-41	ALL
ST..	1A	W0313	2670Z			31-62-25	YC053-YR328
ST..	1A	W0313	2671Z			34-41-11	YC053-YR328
ST..	1A	W0313	2672Z			34-41-11	YC053-YR328
GB03102		PARTOFTB3102				E003-01/ /	ALL
ST..	1A	W0311	1001Z			31-62-14	ALL
ST..	1A	W0311	1002Z			31-62-14	ALL
ST..	1A	W0311	1003Z			31-62-14	ALL
ST..	1A	W0311	1004Z			79-31-11	ALL
ST..	1A	W0311	1005Z			79-31-11	ALL
ST..	1A	W0311	1006Z			79-31-11	ALL
ST..	1A	W0311	1007Z			79-31-11	ALL
ST..	1A	W0311	2034Z			77-31-11	ALL
ST..	1A	W0311	2035Z			77-31-11	ALL
ST..	1A	W0311	2036Z			77-31-11	ALL
ST..	1A	W0311	2037Z			49-62-11	ALL
ST..	1A	W0311	2038Z			49-62-11	ALL
ST..	1A	W0311	2039Z			49-62-11	ALL
ST..	1A	W0311	2040Z			49-62-11	ALL
ST..	1A	W0311	2041Z			73-24-11	ALL
ST..	1A	W0311	2042Z			73-24-11	ALL
ST..	1A	W0311	2043Z			73-24-11	ALL
ST..	1A	W0311	2044Z			73-24-11	ALL
ST..	1A	W0311	2045Z			73-24-11	ALL

GROUND LIST

D280A108

91-21-21

Section GB03100

Page 4

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB03102		PARTOFTB3102 (continued)				E003-01/ /	ALL
ST..	1A	W0311	2046Z			73-24-11	ALL
ST..	1A	W0311	2049Z			73-24-12	ALL
ST..	1A	W0311	2050Z			73-24-12	ALL
ST..	1A	W0311	2051Z			73-24-12	ALL
ST..	1A	W0311	2052Z			73-24-12	ALL
ST..	1A	W0311	2053Z			28-41-11	ALL
ST..	1A	W0311	2054Z			28-41-11	ALL
ST..	1A	W0311	2055Z			28-41-11	ALL
ST..	1A	W0311	2057Z			28-41-11	ALL
ST..	1A	W0311	2058Z			28-41-11	ALL
ST..	1A	W0311	2060Z			28-41-11	ALL
ST..	1A	W0311	2061Z			28-41-11	ALL
ST..	1A	W0311	2062Z			28-41-11	ALL
ST..	1A	W0311	2065Z			77-12-11	ALL
ST..	1A	W0311	2066Z			77-12-11	ALL
ST..	1A	W0311	2067Z			77-12-11	ALL
ST..	1A	W0311	2068Z			77-31-11	ALL
ST..	1A	W0311	2069Z			77-12-21	ALL
ST..	1A	W0311	2070Z			77-12-21	ALL
ST..	1A	W0311	2071Z			77-12-21	ALL
ST..	1A	W0311	2072Z			77-31-11	ALL
ST..	1A	W0311	2123Z			79-31-11	ALL
ST..	1A	W0311	2124Z			79-31-11	ALL
ST..	1A	W0311	2125Z			79-31-11	ALL
ST..	1A	W0311	2126Z			79-31-11	ALL
ST..	1A	W0311	2162Z			49-62-11	ALL
ST..	1A	W0311	3001Z			79-31-11	ALL
ST..	1A	W0313	1501Z			31-62-24	ALL
ST..	1A	W0313	1502Z			31-62-24	ALL
ST..	1A	W0313	1503Z			31-62-24	ALL
ST..	1A	W0313	1504Z			79-31-11	ALL
ST..	1A	W0313	1505Z			79-31-11	ALL
ST..	1A	W0313	1506Z			79-31-11	ALL
ST..	1A	W0313	1507Z			79-31-11	ALL
ST..	1A	W0313	2534Z			34-61-14	YL951-YR328
ST..	1A	W0313	2541Z			73-24-21	ALL
ST..	1A	W0313	2542Z			73-24-21	ALL
ST..	1A	W0313	2543Z			73-24-21	ALL
ST..	1A	W0313	2544Z			73-24-21	ALL
ST..	1A	W0313	2545Z			73-24-21	ALL

GROUND LIST

D280A108

91-21-21

Section GB03100

Page 5

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB03102		PARTOFTB3102 (continued)				E003-01/ /	ALL
ST..	1A	W0313	2546Z			73-24-21	ALL
ST..	1A	W0313	2547Z			73-24-21	ALL
ST..	1A	W0313	2548Z			73-24-21	ALL
ST..	1A	W0313	2549Z			73-24-12	ALL
ST..	1A	W0313	2550Z			73-24-12	ALL
ST..	1A	W0313	2551Z			73-24-12	ALL
ST..	1A	W0313	2552Z			34-61-14	YL951-YR328
ST..	1A	W0313	2559Z			28-41-11	ALL
ST..	1A	W0313	2563Z			34-61-14	YL951-YR328
ST..	1A	W0313	2565Z			77-12-11	ALL
ST..	1A	W0313	2566Z			77-12-11	ALL
ST..	1A	W0313	2567Z			77-12-11	ALL
ST..	1A	W0313	2568Z			77-31-21	ALL
ST..	1A	W0313	2569Z			77-12-21	ALL
ST..	1A	W0313	2570Z			77-12-21	ALL
ST..	1A	W0313	2571Z			77-12-21	ALL
ST..	1A	W0313	2572Z			77-31-21	ALL
ST..	1A	W0313	2623Z			79-31-11	ALL
ST..	1A	W0313	2624Z			79-31-11	ALL
ST..	1A	W0313	2625Z			79-31-11	ALL
ST..	1A	W0313	2626Z			79-31-11	ALL
ST..	1A	W0313	3501Z			79-31-11	ALL

GROUND LIST

D280A108

91-21-21

Section GB03100

Page 6 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB03201		PARTOFTB3201				E003-02/ /	ALL
ST..	1A	W0321	2001Z			31-31-11	ALL
ST..	1A	W0321	2002Z			31-31-11	ALL
ST..	1A	W0321	2003Z			31-31-11	ALL
ST..	1A	W0321	2009Z			34-61-18	YC051-YC058
ST..	1A	W0321	2009Z			31-32-15	YC059-YD157
ST..	1A	W0321	2016Z			34-61-14	ALL
ST..	1A	W0321	2017Z			34-21-14	ALL
ST..	1A	W0321	2018Z			34-61-14	ALL
ST..	1A	W0321	2025Z			27-32-12	ALL
ST..	1A	W0321	2026Z			27-32-12	ALL
ST..	1A	W0321	2027Z			27-32-22	ALL
ST..	1A	W0321	2028Z			27-32-22	ALL
ST..	1A	W0321	2029Z			34-21-14	ALL
ST..	1A	W0321	2030Z			34-21-14	ALL
ST..	1A	W0321	2031Z			31-33-01	ALL
ST..	1A	W0321	2032Z			31-35-02	ALL
ST..	1A	W0321	2033Z			31-33-01	ALL
ST..	1A	W0321	2034Z			31-33-01	ALL
ST..	1A	W0321	2035Z			31-35-02	ALL
ST..	1A	W0321	2036Z			31-35-02	ALL
ST..	1A	W0321	2056Z			34-21-14	YC051-YD170
ST..	1A	W0321	2057Z			34-61-14	YC051-YC055
ST..	1A	W0321	2058Z			34-21-13	YC051-YD170
ST..	1A	W0321	2064Z			31-33-01	ALL
ST..	1A	W0321	2065Z			31-33-01	ALL
ST..	1A	W0321	2117Z			27-32-22	YD158-YR328
ST..	1A	W0321	2165Z			34-21-13	YC051-YD170
ST..	1A	W0321	2167Z			34-61-14	ALL
ST..	1A	W0321	2169Z			34-21-13	YC051-YD170
ST..	1A	W0321	2173Z			34-33-21	ALL
ST..	1A	W0321	2174Z			34-33-21	ALL
ST..	1A	W0321	2175Z			34-33-21	ALL
ST..	1A	W0321	2176Z			34-33-21	ALL
ST..	1A	W0321	2177Z			34-33-21	ALL
ST..	1A	W0321	2178Z			34-33-21	ALL
ST..	1A	W0321	2179Z			34-33-21	ALL
ST..	1A	W0321	2180Z			34-33-21	ALL
ST..	1A	W0321	2181Z			34-41-11	ALL
ST..	1A	W0321	2184Z			77-31-11	ALL
ST..	1A	W0321	2185Z			77-31-11	ALL

GROUND LIST

D280A108

91-21-21

Section GB03200

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB03201		PARTOFTB3201 (continued)				E003-02/ /	ALL
ST..	1A	W0321	2186Z			77-31-11	ALL
ST..	1A	W0321	2221Z			22-23-12	ALL
ST..	1A	W0321	2222Z			22-23-12	ALL
ST..	1A	W0321	2225Z			22-23-12	ALL
ST..	1A	W0321	2226Z			22-23-12	YC051-YL959, YN231-YN235
ST..	1A	W0321	2228Z			22-23-12	ALL
ST..	1A	W0321	2302Z			34-61-18	YC051-YC058
ST..	1A	W0321	2302Z			31-32-15	YC059-YD157
ST..	1A	W0321	2303Z			34-61-18	YC051-YC058
ST..	1A	W0321	2304Z			34-61-18	YC051-YC058
ST..	1A	W0321	2304Z			31-32-15	YC059-YD157
ST..	1A	W0321	2709Z			22-23-12	ALL
ST..	1A	W0321	2713Z			27-32-12	ALL
ST..	1A	W0321	2714Z			27-32-12	ALL
ST..	1A	W0321	2715Z			27-32-12	ALL
ST..	1A	W0321	2717Z			27-32-12	ALL
ST..	1A	W0321	2719Z			22-23-12	ALL
ST..	1A	W0321	2725Z			27-81-41	ALL
ST..	1A	W0321	2751Z			27-81-41	ALL
ST..	1A	W0321	2752Z			27-81-41	ALL
ST..	1A	W0321	2753Z			27-32-22	ALL
ST..	1A	W0321	2754Z			27-32-22	ALL
ST..	1A	W0321	2755Z			27-32-22	ALL
ST..	1A	W0321	2756Z			27-32-22	ALL
ST..	1A	W0321	2757Z			27-32-22	YC051-YD157
ST..	1A	W0321	2763Z			23-27-14	YC051-YD157
ST..	1A	W0321	2763Z			31-33-01	YD158-YR328
ST..	1A	W0321	3224Z			22-23-12	YC051-YL959, YN231-YN235
ST..	1A	W0321	3225Z			22-23-12	YC051-YL959, YN231-YN235

GROUND LIST

D280A108

91-21-21

Section GB03200

Page 2 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB03301		PARTOFTB03301				E003-03/ /	ALL
ST..	1A	W0331	2505ZO			23-27-11	YC051-YD157
ST..	1A	W0331	2506ZO			23-27-11	YC051-YD157
ST..	1A	W0331	2507ZO			23-22-11	YC051-YD157
ST..	1A	W0331	2519Z			23-27-37	YD158-YN260
ST..	1A	W0331	2521Z			23-27-37	YD158-YR328
ST..	1A	W0331	2522Z			34-61-23	YC051-YD157
ST..	1A	W0331	2523Z			34-61-23	YC051-YD157
ST..	1A	W0331	2540Z			34-61-23	YC051-YD157
ST..	1A	W0331	2541Z			34-61-23	ALL
ST..	1A	W0331	2542Z			34-61-23	ALL
ST..	1A	W0331	2543Z			34-61-23	YC051-YD157
ST..	1A	W0331	2601Z			23-27-32	YD158-YR328
ST..	1A	W0331	2602Z			23-27-32	YD158-YR328
ST..	1A	W0331	2603Z			23-27-32	YD158-YR328
ST..	1A	W0331	2606Z			23-27-33	YD158-YN260
ST..	1A	W0331	2608Z			23-27-33	YD158-YR328
ST..	1A	W0331	2609Z			23-27-33	YD158-YR328
ST..	1A	W0331	2621Z			23-27-37	YD158-YN260
ST..	1A	W0331	2624Z			23-27-37	YD158-YR328
ST..	1A	W0331	2625Z			23-27-37	YD158-YN260
ST..	1A	W0331	2626Z			23-27-37	YD158-YR328
ST..	1A	W0331	2640Z			34-61-23	YD158-YR328
ST..	1A	W0331	2641Z			34-61-23	YD158-YR328
ST..	1A	W0331	2642Z			34-61-23	YD158-YR328
ST..	1A	W0331	2736Z			23-27-37	YD158-YN260
ST..	1A	W0331	2803Z			34-61-23	YD158-YR328
ST..	1A	W0331	2822Z			23-27-33	YD158-YR328
GB03302		PARTOFTB03302				E003-03/ /	YD158-YD170
ST..	1A	W0331	2515Z			23-11-26	YD158-YD170
ST..	1A	W0331	2660Z			34-45-21	YD158-YD170
ST..	1A	W0331	2662Z			34-45-21	YD158-YD170
ST..	1A	W0331	2703Z			23-11-16	YD158-YD170
ST..	1A	W0331	2807Z			34-45-21	YD158-YD170
ST..	1A	W0331	2808Z			34-45-21	YD158-YD170

GROUND LIST

D280A108

91-21-21

Section GB03300

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GB03901		PARTOFTB3901				AJ0039/ /	YL951-YN260, YR301-YR328
ST..	1A	W0082	1001Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	1002Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	1005Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	1006Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	1009Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	1010Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	1011Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	1012Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	1013Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	1014Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	1015Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	1016Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	1018Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	1019Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	1020Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	1021Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	1022Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	1023Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	1024Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	1025Z			27-62-11	YL953-YL999, YR301-YR328
ST..	1A	W0082	2201Z			23-27-39	YL951-YL954, YN231-YN235
ST..	1A	W0082	2202Z			23-27-39	YL951-YL954, YN231-YN235
ST..	1A	W0082	2203Z			23-27-39	YL951-YL954, YN231-YN235
GB03902		PARTOFTB3902				BJ0039/ /	YN501-YR328
ST..	1A	W0084	FRAB			23-42-14	YN501-YR328
ST..	1A	W0084	FRAD			23-42-14	YN501-YR328

GROUND LIST

D280A108

91-21-21

Section GB03900

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number		Station / WL / BL		Effectivity
Term	Type	Bundle	Wire No.	GA	CO	
Diagram						
I	GB04101	PARTOFTB4101			E004-01/ /	ALL
I	ST..	1A	W0410	2001Z	34-21-14	YC051-YD157
I	ST..	1A	W0410	2002Z	34-21-24	YC051-YD157
I	ST..	1A	W0410	2003Z	27-32-12	YC051-YD157
I	ST..	1A	W0410	2004Z	27-32-22	YC051-YD157
I	ST..	1A	W0410	2018Z	21-31-24	YC051-YD157
I	ST..	1A	W0410	2019Z	21-31-24	YC051-YD157
I	ST..	1A	W0410	2020Z	21-31-24	YC051-YD157
I	ST..	1A	W0410	2021Z	21-31-24	YC051-YD157
I	ST..	1A	W0410	2022Z	21-31-24	YC051-YD157
I	ST..	1A	W0410	2023Z	21-31-24	YC051-YD157
I	ST..	1A	W0410	2024Z	21-31-24	YC051-YD157
I	ST..	1A	W0410	2025Z	21-31-24	YC051-YD157
I	ST..	1A	W0410	2026Z	31-22-11	ALL
I	ST..	1A	W0410	2027Z	31-22-11	ALL
I	ST..	1A	W0410	2028ZO	34-45-21	ALL
I	ST..	1A	W0411	2515Z	31-22-11	ALL
I	ST..	1A	W0411	2527ZO	34-45-21	ALL
I	ST..	1A	W0411	2528ZO	34-45-21	ALL
I	ST..	1A	W0411	2533ZO	23-29-11	YC051-YD157
I	ST..	1A	W0411	2534ZO	23-29-11	YC051-YD157
I	ST..	1A	W0411	2535ZO	23-29-11	YC051-YD157
I	ST..	1A	W0411	3501Z	23-41-11	ALL
I	ST..	1A	W0411	3502Z	23-41-11	ALL

GROUND LIST

D280A108

91-21-21

Section GB04100

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number		Station / WL / BL		Effectivity
Term	Type	Bundle	Wire No.	GA	CO	
GB04201		PARTOFTB4201		E004-02/ /		ALL
ST..	1A	W0420	2002Z		30-41-12	ALL
ST..	1A	W0420	2004Z		30-41-12	ALL
ST..	1A	W0420	2005Z		30-41-12	ALL

GROUND LIST

D280A108

91-21-21

Section GB04200

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number		Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
		Bundle						
I GB06101		PARTOFTB6101					E006-01/ /	YC051-YD170

GROUND LIST

D280A108

91-21-21

Section GB06100

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number		Wire No.	GA	CO	Station / WL / BL	Effectivity
		Bundle					Diagram	
I	GB08102	PARTOFTB8102					* E8-1/ /	YC051-YD170
	ST..	1A	W0811	2501ZO			23-11-11	YC051-YC052
	ST..	1A	W0811	2504Z			23-11-11	YC051-YC052

GROUND LIST

D280A108

91-21-21

Section GB08100

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I GD00002		DC				645/162/R042	ALL
I GD00005		ST-				RUD56.4/ /	ALL
I ST..	E	W3389	0015	20		27-24-11	YC051-YD158, YL951-YR328
I GD00007		ST-				RUD56.4/ /	ALL
I ST..	E	W3387	0014	20		22-23-11	YC051-YD157
I ST..	E	W3387	0014	20		22-23-12	YD158, YL951-YR328
I ST..	E	W3387	0015	20		22-23-12	YC051-YD158, YL951-YR328
I GD00008		AC-				375/157/L029	ALL
I AC..	F	W5030	0505	10		24-53-11	ALL
I GD00010		AC-				378/168/R047	ALL
I AC..	F	W6110	0518	08		24-53-11	ALL
I GD00012		BACC50AN16				543/159/L026	ALL
AC..	1	W5102	1006	20		21-51-14	YN231-YN236, YN501
ST..	1	W5102	1006Z			21-51-14	YN231-YN236, YN501
AC..	1	W5102	1010	20		21-51-16	YN231-YN236, YN501
ST..	1	W5102	1010Z			21-51-16	YN231-YN236, YN501
AC..	1	W5230	0004	20		33-42-11	YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
ST..	1	W5230	0005	20		33-42-11	YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
ST..	1	W5230	YAAF			29-11-12	YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
I GD00015		DC				1132/360/L001	YC051-YL999, YR301-YR328
I GD00015		DC				RUD56.4/ /	YC064-YC070, YN231-YN501
DC..	E	W6136	0509	20		27-25-11	YC051-YC070, YD154-YD155
DC..	E	W6136	0510	20		27-25-11	YC051-YC070, YD154-YD155
DC..	E	W6136	0511	20		27-25-11	YC051-YC070, YD154-YD155
DC..	E	W7381	1001	20		22-11-81	YC064-YD158, YL951-YR328
DC..	E	W7381	1001Z			22-11-81	YC064-YD158, YL951-YR328
DC..	E	W7381	1002	20		22-11-81	YC064-YD158, YL951-YR328
DC..	E	W7381	1002Z			22-11-81	YC064-YD158, YL951-YR328
DC..	E	W7381	1003	20		22-11-81	YC064-YC070
DC..	E	W7381	1003Z			22-11-81	YC064-YC070
DC..	E	W7381	1004	20		22-11-81	YC064-YC070

GROUND LIST

D280A108

91-21-21

Section GD00000

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00015		DC (continued)				1132/360/L001	YC051-YL999, YR301-YR328
GD00015		DC (continued)				RUD56.4/ /	YC064-YC070, YN231-YN501
DC..	E	W7381	1004Z			22-11-81	YC064-YC070
GD00016		BACC50AN16				543/160/R027	ALL
AC..	1	W6128	0004	20		33-42-11	YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
ST..	1	W6128	0005	20		33-42-11	YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
ST..	1	W6128	YAAF			29-11-12	YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
AC..	1	W6202	1002	20		21-51-24	YN231-YN501
ST..	1	W6202	1002Z			21-51-24	YN231-YN501
AC..	1	W6202	1006	20		21-51-26	YN231-YN501
ST..	1	W6202	1006Z			21-51-26	YN231-YN501
AC..	1	W6202	1038	20		21-61-13	YC051-YL999, YR301-YR328
ST..	1	W6202	1038Z			21-61-13	YC051-YL999, YR301-YR328
DC..	1	W6202	1040	20		21-61-13	YC051-YL999, YR301-YR328
ST..	1	W6202	1040Z			21-61-13	YC051-YL999, YR301-YR328
AC..	1	W6202	1042	20		21-61-14	YC051-YL999, YR301-YR328
ST..	1	W6202	1042Z			21-61-14	YC051-YL999, YR301-YR328
DC..	1	W6202	1045	20		21-61-14	YC051-YL999, YR301-YR328
ST..	1	W6202	1045Z			21-61-14	YC051-YL999, YR301-YR328
GD00020		DC-				224/175/L023	ALL
DC..	E	W6570	6008	20		28-41-11	ALL
GD00022		DC-				224/175/L022	ALL
DC..	E	W5562	6007	20		28-41-11	ALL
GD00023		DC-				294/235/L056	ALL
GD00024		BACC50AN16				1085/275/L020	YD154-YR328
ST..	1	W3391	1004Z			22-13-11	YD154-YR328
ST..	1	W3391	1005Z			22-13-11	YD154-YR328
ST..	1	W3391	1010Z			22-13-11	YD154-YR328
ST..	1	W3391	1012Z			22-13-11	YD154-YR328
ST..	1	W4134	1013Z			31-53-11	YD154-YR328
ST..	1	W4134	1014Z			31-53-11	YD154-YR328
DC..	1	W4134	A-E			31-53-11	YD154-YL955, YN231-YN235

GROUND LIST

D280A108

91-21-21

Section GD00000

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00024		BACC50AN16 (continued)				1085/275/L020	YD154-YR328
DC..	1	W4134	A-F			31-53-11	YL956-YL999, YN236-YR328
DC..	1	W4134	B-E			31-53-11	YD154-YL955, YN231-YN235
DC..	1	W4134	B-F			31-53-11	YD154-YR328
DC..	1	W4134	C-F			31-53-11	YL956-YL999, YN236-YR328
GD00028		BACC50AN16				849/184/L046	ALL
DC..	1	W4190	0008	20		21-74-11	YD158-YD170
ST..	1	W5112	0510	20		38-41-13	ALL
DC..	1	W6248	5545	20		30-71-11	YC051-YN236, YN501-YR328
DC..	1	W6248	5547	20		30-71-11	YC051-YN236, YN501-YR328
AC..	1	W6248	5549	20		30-71-11	YC051-YN236, YN501-YR328
AC..	1	W6248	5559	20		30-71-11	YC051-YN236, YN501-YR328
AC..	1	W6248	5571	20		30-71-11	YC051-YN236, YN501-YR328
GD00029		DC-				1085/232/L018	ALL
GD00030		AC-				258/196/L033	ALL
AC..	E	W5100	0508	22		32-51-11	YC051-YD158, YL951-YR328
AC..	E	W5156	0650	18		32-64-11	YC051-YD158, YL951-YR328
GD00032		ST-				258/195/L033	ALL
ST..	E	W5100	0507	22		32-51-11	YC051-YD158, YL951-YR328
GD00034		BACC50AN16				213/192/R034	ALL
DC..	1	W5158	0301	20		31-31-15	YL955-YL999, YN236-YR328
DC..	1	W5158	0590	20		32-64-12	ALL
DC..	1	W5160	0008	20		52-71-13	YC051-YD158, YL951-YR328
DC..	1	W5160	0032	20		25-51-21	YC051-YD158, YL951-YL999, YR301-YR328
DC..	1	W5160	0508	20		52-71-13	YC051-YD158, YL951-YL999, YR301-YR328
DC..	1	W5160	0550	20		32-64-21	YC051-YD158, YL951-YR328
DC..	1	W5160	0622	20		32-31-12	YC051-YD158, YL951-YR328
DC..	1	W6024	0516	22		32-44-11	YC051-YD157
GD00036		BACC50AN16				1085/274/L022	YD154-YR328
ST..	1	W4222	1001Z			27-41-12	YD154-YN236, YN501-YR328
ST..	1	W4222	1002Z			27-41-12	YD154-YN236, YN501-YR328
ST..	1	W4222	1003Z			27-41-12	YD154-YN236, YN501-YR328

GROUND LIST

D280A108

91-21-21

Section GD00000

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00036		BACC50AN16 (continued)				1085/274/L022	YD154-YR328
ST..	1	W4222	1005Z			27-41-12	YD154-YN236, YN501-YR328
ST..	1	W4222	1006Z			27-41-12	YD154-YN236, YN501-YR328
DC..	1	W7030	0523	18		27-31-11	YD154-YR328
AC..	1	W8030	0502	18		33-49-11	YD154-YR328
ST..	1	W8030	0503	18		33-49-11	YD154-YR328
AC..	1	W8030	0512	18		33-49-11	YD154-YR328
ST..	1	W8030	0513	18		33-49-11	YD154-YR328
DC..	1	W8030	0523	18		27-31-11	YD154-YR328
GD00038		AC-				227/184/R024	ALL
AC..	H7	W6026	0004	04		24-41-11	YC051-YN236, YN501-YR328
GD00041		DC-				210/207/L022	ALL
DC..	E	W0145	0002	20		27-32-11	ALL
GD00044		BACC50AN16				213/192/R033	ALL
DC..	1	W5156	0545	20		32-64-11	YC051-YD158, YL951-YR328
DC..	1	W5156	0612	22		32-31-11	YC051-YD158, YL951-YR328
DC..	1	W5156	0653	20		23-32-14	YD158, YL951-YN260
DC..	1	W5156	0653	20		44-21-22	YN501-YR328
DC..	1	W5156	6002R	20		26-11-31	YC051-YD158, YL951-YR328
GD00045		BACC50AN16				1087/230/R018	ALL
AC..	1	W3391	1009	16		22-13-11	YC053-YR328
ST..	1	W3391	1009Z			22-13-11	YC053-YR328
AC..	1	W3391	1013	16		22-13-11	YC053-YR328
ST..	1	W3391	1013Z			22-13-11	YC053-YR328
AC..	1	W3391	1014	20		22-13-11	YC053-YR328
ST..	1	W3391	1014Z			22-13-11	YC053-YR328
GD00046		BACC50AN16				AB1088/230/R017	ALL
AC..	1	W3381	0009	16		22-13-11	YC051-YC052
AC..	1	W3381	0013	16		22-13-11	YC051-YC052
DC..	1	W3381	0014	20		22-13-11	YC051-YC052
AC..	1	W4222	1008	18		27-41-12	YC053-YN236, YN501-YR328
AC..	1	W4222	1008Z			27-41-12	YC053-YN236, YN501-YR328
DC..	1	W4222	1009	18		27-41-12	YC053-YN236, YN501-YR328
DC..	1	W4222	1009Z			27-41-12	YC053-YN236, YN501-YR328
ST..	1	W4222	1010	18		27-41-12	YC053-YN236, YN501-YR328

GROUND LIST

D280A108

91-21-21

Section GD00000

Page 4

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00046		BACC50AN16 (continued)				AB1088/230/R017	ALL
AC..	1	W4724	0034	18		33-35-11	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
AC..	1	W4724	0036	18		33-35-11	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
DC..	1	W4724	1111R	20		26-11-31	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
DED		W4724	1111Z			26-11-31	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
DC..	1	W4724	1112R	20		26-11-31	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
DED		W4724	1112Z			26-11-31	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
AC..	1	W5726	0034	18		33-35-11	YC051-YC052
AC..	1	W5726	0036	18		33-35-11	YC051-YC052
DC..	1	W5726	1111R	20		26-11-31	YC051-YC052
DED		W5726	1111Z			26-11-31	YC051-YC052
DC..	1	W5726	1112R	20		26-11-31	YC051-YC052
DED		W5726	1112Z			26-11-31	YC051-YC052
AC..	1	W6222	0508	18		27-41-12	YC051-YC052
DC..	1	W6222	0509	18		27-41-12	YC051-YC052
ST..	1	W6222	0510	18		27-41-12	YC051-YC052
ST..	1	W6222	YAAB			27-41-12	YC051-YC052
GD00048		BACC50AN16				1063/249/R042	ALL
AC..	1	W4724	0025	18		33-35-11	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
AC..	1	W4724	0026	18		33-35-11	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
DC..	1	W4726	0535	20		49-62-11	YC053-YR328
AC..	1	W5726	0025	18		33-35-11	YC051-YC052
AC..	1	W5726	0026	18		33-35-11	YC051-YC052
DC..	1	W5726	0535	20		49-62-11	YC051-YC052
ST..	1	W5726	YAAR			49-62-11	YC051-YC052
GD00053		DC-				210/206/R022	ALL
DC..	E	W0147	0002	20		27-32-21	ALL
DC..	E	W2737	0001	20		27-62-41	YC051-YC065
DC..	E	W2737	0002	20		27-62-41	YC051-YC065
DC..	E	W2737	0006	20		27-62-41	YC051-YC065
DC..	E	W6412	0037	20		27-62-41	YN231-YN236, YN501

GROUND LIST

D280A108

91-21-21

Section GD00000

Page 5

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00053		DC- (continued)				210/206/R022	ALL
DC..	E	W6412	0038	20		27-62-41	YN231-YN236, YN501
DC..	E	W6412	0039	20		27-62-41	YN231-YN236, YN501
GD00054		AC-				1037/239/L033	ALL
GD00056		AC-				992/294/L032	ALL
GD00060		BACC50AN16				1087/274/L021	YC051-YD153
ST..	1	W4222	1001Z			27-41-12	YC053-YD153
ST..	1	W4222	1002Z			27-41-12	YC053-YD153
ST..	1	W4222	1003Z			27-41-12	YC053-YD153
ST..	1	W4222	1005Z			27-41-12	YC053-YD153
ST..	1	W4222	1006Z			27-41-12	YC053-YD153
AC..	1	W5726	0002	18		33-35-11	YC051-YC052
AC..	1	W5726	0004	20		33-44-12	YC051-YC052
DC..	1	W6134	A-E			31-53-11	YC051-YC052
DC..	1	W6134	B-E			31-53-11	YC051-YC052
DC..	1	W6134	B-F			31-53-11	YC051-YC052
ST..	1	W6222	YAAC			27-41-12	YC051-YC052
ST..	1	W6222	YAAD			27-41-12	YC051-YC052
ST..	1	W6222	YAAE			27-41-12	YC051-YC052
ST..	1	W6222	YAAF			27-41-12	YC051-YC052
DC..	1	W7030	0523	18		27-31-11	YC056-YD153
AC..	1	W8030	0502	18		33-49-11	YC051-YD153
ST..	1	W8030	0503	18		33-49-11	YC051-YD153
AC..	1	W8030	0512	18		33-49-11	YC051-YD153
ST..	1	W8030	0513	18		33-49-11	YC051-YD153
DC..	1	W8030	0523	18		27-31-11	YC051-YD153
DC..	1	W8030	0525	18		27-31-11	YC051-YC055
GD00061		ST-				P061-00/ /	ALL
ST..	E	W0041	0009	22		34-61-18	YC051-YC058
ST..	E	W0041	0009	22		31-32-15	YL951-YR328
ST..	E	W0041	0011	22		34-61-18	YC051-YC058
ST..	E	W0041	0012	22		31-32-15	YC059-YR328
ST..	E	W0041	0037	20		34-21-11	ALL
ST..	E	W0041	0041	20		34-61-18	YC051-YC058
ST..	E	W0041	0041	20		31-32-15	YC059-YR328
ST..	E	W0041	0042	20		34-61-18	YC051-YC058
ST..	E	W0041	0042	20		31-32-15	YC059-YR328

GROUND LIST

D280A108

91-21-21

Section GD00000

Page 6

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00061		ST- (continued)				P061-00/ /	ALL
ST..	E	W0041	0043	20		34-61-18	YC051-YC058
ST..	E	W0041	0043	20		31-32-15	YC059-YR328
ST..	E	W0054	0020	20		23-42-14	YN501-YR324
GD00068		BACC50AN16				520/177/L053	ALL
DC..	1	W5104	0328	20		21-25-11	YC051-YL999, YR301-YR323, YR325-YR328
AC..	1	W5104	5525	20		21-51-14	YC051-YN236, YN501-YR323, YR325-YR328
DC..	1	W5104	5527	20		21-51-14	YC051-YN236, YN501-YR323, YR325-YR328
DC..	1	W5162	0007	20		36-11-11	ALL
DC..	1	W5162	0008	20		73-21-12	ALL
DC..	1	W5162	0009	20		78-35-11	ALL
DC..	1	W5162	0010	20		30-11-11	ALL
DC..	1	W5162	0011	20		78-36-11	ALL
DC..	1	W5162	0012	20		36-11-11	ALL
DC..	1	W5162	0013	20		78-36-11	ALL
ST..	1	W5248	0001	20		31-35-05	YL963-YL999, YN236-YR328
DC..	1	W5526	5532	20		21-51-15	YC051-YL999, YR301-YR328
GD00069		DC				RUD56.4/ /	ALL
DC..	E	W6136	0509	20		27-25-11	YD151-YD153
DC..	E	W6136	0509	20		27-23-11	YD157-YD158, YL951-YR328
DC..	E	W6136	0510	20		27-25-11	YD151-YD153, YD157-YD158, YL951-YR328
DC..	E	W6136	0511	20		27-25-11	YD151-YD153, YD157-YD158, YL951-YR328
DC..	E	W7383	1003	20		22-11-81	YD151-YD158, YL951-YR328
DC..	E	W7383	1003Z	20		22-11-81	YD151-YD158, YL951-YR328
DC..	E	W7383	1004	20		22-11-81	YD151-YD158, YL951-YR328
DC..	E	W7383	1004Z	20		22-11-81	YD151-YD158, YL951-YR328
GD00070		BACC50AN16				947/205/R017	ALL
AC..	1	W5112	0512	20		38-41-13	ALL
DC..	1	W5146	0004	20		38-41-11	ALL
ST..	1	W5146	0005	20		38-41-11	ALL
AC..	1	W6248	5555	20		30-71-11	YC051-YN236, YN501-YR328
AC..	1	W6248	5561	20		30-71-11	YC051-YN236, YN501-YR328
AC..	1	W6248	5581	20		30-71-11	YC051-YN236, YN501-YR328

GROUND LIST

D280A108

91-21-21

Section GD00000

Page 7

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00070		BACC50AN16 (continued)				947/205/R017	ALL
AC..	1	W6248	5583	20		30-71-11	YC051-YN236, YN501-YR328
AC..	1	W6248	5585	20		30-71-11	YC051-YN236, YN501-YR328
GD00072		BACC50AN16				500I+17/176/R053	YC051-YL999, YR301-YR328
GD00072		BACC50AN16				500D+17/176/R053	YN231-YN501
ST..	1	W6162	0001	20		31-35-05	YL963-YL999, YN236-YR328
DC..	1	W6162	0007	20		36-11-11	YC055-YR328
DC..	1	W6162	0008	20		73-21-12	YC055-YR328
DC..	1	W6162	0009	20		78-35-21	YC055-YR328
DC..	1	W6162	0010	20		30-11-11	YC055-YR328
DC..	1	W6162	0011	20		78-36-21	YC055-YR328
DC..	1	W6162	0012	20		36-11-11	YC055-YR328
DC..	1	W6162	0013	20		78-36-21	YC055-YR328
DC..	1	W6230	5532	20		21-51-24	YC051-YR323, YR325-YR328
AC..	1	W6230	5533	20		21-51-24	YC051-YR323, YR325-YR328
GD00074		ST-				847/189/L041	ALL
ST..	E	W5230	0518	12		38-32-12	YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
GD00076		DC-				596/159/R007	YN231-YN501
DC..	GW	W6502	1002Z			26-12-11	YN231-YN501
DC..	GW	W6502	1003Z			26-12-11	YN231-YN501
DC..	GW	W6502	1013	20		21-51-21	YN231-YN501
DC..	GW	W6502	1013Z			21-51-21	YN231-YN501
GD00078		BACC50AN16				1087/274/L021	YC051-YD153
ST..	1	W3391	1004Z			22-13-11	YC053-YD153
ST..	1	W3391	1005Z			22-13-11	YC053-YD153
ST..	1	W3391	1010Z			22-13-11	YC053-YD153
ST..	1	W3391	1012Z			22-13-11	YC053-YD153
ST..	1	W4134	1013Z			31-53-11	YC053-YD153
ST..	1	W4134	1014Z			31-53-11	YC053-YD153
DC..	1	W4134	A-E			31-53-11	YC053-YD153
DC..	1	W4134	B-E			31-53-11	YC053-YD153
DC..	1	W4134	B-F			31-53-11	YC053-YD153
ST..	1	W5726	YAAD			33-35-11	YC051-YC052
GD00080		BACC50AN20				500B/203/L021	ALL

GROUND LIST

D280A108

91-21-21

Section GD00000

Page 8

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00083		ST-				694/306/R002	ALL
ST..	E	W5273	0001	20		34-57-11	ALL
ST..	E	W5273	0003	20		34-57-11	ALL
ST..	E	W5273	8991Z			34-57-11	ALL
GD00084		BACC50AN20				431/162/R036	ALL
DC..	1A	W5248	0007	20		33-36-11	ALL
DC..	1A	W5248	0156	20		52-71-12	ALL
GD00085		ST-				727A+7/300/R002	ALL
ST..	=	W5275	0001	20		34-57-21	YC051-YL956, YL958-YR328
ST..	E	W5275	0001	20		34-57-21	YL957
ST..	=	W5275	0003	20		34-57-21	YC051-YL956, YL958-YR328
ST..	E	W5275	0003	20		34-57-21	YL957
ST..	=	W5275	8991Z			34-57-21	YC051-YL956, YL958-YR328
ST..	E	W5275	8991Z			34-57-21	YL957
GD00086		BACC50AN16				500/202/L011	ALL
ST..	1	W5086	6020	20		26-16-21	YN231-YN501
AC..	1	W5248	0014	20		33-36-11	ALL
GD00088		BACC50AN16				500I+1/203/L020	YC051-YD157
GD00088		BACC50AN16				500B+1/203/L020	YN231-YN501
DC..	1	W3142	0270	20		33-51-21	YC051-YD157
DC..	1	W3142	0271	16		33-51-21	YC051-YD157
AC..	1	W5248	0048	20		33-36-11	YN231-YN501
GD00090		AC-				724/194/L028	ALL
AC..	E	W7026	0513	18		33-32-11	YC051-YR323, YR325-YR328
GD00091		ST-				500I+3/199/R013	YD160-YL999, YR301-YR328
GD00091		ST-				500D+3/199/R013	YN232-YN501
ST..	E	W5208	0006	20		47-30-11	YD160-YL999, YN232-YR328
GD00092		AC-				697/200/R020	ALL
AC..	E	W7026	0514	18		33-32-11	YC051-YR323, YR325-YR328
AC..	E	W8224	A-Y			32-64-12	YL964-YL999, YN236-YR328
GD00094		AC-				//	ALL

GROUND LIST

D280A108

91-21-21

Section GD00000

Page 9

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00095		ST-				540/162/R039	ALL
ST..	N	W7208	0099	20		47-30-11	YL951-YL999, YN232-YR328
GD00096		AC-				//	ALL
GD00098		BACC50AN16				1087/232/L017	ALL
AC..	1	W4724	1002	18		33-35-11	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
ST..	1	W4724	1002Z			33-35-11	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
AC..	1	W4724	1004	20		33-44-12	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
ST..	1	W4724	1004Z			33-44-12	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
DC..	1	W4726	1104R	18		26-21-11	YC053-YR328
ST..	1	W4726	1104Z			26-21-11	YC053-YR328
ST..	1	W4726	1106R	18		26-21-11	YC053-YR328
DED		W4726	1106Z			26-21-11	YC053-YR328
DC..	1	W4726	1107R	18		26-21-11	YC053-YR328
ST..	1	W4726	1107Z			26-21-11	YC053-YR328
ST..	1	W5726	YAAB			49-52-31	YC051-YC052
ST..	1	W5726	YAAH			26-21-11	YC051-YC052
ST..	1	W5726	YAAL			26-21-11	YC051-YC052
ST..	1	W5726	YAAQ			49-62-12	YC051-YC052

GROUND LIST

D280A108

91-21-21

Section GD00000

Page 10 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00100		ST-				321/290/R023	ALL
ST..	D	W0010	0003	20		33-26-21	ALL
ST..	D	W0010	0007	20		33-26-21	ALL
GD00102		DC-				184/240/L017	ALL
DC..	E	W2108	5501	18		30-42-11	YC051-YC063
DC..	E	W2108	5501	16		30-42-11	YC064-YR328
GD00104		DC-				184/238/R017	ALL
DC..	2	W2205	0030	22		34-24-15	YC051-YC053
DC..	E	W2205	0030	22		34-24-15	YC054-YD157
DC..	E	W2208	5501	18		30-42-11	YC051-YC063
DC..	E	W2208	5501	16		30-42-11	YC064-YD158, YL951-YR328
GD00107		BACC50AN20				//	ALL
GD00109		ST-				655/164/L042	ALL
ST..	N	W7202	0022	16		47-30-11	YL951-YL999, YN232-YR328
ST..	N	W7202	0023	16		47-30-11	YL951-YL999, YN232-YR328
ST..	N	W7202	0027	16		47-30-11	YL951-YL999, YN232-YR328
ST..	N	W7202	0028	16		47-30-11	YL951-YL999, YN232-YR328
GD00111		ST-				611/164/L056	ALL
ST..	N	W7202	0020	16		47-30-11	YL951-YL999, YN232-YR328
ST..	N	W7202	0026	16		47-30-11	YL951-YL999, YN232-YR328
GD00112		DC-				//	ALL
GD00113		ST-				646/166/L061	ALL
ST..	N	W7202	0029	16		47-30-11	YL951-YL999, YN232-YR328
GD00120		ST-				ORSS/543/	ALL
ST..	E	W1024	2001Z			27-18-11	YC051-YN236, YN501-YR328
ST..	E	W1024	3001Z			27-18-11	YC051-YN236, YN501-YR328
GD00121		DC-				500I+3/200/R012	YD160-YL999, YR301-YR328
GD00121		DC-				500D+3/200/R012	YN232-YN501
DC..	E	W5208	0005	20		47-30-11	YD160-YL999, YN232-YR328
DC..	E	W5208	0021	20		47-30-11	YD160-YL999, YN232-YR328
DC..	E	W5208	0022	20		47-30-11	YD160-YL999, YN232-YR328

GROUND LIST

D280A108

91-21-21

Section GD00100

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00121		DC- (continued)				500I+3/200/R012	YD160-YL999, YR301-YR328
GD00121		DC- (continued)				500D+3/200/R012	YN232-YN501
DC..	E	W5208	0023	20		47-30-11	YD160-YL999, YN232-YR328
DC..	E	W5208	0024	20		47-30-11	YD160-YL999, YN232-YR328
GD00122		ST-				ORSS/370/	ALL
ST..	E	W1024	2011Z			27-62-14	YC051-YN236, YN501-YR328
ST..	E	W1024	3011Z			27-62-14	YC051-YN236, YN501-YR328
GD00124		ST-				ORSS/370/	ALL
ST..	E	W1024	1003	18		27-53-21	YC051-YN236, YN501-YR328
ST..	E	W1024	1003Z			27-53-21	YC051-YN236, YN501-YR328
GD00126		ST-				ORSS/449/	ALL
ST..	E	W1024	0513	20		27-52-11	YC051-YN236, YN501-YR328
ST..	E	W1024	1002	18		27-53-21	YC051-YN236, YN501-YR328
ST..	E	W1024	1002Z			27-53-21	YC051-YN236, YN501-YR328
GD00129		ST-				573/151/L042	ALL
ST..	N	W7202	0024	16		47-30-11	YL951-YL999, YN232-YR328
GD00130		ST-				ORSS/543/	ALL
ST..	E	W1034	2001Z			27-18-11	YC051-YN236, YN501-YR328
ST..	E	W1034	3001Z			27-18-11	YC051-YN236, YN501-YR328
GD00132		ST-				ORSS/370/	ALL
ST..	E	W1034	2011Z			27-62-14	YC051-YN236, YN501-YR328
ST..	E	W1034	3011Z			27-62-14	YC051-YN236, YN501-YR328
GD00134		ST-				ORSS/370/	ALL
ST..	E	W1034	1003	18		27-53-21	YC051-YN236, YN501-YR328
ST..	E	W1034	1003Z			27-53-21	YC051-YN236, YN501-YR328
GD00136		ST-				ORSS/449/	ALL
ST..	E	W1034	0513	20		27-52-11	YC051-YN236, YN501-YR328
ST..	E	W1034	1002	18		27-53-21	YC051-YN236, YN501-YR328
ST..	E	W1034	1002Z			27-53-21	YC051-YN236, YN501-YR328
GD00138		DC-				726/169/R020	ALL
DC..	E	W8524	6004R	18		26-11-31	ALL

GROUND LIST

D280A108

91-21-21

Section GD00100

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00141		AC-				P001-00/ /	ALL
AC..	E	W0001	0190	14		33-11-11	YC051-YD158, YL951-YR328
AC..	E	W0001	0195	14		33-11-11	YC051-YD158, YL951-YR328
AC..	E	W0001	0202	14		33-11-31	YC051-YD158, YL951-YR328
AC..	E	W0001	0215	20		33-11-32	YC051-YD158, YL951-YR328
GD00142		AC-				P003-00/ /	ALL
AC..	E	W0003	0667	16		33-11-21	YC051-YD158, YL951-YR328
AC..	E	W0003	0674	14		33-11-21	YC051-YD158, YL951-YR328
AC..	E	W0003	0711	16		33-11-32	YC051-YD158, YL951-YR328
GD00144		AC-				IFSS 167/ /	ALL
AC..	E	W1280	J-Y			27-81-21	YC051-YN236, YN501-YR328
GD00148		AC-				IFSS 149/ /	ALL
AC..	E	W1280	K-Y			27-81-21	YC051-YN236, YN501-YR328
AC..	E	W1280	L-Y			27-81-21	YC051-YN236, YN501-YR328
GD00150		ST-				326/291/L000	ALL
ST..	E	W0050	0004	20		33-29-11	YC051-YN260
ST..	E	W0050	0009	20		33-29-11	YC051-YN260
GD00152		ST-				976/292/R006	ALL
ST..	E	W0052	0004	20		33-29-11	YC051-YN260
ST..	E	W0052	0009	20		33-29-11	YC051-YN260
GD00154		AC-				P018-00/ /	ALL
AC..	E	W0020	0889	06		24-53-11	ALL
GD00156		DC-				/ /	ALL
GD00158		DC-				/ /	ALL
GD00160		AC-				IFSS-149/ /	ALL
AC..	E	W1180	K-Y			27-81-11	ALL
AC..	E	W1180	L-Y			27-81-11	ALL
GD00162		DC-				IFSS 113/ /	ALL
DC..	GW	W1664	1032Z			28-43-11	YC051-YD158, YL951-YR328
DC..	GW	W1664	1033	20		28-43-11	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD00100

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00164		ST-				813/ /	ALL
ST..	GW	W1180	6001	18		28-23-11	ALL
GD00166		DC-				IFSS-113/ /	ALL
DC..	GW	W1662	1012Z			28-43-11	YC051-YD158, YL951-YR328
DC..	GW	W1662	1013	20		28-43-11	YC051-YD158, YL951-YR328
GD00170		ST-				//	ALL
GD00171		DC-				261/185/L033	ALL
DC..	E	W5501	0003	20		34-21-12	ALL
DC..	E	W5501	0004	20		34-21-12	ALL
GD00172		DC-				IRSS 141/ /	ALL
DC..	E	W1134	1301	20		28-43-11	YC051-YD158, YL951-YN236, YN501-YR328
GD00174		DC-				//	ALL
GD00176		ST-				//	ALL
GD00178		DC-				//	ALL
GD00179		BACC50AN20				183/222/L006	ALL
AC..	1A	W2205	0002	20		33-11-32	YC051-YD157
AC..	1A	W2205	0002	20		SPARE	YD158, YL951-YR328
AC..	1A	W2205	0004	20		33-11-32	YC051-YD158, YL951-YR328
AC..	1A	W2205	0005	20		33-11-32	YC051-YD157
AC..	1A	W2205	0005	20		SPARE	YD158, YL951-YR328
ST..	1A	W2205	0006	20		34-22-11	YC051-YD158, YL951-YR328
DC..	1A	W2205	0008	20		34-24-11	YC051-YD157
DC..	1A	W2205	0008	20		SPARE	YD158, YL951-YR328
ST..	1A	W2205	0009	20		34-21-11	YC051-YD157
ST..	1A	W2205	0009	20		SPARE	YD158, YL951-YR328
AC..	1A	W2205	0011	20		33-11-32	YD158, YL951-YR328
DC..	1A	W2205	0013	20		34-21-11	YC051-YD157
DC..	1A	W2205	0013	20		SPARE	YD158, YL951-YR328
ST..	1A	W2205	0026	20		34-24-11	YC051-YD157
ST..	1A	W2205	0026	20		SPARE	YD158, YL951-YR328
DC..	2	W2205	0031	22		34-24-15	YC051-YC064

GROUND LIST

D280A108

91-21-21

Section GD00100

Page 4

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00179		BACC50AN20 (continued)				183/222/L006	ALL
DC..	1A	W2205	0031	22		34-24-15	YC065-YD157
DC..	1A	W2205	0039	20		34-24-15	YD158, YL951-YR328
ST..	1A	W2205	0040	20		34-24-15	YD158, YL951-YR328
AC..	1A	W2205	0055	20		34-22-11	YC051-YD158, YL951-YR328
DC..	1A	W2205	0056	20		34-22-11	YC051-YD158, YL951-YR328
GD00180		ST-				665/178/L031	ALL
ST..	E	W7122	0521	20		27-11-11	YC051-YR323, YR325-YR328
GD00182		ST-				//	ALL
GD00184		DC-				IRSS/149/	ALL
DC..	E	W1136	1303	20		28-43-11	ALL
GD00185		AC-				1157/289/R017	ALL
GD00186		ST-				//	ALL
GD00187		ST-				1157/288/R017	ALL
GD00188		ST-				//	ALL
GD00190		ST-				666/198/R060	ALL
ST..	E	W1126	1307	18		28-22-11	YC051-YD158, YL951-YR328
DED		W1126	1307Z			28-22-11	YC051-YD158, YL951-YR328
ST..	E	W1134	1302Z			28-43-11	YC051-YD158, YL951-YN236, YN501-YR328
ST..	E	W1134	3601Z			28-23-11	YC051-YD158, YL951-YN236, YN501-YR328
ST..	E	W8224	0510	20		29-31-11	YC051-YD152
GD00192		DC-				//	ALL
GD00194		AC-				IFSS-111/ /	ALL
AC..	N	W1662	1004	12		33-42-11	YC051-YD158, YL951-YR328
AC..	N	W1662	1004Z			33-42-11	YC051-YD158, YL951-YR328
AC..	GW	W1662	1006	16		33-45-11	YC051-YD158, YL951-YR328
AC..	GW	W1662	1006Z			33-45-11	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD00100

Page 5

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Type	Part Number		Wire No.	GA	CO	Station / WL / BL	Effectivity
Term			Bundle					Diagram	
I	GD00198		AC-					IFSS-98/ /	ALL
I	AC..	N	W1662		1002	12		33-42-11	YC051-YD158, YL951-YR328
I	AC..	N	W1662		1002Z			33-42-11	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD00100

Page 6 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00204		AC-				OFSS 108/ /	ALL
AC..	N	W1664	1004	12		33-42-11	YC051-YD158, YL951-YR328
AC..	N	W1664	1004Z			33-42-11	YC051-YD158, YL951-YR328
AC..	GW	W1664	1006	16		33-45-11	YC051-YD158, YL951-YR328
AC..	GW	W1664	1006Z			33-45-11	YC051-YD158, YL951-YR328
GD00205		ST-				619/272/R057	YN501
ST..	E	W4246	0026	18		33-21-12	YN501
GD00207		ST-				642/272/R057	YN501-YR328
ST..	E	W4246	0036	18		33-21-12	YN501-YR328
GD00208		AC-				OFSS 98/ /	ALL
AC..	N	W1664	1002	12		33-42-11	YC051-YD158, YL951-YR328
AC..	N	W1664	1002Z			33-42-11	YC051-YD158, YL951-YR328
GD00210		AC-				226/232/R040	ALL
AC..	E	W2204	5534	20		33-14-11	ALL
GD00211		ST-				642/272/L057	YN501-YR328
ST..	E	W3246	0036	18		33-21-12	YN501-YR328
GD00215		ST-				619/272/L057	YN501
ST..	E	W3246	0026	18		33-21-12	YN501
GD00217		ST-				581/272/R057	YR301-YR328
ST..	E	W4246	0026	18		33-21-12	YR301-YR328
GD00220		ST-				//	ALL
GD00222		ST-				//	ALL
GD00224		ST-				ORSS/251/	ALL
ST..	E	W1022	1002	18		27-53-21	YC051-YN236, YN501-YR328
ST..	E	W1022	1002Z			27-53-21	YC051-YN236, YN501-YR328
GD00226		ST-				726/194/L048	ALL
ST..	E	W1022	1003	18		27-53-21	YC051-YN236, YN501-YR328
ST..	E	W1022	1003Z			27-53-21	YC051-YN236, YN501-YR328
GD00228		AC				//	ALL

GROUND LIST

D280A108

91-21-21

Section GD00200

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00229		ST-				581/372/L057	YR301-YR328
ST..	E	W3246	0026	18		33-21-12	YR301-YR328
GD00230		ST-				//	ALL
GD00232		ST-				//	ALL
GD00234		ST-				ORSS 251/ /	ALL
ST..	E	W1032	1002	18		27-53-21	YC051-YN236, YN501-YR328
ST..	E	W1032	1002Z			27-53-21	YC051-YN236, YN501-YR328
GD00236		ST-				726/201/R041	ALL
ST..	E	W1032	1003	18		27-53-21	YC051-YN236, YN501-YR328
ST..	E	W1032	1003Z			27-53-21	YC051-YN236, YN501-YR328
GD00240		DC-				OFSS 367/ /	ALL
DC..	E	W1664	0034	20		28-44-11	YC051-YD158, YL951-YR328
DC..	E	W1664	0036	20		28-44-11	YC051-YD158, YL951-YR328
DC..	E	W1664	0038	20		28-44-11	YC051-YD158, YL951-YR328
ST..	E	W1664	1013Z			28-44-11	YC051-YD158, YL951-YR328
GD00246		ST-				724/155/R012	ALL
ST..	E	W8524	0501	18		29-32-11	ALL
ST..	E	W8524	2001Z			29-32-11	ALL
GD00261		BACC50AN20				261/280/L008	ALL
AC..	1A	W2112	6043	20		28-23-11	YC053-YR328
AC..	1A	W2112	6044	20		28-23-11	YC053-YR328
AC..	1A	W2112	6045	20		28-23-11	YC053-YR328
AC..	1A	W2112	6056	20		28-23-11	YD160-YR328
DC..	1A	W2114	A-AG			33-51-12	YC051-YC052
ST..	1A	W2216	5516	20		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328
ST..	1A	W2216	5516	20		21-61-21	YN231-YN501
AC..	1A	W2216	5517	20		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328
AC..	1A	W2216	5517	20		21-61-21	YN231-YN501
AC..	1A	W2218	6043	20		28-23-11	YC051-YD158
AC..	1A	W2218	6044	20		28-23-11	YC051-YD158
AC..	1A	W2218	6045	20		28-23-11	YC051-YD158

GROUND LIST

D280A108

91-21-21

Section GD00200

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00261		BACC50AN20 (continued)				261/280/L008	ALL
DC..	1A	W2508	5613	20		33-14-12	YC051-YD158, YL951-YR328
GD00262		ST-				IFSS 129/ /	ALL
ST..	GW	W1280	6001	18		28-23-11	YC051-YN236, YN501-YR328
ST..	GW	W1664	1019Z			28-44-11	YC051-YD158, YL951-YR328
ST..	GW	W1664	1026Z			28-44-11	YC051-YD158, YL951-YR328
GD00263		BACC50AN16				261/282/L008	ALL
GD00264		BACC50AN20				261/280/R008	ALL
AC..	1A	W2218	6043	20		28-23-11	YL951-YR328
AC..	1A	W2218	6044	20		28-23-11	YL951-YR328
AC..	1A	W2218	6045	20		28-23-11	YL951-YR328
AC..	1A	W2218	6056	20		28-23-11	YL951-YR328
DC..	1A	W2508	2002B	20		33-14-12	YC051-YD158, YL951-YR328
DED		W2508	2002Z			33-14-12	YC051-YD158, YL951-YR328
DC..	1A	W2508	5629	20		33-18-42	YC051-YD158, YL951-YR328
DC..	1A	W2508	5630	20		33-18-42	YC051-YD158, YL951-YR328
DC..	1A	W2508	5631	20		33-18-42	YC051-YD158, YL951-YR328
GD00266		BACC50AN16				261/282/R008	ALL
GD00270		DC-				363/157/L029	ALL
ST..	E	W2536	0515	14		24-34-11	YC051-YD158, YL951-YN236, YN501-YR328
ST..	E	W5506	0520	24		24-34-11	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
GD00272		ST-				388/167/R047	ALL
ST..	E	W5115	YAAJ			23-34-01	YL951-YL968, YN231-YN236
ST..	E	W5115	YAAJ			44-21-26	YN501-YR328
ST..	E	W6210	2201B	22		24-23-21	ALL
GD00276		ST-				387/173/L053	ALL
ST..	E	W5726	2237B	22		24-23-11	ALL
ST..	E	W5726	2239B	22		24-22-31	ALL
ST..	E	W5726	4102G	20		24-21-31	ALL

GROUND LIST

D280A108

91-21-21

Section GD00200

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I GD00287		ST-				239/203/L013	ALL
I ST..	E	W5369	0035	20		22-11-11	ALL
I ST..	E	W5457	0015	20		22-11-11	ALL
I GD00289		ST-				211/197/L026	ALL
I ST..	E	W5369	0045	20		22-11-11	ALL
I GD00298		DC-				199/203/L015	ALL
I DC..	E	W5514	5781	22		32-44-11	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD00200

Page 4 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00302		AC-				726/165/L020	ALL
AC..	E	W7128	0304	16		27-53-12	YD160-YN236, YN501-YR328
AC..	E	W7222	0504	16		27-53-12	YC051-YD158
GD00303		BACC50AN20				//	ALL
GD00304		ST-				706/200/L010	ALL
ST..	E	W7128	0510	20		29-31-11	YD160-YN236, YN501-YR328
ST..	E	W7526	0510	20		29-31-11	YC051-YD158
ST..	E	W8230	0501	18		32-42-11	YC051-YD152
GD00308		DC-				726/180/L008	ALL
DC..	E	W7128	0512	18		32-44-11	YD160-YN236, YN501-YR328
DC..	E	W7128	0515	18		32-44-11	YD160-YN236, YN501-YR328
DC..	E	W7526	0512	18		32-44-11	YC051-YD158
DC..	E	W7526	0515	18		32-44-11	YC051-YD158
GD00310		DC-				715/200/R031	ALL
DC..	E	W8226	0504	20		27-53-12	YL955-YL999, YN236-YR328
DC..	E	W8226	0506	20		22-23-12	YL955-YL999, YN236-YR328
DC..	E	W8226	0508	20		33-25-11	YL955-YL999, YN236-YR328
DC..	E	W8226	A-AA			27-53-12	YC051-YL954, YN231-YN235
DC..	E	W8226	A-DD			22-23-12	YC051-YL954, YN231-YN235
DC..	E	W8226	A-GG			33-25-11	YC051-YL954, YN231-YN235
DC..	E	W8226	B-AA			27-53-12	ALL
GD00312		DC-				665/191/R015	ALL
DC..	E	W8222	0507	20		29-33-11	YC051-YD158, YL951-YL968, YN231-YR328
DC..	E	W8222	0508	18		29-11-11	YC051-YD158, YL951-YL968, YN231-YR328
DC..	E	W8222	0511	20		29-33-11	YC051-YD158, YL951-YL968, YN231-YR328
DC..	E	W8228	0502	18		31-53-11	ALL
GD00314		DC-				664/178/R031	ALL
DC..	E	W1126	1304	20		28-43-11	YC051-YD158, YL951-YR328
DED		W1126	1304Z			28-43-11	YC051-YD158, YL951-YR328
DC..	E	W8122	0504	20		29-25-11	YC051-YD158, YL951-YR323, YR325-YR328

GROUND LIST

D280A108

91-21-21

Section GD00300

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00315		DC-				301/181/R020	ALL
DC..	E	W5205	0009	20		34-51-41	YC051-YD158, YL951-YR328
GD00316		DC-				726/166/L020	ALL
DC..	E	W7124	0505	20		29-35-11	YC051-YD158
DC..	E	W7124	0507	18		27-53-11	YC051-YD158
DC..	E	W7128	0405	20		29-35-11	YD160-YN236, YN501-YR328
DC..	E	W7128	0407	18		27-53-11	YD160-YN236, YN501-YR328
DC..	E	W7128	0521	18		27-23-11	YD160-YN236, YN501-YR328
DC..	E	W7526	0521	18		27-23-11	YC051-YD158
GD00317		DC-				308/178/R022	ALL
DC..	E	W5163	0037	22		34-51-41	ALL
GD00318		DC-				663/165/R004	ALL
DC..	E	W6128	0501	18		29-11-12	YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
DC..	E	W6128	0508	18		29-34-11	YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
DC..	E	W7122	0503	18		29-25-11	YC051-YR323, YR325-YR328
DC..	E	W8122	0507	20		29-23-11	YC051-YD158, YL951-YR323, YR325-YR328
DC..	E	W8122	0509	20		29-23-11	YC051-YD158, YL951-YR323, YR325-YR328
GD00320		DC-				665/182/L024	ALL
DC..	E	W1128	1302	20		28-43-11	YC051-YD158, YL951-YN236, YN501-YR328
DED		W1128	1302Z			28-43-11	YC051-YD158, YL951-YN236, YN501-YR328
DC..	E	W5367	0012	20		22-11-31	YC051-YN236, YN501-YR328
DC..	E	W5367	0013	20		22-11-31	YC051-YN236, YN501-YR328
DC..	E	W7122	0505	20		27-23-14	YC051-YR323, YR325-YR328
DC..	E	W7122	0508	18		27-61-11	YC051-YR323, YR325-YR328
DC..	E	W7122	0512	18		27-23-11	YC051-YR323, YR325-YR328
GD00322		DC-				662/165/L004	ALL
DC..	E	W5230	0501	18		29-11-12	YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
DC..	E	W5230	0508	18		29-34-11	YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328

GROUND LIST

D280A108

91-21-21

Section GD00300

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00322		DC- (continued)				662/165/L004	ALL
DC..	E	W8122	0508	20		29-23-11	YC051-YD158, YL951-YR323, YR325-YR328
GD00324		DC-				665/182/R054	ALL
DC..	E	W1126	1308	18		28-22-11	YC051-YD158, YL951-YR328
DED		W1126	1308Z			28-22-11	YC051-YD158, YL951-YR328
DC..	E	W8122	0502	20		27-23-14	YC051-YD158, YL951-YR323, YR325-YR328
DC..	E	W8122	0513	20		27-23-11	YC051-YD158, YL951-YR323, YR325-YR328
DC..	E	W8122	0544	18		27-61-11	YC051-YD158, YL951-YR323, YR325-YR328
GD00326		DC-				//	ALL
GD00328		DC-				674/200/R038	ALL
DC..	E	W8224	0505	20		29-23-11	ALL
GD00330		DC-				665/179/L041	ALL
DC..	E	W5375	0002	20		22-11-31	YC051-YN236, YN501-YR328
DC..	E	W5375	0022	20		22-11-31	YC051-YN236, YN501-YR328
DC..	E	W7026	0505	18		49-62-11	YC051-YR323, YR325-YR328
DC..	E	W7522	0503	18		29-11-11	YC051-YD158, YL951-YR323, YR325-YR328
DC..	E	W7522	0505	20		29-33-11	YC051-YD158, YL951-YR323, YR325-YR328
DC..	E	W7522	0507	20		29-33-11	YC051-YD158, YL951-YR323, YR325-YR328
GD00332		DC-				717/200/R020	ALL
DC..	E	W8124	0504	18		27-53-11	YC051-YD158, YL951-YR328
DC..	E	W8124	0505	20		32-64-21	YL955-YL999, YN236-YR328
DC..	E	W8124	0510	20		32-64-21	YL955-YL999, YN236-YR328
DC..	E	W8124	0514	20		21-51-14	YL955-YL999, YN236-YR328
DC..	E	W8124	A-AA			32-64-21	YC051-YD158, YL951-YL954, YN231-YN235
DC..	E	W8124	A-SS			32-64-21	YC051-YD158, YL951-YL954, YN231-YN235
DC..	E	W8124	B-DD			21-51-14	YC051-YD158, YL951-YL954, YN231-YN235

GROUND LIST

D280A108

91-21-21

Section GD00300

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00332		DC- (continued)				717/200/R020	ALL
DC..	E	W8124	B-GG			27-23-11	YC051-YC057
GD00334		ST-				DELETED/ /	ALL
GD00336		ST-				665/188/R015	ALL
ST..	E	W8222	0509	18		29-32-11	YC051-YD158, YL951-YL968, YN231-YR328
GD00338		ST-				/ /	ALL
GD00340		DC-				726/172/L020	ALL
DC..	E	W7124	0502	18		29-31-11	YC051-YD158
DC..	E	W7128	0402	18		29-31-11	YD160-YN236, YN501-YR328
GD00342		DC-				715/198/L051	ALL
DC..	E	W7592	6010R	20		26-21-11	ALL
DC..	E	W7592	6011R	20		26-21-11	ALL
DC..	E	W7592	6012R	20		26-21-11	ALL
DC..	E	W7592	6013R	20		26-21-11	ALL
DC..	E	W7592	6014R	20		26-21-11	ALL
GD00344		DC				724/198/L051	ALL
DC..	E	W7594	6009R	20		26-21-11	ALL
DC..	E	W7594	6010R	20		26-21-11	ALL
DC..	E	W7594	6011R	20		26-21-11	ALL
DC..	E	W7594	6012R	20		26-21-11	ALL
DC..	E	W7594	6013R	20		26-21-11	ALL
GD00346		AC-				286/184/R017	ALL
AC..	E	W5160	0505	18		32-64-12	YC051-YD158, YL951-YR328
GD00356		DC-				/ /	ALL
GD00360		DC				224/180/L003	ALL
DC..	E	W6024	0513	22		23-43-11	ALL
GD00374		DC-				644/159/R009	YC051-YL999, YR301-YR328
GD00374		DC-				645/160/R009	YN231-YN501
DC..	GW	W6202	1033	20		21-51-22	YC051-YL999, YR301-YR328

GROUND LIST

D280A108

91-21-21

Section GD00300

Page 4

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00374		DC- (continued)				644/159/R009	YC051-YL999, YR301-YR328
GD00374		DC- (continued)				645/160/R009	YN231-YN501
DC..	GW	W6202	1033Z			21-51-22	YC051-YL999, YR301-YR328
DC..	GW	W6202	2003Z			21-61-22	YN231-YN501
DC..	GW	W6202	5502	20		21-61-22	YN231-YN501
GD00380		DC-				705/200/L037	ALL
DC..	E	W7126	0502	18		31-31-15	YC051-YL968, YN231-YN236, YN501-YR328
DC..	E	W7126	0504	18		32-41-11	YC051-YL968, YN231-YN236, YN501-YR328
GD00382		DC-				644/159/L009	ALL
DC..	GW	W5102	1028	20		21-51-12	YC051-YL999, YR301-YR328
DC..	GW	W5102	1028Z			21-51-12	YC051-YL999, YR301-YR328
DC..	GW	W5102	5501	20		21-61-21	YN231-YN236, YN501
GD00383		BACC50AN20				198/172/R007	ALL
DC..	1A	W5158	0671	20		21-27-31	ALL
ST..	1A	W5158	0672	20		21-27-31	ALL
DC..	1A	W5158	0677	20		21-27-31	ALL
AC..	1A	W6491	0003	20		34-41-11	YC051-YD158, YL951-YR328
AC..	1A	W6491	0016	20		34-41-11	YC051-YD158, YL951-YR328
DC..	1A	W6491	0017	20		34-41-11	YC051-YD158, YL951-YR328
ST..	1A	W6491	0041	20		34-41-11	YC051-YD158, YL951-YR328
ST..	1A	W6491	0058	20		34-41-11	YC051-YD158, YL951-YR328
ST..	1A	W6491	0059	20		34-41-11	YC051-YD158, YL951-YR328
ST..	1A	W6491	0060	20		34-41-11	YC051-YD158, YL951-YR328
ST..	1A	W6491	0061	20		34-41-11	YC051-YD158, YL951-YR328
ST..	1A	W6491	0062	20		31-62-13	YC051-YC052
ST..	1A	W6491	0062	20		31-62-15	YC053-YD158, YL951-YR328
ST..	1A	W6491	0063	20		31-62-23	YC051-YC052
ST..	1A	W6491	0063	20		31-62-25	YC053-YD158, YL951-YR328
ST..	1A	W6491	0064	20		34-21-13	YC051-YD158, YL951-YR328
ST..	1A	W6491	0065	20		34-21-23	YC051-YD158, YL951-YR328
GD00390		DC-				588/158/L007	YN231-YN501
DC..	GW	W5502	1004	20		21-51-11	YN231-YN501
DC..	GW	W5502	1004Z			21-51-11	YN231-YN501
DC..	GW	W5502	1006	20		21-51-11	YN231-YN501
DC..	GW	W5502	1006Z			21-51-11	YN231-YN501

GROUND LIST

D280A108

91-21-21

Section GD00300

Page 5

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00390		DC- (continued)				588/158/L007	YN231-YN501
DC..	GW	W5502	1016	20		21-51-11	YN231-YN501
DC..	GW	W5502	1016Z			21-51-11	YN231-YN501
I GD00396		AC-				224/181/L002	ALL
I AC..	E	W6024	0501	18		33-32-11	ALL
GD00398		DC-				588/162/R007	YN231-YN501
DC..	GW	W6502	1006	20		21-51-21	YN231-YN501
DC..	GW	W6502	1006Z			21-51-21	YN231-YN501
DC..	GW	W6502	1008	20		21-51-21	YN231-YN501
DC..	GW	W6502	1008Z			21-51-21	YN231-YN501

GROUND LIST

D280A108

91-21-21

Section GD00300

Page 6 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00408		BACC50AN20				375/170/R047	ALL
ST..	1A	W6414	0051	20		25-29-11	ALL
AC..	1A	W6414	0052	20		25-29-11	ALL
DC..	1A	W6414	0519	20		24-51-21	ALL
ST..	1A	W6414	5505	20		21-27-21	ALL
ST..	1A	W6430	5504	20		21-27-31	ALL
GD00412		AC-				286/190/L017	ALL
AC..	E	W5156	0601	18		32-31-11	YC051-YD158, YL951-YR328
AC..	E	W5156	0651	18		32-64-11	YC051-YD158, YL951-YR328
GD00420		BACC50AN20				419/206/L029	ALL
DC..	1A	W5161	0017	20		34-21-12	ALL
GD00422		DC-				418/204/L029	YN231-YN501
DC..	E	W5526	5510	20		21-51-15	YN231-YN501
DC..	E	W6214	5549	20		21-61-21	YN231-YN501
GD00427		BACC50AN20				418/203/R033	YD158-YD170
DC..	1A	W4190	0019	20		21-74-11	YD158-YD170
GD00428		BACC50AN16				440/204/L012	ALL
ST..	1	W5086	6015	20		26-16-21	YC053-YR328
DC..	1	W5163	0017	20		34-21-22	ALL
AC..	1	W5248	0018	20		33-36-11	ALL
GD00430		BACC50AN16				460/202/L011	ALL
ST..	1	W5086	6005	20		26-16-21	YC053-YR328
ST..	1	W5086	6031	22		26-16-21	YC053-YR328
DC..	1	W5088	6010	22		26-16-21	YC053-YR328
DC..	1	W5088	6011	22		26-16-21	YC053-YR328
ST..	1	W5088	6012	22		26-16-21	YC053-YR328
AC..	1	W5248	0020	20		33-36-11	ALL
GD00431		BACC50AN16				907/205/R038	ALL
DC..	1	W5124	0510	20		27-31-11	YC054-YR328
DC..	1	W5124	0515	20		27-31-37	YC051-YC057
DC..	1	W5124	0515	22		27-31-37	YC058-YR328
DC..	1	W5124	0570	20		29-25-11	ALL
DC..	1	W5124	0571	20		29-25-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD00400

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00431		BACC50AN16 (continued)				907/205/R038	ALL
AC..	1	W5431	0001	20		23-71-01	ALL
ST..	1	W5431	0005	20		23-71-01	ALL
DC..	1	W5431	0006	20		23-71-01	ALL
DC..	1	W5431	0017	20		23-71-01	ALL
AC..	1	W6248	5573	20		30-71-11	YC051-YN236, YN501-YR328
AC..	1	W6248	5575	20		30-71-11	YC051-YN236, YN501-YR328
AC..	1	W6248	5577	20		30-71-11	YC051-YN236, YN501-YR328
AC..	1	W6248	5579	20		30-71-11	YC051-YN236, YN501-YR328
GD00432		BACC50AN16				460/203/R053	ALL
AC..	1	W5248	0012	20		33-36-11	ALL
GD00433		ST-				196/192/L029	ALL
DC..	E	W5501	0001	20		34-21-12	ALL
DC..	E	W5501	0007	20		34-21-12	ALL
GD00434		ST-				196/173/R011	ALL
ST..	E	W5156	5511	20		21-27-21	YC051-YD158, YL951-YR328
GD00435		AC-				197/190/L029	ALL
ST..	E	W5501	0010	22		27-32-11	ALL
GD00437		ST-				197/198/R030	ALL
ST..	E	W5503	0009	22		27-32-21	ALL
GD00439		DC-				197/198/R031	ALL
DC..	E	W5503	0007	20		34-21-22	ALL
GD00442		AC-				286/189/L017	ALL
AC..	E	W5160	0002	16		33-45-11	YC051-YD158, YL951-YR328
AC..	E	W5160	0603	18		32-31-12	YC051-YD158, YL951-YR328
GD00446		AC-				244/180/R038	ALL
AC..	E	W5160	0650	18		32-64-12	YC051-YD158, YL951-YR328
GD00447		BACC50AN16				907/205/R053	YL963-YL999, YN236-YR328
DC..	1	W5431	0037	20		23-71-01	YL963-YL999, YN236-YR328
ST..	1	W5431	0055	20		23-27-35	YR318-YR328

GROUND LIST

D280A108

91-21-21

Section GD00400

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00449		ST-				179/199/L005	ALL
ST..	E	W6491	0043	20		34-41-11	YC051-YD158, YL951-YR328
ST..	E	W6491	0050	20		34-41-11	YC051-YD158, YL951-YR328
ST..	E	W6491	0051	20		34-41-11	YC051-YD158, YL951-YR328
ST..	E	W6491	0052	20		34-41-11	YC051-YD158, YL951-YR328
ST..	E	W6491	0053	20		34-41-11	YC051-YD158, YL951-YR328
ST..	E	W6491	0054	20		34-41-11	YC051-YD158, YL951-YR328
ST..	E	W6491	0055	20		34-41-11	YC051-YD158, YL951-YR328
ST..	E	W6491	0057	20		34-41-11	YC051-YD158, YL951-YR328
GD00451		ST-				179/198/L005	ALL
ST..	E	W6491	1001Z			34-41-11	YC051-YD158, YL951-YR328
ST..	E	W6491	2001Z			34-41-11	YC051-YD158, YL951-YR328
ST..	E	W6491	2002Z			34-41-11	YC051-YD158, YL951-YR328
ST..	E	W6491	2003Z			34-41-11	YC051-YD158, YL951-YR328
ST..	E	W6491	2004Z			34-41-11	YC051-YD158, YL951-YR328
ST..	E	W6491	2005Z			34-41-11	YC051-YD158, YL951-YR328
ST..	E	W6491	2006Z			34-41-11	YC051-YD158, YL951-YR328
ST..	E	W6491	3001Z			34-41-11	YC051-YD158, YL951-YR328
ST..	E	W6491	3002Z			34-41-11	YC051-YD158, YL951-YR328
ST..	E	W6491	3003Z			34-41-11	YC051-YD158, YL951-YR328
GD00459		ST-				179/197/L005	ALL
DC..	E	W6491	0044	20		34-41-11	YC051-YD158, YL951-YR328
GD00462		ST-				OFSS 378/ /	ALL
ST..	E	W1664	1017Z			28-44-11	YC051-YD158, YL951-YR328
ST..	E	W1664	1024Z			28-44-11	YC051-YD158, YL951-YR328
GD00475		AC-				220/203/R015	ALL
AC..	E	W0445	0034KY	20		33-11-21	ALL
AC..	E	W6110	0006	20		33-34-11	YC065-YR328
GD00476		DC-				IRSS/215/	ALL
DC..	E	W7230	6002	18		28-42-11	YC051-YR323, YR325-YR328
GD00479		DC-				1157/285/R011	ALL
DC..	E	W3393	0011	20		22-18-11	YC053-YR328
DC..	E	W3393	0014	20		22-18-11	YC053-YR328
DC..	E	W5301	0011	20		22-18-11	YC051-YC052

GROUND LIST

D280A108

91-21-21

Section GD00400

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00479		DC- (continued)				1157/285/R011	ALL
DC..	E	W5301	0014	20		22-18-11	YC051-YC052
GD00490		ST-				665/174/L031	ALL
ST..	E	W7230	0503	18		29-32-11	YC051-YD152
GD00492		DC				//	ALL

GROUND LIST

D280A108

91-21-21

Section GD00400

Page 4 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00500		AC-				389/173/L053	ALL
AC..	F	W3154	0022	08		24-51-11	ALL
GD00501		BACC50AN20				P005-00/ /	ALL
DC..	1A	W2112	5558	20		36-21-11	YC053-YR328
DC..	1A	W2112	6015	20		74-31-11	YC053-YR328
DC..	1A	W2112	6018	20		74-31-11	YC053-YR328
DC..	1A	W2112	6020	20		74-31-11	YC053-YR328
ST..	1A	W2114	0019	20		33-44-11	ALL
DC..	1A	W2218	0015	20		33-25-11	ALL
DC..	1A	W2218	0016	20		33-25-11	ALL
DC..	1A	W2218	0019	20		33-25-11	ALL
DC..	1A	W2218	0029	20		33-51-11	ALL
DC..	1A	W2218	0032	20		33-51-11	ALL
DC..	1A	W2218	6014	20		74-31-11	ALL
DC..	1A	W2218	6015	20		74-31-11	ALL
DC..	1A	W2218	6020	20		74-31-11	ALL
DC..	1A	W2508	5575	20		33-18-37	YC051-YD158, YL951-YR328
GD00502		BACC50AN20				P005-00/ /	ALL
DC..	1A	W2218	5577	20		36-21-11	YC051-YC052
ST..	1A	W2218	5578	20		36-21-11	YC051-YC052
GD00503		BACC50AN20				P005-00/ /	ALL
DC..	1A	W2218	0522	20		24-28-11	ALL
DC..	1A	W2218	0557	20		24-28-11	ALL
DC..	1A	W2218	0558	20		24-28-11	ALL
DC..	1A	W2508	0504	20		24-32-11	YC051-YD158, YL951-YR328
DC..	1A	W2508	0517	20		24-34-11	YC051-YD158, YL951-YR328
DC..	1A	W2508	5528	20		33-18-31	YC051-YD158, YL951-YR328
DC..	1A	W2508	5538	20		33-18-33	YC051-YD158, YL951-YR328
DC..	1A	W2508	5539	20		33-18-33	YC051-YD158, YL951-YR328
DC..	1A	W2508	5543	20		33-18-33	YC051-YD158, YL951-YR328
DC..	1A	W2508	6010	20		28-21-11	YC051-YD158, YL951-YR328
ST..	1A	W2508	6013	20		28-43-11	YC051-YD158, YL951-YR328
DC..	1A	W2508	6027	20		76-21-11	YC051-YD158, YL951-YR328
DC..	1A	W2508	8001	20		34-51-41	YC051-YD158, YL951-YR328
DC..	1A	W2508	8003	20		34-51-41	YC051-YD158, YL951-YR328
AC..	1A	W2508	8006	20		34-21-15	YC051-YD158, YL951-YR328
DC..	1A	W2508	8018	20		34-21-15	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD00500

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I	GD00504	BACC50AN20				P005-00/ /	ALL
	DC..	1A	W2216	5527	20	21-51-12	YC051-YC052
	DC..	1A	W2216	5550	20	30-31-12	YC051-YC052
	DC..	1A	W2216	5560	20	21-61-11	YC051-YC052
	ST..	1A	W2216	5561	20	21-61-11	YC051-YC052
	DC..	1A	W2216	5564	20	21-61-14	YC051-YC052
	DC..	1A	W2216	6004	20	34-61-17	YC051-YC052
	DC..	1A	W2216	6005	20	34-61-17	YC051-YC052
	DC..	1A	W2508	5502	20	21-31-11	YC051-YC052
	DC..	1A	W2508	5568	20	33-18-36	YC051-YC052
	DC..	1A	W2508	5603	20	33-18-36	YC051-YC052
	DC..	1A	W2508	5619	20	21-51-11	YC051-YC052
	DC..	1A	W2508	5632	20	33-18-35	YC051-YC052
	DC..	1A	W2508	5745	20	33-18-35	YC051-YC052
	ST..	1A	W2508	FRAB		21-31-11	YC051-YC052
	DC..	1A	W2510	5504	20	21-31-23	YC051-YC052
	DC..	1A	W2510	5506	22	21-43-21	YC051-YC052
I	GD00505	BACC50AN20				P005-00/ /	ALL
	DC..	1A	W2114	5502	22	21-27-31	YC051-YC052
	DC..	1A	W2114	8002	20	34-41-11	YC051-YC052
	DC..	1A	W2135	0019	22	31-62-25	YC051-YC052
	DC..	1A	W2135	0025	20	34-51-41	YC051-YC052
	DC..	1A	W2135	0026	20	34-51-41	YC051-YC052
	DC..	1A	W2135	0030	22	31-62-25	YC051-YC052
	DC..	1A	W2218	0512	20	24-28-11	YC051-YC052
	ST..	1A	W2218	0513	20	24-28-11	YC051-YC052
	AC..	1A	W2508	8013	20	34-21-15	YC051-YC052
	DC..	1A	W2510	0504	20	24-31-12	YC051-YC052
	DC..	1A	W2510	5703	20	31-52-41	YC051-YC052
	DC..	1A	W2510	6001	20	28-21-11	YC051-YC052
	ST..	1A	W2510	6013	20	28-43-11	YC051-YC052
	DC..	1A	W2510	6016	20	76-21-21	YC051-YC052
	DC..	1A	W3327	0016	22	23-51-31	YC051-YC052
I	GD00506	BACC50AN20				P005-00/ /	ALL
I	DC..	1A	W2114	5504	20	21-61-51	YC051-YL999, YR301-YR328
I	DC..	1A	W2114	5505	20	21-61-51	ALL
I	DC..	1A	W2114	5516	20	30-31-11	ALL
I	ST..	1A	W2218	2003Z		30-41-12	ALL

GROUND LIST

D280A108

91-21-21

Section GD00500

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00506		BACC50AN20 (continued)				P005-00/ /	ALL
DC..	1A	W2218	5502	22		21-27-21	ALL
ST..	1A	W2218	5508	20		21-31-23	YC051
ST..	1A	W2218	5509	20		21-31-23	ALL
ST..	1A	W2218	5510	20		21-31-23	ALL
DC..	1A	W2218	5516	20		21-51-22	YC051-YL999, YR301-YR328
DC..	1A	W2218	5545	20		36-11-11	ALL
AC..	1A	W2218	5550	20		36-21-11	ALL
DC..	1A	W2218	5565	20		21-61-13	YC051-YL999, YR301-YR328
DC..	1A	W2218	5567	20		21-61-15	YC051-YL999, YR301-YR328
ST..	1A	W2218	5573	20		30-41-12	ALL
DC..	1A	W2218	6007	20		30-21-21	ALL
DC..	1A	W2218	6011	20		73-23-11	ALL
ST..	1A	W2218	FRAA			21-31-23	YC052-YR328
GD00507		BACC50AN20				P005-00/ /	ALL
DC..	1A	W2035	0029	22		31-62-15	YC051-YC052
DC..	1A	W2035	0038	22		31-62-15	YC051-YC052
DC..	1A	W2212	0512	20		27-23-14	YC051-YC052
DC..	1A	W2216	5525	22		21-27-31	YC051-YC052
AC..	1A	W2218	0514	20		24-28-11	YC051-YC052
AC..	1A	W2218	6002	20		28-42-11	YC051-YC052
DC..	1A	W2218	8004	20		34-51-41	YC051-YC052
DC..	1A	W2510	6051	22		24-28-41	YC051-YC052
GD00508		BACC50AN20				P005-00/ /	ALL
DC..	1A	W2112	6026	20		73-21-12	YC053-YR328
ST..	1A	W2112	6027	20		73-21-12	YC053-YR328
DC..	1A	W2112	8008	20		27-32-11	YC053-YR328
ST..	1A	W2216	6007	20		73-21-12	YC051-YR323, YR325-YR328
DC..	1A	W2216	6008	20		73-21-12	YC051-YR323, YR325-YR328
AC..	1A	W2218	5612	20		33-12-12	YC051-YC052
AC..	1A	W2218	5655	20		33-12-12	YC053-YD158, YL951-YR328
AC..	1A	W2218	5666	20		33-12-12	YC051-YC052
AC..	1A	W2218	5714	20		33-12-12	YC051-YC052
AC..	1A	W2218	5733	20		33-12-12	YC053-YR328
DC..	1A	W2218	8002	20		27-32-21	ALL
DC..	1A	W2508	5596	20		33-18-42	YC051-YD158, YL951-YR328
DC..	1A	W2508	5602	20		33-18-42	YC051-YD158, YL951-YR328
DC..	1A	W2508	5644	20		35-11-11	YC051-YD158, YL951-YR328
DC..	1A	W2508	5646	20		35-21-11	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD00500

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00508		BACC50AN20 (continued)				P005-00/ /	ALL
DC..	1A	W3327	0005	22		23-51-31	YC051-YD158, YL951-YR328
ST..	1A	W3327	0011	20		23-51-31	YC051-YD158, YL951-YR328
DC..	1A	W3327	0037	22		23-15-15	YC051-YD157
GD00509		BACC50AN20				P005-00/ /	ALL
ST..	1A	W2035	0036	20		34-21-11	ALL
DC..	1A	W2035	0039	20		34-16-11	ALL
ST..	1A	W2135	0002	20		34-21-21	ALL
DC..	1A	W2135	0031	20		34-16-21	ALL
AC..	1A	W2216	5612	20		33-12-11	YC051-YC052
AC..	1A	W2216	5666	20		33-12-11	YC051-YC052
AC..	1A	W2216	5710	20		33-12-11	YC051-YC052
DC..	1A	W2218	0523	20		27-81-11	ALL
ST..	1A	W2218	0556	20		27-81-11	ALL
AC..	1A	W2218	5734	20		33-12-12	YC053-YR328
DC..	1A	W2508	5628	20		33-18-42	YC051-YD158, YL951-YR328
DC..	1A	W2508	5655	20		33-18-42	YC051-YD158, YL951-YR328
DC..	1A	W2508	5667	20		33-18-42	YC051-YD157
DC..	1A	W2508	5667	20		33-18-37	YD158, YL951-YR328
DC..	1A	W2589	0016	22		23-24-11	ALL
GD00510		BACC50AN16				P005-00/ /	ALL
DC..	1	W2112	5556	18		30-42-11	YC053-YR328
DC..	1	W2112	6053	20		28-43-11	YD158-YR328
DC..	1	W2212	0523	20		29-35-11	YC051-YC052
DC..	1	W2212	0526	20		29-35-11	YC051-YC052
AC..	1	W2218	5561	18		33-14-12	ALL
AC..	1	W2218	5563	18		33-14-12	ALL
DC..	1	W2218	5575	18		30-42-11	ALL
AC..	1	W2218	5605	20		33-12-12	YC053-YR328
AC..	1	W2218	5609	20		33-12-12	YC053-YR328
GD00512		BACC50AN20				J004-00/ /	ALL
DC..	1A	W0094	0071	20		27-41-12	YC051-YD155
DC..	1A	W0094	0165	20		23-32-14	YD158-YN260
DC..	1A	W0094	0165	20		44-21-22	YN501-YR328
GD00514		BACC50AN16				J004-00/ /	ALL

GROUND LIST

D280A108

91-21-21

Section GD00500

Page 4

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00515		BACC50AN20				P005-00/ /	YC053-YR328
DC..	1A	W2112	0513	20		24-28-11	YC053-YR328
DC..	1A	W2114	5502	22		21-27-31	YC053-YR328
DC..	1A	W2114	8002	20		34-41-11	YC053-YR328
DC..	1A	W2135	0019	22		31-62-25	YC053-YR328
DC..	1A	W2135	0025	20		34-51-41	YC053-YR328
DC..	1A	W2135	0026	20		34-51-41	YC053-YR328
DC..	1A	W2135	0030	22		31-62-25	YC053-YR328
DC..	1A	W2218	0512	20		24-28-11	YC053-YR328
ST..	1A	W2218	0513	20		24-28-11	YC053-YR328
AC..	1A	W2508	8013	20		34-21-15	YC053-YD158, YL951-YR328
DC..	1A	W2510	0504	20		24-31-12	YC053-YR328
DC..	1A	W2510	5703	20		31-52-41	YC053-YR328
DC..	1A	W2510	6001	20		28-21-11	YC053-YR328
ST..	1A	W2510	6013	20		28-43-11	YC053-YR328
DC..	1A	W2510	6016	20		76-21-21	YC053-YR328
GD00516		BACC50AN20				P005-00/ /	YC053-YR328
ST..	1A	W2112	2003Z			30-41-11	YC053-YR328
DC..	1A	W2112	5506	22		21-27-21	YC053-YR328
DC..	1A	W2112	5512	20		21-31-22	YC053-YR328
ST..	1A	W2112	5514	20		21-31-22	YC053-YR328
ST..	1A	W2112	5515	20		21-31-22	YC053-YR328
ST..	1A	W2112	5542	20		30-41-11	YC053-YR328
DC..	1A	W2112	6003	20		34-61-17	YC053-YR328
DC..	1A	W2112	6005	20		34-61-17	YC053-YR328
DC..	1A	W2112	6006	20		34-61-17	YC053-YR328
DC..	1A	W2112	6011	20		30-11-11	YC053-YR328
DC..	1A	W2112	6029	20		73-23-11	YC053-YR328
ST..	1A	W2112	FRAA			21-31-22	YC053-YR328
DC..	1A	W2218	5577	20		36-21-11	YC053-YR328
ST..	1A	W2218	5578	20		36-21-11	YC053-YR328
GD00517		BACC50AN20				P005-00/ /	YC053-YR328
DC..	1A	W2035	0029	22		31-62-15	YC053-YR328
DC..	1A	W2035	0038	22		31-62-15	YC053-YR328
DC..	1A	W2112	0502	20		24-11-11	YC053-YR328
ST..	1A	W2112	0514	20		24-28-11	YC053-YR328
DC..	1A	W2112	0515	20		24-28-11	YC053-YR328
DC..	1A	W2112	0520	20		27-83-11	YC053-YR328

GROUND LIST

D280A108

91-21-21

Section GD00500

Page 5

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00517		BACC50AN20 (continued)				P005-00/ /	YC053-YR328
DC..	1A	W2112	8010	20		34-51-41	YC053-YR328
DC..	1A	W2112	8017	20		22-23-11	YC053-YR328
DC..	1A	W2112	8018	20		22-23-11	YC053-YR328
AC..	1A	W2112	8024	20		34-21-15	YC053-YR328
DC..	1A	W2212	0512	20		27-23-14	YC053-YR328
DC..	1A	W2216	5525	22		21-27-31	YC053-YR323, YR325-YR328
AC..	1A	W2218	0514	20		24-28-11	YC053-YR328
AC..	1A	W2218	6002	20		28-42-11	YC053-YR328
DC..	1A	W2218	8004	20		34-51-41	YC053-YR328
GD00518		BACC50AN20				P005-00/ /	YC053-YR328
DC..	1A	W2216	5527	20		21-51-12	YC053-YL999, YR301-YR323, YR325-YR328
DC..	1A	W2216	5527	20		21-61-21	YN231-YN501
DC..	1A	W2216	5550	20		30-31-12	YC053-YR323, YR325-YR328
DC..	1A	W2216	5560	20		21-61-11	YC053-YL999, YR301-YR323, YR325-YR328
ST..	1A	W2216	5561	20		21-61-11	YC053-YL999, YR301-YR323, YR325-YR328
DC..	1A	W2216	5564	20		21-61-14	YC053-YL999, YR301-YR323, YR325-YR328
DC..	1A	W2216	6004	20		34-61-17	YC053-YR323, YR325-YR328
DC..	1A	W2216	6005	20		34-61-17	YC053-YR323, YR325-YR328
DC..	1A	W2508	5502	20		21-31-11	YC053-YD158, YL951-YR328
DC..	1A	W2508	5568	20		33-18-36	YC053-YD158, YL951-YR328
DC..	1A	W2508	5603	20		33-18-36	YC053-YD158, YL951-YL999, YR301-YR328
DC..	1A	W2508	5619	20		21-51-11	YC053-YD158, YL951-YR328
DC..	1A	W2508	5632	20		33-18-35	YC053-YD158, YL951-YR328
DC..	1A	W2508	5745	20		33-18-35	YC053-YD158, YL951-YR328
ST..	1A	W2508	FRAB			21-31-11	YC053-YD158, YL951-YR328
DC..	1A	W2510	5504	20		21-31-23	YC053-YR328
DC..	1A	W2510	5506	22		21-43-21	YC053-YR328
GD00519		BACC50AN20				P005-00/ /	YC053-YR328
AC..	1A	W2216	5703	20		33-12-11	YC053-YR323, YR325-YR328
AC..	1A	W2216	5705	20		33-12-11	YC053-YR323, YR325-YR328
AC..	1A	W2216	5707	20		33-12-11	YC053-YR323, YR325-YR328
AC..	1A	W2216	5709	20		33-12-11	YC053-YR323, YR325-YR328
AC..	1A	W2218	5703	20		33-12-12	YC053-YR328

GROUND LIST

D280A108

91-21-21

Section GD00500

Page 6

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00519		BACC50AN20 (continued)				P005-00/ /	YC053-YR328
AC..	1A	W2218	5709	20		33-12-12	YC053-YR328
AC..	1A	W2218	5710	20		33-12-12	YC053-YR328
AC..	1A	W2218	5713	20		33-12-12	YC053-YR328
AC..	1A	W2218	5716	20		33-12-12	YC053-YR328
DC..	1A	W2508	0025	20		34-24-15	YD158, YL951-YR328
DC..	1A	W2510	6051	22		24-28-41	YC053-YR328
GD00520		BACC50AN20				P005-00/ /	YC053-YR328
AC..	1A	W2112	5564	20		33-12-11	YC053-YR328
DC..	1A	W2212	0523	20		29-35-11	YC053-YR328
DC..	1A	W2212	0526	20		29-35-11	YC053-YR328
AC..	1A	W2216	5603	20		33-12-11	YC053-YR323, YR325-YR328
AC..	1A	W2216	5605	20		33-12-11	YC053-YR323, YR325-YR328
AC..	1A	W2216	5607	20		33-12-11	YC053-YR323, YR325-YR328
AC..	1A	W2216	5609	20		33-12-11	YC053-YR323, YR325-YR328
AC..	1A	W2216	5611	20		33-12-11	YC053-YR323, YR325-YR328
AC..	1A	W2216	5653	20		33-12-11	YC053-YR323, YR325-YR328
AC..	1A	W2216	5655	20		33-12-11	YC053-YR323, YR325-YR328
AC..	1A	W2216	5657	20		33-12-11	YN231-YN501
AC..	1A	W2216	5659	20		33-12-11	YC053-YR323, YR325-YR328
AC..	1A	W2216	5661	20		33-12-11	YN231-YN501
AC..	1A	W2216	5663	20		33-12-11	YC053-YR323, YR325-YR328
AC..	1A	W2216	5665	20		33-12-11	YC053-YR323, YR325-YR328
AC..	1A	W2218	5705	20		33-12-12	YC053-YR328
DC..	1A	W3327	0016	22		23-51-31	YC053-YD157
GD00522		BACC50AN16				J022-00/ /	ALL
DC..	1	W0076	0158	20		23-71-01	YC051-YN236, YN501-YR328
DC..	1	W0076	0159	20		23-71-01	YC051-YN236, YN501-YR328
DC..	1	W0076	0310	18		78-32-51	YC051-YN236, YN501-YR328
DC..	1	W0076	0312	18		78-32-51	YC051-YN236, YN501-YR328
DC..	1	W0076	0413	20		31-31-15	YL955-YL999, YN236, YN501-YR328
GD00524		BACC50AN20				J024-00/ /	ALL
DC..	1A	W0080	0502	20		27-62-11	YC051-YD158, YL951-YR328
DC..	1A	W0080	0515	20		32-41-11	YC051-YD158, YL951-YR328
DC..	1A	W0080	0522	20		32-44-11	YC051-YD158, YL951-YR328
ST..	1A	W0080	2601Z			73-21-11	ALL
DC..	1A	W0080	5617	20		31-35-03	YN236-YR328
DC..	1A	W0080	6008	24		73-22-31	ALL

GROUND LIST

D280A108

91-21-21

Section GD00500

Page 7

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00524		BACC50AN20 (continued)				J024-00/ /	ALL
DC..	1A	W0080	6014	20		76-21-21	YC051-YD158, YL951-YR328
DC..	1A	W0080	6032	20		78-34-21	YC051-YD158, YL951-YR328
DC..	1A	W0080	6088	20		47-30-11	YL951-YR328
DC..	1A	W0080	6108	20		47-30-11	YL951-YR328
DC..	1A	W0080	6504	22		31-31-11	YC051-YD158, YL951-YR328
DC..	1A	W0080	6510	22		31-31-11	ALL
DC..	1A	W0080	6514	20		34-41-11	YC051-YC052
GD00526		BACC50AN16				J023-00/ /	ALL
DC..	1	W0078	0317	20		35-21-11	ALL
DC..	1	W0078	0327	20		35-21-11	ALL
ST..	1	W0078	2607Z			73-21-11	YC051-YC052
GD00528		BACC50AN20				J020-0B/ /	ALL
DC..	1A	W0072	0112	20		21-27-31	ALL
DC..	1A	W0072	0134	20		21-27-31	ALL
DC..	1A	W0072	0153	22		27-62-11	ALL
DC..	1A	W0072	0164	22		27-62-11	ALL
DC..	1A	W0072	0171	22		27-62-11	ALL
DC..	1A	W0072	0173	20		78-34-21	ALL
DC..	1A	W0072	0177	22		27-62-11	ALL
DC..	1A	W0072	0184	22		27-62-11	ALL
DC..	1A	W0072	0185	22		27-62-11	ALL
DC..	1A	W0072	0189	22		27-62-11	ALL
DC..	1A	W0072	0190	22		27-62-11	ALL
DC..	1A	W0072	0224	20		27-62-11	YL953-YL999, YR301-YR328
DC..	1A	W0072	0284	20		23-42-11	YL951-YR328
DC..	1A	W0072	0289	20		23-42-11	YL951-YR328
GD00532		BACC50AN20				J022-00/ /	ALL
DC..	1A	W0076	0010	20		52-71-13	YC051-YN236, YN501-YR328
DC..	1A	W0076	0018	20		52-71-13	YC051-YN236, YN501-YR328
DC..	1A	W0076	0161	20		26-23-11	YD158-YD170, YR315-YR316, YR319
DC..	1A	W0076	0161	20		SPARE	YR317
DC..	1A	W0076	0213	22		27-62-11	YC051-YN236, YN501-YR328
DC..	1A	W0076	0218	24		32-41-11	YC051-YN236, YN501-YR328
DC..	1A	W0076	0264	22		27-62-11	YC051-YN236, YN501-YR328
DC..	1A	W0076	0268	22		27-62-11	YC051-YN236, YN501-YR328
DC..	1A	W0076	0276	20		34-61-26	YC059-YN236, YN501-YR328
DC..	1A	W0076	0278	20		34-61-26	YC059-YN236, YN501-YR328

GROUND LIST

D280A108

91-21-21

Section GD00500

Page 8

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00532		BACC50AN20 (continued)				J022-00/ /	ALL
DC..	1A	W0076	0338	20		47-30-11	YL951-YN236, YN501-YR328
DC..	1A	W0076	0341	20		47-30-11	YL951-YN236, YN501-YR328
DC..	1A	W0076	0408	20		31-35-03	YN236, YN501-YR328
DC..	1A	W0076	0528	22		78-32-51	YC051-YN236, YN501-YR328
ST..	1A	W0076	1001Z			73-22-11	YC051-YN236, YN501-YR328
ST..	1A	W0076	1002Z			73-22-11	YC051-YN236, YN501-YR328
GD00534		BACC50AN20				J024-00/ /	ALL
DC..	1A	W0080	0008	20		52-71-14	YC051-YD158, YL951-YR328
DC..	1A	W0080	0009	20		52-71-14	YC051-YD158, YL951-YR328
DC..	1A	W0080	0024	20		23-71-01	YC051-YD158, YL951-YR328
DC..	1A	W0080	5539	22		21-27-21	ALL
DC..	1A	W0080	6020	22		78-32-61	YC051-YD158, YL951-YR328
DC..	1A	W0080	6021	22		78-32-61	YC051-YD158, YL951-YR328
DC..	1D	W0080	6023	18		78-32-61	YC051-YD158, YL951-YR328
DC..	1D	W0080	6024	18		78-32-61	YC051-YD158, YL951-YR328
DC..	1A	W0080	6025	22		78-32-61	YC051-YD158, YL951-YR328
DC..	1D	W0080	6026	18		78-32-61	YC051-YD158, YL951-YR328
DC..	1A	W0080	6028	22		78-32-61	ALL
DC..	1D	W0080	6029	18		78-32-61	YC051-YD158, YL951-YR328
DC..	1D	W0080	6043	18		78-32-61	YC051-YD158, YL951-YR328
DC..	1D	W0080	6049	18		78-32-61	YC051-YD158, YL951-YR328
DC..	1D	W0080	6103	18		78-32-61	YL951-YR328
DC..	1A	W0080	6551	22		23-32-14	YD158, YL951-YN260
GD00536		BACC50AN20				J023-00/ /	YC051-YD170
ST..	1A	W0078	2607Z			73-21-11	YC053-YC055
GD00540		AC-				191/242/R002	ALL
GD00541		AC-				191/242/L002	ALL
AC..	E	W2363	1063	20		33-11-31	ALL
DED		W2363	1063Z			33-11-31	ALL
GD00542		BACC50AN20				J022-00/ /	ALL
DC..	1A	W0076	0086	22		34-41-11	YC051-YN236, YN501-YR328
DC..	1A	W0076	0115	20		78-34-11	YC051-YN236, YN501-YR328
DC..	1A	W0076	0117	20		23-11-16	YD158-YD170
DC..	1A	W0076	0125	24		73-22-31	YC051-YN236, YN501-YR328
DC..	1A	W0076	0128	22		31-31-11	YC051-YN236, YN501-YR328

GROUND LIST

D280A108

91-21-21

Section GD00500

Page 9

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00542		BACC50AN20 (continued)				J022-00/ /	ALL
DC..	1A	W0076	0129	22		34-41-11	YC051-YC052
DC..	1A	W0076	0138	20		76-21-11	YC051-YN236, YN501-YR328
DC..	1A	W0076	0152	22		78-32-51	YC051-YN236, YN501-YR328
DC..	1D	W0076	0155	18		78-32-51	YC051-YN236, YN501-YR328
DC..	1D	W0076	0157	18		78-32-51	YC051-YN236, YN501-YR328
DC..	1A	W0076	0172	22		78-32-51	YC051-YN236, YN501-YR328
DC..	1A	W0076	0174	22		78-32-51	YC051-YN236, YN501-YR328
DC..	1A	W0076	0274	20		78-34-11	YC051-YN236, YN501-YR328
DC..	1D	W0076	0350	18		78-32-51	YL951-YN236, YN501-YR328
ST..	1D	W0076	0529	18		78-32-51	YC051-YN236, YN501-YR328
DC..	1D	W0076	0530	18		78-32-51	YC051-YN236, YN501-YR328
ST..	1A	W0076	2001Z			73-21-11	YC051-YN236, YN501-YR328
GD00544		BACC50AN16				J024-00/ /	ALL
DC..	1	W0080	5504	20		21-25-11	YC051-YD158, YL951-YR328
DC..	1	W0080	5518	22		21-43-21	YC051-YD158, YL951-YN236, YN501-YR328
DC..	1	W0080	5521	22		21-43-21	ALL
DC..	1	W0080	5524	22		21-43-21	YC051-YD158, YL951-YN236, YN501-YR328
DC..	1	W0080	5552	20		21-25-11	YC060-YC064, YL951-YR328
DC..	1	W0080	5558	20		21-25-11	YC060-YC064, YL951-YR328
DC..	1	W0080	5613	20		21-27-21	YC060-YC064, YL951-YR328
DC..	1	W0080	6113	20		31-31-15	YL955-YL999, YN236-YR328
GD00545		ST-				/ /	ALL
GD00546		BACC50AN20				J023-00/ /	YL951-YR328
GD00548		AC-				597/158/L007	ALL
AC..	GW	W5502	1007	20		36-11-11	ALL
AC..	GW	W5502	1007Z			36-11-11	ALL
GD00550		AC-				/ /	ALL
GD00552		AC-				655/156/L039	ALL
AC..	GW	W5102	0014	20		33-33-11	YC051-YN236, YN501-YR328
AC..	GW	W5102	1202	20		33-44-11	YC051-YN236, YN501-YR328
AC..	GW	W5102	1202Z			33-44-11	YC051-YN236, YN501-YR328

GROUND LIST

D280A108

91-21-21

Section GD00500

Page 10

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00554		AC-				560/158/L007	YN231-YN501
AC..	GW	W5502	0003	20		33-33-11	YN231-YN501
AC..	GW	W5502	0004	20		33-33-11	YN231-YN501
GD00556		AC-				653/156/R009	ALL
AC..	GW	W6202	1032	20		21-51-22	YC051-YL999, YR301-YR328
AC..	GW	W6202	1032Z			21-51-22	YC051-YL999, YR301-YR328
AC..	GW	W6202	5567	20		21-61-22	YN231-YN501
GD00558		AC-				653/155/L009	ALL
AC..	GW	W5102	5502	20		21-61-21	YN231-YN236, YN501
GD00562		AC-				561/157/R007	YN231-YN501
AC..	GW	W6502	0002	20		33-33-11	YN231-YN501
GD00566		AC-				655/157/R040	YN231-YN501
AC..	GW	W6202	0013	20		33-33-11	YN231-YN501
GD00568		ST-				373/184/R048	ALL
ST..	E	W2108	FRAD			30-41-11	ALL
ST..	E	W2208	FRAD			30-41-12	YC051-YD158, YL951-YR328
GD00570		ST-				/ /	ALL
GD00572		DC-				364/157/L029	ALL
DC..	F	W2536	0513	08		24-34-11	YC051-YD158, YL951-YN236, YN501-YR328
GD00574		ST-				J009/ /	ALL
GD00578		BACC50AN20				P0015/ /	ALL
DC..	1A	W0024	0005	20		28-44-11	YC051-YL954, YN231-YN235
DC..	1A	W0024	0006	20		28-44-11	YC051-YL954, YN231-YN235
DC..	1A	W0024	0007	20		28-44-11	YC051-YL954, YN231-YN235
DC..	1A	W0024	0018	20		28-44-11	YC051-YL954, YN231-YN235
DC..	1A	W0024	0019	20		28-44-11	YC051-YL954, YN231-YN235
DC..	1A	W0024	0023	20		28-44-11	YC051-YL954, YN231-YN235
DC..	1A	W0024	0031	20		28-44-11	YC051-YL954, YN231-YN235
DC..	1A	W0024	0032	20		28-44-11	YC051-YL954, YN231-YN235
DC..	1A	W0024	0033	20		28-44-11	YC051-YL954, YN231-YN235

GROUND LIST

D280A108

91-21-21

Section GD00500

Page 11

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00578		BACC50AN20 (continued)				P0015/ /	ALL
DC..	1A	W0024	0034	20		28-44-11	YC051-YL954, YN231-YN235
DC..	1A	W0024	0036	20		28-44-11	YC051-YL954, YN231-YN235
GD00582		DC-				/ /	ALL
GD00588		BACC50AN20				J022-00/ /	YN501-YR328
DC..	1A	W0076	0415	22		44-21-22	YN501-YR328
GD00590		AC-				372/157/L048	ALL
AC..	E	W5142	2428B	18		33-23-11	ALL
AC..	E	W5142	2429B	18		33-23-11	ALL
AC..	E	W5142	2430B	18		33-23-11	ALL
GD00592		AC-				373/157/L030	ALL
AC..	E	W5142	2431B	18		33-23-11	ALL
AC..	E	W5142	2432B	18		33-23-12	ALL
AC..	E	W5142	2433B	18		33-23-12	ALL
GD00594		AC-				374/157/L030	ALL
AC..	E	W5142	2434B	18		33-23-12	ALL
AC..	E	W5142	2435B	18		33-23-12	YC051-YL999, YR301-YR328
AC..	E	W5142	2436B	18		33-23-12	YC051-YL999, YR301-YR328
GD00596		AC-				213/208/L036	ALL
AC..	E	W2102	5518	20		33-11-11	ALL
AC..	E	W2102	5535	20		33-17-11	ALL
GD00598		BACC50AN20				220/264/L027	ALL

GROUND LIST

D280A108

91-21-21

Section GD00500

Page 12 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00600		AC-				387/167/R047	ALL
AC..	F	W4256	0022	08		24-51-21	ALL
GD00602		AC-				195/208/L032	ALL
AC..	E	W5501	0006	20		34-21-12	ALL
AC..	E	W5501	0009	22		27-32-11	ALL
AC..	E	W5501	0013	22		30-31-11	ALL
GD00604		AC-				223/267/L015	ALL
AC..	E	W2102	5510	20		30-41-11	YC051-YD158
AC..	E	W2102	5522	20		33-17-11	YC051-YD151
AC..	E	W2102	5528	20		33-17-11	YD152-YR328
AC..	E	W2102	B-BG			33-17-11	YC051-YD151
GD00606		AC-				195/208/R033	ALL
AC..	E	W5503	0006	20		34-21-22	ALL
AC..	E	W5503	0008	22		27-32-21	ALL
AC..	E	W5503	0011	22		30-31-12	ALL
AC..	E	W5503	0013	22		30-31-12	ALL
GD00608		AC-				P006-00/ /	ALL
AC..	E	W0044	0074	10		33-12-11	ALL
AC..	E	W0044	0084	10		33-12-12	ALL
AC..	E	W0044	0456	20		21-31-25	ALL
GD00610		AC-				223/267/R015	ALL
AC..	E	W2204	5507	18		33-14-12	ALL
AC..	E	W2204	5510	20		33-17-11	ALL
AC..	E	W2204	5519	20		30-41-12	YC051-YD158
AC..	E	W2204	B-BG			33-17-11	ALL
GD00612		AC-				244/180/R037	ALL
AC..	E	W6024	0503	22		24-41-11	ALL
GD00614		AC-				IFSS-167/ /	ALL
AC..	E	W1180	J-Y			27-81-11	ALL
GD00618		AC-				P006-00/ /	ALL
AC..	E	W0044	A-AG			33-17-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD00600

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00620		BACC50AN20				P006-00/ /	ALL
DC..	1A	W0044	0022	24		24-31-11	ALL
DC..	1A	W0044	0127	20		33-18-11	ALL
DC..	1A	W0044	0181	20		33-18-36	ALL
DC..	1A	W0044	0564	20		33-29-11	ALL
GD00622		DC-				P006-00/ /	ALL
DC..	E	W0044	0454	22		21-31-23	ALL
GD00624		BACC50AN16				P006-00/ /	ALL
AC..	1	W0041	0002	22		34-61-18	YC051-YC058
AC..	1	W0041	0002	22		31-32-15	YL951-YR328
AC..	1	W0041	0011	22		31-32-15	YC059-YR328
DC..	1	W0041	0012	20		34-61-18	YC051-YC058
DC..	1	W0041	0015	20		34-61-18	YC051-YC058
DC..	1	W0041	0038	20		31-52-71	ALL
DC..	1	W0041	0055	20		34-58-21	ALL
DC..	1	W0041	0104	20		34-58-11	YL951-YR328
DC..	1	W0041	0106	20		34-58-11	YL951-YR328
DC..	1	W0044	0249	22		31-53-11	ALL
DC..	1	W0044	0539	20		33-18-62	ALL
GD00626		BACC50AN20				P006-00/ /	ALL
DC..	1A	W0044	0110	20		33-18-11	YC051-YR323, YR325-YR328
DC..	1A	W0044	0111	20		33-18-11	YC051-YR323, YR325-YR328
DC..	1A	W0044	0113	20		33-18-11	YC051-YR323, YR325-YR328
DC..	1A	W0044	0114	20		33-18-11	YC051-YR323, YR325-YR328
DC..	1A	W0044	0120	20		33-18-11	YC051-YR323, YR325-YR328
DC..	1A	W0044	0123	20		33-18-11	YC051-YR323, YR325-YR328
DC..	1A	W0044	0444	20		21-31-11	YC051-YR323, YR325-YR328
DC..	1A	W0044	0450	20		21-31-22	YC051-YR323, YR325-YR328
DC..	1A	W0044	0931	20		21-74-11	YD158-YD170
GD00628		DC-				P006-00/ /	ALL
DC..	E	W0044	A-AB			33-14-12	ALL
GD00630		BACC50AN20				P006-00/ /	ALL
AC..	1A	W0044	0367	24		24-32-11	ALL
AC..	1A	W0044	0368	24		24-32-11	ALL
DC..	1A	W0044	0525	24		24-31-12	ALL

GROUND LIST

D280A108

91-21-21

Section GD00600

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00632		BACC50AN20				P006-00/ /	ALL
DC..	1A	W0044	0524	24		24-31-12	ALL
DC..	1A	W0044	0526	24		24-31-12	ALL
DC..	1A	W0044	0550	24		24-31-11	ALL
DC..	1A	W0044	0551	24		24-31-11	ALL
GD00634		AC-				P006-00/ /	ALL
AC..	E	W0040	6204	08		24-53-11	ALL
GD00636		AC-				P006-00/ /	ALL
AC..	E	W0040	6207	10		24-53-11	ALL
GD00638		BACC50AN20				P006-00/ /	ALL
DC..	1A	W0044	0252	20		25-29-11	ALL
ST..	1A	W0044	0253	20		25-29-11	ALL
AC..	1A	W0044	0255	20		25-29-11	ALL
ST..	1A	W0044	0256	20		25-29-11	ALL
ST..	1A	W0044	0646	20		28-21-21	ALL
DC..	1A	W0044	0651	20		28-21-21	ALL
DC..	1A	W0044	0655	20		28-21-21	ALL
DC..	1A	W0044	0901	22		52-51-11	YD155-YR328
ST..	1A	W0044	0906	22		52-51-11	YD155-YR328
DC..	1A	W0044	0907	22		52-51-11	YD155-YR328
DC..	1A	W0044	0941	20		28-23-11	YD158-YR328
GD00642		BACC50AN20				P006-00/ /	ALL
AC..	1A	W0044	0650	20		23-32-11	YC059-YN260
AC..	1A	W0044	0679	20		23-32-31	YC051-YN260
AC..	1A	W0044	0681	20		23-32-41	YC051-YN260
AC..	1A	W0044	0683	20		23-32-51	YC051-YN260
AC..	1A	W0044	0685	20		23-32-61	YC051-YN260
DC..	1A	W0044	0937	20		28-23-11	YD158-YR328
AC..	1A	W0044	0997	20		23-70-11	YL951-YR328
AC..	1A	W0054	0679	20		44-21-36	YN501-YR324
AC..	1A	W0054	0681	20		44-21-46	YN501-YR324
AC..	1A	W0054	0683	20		44-21-37	YN501-YR324
AC..	1A	W0054	0685	20		44-21-47	YN501-YR324
GD00644		ST-				P006-00/ /	ALL
ST..	F	W0044	0692	08		24-31-12	ALL

GROUND LIST

D280A108

91-21-21

Section GD00600

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00646		AC-				579/156/R040	YN231-YN501
AC..	GW	W6202	1007	20		21-51-26	YN231-YN501
AC..	GW	W6202	1007Z			21-51-26	YN231-YN501
GD00652		ST-				345/160/L021	ALL
GD00654		BACC50AN16				867/196/R061	ALL
DC..	1	W5124	0526	20		27-41-12	YC059-YR328
DC..	1	W5124	0534	20		27-31-11	YC051-YC053
AC..	1	W5124	0548	20		33-26-31	YR315-YR328
DC..	1	W5726	0511	24		49-52-31	YN231-YN501
DC..	1	W5726	0554	16		49-62-51	ALL
ST..	1	W5726	0555	16		49-62-51	ALL
ST..	1	W5726	0556	20		49-62-51	ALL
GD00660		DC				//	ALL
GD00662		BACC50AN20				721/204/R035	ALL
ST..	1A	W5204	1001Z			47-30-11	YD160-YR328
ST..	1A	W5204	1002Z			47-30-11	YD160-YR328
ST..	1A	W5204	1003Z			47-30-11	YD160-YR328
ST..	1A	W5204	1004Z			47-30-11	YD160-YR328
ST..	1A	W5204	1005Z			47-30-11	YD160-YR328
ST..	1A	W5204	1006Z			47-30-11	YD160-YR328
ST..	1A	W5204	1007Z			47-30-11	YD160-YR328
ST..	1A	W5204	1008Z			47-30-11	YD160-YR328
ST..	1A	W5204	1009Z			47-30-11	YD160-YR328
ST..	1A	W5204	1010Z			47-30-11	YD160-YR328
DC..	1A	W6124	0526	22		31-53-11	ALL
ST..	1A	W6124	5501Z			21-51-14	YD160-YR328
DC..	1A	W6228	0511	22		32-42-11	ALL
DC..	1A	W6228	0512	22		32-42-11	ALL
DC..	1A	W6228	0592	22		32-41-11	ALL
GD00674		DC-				//	ALL
GD00690		AC-				374/167/R047	ALL
AC..	E	W6242	2428B	18		33-23-21	ALL
AC..	E	W6242	2429B	18		33-23-21	ALL
AC..	E	W6242	2430B	18		33-23-21	ALL

GROUND LIST

D280A108

91-21-21

Section GD00600

Page 4

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

	Ground No.	Type	Part Number		Wire No.	GA	CO	Station / WL / BL	Effectivity
	Term		Bundle					Diagram	
I	GD00692		AC-					375/168/R047	ALL
I	AC..	E	W6242	2431B	18			33-23-21	ALL
I	AC..	E	W6242	2432B	18			33-23-22	ALL
I	AC..	E	W6242	2433B	18			33-23-22	ALL
I	GD00694		AC-					376/168/R047	ALL
I	AC..	E	W6242	2434B	18			33-23-22	ALL
I	AC..	E	W6242	2435B	18			33-23-22	YC051-YL999, YR301-YR328
I	AC..	E	W6242	2436B	18			33-23-22	YC051-YL999, YR301-YR328

GROUND LIST

D280A108

91-21-21

Section GD00600

Page 5 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00701		DC-				P007-01/ /	ALL
DC..	E	W0001	0281	18		31-62-11	YC051-YD158, YL951-YR328
GD00702		ST-				/ /	ALL
GD00703		DC-				P007-02/ /	ALL
DC..	E	W0003	0681	18		31-62-21	YC051-YD158, YL951-YR328
GD00704		ST-				/ /	ALL
GD00706		ST-				/ /	ALL
GD00708		ST-				/ /	ALL
GD00722		BACC50AN20				P015-00/ /	ALL
ST..	E	W0024	0001	20		28-44-11	YC051-YL954, YN231-YN235
ST..	E	W0024	0002	20		28-44-11	YC051-YL954, YN231-YN235
ST..	E	W0024	0003	20		28-44-11	YC051-YL954, YN231-YN235
GD00748		AC-				365/158/L030	ALL
AC..	F	W2536	0514	12		24-34-11	YC051-YD158, YL951-YN236, YN501-YR328
GD00752		DC-				367/152/L019	ALL
DC..	F8	W2532	0534	02		24-31-11	ALL
GD00754		ST-				/ /	ALL
GD00756		ST-				663/157/R015	YC051-YD152
GD00756		ST-				685/157/R007	YD153-YR328
ST..	E	W8228	2601Z			78-34-21	ALL
ST..	E	W8228	2602Z			78-34-21	ALL
ST..	E	W8228	2603Z			78-34-21	ALL
ST..	E	W8228	3601Z			78-36-21	ALL
ST..	E	W8228	3602Z			78-36-21	ALL
GD00758		ST-				/ /	ALL

GROUND LIST

D280A108

91-21-21

Section GD00700

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I GD00760		DC-				663/155/L016	ALL
I ST..	E	W7522	2601Z			78-34-11	YC051-YD158, YL951-YR323, YR325-YR328
I ST..	E	W7522	2602Z			78-34-11	YC051-YD158, YL951-YR323, YR325-YR328
I ST..	E	W7522	2603Z			78-34-11	YC051-YD158, YL951-YR323, YR325-YR328
I ST..	E	W7522	3601Z			78-36-11	YC051-YD158, YL951-YR323, YR325-YR328
I ST..	E	W7522	3602Z			78-36-11	YC051-YD158, YL951-YR323, YR325-YR328
I GD00790		AC-				//	ALL
I GD00792		AC-				//	ALL
I GD00794		AC-				//	ALL
I GD00796		AC-				//	ALL

GROUND LIST

D280A108

91-21-21

Section GD00700

Page 2 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00800		BACC50AN20				208/203/R014	ALL
DC..	1A	W5369	0021	20		22-13-11	ALL
DC..	1A	W5369	0022	20		22-13-11	ALL
DC..	1A	W5369	0023	20		22-13-11	ALL
DC..	1A	W5369	0107	22		22-31-51	ALL
DC..	1A	W5506	6011	20		76-21-11	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
DC..	1A	W5510	6001	20		76-21-11	ALL
DC..	1A	W5514	5550	20		21-33-11	YC051-YD158, YL951-YR328
DC..	1A	W6208	0563	20		31-53-11	YC051-YD158, YL951-YR328
DC..	1A	W6208	0576	20		27-62-21	YC051-YD158, YL951-YR328
DC..	1A	W6208	0623	20		32-64-21	YC051-YD158, YL951-YR328
DC..	1A	W6208	5507	20		33-18-61	YC051-YD158, YL951-YR328
GD00801		BACC50AN20				P008-00/ /	ALL
DC..	1A	W2149	0011	22		34-51-11	YC051-YD158, YL951-YR328
DC..	1A	W2149	0014	22		34-51-11	YL951-YR328
DC..	1A	W2149	0028	20		34-51-41	YC051-YD158, YL951-YR328
DC..	1A	W2149	0048	22		34-51-11	YC051-YD158, YL951-YR328
DC..	1A	W2177	0006	20		34-53-11	YC051-YN236, YN501-YR328
ST..	1A	W2177	0028	20		34-53-11	YR312-YR328
ST..	1A	W2247	0029	20		34-53-21	YR312-YR328
DC..	1A	W2401	0012	22		23-22-11	YD158-YN235
ST..	1A	W2401	0012	22		23-22-11	YN236-YR328
ST..	1A	W2403	0012	22		23-12-11	YC051-YD157
DC..	1A	W2403	0014	20		23-12-11	YC051-YD157
ST..	1A	W2413	0001	20		23-12-11	YD158-YR328
DC..	1A	W2413	0007	20		23-12-11	YL951-YR328
DC..	1A	W2413	0019	22		23-12-11	YD158-YD170
DC..	1A	W2413	0041	20		23-12-11	YD158-YR328
DC..	1A	W2413	0110	22		23-12-41	YL951-YL954, YN231-YN235
ST..	1A	W2801	0003	20		23-27-13	YC051-YD157
ST..	1A	W2801	0003	20		23-27-33	YD158-YN260
ST..	1A	W2803	0020	20		23-29-11	YC051-YD157
AC..	1A	W6208	0513	20		27-28-11	YC051-YD158, YL951-YR328
AC..	1A	W6208	0515	20		27-28-11	YC051-YD158, YL951-YR328
ST..	1A	W6208	0516	20		27-28-11	YC051-YD158, YL951-YR328
GD00802		BACC50AN16				208/203/R014	ALL
DC..	1	W5503	0017	20		21-33-11	YL952-YL999, YN232-YR328
DC..	1A	W5503	0018	20		21-33-11	YC060-YC064

GROUND LIST

D280A108

91-21-21

Section GD00800

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00802		BACC50AN16 (continued)				208/203/R014	ALL
DC..	1	W6208	0614	20		27-41-11	YC051-YD158, YL951-YR328
DC..	1	W6208	0615	20		27-41-11	YC051-YD158, YL951-YR328
AC..	1	W6208	5506	16		33-11-41	YC051-YD158, YL951-YR328
GD00803		BACC50AN20				P008-00/ /	ALL
DC..	1A	W2151	0011	22		34-51-21	YC051-YD158, YL951-YR328
DC..	1A	W2151	0014	22		34-51-21	YL951-YR328
DC..	1A	W2151	0028	20		34-51-41	YC051-YD158, YL951-YR328
DC..	1A	W2151	0048	22		34-51-21	YC051-YD158, YL951-YR328
DC..	1A	W2247	0006	20		34-53-21	YC051-YN236, YN501-YR328
DC..	1A	W2307	0002	20		23-31-01	ALL
DC..	1A	W2803	0002	20		23-29-11	YC051-YD157
DC..	1A	W2803	0003	20		23-29-11	YC051-YD157
AC..	1A	W2805	0002	20		31-33-01	ALL
ST..	1A	W2805	0003	20		31-33-01	ALL
DC..	1A	W2805	0004	20		31-33-01	ALL
AC..	1A	W2805	0006	20		33-11-41	ALL
DC..	1A	W3323	0005	22		23-51-11	ALL
ST..	1A	W3323	0011	20		23-51-11	ALL
DC..	1A	W5457	0107	22		22-31-51	ALL
DC..	1A	W6208	0630	20		27-41-11	YC051-YD158, YL951-YR328
DC..	1A	W6208	0631	20		27-41-11	YC051-YD158, YL951-YR328
GD00805		BACC50AN20				P008-00/ /	ALL
AC..	1A	W2149	0052	20		33-11-33	YC051-YD158, YL951-YR328
AC..	1A	W2151	0052	20		33-11-41	YC051-YD158, YL951-YR328
AC..	1A	W2177	0002	20		33-11-33	YC051-YN236, YN501-YR328
AC..	1A	W2265	0006	20		33-11-33	ALL
AC..	1A	W2267	0006	20		33-11-41	YC051-YL956, YL958-YR328
AC..	1A	W2401	0014	20		33-11-41	YD158-YR328
AC..	1A	W2403	0002	20		33-11-33	YC051-YD157
AC..	1A	W2405	0002	20		33-11-41	YC051-YD157
AC..	1A	W2413	0038	20		33-11-33	YD158-YR328
AC..	1A	W2415	0038	20		33-11-41	YD158-YR328
AC..	1A	W3319	0009	20		33-11-33	YC051-YD158, YL951-YR328
AC..	1A	W3323	0009	20		33-11-33	ALL
DC..	1A	W3323	0037	22		23-15-15	YC051-YD157
AC..	1A	W5506	5505	20		33-11-33	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
AC..	1A	W6206	5534	20		33-11-41	ALL

GROUND LIST

D280A108

91-21-21

Section GD00800

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00805		BACC50AN20 (continued)				P008-00/ /	ALL
AC..	1A	W6208	5502	20		33-11-41	YC051-YD158, YL951-YR328
AC..	1A	W6208	5504	20		33-11-41	YC051-YD158, YL951-YR328
AC..	1A	W6491	2019B	20		33-11-41	YC051-YD158, YL951-YR328
GD00807		BACC50AN20				P008-00/ /	ALL
DC..	1A	W2110	6010	20		26-16-21	YC053-YR328
DC..	1A	W2110	6011	20		26-16-21	YC053-YR328
ST..	1A	W2110	6012	20		26-16-21	YC053-YR328
DC..	1A	W2110	6027	20		26-23-11	YC053-YD157, YL951-YR314, YR317-YR318, YR320-YR328
DC..	1A	W2110	6028	20		26-23-11	YC053-YD157, YL951-YR314, YR317-YR318, YR320-YR328
AC..	1A	W2110	6033	20		33-11-33	YC053-YR328
ST..	1A	W2415	0001	20		23-12-21	YD158-YR328
DC..	1A	W2415	0041	20		23-12-21	YD158-YR328
ST..	1A	W2417	0001	20		23-12-31	YD158-YR328
DC..	1A	W2417	0003	20		23-12-31	YL951-YN260
DC..	1A	W2417	0007	20		23-12-31	YN501-YR328
DC..	1A	W2417	0015	22		23-12-31	YD158-YD170
AC..	1A	W2417	0038	20		33-11-41	YD158-YR328
DC..	1A	W2417	0041	20		23-12-31	YD158-YR328
DC..	1A	W2417	0110	22		23-12-41	YL951-YL954, YN231-YN235
AC..	1A	W3709	0002	20		33-11-41	YL951-YR328
DC..	1A	W6206	0011	22		52-51-11	YD155-YR328
GD00809		BACC50AN20				P008-00/*/*	ALL
ST..	1A	W2405	0012	22		23-12-21	YC051-YD157
DC..	1A	W2405	0014	20		23-12-21	YC051-YD157
DC..	1A	W2415	0007	20		23-12-21	YL951-YR328
DC..	1A	W2415	0015	20		23-12-21	YD158-YD170
DC..	1A	W2415	0110	22		23-12-41	YL951-YL954, YN231-YN235
DC..	1A	W3319	0005	22		23-51-21	YC051-YD158, YL951-YR328
ST..	1A	W3319	0011	20		23-51-21	YC051-YD158, YL951-YR328
DC..	1A	W3319	0041	22		23-15-15	YC051-YD157
DC..	1A	W5369	0028	20		22-13-11	ALL
DC..	1A	W5369	0031	20		22-13-11	ALL
DC..	1A	W5506	6026R	22		26-11-11	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
DC..	1A	W6208	0521	20		27-41-11	YC051-YD158, YL951-YR328
DC..	1A	W6208	0522	20		27-41-11	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD00800

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00809		BACC50AN20 (continued)				P008-00/*/*	ALL
DC..	1A	W6208	0527	20		27-41-11	YC051-YD158, YL951-YR328
DC..	1A	W6208	0528	20		27-41-11	YC051-YD158, YL951-YR328
DC..	1A	W6506	6007	20		76-21-21	ALL
DC..	1A	W6510	6007	20		76-21-21	YC051-YD158, YL951-YR328
GD00811		BACC50AN20				P008-00/ /	ALL
ST..	1A	W2149	0042	20		34-51-11	YC051-YD158, YL951-YR328
AC..	1A	W2149	0055	20		34-51-11	YC051-YD158, YL951-YR328
ST..	1A	W2151	0042	20		34-51-21	YC051-YD158, YL951-YR328
AC..	1A	W2151	0055	20		34-51-21	YC051-YD158, YL951-YR328
AC..	1A	W2177	0004	20		34-53-11	YC051-YN236, YN501-YR328
DC..	1A	W2177	0008	20		34-53-11	YC051-YN236, YN501-YR328
AC..	1A	W2247	0004	20		34-53-21	YC051-YN236, YN501-YR328
DC..	1A	W2247	0008	20		34-53-21	YC051-YN236, YN501-YR328
ST..	1A	W2265	0001	20		34-57-11	ALL
AC..	1A	W2265	0004	20		34-57-11	ALL
ST..	1A	W2267	0001	20		34-57-21	ALL
AC..	1A	W2267	0004	20		34-57-21	ALL
AC..	1A	W2801	0002	20		23-27-13	YC051-YD157
AC..	1A	W6208	0510	20		27-21-11	YC051-YD158, YL951-YR328
ST..	1A	W6208	0511	20		27-21-11	YC051-YD158, YL951-YR328
AC..	1A	W6208	0564	20		27-11-11	YC051-YD158, YL951-YR328
GD00813		BACC50AN20				P008-00/*/*	ALL
DC..	1A	W5510	0540	22		31-53-11	ALL
DC..	1A	W5510	0571	22		32-64-21	ALL
DC..	1A	W5510	0573	22		32-64-21	ALL
DC..	1A	W5510	6087	22		30-11-11	ALL
DC..	1A	W6491	0014	20		34-41-11	YC051-YD158, YL951-YR328
DC..	1A	W6506	0540	22		31-53-11	ALL
DC..	1A	W6506	0559	22		32-64-21	ALL
DC..	1A	W6506	0560	22		32-64-21	ALL
DC..	1A	W6506	6001R	20		26-11-31	ALL
DC..	1A	W6506	6004R	20		26-11-31	ALL
DC..	1A	W6506	6084R	22		26-11-21	ALL
DC..	1A	W6506	6086	22		30-11-11	ALL
GD00815		BACC50AN20				P008-00/*/*	ALL
AC..	1A	W2511	0002	20		33-11-41	YC051-YD157
AC..	1A	W2511	0004	20		23-11-11	YC051-YD157

GROUND LIST

D280A108

91-21-21

Section GD00800

Page 4

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00815		BACC50AN20 (continued)				P008-00/*/*	ALL
DC..	1A	W2511	0008	20		23-11-11	YC051-YD157
ST..	1A	W2511	0009	20		23-11-11	YC051-YD157
ST..	1A	W2511	0011	20		23-11-11	YC051-YD157
DC..	1A	W2511	0012	20		23-11-11	YC051-YD157
ST..	1A	W2511	0015	20		23-11-11	YC051-YD157
ST..	1A	W5162	6003	20		73-21-21	ALL
ST..	1A	W5172	6002	20		73-21-21	ALL
ST..	1A	W5506	6085	20		78-35-11	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
ST..	1A	W6162	6003	20		73-21-21	YC054-YR328
ST..	1A	W6172	6002	20		73-21-21	ALL
ST..	1A	W6491	0042	20		34-41-11	YC051-YD158, YL951-YR328
ST..	1A	W6506	6079	20		78-35-21	ALL
GD00817		BACC50AN16				J019-00/ /	ALL
AC..	1	W6206	5502	16		33-11-33	ALL
AC..	1	W6206	5508	16		33-11-33	ALL
AC..	1	W6206	5522	16		33-11-41	ALL
AC..	1	W6206	5529	16		33-11-41	ALL
AC..	1	W6206	5530	16		33-11-41	ALL
AC..	1	W6206	5538	18		33-14-12	ALL
GD00840		DC-				TBD/ /	ALL
GD00870		DC				OFSS373/ /	ALL
ST..	E	W1664	1020Z			28-44-11	YC051-YD158, YL951-YR328
ST..	E	W1664	1021Z			28-44-11	YC051-YD158, YL951-YR328
ST..	E	W1664	1022Z			28-44-11	YC051-YD158, YL951-YR328
ST..	E	W1664	1023Z			28-44-11	YL951-YR328
ST..	E	W1664	1026Z			28-44-11	YC051-YD158, YL951-YR328
GD00872		AC-				887/177/L048	YD158-YD170
AC..	E	W4190	0004	14		21-74-11	YD158-YD170
GD00876		ST-				885/165/L015	YD158-YD170
ST..	E	W4190	0021	12		21-74-11	YD158-YD170
GD00887		AC				F057/330/L002	ALL
AC..	E	W7057	0004	18		23-11-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD00800

Page 5

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00887		AC (continued)				F057/330/L002	ALL
AC..	E	W7061	0004	18		23-11-21	YD158-YR328
GD00889		DC				F057/330/L002	ALL
DC..	E	W7057	0006	18		23-11-11	ALL
DC..	E	W7061	0006	18		23-11-21	YD158-YR328
GD00891		ST-				238/202/L014	ALL
ST..	E	W5457	0025	20		22-11-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD00800

Page 6 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00912		AC-				366/157/L029	ALL
AC..	F	W2132	0004	08		24-51-11	YC051-YD158, YL951-YR328
GD00918		DC-				388/173/L053	ALL
DC..	E	W5726	0569	20		24-51-11	ALL
GD00920		AC-				377/168/R048	ALL
AC..	F	W6424	0012	08		24-51-21	ALL
GD00922		DC-				389/167/R047	ALL
DC..	E	W6410	0506	20		24-51-21	ALL
GD00947		ST-				666/194/L059	ALL
ST..	E	W1136	1304Z			28-43-11	ALL
ST..	E	W1136	3601Z			28-23-11	ALL
ST..	E	W5375	YAAA			22-11-31	YC054-YN236, YN501-YR328
ST..	E	W7026	0519	20		32-35-11	YC051-YR323, YR325-YR328
GD00949		ST-				1157/260/L010	ALL
DC..	E	W3377	0002	20		22-12-31	YC051-YC052
DC..	E	W3377	0022	20		22-12-31	YC051-YC052
DC..	E	W3397	0002	20		22-12-31	YC053-YN236, YN501-YR328
DC..	E	W3397	0022	20		22-12-31	YC053-YN236, YN501-YR328
ST..	E	W3397	1001Z			22-12-31	YD154-YN236, YN501-YR328
ST..	E	W3397	1004Z			22-12-31	YD154-YN236, YN501-YR328
ST..	E	W3397	2006Z			22-12-31	YD154-YN236, YN501-YR328
ST..	E	W3397	2007Z			22-12-31	YD154-YN236, YN501-YR328
ST..	E	W3397	3001Z			22-12-31	YD154-YN236, YN501-YR328
ST..	E	W3397	3006Z			SPARE	YD154-YN236, YN501-YR328
ST..	E	W3397	FRAA			22-12-31	YC053-YD153
GD00971		DC-				//	ALL
GD00973		ST-				1160/284/L018	ALL
DC..	E	W3379	0002	20		22-12-41	YC051-YC052
DC..	E	W3379	0022	20		22-12-41	YC051-YC052
ST..	E	W3397	1002Z			22-11-12	YC053-YN236, YN501-YR328
ST..	E	W3397	1003Z			22-11-12	YC053-YN236, YN501-YR328
ST..	E	W3399	1001Z			22-12-41	YC053-YN236, YN501-YR328
ST..	E	W3399	1004Z			22-12-41	YC053-YN236, YN501-YR328

GROUND LIST

D280A108

91-21-21

Section GD00900

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD00973		ST- (continued)				1160/284/L018	ALL
DC..	E	W3399	1010	20		22-12-41	YC053-YN236, YN501-YR328
DC..	E	W3399	1010Z			22-12-41	YC053-YN236, YN501-YR328
DC..	E	W3399	1011	20		22-12-41	YC053-YN236, YN501-YR328
DC..	E	W3399	1011Z			22-12-41	YC053-YN236, YN501-YR328
ST..	E	W3399	2006Z			22-12-41	YD154-YN236, YN501-YR328
ST..	E	W3399	2007Z			22-12-41	YD154-YN236, YN501-YR328
ST..	E	W3399	3001Z			22-12-41	YD154-YN236, YN501-YR328
ST..	E	W3399	3006Z			SPARE	YD154-YN236, YN501-YR328
ST..	E	W3399	FRAA			22-12-41	YC053-YD153
GD00977		ST-				192/242/L003	ALL
ST..	E	W2108	FRAC			30-41-11	ALL
ST..	E	W2363	1001Z			22-11-11	ALL
ST..	E	W2363	1002Z			22-11-11	ALL
ST..	E	W2363	1005Z			22-11-11	ALL
ST..	E	W2363	1015Z			22-31-51	ALL
GD00980		ST-				191/242/R002	ALL
ST..	E	W2208	FRAC			30-41-12	YC051-YD158, YL951-YR328
ST..	E	W2465	1001Z			22-11-11	ALL
ST..	E	W2465	1005Z			22-11-11	ALL
ST..	E	W2465	1047Z			22-11-11	ALL
ST..	E	W2465	1055Z			22-11-11	ALL
GD00981		DC-				192/242/L004	ALL
DC..	E	W2363	1001	20		22-11-11	ALL
DC..	E	W2363	1002	20		22-11-11	ALL
DC..	E	W2363	1005	20		22-11-11	ALL
DC..	E	W2363	1015	22		22-31-51	ALL
GD00985		DC-				191/242/R003	ALL
DC..	E	W2465	1001	20		22-11-11	ALL
DC..	E	W2465	1005	20		22-11-11	ALL
DC..	E	W2465	1047	20		22-11-11	ALL
DC..	E	W2465	1055	20		22-11-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD00900

Page 2 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD01000		ST-				224/175/L022	ALL
ST..	E	W5562	6006	22		28-41-11	ALL
ST..	E	W5580	6006	22		28-41-11	ALL
GD01008		BACC50AN20				376/169/R048	ALL
ST..	1A	W5030	5504	20		21-27-31	ALL
DC..	1A	W5158	0002	20		35-11-11	ALL
AC..	1D	W5158	0037	18		25-29-11	YL951-YL999, YN232-YR328
ST..	1D	W5158	0043	18		25-29-11	YL951-YL999, YN232-YR328
ST..	1D	W5158	0044	18		25-29-11	YL951-YL999, YN232-YR328
DC..	1A	W5158	0553	20		21-43-21	ALL
DC..	1A	W5158	0554	20		21-31-24	ALL
ST..	1A	W5158	0556	20		21-43-21	ALL
DC..	1A	W5337	0002	22		34-21-22	YL951-YN236, YN501-YR328
DC..	1A	W5337	0004	22		34-21-12	YL951-YN236, YN501-YR328
ST..	1A	W6110	5506	20		21-27-21	ALL
GD01018		AC-				259/280/L009	ALL
AC..	E	W2216	5543	10		33-12-11	YC051-YR323, YR325-YR328
GD0101A		BACC50AN16				P001-00/ /	ALL
ST..	1	W0001	0002	16		31-62-11	YC051-YD158, YL951-YR328
ST..	1	W0001	0003	16		31-62-11	YC051-YD158, YL951-YR328
ST..	1	W0001	0004	16		31-62-11	YC051-YD158, YL951-YR328
ST..	1	W0001	0005	16		31-62-11	YC051-YD158, YL951-YR328
ST..	1	W0001	0007	16		31-62-11	YC051-YD158, YL951-YR328
ST..	1	W0001	0008	16		31-62-11	YC051-YD158, YL951-YR328
ST..	1	W0001	0009	16		31-62-11	YC051-YD158, YL951-YR328
ST..	1	W0001	0010	16		31-62-11	YC051-YD158, YL951-YR328
GD0101B		BACC50AN20				P001-00/ /	ALL
ST..	1A	W0001	0016	20		31-62-11	YC051-YD158, YL951-YR328
DC..	1A	W0001	0089	20		22-14-11	YC051-YD158, YL951-YR328
DC..	1A	W0001	0104	22		34-61-16	YC051-YD158, YL951-YR328
DC..	1A	W0001	0166	22		34-49-11	YC051-YD158, YL951-YR328
ST..	1A	W0001	0172	20		31-22-11	YC051-YD158, YL951-YR328
DC..	1A	W0001	0173	20		31-22-11	YC051-YD158, YL951-YR328
GD0101C		BACC50AN20				P001-00/ /	ALL
DC..	1A	W0001	0034	22		31-62-12	YC051-YD158, YL951-YR328
DC..	1A	W0001	0035	22		31-62-12	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD01000

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD0101C		BACC50AN20 (continued)				P001-00/ /	ALL
DC..	1A	W0001	0053	22		31-62-13	YC051-YD158, YL951-YR328
DC..	1A	W0001	0054	22		31-62-13	YC051-YD158, YL951-YR328
DC..	1A	W0001	0055	22		31-62-13	YC051-YD158, YL951-YR328
GD0101D		BACC50AN20				P001-00/ /	ALL
DC..	1A	W0001	0036	22		31-62-12	YC051-YD158, YL951-YR328
DC..	1A	W0001	0037	22		31-62-12	YC051-YD158, YL951-YR328
DC..	1A	W0003	0554	22		31-62-23	YC051-YD158, YL951-YR328
DC..	1A	W0003	0555	22		31-62-23	YC051-YD158, YL951-YR328
GD01022		ST-				294.5/ /	YL953-YL999, YR301-YR328
ST..	E	W1024	0523	20		27-62-11	YL953-YL999, YR301-YR328
GD01024		ST-				396.3/ /	YL953-YL999, YR301-YR328
ST..	E	W1034	0520	20		27-62-11	YL953-YL999, YR301-YR328
GD01026		ST-				397.4/ /	YL953-YL999, YR301-YR328
ST..	E	W1034	0521	20		27-62-11	YL953-YL999, YR301-YR328
GD01030		ST-				295.4/ /	YL953-YL999, YR301-YR328
ST..	E	W1024	0522	20		27-62-11	YL953-YL999, YR301-YR328
GD01034		AC-				OFSS 257/ /	ALL
AC..	E	W1664	1009	20		30-11-11	YC051-YD158, YL951-YR328
AC..	E	W1664	1009Z			30-11-11	YC051-YD158, YL951-YR328
GD01036		DC-				670/196/R067	YL953-YL999, YR301-YR328
DC..	E	W8228	0506	20		27-62-11	YL953-YL999, YR301-YR328
GD01038		ST-				675/196/R070	YL953-YL999, YR301-YR328
ST..	E	W8228	0504	20		27-62-11	YL953-YL999, YR301-YR328
GD01040		ST				/ /	ALL
GD01041		ST-				221/198/R026	ALL
ST..	E	W5369	0001	20		22-11-11	ALL
GD01044		DC-				201/205/L012	ALL
DC..	E	W6208	0555	20		27-62-11	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD01000

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD01044		DC- (continued)				201/205/L012	ALL
DC..	E	W6208	0557	20		27-62-11	YC051-YD158, YL951-YR328
GD01047		DC-				E005-00/ /	ALL
DC..	E	W0737	0036	22		34-61-19	ALL
DC..	E	W0737	0037	22		34-61-19	ALL
GD01053		ST-				225/199/R024	ALL
ST..	E	W5457	0035	20		22-11-11	ALL
GD01054		DC-				OFSS 374/ /	ALL
ST..	E	W1664	1012Z			28-44-11	YC051-YD158, YL951-YR328
DC..	E	W1664	1016	20		28-44-11	YC051-YD158, YL951-YR328
DC..	E	W1664	1016Z			28-44-11	YC051-YD158, YL951-YR328
DC..	E	W1664	A-E			28-44-11	YC051-YD158, YL951-YR328
GD01062		DC-				E004-02/ /	ALL
GD01064		ST-				411.1/ /	YL953-YL999, YR301-YR328
ST..	E	W1024	0516	20		27-62-11	YL953-YL999, YR301-YR328
GD01066		ST-				409.7/ /	YL953-YL999, YR301-YR328
ST..	E	W1024	0517	20		27-62-11	YL953-YL999, YR301-YR328
GD01068		ST-				354.2/ /	YL953-YL999, YR301-YR328
ST..	E	W1034	0518	20		27-62-11	YL953-YL999, YR301-YR328
GD01070		ST-				355.6/ /	YL953-YL999, YR301-YR328
ST..	E	W1034	0519	20		27-62-11	YL953-YL999, YR301-YR328
GD01072		ST-				339.4/ /	YL953-YL999, YR301-YR328
ST..	E	W1024	0520	20		27-62-11	YL953-YL999, YR301-YR328
GD01074		ST-				338.4/ /	YL953-YL999, YR301-YR328
ST..	E	W1024	0521	20		27-62-11	YL953-YL999, YR301-YR328
GD01076		ST-				425.1/ /	YL953-YL999, YR301-YR328
ST..	E	W1034	0522	20		27-62-11	YL953-YL999, YR301-YR328

GROUND LIST

D280A108

91-21-21

Section GD01000

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I GD01078		ST-				426.3/ /	YL953-YL999, YR301-YR328
I ST..	E	W1034	0523	20		27-62-11	YL953-YL999, YR301-YR328
I GD01080		ST-				381.6/ /	YL953-YL999, YR301-YR328
I ST..	E	W1024	0518	20		27-62-11	YL953-YL999, YR301-YR328
I GD01082		ST-				380.3/ /	YL953-YL999, YR301-YR328
I ST..	E	W1024	0519	20		27-62-11	YL953-YL999, YR301-YR328
I GD01084		ST-				312.5/ /	YL953-YL999, YR301-YR328
I ST..	E	W1034	0516	20		27-62-11	YL953-YL999, YR301-YR328
I GD01086		ST-				313.7/ /	YL953-YL999, YR301-YR328
I ST..	E	W1034	0517	20		27-62-11	YL953-YL999, YR301-YR328
I GD01096		ST-				/ /	ALL

GROUND LIST

D280A108

91-21-21

Section GD01000

Page 4 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD01100		AC-				OFSS-257/ /	ALL
AC..	E	W1662	1009	20		30-11-11	YC051-YD158, YL951-YR328
AC..	E	W1662	1009Z			30-11-11	YC051-YD158, YL951-YR328
GD01101		BACC50AN16				E001-01/ /	ALL
GD01102		BACC50AN20				E001-01/ /	ALL
AC..	1A	W0111	0004	22		22-11-11	ALL
DC..	1A	W0111	0005	20		22-11-11	ALL
DC..	1A	W0111	0006	20		22-11-11	ALL
DC..	1A	W0111	0007	20		22-11-11	ALL
ST..	1A	W0111	0008	20		22-11-11	ALL
AC..	1A	W0111	0035	20		22-11-11	ALL
AC..	1A	W0111	0067	22		34-45-11	ALL
DC..	1A	W0111	0116	22		22-11-75	YC051-YL999, YR301-YR328
AC..	1A	W0111	0118	22		27-51-11	ALL
AC..	1A	W0111	0133	22		22-18-11	ALL
AC..	1A	W0111	0134	22		22-18-11	ALL
DC..	1A	W0111	0218	22		27-81-41	ALL
AC..	1A	W0111	0394	20		34-21-21	ALL
AC..	1A	W0111	0712	22		27-53-21	ALL
AC..	1A	W0111	0713	22		27-53-21	ALL
AC..	1A	W0111	1003	20		27-52-11	ALL
DED		W0111	1003Z			27-52-11	ALL
GD01103		BACC50AN20				E001-01/ /	ALL
ST..	1A	W0111	0031	20		22-11-11	ALL
DC..	1A	W0111	0032	20		22-11-11	ALL
DC..	1A	W0111	0070	22		22-11-14	ALL
DC..	1A	W0111	0081	22		22-11-75	ALL
DC..	1A	W0111	0249	22		22-18-11	ALL
DC..	1A	W0111	0380	22		34-21-15	ALL
DC..	1A	W0111	0382	22		34-21-15	ALL
DC..	1A	W0111	0399	20		34-21-11	ALL
DC..	1A	W0111	0571	20		34-21-21	ALL
ST..	1A	W0111	0696	22		27-81-11	ALL
DC..	1A	W0111	0699	22		27-81-11	ALL
DC..	1A	W0111	0701	22		27-81-11	ALL
DC..	1A	W0111	0704	22		27-81-11	ALL
DC..	1A	W0111	0717	22		34-61-12	ALL
DC..	1A	W0111	0719	22		34-61-12	ALL

GROUND LIST

D280A108

91-21-21

Section GD01100

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD01104		S280W555-401				E001-01/ /	ALL
DC..	1A	W0111	0068	22		34-45-11	ALL
DC..	1A	W0111	0069	22		34-45-11	ALL
DC..	1A	W0111	0125	22		22-11-75	ALL
DC..	1A	W0111	0219	22		34-21-16	ALL
DC..	1A	W0111	0225	22		22-11-75	ALL
DC..	1A	W0111	0229	22		34-45-11	ALL
DC..	1A	W0111	0230	22		34-45-11	ALL
DC..	1A	W0111	0454	22		22-13-11	YD157-YD170
DC..	1A	W0111	0790	24		22-11-75	YD157-YR328
DC..	1A	W0111	0888	20		31-53-11	YC060-YC064, YL953-YL999, YN233-YR328
DC..	1A	W0111	0889	20		31-53-11	YC060-YC064
DC..	1A	W0111	0927	24		22-11-75	YD157-YR328
GD01105		BACC50AN20				E001-01/ /	ALL
AC..	1A	W0111	0024	20		22-11-11	ALL
DC..	1A	W0111	0217	22		27-81-41	YC051-YL952, YN231-YN501
AC..	1A	W0111	0233	22		34-49-11	ALL
DC..	1A	W0111	0234	22		34-49-11	ALL
DC..	1A	W0111	0287	22		34-49-11	YC051-YC052
DC..	1A	W0111	0289	22		34-49-11	YC051-YC052
DC..	1A	W0111	0290	22		34-49-11	YC051-YC052
DC..	1A	W0111	0291	22		34-49-11	YC051-YC052
DC..	1A	W0111	0292	22		34-49-11	YC051-YC052
DC..	1A	W0111	0293	22		34-49-11	YC051-YC052
DC..	1A	W0111	0298	22		22-31-11	YC051-YC052
DC..	1A	W0111	0326	22		22-31-11	YC051-YD155
DC..	1A	W0111	0327	22		22-31-11	YC051-YD155
ST..	1A	W0111	0328	22		22-31-11	YC051-YD155
DC..	1A	W0111	0425	22		22-31-11	YC051-YD155
DC..	1A	W0111	0838	22		27-81-41	YL953-YL999, YR301-YR328
DC..	1A	W0111	0849	22		34-49-11	YC051-YC052
DC..	1A	W0111	0889	20		31-53-11	YL953-YL999, YN233-YR328
GD01106		S280W555-401				E001-01/ /	ALL
ST..	1A	W0111	0025	20		22-11-11	ALL
DC..	1A	W0111	0062	22		22-11-14	ALL
DC..	1A	W0111	0216	22		22-31-11	YC051-YD155
AC..	1A	W0111	0272	22		22-11-11	ALL
AC..	1A	W0111	0274	22		22-11-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD01100

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD01106		S280W555-401 (continued)				E001-01/ /	ALL
AC..	1A	W0111	0276	22		22-11-11	ALL
AC..	1A	W0111	0278	22		22-11-11	ALL
DC..	1A	W0111	0296	22		22-31-11	YC051-YD155
DC..	1A	W0111	0298	22		22-31-11	YC053-YD155
DC..	1A	W0111	0329	22		22-31-11	YC051-YD155
DC..	1A	W0111	0330	22		22-31-11	YC051-YD155
ST..	1A	W0111	0331	22		22-31-11	YC051-YD155
DC..	1A	W0111	0333	22		22-31-11	YC051-YD155
ST..	1A	W0111	0490	22		31-62-11	YC051-YD157
AC..	1A	W0111	0727	22		22-18-11	ALL
AC..	1A	W0111	0728	22		22-18-11	ALL
DC..	1A	W0111	0777	22		22-31-51	YD157-YR328
DC..	1A	W0111	0796	20		21-31-23	YD158-YR328
ST..	1A	W0111	0797	20		21-31-23	YD158-YR328
DC..	1A	W0111	0798	22		21-31-23	YD158-YR328
DC..	1A	W0111	0799	22		21-31-23	YD158-YR328
DC..	1A	W0111	0811	22		21-31-23	YD158-YR328
GD01111		DC-				313/161/L028	ALL
DC..	E	W2247	0013	20		34-53-31	YC051-YN236, YN501-YR328
DC..	E	W2247	0028	20		34-53-31	YC051-YN236, YN501-YR328
GD01148		DC-				655/165/R040	ALL
DC..	GW	W6202	1012	20		27-83-11	ALL
DC..	GW	W6202	1012Z			27-83-11	ALL
DC..	GW	W6202	1029	20		27-83-21	ALL
DC..	GW	W6202	1029Z			27-83-21	ALL
GD01154		AC-				578/155/L040	ALL
AC..	GW	W5102	1009	20		21-51-16	YN231-YN236, YN501
AC..	GW	W5102	1009Z			21-51-16	YN231-YN236, YN501
GD01160		DC-				/ /	YC051-YL999, YR301-YR328
GD01170		DC-				/ /	YC051-YL999, YR301-YR328
GD01182		DC-				TBD/TBD/TBD	YC051-YL999, YR301-YR328
GD01184		DC				TBD/TBD/TBD	YC051-YL999, YR301-YR328

GROUND LIST

D280A108

91-21-21

Section GD01100

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number		Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
		Bundle						
I GD01188		BACC50AN16					//	YC051-YL999, YR301-YR328

GROUND LIST

D280A108

91-21-21

Section GD01100

Page 4 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD01201		S280W555-402				E001-02/ /	ALL
ST..	1A	W0121	0036	20		34-31-11	ALL
AC..	1A	W0121	0042	20		34-51-11	ALL
ST..	1A	W0121	0043	20		34-51-11	ALL
GD01202		S280W555-402				E001-02/ /	ALL
AC..	1A	W0121	0035	20		34-31-11	ALL
DC..	1A	W0121	0089	22		34-31-11	YL951-YR328
DC..	1A	W0121	0090	22		34-31-11	YL951-YR328
DC..	1A	W0121	0091	22		34-31-11	YL951-YR328
DC..	1A	W0121	0092	22		34-31-11	YL951-YR328
GD01203		S280W555-402				E001-02/ /	ALL
AC..	1A	W0121	0004	20		34-53-11	ALL
ST..	1A	W0121	0006	20		34-53-11	ALL
DC..	1A	W0121	0008	20		34-53-11	ALL
ST..	1A	W0121	0009	20		34-53-11	ALL
ST..	1A	W0121	0010	20		34-53-11	ALL
ST..	1A	W0121	0018	22		34-55-11	ALL
ST..	1A	W0121	0025	20		34-53-11	ALL
DC..	1A	W0121	0028	22		34-55-11	ALL
ST..	1A	W0121	0029	22		34-55-11	ALL
DC..	%A	W0121	0050	22		34-53-11	YD158-YR328
GD01204		S280W555-402				E001-02/ /	ALL
AC..	1A	W0121	0019	22		34-55-11	ALL
GD01207		BACC50AN20				E003-03/ /	ALL
GD01210		DC-				197/170/0	ALL
DC..	E	W5160	0106	18		52-71-12	YC051-YD158, YL951-YR328
GD01218		AC-				986/203/R025	ALL
GD01220		DC-				394/186/R047	ALL
DC..	P	W0422	0134	08		24-32-11	ALL
GD01222		BACC50AN20				775/199/R064	ALL

GROUND LIST

D280A108

91-21-21

Section GD01200

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD01230		BACC50AN16				520/170/L053	ALL
DC..	1	W5172	0009	18		78-32-51	ALL
DC..	1	W5172	0010	18		78-32-51	ALL
DC..	1	W5172	0011	20		78-36-11	ALL
DC..	1	W5172	0012	20		73-21-12	ALL
DC..	1	W5172	0013	20		78-36-11	ALL
DC..	1	W5172	0014	20		78-35-11	ALL
GD01232		BACC50AN16				500I+14/175/R053	YC051-YL999, YR301-YR328
GD01232		BACC50AN16				500D+14/175/R053	YN231-YN501
DC..	1	W6172	0009	18		78-32-61	ALL
DC..	1	W6172	0010	18		78-32-61	ALL
DC..	1	W6172	0011	20		78-32-61	YC051-YC054
DC..	1	W6172	0011	20		78-36-21	YC055-YR328
DC..	1	W6172	0012	20		73-21-12	ALL
DC..	1	W6172	0013	20		78-36-21	ALL
DC..	1	W6172	0014	20		78-35-21	ALL
GD01240		BACC50AN16				AB1088/232/L018	ALL
DC..	1	W4724	0515	20		49-52-31	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
DC..	1	W4724	0517	20		49-52-31	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
DC..	1	W4724	0549	20		49-62-12	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
DC..	1	W4724	0560	20		49-94-21	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
DC..	1	W4724	0563	20		49-94-21	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
DC..	1	W4724	0575	22		49-62-12	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
ST..	1	W4724	0587	22		49-62-12	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
DC..	1	W4724	0589	20		49-94-21	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
ST..	1	W4724	0590	22		49-94-21	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
DC..	1	W5726	0515	20		49-52-31	YC051-YC052
DC..	1	W5726	0517	20		49-52-31	YC051-YC052
DC..	1	W5726	0549	20		49-62-12	YC051-YC052

GROUND LIST

D280A108

91-21-21

Section GD01200

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD01240		BACC50AN16 (continued)				AB1088/232/L018	ALL
DC..	1	W5726	0560	20		49-94-21	YC051-YC052
DC..	1	W5726	0563	20		49-94-21	YC051-YC052
DC..	1	W5726	0575	22		49-62-12	YC051-YC052
ST..	1	W5726	0587	22		49-62-12	YC051-YC052
DC..	1	W5726	0589	20		49-94-21	YC051-YC052
ST..	1	W5726	0590	22		49-94-21	YC051-YC052
DC..	1	W5726	1104R	18		26-21-11	YC051-YC052
DED		W5726	1104Z			26-21-11	YC051-YC052
ST..	1	W5726	1106R	18		26-21-11	YC051-YC052
DED		W5726	1106Z			26-21-11	YC051-YC052
DC..	1	W5726	1107R	18		26-21-11	YC051-YC052
DED		W5726	1107Z			26-21-11	YC051-YC052
I	GD01252	DC-				394/184/R047	ALL
I	DC..	P	W0422	0125	08	24-32-11	ALL
I	GD01254	AC-				E002-02/ /	ALL
I	GD01256	DC-				393/194/L019	ALL
I	DC..	P	W0212	0051	08	24-32-11	ALL
I	GD01258	ST-				/ /	ALL
I	GD01290	AC				253/236/L049	ALL
I	AC..	E	W2102	5526	20	30-41-11	ALL
I	GD01296	AC				252/236/R049	ALL
I	AC..	E	W2204	5538	20	30-41-12	ALL

GROUND LIST

D280A108

91-21-21

Section GD01200

Page 3 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD01301		BACC50AN16				E001-03/ /	ALL
DC..	1	W0131	0016	18		23-31-01	YC060-YR328
DC..	1	W0131	0033	16		23-12-11	ALL
GD01302		S280W555-401				E001-03/ /	ALL
ST..	1A	W0131	0008	22		23-31-02	YC051-YR313
DC..	1A	W0131	0016	20		23-31-01	YC051-YC059
DC..	1A	W0131	0034	22		23-12-11	ALL
DC..	1A	W0131	0039	22		23-12-11	ALL
DC..	1A	W0131	0435	22		23-12-11	YD158-YR328
GD01303		S280W555-401				E001-03/ /	ALL
GD01304		S280W555-401				E001-03/ /	ALL
DC..	1A	W0131	0001	22		32-42-11	ALL
DC..	1A	W0131	0002	22		32-42-11	ALL
ST..	1A	W0131	0003	22		32-41-11	ALL
DC..	1A	W0131	0106	22		32-41-11	ALL
DC..	1A	W0131	0107	22		32-41-11	ALL
ST..	1A	W0131	0108	22		32-41-11	ALL
GD01322		DC-				335/159/L029	ALL
DC..	E	W5156	0002	18		52-71-12	YC051-YD158, YL951-YR328
GD01352		AC-				250/228/R049	ALL
AC..	E	W2108	1003	20		30-41-11	ALL
AC..	E	W2108	1003Z			30-41-11	ALL
AC..	E	W2204	5503	18		33-14-12	ALL
GD01354		AC-				251/228/L049	ALL
AC..	E	W2102	5517	18		33-14-12	ALL
AC..	E	W2208	1003	18		30-41-12	YC051-YD158, YL951-YR328
AC..	E	W2208	1003Z			30-41-12	YC051-YD158, YL951-YR328
GD01370		BACC50AN16				500A/203/R004	YN231-YN501
ST..	1	W5086	6010	20		26-16-21	YN231-YN501
AC..	1	W5248	0016	20		33-36-11	YN231-YN501

GROUND LIST

D280A108

91-21-21

Section GD01300

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD01401		S280W555-402				E001-04/ /	ALL
AC..	1A	W0141	0006	22		22-11-11	ALL
DC..	1A	W0141	0048	22		22-11-14	ALL
DC..	1A	W0141	0049	22		22-11-14	ALL
DC..	1A	W0141	0056	20		22-11-11	ALL
DC..	1A	W0141	0057	20		22-11-11	ALL
DC..	1A	W0141	0058	20		22-11-11	ALL
ST..	1A	W0141	0059	20		22-11-11	ALL
DC..	1A	W0141	0086	22		22-11-75	ALL
DC..	1A	W0141	0087	22		22-11-75	ALL
AC..	1A	W0141	0122	22		22-18-11	ALL
AC..	1A	W0141	0123	22		22-18-11	ALL
DC..	1A	W0141	0146	22		22-11-75	YC051-YL999, YR301-YR328
GD01402		S280W555-402				E001-04/ /	ALL
AC..	1A	W0141	0133	22		22-11-11	ALL
AC..	1A	W0141	0135	22		22-11-11	ALL
AC..	1A	W0141	0137	22		22-11-11	ALL
AC..	1A	W0141	0139	22		22-11-11	ALL
GD01403		S280W555-402				E001-04/ /	ALL
AC..	1A	W0141	0703	20		34-31-21	ALL
ST..	1A	W0141	0704	20		34-31-21	ALL
AC..	1A	W0141	0710	20		34-51-21	ALL
ST..	1A	W0141	0711	20		34-51-21	ALL
DC..	1A	W0141	0713	22		34-51-21	ALL
DC..	1A	W0141	0730	22		34-31-21	YL951-YR328
DC..	1A	W0141	0731	22		34-31-21	YL951-YR328
DC..	1A	W0141	0732	22		34-31-21	YL951-YR328
DC..	1A	W0141	0733	22		34-31-21	YL951-YR328
GD01404		S280W555-402				E001-04/ /	ALL
DC..	1A	W0141	0416R	20		26-12-11	ALL
DC..	1A	W0141	0417R	20		26-12-11	ALL
AC..	1A	W0141	0418R	20		26-12-11	ALL
DED		W0141	0418Z			26-12-11	ALL
AC..	1A	W0141	0419R	20		26-12-11	ALL
DED		W0141	0419Z			26-12-11	ALL
GD01444		AC-				226/232/L040	ALL
AC..	E	W2102	5534	20		33-14-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD01400

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number		Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
		Bundle						
I GD01450		ST-					E002-01/ /	ALL

GROUND LIST

D280A108

91-21-21

Section GD01400

Page 2 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD01501		BACC50AN16				E001-05/ /	ALL
DC..	1	W0151	0035	16		23-12-21	ALL
GD01502		S280W555-402				E001-05/ /	ALL
ST..	1A	W0151	0018	22		34-55-21	ALL
AC..	1A	W0151	0019	22		34-55-21	ALL
DC..	1A	W0151	0028	22		34-55-21	ALL
ST..	1A	W0151	0029	22		34-55-21	ALL
GD01503		S280W555-402				E001-05/ /	ALL
AC..	1A	W0151	0004	20		34-53-21	ALL
ST..	1A	W0151	0006	20		34-53-21	ALL
DC..	1A	W0151	0008	20		34-53-21	ALL
ST..	1A	W0151	0009	20		34-53-21	ALL
ST..	1A	W0151	0010	20		34-53-21	ALL
DC..	1A	W0151	0036	22		23-12-21	ALL
DC..	1A	W0151	0037	22		23-12-21	ALL
DC..	%A	W0151	0048	22		34-53-21	YD158-YR328
DC..	1A	W0151	0072	22		23-12-21	YD158-YR328
GD01505		ST-				679/201/L040	ALL
ST..	E	W5375	YAAA			22-11-31	YC054-YN236, YN501-YR328

GROUND LIST

D280A108

91-21-21

Section GD01500

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number		Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
		Bundle						
I GD01637		DC-					266/42/254	ALL

GROUND LIST

D280A108

91-21-21

Section GD01600

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I GD01748		DC				/ /	ALL
I GD01753		DC-				196/171/R012	ALL
I DC..	E	W5156	5510	20		21-27-21	YC051-YD158, YL951-YR328
I DC..	E	W5503	0001	20		34-21-22	ALL
I GD01788		AC-				1033/298/L011	ALL
I AC..	E	W6134	5502	20		30-31-11	YC051-YN236, YN501-YR328
I AC..	E	W6134	5505	20		30-31-12	YC051-YN236, YN501-YR328
I GD01790		ST-				1031/298/L011	ALL
I GD01792		ST-				69 FIN/ /	ALL
I ST..	E	W7102	2001Z			30-31-11	ALL
I GD01794		ST-				69 FIN/ /	ALL
I ST..	E	W7102	2002Z			30-31-12	ALL

GROUND LIST

D280A108

91-21-21

Section GD01700

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

	Ground No.	Type	Part Number	Wire No.	GA	CO	Station / WL / BL	Effectivity
	Term		Bundle				Diagram	
I	GD01800		AC-				//	ALL
I	GD01814		BACC50AN20				AB1088/ //	ALL
I	GD01816		ST-				//	ALL
I	GD01818		DC-				//	ALL
I	GD01820		AC-				1064/285/L036	ALL
I	GD01822		AC-				//	ALL
I	GD01826		AC-				1166/243/R014	ALL
I	GD01828		DC-				//	ALL
I	GD01830		ST-				//	ALL
I	GD01832		DC-				//	ALL
I	GD01835		ST-				237/202/L006	ALL
I	ST..	E	W5353	0001	22		22-31-31	ALL
I	ST..	E	W5353	0004	22		22-31-31	ALL
I	GD01836		DC-				237/201/L006	ALL
I	DC..	E	W5353	0002	22		22-31-31	ALL
I	GD01837		DC-				237/201/R006	ALL
I	DC..	E	W5397	0002	22		22-31-41	ALL
I	GD01838		ST-				237/202/R006	ALL
I	ST..	E	W5397	0001	22		22-31-41	ALL
I	ST..	E	W5397	0004	22		22-31-41	ALL
I	GD01840		AC-				//	ALL
I	GD01850		DC-				P018-00/ //	ALL
I	DC..	E	W0018	0894	22		27-32-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD01800

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I GD01904		DC-				* */*	ALL
I GD01906		BACC50AN20				//	ALL
I GD01910		BACC50AN20				//	ALL
I GD01914		ST				285/189/L017	ALL
I ST..	E	W6110	5513	20		21-42-11	ALL
I GD01916		BACC50AN20				//	ALL
I GD01946		AC-				//	ALL
I GD01948		AC-				702/201/L062	YC051-YD152
I GD01948		AC-				673/199/L057	YD153-YR328
I AC..	E	W7026	0515	18		33-32-11	YC051-YR323, YR325-YR328
I AC..	E	W7126	A-Y			32-64-12	YC051-YD152
I AC..	E	W7230	A-Y			32-64-11	YC051-YR323, YR325-YR328
I GD01950		AC-				701/201/R062	ALL
I AC..	E	W7026	0516	18		33-32-11	YC051-YR323, YR325-YR328
I AC..	E	W8224	A-Y			32-64-12	YC051-YD152
I AC..	E	W8228	A-Y			32-64-11	ALL
I GD01952		AC-				//	ALL
I GD01960		AC-				698/200/R040	YD153-YL963, YN231-YN235
I AC..	E	W8224	A-Y			32-64-12	YD153-YL963, YN231-YN235
I GD01962		AC-				665/196/L059	ALL
I AC..	E	W7126	A-Y			32-64-12	YD153-YL968, YN231-YN236, YN501-YR328
I GD01964		ST-				664/166/L055	YD153-YR328
I ST..	E	W7230	0503	18		29-32-11	YD153-YR323, YR325-YR328
I GD01966		ST-				678/200/R036	ALL
I ST..	E	W8224	0510	20		29-31-11	YD153-YR328

GROUND LIST

D280A108

91-21-21

Section GD01900

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

	Ground No.	Type	Part Number	Wire No.	GA	CO	Station / WL / BL	Effectivity
	Term		Bundle				Diagram	
I	GD01968		ST-				716/197/L007	ALL
I	ST..	E	W8230	0501	18		32-42-11	YD153-YR328

GROUND LIST

D280A108

91-21-21

Section GD01900

Page 2 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD0201A		BACC50AN16				P002-00/ /	ALL
ST..	1	W0001	0012	16		31-62-11	YC051-YD158, YL951-YR328
ST..	1	W0001	0013	16		31-62-11	YC051-YD158, YL951-YR328
ST..	1	W0001	0014	16		31-62-11	YC051-YD158, YL951-YR328
ST..	1	W0001	0015	16		31-62-11	YC051-YD158, YL951-YR328
GD0201B		BACC50AN20				P002-00/ /	ALL
AC..	1A	W0001	0099	20		22-23-12	YC051-YD158, YL951-YL959, YN231-YN235
DC..	1A	W0001	0137	22		32-42-11	YC051-YD158, YL951-YR328
DC..	1A	W0001	0145	22		32-42-11	YC051-YD158, YL951-YR328
DC..	1A	W0001	0146	22		32-42-11	YC051-YD158, YL951-YR328
DC..	1A	W0001	0255	22		29-23-11	YC051-YD158, YL951-YR328
DC..	1A	W0001	0301	22		32-64-11	YC051-YD158, YL951-YR328
DC..	1A	W0001	0306	22		32-64-11	YC051-YD158, YL951-YR328
DC..	1A	W0001	0311	22		32-41-11	YC051-YD158, YL951-YR328
DC..	1A	W0001	0314	22		32-41-11	YC051-YD158, YL951-YR328
GD0201C		BACC50AN20				P002-00/ /	ALL
DC..	1A	W0001	0032	22		31-62-12	YC051-YD158, YL951-YR328
DC..	1A	W0001	0033	22		31-62-12	YC051-YD158, YL951-YR328
DC..	1A	W0001	0048	22		31-62-13	YC051-YD158, YL951-YR328
DC..	1A	W0001	0049	22		31-62-13	YC051-YD158, YL951-YR328
DC..	1A	W0001	0050	22		31-62-13	YC051-YD158, YL951-YR328
DC..	1A	W0001	0051	22		31-62-13	YC051-YD158, YL951-YR328
DC..	1A	W0001	0052	22		31-62-13	YC051-YD158, YL951-YR328
GD0201D		BACC50AN20				P002-00/ /	ALL
DC..	1A	W0003	0548	22		31-62-23	YC051-YD158, YL951-YR328
DC..	1A	W0003	0549	22		31-62-23	YC051-YD158, YL951-YR328
DC..	1A	W0003	0550	22		31-62-23	YC051-YD158, YL951-YR328
DC..	1A	W0003	0551	22		31-62-23	YC051-YD158, YL951-YR328
DC..	1A	W0003	0552	22		31-62-23	YC051-YD158, YL951-YR328
GD02052		AC-				ORSS/208/	YC051-YD152
AC..	E	W7126	0533	18		32-31-12	YC051-YD152
GD02054		AC-				ORSS/166/	ALL
AC..	E	W7126	0521	18		32-64-12	YC051-YD152

GROUND LIST

D280A108

91-21-21

Section GD02000

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD02056		AC-				ORSS/162/	YC051-YD152
AC..	E	W7230	0521	18		32-64-11	YC051-YD152
AC..	E	W7230	0533	18		32-31-11	YC051-YD152
GD02058		AC-				//	ALL
GD02062		AC-				ORSS 208/ /	YC051-YD152
AC..	E	W8224	0541	18		32-31-12	YC051-YD152
GD02064		AC-				IRSS156/ /	ALL
AC..	E	W8224	0523	18		32-64-12	YC051-YD152
GD02066		AC-				IRSS 150/ /	YC051-YD152
AC..	E	W8228	0513	18		32-64-11	YC051-YD152
AC..	E	W8228	0540	18		32-31-11	YC051-YD152
GD02068		AC-				//	ALL
GD02070		AC-				726/196/L034	YD153-YR328
AC..	E	W7126	0521	18		32-64-12	YD153-YL968, YN231-YN236, YN501-YR328
AC..	E	W7126	0533	18		32-31-12	YD153-YL968, YN231-YN236, YN501-YR328
GD02074		AC-				726/197/L047	YD153-YR328
AC..	E	W7230	0521	18		32-64-11	YD153-YR323, YR325-YR328
AC..	E	W7230	0533	18		32-31-11	YD153-YR323, YR325-YR328
GD02076		AC-				726/200/R035	YD153-YR328
AC..	E	W8224	0523	18		32-64-12	YD153-YR328
AC..	E	W8224	0541	18		32-31-12	YD153-YR328
GD02080		AC-				726/196/R036	YD153-YR328
AC..	E	W8228	0513	18		32-64-11	YD153-YR328
AC..	E	W8228	0540	18		32-31-11	YD153-YR328

GROUND LIST

D280A108

91-21-21

Section GD02000

Page 2 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD02102		BACC50AN20				E002-01/ /	ALL
GD02103		BACC50AN20				E002-01/ /	ALL
DC..	1A	W0212	0012	20		24-11-11	ALL
ST..	1A	W0212	0013	20		24-11-11	ALL
GD02104		BACC50AN20				E002-01/ /	ALL
AC..	1A	W0210	5504	20		30-41-11	ALL
DC..	1A	W0210	5506	20		30-41-11	ALL
AC..	1A	W0210	5513	20		30-41-11	ALL
DC..	1A	W0210	5515	20		30-41-11	ALL
DC..	1A	W0212	0026	22		24-22-31	ALL
ST..	1A	W0212	0027	22		24-22-31	ALL
DC..	1A	W0212	0028	22		24-22-31	ALL
DC..	1A	W0212	0068	22		24-23-11	ALL
GD02105		BACC50AN16				E002-01/ /	ALL
ST..	1	W0210	5502	16		30-41-11	ALL
AC..	1	W0210	5503	16		30-41-11	ALL
AC..	1	W0212	0055	18		24-32-11	ALL
GD02106		287A4355-2				E002-01/ /	YC051-YC061
GD02106		CGH20-22-1				E002-01/ /	YC062-YR328
ST..	1F	W0210	2003Z			30-41-11	ALL
ST..	1F	W0210	2004Z			30-41-11	ALL
GD02107		ST-				E002-01/ /	ALL
ST..	E	W0210	5511	12		30-41-11	ALL
GD02108		AC-				E002-01/ /	ALL
AC..	E	W0210	5512	12		30-41-11	ALL
GD02109		BACC50AN20				E002-01/ /	ALL
ST..	1A	W0212	2002Z			24-21-11	ALL
ST..	1A	W0212	3001Z			24-21-11	ALL
GD02110		BACC50AN20				E002-01/ /	ALL
ST..	1A	W0212	4006Z			24-24-31	ALL
GD02112		287A4355-2				E002-01/ /	YC051-YC061

GROUND LIST

D280A108

91-21-21

Section GD02100

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

	Ground No.	Type	Part Number		Wire No.	GA	CO	Station / WL / BL	Effectivity
	Term		Bundle					Diagram	
I	GD02112		CGH20-22-1					E002-01/ /	YC062-YR328
I	ST..	1F	W0210		2001Z			30-41-11	ALL
I	ST..	1F	W0210		2002Z			30-41-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD02100

Page 2 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD02201		BACC50AN20				E002-02/ /	ALL
GD02202		BACC50AN20				E002-02/ /	ALL
GD02203		BACC50AN20				E002-02/ /	ALL
ST..	1A	W0220	0019	20		33-44-11	YC051-YD158, YL951-YR328
ST..	1A	W0220	0052	20		21-31-22	YC051-YD158, YL951-YR328
AC..	1A	W0220	0110	20		49-41-11	YC051-YD158, YL951-YR328
DC..	1A	W0220	0112	20		49-41-11	YC051-YD158, YL951-YR328
AC..	1A	W0220	0126	22		49-41-11	YC051-YD158, YL951-YR328
GD02204		BACC50AN20				E002-02/ /	ALL
DC..	1A	W0220	0051	20		21-31-22	YC051-YD158, YL951-YR328
DC..	1A	W0220	0059	22		21-31-22	YC051-YD158, YL951-YR328
DC..	1A	W0220	0060	22		21-31-22	YC051-YC052, YC054, YC056-YC059, YC065
DC..	1A	W0220	0061	22		21-31-22	YC051-YD158, YL951-YR328
DC..	1A	W0220	0238	22		21-31-22	YC051-YD158, YL951-YR328
DC..	1A	W0220	0239	22		21-31-22	YC051-YC052, YC054, YC056-YC059, YC065
DC..	1A	W0220	1026R	20		26-11-11	YC051-YD158, YL951-YR328
DED		W0220	1026Z			26-11-11	YC051-YD158, YL951-YR328
DC..	1A	W0220	1027R	20		26-11-11	YC051-YD158, YL951-YR328
DED		W0220	1027Z			26-11-11	YC051-YD158, YL951-YR328
DC..	1A	W0220	1033R	20		26-11-21	YC051-YD158, YL951-YR328
DED		W0220	1033Z			26-11-21	YC051-YD158, YL951-YR328
DC..	1A	W0220	1036R	20		26-11-21	YC051-YD158, YL951-YR328
DED		W0220	1036Z			26-11-21	YC051-YD158, YL951-YR328
DC..	1A	W0220	1125R	20		26-11-31	YC051-YD158, YL951-YR328
DED		W0220	1125Z			26-11-31	YC051-YD158, YL951-YR328
DC..	1A	W0220	1126R	20		26-11-31	YC051-YD158, YL951-YR328
DED		W0220	1126Z			26-11-31	YC051-YD158, YL951-YR328
DC..	1A	W0220	1127R	20		26-11-31	YC051-YD158, YL951-YR328
DED		W0220	1127Z			26-11-31	YC051-YD158, YL951-YR328
DC..	1A	W0220	1128R	20		26-11-31	YC051-YD158, YL951-YR328
DED		W0220	1128Z			26-11-31	YC051-YD158, YL951-YR328
GD02205		BACC50AN16				E002-02/ /	ALL
ST..	1	W0220	0124	16		49-41-11	YC051-YD158, YL951-YR328
ST..	1	W0220	0125	16		49-41-11	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD02200

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number		Station / WL / BL		Effectivity
Term	Type	Bundle	Wire No.	GA	CO	
GD02207		BACC50AN20		E002-02/ /		ALL
ST..	1A	W0220	2002Z		24-21-31	YC051-YD158, YL951-YR328
ST..	1A	W0220	3001Z		24-21-31	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD02200

Page 2 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD02300		ST-				653/150/L008	ALL
ST..	GW	W5102	2005Z			21-61-21	YN231-YN236, YN501
ST..	GW	W5102	2006Z			21-61-21	YN231-YN236, YN501
GD02301		DC-				213/208/R036	ALL
DC..	E	W3319	0016	20		23-51-21	YC051-YD157
GD02302		ST-				661/156/L016	ALL
ST..	GW	W5102	1013Z			26-12-11	YC051-YN236, YN501-YR328
ST..	GW	W5102	1025Z			26-12-11	YC051-YN236, YN501-YR328
GD02303		DC-				214/208/L038	YC051-YD170
DC..	E	W3323	0016	20		23-51-11	YC051-YD157
GD02304		ST-				661/165/L025	ALL
ST..	GW	W5230	YAAF			29-11-12	YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
GD02306		AC				536/158/R027	ALL
AC..	GW	W6202	0010	20		33-33-11	YN231-YN501
AC..	GW	W6202	0011	20		33-33-11	YN231-YN501
AC..	GW	W6202	5556	20		30-71-11	ALL
AC..	GW	W6202	5557	20		30-71-11	ALL
GD02308		ST-				579/161/L039	ALL
ST..	GW	W5102	1002Z			21-51-15	YN231-YN236, YN501
ST..	GW	W5102	1003Z			21-51-15	YN231-YN236, YN501
ST..	GW	W5102	2001Z			21-51-14	YN231-YN236, YN501
GD02310		ST-				571/166/L030	YN231-YN501
ST..	GW	W5102	1010Z			21-51-16	YN231-YN236, YN501
ST..	GW	W5102	2003Z			21-51-16	YN231-YN236, YN501
GD02312		ST-				578.5/153/L039	ALL
ST..	GW	W5102	1001Z			21-51-15	YN231-YN236, YN501
ST..	GW	W5102	1005Z			21-51-15	YN231-YN236, YN501
GD02314		ST-				570/153/L039	ALL
ST..	GW	W5102	1008Z			21-51-16	YN231-YN236, YN501
ST..	GW	W5102	1009Z			21-51-16	YN231-YN236, YN501

GROUND LIST

D280A108

91-21-21

Section GD02300

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD02314		ST- (continued)				570/153/L039	ALL
ST..	GW	W5102	2003Z			21-51-16	YN231-YN236, YN501
GD02316		DC-				572/155/L039	ALL
DC..	GW	W5102	1003	20		21-51-15	YN231-YN236, YN501
DC..	GW	W5102	1003Z			21-51-15	YN231-YN236, YN501
DC..	GW	W5102	1005	20		21-51-15	YC051-YN236, YN501-YR328
DC..	GW	W5102	1005Z			21-51-15	YC051-YN236, YN501-YR328
ST..	GW	W5102	1006Z			21-51-14	YN231-YN236, YN501
ST..	GW	W5102	1007Z			21-51-14	YN231-YN236, YN501
DC..	GW	W5102	1014Z			26-12-11	YC051-YN236, YN501-YR328
DC..	GW	W5102	1034	20		21-51-15	YC051-YL999, YR301-YR328
DC..	GW	W5102	1034Z			21-51-15	YC051-YL999, YR301-YR328
DC..	GW	W5102	1050	20		21-61-51	YC051-YL999, YR301-YR328
DC..	GW	W5102	1050Z			21-61-51	YC051-YL999, YR301-YR328
ST..	GW	W5102	2001Z			21-51-14	YN231-YN236, YN501
ST..	GW	W5102	2002Z			21-51-14	YN231-YN236, YN501
GD02318		ST-				544/155/L040	ALL
ST..	GW	W5102	1016Z			33-33-11	YC051-YN236, YN501-YR328
ST..	GW	W5102	1017Z			33-33-11	YC051-YN236, YN501-YR328
ST..	GW	W5102	1018Z			33-33-11	YC051-YN236, YN501-YR328
ST..	GW	W5102	1019Z			33-33-11	YC051-YN236, YN501-YR328
ST..	N	W7202	0021	16		47-30-11	YL951-YL999, YN232-YR328
ST..	N	W7202	0025	16		47-30-11	YL951-YL999, YN232-YR328
GD02320		ST-				537/161/L032	ALL
ST..	GW	W5102	1015Z			26-12-11	YC051-YN236, YN501-YR328
ST..	GW	W5102	1030Z			36-21-11	YC051-YN236, YN501-YR328
ST..	GW	W5102	2007Z			36-21-11	YC051-YN236, YN501-YR328
ST..	GW	W5102	5515	20		36-21-11	YC051-YN236, YN501-YR328
GD02322		AC-				537/157/L027	ALL
AC..	GW	W5102	0011	20		33-33-11	YN231-YN236, YN501
AC..	GW	W5102	0012	20		33-33-11	YC051-YN236, YN501-YR328
GD02324		ST-				545/154/L008	YC051-YL999, YR301-YR328
ST..	GW	W5502	0006	20		21-61-11	YC051-YL999, YR301-YR328
ST..	GW	W5502	1035Z			21-61-11	YD154-YL999, YR301-YR328
ST..	GW	W5502	1037Z			21-61-11	YD154-YL999, YR301-YR328
ST..	GW	W5502	1038Z			21-61-11	YD154-YL999, YR301-YR328

GROUND LIST

D280A108

91-21-21

Section GD02300

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD02324		ST- (continued)				545/154/L008	YC051-YL999, YR301-YR328
ST..	GW	W5502	1039Z			21-61-11	YD154-YL999, YR301-YR328
ST..	GW	W5502	2083Z			21-61-11	YD154-YL999, YR301-YR328
ST..	GW	W5502	2084Z			21-61-11	YD154-YL999, YR301-YR328
ST..	GW	W5502	FRAB			21-61-11	YC051-YD153
GD02326		ST				571/163/L007	ALL
ST..	GW	W5502	1010Z			26-12-11	ALL
GD02328		ST-				578/156/L007	ALL
ST..	GW	W5502	1001Z			21-42-11	YC051-YD152
ST..	GW	W5502	1002Z			21-51-11	ALL
ST..	GW	W5502	1003Z			21-51-11	YC051-YD152
ST..	GW	W5502	1004Z			21-51-11	ALL
ST..	GW	W5502	1005Z			21-51-11	YC051-YD152
ST..	GW	W5502	1006Z			21-51-11	ALL
ST..	GW	W5502	2001Z			21-51-11	YN231-YN501
ST..	GW	W5502	2002Z			21-51-11	ALL
GD02330		ST-				602/152/L007	ALL
ST..	GW	W5502	1010Z			26-12-11	ALL
ST..	GW	W5502	1011Z			26-12-11	ALL
GD02332		ST-				653/151/R008	ALL
ST..	GW	W6202	2004Z			21-61-22	YN231-YN501
GD02334		ST-				661/156/R016	ALL
ST..	GW	W6202	1008Z			26-12-11	ALL
ST..	GW	W6202	1009Z			26-12-11	ALL
GD02336		ST-				661/162/R030	ALL
ST..	GW	W6128	YAAF			29-11-12	YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
ST..	E	W8122	YAAF			27-81-51	YC051-YD158, YL951-YR323, YR325-YR328
GD02338		ST-				655/165/R041	ALL
ST..	GW	W6202	1011Z			27-83-11	ALL
ST..	GW	W6202	1012Z			27-83-11	ALL
ST..	GW	W6202	1013Z			27-83-21	ALL

GROUND LIST

D280A108

91-21-21

Section GD02300

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD02338		ST- (continued)				655/165/R041	ALL
ST..	GW	W6202	1029Z			27-83-21	ALL
GD02340		ST-				580/162/R040	ALL
ST..	GW	W6202	1025Z			21-51-25	YN231-YN501
ST..	GW	W6202	1026Z			21-51-25	YN231-YN501
ST..	GW	W6202	2002Z			21-51-24	YN231-YN501
GD02342		ST-				571/166/R030	ALL
ST..	GW	W6202	1006Z			21-51-26	YN231-YN501
ST..	GW	W6202	2006Z			21-51-26	YN231-YN501
GD02344		DC-				570/156/R040	ALL
DC..	GW	W6202	0014	20		21-51-25	ALL
DC..	GW	W6202	0015	20		21-51-25	YC051-YL999, YR301-YR328
DC..	GW	W6202	0016	20		21-61-51	YC051-YL999, YR301-YR328
DC..	GW	W6202	1001Z			21-51-24	YN231-YN501
DC..	GW	W6202	1002Z			21-51-24	YN231-YN501
DC..	GW	W6202	1010Z			26-12-11	ALL
DC..	GW	W6202	1026	20		21-51-25	YN231-YN501
DC..	GW	W6202	1026Z			21-51-25	YN231-YN501
DC..	GW	W6202	1027Z			21-51-25	ALL
DC..	GW	W6202	1034Z			21-51-25	YC051-YL999, YR301-YR328
DC..	GW	W6202	1049Z			21-61-51	YC051-YL999, YR301-YR328
DC..	GW	W6202	2001Z			21-51-24	YN231-YN501
DC..	GW	W6202	2002Z			21-51-24	YN231-YN501
DC..	GW	W6202	2079Z			21-51-22	YC051-YL999, YR301-YR328
DC..	GW	W6202	2080Z			21-51-23	YC051-YL999, YR301-YR328
GD02346		ST-				570/156/R039	ALL
GD02348		ST-				551/155/R033	ALL
GD02350		ST-				544/155/R035	ALL
ST..	GW	W6202	1014Z			33-33-11	ALL
ST..	GW	W6202	1015Z			33-33-11	ALL
ST..	GW	W6202	1016Z			33-33-11	ALL
ST..	GW	W6202	1017Z			33-33-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD02300

Page 4

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD02352		ST-				537/161/R032	ALL
ST..	GW	W6202	1010Z			26-12-11	ALL
ST..	GW	W6202	1030Z			36-21-11	ALL
ST..	GW	W6202	2007Z			36-21-11	ALL
ST..	GW	W6202	5515	20		36-21-11	ALL
GD02354		ST-				537/155/R027	ALL
ST..	GW	W6202	1018Z			30-71-11	ALL
ST..	GW	W6202	1038Z			21-61-13	YD154-YL999, YR301-YR328
ST..	GW	W6202	1039Z			21-61-13	YD154-YL999, YR301-YR328
ST..	GW	W6202	1040Z			21-61-13	YD154-YL999, YR301-YR328
ST..	GW	W6202	1041Z			21-61-13	YD154-YL999, YR301-YR328
ST..	GW	W6202	2083Z			21-61-13	YD154-YL999, YR301-YR328
ST..	GW	W6202	2084Z			21-61-13	YD154-YL999, YR301-YR328
ST..	GW	W6202	5564	20		21-61-13	YC051-YL999, YR301-YR328
ST..	GW	W6202	5567	20		21-61-14	YC051-YL999, YR301-YR328
GD02356		ST-				571/162/R007	ALL
ST..	GW	W6502	1003Z			26-12-11	ALL
GD02358		ST-				578/155/R007	ALL
ST..	GW	W6502	1006Z			21-51-21	ALL
ST..	GW	W6502	1007Z			21-51-21	ALL
ST..	GW	W6502	1008Z			21-51-21	ALL
ST..	GW	W6502	2001Z			21-51-21	ALL
ST..	GW	W6502	2002Z			21-51-21	ALL
ST..	GW	W6502	5501	20		21-61-15	YC051-YL999, YR301-YR328
GD02360		ST-				578/161/R007	ALL
ST..	GW	W6502	1001Z			21-42-11	YC051-YD152
ST..	GW	W6502	1004Z			21-51-21	YC051-YD152
ST..	GW	W6502	1005Z			21-51-21	YC051-YD152
ST..	GW	W6504	1001Z			21-51-21	YD153-YR328
ST..	GW	W6504	1002Z			21-42-11	YD153-YR328
ST..	GW	W6504	1003Z			21-51-21	YD153-YR328
GD02362		ST-				570/153/R040	ALL
ST..	GW	W6202	1005Z			21-51-26	YN231-YN501
ST..	GW	W6202	1007Z			21-51-26	YN231-YN501
ST..	GW	W6202	2006Z			21-51-26	YN231-YN501

GROUND LIST

D280A108

91-21-21
Section GD02300
Page 5 End
Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number		Station / WL / BL			Effectivity
Term	Type	Bundle	Wire No.	GA	CO	Diagram	
I	GD02552	BACC50AN16				728/155/L011	YC051-YL999, YR301-YR328
I	DC..	1	W5112	0007	20	25-51-21	YC051-YL999, YR301-YR328
I	AC..	1	W5112	0008	16	25-51-21	YC051-YL999, YR301-YR328
I	AC..	1	W5112	0009	16	25-51-21	YC051-YL999, YR301-YR328
I	ST..	1	W5112	0010	16	25-51-21	YC051-YL999, YR301-YR328
I	GD02564	AC-				1087/244/L003	ALL
I	AC..	R	W4722	0004	04	24-21-31	ALL

GROUND LIST

D280A108

91-21-21

Section GD02500

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD02813		YHLZG16-1				E006-01/ /	YC051-YN260
ST..	2	W0321	2053Z			23-32-21	YC051-YD170
ST..	2	W0321	2054Z			23-32-21	YC051-YD157
ST..	2	W0321	2056Z			34-21-14	YC051-YD170
ST..	2	W0321	2057Z			34-61-14	YC051-YC055
ST..	2	W0321	2057Z			34-61-15	YC056-YD170
ST..	2	W0321	2058Z			34-21-13	YC051-YD170
ST..	2	W0321	2059Z			23-32-21	YC051-YD157
ST..	2	W0321	2060Z			23-27-15	YC051-YD157
ST..	2	W0321	2060Z			23-27-34	YD158-YD170
ST..	2	W0321	2061Z			23-32-21	YC051-YD170
ST..	2	W0321	2078Z			23-32-21	YC051-YD170
ST..	2	W0321	2304Z			34-61-18	YC051-YC058
ST..	2	W0321	2304Z			31-32-15	YC059-YD157
ST..	2	W0411	2642Z			34-61-15	YL951-YN260
ST..	2	W0411	2646Z			23-32-21	YL951-YN260
ST..	2	W0411	2647Z			23-32-21	YL951-YN260
ST..	2	W0411	2650Z			34-21-14	YL951-YN260
ST..	2	W0411	2651Z			34-21-13	YL951-YN260
ST..	2	W0411	2695Z			23-32-21	YL951-YN260
ST..	2	W0411	2697Z			23-32-21	YL951-YN260

GROUND LIST

D280A108

91-21-21

Section GD02800

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

	Ground No.	Type	Part Number		Wire No.	GA	CO	Station / WL / BL	Effectivity
	Term		Bundle					Diagram	
I	GD02994		ST-					RUD56.4/ /	ALL
I	ST..	E	W6136	0508		20		27-25-11	YC051-YD158, YL951-YR328
I	ST..	E	W6136	1008		20		27-21-11	YC051-YD158, YL951-YR328
I	ST..	E	W6136	1008Z				27-21-11	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD02900

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I GD03002		BACC50AN16				579/251/L 66	YC051-YL999, YR301-YR328
I GD03004		BACC50AN16				560/229/L 69	YC051-YL999, YR301-YR328
I GD03006		BACC50AN16				595/256/L 68	ALL
I GD03014		BACC50AN16				601/259/L 67	YC051-YL999, YR301-YR328
I GD03016		BACC50AN16				560/229/R 69	YC051-YL999, YR301-YR328
I GD03018		BACC50AN16				578/259/R 67	YC051-YL999, YR301-YR328
I GD0301A		BACC50AN16				P003-00/ /	ALL
I ST..	1	W0003	0502	16		31-62-21	YC051-YD158, YL951-YR328
I ST..	1	W0003	0503	16		31-62-21	YC051-YD158, YL951-YR328
I ST..	1	W0003	0504	16		31-62-21	YC051-YD158, YL951-YR328
I ST..	1	W0003	0505	16		31-62-21	YC051-YD158, YL951-YR328
I ST..	1	W0003	0507	16		31-62-21	YC051-YD158, YL951-YR328
I ST..	1	W0003	0508	16		31-62-21	YC051-YD158, YL951-YR328
I ST..	1	W0003	0509	16		31-62-21	YC051-YD158, YL951-YR328
I ST..	1	W0003	0510	16		31-62-21	YC051-YD158, YL951-YR328
I GD0301B		BACC50AN20				P003-00/ /	ALL
I ST..	1A	W0003	0516	20		31-62-21	YC051-YD158, YL951-YR328
I DC..	1A	W0003	0578	20		22-14-11	YC051-YD158, YL951-YR328
I DC..	1A	W0003	0604	22		34-61-16	YC051-YD158, YL951-YR328
I DC..	1A	W0003	0628	22		34-49-11	YC051-YD158, YL951-YR328
I DC..	1A	W0003	0631	22		34-49-11	YC051-YD158, YL951-YR328
I DC..	1A	W0003	0634	22		34-49-11	YC051-YD158, YL951-YR328
I ST..	1A	W0003	0642	20		31-22-11	YC051-YD158, YL951-YR328
I DC..	1A	W0003	0643	20		31-22-11	YC051-YD158, YL951-YR328
I DC..	1A	W0003	2515B	24		29-32-11	YC051-YD158, YL951-YR328
I ST..	1A	W0003	2515Z			29-32-11	YC051-YD158, YL951-YR328
I DC..	1A	W0003	2516B	24		29-32-11	YC051-YD158, YL951-YR328
I ST..	1A	W0003	2516Z			29-32-11	YC051-YD158, YL951-YR328
I GD0301C		BACC50AN20				P003-00/ /	ALL
I DC..	1A	W0003	0534	22		31-62-22	YC051-YD158, YL951-YR328
I DC..	1A	W0003	0535	22		31-62-22	YC051-YD158, YL951-YR328
I DC..	1A	W0003	0546	22		31-62-23	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD03000

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD0301C		BACC50AN20 (continued)				P003-00/ /	ALL
DC..	1A	W0003	0547	22		31-62-23	YC051-YD158, YL951-YR328
GD0301D		BACC50AN20				P003-00/ /	ALL
DC..	1A	W0001	0046	22		31-62-13	YC051-YD158, YL951-YR328
DC..	1A	W0001	0047	22		31-62-13	YC051-YD158, YL951-YR328
DC..	1A	W0003	0536	22		31-62-22	YC051-YD158, YL951-YR328
DC..	1A	W0003	0537	22		31-62-22	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD03000

Page 2 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03101		BACC50AN20				E003-01/ /	ALL
AC..	1A	W0311	0151	20		34-33-11	ALL
ST..	1A	W0311	0152	20		34-33-11	ALL
DC..	1A	W0311	0156	22		34-33-11	ALL
DC..	1A	W0311	0157	22		34-33-11	ALL
GD03102		BACC50AN20				E003-01/ /	ALL
AC..	1A	W0311	0143	20		34-57-11	ALL
ST..	1A	W0311	0144	20		34-57-11	ALL
DC..	1A	W0311	0145	22		34-57-11	ALL
GD03103		BACC50AN16				E003-01/ /	ALL
ST..	1	W0311	0010	16		31-62-11	ALL
ST..	1	W0311	0011	16		31-62-11	ALL
DC..	1	W0311	0025	22		31-62-41	ALL
DC..	1	W0311	0026	22		31-62-41	ALL
DC..	1	W0311	0171	22		31-62-41	ALL
GD03104		BACC50AN16				E003-01/ /	ALL
ST..	1	W0313	0510	16		31-62-21	ALL
ST..	1	W0313	0511	16		31-62-21	ALL
DC..	1	W0313	0525	22		31-62-41	ALL
DC..	1	W0313	0526	22		31-62-41	ALL
DC..	1	W0313	0672	22		31-62-41	ALL
GD03105		BACC50AN20				E003-01/ /	ALL
AC..	1A	W0313	0643	20		34-57-21	ALL
ST..	1A	W0313	0644	20		34-57-21	ALL
DC..	1A	W0313	0645	22		34-57-21	ALL

GROUND LIST

D280A108

91-21-21

Section GD03100

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03200		BACC50AN20				378/157/L029	ALL
ST..	1A	W5110	0531	20		24-31-12	ALL
ST..	1A	W5110	0539	20		24-31-12	ALL
AC..	1A	W5112	4101G	20		24-21-11	ALL
AC..	1A	W6110	0050	20		33-34-11	ALL
AC..	1A	W6110	0060	20		33-34-11	ALL
DC..	1A	W6110	0516	20		24-51-11	ALL
ST..	1A	W6210	0521	20		24-31-11	ALL
DC..	1A	W6214	5552	20		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328
DC..	1A	W6214	5554	20		21-61-51	YC051-YL999, YR301-YR323, YR325-YR328
GD03201		BACC50AN20				E003-02/ /	ALL
AC..	1A	W0321	0036	22		31-31-14	ALL
AC..	1A	W0321	0043	22		31-31-14	ALL
AC..	1A	W0321	0128	22		27-32-11	ALL
DC..	1A	W0321	0130	22		27-32-11	ALL
DC..	1A	W0321	0148	22		27-32-11	ALL
DC..	1A	W0321	0169	22		22-23-11	ALL
DC..	1A	W0321	0286	20		27-32-21	ALL
AC..	1A	W0321	0300	20		23-34-01	YL951-YN260
ST..	1A	W0321	0301	20		23-34-01	YL951-YN260
DC..	1A	W0321	0377	22		27-32-11	ALL
DC..	1A	W0321	0381	20		23-32-21	YC051-YD170
ST..	1A	W0321	0387	22		23-32-21	YC051-YD170
ST..	1A	W0321	0389	20		23-32-21	YC051-YD157
DC..	1A	W0321	0450	22		27-32-11	YC051-YD157, YL953-YL999, YR301-YR328
DC..	1A	W0321	0466	22		27-32-21	YC051-YD157, YL953-YR328
AC..	1A	W0321	0476	22		31-31-14	YD154-YD158, YL951-YR328
AC..	1A	W0321	0603	20		22-23-12	ALL
GD03202		BACC50AN20				E003-02/ /	ALL
DC..	1A	W0321	0246	22		22-23-11	ALL
AC..	1A	W0321	0252	22		27-32-21	ALL
AC..	1A	W0321	0255	22		27-32-21	ALL
DC..	1A	W0321	0257	22		27-32-21	ALL
AC..	1A	W0321	0366	24		31-31-14	YC053-YR328
AC..	1A	W0321	0367	24		31-31-14	YC053-YR328
DC..	1A	W0321	0493	22		27-32-21	ALL

GROUND LIST

D280A108

91-21-21

Section GD03200

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03202		BACC50AN20 (continued)				E003-02/ /	ALL
AC..	1A	W0321	2023B	22		31-31-14	ALL
AC..	1A	W0321	2152B	22		31-31-14	ALL
AC..	1A	W0321	2160B	22		31-31-14	ALL
GD03203		BACC50AN20				E003-02/ /	ALL
AC..	1A	W0321	0046	22		31-31-14	ALL
AC..	1A	W0321	0053	22		31-31-14	ALL
DC..	1A	W0321	0307	20		78-34-21	ALL
DC..	1A	W0321	0322	20		78-34-11	ALL
AC..	1A	W0321	0375	22		27-24-11	ALL
AC..	1A	W0321	0606	20		27-24-11	ALL
DC..	1A	W0321	0707	20		78-36-11	ALL
ST..	1A	W0321	0708	20		78-36-11	ALL
DC..	1A	W0321	0710	20		78-36-21	ALL
ST..	1A	W0321	0711	20		78-36-21	ALL
AC..	1A	W0321	0771	24		77-31-11	ALL
AC..	1A	W0321	0772	24		77-31-11	ALL
DC..	1A	W0321	0773	24		77-31-11	ALL
ST..	1A	W0321	0774	24		77-31-21	ALL
GD03204		BACC50AN20				E003-02/ /	ALL
AC..	1A	W0321	0002	22		31-31-11	ALL
DC..	1A	W0321	0003	22		31-31-11	ALL
DC..	1A	W0321	0004	22		31-31-11	ALL
DC..	1A	W0321	0005	22		31-31-11	ALL
DC..	1A	W0321	0006	22		31-31-11	ALL
AC..	1A	W0321	0035	22		31-31-14	ALL
AC..	1A	W0321	0042	22		31-31-14	ALL
AC..	1A	W0321	0045	22		31-31-14	ALL
AC..	1A	W0321	0052	22		31-31-14	ALL
AC..	1A	W0321	0091	24		27-18-11	ALL
AC..	1A	W0321	0127	20		27-32-11	ALL
DC..	1A	W0321	0165	22		31-31-11	ALL
AC..	1A	W0321	0254	20		27-32-21	ALL
AC..	1A	W0321	0475	22		31-31-14	YD154-YR328
GD03205		BACC50AN20				E003-02/ /	ALL
AC..	1A	W0321	0131	22		27-32-11	ALL
AC..	1A	W0321	0261	22		22-23-12	ALL
ST..	1A	W0321	0341	20		34-33-21	ALL

GROUND LIST

D280A108

91-21-21

Section GD03200

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03205		BACC50AN20 (continued)				E003-02/ /	ALL
AC..	1A	W0321	0343	20		34-33-21	ALL
DC..	1A	W0321	0352	22		34-33-21	ALL
DC..	1A	W0321	0353	22		34-33-21	ALL
GD03207		287A4355-2				E003-02/ /	YC051-YC061
GD03207		CGH20-22-1				E003-02/ /	YC062-YR328
DC..	1F	W0321	0186	22		27-32-11	ALL
DC..	1F	W0321	0187	22		27-32-11	ALL
ST..	1F	W0321	2025Z			27-32-12	ALL
ST..	1F	W0321	2029Z			34-21-14	ALL
ST..	1F	W0321	2047Z			34-21-23	ALL
ST..	1F	W0321	2166Z			34-21-13	ALL
ST..	1F	W0321	2167Z			34-61-14	ALL
ST..	1F	W0321	2211Z			22-11-51	ALL
ST..	1F	W0321	2221Z			22-23-12	ALL
ST..	1F	W0321	2222Z			22-23-12	ALL
ST..	1F	W0321	2716Z			31-62-15	ALL
GD03209		287A4355-2				E003-02/ /	YC051-YC061
GD03209		CGH20-22-1				E003-02/ /	YC062-YR328
DC..	1F	W0321	0129	22		27-32-11	ALL
DC..	1F	W0321	0188	22		27-32-11	ALL
ST..	1F	W0321	2062Z			22-23-11	ALL
ST..	1F	W0321	2063Z			22-23-11	ALL
ST..	1F	W0321	2223Z			22-23-12	ALL
ST..	1F	W0321	2505Z			27-32-11	ALL
ST..	1F	W0321	3225Z			22-23-12	ALL
GD03211		287A4355-2				E003-02/ /	YC051-YC061
GD03211		CGH20-22-1				E003-02/ /	YC062-YR328
DC..	1F	W0321	0190	22		27-32-21	ALL
DC..	1F	W0321	0191	22		27-32-21	ALL
ST..	1F	W0321	2027Z			27-32-22	ALL
ST..	1F	W0321	2048Z			34-21-23	ALL
ST..	1F	W0321	2165Z			34-21-13	ALL
ST..	1F	W0321	2168Z			34-61-14	ALL
ST..	1F	W0321	2170Z			34-21-24	ALL
ST..	1F	W0321	2212Z			22-11-51	ALL
ST..	1F	W0321	2507Z			27-32-21	ALL
ST..	1F	W0321	2709Z			22-23-12	ALL

GROUND LIST

D280A108

91-21-21

Section GD03200

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03211		287A4355-2 (continued)				E003-02/ /	YC051-YC061
GD03211		CGH20-22-1 (continued)				E003-02/ /	YC062-YR328
ST..	1F	W0321	2719Z			22-23-12	ALL
ST..	1F	W0321	2750Z			31-62-25	ALL
GD03213		287A4355-2				E003-02/ /	YC051-YC061
GD03213		CGH20-22-1				E003-02/ /	YC062-YR328
DC..	1F	W0321	0189	22		27-32-21	ALL
DC..	1F	W0321	0256	22		27-32-21	ALL
ST..	1F	W0321	2062Z			22-23-11	ALL
ST..	1F	W0321	2063Z			22-23-11	ALL
ST..	1F	W0321	2720Z			27-24-11	ALL
ST..	1F	W0321	3721Z			27-24-11	ALL
GD03234		ST-				520/154/R018	YC051-YL999, YR301-YR328
ST..	E	W6230	0328	14		21-25-11	YC051-YL999, YR301-YR323, YR325-YR328
GD03250		DC-				547/159/L007	ALL
DC..	GW	W5502	0005	20		34-61-17	ALL
DC..	GW	W5502	1007Z			36-11-11	ALL
DC..	GW	W5502	1008Z			34-61-17	ALL
DC..	GW	W5502	1038	20		21-61-11	YC051-YL999, YR301-YR328
DC..	GW	W5502	1038Z			21-61-11	YC051-YL999, YR301-YR328
DC..	GW	W5502	4001Z			36-11-11	ALL
GD03252		DC-				361/153/L002	ALL
DC..	H8	W2532	0502	*1		24-31-11	ALL
DC..	H8	W2532	0516	*1		49-41-11	ALL
DC..	H8	W2532	2201B	24		24-31-11	YC051-YD170, YN231
DC..	H8	W2532	2201B	20		24-31-11	YL951-YL959, YN232-YN235
DC..	H	W2532	2201B	20		24-31-11	YL963-YL999, YN236-YR328
GD03254		BACC50AN20				520/154/R017	ALL
DC..	1A	W6230	0327	20		21-25-11	YC051-YL999, YR301-YR323, YR325-YR328
DC..	1A	W6230	5527	20		21-25-11	YN231-YN501
DC..	1A	W6528	0309	20		21-51-25	YC051-YL999, YR301-YR328

GROUND LIST

D280A108

91-21-21

Section GD03200

Page 4

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number		Station / WL / BL		Effectivity
Term	Type	Bundle	Wire No.	GA	CO	
GD03256		DC-		368/153/L016		ALL
DC..	H8	W2532	0531	*1	24-31-12	ALL
DC..	H8	W2532	2202B	24	24-31-12	YC051-YD170, YN231
DC..	H8	W2532	2202B	20	24-31-12	YL951-YL959, YN232-YN235
DC..	H	W2532	2202B	20	24-31-12	YL963-YL999, YN236-YR328
GD03258		ST		520/154/L017		YC051-YL999, YR301-YR328
ST..	E	W5104	0327	14	21-25-11	YC051-YL999, YR301-YR323, YR325-YR328

GROUND LIST

D280A108

91-21-21

Section GD03200

Page 5 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03303		BACC50AN20				E003-03/ /	ALL
AC..	1A	W0330	0313	22		21-51-12	YC051-YL999, YR301-YR323, YR325-YR328
DC..	1A	W0330	0316	22		21-51-12	YC051-YL999, YR301-YR323, YR325-YR328
ST..	1A	W0330	0319	20		21-51-12	YC051-YL999, YR301-YR323, YR325-YR328
AC..	1A	W0330	0332	22		21-51-14	YC051-YL999, YR301-YR323, YR325-YR328
DC..	1A	W0331	0063	20		23-27-11	YC051-YD157
DC..	1A	W0331	0067	22		23-27-11	YC051-YD157
DC..	1A	W0331	0070	24		23-27-11	YC051-YD157
DC..	1A	W0331	0075	24		23-27-11	YC051-YD157
DC..	1A	W0331	0076	22		23-27-12	YC051-YD157
DC..	1A	W0331	0105	22		23-12-31	ALL
DC..	1A	W0331	0106	22		23-12-31	ALL
DC..	1A	W0331	0341	22		31-35-03	YN236-YR328
DC..	1A	W0331	0345	22		31-35-03	YN236-YR328
DC..	1A	W0331	0470	22		23-12-31	YD158-YR328
DC..	1A	W0331	0548	22		31-35-03	YN236-YR328
GD03304		BACC50AN20				E003-03/ /	YC051-YL999, YN236-YR328
AC..	1A	W0330	0349	22		21-51-22	YC051-YL999, YR301-YR323, YR325-YR328
DC..	1A	W0330	0352	22		21-51-22	YC051-YL999, YR301-YR323, YR325-YR328
ST..	1A	W0330	0355	20		21-51-22	YC051-YL999, YR301-YR323, YR325-YR328
AC..	1A	W0330	0370	22		21-51-24	YC051-YL999, YR301-YR323, YR325-YR328
AC..	1A	W0331	0061	20		23-27-11	YC051-YD157
AC..	1A	W0331	0064	20		23-27-11	YC051-YD157
AC..	1A	W0331	0339	20		31-35-03	YN236-YR328
GD03305		BACC50AN16				E003-03/ /	ALL
DC..	1	W0331	0104	16		23-12-31	ALL
GD03308		DC-				368/153/L019	ALL
DC..	F8	W2532	0532	02		24-31-12	ALL

GROUND LIST

D280A108

91-21-21

Section GD03300

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I GD03316		AC-				213/208/R036	ALL
I AC..	E	W2204	5513	20		33-11-21	ALL
I AC..	E	W2204	5535	20		33-17-11	ALL
I GD03356		AC-				//	ALL
I GD03358		BACC50AN16				499/203/L026	YC051-YD157
I DC..	1	W4142	0050	20		33-51-21	YC051-YD157
I DC..	1	W4142	0150	20		33-51-21	YC051-YD157
I GD03366		ST-				//	ALL
I GD03372		BACC50AN16				847/220/L069	YD158-YR328
I DC..	1	W3142	0468	20		33-51-22	YD158-YN260, YR301-YR328
I DC..	1	W3142	0468	16		33-51-22	YN501
I DC..	1	W3142	0469	16		33-51-22	YD158-YL999, YR301-YR328
I DC..	1	W3142	0469	20		33-51-22	YN231-YN501

GROUND LIST

D280A108

91-21-21

Section GD03300

Page 2 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number		Wire No.	GA	CO	Station / WL / BL	Effectivity
Term	Type	Bundle					Diagram	
I	GD03404		BACC50AN16				387/170/R048	ALL
	AC..	1	W5115	0002	20		23-34-01	YL951-YL968, YN231-YN236
I	AC..	1	W5115	0002	20		44-21-26	YN501-YR328
	ST..	1	W5115	0003	20		23-34-01	YL951-YL968, YN231-YN236
I	ST..	1	W5115	0003	20		44-21-26	YN501-YR328
I	ST..	1	W6210	2202B	22		24-41-11	ALL
I	AC..	1	W6210	4101G	20		24-21-21	ALL
I	ST..	1	W6210	4102G	22		24-41-11	ALL
I	GD03448		BACC50AN16				827/205/L030	ALL

GROUND LIST

D280A108

91-21-21

Section GD03400

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03704		BACC50AN20				J020-0A/ /	ALL
DC..	1A	W0074	0187	22		21-31-22	YC053, YC055, YC060-YC064, YC067-YR328
DC..	1A	W0074	0188	22		21-31-22	YC053, YC055, YC060-YC064, YC067-YR328
DC..	1A	W0074	0189	22		21-31-22	YC053, YC055, YC060-YC064, YC067-YR328
DC..	1A	W0074	0190	22		21-31-22	YC053, YC055, YC060-YC064, YC067-YR328
DC..	1A	W0074	0191	22		21-31-22	YC053, YC055, YC060-YC064
DC..	1A	W0074	0191	20		21-31-22	YC067-YR328
DC..	1A	W0074	0197	22		21-31-23	YC053, YC055, YC060-YC064, YC067-YR328
DC..	1A	W0074	0198	22		21-31-23	YC053, YC055, YC060-YC064, YC067-YR328
DC..	1A	W0074	0199	22		21-31-23	YC053, YC055, YC060-YC064, YC067-YR328
DC..	1A	W0074	0200	22		21-31-23	YC053, YC055, YC060-YC064, YC067-YR328
DC..	1A	W0074	0201	22		21-31-23	YC053, YC055, YC060-YC064
DC..	1A	W0074	0201	20		21-31-23	YC067-YR328
DC..	1A	W0074	0207	20		47-30-11	YC060-YC064, YD160-YR328
DC..	1A	W0074	0209	20		28-44-11	YC060-YC064, YD160-YR328
GD03728		BACC50AN16				597/295/L031	ALL
DC..	1	W3142	0058	20		33-51-13	YC051-YL999, YR301-YR328
DC..	1	W3142	0260	16		33-51-13	YC051-YD157
DC..	1	W3142	0260	20		33-51-13	YD158-YL999
DC..	1	W3142	0273	16		33-51-13	YC051-YL999
DC..	1	W3142	0273	20		33-51-13	YR301-YR328
DC..	1	W3142	0274	16		33-51-13	YC051-YL999, YR301-YR328
DC..	1	W3142	0435	20		52-71-13	YC051-YL999, YR301-YR328
DC..	1	W3142	0439	20		52-71-13	YC051-YL999, YR301-YR328
DC..	1	W3142	0577	16		33-51-13	YR301-YR328
AC..	1	W3142	5537	20		21-42-11	YC051-YL999, YR301-YR328
AC..	1	W3146	0042	18		33-22-21	YN231-YN260
ST..	1	W3146	0043	18		33-22-21	YN231-YN260
AC..	1	W3166	0082	18		33-22-41	YN501
ST..	1	W3166	0083	18		33-22-41	YN501
AC..	1	W3166	0105	18		33-22-41	YR301-YR328
ST..	1	W3166	0106	18		33-22-41	YR301-YR328

GROUND LIST

D280A108

91-21-21

Section GD03700

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03728		BACC50AN16 (continued)				597/295/L031	ALL
AC..	1	W3166	0282	18		33-22-21	YN501
ST..	1	W3166	0283	18		33-22-21	YN501
AC..	1	W3166	0285	18		33-22-21	YR301-YR328
ST..	1	W3166	0286	18		33-22-21	YR301-YR328
GD03730		BACC50AN16				420/203/R006	YN231-YN501
GD03732		BACC50AN16				638/301/L013	YN231-YN501
DC..	1	W3142	0253	18		33-51-13	YN231-YN501
DC..	1	W3142	0577	16		33-51-12	YN501
GD03734		BACC50AN20				359/291/L027	ALL
DC..	1A	W3142	0276	20		33-51-21	ALL
DC..	1A	W3142	0376	20		33-51-21	YL951-YL999, YR301-YR328
AC..	1D	W3144	0002	18		33-25-21	ALL
ST..	1A	W3144	1161	20		23-70-11	YL951-YR328
ST..	1A	W3702	0001	20		23-70-11	YL951-YR328
GD03736		BACC50AN16				986.5/294/R028	ALL
AC..	1	W3144	0097	18		33-25-22	ALL
ST..	1	W3335	0006	20		23-34-02	YD158-YD170
AC..	1	W3335	0007	20		23-34-02	YD158-YD170
AC..	1	W5117	0002	20		23-34-02	YL951-YN260
AC..	1	W5117	0002	20		44-21-26	YN501-YR328
ST..	1	W5117	0003	20		23-34-02	YL951-YN260
ST..	1	W5117	0003	20		44-21-26	YN501-YR328
GD03738		BACC50AN16				967/181/R008	ALL
ST..	1	W6102	1001Z			21-31-22	ALL
ST..	1	W6102	2001Z			21-31-22	ALL
ST..	1	W6102	2002Z			21-31-22	ALL
ST..	1	W6102	2004Z			21-31-11	ALL
ST..	1	W6102	3002Z			21-31-11	ALL
ST..	1	W6102	5503	20		21-31-22	ALL
ST..	1	W6102	5504	20		21-31-22	ALL
DC..	1	W6102	5505	20		21-31-22	ALL
DC..	1	W6102	5506	20		21-31-22	ALL
ST..	1	W6102	5507	20		21-31-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD03700

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03740		BACC50AN16				967/181/R015	ALL
ST..	1	W6204	1001Z			21-31-23	ALL
ST..	1	W6204	2001Z			21-31-23	ALL
ST..	1	W6204	2002Z			21-31-23	ALL
ST..	1	W6204	5503	20		21-31-23	ALL
ST..	1	W6204	5504	20		21-31-23	ALL
DC..	1	W6204	5505	20		21-31-23	ALL
DC..	1	W6204	5506	20		21-31-23	ALL
AC..	1	W6248	5551	20		30-71-11	YC051-YN236, YN501-YR328
AC..	1	W6248	5553	20		30-71-11	YC051-YN236, YN501-YR328
AC..	1	W6248	5565	20		30-71-11	YC051-YN236, YN501-YR328
GD03742		BACC50AN16				558/284/L047	ALL
DC..	1	W3142	0355	20		33-51-12	YN231-YN260
DC..	1	W3142	0573	20		33-51-12	YN501
AC..	1	W3146	0142	18		33-22-21	YC051-YL999
ST..	1	W3146	0143	18		33-22-21	YC051-YL999
AC..	1	W3166	0055	18		33-22-41	YR301-YR328
ST..	1	W3166	0056	18		33-22-41	YR301-YR328
AC..	1	W3166	0072	18		33-22-41	YN501
ST..	1	W3166	0073	18		33-22-41	YN501
AC..	1	W3166	0272	18		33-22-21	YN501
ST..	1	W3166	0273	18		33-22-21	YN501
AC..	1	W3166	0275	18		33-22-21	YR301-YR328
ST..	1	W3166	0276	18		33-22-21	YR301-YR328
ST..	1	W3605	0007	20		23-32-41	YN231-YN260
ST..	1	W3605	0010	20		23-32-41	YN231-YN260
ST..	1	W3605	0011	20		23-32-41	YN231-YN260
ST..	1	W3657	0021	18		44-21-36	YR301-YR328
GD03744		BACC50AN16				616/280/L051	ALL
DC..	1	W3142	0073	16		33-51-21	YC051-YD157
DC..	1	W3142	0073	20		33-51-21	YD158-YL999, YR301-YR328
DC..	1	W3142	0253	16		33-51-13	YC051-YL999
DC..	1	W3142	0253	20		33-51-13	YR301-YR328
DC..	1	W3142	0255	16		33-51-13	YC051-YL999, YR301-YR328
DC..	1	W3142	0269	20		33-51-13	YC051-YD157
DC..	1	W3142	0269	16		33-51-12	YD158-YL999, YR301-YR328
DC..	1	W3142	0356	20		33-51-12	YN231-YN260
DC..	1	W3142	0467	20		52-71-13	YC051-YL999, YR301-YR328

GROUND LIST

D280A108

91-21-21

Section GD03700

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03744		BACC50AN16 (continued)				616/280/L051	ALL
AC..	1	W3142	5535	20		21-42-11	YC051-YL999, YR301-YR328
AC..	1	W3146	0042	18		33-22-21	YC051-YL999
ST..	1	W3146	0043	18		33-22-21	YC051-YL999
AC..	1	W3246	0022	18		33-21-12	YR301-YR328
ST..	1	W3246	0023	18		33-21-12	YR301-YR328
ST..	1	W3246	0025	18		33-21-12	YR301-YR328
AC..	1	W3246	0032	18		33-21-12	YR301-YR328
ST..	1	W3246	0033	18		33-21-12	YR301-YR328
ST..	1	W3246	0035	18		33-21-12	YR301-YR328
ST..	1	W4248	0025	20		33-21-12	YC051-YL999
AC..	1	W4248	0026	20		33-21-12	YC051-YL999
ST..	1	W4248	0035	20		33-21-12	YC051-YL999
AC..	1	W4248	0036	20		33-21-12	YC051-YL999
GD03746		BACC50AN16				617/XXX/LXXX	ALL
GD03750		BACC50AN16				558/292/R036	ALL
ST..	1	W3659	0021	18		44-21-46	YR301-YR328
DC..	1	W4142	0056	20		33-51-12	YN231-YN260
AC..	1	W4142	1202	20		33-44-11	ALL
ST..	1	W4142	1202Z			33-44-11	ALL
ST..	1	W4142	1203	20		33-44-11	ALL
ST..	1	W4142	1203Z			33-44-11	ALL
DC..	1	W4142	5511	20		21-61-51	YN231-YN501
AC..	1	W4166	0055	18		33-22-51	YR301-YR328
ST..	1	W4166	0056	18		33-22-51	YR301-YR328
AC..	1	W4166	0062	18		33-22-51	YN501
ST..	1	W4166	0063	18		33-22-51	YN501
AC..	1	W4166	0272	18		33-22-31	YN501
ST..	1	W4166	0273	18		33-22-31	YN501
AC..	1	W4166	0275	18		33-22-31	YR301-YR328
ST..	1	W4166	0276	18		33-22-31	YR301-YR328
GD03754		BACC50AN16				664/234/L073	ALL
DC..	1	W3142	0082	16		33-51-21	YC051-YD157
DC..	1	W3142	0082	20		33-51-22	YD158-YL999, YR301-YR328
DC..	1	W3142	0251	16		33-51-13	ALL
DC..	1	W3142	0256	20		33-51-13	YC051-YL999
DC..	1	W3142	0265	20		33-51-21	YN231-YN260
DC..	1	W3142	0265	20		33-51-22	YN501

GROUND LIST

D280A108

91-21-21

Section GD03700

Page 4

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03754		BACC50AN16 (continued)				664/234/L073	ALL
DC..	1	W3142	0461	20		52-71-13	ALL
AC..	1	W3142	5527	20		21-42-11	ALL
AC..	1	W3142	5574	20		21-42-11	YC051-YL999, YR301-YR328
ST..	1	W3497	0004	20		44-21-37	YN501-YR328
ST..	1	W3497	0005	20		44-21-37	YN501-YR328
GD03756		BACC50AN16				727D/296/L028	ALL
DC..	1	W3142	0356	20		33-51-13	YC051-YL999
DC..	1	W3142	0455	20		33-51-13	YN231-YN260
AC..	1	W3166	0122	18		33-22-41	YN501
ST..	1	W3166	0123	18		33-22-41	YN501
AC..	1	W3166	0135	18		33-22-41	YR301-YR314, YR317-YR318, YR320-YR328
ST..	1	W3166	0136	18		33-22-41	YR301-YR314, YR317-YR318, YR320-YR328
AC..	1	W3166	0342	18		33-22-22	YN501
ST..	1	W3166	0343	18		33-22-22	YN501
AC..	1	W3166	0525	18		33-22-22	YR315-YR316, YR319
ST..	1	W3166	0526	18		33-22-22	YR315-YR316, YR319
AC..	1	W3166	0555	18		33-22-41	YR315-YR316, YR319
ST..	1	W3166	0556	18		33-22-41	YR315-YR316, YR319
AC..	1	W3166	0575	18		33-22-22	YR301-YR314, YR317-YR318, YR320-YR328
ST..	1	W3166	0576	18		33-22-22	YR301-YR314, YR317-YR318, YR320-YR328
GD03758		BACC50AN16				747/182/L058	YN231-YN501
DC..	1	W3142	0353	16		33-51-13	YN231-YN501
GD03760		BACC50AN16				727D+19/204/L022	ALL
AC..	1	W6248	0274	20		33-36-12	YC051-YN236, YN501-YR328
GD03762		BACC50AN16				767/198/R063	YN231-YN501
DC..	1	W3142	0351	16		33-51-13	YN231-YN501
GD03764		BACC50AN16				765/296/L029	ALL
ST..	1	W3107	0005	20		23-15-11	YC051-YD157
ST..	1	W3107	0010	22		23-15-12	YC051-YD157
AC..	1	W3107	0013	20		23-15-11	YC051-YD157
ST..	1	W3107	0014	20		23-15-11	YC051-YD157

GROUND LIST

D280A108

91-21-21

Section GD03700

Page 5

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03764		BACC50AN16 (continued)				765/296/L029	ALL
DC..	1	W3142	0448	16		33-51-14	YR301-YR328
DC..	1	W3142	0449	16		33-51-14	YN501
DC..	1	W3142	0456	20		33-51-14	YC051-YN260, YR301-YR328
DC..	1	W3142	0642	20		33-51-14	YN501
AC..	1	W3166	0165	18		33-22-41	YR301-YR328
ST..	1	W3166	0166	18		33-22-41	YR301-YR328
AC..	1	W3166	0375	18		33-22-22	YR301-YR328
ST..	1	W3166	0376	18		33-22-22	YR301-YR328
DC..	1	W3419	0032	20		23-24-11	YC051-YD170
DC..	1	W3419	0033	20		23-24-11	YC051-YD170
DC..	1	W3419	0034	20		23-24-11	ALL
DC..	1	W3419	0035	20		23-24-11	ALL
DC..	1	W3419	0036	20		23-24-11	ALL
ST..	1	W3605	0017	20		23-32-61	YN231-YN260
ST..	1	W3605	0020	20		23-32-61	YN231-YN260
ST..	1	W3605	0021	20		23-32-61	YN231-YN260
GD03770		BACC50AN16				886/296/L028	ALL
AC..	1	W3058	0054	18		33-26-31	YN501-YR328
ST..	1	W3058	0410	18		33-29-11	YC051-YD158, YL951-YN260
ST..	1	W3058	0411	18		33-29-11	YC051-YD158, YL951-YN260
AC..	1	W3058	0424	20		33-26-11	YC051-YD158, YL951-YN260
DC..	1	W3058	0430	20		33-51-11	YC051-YD158, YL951-YN260
DC..	1	W3058	0430	22		33-51-11	YN501-YR328
DC..	1	W3142	0056	20		33-51-14	YC051-YD170
AC..	1	W3146	0102	18		33-22-22	YC051-YN260
ST..	1	W3146	0103	18		33-22-22	YC051-YN260
AC..	1	W3146	0108	18		33-26-31	YC051-YN260
DC..	1	W3146	0311	20		33-51-14	YD158-YN260
GD03772		BACC50AN16				966/294/R029	ALL
ST..	1	W3144	5503	20		21-42-11	ALL
DC..	1	W4142	0459	20		33-51-14	YC051-YL999, YR301-YR328
DC..	1	W4142	0474	20		33-51-14	YN231-YN501
AC..	1	W4142	0476	20		33-26-11	ALL
GD03774		ST-				665/181/L040	ALL
ST..	E	W7580	1301ZO			28-41-11	YC051-YD158, YL951-YR328
ST..	E	W7580	1302Z			28-41-11	YC051-YD158, YL951-YR328
ST..	E	W7580	1303Z			28-41-11	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD03700

Page 6

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03776		BACC50AN16				993/ /L	ALL
GD03778		BACC50AN16				1005/248/L055	ALL
DC..	1	W3142	0451	18		33-51-14	ALL
DC..	1	W3142	0452	20		33-51-22	ALL
AC..	1	W6248	0102	20		52-71-11	YC051-YN236, YN501-YR328
GD03780		BACC50AN16				420/218/L068	YD158-YR328
DC..	1	W3142	0078	20		33-51-21	YD158-YR328
DC..	1	W3142	0079	16		33-51-21	YD158-YL999, YN501-YR328
DC..	1	W3142	0079	20		33-51-21	YN231-YN260
GD03782		BACC50AN16				301/222/L060	ALL
DC..	1	W4142	0152	20		33-51-21	ALL
GD03794		BACC50AN16				616/280/R052	ALL
DC..	1	W4142	0264	16		33-51-13	YN231-YN260
DC..	1	W4142	0269	16		33-51-13	YN231-YN501
DC..	1	W4142	0351	20		33-51-21	YR301-YR328
DC..	1	W4142	0353	20		33-51-13	YR301-YR328
DC..	1	W4142	0354	16		33-51-13	YR301-YR328
DC..	1	W4142	0361	16		33-51-12	YR301-YR328
DC..	1	W4142	0439	20		52-71-14	YC051-YL999, YR301-YR328
DC..	1	W4142	0443	20		52-71-14	YC051-YL999, YR301-YR328
DC..	1	W4142	0465	20		52-71-14	YN231-YN501
DC..	1	W4142	0467	20		52-71-14	YC051-YL999, YR301-YR328
DC..	1	W4142	0551	16		33-51-12	YR301-YR328
DC..	1	W4142	0617	20		33-51-13	YN501
AC..	1	W4142	5516	20		21-42-11	YN231-YN501
AC..	1	W4142	5533	20		21-42-11	YC051-YL999, YR301-YR328
AC..	1	W4142	5535	20		21-42-11	YC051-YL999, YR301-YR328
AC..	1	W4142	5537	20		21-42-11	YC051-YL999, YR301-YR328
GD03798		BACC50AN16				597/295/R031	ALL
DC..	1	W4142	0023	16		33-51-12	YN501
DC..	1	W4142	0255	20		33-51-13	YN231-YN260
DC..	1	W4142	0351	20		33-51-21	YC051-YL999
DC..	1	W4142	0353	16		33-51-13	YC051-YL999
DC..	1	W4142	0354	16		33-51-13	YC051-YL999
DC..	1	W4142	0551	16		33-51-12	YC051-YL999
AC..	1	W4146	0042	18		33-22-31	YC051-YL999

GROUND LIST

D280A108

91-21-21

Section GD03700

Page 7

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03798		BACC50AN16 (continued)				597/295/R031	ALL
ST..	1	W4146	0043	18		33-22-31	YC051-YL999
AC..	1	W4166	0065	18		33-22-51	YR301-YR328
ST..	1	W4166	0066	18		33-22-51	YR301-YR328
AC..	1	W4166	0072	18		33-22-51	YN501
ST..	1	W4166	0073	18		33-22-51	YN501
AC..	1	W4166	0282	18		33-22-31	YN501
ST..	1	W4166	0283	18		33-22-31	YN501
AC..	1	W4166	0285	18		33-22-31	YR301-YR328
ST..	1	W4166	0286	18		33-22-31	YR301-YR328
AC..	1	W4246	0022	18		33-21-12	YR301-YR328
ST..	1	W4246	0023	18		33-21-12	YR301-YR328
ST..	1	W4246	0025	18		33-21-12	YR301-YR328
AC..	1	W4246	0032	18		33-21-12	YR301-YR328
ST..	1	W4246	0033	18		33-21-12	YR301-YR328
ST..	1	W4246	0035	18		33-21-12	YR301-YR328
ST..	1	W4248	0125	20		33-21-12	YC051-YL999
AC..	1	W4248	0126	20		33-21-12	YC051-YL999
ST..	1	W4248	0135	20		33-21-12	YC051-YL999
AC..	1	W4248	0136	20		33-21-12	YC051-YL999

GROUND LIST

D280A108

91-21-21

Section GD03700

Page 8 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03802		BACC50AN16				664/234/R073	ALL
DC..	1	W4142	0251	16		33-51-13	YN231-YN501
DC..	1	W4142	0252	16		33-51-14	YC051-YL999, YR301-YR328
DC..	1	W4142	0265	20		33-51-21	YN231-YN260
DC..	1	W4142	0265	20		33-51-22	YN501
DC..	1	W4142	0461	20		52-71-14	ALL
AC..	1	W4142	5514	20		21-42-11	YC051-YL999, YR301-YR328
AC..	1	W4142	5527	20		21-42-11	ALL
GD03804		BACC50AN16				685/287/R044	YC051-YN260, YR301-YR328
DC..	1	W4142	0256	20		33-51-13	YN231-YN260
AC..	1	W4146	0052	18		33-22-32	YC051-YL999
ST..	1	W4146	0053	18		33-22-32	YC051-YL999
AC..	1	W4166	0075	18		33-22-51	YR301-YR328
ST..	1	W4166	0076	18		33-22-51	YR301-YR328
AC..	1	W4166	0435	18		33-22-32	YR301-YR314, YR317-YR318, YR320-YR328
ST..	1	W4166	0436	18		33-22-32	YR301-YR314, YR317-YR318, YR320-YR328
AC..	1	W4258	0403	18		33-25-61	YC051-YN260
GD03806		BACC50AN16				727B/296/R031	ALL
DC..	1	W4142	0253	20		33-51-14	YC051-YL999
DC..	1	W4142	0455	20		33-51-14	YN231-YN260
DC..	1	W4142	0621	20		33-51-14	YR301-YR328
DC..	1	W4142	0625	20		33-51-14	YR301-YR328
AC..	1	W4146	0062	18		33-22-32	YC051-YL999
ST..	1	W4146	0063	18		33-22-32	YC051-YL999
AC..	1	W4146	0072	18		33-22-32	YN231-YN260
ST..	1	W4146	0073	18		33-22-32	YN231-YN260
AC..	1	W4166	0112	18		33-22-51	YN501
ST..	1	W4166	0113	18		33-22-51	YN501
AC..	1	W4166	0325	18		33-22-32	YR315-YR316, YR319
ST..	1	W4166	0326	18		33-22-32	YR315-YR316, YR319
AC..	1	W4166	0342	18		33-22-32	YN501
ST..	1	W4166	0343	18		33-22-32	YN501
AC..	1	W4166	0345	18		33-22-32	YR301-YR314, YR317-YR318, YR320-YR328
ST..	1	W4166	0346	18		33-22-32	YR301-YR314, YR317-YR318, YR320-YR328

GROUND LIST

D280A108

91-21-21

Section GD03800

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03806		BACC50AN16 (continued)				727B/296/R031	ALL
AC..	1	W4166	0445	18		33-22-32	YR301-YR314, YR317-YR318, YR320-YR328
ST..	1	W4166	0446	18		33-22-32	YR301-YR314, YR317-YR318, YR320-YR328
AC..	1	W4166	0545	18		33-22-32	YR315-YR316, YR319
ST..	1	W4166	0546	18		33-22-32	YR315-YR316, YR319
AC..	1	W4166	0615	18		33-22-51	YR301-YR314, YR317-YR318, YR320-YR328
ST..	1	W4166	0616	18		33-22-51	YR301-YR314, YR317-YR318, YR320-YR328
GD03808		BACC50AN16				767/296/R031	ALL
ST..	1	W3671	0021	18		44-21-47	YN501-YR328
DC..	1	W4142	0456	20		33-51-14	YN231-YN260
DC..	1	W4142	0623	20		33-51-14	YN501-YR328
DC..	1	W4142	0625	16		33-51-14	YN501
AC..	1	W4146	0082	18		33-22-32	YC051-YN260
ST..	1	W4146	0083	18		33-22-32	YC051-YN260
AC..	1	W4166	0132	18		33-22-51	YN501
ST..	1	W4166	0133	18		33-22-51	YN501
AC..	1	W4166	0165	18		33-22-51	YR301-YR328
ST..	1	W4166	0166	18		33-22-51	YR301-YR328
AC..	1	W4166	0362	18		33-22-32	YN501
ST..	1	W4166	0363	18		33-22-32	YN501
AC..	1	W4166	0375	18		33-22-32	YR301-YR328
ST..	1	W4166	0376	18		33-22-32	YR301-YR328
GD03810		BACC50AN16				1006/248/R056	ALL
DC..	1	W4142	0451	18		33-51-14	ALL
DC..	1	W4142	0452	20		33-51-22	ALL
AC..	1	W6248	0104	20		52-71-11	YC051-YN236, YN501-YR328
GD03812		BACC50AN16				684/285/L046	YC051-YN260
AC..	1	W3158	0403	18		33-25-51	YC051-YN260
GD03814		BACC50AN16				986/292/L030	ALL
DC..	1	W3142	0474	20		33-51-14	ALL
AC..	1	W3142	0476	20		33-26-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD03800

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03816		BACC50AN16				867/297/R029	ALL
DC..	1	W4142	0455	20		33-51-14	YC051-YD170
DC..	1	W4142	0621	20		33-51-14	YN501
DC..	1	W4142	0629	20		33-51-14	YR301-YR328
AC..	1	W4246	0042	18		33-21-12	YN501-YR328
ST..	1	W4246	0043	18		33-21-12	YN501-YR328
ST..	1	W4246	0044	18		33-21-12	YN501-YR328
AC..	1	W4246	0052	18		33-21-12	YN501-YR328
ST..	1	W4246	0053	18		33-21-12	YN501-YR328
ST..	1	W4246	0054	18		33-21-12	YN501-YR328
ST..	1	W4248	0145	20		33-21-12	YC051-YN260
AC..	1	W4248	0146	20		33-21-12	YC051-YN260
ST..	1	W4248	0155	20		33-21-12	YC051-YN260
AC..	1	W4248	0156	20		33-21-12	YC051-YN260
GD03822		BACC50AN16				807/296/R031	YC051-YL999, YR301-YR328
GD03828		BACC50AN16				NSTA188/137/R003	YC051-YC054
ST..	1	W1164	0002	20		80-11-11	YC051-YC054
ST..	1	W1166	0010	18		26-12-11	YC051-YC054
GD03830		BACC50AN16				NSTA 188/137/R 5	YC051-YC054
GD03834		AC-				IFSS-200/ /	ALL
AC..	IA	W1186	0004	04		24-21-11	ALL
GD03836		BACC50AN16				NSTA 161/137/L 1	ALL
DC..	1	W1164	0001	20		80-11-11	ALL
ST..	1	W1164	0002	20		80-11-11	YC055-YR328
DC..	1	W1164	0003	20		80-11-11	ALL
DC..	1	W1164	0005	20		29-11-11	ALL
DC..	1	W1164	0006	20		76-21-11	ALL
DC..	1	W1164	0007	20		76-21-11	ALL
DC..	1	W1164	1012	18		24-11-11	ALL
DED		W1164	1012Z			24-11-11	ALL
GD03838		BACC50AN16				NSTA 161/137/R 2	ALL
DC..	1	W1170	0002	20		30-21-11	ALL
DC..	1	W1170	0009	18		30-21-11	ALL
DC..	1	W1170	0010	18		30-21-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD03800

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03838		BACC50AN16 (continued)				NSTA 161/137/R 2	ALL
DC..	1	W1170	0012	18		30-21-11	ALL
DC..	1	W1170	0015	18		30-21-11	ALL
GD03840		BACC50AN16				NSTA 161/137/R 4	ALL
AC..	1	W1166	0001	20		74-11-11	ALL
AC..	1	W1166	0002	20		73-22-11	ALL
ST..	1	W1166	0010	18		26-12-11	YC055-YR328
AC..	1	W1170	1002	20		74-11-11	ALL
ST..	1	W1170	1002Z			74-11-11	ALL
AC..	1	W1170	1006	20		73-22-11	ALL
ST..	1	W1170	1006Z			73-22-11	ALL
GD03842		ST-				1/1/1	ALL
ST..	GW	W1166	0010	18		26-12-11	ALL
ST..	GW	W1166	FRAA			26-12-11	ALL
GD03844		BACC50AN16				500C/295/L030	YN231-YN501
AC..	1	W3146	0032	18		33-22-21	YN231-YN260
ST..	1	W3146	0033	18		33-22-21	YN231-YN260
AC..	1	W3166	0062	18		33-22-41	YN501
ST..	1	W3166	0063	18		33-22-41	YN501
AC..	1	W3166	0222	18		33-22-21	YN501
ST..	1	W3166	0223	18		33-22-21	YN501
ST..	1	W3657	0021	18		44-21-36	YN501
GD03846		BACC50AN16				480/300/R020	ALL
AC..	1	W3309	0002	22		46-11-51	YL951-YL954, YN231-YN235
ST..	1	W3309	0003	22		46-11-51	YL951-YL954, YN231-YN235
ST..	1	W3309	0004	22		46-11-51	YL951-YL954, YN231-YN235
AC..	1	W4146	0022	18		33-22-31	YC051-YN260
ST..	1	W4146	0023	18		33-22-31	YC051-YN260
AC..	1	W4166	0202	18		33-22-31	YN501
ST..	1	W4166	0203	18		33-22-31	YN501
AC..	1	W4166	0212	18		33-22-31	YN501
ST..	1	W4166	0213	18		33-22-31	YN501
AC..	1	W4166	0525	18		33-22-31	YR301-YR328
ST..	1	W4166	0526	18		33-22-31	YR301-YR328
AC..	1	W4258	0303	18		33-25-61	ALL

GROUND LIST

D280A108

91-21-21

Section GD03800

Page 4

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03848		BACC50AN16				727A/296/L028	ALL
DC..	1	W3142	0355	20		33-51-13	YC051-YL999
DC..	1	W3142	0362	16		33-51-13	YC051-YD170
DC..	1	W3142	0613	20		33-51-13	YN501-YR328
DC..	1	W3142	0615	20		33-51-13	YN501-YR328
AC..	1	W3146	0062	18		33-22-22	YC051-YN260
ST..	1	W3146	0063	18		33-22-22	YC051-YN260
AC..	1	W3166	0112	18		33-22-41	YN501
ST..	1	W3166	0113	18		33-22-41	YN501
AC..	1	W3166	0332	18		33-22-22	YN501
ST..	1	W3166	0333	18		33-22-22	YN501
AC..	1	W3166	0335	18		33-22-22	YR315-YR316, YR319
ST..	1	W3166	0336	18		33-22-22	YR315-YR316, YR319
AC..	1	W3166	0585	18		33-22-22	YR301-YR314, YR317-YR318, YR320-YR328
ST..	1	W3166	0586	18		33-22-22	YR301-YR314, YR317-YR318, YR320-YR328
AC..	1	W3166	0615	18		33-22-41	YR301-YR314, YR317-YR318, YR320-YR328
ST..	1	W3166	0616	18		33-22-41	YR301-YR314, YR317-YR318, YR320-YR328
GD03850		BACC50AN16				747/297/L028	YN231-YR328
AC..	1	W3146	0072	18		33-22-22	YN231-YN260
ST..	1	W3146	0073	18		33-22-22	YN231-YN260
AC..	1	W3166	0132	18		33-22-41	YN501
ST..	1	W3166	0133	18		33-22-41	YN501
AC..	1	W3166	0352	18		33-22-22	YN501
ST..	1	W3166	0353	18		33-22-22	YN501
ST..	1	W3669	0021	18		44-21-37	YR301-YR328
GD03852		BACC50AN16				399/298/L011	ALL
DC..	1	W3142	0155	20		33-51-12	YC051-YD170
DC..	1	W3158	0068	16		25-29-11	YC053-YD170
GD03854		BACC50AN16				400/299/R012	ALL
ST..	1	W3497	0006	20		44-21-46	YN501-YR328
ST..	1	W3497	0007	20		44-21-46	YN501-YR328
ST..	1	W3497	0012	18		44-21-46	YN501-YR328
DC..	1	W4142	0070	20		33-51-12	YN501-YR328

GROUND LIST

D280A108

91-21-21

Section GD03800

Page 5

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03854		BACC50AN16 (continued)				400/299/R012	ALL
AC..	1	W4146	0002	18		33-22-31	YC051-YN260
ST..	1	W4146	0003	18		33-22-31	YC051-YN260
DC..	1	W4146	0211	20		33-51-12	YD158-YN260
GD03856		BACC50AN16				420/298/L016	ALL
AC..	1	W3246	0002	18		33-21-12	YN501-YR328
ST..	1	W3246	0003	18		33-21-12	YN501-YR328
ST..	1	W3246	0004	18		33-21-12	YN501-YR328
AC..	1	W3246	0012	18		33-21-12	YN501-YR328
ST..	1	W3246	0013	18		33-21-12	YN501-YR328
ST..	1	W3246	0014	18		33-21-12	YN501-YR328
ST..	1	W4248	0005	20		33-21-12	YC051-YN260
AC..	1	W4248	0006	20		33-21-12	YC051-YN260
ST..	1	W4248	0015	20		33-21-12	YC051-YN260
AC..	1	W4248	0016	20		33-21-12	YC051-YN260
GD03858		BACC50AN20				419/294/R028	ALL
DC..	1A	W4142	0055	20		33-51-12	YC051-YD170
AC..	1A	W4142	5504	20		21-61-22	YN231-YN501
ST..	1A	W4142	5505	20		21-61-22	YN231-YN501
DC..	1A	W4142	5507	20		21-61-51	YN231-YN501
AC..	1D	W4246	0002	18		33-21-12	YN501-YR328
ST..	1D	W4246	0003	18		33-21-12	YN501-YR328
ST..	1D	W4246	0004	18		33-21-12	YN501-YR328
AC..	1D	W4246	0012	18		33-21-12	YN501-YR328
ST..	1D	W4246	0013	18		33-21-12	YN501-YR328
ST..	1D	W4246	0014	18		33-21-12	YN501-YR328
ST..	1A	W4248	0105	20		33-21-12	YC051-YN260
AC..	1A	W4248	0106	20		33-21-12	YC051-YN260
ST..	1A	W4248	0115	20		33-21-12	YC051-YN260
AC..	1A	W4248	0116	20		33-21-12	YC051-YN260
AC..	1A	W6288	0004	20		21-61-13	YC051-YL999, YR301-YR328
ST..	1A	W6288	0005	20		21-61-13	YC051-YL999, YR301-YR328
DC..	1A	W6288	0014	20		21-61-51	YC051-YL999, YR301-YR328
GD03860		BACC50AN16				459/299/L020	ALL
DC..	1	W3142	0156	20		33-51-12	YN231-YN260
DC..	1	W3142	0637	20		33-51-12	YN501-YR328
DC..	1	W3142	0639	16		33-51-12	YN501
AC..	1	W3146	0012	18		33-22-21	YC051-YN260

GROUND LIST

D280A108

91-21-21

Section GD03800

Page 6

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03860		BACC50AN16 (continued)				459/299/L020	ALL
ST..	1	W3146	0013	18		33-22-21	YC051-YN260
AC..	1	W3166	0002	18		33-22-41	YN501
ST..	1	W3166	0003	18		33-22-41	YN501
AC..	1	W3166	0202	18		33-22-21	YN501
ST..	1	W3166	0203	18		33-22-21	YN501
AC..	1	W3166	0225	18		33-22-21	YR301-YR328
ST..	1	W3166	0226	18		33-22-21	YR301-YR328
AC..	1	W3166	0565	18		33-22-41	YR301-YR328
ST..	1	W3166	0566	18		33-22-41	YR301-YR328
ST..	1	W3589	0003	20		23-32-31	YC051-YD170
ST..	1	W3591	0003	20		23-32-31	YC051-YD170
ST..	1	W3591	0007	20		MULTI	YD158-YD170
ST..	1	W3605	0002	20		23-32-31	YL951-YN260
ST..	1	W3605	0005	20		23-32-31	YL951-YN260
ST..	1	W3605	0006	20		23-32-31	YL951-YN260
GD03862		BACC50AN16				499/295/R030	YC051-YL999, YR301-YR328
DC..	1	W4142	0076	20		33-51-12	YC051-YL999
AC..	1	W4166	0425	18		33-22-31	YR301-YR328
ST..	1	W4166	0426	18		33-22-31	YR301-YR328
AC..	1	W4166	0575	18		33-22-51	YR301-YR328
ST..	1	W4166	0576	18		33-22-51	YR301-YR328
GD03864		BACC50AN16				926/302/L004	ALL
ST..	1	W3144	0301	18		33-26-31	ALL
DC..	1	W3144	0311	20		33-51-22	ALL
DC..	1	W3144	0315	18		35-21-21	ALL
AC..	1	W3144	0328	18		33-25-11	ALL
ST..	1	W3144	0330	18		33-26-31	ALL
AC..	1	W3144	0339	18		33-26-31	ALL
AC..	1	W3144	0340	18		33-26-31	ALL
DC..	1	W5409	0003	20		31-31-11	ALL
DC..	1	W5409	0004	20		31-31-11	ALL
AC..	1	W5409	0005	20		31-31-11	ALL
GD03866		BACC50AN16				500/295/L030	YC051-YL999, YR301-YR328
DC..	1	W3142	0066	20		33-51-12	YC051-YL999
DC..	1	W3142	0068	16		33-51-12	YR301-YR328
AC..	1	W3146	0022	18		33-22-21	YC051-YL999
ST..	1	W3146	0023	18		33-22-21	YC051-YL999

GROUND LIST

D280A108

91-21-21

Section GD03800

Page 7

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03866		BACC50AN16 (continued)				500/295/L030	YC051-YL999, YR301-YR328
AC..	1	W3166	0085	18		33-22-41	YR301-YR328
ST..	1	W3166	0086	18		33-22-41	YR301-YR328
AC..	1	W3166	0535	18		33-22-21	YR301-YR328
ST..	1	W3166	0536	18		33-22-21	YR301-YR328
GD03868		BACC50AN16				500B/296/R031	ALL
DC..	1	W4142	0361	16		33-51-13	YC051-YD157
DC..	1	W4142	0361	16		33-51-12	YD158-YL999
DC..	1	W4142	0537	20		33-51-12	YR301-YR328
DC..	1	W4142	0538	20		33-51-12	YR301-YR328
DC..	1	W4142	0555	20		33-51-12	YC051-YL999
AC..	1	W4146	0032	18		33-22-31	YC051-YN260
ST..	1	W4146	0033	18		33-22-31	YC051-YN260
AC..	1	W4166	0002	18		33-22-51	YN501
ST..	1	W4166	0003	18		33-22-51	YN501
AC..	1	W4166	0115	18		33-22-51	YR301-YR328
ST..	1	W4166	0116	18		33-22-51	YR301-YR328
AC..	1	W4166	0222	18		33-22-31	YN501
ST..	1	W4166	0223	18		33-22-31	YN501
AC..	1	W4166	0245	18		33-22-31	YR301-YR328
ST..	1	W4166	0246	18		33-22-31	YR301-YR328
DC..	1	W4250	0924	18		33-27-31	ALL
GD03870		BACC50AN16				500B/295/L030	YN231-YN501
DC..	1	W3142	0256	20		33-51-12	YN231-YN260
AC..	1	W3146	0022	18		33-22-21	YN231-YN260
ST..	1	W3146	0023	18		33-22-21	YN231-YN260
DC..	1	W3150	0924	18		33-27-21	YN231-YN501
AC..	1	W3166	0012	18		33-22-41	YN501
ST..	1	W3166	0013	18		33-22-41	YN501
AC..	1	W3166	0212	18		33-22-21	YN501
ST..	1	W3166	0213	18		33-22-21	YN501
GD03872		BACC50AN16				500D/297/R029	YN231-YN501
ST..	1	W3659	0021	18		44-21-46	YN501
DC..	1	W4142	0020	20		33-51-12	YN501
DC..	1	W4142	0254	18		33-51-12	YN231-YN260
AC..	1	W4146	0042	18		33-22-31	YN231-YN260
ST..	1	W4146	0043	18		33-22-31	YN231-YN260
AC..	1	W4166	0012	18		33-22-51	YN501

GROUND LIST

D280A108

91-21-21

Section GD03800

Page 8

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03872		BACC50AN16 (continued)				500D/297/R029	YN231-YN501
ST..	1	W4166	0013	18		33-22-51	YN501
AC..	1	W4166	0262	18		33-22-31	YN501
ST..	1	W4166	0263	18		33-22-31	YN501
DC..	1	W6230	5534	20		21-61-22	YN231-YN501
DC..	1	W6528	5512	20		21-51-25	YN231-YN501
GD03874		BACC50AN16				480/219/L069	YN231-YN501
AC..	1	W3142	0061	18		33-41-11	YN231-YN501
ST..	1	W3142	0062	18		33-41-11	YN231-YN501
GD03876		BACC50AN16				380/220/L068	ALL
DC..	1	W3142	0151	18		33-51-12	YC051-YD157, YN231-YN501
DC..	1	W3142	0151	16		33-51-12	YD158-YL999, YR301-YR328
GD03878		BACC50AN16				480/219/R069	YN231-YN501
AC..	1	W4142	0071	18		33-41-11	YN231-YN501
ST..	1	W4142	0072	18		33-41-11	YN231-YN501
GD03880		BACC50AN16				344/227/R065	ALL
DC..	1	W4142	0051	18		33-51-12	ALL
AC..	1	W6412	0005	20		52-71-11	YC051-YN236, YN501-YR323, YR325-YR328
GD03882		BACC50AN16				727D/296/R031	YR315-YR316, YR319
AC..	1	W4166	0535	18		33-22-32	YR315-YR316, YR319
ST..	1	W4166	0536	18		33-22-32	YR315-YR316, YR319
GD03892		ST-				OFSS-737/ /	ALL
ST..	N	W1242	1007	12		33-43-11	ALL
ST..	N	W1242	1007Z			33-43-11	ALL
GD03896		ST-				FSS737/ /	ALL
ST..	N	W1244	1007	12		33-43-11	ALL
ST..	N	W1244	1007Z			33-43-11	ALL
GD03898		AC-				OFSS-745/234/R072	ALL
AC..	N	W1242	1004	12		33-43-11	ALL
AC..	N	W1242	1004Z			33-43-11	ALL
AC..	N	W1242	1006	12		33-43-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD03800

Page 9

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03898		AC- (continued)				OFSS-745/234/R072	ALL
AC..	N	W1242	1006Z			33-43-11	ALL
AC..	N	W1242	1021	20		33-44-12	ALL
AC..	N	W1242	1021Z			33-44-12	ALL

GROUND LIST

D280A108

91-21-21

Section GD03800

Page 10 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03900		ST-				OFSS-739/ /	ALL
ST..	N	W1242	1022	20		33-44-12	ALL
ST..	N	W1242	1022Z			33-44-12	ALL
GD03902		AC-				OFSS 745/ /	ALL
AC..	N	W1244	1004	12		33-43-11	ALL
AC..	N	W1244	1004Z			33-43-11	ALL
AC..	N	W1244	1006	12		33-43-11	ALL
AC..	N	W1244	1006Z			33-43-11	ALL
AC..	N	W1244	1021	20		33-44-12	ALL
AC..	N	W1244	1021Z			33-44-12	ALL
GD03904		ST-				OFSS 739/ /	ALL
ST..	N	W1244	1022	20		33-44-12	ALL
ST..	N	W1244	1022Z			33-44-12	ALL
GD03906		ST				IFSS-102/ /	ALL
ST..	GW	W1662	1001Z			33-42-11	YC051-YD158, YL951-YR328
ST..	GW	W1662	1002Z			33-42-11	YC051-YD158, YL951-YR328
ST..	GW	W1662	1003Z			33-42-11	YC051-YD158, YL951-YR328
GD03920		ST-				OFSS-260/ /	ALL
ST..	E	W1182	1003Z			26-12-11	ALL
ST..	E	W1188	1014Z			26-12-11	ALL
GD03924		BACC50AN16				328/293/R014	ALL
ST..	1	W3703	0001	20		23-70-11	YL951-YR328
DC..	1	W4142	0001	16		33-51-11	YC051-YN260
ST..	1	W4142	0007	20		33-51-11	YC051-YN260
DC..	1	W4142	0059	20		33-51-12	YC051-YL999, YR301-YR328
DC..	1	W4142	0066	18		35-21-21	ALL
DC..	1	W4142	0078	18		35-21-31	ALL
DC..	1	W4142	0159	20		33-51-12	YN231-YN501
GD03926		BACC50AN16				328/295/L014	ALL
DC..	1	W3058	0063	20		33-29-11	YN501-YR328
ST..	1	W3058	0083	18		33-24-21	YN501-YR328
AC..	1	W3058	0084	18		33-24-21	YN501-YR328
ST..	1	W3058	0085	18		33-24-21	YN501-YR328
AC..	1	W3058	0086	18		33-24-21	YN501-YR328

GROUND LIST

D280A108

91-21-21

Section GD03900

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03926		BACC50AN16 (continued)				328/295/L014	ALL
AC..	1	W3058	0362	20		33-29-11	YC051-YD158, YL951-YN260
DC..	1	W3058	0366	20		33-29-11	YC051-YD158, YL951-YN260
ST..	1	W3058	0374	20		33-29-11	YC051-YD158, YL951-YN260
GD03928		BACC50AN16				NSTA 188/137/R003	YC051-YC054
ST..	1	W1264	0002	20		80-11-11	YC051-YC054
ST..	1	W1266	0010	18		26-12-11	YC051-YC054
GD03930		BACC50AN16				NSTA 188/137/R005	YC051-YC054
GD03934		AC-				IFSS 200/ /	ALL
AC..	IA	W1286	0004	04		24-21-21	ALL
GD03936		BACC50AN16				NSTA 162/137/0	ALL
DC..	1	W1264	0001	20		80-11-11	ALL
ST..	1	W1264	0002	20		80-11-11	YC055-YR328
DC..	1	W1264	0003	20		80-11-11	ALL
DC..	1	W1264	0005	20		29-11-11	ALL
DC..	1	W1264	0006	20		76-21-21	ALL
DC..	1	W1264	0007	20		76-21-21	ALL
DC..	1	W1264	1012	18		24-11-21	ALL
DED		W1264	1012Z			24-11-21	ALL
GD03938		BACC50AN16				NSTA 162/137/R001	ALL
DC..	1	W1270	0002	20		30-21-21	ALL
DC..	1	W1270	0009	18		30-21-21	ALL
DC..	1	W1270	0010	18		30-21-21	ALL
DC..	1	W1270	0012	18		30-21-21	ALL
DC..	1	W1270	0015	18		30-21-21	ALL
GD03940		BACC50AN16				NSTA/ /	ALL
AC..	1	W1266	0001	20		74-11-11	ALL
AC..	1	W1266	0002	20		73-22-11	ALL
ST..	1	W1266	0010	18		26-12-11	YC055-YR328
AC..	1	W1270	1002	20		74-11-11	ALL
ST..	1	W1270	1002Z			74-11-11	ALL
AC..	1	W1270	1006	20		73-22-11	ALL
ST..	1	W1270	1006Z			73-22-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD03900

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I GD03942		ST-				//	ALL
I ST..	GW	W1266	0010	18		26-12-11	ALL
I ST..	GW	W1266	FRAA			26-12-11	ALL
GD03944		BACC50AN16				598/215/L068	YN231-YN501
DC..	1	W3142	0201	16		33-51-11	YN231-YN501
ST..	1	W3142	0207	20		33-51-11	YN231-YN501
DC..	1	W3142	0252	20		33-51-21	YN231-YN501
DC..	1	W3142	0295	20		33-51-21	YN231-YN501
DC..	1	W3142	0298	20		33-51-21	YN231-YN501
DC..	1	W3142	0467	20		52-71-13	YN231-YN501
AC..	1	W3142	5514	20		21-42-11	YN231-YN501
AC..	1	W3142	5533	20		21-42-11	YN231-YN501
I GD03946		BACC50AN16				727D/221/L070	ALL
I DC..	1	W3142	0301	16		33-51-11	ALL
I ST..	1	W3142	0307	20		33-51-11	ALL
I DC..	1	W3142	0394	20		33-51-22	YD158-YR328
I DC..	1	W3142	0395	16		33-51-22	YD158-YL999, YR301-YR328
I DC..	1	W3142	0395	20		33-51-22	YN231-YN501
I GD03948		BACC50AN16				947/300/L007	ALL
I DC..	1	W3058	0204	20		38-41-11	YC051-YD158, YL951-YN260
I DC..	1	W3058	0207	20		38-32-13	YC051-YD158, YL951-YN260
I DC..	1	W3058	0210	20		38-32-13	YC051-YD158, YL951-YN260
I DC..	1	W3058	0233	20		38-32-13	YN501-YR328
I DC..	1	W3058	0253	20		23-42-11	YC051-YD158, YL951-YN260
I DC..	1	W3058	0255	20		23-42-11	YC051-YD158, YL951-YR328
I DC..	1	W3058	0256	20		23-42-11	YC051-YD157
I DC..	1	W3142	0401	16		33-51-11	ALL
I ST..	1	W3142	0407	20		33-51-11	ALL
I DC..	1	W3311	0004	20		23-31-01	YC051-YD157, YN501-YR328
I ST..	1	W3311	0005	20		23-42-12	YR301-YR328
I DC..	1	W7359	0002	18		35-21-21	ALL
I GD03950		DC-				OFSS-267/ /	ALL
I ST..	E	W1140	001TO			28-41-11	YC051-YD158, YL951-YR328
I ST..	E	W1140	1002Z			28-41-11	YC051-YD158, YL951-YR328
I ST..	E	W1140	1003Z			28-41-11	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD03900

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03951		BACC50AN16				948/302/L005	YL963-YL999, YN236-YR328
ST..	1	W3311	0045	22		23-31-01	YR308-YR328
ST..	1	W3311	0047	20		23-31-01	YN501-YR307
ST..	1	W5431	0028	22		23-71-01	YL963-YL999, YN236-YR328
DC..	1	W5431	0029	22		23-71-01	YL963-YL999, YN236-YR328
DC..	1	W5431	0033	24		23-71-01	YL963-YL999, YN236-YR328
GD03952		DC-				OFSS 267/ /	ALL
ST..	E	W1138	001TO			28-41-11	YC051-YD158, YL951-YR328
ST..	E	W1138	1002Z			28-41-11	YC051-YD158, YL951-YR328
ST..	E	W1138	1003Z			28-41-11	YC051-YD158, YL951-YR328
GD03956		AC-				987/298/R018	ALL
AC..	P	W3154	0010	08		25-31-11	ALL
GD03958		AC-				987/297/R018	YD158-YR328
AC..	GY	W3154	0020	10		25-31-11	YD158-YR328
GD03960		AC-				295/287/R013	ALL
AC..	GY	W4256	0014	10		25-31-11	ALL
GD03972		BACC50AN16				597/215/R068	YN231-YN501
DC..	1	W4142	0201	16		33-51-11	YN231-YN501
ST..	1	W4142	0207	20		33-51-11	YN231-YN501
DC..	1	W4142	0252	20		33-51-21	YN231-YN501
DC..	1	W4142	0467	20		52-71-14	YN231-YN501
AC..	1	W4142	5514	20		21-42-11	YN231-YN501
AC..	1	W4142	5533	20		21-42-11	YN231-YN501
GD03973		DC-				E003-01/ /	ALL
DC..	E	W0311	0003	14		31-62-11	ALL
DC..	E	W0311	0005	14		31-62-11	ALL
GD03975		DC-				E003-01/ /	ALL
DC..	E	W0313	0503	14		31-62-21	ALL
DC..	E	W0313	0505	14		31-62-21	ALL
GD03977		DC-				191/228/L020	ALL
DC..	E	W0001	0001	14		31-62-11	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD03900

Page 4

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I GD03979		DC-				191/228/L012	ALL
I DC..	E	W0001	0006	14		31-62-11	YC051-YD158, YL951-YR328
I GD03980		DC-				OFSS-274/ /	ALL
I DC..	E	W1178	1011	18		28-21-11	ALL
I DC..	E	W1178	1011Z			28-21-11	ALL
I DC..	E	W1188	1013	20		30-11-11	ALL
I DC..	E	W1188	1013Z			30-11-11	ALL
I GD03981		DC-				191/226/R003	ALL
I DC..	E	W0001	0011	14		31-62-11	YC051-YD158, YL951-YR328
I GD03982		ST-				OFSS-274/ /	ALL
I ST..	E	W1178	1013	18		28-21-11	ALL
I ST..	E	W1178	1013Z			28-21-11	ALL
I GD03983		DC-				200/216/L004	ALL
I DC..	E	W0003	0511	14		31-62-21	YC051-YD158, YL951-YR328
I GD03984		DC-				OFSS 273/ /	ALL
I DC..	E	W1278	1011	18		28-21-11	ALL
I DC..	E	W1278	1011Z			28-21-11	ALL
I DC..	E	W1288	1013	20		30-11-11	ALL
I DC..	E	W1288	1013Z			30-11-11	ALL
I GD03985		DC-				191/228/R020	ALL
I DC..	E	W0003	0501	14		31-62-21	YC051-YD158, YL951-YR328
I GD03986		ST-				OFSS 274/ /	ALL
I ST..	E	W1278	1013	18		28-21-11	ALL
I ST..	E	W1278	1013Z			28-21-11	ALL
I GD03987		DC-				190/227/R010	ALL
I DC..	E	W0003	0506	14		31-62-21	YC051-YD158, YL951-YR328
I GD03988		BACC50AN16				638/280/L051	ALL
I DC..	1	W3142	0264	16		33-51-13	YN231-YN260
I DC..	1	W3142	0269	16		33-51-13	YN231-YN501
I DC..	1	W3142	0465	20		52-71-13	ALL
I DC..	1	W3142	0619	20		33-51-13	YN501

GROUND LIST

D280A108

91-21-21

Section GD03900

Page 5

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03988		BACC50AN16 (continued)				638/280/L051	ALL
AC..	1	W3142	5516	20		21-42-11	ALL
AC..	1	W3142	5533	20		21-42-11	YC051-YL999, YR301-YR328
AC..	1	W3246	0022	18		33-21-12	YN501
ST..	1	W3246	0023	18		33-21-12	YN501
ST..	1	W3246	0025	18		33-21-12	YN501
AC..	1	W3246	0032	18		33-21-12	YN501
ST..	1	W3246	0033	18		33-21-12	YN501
ST..	1	W3246	0035	18		33-21-12	YN501
ST..	1	W4248	0025	20		33-21-12	YN231-YN260
AC..	1	W4248	0026	20		33-21-12	YN231-YN260
ST..	1	W4248	0035	20		33-21-12	YN231-YN260
AC..	1	W4248	0036	20		33-21-12	YN231-YN260
GD03990		BACC50AN16				826/296/L029	ALL
AC..	1	W3146	0082	18		33-22-22	YC051-YN260
ST..	1	W3146	0083	18		33-22-22	YC051-YN260
DC..	1	W3150	0926	18		33-27-22	ALL
AC..	1	W3166	0362	18		33-22-22	YN501
ST..	1	W3166	0363	18		33-22-22	YN501
AC..	1	W3166	0385	18		33-22-22	YR301-YR328
ST..	1	W3166	0386	18		33-22-22	YR301-YR328
AC..	1	W3166	0395	18		33-22-22	YR301-YR328
ST..	1	W3166	0396	18		33-22-22	YR301-YR328
AC..	1	W3166	0422	18		33-22-22	YN501
ST..	1	W3166	0423	18		33-22-22	YN501
ST..	1	W3669	0021	18		44-21-37	YN501
GD03996		BACC50AN16				639/285/R047	ALL
ST..	1	W3497	0008	20		44-21-47	YN501-YR328
ST..	1	W3497	0009	20		44-21-47	YN501-YR328
DC..	1	W4142	0082	16		33-51-21	YC051-YD157
DC..	1	W4142	0082	20		33-51-22	YD158-YL999, YR301-YR328
DC..	1	W4142	0256	20		33-51-14	YC051-YL999
DC..	1	W4142	0355	16		33-51-13	YC051-YL999
DC..	1	W4142	0355	20		33-51-13	YR301-YR328
DC..	1	W4142	0356	16		33-51-13	YC051-YL999, YR301-YR328
DC..	1	W4142	0465	20		52-71-14	YC051-YL999, YR301-YR328
AC..	1	W4142	5516	20		21-42-11	YC051-YL999, YR301-YR328
AC..	1	W4246	0022	18		33-21-12	YN501
ST..	1	W4246	0023	18		33-21-12	YN501

GROUND LIST

D280A108

91-21-21

Section GD03900

Page 6

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD03996		BACC50AN16 (continued)				639/285/R047	ALL
ST..	1	W4246	0025	18		33-21-12	YN501
AC..	1	W4246	0032	18		33-21-12	YN501
ST..	1	W4246	0033	18		33-21-12	YN501
ST..	1	W4246	0035	18		33-21-12	YN501
ST..	1	W4248	0125	20		33-21-12	YN231-YN260
AC..	1	W4248	0126	20		33-21-12	YN231-YN260
ST..	1	W4248	0135	20		33-21-12	YN231-YN260
AC..	1	W4248	0136	20		33-21-12	YN231-YN260
GD03998		BACC50AN16				947.5/294/R030	ALL
ST..	1	W3058	0092	18		33-24-22	YN501-YR328
AC..	1	W3058	0093	18		33-24-22	YN501-YR328
ST..	1	W3058	0094	18		33-24-22	YN501-YR328
AC..	1	W3058	0095	18		33-24-22	YN501-YR328
AC..	1	W3058	0096	18		33-24-22	YN501-YR328
ST..	1	W3058	0097	18		33-24-22	YN501-YR328
AC..	1	W3058	0462	20		33-29-11	YC051-YD158, YL951-YN260
DC..	1	W3058	0464	20		33-51-14	YC051-YD158, YL951-YR328
DC..	1	W3058	0466	20		33-29-11	YC051-YD158, YL951-YR328
ST..	1	W3058	0474	20		33-29-11	YC051-YD158, YL951-YN260
DC..	1	W3058	0476	20		23-42-11	YC051-YD158, YL951-YR328
DC..	1	W4142	0401	16		33-51-11	ALL
ST..	1	W4142	0407	20		33-51-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD03900

Page 7 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD04002		BACC50AN16				827/296/R031	ALL
DC..	1	W4142	0257	20		33-51-14	YC051-YL999
AC..	1	W4146	0092	18		33-22-32	YC051-YN260
ST..	1	W4146	0093	18		33-22-32	YC051-YN260
AC..	1	W4166	0142	18		33-22-51	YN501
ST..	1	W4166	0143	18		33-22-51	YN501
AC..	1	W4166	0372	18		33-22-32	YN501
ST..	1	W4166	0373	18		33-22-32	YN501
AC..	1	W4166	0385	18		33-22-32	YR301-YR328
ST..	1	W4166	0386	18		33-22-32	YR301-YR328
AC..	1	W4166	0555	18		33-22-51	YR301-YR328
ST..	1	W4166	0556	18		33-22-51	YR301-YR328
DC..	1	W4250	0926	18		33-27-32	ALL
GD04004		BACC50AN16				705/295/L031	ALL
DC..	1	W3142	0454	20		33-51-13	YN231-YN260
AC..	1	W3146	0052	18		33-22-21	YC051-YN260
ST..	1	W3146	0053	18		33-22-21	YC051-YN260
DC..	1	W3150	0925	18		33-27-22	ALL
AC..	1	W3166	0102	18		33-22-41	YN501
ST..	1	W3166	0103	18		33-22-41	YN501
AC..	1	W3166	0115	18		33-22-41	YR315-YR316, YR319
ST..	1	W3166	0116	18		33-22-41	YR315-YR316, YR319
AC..	1	W3166	0292	18		33-22-21	YN501
ST..	1	W3166	0293	18		33-22-21	YN501
AC..	1	W3166	0295	18		33-22-21	YR301-YR328
ST..	1	W3166	0296	18		33-22-21	YR301-YR328
AC..	1	W3166	0605	18		33-22-41	YR301-YR314, YR317-YR318, YR320-YR328
ST..	1	W3166	0606	18		33-22-41	YR301-YR314, YR317-YR318, YR320-YR328
ST..	1	W3589	0005	20		23-32-51	YC051-YD170
ST..	1	W3591	0006	20		23-32-51	YC051-YD170
ST..	1	W3591	0008	20		MULTI	YD158-YD170
ST..	1	W3605	0012	20		23-32-51	YL951-YN260
ST..	1	W3605	0015	20		23-32-51	YL951-YN260
ST..	1	W3605	0016	20		23-32-51	YL951-YN260
GD04006		BACC50AN16				866/296/L028	ALL
AC..	1	W3146	0092	18		33-22-22	YC051-YN260
ST..	1	W3146	0093	18		33-22-22	YC051-YN260

GROUND LIST

D280A108

91-21-21

Section GD04000

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD04006		BACC50AN16 (continued)				866/296/L028	ALL
AC..	1	W3246	0042	18		33-21-12	YN501-YR328
ST..	1	W3246	0043	18		33-21-12	YN501-YR328
ST..	1	W3246	0044	18		33-21-12	YN501-YR328
AC..	1	W3246	0052	18		33-21-12	YN501-YR328
ST..	1	W3246	0053	18		33-21-12	YN501-YR328
ST..	1	W3246	0054	18		33-21-12	YN501-YR328
ST..	1	W4248	0045	20		33-21-12	YC051-YN260
AC..	1	W4248	0046	20		33-21-12	YC051-YN260
ST..	1	W4248	0055	20		33-21-12	YC051-YN260
AC..	1	W4248	0056	20		33-21-12	YC051-YN260
GD04008		BACC50AN16				706/297/R031	ALL
DC..	1	W4142	0255	20		33-51-14	YC051-YL999
DC..	1	W4142	0609	20		33-51-13	YN501
DC..	1	W4142	0611	16		33-51-13	YN501
AC..	1	W4146	0062	18		33-22-32	YN231-YN260
ST..	1	W4146	0063	18		33-22-32	YN231-YN260
AC..	1	W4166	0085	18		33-22-51	YR315-YR316, YR319
ST..	1	W4166	0086	18		33-22-51	YR315-YR316, YR319
AC..	1	W4166	0332	18		33-22-32	YN501
ST..	1	W4166	0333	18		33-22-32	YN501
DC..	1	W4250	0925	18		33-27-32	ALL
GD04010		BACC50AN16				664/297/R031	YN231-YN501
AC..	1	W4146	0052	18		33-22-32	YN231-YN260
ST..	1	W4146	0053	18		33-22-32	YN231-YN260
AC..	1	W4166	0082	18		33-22-51	YN501
ST..	1	W4166	0083	18		33-22-51	YN501
GD04024		ST-				OFSS 260/ /	ALL
ST..	E	W1282	1003Z			26-12-11	ALL
ST..	E	W1288	1014Z			26-12-11	ALL
GD04031		ST				/ /	ALL
GD04032		ST				OFSS98/ /	ALL
ST..	GW	W1664	1001Z			33-42-11	YC051-YD158, YL951-YR328
ST..	GW	W1664	1002Z			33-42-11	YC051-YD158, YL951-YR328
ST..	GW	W1664	1003Z			33-42-11	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD04000

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I GD04048		ST-				IFSS-165/ /	ALL
I ST..	E	W1180	2001Z			27-81-11	ALL
I GD04050		ST-				IFSS-167/ /	ALL
I ST..	E	W1180	2002Z			27-81-11	ALL
I GD04052		ST-				IFSS-150/ /	ALL
I ST..	GW	W1180	2003Z			27-81-11	ALL
I ST..	GW	W1180	2004Z			27-81-11	ALL
I GD04054		AC-				IFSS-165/ /	ALL
I AC..	E	W1180	I-Y			27-81-11	ALL
I GD04056		AC-				OFSS-711/ /	ALL
I AC..	E	W1188	A-Y			27-81-12	ALL
I GD04058		AC-				OFSS-661/ /	ALL
I AC..	E	W1188	B-Y			27-81-12	ALL
I GD04060		AC-				OFSS-579/ /	ALL
I AC..	E	W1188	C-Y			27-81-12	ALL
I GD04062		AC-				OFSS-534/ /	ALL
I AC..	E	W1188	D-Y			27-81-12	ALL
I GD04064		ST-				OFSS-713/ /	ALL
I ST..	E	W1188	2005Z			27-81-12	ALL
I GD04066		ST-				OFSS-660/ /	ALL
I ST..	E	W1188	2006Z			27-81-12	ALL
I GD04068		ST-				OFSS-581/ /	ALL
I ST..	E	W1188	2007Z			27-81-12	ALL
I GD04070		ST-				OFSS-534/ /	ALL
I ST..	E	W1188	2008Z			27-81-12	ALL
I GD04072		AC-				OFSS-460/ /	ALL
I AC..	E	W1188	E-Y			27-81-12	ALL

GROUND LIST

D280A108

91-21-21

Section GD04000

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I GD04074		AC-				OFSS-415/ /	ALL
I AC..	E	W1188	F-Y			27-81-12	ALL
I GD04076		AC-				OFSS-341/ /	ALL
I AC..	E	W1188	G-Y			27-81-12	ALL
I GD04078		AC-				OFSS-299/ /	ALL
I AC..	E	W1188	H-Y			27-81-12	ALL
I GD04080		ST-				OFSS-459/ /	ALL
I ST..	E	W1188	2009Z			27-81-12	ALL
I GD04082		ST-				OFSS-415/ /	ALL
I ST..	E	W1188	2010Z			27-81-12	ALL
I GD04084		ST-				OFSS-341/ /	ALL
I ST..	E	W1188	2011Z			27-81-12	ALL
I GD04086		ST-				OFSS-299/ /	ALL
I ST..	E	W1188	2012Z			27-81-12	ALL
I GD04090		ST-				OFSS 459/ /	ALL
I ST..	E	W1288	2007Z			27-81-22	ALL
I GD04092		ST-				OFSS 415/ /	ALL
I ST..	E	W1288	2008Z			27-81-22	ALL
I GD04094		AC-				IFSS 165/ /	ALL
I AC..	E	W1280	I-Y			27-81-21	YC051-YN236, YN501-YR328
I GD04096		ST-				OFSS 341/ /	ALL
I ST..	E	W1288	2005Z			27-81-22	ALL
I GD04098		ST-				OFSS 299/ /	ALL
I ST..	E	W1288	2006Z			27-81-22	ALL

GROUND LIST

D280A108

91-21-21

Section GD04000

Page 4 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD04100		BACC50AN16				927/296/R029	YC051-YL999, YR301-YR328
ST..	1	W3144	0351	18		33-26-31	YC051-YL999, YR301-YR328
DC..	1	W3144	0365	18		35-21-31	YC051-YL999, YR301-YR328
AC..	1	W3144	0378	18		33-25-11	YC051-YL999, YR301-YR328
ST..	1	W3144	0380	18		33-26-31	YC051-YL999, YR301-YR328
AC..	1	W3144	0389	18		33-26-31	YC051-YL999, YR301-YR328
AC..	1	W3144	0390	18		33-26-31	YC051-YL999, YR301-YR328
GD04102		BACC50AN20				E004-01/ /	ALL
DC..	1A	W0411	0021	22		23-51-51	ALL
DC..	1A	W0411	0022	22		23-51-51	ALL
DC..	1A	W0411	0023	22		23-51-51	ALL
DC..	1A	W0411	0024	22		23-51-51	ALL
DC..	1A	W0411	0025	22		23-51-51	ALL
DC..	1A	W0411	0026	22		23-51-51	ALL
DC..	1A	W0411	0027	22		23-51-51	ALL
DC..	1A	W0411	0043	22		23-31-04	ALL
DC..	1A	W0411	0050	22		23-22-11	ALL
DC..	1A	W0411	0051	22		23-22-11	YC051-YN235
ST..	1A	W0411	0051	22		23-22-11	YN236-YR328
DC..	1A	W0411	0054	22		23-22-11	ALL
DC..	1A	W0411	0057	22		23-22-11	ALL
DC..	1A	W0411	0200	22		23-43-11	YC051-YD157
DC..	1A	W0411	0203	22		23-43-11	YC051-YD157
DC..	1A	W0411	0297	22		23-27-31	YD158-YR328
GD04103		BACC50AN20				E004-01/ /	ALL
DC..	1A	W0410	0012	20		34-61-17	YN231-YN501
ST..	1A	W0410	0103	20		21-51-11	YN231-YN501
AC..	1A	W0410	0161	20		21-61-21	YN231-YN501
AC..	1A	W0410	0162	20		21-61-21	YN231-YN501
AC..	1A	W0410	0163	20		21-61-21	YN231-YN501
ST..	1A	W0410	0309	20		21-51-11	YC051-YL999, YR301-YR328
DC..	1A	W0410	0332	20		21-51-14	YC051-YL999, YR301-YR328
ST..	1A	W0410	0351	20		21-51-21	YC051-YL999, YR301-YR328
AC..	1A	W0411	0293	20		23-27-31	YD158-YR328
AC..	1A	W0411	0294	20		23-27-31	YD158-YL954, YN231-YN235
ST..	1A	W0411	0294	20		23-27-31	YL955-YL999, YN236-YR328
DC..	1A	W0411	0314	20		23-32-21	YL951-YN260
ST..	1A	W0411	0318	20		23-32-21	YL951-YN260
DC..	1A	W0411	0338	22		23-31-04	YD158-YR328

GROUND LIST

D280A108

91-21-21

Section GD04100

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD04103		BACC50AN20 (continued)				E004-01/ /	ALL
DC..	1A	W0411	0345	22		23-27-38	YD158-YR328
DC..	1A	W0411	0362	20		34-24-15	YD158-YR328
DC..	1A	W0411	2003B	24		23-51-11	ALL
DC..	1A	W0411	2006B	24		23-51-21	ALL
GD04104		BACC50AN20				E004-01/ /	ALL
DC..	1A	W0410	0014	20		34-61-17	YN231-YN501
DC..	1A	W0410	0059	20		21-31-23	YC051-YD157
ST..	1A	W0410	0060	20		21-31-23	YC051-YD157
DC..	1A	W0410	0063	22		21-31-23	YC051-YC052, YC054, YC056-YC059, YC065
DC..	1A	W0410	0064	22		21-31-23	YC051-YD157
DC..	1A	W0410	0065	22		21-31-23	YC051-YD157
ST..	1A	W0410	0116	20		21-51-21	YN231-YN501
AC..	1A	W0410	0192	20		21-61-22	YN231-YN501
AC..	1A	W0410	0193	20		21-61-22	YN231-YN501
AC..	1A	W0410	0195	20		21-61-22	YN231-YN501
DC..	1A	W0410	0242	22		21-51-15	YN231-YN501
DC..	1A	W0410	0312	20		21-51-11	YC051-YL999, YR301-YR328
DC..	1A	W0410	0341	20		21-51-15	YC051-YL999, YR301-YR328
DC..	1A	W0410	0354	20		21-51-21	YC051-YL999, YR301-YR328
DC..	1A	W0410	0374	20		21-51-24	YC051-YL999, YR301-YR328
DC..	1A	W0410	0381	20		21-51-25	YC051-YL999, YR301-YR328
DC..	1A	W0410	0488	20		34-61-17	YC051-YL999, YR301-YR328
DC..	1A	W0410	0490	20		34-61-17	YC051-YL999, YR301-YR328
DC..	1A	W0410	0493	22		21-31-23	YC051-YC052, YC054, YC056-YC059, YC065
DC..	1A	W0410	0494	22		21-31-23	YC051-YD157
GD04105		BACC50AN16				E004-01/ /	ALL
GD04108		AC-				E004-01/ /	YD158-YD170
GD04108		ST-				E004-01/ /	YL951-YR328
ST..	E	W0411	0396	08		34-24-15	YD158-YR328
GD04110		ST-				OFSS 713/ /	ALL
ST..	E	W1288	2011Z			27-81-22	ALL
GD04112		ST-				OFSS 660/ /	ALL
ST..	E	W1288	2012Z			27-81-22	ALL

GROUND LIST

D280A108

91-21-21

Section GD04100

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I GD04114		AC-				OFSS 341/ /	ALL
I AC..	E	W1288	A-Y			27-81-22	ALL
I GD04118		AC-				OFSS 299/ /	ALL
I AC..	E	W1288	B-Y			27-81-22	ALL
I GD04120		AC-				OFSS 460/ /	ALL
I AC..	E	W1288	C-Y			27-81-22	ALL
I GD04122		AC-				OFSS 415/ /	ALL
I AC..	E	W1288	D-Y			27-81-22	ALL
I GD04124		AC-				OFSS 579/ /	ALL
I AC..	E	W1288	E-Y			27-81-22	ALL
I GD04126		AC-				OFSS 534/ /	ALL
I AC..	E	W1288	F-Y			27-81-22	ALL
I GD04128		AC-				OFSS 711/ /	ALL
I AC..	E	W1288	G-Y			27-81-22	ALL
I GD04130		AC-				OFSS 661/ /	ALL
I AC..	E	W1288	H-Y			27-81-22	ALL
I GD04132		ST-				OFSS-587/ /	ALL
I ST..	E	W1662	2001Z			28-44-11	YC051-YD158, YL951-YR328
I GD04140		ST-				/ /	ALL
I GD04142		ST-				OFSS 587/ /	ALL
I ST..	E	W1664	1018Z			28-44-11	YC051-YD158, YL951-YR328
I ST..	E	W1664	1024Z			28-44-11	YC051-YD158, YL951-YR328
I GD04148		ST-				OFSS 379/ /	ALL
I ST..	E	W1664	0023	16		28-44-11	YC051-YD158, YL951-YR328
I ST..	E	W1664	0025	16		28-44-11	YC051-YD158, YL951-YR328
I ST..	E	W1664	0027	16		28-44-11	YC051-YD158, YL951-YR328
I ST..	E	W1664	3002ZO			23-41-11	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD04100

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD04164		BACC50AN16				312/293/L020	ALL
DC..	1	W3058	0021	20		24-23-51	YC051-YD158, YL951-YR328
DC..	1	W3058	0131	20		26-14-11	YC051-YD158
DC..	1	W3058	0133	20		26-14-11	YC051-YD158
DC..	1	W3058	0153	20		23-42-11	YC051-YD158, YL951-YN260
DC..	1	W3058	0172	20		23-42-14	YN501-YR328
ST..	1	W3058	0173	20		23-42-14	YN501-YR328
ST..	1	W3058	0174	20		23-42-14	YN501-YR328
ST..	1	W3058	0175	20		23-42-14	YN501-YR328
AC..	1	W3058	0305	20		33-22-11	YC051-YD158, YL951-YN260
AC..	1	W3058	0309	20		33-21-11	YC051-YD158, YL951-YN260
ST..	1	W3058	0310	18		33-29-11	YC051-YD158, YL951-YN260
ST..	1	W3058	0311	18		33-29-11	YC051-YD158, YL951-YN260
AC..	1	W3058	0324	20		33-26-11	YC051-YD158, YL951-YN260
AC..	1	W3058	0332	20		33-22-11	YC051-YD158, YL951-YN260
AC..	1	W3058	0373	20		33-29-11	YC051-YD158, YL951-YR328
ST..	1	W3307	0096	22		23-31-01	YN501-YR328
GD04168		BACC50AN16				312/294/L017	ALL
DC..	1	W3058	0155	20		23-42-11	YC051-YD157
DC..	1	W3307	0004	20		23-31-01	YC051-YD157
AC..	1	W3307	0014	20		23-31-06	YD158-YN260
ST..	1	W3307	0015	20		23-31-06	YD158-YN260
DC..	1	W3307	0016	20		23-31-06	YD158-YN260
DC..	1	W3307	0020	20		23-34-01	YC051-YN260
DC..	1	W3307	0020	20		44-21-10	YN501-YR328
DC..	1	W3307	0098	20		23-31-01	YN501-YR328
DC..	1	W4142	0059	20		33-51-12	YN231-YN501
DC..	1	W4142	0101	16		33-51-11	ALL
ST..	1	W4142	0107	20		33-51-11	ALL
DC..	1	W4142	0159	20		33-51-12	YC051-YL999, YR301-YR328
GD04170		BACC50AN20				328/293/L014	ALL
DC..	1	W3058	0029	22		52-71-11	YC051-YD158
DC..	1A	W3058	0029	22		52-71-11	YL951-YR328
AC..	1A	W3058	0055	20		33-26-11	YN501-YR328
AC..	1D	W3058	0088	18		33-24-21	YN501-YR328
ST..	1D	W3058	0089	18		33-24-21	YN501-YR328
AC..	1D	W3058	0090	18		33-24-21	YN501-YR328
ST..	1D	W3058	0091	18		33-24-21	YN501-YR328

GROUND LIST

D280A108

91-21-21

Section GD04100

Page 4

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD04170		BACC50AN20 (continued)				328/293/L014	ALL
DC..	1A	W3058	0364	20		33-51-12	YC051-YD158, YL951-YR328
DC..	1A	W3058	0370	20		23-42-11	YC051-YD158, YL951-YR328
AC..	1A	W3058	0375	20		33-26-11	YC051-YD158, YL951-YN260

GROUND LIST

D280A108

91-21-21

Section GD04100

Page 5 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD04201		BACC50AN20				E004-02/ /	ALL
DC..	1A	W0422	0083	20		24-11-21	ALL
ST..	1A	W0422	0144	20		24-41-11	ALL
ST..	1A	W0422	0501	20		24-28-41	ALL
GD04202		BACC50AN20				E004-02/ /	ALL
DC..	1A	W0422	0032	22		27-62-11	YC058-YR328
DC..	1A	W0422	0034	22		27-62-11	YC058-YR328
DC..	1A	W0422	0035	22		27-62-11	YC058-YR328
ST..	1A	W0422	0084	20		24-11-21	ALL
DC..	1A	W0422	0142	20		24-41-11	ALL
GD04203		BACC50AN20				E004-02/ /	ALL
ST..	1A	W0420	2002Z			30-41-12	YC051-YC057
AC..	1A	W0420	5504	20		30-41-12	YC058-YR328
DC..	1A	W0420	5506	20		30-41-12	YC058-YR328
AC..	1A	W0420	5513	20		30-41-12	YC058-YR328
DC..	1A	W0420	5515	20		30-41-12	YC058-YR328
GD04204		BACC50AN16				E004-02/ /	ALL
ST..	1A	W0420	2001Z			30-41-12	YC051-YC057
ST..	1A	W0420	2003Z			30-41-12	YC051-YC057
ST..	1A	W0420	2004Z			30-41-12	YC051-YC057
ST..	1	W0420	5502	16		30-41-12	YC058-YR328
AC..	1	W0420	5503	16		30-41-12	YC058-YR328
AC..	1A	W0420	5504	20		30-41-12	YC051-YC057
DC..	1A	W0420	5506	20		30-41-12	YC051-YC057
AC..	1A	W0420	5513	20		30-41-12	YC051-YC057
DC..	1A	W0420	5515	20		30-41-12	YC051-YC057
DC..	1A	W0422	0032	22		27-62-11	YC051-YC057
DC..	1A	W0422	0034	22		27-62-11	YC051-YC057
DC..	1A	W0422	0035	22		27-62-11	YC051-YC057
AC..	1	W0422	0124	18		24-32-11	YC058-YR328
AC..	1	W0422	0135	18		24-32-11	YC058-YR328
ST..	1A	W0422	1001Z			27-62-11	YC051-YC057
ST..	1A	W0422	1003Z			27-62-11	YC051-YC057
ST..	1A	W0422	1102Z			27-62-11	YC051-YC057
ST..	1A	W0422	1103Z			27-62-11	YC051-YC057
GD04205		BACC50AN16				E004-02/ /	YC051-YC057
ST..	1	W0420	5502	16		30-41-12	YC051-YC057

GROUND LIST

D280A108

91-21-21

Section GD04200

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD04205		BACC50AN16 (continued)				E004-02/ /	YC051-YC057
AC..	1	W0420	5503	16		30-41-12	YC051-YC057
AC..	1	W0422	0124	18		24-32-11	YC051-YC057
AC..	1	W0422	0135	18		24-32-11	YC051-YC057
GD04207		ST-				XXX/ /	ALL
ST..	E	W0420	5511	12		30-41-12	ALL
GD04208		AC-				XXX/ /	ALL
AC..	E	W0420	5512	12		30-41-12	ALL
GD04209		BACC50AN20				E004-02/ /	ALL
ST..	1A	W0422	2002Z			24-21-21	ALL
ST..	1A	W0422	3001Z			24-21-21	ALL
GD04210		BACC50AN20				E004-02/ /	ALL
GD04212		287A4355-2				E004-02/ /	YC056-YC061
GD04212		CGH20-22-1				E004-02/ /	YC062-YR328
ST..	1F	W0420	2001Z			30-41-12	YC058-YR328
ST..	1F	W0420	2004Z			30-41-12	YC058-YR328
GD04214		287A4355-2				E004-02/ /	YC056-YC061
GD04214		CGH20-22-1				E004-02/ /	YC062-YR328
ST..	1F	W0420	2002Z			30-41-12	YC058-YR328
ST..	1F	W0420	2003Z			30-41-12	YC058-YR328
GD04216		287A4355-2				E004-02/ /	YC058-YC061
GD04216		CGH20-22-1				E004-02/ /	YC062-YR328
ST..	1F	W0422	1001Z			27-62-11	YC058-YR328
ST..	1F	W0422	1003Z			27-62-11	YC058-YR328
ST..	1F	W0422	1102Z			27-62-11	YC058-YR328
ST..	1F	W0422	1103Z			27-62-11	YC058-YR328
GD04223		BACC50AN16				907/296/L028	YN501-YR328
DC..	1	W3058	0180	20		23-42-15	YN501-YR328
ST..	1	W3058	0181	20		23-42-15	YN501-YR328
ST..	1	W3058	0182	20		23-42-15	YN501-YR328
ST..	1	W3058	0183	20		23-42-15	YN501-YR328

GROUND LIST

D280A108

91-21-21

Section GD04200

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I GD04226		ST				IFSS 150/ /	ALL
I ST..	GW	W1280	2003Z			27-81-21	YC051-YN236, YN501-YR328
I ST..	GW	W1280	2004Z			27-81-21	YC051-YN236, YN501-YR328
I GD04228		ST				IFSS 165/ /	ALL
I ST..	E	W1280	2001Z			27-81-21	YC051-YN236, YN501-YR328
I GD04230		ST				IFSS 167/ /	ALL
I ST..	E	W1280	2002Z			27-81-21	YC051-YN236, YN501-YR328
GD04270		BACC50AN16				866/214/R067	YL951-YN260
DC..	1	W3349	0004	20		23-32-11	YN231-YN260
ST..	1	W3349	0005	20		23-32-11	YN231-YN260
ST..	1	W3349	0016	20		23-32-13	YN231-YN260
DC..	1	W3583	0004	20		23-32-11	YN231-YN260
ST..	1	W3583	0005	20		23-32-11	YN231-YN260
ST..	1	W3583	0016	20		23-32-11	YN231-YN260
DC..	1	W3583	0032	20		23-32-11	YL951-YL999
ST..	1	W3583	0033	20		23-32-11	YL951-YL999
ST..	1	W3583	0034	20		23-32-11	YL951-YL999
GD04272		BACC50AN16				887/296/R029	YN231-YN501
I GD04274		ST				E9-2/ /	ALL

GROUND LIST

D280A108

91-21-21

Section GD04200

Page 3 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I GD04300		ST-				OFSS 581/ /	ALL
I ST..	E	W1288	2009Z			27-81-22	ALL
I GD04302		ST-				OFSS 534/ /	ALL
I ST..	E	W1288	2010Z			27-81-22	ALL
I GD04308		ST-				655/165/L039	ALL
I ST..	GW	W5102	1203	20		33-44-11	YC051-YN236, YN501-YR328
I ST..	GW	W5102	1203Z			33-44-11	YC051-YN236, YN501-YR328

GROUND LIST

D280A108

91-21-21

Section GD04300

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD04402		ST-				IRSS 142/ /	ALL
ST..	E	W1134	1302Z			28-43-11	YC051-YD158, YL951-YN236, YN501-YR328
ST..	E	W1134	3601Z			28-23-11	YC051-YD158, YL951-YN236, YN501-YR328
GD04410		ST				IRSS/150/	ALL
ST..	E	W1136	1304Z			28-43-11	ALL
ST..	E	W1136	3601Z			28-23-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD04400

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD04801		ST-				1086/236/L008	ALL
ST..	E	W3391	FRAA			22-13-11	YC053-YR328
ST..	E	W3391	FRAB			22-13-11	YC053-YR328
ST..	E	W3391	FRAC			22-13-11	YC053-YR328
ST..	E	W3391	FRAD			22-13-11	YC053-YR328
ST..	E	W3391	YAAA			22-13-11	YC053-YR328
ST..	E	W4222	1004Z			27-41-12	YC053-YN236, YN501-YR328
ST..	E	W4222	1005Z			27-41-12	YC053-YN236, YN501-YR328
ST..	E	W4222	1006Z			27-41-12	YC053-YN236, YN501-YR328
ST..	E	W4222	1008Z			27-41-12	YC053-YN236, YN501-YR328
ST..	E	W4222	1009Z			27-41-12	YC053-YN236, YN501-YR328
ST..	E	W4222	YAAA			27-41-12	YC053-YN236, YN501-YR328
ST..	E	W6222	YAAA			27-41-12	YC051-YC052
ST..	E	W6222	YAAB			27-41-12	YC051-YC052
ST..	E	W6222	YAAC			27-41-12	YC051-YC052
GD04803		ST-				1040/301/L006	YC051-YC052
ST..	E	W3377	YAAA			27-32-31	YC051-YC052
ST..	E	W6134	YAAA			27-21-11	YC051-YC052
ST..	E	W6134	YAAB			27-25-11	YC051-YC052
ST..	E	W6134	YAAC			27-25-11	YC051-YC052
GD04804		ST-				1040/301/L06	YC051-YC052
ST..	E	W5726	YAAJ			26-21-11	YC051-YC052
ST..	E	W5726	YAAK			26-21-11	YC051-YC052
ST..	E	W6222	YAAA			27-41-12	YC051-YC052
ST..	E	W6222	YAAD			27-41-12	YC051-YC052
ST..	E	W6222	YAAE			27-41-12	YC051-YC052
ST..	E	W6222	YAAF			27-41-12	YC051-YC052
GD04805		ST-				1051/249/R044	ALL
ST..	E	W4726	1001Z			49-62-11	YC053-YR328
ST..	E	W4726	1002Z			49-62-11	YC053-YR328
ST..	E	W4726	1003Z			49-62-11	YC053-YR328
ST..	E	W5726	YAAT			49-62-11	YC051-YC052
GD04807		ST-				1065/241/R036	ALL
ST..	E	W4726	1004Z			49-62-11	YC053-YR328
ST..	E	W4726	1005Z			49-62-11	YC053-YR328
ST..	E	W5726	YAAR			49-62-11	YC051-YC052
ST..	E	W5726	YAAS			49-62-11	YC051-YC052

GROUND LIST

D280A108

91-21-21

Section GD04800

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number		Wire No.	GA	CO	Station / WL / BL	Effectivity
Term	Type	Bundle					Diagram	
I	GD04809	ST-					1163/273/RBL5	ALL
I	ST..	E	W3393	1013Z			22-18-11	YC053-YR328
I	ST..	E	W3393	1015Z			SPARE	YC053-YR328
I	ST..	E	W3393	1017Z			SPARE	YC053-YR328
I	ST..	E	W3393	1019Z			SPARE	YC053-YR328
I	ST..	E	W3393	2001Z			22-18-11	YC053-YR328
I	ST..	E	W3393	2006Z			22-18-11	YC053-YR328
I	ST..	E	W3393	2024Z			22-18-11	YC053-YR328
I	ST..	E	W3393	2026Z			22-18-11	YC053-YR328
I	GD04811	ST-					1162/266/RBL6	YC053-YR328
I	ST..	E	W3399	2003Z			22-12-41	YC053-YN236, YN501-YR328
I	ST..	E	W3399	2005Z			22-12-41	YC053-YN236, YN501-YR328
I	GD04813	ST-					1087/223/L022	ALL
I	ST..	E	W4726	1103Z			26-21-11	YC053-YR328
I	ST..	E	W4726	1105Z			26-21-11	YC053-YR328
	ST..	E	W5726	YAAH			26-21-11	YC051-YC052
	ST..	E	W5726	YAAJ			26-21-11	YC051-YC052
	ST..	E	W5726	YAAK			26-21-11	YC051-YC052
	ST..	E	W5726	YAAL			26-21-11	YC051-YC052
	ST..	E	W5726	YAAM			26-11-31	YC051-YC052
	GD04815	ST-					1040/299/L02	YC051-YC052
	ST..	E	W3379	YAAA			27-32-31	YC051-YC052
	ST..	E	W5726	YAAA			49-41-11	YC051-YC052
	ST..	E	W5726	YAAC			49-41-11	YC051-YC052
	ST..	E	W5726	YAAE			33-35-11	YC051-YC052
	ST..	E	W5726	YAAF			33-35-11	YC051-YC052
	ST..	E	W5726	YAAG			33-35-11	YC051-YC052
	ST..	E	W5726	YAAP			26-11-31	YC051-YC052
	ST..	E	W5726	YAAS			49-62-11	YC051-YC052
	ST..	E	W5726	YAAT			49-62-11	YC051-YC052
	ST..	E	W5726	YAAU			49-52-31	YC051-YC052
	ST..	E	W5726	YAAV			49-52-31	YC051-YC052
I	GD04834	DC-					533/187/L021	YC053-YR328
I	DC..	E	W5098	6011	20		26-23-11	YC053-YR328
I	GD04836	ST-					533/187/L020	YC053-YR328
I	ST..	E	W5098	6010	20		26-23-11	YC053-YR328

GROUND LIST

D280A108

91-21-21

Section GD04800

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I GD04838		ST-				533/173/L020	YC053-YR328
I ST..	E	W5098	6014	20		26-23-11	YC053-YR328
I ST..	E	W5098	6017	20		26-23-11	YC053-YR328
I GD04840		DC-				533/173/L021	YC053-YR328
I DC..	E	W5098	6013	20		26-23-11	YC053-YR328
I DC..	E	W5098	6016	20		26-23-11	YC053-YR328

GROUND LIST

D280A108

91-21-21

Section GD04800

Page 3 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD05002		BACC50AN16				807/297/R036	ALL
GD05006		AC-				/ /	ALL
GD05010		AC-				231/199/L014	ALL
AC..	E	W0443	0014KY	20		33-11-11	ALL
ST..	E	W5457	0002	22		22-11-31	ALL
AC..	E	W6110	0005	20		33-34-11	ALL
GD05014		AC-				196/203/R015	ALL
AC..	E	W6110	0006	20		33-34-11	YC051-YC064
AC..	E	W6110	0007	20		33-34-11	ALL
GD05016		AC-				350/175/L030	ALL
AC..	E	W6110	0073	20		33-34-11	ALL
GD05018		AC-				351/181/R023	ALL
AC..	E	W6110	0070	20		33-34-11	ALL
GD05060		DC-				534/187/R015	YC053-YR328
DC..	E	W5074	6002	20		26-23-11	YC053-YC057, YD158-YD170, YR315-YR316, YR319
DC..	E	W5074	6002	20		SPARE	YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
GD05062		ST-				534/187/R017	YC053-YR328
ST..	E	W5074	6001	20		26-23-11	YC053-YC057, YD158-YD170, YR315-YR316, YR319
ST..	E	W5074	6001	20		SPARE	YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
GD05064		ST-				533/174/R017	YC053-YR328
ST..	E	W5074	6005	20		26-23-11	YC053-YC057, YD158-YD170, YR315-YR316, YR319
ST..	E	W5074	6005	20		SPARE	YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
ST..	E	W5074	6008	20		26-23-11	YC053-YC057, YD158-YD170, YR315-YR316, YR319
ST..	E	W5074	6008	20		SPARE	YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328

GROUND LIST

D280A108

91-21-21

Section GD05000

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD05066		DC-				533/173/R015	YC053-YR328
DC..	E	W5074	6004	20		26-23-11	YC053-YC057, YD158-YD170, YR315-YR316, YR319
DC..	E	W5074	6004	20		SPARE	YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
DC..	E	W5074	6007	20		26-23-11	YC053-YC057, YD158-YD170, YR315-YR316, YR319
DC..	E	W5074	6007	20		SPARE	YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328

GROUND LIST

D280A108

91-21-21

Section GD05000

Page 2 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD05101		BACC50AN16				540/188/R026	ALL
DC..	1	W6730	0592	22		32-41-11	ALL
DC..	1	W6732	0592	22		32-41-11	ALL
DC..	1	W6732	6006	20		78-34-21	ALL
DC..	1	W6732	6007	20		78-36-21	ALL
DC..	1	W6732	6008	20		78-36-21	ALL
GD05108		BACC50AN16				537/193/L025	ALL
DC..	1	W5222	0592	20		32-41-11	ALL
DC..	1	W5222	6002	20		78-34-11	ALL
DC..	1	W5222	6004	20		78-36-11	ALL
DC..	1	W5222	6005	20		78-36-11	ALL
DC..	1	W5234	0592	22		32-41-11	ALL
DC..	1	W5728	0512	20		32-35-11	ALL
DC..	1	W5728	0592	22		32-41-11	ALL
GD05120		ST				655/154/L040	YC051-YL999, YR301-YR328
ST..	GW	W5102	2081Z			21-51-13	YC051-YL999, YR301-YR328
ST..	GW	W5102	5544	20		21-51-13	YC051-YL999, YR301-YR328
GD05122		ST-				645/151/L008	YC051-YL999, YR301-YR328
ST..	GW	W5102	0015	20		21-51-12	YD154-YL999, YR301-YR328
ST..	GW	W5102	1026	20		21-51-12	YC051-YD153
ST..	GW	W5102	1026Z			21-51-12	YC051-YD153
ST..	GW	W5102	1027Z			21-51-12	YD154-YL999, YR301-YR328
ST..	GW	W5102	1028Z			21-51-12	YD154-YL999, YR301-YR328
ST..	GW	W5102	2076Z			21-51-12	YD154-YL999, YR301-YR328
ST..	GW	W5102	2077Z			21-51-12	YD154-YL999, YR301-YR328
ST..	GW	W5102	2078Z			21-51-12	YD154-YL999, YR301-YR328
ST..	GW	W5102	FRAH			21-51-12	YC051-YD153
GD05124		AC				653/153/L009	YC051-YL999, YR301-YR328
AC..	GW	W5102	1027	20		21-51-12	YC051-YL999, YR301-YR328
AC..	GW	W5102	1027Z			21-51-12	YC051-YL999, YR301-YR328
GD05126		ST-				581/165/L036	YC051-YL999, YR301-YR328
ST..	GW	W5102	2082Z			21-51-14	YC051-YL999, YR301-YR328
GD05128		AC				578/154/L039	YC051-YL999, YR301-YR328
AC..	GW	W5102	0011	20		33-33-11	YC051-YL999, YR301-YR328

GROUND LIST

D280A108

91-21-21

Section GD05100

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number					Station / WL / BL	
Term	Type	Bundle	Wire No.	GA	CO	Diagram	Effectivity	
GD05130		ST-				579/152/L040	YC051-YL999, YR301-YR328	
ST..	GW	W5102	1001Z			21-51-15	YD154-YL999, YR301-YR328	
ST..	GW	W5102	1005Z			21-51-15	YD154-YL999, YR301-YR328	
ST..	GW	W5102	1033Z			21-51-15	YC051-YL999, YR301-YR328	
ST..	GW	W5102	1034Z			21-51-15	YC051-YL999, YR301-YR328	
ST..	GW	W5102	1049Z			21-61-51	YC051-YL999, YR301-YR328	
ST..	GW	W5102	1050Z			21-61-51	YC051-YL999, YR301-YR328	
ST..	GW	W5102	2079Z			21-51-12	YC051-YL999, YR301-YR328	
ST..	GW	W5102	2080Z			21-51-13	YC051-YL999, YR301-YR328	
ST..	GW	W5102	FRAD			21-51-15	YC051-YD153	

GROUND LIST

D280A108

91-21-21

Section GD05100

Page 2 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD05202		DC-				E005-02/ /	ALL
DC..	E	W0523	0313	22		34-21-21	ALL
DC..	E	W0523	0314	22		34-21-21	ALL
DC..	E	W0523	0315	22		34-21-21	YC051-YD153
DC..	=	W0523	0315	22		34-21-21	YD154-YR328
DC..	E	W0523	0334	20		34-21-21	ALL
DC..	E	W0523	0336	20		34-21-21	ALL
DC..	E	W0523	0338	22		34-61-18	YC059-YR328
DC..	E	W0523	0339	22		34-21-21	ALL
DC..	E	W0523	0340	22		34-21-21	ALL
DC..	E	W0523	0341	22		34-21-21	ALL
GD05205		AC-				E005-02/ /	ALL
AC..	E	W0523	0305	20		34-61-11	ALL
AC..	E	W0523	0331	20		34-21-21	ALL
AC..	E	W0523	0333	20		34-21-21	ALL
AC..	E	W0523	0353	22		34-21-21	ALL
AC..	E	W0523	0354	22		34-21-21	ALL
AC..	E	W0523	0355	22		34-21-21	ALL
AC..	E	W0523	0356	22		34-21-21	YC051-YD153
AC..	=	W0523	0356	22		34-21-21	YD154-YR328
GD05206		DC-				E005-02/ /	ALL
DC..	E	W0523	0306	20		34-61-11	ALL
GD05207		ST-				****/ /	ALL
GD05209		DC-				E005-02/ /	ALL
DC..	E	W0521	0008	22		34-61-12	ALL
DC..	E	W0521	0012	22		34-61-12	ALL
DC..	E	W0521	0016	22		34-61-12	ALL
DC..	E	W0521	0193	22		34-61-12	ALL
DC..	E	W0521	0195	22		34-61-12	ALL
DC..	E	W0521	0198	22		34-61-12	ALL
DC..	E	W0521	0279	22		34-61-18	YC059-YR328
GD05210		ST-				E005-02/ /	ALL
ST..	E	W0521	0142	20		34-21-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD05200

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD05213		DC-				E005-02/ /	ALL
DC..	E	W0521	0004	20		34-61-11	ALL
DC..	E	W0521	0064	22		34-61-19	ALL
DC..	E	W0521	0065	22		34-61-19	ALL
DC..	E	W0521	0088	22		34-61-19	ALL
DC..	E	W0521	0146	20		34-21-11	ALL
GD05218		DC-				E005-02/ /	ALL
DC..	E	W0521	0240	20		34-61-22	ALL
DC..	E	W0521	0241	20		34-61-22	ALL
GD05220		AC-				E005-02/ /	ALL
AC..	E	W0521	0003	20		34-61-11	ALL
AC..	E	W0521	0141	20		34-21-11	ALL
AC..	E	W0521	0145	20		34-21-11	ALL
AC..	E	W0521	0239	20		34-61-22	ALL
GD05221		DC-				E005-02/ /	ALL
DC..	E	W0521	0162	22		34-21-11	ALL
DC..	E	W0521	0163	22		34-21-11	ALL
DC..	E	W0521	0164	22		34-21-11	ALL
DC..	E	W0521	0174	22		34-21-11	ALL
DC..	E	W0521	0175	22		34-21-11	ALL
DC..	E	W0521	0176	22		34-21-11	ALL
DC..	E	W0521	0177	22		34-21-11	YC051-YD153
DC..	=	W0521	0177	22		34-21-11	YD154-YR328
DC..	E	W0521	0235	22		34-21-11	ALL
DC..	E	W0521	0236	22		34-21-11	YC051-YD153
DC..	=	W0521	0236	22		34-21-11	YD154-YR328
DC..	E	W0521	0237	22		34-21-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD05200

Page 2 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number		Station / WL / BL		Effectivity	
Term	Type	Bundle	Wire No.	GA	CO	Diagram	
I	GD05520	AC-				563/159/L007	YC051-YL999, YR301-YR328
I	AC..	GW	W5502	0003	20	33-33-11	YC051-YL999, YR301-YR328
I	AC..	GW	W5502	0004	20	33-33-11	YC051-YL999, YR301-YR328
I	AC..	GW	W5502	1035	20	21-61-11	YC051-YL999, YR301-YR328
I	AC..	GW	W5502	1035Z		21-61-11	YC051-YL999, YR301-YR328
I	GD05522	ST-				570/155/L007	YC051-YL999, YR301-YR328
I	GD05524	DC-				586/157/L007	YC051-YL999, YR301-YR328
I	DC..	GW	W5502	1004	20	21-51-11	YC051-YL999, YR301-YR328
I	DC..	GW	W5502	1004Z		21-51-11	YC051-YL999, YR301-YR328
I	DC..	GW	W5502	1005	20	21-51-11	YC051-YD152
I	DC..	GW	W5502	1005Z		21-51-11	YC051-YD152
I	DC..	GW	W5502	1006	20	21-51-11	YC051-YL999, YR301-YR328
I	DC..	GW	W5502	1006Z		21-51-11	YC051-YL999, YR301-YR328
I	DC..	GW	W5502	1016	20	21-51-11	YD153-YL999, YR301-YR328
I	DC..	GW	W5502	1016Z		21-51-11	YD153-YL999, YR301-YR328
I	GD05526	ST-				570/155/L007	YC051-YL999, YR301-YR328
I	ST..	GW	W5502	2001Z		21-51-11	YC051-YL999, YR301-YR328

GROUND LIST

D280A108

91-21-21

Section GD05500

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD06102							YC051-YD157
AC..	1	W0613	0003	20		23-15-11	YC051-YD157
ST..	1	W0613	0004	20		23-15-11	YC051-YD157
AC..	1	W0613	0006	20		23-15-11	YC051-YD157
ST..	1	W0613	0007	20		23-15-11	YC051-YD157
AC..	1	W0613	0009	20		23-15-11	YC051-YD157
ST..	1	W0613	0010	20		23-15-11	YC051-YD157
DC..	1	W0613	0027	22		23-15-15	YC051-YD157
GD06103		BACC50AN20				E006-01/ /	ALL
GD06106		DC-				320/160/L029	ALL
DC..	E	W5156	0637	18		38-31-31	YL951-YR328
GD06120		AC				578/154/R039	YC051-YL999, YR301-YR328
AC..	GW	W6202	0010	20		33-33-11	YC051-YL999, YR301-YR328
AC..	GW	W6202	0011	20		33-33-11	YC051-YL999, YR301-YR328
GD06122		ST-				581/165/R036	YC051-YL999, YR301-YR328
ST..	GW	W6202	2082Z			21-51-24	YC051-YL999, YR301-YR328
GD06124		ST-				645/150/R008	YC051-YL999, YR301-YR328
ST..	GW	W6202	1032Z			21-51-22	YD154-YL999, YR301-YR328
ST..	GW	W6202	1033Z			21-51-22	YD154-YL999, YR301-YR328
ST..	GW	W6202	2076Z			21-51-22	YD154-YL999, YR301-YR328
ST..	GW	W6202	2077Z			21-51-22	YD154-YL999, YR301-YR328
ST..	GW	W6202	2078Z			21-51-22	YD154-YL999, YR301-YR328
ST..	GW	W6202	5552	20		21-51-22	YC051-YL999, YR301-YR328
ST..	GW	W6202	FRAH			21-51-22	YC051-YD153
GD06126		AC				659/162/R040	YC051-YL999, YR301-YR328
AC..	GW	W6202	0013	20		33-33-11	YC051-YL999, YR301-YR328
GD06128		ST-				653/155/R040	YC051-YL999, YR301-YR328
ST..	GW	W6202	2081Z			21-51-23	YC051-YL999, YR301-YR328
ST..	GW	W6202	5553	20		21-51-23	YC051-YL999, YR301-YR328

GROUND LIST

D280A108

91-21-21

Section GD06100

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number		Wire No.	GA	CO	Station / WL / BL	Effectivity
Term	Type	Bundle					Diagram	
I	GD06201		BACC50AN16				E006-02/ /	YL951-YR328
I	AC..	1	W0621	0008	20		23-11-11	YL951-YR328
I	ST..	1	W0621	0010	20		23-11-11	YL951-YR328
I	DC..	1	W0621	0069	22		23-11-11	YL951-YR328
I	DC..	1	W0621	0129	22		23-11-11	YL951-YR328
I	DC..	1	W0621	0130	22		23-11-11	YL951-YR328
I	GD06202		BACC50AN16				E006-02/ /	YL951-YR328
I	AC..	1	W0621	0149	20		23-11-21	YL951-YR328
I	ST..	1	W0621	0150	20		23-11-21	YL951-YR328
I	DC..	1	W0621	0162	22		23-11-21	YL951-YR328
I	DC..	1	W0621	0163	22		23-11-21	YL951-YR328
I	DC..	1	W0621	0164	22		23-11-21	YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD06200

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number				Station / WL / BL	
Term	Type	Bundle	Wire No.	GA	CO	Diagram	Effectivity
GD06310		BACC50AN16				732/169/R009	YD160-YR328
ST..	1	W0063	1001Z			47-30-11	YD160-YR328
ST..	1	W0063	1002Z			47-30-11	YD160-YR328
ST..	1	W0063	1003Z			47-30-11	YD160-YR328
ST..	1	W0063	1004Z			47-30-11	YD160-YR328
ST..	1	W0063	1005Z			47-30-11	YD160-YR328
ST..	1	W0063	1006Z			47-30-11	YD160-YR328

GROUND LIST

D280A108

91-21-21

Section GD06300

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number		Wire No.	GA	CO	Station / WL / BL	Effectivity
Term	Type	Bundle					Diagram	
I	GD06522	AC-					588/162/R007	YC051-YL999, YR301-YR328
I	AC..	GW	W6502	0002	20		33-33-11	YC051-YL999, YR301-YR328
I	GD06524	DC-					563/158/R007	YC051-YL999, YR301-YR328
	DC..	GW	W6502	1005	20		21-51-21	YC051-YD152
	DC..	GW	W6502	1005Z			21-51-21	YC051-YD152
I	DC..	GW	W6502	1006	20		21-51-21	YC051-YL999, YR301-YR328
I	DC..	GW	W6502	1006Z			21-51-21	YC051-YL999, YR301-YR328
I	DC..	GW	W6502	1008	20		21-51-21	YC051-YL999, YR301-YR328
I	DC..	GW	W6502	1008Z			21-51-21	YC051-YL999, YR301-YR328
I	DC..	GW	W6502	1009Z			21-61-15	YC051-YL999, YR301-YR328
I	DC..	GW	W6502	1013	20		21-51-21	YD153-YL999, YR301-YR328
I	DC..	GW	W6502	1013Z			21-51-21	YD153-YL999, YR301-YR328
I	DC..	GW	W6502	5519	20		21-61-15	YC051-YL999, YR301-YR328
I	GD06526	ST-					600/159/R007	YC051-YL999, YR301-YR328
I	ST..	GW	W6502	1002Z			26-12-11	YC051-YL999, YR301-YR328
I	ST..	GW	W6502	1003Z			26-12-11	YC051-YL999, YR301-YR328

GROUND LIST

D280A108

91-21-21

Section GD06500

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number				Station / WL / BL	
Term	Type	Bundle	Wire No.	GA	CO	Diagram	Effectivity
GD07004		BACC50AN16				500C/218/L070	ALL
AC..	1	W3142	0061	18		33-41-11	YC051-YL999, YR301-YR328
ST..	1	W3142	0062	18		33-41-11	YC051-YL999, YR301-YR328
DC..	1	W3142	0501	16		33-51-11	YD158-YR328
ST..	1	W3142	0507	20		33-51-11	YD158-YR328
DC..	1	W3142	0554	20		33-51-21	YD158-YR328
DC..	1	W3142	0555	20		33-51-21	YD158-YR328

GROUND LIST

D280A108

91-21-21

Section GD07000

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD07226		BACC50AN16				727A/295/R031	YR301-YR328
AC..	1	W4166	0605	18		33-22-51	YR301-YR314, YR317-YR318, YR320-YR328
ST..	1	W4166	0606	18		33-22-51	YR301-YR314, YR317-YR318, YR320-YR328

GROUND LIST

D280A108

91-21-21

Section GD07200

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD08000		BACC50AN16				559/215/L067	YC051-YL999, YR301-YR328
DC..	1	W3142	0201	16		33-51-11	YC051-YL999, YR301-YR328
ST..	1	W3142	0207	20		33-51-11	YC051-YL999, YR301-YR328
DC..	1	W3142	0226	16		33-51-21	YC051-YD157
DC..	1	W3142	0227	20		33-51-21	YD158-YL999, YR301-YR328
DC..	1	W3142	0228	20		33-51-21	YD158-YL999, YR301-YR328
DC..	1	W3142	0252	16		33-51-21	YC051-YD157
DC..	1	W3142	0252	20		33-51-21	YD158-YL999, YR301-YR328
DC..	1	W3142	0437	20		52-71-13	YC051-YL999, YR301-YR328
AC..	1	W3142	5543	20		21-42-11	YC051-YL999, YR301-YR328
AC..	1	W3142	5545	20		21-42-11	YC051-YL999, YR301-YR328
GD08002		BACC50AN16				559/215/R067	YC051-YL999, YR301-YR328
DC..	1	W4142	0086	16		33-51-21	YC051-YD157
DC..	1	W4142	0086	20		33-51-21	YD158-YL999, YR301-YR328
DC..	1	W4142	0301	16		33-51-11	YC051-YL999, YR301-YR328
ST..	1	W4142	0307	20		33-51-11	YC051-YL999, YR301-YR328
DC..	1	W4142	0441	20		52-71-14	YC051-YL999, YR301-YR328
AC..	1	W4142	5543	20		21-42-11	YC051-YL999, YR301-YR328
AC..	1	W4142	5545	20		21-42-11	YC051-YL999, YR301-YR328
GD08004		BACC50AN16				500C/216/R069	YC051-YL999, YR301-YR328
AC..	1	W4142	0071	18		33-41-11	YC051-YL999, YR301-YR328
ST..	1	W4142	0072	18		33-41-11	YC051-YL999, YR301-YR328
DC..	1	W4142	0501	16		33-51-11	YC051-YL999, YR301-YR328
ST..	1	W4142	0507	20		33-51-11	YC051-YL999, YR301-YR328
GD08006		BACC50AN16				727D/221/R069	YC051-YL999, YR301-YR328
DC..	1	W4142	0201	16		33-51-11	YC051-YL999, YR301-YR328
ST..	1	W4142	0207	20		33-51-11	YC051-YL999, YR301-YR328
GD08008		AC-				343/286/R035	YC051-YL999, YR301-YR328
AC..	GY	W4256	0104	10		25-31-11	YC051-YD170
AC..	P	W4256	0104	08		25-31-11	YL951-YL999, YR301-YR328
GD08010		BACC50AN16				500D/295/L030	YC051-YL999, YR301-YR328
DC..	1	W3142	0066	20		33-51-12	YR301-YR328
DC..	1	W3142	0068	20		33-51-12	YC051-YL999
AC..	1	W3146	0032	18		33-22-21	YC051-YL999
ST..	1	W3146	0033	18		33-22-21	YC051-YL999
DC..	1	W3150	0924	18		33-27-21	YC051-YL999, YR301-YR328

GROUND LIST

D280A108

91-21-21

Section GD08000

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD08010		BACC50AN16 (continued)				500D/295/L030	YC051-YL999, YR301-YR328
AC..	1	W3166	0025	18		33-22-41	YR301-YR328
ST..	1	W3166	0026	18		33-22-41	YR301-YR328
AC..	1	W3166	0405	18		33-22-21	YR301-YR328
ST..	1	W3166	0406	18		33-22-21	YR301-YR328
DC..	1	W6288	0002	20		21-61-13	YC051-YL999, YR301-YR328
DC..	1	W6288	0012	20		21-61-51	YC051-YL999, YR301-YR328
GD08012		BACC50AN16				500H/295/L030	YC051-YL999, YR301-YR328
ST..	1	W3071	0003	20		23-32-41	YC051-YD170
ST..	1	W3071	0004	20		23-32-41	YD158-YD170
DC..	1	W3142	0064	16		33-51-12	YC051-YL999
DC..	1	W3142	0579	16		33-51-12	YR301-YR328
AC..	1	W3146	0132	18		33-22-21	YC051-YL999
ST..	1	W3146	0133	18		33-22-21	YC051-YL999
AC..	1	W3166	0035	18		33-22-41	YR301-YR328
ST..	1	W3166	0036	18		33-22-41	YR301-YR328
AC..	1	W3166	0045	18		33-22-41	YR301-YR328
ST..	1	W3166	0046	18		33-22-41	YR301-YR328
AC..	1	W3166	0255	18		33-22-21	YR301-YR328
ST..	1	W3166	0256	18		33-22-21	YR301-YR328
AC..	1	W3166	0265	18		33-22-21	YR301-YR328
ST..	1	W3166	0266	18		33-22-21	YR301-YR328
ST..	1	W3589	0004	20		23-32-41	YC051-YD170
ST..	1	W3605	0007	20		23-32-41	YL951-YL999
ST..	1	W3605	0010	20		23-32-41	YL951-YL999
ST..	1	W3605	0011	20		23-32-41	YL951-YL999
GD08014		BACC50AN16				500F/296/R031	YC051-YL999, YR301-YR328
AC..	1	W4146	0132	18		33-22-31	YC051-YL999
ST..	1	W4146	0133	18		33-22-31	YC051-YL999
AC..	1	W4166	0035	18		33-22-51	YR301-YR328
ST..	1	W4166	0036	18		33-22-51	YR301-YR328
AC..	1	W4166	0255	18		33-22-31	YR301-YR328
ST..	1	W4166	0256	18		33-22-31	YR301-YR328
GD08016		BACC50AN16				500G/296/R031	YC051-YL999, YR301-YR328
DC..	1	W4142	0073	16		33-51-12	YC051-YL999
DC..	1	W4142	0555	20		33-51-12	YR301-YR328

GROUND LIST

D280A108

91-21-21

Section GD08000

Page 2

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD08018		BACC50AN16				500I/296/R031	YC051-YL999, YR301-YR328
AC..	1	W4146	0142	18		33-22-31	YC051-YL999
ST..	1	W4146	0143	18		33-22-31	YC051-YL999
AC..	1	W4166	0045	18		33-22-51	YR301-YR328
ST..	1	W4166	0046	18		33-22-51	YR301-YR328
AC..	1	W4166	0265	18		33-22-31	YR301-YR328
ST..	1	W4166	0266	18		33-22-31	YR301-YR328
DC..	1	W6288	0007	20		21-61-14	YC051-YL999, YR301-YR328
DC..	1	W6288	0018	20		21-61-51	YC051-YL999, YR301-YR328
GD08020		BACC50AN16				727F/296/L028	YC051-YL999, YR301-YR328
DC..	1	W3142	0356	20		33-51-13	YR301-YR328
AC..	1	W3146	0072	18		33-22-22	YC051-YL999
ST..	1	W3146	0073	18		33-22-22	YC051-YL999
AC..	1	W3166	0145	18		33-22-41	YR301-YR328
ST..	1	W3166	0146	18		33-22-41	YR301-YR328
AC..	1	W3166	0355	18		33-22-22	YR301-YR314, YR317-YR318, YR320-YR328
ST..	1	W3166	0356	18		33-22-22	YR301-YR314, YR317-YR318, YR320-YR328
AC..	1	W3166	0545	18		33-22-22	YR315-YR316, YR319
ST..	1	W3166	0546	18		33-22-22	YR315-YR316, YR319
GD08022		BACC50AN16				727F/295/R030	YC051-YL999, YR301-YR328
DC..	1	W4142	0254	20		33-51-14	YC051-YL999
DC..	1	W4142	0627	20		33-51-14	YR301-YR328
AC..	1	W4146	0172	18		33-22-32	YC051-YL999
ST..	1	W4146	0173	18		33-22-32	YC051-YL999
AC..	1	W4166	0145	18		33-22-51	YR301-YR314, YR317-YR318, YR320-YR328
ST..	1	W4166	0146	18		33-22-51	YR301-YR314, YR317-YR318, YR320-YR328
AC..	1	W4166	0355	18		33-22-32	YR301-YR328
ST..	1	W4166	0356	18		33-22-32	YR301-YR328
AC..	1	W4166	0565	18		33-22-51	YR315-YR316, YR319
ST..	1	W4166	0566	18		33-22-51	YR315-YR316, YR319
GD08024		BACC50AN16				727H/297/L028	YC051-YL999
DC..	1	W3142	0455	20		33-51-14	YC051-YL999

GROUND LIST

D280A108

91-21-21

Section GD08000

Page 3

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD08026		BACC50AN16				727H/296/R031	YC051-YL999, YR301-YR328
AC..	1	W4146	0072	18		33-22-32	YC051-YL999
ST..	1	W4146	0073	18		33-22-32	YC051-YL999
AC..	1	W4166	0365	18		33-22-32	YR301-YR328
ST..	1	W4166	0366	18		33-22-32	YR301-YR328
AC..	1	W6288	0009	20		21-61-14	YC051-YL999, YR301-YR328
ST..	1	W6288	0010	20		21-61-14	YC051-YL999, YR301-YR328
DC..	1	W6288	0016	20		21-61-51	YC051-YL999, YR301-YR328
GD08028		BACC50AN16				727J/296/L028	YC051-YL999, YR301-YR328
ST..	1	W3073	0003	20		23-32-61	YC051-YD170
ST..	1	W3073	0004	20		23-32-61	YD158-YD170
AC..	1	W3146	0172	18		33-22-22	YC051-YL999
ST..	1	W3146	0173	18		33-22-22	YC051-YL999
AC..	1	W3166	0155	18		33-22-41	YR301-YR328
ST..	1	W3166	0156	18		33-22-41	YR301-YR328
AC..	1	W3166	0365	18		33-22-22	YR301-YR328
ST..	1	W3166	0366	18		33-22-22	YR301-YR328
ST..	1	W3589	0006	20		23-32-61	YC051-YD170
ST..	1	W3605	0017	20		23-32-61	YL951-YL999
ST..	1	W3605	0020	20		23-32-61	YL951-YL999
ST..	1	W3605	0021	20		23-32-61	YL951-YL999
GD08030		BACC50AN16				727J/296/R031	YC051-YL999, YR301-YR328
DC..	1	W4142	0408	16		33-51-14	YR301-YR328
DC..	1	W4142	0453	20		33-51-14	YC051-YD157
DC..	1	W4142	0453	18		33-51-14	YD158-YL999
AC..	1	W4166	0155	18		33-22-51	YR301-YR328
ST..	1	W4166	0156	18		33-22-51	YR301-YR328
GD08036		BACC50AN16				786/204/L029	YC051-YL999, YR301-YR328
DC..	1	W3142	0450	20		33-51-22	YC051-YD157
DC..	1	W3142	0470	20		33-51-22	YC051-YD157
GD08038		BACC50AN16				727F/204/L023	YC051-YL999, YR301-YR328
DC..	1	W3142	0060	16		33-51-14	YC051-YL999, YR301-YR328
DC..	1	W3142	0353	16		33-51-13	YC051-YL999, YR301-YR328
AC..	1	W6248	0298	20		33-36-12	YC051-YL999, YR301-YR328

GROUND LIST

D280A108

91-21-21

Section GD08000

Page 4

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD08040		BACC50AN16				727I/205/L020	YC051-YL999, YR301-YR328
AC..	1	W6248	0220	20		33-36-12	YC051-YL999, YR301-YR328
GD08042		BACC50AN16				500F/203/R004	YC051-YL999, YR301-YR328
ST..	1	W5086	6020	20		26-16-21	YC053-YL999, YR301-YR328
AC..	1	W5248	0054	20		33-36-11	YC051-YL999, YR301-YR328
GD08044		BACC50AN16				500G/202/L011	YC051-YL999, YR301-YR328
AC..	1	W5248	0036	20		33-36-11	YC051-YL999, YR301-YR328
GD08046		BACC50AN16				500B/203/R004	YC051-YL999, YR301-YR328
AC..	1	W5248	0080	20		33-36-11	YC051-YL999, YR301-YR328
GD08048		BACC50AN16				500D/203/L011	YC051-YL999, YR301-YR328
ST..	1	W5086	6010	20		26-16-21	YC053-YL999, YR301-YR328
AC..	1	W5248	0082	20		33-36-11	YC051-YL999, YR301-YR328
GD08050		BACC50AN16				926/219/R063	ALL
ST..	1	W4258	0092	18		25-29-11	ALL
AC..	1	W4258	0093	18		25-29-11	ALL
GD08054		BACC50AN16				380/296/L019	ALL
AC..	1	W3158	0303	18		33-25-51	ALL
ST..	1	W3497	0001	20		44-21-36	YN501-YR328
ST..	1	W3497	0002	20		44-21-36	YN501-YR328
ST..	1	W3497	0011	18		44-21-36	YN501-YR328
AC..	1	W3583	0002	20		23-32-11	YC051-YC058
DC..	1	W3583	0004	20		23-32-11	YC051-YC058
ST..	1	W3583	0005	20		23-32-11	YC051-YC058
GD08057		BACC50AN16				380/298/L011	YC059-YL999, YN501-YR328
DC..	1	W3477	0004	20		44-21-12	YN501-YR328
AC..	1	W3477	0005	20		44-21-12	YN501-YR328
ST..	1	W3477	0006	20		44-21-12	YN501-YR328
DC..	1	W3477	0011	20		44-21-12	YN501-YR328
ST..	1	W3477	0012	20		44-21-12	YN501-YR328
DC..	1	W3477	0038	20		44-21-12	YN501-YR328
AC..	1	W3477	0039	20		44-21-12	YN501-YR328
ST..	1	W3477	0040	20		44-21-12	YN501-YR328
DC..	1	W3583	0004	20		23-32-11	YC059-YL999

GROUND LIST

D280A108

91-21-21

Section GD08000

Page 5

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD08057		BACC50AN16 (continued)				380/298/L011	YC059-YL999, YN501-YR328
ST..	1	W3583	0005	20		23-32-11	YC059-YL999
ST..	1	W3583	0016	20		23-32-13	YD158-YL999
GD08058		BACC50AN16				419/299/R016	YC051-YN260, YR301-YR328
AC..	1	W4146	0012	18		33-22-31	YC051-YN260
ST..	1	W4146	0013	18		33-22-31	YC051-YN260
AC..	1	W4166	0215	18		33-22-31	YR301-YR328
ST..	1	W4166	0216	18		33-22-31	YR301-YR328
GD08068		BACC50AN16				727D/296/R031	YN501
AC..	1	W4166	0122	18		33-22-51	YN501
ST..	1	W4166	0123	18		33-22-51	YN501
AC..	1	W4166	0352	18		33-22-32	YN501
ST..	1	W4166	0353	18		33-22-32	YN501

GROUND LIST

D280A108

91-21-21

Section GD08000

Page 6 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I GD08101		BACC50AN16				E008-01/ /	YC051-YD170
AC..	1A	W0813	0002	20		23-31-06	YC051-YC052
ST..	1A	W0813	0003	20		23-31-06	YC051-YC052
ST..	1A	W0813	0012	20		23-34-01	YC051-YC052
AC..	1A	W0813	0013	20		23-34-01	YC051-YC052
AC..	1A	W0813	0023	20		23-34-01	YC051-YC052
ST..	1A	W0813	0024	20		23-34-01	YC051-YC052
I GD08102		BACC50AN16				E008-01/ /	YC051-YD170
I GD08103		S280W555-401				E008-01/ /	YC053-YD170
I AC..	1A	W0811	0008	20		23-11-11	YC053-YD170
I DC..	1A	W0811	0010	20		23-11-11	YC053-YD157
I ST..	1A	W0811	0010	20		23-11-11	YD158-YD170
I DC..	1A	W0811	0020	22		23-11-11	YC053-YD157
I DC..	1A	W0811	0071	22		23-11-11	YC059-YD170
AC..	1A	W0811	0149	20		23-11-21	YD158-YD170
ST..	1A	W0811	0150	20		23-11-21	YD158-YD170
DC..	1A	W0811	0162	22		23-11-21	YD158-YD170
DC..	1A	W0811	0163	22		23-11-21	YD158-YD170
DC..	1A	W0811	0164	22		23-11-21	YD158-YD170
DC..	1A	W0811	0166	22		23-11-26	YD158-YD170
DC..	1A	W0811	0180	22		23-11-16	YD158-YD170
I GD08104		BACC50AN20				E008-01/ /	YN501-YR328
I AC..	1A	W0811	0037	20		44-21-10	YN501-YR328
I DC..	1A	W0811	0111	22		44-21-26	YN501-YR328
I GD08105		BACC50AN20				E008-01/ /	YC051-YD170, YN501-YR328
AC..	1A	W0811	0008	20		23-11-11	YC051-YC052
DC..	1A	W0811	0010	20		23-11-11	YC051-YC052
DC..	1A	W0811	0020	22		23-11-11	YC051-YC052
I ST..	1A	W0811	0038	20		44-21-10	YN501-YR328
DC..	1A	W0811	0069	22		23-11-11	YD158-YD170
DC..	1A	W0811	0072	22		23-11-21	YD158-YD170
DC..	1A	W0811	0129	22		23-11-11	YD158-YD170
DC..	1A	W0811	0130	22		23-11-11	YD158-YD170
I AC..	1A	W0813	0002	20		23-31-06	YC053-YD157
I ST..	1A	W0813	0003	20		23-31-06	YC053-YD157
I ST..	1A	W0813	0012	20		23-34-01	YC053-YD170
I AC..	1A	W0813	0013	20		23-34-01	YC053-YD170

GROUND LIST

D280A108

91-21-21

Section GD08100

Page 1

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD08105		BACC50AN20 (continued)				E008-01/ /	YC051-YD170, YN501-YR328
AC..	1A	W0813	0023	20		23-34-01	YC053-YD170
ST..	1A	W0813	0024	20		23-34-01	YC053-YD170
GD08106		BACC50AN20				E008-01/ /	YC053-YD170
ST..	1A	W0813	0026	20		23-34-02	YC053-YD157
AC..	1A	W0813	0028	20		23-34-02	YC053-YD157
ST..	1A	W0813	0029	20		23-34-02	YC053-YD157
AC..	1A	W0813	0031	20		23-34-02	YC053-YD157
GD08109		BACC50AN16				E008-01/ /	YC051-YD170
ST..	1	W0813	0026	20		23-34-02	YC051-YC052
AC..	1	W0813	0028	20		23-34-02	YC051-YC052
ST..	1	W0813	0029	20		23-34-02	YC051-YC052
AC..	1	W0813	0031	20		23-34-02	YC051-YC052
GD08111		AC-				E8-1 312/184/R014	YL951-YL999, YR301-YR328

GROUND LIST

D280A108

91-21-21

Section GD08100

Page 2 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD08200		BACC50AN20				AJ0039/ /	YL953-YL999, YR301-YR328
DC..	1A	W0082	0006	20		27-62-11	YL953-YL999, YR301-YR328
DC..	1A	W0082	0010	20		27-62-11	YL953-YL999, YR301-YR328
DC..	1A	W0082	0011	20		27-62-11	YL953-YL999, YR301-YR328
DC..	1A	W0082	0019	20		27-62-11	YL953-YL999, YR301-YR328
DC..	1A	W0082	0033	20		27-62-11	YL953-YL999, YR301-YR328
DC..	1A	W0082	0034	20		27-62-11	YL953-YL999, YR301-YR328
DC..	1A	W0082	0036	20		27-62-11	YL953-YL999, YR301-YR328
DC..	1A	W0082	0037	20		27-62-11	YL953-YL999, YR301-YR328
DC..	1A	W0082	0053	20		27-62-11	YL953-YL999, YR301-YR328
DC..	1A	W0082	0054	20		27-62-11	YL953-YL999, YR301-YR328
GD08202		BACC50AN20				AJ0039/ /	YL953-YL999, YR301-YR328
DC..	1A	W0082	1017	20		27-62-11	YL953-YL999, YR301-YR328
DC..	1A	W0082	1026	20		27-62-11	YL953-YL999, YR301-YR328

GROUND LIST

D280A108

91-21-21

Section GD08200

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD0901A		BACC50AN16				P009-00/ /	ALL
ST..	1	W0003	0512	16		31-62-21	YC051-YD158, YL951-YR328
ST..	1	W0003	0513	16		31-62-21	YC051-YD158, YL951-YR328
ST..	1	W0003	0514	16		31-62-21	YC051-YD158, YL951-YR328
ST..	1	W0003	0515	16		31-62-21	YC051-YD158, YL951-YR328
GD0901B		BACC50AN20				P009-00/ /	ALL
AC..	1A	W2889	0003	20		34-61-11	ALL
DC..	1A	W2889	0004	20		34-61-11	ALL
DC..	1A	W2889	0005	20		34-61-11	ALL
DC..	1A	W2889	0006	20		34-61-11	ALL
AC..	1A	W2889	0009	20		33-11-33	ALL
GD0901C		BACC50AN20				P009-00/ /	ALL
DC..	1A	W0003	0532	22		31-62-22	YC051-YD158, YL951-YR328
DC..	1A	W0003	0533	22		31-62-22	YC051-YD158, YL951-YR328
AC..	1A	W5202	5511	20		33-14-11	ALL
DC..	1A	W5202	5515	20		33-14-11	ALL
ST..	1A	W5202	5516	20		33-14-11	ALL
DC..	1A	W5202	5524	20		33-14-11	ALL
AC..	1A	W5202	5533	20		33-14-11	ALL
DC..	1A	W5202	5534	20		33-14-11	ALL
DC..	1A	W5202	5535	20		33-14-11	ALL
ST..	1A	W5202	5536	20		33-14-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD09000

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD0911A		BACC50AN20				P009-00/ /	ALL
GD0911B		BACC50AN20				P009-00/ /	ALL
AC..	1A	W2873	0003	20		34-61-11	ALL
DC..	1A	W2873	0004	20		34-61-11	ALL
DC..	1A	W2873	0005	20		34-61-11	ALL
DC..	1A	W2873	0006	20		34-61-11	ALL
AC..	1A	W2873	0009	20		33-11-41	ALL
DC..	1A	W5514	5501	20		31-51-11	YC051-YD158, YL951-YR328
ST..	1A	W5514	5574	20		31-51-11	YC051-YD158, YL951-YR328
GD0911C		BACC50AN20				P009-00/ /	ALL
AC..	1A	W5202	5502	20		33-14-11	ALL
DC..	1A	W5202	5506	20		33-14-11	ALL
ST..	1A	W5202	5507	20		33-14-11	ALL
DC..	1A	W5202	5523	20		33-14-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD09100

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
--------------------	------	-----------------------	----------	----	----	------------------------------	-------------

I

GD09202

BACC50AN20

E9-2/ /

ALL

GROUND LIST

D280A108

91-21-21

Section GD09200

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number		Station / WL / BL			
Term	Type	Bundle	Wire No.	GA	CO	Diagram	Effectivity
GD10086		BACC50AN16				289/217/R057	ALL
DC..	1	W4142	0052	20		33-51-21	ALL
ST..	1	W6242	0051	18		25-29-11	ALL
AC..	1	W6242	0052	18		25-29-11	ALL

GROUND LIST

D280A108

91-21-21

Section GD10000

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD1010A		BACC50AN16				P001-00/ /	ALL
AC..	1	W0001	0204	16		33-11-31	YC051-YD158, YL951-YR328
AC..	1	W0001	0206	16		33-11-31	YC051-YD158, YL951-YL959, YN231-YN235
AC..	1	W0001	0326	20		33-11-31	YL951-YR328
GD1010B		BACC50AN20				P001-00/ /	ALL
DC..	1A	W0001	0235	20		33-18-11	YC051-YD158, YL951-YR328
DC..	1A	W0001	0245	20		33-18-23	YC051-YD158, YL951-YR328
AC..	1A	W0001	0265	20		33-14-11	YC051-YD158, YL951-YR328
DC..	1A	W0001	0341	20		31-22-11	YC054-YD158, YL951-YR328
ST..	1A	W0001	1009Z			33-11-32	YC053-YD158, YN231
DC..	1A	W0003	0689	20		33-18-21	YC051-YD158, YL951-YR328
GD1010C		BACC50AN20				P001-00/ /	ALL
DC..	1A	W0001	0179	20		31-52-11	YC051-YD158, YL951-YR328
AC..	1A	W0001	0197	20		33-11-11	YC051-YD158, YL951-YR328
AC..	1A	W0001	0220	20		33-11-32	YC051-YD158, YL951-YR328
AC..	1A	W0001	0222	20		33-11-32	YC051-YD158, YL951-YR328
AC..	1A	W0001	0224	20		33-11-32	YC051-YD158, YL951-YR328
AC..	1A	W0001	0226	20		33-11-11	YC051-YD158, YL951-YR328
AC..	1A	W0001	0230	20		33-11-32	YC051-YD158, YL951-YR328
AC..	1A	W0001	0232	20		33-11-32	YC051-YD158, YL951-YR328
ST..	1A	W0001	1009Z			33-11-32	YC051-YC052
AC..	1A	W0001	1010	20		33-11-32	YC051-YD158, YL951-YR328
ST..	1A	W0001	1010Z			33-11-32	YC051-YD158, YL951-YR328
GD10185		DC-				//	ALL
GD10189		DC-				//	ALL

GROUND LIST

D280A108

91-21-21

Section GD10100

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I GD11002		BACC50AN16				747/205/L003	YC053-YL999, YR301-YR328
I ST..	1	W5096	6025	20		26-16-22	YC053-YL999, YR301-YR328
I GD11004		BACC50AN16				727J/205/L030	YC053-YL999, YR301-YR328
I ST..	1	W5096	6010	20		26-16-22	YC053-YL999, YR301-YR328
I GD11098		BACC50AN16				986/300/L006	YL951-YL999, YN501-YR328
I ST..	1	W3058	0102	18		33-24-22	YN501-YR328
I AC..	1	W3058	0103	18		33-24-22	YN501-YR328
I ST..	1	W3311	0005	20		23-42-12	YL951-YL999

GROUND LIST

D280A108

91-21-21

Section GD11000

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD11100		BACC50AN16				294/288/L008	ALL
ST..	1	W3144	0101	18		33-26-31	ALL
DC..	1	W3144	0115	18		35-21-21	ALL
AC..	1	W3144	0128	18		33-25-11	ALL
ST..	1	W3144	0130	18		33-26-31	ALL
AC..	1	W3144	0139	18		33-26-31	ALL
AC..	1	W3144	0140	18		33-26-31	ALL
ST..	1	W3701	0001	20		23-70-11	YL951-YR328
GD11102		BACC50AN16				949/ /L	ALL
GD11104		BACC50AN16				1005/299/L013	ALL
DC..	1	W3377	0102	20		22-23-11	YC051-YC052
DC..	1	W3377	1009	20		22-23-11	YC053-YN236, YN501-YR328
DC..	1	W3377	1009Z			22-23-11	YC053-YN236, YN501-YR328
DC..	1	W3379	0102	20		27-24-11	YC051-YC052
DC..	1	W3379	1009	20		27-24-11	YC053-YN236, YN501-YR328
DC..	1	W3379	1009Z			27-24-11	YC053-YN236, YN501-YR328
GD11106		BACC50AN16				294/288/R009	ALL
DC..	1	W3058	0007	20		52-51-11	YC051-YD154
ST..	1	W3058	0320	20		SPARE	YD155-YD158, YL951-YR328
DC..	1	W4142	0701	16		33-51-11	YN501-YR328
ST..	1	W4142	0707	20		33-51-11	YN501-YR328
AC..	1	W6242	0057	20		33-26-21	ALL
ST..	1	W6242	0058	20		33-26-21	ALL
GD11108		BACC50AN16				360/297/R006	ALL
ST..	1	W3805	0002	24		23-70-11	YL951-YR328
ST..	1	W3805	0004	24		23-70-11	YL951-YR328
AC..	1	W4146	0008	18		33-26-31	YC051-YN260
AC..	1	W4166	0512	18		33-26-31	YN501-YR328
GD11110		BACC50AN16				480/ /	ALL

GROUND LIST

D280A108

91-21-21

Section GD11100

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

	Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
I	GD11306		BACC50AN16				300/263/L051	ALL
I	AC..	1	W5110	0101	20		52-71-11	ALL
I	GD11334		BACC50AN16				344/267/R055	ALL

GROUND LIST

D280A108

91-21-21

Section GD11300

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD11728		BACC50AN16				727+18/205/R024	ALL
AC..	1	W6248	0270	20		33-36-12	YC051-YN236, YN501-YR328
GD11730		BACC50AN16				727B/205/L022	ALL
DC..	1	W3142	0075	20		33-51-22	YC051-YD157
DC..	1	W3142	0350	20		33-51-22	YC051-YD157
ST..	1	W5096	6020	20		26-16-22	YC053-YR328
AC..	1	W6248	0272	20		33-36-12	YC051-YN236, YN501-YR328
GD11732		BACC50AN16				727C/204/L020	YC053-YR328
ST..	1	W5096	6005	20		26-16-22	YC053-YR328
GD11734		BACC50AN16				847/204/L002	YC053-YR328
ST..	1	W5096	6030	20		26-16-22	YC053-YR328
GD11738		BACC50AN16				767/204/L016	YN231-YN501
ST..	1	W5096	6025	20		26-16-22	YN231-YN501
GD11774		BACC50AN16				767/205/L002	ALL
ST..	1	W5096	6010	20		26-16-22	YN231-YN501
AC..	1	W6248	0268	20		33-36-12	YC051-YN236, YN501-YR328
AC..	1	W6248	0276	20		33-36-12	YC051-YN236, YN501-YR328
GD11794		BACC50AN16				775/199/R064	ALL
DC..	1	W6248	0146	20		52-71-12	YC051-YN236, YN501-YR328
AC..	1	W6248	0280	20		33-36-12	YC051-YN236, YN501-YR328
DC..	1	W6248	0286	20		33-36-12	YC051-YN236, YN501-YR328

GROUND LIST

D280A108

91-21-21

Section GD11700

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD11830		BACC50AN16				827/204/L030	ALL
ST..	1	W5096	6039	22		26-16-22	YC053-YR328
DC..	1	W5098	6019	22		26-16-22	YC053-YR328
DC..	1	W5098	6020	22		26-16-22	YC053-YR328
ST..	1	W5098	6021	22		26-16-22	YC053-YR328
ST..	1	W5112	0017	20		25-51-21	YC051-YL999, YR301-YR328
DC..	1	W5112	0018	20		25-51-21	YC051-YL999, YR301-YR328
AC..	1	W6248	0282	20		33-36-12	YC051-YN236, YN501-YR328
GD11894		BACC50AN16				887/204/R003	ALL
ST..	1	W5096	6015	20		26-16-22	YC053-YR328
DC..	1	W5146	0107	18		38-32-12	ALL
ST..	1	W5146	0110	18		38-32-12	ALL
DC..	1	W5146	0113	20		38-32-12	ALL
DC..	1	W5146	0115	20		38-32-12	ALL
DC..	1	W5146	0212	20		38-32-13	ALL
ST..	1	W5146	0213	20		38-32-13	ALL
DC..	1	W5146	0227	20		38-32-13	ALL
AC..	1	W6248	0284	20		33-36-12	YC051-YN236, YN501-YR328

GROUND LIST

D280A108

91-21-21

Section GD11800

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No.		Part Number		Station / WL / BL			
Term	Type	Bundle	Wire No.	GA	CO	Diagram	Effectivity
I	GD11996	BACC50AN16				991/197/L036	ALL
I	AC..	1	W6248	5501	20	30-71-11	YC051-YN236, YN501-YR328
I	AC..	1	W6248	5567	20	30-71-11	YC051-YN236, YN501-YR328
I	AC..	1	W6248	5569	20	30-71-11	YC051-YN236, YN501-YR328

GROUND LIST

D280A108

91-21-21

Section GD11900

Page 1 End

Nov 12/2012



737-700/800 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD3010A		BACC50AN16				P003-00/ /	ALL
AC..	1	W0003	0328	20		33-11-21	YL951-YR328
ST..	1	W0003	1509Z			33-11-21	YC051-YD158, YL951-YR328
GD3010B		BACC50AN20				P003-00/ /	ALL
DC..	1A	W0003	0304	20		31-22-11	YC054-YD158, YL951-YR328
DC..	1A	W0003	0697	20		33-18-22	YC051-YD158, YL951-YR328
DC..	1A	W0003	0701	20		33-18-24	YC051-YD158, YL951-YR328
DC..	1A	W0003	0703	20		33-18-24	YC051-YD158, YL951-YR328
GD3010C		BACC50AN20				P003-00/ /	ALL
DC..	1A	W0003	0652	20		31-52-11	YC051-YD158, YL951-YR328
AC..	1A	W0003	0669	20		33-11-21	YC051-YD158, YL951-YR328
AC..	1A	W0003	0671	20		33-11-21	YC051-YD158, YL951-YR328
AC..	1A	W0003	0676	20		33-11-21	YC051-YD158, YL951-YR328
AC..	1A	W0003	0678	20		33-11-21	YC051-YD158, YL951-YR328
AC..	1A	W0003	0680	20		33-11-21	YC051-YD158, YL951-YR328
AC..	1A	W0003	1510	20		33-11-21	YC051-YD158, YL951-YR328
ST..	1A	W0003	1510Z			33-11-21	YC051-YD158, YL951-YR328

GROUND LIST

D280A108

91-21-21

Section GD30100

Page 1 End

Nov 12/2012