

**91-21-13**

**MASTER BUNDLE LIST**

91-21-13  
MASTER BUNDLE LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
EFFECTIVE PAGES			R W0100	1	Nov 12/2012	W0330 cont.		
	1 thru 5	Nov 12/2012	R W0110	1	Nov 12/2012	R	3	Nov 12/2012
	6	BLANK	R	2	Nov 12/2012	R W0340	1	Nov 12/2012
R W0000	1	Nov 12/2012	R	3	Nov 12/2012	R W0350	1	Nov 12/2012
R	2	Nov 12/2012	R W0120	1	Nov 12/2012	R W0410	1	Nov 12/2012
R	3	Nov 12/2012	R	2	Nov 12/2012	R	2	Nov 12/2012
R	4	Nov 12/2012	R W0130	1	Nov 12/2012	R	3	Nov 12/2012
R	5	Nov 12/2012	R	2	Nov 12/2012	A	4	Nov 12/2012
R	6	Nov 12/2012	R W0140	1	Nov 12/2012	R W0420	1	Nov 12/2012
R W0010	1	Nov 12/2012	R	2	Nov 12/2012	R	2	Nov 12/2012
R	2	Nov 12/2012	R	3	Nov 12/2012	A	3	Nov 12/2012
R W0020	1	Nov 12/2012	R W0150	1	Nov 12/2012	R W0440	1	Nov 12/2012
R W0040	1	Nov 12/2012	R	2	Nov 12/2012	R W0450	1	Nov 12/2012
R	2	Nov 12/2012	R W0160	1	Nov 12/2012	R W0520	1	Nov 12/2012
R	3	Nov 12/2012	R W0200	1	Nov 12/2012	R	2	Nov 12/2012
R	4	Nov 12/2012	R W0210	1	Nov 12/2012	R W0610	1	Nov 12/2012
R W0050	1	Nov 12/2012	R	2	Nov 12/2012	R W0620	1	Nov 12/2012
R W0060	1	Nov 12/2012	R W0220	1	Nov 12/2012	R W0730	1	Nov 12/2012
R	2	Nov 12/2012	R	2	Nov 12/2012	R W0760	1	Nov 12/2012
R W0070	1	Nov 12/2012	R	3	Nov 12/2012	R W0810	1	Nov 12/2012
R	2	Nov 12/2012	R W0310	1	Nov 12/2012	R	2	Nov 12/2012
R	3	Nov 12/2012	R	2	Nov 12/2012	R W1020	1	Nov 12/2012
R	4	Nov 12/2012	R W0320	1	Nov 12/2012	R	2	Nov 12/2012
R W0080	1	Nov 12/2012	R	2	Nov 12/2012	R W1030	1	Nov 12/2012
R	2	Nov 12/2012	R	3	Nov 12/2012	R	2	Nov 12/2012
R	3	Nov 12/2012	R	4	Nov 12/2012	R W1060	1	Nov 12/2012
R	4	Nov 12/2012	R W0330	1	Nov 12/2012	R W1080	1	Nov 12/2012
R W0090	1	Nov 12/2012	R	2	Nov 12/2012	R W1120	1	Nov 12/2012

A = Added, R = Revised, D = Deleted, O = Overflow

## MASTER BUNDLE LIST

D280A108

## EFFECTIVE PAGES

Page 1  
Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

### 91-21-13 MASTER BUNDLE LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
R W1130	1	Nov 12/2012	R W2240	1	Nov 12/2012	W3050 cont.		
R W1140	1	Nov 12/2012	R W2250	1	Nov 12/2012	R	2	Nov 12/2012
R W1160	1	Nov 12/2012	R W2260	1	Nov 12/2012	R	3	Nov 12/2012
R W1170	1	Nov 12/2012	R W2300	1	Nov 12/2012	R W3060	1	Nov 12/2012
R W1180	1	Nov 12/2012	R W2360	1	Nov 12/2012	R W3070	1	Nov 12/2012
R W1240	1	Nov 12/2012	R W2380	1	Nov 12/2012	R W3090	1	Nov 12/2012
R W1260	1	Nov 12/2012	R W2400	1	Nov 12/2012	R W3100	1	Nov 12/2012
R W1270	1	Nov 12/2012	R W2410	1	Nov 12/2012	R W3130	1	Nov 12/2012
R W1280	1	Nov 12/2012	R W2460	1	Nov 12/2012	R W3140	1	Nov 12/2012
R W1660	1	Nov 12/2012	R W2500	1	Nov 12/2012	R	2	Nov 12/2012
R W2000	1	Nov 12/2012	R W2510	1	Nov 12/2012	R	3	Nov 12/2012
R W2010	1	Nov 12/2012	R W2520	1	Nov 12/2012	R	4	Nov 12/2012
R W2020	1	Nov 12/2012	R W2530	1	Nov 12/2012	R	5	Nov 12/2012
R W2030	1	Nov 12/2012	R W2580	1	Nov 12/2012	A	6	Nov 12/2012
R W2100	1	Nov 12/2012	R W2590	1	Nov 12/2012	R W3150	1	Nov 12/2012
R	2	Nov 12/2012	R W2650	1	Nov 12/2012	R	2	Nov 12/2012
R W2110	1	Nov 12/2012	R W2660	1	Nov 12/2012	R	3	Nov 12/2012
R W2130	1	Nov 12/2012	R W2700	1	Nov 12/2012	R W3160	1	Nov 12/2012
R W2140	1	Nov 12/2012	O W2730	1	Nov 12/2012	R	2	Nov 12/2012
R W2150	1	Nov 12/2012	R W2800	1	Nov 12/2012	R	3	Nov 12/2012
R W2160	1	Nov 12/2012	R W2870	1	Nov 12/2012	A	4	Nov 12/2012
R W2170	1	Nov 12/2012	R W2880	1	Nov 12/2012	R W3170	1	Nov 12/2012
R W2200	1	Nov 12/2012	R W3000	1	Nov 12/2012	R W3190	1	Nov 12/2012
R W2210	1	Nov 12/2012	R W3010	1	Nov 12/2012	O W3200	1	Nov 12/2012
R	2	Nov 12/2012	R W3020	1	Nov 12/2012	R W3240	1	Nov 12/2012
A	3	Nov 12/2012	R W3030	1	Nov 12/2012	O W3250	1	Nov 12/2012
R W2220	1	Nov 12/2012	R W3040	1	Nov 12/2012	R W3260	1	Nov 12/2012
R W2230	1	Nov 12/2012	R W3050	1	Nov 12/2012	R W3270	1	Nov 12/2012

A = Added, R = Revised, D = Deleted, O = Overflow

#### MASTER BUNDLE LIST

D280A108

#### EFFECTIVE PAGES

Page 2  
Nov 12/2012

**91-21-13  
MASTER BUNDLE LIST**

Section	Page	Date	Section	Page	Date	Section	Page	Date
R W3280	1	Nov 12/2012	W3700 cont.			R W5030	1	Nov 12/2012
R W3290	1	Nov 12/2012	R	2	Nov 12/2012	R W5040	1	Nov 12/2012
R W3300	1	Nov 12/2012	R W3710	1	Nov 12/2012	R W5050	1	Nov 12/2012
R W3310	1	Nov 12/2012	R W3800	1	Nov 12/2012	R W5070	1	Nov 12/2012
R W3320	1	Nov 12/2012	R W3890	1	Nov 12/2012	R W5080	1	Nov 12/2012
R W3330	1	Nov 12/2012	R W3900	1	Nov 12/2012	R W5090	1	Nov 12/2012
O W3340	1	Nov 12/2012	R W4000	1	Nov 12/2012	R W5100	1	Nov 12/2012
R W3370	1	Nov 12/2012	R W4110	1	Nov 12/2012	R	2	Nov 12/2012
R W3380	1	Nov 12/2012	R W4130	1	Nov 12/2012	R	3	Nov 12/2012
R W3390	1	Nov 12/2012	R W4140	1	Nov 12/2012	R W5110	1	Nov 12/2012
R	2	Nov 12/2012	R	2	Nov 12/2012	R	2	Nov 12/2012
R W3410	1	Nov 12/2012	R	3	Nov 12/2012	R W5120	1	Nov 12/2012
R W3470	1	Nov 12/2012	R	4	Nov 12/2012	R W5130	1	Nov 12/2012
R W3490	1	Nov 12/2012	R	5	Nov 12/2012	R W5140	1	Nov 12/2012
R W3500	1	Nov 12/2012	R W4160	1	Nov 12/2012	R W5150	1	Nov 12/2012
R W3510	1	Nov 12/2012	R	2	Nov 12/2012	R	2	Nov 12/2012
O W3520	1	Nov 12/2012	R	3	Nov 12/2012	R	3	Nov 12/2012
R W3550	1	Nov 12/2012	R	4	Nov 12/2012	R W5160	1	Nov 12/2012
R W3570	1	Nov 12/2012	R W4170	1	Nov 12/2012	R	2	Nov 12/2012
R W3580	1	Nov 12/2012	R W4180	1	Nov 12/2012	R	3	Nov 12/2012
R W3590	1	Nov 12/2012	R W4190	1	Nov 12/2012	R W5170	1	Nov 12/2012
R W3600	1	Nov 12/2012	R W4220	1	Nov 12/2012	R W5180	1	Nov 12/2012
R W3650	1	Nov 12/2012	R W4240	1	Nov 12/2012	R W5190	1	Nov 12/2012
R	2	Nov 12/2012	R W4250	1	Nov 12/2012	R W5200	1	Nov 12/2012
R W3660	1	Nov 12/2012	R	2	Nov 12/2012	R W5220	1	Nov 12/2012
R W3670	1	Nov 12/2012	R	3	Nov 12/2012	R W5230	1	Nov 12/2012
R W3690	1	Nov 12/2012	R W4720	1	Nov 12/2012	A	2	Nov 12/2012
R W3700	1	Nov 12/2012	R W5000	1	Nov 12/2012	R W5240	1	Nov 12/2012

A = Added, R = Revised, D = Deleted, O = Overflow

**MASTER BUNDLE LIST**

D280A108

**EFFECTIVE PAGES**

Page 3  
Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

### 91-21-13 MASTER BUNDLE LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
R W5250	1	Nov 12/2012	R W5720	1	Nov 12/2012	R W6430	1	Nov 12/2012
R W5270	1	Nov 12/2012	R	2	Nov 12/2012	R W6490	1	Nov 12/2012
R W5290	1	Nov 12/2012	R W5830	1	Nov 12/2012	R W6500	1	Nov 12/2012
R W5300	1	Nov 12/2012	R W6020	1	Nov 12/2012	R W6510	1	Nov 12/2012
R W5310	1	Nov 12/2012	R W6030	1	Nov 12/2012	R W6520	1	Nov 12/2012
R W5330	1	Nov 12/2012	R W6100	1	Nov 12/2012	R W6530	1	Nov 12/2012
R W5350	1	Nov 12/2012	R W6110	1	Nov 12/2012	R W6560	1	Nov 12/2012
R W5360	1	Nov 12/2012	R W6120	1	Nov 12/2012	R W6570	1	Nov 12/2012
R W5370	1	Nov 12/2012	R	2	Nov 12/2012	R W6580	1	Nov 12/2012
R W5380	1	Nov 12/2012	R W6130	1	Nov 12/2012	R W6730	1	Nov 12/2012
R W5390	1	Nov 12/2012	R W6160	1	Nov 12/2012	R W7020	1	Nov 12/2012
R W5400	1	Nov 12/2012	R W6170	1	Nov 12/2012	R W7030	1	Nov 12/2012
R W5410	1	Nov 12/2012	R W6180	1	Nov 12/2012	R W7050	1	Nov 12/2012
R W5430	1	Nov 12/2012	R W6200	1	Nov 12/2012	R W7060	1	Nov 12/2012
R W5450	1	Nov 12/2012	R	2	Nov 12/2012	R W7100	1	Nov 12/2012
R W5460	1	Nov 12/2012	R	3	Nov 12/2012	R W7120	1	Nov 12/2012
R W5500	1	Nov 12/2012	R W6210	1	Nov 12/2012	R	2	Nov 12/2012
R	2	Nov 12/2012	R	2	Nov 12/2012	R W7130	1	Nov 12/2012
R	3	Nov 12/2012	R W6220	1	Nov 12/2012	R W7150	1	Nov 12/2012
R W5510	1	Nov 12/2012	R W6230	1	Nov 12/2012	R W7180	1	Nov 12/2012
R W5520	1	Nov 12/2012	R W6240	1	Nov 12/2012	R W7190	1	Nov 12/2012
R W5530	1	Nov 12/2012	R	2	Nov 12/2012	R W7200	1	Nov 12/2012
R W5560	1	Nov 12/2012	R	3	Nov 12/2012	R W7220	1	Nov 12/2012
R W5580	1	Nov 12/2012	R	4	Nov 12/2012	R W7230	1	Nov 12/2012
R W5590	1	Nov 12/2012	R W6280	1	Nov 12/2012	R W7350	1	Nov 12/2012
R W5600	1	Nov 12/2012	R W6410	1	Nov 12/2012	R W7380	1	Nov 12/2012
R W5610	1	Nov 12/2012	A	2	Nov 12/2012	R W7500	1	Nov 12/2012
R W5710	1	Nov 12/2012	R W6420	1	Nov 12/2012	R W7520	1	Nov 12/2012

A = Added, R = Revised, D = Deleted, O = Overflow

#### MASTER BUNDLE LIST

D280A108

#### EFFECTIVE PAGES

Page 4  
Nov 12/2012

91-21-13  
MASTER BUNDLE LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
R W7530	1	Nov 12/2012						
R W7540	1	Nov 12/2012						
R W7580	1	Nov 12/2012						
R W7590	1	Nov 12/2012						
R W7760	1	Nov 12/2012						
R W8020	1	Nov 12/2012						
R W8030	1	Nov 12/2012						
R W8120	1	Nov 12/2012						
R W8130	1	Nov 12/2012						
R W8150	1	Nov 12/2012						
R W8220	1	Nov 12/2012						
R	2	Nov 12/2012						
R W8230	1	Nov 12/2012						
R W8480	1	Nov 12/2012						
R W8520	1	Nov 12/2012						
R W8530	1	Nov 12/2012						
D	2	BLANK						

A = Added, R = Revised, D = Deleted, O = Overflow

MASTER BUNDLE LIST

D280A108

EFFECTIVE PAGES

Page 5  
Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0001	NA2	P1 - CAPTAINS INSTRUMENT PANEL				
D40738J				D40738P	W0104	YC051-YD158, YL951-YR328
D03979A			192/230/L013			YC051-YD158, YL951-YR328
D03977A			P001-00/ /			YC051-YD158, YL951-YR328
D03977B			P001-00/ /			YC051-YD158, YL951-YR328
D03979B			P001-00/ /			YC051-YD158, YL951-YR328
D03981A			P002-00/ /			YC051-YD158, YL951-YR328
D03981B			P002-00/ /			YC051-YD158, YL951-YR328
D04207J		AP0900A	POS 03	D04207P	W2207	YC051-YD158, YL951-YR328
D40578J		AP0900A	POS 04	D40578P	W5156	YC051-YD158, YL951-YR328
D04221J		AP0900A	POS 09	D04221P	W2221	YC051-YD158, YL951-YR328
D40914J		AP0900A	POS 10	D40914P	W2022	YC051-YD158, YL951-YR328
D40944J		AP0900A	POS 11	D40944P	W5202	YC051-YD158, YL951-YR328
D41823J		AP0900A	POS 17	D41823P	W2175	YC051-YC052
D40804J		AP0900A	POS 18	D40804P	W5506	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40804J		AP0900A	POS 18	D40804P		YL969-YL999, YN237-YN260
D41833J		AP0900A	POS 19	D41833P	W2651	YC051-YD158, YL951-YR328
D10030J		AP0900A	POS 25	D10030P	W3704	YL952-YL999, YN232-YR328
D10030P		AP0900A	POS 25	D10030J	W3704	YL951, YN231
D10031		M01810	193/219/L007			YC051-YD158, YL951-YR328
D10033		M01810	193/219/L007			YC051-YD158, YL951-YR328

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W0000

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0001</b>	<b>NA2</b>	<b>P1 - CAPTAINS INSTRUMENT PANEL (continued)</b>				
D10035		M01810	193/219/L007			YC051-YD158, YL951-YR328
D10037		M01810	193/219/L007			YC051-YD158, YL951-YR328
D10039		M01810	193/219/L007			YC051-YD158, YL951-YR328
D10041		M01810	193/219/L007			YC051-YD158, YL951-YR328
D10059		M01812	193/218/L007			YC051-YD158, YL951-YR328
D10061		M01812	193/218/L007			YC051-YD158, YL951-YR328
D10063		M01812	193/218/L007			YC051-YD158, YL951-YR328
D10065		M01812	193/218/L007			YC051-YD158, YL951-YR328
D10067		M01812	193/218/L007			YC051-YD158, YL951-YR328
D10069		M01812	193/218/L007			YC051-YD158, YL951-YR328
D11990		M01952	P002-03/ /			YC051-YD158, YL951-YR328
D00319		N00041	P002-01/ /			YC051-YD158, YL951-YL959, YN231-YN235
D00686		N00054	P002-02/ /			YC051-YD158, YL951-YR328
D00714		N00145	P001-01/ /			YC051-YD158, YL951-YR328
D02435		N00170	P001-03/ /			YC051-YD158, YL951-YR328
D02437		N00170	P001-03/ /			YC051-YD158, YL951-YR328
D03977		N00187	P001-00/ /			YC051-YD158, YL951-YR328
D03979		N00188	P001-00/ /			YC051-YD158, YL951-YR328
D03981		N00189	P002-00/ /			YC051-YD158, YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0000

Page 2

Nov 12/2012





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0001</b>	<b>NA2</b>	<b>P1 - CAPTAINS INSTRUMENT PANEL (continued)</b>				
D00903		P001-01	P001-00/ /			YC051-YD158, YL951-YR328
D00423		P001-03	P001-00/ /			YC051-YD158, YL951-YR328
D01036		P001-05	P001-00/ /			YC051-YD158, YL951-YR328
D02650		P001-09	P001-00/ /			YC051-YD158, YL951-YR328
D00331		P002-02	P002-00/ /			YC051-YD158, YL951-YR328
D00339		P002-02	P002-00/ /			YC051-YD158, YL951-YR328
D11732		P002-03	P002-00/ /			YC051-YD158, YL951-YR328
D03999		P003-01	P003-00/ /			YC051-YD158, YL951-YR328
D03993		P007-01	P007-01/ /			YC051-YD158, YL951-YR328
D11810		P041-00	P041-00/ /			YC051-YD158, YL951-YR328
D11812		P041-00	P041-00/ /			YC051-YD158, YL951-YR328
<b>W0003</b>	<b>NB2</b>	<b>P3 - F/O INSTRUMENT PANEL</b>				
D10032P D40740J				D10032J D40740P	W3706 W0204	YL951, YN231 YC051-YD158, YL951-YR328
D03983B			* / /			YC051-YD158, YL951-YR328
D03985B			* / /			YC051-YD158, YL951-YR328
D03987B			* / /			YC051-YD158, YL951-YR328
D03983A			199/221/R001			YC051-YD158, YL951-YR328
D03985A			P003-00/ /			YC051-YD158, YL951-YR328
D03987A			P003-00/ /			YC051-YD158, YL951-YR328

## MASTER BUNDLE LIST

D280A108

91-21-13

Section W0000

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0003</b>	<b>NB2</b>	<b>P3 - F/O INSTRUMENT PANEL (continued)</b>				
D40824J		AP0900A	POS 05	D40824P	W5514	YC051-YD158, YL951-YR328
D04237J		AP0900A	POS 06	D04237P	W2237	YC051-YD158, YL951-YR328
D40580J		AP0900A	POS 07	D40580P	W5160	YC051-YD158, YL951-YR328
D40924J		AP0900A	POS 14	D40924P	W2030	YC051-YD158, YL951-YR328
D46033J		AP0900A	POS 16	D46033P	W2383	YC051-YD158, YL951-YR328
D04251J		AP0900A	POS 23	D04251P	W2251	YC051-YD158, YL951-YR328
D10032J		AP0900A	POS 26	D10032P	W3706	YL952-YL999, YN232-YR328
D10034J		AP0900A	POS 27	D10034P	W3705	YL952-YL999, YN232-YR328
D10034P D10045		AP0900A M01811	POS 27 197/218/R007	D10034J	W3705	YL951, YN231 YC051-YD158, YL951-YR328
D10047		M01811	197/218/R007			YC051-YD158, YL951-YR328
D10049		M01811	197/218/R007			YC051-YD158, YL951-YR328
D10051		M01811	197/218/R007			YC051-YD158, YL951-YR328
D10053		M01811	197/218/R007			YC051-YD158, YL951-YR328
D10055		M01811	197/218/R007			YC051-YD158, YL951-YR328
D10073		M01813	197/216/R007			YC051-YD158, YL951-YR328
D10075		M01813	197/216/R007			YC051-YD158, YL951-YR328
D10077		M01813	197/216/R007			YC051-YD158, YL951-YR328
D10079		M01813	197/216/R007			YC051-YD158, YL951-YR328
D10081		M01813	197/216/R007			YC051-YD158, YL951-YR328

**MASTER BUNDLE LIST**  
D280A108

**91-21-13**  
Section W0000  
Page 4  
Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0003</b>	<b>NB2</b>	<b>P3 - F/O INSTRUMENT PANEL (continued)</b>				
D10083		M01813	197/216/R007			YC051-YD158, YL951-YR328
D00716		N00146	P003-03/ /			YC051-YD158, YL951-YR328
D02678		N00158	P003-01/ /			YC051-YD158, YL951-YR328
D02439		N00171	P003-01/ /			YC051-YD158, YL951-YR328
D02441		N00171	P003-01/ /			YC051-YD158, YL951-YR328
D03983		N00190	P009-00/ /			YC051-YD158, YL951-YR328
D03985		N00191	P003-00/ /			YC051-YD158, YL951-YR328
D03987		N00192	P003-00/ /			YC051-YD158, YL951-YR328
D00895		P001-03	P001-00/ /			YC051-YD158, YL951-YR328
D00333		P002-02	P002-00/ /			YC051-YD158, YL951-YR328
D03991		P003-01	P003-00/ /			YC051-YD158, YL951-YR328
D01038		P003-04	P003-00/ /			YC051-YD158, YL951-YR328
D01205		P003-07	P003-00/ /			YC051-YD158, YL951-YR328
D03995		P007-02	P007-02/ /			YC051-YD158, YL951-YR328
D11842		P042-00	P042-00/ /			YC051-YD158, YL951-YR328
D11844		P042-00	P042-00/ /			YC051-YD158, YL951-YR328
<b>W0008</b>	<b>SN2</b>	<b>CONTROL STAND (PURCHASED BUNDLE: DWG NO. 254A1221)</b>				
D05148J		AF0213A	POS 01	D05148P	W6208	YC051-YD158, YL951-YR328
D05148J		AF0213A	POS 01	D05148P		YD160-YD170
D05150J		AF0213A	POS 04	D05150P	W6208	YC051-YD158, YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0000

Page 5

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
-----------------	-----	-------------------------	----------	--------------	-----------	-------------

**W0008      SN2      CONTROL STAND (PURCHASED BUNDLE: DWG NO. 254A1221) (continued)**

I	D05150J	AF0213A	POS 04	D05150P		YD160-YD170
I	D02487	AF0222A	POS 03	D00417		ALL
I	D03524	AF0222A	POS 05	D00698		ALL
I	D02485	R00384	P008-00/ /			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0000

Page 6 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0010</b>	<b>NN2</b>	<b>FWD GALLEY LIGHT MODULE (M01839)</b>				
D11400				D11398		ALL
D11396		M01838	324/291/R023			ALL
<b>W0018</b>	<b>*</b>	<b>P18</b>				
D40218P		AP0600A	POS 09	D40218J	W0044	ALL
D40198J		AP1800A	POS 01	D40198P	W3150	ALL
D48901J		AP1800A	POS 02	D48901P	W3381	ALL
D40524J		AP1800A	POS 04	D40524P	W2212	ALL
D40538J		AP1800A	POS 05	D40538P	W2218	ALL
D40220J		AP1800A	POS 06	D40220P	W3144	ALL
D40298J		AP1800A	POS 07	D40298P	W4250	ALL
D40504J		AP1800A	POS 08	D40504P	W2104	YC051-YD158, YL951-YR328
D40504J		AP1800A	POS 08	D40504P		YD160-YD170
D40514J		AP1800A	POS 09	D40514P		YC051-YC052
D40514J		AP1800A	POS 09	D40514P	W2112	YC053-YR328
D40522J		AP1800A	POS 10	D40522P	W2114	ALL
D40208J		AP1800A	POS 11	D40208P	W4190	YD158-YD170
D40687J		AP1800A	POS 12	D40687P	W3004	YL963-YL999, YN236-YR328
D41805J		AP1800B	POS 01	D41805P	W2201	ALL
D40576J		AP1800B	POS 02	D40576P	W5156	YC051-YD158, YL951-YR328
D40576J		AP1800B	POS 02	D40576P		YD160-YD170
D41801J		AP1800B	POS 03	D41801P	W2101	ALL
D40802J		AP1800B	POS 05	D40802P	W5506	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40802J		AP1800B	POS 05	D40802P		YD160-YD170, YL969-YL999, YN237-YN260
D41803J		AP1800B	POS 06	D41803P	W2175	ALL
D40830J		AP1800B	POS 07	D40830P	W5514	YC051-YD158, YL951-YR328
D40830J		AP1800B	POS 07	D40830P		YD160-YD170
D41807J		AP1800B	POS 08	D41807P	W2651	ALL
D41809J		AP1800B	POS 09	D41809P	W2653	ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0010

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0018</b>	*	<b>P18 (continued)</b>				
D15512		R01070	//			YL968-YL999, YN236-YR328
D15514		R01073	//			YL968-YL999, YN236-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0010

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W0024	S2N	P15 REFUELING PANEL				
D04578P				D04578J	W1664	YC051-YD158, YL951-YL954, YN231-YN235
D04578P D11318		N00193	//	D04578J		YD160-YD170 YC051-YL954, YN231-YN235
D11320		N00194	//			YC051-YL954, YN231-YN235
D11322		N00195	//			YC051-YL954, YN231-YN235
I W0028	SA2	P28 APU REMOTE CONTROL PANEL				
D48080J		AP2800A	POS 01	D48080P	W8524	YC051-YD158

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0020

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W0041	NA2	P61 - DATA LOADER CONTROL PANEL				
I D04003J				D04003P	W0071	YC059-YR328
I D04005P				D04005J	W0071	YC059-YR328
I D04003J			P061-00/ /	D04003P	W0071	YC051-YC058
I D04005P			P061-00/ /	D04005J	W0071	YC051-YC058
I D06035			P061-00/ /			YC059-YR328
I D06045			P061-00/ /			YC059-YR328
I D06069			P061-00/ /			YD158-YR328
I D40625J		AP0600B	POS 01	D40625P	W2597	YC051-YC058
I D40623J		AP0600B	POS 06	D40623P	W2135	ALL
I D40625J		AP0600B	POS 13	D40625P	W2597	YC059-YR328
I D04151J		AP0600C	POS 06	D04151P	W3327	YC051-YD158,
I D04151J		AP0600C	POS 06	D04151P		YL951-YR328
I D06045		M00245	P006-00/ /			YD160-YD170
I D06035		M00296	209/223/R011			YC051-YC058
I D02269		M1206-P1				YC051-YC058
I D02271		M1206-P2				ALL
I D02875		P061-01	P061-01/ /			ALL
I D02877		P061-01	P061-01/ /			ALL
I D02879		P061-01	P061-01/ /			ALL
I D10193		P061-01	P061-01/ /			ALL
I D01907		P061-02	P061-02/ /			ALL
I D10901		P061-03	P061-03/ /			YL951-YR328
I D10903		P061-03	P061-03/ /			YL951-YR328
I W0044	*	P6 (LOAD WIRES)				
I D40744J				D40744P	W0044	ALL
I D40744P				D40744J	W0044	ALL
I D13730			279/284/R010			YD155-YR328
I D45233J		AP0600A	POS 03	D45233P	W3589	YC051-YD170
I D45233J		AP0600A	POS 03	D45233P	W3605	YL951-YN260
I D40444J		AP0600A	POS 04	D40444P	W6214	YC051-YR323,
I D40444J		AP0600A	POS 04	D40444P		YR325-YR328
I D40444J		AP0600A	POS 04	D40444P		YR324
I D40226J		AP0600A	POS 05	D40226P	W3058	YC051-YD158,
I D40226J		AP0600A	POS 05	D40226P		YL951-YR328
I D40165J		AP0600A	POS 07	D40165P	W3107	YD160-YD170
I D40218J		AP0600A	POS 09	D40218P	W0018	YC051-YD157
I D40218J		AP0600A	POS 09	D40218P		ALL

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W0040

Page 1

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0044</b>	*	<b>P6 (LOAD WIRES) (continued)</b>				
D40750J		AP0600B	POS 02	D40750P	W5158	ALL
D40822J		AP0600B	POS 03	D40822P	W5514	YC051-YD158, YL951-YR328 YD160-YD170
D40822J		AP0600B	POS 03	D40822P		ALL
D41430J		AP0600B	POS 05	D41430P	W2138	YC051-YL999, YR301-YR323, YR325-YR328
D41832J		AP0600B	POS 07	D41832P	W6412	YR324
D41832J		AP0600B	POS 07	D41832P		YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40800J		AP0600B	POS 08	D40800P	W5506	YD160-YD170, YL969-YL999, YN237-YN260
D40368J		AP0600B	POS 09	D40368P	W6110	ALL
D46067J		AP0600B	POS 10	D46067P	W2231	YC051-YN236, YN501-YR328 YN237-YN260
D46067J		AP0600B	POS 10	D46067P		ALL
D46052J		AP0600B	POS 11	D46052P	W2030	ALL
D40812J		AP0600B	POS 12	D40812P	W6506	ALL
D40386J		AP0600B	POS 14	D40386P	W6412	YC051-YN236, YN501-YR323, YR325-YR328
D40386J		AP0600B	POS 14	D40386P		YN237-YN260, YR324
D46065J		AP0600B	POS 15	D46065P	W2383	ALL
D40352J		AP0600B	POS 16	D40352P	W5612	ALL
D40820J		AP0600B	POS 17	D40820P	W6208	YC051-YD158, YL951-YR328 YD160-YD170
D40820J		AP0600B	POS 17	D40820P		ALL
D40816J		AP0600B	POS 18	D40816P	W6206	ALL
D46063J		AP0600B	POS 19	D46063P	W2169	ALL
D46069J		AP0600B	POS 20	D46069P	W2661	ALL
D40574J		AP0600B	POS 21	D40574P	W6222	YC051-YR323, YR325-YR328
D40574J		AP0600B	POS 21	D40574P		YR324
D40396J		AP0600B	POS 22	D40396P	W6414	ALL
D46061J		AP0600B	POS 23	D46061P	W2103	YC051-YD158, YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0040

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0044</b>	*	<b>P6 (LOAD WIRES) (continued)</b>				
D46061J		AP0600B	POS 23	D46061P		YD160-YD170
D40654J		AP0600B	POS 24	D40654P	W6024	ALL
D40502J		AP0600C	POS 01	D40502P	W2104	YC051-YD158, YL951-YR328
D40502J		AP0600C	POS 01	D40502P		YD160-YD170
D40526J		AP0600C	POS 02	D40526P	W2212	ALL
D40512J		AP0600C	POS 03	D40512P		YC051-YC052
D40512J		AP0600C	POS 03	D40512P	W2112	YC053-YR328
D40532J		AP0600C	POS 04	D40532P	W2216	YC051-YR323, YR325-YR328
D40550J		AP0600C	POS 05	D40550P	W2508	YC051-YD158, YL951-YR328
D40550J		AP0600C	POS 05	D40550P		YD160-YD170
D40558J		AP0600C	POS 08	D40558P	W2510	ALL
D40536J		AP0600C	POS 09	D40536P	W2218	ALL
D40582J		AP0600C	POS 10	D40582P	W2204	YC051-YN236, YN501-YR328
D01598		M00564	265/ /			ALL
D10046		M01456	P006-00/ /			ALL
D11712		M01720	P006-00/ /			ALL
D11712A		M01720	P006-00/ /			ALL
D11712B		M01720	P006-00/ /			ALL
D11714		M01720	P006-00/ /			ALL
D11714A		M01720	P006-00/ /			ALL
D11714B		M01720	P006-00/ /			ALL
D12006		M1957				ALL
D13790		P061-08	P061-00/ /			YD158-YR328
D13792		P061-08	P061-00/ /			YD158-YR328
D00944		R00011	P006-00/ /			ALL
D01620		R00025	P006-00/ /			ALL
D01622		R00026	P006-00/ /			ALL
D01614		R00033	P006-00/ /			ALL
D01616		R00034	P006-00/ /			ALL
D01640		R00047	P006-00/ /			ALL
D01618		R00087	P006-00/ /			ALL
D10762		R00550	P006-00/ /			ALL
D10820		R00556	P006-00/ /			ALL
D10822		R00557	P006-00/ /			ALL
D10824		R00558	P006-00/ /			ALL
D11756		R00634	P006-00/ /			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0040

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0044</b>	<b>*</b>	<b>P6 (LOAD WIRES) (continued)</b>				
D11839		R00897	P006-00/ /			YC051-YC065, YN231-YN501
I D13712		R00918	P006-00/ /			ALL
I D11939		R00919	P006-00/ /			ALL
I D11941		R00920	P006-00/ /			ALL
D13734		R00927	P006-00/ /			YD158-YD170
<b>W0048</b>	<b>NN2</b>	<b>P19 (EXTERNAL POWER RECEPTACLE PANEL)</b>				
D04499J				D04499P	W5337	YC051-YL954, YN231-YN235
D44252J				D44252P	W6024	YC051-YL954, YN231-YN235
I D06007			P019-00/ /			YD158-YR328
I D06009			P019-00/ /			ALL
I D40665		DM0035	230/187/R034			YL955-YL999, YN236-YR328
<b>W0049</b>	<b>NA2</b>	<b>THRUST LEVER ENGINE NO. 1</b>				
I D08313J		AF0213A	POS 05	D08313P	W5369	ALL
I D10171J		AF0213A	POS 06	D10171P		ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0040

Page 4 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W0050	NN2	FWD ENTRY LIGHT MODULE (M01677)				
I D10754				D10756		YC051-YD151
I D10754			329/293/L004			YD152-YN260
I D10760		M01679	M1677/ /			YC051-YN260
I W0051	NB2	TITLE THRUST LEVER ENGINE NO. 2				
I D08315J		AF0222A	POS 04	D08315P	W5457	ALL
I D10173J		AF0222A	POS 06	D10173P		ALL
I W0052	NN2	AFT ENTRY LIGHT MODULE (M01678)				
I D11462				D11460		YC051-YN260
I D11464		M01843	M01678/ /			YC051-YN260
I W0054	NN2	P6B (LOAD WIRES)				
I D45233J		AP0600A	POS 07	D45233P	W3497	YN501-YR324
I D40708J		AP0600B	POS 04	D40708P	W6212	YN501-YR324
I D13840		R00943	P006-00/ /			YN501-YR324
I D12215		R00944	P006-00/ /			YN501-YR324

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0050

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W0063	NN2	NITROGEN GEN SYS - OPERABILITY INDICATOR				
I D14112		P63				YD160-YR328
I W0066	RN2	J46 INTEGRATION PANEL WIRING				
I D46130J		AJ0046A	POS 01	D46130P	W5510	ALL
I D46110J		AJ0046A	POS 04	D46110P	W6208	YC051-YD158, YL951-YR328
I D46110J		AJ0046A	POS 04	D46110P		YD160-YD170
I D46128J		AJ0046A	POS 05	D46128P	W5506	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
I D46128J		AJ0046A	POS 05	D46128P		YD160-YD170, YL969-YL999, YN237-YN260
I D46144J		AJ0046A	POS 07	D46144P	W6170	ALL
I D46146J		AJ0046A	POS 08	D46146P	W6172	ALL
I D40103J		AJ0046A	POS 09	D40103P	W2247	YC051-YN236, YN501-YR328
I D40103J		AJ0046A	POS 09	D40103P		YN237-YN260
I D40107J		AJ0046A	POS 10	D40107P	W6491	YC051-YC052
I D46104J		AJ0046A	POS 11	D46104P	W5514	YC051-YD158, YL951-YR328
I D46104J		AJ0046A	POS 11	D46104P		YD160-YD170
I D46150J		AJ0046A	POS 12	D46150P	W6208	YC051-YD158, YL951-YR328
I D46150J		AJ0046A	POS 12	D46150P		YD160-YD170
I D46116J		AJ0046A	POS 13	D46116P	W5156	YC051-YD158, YL951-YR328
I D46102J		AJ0046A	POS 14	D46102P	W5160	YC051-YD158, YL951-YR328
I D46102J		AJ0046A	POS 14	D46102P		YD160-YD170
I D46108J		AJ0046A	POS 15	D46108P	W2508	YC051-YD158, YL951-YR328
I D46108J		AJ0046A	POS 15	D46108P		YD160-YD170
I D46122J		AJ0046A	POS 16	D46122P	W5160	YC051-YD158, YL951-YR328
I D46122J		AJ0046A	POS 16	D46122P		YD160-YD170
I D46124J		AJ0046B	POS 01	D46124P	W2212	ALL
I D46138J		AJ0046B	POS 02	D46138P	W6242	ALL

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W0060

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0066</b>	<b>RN2</b>	<b>J46 INTEGRATION PANEL WIRING (continued)</b>				
D46120J		AJ0046B	POS 03	D46120P	W5158	ALL
D46132J		AJ0046B	POS 04	D46132P	W6506	ALL
D46136J		AJ0046B	POS 05	D46136P	W6528	ALL
D40097J		AJ0046B	POS 06	D40097P	W5503	ALL
D40099J		AJ0046B	POS 07	D40099P	W2237	YC051-YC052
D46142J		AJ0046B	POS 08	D46142P	W6414	ALL
D46118J		AJ0046B	POS 09	D46118P	W6510	YC051-YD158, YL951-YR328 YD160-YD170
D46118J		AJ0046B	POS 09	D46118P		YD160-YD170
D46106J		AJ0046B	POS 10	D46106P	W6506	ALL
D46100J		AJ0046B	POS 11	D46100P	W5158	ALL
D46112J		AJ0046B	POS 12	D46112P	W2216	YC051-YR323, YR325-YR328 YR324
D46112J		AJ0046B	POS 12	D46112P		YR324
D46126J		AJ0046B	POS 13	D46126P	W2510	ALL
D46114J		AJ0046B	POS 15	D46114P	W2218	ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0060

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W0071	NN2	P61 - FIRST OBSERVERS OXY MASK MIC				
I D04003P				D04003J	W0041	ALL
I D04005J				D04005P	W0041	ALL
I D06053		M00526	P061-00/ /			ALL
I W0072	RB2*	J20 JUNCTION BOX-PLATE B (CONTAINS ENGINE 2 WIRING)				
I D40634J		AJ0020B	POS 01	D40634P	W5158	ALL
I D40638J		AJ0020B	POS 02	D40638P	W5158	ALL
I D40640J		AJ0020B	POS 03	D40640P	W5158	ALL
I D40636J		AJ0020B	POS 04	D40636P	W5156	YC051-YD158, YL951-YR328
I D40636J		AJ0020B	POS 04	D40636P		YD160-YD170
I D40632J		AJ0020B	POS 05	D40632P	W5100	YC051-YD158, YL951-YR328
I D40632J		AJ0020B	POS 05	D40632P		YD160-YD170
I D40642J		AJ0020B	POS 07	D40642P	W5156	YC051-YD158, YL951-YR328
I D40642J		AJ0020B	POS 07	D40642P		YD160-YD170
I D40858J		AJ0020D	POS 01	D40858P	W5158	YD158-YR328
I D02375		R00361	J020-0B/ /			ALL
I D10924		R00567	J020-0B/ /			ALL
I D11010		R00588	J020-0B/ /			ALL
I D11014		R00590	J020-0B/ /			ALL
I D11016		R00591	J020-0B/ /			ALL
I D11024		R00595	J020-0B/ /			ALL
I D11026		R00596	J020-0B/ /			ALL
I D11868		R00645	J020-0B/ /			ALL
I D12250		R00682	J020-0B/ /			ALL
I D10569		R00708	J020-0B/ /			ALL
I D10573		R00710	J020-0B/ /			ALL
I D10575		R00711	J020-0B/ /			ALL
I D10577		R00712	J020-0B/ /			ALL
I D10579		R00713	J020-0B/ /			ALL
I D10581		R00714	J020-0B/ /			ALL
I D12466		R00735	J020-00/ /			ALL
I D13794		R00934	J020-0B/166/L025			YD158-YR328
I D13796		R00936	J020-0B/166/L025			YD158-YR328
I D12759		R01046	J020-0B/ /			YL951-YR328

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W0070

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0074</b>	<b>NA1</b>	<b>J20 JUNCTION BOX-PLATE A</b>				
D40884J		AJ0020A	POS 02	D40884P	W5158	YC053, YC055, YC060-YC064, YC067-YR328
D40878J		AJ0020A	POS 05	D40878P	W5156	YC060-YC064
D40878J		AJ0020C	POS 02	D40878P	W5156	YC053, YC055, YC067-YD158, YL951-YR328
D40878J		AJ0020C	POS 02	D40878P		YD160-YD170
D13308		R00819				YC060-YC064
D13688		R00903	J020-00/ /			YC053, YC055, YC060-YC064, YC067-YR328
D13690		R00904	J020-00/ /			YC053, YC055, YC060-YC064, YC067-YR328
D13842		R00951	J020-00/ /			YC060-YC064, YD160-YR328
<b>W0076</b>	<b>LA2*</b>	<b>J22 JUNCTION BOX (CONTAINS ENGINE 1 WIRING)</b>				
D40678J		AJ0022	POS 01	D40678P	W5156	YC051-YD158, YL951-YL999, YR301-YR328
D40678J		AJ0022	POS 01	D40678P		YD160-YD170
D40672J		AJ0022	POS 02	D40672P	W5510	YC051-YN236, YN501-YR328
D40666J		AJ0022	POS 03	D40666P	W5156	YC051-YD158, YL951-YN236, YN501-YR328
D40666J		AJ0022	POS 03	D40666P		YD160-YD170
D40670J		AJ0022	POS 04	D40670P	W5156	YC051-YD158, YL951-YN236, YN501-YR328
D40676J		AJ0022	POS 05	D40676P	W5156	YC051-YD158, YL951-YN236, YN501-YR328
D40676J		AJ0022	POS 05	D40676P		YD160-YD170
D40668J		AJ0022	POS 06	D40668P	W5100	YC051-YD158, YL951-YN236, YN501-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0070

Page 2

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0076</b>	<b>LA2*</b>	<b>J22 JUNCTION BOX (CONTAINS ENGINE 1 WIRING) (continued)</b>				
D40674J		AJ0022	POS 07	D40674P	W5506	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40674J		AJ0022	POS 07	D40674P		YD160-YD170, YL969-YL999
D40680J		AJ0022	POS 08	D40680P	W5156	YC053-YD158, YL951-YN236, YN501-YR328
D40680J		AJ0022	POS 08	D40680P		YD160-YD170
D40147J		AJ0022	POS 09	D40147P	W6491	YC053-YD158, YL951-YN236, YN501-YR328
D40147J		AJ0022	POS 09	D40147P		YD160-YD170
D02775		R00454	J022-00/ /			YC051-YN236, YN501-YR328
D10634		R00477	J022-00/ /			YC051-YN236, YN501-YR328
D10636		R00478	J022-00/ /			YC051-YN236, YN501-YR328
D03527		R00495	J022-00/ /			YC051-YN236, YN501-YR328
D10918		R00564	J022-00/ /			YC051-YN236, YN501-YR328
D10922		R00566	J022-00/ /			YC051-YN236, YN501-YR328
D10954		R00576	J022-00/ /			YC051-YN236, YN501-YR328
D11002		R00584	J022-00/ /			YC051-YN236, YN501-YR328
D11008		R00587	J022-00/ /			YC051-YN236, YN501-YR328
D11012		R00589	J022-00/ /			YC051-YN236, YN501-YR328
D11018		R00592	J022-00/ /			YC051-YN236, YN501-YR328
D11020		R00593	J022-00/ /			YC051-YN236, YN501-YR328
D11022		R00594	J022-00/ /			YC051-YN236, YN501-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0070

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0076</b>	<b>LA2*</b>	<b>J22 JUNCTION BOX (CONTAINS ENGINE 1 WIRING) (continued)</b>				
D11404		R00627	J022-00/ /			YC051-YN236, YN501-YR328
D11406		R00628	J022-00/ /			YC051-YN236, YN501-YR328
D10085		R00630	J022-00/ /			YC051-YD157
D10571		R00709	J022-00/ /			YC051-YN236, YN501-YR328
D12538		R00737	J022-00/ /			YC051-YN236, YN501-YR328
D12756		R00742	J022-00/ /			YC051-YN236, YN501-YR328
D10849		R00746	J022-00/ /			YC053-YN236, YN501-YR328
D11073		R00779	J022-00/ /			YC051-YN236, YN501-YR328
D11131		R00780	J022-00/ /			YC051-YN236, YN501-YR328
D13130		R00783	J022-00/ /			YN501-YR328
<b>W0078</b>	<b>SB2*</b>	<b>J23 (J-BOX)</b>				
D40686J		AJ0023	POS 02	D40686P	W5506	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40686J		AJ0023	POS 02	D40686P		YD160-YD170, YL969-YL999, YN237-YN260
D40688J		AJ0023	POS 05	D40688P	W5510	ALL
D02880		R00322	J023-00/ /			ALL
D02882		R00323	J023-00/ /			ALL
D02884		R00324	J023-00/ /			ALL
D10920		R00565	J023-00/ /			ALL
D02886		S00813	J023-00/ /			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0070

Page 4 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0080</b>	<b>RA2</b>	<b>J24 BOX</b>				
D40696J		AJ0024	POS 02	D40696P	W6510	YC051-YD158, YL951-YR328
D40696J		AJ0024	POS 02	D40696P		YD160-YD170
D40698J		AJ0024	POS 03	D40698P	W5100	YC051-YD158, YL951-YR328
D40692J		AJ0024	POS 04	D40692P	W5158	ALL
D40700J		AJ0024	POS 05	D40700P	W5158	ALL
D40702J		AJ0024	POS 06	D40702P	W5158	ALL
D40694J		AJ0024	POS 07	D40694P	W5160	YC051-YD158, YL951-YR328
D40694J		AJ0024	POS 07	D40694P		YD160-YD170
D01805		R00263	J024-00/ /			ALL
D10638		R00479	J024-00/ /			ALL
D10640		R00480	J024-00/ /			ALL
D03529		R00496	J024-00/ /			ALL
D10916		R00563	J024-00/ /			ALL
D10926		R00568	J024-00/ /			ALL
D10952		R00575	J024-00/ /			ALL
D11004		R00585	J024-00/ /			ALL
D11154		R00613	J024-00/ /			ALL
D11402		R00626	J024-00/ /			ALL
D11866		R00644	J024-00/ /			ALL
D11874		R00648	J024-00/ /			ALL
D11876		R00649	J024-00/ /			ALL
D11878		R00650	J024-00/ /			ALL
D10525		R00660	J024-00/ /			ALL
D12248		R00678	J024-00/ /			ALL
D12540		R00738	J024-00/ /			ALL
D12758		R00743	J024-00/ /			ALL
D10847		R00745	J024-00/ /			YC053-YR328
D13132		R00784	J024-00/ /			YN501-YR328
D12225		R00945	J024-00/ /			YC060-YC064, YD160-YR328
D12227		R00946	J024-00/ /			YC060-YC064, YD160-YR328
D12229		R00949	J024-00/ /			YC060-YC064, YD160-YR328
D14156		R01001	J024-00/ /			YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0080

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0082</b>	<b>NN2</b>	<b>J39 JUNCTION BOX-PLATE A</b>				
D43900J		AJ0039A	POS 01	D43900P	W5506	YL953-YL968, YR301-YR328
D43900J		AJ0039A	POS 01	D43900P		YL969-YL999
D43910J		AJ0039A	POS 03	D43910P	W5367	YL953-YL999, YR301-YR328
D43906J		AJ0039A	POS 04	D43906P	W5160	YL951-YN235, YR301-YR328
D43908J		AJ0039A	POS 05	D43908P	W5375	YL953-YL999, YR301-YR328
D13940		R00964	J039-00/ /			YL953-YL999, YR301-YR328
D13942		R00965	J039-00/ /			YL953-YL999, YR301-YR328
D13944		R00966	J039-00/ /			YL953-YL999, YR301-YR328
D13946		R00967	J039-00/ /			YL953-YL999, YR301-YR328
D13948		R00968	J039-00/ /			YL953-YL999, YR301-YR328
D13950		R00969	J039-00/ /			YL953-YL999, YR301-YR328
D13952		R00970	J039-00/ /			YL953-YL999, YR301-YR328
D12669		R01045	J039-00/ /			YL951-YL954, YN231-YN235
<b>W0084</b>	<b>NN2</b>	<b>J39 JUNCTION BOX-PLATE B</b>				
D43924J		AJ0039B	POS 02	D43924P	W6212	YN501-YR328
D43922J		AJ0039B	POS 03	D43922P	W3058	YN501-YR328
D12945		R01066	J039-00/ /			YN501-YR328
<b>W0088</b>	<b>LN2</b>	<b>J48 INTEGRATION PANEL WIRING</b>				
D48100J		AJ0048A	POS 01	D48100P	W2104	YC051-YD158, YL951-YR328
D48100J		AJ0048A	POS 01	D48100P		YD160-YD170
D48126J		AJ0048A	POS 02	D48126P	W5122	ALL
D48122J		AJ0048A	POS 03	D48122P	W5510	ALL
D40095J		AJ0048A	POS 04	D40095P	W2149	YC051-YD158, YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0080

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0088</b>	<b>LN2</b>	<b>J48 INTEGRATION PANEL WIRING (continued)</b>				
D40095J		AJ0048A	POS 04	D40095P		YD160-YD170
D48102J		AJ0048A	POS 05	D48102P		YC051-YC052
D48102J		AJ0048A	POS 05	D48102P	W2112	YC053-YR328
D40081J		AJ0048A	POS 06	D40081P	W2207	YC051-YC052
D48110J		AJ0048A	POS 07	D48110P	W5170	ALL
D40087J		AJ0048A	POS 08	D40087P	W5501	ALL
D48120J		AJ0048A	POS 09	D48120P	W5506	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D48120J		AJ0048A	POS 09	D48120P		YD160-YD170, YL969-YL999, YN237-YN260
D40091J		AJ0048A	POS 10	D40091P	W6491	YC051-YC052
D40089J		AJ0048A	POS 11	D40089P	W6491	YC051-YC052
D48116J		AJ0048A	POS 13	D48116P	W5158	ALL
D48106J		AJ0048A	POS 14	D48106P	W2508	YC051-YD158, YL951-YR328
D48106J		AJ0048A	POS 14	D48106P		YD160-YD170
D48108J		AJ0048A	POS 15	D48108P	W2532	ALL
D48112J		AJ0048A	POS 16	D48112P	W5156	YC051-YD158, YL951-YR328
D48112J		AJ0048A	POS 16	D48112P		YD160-YD170
D48114J		AJ0048A	POS 17	D48114P	W5156	YC051-YD158, YL951-YR328
D48114J		AJ0048A	POS 17	D48114P		YD160-YD170
D48124J		AJ0048A	POS 18	D48124P	W6110	ALL
D48136J		AJ0048A	POS 19	D48136P	W5172	ALL
D48104J		AJ0048A	POS 20	D48104P	W2114	ALL
D48134J		AJ0048A	POS 21	D48134P	W5162	ALL
D48118J		AJ0048A	POS 22	D48118P	W5506	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D48118J		AJ0048A	POS 22	D48118P		YD160-YD170, YL969-YL999, YN237-YN260
D48130J		AJ0048A	POS 23	D48130P	W6510	YC051-YD158, YL951-YR328
D48130J		AJ0048A	POS 23	D48130P		YD160-YD170

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0080

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0088</b>	<b>LN2</b>	<b>J48 INTEGRATION PANEL WIRING (continued)</b>				
D48128J		AJ0048A	POS 24	D48128P	W6570	ALL
D48138J		AJ0048A	POS 25	D48138P	W6506	ALL
D48132J		AJ0048A	POS 26	D48132P	W6506	ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0080

Page 4 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0094</b>	<b>RN2</b>	<b>J4 JUNCTION BOX</b>				
D40602J		AJ0004	POS 01	D40602P	W6222	YC051-YR323, YR325-YR328
D40602J		AJ0004	POS 01	D40602P		YR324
D40612J		AJ0004	POS 05	D40612P	W5160	YD158, YL951-YR328
D40612J		AJ0004	POS 05	D40612P		YD160-YD170
D40616J		AJ0004	POS 06	D40616P	W6222	YC051-YR323, YR325-YR328
D40616J		AJ0004	POS 06	D40616P		YR324
D40614J		AJ0004	POS 07	D40614P	W6222	YC051-YR323, YR325-YR328
D40614J		AJ0004	POS 07	D40614P		YR324
D40658J		AJ0004	POS 09	D40658P	W5160	YD158, YL951-YR328
D40658J		AJ0004	POS 09	D40658P		YD160-YD170
D40610J		AJ0004	POS 10	D40610P	W5160	YC051-YD158, YL951-YR328
D40610J		AJ0004	POS 10	D40610P		YD160-YD170
D10254		R00444	J004-00/ /			YL951-YR328
D11997		R00924	J004-00/ /			YD158-YR328
D13798		R00935	J004-00/167/R025			YD158-YR328
D13800		R00937	J004-00/167/R025			YD158-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0090

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W0104	SN2	P7-CAPTAIN'S GLARESHIELD PANEL (SN2)				
I D40738P				D40738J	W0001	YC051-YD158, YL951-YR328
I D14118		L00340	P007-00/ /			YL951-YR328
I D14114		L00341	P007-00/ /			YL951-YR328
I D11922		L01013	P007-00/ /			YC051-YD158, YL951-YR328
I D11924		L01013	P007-00/ /			YC051-YD158, YL951-YR328
I D11936		L01099	P007-00/ /			YC051-YD158, YL951-YR328
I D11938		L01099	P007-00/ /			YC051-YD158, YL951-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0100

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>I W0111 E1-1 SHELF</b>						
I D01153B			*/*/			ALL
I D02209B			*/*/			ALL
I D10740C			*/*/			YD158-YR328
I D00235A			E001-01/ /			ALL
I D00235B			E001-01/ /			ALL
I D00728A			E001-01/ /			ALL
I D00728B			E001-01/ /			ALL
I D00728C			E001-01/ /			ALL
I D01153A			E001-01/ /			ALL
I D01153C			E001-01/ /			ALL
I D02209A			E001-01/ /			ALL
I D02743A			E001-01/ /			ALL
I D02743B			E001-01/ /			ALL
I D02743C			E001-01/ /			ALL
I D02743D			E001-01/ /			ALL
I D02743E			E001-01/ /			ALL
I D02743F			E001-01/ /			ALL
I D10009A			E001-01/ /			YC051-YD155
I D10009B			E001-01/ /			YC051-YD155
I D10009C			E001-01/ /			YC051-YD155
I D10064			E001-01/ /			ALL
I D10135A			E001-01/ /			ALL
I D10135B			E001-01/ /			ALL
I D10135C			E001-01/ /			ALL
I D10740A			E001-01/ /			YD158-YR328
I D10740B			E004-01/ /			YD158-YR328
I D40458J		AE0101A	POS 01	D40458P	W5156	YC053-YD158, YL951-YR328
I D40458J		AE0101A	POS 01	D40458P		YD160-YD170
I D40454J		AE0101A	POS 02	D40454P	W5156	YC051-YD158, YL951-YR328
I D40454J		AE0101A	POS 02	D40454P		YD160-YD170
I D45133J		AE0101A	POS 03	D45133P	W5111	ALL
I D41145J		AE0101A	POS 04	D41145P	W5161	ALL
I D40452J		AE0101A	POS 05	D40452P	W5156	YC051-YD158, YL951-YR328
I D40452J		AE0101A	POS 05	D40452P		YD160-YD170
I D42311J		AE0101A	POS 06	D42311P	W5461	ALL
I D41159J		AE0101A	POS 07	D41159P	W5353	ALL
I D04425J		AE0101A	POS 08	D04425P	W5301	ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0110

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0111</b>		<b>E1-1 SHELF (continued)</b>				
D40133J		AE0101A	POS 09	D40133P	W2221	YL956-YL999, YN236-YR328
D41153J		AE0101A	POS 11	D41153P	W5111	YC059-YR328
D40364J		AE0101A	POS 12	D40364P	W6110	ALL
D41811J		AE0101A	POS 13	D41811P	W2101	ALL
D40120J		AE0101A	POS 14	D40120P	W5568	YC051-YN236, YN501-YR328
D40120J		AE0101A	POS 14	D40120P		YN237-YN260
D40162J		AE0101A	POS 15	D40162P	W5032	ALL
D40180J		AE0101A	POS 16	D40180P	W6028	ALL
D41121J		AE0101A	POS 17	D41121P	W5721	ALL
D40122J		AE0101A	POS 18	D40122P	W5166	ALL
D45113J		AE0101A	POS 19	D45113P	W5111	ALL
D41155J		AE0101A	POS 20	D41155P	W5161	ALL
D43211J		AE0101A	POS 21	D43211P	W5461	ALL
D46461J		AE0101A	POS 22	D46461P	W5461	ALL
D04075J		AE0101A	POS 23	D04075P	W5369	ALL
D41821J		AE0101A	POS 24	D41821P	W2175	ALL
D41125J		AE0101A	POS 25	D41125P	W5719	ALL
D04083J		AE0101A	POS 26	D04083P	W3381	ALL
D04073J		AE0101A	POS 27	D04073P	W5367	YC051-YN236, YN501-YR328
D04073J		AE0101A	POS 27	D04073P		YN237-YN260
D40510J		AE0101A	POS 28	D40510P	W2218	ALL
D04069J		AE0101A	POS 29	D04069P	W2363	ALL
D40019J		AE0101A	POS 30	D40019P	W2221	ALL
D45203J		AE0101A	POS 31	D45203P	W5205	YC051-YD158, YL951-YR328
D45203J		AE0101A	POS 31	D45203P		YD160-YD170
D04079J		AE0101A	POS 32	D04079P	W3377	YC051-YN236, YN501-YR328
D04079J		AE0101A	POS 32	D04079P		YN237-YN260
D40774J		AE0101A	POS 33	D40774P	W6214	YD158-YR323, YR325-YR328
D40774J		AE0101A	POS 33	D40774P		YR324
D45515J		AE0101A	POS 35	D45515P	W5463	YD157-YR328
D45551J		AE0101A	POS 36	D45551P	W5381	YD157-YR328
D41563J		AE0101B	POS 01	D41563P	W5463	ALL
D40464J		AE0101B	POS 02	D40464P	W5160	YC051-YD158, YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0110

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0111</b>						
<b>E1-1 SHELF (continued)</b>						
D40464J		AE0101B	POS 02	D40464P		YD160-YD170
D41161J		AE0101B	POS 03	D41161P	W5397	ALL
D40142J		AE0101B	POS 04	D40142P	W6166	ALL
D40063J		AE0101B	POS 05	D40063P	W5723	ALL
D40948J		AE0101B	POS 06	D40948P	W6166	ALL
D40818J		AE0101B	POS 07	D40818P	W6208	YC051-YD158, YL951-YR328
D40818J		AE0101B	POS 07	D40818P		YD160-YD170
D41163J		AE0101B	POS 08	D41163P	W5463	ALL
D46023J		AE0101B	POS 09	D46023P	W2383	ALL
D43317J		AE0101B	POS 10	D43317P	W5723	ALL
D41147J		AE0101B	POS 11	D41147P	W5163	ALL
D41157J		AE0101B	POS 12	D41157P	W5163	ALL
D46013J		AE0101B	POS 13	D46013P	W2103	YC051-YD158, YL951-YR328
D46013J		AE0101B	POS 13	D46013P		YD160-YD170
D40160J		AE0101B	POS 14	D40160P	W6588	ALL
D04611J		AE0101B	POS 15	D04611P	W4001	ALL
D04609J		AE0101B	POS 16	D04609P	W4001	ALL
D04615J		AE0101B	POS 17	D04615P	W4001	ALL
D04613J		AE0101B	POS 18	D04613P	W4001	ALL
D04619J		AE0101B	POS 19	D04619P	W5001	ALL
D04617J		AE0101B	POS 20	D04617P	W5001	ALL
D04623J		AE0101B	POS 21	D04623P	W5001	ALL
D04621J		AE0101B	POS 22	D04621P	W5001	ALL
D40064J		AE0101B	POS 23	D40064P	W2218	YD158-YR328
D01153		M00652	E001-01/ /			ALL
D10009		M00917	E001-01/ /			YC051-YD155
D00235		M01474	E001-01/ /			ALL
D02209		M01474	E001-01/ /			ALL
D02743		M01485	E001-01/ /			ALL
D10740		M01654	E004-01/ /			YD158-YR328
D00728		M01746	E001-01/ /			ALL
D10135		M01875	E001-01/ /			ALL
D10161		M01908	/ /			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0110

Page 3 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0121	NA2	E1-2 SHELF				
D00149B			*/ */ *			ALL
D10719B			*/ */ *			ALL
D10719C			*/ */ *			ALL
D00149A			E001-02/ /			ALL
D00149C			E001-02/ /			ALL
D00161A			E001-02/ /			ALL
D00161B			E001-02/ /			ALL
D00161C			E001-02/ /			ALL
D03623A			E001-02/ /			ALL
D03623B			E001-02/ /			ALL
D03623C			E001-02/ /			ALL
D10719A			E001-02/ /			ALL
D41211P		AE0102A	POS 01	D41211J	W5719	ALL
D45115P		AE0102A	POS 02	D45115J	W5111	ALL
D04029P		AE0102A	POS 03	D04029J	W2149	YC051-YD158, YL951-YR328
D04029P		AE0102A	POS 03	D04029J		YD160-YD170
D41217P		AE0102A	POS 04	D41217J	W2177	YC051-YN236, YN501-YR328
D41217P		AE0102A	POS 04	D41217J		YN237-YN260
D04205P		AE0102A	POS 05	D04205J	W2205	YC051-YD158, YL951-YR328
D04205P		AE0102A	POS 05	D04205J		YD160-YD170
D41827P		AE0102A	POS 06	D41827J	W2651	ALL
D04269P		AE0102A	POS 08	D04269J	W5189	ALL
D45201P		AE0102A	POS 10	D45201J	W5205	YC051-YD158, YL951-YR328
D45201P		AE0102A	POS 10	D45201J		YD160-YD170
D45002P		AE0102A	POS 11	D45002J	W5121	YL963-YL999, YN236-YR328
D41213P		AE0102A	POS 12	D41213J	W5723	ALL
D41127P		AE0102A	POS 13	D41127J	W5721	ALL
D04607P		AE0102B	POS 01	D04607J	W5039	ALL
D41215P		AE0102B	POS 02	D41215J	W5183	ALL
D04121P		AE0102B	POS 04	D04121J	W7187	ALL
D04603P		AE0102B	POS 05	D04603J	W5363	ALL
D04025P		AE0102B	POS 07	D04025J	W3141	ALL
D42941P		AE0102B	POS 08	D42941J	W3607	ALL
D41251P		AE0104B	POS 01	D41251J	W0521	ALL
D00149		M00163	E001-02/ /			ALL

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W0120

Page 1

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0121	NA2	E1-2 SHELF (continued)				
D00161		M00164	E001-02/ /			ALL
D02473		M01346	E001-02/ /			ALL
D02475		M01346	E001-02/ /			ALL
D02477		M01346	E001-02/ /			ALL
D03623		M01724	E001-02/ /			ALL
D03781		M01726	309/180/R021			ALL
D10163		M01908	/ /			ALL
D10719		M02104	E001-02/ /			ALL
D02115		R00315	306/180/R021			ALL
W0122	LN1	J11 RELAY PANEL - LANDING GEAR HYDRAULICS (WITH E-6)				
D12968			J011-00/ /			YC051-YC053
D46618J		AJ0011	POS 01	D46618P	W5124	YC054-YR328
D46616J		AJ0011	POS 02	D46616P	W5124	ALL
D46623J		AJ0011	POS 03	D46623P	W5431	YL963-YL999, YN236-YR328
D46618J		J11		D46618P	W5124	YC051-YC053
D12968		R00782	J011-00/ /			YC054-YR328
D11179		R00813	J011-00/ /			ALL
D13364		R00850	J011-00/ /			YC059-YR328
D15706		R01123	J011-00/ /			YR315-YR328
D13187		R1069				YL963-YL999, YN236-YR328
D03254		R353				ALL
D11370		R625				ALL

## MASTER BUNDLE LIST

D280A108

91-21-13

Section W0120

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0130</b>	<b>NN2</b>	<b>EMERGENCY AISLE LIGHTS</b>				
D11344			MULTI/ /			YC051-YC058
<b>W0131</b>	<b>NA2</b>	<b>E001-03 SHELF</b>				
D00199B			*/ */ *			ALL
D01040A			*/ */ *			ALL
D01040B			*/ */ *			ALL
D02639C			*/ */ *			ALL
D00199A			E001-03/ /			ALL
D00199C			E001-03/ /			ALL
D01040C			E001-03/ /			ALL
D02639A			E001-03/ /			ALL
D02639B			E001-03/ /			ALL
D04133J		AE0103A	POS 02	D04133P	W5411	YC051-YC060
D04133J		AE0103A	POS 02	D04133P	W5419	YC061-YC063
D04133J		AE0103A	POS 02	D04133P	W5413	YC064-YR328
D46051J		AE0103A	POS 03	D46051P	W2661	ALL
D43048J		AE0103A	POS 04	D43048P	W6730	ALL
D41337J		AE0103A	POS 05	D41337P	W3307	YC051-YN260
D41400J		AE0103A	POS 06	D41400P	W2022	ALL
D43040J		AE0103A	POS 07	D43040P	W6528	ALL
D40488J		AE0103A	POS 08	D40488P	W5158	ALL
D41337J		AE0103A	POS 09	D41337P	W3307	YN501-YR328
D40344J		AE0103A	POS 10	D40344P	W5610	ALL
D40498J		AE0103A	POS 11	D40498P	W5156	YC051-YD158, YL951-YR328
D40498J		AE0103A	POS 11	D40498P		YD160-YD170
D04123J		AE0103A	POS 12	D04123P	W2403	YC051-YD157
D04123J		AE0103A	POS 12	D04123P	W5107	YD158, YL951-YR328
D04123J		AE0103A	POS 12	D04123P		YD160-YD170
D04149J		AE0103A	POS 13	D04149P	W2307	ALL
D40466J		AE0103A	POS 14	D40466P	W5160	YC051-YD158, YL951-YR328
D40466J		AE0103A	POS 14	D40466P		YD160-YD170
D43010J		AE0103A	POS 15	D43010P	W5234	ALL
D45227J		AE0103A	POS 16	D45227P	W5303	YC051-YN260
D45227J		AE0103A	POS 16	D45227P	W3477	YN501-YR328
D41831J		AE0103A	POS 17	D41831P	W2651	ALL
D04195J		AE0103A	POS 18	D04195P	W5189	ALL
D41509J		AE0103A	POS 19	D41509P	W5719	ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0130

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0131</b>	<b>NA2</b>	<b>E001-03 SHELF (continued)</b>				
D40810J		AE0103A	POS 20	D40810P	W6506	ALL
D04181J		AE0103A	POS 21	D04181P	W3311	ALL
D41131J		AE0103A	POS 22	D41131P	W5723	ALL
D02639		M00063	E001-03/ /			ALL
D00199		M00149	E001-03/ /			ALL
D01040		M00162	E001-03/ /			ALL
<b>W0132</b>	<b>NN2</b>	<b>EMERGENCY AISLE LIGHTS - LED</b>				
D14816			MULTI/ /			YN501-YR328
D14814		L01507	MULTI/ /			YN501-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0130

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0141	NB2	E1-4 SHELF - RIGHT				
D10137C			*/ */ *			ALL
D10721B			*/ */ *			ALL
D03625A			E001-04/ /			ALL
D03625B			E001-04/ /			ALL
D03625C			E001-04/ /			ALL
D10137A			E001-04/ /			ALL
D10137B			E001-04/ /			ALL
D10721A			E001-04/ /			ALL
D10721C			E001-04/ /			ALL
D42943P		AE0102B	POS 03	D42943J	W3609	ALL
D04027P		AE0102B	POS 06	D04027J	W3143	ALL
D08019P		AE0104A	POS 01	D08019J	W2465	ALL
D05971P		AE0104A	POS 02	D05971J	W5457	ALL
D04081P		AE0104A	POS 03	D04081J	W3379	YC051-YN236, YN501-YR328
D04081P		AE0104A	POS 03	D04081J		YN237-YN260
D45143P		AE0104A	POS 05	D45143J	W5121	YC051-YD158, YL951-YR328
D45143P		AE0104A	POS 05	D45143J		YD160-YD170
D04311P		AE0104A	POS 06	D04311J	W2251	ALL
D40049P		AE0104A	POS 07	D40049J	W2205	YC051-YD158, YL951-YR328
D40049P		AE0104A	POS 07	D40049J		YD160-YD170
D40047P		AE0104A	POS 08	D40047J	W5723	ALL
D46011P		AE0104A	POS 09	D46011J	W2103	YC051-YD158, YL951-YR328
D46011P		AE0104A	POS 09	D46011J		YD160-YD170
D46031P		AE0104A	POS 10	D46031J	W2383	ALL
D41463P		AE0104A	POS 11	D41463J	W5463	ALL
D45123P		AE0104A	POS 12	D45123J	W5121	YC051-YD158, YL951-YR328
D45123P		AE0104A	POS 12	D45123J		YD160-YD170
D45553P		AE0104A	POS 13	D45553J	W5383	YD157-YR328
D40560P		AE0104A	POS 14	D40560J	W2510	ALL
D04077P		AE0104A	POS 15	D04077J	W5375	YC051-YN236, YN501-YR328
D04077P		AE0104A	POS 15	D04077J		YN237-YN260
D04273P		AE0104A	POS 17	D04273J	W5191	ALL
D41129P		AE0104A	POS 18	D41129J	W5721	ALL

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W0140

Page 1

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0141</b>	<b>NB2</b>	<b>E1-4 SHELF - RIGHT (continued)</b>				
D40806P		AE0104A	POS 19	D40806J	W5506	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40806P		AE0104A	POS 19	D40806J		YD160-YD170, YL969-YL999, YN237-YN260
D40490P		AE0104A	POS 20	D40490J	W5158	ALL
D40496P		AE0104A	POS 21	D40496J	W5510	ALL
D43016P		AE0104A	POS 22	D43016J	W5526	ALL
D40556P		AE0104A	POS 23	D40556J	W2508	YC051-YD158, YL951-YR328
D40556P		AE0104A	POS 23	D40556J		YD160-YD170
D40332P		AE0104A	POS 26	D40332J	W5204	YL951-YR328
D40826P		AE0104A	POS 27	D40826J	W5514	YC051-YD158, YL951-YR328
D40826P		AE0104A	POS 27	D40826J		YD160-YD170
D40346P		AE0104A	POS 28	D40346J	W5610	ALL
D45517P		AE0104B	POS 02	D45517J	W5463	YD157-YR328
D41453P		AE0104B	POS 03	D41453J	W0523	ALL
D00742		M00237	E001-04/ /			ALL
D03625		M01725	E001-04/ /			ALL
D03787		M01727	302/180/R020			ALL
D10137		M01876	E001-04/ /			ALL
D10721		M02105	E001-04/ /			ALL
D02123		R00316	300/178/R022			ALL
<b>W0142</b>	<b>LN2</b>	<b>FWD ENTRY LIGHT PANEL</b>				
D10756				D10754		YC051-YN260
D40020J				D40020P	W3058	YC051-YD158, YL951-YN260
D40020J				D40020P		YD160-YD170
D41082J				D41082P	W3058	YN501-YR328
D03160		L01086	304/288/R002			ALL
D14774		M02810	314/289/L010			YN501-YR328
<b>W0144</b>	<b>LN2</b>	<b>FWD RECESSED LIGHT PANEL</b>				
D40018J				D40018P	W4146	YC051-YN260
D41088J				D41088P	W4166	YN501-YR328

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W0140

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0144</b>	<b>LN2</b>	<b>FWD RECESSED LIGHT PANEL (continued)</b>				
D11356		L01146	MULTI/ /			YC051-YN260
D11372		M01840	MULTI/ /			YC051-YN260
D11384		M01840	MULTI/ /			YC051-YN260
<b>W0145</b>	<b>LA2</b>	<b>CAPT CONTROL SHAKER</b>				
D00281		M00232	210/220/L020			ALL
<b>W0147</b>	<b>RB2</b>	<b>F/O CONTROL SHAKER</b>				
D00367		M00424	210/220/R020			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0140

Page 3 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0151	NB2	E1-5 SHELF				
D00155A			*/ */ *			ALL
D00155B			*/ */ *			ALL
D00155C			*/ */ *			ALL
D00169A			*/ */ *			ALL
D00169B			*/ */ *			ALL
D00201C			*/ */ *			ALL
D00169C			E001-05/ /			ALL
D00201A			E001-05/ /			ALL
D00201B			E001-05/ /			ALL
D04125P		AE0105A	POS 01	D04125J	W2405	YC051-YD157
D04125P		AE0105A	POS 01	D04125J	W5107	YD158, YL951-YR328
D04125P		AE0105A	POS 01	D04125J		YD160-YD170
D04031P		AE0105A	POS 02	D04031J	W2151	YC051-YD158, YL951-YR328
D04031P		AE0105A	POS 02	D04031J		YD160-YD170
D41507P		AE0105A	POS 03	D41507J	W5723	ALL
D04197P		AE0105A	POS 04	D04197J	W5191	ALL
D41557P		AE0105A	POS 07	D41557J	W5163	ALL
D41517P		AE0105A	POS 08	D41517J	W2247	YC051-YN236, YN501-YR328
D41517P		AE0105A	POS 08	D41517J		YN237-YN260
D45125P		AE0105A	POS 09	D45125J	W5121	YC051-YD158, YL951-YR328
D45125P		AE0105A	POS 09	D45125J		YD160-YD170
D41511P		AE0105A	POS 11	D41511J	W5099	ALL
D41515P		AE0105A	POS 12	D41515J	W5185	ALL
D04131P		AE0105A	POS 13	D04131J	W5413	YC051-YC060
D04131P		AE0105A	POS 13	D04131J	W5411	YC061-YR328
D00201		M00150	E001-05/ /			ALL
D00169		M00165	E001-05/ /			ALL
D00155		M00381	E001-05/ /			ALL
D02849		M01347	E003-03/ /			ALL
D02851		M01347	E003-03/ /			ALL
D02853		M01347	E003-03/ /			ALL
D02705		S00942	316/163/L025			ALL
D02711		S00943	316/163/L025			ALL
W0152	SN2	AFT ENTRY LIGHT PANEL				
D11460				D11462		YC051-YN260

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W0150

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0152</b>	<b>SN2</b>	<b>AFT ENTRY LIGHT PANEL (continued)</b>				
D40026J				D40026P	W3058	YC051-YD158, YL951-YR328
D40026J				D40026P		YD160-YD170
D40032J				D40032P	W7359	ALL
D06015			988/289/L000			ALL
D10180		L01223	964/287/0000			ALL
D11368		M01834	MULTI/ /			ALL
D11480		M01834	MULTI/ /			ALL
D14776		M02811	978/290/0			YN501-YR328
<b>W0154</b>	<b>LN2</b>	<b>AFT RECESSED LIGHT PANEL</b>				
D40038J				D40038P	W3146	YC051-YN260
D11358		L01146	MULTI/ /			YC051-YN260
D11382		M01840	MULTI/ /			YC051-YN260
D11394		M01840	MULTI/ /			YC051-YN260
<b>W0156</b>	<b>NN2*</b>	<b>FORWARD COVE LIGHTS</b>				
D41072J				D41072P	W3058	YN501-YR328
D14478		M02806	MULTI/290/			YN501-YR328
D14634		M02806	MULTI/290/			YN501-YR328
D14650		M02806	MULTI/290/			YN501-YR328
D14474		M02809	MULTI/290/			YN501-YR328
D14610		M02809	MULTI/290/			YN501-YR328
D14630		M02809	MULTI/290/			YN501-YR328
<b>W0158</b>	<b>NN2*</b>	<b>AFT COVE LIGHTS - PANEL 1</b>				
D14546				D14550		YN501-YR328
D14792				D14790		YN501-YR328
D41074J				D41074P	W3058	YN501-YR328
D14654		M02806	MULTI/290/			YN501-YR328
D14540		M02807	MULTI/290/			YN501-YR328
D14544		M02808	931/290/10			YN501-YR328
D14568		M02808	931/290/10			YN501-YR328
D14614		M02808	931/290/10			YN501-YR328
D14626		M02808	931/290/10			YN501-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0150

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W0160	NN2*	AFT COVE LIGHTS - PANEL 2				
I D14550				D14546		YN501-YR328
I D14790				D14792		YN501-YR328
I D41078J				D41078P	W3058	YN501-YR328
I D14788		M02808	931/290/10			YN501-YR328
I D14552		M02809	MULTI/290/			YN501-YR328
I D14556		M02809	MULTI/290/			YN501-YR328
I D14560		M02809	MULTI/290/			YN501-YR328
I D14564		M02809	MULTI/290/			YN501-YR328
I D14618		M02809	MULTI/290/			YN501-YR328
I D14622		M02809	MULTI/290/			YN501-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0160

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W0204	SN2	P7 FIRST OFFICER'S GLARESHIELD PANEL (SN2)				
D40740P				D40740J	W0003	YC051-YD158, YL951-YR328
D11926		L00050	P007-00/ /			YC051-YD158, YL951-YR328
D11928		L00050	P007-00/ /			YC051-YD158, YL951-YR328
D14116		L00344	P007-00/ /			YL951-YR328
D14120		L00345	P007-00/ /			YL951-YR328
D11940		L01100	P007-00/ /			YC051-YD158, YL951-YR328
D11942		L01100	P007-00/ /			YC051-YD158, YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0200

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0210</b>	<b>LA2</b>	<b>E2-1 SHELF (WINDOW HEAT MODULES) LA2</b>				
D01042A			E002-01/ /			ALL
D01042B			E002-01/ /			ALL
D01044A			E002-01/ /			ALL
D01044B			E002-01/ /			ALL
D41432J		AE0201A	POS 15	D41432P	W2138	ALL
D40070J		AE0201A	POS 20	D40070P	W2108	ALL
D40518J		AE0201A	POS 21	D40518P		YC051-YC052
D40518J		AE0201A	POS 21	D40518P	W2112	YC053-YR328
D01042		M00320	E002-01/ /			ALL
D01044		M00321	E002-01/ /			ALL
<b>W0212</b>	<b>*</b>	<b>E2-1 SHELF</b>				
D49996J		AE0201A	POS 01	D49996P	W5112	ALL
D40934J		AE0201A	POS 02	D40934P	W5112	ALL
D40342J		AE0201A	POS 03	D40342P	W5112	ALL
D40564J		AE0201A	POS 05	D40564P	W2702	ALL
D40910J		AE0201A	POS 06	D40910P	W5726	ALL
D40254J		AE0201A	POS 07	D40254P	W5726	ALL
D40428J		AE0201A	POS 08	D40428P	W5510	ALL
D40926J		AE0201A	POS 09	D40926P	W5726	ALL
D40598J		AE0201A	POS 10	D40598P		YC051-YC052
D40598J		AE0201A	POS 10	D40598P	W2112	YC053-YR328
D40260J		AE0201A	POS 12	D40260P	W5110	ALL
D40372J		AE0201A	POS 13	D40372P	W6210	ALL
D40132J		AE0201A	POS 16	D40132P	W5164	YC051-YN236, YN501-YR328
D40132J		AE0201A	POS 16	D40132P		YN237-YN260
D40718J		AE0201A	POS 17	D40718P	W5164	YC051-YN236, YN501-YR328
D40718J		AE0201A	POS 17	D40718P		YN237-YN260
D40358J		AE0201A	POS 18	D40358P	W5612	ALL
D40340J		AE0201A	POS 19	D40340P	W5110	ALL
D40258J		AE0201A	POS 23	D40258P	W5568	YC051-YN236, YN501-YR328
D40258J		AE0201A	POS 23	D40258P		YN237-YN260
D40256J		AE0201A	POS 4	D40256P	W5112	ALL
D10890		G00010	E002-01/ /			ALL
D10890A		G00010	E002-01/ /			ALL
D10896		G00014	E002-01/ /			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0210

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
-----------------	-----	-------------------------	----------	--------------	-----------	-------------

**W0212**      \*      **E2-1 SHELF (continued)**

D10896A		G00014	E002-01/ /			ALL
D10896B		G00014	E002-01/ /			ALL
D10890B		GD00010	378/168/R047			ALL
D00102		T00011	E002-01/ /			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0210

Page 2 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0220</b>	<b>LA2</b>	<b>E2-2 SHELF</b>				
D10738A			E002-02/ /			YC051-YD158, YL951-YR328
D10738B			E002-02/ /			YC051-YD158, YL951-YR328
D10738C			E002-02/ /			YC051-YD158, YL951-YR328
D11114		AE0202A				YC051-YD158, YL951-YR328
D11114A		AE0202A				YC051-YD158, YL951-YR328
D11114B		AE0202A				YC051-YD158, YL951-YR328
D11114C		AE0202A				YC051-YD158, YL951-YR328
D11478		AE0202A				YC051-YD158, YL951-YR328
D11478A		AE0202A				YC051-YD158, YL951-YR328
D11478B		AE0202A				YC051-YD158, YL951-YR328
D40246J		AE0202A	POS 01	D40246P	W5104	YC051-YD158, YL951-YN236, YN501-YR323, YR325-YR328
D40246J		AE0202A	POS 01	D40246P		YN237-YN260, YR324
D40586J		AE0202A	POS 02	D40586P	W5248	YC051-YD158, YL951-YR328
D40942J		AE0202A	POS 03	D40942P	W5726	YC051-YD158, YL951-YR328
D40928J		AE0202A	POS 04	D40928P	W5726	YC051-YD158, YL951-YR328
D40656J		AE0202A	POS 05	D40656P	W7592	YC051-YD158, YL951-YR328
D43050J		AE0202A	POS 06	D43050P	W6730	YC051-YD158, YL951-YR328
D40136J		AE0202A	POS 07	D40136P	W5564	YC051-YD158, YL951-YR328
D40138J		AE0202A	POS 08	D40138P	W5168	YC051-YD158, YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0220

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0220</b>	<b>LA2</b>	<b>E2-2 SHELF (continued)</b>				
D40456J		AE0202A	POS 09	D40456P	W5156	YC051-YD158, YL951-YR328
D40348J		AE0202A	POS 10	D40348P	W5610	YC051-YD158, YL951-YR328
D40506J		AE0202A	POS 11	D40506P	W2104	YC051-YD158, YL951-YR328
D40520J		AE0202A	POS 12	D40520P		YC051-YC052
D40520J		AE0202A	POS 12	D40520P	W2112	YC053-YD158, YL951-YR328
D43084J		AE0202A	POS 13	D43084P	W5230	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR323, YR325-YR328
D43084J		AE0202A	POS 13	D43084P		YL969-YL999, YN237-YN260, YR324
D40118J		AE0202A	POS 14	D40118P	W5566	YC051-YD158, YL951-YR328
D40430J		AE0202A	POS 15	D40430P	W5506	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40430J		AE0202A	POS 15	D40430P		YL969-YL999, YN237-YN260
D40360J		AE0202A	POS 16	D40360P	W5612	YC051-YD158, YL951-YR328
D43060J		AE0202A	POS 17	D43060P	W6128	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR323, YR325-YR328
D43060J		AE0202A	POS 17	D43060P		YL969-YL999, YN237-YN260, YR324
D41012J		AE0202A	POS 18	D41012P	W6214	YC051-YD158, YL951-YR323, YR325-YR328
D41012J		AE0202A	POS 18	D41012P		YR324
D43008J		AE0202A	POS 19	D43008P	W5134	YC051-YD158, YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0220

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0220</b>	<b>LA2</b>	<b>E2-2 SHELF (continued)</b>				
D40240J		AE0202A	POS 20	D40240P	W6102	YC051-YD158, YL951-YR328
D40012J		AE0202A	POS 21	D40012P	W7594	YC051-YD158, YL951-YR328
D40912J		AE0202A	POS 22	D40912P	W5726	YC051-YD158, YL951-YR328
D40946J		AE0202A	POS 23	D40946P	W5726	YC051-YD158, YL951-YR328
D40450J		AE0202A	POS 24	D40450P	W5310	YC051-YD158, YL951-YR328
D40130J		AE0202A	POS 25	D40130P	W5162	YC051-YD158, YL951-YR328
D40380J		AE0202A	POS 26	D40380P	W6214	YC051-YD158, YL951-YR323, YR325-YR328
D40380J		AE0202A	POS 26	D40380P		YR324
D40126J		AE0202A	POS 27	D40126P	W3170	YC051-YD158, YL951-YR328
D40724J		AE0202A	POS 28	D40724P	W5156	YC051-YD158, YL951-YR328
D43024J		AE0202A	POS 29	D43024P	W5728	YC051-YD158, YL951-YR328
D40646J		AE0202A	POS 30	D40646P	W2110	YC053-YD158, YL951-YR328
D46022J		AE0202A	POS 31	D46022P	W2110	YC053-YD158, YL951-YR328
D42014J		AE0202A	POS 32	D42014P	W5088	YC053-YD158, YL951-YR328
D41840J		AE0202A	POS 33	D41840P	W5094	YC053-YD158, YL951-YR328
D00998		M00279	E002-02/ /			YC051-YD158, YL951-YR328
D01000		M00279	E002-02/ /			YC051-YD158, YL951-YR328
D01002		M00279	E002-02/ /			YC051-YD158, YL951-YR328
D10738		M01653	E002-02/ /			YC051-YD158, YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0220

Page 3 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0311	NA2	E3-1 ELECTRONIC SHELF - LEFT				
D03651A			E003-01/ /			ALL
D03651B			E003-01/ /			ALL
D03651C			E003-01/ /			ALL
D03667A			E003-01/ /			ALL
D03667B			E003-01/ /			ALL
D03667C			E003-01/ /			ALL
D03973A			E003-01/ /			ALL
D03973B			E003-01/ /			ALL
D03973C			E003-01/ /			ALL
D03973D			E003-01/ /			ALL
D03973E			E003-01/ /			ALL
D03973F			E003-01/ /			ALL
D04271J		AE0301A	POS 01	D04271P	W5189	ALL
D42163J		AE0301A	POS 02	D42163P	W5273	ALL
D40101J		AE0301A	POS 04	D40101P	W2527	ALL
D40301J		AE0301A	POS 05	D40301P	W2531	ALL
D04267J		AE0301A	POS 06	D04267P	W2207	ALL
D45111J		AE0301A	POS 07	D45111P	W5111	ALL
D45131J		AE0301A	POS 08	D45131P	W5111	ALL
D45151J		AE0301A	POS 09	D45151P	W5111	ALL
D40448J		AE0301A	POS 11	D40448P	W5310	ALL
D42005J		AE0301A	POS 12	D42005P	W2265	ALL
D49994J		AE0301A	POS 14	D49994P	W3170	ALL
D43145J		AE0301A	POS 15	D43145P	W5161	ALL
D43155J		AE0301A	POS 16	D43155P	W5161	ALL
D45205J		AE0301A	POS 18	D45205P	W5205	YC051-YD158, YL951-YR328
D45205J		AE0301A	POS 18	D45205P		YD160-YD170
D40460J		AE0301A	POS 19	D40460P	W5156	YC051-YD158, YL951-YR328
D40460J		AE0301A	POS 19	D40460P		YD160-YD170
D40516J		AE0301A	POS 20	D40516P		YC051-YC052
D40516J		AE0301A	POS 20	D40516P	W2112	YC053-YR328
D41817J		AE0301A	POS 21	D41817P	W2201	ALL
D41837J		AE0301A	POS 22	D41837P	W2653	ALL
D03651		M01731	E003-01/ /			ALL
D03667		M01735	E003-01/ /			ALL
D03973		M01808	E003-01/ /			ALL

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W0310

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W0313	NB2	E3-1 ELECTRONIC SHELF - RIGHT				
I D03653A			E003-01/ /			ALL
I D03653B			E003-01/ /			ALL
I D03653C			E003-01/ /			ALL
I D03975A			E003-01/ /			ALL
I D03975B			E003-01/ /			ALL
I D03975C			E003-01/ /			ALL
I D03975D			E003-01/ /			ALL
I D03975E			E003-01/ /			ALL
I D03975F			E003-01/ /			ALL
I D46017J		AE0301A	POS 23	D46017P	W2231	YC051-YN236, YN501-YR328 YN237-YN260
I D46017J		AE0301A	POS 23	D46017P		
I D46035J		AE0301A	POS 24	D46035P	W2169	ALL
I D42007J		AE0301A	POS 25	D42007P	W2267	ALL
I D40544J		AE0301A	POS 27	D40544P	W2218	ALL
I D43147J		AE0301A	POS 28	D43147P	W5163	ALL
I D43157J		AE0301A	POS 29	D43157P	W5163	ALL
I D04297J		AE0301A	POS 31	D04297P	W2237	ALL
I D45121J		AE0301A	POS 32	D45121P	W5121	YC051-YD158, YL951-YR328 YD160-YD170
I D45121J		AE0301A	POS 32	D45121P		
I D45141J		AE0301A	POS 33	D45141P	W5121	YC051-YD158, YL951-YR328 YD160-YD170
I D45141J		AE0301A	POS 33	D45141P		
I D40394J		AE0301A	POS 34	D40394P	W6412	YC051-YN236, YN501-YR323, YR325-YR328 YN237-YN260, YR324
I D40149J		AE0301A	POS 35	D40149P	W6491	YC053-YD158, YL951-YR328 YD160-YD170
I D40149J		AE0301A	POS 35	D40149P		
I D40732J		AE0301A	POS 36	D40732P	W4170	ALL
I D04277J		AE0301A	POS 37	D04277P	W5191	ALL
I D42165J		AE0301A	POS 38	D42165P	W5275	ALL
I D40201J		AE0301A	POS 40	D40201P	W2529	ALL
I D40401J		AE0301A	POS 41	D40401P	W2533	ALL
I D03653		M01732	E003-01/ /			ALL
I D03975		M01809	E003-01/ /			ALL

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W0310

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W0321	NN2	E3-2 SHELF				
I D01458B			*/ */ *			ALL
I D02295A			*/ */ *			ALL
I D01458A			E003-02/ /			ALL
I D02295B			E003-02/ /			ALL
I D02295C			E003-02/ /			ALL
I D02295D			E003-02/ /			ALL
I D02295E			E003-02/ /			ALL
I D02295F			E003-02/ /			ALL
I D02813A			E003-02/ /			YC051-YD170
I D02813B			E003-02/ /			YC051-YD170
I D02813C			E003-02/ /			YC051-YD170
I D02819			E003-02/ /			YD158-YD170
I D03228A			E003-02/ /			ALL
I D03228B			E003-02/ /			ALL
I D03228C			E003-02/ /			ALL
I D03683A			E003-02/ /			ALL
I D03683B			E003-02/ /			ALL
I D03685A			E003-02/ /			ALL
I D03685B			E003-02/ /			ALL
I D02821			E004-01/ /			YD158-YD170
I D43277J		AE0302A	POS 01	D43277P	W3577	YC051-YD170
I D40053J		AE0302A	POS 02	D40053P	W5367	YC051-YN236, YN501-YR328
I D40053J		AE0302A	POS 02	D40053P		YN237-YN260
I D40726J		AE0302A	POS 03	D40726P	W5310	YC051-YL954, YN231-YN235
I D40446J		AE0302A	POS 04	D40446P	W5310	ALL
I D40362J		AE0302A	POS 05	D40362P	W5612	ALL
I D40350J		AE0302A	POS 06	D40350P	W5610	ALL
I D40940J		AE0302A	POS 07	D40940P	W5610	ALL
I D43215J		AE0302A	POS 09	D43215P	W2805	ALL
I D40025J		AE0302A	POS 10	D40025P	W3377	YC051-YN236, YN501-YR328
I D40025J		AE0302A	POS 10	D40025P		YN237-YN260
I D43203J		AE0302A	POS 11	D43203P	W5603	ALL
I D43257J		AE0302A	POS 12	D43257P	W5257	ALL
I D43219J		AE0302A	POS 13	D43219P	W2419	ALL
I D45207J		AE0302A	POS 14	D45207P	W5205	YC051-YD158, YL951-YR328
I D45207J		AE0302A	POS 14	D45207P		YD160-YD170

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W0320

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0321</b>	<b>NN2</b>	<b>E3-2 SHELF (continued)</b>				
D40950J		AE0302A	POS 15	D40950P	W5506	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40950J		AE0302A	POS 15	D40950P		YD160-YD170, YL969-YL999, YN237-YN260
D40594J		AE0302A	POS 16	D40594P	W5156	YC051-YD158, YL951-YR328
D40594J		AE0302A	POS 16	D40594P		YD160-YD170
D45177J		AE0302A	POS 17	D45177P	W5111	ALL
D45157J		AE0302A	POS 18	D45157P	W5111	ALL
D45137J		AE0302A	POS 19	D45137P	W5111	ALL
D45117J		AE0302A	POS 20	D45117P	W5111	ALL
D43054J		AE0302A	POS 22	D43054P	W6732	ALL
D40462J		AE0302A	POS 23	D40462P	W5156	YC051-YD158, YL951-YR328
D40462J		AE0302A	POS 23	D40462P		YD160-YD170
D43022J		AE0302A	POS 24	D43022P	W5530	ALL
D46021J		AE0302A	POS 25	D46021P	W2231	YC051-YN236, YN501-YR328
D46021J		AE0302A	POS 25	D46021P		YN237-YN260
D41839J		AE0302A	POS 26	D41839P	W2653	ALL
D41819J		AE0302A	POS 27	D41819P	W2201	ALL
D40426J		AE0302A	POS 28	D40426P	W5158	ALL
D43279J		AE0302A	POS 29	D43279P	W3577	YD158-YD170
D45102J		AE0302A	POS 29	D45102P	W5121	YL963-YL999, YN236-YR328
D46043J		AE0302A	POS 30	D46043P	W2169	ALL
D40596J		AE0302A	POS 31	D40596P		YC051-YC052
D40596J		AE0302A	POS 31	D40596P	W2112	YC053-YR328
D43046J		AE0302A	POS 32	D43046P	W6530	ALL
D40486J		AE0302A	POS 33	D40486P	W5158	ALL
D40029J		AE0302A	POS 35	D40029P	W3379	YC051-YN236, YN501-YR328
D40029J		AE0302A	POS 35	D40029P		YN237-YN260
D40468J		AE0302A	POS 36	D40468P	W5160	YC051-YD158, YL951-YR328
D40468J		AE0302A	POS 36	D40468P		YD160-YD170

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0320

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0321</b>	<b>NN2</b>	<b>E3-2 SHELF (continued)</b>				
D40470J		AE0302A	POS 37	D40470P	W5160	YC051-YD158, YL951-YR328 YD160-YD170
D40470J		AE0302A	POS 37	D40470P		
D43205J		AE0302A	POS 38	D43205P	W5605	ALL
D40194J		AE0302A	POS 39	D40194P	W6134	YC051-YN236, YN501-YR328 YN237-YN260
D40194J		AE0302A	POS 39	D40194P		
D43261J		AE0302A	POS 40	D43261P	W5461	ALL
D42261J		AE0302A	POS 41	D42261P	W5461	ALL
D40952J		AE0302A	POS 42	D40952P	W5160	YC051-YD158, YL951-YR328 YD160-YD170
D40952J		AE0302A	POS 42	D40952P		
D42361J		AE0302A	POS 43	D42361P	W5461	ALL
D43263J		AE0302A	POS 44	D43263P	W5463	ALL
D40392J		AE0302A	POS 45	D40392P	W6412	YC051-YN236, YN501-YR323, YR325-YR328 YN237-YN260, YR324
D40392J		AE0302A	POS 45	D40392P		
D45127J		AE0302A	POS 46	D45127P	W5121	YC051-YD158, YL951-YR328 YD160-YD170
D45127J		AE0302A	POS 46	D45127P		
D42053J		AE0302A	POS 47	D42053P	W5375	YC051-YN236, YN501-YR328 YN237-YN260
D42053J		AE0302A	POS 47	D42053P		
D40276J		AE0302A	POS 48	D40276P	W6134	YC051-YN236, YN501-YR328 YN237-YN260
D40276J		AE0302A	POS 48	D40276P		
D43209J		AE0302A	POS 49	D43209P	W5409	ALL
D43217J		AE0302A	POS 50	D43217P	W5461	YN236-YR328
D43030J		AE0302A	POS 51	D43030P	W6034	ALL
D40908J		AE0302A	POS 52	D40908P	W5726	ALL
D42363J		AE0302A	POS 53	D42363P	W5463	ALL
D43080J		AE0302A	POS 54	D43080P	W6412	YC051-YN236, YN501-YR323, YR325-YR328 YN237-YN260, YR324
D43080J		AE0302A	POS 54	D43080P		
D40173J		AE0302A	POS 55	D40173P	W5303	YL951-YN260
D45147J		AE0302A	POS 56	D45147P	W5121	YC051-YD158, YL951-YR328 YD160-YD170
D45147J		AE0302A	POS 56	D45147P		

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0320

Page 3

Nov 12/2012





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W0321	NN2	E3-2 SHELF (continued)				
D02295		M00675	E003-02/ /			ALL
D02813		M01499	E003-02/ /			YC051-YD170
D03669		M01736	E003-02/ /			ALL
D03669A		M01736	E003-02/ /			ALL
D03669B		M01736	E003-02/ /			ALL
D03669C		M01736	E003-02/ /			ALL
D10461		M01955	E003-02/ /			YL951-YN260
D03228		M1240				ALL
D03683		M1747				ALL
D03685		M1748				ALL
D01458		M528				ALL

For training purposes only!

## MASTER BUNDLE LIST

D280A108

91-21-13

Section W0320

Page 4 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0330</b>	<b>NB2</b>	<b>E3-3 SHELF (ZONE TEMP CONTROL) NB2</b>				
D41800J		AE0303A	POS 24	D41800P	W5104	YC051-YL999, YR301-YR323, YR325-YR328
D41814J		AE0303A	POS 25	D41814P	W6214	YC051-YL999, YR301-YR323, YR325-YR328
D41802J		AE0303A	POS 26	D41802P	W6220	YC051-YL999, YR301-YR323, YR325-YR328
D41842J		AE0303A	POS 27	D41842P	W5526	YC051-YL999, YR301-YR323, YR325-YR328
D41824J		AE0303A	POS 30	D41824P	W5156	YC051-YD158, YL951-YL999, YR301-YR323, YR325-YR328
D41824J D41836J		AE0303A AE0303A	POS 30 POS 31	D41824P D41836P	W5104	YD160-YD170 YC051-YL999, YR301-YR323, YR325-YR328
D41818J		AE0303A	POS 32	D41818P	W6288	YC051-YL999, YR301-YR323, YR325-YR328
D41822J		AE0303A	POS 35	D41822P	W6412	YC051-YL999, YR301-YR323, YR325-YR328
D41826J		AE0303A	POS 36	D41826P	W2218	YC051-YL999, YR301-YR323, YR325-YR328
D41808J		AE0303A	POS 37	D41808P	W6420	YC051-YL999, YR301-YR323, YR325-YR328
D41812J		AE0303A	POS 40	D41812P	W2216	YC051-YL999, YR301-YR323, YR325-YR328
D41806J		AE0303A	POS 41	D41806P	W6230	YC051-YL999, YR301-YR323, YR325-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0330

Page 1

Nov 12/2012

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0330</b>	<b>NB2</b>	<b>E3-3 SHELF (ZONE TEMP CONTROL) NB2 (continued)</b>				
D03858		M01442	E003-03/ /			YC051-YL999, YR301-YR323, YR325-YR328
D03858A		M01442	E003-03/ /			YC051-YL999, YR301-YR323, YR325-YR328
D03858B		M01442	E003-03/ /			YC051-YL999, YR301-YR323, YR325-YR328
D03858C		M01442	E003-03/ /			YC051-YL999, YR301-YR323, YR325-YR328
D03860		M01443	E003-03/ /			YC051-YL999, YR301-YR323, YR325-YR328
D03860A		M01443	E003-03/ /			YC051-YL999, YR301-YR323, YR325-YR328
D03860B		M01443	E003-03/ /			YC051-YL999, YR301-YR323, YR325-YR328
D03860C		M01443	E003-03/ /			YC051-YL999, YR301-YR323, YR325-YR328
<b>W0331</b>	<b>NA2</b>	<b>E3-3 SHELF BUNDLE</b>				
D00539A			*/ */ *			ALL
D00539B			*/ */ *			ALL
D00539C			E003-03/ /			ALL
D01967A			E003-03/ /			YC051-YD157
D01967B			E003-03/ /			YC051-YD157
D01967C			E003-03/ /			YC051-YD157
D02643A			E003-03/ /			YN236-YR328
D02643B			E003-03/ /			YN236-YR328
D02643C			E003-03/ /			YN236-YR328
D43301J		AE0303A	POS 01	D43301P	W5415	ALL
D43306J		AE0303A	POS 05	D43306P	W5723	YD158-YR328
D43359J		AE0303A	POS 06	D43359P	W5103	YD158-YR328
D43391J		AE0303A	POS 07	D43391P	W2417	YD158-YR328

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W0330

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0331</b>	<b>NA2</b>	<b>E3-3 SHELF BUNDLE (continued)</b>				
D43314J		AE0303A	POS 08	D43314P	W5107	YL951-YR328
D43361J		AE0303A	POS 10	D43361P	W5105	YD158-YR328
D43367J		AE0303A	POS 11	D43367P	W5107	YD158, YL951-YR328
D43367J		AE0303A	POS 11	D43367P		YD160-YD170
D43307J		AE0303A	POS 12	D43307P	W5111	ALL
D43321J		AE0303A	POS 13	D43321P	W5111	ALL
D43329J		AE0303A	POS 15	D43329P	W2417	YD158-YR328
D43345J		AE0303A	POS 17	D43345P	W5331	YD158-YR328
D43347J		AE0303A	POS 18	D43347P	W5331	YD158-YR328
D43305J		AE0303A	POS 20	D43305P	W5111	ALL
D43049J		AE0303A	POS 22	D43049P	W5461	YN236-YR328
D43315J		AE0303A	POS 22	D43315P	W5189	YC051-YD170
D43319J		AE0303A	POS 23	D43319P	W2801	YC051-YN260
D43313J		AE0303A	POS 28	D43313P	W2201	ALL
D43309J		AE0303A	POS 29	D43309P	W2231	YC051-YN236, YN501-YR328
D43309J		AE0303A	POS 29	D43309P		YN237-YN260
D43323J		AE0303A	POS 33	D43323P	W5121	YC051-YD157
D43331J		AE0303A	POS 38	D43331P	W5191	YD158-YR328
D43323J		AE0303A	POS 42	D43323P	W5121	YD158, YL951-YR328
D43323J		AE0303A	POS 42	D43323P		YD160-YD170
D43379J		AE0303A	POS 43	D43379P	W5335	YD158-YR328
D43333J		AE0303A	POS 44	D43333P	W5723	YD158-YR328
D43355J		AE0303A	POS 46	D43355P	W2415	YD158-YR328
D43357J		AE0303A	POS 47	D43357P	W2415	YD158-YR328
D43363J		AE0303A	POS 48	D43363P	W2413	YD158-YR328
D43365J		AE0303A	POS 49	D43365P	W2413	YD158-YR328
D00539		M00411	E003-03/ /			ALL
D02643		M00916	E003-03/ /			YN236-YR328
D01967		M01109	E003-03/ /			YC051-YD157

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0330

Page 3 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W0342	NN2	FORWARD RIGHT HAND DOORWAY LINING				
I D40042J				D40042P	W4142	ALL
I D02968		L01063	318/280/R038			ALL
I D12606		M01834	MULTI/ /			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0340

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W0352	SN2	FORWARD LEFT HAND DOORWAY LINING				
I D40040J				D40040P	W4142	ALL
I D02972		L01067	329/285/L030			ALL
I D11366		M01834	MULTI/ /			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0350

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0410</b>	<b>RB2</b>	<b>E4-1 SHELF (ELECTRICAL EQUIPMENT) RB2</b>				
D10002B			*/*/			YC051-YL999, YR301-YR328
D10740C			*/*/			YC051-YD157
D10740A			E001-01/ /			YC051-YD157
D00458A			E004-01/ /			ALL
D00458B			E004-01/ /			ALL
D10002A			E004-01/ /			YC051-YL999, YR301-YR328
D10740B			E004-01/ /			YC051-YD157
D41804J		AE0401A	POS 09	D41804P	W6220	YC051-YL999, YR301-YR323, YR325-YR328
D41804J		AE0401A	POS 09	D41804P		YR324
D41810J		AE0401A	POS 10	D41810P	W6420	YC051-YL999, YR301-YR323, YR325-YR328
D41810J		AE0401A	POS 10	D41810P		YR324
D41816J		AE0401A	POS 11	D41816P	W6288	YC051-YL999, YR301-YR328
D41828J		AE0401A	POS 12	D41828P	W6214	YC051-YL999, YR301-YR323, YR325-YR328
D41828J		AE0401A	POS 12	D41828P		YR324
D41830J		AE0401A	POS 13	D41830P	W6412	YC051-YN236, YN501-YR323, YR325-YR328
D41830J		AE0401A	POS 13	D41830P		YN237-YN260, YR324
D44161J		AE0401A	POS 24	D44161P	W5461	ALL
D40904J		AE0401A	POS 26	D40904P	W5726	ALL
D40244J		AE0401A	POS 29	D40244P	W5104	YC051-YN236, YN501-YR323, YR325-YR328
D40244J		AE0401A	POS 29	D40244P		YN237-YN260, YR324
D40242J		AE0401A	POS 30	D40242P	W6102	ALL
D40328J		AE0401A	POS 31	D40328P	W6214	YC051-YR323, YR325-YR328
D40328J		AE0401A	POS 31	D40328P		YR324
D41010J		AE0401A	POS 33	D41010P	W6412	YC051-YN236, YN501-YR323, YR325-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0410

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0410</b>	<b>RB2</b>	<b>E4-1 SHELF (ELECTRICAL EQUIPMENT) RB2 (continued)</b>				
D41010J		AE0401A	POS 33	D41010P		YN237-YN260, YR324
D40326J		AE0401A	POS 35	D40326P	W6412	YC051-YN236, YN501-YR323, YR325-YR328
D40326J		AE0401A	POS 35	D40326P		YN237-YN260, YR324
D40330J		AE0401A	POS 36	D40330P	W6230	YC051-YR323, YR325-YR328
D40330J		AE0401A	POS 36	D40330P		YR324
D43044J		AE0401A	POS 37	D43044P	W6528	ALL
D40144J		AE0401A	POS 38	D40144P	W6168	ALL
D40066J		AE0401A	POS 39	D40066P	W6204	ALL
D40530J		AE0401A	POS 40	D40530P	W2214	YC051-YD158, YL951-YR328
D40530J		AE0401A	POS 40	D40530P		YD160-YD170
D40158J		AE0401A	POS 42	D40158P	W6564	ALL
D40554J		AE0401A	POS 43	D40554P	W2508	YC051-YD158, YL951-YR328
D40554J		AE0401A	POS 43	D40554P		YD160-YD170
D43018J		AE0401A	POS 44	D43018P	W5526	ALL
D43062J		AE0401A	POS 45	D43062P	W5230	YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
D43062J		AE0401A	POS 45	D43062P		YL969-YL999, YN237-YN260, YR324
D40378J		AE0401A	POS 46	D40378P	W6214	YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
D40378J		AE0401A	POS 46	D40378P		YR324
D40562J		AE0401A	POS 47	D40562P	W2510	ALL
D40534J		AE0401A	POS 48	D40534P	W2216	YC051-YR323, YR325-YR328
D40534J		AE0401A	POS 48	D40534P		YR324
D43038J		AE0401A	POS 49	D43038P	W6230	YC051-YR323, YR325-YR328
D43038J		AE0401A	POS 49	D43038P		YR324
D40156J		AE0401A	POS 50	D40156P		YC051-YC053
D40156J		AE0401A	POS 50	D40156P	W6162	YC054-YR328
D40542J		AE0401A	POS 51	D40542P	W2218	ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0410

Page 2

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0410</b>	<b>RB2</b>	<b>E4-1 SHELF (ELECTRICAL EQUIPMENT) RB2 (continued)</b>				
D40390J		AE0401A	POS 52	D40390P	W6412	YC051-YN236, YN501-YR323, YR325-YR328 YN237-YN260, YR324
D40390J		AE0401A	POS 52	D40390P		ALL
D00458		M00324	E004-01/ /			YN231-YN501
D00454		M00345	E004-01/ /			YN231-YN501
D00456		M00345	E004-01/ /			YC051-YD157
D10740		M01654	E004-01/ /			YC051-YL999, YR301-YR328
D10002		M1455				
<b>W0411</b>	<b>RA2</b>	<b>E4-1 ELCTRONIC SHELF</b>				
D02555B			*/*/			ALL
D10727B			*/*/			YD158-YR328
D10727C			*/*/			YD158-YR328
D02813A			E003-02/ /			YL951-YN260
D02813B			E003-02/ /			YL951-YN260
D02813C			E003-02/ /			YL951-YN260
D02501A			E004-01/ /			ALL
D02501B			E004-01/ /			ALL
D02501C			E004-01/ /			ALL
D02555A			E004-01/ /			ALL
D02555C			E004-01/ /			ALL
D10727A			E004-01/ /			YD158-YR328
D44145J		AE0401A	POS 07	D44145P	W2803	YC051-YC055
D40151J		AE0401A	POS 14	D40151P	W3577	YL951-YN260
D44145J		AE0401A	POS 14	D44145P	W2803	YC056-YD157
D40153J		AE0401A	POS 15	D40153P	W5005	YL951-YN260
D41101J		AE0401A	POS 15	D41101P	W5615	YC051-YD157
D04289J		AE0401A	POS 16	D04289P	W5191	YD158-YR328
D04287J		AE0401A	POS 17	D04287P	W5189	ALL
D04155J		AE0401A	POS 18	D04155P	W3323	ALL
D04285J		AE0401A	POS 19	D04285P	W5191	ALL
D04331J		AE0401A	POS 20	D04331P	W3319	YC051-YD158, YL951-YR328
D04331J		AE0401A	POS 20	D04331P		YD160-YD170
D08123J		AE0401A	POS 21	D08123P	W5189	ALL
D04153J		AE0401A	POS 22	D04153P	W3327	YC051-YD158, YL951-YR328

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W0410

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0411</b>	<b>RA2</b>	<b>E4-1 ELCTRONIC SHELF (continued)</b>				
D04153J		AE0401A	POS 22	D04153P		YD160-YD170
D04371J		AE0401A	POS 23	D04371P	W5431	ALL
D04161J		AE0401A	POS 25	D04161P	W5337	YC051-YN236, YN501-YR328 YN237-YN260
D04161J		AE0401A	POS 25	D04161P		YN237-YN260
D44139J		AE0401A	POS 27	D44139P	W3309	ALL
D04157J		AE0401A	POS 28	D04157P	W3329	ALL
D04721J		AE0401A	POS 32	D04721P	W2401	YD158-YR328
D04115J		AE0401D	POS 13	D04115P	W5331	YD158-YR328
D04007J		AE0401D	POS 14	D04007P	W5335	YD158-YR328
D04009J		AE0401D	POS 15	D04009P	W5335	YD158-YR328
D04117J		AE0401D	POS 16	D04117P	W5331	YD158-YR328
D02555		M00025	E004-01/ /			YR301-YR328
D02813		M01499	E003-02/ /			YL951-YN260
D11281		M02100	E004-01/ /			YL951-YR328
D10727		M02127	E004-01/ /			YD158-YR328
D11813		M02502	E004-01/ /			YD158-YR328
D02501		M1353				ALL
D11281		M2100				YD158-YD170
D02555		M25				YC051-YN501
D02819		XFMR				YL951-YN260
D02821		XFMR				YL951-YN260

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0410

Page 4 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0420</b>	<b>RB2</b>	<b>E4-2 SHELF (RIGHT WINDOW HEAT MODULES) RB2</b>				
D01046A			E004-02/ /			ALL
D01046B			E004-02/ /			ALL
D01048A			E004-02/ /			ALL
D01048B			E004-02/ /			ALL
D42400J		AE0402A	POS 22	D42400P	W6412	YC051-YN236, YN501-YR323, YR325-YR328
D42400J		AE0402A	POS 22	D42400P		YN237-YN260, YR324
D40068J		AE0402A	POS 34	D40068P	W2208	YC051-YD158, YL951-YR328
D40068J		AE0402A	POS 34	D40068P		YD160-YD170
D41440J		AE0402A	POS 38	D41440P	W2218	ALL
D01046		M00322	E004-02/ /			ALL
D01048		M00323	E004-02/ /			ALL
<b>W0422</b>		<b>E4-2 SHELF</b>				
D42111J		AE0402A	POS 01	D42111P	W5719	ALL
D40584J		AE0402A	POS 02	D40584P	W5248	ALL
D40338J		AE0402A	POS 07	D40338P	W5110	ALL
D40238J		AE0402A	POS 08	D40238P	W6134	YC051-YN236, YN501-YR328
D40238J		AE0402A	POS 08	D40238P		YN237-YN260
D40714J		AE0402A	POS 09	D40714P	W6588	ALL
D40228J		AE0402A	POS 13	D40228P	W6208	YC051-YD158, YL951-YR328
D40228J		AE0402A	POS 13	D40228P		YD160-YD170
D40222J		AE0402A	POS 14	D40222P	W6208	YC051-YD158, YL951-YR328
D40222J		AE0402A	POS 14	D40222P		YD160-YD170
D40164J		AE0402A	POS 15	D40164P	W6586	ALL
D43028J		AE0402A	POS 16	D43028P	W6032	ALL
D40432J		AE0402A	POS 17	D40432P	W6222	YC051-YR323, YR325-YR328
D40432J		AE0402A	POS 17	D40432P		YR324
D40742J		AE0402A	POS 19	D40742P	W6222	YC051-YR323, YR325-YR328
D40742J		AE0402A	POS 19	D40742P		YR324

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0420

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0422</b>		<b>E4-2 SHELF (continued)</b>				
D40712J		AE0402A	POS 23	D40712P	W6412	YC051-YN236, YN501-YR323, YR325-YR328
D40712J		AE0402A	POS 23	D40712P		YN237-YN260, YR324
D40388J		AE0402A	POS 24	D40388P	W6412	YC051-YN236, YN501-YR323, YR325-YR328
D40388J		AE0402A	POS 24	D40388P		YN237-YN260, YR324
D40382J		AE0402A	POS 25	D40382P	W6410	ALL
D40140J		AE0402A	POS 26	D40140P	W6164	YC051-YN236, YN501-YR328
D40140J		AE0402A	POS 26	D40140P		YN237-YN260
D40720J		AE0402A	POS 27	D40720P	W6164	YC051-YN236, YN501-YR328
D40720J		AE0402A	POS 27	D40720P		YN237-YN260
D40938J		AE0402A	POS 28	D40938P	W6210	ALL
D40370J		AE0402A	POS 29	D40370P	W6210	ALL
D40484J		AE0402A	POS 30	D40484P	W5158	ALL
D40356J		AE0402A	POS 31	D40356P	W5612	ALL
D40540J		AE0402A	POS 32	D40540P	W2218	ALL
D40472J		AE0402A	POS 33	D40472P	W5160	YC051-YD158, YL951-YR328
D40472J		AE0402A	POS 33	D40472P		YD160-YD170
D40618J		AE0402A	POS 35	D40618P	W5158	ALL
D40930J		AE0402A	POS 36	D40930P	W5612	ALL
D40474J		AE0402A	POS 37	D40474P	W5160	YC051-YD158, YL951-YR328
D40474J		AE0402A	POS 37	D40474P		YD160-YD170
D40169J		AE0402A	POS 40	D40169P	W5160	YD158, YL951-YR328
D40169J		AE0402A	POS 40	D40169P		YD160-YD170
D10892		G00012	E004-02/ /			ALL
D10892A		G00012	E004-02/ /			ALL
D10892B		G00012	E004-02/ /			ALL
D10898		G00015	E004-02/ /			ALL
D10898A		G00015	E004-02/ /			ALL
D10898B		G00015	E004-02/ /			ALL
D02586		M00980	E004-02/ /			ALL
D02586A		M00980	E004-02/ /			ALL
D02586B		M00980	E004-02/ /			ALL
D00104		T00012	E004-02/ /			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0420

Page 2

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
-----------------	-----	-------------------------	----------	--------------	-----------	-------------

**W0422**      **E4-2 SHELF (continued)**

D00106		T00013	E004-02/ /			ALL
--------	--	--------	------------	--	--	-----

For training purposes only!

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W0420

Page 3 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W0442	NN2	AFT RIGHT HAND DOORWAY LINING				
I D40046J				D40046P	W4142	ALL
I D02986		L01079	972/279/R044			ALL
I W0444	LN2*	CENTER OVERHEAD STOWAGE LIGHT				
I D14448			MULTI/ /			YN501-YR328
I D14682			MULTI/ /			YN501-YR328
I D14688			MULTI/ /			YN501-YR328
I D14404		M02804	MULTI/288/11			YN501-YR328
I D14684		M02804	MULTI/288/11			YN501-YR328
I D14686		M02804	MULTI/288/11			YN501-YR328
I W0446	LN2*	CENTER OVERHEAD STOWAGE LIGHT - LEFT FWD				
I D14742			MULTI/ /			YN501-YR328
I D14746			MULTI/ /			YN501-YR328
I D14744		M02804	MULTI/288/11			YN501-YR328
I D14748		M02804	MULTI/288/11			YN501-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0440

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W0452	NN2	AFT LEFT HAND DOORWAY LINING				
I D40044J				D40044P	W3142	ALL
I D02982		L01076	972/286/L037			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0450

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0521</b>	<b>NA2</b>	<b>E5-2 SHELF WIRE BUNDLE #1</b>				
D02179A			E005-02/ /			ALL
D02179B			E005-02/ /			ALL
D02179C			E005-02/ /			ALL
D03687A			E005-02/ /			ALL
D03687B			E005-02/ /			ALL
D03687C			E005-02/ /			ALL
D41251J		AE0104B	POS 01	D41251P	W0121	ALL
D45221P		AE0502A	POS 01	D45221J	W0737	ALL
D45001P		AE0502A	POS 02	D45001J	W5615	YC051-YD157
D45209P		AE0502A	POS 03	D45209J	W5205	YC051-YD158, YL951-YR328, YD160-YD170
D45209P		AE0502A	POS 03	D45209J		
D45211P		AE0502A	POS 12	D45211J	W5111	ALL
D45319P		AE0502A	POS 13	D45319J	W5043	YN501-YR328
D45367P		AE0502A	POS 13	D45367J	W5005	YL951-YN260
D45245P		AE0502A	POS 14	D45245J	W5161	ALL
D45255P		AE0502A	POS 15	D45255J	W5161	ALL
D45265P		AE0502A	POS 16	D45265J	W5161	ALL
D41561P		AE0502A	POS 17	D41561J	W5461	ALL
D45261P		AE0502A	POS 18	D45261J	W5461	ALL
D45235P		AE0502A	POS 19	D45235J	W2035	ALL
D45239P		AE0502A	POS 20	D45239J	W5501	ALL
D45225P		AE0502A	POS 21	D45225J	W2597	ALL
D05925P		AE0502A	POS 22	D05925J	W2889	YC059-YR328
D05925P		AE0502A	POS 23	D05925J	W2889	YC051-YC058
D45293P		AE0502A	POS 23	D45293J	W2597	YC059-YR328
D06063J		AE0502A	POS 24	D06063P		ALL
D02179		M01175	E005-02/ /			ALL
D03687		M01749	E005-02/ /			ALL
D03263		R00475	E005-02/ /			ALL
D03265		R00475	E005-02/ /			ALL
D03267		R00475	E005-02/ /			ALL
<b>W0523</b>	<b>NB2</b>	<b>E5-2 SHELF WIRE BUNDLE #2</b>				
D03261			E005-02/ /			ALL
D03261A			E005-02/ /			ALL
D03261B			E005-02/ /			ALL
D03261C			E005-02/ /			ALL
D03693A			E005-02/ /			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0520

Page 1

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0523</b>	<b>NB2</b>	<b>E5-2 SHELF WIRE BUNDLE #2 (continued)</b>				
D03693B			E005-02/ /			ALL
D03693C			E005-02/ /			ALL
D41453J		AE0104B	POS 03	D41453P	W0141	ALL
D45247P		AE0502A	POS 04	D45247J	W5163	ALL
D45257P		AE0502A	POS 05	D45257J	W5163	ALL
D45263P		AE0502A	POS 06	D45263J	W5463	ALL
D45237P		AE0502A	POS 07	D45237J	W2135	ALL
D45067P		AE0502A	POS 08	D45067J	W2135	YC059-YR328
D08105P		AE0502A	POS 09	D08105J	W2873	ALL
D45241P		AE0502A	POS 10	D45241J	W5503	ALL
D45213P		AE0502A	POS 11	D45213J	W5121	YC051-YD158, YL951-YR328
D45213P		AE0502A	POS 11	D45213J		YD160-YD170
D03693		M01752	E005-02/ /			ALL
D03423		R00476	E005-02/ /			ALL
D03425		R00476	E005-02/ /			ALL
D03427		R00476	E005-02/ /			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0520

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W0613	NN2	E6-1 ELECTRONIC SHELF (SATCOM)				
I D10857A			E006-01/ /			YC051-YD157
I D10857B			E006-01/ /			YC051-YD157
I D10857C			E006-01/ /			YC051-YD157
I D10859A			E006-01/ /			YC051-YD157
I D10859B			E006-01/ /			YC051-YD157
I D10859C			E006-01/ /			YC051-YD157
I D41619J		AE0601A	POS 01	D41619P	W3107	YC051-YD157
I D41613J		AE0601A	POS 02	D41613P	W3107	YC051-YD157
I D06103J		AE0601A	POS 03	D06103P	W5615	YC051-YD157
I D41617J		AE0601A	POS 04	D41617P	W3103	YC051-YD157
I D41621J		AE0601A	POS 06	D41621P	W3105	YC051-YD157
I D41601J		AE0601A	POS 08	D41601P	W3107	YC051-YD157
I D06105J		AE0601A	POS 09	D06105P	W5615	YC051-YD157
I D10871		D10859AT	E006-01/ /			YC051-YD157
I D10865		M02060	E006-01/ /			YC051-YD157
I D10857		M02255	E006-00/ /			YC051-YD157
I D10859		M02256	E006-01/ /			YC051-YD157
I W0619		E6-1 ELECTRONIC SHELF; CODING				
I D03963		M01793	E006-01/196/R048			YC051-YD157

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0610

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W0621	LA2	E6-2 ELECTRONIC SHELF				
I D00623A			*/ */ *			YL951-YR328
I D00623B			*/ */ *			YL951-YR328
I D00623C			*/ */ *			YL951-YR328
I D00345A			E008-01/ /			YL951-YR328
I D00345B			E008-01/ /			YL951-YR328
I D00345C			E008-01/ /			YL951-YR328
I D40127J		AE0602A	POS 01	D40127P	W3559	YL951-YR328
I D40123J		AE0602A	POS 02	D40123P	W3557	YL951-YR328
I D40111J		AE0602A	POS 03	D40111P	W2101	YL951-YR328
I D40621J		AE0602A	POS 04	D40621P	W2103	YL951-YR328
I D40117J		AE0602A	POS 05	D40117P	W5189	YL951-YR328
I D40119J		AE0602A	POS 07	D40119P	W5191	YL951-YR328
I D40115J		AE0602A	POS 08	D40115P	W5105	YL951-YR328
I D40113J		AE0602A	POS 10	D40113P	W5103	YL951-YR328
I D40125J		AE0602A	POS 11	D40125P	W3555	YL951-YR328
I D40121J		AE0602A	POS 12	D40121P	W3553	YL951-YR328
I D00345		M00226	E008-01/ /			YL951-YR328
I D00623		M00439	E008-01/ /			YL951-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W0620

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W0737	NA2	E5-2 TO P59 FMC DIP SWITCH				
I D45221J		AE0502A	POS 01	D45221P	W0521	ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0730

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W0767	NN2	D43267J TO FLIGHT RECORDER M96				
I D43267J				D43267P	W5409	ALL
I D00183A			0923/294/000			ALL
I D00183B			0923/295/000			ALL
I D00183		M00096	942/290/0			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0760

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W0811	LA2	E8-1 SHELF BUNDLE (BSI - IVS SYSTEM)				
		D00623A	*/ */ *			YD158-YD170
		D00623B	*/ */ *			YD158-YD170
		D00623C	*/ */ *			YD158-YD170
I		D12391A	*/ */ *			YN501-YR328
I		D12391B	*/ */ *			YN501-YR328
I		D12391C	*/ */ *			YN501-YR328
I		D00345A	E008-01/ /			YC051-YD170
I		D00345B	E008-01/ /			YC051-YD170
I		D00345C	E008-01/ /			YC051-YD170
I		D08189J	AE0801A POS 01	D08189P	W5189	YC051-YD170
I		D08511J	AE0801A POS 02	D08511P	W2511	YC051-YD157
I		D08509J	AE0801A POS 03	D08509P	W3509	YC051-YD170
		D40075J	AE0801A POS 05	D40075P	W5103	YD158-YD170
		D40077J	AE0801A POS 06	D40077P	W5105	YD158-YD170
		D08811J	AE0801A POS 07	D08811P	W3511	YD158-YD170
		D08002J	AE0801A POS 08	D08002P	W5191	YD158-YD170
		D45023J	AE0801A POS 09	D45023P	W5161	YD158-YD170
		D45025J	AE0801A POS 10	D45025P	W5163	YD158-YD170
		D40811J	AE0801A POS 15	D40811P	W2101	YC051-YC052
I		D40811J	AE0801A POS 19	D40811P	W2101	YC053-YD170
I		D45920J	AE0801A POS 19	D45920P	W5303	YN501-YR328
I		D45905J	AE0801A POS 20	D45905P	W3307	YN501-YR328
I		D45907J	AE0801B POS 02	D45907P	W5043	YN501-YR328
I		D45912J	AE0801B POS 06	D45912P	W3477	YN501-YR328
I		D45167J	AE0801B POS 08	D45167P	W3477	YN501-YR328
I		D45195J	AE0801B POS 10	D45195P	W3497	YN501-YR328
I		D45199J	AE0801B POS 11	D45199P	W3497	YN501-YR328
		D48323J	AE0801B POS 14	D48323P	W2103	YD158
		D48323J	AE0801B POS 14	D48323P		YD160-YD170
I		D08517J	AE0801D POS 03	D08517P	W3517	YC051-YD170
		D08823J	AE0801D POS 05	D08823P	W3523	YD158-YD170
I		D00345	M00226 E008-01/ /			YC051-YD170
I		D00623	M00439 E008-01/ /			YD158-YD170
I		D12391	M02651 E008-01/ /			YN501-YR328
I W0813	NN2	E8-1 SHELF				
I		D10527A	E004-02/ /			YC051-YD170
I		D10527B	E008-01/ /			YC051-YD170
I		D10527C	E008-01/ /			YC051-YD170

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W0810

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0813</b>	<b>NN2</b>	<b>E8-1 SHELF (continued)</b>				
D10665A			E008-01/ /			YC051-YD157
D10665B			E008-01/ /			YC051-YD157
D10665C			E008-01/ /			YC051-YD157
D48389J		AE0801B	POS 06	D48389P	W5189	YC053-YD170
D45279J		AE0801B	POS 07	D45279P	W5303	YC053-YD170
D48337J		AE0801B	POS 08	D48337P	W3307	YC053-YD157
D48333J		AE0801B	POS 09	D48333P	W3335	YD158-YD170
D48335J		AE0801B	POS 13	D48335P	W3335	YC053-YD170
D48323J		AE0801B	POS 14	D48323P	W2103	YC053-YD157
D48339J		AE0801B	POS 19	D48339P	W3339	YC053-YD157
D48339J		AE0801B	POS 19	D48339P	W3335	YD158-YD170
D48337J		AE0801C	POS 02	D48337P	W3307	YC051-YC052
D45279J		AE0801C	POS 06	D45279P	W5303	YC051-YC052
D48389J		AE0801C	POS 07	D48389P	W5189	YC051-YC052
D48335J		AE0801C	POS 09	D48335P	W3335	YC051-YC052
D48339J		AE0801C	POS 10	D48339P	W3339	YC051-YC052
D10723		M1955				YC051-YD170
D10527		M1956				YC051-YD170
D10665		M1966				YC051-YD157

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W0810

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1022</b>	<b>LC3</b>	<b>L WING TRAILNG EDGE:DISC BRACKET STA 254L TO W/W DISC &amp; AFT CARGO DISC</b>				
D42104P		AB0727L	POS 01	D42104J	W5032	YC051-YN236, YN501-YR328
D42102P		AL0720A	POS 02	D42102J	W5367	YC051-YN236, YN501-YR328
D42100P		AL0720A	POS 03	D42100J	W5375	YC051-YN236, YN501-YR328
D40024J		AW0254L	POS 01	D40024P	W1024	YC051-YC052
D40024P		AW0254L	POS 01	D40024J	W1024	YC053-YN236, YN501-YR328
D11818		T00527	WING LBL/164/			YC051-YN236, YN501-YR328
D11820		T00528	WING LBL/65/			YC051-YN236, YN501-YR328
<b>W1024</b>	<b>LC3</b>	<b>LEFT TRAILING EDGE:STA 525 TO L. WING DISC STA 254L</b>				
D40024J		AW0254L	POS 01	D40024P	W1022	YC053-YN236, YN501-YR328
D40024P		AW0254L	POS 01	D40024J	W1022	YC051-YC052
D01695		AW0742L	POS 1			YC051-YN236, YN501-YR328
D01699		AW0742L	POS 2			YC051-YN236, YN501-YR328
D13954		M2596				YL953-YL999, YR301-YR328
D13956		M2597				YL953-YL999, YR301-YR328
D13958		M2598				YL953-YL999, YR301-YR328
D14126		M2599				YL953-YL999, YR301-YR328
D00275		T00427	443/RSS/L			YC051-YN236, YN501-YR328
D03572		T00465	LWING505/ /			YC051-YN236, YN501-YR328
D11814		T00525	WING LBL/357/			YC051-YN236, YN501-YR328
D11816		T00526	WING LBL/254/			YC051-YN236, YN501-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W1020

Page 1

Nov 12/2012





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1024	LC3	LEFT TRAILING EDGE:STA 525 TO L. WING DISC STA 254L (continued)				
D10539		T00539	727+18.0/215/L287			YC051-YN236, YN501-YR328

For training purposes only!

MASTER BUNDLE LIST

D280A108

91-21-13

Section W1020

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1032</b>	<b>RD3</b>	<b>R WING TRAILNG EDGE:DISC BRACKET STA 254R TO W/W DISC &amp; AFT CARGO DISC</b>				
D43104P		AB0727R	POS 01	D43104J	W6028	YC051-YN236, YN501-YR328
D43100P		AL0720C	POS 01	D43100J	W5367	YC051-YN236, YN501-YR328
D43102P		AL0720D	POS 02	D43102J	W5375	YC051-YN236, YN501-YR328
D40034J		AW0254R	POS 01	D40034P	W1034	YC051-YC052
D40034P		AW0254R	POS 01	D40034J	W1034	YC053-YN236, YN501-YR328
D11822		T00529	WING RBL/65/			YC051-YN236, YN501-YR328
D11824		T00530	WING RBL/164/			YC051-YN236, YN501-YR328
<b>W1034</b>	<b>RD3</b>	<b>RIGHT WING TRAILING EDGE:STA 525 TO R. WING DISC STA 254R</b>				
D40034J		AW0254R	POS 01	D40034P	W1032	YC053-YN236, YN501-YR328
D40034P		AW0254R	POS 01	D40034J	W1032	YC051-YC052
D01701		AW0742R	POS 1			YC051-YN236, YN501-YR328
D01697		AW0742R	POS 2			YC051-YN236, YN501-YR328
D14124		M2600				YL953-YL999, YR301-YR328
D13964		M2601				YL953-YL999, YR301-YR328
D13966		M2602				YL953-YL999, YR301-YR328
D13968		M2603				YL953-YL999, YR301-YR328
D00229		T00428	443/RSS/R			YC051-YN236, YN501-YR328
D03574		T00466	RWING505/ /			YC051-YN236, YN501-YR328
D11826		T00531	WING RBL/254/			YC051-YN236, YN501-YR328
D11828		T00532	WING RBL/357/			YC051-YN236, YN501-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W1030

Page 1

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W1034	RD3	RIGHT WING TRAILING EDGE:STA 525 TO R. WING DISC STA 254R (continued)				
D10541		T00540	727+18.0/215/R287			YC051-YN236, YN501-YR328

For training purposes only!

MASTER BUNDLE LIST

D280A108

91-21-13

Section W1030

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W1062	NN1	ENGINE POWER FEEDER				
I D30038		AS0001	POS 10			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W1060

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W1080	NA2	ENGINE-THRUST REVERSER LEFT SLEEVE CH-A				
I D30002		AS0002	POS 02			YC056-YR328
I D30072		T00396	ENG/ /			YC056-YR328
I D01008		V00148	ENG/ /			YC056-YR328
I W1082	NB2	ENGINE-THRUST REVERSER LEFT SLEEVE CH-B				
I D30008		AS0002	POS 01			YC056-YR328
I D30076		T00396	ENG/ /			YC056-YR328
I W1084	NB2	ENGINE-THRUST REVERSER RIGHT SLEEVE CH-B				
I D30010		AS0003	POS 01			YC056-YR328
I D30078		T00397	ENG/ /			YC056-YR328
I W1086	NA2	ENGINE-THRUST REVERSER RIGHT SLEEVE CH-A				
I D30006		AS0003	POS 02			YC056-YR328
I D30074		T00397	ENG/ /			YC056-YR328
I D01016		V00150	ENG/ /			YC056-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W1080

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1126</b>	<b>RN1*</b>	<b>CENTER TANK R FUEL BOOST PUMP TO AB0500DR</b>				
D41850P		AB0500DR	POS 07	D41850J	W6588	YC051-YD158, YL951-YR328
D05350P		AB0500DR	POS 11	D05350J	W6588	YC051-YD158, YL951-YR328
D00804		M00235	WBL095/ /			YC051-YD158, YL951-YR328
D00878		S00155	656/187/025R			YC051-YD158, YL951-YR328
D00792		V00039	77/FSS/L			YC051-YD158, YL951-YR328
<b>W1128</b>	<b>LN1*</b>	<b>CENTER TANK L FUEL BOOST PUMP TO AB0500DL</b>				
D41854P		AB0500DL	POS 01	D41854J	W5568	YC051-YD158, YL951-YN236, YN501-YR328
D05348P		AB0500DL	POS 02	D05348J	W5568	YC051-YD158, YL951-YN236, YN501-YR328
D00802		M00234	WBL95/ /			YC051-YD158, YL951-YN236, YN501-YR328
D00876		S00154	656/187/L026			YC051-YD158, YL951-YN236, YN501-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W1120

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1134</b>	<b>LN1*</b>	<b>NO.2 AFT BOOST PUMP TO STA 520R</b>				
D05346P		AB0500DL	POS 03	D05346J	W5568	YC051-YD158, YL951-YN236, YN501-YR328
D41852P		AB0500DL	POS 10	D41852J	W5568	YC051-YD158, YL951-YN236, YN501-YR328
D00074		M00048	WBL135/ /			YC051-YD158, YL951-YN236, YN501-YR328
D00872		S00152	669/189/055			YC051-YD158, YL951-YN236, YN501-YR328
<b>W1136</b>	<b>RN1*</b>	<b>NO.1 AFT BOOST PUMP TO STA 520L</b>				
D41856P		AB0500DR	POS 09	D41856J	W6588	ALL
D05342P		AB0500DR	POS 10	D05342J	W6588	ALL
D00070		M00046	WBL140/ /			ALL
D00868		S00150	669/189/085L			ALL
<b>W1138</b>	<b>SN2</b>	<b>RIGHT WING BODY PRESSURE SEAL TANK 2 FUEL QUANTITY</b>				
D39916		AD0520				YC051-YD158, YL951-YR328
D11314		M01829	/ /			YC051-YD158, YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W1130

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
-----------------	-----	-------------------------	----------	--------------	-----------	-------------

**W1140 SN2 LEFT WING BODY PRESSURE SEAL TO TANK 1 FUEL QUANTITY**

D39915 AC0520

D11312 M01828

//

YC051-YD158,  
YL951-YR328  
YC051-YD158,  
YL951-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W1140

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W1162	LA1	ENGINE STRUT-LEFT-FIREWALL TO AW0258L POWER FEEDER				
I D30238		AS0001L	POS 10			ALL
I D08094P		AW0258L	POS 01	D08094J	W1186	ALL
I W1164	SA1	ENGINE STRUT-LEFT FIREWALL TO AW0258L IDG CONTROLS				
I D30234		AS0001L	POS 09			ALL
I D30016		AW0258L	POS 04			ALL
I W1166	SB2	ENGINE STRUT-LEFT FIREWALL TO AW0258L EEC CH B				
I D30220		AS0001L	POS 05			ALL
I D30256		AS0001L	POS 07			ALL
I D30064		AW0258L	POS 05			ALL
I W1168	LB2	ENGINE STRUT-LEFT FIREWALL TO AW0258L EEC CH B				
I D30260		AS0001L	POS 01			YC056-YR328
I D30204		AS0001L	POS 08			YC056-YR328
I D30208		AS0002L	POS 01			YC056-YR328
I D30210		AS0003L	POS 01			YC056-YR328
I D30084		AW0258L	POS 03			YC056-YR328
I D00526		S00020	574/199/L184			YC056-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W1160

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W1170	LA2	ENGINE STRUT LEFT FIREWALL TO AW0258L EEC CH A				
I D30212		AS0001L	POS 03			ALL
I D30252		AS0001L	POS 04			ALL
I D30228		AS0001L	POS 06			ALL
I D08056P		AW0258L	POS 06	D08056J	W1178	ALL
I W1172	LA2	ENGINE STRUT-LEFT FIREWALL TO AW0258L EEC CH A				
I D30224		AS0001L	POS 02			YC056-YR328
I D30202		AS0002L	POS 02			YC056-YR328
I D30206		AS0003L	POS 02			YC056-YR328
I D30042		AW0258L	POS 02			YC056-YR328
I W1178	LN2	LEADING EDGE-LEFT WING EEC CH A				
I D39927		AC0520				ALL
I D08056J		AW0258L	POS 06	D08056P	W1170	ALL
I D00788		V00037	260/FSS/L			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W1170

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W1180	LN1	LEFT WING/BODY PRESSURE SEAL TO FRONT SPAR INBOARD				
I D39938		AC0520				ALL
I D00072		M00047	102/FSS/L			ALL
I W1182	SB2	LEADING EDGE-LEFT WING EEC CH B				
I D39931		AC0520				ALL
I D30062		AW0258L	POS 05			ALL
I D00834		M00268	FS198/ /			ALL
I W1184	SA1	LEADING EDGE-LEFT WING IDG CONTROLS				
I D39911		AC0520				YC051-YD158, YL951-YR328
I D30014		AW0258L	POS 04			YC051-YD158, YL951-YR328
I D39935		DM0017	520/ /			YC051-YD158, YL951-YR328
I W1186	LA1	LEADING EDGE-LEFT WING-POWER FEEDER				
I D08094J		AW0258L	POS 01	D08094P	W1162	ALL
I W1188	SN2	LEFT WING/BODY PRESSURE SEAL TO FRONT SPAR OUTBD				
I D39903		AC0520				ALL
I D00738		S00118	621/205/R213			ALL
I D10589		S1094				ALL
I D10591		S1095				ALL
I D10593		S1096				ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W1180

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W1242	LN2	L LEADING EDGE TO WING TIP				
I D40014J				D40014P	W0252	YC051-YC065
I D40014J				D40014P		YC067-YR328
I D11042		M01743	727B/245/L634			ALL
I D11046		T00390	727B/245/L638			ALL
I W1244	LN2	R LEADING EDGE TO WING TIP				
I D40016J				D40016P	W0254	YC051-YC065
I D40016J				D40016P		YC067-YR328
I D11040		M01742	727B/245/R634			ALL
I D11044		T00389	727B/245/R638			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W1240

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W1262	RB1	ENGINE STRUT-RIGHT FIREWALL TO AW0258R POWER FEEDER				
I D30438		AS0001R	POS 10			ALL
I D08194P		AW0258R	POS 01	D08194J	W1286	ALL
I W1264	SN1	ENGINE STRUT-RIGHT FIREWALL TO AW0258R IDG CONTROLS				
I D30434		AS0001R	POS 09			ALL
I D30116		AW0258R	POS 04			ALL
I W1266	SB2	ENGINE STRUT-RIGHT FIREWALL TO AW0258R EEC CH B				
I D30420		AS0001R	POS 05			ALL
I D30456		AS0001R	POS 07			ALL
I D30164		AW0258R	POS 05			ALL
I W1268	RB2	ENGINE STRUT-RIGHT FIREWALL TO AW0258R EEC CH B				
I D30460		AS0001R	POS 01			YC056-YR328
I D30404		AS0001R	POS 08			YC056-YR328
I D30408		AS0002R	POS 01			YC056-YR328
I D30410		AS0003R	POS 01			YC056-YR328
I D30184		AW0258R	POS 03			YC056-YR328
I D00528		S00021	574/199/R184			YC056-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W1260

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W1270	RA2	ENGINE STRUT-RIGHT FIREWALL TO AW0258R EEC CH A				
I D30412		AS0001R	POS 03			ALL
I D30452		AS0001R	POS 04			ALL
I D30428		AS0001R	POS 06			ALL
I D08156P		AW0258R	POS 06	D08156J	W1278	ALL
I W1272	RA2	ENGINE STRUT-RIGHT FIREWALL TO AW0258R EEC CH A				
I D30424		AS0001R	POS 02			YC056-YR328
I D30402		AS0002R	POS 02			YC056-YR328
I D30406		AS0003R	POS 02			YC056-YR328
I D30142		AW0258R	POS 02			YC056-YR328
I W1278	RN2	LEADING EDGE-RIGHT WING EEC CH A				
I D39928		AD0520				ALL
I D08156J		AW0258R	POS 06	D08156P	W1270	ALL
I D00790		V00038	W156/LE/R			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W1270

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W1280	RN1	RIGHTWING/BODY PRESSURE SEAL TO FRONT SPAR INBOARD				
I D39940		AD0520				YC051-YN236, YN501-YR328
I D00076		M00049	FS104/ /			YC051-YN236, YN501-YR328
I W1282	SB2*	LEADING EDGE-RIGHT WING EEC CH B				
I D39932		AD0520				ALL
I D30162		AW0258R	POS 05			ALL
I D00838		M00269	FS195/ /			ALL
I W1284	SN1	LEADING EDGE-RIGHT WING IDG CONTROLS				
I D39912		AD0520				ALL
I D39936		AD0520				ALL
I D30114		AW0258R	POS 04			ALL
I W1286	RB1	LEADING EDGE-RIGHT WING POWER FEEDERS				
I D08194J		AW0258R	POS 01	D08194P	W1262	ALL
I W1288	SN2	RIGHT WING BODY PRESSURE SEAL TO FRONT SPAR OUTBD				
I D39904		AD0520				ALL
I D00736		S00117	621/205/R213			ALL
I D10595		S1097				ALL
I D10597		S1098				ALL
I D10599		S1099				ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W1280

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1662</b>	<b>LB1</b>	<b>LEFT WING/BODY PRESSURE SEAL TO FRONT SPAR</b>				
D39907		AC0520				YC051-YD158, YL951-YR328
D00870		S00151	547/198/083L			YC051-YD158, YL951-YR328
D00732		V00029	611/205/L208			YC051-YD158, YL951-YR328
<b>W1664</b>	<b>SA1</b>	<b>RIGHT WING-WING/BODY TO FRONT SPAR AND P15 REFUELING PANEL</b>				
D04578J				D04578P	W0024	YC051-YD158, YL951-YL954, YN231-YN235
D04578J				D04578P		YL955-YL999, YN236-YR328
D39908		AD0520				YC051-YD158, YL951-YR328
D06013		REFUELING				YC051-YD158, YL951-YR328
D00874		S00153	547/195/083			YC051-YD158, YL951-YR328
D00734		V00030	611/205/R208			YC051-YD158, YL951-YR328
D00890		V00044	124/ /			YC051-YD158, YL951-YR328
D00894		V00045	135/ /			YC051-YD158, YL951-YR328
D00892		V00046	127/ /			YC051-YD158, YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W1660

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2004	NN2	WINDOW NO.2 WINDSHIELD HEAT BUNDLE (NN2)				
I D10572				D10570		YC051-YD158
I D10572		M02675	230/ /			YL951-YL968, YN231-YN236, YN501-YR328
I W2006	NN2	WINDOW NO.2 COILED CORD WINDSHIELD BUNDLE (NN2)				
I D10570				D10572		YC051-YD158
I D10562		M02675		D10568		YC051-YD158

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2000

Page 1 End

Nov 12/2012

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2012	NN2	WINDOW NO.2 WINDSHIELD HEAT BUNDLE (NN2)				
I D10560		M02675	230/ /			YR312-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2010

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2022	NN2*	P9 TO E1-3				
I D41400P		AE0103A	POS 06	D41400J	W0131	ALL
I D40914P		AP0900A	POS 10	D40914J	W0001	YC051-YD158, YL951-YR328
						YD160-YD170
D40914P		AP0900A	POS 10	D40914J		

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2020

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2030	SN2	AP0900A DISC BRKT TO AP0600B DISC BRKT (SN2)				
I D46052P		AP0600B	POS 11	D46052J	W0044	ALL
I D40924P		AP0900A	POS 14	D40924J	W0003	YC051-YD158, YL951-YR328 YD160-YD170
		AP0900A	POS 14	D40924J		
I W2035	NA2	P5, E5-2 (73X-800)				
I D06067J			264/255/L042	D06067P		ALL
I D45235J		AE0502A	POS 19	D45235P	W0521	ALL
I D00553		P005-28	P005-00/ /			ALL
I D02171		P005-69	P005-69/ /			ALL
I D02169		P005-70	P005-70/ /			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2030

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2101</b>	<b>LA2</b>	<b>LEFT AC ELEX PWR FROM P18 TO E1.</b>				
D41811P		AE0101A	POS 13	D41811J	W0111	ALL
D40111P		AE0602A	POS 03	D40111J	W0621	YL951-YR328
D40811P		AE0801A	POS 15	D40811J	W0811	YC051-YC052
D40811P		AE0801A	POS 19	D40811J	W0811	YC053-YD170
D41801P		AP1800B	POS 03	D41801J	W0018	ALL
<b>W2102</b>	<b>LN2</b>	<b>P18 (L CAB CEILING) DISC TO L CONTROL CABIN AREA (LN2)</b>				
D12106		L01103	224/223/L040			ALL
D12108		L01103	224/223/L040			ALL
D00796		P021-01	215/213/L034			ALL
<b>W2103</b>	<b>RB2</b>	<b>RIGHT AC ELEX PWR FROM P6 TO E1.</b>				
D46013P		AE0101B	POS 13	D46013J	W0111	YC051-YD158, YL951-YR328
D46011J		AE0104A	POS 09	D46011P	W0141	YC051-YD158, YL951-YR328
D40621P		AE0602A	POS 04	D40621J	W0621	YL951-YR328
D48323P		AE0801B	POS 14	D48323J	W0813	YC053-YD157
D48323P		AE0801B	POS 14	D48323J	W0811	YD158
D46061P		AP0600B	POS 23	D46061J	W0044	YC051-YD158, YL951-YR328
<b>W2104</b>	<b>LA1</b>	<b>P5 OVHD PANEL TO EE BAY (E2-2) LA1</b>				
D40506P		AE0202A	POS 11	D40506J	W0220	YC051-YD158, YL951-YR328
D48100P		AJ0048A	POS 01	D48100J	W0088	YC051-YD158, YL951-YR328
D40502P		AP0600C	POS 01	D40502J	W0044	YC051-YD158, YL951-YR328
D40504P		AP1800A	POS 08	D40504J	W0018	YC051-YD158, YL951-YR328
D00624		P005-03	P005-00/ /			YC051-YD158, YL951-YR328
D02486		P005-08	P005-00/ /			YC051-YD158, YL951-YR328
D11988		S00007	P005-00/ /			YC051-YD158, YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2100

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2108	LA1	WINDSHIELD HEAT DISCONNECT TO E2-1 (LA1)				
I D10564				D10562		YC051-YD158
I D40070P		AE0201A	POS 20	D40070J	W0210	ALL
I D00062		M00021	191/241/L011			ALL
I D10564		M02675	230/ /			YD160-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2100

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2110</b>	<b>SA2</b>	<b>CARGO SMOKE DETECTION &amp; FIRE SUPPRESSION MODULE (P8-75) E2-2 SHELF</b>				
D40646P		AE0202A	POS 30	D40646J	W0220	YC053-YD158, YL951-YR328
D40646P		AE0202A	POS 30	D40646J		YD160-YD170
D46022P		AE0202A	POS 31	D46022J	W0220	YC053-YD158, YL951-YR328
D46022P		AE0202A	POS 31	D46022J		YD160-YD170
D12760		P008-75	P008-00/ /			YC053-YR328
<b>W2112</b>	<b>LA2*</b>	<b>P5 OVHD PANEL TO EE BAY (E2-1/E2-2/E3-1) LA2</b>				
D40598P		AE0201A	POS 10	D40598J	W0212	YC053-YR328
D40518P		AE0201A	POS 21	D40518J	W0210	YC053-YR328
D40520P		AE0202A	POS 12	D40520J	W0220	YC053-YD158, YL951-YR328
D40520P		AE0202A	POS 12	D40520J		YD160-YD170
D40516P		AE0301A	POS 20	D40516J	W0311	YC053-YR328
D40596P		AE0302A	POS 31	D40596J	W0321	YC053-YR328
D48102P		AJ0048A	POS 05	D48102J	W0088	YC053-YR328
D40512P		AP0600C	POS 03	D40512J	W0044	YC053-YR328
D40514P		AP1800A	POS 09	D40514J	W0018	YC053-YR328
D00722		P005-04	P005-00/ /			YC053-YR328
D10724		P005-06	P005-00/ /			YC053-YR328
D00638		P005-09	P005-00/ /			YC053-YR328
D00462		P005-11	P005-00/ /			YC053-YR328
D02349		P005-18	P005-00/ /			YC053-YR328
D02952		P005-68	P005-00/ /			YC053-YR328
D11125		P005-88	P005-00/ /			YC053-YR328
<b>W2114</b>	<b>LB2</b>	<b>P5 OVHD TO AB0340A/AB0340B AND AE0101A DISC BRACKET (LB2)</b>				
D40196P		AB0340A	POS 03	D40196J	W3142	ALL
D41838P		AB0340B	POS 03	D41838J	W6288	YC051-YL999, YR301-YR328
D40296P		AB0340B	POS 07	D40296J	W4142	ALL
D48104P		AJ0048A	POS 20	D48104J	W0088	ALL
D40522P		AP1800A	POS 10	D40522J	W0018	ALL
D02970		L00273	270/274/L017			ALL
D02992		L00273	270/274/L017			ALL
D00090		N00011	P005-17/ /			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2110

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2132	LA1	P91 TO P6 (115V AC XFR BUS 1 SEC 2)				
I D11414		P0091				YC051-YD158, YL951-YR328
I W2134	LA1	P91 TO P18 (115V AC XFR BUS 1 SEC 2 AND 115V AC MAIN BUS)				
I D11412		P0091				ALL
I W2135	RB2	P5, E5-2				
I D45237J		AE0502A	POS 07	D45237P	W0523	ALL
I D45067J		AE0502A	POS 08	D45067P	W0523	YC059-YR328
I D40623P		AP0600B	POS 06	D40623J	W0041	ALL
I D01817		P005-28	P005-00/ /			ALL
I D02173		P005-69	P005-69/ /			ALL
I D02183		P005-70	P005-70/ /			ALL
I W2136	LA1	P91 TO P6 AND P18				
I D11424		P0091				ALL
I W2138	LA1	AP0600B TO AE0201A (LA1)				
I D41432P		AE0201A	POS 15	D41432J	W0210	ALL
I D41430P		AP0600B	POS 05	D41430J	W0044	ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2130

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2149	NA2	CAPTAINS NAV ELEX PANEL TO E/E BAY				
D04029J		AE0102A	POS 03	D04029P	W0121	YC051-YD158, YL951-YR328
D40095P		AJ0048A	POS 04	D40095J	W0088	YC051-YD158, YL951-YR328
D00263		P008-25	P008-25/ /			YC051-YD158, YL951-YR328
D00303		P008-25	P008-25/ /			YC051-YD158, YL951-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2140

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2151	NB2	F/O'S NAV ELEX PANEL TO E/E BAY				
D04031J		AE0105A	POS 02	D04031P	W0151	YC051-YD158, YL951-YR328
D00265		P008-26	P008-26/ /			YC051-YD158, YL951-YR328
D00305		P008-26	P008-26/ /			YC051-YD158, YL951-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2150

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2169	RB2	RIGHT DC ELEX PWR FROM P6 TO E3.				
I D46035P		AE0301A	POS 24	D46035J	W0313	ALL
I D46043P		AE0302A	POS 30	D46043J	W0321	ALL
I D46063P		AP0600B	POS 19	D46063J	W0044	ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2160

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2175	LA2	LEFT DC ELEX PWR FROM P18 TO E1.				
I D41821P		AE0101A	POS 24	D41821J	W0111	ALL
I D41823P		AP0900A	POS 17	D41823J	W0001	YC051-YC052
I D41823P		AP0900A	POS 17	D41823J		YC053-YR328
I D41803P		AP1800B	POS 06	D41803J	W0018	ALL
I W2177	NA2	DUAL ATC ELEC PNL TO E1-2				
I D41217J		AE0102A	POS 04	D41217P	W0121	YC051-YN236, YN501-YR328
I D00211		P008-29	P008-29/ /			YC051-YN236, YN501-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2170

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2201</b>	<b>LA2</b>	<b>LEFT AC ELEX PWR FROM P18 TO E3.</b>				
D41817P		AE0301A	POS 21	D41817J	W0311	ALL
D41819P		AE0302A	POS 27	D41819J	W0321	ALL
D43313P		AE0303A	POS 28	D43313J	W0331	ALL
D41805P		AP1800B	POS 01	D41805J	W0018	ALL
<b>W2204</b>	<b>RN2</b>	<b>P6 (R CAB CEILING) DISC TO R CONTROL CABIN AREA (RN2)</b>				
D40582P		AP0600C	POS 10	D40582J	W0044	YC051-YN236, YN501-YR328
D40582P		AP0600C	POS 10	D40582J		YN237-YN260
D12110		L01104	224/223/R040			ALL
D12112		L01104	224/223/R040			ALL
D00798		P023-01	215/213/R034			ALL
<b>W2205</b>	<b>SN2</b>	<b>INTEGRATED STANDBY FLIGHT DISPLAY (ISFD) 20 GAGE</b>				
D10851			193/240/R020			YC051-YD157
D04205J		AE0102A	POS 05	D04205P	W0121	YC051-YD158, YL951-YR328
D40049J		AE0104A	POS 07	D40049P	W0141	YC051-YD158, YL951-YR328
D00849		N00085	P001-03/ /			YC051-YD157
D03679		N00185	P002-01/ /			YC051-YD158, YL951-YR328
D03681		N00186	P002-01/ /			YC051-YD157
D10853		N00226	P002-01/ /			YD158, YL951-YR328
<b>W2207</b>	<b>NA2</b>	<b>PRIMARY CDS-DEU TO P1</b>				
D04267P		AE0301A	POS 06	D04267J	W0311	ALL
D40081P		AJ0048A	POS 06	D40081J	W0088	YC051-YC052
D04207P		AP0900A	POS 03	D04207J	W0001	YC051-YD158, YL951-YR328
D04207P		AP0900A	POS 03	D04207J		YD160-YD170
<b>W2208</b>	<b>RB1</b>	<b>WINDSHIELD HEAT DISCONNECT TO E4-2. (RB1)</b>				
D10568				D10562		YC051-YD158
D40068P		AE0402A	POS 34	D40068J	W0420	YC051-YD158, YL951-YR328
D00064		M00022	191/241/R011			YC051-YD158, YL951-YR328
D10568		M02675	230/ /			YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2200

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2212</b>	<b>RA1</b>	<b>P5 OVHD PANEL (RA1)</b>				
D46124P		AJ0046B	POS 01	D46124J	W0066	ALL
D40528P		AP0600A	POS 08	D40528J	W6208	YC051-YD158, YL951-YR328 YD160-YD170
D40528P		AP0600A	POS 08	D40528J		ALL
D40526P		AP0600C	POS 02	D40526J	W0044	ALL
D40524P		AP1800A	POS 04	D40524J	W0018	ALL
D00630		P005-03	P005-00/ /			ALL
D00642		P005-08	P005-00/ /			ALL
<b>W2214</b>	<b>RB1</b>	<b>P5 OVHD PANEL TO EE BAY (E4-1) RB1</b>				
D40530P		AE0401A	POS 40	D40530J	W0410	YC051-YD158, YL951-YR328
<b>W2216</b>	<b>RA2</b>	<b>P5 OVHD PANEL TO EE BAY (E4-1) RA2</b>				
D41812P		AE0303A	POS 40	D41812J	W0330	YC051-YL999, YR301-YR323, YR325-YR328
D40534P		AE0401A	POS 48	D40534J	W0410	YC051-YR323, YR325-YR328
D46112P		AJ0046B	POS 12	D46112J	W0066	YC051-YR323, YR325-YR328
D40532P		AP0600C	POS 04	D40532J	W0044	YC051-YR323, YR325-YR328
D00618		M00392	P005-17/ /			YN231-YN501
D10956		M1718				YC051-YR323, YR325-YR328
D10958		M1718				YC051-YR323, YR325-YR328
D00786		N00051	P005-16/ /			YC051-YR323, YR325-YR328
D00794		N00055	P005-16/ /			YC051-YR323, YR325-YR328
D40566P		P005-00	P005-00/280/000	D40566J		YC051-YC052
D40568P		P005-00	P005-00/280/000	D40568J		YC051-YC052
D00646		P005-10	P005-00/ /			YC051-YR323, YR325-YR328
D00656		P005-17	P005-00/ /			YN231-YN501

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2210

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2216</b>	<b>RA2</b>	<b>P5 OVHD PANEL TO EE BAY (E4-1) RA2 (continued)</b>				
D03996		P005-17	P005-00/ /			YC051-YL999, YR301-YR323, YR325-YR328
D03998		P005-17	P005-00/ /			YC051-YL999, YR301-YR323, YR325-YR328
D01406		P005-20	P005-00/ /			YC051-YR323, YR325-YR328
<b>W2218</b>	<b>RB2</b>	<b>P5 OVHD PANEL TO EE BAY (E3-1/E4-1/E4-2) RB2</b>				
D40170P		AB0340A	POS 04	D40170J	W3058	YC051-YD158, YL951-YR328
D40170P		AB0340A	POS 04	D40170J		YD160-YD170
D40510P		AE0101A	POS 28	D40510J	W0111	ALL
D40064P		AE0101B	POS 23	D40064J	W0111	YD158-YR328
D40544P		AE0301A	POS 27	D40544J	W0313	ALL
D41826P		AE0303A	POS 36	D41826J	W0330	YC051-YL999, YR301-YR323, YR325-YR328
D41826P		AE0303A	POS 36	D41826J		YR324
D40542P		AE0401A	POS 51	D40542J	W0410	ALL
D40540P		AE0402A	POS 32	D40540J	W0422	ALL
D41440P		AE0402A	POS 38	D41440J	W0420	ALL
D46114P		AJ0046B	POS 15	D46114J	W0066	ALL
D40536P		AP0600C	POS 09	D40536J	W0044	ALL
D40538P		AP1800A	POS 05	D40538J	W0018	ALL
D00620		M00393	P005-17/ /			YN231-YN501
D00096		N00012	P005-10/ /			ALL
D00616		N00042	P005-02/ /			ALL
D40570P		P005-00	P005-00/280/000	D40570J		YC051-YC052
D40572P		P005-00	P005-00/280/000	D40572J		YC051-YC052
D00648		P005-011				ALL
D00634		P005-04	P005-00/ /			ALL
D00730		P005-04	P005-00/ /			ALL
D00636		P005-05	P005-00/ /			ALL
D10726		P005-06	P005-00/ /			ALL
D00644		P005-09	P005-00/ /			ALL
D00680		P005-10	P005-00/ /			ALL
D00650		P005-12	P005-00/ /			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2210

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2218</b>	<b>RB2</b>	<b>P5 OVHD PANEL TO EE BAY (E3-1/E4-1/E4-2) RB2 (continued)</b>				
D02351		P005-18	P005-00/ /			ALL
D03172		P005-68	P005-00/ /			ALL
D03072		R00334	P005-00/ /			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2210

Page 3 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2221	SA2	AUTOPILOT P9 TO E1-1				
D40133P		AE0101A	POS 09	D40133J	W0111	YL956-YL999, YN236-YR328
D40019P		AE0101A	POS 30	D40019J	W0111	ALL
D04221P		AP0900A	POS 09	D04221J	W0001	YC051-YD158, YL951-YR328
D04221P		AP0900A	POS 09	D04221J		YD160-YD170

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2220

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2231</b>	<b>RB2</b>	<b>RIGHT AC ELEX PWR FROM P6 TO E3.</b>				
D46017P		AE0301A	POS 23	D46017J	W0313	YC051-YN236, YN501-YR328
D46021P		AE0302A	POS 25	D46021J	W0321	YC051-YN236, YN501-YR328
D43309P		AE0303A	POS 29	D43309J	W0331	YC051-YN236, YN501-YR328
D46067P		AP0600B	POS 10	D46067J	W0044	YC051-YN236, YN501-YR328
<b>W2237</b>	<b>NB2</b>	<b>SECONDARY CDS-DEU TO P3</b>				
D04297P		AE0301A	POS 31	D04297J	W0313	ALL
D40099P		AJ0046B	POS 07	D40099J	W0066	YC051-YC052
D04237P		AP0900A	POS 06	D04237J	W0003	YC051-YD158, YL951-YR328
D04237P		AP0900A	POS 06	D04237J		YD160-YD170

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2230

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2247</b>	<b>NB2</b>	<b>ATC NO.2 (E1-5 TO P8-29)</b>				
D41517J		AE0105A	POS 08	D41517P	W0151	YC051-YN236, YN501-YR328
D40103P		AJ0046A	POS 09	D40103J	W0066	YC051-YN236, YN501-YR328
D00519		P008-29	P008-29/ /			YC051-YN236, YN501-YR328
D10204		S00942	316/163/L025			YC051-YN236, YN501-YR328
D10206		S00943	316/163/L025			YC051-YN236, YN501-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2240

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2251	RF2	AUTOPILOT P3 TO E1-4				
I D04311J		AE0104A	POS 06	D04311P	W0141	ALL
I D04251P		AP0900A	POS 23	D04251J	W0003	YC051-YD158, YL951-YR328
						YD160-YD170
D04251P		AP0900A	POS 23	D04251J		

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2250

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2265</b>	<b>NA2</b>	<b>ADF-1 ELEX PNL TO E3-1</b>				
D42005P		AE0301A	POS 12	D42005J	W0311	ALL
D03655		P008-68	P008-00/ /			YC051-YL956, YL958-YR328 YL957
D03659		P008-70	P008-00/ /			
<b>W2267</b>	<b>NB2</b>	<b>ADF-2 ELEX PNL TO E3-1</b>				
D42007P		AE0301A	POS 25	D42007J	W0313	ALL
D03657		P008-69				YC051-YL956, YL958-YR328 YL957
D03661		P008-70	P008-00/ /			

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2260

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2307	SN2	HANDSET/MIC JACK - CONTROL STAND (P8)				
I D06019			P008-00/ /			ALL
I D07015		66-16842				ALL
I D07017		66-16842				ALL
I D07019		66-16842				ALL
I D07021		66-16842				ALL
I D04149P		AE0103A	POS 13	D04149J	W0131	ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2300

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2363	LE2	AUTO PILOT CONTROL PANEL SYSTEM A				
I D04069P		AE0101A	POS 29	D04069J	W0111	ALL
I D00299		M00198	P007-00/ /			ALL
I D00301		M00198	P007-00/ /			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2360

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2383	RB2	RIGHT DC ELEX PWR FROM P6 TO E1 AND P9.				
I D46023P		AE0101B	POS 09	D46023J	W0111	ALL
I D46031J		AE0104A	POS 10	D46031P	W0141	ALL
I D46065P		AP0600B	POS 15	D46065J	W0044	ALL
I D46033P		AP0900A	POS 16	D46033J	W0003	YC051-YD158, YL951-YR328
						YD160-YD170
D46033P		AP0900A	POS 16	D46033J		

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2380

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2401	LN2	SELCAL CONTROL PANEL(P8) TO E/E BAY				
I D04721P		AE0401A	POS 32	D04721J	W0411	YD158-YR328
I D00551		P008-66	P008-66/ /			YD158-YR328
I W2403	SA2	VHF COMM NO. 1 CONTROL PNL				
I D04123P		AE0103A	POS 12	D04123J	W0131	YC051-YD157
I D00203		P008-02	P008-02/ /			YC051-YD157
I W2405	RB2	VHF COMM NO.2 CONTROL PNL				
I D04125J		AE0105A	POS 01	D04125P	W0151	YC051-YD157
I D00209		P008-03	P008-03/ /			YC051-YD157

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2400

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>I W2413</b>	<b>NA2</b>	<b>RADIO TUNING PANEL 1 (P8-71) TO E3-3</b>				
I D43363P		AE0303A	POS 48	D43363J	W0331	YD158-YR328
I D43365P		AE0303A	POS 49	D43365J	W0331	YD158-YR328
I D00203		P008-71	P008-02/ /			YD158-YR328
I D10601		P008-71	P008-02/ /			YD158-YR328
<b>I W2415</b>	<b>NB2</b>	<b>RADIO TUNING PNL 2 TO E3-3</b>				
I D43355P		AE0303A	POS 46	D43355J	W0331	YD158-YR328
I D43357P		AE0303A	POS 47	D43357J	W0331	YD158-YR328
I D00209		P008-72	P008-72/ /			YD158-YR328
I D10603		P008-72	P008-72/ /			YD158-YR328
<b>I W2417</b>	<b>RC2</b>	<b>RADIO TUNING PNL 3 TO E3-3</b>				
I D43391P		AE0303A	POS 07	D43391J	W0331	YD158-YR328
I D43329P		AE0303A	POS 15	D43329J	W0331	YD158-YR328
I D00549		P008-73	P008-73/ /			YD158-YR328
I D10605		P008-73	P008-73/ /			YD158-YR328
<b>I W2419</b>	<b>NN2</b>	<b>FLIGHT RECORDER E3-2 SHELF TO TEST CONNECTOR</b>				
I D43219P		AE0302A	POS 13	D43219J	W0321	ALL
I D01637		M01252	P018-02/ /			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2410

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2465	RF2	AUTOPILOT CONTROL PANEL SYSTEM - B				
I D08019J		AE0104A	POS 01	D08019P	W0141	ALL
I D01815		M00198	P007-00/ /			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2460

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2508</b>	<b>SA2*</b>	<b>P5 OVHD PANEL TO EE BAY (E1-4/E4-1) SA2</b>				
D40556J		AE0104A	POS 23	D40556P	W0141	YC051-YD158, YL951-YR328
D40554P		AE0401A	POS 43	D40554J	W0410	YC051-YD158, YL951-YR328
D46108P		AJ0046A	POS 15	D46108J	W0066	YC051-YD158, YL951-YR328
D48106P		AJ0048A	POS 14	D48106J	W0088	YC051-YD158, YL951-YR328
D40550P		AP0600C	POS 05	D40550J	W0044	YC051-YD158, YL951-YR328
D00432		N00020	P005-14/ /			YC051-YD158, YL951-YR328
D00918		N00074	212/258/000			YC051-YD158, YL951-YR328
D00626		P005-02	P005-00/ /			YC051-YD158, YL951-YR328
D01086		P005-05	P005-00/ /			YC051-YD158, YL951-YR328
D00652		P005-13	P005-00/ /			YC051-YD158, YL951-YR328
D10596		P005-13	P005-00/ /			YC051-YD158, YL951-YR328
D00440		P005-14	P005-00/ /			YC051-YD158, YL951-YR328
D00654		P005-16	P005-00/ /			YC051-YD158, YL951-YR328
D00483		P005-19	P005-19/ /			YC051-YD158, YL951-YR328
D00482		P005-20	P005-00/ /			YC051-YD158, YL951-YR328
D02921		P005-81	P005-00/ /			YC051-YD158, YL951-YR328

**MASTER BUNDLE LIST**  
D280A108

**91-21-13**  
Section W2500  
Page 1 End  
Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2510	SB2*	P5 OVHD PANEL TO EE BAY (E1-4/E4-1) SB2				
I D40560J		AE0104A	POS 14	D40560P	W0141	ALL
I D40562P		AE0401A	POS 47	D40562J	W0410	ALL
I D46126P		AJ0046B	POS 13	D46126J	W0066	ALL
I D40558P		AP0600C	POS 08	D40558J	W0044	ALL
I D00628		P005-02	P005-00/ /			ALL
I W2511	LA2	HF COMM NO. 1 CONTROL PNL				
I D08511P		AE0801A	POS 02	D08511J	W0811	YC051-YD157
I D00419		P008-11	P008-11/ /			YC051-YD157

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2510

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2527	NA2	CDS - DEU 1 OUTPUT 1 TO COAX SPLITTER 1				
I D40101P		AE0301A	POS 04	D40101J	W0311	ALL
I D10029		M01810	193/219/L007			ALL
I W2529	NB2	CDS - DEU 1 OUTPUT 2 TO COAX SPLITTER 2				
I D40201P		AE0301A	POS 40	D40201J	W0313	ALL
I D10043		M01811	197/218/R007			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2520

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2531	ND2	CDS - DEU 2 OUTPUT 2 TO COAX SPLITTER 3				
I D40301P		AE0301A	POS 05	D40301J	W0311	ALL
I D10057		M01812	193/218/L007			ALL
I W2532	SN2	J9 BATTERY SHIELD				
I D48108P		AJ0048A	POS 15	D48108J	W0088	ALL
I W2533	NC2	CDS - DEU 2 OUTPUT 1 TO COAX SPLITTER 4				
I D40401P		AE0301A	POS 41	D40401J	W0313	ALL
I D10071		M01813	197/216/R007			ALL
I W2536	SN2	J9 BATTERY SHIELD				
I D00046		M00009	E002-02/184/L040			YC051-YD158, YL951-YN236, YN501-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2530

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2589	NN2	ELT CONTROL PANEL(LEFT SIDE)				
I D04889P		AB0288	POS 03	D04889J	W3419	ALL
I D02889		P005-80	P005-00/ /			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2580

Page 1 End

Nov 12/2012





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2597	NA2	E5-2, P61 (DATA LOADER)				
I D45225J		AE0502A	POS 21	D45225P	W0521	ALL
I D45293J		AE0502A	POS 23	D45293P	W0521	YC059-YR328
I D40625P		AP0600B	POS 01	D40625J	W0041	YC051-YC058
I D40625P		AP0600B	POS 13	D40625J	W0041	YC059-YR328

For training purposes only!

## MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2590

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2651</b>	<b>SA2</b>	<b>STBY ELEX PWR FROM P18 TO E1 AND P9.</b>				
D41827J		AE0102A	POS 06	D41827P	W0121	ALL
D41831P		AE0103A	POS 17	D41831J	W0131	ALL
D41833P		AP0900A	POS 19	D41833J	W0001	YC051-YD158, YL951-YR328 YD160-YD170
D41833P		AP0900A	POS 19	D41833J		
D41807P		AP1800B	POS 08	D41807J	W0018	ALL
<b>W2653</b>	<b>SA2</b>	<b>STBY ELEX PWR FROM P18 TO E3.</b>				
D41837P		AE0301A	POS 22	D41837J	W0311	ALL
D41839P		AE0302A	POS 26	D41839J	W0321	ALL
D41809P		AP1800B	POS 09	D41809J	W0018	ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2650

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle	Sep	Description	Location	MW Connector	MW Bundle	Effectivity
Equip		Matewith				
I W2661	SB2	STBY ELEX PWR FROM P6 TO E1.				
I D46051P		AE0103A	POS 03	D46051J	W0131	ALL
I D46069P		AP0600B	POS 20	D46069J	W0044	ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2660

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2702	AN2	P5 OVHD PANEL TO EE BAY (E2-1) AN2				
I D40564P		AE0201A	POS 05	D40564J	W0212	ALL
I D00446		N00024	P005-04/ /			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2700

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
-----------------	-----	-------------------------	----------	--------------	-----------	-------------

**W2737**

**P6 TO M2554 SPEEDBRAKE RETRACT ACTUATOR**

D11841

201/210/R002

YC051-YC065

For training purposes only!

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W2730

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2801	NA2	ACARS CONTROL PANEL				
I D43319P		AE0303A	POS 23	D43319J	W0331	YC051-YN260
I W2803	NN2	CALSEL ENCODER CONTROL PANEL				
I D44145P		AE0401A	POS 07	D44145J	W0411	YC051-YC055
I D44145P		AE0401A	POS 14	D44145J	W0411	YC056-YD157
I D02525		P008-11	P008-11/ /			YC051-YD157
I W2805	NN2	ACMS PRINTER				
I D43215P		AE0302A	POS 09	D43215J	W0321	ALL
I D02649		M02195	P008-54/ /			YD158-YR328
I D02649		M2195				YC051-YD157

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2800

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2873	NB2	FROM FMC TO CONTROL STAND MCDU - NO.2				
I D08105J		AE0502A	POS 09	D08105P	W0523	ALL
I D02221		P009-66	P009-66/ /			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2870

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W2889	NA2	FROM FMC TO CONTROL STAND CDU - NO.1				
I D05925J		AE0502A	POS 22	D05925P	W0521	YC059-YR328
I D05925J		AE0502A	POS 23	D05925P	W0521	YC051-YC058
I D02181		P009-65	P009-65/ /			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W2880

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3001</b>	<b>NN2</b>	<b>FWD LT WALL MOUNT LCD MONITOR TO SIDEWALL DISCONNECT</b>				
D10001J				D10001P	W3599	YC051-YD155
D10003J				D10003P	W3599	YC051-YD155
D10221		M01936	450/295/L035			YC051-YD155
<b>W3003</b>	<b>NN2</b>	<b>FWD RT WALL MOUNT LCD MONITOR TO SIDEWALL DISCONNECT</b>				
D10005J				D10005P	W3097	YC051-YD157
D10007J				D10007P	W3097	YC051-YD157
D10223		M01936	450/295/L035			YC051-YD157
<b>W3004</b>	<b>NN2</b>	<b>-800 CVR/RIPS</b>				
D40751J				D40751P	W5431	YL963-YL999, YN236-YR328
D40687P		AP1800A	POS 12	D40687J	W0018	YL963-YL999, YN236-YR328
<b>W3005</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO. 3 TO VDU IN CLUSTER NO. 1</b>				
D10205		M01934	450/295/L035			YC051-YD170
D10333		M02001	369/263/L039			YD158-YD170
D10335		M02001	369/263/L039			YD158-YD170
D10345		M02003	415/270/L042			YC051-YD157
D10347		M02003	415/270/L042			YC051-YD157
<b>W3007</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO. 4 TO VDU IN CLUSTER NO. 1</b>				
D10207		M01934	450/295/L035			YC051-YD170
D10339		M02002	368/262/R038			YD158-YD170
D10341		M02002	368/262/R038			YD158-YD170
D10351		M2004				YC051-YD157
D10353		M2004				YC051-YD157
<b>W3009</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO. 5 TO VDU IN CLUSTER NO. 1</b>				
D10213		M01935	430/295/L035			YC051-YD157
D10357		M2005				YC051-YD157
D10359		M2005				YC051-YD157

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3000

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3011	NN2	PSU MOUNTED LCD VIDEO MONITOR NO. 6 TO VDU IN CLUSTER NO. 1				
I D10215		M01935	430/295/L035			YC051-YD157
I D10363		M2006				YC051-YD157
I D10365		M2006				YC051-YD157
W3013	NN2	PSU LCD VIDEO MONITOR (STA 440L TO STA 490L) TO VDU IN CLUSTER 1				
D10213		M01935	430/295/L035			YD158-YD170
D10357		M02003	415/270/L042			YD158-YD170
D10359		M02003	415/270/L042			YD158-YD170
W3015	NN2	PSU LCD VIDEO MONITOR (STA 440R TO 490R) TO VDU IN CLUSTER 1				
D10215		M01935	430/295/L035			YD158-YD170
I D10363		M02004	476/270/R042			YD158-YD170
I D10365		M02004	476/270/R042			YD158-YD170
I W3017	NN2	PSU MOUNTED LCD VIDEO MONITOR NO.9 TO VDU IN CLUSTER NO.2				
I D10237		M01938	500F+10/295/L035			YC051-YD157
I D10381		M2009				YC051-YD157
I D10383		M2009				YC051-YD157
I W3019	NN2	PSU MOUNTED LCD VIDEO MONITOR NO.10 TO VDU IN CLUSTER NO. 2				
I D10239		M01938	500F+10/295/L035			YC051-YD157
I D10387		M2010				YC051-YD157
I D10389		M2010				YC051-YD157

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3010

Page 1 End

Nov 12/2012

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>I W3021</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.11 TO VDU IN CLUSTER NO.2</b>				
I D10237		M01938	500F+10/295/L035			YD158-YD170
I D10245		M01939	550/295/L035			YC051-YD157
I D10381		M02009	500B+21/270/L042			YD158-YD170
I D10383		M02009	500B+21/270/L042			YD158-YD170
I D10393		M2011				YC051-YD157
I D10395		M2011				YC051-YD157
<b>I W3023</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 500BR TO 500DR) TO VDU IN TRAY 2</b>				
I D10239		M01938	500F+10/295/L035			YD158-YD170
I D10247		M01939	550/295/L035			YC051-YD157
I D10387		M02010	500C/270/R042			YD158-YD170
I D10389		M02010	500C/270/R042			YD158-YD170
I D10399		M2012				YC051-YD157
I D10401		M2012				YC051-YD157
<b>I W3029</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 500FL TO 500HL) TO VDU IN TRAY 2</b>				
I D10245		M01939	550/295/L035			YD158-YD170
I D10405		M02011	500G+2/270/L042			YD158-YD170
I D10407		M02011	500G+2/270/L042			YD158-YD170
I D10253		M1940				YC051-YD157
I D10417		M2015				YC051-YD157
I D10419		M2015				YC051-YD157

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W3020

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3031	NN2	PSU MOUNTED LCD VIDEO MONITOR NO.16 TO VDU IN CLUSTER NO.2				
I D10247		M01939	550/295/L035			YD158-YD170
I D10255		M1940				YC051-YD157
I D10411		M2012				YD158-YD170
I D10413		M2012				YD158-YD170
I D10423		M2016				YC051-YD157
I D10425		M2016				YC051-YD157
I W3033	NN2	PSU MOUNTED LCD VIDEO MONITOR NO.17 TO VDU IN CLUSTER NO.3				
I D10269		M01942	710/295/L035			YC051-YD157
I D10429		M2017				YC051-YD157
I D10431		M2017				YC051-YD157
I W3035	NN2	PSU MOUNTED LCD VIDEO MONITOR NO.18 TO VDU IN CLUSTER NO.3				
I D10271		M01942	710/295/L035			YC051-YD157
I D10435		M2018				YC051-YD157
I D10437		M2018				YC051-YD157
W3037	NN2	PSU LCD VIDEO MONITOR (STA 530L TO STA 578L) TO VDU IN TRAY 2				
I D10253		M01940	550/295/L035			YD158-YD170
I D10429		M02013	548/270/L042			YD158-YD170
I D10431		M02013	548/270/L042			YD158-YD170
W3039	NN2	PSU LCD VIDEO MONITOR (STA 530R TO STA 578R) TO VDU IN TRAY 2				
I D10255		M01940	550/295/L035			YD158-YD170
I D10435		M02014	548/270/R042			YD158-YD170
I D10437		M02014	548/270/R042			YD158-YD170

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3030

Page 1 End

Nov 12/2012

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>I W3041</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.21 TO VDU IN CLUSTER NO.3</b>				
I D10277		M01943	710/295/L035			YC051-YD157
I D10453		M2021				YC051-YD157
I D10455		M2021				YC051-YD157
<b>I W3043</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR TO VDU IN CLUSTER 3.</b>				
I D10279		M01943	710/295/L035			YC051-YD157
I D10459		M2022				YC051-YD157
I D10461		M2022				YC051-YD157
<b>I W3045</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 626L TO STA 685L) TO VDU IN CLUSTER 3</b>				
D10453			727+13/274/L019			YD158-YD170
D10455			727+14/270/L033			YD158-YD170
D10269		M01942	710/295/L035			YD158-YD170
I D10285		M1944				YC051-YD157
I D10465		M2023				YC051-YD157
I D10467		M2023				YC051-YD157
<b>I W3047</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 626R TO STA 685R) TO VDU IN CLUSTER 3</b>				
D11005			656/270/R42			YD158-YD170
I D10459			727+15/272/R50			YD158-YD170
D10271		M01942	710/295/L035			YD158-YD170
I D10287		M1944				YC051-YD157
I D10471		M2024				YC051-YD157
I D10473		M2024				YC051-YD157

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W3040

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3053	NN2	PSU MOUNTED LCD VIDEO MONITOR NO.27 TO VDU IN CLUSTER NO.4				
			727A+15/270/L042			YD158-YD170
			727A+15/270/L042			YD158-YD170
		M01943	710/295/L035			YD158-YD170
I D10301		M01946	777/295/L035			YC051-YD157
I D10489		M2027				YC051-YD157
I D10491		M2027				YC051-YD157
I W3055	NN2	PSU MOUNTED LCD VIDEO MONITOR NO.28 TO VDU IN CLUSTER NO.4				
			727A+15/270/R42			YD158-YD170
			727A+15/270/R42			YD158-YD170
		M01943	710/295/L035			YD158-YD170
I D10303		M01946	777/295/L035			YC051-YD157
I D10495		M2028				YC051-YD157
I D10497		M2028				YC051-YD157
I W3057	NN2	PSU LCD VIDEO MONITOR (STA 727CL TO STA 727E+10L) TO VDU IN CLUSTER 4				
			727I+1/273/L024			YD158-YD170
I D10489			727I+3/273/L024			YD158-YD170
		M01946	777/295/L035			YD158-YD170
I D10309		M01947	777/295/L035			YC051-YD157
I D10501		M02029	798/270/L042			YC051-YD157
I D10503		M02029	798/270/L042			YC051-YD157
I W3058	RN2	ATT PANEL SHIP WIRE BUNDLE				
				D07164P	W3144	YN501-YR314
I D07164J				D07164P	W5124	YR315-YR328
I D07166J				D07166P	W4258	YN501-YR328
I D07168J				D07168P	W4258	YN501-YR328
I D07174J				D07174P	W4248	YC051-YD158, YL951-YN260
				D40020J	W0142	YC051-YD158, YL951-YN260
D40020P				D40026J	W0152	YC051-YD158, YL951-YR328
D40026P				D40052J	W3146	YC051-YD158, YL951-YN260
D40052P				D40148J	W5146	YC051-YD158, YL951-YR328
D40148P				D41062J	W4166	YN501-YR328
I D41062P						

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W3050

Page 1

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3058</b>	<b>RN2</b>	<b>ATT PANEL SHIP WIRE BUNDLE (continued)</b>				
D41070P				D41070J	W4246	YN501-YR328
D41072P				D41072J	W0156	YN501-YR328
D41074P				D41074J	W0158	YN501-YR328
D41076P				D41076J	W3166	YN501-YR328
D41078P				D41078J	W0160	YN501-YR328
D41082P				D41082J	W0142	YN501-YR328
D40090J		AB0288	POS 05	D40090P	W3144	YC051-YD158
D40054J		AB0340A	POS 01	D40054P	W5142	YC051-YD158, YL951-YR328
D40170J		AB0340A	POS 04	D40170P	W2218	YC051-YD158, YL951-YR328
D40050J		AB0340A	POS 05	D40050P	W6242	YC051-YD158, YL951-YR328
D42008P		AB0340B	POS 02	D42008J	W4146	YC051-YD158, YL951-YN260
D43922P		AJ0039B	POS 03	D43922J	W0084	YN501-YR328
D40226P		AP0600A	POS 05	D40226J	W0044	YC051-YD158, YL951-YR328
D11064		M01415	//			YC051-YD158, YL951-YN260
D11068		M01415	//			YC051-YD158, YL951-YN260
D12416		M01415	//			YC051-YD158, YL951-YR328
D14364		M01415	//			YN501-YR328
D14368		M01415	//			YN501-YR328
D14370		M01415	//			YN501-YR328
D11066		M01418	948/236/L014			YC051-YD158, YL951-YN260
D11070		M01418	948/236/L014			YC051-YD158, YL951-YN260
D14372		M01418	948/236/L014			YN501-YR328
D14376		M01418	948/236/L014			YN501-YR328
D14378		M01418	948/236/L014			YN501-YR328
D14612		M02809	MULTI/290/			YN501-YR328
<b>W3059</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.30 TO VDU IN CLUSTER NO.4</b>				
D10495			727I+2/272/R50			YD158-YD170
D10497			727I+2/273/R50			YD158-YD170

## MASTER BUNDLE LIST

D280A108

91-21-13

Section W3050

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W3059	NN2	PSU MOUNTED LCD VIDEO MONITOR NO.30 TO VDU IN CLUSTER NO.4 (continued)				
D10303		M01946	777/295/L035			YD158-YD170
D10311		M01947	777/295/L035			YC051-YD157
D10507		M02030	798/270/R042			YC051-YD157
D10509		M02030	798/270/R042			YC051-YD157

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3050

Page 3 End

Nov 12/2012





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3061	NN2	PSU MOUNTED LCD VIDEO MONITOR NO.31 TO VDU IN CLUSTER NO.4				
I D10317		M1948				YC051-YD157
I D10513		M2031				YC051-YD157
I D10515		M2031				YC051-YD157
I W3063	NN2	PSU MOUNTED LCD VIDEO MONITOR NO.32 TO VDU IN CLUSTER NO.4				
I D10319		M1948				YC051-YD157
I D10519		M2032				YC051-YD157
I D10521		M2032				YC051-YD157

For training purposes only!

## MASTER BUNDLE LIST

D280A108

91-21-13

Section W3060

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3071	NN2	VIDEO - VDU CLUSTER 1 TO VDU CLUSTER 2				
I D45269J				D45269P	W3589	YC051-YD170
I D10211		M01935	430/295/L035			YD158-YD170
I D10233		M01938	500F+10/295/L035			YC051-YD170
I D10211		M1936				YC051-YD157
I W3073	NN2	VIDEO - VDU CLUSTER 3 TO VDU CLUSTER 4				
I D45273J				D45273P	W3589	YC051-YD170
I D10297		M01946	777/295/L035			YC051-YD170
I D10275		M1943				YD158-YD170
I D10283		M1944				YC051-YD157

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3070

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3097	NN2	DISCONNECT FOR LCD MONITOR 2 TO VDU IN CLUSTER 1				
I D10005P				D10005J	W3003	YC051-YD157
I D10007P				D10007J	W3003	YC051-YD157
I D10339		M02002	368/262/R038			YC051-YD157

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3090

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3101		SATCOM- RF COMBINER TO LNA/DIP (PORT)				
I D10875		M02257	760/295/L010			YC051-YD157
I D10879		M02258	760/290/L005			YC051-YD157
I W3103	NN2	SATCOM- RF UNIT TO RF COMBINER (J3)				
I D41617P		AE0601A	POS 04	D41617J	W0613	YC051-YD157
I D10873		M02257	760/295/L010			YC051-YD157
I W3105	NN2	SATCOM- RF COMBINER TO LNA/DIP (PORT)				
I D41621P		AE0601A	POS 06	D41621J	W0613	YC051-YD157
I D10877		M02257	760/295/L010			YC051-YD157
I W3107	LN1	SATCOM- AERO-1 ANTENNA				
I D41619P		AE0601A	POS 01	D41619J	W0613	YC051-YD157
I D41613P		AE0601A	POS 02	D41613J	W0613	YC051-YD157
I D41601P		AE0601A	POS 08	D41601J	W0613	YC051-YD157
I D40165P		AP0600A	POS 07	D40165J	W0044	YC051-YD157
I D10861		LNA/DIP				YC051-YD157
I D10863		M02258	760/290/L005			YC051-YD157

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3100

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3131</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 727HL TO STA 757L) TO VDU IN CLUSTER 4</b>				
D10513			849/276/L054			YD158-YD170
D10515			849/276/L056			YD158-YD170
D10309		M01947	777/295/L035			YD158-YD170
<b>W3135</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 727HR TO STA 757R) TO VDU IN CLUSTER 4</b>				
D10519			849/276/R56			YD158-YD170
D10521			849/276/R58			YD158-YD170
D10311		M01947	777/295/L035			YD158-YD170
<b>W3137</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 757L TO 817L) TO VDU ON TRAY 4</b>				
D10973			787/273/L053			YD158-YD170
D10975			787/273/L053			YD158-YD170
D10317		M01948	727J/295/L035			YD158-YD170
<b>W3139</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 757R TO 817R) TO VDU ON TRAY 4</b>				
D10979			787/273/R055			YD158-YD170
D10981			787/273/R055			YD158-YD170
D10319		M01948	727J/295/L035			YD158-YD170

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3130

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3141	NA2	GLIDE SLOPE ANT LEFT - STA 178 TO E1-2 SHELF				
I D03317				D02621		ALL
I D04025J		AE0102B	POS 07	D04025P	W0121	ALL
I W3142	LN2	EMERGENCY EXIT LIGHT - LEFT				
I D07192P				D07192J	W4142	YN501
I D07194P				D07194J	W4142	YN501
I D07198J				D07198P	W4142	YN231-YN260
I D11088				D11344		YC051-YD170
I D11090				D11344		YN231-YN260
I D11096				D11344		YN231-YN260
I D11100				D11344		YC051-YN260
I D11326				D11344		YC051-YN260
I D11330				D11344		YN231-YN260
I D11334				D11344		YC051-YN260
I D11338				D11344		YC051-YN260
I D12016				D11344		YC051-YD170
I D12034				D11344		YC051-YL999
I D12038				D11344		YC051-YL999
I D12046				D11344		YC051-YL999
I D12048				D11344		YC051-YL999
I D12062				D11344		YC051-YL999
I D14698				D14816		YN501-YR328
I D14702				D14816		YN501-YR328
I D14712				D14816		YN501-YR314, YR317-YR318, YR320-YR328
I D14828				D14816		YR301-YR328
I D14834				D14816		YR301-YR328
I D40009J				D40009P	W3309	ALL
I D40044P				D40044J	W0452	ALL
I D40086P				D40086J	W4142	YC051-YD157
I D40098J				D40098P	W4142	YC051-YL999, YR301-YR328
I D40100J				D40100P	W4142	YC051-YN501
I D46438P				D46438J	W4142	YC051-YL999, YR301-YR328
I D46440P				D46440J	W4142	ALL
I D12350			360/284/L031			ALL

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W3140

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3142</b>	<b>LN2</b>	<b>EMERGENCY EXIT LIGHT - LEFT (continued)</b>				
D12748			370/209/L067			YL951-YL999, YR301-YR328
D14694			461/295/L025			YN501-YR328
D14710			727A+10/289/L006			YN501-YR314, YR317-YR318, YR320-YR328
D14712			727B+2/289/L018			YR315-YR316, YR319
D14718			762/289/L018			YN501
D14838			768/294/L023			YR301-YR328
D40196J		AB0340A	POS 03	D40196P	W2114	ALL
D40096P		AB0340B	POS 01	D40096J	W4142	ALL
D11078		L00006	651/227/L074			YN231-YN501
D12036		L00006	651/227/L074			YC051-YL999, YR301-YR328
D11082		L00547	727F+11/169/L051			ALL
D11080		L00548	757/171/R051			ALL
D11074		L00731	365/226/L072			ALL
D11086		L00732	1000/242/L060			ALL
D12446		L00751	MULTI/ /			YC051-YL999
D12452		L00751	MULTI/ /			YC051-YN260
D12028		L01070	620/288/0000			YC051-YL999
D12030		L01070	620/288/0000			YN231-YN260
D15242		L01070	620/288/0000			YN501-YR328
D03670		L01189	614/224/L062			ALL
D03672		L01189	614/224/L062			ALL
D10082		L01190	993/239/L053			ALL
D10084		L01190	993/239/L053			ALL
D12068		L01208	576/224/L062			YC051-YL999, YR301-YR328
D12072		L01208	576/224/L062			YC051-YL999, YR301-YR328
D12032		L01210	608/227/L074			YC051-YL999, YR301-YR328
D10502		L01264	727A+8/290/0000			YC051-YD170
D12396		L01359	642/224/L070			YN231-YN501
D12398		L01359	642/224/L070			YN231-YN501
D12434		L01359	642/224/L070			YC051-YL999, YR301-YR328
D12436		L01359	642/224/L070			YC051-YL999, YR301-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3140

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3142</b>	<b>LN2</b>	<b>EMERGENCY EXIT LIGHT - LEFT (continued)</b>				
D12442		L01365	MULTI/ /			YC051-YL999, YR301-YR328
D12444		L01365	MULTI/ /			YC051-YL999, YR301-YR328
D12448		L01365	MULTI/ /			ALL
D12450		L01365	MULTI/ /			ALL
D14692		L01506	462/289/L006			YN501-YR328
D14720		L01520	815/289/L006			YN501-YR328
D14710		L1515				YR315-YR316, YR319
D12052		M01386	490/208/L068			YD158-YR328
D10138		M01387	500H/208/L068			YC051-YD157
D10130		M01388	723B/208/L068			YC051-YD157
D10132		M01389	783/208/L068			YC051-YD157
D13124		M01389	783/208/L068			YD158-YR328
D10712		M01668	603/212/L067			YN231-YN501
D10716		M01670	727C+13/212/L068			ALL
D10746		M01673	952/290/L014			ALL
D12008		M01694	565/213/L068			YC051-YL999, YR301-YR328
D12552		M02176	617/251/L066			ALL
D12554		M02176	617/251/L066			ALL
D12576		M02182	579/251/L066			YC051-YL999, YR301-YR328
D12578		M02182	579/251/L066			YC051-YL999, YR301-YR328
D12664		M02204	638/251/L066			ALL
D12666		M02204	638/251/L066			ALL
D12668		M02205	581/229/L069			ALL
D12670		M02205	581/229/L069			ALL
D12672		M02206	639/229/L069			ALL
D12674		M02206	639/229/L069			ALL
D12700		M02213	600/251/L066			YC051-YL999, YR301-YR328
D12702		M02213	600/251/L066			YC051-YL999, YR301-YR328
D12704		M02214	543/229/L069			YC051-YL999, YR301-YR328
D12706		M02214	543/229/L069			YC051-YL999, YR301-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3140

Page 3

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3142</b>	<b>LN2</b>	<b>EMERGENCY EXIT LIGHT - LEFT (continued)</b>				
D12708		M02215	560/229/L069			YC051-YL999, YR301-YR328
D12710		M02215	560/229/L069			YC051-YL999, YR301-YR328
D12802		M02253				YD158-YR328
D12828		M02267	570/208/L009			YC051-YL999, YR301-YR328
D13018		M02335	500C+7/213/L067			YD158-YR328
D13262		M02399				YN231-YN501
D13258		M02400				YD158-YR328
D14726		M02837	637/269/59			YN501
D14842		M02837	637/269/59			YR301-YR328
D14726		M02838	627/269/59			YR301-YR328
<b>W3143</b>	<b>NB2</b>	<b>GLIDE SLOPE ANT RIGHT - STA 178 TO E1-3 SHELF</b>				
D03319				D02625		ALL
D04027J		AE0102B	POS 06	D04027P	W0141	ALL
<b>W3144</b>	<b>LN2*</b>	<b>P18 TO FWD AND AFT LAVATORY</b>				
D07106J				D07106P	W5124	YR315-YR328
D07108J				D07108P	W5124	YR315-YR328
D07162P				D07162J	W4166	YN501-YR328
D07164P				D07164J	W3058	YN501-YR314
D07170J				D07170P	W4142	ALL
D07172J				D07172P	W7359	ALL
D07176P				D07176J	W3150	ALL
D40116J				D40116P	W3158	ALL
D40150P				D40150J	W5146	ALL
D40184P				D40184J	W4146	YC051-YN260
D40186P				D40186J	W3146	YC051-YN260
D40270J				D40270P	W3150	ALL
D40272J				D40272P	W4250	YC051-YL999, YR301-YR328
D03802			1000/295/R024			ALL
D11722			352/279/L030			ALL
D40090P		AB0288	POS 05	D40090J	W3058	YC051-YD158
D40090P		AB0288	POS 05	D40090J		YD160-YD170
D40216P		AB0340A	POS 02	D40216J	W3158	ALL
D40349J		AB0358	POS 09	D40349P	W3805	YL951-YR328

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W3140

Page 4

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3144</b>	<b>LN2*</b>	<b>P18 TO FWD AND AFT LAVATORY (continued)</b>				
D40220P		AP1800A	POS 06	D40220J	W0018	ALL
D03732		M01415	/ /			ALL
D03738		M01418	948/236/L014			ALL
D03740		M01419	/ /			YC051-YL999, YR301-YR328
D10770		M01681	975/297/R010			ALL
<b>W3146</b>	<b>LN2*</b>	<b>FLUORESCENT LIGHTING - CEILING LEFT &amp; RIGHT</b>				
D07186P				D07186J	W4142	YD158-YN260
D40038P				D40038J	W0154	YC051-YN260
D40052J				D40052P	W3058	YC051-YD158, YL951-YN260
D40052J				D40052P		YD160-YD170
D40110J				D40110P	W3158	YC051-YN260
D40112J				D40112P	W3158	YC051-YD157, YL951-YN260
D40114J				D40114P	W3158	YC051-YD157, YL951-YN260
D40186J				D40186P	W3144	YC051-YN260
D40984J				D40984P	W3158	YD158-YD170
D40994J				D40994P	W3158	YD158-YD170
D42010J				D42010P	W3158	YD158-YD170
D11900		436/289/L032				YC051-YN260
D11970		495/289/L032				YC051-YL999
D11902		500+17/289/L033				YN231-YN260
D11972		500C+11/289/L032				YC051-YL999
D11904		500D+17/289/L032				YN231-YN260
D11974		500G+3/289/L032				YC051-YL999
D11976		539/289/L032				YC051-YL999
D11906		602/289/L032				YN231-YN260
D11978		618/289/L032				YC051-YL999
D11908		681/289/L032				YN231-YN260
D11980		698/289/L032				YC051-YL999
D11910		727A+14/289/L033				YN231-YN260
D11982		727B+11/289/L032				YC051-YL999
D11912		727E+10/289/L032				YN231-YN260
D11984		727F+4/289/L032				YC051-YL999
D11986		727I+18/289/L032				YC051-YL999
D11914		794/289/L032				YC051-YN260

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3140

Page 5

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
-----------------	-----	-------------------------	----------	--------------	-----------	-------------

W3146	LN2*	FLUORESCENT LIGHTING - CEILING LEFT & RIGHT (continued)				
D11916			855/289/L031			YC051-YN260

For training purposes only!



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3150	LN2*	P18 AND AB0340A DISC TO LEFT PSU'S				
I D07176J				D07176P	W3144	ALL
I D40104J				D40104P	W3158	ALL
I D40106J				D40106P	W3158	YC051-YN260
I D40109J				D40109P	W3158	YN501-YR328
I D40270P				D40270J	W3144	ALL
I D11500			360/274/L051			ALL
I D11502			380/274/L051			ALL
I D11504			400/274/L051			ALL
I D11506			430/274/L051			ALL
I D11508			450/274/L051			ALL
I D11510			470/274/L051			ALL
I D11512			490/274/L051			ALL
I D11514			500+10/274/L051			ALL
I D11516			500A+12/274/L051			ALL
I D11518			500B+12/274/L051			ALL
I D11520			500C+12/274/L051			ALL
I D11522			500D+12/274/L051			YC051-YL999, YR301-YR328
I D11524			500E+16/274/L051			YC051-YL999, YR301-YR328
I D11526			500F+14/274/L051			YC051-YL999, YR301-YR328
I D11528			500G+10/274/L051			YC051-YL999, YR301-YR328
I D11530			500H+10/274/L051			ALL
I D11532			520/274/L051			ALL
I D11534			545/274/L051			ALL
I D11536			565/274/L051			ALL
I D11538			588/274/L051			ALL
I D11540			611/274/L051			ALL
I D11542			630/274/L051			ALL
I D11544			660/274/L051			ALL
I D11546			680/274/L051			ALL
I D11548			700/274/L051			ALL
I D11550			718/274/L051			ALL
I D11552			727+10/274/L051			ALL
I D11554			727A+10/274/L051			YC051-YL999, YR301-YR328
I D11556			727B+10/274/L051			YC051-YL999, YR301-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3150

Page 1

Nov 12/2012

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3150</b>	<b>LN2*</b>	<b>P18 AND AB0340A DISC TO LEFT PSU'S (continued)</b>				
D11558			727C+10/274/L051			YC051-YL999, YR301-YR328
D11560			727D+10/274/L051			YC051-YL999, YR301-YR328
D11562			727E+10/274/L051			YC051-YL999, YR301-YR328
D11564			727F+10/274/L051			ALL
D11566			727G+10/274/L051			ALL
D11570			727I+16/272/L054			ALL
D11572			727J+10/274/L051			ALL
D11574			763/272/L054			YC051-YL999, YR301-YR328
D11576			775/272/L054			ALL
D11578			802/274/L051			ALL
D11580			822/274/L051			YC051-YL999, YR301-YR328
D11568			830/274/L051			ALL
D11582			842/274/L051			YC051-YL999, YR301-YR328
D11584			865/274/L051			YC051-YL999, YR301-YR328
D11586			898/274/L056			YC051-YL999, YR301-YR328
D11588			924/274/L051			YC051-YL999, YR301-YR328
D11590			943/277/L050			YC051-YL999, YR301-YR328
D40108P		AB0340A	POS 06	D40108J	W3158	ALL
D40198P		AP1800A	POS 01	D40198J	W0018	ALL
<b>W3154</b>	<b>LN1*</b>	<b>P91 TO AFT GALLEY POWER</b>				
D10076			1000/295/R024			YD158-YR328
D03800			998/295/R025			ALL
D11430		P0091				ALL
<b>W3158</b>	<b>LN1*</b>	<b>AB0340A DISCONNECT TO LEFT AFT OVERHEAD</b>				
D40104P				D40104J	W3150	ALL
D40106P				D40106J	W3150	YC051-YN260
D40109P				D40109J	W3150	YN501-YR328

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W3150

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3158</b>	<b>LN1*</b>	<b>AB0340A DISCONNECT TO LEFT AFT OVERHEAD (continued)</b>				
D40110P				D40110J	W3146	YC051-YN260
D40112P				D40112J	W3146	YC051-YD157, YL951-YN260
D40114P				D40114J	W3146	YC051-YD157, YL951-YN260
D40116P				D40116J	W3144	ALL
D40762P				D40762J	W3162	YC051-YD170, YN501-YR328
D40762P				D40762J	W3192	YL951-YN260
D40764P				D40764J	W3164	YC051-YD170
D40764P				D40764J	W3194	YL951-YN260
D40984P				D40984J	W3146	YD158-YD170
D40990P				D40990J	W4146	YD158-YD170
D40994P				D40994J	W3146	YD158-YD170
D40996P				D40996J	W4146	YD158-YD170
D41064P				D41064J	W3166	YN501-YR328
D41066P				D41066J	W4166	YN501-YR328
D41084P				D41084J	W4166	YN501-YR328
D41086P				D41086J	W3166	YN501-YR328
D42002P				D42002J	W4146	YC051-YN260
D42004P				D42004J	W4146	YC051-YN260
D42006P				D42006J	W4146	YC051-YD157, YL951-YN260
D42010P				D42010J	W3146	YD158-YD170
D40216J		AB0340A	POS 02	D40216P	W3144	ALL
D40108J		AB0340A	POS 06	D40108P	W3150	ALL
D40102J		AB0340A	POS 09	D40102P	W5142	ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3150

Page 3 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3162</b>	<b>LN1</b>	<b>NS/FSB SIGN-VIDEO PANEL, FORWARD-LEFT</b>				
D40762J				D40762P	W3158	YC051-YD170, YN501-YR328
D41054J				D41054P	W3669	YN501-YR328 YD158-YD170
D10337			367/270/L042			YD158-YD170
D10361			465/272/L033			YD158-YD170
D10385			500C+7/272/L033			YD158-YD170
D10409			500G/272/L033			YD158-YD170
D10433			650/272/L033			YD158-YD170
D41052J		AB0369L	POS 03	D41052P	W3657	YN501-YR328
D10349		M02003	415/270/L042			YC051-YD157
D10361		M02005	500/270/L042			YC051-YD157
D10385		M02009	500B+21/270/L042			YC051-YD157
D10397		M02011	500G+2/270/L042			YC051-YD157
D10421		M02015	549/270/L042			YC051-YD157
<b>W3164</b>	<b>LN1</b>	<b>NS/FSB SIGN-VIDEO PANEL, AFT-LEFT</b>				
D40764J				D40764P	W3158	YC051-YD170
D10457			727+14/274/L018			YD158-YD170
D10481			727A+15/270/L042			YD158-YD170
D10493			727D+5/273/L053			YD158-YD170
D10977			787/273/L053			YD158-YD170
D10517			890/275/L017			YC051-YD170
D10433		M02017	679/270/L042			YC051-YD157
D10457		M02021	727B+3/270/L042			YC051-YD157
D10469		M02023	727F+7/270/L042			YC051-YD157
D10493		M02027	727J+11/270/L042			YC051-YD157
D10505		M02029	798/270/L042			YC051-YD157
<b>W3166</b>	<b>LN2*</b>	<b>LED LIGHTING - CEILING/WASH LEFT</b>				
D14440				D14742		YN501
D14750				D14746		YN501
D14804				D14682		YR315-YR316, YR319
D14806				D14448		YR315-YR316, YR319
D14808				D14688		YR315-YR316, YR319
D14846				D14682		YR301-YR328
D14848				D14448		YR301-YR328
D14850				D14688		YR301-YR328
D14866				D14682		YR315-YR316, YR319
D14868				D14448		YR315-YR316, YR319

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3160

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3166</b>	<b>LN2*</b>	<b>LED LIGHTING - CEILING/WASH LEFT (continued)</b>				
D14870				D14688		YR315-YR316, YR319
D14896				D14742		YR301-YR328
D14898				D14746		YR301-YR328
D15318				D14682		YN501
D15320				D14448		YN501
D15322				D14688		YN501
D41064J				D41064P	W3158	YN501-YR328
D41076J				D41076P	W3058	YN501-YR328
D41086J				D41086P	W3158	YN501-YR328
D14408		M02801	MULTI/296/27			YN501
D14430		M02801	MULTI/296/27			YN501
D14434		M02801	MULTI/296/27			YN501
D14438		M02801	MULTI/296/27			YN501
D14454		M02801	MULTI/296/27			YN501
D14458		M02801	MULTI/296/27			YN501
D14462		M02801	MULTI/296/27			YN501
D14464		M02801	MULTI/296/27			YR301-YR328
D14466		M02801	MULTI/296/27			YN501
D14810		M02801	MULTI/296/27			YR301-YR328
D14856		M02801	MULTI/296/27			YR301-YR328
D14858		M02801	MULTI/296/27			YR301-YR328
D14860		M02801	MULTI/296/27			YR301-YR314, YR317-YR318, YR320-YR328
D14876		M02801	MULTI/296/27			YR301-YR328
D14878		M02801	MULTI/296/27			YR301-YR328
D14880		M02801	MULTI/296/27			YR301-YR328
D14882		M02801	MULTI/296/27			YR301-YR328
D14884		M02801	MULTI/296/27			YR301-YR328
D14960		M02801	MULTI/296/27			YR301-YR328
D14962		M02801	MULTI/296/27			YR301-YR328
D14964		M02801	MULTI/296/27			YR301-YR328
D14966		M02801	MULTI/296/27			YR301-YR328
D14968		M02801	MULTI/296/27			YR301-YR328
D14978		M02801	MULTI/296/27			YR301-YR314, YR317-YR318, YR320-YR328
D14980		M02801	MULTI/296/27			YR301-YR328
D14982		M02801	MULTI/296/27			YR301-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3160

Page 2

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3166</b>	<b>LN2*</b>	<b>LED LIGHTING - CEILING/WASH LEFT (continued)</b>				
D15284		M02801	MULTI/296/27			YR301-YR314, YR317-YR318, YR320-YR328
D15286		M02801	MULTI/296/27			YR301-YR314, YR317-YR318, YR320-YR328
D15300		M02801	MULTI/296/27			YR301-YR314, YR317-YR318, YR320-YR328
D15302		M02801	MULTI/296/27			YR301-YR314, YR317-YR318, YR320-YR328
D15328		M02801	MULTI/296/27			YN501
D15330		M02801	MULTI/296/27			YN501
D15332		M02801	MULTI/296/27			YN501
D15350		M02801	MULTI/296/27			YN501
D15352		M02801	MULTI/296/27			YN501
D15368		M02801	MULTI/296/27			YN501
D15376		M02801	MULTI/296/27			YR315-YR316, YR319
D15394		M02868	MULTI/296/27			YR315-YR316, YR319
D15416		M02868	MULTI/296/27			YR315-YR316, YR319
D15258		M02872	MULTI/296/27			YR315-YR316, YR319
D15374		M02872	MULTI/296/27			YR315-YR316, YR319
D15396		M02872	MULTI/296/27			YR315-YR316, YR319
D15398		M02872	MULTI/296/27			YR315-YR316, YR319
D14844		M02873	MULTI/296/27			YR301-YR328
D15370		M02873	MULTI/296/27			YR301-YR328
D15372		M02873	MULTI/296/27			YR301-YR328
D15400		M02873	MULTI/296/27			YR301-YR328
D14798		M02876	MULTI/296/27			YR301-YR328
D15378		M02876	MULTI/296/27			YR301-YR328
D15390		M02876	MULTI/296/27			YR301-YR328
D15392		M02876	MULTI/296/27			YR301-YR328
D15324		M02877	MULTI/296/27			YN501
D15326		M02877	MULTI/296/27			YN501
D15354		M02877	MULTI/296/27			YN501
D15366		M02877	MULTI/296/27			YN501
D14436		M02878	MULTI/296/27			YN501
D14442		M02878	MULTI/296/27			YN501
D14446		M02878	MULTI/296/27			YN501

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3160

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3166</b>	<b>LN2*</b>	<b>LED LIGHTING - CEILING/WASH LEFT (continued)</b>				
D14452		M02878	MULTI/296/27			YN501

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3160

Page 4 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3170	LA2*	AB0420A TO E2-2 SHELF				
I D40734P		AB0420A	POS 01	D40734J	W5170	ALL
I D40736P		AB0420A	POS 02	D40736J	W5172	ALL
I D40126P		AE0202A	POS 27	D40126J	W0220	YC051-YD158, YL951-YR328
I D40126P		AE0202A	POS 27	D40126J		YD160-YD170
I D49994P		AE0301A	POS 14	D49994J	W0311	ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3170

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3192</b>	<b>LN1</b>	<b>NS/FSB SIGN-VIDEO PANEL, FORWARD-LEFT</b>				
D40762J				D40762P	W3158	YL951-YN260
I D12011			375/273/L049			YL951-YN260
D12023			443/270/L042			YL951-YN260
D12035			500/270/L042			YL951-YN260
D12047			500A+8/270/L042			YL951-YL999
D12059			500C/270/L042			YL951-YN260
D12083			557/270/L042			YL951-YL999
I D12071			563/270/L042			YL951-YN260
<b>W3194</b>	<b>LN1</b>	<b>NS/FSB SIGN-VIDEO PANEL, AFT-LEFT</b>				
D40764J				D40764P	W3158	YL951-YN260
D12095			670/270/L042			YL951-YN260
I D12107			727A+15/270/L042			YL951-YN260
D12119			727C+18/270/L042			YL951-YL999
I D12131			727G+4/270/L042			YL951-YN260
I D12143			830/270/L042			YL951-YN260
D12155			830/270/L042			YL951-YL999

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3190

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3207</b>	<b>NN2</b>	<b>FWD LT WALL MOUNT LCD MONITOR TO SIDEWALL DISCONNECT</b>				
D10001J				D10001P	W3599	YD157
D10003J				D10003P	W3599	YD157
D10221		M01936	450/295/L035			YD157

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3200

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3245</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 350L TO STA 400L) TO VDU IN TRAY 1 (-700)</b>				
D12007			382/273/L049			YL951-YN260
D12009			382/273/L049			YL951-YN260
D10205		VDU				YL951-YN260
<b>W3246</b>	<b>RN2</b>	<b>LED LIGHTING - SIDEWALL LEFT</b>				
D07178J				D07178P	W4258	YN501-YR328
D14578			419/269/L059			YN501-YR328
D14580			419/269/L059			YN501-YR328
D14590			419/269/L059			YN501-YR328
D14582			628/269/L059			YN501-YR328
D14584			628/269/L059			YN501-YR328
D14586			866/269/L059			YN501-YR328
D14588			866/269/L059			YN501-YR328
D14668		M02807	MULTI/290/			YN501-YR328
<b>W3249</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 350R TO STA 400R) TO VDU IN TRAY 1 (-800)</b>				
D12015			375/270/R040			YL951-YN260
D12013			382/273/R050			YL951-YN260
D10207		VDU				YL951-YN260

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3240

Page 1 End

Nov 12/2012

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3251</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 396L TO STA 490L) TO VDU IN TRAY 1 (-800)</b>				
D12019			445/270/L035			YL951-YN260
D12021			445/270/L035			YL951-YN260
D10213		VDU				YL951-YN260
<b>W3253</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 396R TO 490R) TO VDU IN TRAY 1 (-800)</b>				
D12025			445/270/R035			YL951-YN260
D12027			445/270/R035			YL951-YN260
D10215		VDU				YL951-YN260
<b>W3255</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 455L TO STA 500B+1L) TO VDU IN TRAY 1(-700)</b>				
D12031			500/270/L035			YL951-YN260
D12033			500/270/L035			YL951-YN260
D10221		VDU				YL951-YN260
<b>W3257</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 455R TO STA 500B+1R) TO VDU IN TRAY 1(-800)</b>				
D12037			500/270/R040			YL951-YN260
D12039			500/270/R040			YL951-YN260
D10223		VDU				YL951-YN260
<b>W3259</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR(STA 500L TO STA 500B+16L) TO VDU IN TRAY 1(-800)</b>				
D12043			500A+10/270/L035			YL951-YL999
D12045			500A+10/270/L035			YL951-YL999
D10229		VDU				YL951-YL999

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W3250

Page 1 End

Nov 12/2012

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3261</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR(STA 500R TO STA 500B+16R) TO VDU IN TRAY 1(-800)</b>				
D12049			500A+10/270/R040			YL951-YL999
D12051			500A+10/270/R040			YL951-YL999
D10231		VDU				YL951-YL999
<b>W3263</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR(STA 500A+18L TO 500E+10L) TO VDU IN TRAY 2(-800)</b>				
D12055			500C+15/270/L040			YL951-YN260
D12057			500C+15/270/L040			YL951-YN260
D10237		VDU				YL951-YN260
<b>W3265</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR(STA 500A+18R TO 500E+10R) TO VDU IN TRAY 2(-800)</b>				
D12061			500C+15/270/R040			YL951-YN260
D12063			500C+15/270/R040			YL951-YN260
D10239		VDU				YL951-YN260
<b>W3267</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR(STA 500E+20L TO 500H+14L) TO VDU IN TRAY 2(-800)</b>				
D12067			500G+5/270/L040			YL951-YN260
D12069			500G+5/270/L040			YL951-YN260
D10245		VDU				YL951-YN260
<b>W3269</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR(STA 500E+20R TO 500H+14R) TO VDU IN TRAY 2(-800)</b>				
I D12073			500G+5/270/R040			YL951-YN260
I D12075			500G+5/270/R040			YL951-YN260
D10247		VDU				YL951-YN260

## MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3260

Page 1 End

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3271</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 532L TO 582L) TO VDU IN TRAY 2(-800)</b>				
D12079			555/270/L035			YL951-YL999
D12081			555/270/L035			YL951-YL999
D10253		VDU				YL951-YL999
<b>W3273</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 532R TO 582R) TO VDU IN TRAY 2(-800)</b>				
D12085			555/270/R040			YL951-YL999
D12087			555/270/R040			YL951-YL999
D10255		VDU				YL951-YL999
<b>W3275</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 650L TO 690L) TO VDU IN TRAY 3 (-700)</b>				
D12091			670/270/L040			YL951-YN260
D12093			670/270/L040			YL951-YN260
D10269		VDU				YL951-YN260
<b>W3277</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 652R TO 688R) TO VDU IN TRAY 3(-800)</b>				
D12097			670/270/R040			YL951-YN260
D12099			670/270/R040			YL951-YN260
D10271		VDU				YL951-YN260
<b>W3279</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 727L TO 727C+10L) TO VDU IN TRAY 3 (-700)</b>				
D12103			727+19/273/L054			YL951-YN260
D12105			727+19/273/L054			YL951-YN260
D10277		VDU				YL951-YN260

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W3270

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3281</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 727R TO 727C+10R) TO VDU IN TRAY 3 (-700)</b>				
I D12109			727+19/273/R055			YL951-YN260
I D12111			727A+15/270/R040			YL951-YN260
D10279		VDU				YL951-YN260
<b>W3283</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 727B+5L TO 727E+7L) TO VDU IN TRAY 3(-800)</b>				
D12115			727C+19/273/L054			YL951-YL999
D12117			727C+19/273/L054			YL951-YL999
D10285		VDU				YL951-YL999
<b>W3285</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 727B+5R TO 727E+7R) TO VDU IN TRAY 3(-800)</b>				
D12121			727C+19/273/R055			YL951-YL999
D12123			727C+19/273/R055			YL951-YL999
D10287		VDU				YL951-YL999
<b>W3287</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 727DL TO 780L) TO VDU IN TRAY 4 (-700)</b>				
I D12127			727G+5/270/L040			YL951-YN260
I D12129			727G+5/270/L040			YL951-YN260
D10301		VDU				YL951-YN260
<b>W3289</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 727E+3R TO 727I+5R) TO VDU IN TRAY 4(-800)</b>				
I D12133			727G+5/270/R040			YL951-YN260
I D12135			727G+5/270/R040			YL951-YN260
D10303		VDU				YL951-YN260

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3280

Page 1 End

Nov 12/2012

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3291</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 727I+3L TO 800L) TO VDU IN TRAY 4(-800)</b>				
I D12139			755/270/L040			YL951-YN260
D12141			755/270/L040			YL951-YN260
D10309		VDU				YL951-YN260
<b>W3293</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 790R TO 870R) TO VDU IN TRAY 4 (-700)</b>				
D12145			755/270/R040			YL951-YN260
D12147			755/270/R040			YL951-YN260
D10311		VDU				YL951-YN260
<b>W3295</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 790L TO STA 870L) TO VDU IN TRAY 4(-800)</b>				
D12151			830/270/L040			YL951-YL999
D12153			830/270/L040			YL951-YL999
D10317		VDU				YL951-YL999
<b>W3297</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 790R TO STA 870R) TO VDU IN TRAY 4(-800)</b>				
D12157			830/270/R040			YL951-YL999
D12159			830/270/R040			YL951-YL999
D10319		VDU				YL951-YL999

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W3290

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3307	NN2	INPH, ELEX PNL AND FWD ATTD PNL				
I D41337P		AE0103A	POS 05	D41337J	W0131	YC051-YN260
I D41337P		AE0103A	POS 09	D41337J	W0131	YN501-YR328
I D45905P		AE0801A	POS 20	D45905J	W0811	YN501-YR328
I D48337P		AE0801B	POS 08	D48337J	W0813	YC053-YD157
I D48337P		AE0801C	POS 02	D48337J	W0813	YC051-YC052
D01507		M01276	300/ /			YC051-YC052, YD158-YN260
I D10019		M01415	/ /			YC051-YN260
I D14366		M01415	/ /			YN501-YR328
I D13363		M02932	347/ /			YN501-YR328
I W3309	NN2	ATTENDANTS SPEAKERS				
I D40005P				D40005J	W4142	ALL
I D40007P				D40007J	W4142	ALL
I D40009P				D40009J	W3142	ALL
I D44139P		AE0401A	POS 27	D44139J	W0411	ALL
D12761		M02756				YL951-YL954, YN231-YN235

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3300

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3311	SN2	AFT ATTENDANTS HANDSET (P14)				
D40669J				D40669P	W3311	YN501-YR307
D40669P				D40669J	W3311	YN501-YR307
D40697J				D40697P	W3311	YN501-YR307
D40697P				D40697J	W3311	YN501-YR307
D40709J				D40709P	W3311	YN501-YR307
D40709P				D40709J	W3311	YN501-YR307
D40711J				D40711P	W3311	YN501-YR307
D40711P				D40711J	W3311	YN501-YR307
D04181P		AE0103A	POS 21	D04181J	W0131	ALL
D10021		M01418	948/236/L014			YC051-YN260
D14374		M01418	948/236/L014			YN501-YR328
D11815		M02931	920/295/L034			YN501-YR328
D11173		M1419				YL951-YL999, YR301-YR328
I W3319	NB3	F/O AUDIO SEL PNL TO INPH				
D04331P		AE0401A	POS 20	D04331J	W0411	YC051-YD158, YL951-YR328
D00129		M00078	226/268/R020			YC051-YD158, YL951-YR328
D06033		M00295				YL951-YR328
D06029		M00429	254/ /			YL951-YR328
D06043		M244				YC051-YD158, YL951-YR328
D06033		M295				YC051-YD158
D06029		M429				YC051-YD158
D00137		P008-07	P008-07/ /			YC051-YD158, YL951-YR328
D06051		P23-7				YC051-YD158, YL951-YR328
D00135		P8-7				YC051-YD157

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W3310

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3323</b>	<b>NA3</b>	<b>CAPT AUDIO SEL PNL TO INPH</b>				
D04155P		AE0401A	POS 18	D04155J	W0411	ALL
D00127		M00077	226/268/L015			ALL
D06041		M00243	/ /			ALL
D06027		M00428	254/ /			ALL
D00133		P008-06	P008-06/ /			ALL
D06031		P008-06	P008-06/ /			ALL
D06049		P021-007				YL951-YL999
D06049		P21-7				YN231-YN501
D06049		P21-7 OXY				YC051-YD170, YR301-YR328
D00131		P8-6				YC051-YD157
<b>W3327</b>	<b>NC3</b>	<b>F/OBS FLIGHT INPH</b>				
D04153P		AE0401A	POS 22	D04153J	W0411	YC051-YD158, YL951-YR328
D04151P		AP0600C	POS 06	D04151J	W0041	YC051-YD158, YL951-YR328
D06037		M00297				YC051-YD158
D00139		P005-15	P005-00/ /			YC051-YD158, YL951-YR328
D00141		P5-15				YC051-YD157
<b>W3329</b>	<b>NN2</b>	<b>VOICE RECORDER CONTROL PNL</b>				
D04157P		AE0401A	POS 28	D04157J	W0411	ALL
D00179		P005-07	P005-00/ /			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3320

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3335	NN2	AUDIO ENTERTAINMENT - RH SIDE				
I D08429J			438/218/L069	D08429P		YD158-YD170
I D08427J			438/218/R069	D08427P		YC051-YD170
I D08539J			683/220/L069	D08539P		YD158-YD170
I D08537J			683/220/R069	D08537P		YD158-YD170
I D48333P		AE0801B	POS 09	D48333J	W0813	YD158-YD170
I D48335P		AE0801B	POS 13	D48335J	W0813	YC053-YD170
I D48339P		AE0801B	POS 19	D48339J	W0813	YD158-YD170
I D48335P		AE0801C	POS 09	D48335J	W0813	YC051-YC052
I D10587		M02039	985/285/R037			YD158-YD170
I W3339	NN2	AUDIO ENTERTAINMENT - LH SIDE - FWD				
I D08429J			438/218/L069	D08429P		YC051-YD157
I D48339P		AE0801B	POS 19	D48339J	W0813	YC053-YD157
I D48339P		AE0801C	POS 10	D48339J	W0813	YC051-YC052

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3330

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3349</b>	<b>NN2</b>	<b>VIDEO - VCC TO DISC BRACKET (NEAR TRAY 3) AND TO AB0858</b>				
D45289P		AB0858	POS 01	D45289J	W3583	YN231-YN260
D45297P		AB0858	POS 02	D45297J	W3577	YN231-YN260
D45285P		AB0858	POS 03	D45285J	W3583	YN231-YN260
D45139J		AB0913	POS 01	D45139P	W3653	YN231-YN260
D45145J		AB0913	POS 02	D45145P	W3653	YN231-YN260
D45129J		AB0913	POS 03	D45129P	W3653	YN231-YN260

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3340

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3377</b>	<b>LA3</b>	<b>AUTOPILOT E1-1 TO AB1050L</b>				
D43397P		AB1050L	POS 03	D43397J	W3397	YC053-YN236, YN501-YR328
D43387J		AB1080	POS 02	D43387P	W3387	YC051-YC052
D04079P		AE0101A	POS 32	D04079J	W0111	YC051-YN236, YN501-YR328
D40025P		AE0302A	POS 10	D40025J	W0321	YC051-YN236, YN501-YR328
D01711		M00929	1158/258/R010			YC051-YC052
D01829		M00958	1160/274/R005			YC051-YC052
D01681		M01020	1165/278/L007			YC051-YC052
D02205		M01192	1164/268/L008			YC051-YC052
D11409		M02373	1085/264/L027			YC051-YC052
D01861		S00771	1165/282/L010			YC051-YC052
<b>W3379</b>	<b>RB3</b>	<b>AUTOPILOT E1-4 ELEV AND RUD PCU A SYSTEM - B</b>				
D43399P		AB1050R	POS 04	D43399J	W3399	YC053-YN236, YN501-YR328
D43389J		AB1080	POS 03	D43389P	W3389	YC051-YC052
D04081J		AE0104A	POS 03	D04081P	W0141	YC051-YN236, YN501-YR328
D40029P		AE0302A	POS 35	D40029J	W0321	YC051-YN236, YN501-YR328
D01679		M00929	1158/258/R010			YC051-YC052
D01677		M00958	1160/274/R005			YC051-YC052
D01687		M01022	1161/287/L007			YC051-YC052
D02207		M01193	1164/268/R008			YC051-YC052
D01857		S00773	1158/287/L010			YC051-YC052

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3370

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3381	LE2	AUTOPILOT STAB TRIM CIRCUIT, E1-1 TO AB1050L				
I D44381P		AB1050L	POS 04	D44381J	W3391	YC053-YR328
I D04083P		AE0101A	POS 26	D04083J	W0111	ALL
I D48901P		AP1800A	POS 02	D48901J	W0018	ALL
D00381		M01659	1076/264/R005			YC051-YC052
I W3387	NA2	AUTOPILOT AB0180, PRESS. SEAL TO ELEV AND RUD PCU A SYSTEM - A				
D43387P		AB1080	POS 02	D43387J	W3377	YC051-YC052
D43387P		AB1080	POS 02	D43387J	W3397	YC053-YD158, YL951-YN236, YN501-YR328
D43387P		AB1080	POS 02	D43387J		YN237-YN260
D00291		M00175	1087/ /			YC051-YD158, YL951-YR328
I W3389	NB2	AUTOPILOT AB1080, PRESS. SEAL TO ELEV AND RUD PCU A SYSTEM - B				
D43389P		AB1080	POS 03	D43389J	W3379	YC051-YC052
D43389P		AB1080	POS 03	D43389J	W3399	YC053-YD158, YL951-YN236, YN501-YR328
D43389P		AB1080	POS 03	D43389J		YN237-YN260
D10013		M1831				YC051-YD158, YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3380

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3391</b>	<b>LE2</b>	<b>AUTOPILOT AB1050L, STAB TRIM CIRCUIT</b>				
D44381J		AB1050L	POS 04	D44381P	W3381	YC053-YR328
D00381		M01659	1076/264/R005			YC053-YR328
<b>W3393</b>	<b>LG2</b>	<b>MACH TRIM SERVO, AB1050L TO STA 1156</b>				
D43393J		AB1050L	POS 02	D43393P	W5301	YC053-YR328
D00545		M00414	1164/276/			YC053-YR328
<b>W3397</b>	<b>LA3</b>	<b>AUTOPILOT AB1050L TO ELEV AND RUD PCU SYSTEM -A</b>				
D43397J		AB1050L	POS 03	D43397P	W3377	YC053-YN236, YN501-YR328
D43387J		AB1080	POS 02	D43387P	W3387	YC053-YD158, YL951-YN236, YN501-YR328
D43387J		AB1080	POS 02	D43387P		YD160-YD170
D01711		M00929	1158/258/R010			YC053-YN236, YN501-YR328
D01829		M00958	1160/274/R005			YC053-YN236, YN501-YR328
D01681		M01020	1165/278/L007			YC053-YN236, YN501-YR328
D02205		M01192	1164/268/L008			YC053-YN236, YN501-YR328
D11409		M02373	1085/264/L027			YC053-YN236, YN501-YR328
D01861		S00771	1165/282/L010			YC053-YN236, YN501-YR328
<b>W3399</b>	<b>RB3</b>	<b>AUTOPILOT AB1050R ELEV AND STANDBY RUDDER PCU, SYSTEM - B</b>				
D43399J		AB1050R	POS 04	D43399P	W3379	YC053-YN236, YN501-YR328
D43389J		AB1080	POS 03	D43389P	W3389	YC053-YD158, YL951-YN236, YN501-YR328
D43389J		AB1080	POS 03	D43389P		YD160-YD170
D01679		M00929	1158/258/R010			YC053-YN236, YN501-YR328
D01677		M00958	1160/274/R005			YC053-YN236, YN501-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3390

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3399</b>	<b>RB3</b>	<b>AUTOPILOT AB1050R ELEV AND STANDBY RUDDER PCU, SYSTEM - B (continued)</b>				
D01687		M01022	1161/287/L007			YC053-YN236, YN501-YR328
D02207		M01193	1164/268/R008			YC053-YN236, YN501-YR328
D01857		S00773	1158/287/L010			YC053-YN236, YN501-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3390

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3419	NN2	EMERGENCY LOCATOR TRANSMITTER				
I D10715		(PROV) ELT				YC051-YD170
I D10717		(PROV) ELT				YC051-YD170
I D04889J		AB0288	POS 03	D04889P	W2589	ALL
I D03003		M01523	794/301/L010			ALL
I D11993		M02114	794/301/L010			YL951-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3410

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3477	NN2	IFE -(BSI) DIGITAL VIDEO SYSTEM INTEGRATION				
I D12897J		AB0366	POS 01	D12897P		YN501-YR301
I D12897J		AB0366	POS 01	D12897P	W3599	YR303-YR328
D45449J		AB0366	POS 02	D45449P		YN501-YR301
I D45449J		AB0366	POS 02	D45449P	W3599	YR303-YR328
D40011J		AB0366	POS 03	D40011P		YN501-YR301
I D40011J		AB0366	POS 03	D40011P	W3599	YR303-YR328
I D12899J		AB0373	POS 01	D12899P		YN501-YR328
I D12887J		AB0373	POS 02	D12887P	W3639	YN501-YR328
D12883J		AB0373	POS 03	D12883P	W3639	YN501-YR301
I D12883J		AB0373	POS 03	D12883P	W3695	YR303-YR328
I D12885J		AB0373	POS 04	D12885P	W3639	YN501-YR328
D12889J		AB0373	POS 05	D12889P		YN501-YR301
I D12889J		AB0373	POS 05	D12889P	W3695	YR303-YR328
D12891J		AB0373	POS 06	D12891P		YN501-YR301
I D12891J		AB0373	POS 06	D12891P	W3639	YR303-YR328
I D12893J		AB0373	POS 07	D12893P		YN501-YR328
I D12895J		AB0373	POS 08	D12895P		YN501-YR328
I D45227P		AE0103A	POS 16	D45227J	W0131	YN501-YR328
I D45912P		AE0801B	POS 06	D45912J	W0811	YN501-YR328
I D45167P		AE0801B	POS 08	D45167J	W0811	YN501-YR328
I D45169P		AE0801B	POS 12	D45169J		YN501-YR328

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W3470

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3497	NN2	IFE - (BSI) SERVER BASED SYSTEM PSU OVERHEAD VIDEO				
I D45425J				D45425P	W3669	YN501-YR328
I D45433J				D45433P	W3671	YN501-YR328
I D45421J		AB0369L	POS 01	D45421P	W3657	YN501-YR328
I D45427J		AB0369L	POS 02	D45427P	W3657	YN501-YR328
I D45429J		AB0376R	POS 01	D45429P	W3659	YN501-YR328
I D45435J		AB0376R	POS 02	D45435P	W3659	YN501-YR328
I D45441P		AE0801B	POS 04	D45441J		YN501-YR328
I D45439P		AE0801B	POS 05	D45439J		YN501-YR328
I D45195P		AE0801B	POS 10	D45195J	W0811	YN501-YR328
I D45199P		AE0801B	POS 11	D45199J	W0811	YN501-YR328
I D45233P		AP0600A	POS 07	D45233J	W0054	YN501-YR324
I D45233P		AP0600A	POS 07	D45233J		YR325-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3490

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3509	LA2	HF-1 E8-1 TO STA 1030				
I D04227J		AB1030A	POS 03	D04227P	W7057	YC051-YD170
I D08509P		AE0801A	POS 03	D08509J	W0811	YC051-YD170

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3500

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3511</b>	<b>LA2</b>	<b>HF-2 E8-1 TO STA 1030</b>				
D04245J		AB1030A	POS 01	D04245P	W7061	YD158-YD170
D08811P		AE0801A	POS 07	D08811J	W0811	YD158-YD170
<b>W3517</b>	<b>NA2</b>	<b>HF-1 E8-1 TO STA 1030 ANT FEED</b>				
D04217J		AB1030A	POS 04	D04217P	W7761	YC051-YD170
D08517P		AE0801D	POS 03	D08517J	W0811	YC051-YD170

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3510

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3523</b>	<b>NA2</b>	<b>HF-2 E8-1 COAX TO STA 1030 ANT FEED</b>				
D04713J		AB1030A	POS 02	D04713P	W7763	YD158-YD170
D08823P		AE0801D	POS 05	D08823J	W0811	YD158-YD170

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3520

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3553	LN2	HF-1 E6-2 TO STA 1030				
I D04227J		AB1030A	POS 03	D04227P	W7057	YL951-YR328
I D40121P		AE0602A	POS 12	D40121J	W0621	YL951-YR328
I W3555	RN2	HF-2 E6-2 TO STA 1030				
I D04245J		AB1030A	POS 01	D04245P	W7061	YL951-YR328
I D40125P		AE0602A	POS 11	D40125J	W0621	YL951-YR328
I W3557	NA2	HF-1 E6-2 TO STA 1030 ANT FEED				
I D04217J		AB1030A	POS 04	D04217P	W7761	YL951-YR328
I D40123P		AE0602A	POS 02	D40123J	W0621	YL951-YR328
I W3559	NA2	HF-2 E6-2 COAX TO STA 1030 ANT FEED				
I D04713J		AB1030A	POS 02	D04713P	W7763	YL951-YR328
I D40127P		AE0602A	POS 01	D40127J	W0621	YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3550

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3577	NN2	VIDEO CONTROL CENTER TO EE-BAY, AIRSHOW				
I D45287J		AB0373	POS 02	D45287P	W3599	YC051-YL999
D45297J		AB0858	POS 02	D45297P	W3349	YN231-YN260
I D43277P		AE0302A	POS 01	D43277J	W0321	YC051-YD170
D43279P		AE0302A	POS 29	D43279J	W0321	YD158-YD170
D40151P		AE0401A	POS 14	D40151J	W0411	YL951-YN260

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3570

Page 1 End

Nov 12/2012

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>I W3583</b>	<b>NN2</b>	<b>VIDEO - VCC TO DISC BRACKET (NEAR CLUSTER 3) AND TO AB0340B</b>				
I D12213J				D12213P	W5303	YL951-YN260
I D45253J				D45253P	W3589	YC051-YD170
I D45231J		AB0340B	POS 08	D45231P	W5303	YC051-YN260
I D45281J		AB0373	POS 01	D45281P	W3599	YC051-YL999
I D45283J		AB0373	POS 03	D45283P	W3599	YC051-YL999
D45289J		AB0858	POS 01	D45289P		YL951-YL999
D45289J		AB0858	POS 01	D45289P	W3349	YN231-YN260
D45285J		AB0858	POS 03	D45285P		YL951-YL999
D45285J		AB0858	POS 03	D45285P	W3349	YN231-YN260
I D45275P		SIDEWALL		D45275J	W3591	YC051-YD170
D45275P		SIDEWALL		D45275J	W3605	YL951-YN260
<b>I W3589</b>	<b>LN2</b>	<b>VIDEO - AC &amp; DC POWER - P6 TO VCC AND TO VDU CLUSTERS 1 THRU 4</b>				
I D45253P				D45253J	W3583	YC051-YD170
I D45259P				D45259J	W3591	YC051-YD170
I D45269P				D45269J	W3071	YC051-YD170
I D45271P				D45271J	W3591	YC051-YD170
I D45273P				D45273J	W3073	YC051-YD170
I D45233P		AP0600A	POS 03	D45233J	W0044	YC051-YD170

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W3580

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W3591	NN2	VIDEO - DISC BRKT (NEAR CLUSTER 3) - TO VDU CLUSTERS 1 & 3				
D45259J				D45259P	W3589	YC051-YD170
D45271J				D45271P	W3589	YC051-YD170
D10201		M1934				YC051-YD170
D10265		M1942				YC051-YD170
D45275J		SIDEWALL		D45275P	W3583	YC051-YD170
W3599	NN2	IFE - HDD-OML IN FULL-HEIGHT CLOSET OR G7 GALLEY (STA349-365L)				
D10001P				D10001J	W3001	YC051-YD155
D10001P				D10001J	W3207	YD157
D10003P				D10003J	W3001	YC051-YD155
D10003P				D10003J	W3207	YD157
DB13357			350/ /			YR303-YR328
D10657A			356/268/L036			YD158-YL999
D10657B			356/268/L036			YD158-YL999
D10657C			356/268/L036			YD158-YL999
D12897P		AB0366	POS 01	D12897J	W3477	YR303-YR328
D45449P		AB0366	POS 02	D45449J	W3477	YR303-YR328
D40011P		AB0366	POS 03	D40011J	W3477	YR303-YR328
D45281P		AB0373	POS 01	D45281J	W3583	YC051-YL999
D45287P		AB0373	POS 02	D45287J	W3577	YC051-YL999
D45283P		AB0373	POS 03	D45283J	W3583	YC051-YL999
D10333		M02001	369/263/L039			YC051-YD157
D10657		M02065	/ /			YD158-YL999
D10659		M02066	VCC/ /			YD158-YL999
D10661		M02067	/ /			YD158-YD170
DA13357		M02886				YR303-YR328
D10667		M2065				YC051-YD157
D10669		M2065				YC051-YD157
D10671		M2065				YC051-YD157
D10673		M2065				YC051-YD157
D10675		M2065				YC051-YD157
D10659		M2066				YC051-YD157
D10661		M2067				YC051-YD157

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W3590

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3605</b>	<b>NN2</b>	<b>VIDEO - P6 TO VDU TRAYS &amp; DISC BRKT STA 691, TO VDU TRAYS 1 &amp; 4</b>				
D45233P		AP0600A	POS 03	D45233J	W0044	YL951-YN260
D10227		LAST VDU				YL951-YN260
D10283		LAST VDU				YL951-YN260
D10201		M01934	450/295/L035			YL951-YN260
D10233		M01938	500F+10/295/L035			YL951-YN260
D10265		M01942	710/295/L035			YL951-YN260
D10297		M01946	777/295/L035			YL951-YN260
D45275J		SIDEWALL		D45275P	W3583	YL951-YN260
<b>W3607</b>	<b>NA2</b>	<b>GPS ANT-1</b>				
D42941J		AE0102B	POS 08	D42941P	W0121	ALL
D02941		M02103	500A/316/L005			ALL
<b>W3609</b>	<b>NB2</b>	<b>GPS ANT-2</b>				
D42943J		AE0102B	POS 03	D42943P	W0141	ALL
D02947		M02102	500A/316/R005			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3600

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3653</b>	<b>NN2</b>	<b>VIDEO CONTROL CENTER - GALLEY G3 (STA 916-940)</b>				
D10657A			356/268/L036			YN231-YN260
D10657B			356/268/L036			YN231-YN260
D10657C			356/268/L036			YN231-YN260
D45139P		AB0913	POS 01	D45139J	W3349	YN231-YN260
D45145P		AB0913	POS 02	D45145J	W3349	YN231-YN260
D45129P		AB0913	POS 03	D45129J	W3349	YN231-YN260
D10657		M02065	/ /			YN231-YN260
D10659		M02066	VCC/ /			YN231-YN260
<b>W3657</b>	<b>NN2</b>	<b>IFE - (BSI) SERVER BASED SYSTEM PSU - OVERHEAD VIDEO LEFT FORWARD</b>				
D45421P		AB0369L	POS 01	D45421J	W3497	YN501-YR328
D45427P		AB0369L	POS 02	D45427J	W3497	YN501-YR328
D41052P		AB0369L	POS 03	D41052J	W3162	YN501-YR328
D12955		M02901	357.5/270/L042			YN501-YR328
D12957		M02901	357.5/270/L042			YN501-YR328
D12959		M02901	357.5/270/L042			YN501-YR328
D12961		M02901	357.5/270/L042			YN501-YR328
D12971		M02903	475/270/L042			YN501-YR328
D12973		M02903	475/270/L042			YN501-YR328
D12975		M02903	475/270/L042			YN501-YR328
D12977		M02903	475/270/L042			YN501-YR328
D12987		M02909	500B+6/270/L042			YN501-YR328
D12989		M02909	500B+6/270/L042			YN501-YR328
D12991		M02909	500B+6/270/L042			YN501-YR328
D12993		M02909	500B+6/270/L042			YN501-YR328
D13005		M02911	500G+1/270/L042			YN501-YR328
D13007		M02911	500G+1/270/L042			YN501-YR328
D13009		M02911	500G+1/270/L042			YN501-YR328
D13011		M02911	500G+1/270/L042			YN501-YR328
D13021		M02913	547/270/L042			YN501-YR328
D13023		M02913	547/270/L042			YN501-YR328
D13025		M02913	547/270/L042			YN501-YR328
<b>W3659</b>	<b>NN2</b>	<b>IFE - (BSI) SERVER BASED SYSTEM PSU - OVERHEAD VIDEO RIGHT FORWARD</b>				
D45429P		AB0376R	POS 01	D45429J	W3497	YN501-YR328
D45435P		AB0376R	POS 02	D45435J	W3497	YN501-YR328
D41056P		AB0376R	POS 03	D41056J	W4162	YN501-YR328
D12963		M02902	376/270/R042			YN501-YR328
D12965		M02902	376/270/R042			YN501-YR328

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W3650

Page 1

Nov 12/2012





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W3659	NN2	IFE - (BSI) SERVER BASED SYSTEM PSU - OVERHEAD VIDEO RIGHT FORWARD (continued)				
D12967		M02902	376/270/R042			YN501-YR328
D12969		M02902	376/270/R042			YN501-YR328
D12979		M02904	456/270/R042			YN501-YR328
D12981		M02904	456/270/R042			YN501-YR328
D12983		M02904	456/270/R042			YN501-YR328
D12985		M02904	456/270/R042			YN501-YR328
D12995		M02910	500B+21/270/R042			YN501-YR328
D12997		M02910	500B+21/270/R042			YN501-YR328
D12999		M02910	500B+21/270/R042			YN501-YR328
D13001		M02910	500B+21/270/R042			YN501-YR328
D13013		M02912	556/270/R042			YN501-YR328
D13015		M02912	556/270/R042			YN501-YR328
D13017		M02912	556/270/R042			YN501-YR328
D13019		M02912	556/270/R042			YR301-YR328
D13029		M02914	547/270/R042			YR301-YR328
D13031		M02914	547/270/R042			YR301-YR328
D13033		M02914	547/270/R042			YR301-YR328

## MASTER BUNDLE LIST

D280A108

91-21-13

Section W3650

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3669	NN2	IFE - (BSI) SERVER BASED SYSTEM PSU - OVERHEAD VIDEO LEFT AFT				
I D45425P				D45425J	W3497	YN501-YR328
I D41054P			652/270/L030	D41054J	W3162	YN501-YR328
I D45451P			844/303/L011	D45451J	W3671	YN501-YR328
I D13011		M02911	500G+1/270/L042			YN501
I D13027		M02913	547/270/L042			YR301-YR328
I D13037		M02917	656/270/L042			YN501-YR328
I D13039		M02917	656/270/L042			YN501-YR328
I D13041		M02917	656/270/L042			YN501-YR328
I D13043		M02917	656/270/L042			YN501-YR328
I D13053		M02919	727+19/270/L042			YN501-YR328
I D13055		M02919	727+19/270/L042			YN501-YR328
I D13057		M02919	727+19/270/L042			YN501-YR328
I D13059		M02919	727+19/270/L042			YN501-YR328
I D13085		M02925	727E+5/270/L042			YN501-YR328
I D13087		M02925	727E+5/270/L042			YN501-YR328
I D13089		M02925	727E+5/270/L042			YN501-YR328
I D13091		M02925	727E+5/270/L042			YN501-YR328
I D13101		M02927	727I+4/270/L042			YN501-YR328
I D13103		M02927	727I+4/270/L042			YN501-YR328
I D13105		M02927	727I+4/270/L042			YN501-YR328
I D13107		M02927	727I+4/270/L042			YN501-YR328
I D13221		M02929	798/270/L042			YR301-YR328
I D13223		M02929	798/270/L042			YR301-YR328
I D13225		M02929	798/270/L042			YR301-YR328
I D13227		M02929	798/270/L042			YR301-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3660

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3671	NN2	IFE - (BSI) SERVER BASED SYSTEM PSU - OVERHEAD VIDEO RIGHT AFT				
I D45433P				D45433J	W3497	YN501-YR328
I D41058P			650/270/R030	D41058J	W4162	YN501-YR328
I D45451J			844/303/L011	D45451P	W3669	YN501-YR328
I D13019		M02912	556/270/R042			YN501
I D13035		M02914	547/270/R042			YR301-YR328
I D13045		M02918	656/270/R042			YN501-YR328
I D13047		M02918	656/270/R042			YN501-YR328
I D13049		M02918	656/270/R042			YN501-YR328
I D13051		M02918	656/270/R042			YN501-YR328
I D13061		M02920	727+19/270/R042			YN501-YR328
I D13063		M02920	727+19/270/R042			YN501-YR328
I D13065		M02920	727+19/270/R042			YN501-YR328
I D13067		M02920	727+19/270/R042			YN501-YR328
I D13093		M02926	727E+8/270/R042			YN501-YR328
I D13095		M02926	727E+8/270/R042			YN501-YR328
I D13097		M02926	727E+8/270/R042			YN501-YR328
I D13099		M02926	727E+8/270/R042			YN501-YR328
I D13109		M02928	727I+4/270/R042			YN501-YR328
I D13111		M02928	727I+4/270/R042			YN501-YR328
I D13113		M02928	727I+4/270/R042			YN501-YR328
I D13115		M02928	727I+4/270/R042			YN501-YR328
I D13229		M02930	798/270/R042			YR301-YR328
I D13231		M02930	798/270/R042			YR301-YR328
I D13233		M02930	798/270/R042			YR301-YR328
I D13235		M02930	798/270/R042			YR301-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3670

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3695	NN2	IFE -(BSI) BRKT AB0373 JUMPER BUNDLE FOR HDD-OML				
I D12883P		AB0373	POS 03	D12883J	W3477	YR303-YR328
I D12889P		AB0373	POS 05	D12889J	W3477	YR303-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3690

Page 1 End

Nov 12/2012

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3701</b>	<b>NN2</b>	<b>VIU/CIU BRACKET STA 344 TO CAMERA 1 BRACKET STA 2XX</b>				
D37001J		AB0288	POS 04	D37001P	W3801	YL951-YR328
D40351J		AB0358	POS 02	D40351P	W3805	YL951-YR328
<b>W3702</b>	<b>NN2</b>	<b>VIU/CIU BRACKET STA 344 TO CAMERA 2 BRACKET STA 2XX</b>				
D40353J		AB0358	POS 01	D40353P	W3805	YL951-YR328
D37002J		AB0358	POS 05	D37002P	W3802	YL951-YR328
<b>W3703</b>	<b>NN2</b>	<b>VIU/CIU BRACKET STA 344 TO CAMERA 3 BRACKET STA 2XX</b>				
D40355J		AB0358	POS 06	D40355P	W3805	YL951-YR328
D37003J		DISC BRKT		D37003P	W3803	YL951-YR328
<b>W3704</b>	<b>NN2</b>	<b>TRANSFORMER BKT STA 340 TO QUICK DISC. STA 235 (CAPT. VIDEO DISPLAY)</b>				
D10030J		AP0900A	POS 25	D10030P	W0001	YL951, YN231
D10030P		AP0900A	POS 25	D10030J	W0001	YL952-YL999, YN232-YR328 YL951-YN260 YN501-YR328
D12241		T3021				
D14818		T3028				
<b>W3705</b>	<b>NN2</b>	<b>TRANSFORMER BKT STA 340 TO AP0900A (CTR. VIDEO DISPLAY)</b>				
D10034J		AP0900A	POS 27	D10034P	W0003	YL951, YN231
D10034P		AP0900A	POS 27	D10034J	W0003	YL952-YL999, YN232-YR328 YL951-YN260 YN501-YR328
D12245		T3022				
D14820		T3029				
<b>W3706</b>	<b>NN2</b>	<b>TRANSFORMER BKT STA 340 TO QUICK DISC. STA 235 (F/O VIDEO DISPLAY)</b>				
D10032J		AP0900A	POS 26	D10032P	W0003	YL951, YN231
D10032P		AP0900A	POS 26	D10032J	W0003	YL952-YL999, YN232-YR328 YL951-YN260 YN501-YR328
D12249		T3023				
D14822		T3030				
<b>W3707</b>	<b>NN2</b>	<b>VIU/CIU BRACKET STA 344 TO CAPT EFB STA 205</b>				
D40361J		AB0358	POS 03	D40361P		YN231-YN260
<b>W3708</b>	<b>NN2</b>	<b>VIU/CIU BRACKET STA 344 TO F/O EFB STA 205</b>				
D40359J		AB0358	POS 04	D40359P		YN231-YN260

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W3700

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3709	NN2	VIU/CIU BRACKET STA 344 TO THE CAMERA CONTROL PANEL IN THE P8 PANEL				
I D40357J		AB0358	POS 07	D40357P	W3805	YL951-YR328
I D12237		M3000				YL951-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3700

Page 2 End

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3710	NN2	VIU/CIU BRACKET STA 344 TO THE TRANSFORMER'S BRACKETS STA 340				
I D40365J		AB0358	POS 08	D40365P	W3805	YL951-YR328
D12239		T3021				YL951-YN260
D12243		T3022				YL951-YN260
D12247		T3023				YL951-YN260
I D12877		T3028				YN501-YR328
I D12879		T3029				YN501-YR328
I D12881		T3030				YN501-YR328

For training purposes only!

## MASTER BUNDLE LIST

D280A108

91-21-13

Section W3710

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3801</b>	<b>NN2</b>	<b>CAMERA 1 BRACKET STA 288 TO CAMERA 1 STA 285</b>				
D37001P		AB0288	POS 04	D37001J	W3701	YL951-YR328
D12325		M3002				YL951-YR328
<b>W3802</b>	<b>NN2</b>	<b>VIU/CIU BRACKET STA 358 TO CAMERA 2 STA 340</b>				
D37002P		AB0358	POS 05	D37002J	W3702	YL951-YR328
D12327		M3003				YL951-YN260
D11423		M3026				YN501-YR328
<b>W3803</b>	<b>NN2</b>	<b>CAMERA 3 BRACKET STA 352 TO CAMERA 3 STA 333</b>				
D37003P		DISC BRKT		D37003J	W3703	YL951-YR328
D12329		M3004				YL951-YR328
<b>W3805</b>	<b>NN2</b>	<b>VIU/CIU BRACKET STA 358 TO VIDEO CONTROL UNIT STA 344</b>				
D40353P		AB0358	POS 01	D40353J	W3702	YL951-YR328
D40351P		AB0358	POS 02	D40351J	W3701	YL951-YR328
D40355P		AB0358	POS 06	D40355J	W3703	YL951-YR328
D40357P		AB0358	POS 07	D40357J	W3709	YL951-YR328
D40365P		AB0358	POS 08	D40365J	W3710	YL951-YR328
D40349P		AB0358	POS 09	D40349J	W3144	YL951-YR328
D12317		M3001				YL951-YN260
D12319		M3001				YL951-YN260
D12321		M3001				YL951-YN260
D12323		M3001				YL951-YN260
D12859		M3029				YN501-YR328
D12861		M3029				YN501-YR328
D12863		M3029				YN501-YR328
D12865		M3029				YN501-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3800

Page 1 End

Nov 12/2012





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3895	NA2	ATC TOP ANT E1 RACK (S942) TO STA 430.25 (M1406)				
I D02529		M01406	430/ /			ALL
I D02703		S00942	316/163/L025			ALL

For training purposes only!

---

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W3890

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W3901	NN2	COAX ASSY - ELT ANTENNA				
I D02907		M01522	797/306/L005			YL951-YR328
I D02905		M01523	794/301/L010			YL951-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W3900

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W4001	NN2	TCAS TOP ANTENNA (E1-1 SHELF)				
I D04625P		AB0387	POS 01	D04625J	W4009	ALL
I D04627P		AB0387	POS 02	D04627J	W4009	ALL
I D04629P		AB0387	POS 03	D04629J	W4009	ALL
I D04633P		AB0387	POS 04	D04633J	W4009	ALL
I D04611P		AE0101B	POS 15	D04611J	W0111	ALL
I D04609P		AE0101B	POS 16	D04609J	W0111	ALL
I D04615P		AE0101B	POS 17	D04615J	W0111	ALL
I D04613P		AE0101B	POS 18	D04613J	W0111	ALL
I W4009	NN2	TCAS TOP ANTENNA				
I D04625J		AB0387	POS 01	D04625P	W4001	ALL
I D04627J		AB0387	POS 02	D04627P	W4001	ALL
I D04629J		AB0387	POS 03	D04629P	W4001	ALL
I D04633J		AB0387	POS 04	D04633P	W4001	ALL
I D02745		M01486	385/ /			ALL
I D02747		M01486	385/ /			ALL
I D02749		M01486	385/ /			ALL
I D02751		M01486	385/ /			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W4000

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4110</b>	<b>NB2</b>	<b>PASS CAB TEMP SENSOR(M2814) TO STA 413 (CEILING) NB2 (BSI)</b>				
D41431J				D41431P	W4142	YN501
D14732		M2814				YN501
D14734		M2814				YN501
D14736		M2814				YN501
<b>W4116</b>	<b>NN2</b>	<b>FWD PASS CAB TEMP SENSOR (M2847) TO STA 410 (CEILING)</b>				
D41027J				D41027P	W6288	YR301-YR328
D15016		M02847	410/274/R044			YR301-YR328
D15018		M02847	410/274/R044			YR301-YR328
D15020		M02847	410/274/R044			YR301-YR328
<b>W4118</b>	<b>NN2</b>	<b>AFT PASS CAB TEMP SENSOR (M2848) TO STA 410 (CEILING)</b>				
D41028J				D41028P	W6288	YR301-YR328
D15022		M02848	727G+11/274/R044			YR301-YR328
D15024		M02848	727G+11/274/R044			YR301-YR328
D15026		M02848	727G+11/274/R044			YR301-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W4110

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W4134	LA2	AB1050R TO VERTICAL STAB				
D40842J		AB1050L	POS 01	D40842P	W6134	YC053-YN236, YN501-YR328
D40842J		AB1050L	POS 01	D40842P		YN237-YN260
D40268J		AB1080	POS 01	D40268P	W6136	YC053-YD158, YL951-YR328
D40268J		AB1080	POS 01	D40268P		YD160-YD170
I D00756		S00126	1084/266/R018			YC053-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W4130

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4140</b>	<b>NB2</b>	<b>PASS CAB TEMP SENSOR (M1719) TO STA 405 (CEILING) NB2</b>				
D41436J				D41436P	W4142	YN231-YN260
D10960		M1719				YN231-YN260
D10962		M1719				YN231-YN260
D10964		M1719				YN231-YN260
<b>W4142</b>	<b>LB2*</b>	<b>EMERGENCY EXIT LIGHT - RIGHT</b>				
D07170P				D07170J	W3144	ALL
D07180P				D07180J	W4250	ALL
D07184J				D07184P	W4146	YD158-YN260
D07186J				D07186P	W3146	YD158-YN260
D07192J				D07192P	W3142	YN501
D07194J				D07194P	W3142	YN501
D07198P				D07198J	W3142	YN231-YN260
D11092				D11344		YC051-YD170
D11094				D11344		YN231-YN260
D11098				D11344		YC051-YN260
D11102				D11344		YN231-YN260
D11328				D11344		YN231-YN260
D11332				D11344		YN231-YN260
D11336				D11344		YN231-YN260
D12012				D11344		YC051-YL999
D12014				D11344		YC051-YD170
D12020				D11344		YC051-YL999
D12022				D11344		YC051-YL999
D12024				D11344		YC051-YL999
D12026				D11344		YC051-YL999
D12044				D11344		YC051-YL999
D12060				D11344		YC051-YL999
D12246				D11344		YC051-YL999
D12488				D11344		YC051-YL999
D14696				D14816		YN501
D14700				D14816		YN501-YR328
D14708				D14816		YN501-YR314, YR317-YR318, YR320-YR328
D14716				D14816		YN501
D14826				D14816		YR301-YR328
D14830				D14816		YR301-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W4140

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4142</b>	<b>LB2*</b>	<b>EMERGENCY EXIT LIGHT - RIGHT (continued)</b>				
D14832				D14816		YR301-YR314, YR317-YR318, YR320-YR328 YR301-YR328
D14836				D14816		YR301-YR328
D40005J				D40005P	W3309	ALL
D40007J				D40007P	W3309	ALL
D40040P				D40040J	W0352	ALL
D40042P				D40042J	W0342	ALL
D40046P				D40046J	W0442	ALL
D40086J				D40086P	W3142	YC051-YD157
D40098P				D40098J	W3142	YC051-YL999, YR301-YR328
D40100P				D40100J	W3142	YC051-YN501
D41431P				D41431J	W4110	YN501
D41436P				D41436J	W4140	YN231-YN260
D46438J				D46438P	W3142	YC051-YL999, YR301-YR328
D46440J				D46440P	W3142	ALL
D14824			500+18/298/R007			YR301-YR328
D14706			698/289/R006			YN501-YR314, YR317-YR318, YR320-YR328
D14708			727+10/295/R023			YR315-YR316, YR319
D14714			727D+8/289/R006			YN501-YR314, YR317-YR318, YR320-YR328
D14832			727F+5/295/R023			YR315-YR316, YR319
D40096J		AB0340B	POS 01	D40096P	W3142	ALL
D40292J		AB0340B	POS 06	D40292P	W5160	YC051-YD158, YL951-YR328
D40292J		AB0340B	POS 06	D40292P		YD160-YD170
D40296J		AB0340B	POS 07	D40296P	W2114	ALL
D11076		L00007	651/226/R074			YN231-YN501
D12018		L00007	651/226/R074			YC051-YL999, YR301-YR328
D11072		L00730	348/227/R068			ALL
D11084		L00733	1000/242/R060			ALL
D12458		L00751	MULTI/ /			YC051-YL999
D12464		L00751	MULTI/ /			YC051-YN260
D03658		L01186	293/230/R051			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W4140

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4142</b>	<b>LB2*</b>	<b>EMERGENCY EXIT LIGHT - RIGHT (continued)</b>				
D03660		L01186	293/230/R051			ALL
D03662		L01187	304/230/L051			ALL
D03664		L01187	304/230/L051			ALL
D03666		L01188	614/223/R062			ALL
D03668		L01188	614/223/R062			ALL
D10086		L01191	993/244/R053			ALL
D10088		L01191	993/244/R053			ALL
D12064		L01207	576/224/R062			YC051-YL999, YR301-YR328
D12066		L01207	576/224/R062			YC051-YL999, YR301-YR328
D12050		L01209	608/227/R074			YC051-YL999, YR301-YR328
D12392		L01358	642/224/R070			YN231-YN501
D12394		L01358	642/224/R070			YN231-YN501
D12430		L01358	642/224/R070			YC051-YL999, YR301-YR328
D12432		L01358	642/224/R070			YC051-YL999, YR301-YR328
D12454		L01365	MULTI/ /			YC051-YL999, YR301-YR328
D12456		L01365	MULTI/ /			YC051-YL999, YR301-YR328
D12460		L01365	MULTI/ /			ALL
D12462		L01365	MULTI/ /			ALL
D14690		L01505	403/289/R006			YN501-YR328
D14706		L01513	697/289/R006			YR315-YR316, YR319
D14714		L01517	727D+8/289/R006			YR315-YR316, YR319
D14722		L01521	877/289/R006			YN501-YR328
D10126		M01386	490/208/L068			YC051-YD157
D10714		M01669	603/212/R067			YN231-YN501
D12004		M01671	727C+13/212/R068			YC051-YL999, YR301-YR328
D10744		M01672	952/290/R014			ALL
D10748		M01674	322/291/R007			YC051-YN260
D10750		M01675	322/291/L007			ALL
D12002		M01676	500C+7/213/R067			YC051-YL999, YR301-YR328
D12010		M01695	565/213/R068			YC051-YL999, YR301-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W4140

Page 3

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4142</b>	<b>LB2*</b>	<b>EMERGENCY EXIT LIGHT - RIGHT (continued)</b>				
D11048		M01744	568/297/R031			ALL
D12544		M02174	617/251/R066			ALL
D12546		M02174	617/251/R066			ALL
D12560		M02178	579/251/R066			YC051-YL999, YR301-YR328
D12562		M02178	579/251/R066			YC051-YL999, YR301-YR328
D12652		M02201	638/251/R066			ALL
D12654		M02201	638/251/R066			ALL
D12656		M02202	581/229/R069			ALL
D12658		M02202	581/229/R069			ALL
D12660		M02203	598/229/R069			ALL
D12662		M02203	598/229/R069			ALL
D12676		M02207	600/251/R066			YC051-YL999, YR301-YR328
D12678		M02207	600/251/R066			YC051-YL999, YR301-YR328
D12680		M02208	543/229/R069			YC051-YL999, YR301-YR328
D12682		M02208	543/229/R069			YC051-YL999, YR301-YR328
D12684		M02209	560/229/R069			YC051-YL999, YR301-YR328
D12686		M02209	560/229/R069			YC051-YL999, YR301-YR328
D14812		M02816	310/290/R006			YN501-YR328
D14724		M02837	637/269/59			YN501
D14840		M02837	637/269/59			YR301-YR328
D14724		M02838	627/269/59			YR301-YR328
D00094		T00402	538/299/R010			YN231-YN501
<b>W4146</b>	<b>LN2*</b>	<b>FLUORESCENT LIGHTING - RIGHT CEILING</b>				
D07184P				D07184J	W4142	YD158-YN260
D40018P				D40018J	W0144	YC051-YN260
D40184J				D40184P	W3144	YC051-YN260
D40990J				D40990P	W3158	YD158-YD170
D40996J				D40996P	W3158	YD158-YD170
D42002J				D42002P	W3158	YC051-YN260
D42004J				D42004P	W3158	YC051-YN260

## MASTER BUNDLE LIST

D280A108

91-21-13

Section W4140

Page 4

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4146</b>	<b>LN2*</b>	<b>FLUORESCENT LIGHTING - RIGHT CEILING (continued)</b>				
D42006J				D42006P	W3158	YC051-YD157, YL951-YN260
D11882			425/289/R031			YC051-YN260
D11884			483/289/R032			YC051-YN260
D11952			500B/289/R032			YC051-YL999
D11886			500C+3/289/R032			YN231-YN260
D11954			500E+13/289/R032			YC051-YL999
D11956			500I+5/289/R032			YC051-YL999
D11888			563/289/R032			YN231-YN260
D11958			585/289/R032			YC051-YL999
D11890			643/288/R032			YN231-YN260
D11960			665/288/R032			YC051-YL999
D11892			723/289/R032			YN231-YN260
D11962			727+18/289/R032			YC051-YL999
D11894			727C+16/289/R032			YN231-YN260
D11964			727D+16/289/R032			YC051-YL999
D11966			727H+8/289/R032			YC051-YL999
D11968			775/289/R032			YC051-YL999
D11896			785/289/R032			YN231-YN260
D11898			844/288/R031			YC051-YN260
D42008J		AB0340B	POS 02	D42008P	W3058	YC051-YD158, YL951-YN260
D42008J		AB0340B	POS 02	D42008P		YD160-YD170

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W4140

Page 5 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4160</b>	<b>NN2</b>	<b>FWD PASS CAB TEMP SENSOR (M1445) TO STA 405 (CEILING)</b>				
D41820J				D41820P	W6288	YC051-YL999
D03906		M01445	416/274/R031			YC051-YL999
D03908		M01445	416/274/R031			YC051-YL999
D03920		M01445	416/274/R031			YC051-YL999
<b>W4162</b>	<b>RN1</b>	<b>NS/FSB SIGN-VIDEO PANEL, FORWARD-RIGHT</b>				
D40862J				D40862P	W4258	YC051-YD170, YN501-YR328
D41058J				D41058P	W3671	YN501-YR328
D10343			367/270/R042			YD158-YD170
D10367			489/272/R033			YD158-YD170
D10415			500G/273/R054			YD158-YD170
D10391			587/273/R033			YD158-YD170
D10439			651/270/R042			YD158-YD170
D41056J		AB0376R	POS 03	D41056P	W3659	YN501-YR328
D10355		M02004	476/270/R042			YC051-YD157
D10367		M02006	478/270/R042			YC051-YD157
D10391		M02010	500C/270/R042			YC051-YD157
D10403		M02012	500G/270/R042			YC051-YD157
D10427		M02016	549/270/R042			YC051-YD157
<b>W4164</b>	<b>RN1</b>	<b>NS/FSB SIGN-VIDEO PANEL, AFT-RIGHT</b>				
D40864J				D40864P	W4258	YC051-YD170
D10463			727+14/270/R042			YD158-YD170
D10487			727A+15/270/R042			YD158-YD170
D10499			727D+5/273/R055			YD158-YD170
D10983			787/273/R055			YD158-YD170
D10523			886/270/R042			YC051-YD170
D10439		M02018	656/270/R042			YC051-YD157
D10463		M02022	727B+3/270/R042			YC051-YD157
D10475		M02024	727F+7/270/R042			YC051-YD157
D10499		M02028	727J+11/270/R042			YC051-YD157
D10511		M02030	798/270/R042			YC051-YD157
<b>W4166</b>	<b>LN2*</b>	<b>LED LIGHTING - CEILING/WASH RIGHT</b>				
D07162J				D07162P	W3144	YN501-YR328
D14494				D14448		YN501
D14496				D14682		YN501
D14500				D14688		YN501

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W4160

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W4166	LN2*	LED LIGHTING - CEILING/WASH RIGHT (continued)				
D14902				D14682		YR301-YR328
D14904				D14448		YR301-YR328
D14906				D14688		YR301-YR328
D14930				D14682		YR315-YR316, YR319
D14932				D14448		YR315-YR316, YR319
D14950				D14682		YR301-YR328
D14952				D14448		YR301-YR328
D14954				D14688		YR301-YR328
D15244				D14688		YR315-YR316, YR319
D15246				D14682		YR315-YR316, YR319
D15248				D14448		YR315-YR316, YR319
D15250				D14688		YR315-YR316, YR319
D15344				D14682		YN501
D15346				D14448		YN501
D15348				D14688		YN501
D41062J				D41062P	W3058	YN501-YR328
D41066J				D41066P	W3158	YN501-YR328
D41084J				D41084P	W3158	YN501-YR328
D41088P				D41088J	W0144	YN501-YR328
D14506		M02801	MULTI/296/27			YN501
D14510		M02801	MULTI/296/27			YN501
D14514		M02801	MULTI/296/27			YN501
D14518		M02801	MULTI/296/27			YN501
D14558		M02801	MULTI/296/27			YN501
D14562		M02801	MULTI/296/27			YN501
D14566		M02801	MULTI/296/27			YN501
D14570		M02801	MULTI/296/27			YN501
D14760		M02801	MULTI/296/27			YR301-YR328
D14784		M02801	MULTI/296/27			YR301-YR328
D14916		M02801	MULTI/296/27			YR301-YR328
D14918		M02801	MULTI/296/27			YR301-YR328
D14920		M02801	MULTI/296/27			YR301-YR328
D14922		M02801	MULTI/296/27			YR301-YR328
D14924		M02801	MULTI/296/27			YR301-YR328
D14940		M02801	MULTI/296/27			YR301-YR314, YR317-YR318, YR320-YR328
D14942		M02801	MULTI/296/27			YR301-YR328
D14944		M02801	MULTI/296/27			YR301-YR328
D14990		M02801	MULTI/296/27			YR301-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W4160

Page 2

Nov 12/2012

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4166</b>	<b>LN2*</b>	<b>LED LIGHTING - CEILING/WASH RIGHT (continued)</b>				
D14992		M02801	MULTI/296/27			YR301-YR328
D14994		M02801	MULTI/296/27			YR301-YR314, YR317-YR318, YR320-YR328
D15004		M02801	MULTI/296/27			YR301-YR328
D15006		M02801	MULTI/296/27			YR301-YR328
D15008		M02801	MULTI/296/27			YR301-YR328
D15010		M02801	MULTI/296/27			YR301-YR328
D15012		M02801	MULTI/296/27			YR301-YR328
D15292		M02801	MULTI/296/27			YR301-YR314, YR317-YR318, YR320-YR328
D15294		M02801	MULTI/296/27			YR301-YR314, YR317-YR318, YR320-YR328
D15308		M02801	MULTI/296/27			YR301-YR314, YR317-YR318, YR320-YR328
D15310		M02801	MULTI/296/27			YR301-YR314, YR317-YR318, YR320-YR328
D15334		M02801	MULTI/296/27			YN501
D15336		M02801	MULTI/296/27			YN501
D15338		M02801	MULTI/296/27			YN501
D15360		M02801	MULTI/296/27			YN501
D15362		M02801	MULTI/296/27			YN501
D15364		M02801	MULTI/296/27			YN501
D15368		M02801	MULTI/296/27			YR315-YR316, YR319
D15408		M02868	MULTI/296/27			YR315-YR316, YR319
D15410		M02868	MULTI/296/27			YR315-YR316, YR319
D15384		M02871	MULTI/296/27			YR315-YR316, YR319
D15386		M02871	MULTI/296/27			YR315-YR316, YR319
D15406		M02871	MULTI/296/27			YR315-YR316, YR319
D15418		M02871	MULTI/296/27			YR315-YR316, YR319
D15388		M02874	MULTI/296/27			YR301-YR328
D15402		M02874	MULTI/296/27			YR301-YR328
D15404		M02874	MULTI/296/27			YR301-YR328
D15414		M02874	MULTI/296/27			YR301-YR328
D15380		M02875	MULTI/296/27			YR301-YR328
D15382		M02875	MULTI/296/27			YR301-YR328

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W4160

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4166</b>	<b>LN2*</b>	<b>LED LIGHTING - CEILING/WASH RIGHT (continued)</b>				
D15412		M02875	MULTI/296/27			YR301-YR328
D14502		M02877	MULTI/296/27			YN501
D14504		M02877	MULTI/296/27			YN501
D14574		M02877	MULTI/296/27			YN501
D15340		M02878	MULTI/296/27			YN501
D15342		M02878	MULTI/296/27			YN501
D15356		M02878	MULTI/296/27			YN501
D15358		M02878	MULTI/296/27			YN501

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W4160

Page 4 End

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W4170	RA2*	AB0420A TO E3-1 SHELF				
I D40728P		AB0405B	POS 01	D40728J	W6170	ALL
I D40730P		AB0405B	POS 02	D40730J	W6172	ALL
I D40732P		AE0301A	POS 36	D40732J	W0313	ALL

For training purposes only!

## MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W4170

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W4180	NN2	AFT PASS CAB TEMP SENSOR (M1446) TO STA 7XX (CEILING)				
I D41834J				D41834P	W6288	YC051-YL999
I D03910		M01446	727G+13/274/R031			YC051-YL999
I D03912		M01446	727G+13/274/R031			YC051-YL999
I D03922		M01446	727G+13/274/R031			YC051-YL999

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W4180

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4190</b>	<b>NN1</b>	<b>P18/EE BAY TO ZONAL DRYER</b>				
D40208P		AP1800A	POS 11	D40208J	W0018	YD158-YD170
D13736		M02541	351/178/R034			YD158-YD170
D13738		M02542	874/171/L016			YD158-YD170
D13740		M02542	874/171/L016			YD158-YD170
D13742		M02543	927/171/L016			YD158-YD170
<b>W4192</b>	<b>RN1</b>	<b>NS/FSB SIGN-VIDEO PANEL, FORWARD-RIGHT</b>				
D40862J				D40862P	W4258	YL951-YN260
D12017			375/270/R042			YL951-YN260
D12029			443/270/R042			YL951-YN260
D12041			500/270/R042			YL951-YN260
D12053			500A+8/270/R042			YL951-YL999
D12065			500C/270/R042			YL951-YN260
D12089			557/270/R042			YL951-YL999
D12077			563/270/R042			YL951-YN260
<b>W4194</b>	<b>RN1</b>	<b>NS/FSB SIGN-VIDEO PANEL, AFT-RIGHT</b>				
D40864J				D40864P	W4258	YL951-YN260
D12101			670/270/R042			YL951-YN260
D12113			727+18/270/R042			YL951-YN260
D12125			727C+18/270/R042			YL951-YL999
D12137			727E+17/270/R042			YL951-YN260
D12149			830/270/R042			YL951-YN260
D12161			830/270/R042			YL951-YL999

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W4190

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4222</b>	<b>RN1</b>	<b>AB1050R DISCONNECT BRACKET TO STAB TRIM ACTUATOR</b>				
D40836J		AB1050R	POS 05	D40836P	W6222	YC053-YN236, YN501-YR323, YR325-YR328
D40836J D00700		AB1050R M01659	POS 05 1076/264/R005	D40836P		YR324 YC053-YN236, YN501-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W4220

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4246</b>	<b>RN2</b>	<b>LED LIGHTING - SIDEWALL RIGHT</b>				
D07177J				D07177P	W4258	YN501-YR328
D41070J				D41070P	W3058	YN501-YR328
D14594			419/269/R059			YN501-YR328
D14596			419/269/R059			YN501-YR328
D14606			419/269/R059			YN501-YR328
D14598			590/269/R059			YN501-YR328
D14600			628/269/R059			YN501-YR328
D14602			866/269/R059			YN501-YR328
D14604			866/269/R059			YN501-YR328
D14608			866/269/R059			YN501-YR328
D14656		M02806	MULTI/290/			YN501-YR328
<b>W4248</b>	<b>RN2</b>	<b>FLUORESCENT LIGHTING - RIGHT &amp; LEFT - SIDEWALL</b>				
D07174P				D07174J	W3058	YC051-YD158, YL951-YN260
D07174P				D07174J		YD160-YD170
D40210J				D40210P	W4258	YC051-YN260
D40212J				D40212P	W4258	YC051-YN260
D40214J				D40214P	W4258	YC051-YN260
D03784			417/271/R054			YC051-YN260
D03796			418/271/L054			YC051-YN260
D03798			422/271/L054			YC051-YN260
D03786			422/271/R054			YC051-YN260
D10014			590/269/L058			YC051-YL999
D10012			616/269/R58			YC051-YL999
D10010			616/270/R57			YC051-YL999
D10016			616/271/L056			YC051-YL999
D03846			639/269/L058			YN231-YN260
D03788			639/269/R058			YN231-YN260
D03790			643/271/R56			YN231-YN260
D03848			645/271/L056			YN231-YN260
D03792			863/271/R055			YC051-YN260
D03850			865/271/L55			YC051-YN260
D03794			867/271/R055			YC051-YN260
D03852			870/271/L55			YC051-YN260

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W4240

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W4250	RN2*	P18 AND AB0340B DISC TO RIGHT PSU'S				
I D07180J				D07180P	W4142	ALL
I D40072P				D40072J		ALL
I D40204J				D40204P	W4258	YC051-YN260
I D40205J				D40205P	W4258	YN501-YR328
I D40206J				D40206P	W4258	YC051-YN260
I D40207J				D40207P	W4258	YN501-YR328
I D40272P				D40272J	W3144	YC051-YL999, YR301-YR328
I D40272P				D40272J		YN231-YN501
I D11600			360/274/R051			ALL
I D11602			380/274/R051			ALL
I D11604			410/273/R052			ALL
I D11606			430/274/R051			ALL
I D11608			450/274/R051			ALL
I D11610			470/274/R051			ALL
I D11612			478/274/R051			ALL
I D11614			498/274/R051			ALL
I D11616			500A+12/274/R051			ALL
I D11618			500B+12/274/R051			ALL
I D11620			500C+12/274/R051			ALL
I D11622			500D+12/274/R051			YC051-YL999, YR301-YR328
I D11624			500E+16/274/R051			YC051-YL999, YR301-YR328
I D11626			500F+14/274/R051			YC051-YL999, YR301-YR328
I D11628			500G+10/274/R051			YC051-YL999, YR301-YR328
I D11630			500H+10/274/R051			ALL
I D11632			500I+16/273/R054			ALL
I D11634			545/274/R051			ALL
I D11636			565/274/R051			ALL
I D11638			588/274/R051			ALL
I D11640			611/274/R051			ALL
I D11642			630/274/R051			ALL
I D11644			660/274/R051			ALL
I D11646			680/274/R051			ALL
I D11648			700/274/R051			ALL
I D11650			718/274/R051			ALL
I D11652			727+10/274/R051			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W4250

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4250</b>	<b>RN2*</b>	<b>P18 AND AB0340B DISC TO RIGHT PSU'S (continued)</b>				
D11654			727A+16/272/R054			YC051-YL999, YR301-YR328
D11656			727B+10/274/R051			YC051-YL999, YR301-YR328
D11658			727C+18/272/R054			YC051-YL999, YR301-YR328
D11660			727D+10/274/R051			YC051-YL999, YR301-YR328
D11662			727E+10/274/R051			YC051-YL999, YR301-YR328
D11664			727F+10/274/R051			ALL
D11666			727G+10/274/R051			ALL
D11668			727H+10/274/R051			ALL
D11670			727I+16/272/R054			ALL
D11672			727J+10/274/R051			ALL
D11674			757/274/R051			YC051-YL999, YR301-YR328
D11676			785/274/R051			ALL
D11678			802/274/R051			ALL
D11680			822/274/R051			YC051-YL999, YR301-YR328
D11682			842/274/R051			YC051-YL999, YR301-YR328
D11684			865/274/R051			YC051-YL999, YR301-YR328
D11686			890/274/R051			YC051-YL999, YR301-YR328
D11688			924/274/R051			YC051-YL999, YR301-YR328
D11690			937/274/R051			YC051-YL999, YR301-YR328
D40084P		AB0340B	POS 04	D40084J	W4258	ALL
D40298P		AP1800A	POS 07	D40298J	W0018	ALL
<b>W4256</b>	<b>RN1*</b>	<b>P92 TO FWD GALLEY POWER</b>				
D01218			350/292/R025			YL951-YL999
D00570		AB0288	POS 01			ALL
D11458		P0092				ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W4250

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W4256	RN1*	P92 TO FWD GALLEY POWER (continued)				
D01218		VENDOR				YC051-YD170, YR301-YR328
W4258	RN1	AB0340B DISCONNECT TO RIGHT AFT OVERHEAD				
D07166P				D07166J	W3058	YN501-YR328
D07168P				D07168J	W3058	YN501-YR328
D07177P				D07177J	W4246	YN501-YR328
D07178P				D07178J	W3246	YN501-YR328
D40204P				D40204J	W4250	YC051-YN260
D40205P				D40205J	W4250	YN501-YR328
D40206P				D40206J	W4250	YC051-YN260
D40207P				D40207J	W4250	YN501-YR328
D40210P				D40210J	W4248	YC051-YN260
D40212P				D40212J	W4248	YC051-YN260
D40214P				D40214J	W4248	YC051-YN260
D40862P				D40862J	W4162	YC051-YD170, YN501-YR328
D40862P				D40862J	W4192	YL951-YN260
D40864P				D40864J	W4164	YC051-YD170
D40864P				D40864J	W4194	YL951-YN260
D40084J		AB0340B	POS 04	D40084P	W4250	ALL
D40202J		AB0340B	POS 09	D40202P	W6242	ALL

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W4250

Page 3 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4724</b>	<b>AD1</b>	<b>APU FIREWALL TO DISC BRACKET AB1050R</b>				
D44582P D44584P				D44582J D44584J	W7152 W7150	YN236, YN501-YR328 YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40854J		AB1050R	POS 03	D40854P	W5726	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D10434		AB1088				YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D10436		AB1088				YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40060J		AB1088	POS 05	D40060P	W7538	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
<b>W4726</b>	<b>AD1</b>	<b>AB1050R TO APU FIREWALL</b>				
D40790J		AB1050R	POS 01	D40790P	W5726	YC053-YR328
D40876J		AB1050R	POS 02	D40876P	W5726	YC053-YR328
D10912		AB1088				YC053-YR328
D11118		AB1088				YC053-YR328
D00922		M00299	1055/240/R037			YC053-YR328
D01176		M00404	1025/ /			YC053-YR328
D00594		M01146	713/ /			YC053-YR328
D01246		S00284	1055/240/R037			YC053-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W4720

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5001	NN2	TCAS BOTTOM ANTENNA (E1-1 SHELF)				
I D04619P		AE0101B	POS 19	D04619J	W0111	ALL
I D04617P		AE0101B	POS 20	D04617J	W0111	ALL
I D04623P		AE0101B	POS 21	D04623J	W0111	ALL
I D04621P		AE0101B	POS 22	D04621J	W0111	ALL
I D02753		M01487	305/ /			ALL
I D02755		M01487	305/ /			ALL
I D02757		M01487	305/ /			ALL
I D02759		M01487	305/ /			ALL
W5005	NN2	E5-2 TO E4-1 SHIP BUNDLE				
D40153P		AE0401A	POS 15	D40153J	W0411	YL951-YN260
D45367J		AE0502A	POS 13	D45367P	W0521	YL951-YN260

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5000

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5030	LA1	P91 TO T10 ANDP92				
I D03472		M01323	368/184/R049			ALL
I D11420		P0091				ALL
I D11800		P0091				ALL
I D11446		P0092				ALL
I W5032	SN2	MAIN WHEEL WELL TO E/E BAY VIA CROWN				
I D42104J		AB0727L	POS 01	D42104P	W1022	YC051-YN236, YN501-YR328
I D42104J		AB0727L	POS 01	D42104P		YN237-YN260
I D40162P		AE0101A	POS 15	D40162J	W0111	ALL
I W5036		P91/P92 TO TRU'S 1,2 & 3.				
I D11426		P0091				ALL
I D11736		P0092				ALL
I W5039	NA2	E1-2 TO S943 (D2709) COAX				
I D04607J		AE0102B	POS 01	D04607P	W0121	ALL
I D02709		S00943	316/163/L025			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5030

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5043	NN2	IFE - (BSI) SERVER BASED SYSTEM ARINC INTERFACES (E5-2 TO E8-1)				
I D45319J		AE0502A	POS 13	D45319P	W0521	YN501-YR328
I D45907P		AE0801B	POS 02	D45907J	W0811	YN501-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5040

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle	Sep	Description	Location	MW Connector	MW Bundle	Effectivity
Equip		Matewith				
I W5054	NN2	CARGO COMPT SMOKE DETECTOR JUMPER BUNDLE				
I D13844			MULTI/ /			YD160-YR328
I D13846			MULTI/ /			YD160-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5050

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5074	SB2	CARGO FIRE EXTINGUISHER BOTTLE 2 (M2263) TO AB500DL (POS 6)				
I D46608P		AB0500DL	POS 06	D46608J	W5088	YC053-YR328
I D12820		M02263	540/180/R019			YC053-YR328
I D12816		M2263				YC053-YR328
I D12818		M2263				YC053-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5070

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5086	NA2	FWD CARGO COMPT TO FWD CARGO SMOKE DETECTORS				
I D12766				D13846		YD160-YR328
I D12768				D13846		YD160-YR328
I D12770				D13846		YD160-YR328
I D12772				D13846		YD160-YR328
I D12764		M2236				YC053-YR328
I D12766		M2238				YC053-YD158
I D12768		M2239				YC053-YD158
I D12770		M2240				YC053-YD158
I D12772		M2241				YC053-YD158
I W5088	NB2	FWD CARGO COMPARTMENT TO E2-2 SHELF				
I D46608J		AB0500DL	POS 06	D46608P	W5074	YC053-YR328
I D42014P		AE0202A	POS 32	D42014J	W0220	YC053-YD158, YL951-YR328
I D42014P		AE0202A	POS 32	D42014J		YD160-YD170
I D12762		M2236				YC053-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5080

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5094</b>	<b>NC2</b>	<b>AB500DL (POS 12) TO E2-2 SH4ELF</b>				
D46606J		AB0500DL	POS 12	D46606P	W5098	YC053-YR328
D41840P		AE0202A	POS 33	D41840J	W0220	YC053-YD158, YL951-YR328
D41840P		AE0202A	POS 33	D41840J		YD160-YD170
<b>W5096</b>	<b>NC2</b>	<b>AFT CARGO COMPART TO AFT CARGO SMOKE DETECTORS</b>				
D12778				D13846		YD160-YR328
D12780				D13846		YD160-YR328
D12782				D13846		YD160-YR328
D12784				D13846		YD160-YR328
D12786				D13846		YD160-YR328
D12788				D13846		YD160-YR328
D12776		M2237				YC053-YR328
D12778		M2242				YC053-YD158
D12780		M2243				YC053-YD158
D12782		M2244				YC053-YD158
D12784		M2245				YC053-YD158
D12786		M2246				YC053-YD158
D12788		M2247				YC053-YD158
<b>W5098</b>	<b>NC2</b>	<b>AFT CARGO COMPT TO E2-2 SHELF</b>				
D46606P		AB0500DL	POS 12	D46606J	W5094	YC053-YR328
D12774		M2237				YC053-YR328
D12792		M2248				YC053-YR328
D12794		M2248				YC053-YR328
D12796		M2248				YC053-YR328
<b>W5099</b>	<b>NB2</b>	<b>TCAS SUPPRESSION E1-5 TO M1908 (E1 RACK)</b>				
D41511J		AE0105A	POS 11	D41511P	W0151	ALL
D10159		M01908	//			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5090

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5100</b>	<b>SB2*</b>	<b>J24 TO J20 &amp; J22: J-BOX INTERCONNECT BUNDLE</b>				
D40632P		AJ0020B	POS 05	D40632J	W0072	YC051-YD158, YL951-YR328
D40668P		AJ0022	POS 06	D40668J	W0076	YC051-YD158, YL951-YN236, YN501-YR328
D40668P D40698P		AJ0022 AJ0024	POS 06 POS 03	D40668J D40698J	W0080	YN237-YN260 YC051-YD158, YL951-YR328
D02864		M1177				YC051-YD158, YL951-YR328
<b>W5101</b>	<b>NN2</b>	<b>AUDIO ENTERTAINMENT - AUDIO INTEGRATION BRKT AB0410 TO SIDEWALL DISC'S</b>				
D08429J D08427J D08539J D08537J D12169J			438/218/L069 438/218/R069 683/220/L069 683/220/R069 AB0410	D08429P D08427P D08539P D08537P D12169P	W5115	YL951-YR328 YL951-YR328 YL951-YR328 YL951-YR328 YL951-YL968, YN231-YN236, YN501-YR328
D12169J		AB0410	POS 04	D12169P		YL969-YL999, YN237-YN260
D12171J		AB0410	POS 05	D12171P	W5115	YL951-YL968, YN231-YN236, YN501-YR328
D12171J		AB0410	POS 05	D12171P		YL969-YL999, YN237-YN260
<b>W5102</b>	<b>SA2</b>	<b>LEFT A/C PACK (STA 536L) DISC TO A/C PACK (SA2)</b>				
D04580J		AB0536L	POS 01	D04580P	W5526	YC051-YN236, YN501-YR328
D40056J		AB0536L	POS 02	D40056P	W5104	YC051-YN236, YN501-YR323, YR325-YR328
D40056J D00706 D00970 D00858		AB0536L M00223 M00328 M00355	POS 02 566/164/L032 567/164/L032 540/ /	D40056P		YR324 YN231-YN236, YN501 YN231-YN236, YN501 YC051-YN236, YN501-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5100

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5102</b>	<b>SA2</b>	<b>LEFT A/C PACK (STA 536L) DISC TO A/C PACK (SA2) (continued)</b>				
D00832		M00370	540/170/L025			YC051-YN236, YN501-YR328
D11050		M01745	650/144/L027			YC051-YN236, YN501-YR328
D00530		S00001	567/156/L034			YN231-YN236, YN501
D00532		S00002	576/158/L024			YC051-YN236, YN501-YR328
D10056		S00938	577/162/L031			YC051-YL999, YR301-YR328
D00100		T00405	538/165/L 30			YC051-YN236, YN501-YR328
D00172		T00407	644/158/L012			YN231-YN236, YN501
D00710		T00430	553/152/L017			YN231-YN236, YN501
D01288		T00438	583/161/L031			YN231-YN236, YN501
D03866		T00471	573/154/L030			YC051-YL999, YR301-YR328
D03916		T00481	584/162/L032			YC051-YL999, YR301-YR328
D03930		T00488	573/152/L033			YC051-YL999, YR301-YR328
D00524		V00023	652/148/R013			YN231-YN236, YN501
D00702		V00027	569/163/L024			YN231-YN236, YN501
D03862		V00139	655/147/L009			YC051-YL999, YR301-YR328
D03864		V00140	653/154/L028			YC051-YL999, YR301-YR328
<b>W5103</b>	<b>NA2</b>	<b>HF-1 E8-1 TO E3-3</b>				
D43359P		AE0303A	POS 06	D43359J	W0331	YD158-YR328
D40113P		AE0602A	POS 10	D40113J	W0621	YL951-YR328
D40075P		AE0801A	POS 05	D40075J	W0811	YD158-YD170
<b>W5104</b>	<b>LA2</b>	<b>E/E BAY TO L AC PACK (STA 536L) DISC. (LA2)</b>				
D40056P		AB0536L	POS 02	D40056J	W5102	YC051-YN236, YN501-YR323, YR325-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5100

Page 2

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5104</b>	<b>LA2</b>	<b>E/E BAY TO L AC PACK (STA 536L) DISC. (LA2) (continued)</b>				
D40246P		AE0202A	POS 01	D40246J	W0220	YC051-YD158, YL951-YN236, YN501-YR323, YR325-YR328
D40246P		AE0202A	POS 01	D40246J		YD160-YD170
D41800P		AE0303A	POS 24	D41800J	W0330	YC051-YL999, YR301-YR323, YR325-YR328
D41836P		AE0303A	POS 31	D41836J	W0330	YC051-YL999, YR301-YR323, YR325-YR328
D40244P		AE0401A	POS 29	D40244J	W0410	YC051-YN236, YN501-YR323, YR325-YR328
D00966		M00326	519/166/L057			YC051-YN236, YN501-YR323, YR325-YR328
D03856		M1440				YC051-YL999, YR301-YR323, YR325-YR328
D03868		T00472	500I+7/192/L003			YC051-YL999, YR301-YR323, YR325-YR328
<b>W5105</b>	<b>NB2</b>	<b>HF 2, TO E3-3 TO E6-2</b>				
D43361P		AE0303A	POS 10	D43361J	W0331	YD158-YR328
D40115P		AE0602A	POS 08	D40115J	W0621	YL951-YR328
D40077P		AE0801A	POS 06	D40077J	W0811	YD158-YD170
<b>W5107</b>	<b>NA2</b>	<b>VHF-1 &amp; VHF-2 TO E3-3</b>				
D04123P		AE0103A	POS 12	D04123J	W0131	YD158, YL951-YR328
D04125J		AE0105A	POS 01	D04125P	W0151	YD158, YL951-YR328
D43314P		AE0303A	POS 08	D43314J	W0331	YL951-YR328
D43367P		AE0303A	POS 11	D43367J	W0331	YD158, YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5100

Page 3 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5110</b>	<b>LA2</b>	<b>P91 (AFT DISC) TO E/E BAY</b>				
D40260P		AE0201A	POS 12	D40260J	W0212	ALL
D40340P		AE0201A	POS 19	D40340J	W0212	ALL
D40338P		AE0402A	POS 07	D40338J	W0422	ALL
D10330		M03054	378/158/L005			ALL
D10342		M3055				ALL
D11432		P0091				ALL
<b>W5111</b>	<b>NA2</b>	<b>EE INTER-RACK - LEFT (E1-X TO E3-X)</b>				
D10175		AB0372				ALL
D45133P		AE0101A	POS 03	D45133J	W0111	ALL
D41153P		AE0101A	POS 11	D41153J	W0111	YC059-YR328
D45113P		AE0101A	POS 19	D45113J	W0111	ALL
D45115J		AE0102A	POS 02	D45115P	W0121	ALL
D45111P		AE0301A	POS 07	D45111J	W0311	ALL
D45131P		AE0301A	POS 08	D45131J	W0311	ALL
D45151P		AE0301A	POS 09	D45151J	W0311	ALL
D45177P		AE0302A	POS 17	D45177J	W0321	ALL
D45157P		AE0302A	POS 18	D45157J	W0321	ALL
D45137P		AE0302A	POS 19	D45137J	W0321	ALL
D45117P		AE0302A	POS 20	D45117J	W0321	ALL
D43307P		AE0303A	POS 12	D43307J	W0331	ALL
D43321P		AE0303A	POS 13	D43321J	W0331	ALL
D43305P		AE0303A	POS 20	D43305J	W0331	ALL
D45211J		AE0502A	POS 12	D45211P	W0521	ALL
<b>W5112</b>	<b>LA1</b>	<b>P91 (AFT DISC) TO E/E BAY.</b>				
D11284			727+4/172/L015			YC051-YL999, YR301-YR328
D10878			821/205/L019			YC051-YL999, YR301-YR328
D49996P		AE0201A	POS 01	D49996J	W0212	ALL
D40934P		AE0201A	POS 02	D40934J	W0212	ALL
D40342P		AE0201A	POS 03	D40342J	W0212	ALL
D40256P		AE0201A	POS 4	D40256J	W0212	ALL
D01986		M00753	855/179/L049			ALL
D11434		P0091				ALL
D01990		S00692	958/205/R003			ALL
D12346		S00945	915/165/R010			ALL
D12348		S00945	915/165/R010			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5110

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5115</b>	<b>NN2</b>	<b>AUDIO ENTERTAINMENT - E4-2 SHELF TO AUDIO INTEGRATION BRKT AB0410</b>				
D10527A			E004-02/ /			YL951-YL968, YN231-YN236, YN501-YR328
D10527B			E008-01/ /			YL951-YL968, YN231-YN236, YN501-YR328
D10527C			E008-01/ /			YL951-YL968, YN231-YN236, YN501-YR328
D12163P		AB0410	POS 01	D12163J	W5303	YL951-YL968, YN231-YN236, YN501-YR328
D12165P		AB0410	POS 02	D12165J	W5303	YL951-YL968, YN231-YN236, YN501-YR328
D12167P		AB0410	POS 03	D12167J	W5303	YL951-YL968, YN231-YN236, YN501-YR328
D12169P		AB0410	POS 04	D12169J	W5101	YL951-YL968, YN231-YN236, YN501-YR328
D12171P		AB0410	POS 05	D12171J	W5101	YL951-YL968, YN231-YN236, YN501-YR328
D12211P		AB0410	POS 06	D12211J	W5117	YL951-YL968, YN231-YN236, YN501-YR328
D10527		M1956				YL951-YL968, YN231-YN236, YN501-YR328
<b>W5117</b>	<b>NN2</b>	<b>AUDIO ENTERTAINMENT - AUDIO INTEGRATION BRKT AB0410 TO BITE PNL STA984</b>				
D12211J		AB0410	POS 06	D12211P	W5115	YL951-YL968, YN231-YN236, YN501-YR328
D12211J		AB0410	POS 06	D12211P		YL969-YL999, YN237-YN260
D10587		M02039	985/285/R037			YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5110

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5121</b>	<b>NB2</b>	<b>EE INTER-RACK - RIGHT (E1-X TO E3-X)</b>				
D11804		AB0372				YC051-YD158, YL951-YR328
D45002J		AE0102A	POS 11	D45002P	W0121	YL963-YL999, YN236-YR328
D45143J		AE0104A	POS 05	D45143P	W0141	YC051-YD158, YL951-YR328
D45123J		AE0104A	POS 12	D45123P	W0141	YC051-YD158, YL951-YR328
D45125J		AE0105A	POS 09	D45125P	W0151	YC051-YD158, YL951-YR328
D45121P		AE0301A	POS 32	D45121J	W0313	YC051-YD158, YL951-YR328
D45141P		AE0301A	POS 33	D45141J	W0313	YC051-YD158, YL951-YR328
D45102P		AE0302A	POS 29	D45102J	W0321	YL963-YL999, YN236-YR328
D45127P		AE0302A	POS 46	D45127J	W0321	YC051-YD158, YL951-YR328
D45147P		AE0302A	POS 56	D45147J	W0321	YC051-YD158, YL951-YR328
D43323P		AE0303A	POS 33	D43323J	W0331	YC051-YD157
D43323P		AE0303A	POS 42	D43323J	W0331	YD158, YL951-YR328
D45213J		AE0502A	POS 11	D45213P	W0523	YC051-YD158, YL951-YR328
<b>W5122</b>	<b>LA1*</b>	<b>P91 TO TB1802, TB1804,&amp; TB5180</b>				
D48126P		AJ0048A	POS 02	D48126J	W0088	ALL
D11416		P091-00	371/181/L016			ALL
<b>W5124</b>	<b>LN1*</b>	<b>AB0727 TO J11 (WITH E6)</b>				
D07106P				D07106J	W3144	YR315-YR328
D07108P				D07108J	W3144	YR315-YR328
D07164P				D07164J	W3058	YR315-YR328
D46602J		AB0727R	POS 02	D46602P	W6124	ALL
D46618P		AJ0011	POS 01	D46618J	W0122	YC054-YR328
D46616P		AJ0011	POS 02	D46616J	W0122	ALL
D46618P		J11		D46618J	W0122	YC051-YC053

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5120

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5134	LA1	DISC AB0500DL TO E2-2				
I D40312J		AB0500DL	POS 07	D40312P	W5224	ALL
I D43008P		AE0202A	POS 19	D43008J	W0220	YC051-YD158, YL951-YR328 YD160-YD170
I D43008P		AE0202A	POS 19	D43008J		
I W5137	NA2	VOR ANTENNA LEFT - RF PWR DIV-1 TO R315 LOC ANTENNA SWITCH RELAY-1				
I D03779		M01726	309/180/R021			ALL
I D02113		R00315	306/180/R021			ALL
I W5139	NB2	VOR ANTENNA RIGHT - RF PWR DIV-2 TO R316 LOC ANTENNA SWITCH RELAY-2				
I D03785		M01727	302/180/R020			ALL
I D02121		R00316	300/178/R022			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5130

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5142</b>	<b>LN1*</b>	<b>P91 TO AB0340A DISCONNECT BRACKET</b>				
D40054P		AB0340A	POS 01	D40054J	W3058	YC051-YD158, YL951-YR328
D40054P		AB0340A	POS 01	D40054J		YD160-YD170
D40102P		AB0340A	POS 09	D40102J	W3158	ALL
<b>W5146</b>	<b>LN2</b>	<b>SEC 46 TO WTR QTY AND MISC</b>				
D40148J				D40148P	W3058	YC051-YD158, YL951-YR328
D40148J				D40148P		YD160-YD170
D40150J				D40150P	W3144	ALL
D40152P				D40152J	W5230	YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
D40152P				D40152J		YL969-YL999, YN237-YN260, YR324
D11702		M01722	860/198/L013			ALL
D11788		M01723				ALL
D11786		S01033	1039/231/L046			ALL
D11716		S01034	860/177/L030			ALL
D00192		T00408	951/186/R036			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5140

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W5156	SA2*	PSEU & AIR/GND SYS: M2061 & J22,J20 TO E/E BAY (ROUTE LEFT)				
D40458P		AE0101A	POS 01	D40458J	W0111	YC053-YD158, YL951-YR328
D40454P		AE0101A	POS 02	D40454J	W0111	YC051-YD158, YL951-YR328
D40452P		AE0101A	POS 05	D40452J	W0111	YC051-YD158, YL951-YR328
D40498P		AE0103A	POS 11	D40498J	W0131	YC051-YD158, YL951-YR328
D40456P		AE0202A	POS 09	D40456J	W0220	YC051-YD158, YL951-YR328
D40724P		AE0202A	POS 28	D40724J	W0220	YC051-YD158, YL951-YR328
D40460P		AE0301A	POS 19	D40460J	W0311	YC051-YD158, YL951-YR328
D40594P		AE0302A	POS 16	D40594J	W0321	YC051-YD158, YL951-YR328
D40462P		AE0302A	POS 23	D40462J	W0321	YC051-YD158, YL951-YR328
D41824P		AE0303A	POS 30	D41824J	W0330	YC051-YD158, YL951-YL999, YR301-YR323, YR325-YR328
D41824P		AE0303A	POS 30	D41824J		YR324
D40878P		AJ0020A	POS 05	D40878J	W0074	YC060-YC064
D40636P		AJ0020B	POS 04	D40636J	W0072	YC051-YD158, YL951-YR328
D40642P		AJ0020B	POS 07	D40642J	W0072	YC051-YD158, YL951-YR328
D40878P		AJ0020C	POS 02	D40878J	W0074	YC053, YC055, YC067-YD158, YL951-YR328
D40678P		AJ0022	POS 01	D40678J	W0076	YC051-YD158, YL951-YL999, YR301-YR328
D40666P		AJ0022	POS 03	D40666J	W0076	YC051-YD158, YL951-YN236, YN501-YR328
D40666P		AJ0022	POS 03	D40666J		YN237-YN260

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W5150

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5156</b>	<b>SA2*</b>	<b>PSEU &amp; AIR/GND SYS: M2061 &amp; J22,J20 TO E/E BAY (ROUTE LEFT) (continued)</b>				
D40670P		AJ0022	POS 04	D40670J	W0076	YC051-YD158, YL951-YN236, YN501-YR328
D40670P		AJ0022	POS 04	D40670J		YN237-YN260
D40676P		AJ0022	POS 05	D40676J	W0076	YC051-YD158, YL951-YN236, YN501-YR328
D40676P		AJ0022	POS 05	D40676J		YN237-YN260
D40680P		AJ0022	POS 08	D40680J	W0076	YC053-YD158, YL951-YN236, YN501-YR328
D40680P		AJ0022	POS 08	D40680J		YN237-YN260
D46116P		AJ0046A	POS 13	D46116J	W0066	YC051-YD158, YL951-YR328
D48112P		AJ0048A	POS 16	D48112J	W0088	YC051-YD158, YL951-YR328
D48114P		AJ0048A	POS 17	D48114J	W0088	YC051-YD158, YL951-YR328
D40578P		AP0900A	POS 04	D40578J	W0001	YC051-YD158, YL951-YR328
D40576P		AP1800B	POS 02	D40576J	W0018	YC051-YD158, YL951-YR328
D10982		M02061	212/180/R020			YC051-YD158, YL951-YR328
D11138		M02061	212/180/R020			YC051-YD158, YL951-YR328
D11142		M02061	212/180/R020			YC051-YD158, YL951-YR328
D00164		M100				YC051-YD158, YL951-YR328
D12092		V00161	320/175/L028			YL951-YR328
<b>W5158</b>	<b>SB2*</b>	<b>PSEU &amp; AIR/GND SYS: M2061 &amp; J24,J20 TO E/E BAY (ROUTE RIGHT)</b>				
D40488P		AE0103A	POS 08	D40488J	W0131	ALL
D40490J		AE0104A	POS 20	D40490P	W0141	ALL
D40426P		AE0302A	POS 28	D40426J	W0321	ALL
D40486P		AE0302A	POS 33	D40486J	W0321	ALL
D40484P		AE0402A	POS 30	D40484J	W0422	ALL
D40618P		AE0402A	POS 35	D40618J	W0422	ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5150

Page 2

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5158</b>	<b>SB2*</b>	<b>PSEU &amp; AIR/GND SYS: M2061 &amp; J24,J20 TO E/E BAY (ROUTE RIGHT) (continued)</b>				
D40884P		AJ0020A	POS 02	D40884J	W0074	YC053, YC055, YC060-YC064, YC067-YR328
D40634P		AJ0020B	POS 01	D40634J	W0072	ALL
D40638P		AJ0020B	POS 02	D40638J	W0072	ALL
D40640P		AJ0020B	POS 03	D40640J	W0072	ALL
D40858P		AJ0020D	POS 01	D40858J	W0072	YD158-YR328
D40692P		AJ0024	POS 04	D40692J	W0080	ALL
D40700P		AJ0024	POS 05	D40700J	W0080	ALL
D40702P		AJ0024	POS 06	D40702J	W0080	ALL
D46120P		AJ0046B	POS 03	D46120J	W0066	ALL
D46100P		AJ0046B	POS 11	D46100J	W0066	ALL
D48116P		AJ0048A	POS 13	D48116J	W0088	ALL
D40750P		AP0600B	POS 02	D40750J	W0044	ALL
D03464		M01915	213/191/R025			ALL
D11140		M02061	212/180/R020			ALL
D13900		M02567	360/160/R025			YL951-YL999, YN232-YR328
D00438		T00404	391/166/R011			ALL
D11880		V157				ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5150

Page 3 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5160</b>	<b>RB2*</b>	<b>PSEU &amp; AIR/GND SYS: M2061 &amp; J4,J24 TO E/E BAY (ROUTE RIGHT)</b>				
D11134		AB0250A	POS 01			YC051-YD158, YL951-YR328
D40292P		AB0340B	POS 06	D40292J	W4142	YC051-YD158, YL951-YR328
D40464P		AE0101B	POS 02	D40464J	W0111	YC051-YD158, YL951-YR328
D40466P		AE0103A	POS 14	D40466J	W0131	YC051-YD158, YL951-YR328
D40468P		AE0302A	POS 36	D40468J	W0321	YC051-YD158, YL951-YR328
D40470P		AE0302A	POS 37	D40470J	W0321	YC051-YD158, YL951-YR328
D40952P		AE0302A	POS 42	D40952J	W0321	YC051-YD158, YL951-YR328
D40472P		AE0402A	POS 33	D40472J	W0422	YC051-YD158, YL951-YR328
D40474P		AE0402A	POS 37	D40474J	W0422	YC051-YD158, YL951-YR328
D40169P		AE0402A	POS 40	D40169J	W0422	YD158, YL951-YR328
D40612P		AJ0004	POS 05	D40612J	W0094	YD158, YL951-YR328
D40658P		AJ0004	POS 09	D40658J	W0094	YD158, YL951-YR328
D40610P		AJ0004	POS 10	D40610J	W0094	YC051-YD158, YL951-YR328
D40694P		AJ0024	POS 07	D40694J	W0080	YC051-YD158, YL951-YR328
D43906P		AJ0039A	POS 04	D43906J	W0082	YL951-YN235, YR301-YR328
D46102P		AJ0046A	POS 14	D46102J	W0066	YC051-YD158, YL951-YR328
D46122P		AJ0046A	POS 16	D46122J	W0066	YC051-YD158, YL951-YR328
D40580P		AP0900A	POS 07	D40580J	W0003	YC051-YD158, YL951-YR328
D02537		M01439	186/203/L005			YC051-YD158, YL951-YR328
D10984		M02061	212/180/R020			YC051-YD158, YL951-YR328
D10986		M02061	212/180/R020			YC051-YD158, YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5160

Page 1

Nov 12/2012

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5160</b>	<b>RB2*</b>	<b>PSEU &amp; AIR/GND SYS: M2061 &amp; J4,J24 TO E/E BAY (ROUTE RIGHT) (continued)</b>				
D10988		M02061	212/180/R020			YC051-YD158, YL951-YR328
D44278		M02604	192/200/L007			YL953-YL999, YR301-YR328
<b>W5161</b>	<b>LA2</b>	<b>E1-1, E3-1, E5-2</b>				
D41145P		AE0101A	POS 04	D41145J	W0111	ALL
D41155P		AE0101A	POS 20	D41155J	W0111	ALL
D43145P		AE0301A	POS 15	D43145J	W0311	ALL
D43155P		AE0301A	POS 16	D43155J	W0311	ALL
D45245J		AE0502A	POS 14	D45245P	W0521	ALL
D45255J		AE0502A	POS 15	D45255P	W0521	ALL
D45265J		AE0502A	POS 16	D45265P	W0521	ALL
D45023P		AE0801A	POS 09	D45023J	W0811	YD158-YD170
D03691		M01751	409/205/R002			ALL
<b>W5162</b>	<b>LB2*</b>	<b>LEFT WING/BODY PRESSURE SEAL DISC TO E/E BAY</b>				
D11160		AB0237A	POS 01			ALL
D39921		AC0520				ALL
D40130P		AE0202A	POS 25	D40130J	W0220	YC051-YD158, YL951-YR328
D40130P		AE0202A	POS 25	D40130J		YD160-YD170
D48134P		AJ0048A	POS 21	D48134J	W0088	ALL
<b>W5163</b>	<b>RB2*</b>	<b>E1-1, E1-5, E3-1, E5-2</b>				
D41147P		AE0101B	POS 11	D41147J	W0111	ALL
D41157P		AE0101B	POS 12	D41157J	W0111	ALL
D41557J		AE0105A	POS 07	D41557P	W0151	ALL
D43147P		AE0301A	POS 28	D43147J	W0313	ALL
D43157P		AE0301A	POS 29	D43157J	W0313	ALL
D45247J		AE0502A	POS 04	D45247P	W0523	ALL
D45257J		AE0502A	POS 05	D45257P	W0523	ALL
D45025P		AE0801A	POS 10	D45025J	W0811	YD158-YD170
D03697		M01754	430.415/205/R035			ALL
D02127		R00316	300/178/R022			ALL
<b>W5164</b>	<b>LA1*</b>	<b>LEFT WING PRESS SEAL CONN TO E/E BAY</b>				
D39933		AC0520				YC051-YN236, YN501-YR328

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W5160

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5164</b>	<b>LA1*</b>	<b>LEFT WING PRESS SEAL CONN TO E/E BAY (continued)</b>				
D40132P		AE0201A	POS 16	D40132J	W0212	YC051-YN236, YN501-YR328
D40718P		AE0201A	POS 17	D40718J	W0212	YC051-YN236, YN501-YR328
<b>W5166</b>	<b>SN2</b>	<b>LEFT WING BODY PRESS SEAL TO E1-1</b>				
D39901		AC0520				ALL
D40122P		AE0101A	POS 18	D40122J	W0111	ALL
<b>W5168</b>	<b>SB2*</b>	<b>LEFT WING/BODY PRESS SEAL TO E/E BAY</b>				
D39929		AC0520				ALL
D40138P		AE0202A	POS 08	D40138J	W0220	YC051-YD158, YL951-YR328
D40138P		AE0202A	POS 08	D40138J		YD160-YD170

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5160

Page 3 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5170	SA2*	LEFT WING/BODY PRESS SEAL TO E/E BAY				
I D40266P				D40266J	W5222	ALL
I D40734J		AB0420A	POS 01	D40734P	W3170	ALL
I D39925		AC0520				ALL
I D48110P		AJ0048A	POS 07	D48110J	W0088	ALL
I W5172	LA2*	LEFT WING/BODY PRESS SEAL TO E/E BAY				
I D11158		AB0237A	POS 02			ALL
I D40736J		AB0420A	POS 02	D40736P	W3170	ALL
I D39917		AC0520				ALL
I D48136P		AJ0048A	POS 19	D48136J	W0088	ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5170

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5181	NB2	ATC BOTTOM ANT E1 RACK (S943) TO STA 355 (M44)				
I D00099		M00044	355/ /			ALL
I D02707		S00943	316/163/L025			ALL
I W5182	NN2	ISPC TO P18(EE-BAY TO PC POWER OUTLET(P18)				
I D13908		M02567	360/160/R025			YL951-YL999, YN232-YR328
I D13906		M02588	P018-00/000/0000			YL951-YL999, YN232-YR328
I W5183	NA2	DME 1 E1-2 TO DME LEFT BOTTOM ANTENNA				
I D41215J		AE0102B	POS 02	D41215P	W0121	ALL
I D00093		M00042	580/144/0000			ALL
I W5185	NB2	DME 2 E1-5 TO DME RIGHT BOTTOM ANTENNA				
I D41515J		AE0105A	POS 12	D41515P	W0151	ALL
I D00095		M00043	641/143/0			ALL
I W5189	NA3	E4-1 AUDIO NO. 1				
I D04269J		AE0102A	POS 08	D04269P	W0121	ALL
I D04195P		AE0103A	POS 18	D04195J	W0131	ALL
I D04271P		AE0301A	POS 01	D04271J	W0311	ALL
I D43315P		AE0303A	POS 22	D43315J	W0331	YC051-YD170
I D04287P		AE0401A	POS 17	D04287J	W0411	ALL
I D08123P		AE0401A	POS 21	D08123J	W0411	ALL
I D40117P		AE0602A	POS 05	D40117J	W0621	YL951-YR328
I D08189P		AE0801A	POS 01	D08189J	W0811	YC051-YD170
I D48389P		AE0801B	POS 06	D48389J	W0813	YC053-YD170
I D48389P		AE0801C	POS 07	D48389J	W0813	YC051-YC052

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5180

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5191	NB3	E4-1 AUDIO NO. 2				
I D04273J		AE0104A	POS 17	D04273P	W0141	ALL
I D04197J		AE0105A	POS 04	D04197P	W0151	ALL
I D04277P		AE0301A	POS 37	D04277J	W0313	ALL
I D43331P		AE0303A	POS 38	D43331J	W0331	YD158-YR328
I D04289P		AE0401A	POS 16	D04289J	W0411	YD158-YR328
I D04285P		AE0401A	POS 19	D04285J	W0411	ALL
I D40119P		AE0602A	POS 07	D40119J	W0621	YL951-YR328
D08002P		AE0801A	POS 08	D08002J	W0811	YD158-YD170

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5190

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5202</b>	<b>RN2</b>	<b>AP0900A BRKT TO GLARESHIELD DIMMER CONTROL UNITS (P9) RN2</b>				
D40944P		AP0900A	POS 11	D40944J	W0001	YC051-YD158, YL951-YR328
D40944P		AP0900A	POS 11	D40944J		YD160-YD170
D11930		M01916	P009-00/ /			ALL
D11932		M01917	P009-00/ /			ALL
D12592		M02186	/ /			ALL
<b>W5204</b>	<b>NN2</b>	<b>NITROGEN GEN SYSTEM E1-4 TO AC0538</b>				
D13928		AC0538				YD160-YR328
D40332J		AE0104A	POS 26	D40332P		YD160-YD170
D40332J		AE0104A	POS 26	D40332P	W0141	YL951-YR328
D13838		P63				YD160-YR328
<b>W5205</b>	<b>SA2</b>	<b>EE INTER-RACK-LEFT (E1-1,E1-2,E3-1,E3-2,E5-2)</b>				
D45203P		AE0101A	POS 31	D45203J	W0111	YC051-YD158, YL951-YR328
D45201J		AE0102A	POS 10	D45201P	W0121	YC051-YD158, YL951-YR328
D45205P		AE0301A	POS 18	D45205J	W0311	YC051-YD158, YL951-YR328
D45207P		AE0302A	POS 14	D45207J	W0321	YC051-YD158, YL951-YR328
D45209J		AE0502A	POS 03	D45209P	W0521	YC051-YD158, YL951-YR328
D02119		R00315	306/180/R021			YC051-YD158, YL951-YR328
<b>W5208</b>	<b>NN2</b>	<b>NGS CONTROLLER TO PRESS SEALS AND AC0538</b>				
D13832		AC0538		D13928		YD160-YL999, YN232-YR328
D13934		DM0032	536/164/L036			YD160-YL999, YN232-YR328
D13970		DM0044	536/166/R037			YD160-YL999, YN232-YR328
D13804		M02559	500I+8/201/R012			YD160-YL999, YN232-YR328
D13806		M02559	500I+8/201/R012			YD160-YL999, YN232-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5200

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5222</b>	<b>SA2*</b>	<b>DISC AB0500DL TO MAIN WHEEL WELL</b>				
D40266J				D40266P	W5170	ALL
D40318P		AB0500DL	POS 04	D40318J	W5530	ALL
D40302P		AB0500DL	POS 09	D40302J	W5526	ALL
D46030J		AL0675B	POS 03	D46030P	W7522	YC051-YD158, YL951-YR323, YR325-YR328
D46030J		AL0675B	POS 03	D46030P		YD160-YD170, YR324
D46032J		AL0720B	POS 02	D46032P	W7526	YC051-YD158
D46032J		AL0720B	POS 02	D46032P	W7128	YD160-YN236, YN501-YR328
D46032J		AL0720B	POS 02	D46032P		YN237-YN260
<b>W5224</b>	<b>RA1</b>	<b>MAIN WHEEL WELL TO AB0500DL AND CROWN</b>				
D40248P				D40248J	W6222	YC051-YR323, YR325-YR328
D40248P				D40248J		YR324
D40250P				D40250J	W6222	YC051-YN260
D43404P				D43404J	W6222	YN501-YR323, YR325-YR328
D43404P				D43404J		YR324
D40312P		AB0500DL	POS 07	D40312J	W5134	ALL
D40416P		AB0500DR	POS 08	D40416J	W6032	ALL
D46010J		AL0675A	POS 04	D46010P	W7122	YC051-YR323, YR325-YR328
D46010J		AL0675A	POS 04	D46010P		YR324
D46036J		AL0720B	POS 03	D46036P	W7222	YC051-YD158
D46036J		AL0720B	POS 03	D46036P	W7128	YD160-YN236, YN501-YR328
D46036J		AL0720B	POS 03	D46036P		YN237-YN260

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5220

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5230	RB1	E/E BAY TO MWW-SYS B ELEC HYD PUMP				
D40152J				D40152P	W5146	YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
D43084P		AE0202A	POS 13	D43084J	W0220	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR323, YR325-YR328
D43084P D43062P		AE0202A AE0401A	POS 13 POS 45	D43084J D43062J	W0410	YD160-YD170 YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
D01782		L00322	500A+10/150/L032			YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
D11718		M01721	857/196/L050			YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
D02666		M1104				YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
D11428		P0091				YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
D02690		S799				YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
I W5234	RB2	DISC AL0720A TO E1-3				
D43010P		AE0103A	POS 15	D43010J	W0131	ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5230

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5234</b>	<b>RB2</b>	<b>DISC AL0720A TO E1-3 (continued)</b>				
D46024J		AL0720A	POS 01	D46024P	W7126	YC051-YL968, YN231-YN236, YN501-YR328
D46024J		AL0720A	POS 01	D46024P		YL969-YL999, YN237-YN260

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5230

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5248</b>	<b>LN2*</b>	<b>E/E BAY TO FWD AND AFT CARGO AREA</b>				
D40500J		AB0500DL	POS 05	D40500P	W6248	YC051-YN236, YN501-YR328
D40500J		AB0500DL	POS 05	D40500P		YN237-YN260
D40586P		AE0202A	POS 02	D40586J	W0220	YC051-YD158, YL951-YR328
D40586P		AE0202A	POS 02	D40586J		YD160-YD170
D40584P		AE0402A	POS 02	D40584J	W0422	ALL
D11758		L00185	435/203/L010			ALL
D11760		L00186	469/203/L005			ALL
D11764		L00187	500/203/R010			ALL
D11766		L00188	500A+13/203/R010			YN231-YN501
D11768		L01020	500B+13/203/L010			YN231-YN501
D11994		L01205	500F+15/203/R010			YC051-YL999, YR301-YR328
D11996		L01314	500G+15/205/L010			YC051-YL999, YR301-YR328
D12170		L01321	500B+13/203/R010			YC051-YL999, YR301-YR328
D12172		L01322	500D+15/203/R010			YC051-YL999, YR301-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5240

Page 1 End

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5257	NN2	FLIGHT RECORDER E3-2 SHELF TO CONTROL POSITION SENSORS				
I D43257P		AE0302A	POS 12	D43257J	W0321	ALL
I D00815		M00520	215/180/L020			ALL
I D00819		M00522	227/194/L020			ALL
I D00817		M01983	228/202/L011			ALL

For training purposes only!

## MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5250

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5273	NA3	ADF ANTENNA -1				
I D42163P		AE0301A	POS 02	D42163J	W0311	ALL
I D03663		M01733	694/ /R004			ALL
I W5275	NB3	ADF ANTENNA -2				
I D42165P		AE0301A	POS 38	D42165J	W0313	ALL
I D03665		M01734	/ /			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5270

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5293	NA2	RADIO ALTM XMTR ANT -1 (R/T) STA 450 TO E3-1				
I D03671		M01737	450/148/0000			ALL
I W5295	NA2	RADIO ALTM RCVR ANT -1 (R/T) STA 430 TO E3-1				
I D03675		M01739	430/148/0000			ALL
I W5297	NB2	RADIO ALTM XMTR ANT -2 (R/T) STA 390 TO E3-2				
I D03673		M01738	390/148/0000			YC051-YN236, YN501-YR328
I W5299	NB2	RADIO ALTM RCVER ANT -2 (R/T) STA 410 TO E3-2				
I D03677		M01740	410/148/0000			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5290

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5301	LG2	MACH TRIM SERVO, E1-1 TO AB1050L				
I D43393P		AB1050L	POS 02	D43393J	W3393	YC053-YR328
I D04425P		AE0101A	POS 08	D04425J	W0111	ALL
D00545		M00414	1164/276/			YC051-YC052
I W5303	NN2	VIDEO - AB0340B TO EE BAY (E8-1) AUDIO & PA				
I D12213P				D12213J	W3583	YL951-YN260
I D45231P		AB0340B	POS 08	D45231J	W3583	YC051-YN260
I D12163J		AB0410	POS 01	D12163P	W5115	YL951-YL968, YN231-YN236, YN501-YR328 YL969-YL999, YN237-YN260
D12163J		AB0410	POS 01	D12163P		YL951-YL968, YN231-YN236, YN501-YR328 YL969-YL999, YN237-YN260
D12165J		AB0410	POS 02	D12165P	W5115	YL951-YL968, YN231-YN236, YN501-YR328 YL969-YL999, YN237-YN260
D12165J		AB0410	POS 02	D12165P		YL951-YL968, YN231-YN236, YN501-YR328 YL969-YL999, YN237-YN260
D12167J		AB0410	POS 03	D12167P	W5115	YL951-YL968, YN231-YN236, YN501-YR328 YL969-YL999, YN237-YN260
D12167J		AB0410	POS 03	D12167P		YL951-YL968, YN231-YN236, YN501-YR328 YL969-YL999, YN237-YN260
I D45227P		AE0103A	POS 16	D45227J	W0131	YC051-YN260
I D40173P		AE0302A	POS 55	D40173J	W0321	YL951-YN260
I D45920P		AE0801A	POS 19	D45920J	W0811	YN501-YR328
I D45279P		AE0801B	POS 07	D45279J	W0813	YC053-YD170
D45279P		AE0801C	POS 06	D45279J	W0813	YC051-YC052

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W5300

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5310	LB2*	E2 TO E3				
I D40450P		AE0202A	POS 24	D40450J	W0220	YC051-YD158, YL951-YR328 YD160-YD170
I D40450P		AE0202A	POS 24	D40450J		YD160-YD170
I D40448P		AE0301A	POS 11	D40448J	W0311	ALL
I D40726P		AE0302A	POS 03	D40726J	W0321	YC051-YL954, YN231-YN235
I D40446P		AE0302A	POS 04	D40446J	W0321	ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5310

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>I W5331</b>	<b>NA2</b>	<b>CMU INTERFACES E3-3 (LEFT)</b>				
I D43345P		AE0303A	POS 17	D43345J	W0331	YD158-YR328
I D43347P		AE0303A	POS 18	D43347J	W0331	YD158-YR328
I D04115P		AE0401D	POS 13	D04115J	W0411	YD158-YR328
I D04117P		AE0401D	POS 16	D04117J	W0411	YD158-YR328
<b>I W5335</b>	<b>NB2</b>	<b>CMU INTERFACES E3-3 (RIGHT)</b>				
I D43379P		AE0303A	POS 43	D43379J	W0331	YD158-YR328
I D04007P		AE0401D	POS 14	D04007J	W0411	YD158-YR328
I D04009P		AE0401D	POS 15	D04009J	W0411	YD158-YR328
<b>I W5337</b>	<b>SN2</b>	<b>SERVICE INTERPHONE, TB205, E RACK, P19</b>				
I D04499P				D04499J	W0048	YC051-YL954, YN231-YN235
I D06025			358/165/R006			YC051-YN236, YN501-YR328
I D04161P		AE0401A	POS 25	D04161J	W0411	YC051-YN236, YN501-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5330

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5353	NA2	AUTOTHROTTLE SERVO MOTOR 1 TO E1-1				
I D41159P		AE0101A	POS 07	D41159J	W0111	ALL
I D10025		M01836	/ /			ALL
I W5355	SN2	INTERPHONE - L WHEEL WELL				
I D06011			664/161/L071			ALL
I W5357	SN2	INTERPHONE - RIGHT WHEEL WELL				
I D06057			664/161/R072			YC051-YD158, YL951-YR323, YR325-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5350

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5363</b>	<b>NA2</b>	<b>ATC TOP ANT E1-2 TO S942 D2701 (COAX)</b>				
D04603J		AE0102B	POS 05	D04603P	W0121	ALL
D02701		S00942	316/163/L025			ALL
<b>W5367</b>	<b>LC3</b>	<b>AUTOPILOT E1-1 TO ACCEL PCU SYSTEM - A</b>				
D04073P		AE0101A	POS 27	D04073J	W0111	YC051-YN236, YN501-YR328
D40053P		AE0302A	POS 02	D40053J	W0321	YC051-YN236, YN501-YR328
D43910P		AJ0039A	POS 03	D43910J	W0082	YL953-YL999, YR301-YR328
D42102J		AL0720A	POS 02	D42102P	W1022	YC051-YN236, YN501-YR328
D43100J		AL0720C	POS 01	D43100P	W1032	YC051-YN236, YN501-YR328
D01709		M00937	666/187/L020			YC051-YN236, YN501-YR328
D01827		M00943	670/193/L040			YC051-YN236, YN501-YR328
D01863		S00774	668/192/L040			YC051-YN236, YN501-YR328
<b>W5369</b>	<b>LE2</b>	<b>AUTOPILOT E1-1 TO ELEX PANEL AND TB803 - SYSTEM A</b>				
D04075P		AE0101A	POS 23	D04075J	W0111	ALL
D08313P		AF0213A	POS 05	D08313J	W0049	ALL
D00417		AF0222A	POS 03			ALL
D00383		M00219	223/202/L014			ALL
D00385		M00220	215/190/R015			ALL
D00397		M00221	215/196/L024			ALL
D02257		M01201	206/200/R015			ALL
D10553		M01201	206/200/R015			ALL
D10551		M01967	215/180/R020			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5360

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5375</b>	<b>RD3</b>	<b>AUTOPILOT E1-4 TO ACCEC/PCU - SYSTEM B</b>				
D04077J		AE0104A	POS 15	D04077P	W0141	YC051-YN236, YN501-YR328
D42053P		AE0302A	POS 47	D42053J	W0321	YC051-YN236, YN501-YR328
D43908P		AJ0039A	POS 05	D43908J	W0082	YL953-YL999, YR301-YR328
D42100J		AL0720A	POS 03	D42100P	W1022	YC051-YN236, YN501-YR328
D43102J		AL0720D	POS 02	D43102P	W1032	YC051-YN236, YN501-YR328
D01707		M00937	666/187/L020			YC051-YN236, YN501-YR328
D01691		M01024	670/193/L050			YC051-YN236, YN501-YR328
D01859		S00772	673/192/L049			YC051-YN236, YN501-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5370

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>I W5381</b>	<b>LA2</b>	<b>AUTOPILOT E1-1 TO AB1050L</b>				
D45551P			E001-01/ /	D45551J		YC064-YD155
D45501J		AB1050L	POS 05	D45501P	W7381	YC065-YD158, YL951-YR328
D45501J		AB1050L	POS 05	D45501P		YD160-YD170
D45501P		AB1050L	POS 05	D45501J	W7381	YC064
D45551P		AE0101A	POS 36	D45551J	W0111	YD157-YR328
<b>I W5383</b>	<b>RB2</b>	<b>AUTOPILOT E1-4 TO AB1050R</b>				
D45503J		AB1050R	POS 06	D45503P	W7381	YC065-YC070
D45503J		AB1050R	POS 06	D45503P	W7383	YD151-YD158, YL951-YR328
D45503J		AB1050R	POS 06	D45503P		YD160-YD170
D45503P		AB1050R	POS 06	D45503J	W7381	YC064
D45553J		AE0104A	POS 13	D45553P		YC064-YD155
D45553J		AE0104A	POS 13	D45553P	W0141	YD157-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5380

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle	Sep	Description	Location	MW Connector	MW Bundle	Effectivity
Equip		Matewith				
I W5397	NB2	AUTOTHROTTLE SERVO MOTOR 2 TO E1-1				
I D41161P		AE0101B	POS 03	D41161J	W0111	ALL
I D10027		M01837	//			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5390

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5409	NN2	DFDAU E3-2 SHELF TO DISCONNECT PANEL OF FLIGHT RECORDER				
I D43267P				D43267J	W0767	ALL
I D43209P		AE0302A	POS 49	D43209J	W0321	ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5400

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5411	NB2	VHF-2 ANTENNA-E/E TO STA 506 BOTTOM				
I D04137J				D04137P	W5417	YC061-YR328
I D04137J			472/154/L004	D04137P	W5417	YC051-YC060
I D04133P		AE0103A	POS 02	D04133J	W0131	YC051-YC060
I D04131J		AE0105A	POS 13	D04131P	W0151	YC061-YR328
I W5413	NA2	VHF-1 ANTENNA-E/E TO STA 630.36				
I D04133P		AE0103A	POS 02	D04133J	W0131	YC064-YR328
I D04141J		AE0105A	POS 06	D04141P	W5419	YC061-YC063
I D04131J		AE0105A	POS 13	D04131P	W0151	YC051-YC060
I D00115		M00057	630/305/R005			ALL
I W5415	NC2	VHF-3 ANTENNA-E/E TO STA 470.88 BOTTOM				
I D43301P		AE0303A	POS 01	D43301J	W0331	ALL
I D00335		M00225	471/150/0000			ALL
I W5417	NB2	VHF-2 ANTENNA BOTTOM				
I D04137P				D04137J	W5411	ALL
I D00117		M00058	727D+11/148/0000			ALL
I W5419	NA2	VHF-1 ANTENNA (TOP) E1-3 TO E1-5 BRACKET				
I D04133P		AE0103A	POS 02	D04133J	W0131	YC061-YC063
I D04141P		AE0105A	POS 06	D04141J	W5413	YC061-YC063

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5410

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W5431	NN2	-800 CVR W/RIPS(PROV) (E6)				
D40751P				D40751J	W3004	YL963-YL999, YN236-YR328
D10101			955/301/L008			YL963-YL999, YN236-YR328
D04371P		AE0401A	POS 23	D04371J	W0411	ALL
D46623P		AJ0011	POS 03	D46623J	W0122	YL963-YL999, YN236-YR328
D00177		M00383	E006-01/ /			ALL
D13185		M02862				YL963-YL999, YN236-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5430

Page 1 End

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5457	RF2	AUTOPILOT E1-4 TO CONTROL STAND - SYSTEM B				
I D05971J		AE0104A	POS 02	D05971P	W0141	ALL
I D08315P		AF0222A	POS 04	D08315J	W0051	ALL
I D01673		M00219	223/202/L014			ALL
I D01675		M00220	215/190/R015			ALL
I D01713		M00221	215/196/L024			ALL

For training purposes only!

## MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5450

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5461	LA2	FLIGHT RECORDER E3-2 SHELF TO E1-1 AND E5-2 AND E3-3(QAR)				
I D42311P		AE0101A	POS 06	D42311J	W0111	ALL
I D43211P		AE0101A	POS 21	D43211J	W0111	ALL
I D46461P		AE0101A	POS 22	D46461J	W0111	ALL
I D43261P		AE0302A	POS 40	D43261J	W0321	ALL
I D42261P		AE0302A	POS 41	D42261J	W0321	ALL
I D42361P		AE0302A	POS 43	D42361J	W0321	ALL
I D43217P		AE0302A	POS 50	D43217J	W0321	YN236-YR328
I D43049P		AE0303A	POS 22	D43049J	W0331	YN236-YR328
I D44161P		AE0401A	POS 24	D44161J	W0410	ALL
I D41561J		AE0502A	POS 17	D41561P	W0521	ALL
I D45261J		AE0502A	POS 18	D45261P	W0521	ALL
I W5463	RB2	FLIGHT RECORDER E3-2 SHELF TO E/E BAY SHELF				
I D45515P		AE0101A	POS 35	D45515J	W0111	YD157-YR328
I D41563P		AE0101B	POS 01	D41563J	W0111	ALL
I D41163P		AE0101B	POS 08	D41163J	W0111	ALL
I D41463J		AE0104A	POS 11	D41463P	W0141	ALL
I D45517J		AE0104B	POS 02	D45517P	W0141	YD157-YR328
I D43263P		AE0302A	POS 44	D43263J	W0321	ALL
I D42363P		AE0302A	POS 53	D42363J	W0321	ALL
I D45263J		AE0502A	POS 06	D45263P	W0523	ALL

### MASTER BUNDLE LIST

D280A108

91-21-13

Section W5460

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5501</b>	<b>LA2</b>	<b>ADIRU NO.1 TO AOA-L,ADM-L PITOT, AND TAT PROBE</b>				
D11294		A00023	192/225/L034			ALL
D45239J		AE0502A	POS 20	D45239P	W0521	ALL
D40087P		AJ0048A	POS 08	D40087J	W0088	ALL
D00277		M00171	268/191/L050			ALL
D03689		M01750	199.816/175/L013			ALL
D00365		T00433	192/204/			ALL
D10015		T433 J2				ALL
<b>W5502</b>	<b>SA2</b>	<b>LEFT A/C PACK (STA 536L) DISC TO A/C PACK (SA2)</b>				
D40844P		DISC BRKT		D40844J	W5504	YD153-YR328
D41500		DM0050	536/163/L009			ALL
D00856		M00355	540/ /			ALL
D00398		V00016	540/166/R001			ALL
D00392		V00018	581/158/L009			ALL
D00486		V00018	581/158/L009			YC051-YD152
D00488		V00018	581/158/L009			ALL
D00962		V00018	581/158/L009			ALL
D03886		V00143	542/157/L012			YC051-YL999, YR301-YR328
<b>W5503</b>	<b>NB2</b>	<b>ADIRU NO.2 TO AOA-R AND ADM-R PITOT</b>				
D11298		A00025	192/213/R034			ALL
D11300		A00026	192/224/R034			ALL
D45241J		AE0502A	POS 10	D45241P	W0523	ALL
D40097P		AJ0046B	POS 06	D40097J	W0066	ALL
D03695		M01753	200.618/177/R018			ALL
D14284		S1153				YC060-YC064, YL952-YL999, YN232-YR328
D00287		T00437	192/204/			ALL
D10017		T437 J2				ALL
<b>W5504</b>	<b>SA2</b>	<b>LEFT A/C PACK (STA 536L) DISC TO A/C PACK (SA2)</b>				
D40844J		DISC BRKT		D40844P	W5502	YD153-YR328
D00486		V00018	581/158/L009			YD153-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5500

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5506</b>	<b>SB2*</b>	<b>P8 TO E/E BAY</b>				
D11130		AB0250A	POS 04			YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D10167		AB0250A	POS 06			YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40806J		AE0104A	POS 19	D40806P	W0141	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40430P		AE0202A	POS 15	D40430J	W0220	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40950P		AE0302A	POS 15	D40950J	W0321	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D11288		AF0213A	POS 02			YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D10171		AF0213A	POS 06			YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40674P		AJ0022	POS 07	D40674J	W0076	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40686P		AJ0023	POS 02	D40686J	W0078	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D43900P		AJ0039A	POS 01	D43900J	W0082	YL953-YL968, YR301-YR328

**MASTER BUNDLE LIST**  
D280A108

**91-21-13**  
Section W5500  
Page 2  
Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5506</b>	<b>SB2*</b>	<b>P8 TO E/E BAY (continued)</b>				
D46128P		AJ0046A	POS 05	D46128J	W0066	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D48120P		AJ0048A	POS 09	D48120J	W0088	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D48118P		AJ0048A	POS 22	D48118J	W0088	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40800P		AP0600B	POS 08	D40800J	W0044	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40804P		AP0900A	POS 18	D40804J	W0001	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40802P		AP1800B	POS 05	D40802J	W0018	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D44276		M02604	192/200/L007			YL953-YL968, YR301-YR328
D00576		P008				YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D01078		P008-01	P008-00/ /			YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D15510		S01186	247/206/R013			YR301-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5500

Page 3 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5510</b>	<b>SA2*</b>	<b>P8 TO E/E BAY AND J BOX.</b>				
D11128		AB0250A	POS 05			ALL
D40496J		AE0104A	POS 21	D40496P	W0141	ALL
D40428P		AE0201A	POS 08	D40428J	W0212	ALL
D11286		AF0213A	POS 03			ALL
D40672P		AJ0022	POS 02	D40672J	W0076	YC051-YN236, YN501-YR328 YN237-YN260
D40672P		AJ0022	POS 02	D40672J		
D40688P		AJ0023	POS 05	D40688J	W0078	ALL
D46130P		AJ0046A	POS 01	D46130J	W0066	ALL
D48122P		AJ0048A	POS 03	D48122J	W0088	ALL
<b>W5514</b>	<b>SA2</b>	<b>FLIGHT DECK PANEL LIGHTING (SA2)</b>				
D40826J		AE0104A	POS 27	D40826P	W0141	YC051-YD158, YL951-YR328
D46104P		AJ0046A	POS 11	D46104J	W0066	YC051-YD158, YL951-YR328
D40822P		AP0600B	POS 03	D40822J	W0044	YC051-YD158, YL951-YR328
D40824P		AP0900A	POS 05	D40824J	W0003	YC051-YD158, YL951-YR328
D40830P		AP1800B	POS 07	D40830J	W0018	YC051-YD158, YL951-YR328
D00940		M00315	205/209/R006			YC051-YD158, YL951-YR328
D01172		M00315	205/209/R006			YC051-YD158, YL951-YR328
D01344		M00469	J019-00/ /			YC051-YD158, YL951-YR328
D01346		M00469	J019-00/ /			YC051-YD158, YL951-YR328
D02866		M00469	J019-00/ /			YC051-YD158, YL951-YR328
D00776		S00128	190/208/R002			YC051-YD158, YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5510

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W5526	SA2	DISC AB0500DL TO E1-4, E4-1 (SA2)				
D40302J		AB0500DL	POS 09	D40302P	W5222	ALL
D04580P		AB0536L	POS 01	D04580J	W5102	YC051-YN236, YN501-YR328 YN237-YN260
D04580P		AB0536L	POS 01	D04580J		YN237-YN260
D43016J		AE0104A	POS 22	D43016P	W0141	ALL
D41842P		AE0303A	POS 27	D41842J	W0330	YC051-YL999, YR301-YR323, YR325-YR328 YR324
D41842P		AE0303A	POS 27	D41842J		YR324
D43018P		AE0401A	POS 44	D43018J	W0410	ALL
D00534		S00003	370/196/L056			YN231-YN501
D03940		S00934	520/160/L017			YC051-YL999, YR301-YR328
D41502		STA0536L				ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5520

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5530	SA2*	DISC AB0500DL TO E3-2				
I D40318J		AB0500DL	POS 04	D40318P	W5222	ALL
I D43022P		AE0302A	POS 24	D43022J	W0321	ALL
I D46028J		AL0675B	POS 04	D46028P	W7230	YC051-YR323, YR325-YR328
I D46028J		AL0675B	POS 04	D46028P		YR324

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5530

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5562</b>	<b>SN2</b>	<b>WING BODY PRESS SEAL TO RADAR BAY</b>				
D39913		AC0520				ALL
D11304		M01827	228/182/R020			ALL
D11352		M01827	228/182/R020			ALL
<b>W5564</b>	<b>SN2*</b>	<b>WING BODY PRESS SEAL TO E/E BAY</b>				
D39909		AC0520				ALL
D40136P		AE0202A	POS 07	D40136J	W0220	YC051-YD158, YL951-YR328 YD160-YD170
D40136P		AE0202A	POS 07	D40136J		
<b>W5566</b>	<b>LB1</b>	<b>P18 LEFT CAB CEILING TO WING/BODY DISCBUNDLE A</b>				
D39905		AC0520				ALL
D40118P		AE0202A	POS 14	D40118J	W0220	YC051-YD158, YL951-YR328 YD160-YD170
D40118P		AE0202A	POS 14	D40118J		
<b>W5568</b>	<b>LN1*</b>	<b>LEFT WING BODY PRESS SEAL TO E/E BAY</b>				
D41854J		AB0500DL	POS 01	D41854P	W1128	YC051-YD158, YL951-YN236, YN501-YR328 YD160-YD170
D41854J		AB0500DL	POS 01	D41854P		
D05348J		AB0500DL	POS 02	D05348P	W1128	YC051-YD158, YL951-YN236, YN501-YR328 YD160-YD170
D05348J		AB0500DL	POS 02	D05348P		
D05346J		AB0500DL	POS 03	D05346P	W1134	YC051-YD158, YL951-YN236, YN501-YR328 YD160-YD170
D05346J		AB0500DL	POS 03	D05346P		
D41852J		AB0500DL	POS 10	D41852P	W1134	YC051-YD158, YL951-YN236, YN501-YR328 YD160-YD170
D41852J		AB0500DL	POS 10	D41852P		
D39937		AC0520				YC051-YN236, YN501-YR328
D40120P		AE0101A	POS 14	D40120J	W0111	YC051-YN236, YN501-YR328
D40258P		AE0201A	POS 23	D40258J	W0212	YC051-YN236, YN501-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5560

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5580	SN2	RADAR BAY TO WHEEL WELL DISC STA 675L-CENTER TANK				
I D04850J		AL0675B	POS 02	D04850P	W7580	YC051-YD158, YL951-YR328
I D04850J		AL0675B	POS 02	D04850P		YD160-YD170
I D11308		M01827	228/182/R020			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5580

Page 1 End

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5592	SN2	SEC 47 OVHT DETECTION TO SEC 48 OVHT DETECTION				
I D00862		M00275	1016/202/L011			ALL
I D00864		M00276	1045/ /			ALL

For training purposes only!

---

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W5590

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5603	NN2	E3-2 SHELF (DFDAU) TO LH BRAKE PRESSURE XMTRS				
I D43203P		AE0302A	POS 11	D43203J	W0321	ALL
I D00821		M00517	666/193/R048			ALL
I D02909		T00492	727/187/L020			ALL
I D02913		T00494	685/195/L065			ALL
I D11995		T03019	727/187/			YD154-YD158
I W5605	NN2	E1-3 SHELF (DFDAU) TO RH BRAKE PRESSURE XMTRS				
I D43205P		AE0302A	POS 38	D43205J	W0321	ALL
I D02911		T00493	727/189/L008			ALL
I D02915		T00495	692/192/L065			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5600

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5610</b>	<b>SA2*</b>	<b>E1 TO E2, E3</b>				
D40344P		AE0103A	POS 10	D40344J	W0131	ALL
D40346J		AE0104A	POS 28	D40346P	W0141	ALL
D40348P		AE0202A	POS 10	D40348J	W0220	YC051-YD158, YL951-YR328 YD160-YD170
D40348P		AE0202A	POS 10	D40348J		
D40350P		AE0302A	POS 06	D40350J	W0321	ALL
D40940P		AE0302A	POS 07	D40940J	W0321	ALL
<b>W5612</b>	<b>SN2*</b>	<b>AP0600B TO E/E BAY</b>				
D40358P		AE0201A	POS 18	D40358J	W0212	ALL
D40360P		AE0202A	POS 16	D40360J	W0220	YC051-YD158, YL951-YR328 YD160-YD170
D40360P		AE0202A	POS 16	D40360J		
D40362P		AE0302A	POS 05	D40362J	W0321	ALL
D40356P		AE0402A	POS 31	D40356J	W0422	ALL
D40930P		AE0402A	POS 36	D40930J	W0422	ALL
D40352P		AP0600B	POS 16	D40352J	W0044	ALL
<b>W5615</b>	<b>NN2</b>	<b>SATCOM E6-1 TO E4-1,E5-2</b>				
D41101P		AE0401A	POS 15	D41101J	W0411	YC051-YD157
D45001J		AE0502A	POS 02	D45001P	W0521	YC051-YD157
D06103P		AE0601A	POS 03	D06103J	W0613	YC051-YD157
D06105P		AE0601A	POS 09	D06105J	W0613	YC051-YD157

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5610

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5719	LA2	INTERRACK E1-1 TO E1-2,E1-3 AND E4-2				
I D41125P		AE0101A	POS 25	D41125J	W0111	ALL
I D41211J		AE0102A	POS 01	D41211P	W0121	ALL
I D41509P		AE0103A	POS 19	D41509J	W0131	ALL
I D42111P		AE0402A	POS 01	D42111J	W0422	ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5710

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5721</b>	<b>LE2</b>	<b>E1-1 TO E1-2 TO E1-4</b>				
D41121P		AE0101A	POS 17	D41121J	W0111	ALL
D41127J		AE0102A	POS 13	D41127P	W0121	ALL
D41129J		AE0104A	POS 18	D41129P	W0141	ALL
<b>W5723</b>	<b>RB2*</b>	<b>INTERRACK E1-4 TO E1-1,E1-2,E1-3</b>				
D40063P		AE0101B	POS 05	D40063J	W0111	ALL
D43317P		AE0101B	POS 10	D43317J	W0111	ALL
D41213J		AE0102A	POS 12	D41213P	W0121	ALL
D41131P		AE0103A	POS 22	D41131J	W0131	ALL
D40047J		AE0104A	POS 08	D40047P	W0141	ALL
D41507J		AE0105A	POS 03	D41507P	W0151	ALL
D43306P		AE0303A	POS 05	D43306J	W0331	YD158-YR328
D43333P		AE0303A	POS 44	D43333J	W0331	YD158-YR328
<b>W5726</b>	<b>AD1</b>	<b>ECU TO E/E BAY AND AB1050R DISCONNECT BRACKET</b>				
D44584P				D44584J	W7150	YC051-YC052
D03599A			*/*/			YN231-YN501
D03599B			*/*/			YN231-YN501
D03599C			880/175/R033			YN231-YN501
D40790P		AB1050R	POS 01	D40790J	W4726	YC053-YR328
D40876P		AB1050R	POS 02	D40876J	W4726	YC053-YR328
D40854P		AB1050R	POS 03	D40854J	W4724	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40854P		AB1050R	POS 03	D40854J		YD160-YD170, YL969-YL999, YN237-YN260
D10912		AB1088	POS 01			YC051-YC052
D10436		AB1088	POS 02			YC051-YC052
D10434		AB1088	POS 03			YC051-YC052
D11118		AB1088	POS 04			YC051-YC052
D40060J		AB1088	POS 05	D40060P	W7538	YC051-YC052
D40910P		AE0201A	POS 06	D40910J	W0212	ALL
D40254P		AE0201A	POS 07	D40254J	W0212	ALL
D40926P		AE0201A	POS 09	D40926J	W0212	ALL
D40942P		AE0202A	POS 03	D40942J	W0220	YC051-YD158, YL951-YR328
D40942P		AE0202A	POS 03	D40942J		YD160-YD170

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5720

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5726</b>	<b>AD1</b>	<b>ECU TO E/E BAY AND AB1050R DISCONNECT BRACKET (continued)</b>				
D40928P		AE0202A	POS 04	D40928J	W0220	YC051-YD158, YL951-YR328
D40928P		AE0202A	POS 04	D40928J		YD160-YD170
D40912P		AE0202A	POS 22	D40912J	W0220	YC051-YD158, YL951-YR328
D40912P		AE0202A	POS 22	D40912J		YD160-YD170
D40946P		AE0202A	POS 23	D40946J	W0220	YC051-YD158, YL951-YR328
D40946P		AE0202A	POS 23	D40946J		YD160-YD170
D40908P		AE0302A	POS 52	D40908J	W0321	ALL
D40904P		AE0401A	POS 26	D40904J	W0410	ALL
D00922		M00299	1055/240/R037			YC051-YC052
D00594		M00404	1025/ /			YC051-YC052
D01176		M00404	1025/ /			YC051-YC052
D03599		M01709	E6 880/177/R032			ALL
D03599A		M01709	E6 880/177/R032			YC051-YL999, YR301-YR328
D03599B		M01709	E6 880/177/R032			YC051-YL999, YR301-YR328
D03599C		M01709	E6 880/177/R032			YC051-YL999, YR301-YR328
D11436		P0091				ALL
D11438		P0091				ALL
D01246		S00284	1055/240/R037			YC051-YC052
<b>W5728</b>	<b>AA2*</b>	<b>DISC AL0675A TO E2-2 (WITH E6)</b>				
D43024P		AE0202A	POS 29	D43024J	W0220	YC051-YD158, YL951-YR328
D43024P		AE0202A	POS 29	D43024J		YD160-YD170
D46026J		AL0675B	POS 01	D46026P	W7026	YC051-YR323, YR325-YR328
D46026J		AL0675B	POS 01	D46026P		YR324

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5720

Page 2 End

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W5837	NA2	LOC ANT LEFT - STA 178 TO R315 - LOC ANTENNA SWITCH RELAY-1				
I D03321				D02623		ALL
I D02117		R00315	306/180/R021			ALL
I W5839	RB2	LOC ANT RIGHT - R316 - LOC ANTENNA SWITCH RELAY-2				
I D03323				D02627		ALL
I D02125		R00316	300/178/R022			ALL

For training purposes only!

## MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W5830

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W6024	NN2	P19 (EXTERNAL POWER RECP PANEL) TO P6 DISC				
I D44252P				D44252J	W0048	YC051-YL954, YN231-YN235
I D40654P		AP0600B	POS 24	D40654J	W0044	ALL
I D40664		DM0035	230/187/R034			YL955-YL999, YN236-YR328
I W6028	SN2	MAIN WHEEL WELL TO E/E BAY VIA CROWN				
I D43104J		AB0727R	POS 01	D43104P	W1032	YC051-YN236, YN501-YR328
I D43104J		AB0727R	POS 01	D43104P		YN237-YN260
I D40180P		AE0101A	POS 16	D40180J	W0111	ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6020

Page 1 End

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W6032	RB1	DISC AB0500DR TO E4-2.				
I D40402J		AB0500DR	POS 06	D40402P	W6124	ALL
I D40416J		AB0500DR	POS 08	D40416P	W5224	ALL
I D43028P		AE0402A	POS 16	D43028J	W0422	ALL
I W6034	NA2	DISC AB0500DR TO E3-2				
I D40404J		AB0500DR	POS 05	D40404P	W6124	ALL
I D43030P		AE0302A	POS 51	D43030J	W0321	ALL

For training purposes only!

## MASTER BUNDLE LIST

D280A108

91-21-13

Section W6030

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W6102	LA2	CABIN PRESSURE OUTFLOW VALVE TO E/E BAY (LA2).				
I D40240P		AE0202A	POS 20	D40240J	W0220	YC051-YD158, YL951-YR328 YD160-YD170
I D40240P		AE0202A	POS 20	D40240J		
I D40242P		AE0401A	POS 30	D40242J	W0410	ALL
I D10728		V00048	980/185/R026			ALL
I D10730		V00048	980/185/R026			ALL
I D10732		V00048	980/185/R026			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6100

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W6110	LA2*	P91 (FWD DISC) TO E/E BAY				
I D40364P		AE0101A	POS 12	D40364J	W0111	ALL
I D48124P		AJ0048A	POS 18	D48124J	W0088	ALL
I D40368P		AP0600B	POS 09	D40368J	W0044	ALL
I D00160		M00098	362/164/R027			ALL
I D10884		M01708	273/189/L022			ALL
I D11418		P0091				ALL
I D11422		P0091				ALL
I D11450		P0092				ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6110

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6122</b>	<b>SB2*</b>	<b>DISC AB0500DR TO MAIN WHEEL WELL</b>				
D40410P		AB0500DR	POS 02	D40410J	W6528	ALL
D40400P		AB0500DR	POS 03	D40400J	W6530	ALL
D46042J		AL0675C	POS 02	D46042P	W8222	YC051-YD158, YL951-YL968, YN231-YR328
D46042J		AL0675C	POS 02	D46042P		YD160-YD170, YL969-YL999
D40004J		AL0720C	POS 02	D40004P	W8224	ALL
<b>W6124</b>	<b>LA2</b>	<b>MAIN WHEEL WELL TO AB0500DR AND CROWN</b>				
D40262P				D40262J	W6134	YC051-YN236
D40262P				D40262J		YN237-YN260
D40264P				D40264J	W6134	YC051-YN236, YN501-YR328
D40264P				D40264J		YN237-YN260
D43400P				D43400J	W6134	YN501-YR328
D40404P		AB0500DR	POS 05	D40404J	W6034	ALL
D40402P		AB0500DR	POS 06	D40402J	W6032	ALL
D46602P		AB0727R	POS 02	D46602J	W5124	ALL
D46038J		AL0675C	POS 03	D46038P	W8122	YC051-YD158, YL951-YR323, YR325-YR328
D46038J		AL0675C	POS 03	D46038P		YD160-YD170, YR324
D46020J		AL0720B	POS 04	D46020P	W7124	YC051-YD158
D46020J		AL0720B	POS 04	D46020P	W7128	YD160-YN236, YN501-YR328
D46020J		AL0720B	POS 04	D46020P		YN237-YN260
D46044J		AL0720C	POS 03	D46044P	W8226	ALL
D40006J		AL0720C	POS 04	D40006P	W8226	ALL
D46040J		AL0720D	POS 01	D46040P	W8124	YC051-YD158, YL951-YR328
D46040J		AL0720D	POS 01	D46040P		YD160-YD170
<b>W6128</b>	<b>LA1</b>	<b>E/E BAY TO MWW-SYS A ELEC HYD PUMP (ABEX ONLY, L/N 1610 AND ON)</b>				
D43060P		AE0202A	POS 17	D43060J	W0220	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR323, YR325-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6120

Page 1

Nov 12/2012





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6128</b>	<b>LA1</b>	<b>E/E BAY TO MWW-SYS A ELEC HYD PUMP (ABEX ONLY, L/N 1610 AND ON) (continued)</b>				
D43060P D00476		AE0202A L00323	POS 17 500A+10/150/R032	D43060J		YD160-YD170 YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328 YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328 YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328 YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328 YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
D02664		M1103				
D11456		P0092				
D02688		S798				

For training purposes only!

## MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6120

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6134</b>	<b>LA2</b>	<b>E/E BAY TO VERTICAL STAB</b>				
D40236J				D40236P	W7030	YC056-YN236, YN501-YR328
D40262J				D40262P	W6124	YC051-YN236
D40264J				D40264P	W6124	YC051-YN236, YN501-YR328
D43400J				D43400P	W6124	YN501-YR328
D40192J		AB1030C	POS 01	D40192P	W8030	YC051-YN236, YN501-YR328
D04826J		AB1030C	POS 04	D04826P	W7102	YC051-YN236, YN501-YR328
D40842P		AB1050L	POS 01	D40842J	W4134	YC053-YN236, YN501-YR328
D40268J		AB1080	POS 01	D40268P	W6136	YC051-YC052
D40194P		AE0302A	POS 39	D40194J	W0321	YC051-YN236, YN501-YR328
D40276P		AE0302A	POS 48	D40276J	W0321	YC051-YN236, YN501-YR328
D40238P		AE0402A	POS 08	D40238J	W0422	YC051-YN236, YN501-YR328
D00756		S00126	1084/266/R018			YC051-YC052
<b>W6136</b>	<b>RN1</b>	<b>RUDDER EQUIP (VERTICAL STAB) TO DISC AB1080</b>				
D40268P		AB1080	POS 01	D40268J	W6134	YC051-YC052
D40268P		AB1080	POS 01	D40268J	W4134	YC053-YD158, YL951-YR328
D10197		M00175	1087/ /			YD157-YD158, YL951-YR328
D02932		M01125	RUD STA/51./4			YC051-YD158, YL951-YR328
D03576		T00469	RUD80.00/ /			YC051-YD158, YL951-YR328
D10197		V00158	1087/ /			YC051-YD155

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6130

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W6162	RB2*	RIGHT WING BODY PRESS SEAL TO E/E BAY				
I D11164		AB0237B	POS 01			YC054-YR328
I D39922		AD0520				YC054-YR328
I D40156P		AE0401A	POS 50	D40156J	W0410	YC054-YR328
I W6164	RB1*	RIGHT WING BODY PRESS SEAL TO E/E BAY				
I D39934		AD0520				YC051-YN236, YN501-YR328
I D40140P		AE0402A	POS 26	D40140J	W0422	YC051-YN236, YN501-YR328
I D40720P		AE0402A	POS 27	D40720J	W0422	YC051-YN236, YN501-YR328
I W6166	SN2*	RIGHT WING BODY PRESS SEAL TO E/E BAY				
I D39902		AD0520				ALL
I D40142P		AE0101B	POS 04	D40142J	W0111	ALL
I D40948P		AE0101B	POS 06	D40948J	W0111	ALL
I W6168	SB2*	RIGHT WING BODY PRESS SEAL TO E/E BAY				
I D39930		AD0520				ALL
I D40144P		AE0401A	POS 38	D40144J	W0410	ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6160

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W6170	RA2*	RIGHT WING BODY PRESS SEAL TO E/E BAY				
I D40728J		AB0405B	POS 01	D40728P	W4170	ALL
I D39926		AD0520				ALL
I D46144P		AJ0046A	POS 07	D46144J	W0066	ALL
I W6172	RA2*	RIGHT WING BODY PRESS SEAL TOE/E BAY				
I D11162		AB0237B	POS 02			ALL
I D40730J		AB0405B	POS 02	D40730P	W4170	ALL
I D39918		AD0520				ALL
I D46146P		AJ0046A	POS 08	D46146J	W0066	ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6170

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W6182	NN2	ISPC TO P6 (EE-BAY TO PC POWER OUTLET(P6))				
D13902		M02567	360/160/R025			YL951-YL999, YN232-YR328
D13904		M02587	P006-00/000/0000			YL951-YL999, YN232-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6180

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6202</b>	<b>SB2</b>	<b>RIGHT A/C PACK (STA 536R) DISC TO A/C PACK (SB2)</b>				
D04582J		AB0536R	POS 01	D04582P	W6528	ALL
D40058J		AB0536R	POS 02	D40058P	W6230	YC051-YR323, YR325-YR328
D40058J		AB0536R	POS 02	D40058P		YR324
D00708		M00224	566/164/R032			YN231-YN501
D00972		M00329	567/164/R032			YN231-YN501
D00844		M00356	580/155/R040			ALL
D00836		M00371	540/170/R025			ALL
D11920		M1849				ALL
D00536		S00004	575/158/R036			YN231-YN501
D00538		S00005	577/157/R026			ALL
D10058		S00939	578/165/R031			YC051-YL999, YR301-YR328
D00098		T00403	558/160/R042			ALL
D00170		T00406	644/158/R012			YN231-YN501
D00712		T00431	553/152/R025			YN231-YN501
D01290		T00439	583/161/R031			YN231-YN501
D03876		T00474	573/154/R030			YC051-YL999, YR301-YR328
D03918		T00482	584/162/R032			YC051-YL999, YR301-YR328
D03982		T00489	574/152/R033			YC051-YL999, YR301-YR328
D00522		V00022	652/148/R013			YN231-YN501
D00704		V00028	570/163/R024			YN231-YN501
D03188		V00132	643/162/R049			ALL
D03190		V00132	643/162/R049			ALL
D03872		V00141	656/145/R010			YC051-YL999, YR301-YR328
D03874		V00142	653/151/R035			YC051-YL999, YR301-YR328
D03888		V00144	540/152/R012			YC051-YL999, YR301-YR328
D03890		V00145	546/153/R016			YC051-YL999, YR301-YR328
<b>W6204</b>	<b>RB2</b>	<b>CABIN PRESSURE OUTFLOW VALVE TO E/E BAY (RB2)</b>				
D40066P		AE0401A	POS 39	D40066J	W0410	ALL
D10734		V00048	980/185/R026			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6200

Page 1

Nov 12/2012

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6204</b>	<b>RB2</b>	<b>CABIN PRESSURE OUTFLOW VALVE TO E/E BAY (RB2) (continued)</b>				
D10736		V00048	980/185/R026			ALL
<b>W6206</b>	<b>RN2</b>	<b>P8 TO MISC EQUIPMENT (RN2)</b>				
D40816P		AP0600B	POS 18	D40816J	W0044	ALL
D03428		P008-47	P008-00/ /			ALL
D03432		P008-50	P008-00/ /			ALL
D03768		R00425	J019-00/ /			ALL
<b>W6208</b>	<b>RA2</b>	<b>P8 TO MISC EQUIPMENT</b>				
D40818P		AE0101B	POS 07	D40818J	W0111	YC051-YD158, YL951-YR328
D40228P		AE0402A	POS 13	D40228J	W0422	YC051-YD158, YL951-YR328
D40222P		AE0402A	POS 14	D40222J	W0422	YC051-YD158, YL951-YR328
D05148P		AF0213A	POS 01	D05148J	W0008	YC051-YD158, YL951-YR328
D05150P		AF0213A	POS 04	D05150J	W0008	YC051-YD158, YL951-YR328
D00698		AF0222A	POS 05			YC051-YD158, YL951-YR328
D10537		AF0222A	POS 07			YC051-YD158, YL951-YR328
D46110P		AJ0046A	POS 04	D46110J	W0066	YC051-YD158, YL951-YR328
D46150P		AJ0046A	POS 12	D46150J	W0066	YC051-YD158, YL951-YR328
D40528J		AP0600A	POS 08	D40528P	W2212	YC051-YD158, YL951-YR328
D40820P		AP0600B	POS 17	D40820J	W0044	YC051-YD158, YL951-YR328
D01084		M00359	199/205/L006			YC051-YD158, YL951-YR328
D03116		M01126	P008-43/ /			YC051-YD158, YL951-YR328
D03124		M01201	206/200/R015			YC051-YD158, YL951-YR328
D12156		M01983	228/202/L011			YC051-YD158, YL951-YR328

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W6200

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6208</b>	<b>RA2</b>	<b>P8 TO MISC EQUIPMENT (continued)</b>				
D02934		N00159	P008-43/ /			YC051-YD158, YL951-YR328
D02930		P008-43	P008-00/ /			YC051-YD158, YL951-YR328
D10199		S00276	178/200/L030			YC051-YD158, YL951-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6200

Page 3 End

Nov 12/2012





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6210</b>	<b>RB1</b>	<b>P92 (AFT DISC) TO E/E BAY</b>				
D40372P		AE0201A	POS 13	D40372J	W0212	ALL
D40938P		AE0402A	POS 28	D40938J	W0422	ALL
D40370P		AE0402A	POS 29	D40370J	W0422	ALL
D00042		M00005	E002-01/ /			ALL
D02936		M00006	390/158/L005			ALL
D11738		P0092				ALL
<b>W6212</b>	<b>NN2</b>	<b>J39 (B) TO MISC EQUIPMENT</b>				
D43924P		AJ0039B	POS 02	D43924J	W0084	YN501-YR328
D40708P		AP0600B	POS 04	D40708J	W0054	YN501-YR324
D40708P		AP0600B	POS 04	D40708J		YR325-YR328
<b>W6214</b>	<b>LA2*</b>	<b>P6A TO E2-2, E4-1 (LA2)</b>				
D40774P		AE0101A	POS 33	D40774J	W0111	YD158-YR323, YR325-YR328
D41012P		AE0202A	POS 18	D41012J	W0220	YC051-YD158, YL951-YR323, YR325-YR328
D41012P		AE0202A	POS 18	D41012J		YD160-YD170
D40380P		AE0202A	POS 26	D40380J	W0220	YC051-YD158, YL951-YR323, YR325-YR328
D40380P		AE0202A	POS 26	D40380J		YD160-YD170
D41814P		AE0303A	POS 25	D41814J	W0330	YC051-YL999, YR301-YR323, YR325-YR328
D41828P		AE0401A	POS 12	D41828J	W0410	YC051-YL999, YR301-YR323, YR325-YR328
D40328P		AE0401A	POS 31	D40328J	W0410	YC051-YR323, YR325-YR328
D40378P		AE0401A	POS 46	D40378J	W0410	YC051-YL968, YN231-YN236, YN501-YR323, YR325-YR328
D40378P		AE0401A	POS 46	D40378J		YL969-YL999, YN237-YN260
D40444P		AP0600A	POS 04	D40444J	W0044	YC051-YR323, YR325-YR328

## MASTER BUNDLE LIST

D280A108

91-21-13

Section W6210

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6214</b>	<b>LA2*</b>	<b>P6A TO E2-2, E4-1 (LA2) (continued)</b>				
D03892		S00931	373/194/L058			YC051-YL999, YR301-YR323, YR325-YR328
D11360		S11				YN231-YN501
D00512		T00419	372/195/L055			YN231-YN501
D00514		T00420	371/192/L058			YN231-YN501
D03882		T00477	372/196/L057			YC051-YL999, YR301-YR323, YR325-YR328
D03884		T00478	372/196/L057			YC051-YL999, YR301-YR323, YR325-YR328
D03924		T00485	371/194/L058			YC051-YL999, YR301-YR323, YR325-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6210

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6220</b>	<b>SA2</b>	<b>E3-3 TO E4-1 (SA2)</b>				
D41802P		AE0303A	POS 26	D41802J	W0330	YC051-YL999, YR301-YR323, YR325-YR328
D41804P		AE0401A	POS 09	D41804J	W0410	YC051-YL999, YR301-YR323, YR325-YR328
<b>W6222</b>	<b>RN1</b>	<b>J4 TO E/E BAY AND STAB TRIM ACTUATOR</b>				
D40248J				D40248P	W5224	YC051-YR323, YR325-YR328
D40250J				D40250P	W5224	YC051-YN260
D43404J				D43404P	W5224	YN501-YR323, YR325-YR328
D40836P		AB1050R	POS 05	D40836J	W4222	YC053-YN236, YN501-YR323, YR325-YR328
D40836P		AB1050R	POS 05	D40836J		YN237-YN260
D40432P		AE0402A	POS 17	D40432J	W0422	YC051-YR323, YR325-YR328
D40742P		AE0402A	POS 19	D40742J	W0422	YC051-YR323, YR325-YR328
D40602P		AJ0004	POS 01	D40602J	W0094	YC051-YR323, YR325-YR328
D40616P		AJ0004	POS 06	D40616J	W0094	YC051-YR323, YR325-YR328
D40614P		AJ0004	POS 07	D40614J	W0094	YC051-YR323, YR325-YR328
D40574P		AP0600B	POS 21	D40574J	W0044	YC051-YR323, YR325-YR328
D00700		M01659	1076/264/R005			YC051-YC052
<b>W6228</b>	<b>RB2</b>	<b>DISC AB0500DR TO MAIN WHEEL WELL</b>				
D40406P		AB0500DR	POS 01	D40406J	W6528	ALL
D46048J		AL0720D	POS 03	D46048P	W8230	ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6220

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6230</b>	<b>RB2</b>	<b>DISC AB0500DR TO E1-3, E4-1 (RB2)</b>				
D40058P		AB0536R	POS 02	D40058J	W6202	YC051-YR323, YR325-YR328
D41806P		AE0303A	POS 41	D41806J	W0330	YC051-YL999, YR301-YR323, YR325-YR328
D40330P		AE0401A	POS 36	D40330J	W0410	YC051-YR323, YR325-YR328
D43038P		AE0401A	POS 49	D43038J	W0410	YC051-YR323, YR325-YR328
D00968		M00327	519/166/R057			YC051-YR323, YR325-YR328
D03020 D03854		M1148 M1441				YN231-YN501 YC051-YL999, YR301-YR323, YR325-YR328
D11362 D00518 D00520 D03878		S00014 T00416 T00417 T00475	532/299/R010 534/299/R010 535/299/R010 5002+7/192/R003			YN231-YN501 YN231-YN501 YN231-YN501 YC051-YL999, YR301-YR323, YR325-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6230

Page 1 End

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6242</b>	<b>RN1</b>	<b>P92 TO AB0340B DISCONNECT BRACKET</b>				
D11398				D11400		ALL
D01128		AB0288	POS 02			ALL
D40050P		AB0340A	POS 05	D40050J	W3058	YC051-YD158, YL951-YR328 YD160-YD170
D40050P		AB0340A	POS 05	D40050J		
D40202P		AB0340B	POS 09	D40202J	W4258	ALL
D46138P		AJ0046B	POS 02	D46138J	W0066	ALL
D11452		P0092				ALL
<b>W6248</b>	<b>LN2*</b>	<b>AFT CARGO LIGHTS</b>				
D40500P		AB0500DL	POS 05	D40500J	W5248	YC051-YN236, YN501-YR328
D11772		L00189	727B+7/205/L011			YC051-YN236, YN501-YR328
D11770		L00190	727A+10/205/R019			YC051-YN236, YN501-YR328
D11776		L00191	754/205/L010			YC051-YN236, YN501-YR328
D11778		L00192	774/205/R010			YC051-YN236, YN501-YR328
D11782		L00193	834/205/L019			YC051-YN236, YN501-YR328
D11784		L00461	894/205/R010			YC051-YN236, YN501-YR328
D11774		L01021	727D+17/205/R011			YC051-YN236, YN501-YR328
D11998		L01206	727F+7/205/L010			YC051-YL999, YR301-YR328
D12000		L01315	727H+7/205/R010			YC051-YL999, YR301-YR328
D00866		M00276	1045/ /			YC051-YN236, YN501-YR328
D01070		M00348	727/201/L009			YC051-YN236, YN501-YR328
D11470		M01848	868/179/L043			YC051-YN236, YN501-YR328
D12180		M01906	923/173/R014			YC051-YN236, YN501-YR328

## MASTER BUNDLE LIST

D280A108

91-21-13

Section W6240

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6248</b>	<b>LN2*</b>	<b>AFT CARGO LIGHTS (continued)</b>				
D12182		M01906	923/173/R014			YC051-YN236, YN501-YR328
D12184		M01920	957/179/L001			YC051-YL953, YN231-YN234
D12186		M01920	957/179/L001			YC051-YL953, YN231-YN234
D12188		M01971	968/198/R030			YC051-YL953, YN231-YN234
D12190		M01971	968/198/R030			YC051-YL953, YN231-YN234
D12192		M01972	1002/207/R044			YC051-YL953, YN231-YN234
D12194		M01972	1002/207/R044			YC051-YL953, YN231-YN234
D12196		M01973				YC051-YL953, YN231-YN234
D12198		M01973				YC051-YL953, YN231-YN234
D12200		M01974				YC051-YL953, YN231-YN234
D12202		M01974				YC051-YL953, YN231-YN234
D12204		M01975				YC051-YN236, YN501-YR328
D12206		M01975				YC051-YN236, YN501-YR328
D12208		M01976				YC051-YN236, YN501-YR328
D12210		M01976				YC051-YN236, YN501-YR328
D12212		M01977				YC051-YN236, YN501-YR328
D12214		M01977				YC051-YN236, YN501-YR328
D12216		M01978				YC051-YN236, YN501-YR328
D12218		M01978				YC051-YN236, YN501-YR328
D12220		M01979				YC051-YL953, YN231-YN234

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6240

Page 2

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6248</b>	<b>LN2*</b>	<b>AFT CARGO LIGHTS (continued)</b>				
D12222		M01979				YC051-YL953, YN231-YN234
D12224		M01980	932/207/L059			YC051-YN236, YN501-YR328
D12226		M01980	932/207/L059			YC051-YN236, YN501-YR328
D12228		M01981	942/207/R062			YC051-YN236, YN501-YR328
D12230		M01981	942/207/R062			YC051-YN236, YN501-YR328
D12232		M01982				YC051-YN236, YN501-YR328
D12234		M01982				YC051-YN236, YN501-YR328
D12188		M02763	968/198/R030			YL954-YL999, YN235-YN236, YN501-YR328
D12190		M02763	968/198/R030			YL954-YL999, YN235-YN236, YN501-YR328
D12192		M02764	1002/207/R044			YL954-YL999, YN235-YN236, YN501-YR328
D12194		M02764	1002/207/R044			YL954-YL999, YN235-YN236, YN501-YR328
D12184		M02765	957/179/L001			YL954-YL999, YN235-YN236, YN501-YR328
D12186		M02765	957/179/L001			YL954-YL999, YN235-YN236, YN501-YR328
D12200		M02766				YL954-YL999, YN235-YN236, YN501-YR328
D12202		M02766				YL954-YL999, YN235-YN236, YN501-YR328

## MASTER BUNDLE LIST

D280A108

91-21-13

Section W6240

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6248</b>	<b>LN2*</b>	<b>AFT CARGO LIGHTS (continued)</b>				
D12196		M02767				YL954-YL999, YN235-YN236, YN501-YR328
D12198		M02767				YL954-YL999, YN235-YN236, YN501-YR328
D12220		M02768				YL954-YL999, YN235-YN236, YN501-YR328
D12222		M02768				YL954-YL999, YN235-YN236, YN501-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6240

Page 4 End

Nov 12/2012





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W6288	NN2	AB0340B, E3-3, E4-1 TO TEMPERATURE SENSORS				
D41027P				D41027J	W4116	YR301-YR328
D41028P				D41028J	W4118	YR301-YR328
D41820P				D41820J	W4160	YC051-YL999
D41834P				D41834J	W4180	YC051-YL999
D41838J		AB0340B	POS 03	D41838P	W2114	YC051-YL999, YR301-YR328
D41818P		AE0303A	POS 32	D41818J	W0330	YC051-YL999, YR301-YR323, YR325-YR328
D41818P		AE0303A	POS 32	D41818J		YR324
D41816P		AE0401A	POS 11	D41816J	W0410	YC051-YL999, YR301-YR328
D11834		S01076	500F+10/298/L014			YC051-YL999, YR301-YR328
D11836		S01077	534/298/R014			YC051-YL999, YR301-YR328
D11830		T00533	500F+7/299/L012			YC051-YL999, YR301-YR328
D11832		T00534	500F+9/300/L012			YC051-YL999, YR301-YR328
D11838		T00535	535/299/R012			YC051-YL999, YR301-YR328
D11840		T00536	537/299/R012			YC051-YL999, YR301-YR328

## MASTER BUNDLE LIST

D280A108

91-21-13

Section W6280

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6410</b>	<b>RB2</b>	<b>P92 (AFT DISC) TO E/E BAY</b>				
D40382P		AE0402A	POS 25	D40382J	W0422	ALL
D11454		P0092				ALL
<b>W6412</b>	<b>RB2*</b>	<b>AP0600B TO E3 AND E4 (RB2)</b>				
D40394P		AE0301A	POS 34	D40394J	W0313	YC051-YN236, YN501-YR323, YR325-YR328
D40392P		AE0302A	POS 45	D40392J	W0321	YC051-YN236, YN501-YR323, YR325-YR328
D43080P		AE0302A	POS 54	D43080J	W0321	YC051-YN236, YN501-YR323, YR325-YR328
D41822P		AE0303A	POS 35	D41822J	W0330	YC051-YN236, YN501-YR323, YR325-YR328
D41830P		AE0401A	POS 13	D41830J	W0410	YC051-YN236, YN501-YR323, YR325-YR328
D41010P		AE0401A	POS 33	D41010J	W0410	YC051-YN236, YN501-YR323, YR325-YR328
D40326P		AE0401A	POS 35	D40326J	W0410	YC051-YN236, YN501-YR323, YR325-YR328
D40390P		AE0401A	POS 52	D40390J	W0410	YC051-YN236, YN501-YR323, YR325-YR328
D42400P		AE0402A	POS 22	D42400J	W0420	YC051-YN236, YN501-YR323, YR325-YR328
D40712P		AE0402A	POS 23	D40712J	W0422	YC051-YN236, YN501-YR323, YR325-YR328
D40388P		AE0402A	POS 24	D40388J	W0422	YC051-YN236, YN501-YR323, YR325-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6410

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6412</b>	<b>RB2*</b>	<b>AP0600B TO E3 AND E4 (RB2) (continued)</b>				
D41832P		AP0600B	POS 07	D41832J	W0044	YC051-YL999, YR301-YR323, YR325-YR328
D40386P		AP0600B	POS 14	D40386J	W0044	YC051-YN236, YN501-YR323, YR325-YR328
D11841		M02554	201/210/R002			YN231-YN236, YN501
<b>W6414</b>	<b>RB2</b>	<b>AP0600B TO E/E BAY (RB2)</b>				
D46142P		AJ0046B	POS 08	D46142J	W0066	ALL
D40396P		AP0600B	POS 22	D40396J	W0044	ALL
D00162		M00099	370/164/R027			ALL
D11448		P0092				ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6410

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W6420	SB2	E3-3 TO E4-1 (SB2)				
D41808P		AE0303A	POS 37	D41808J	W0330	YC051-YL999, YR301-YR323, YR325-YR328
D41810P		AE0401A	POS 10	D41810J	W0410	YC051-YL999, YR301-YR323, YR325-YR328
I W6424	RB1	P92 TO P6 & P18				
I D11440		P0092				ALL
I D11442		P0092				ALL
I D11444		P0092				ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6420

Page 1 End

Nov 12/2012



Bundle	Sep	Description	Location	MW Connector	MW Bundle	Effectivity
Equip		Matewith				
I W6430	RB2	P92 TO EQUIPMENT COOLING SUPPLY FAN (RB2)				
I D03470		M1322				ALL
I D11802		P0092				ALL

For training purposes only!

---

**MASTER BUNDLE LIST**

D280A108

**91-21-13**

Section W6430

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6491</b>	<b>NN2</b>	<b>WEATHER RADAR SCOPE, CONT, R/T</b>				
D01411				D01407		YC051-YD158, YL951-YR328
D40149P		AE0301A	POS 35	D40149J	W0313	YC053-YD158, YL951-YR328
D40147P		AJ0022	POS 09	D40147J	W0076	YC053-YD158, YL951-YN236, YN501-YR328
D40147P		AJ0022	POS 09	D40147J		YN237-YN260
D40107P		AJ0046A	POS 10	D40107J	W0066	YC051-YC052
D40091P		AJ0048A	POS 10	D40091J	W0088	YC051-YC052
D40089P		AJ0048A	POS 11	D40089J	W0088	YC051-YC052
D00193		AP008-52				YC051-YC058
D00189		M00101	188/ /			YC051-YD158, YL951-YR328
D00189A		M00101	188/ /			YC051-YD158, YL951-YR328
D00189B		M00101	188/ /			YC051-YD158, YL951-YR328
D00189C		M00101	188/ /			YC051-YD158, YL951-YR328
D02273		M00103	188/170/R008			YC051-YD158, YL951-YR328
D00193		P008-52	P008-00/ /			YC059-YD158, YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6490

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6502</b>	<b>SB2</b>	<b>RIGHT A/C PACK (STA 536R) DISC TO A/C PACK (SB2)</b>				
D40846P		DISC BRKT		D40846J	W6504	YD153-YR328
D41600		DM0060	536/159/R026			ALL
D00846		M00356	580/155/R040			ALL
D00394		V00019	581/158/R015			ALL
D00490		V00019	581/158/R015			YC051-YD152
D00492		V00019	581/158/R015			ALL
D00964		V00019	581/158/R015			ALL
D03914		V00146	557/148/R014			YC051-YL999, YR301-YR328
<b>W6504</b>	<b>SB2</b>	<b>RIGHT A/C PACK (STA 536R) DISC TO A/C PACK (SB2)</b>				
D40846J		DISC BRKT		D40846P	W6502	YD153-YR328
D00490		V00019	581/158/R015			YD153-YR328
<b>W6506</b>	<b>SB2*</b>	<b>P8 TO E/E BAY</b>				
D11132		AB0250A	POS 02			ALL
D10169		AB0250A	POS 03			ALL
D40810P		AE0103A	POS 20	D40810J	W0131	ALL
D11292		AF0222A	POS 01			ALL
D46132P		AJ0046B	POS 04	D46132J	W0066	ALL
D46106P		AJ0046B	POS 10	D46106J	W0066	ALL
D48138P		AJ0048A	POS 25	D48138J	W0088	ALL
D48132P		AJ0048A	POS 26	D48132J	W0088	ALL
D40812P		AP0600B	POS 12	D40812J	W0044	ALL
D00578		P008-01	P008-00/ /			ALL
D01080		P008-01	P008-00/ /			ALL
D00580		S00010	P008-01/220/000			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6500

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W6510	RA2*	P8 TO E/E BAY AND J BOX				
D11290		AF0222A	POS 02			YC051-YD158, YL951-YR328
D10173		AF0222A	POS 06			YC051-YD158, YL951-YR328
D40696P		AJ0024	POS 02	D40696J	W0080	YC051-YD158, YL951-YR328
D46118P		AJ0046B	POS 09	D46118J	W0066	YC051-YD158, YL951-YR328
D48130P		AJ0048A	POS 23	D48130J	W0088	YC051-YD158, YL951-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6510

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W6528	SB2	DISC AB0500DR TO E1-3, E1-4, E4-1 (SB2)				
I D40406J		AB0500DR	POS 01	D40406P	W6228	ALL
I D40410J		AB0500DR	POS 02	D40410P	W6122	ALL
I D04582P		AB0536R	POS 01	D04582J	W6202	ALL
I D43040P		AE0103A	POS 07	D43040J	W0131	ALL
I D43044P		AE0401A	POS 37	D43044J	W0410	ALL
I D46136P		AJ0046B	POS 05	D46136J	W0066	ALL
I D00848		M00272	545/160/			ALL
I D00540		S00006	531/299/R010			YN231-YN501
I D03942		S00935	521/160/R015			YC051-YL999, YR301-YR328
I D41602		STA0536R				ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6520

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W6530	SB1	DISC AB0500DR TO E3-2 SHELF.				
I D40400J		AB0500DR	POS 03	D40400P	W6122	ALL
I D43046P		AE0302A	POS 32	D43046J	W0321	ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6530

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle	Sep	Description	Location	MW Connector	MW Bundle	Effectivity
Equip		Matewith				
I W6564	SN2*	RIGHT WING BODY PRESS SEAL TO E/E BAY				
I D39910		AD0520				ALL
I D40158P		AE0401A	POS 42	D40158J	W0410	ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6560

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W6570	SN2	RIGHT WING BODY PRESS SEAL TO RADAR BAY				
I D39914		AD0520				ALL
I D48128P		AJ0048A	POS 24	D48128J	W0088	ALL
I D11306		M01827	228/182/R020			ALL
I D11354		M01827	228/182/R020			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6570

Page 1 End

Nov 12/2012



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W6586	RA1	RIGHT WING BODY PRESS SEAL TO E/E BAY				
I D39906		AD0520				ALL
I D40164P		AE0402A	POS 15	D40164J	W0422	ALL
I W6588	RN1*	RIGHT WING BODY PRESS SEAL TO E/E BAY				
I D41850J		AB0500DR	POS 07	D41850P	W1126	YC051-YD158, YL951-YR328 YD160-YD170
I D41850J		AB0500DR	POS 07	D41850P		YD160-YD170
I D41856J		AB0500DR	POS 09	D41856P	W1136	ALL
I D05342J		AB0500DR	POS 10	D05342P	W1136	ALL
I D05350J		AB0500DR	POS 11	D05350P	W1126	YC051-YD158, YL951-YR328 YD160-YD170
I D05350J		AB0500DR	POS 11	D05350P		YD160-YD170
I D39939		AD0520				ALL
I D40160P		AE0101B	POS 14	D40160J	W0111	ALL
I D40714P		AE0402A	POS 09	D40714J	W0422	ALL

## MASTER BUNDLE LIST

D280A108

91-21-13

Section W6580

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W6730	SA2	DISC AL0720D TO E1-3, E2-2				
I D43048P		AE0103A	POS 04	D43048J	W0131	ALL
I D43050P		AE0202A	POS 06	D43050J	W0220	YC051-YD158, YL951-YR328
I D43050P		AE0202A	POS 06	D43050J		YD160-YD170
I D46050J		AL0720D	POS 04	D46050P	W8524	ALL
I W6732	SA2*	DISC AL0675C TO E1-3, E3-2				
I D43054P		AE0302A	POS 22	D43054J	W0321	ALL
I D46046J		AL0675C	POS 01	D46046P	W8228	ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W6730

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7022</b>	<b>NA2</b>	<b>#1 LEFT GEAR DOWN AND LOCKED SENSOR</b>				
D46002P		AL0694L	POS 01	D46002J	W7230	YC051-YR323, YR325-YR328
D46002P		AL0694L	POS 01	D46002J		YR324
<b>W7024</b>	<b>NB2</b>	<b>#2 LEFT GEAR DOWN AND LOCKED SENSOR</b>				
D46008P		AL0711L	POS 01	D46008J	W7126	YC051-YL968, YN231-YN236, YN501-YR328
D46008P		AL0711L	POS 01	D46008J		YL969-YL999, YN237-YN260
<b>W7026</b>	<b>AA2</b>	<b>FWD LEFT SIDE, WHEEL WELL AREA</b>				
D46026P		AL0675B	POS 01	D46026J	W5728	YC051-YR323, YR325-YR328
D00920		V00043	663/ /L043			YC051-YR323, YR325-YR328
D02874		V00125	663/200/L070			YC051-YR323, YR325-YR328
D11734		V00154	685/200/L050			YC051-YR323, YR325-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7020

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W7030	LE2	AB1030C DISC (STA 1038) TO LEFT ELEVATOR DISC				
I D40236P				D40236J	W6134	YC056-YN236, YN501-YR328
I D40236P				D40236J		YN237-YN260
I D10531		V00160	1158/285/R006			YC056-YR328
I W7038	LN2	L ELEV DISC TO L ELEV POS XMTR AND LOGO LIGHT				
I D40188J		AB1156L	POS 01	D40188P	W8030	ALL
I D11110		L818				ALL
I D03578		T467				ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7030

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W7057	LA2	HF-1 COUPLER				
I D04227P		AB1030A	POS 03	D04227J	W3509	YC051-YD170
I D04227P		AB1030A	POS 03	D04227J	W3553	YL951-YR328
I D00341		M00227	/ /			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7050

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W7061	LA2	HF-2 COUPLER				
I D04245P		AB1030A	POS 01	D04245J	W3511	YD158-YD170
I D04245P		AB1030A	POS 01	D04245J	W3555	YL951-YR328
I D00629		M00440	//			YD158-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7060

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W7102	NN2	ELEVATOR PITOT HEATERS (NN2)				
I D11296		A00024	1070/387/L008			ALL
I D11302		A00027	1070/387/R008			ALL
I D04826P		AB1030C	POS 04	D04826J	W6134	YC051-YN236, YN501-YR328 YN237-YN260
I D04826P		AB1030C	POS 04	D04826J		ALL
I D10845		T00541	51/ /0000			

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7100

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7122</b>	<b>LA1</b>	<b>FWD LEFT SIDE, WHEEL WELL AREA</b>				
D46010P		AL0675A	POS 04	D46010J	W5224	YC051-YR323, YR325-YR328
D02928		M1124				YC051-YR323, YR325-YR328
D00814		S00141	666/179/L053			YC051-YR323, YR325-YR328
D00760		V00032	665/180/L057			YC051-YR323, YR325-YR328
D00818		V00040	665/180/L050			YC051-YR323, YR325-YR328
D03244		V00133	666/150/L017			YC051-YR323, YR325-YR328
<b>W7124</b>	<b>LN1</b>	<b>AFT LEFT SIDE, WHEEL WELL AREA</b>				
D46020P		AL0720B	POS 04	D46020J	W6124	YC051-YD158
D00678		S00049	715/171/00			YC051-YD158
D00824		S00143	723/163/L003			YC051-YD158
D01010		V00051	722/169/L007			YC051-YD158
D10535		V00163	701/199/L010			YC051-YD158
<b>W7126</b>	<b>RB2</b>	<b>WHEEL WELL AREA</b>				
D46006J		AL0706L	POS 01	D46006P	W7136	YC051-YL968, YN231-YN236, YN501-YR328
D46008J		AL0711L	POS 01	D46008P	W7024	YC051-YL968, YN231-YN236, YN501-YR328
D46024P		AL0720A	POS 01	D46024J	W5234	YC051-YL968, YN231-YN236, YN501-YR328
D02564		S00762	727/195/L030			YC051-YL968, YN231-YN236, YN501-YR328
D02566		S00763	727/193/L020			YC051-YL968, YN231-YN236, YN501-YR328
D02870		S00811	706/200/L025			YC051-YL968, YN231-YN236, YN501-YR328

MASTER BUNDLE LIST  
D280A108

**91-21-13**  
Section W7120  
Page 1  
Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7126</b>	<b>RB2</b>	<b>WHEEL WELL AREA (continued)</b>				
D00924		V00007	727/190/L045			YC051-YL968, YN231-YN236, YN501-YR328
<b>W7128</b>	<b>SA2</b>	<b>AFT LEFT SIDE WHEEL WELL AREA</b>				
D46032P		AL0720B	POS 02	D46032J	W5222	YD160-YN236, YN501-YR328
D46036P		AL0720B	POS 03	D46036J	W5224	YD160-YN236, YN501-YR328
D46020P		AL0720B	POS 04	D46020J	W6124	YD160-YN236, YN501-YR328
D00854		M00273	722/151/R004			YD160-YN236, YN501-YR328
D01012		M00339	727/195/0000			YD160-YN236, YN501-YR328
D00678		S00049	715/171/00			YD160-YN236, YN501-YR328
D00824		S00143	723/163/L003			YD160-YN236, YN501-YR328
D00674		T00436	679/196/R008			YD160-YN236, YN501-YR328
D11995		T03019	727/187/			YD160-YN236, YN501-YR328
D00926		V00009	727/190/L045			YD160-YN236, YN501-YR328
D00822		V00042	725/169/L014			YD160-YN236, YN501-YR328
D01010		V00051	722/169/L007			YD160-YN236, YN501-YR328
D10535		V00163	701/199/L010			YD160-YN236, YN501-YR328
D00928		V11				YD160-YN236, YN501-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7120

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W7134	NA2	#1 LEFT GEAR ON GROUND/OUTBD ANTISKID XDCR				
I D46004P		AL0694L	POS 02	D46004J	W7230	YC051-YR323, YR325-YR328
I D46004P		AL0694L	POS 02	D46004J		YR324
I D11120		T392				ALL
I W7136	NB2	#2 LEFT GEAR ON GROUND/INBD ANTISKID XDCR				
I D46006P		AL0706L	POS 01	D46006J	W7126	YC051-YL968, YN231-YN236, YN501-YR328
I D46006P		AL0706L	POS 01	D46006J		YL969-YL999, YN237-YN260
I D11122		T394				ALL
I W7137	NA2	VOR ANTENNA LEFT - STA 1035 TO RF PWR DIV-1				
I D04435J				D04435P	W7153	ALL
I D03699		M01726	309/180/R021			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7130

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W7150	LN1	TAIL CONE DISC. TO TAIL NAV LIGHT				
I D44584J				D44584P	W5726	YC051-YC052
I D44584J				D44584P	W4724	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
I D44584J				D44584P		YD160-YD170, YN237-YN260
I D00148		L00046	1216/284/0000			YC051-YL968, YN231-YN235
I W7152	LN1	TAIL STROBE DISC. TO TAIL NAV LIGHT				
I D44582J				D44582P		YL969-YL999
I D44582J				D44582P	W4724	YN236, YN501-YR328
I D00148		L00046	1216/284/0000			YL969-YL999, YN236, YN501-YR328
I W7153	NA2	VOR ANT LEFT - XMSN CABLE				
I D04435P				D04435J	W7137	ALL
I D00089		M00041	FIN/274/0000			ALL
I W7157	NA2	LOCALIZER ANTENNA LEFT - STA 178 TO ANTENNA				
I D03313				D02623		ALL
I D02129		M01102	178/187/			ALL
I W7159	NA2	G/S ANT LEFT - STA 178 TO ANT				
I D03309				D02621		ALL
I D00085		M00040	178/237/000			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7150

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W7187	NA2	MARKER BEACON ANTENNA - EE BAY TO STA 610 (D4119)				
I D04119J				D04119P	W7193	ALL
I D04121J		AE0102B	POS 04	D04121P	W0121	ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7180

Page 1 End

Nov 12/2012





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W7193	NA2	MARKER BEACON ANTENNA - STA 610 (D4119) TO ANTENNA				
I D04119P				D04119J	W7187	ALL
I D00057		M00027	610/143/0			ALL

For training purposes only!

## MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7190

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7202</b>	<b>NN2</b>	<b>BULKHEAD PRESS SEAL TO NGS EQUIPMENT</b>				
D13932		DM0032	536/164/L036			YL951-YL999, YN232-YR328
D13814		M02561	642/163/L048			YL951-YL999, YN232-YR328
D13818		M02562	656/158/L047			YL951-YL999, YN232-YR328
D13824		M02564	602/161/L060			YL951-YL999, YN232-YR328
D13830		M02565	539/167/L034			YL951-YL999, YN232-YR328
D14200		M02692	577/155/L044			YL951-YL999, YN232-YR328
D13816		S01129	654/161/L066			YL951-YL999, YN232-YR328
D13828		T03020	657/161/L066			YL951-YL999, YN232-YR328
D13810		V00172	543/162/L032			YL951-YL999, YN232-YR328
D13812		V00173	644/160/L054			YL951-YL999, YN232-YR328
D13820		V00174	605/162/L059			YL951-YL999, YN232-YR328
D13826		V00175	653/162/L061			YL951-YL999, YN232-YR328
<b>W7208</b>	<b>NN2</b>	<b>BULKHEAD PRESS SEAL TO NGS BITE DISPLAY UNIT</b>				
D13972		DM0044	536/166/R037			YL951-YL999, YN232-YR328
D13808		M02560	543/157/R038			YL951-YL999, YN232-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7200

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle	Sep	Description	Location	MW Connector	MW Bundle	Effectivity
Equip		Matewith				
I W7222	RN1	AFT LEFT SIDE WHEEL WELL AREA				
I D46036P		AL0720B	POS 03	D46036J	W5224	YC051-YD158
I D01012		M339				YC051-YD158

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7220

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W7230	RA2	FWD LEFT SIDE WHEEL WELL AREA				
D46028P		AL0675B	POS 04	D46028J	W5530	YC051-YR323, YR325-YR328
D46002J		AL0694L	POS 01	D46002P	W7022	YC051-YR323, YR325-YR328
D46004J		AL0694L	POS 02	D46004P	W7134	YC051-YR323, YR325-YR328
D00662		T424				YC051-YR323, YR325-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7230

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W7359	SN2	AFT CAB/APU SERVICE INTERPHONE				
I D07172P				D07172J	W3144	ALL
I D40032P				D40032J	W0152	ALL
I D06017			1042/175/L042			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7350

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7381</b>	<b>LE2</b>	<b>AB1050L TO RUDDER POSN SENSOR, RUDDER ACTUATOR</b>				
D11613			1142/ /			YC064-YD158
D11615			RUD77.0/ /			YC064-YC070
D11617			RUD82.0/ /			YC064-YD158
D11619			RUD82.0/ /			YC064-YC070
D45501J		AB1050L	POS 05	D45501P	W5381	YC064
D45501P		AB1050L	POS 05	D45501J	W5381	YC065-YD158, YL951-YR328
D45503J		AB1050R	POS 06	D45503P	W5383	YC064
D45503P		AB1050R	POS 06	D45503J	W5383	YC065-YC070
D11613		M02445	/ /			YL951-YR328
D11617		M02446	/ /			YL951-YR328
<b>W7383</b>	<b>RF2</b>	<b>AB1050R TO RUDDER POSN SENSOR, RUDDER ACTUATOR</b>				
D11615			RUD77.0/ /			YD151-YD158
D11619			RUD82.0/ /			YD151-YD158
D45503P		AB1050R	POS 06	D45503J	W5383	YD151-YD158, YL951-YR328
D11615		M02445	/ /			YL951-YL999, YR301-YR328
D11619		M02446	/ /			YL951-YL999, YR301-YR328
D11615		M2445				YN231-YN501
D11619		M2446				YN231-YN501

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7380

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle	Sep	Description	Location	MW Connector	MW Bundle	Effectivity
Equip		Matewith				
I W7500	SN2	KEELBEAM OVERHEAT DETECTION				
I D00850		M00272	545/160/			ALL
I D00852		M00273	722/151/R004			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7500

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>I W7522</b>	<b>SA2</b>	<b>FWD LEFT SIDE, WHEEL WELL AREA</b>				
D46030P		AL0675B	POS 03	D46030J	W5222	YC051-YD158, YL951-YR323, YR325-YR328
D03052		M1173				YC051-YD158, YL951-YR323, YR325-YR328
D03054		M1173				YC051-YD158, YL951-YR323, YR325-YR328
D00840		M270				YC051-YD158
D02680		S00794	666/171/L043			YC051-YD158, YL951-YR323, YR325-YR328
D02684		S00796	666/171/L047			YC051-YD158, YL951-YR323, YR325-YR328
D00762		V00033	673/190/L064			YC051-YD158, YL951-YR323, YR325-YR328
<b>I W7526</b>	<b>SA2</b>	<b>AFT LEFT SIDE WHEEL WELL AREA</b>				
D46032P		AL0720B	POS 02	D46032J	W5222	YC051-YD158
D00854		M00273	722/151/R004			YC051-YD158
D00674		T00436	679/196/R008			YC051-YD158
D00926		V00009	727/190/L045			YC051-YD158
D00822		V00042	725/169/L014			YC051-YD158
D00928		V11				YC051-YD158

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7520

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W7538	SN2	APU FIRE DETECTION AND LIGHTING				
I D40062J				D40062P	W7540	ALL
D40060P		AB1088	POS 05	D40060J	W5726	YC051-YC052
D40060P		AB1088	POS 05	D40060J	W4724	YC053-YD158, YL951-YL968, YN231-YN236, YN501-YR328
D40060P		AB1088	POS 05	D40060J		YD160-YD170, YL969-YL999, YN237-YN260

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7530

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W7540	SN2	APU FIRE DETECTION				
I D40062P				D40062J	W7538	ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7540

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W7580	SN2	WHEEL WELL DISC STS 675L TO CENTER TANK DISC M1830				
D04850P		AL0675B	POS 02	D04850J	W5580	YC051-YD158, YL951-YR328
D11316		M01830	666/185/L043			YC051-YD158, YL951-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7580

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7592</b>	<b>SN2*</b>	<b>P8 (FIRE SW PNL) TO FIRE EXTINGUISHER BOTTLES+VALVES,SYSTEM NO 1</b>				
D40010P				D40010J	W7594	ALL
D40652P				D40652J	W7596	YC051-YD158, YL951-YR328
D40652P				D40652J		YD160-YD170
D40656P		AE0202A	POS 05	D40656J	W0220	YC051-YD158, YL951-YR328
D40656P		AE0202A	POS 05	D40656J		YD160-YD170
<b>W7594</b>	<b>SN2*</b>	<b>P8(FIRE SW PNL AREA) TO FIRE EXT BOTTLE SYSTEM NO.2</b>				
D40008P				D40008J	W7598	YC051-YD158, YL951-YR328
D40008P				D40008J		YD160-YD170
D40010J				D40010P	W7592	ALL
D40012P		AE0202A	POS 21	D40012J	W0220	YC051-YD158, YL951-YR328
D40012P		AE0202A	POS 21	D40012J		YD160-YD170
<b>W7596</b>	<b>SN2</b>	<b>JUMPER BUNDLE-LEFT BOTTLE</b>				
D40652J				D40652P	W7592	YC051-YD158, YL951-YR328
D00586		M00194	727/190/L070			YC051-YD158, YL951-YR328
D01322		M01142	713/ /			YC051-YD158, YL951-YR328
D00582		M01143	713/ /			YC051-YD158, YL951-YR328
<b>W7598</b>	<b>SN2</b>	<b>JUMPER BUNDLE-RIGHT BOTTLE</b>				
D40008J				D40008P	W7594	YC051-YD158, YL951-YR328
D00588		M00195	727/190/L070			YC051-YD158, YL951-YR328
D00584		M01144	713/ /			YC051-YD158, YL951-YR328
D01324		M01145	713/ /			YC051-YD158, YL951-YR328

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7590

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W7761	LN2	HF-1 COUPLER ANT FEED				
I D04217P		AB1030A	POS 04	D04217J	W3517	YC051-YD170
I D04217P		AB1030A	POS 04	D04217J	W3557	YL951-YR328
I D00337		M00227	/ /			ALL
I W7763	RN2	HF-2 COUPLER ANT FEED				
I D04713P		AB1030A	POS 02	D04713J	W3523	YD158-YD170
I D04713P		AB1030A	POS 02	D04713J	W3559	YL951-YR328
I D00625		M00440	/ /			YD158-YR328

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W7760

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W8022	NA2	#1 RIGHT GEAR DOWN AND LOCKED SENSOR				
I D46012P		AL0694R	POS 01	D46012J	W8228	ALL
I W8024	NB2	#2 RIGHT GEAR DOWN AND LOCKED SENSOR				
I D46018P		AL0711R	POS 01	D46018J	W8224	ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W8020

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W8030	LE2*	AB1030C DISC (STA 1038) TO RIGHT AND LEFT ELEV DISC (W/O FLAT BLKHD)				
I D40192P		AB1030C	POS 01	D40192J	W6134	YC051-YN236, YN501-YR328 YN237-YN260
I D40192P		AB1030C	POS 01	D40192J		
I D40188P		AB1156L	POS 01	D40188J	W7038	ALL
I D40190P		AB1156R	POS 01	D40190J	W8038	ALL
I D01249		M1192				ALL
I D10529		V00159	1158/285/R006			ALL
I D10531		V00160	1158/285/R006			YC051-YC055
I W8038	RN2	R ELEV DISC TO R ELEV POS XMTR AND R LOGO LIGHT				
I D40190J		AB1156R	POS 01	D40190P	W8030	ALL
I D11108		L819				ALL
I D03580		T468				ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W8030

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W8122</b>	<b>LA2</b>	<b>FWD RIGHT SIDE WHEEL WELL AREA</b>				
D46038P		AL0675C	POS 03	D46038J	W6124	YC051-YD158, YL951-YR323, YR325-YR328
D00816		S00142	666/179/R053			YC051-YD158, YL951-YR323, YR325-YR328
D03242		S00855	667/179/R031			YC051-YD158, YL951-YR323, YR325-YR328
D11728		S01050	596/194/R067			YC051-YD158, YL951-YR323, YR325-YR328
D00758		V00031	665/180/R050			YC051-YD158, YL951-YR323, YR325-YR328
D00820		V00041	665/180/R057			YC051-YD158, YL951-YR323, YR325-YR328
D02860		V00123	674/159/L001			YC051-YD158, YL951-YR323, YR325-YR328
D10533		V00162	632/162/R060			YC051-YD158, YL951-YR323, YR325-YR328
<b>W8124</b>	<b>LA2</b>	<b>AFT RIGHT SIDE WHEEL WELL AREA</b>				
D46040P		AL0720D	POS 01	D46040J	W6124	YC051-YD158, YL951-YR328
D14730		S00138	635/201/R051			YL955-YL999, YN236-YR328
D14360		S01051	634/195/R052			YL955-YL999, YN236-YR328
D01014		V00052	723/200/R021			YC051-YD158, YL951-YR328

MASTER BUNDLE LIST  
D280A108

**91-21-13**  
Section W8120  
Page 1 End  
Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W8137	NB2	VOR ANTENNA RIGHT - STA 1035 TO RF PWR DIV-2				
I D04437J		AB1030B	POS 03	D04437P	W8153	ALL
I D03783		M01727	302/180/R020			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W8130

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W8153	NB2	VOR ANT RIGHT-XMSN CABLE				
I D04437P		AB1030B	POS 03	D04437J	W8137	ALL
I D00091		M00041	FIN/274/0000			ALL
I W8157	NB2	GLIDE SLOPE ANT RIGHT - STA 178 TO ANT				
I D03315				D02627		ALL
I D02131		M01102	178/187/			ALL
I W8159	NB2	G/S ANT RIGHT-STA 178 TO ANT				
I D03311				D02625		ALL
I D00087		M00040	178/237/000			ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W8150

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W8222</b>	<b>SB2</b>	<b>FWD RIGHT SIDE WHEEL WELL AREA</b>				
D46042P		AL0675C	POS 02	D46042J	W6122	YC051-YD158, YL951-YL968, YN231-YR328
D00842		M00270	684/200/MULT			YC051-YD158
D02682		S00795	666/181/R022			YC051-YD158, YL951-YL968, YN231-YR328
D02686		S00797	666/181/R027			YC051-YD158, YL951-YL968, YN231-YR328
D00660		T00423	666/181/R014			YC051-YD158, YL951-YL968, YN231-YR328
D00764		V00034	680/190/R064			YC051-YD158, YL951-YL968, YN231-YR328
<b>W8224</b>	<b>SB2</b>	<b>AFT RIGHT SIDE WHEEL WELL AREA</b>				
D46016J		AL0706R	POS 01	D46016P	W8236	ALL
D46018J		AL0711R	POS 01	D46018P	W8024	ALL
D40004P		AL0720C	POS 02	D40004J	W6122	ALL
D02674		T00184	678/194/R043			ALL
<b>W8226</b>	<b>LN2</b>	<b>AFT RIGHT SIDE, WHEEL WELL</b>				
D46044P		AL0720C	POS 03	D46044J	W6124	ALL
D40006P		AL0720C	POS 04	D40006J	W6124	ALL
D14362		S00245	714/195/R057			YL955-YL999, YN236-YR328
D01582		V00094	720/198/R056			ALL
<b>W8228</b>	<b>SA2</b>	<b>FWD LEFT SIDE WHEEL WELL AREA</b>				
D46046P		AL0675C	POS 01	D46046J	W6732	ALL
D46012J		AL0694R	POS 01	D46012P	W8022	ALL
D46014J		AL0694R	POS 02	D46014P	W8234	ALL
D03056		M01174	//			ALL
D03058		M01174	//			ALL
D13938		S01131	675/194/R068			YL953-YL999, YR301-YR328
D11730		S1049				ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W8220

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W8228</b>	<b>SA2</b>	<b>FWD LEFT SIDE WHEEL WELL AREA (continued)</b>				
D02872		V00124	665/190/R070			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W8220

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>I W8230</b>	<b>NB2</b>	<b>AFT LEFT SIDE WHEEL WELL AREA</b>				
I D46048P		AL0720D	POS 03	D46048J	W6228	ALL
I D00930		V00008	727/180/R040			ALL
I D02570		V00122	711/200/			ALL
I D02572		V00122	711/200/			ALL
I D02574		V00122	711/200/			ALL
I D02576		V00122	711/200/			ALL
<b>I W8234</b>	<b>NA2</b>	<b>#1 RIGHT GEAR ON GROUND/OUTBD ANTISKID XDCR</b>				
I D46014P		AL0694R	POS 02	D46014J	W8228	ALL
I D11126		T395				ALL
<b>I W8236</b>	<b>NB2</b>	<b>#2 RIGHT GEAR ON GROUND/INBD ANTISKID XDCR</b>				
I D46016P		AL0706R	POS 01	D46016J	W8224	ALL
I D11124		T393				ALL

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W8230

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W8489	NN2	WEATHER RADAR ANTENNA ROCKWELL/COLLINS				
I D01409				D01407		ALL
I D00119		M00062	178/200/R005			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W8480

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
-----------------	-----	-------------------------	----------	--------------	-----------	-------------

**I W8524 SA2 AFT RIGHT SIDE WHEEL WELL AREA**

I	D46050P	AL0720D	POS 04	D46050J	W6730	ALL
I	D48080P	AP2800A	POS 01	D48080J	W0028	YC051-YD158
I	D48080P	AP2800A	POS 01	D48080J		YD160-YR328
I	D02676	T00185	725/166/R028			ALL
I	D00932	V00010	727/180/R040			ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W8520

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
I W8538	RB1	STANDBY HYD PUMP				
I D00812		M00242	727+18/150/R027			ALL
I D11740		P0092				ALL

For training purposes only!

### MASTER BUNDLE LIST

D280A108

**91-21-13**

Section W8530

Page 1 End

Nov 12/2012