

**91-21-12**

**SPARE WIRE LIST**

**91-21-12  
SPARE WIRE LIST**

Section	Page	Date	Section	Page	Date	Section	Page	Date
EFFECTIVE PAGES			AE0101A cont.			AE0301A cont.		
	1 thru 3	Nov 12/2012	R	5	Nov 12/2012	R	6	Nov 12/2012
	4	BLANK	D	6	Nov 12/2012	R	7	Nov 12/2012
AB0288	1	Dec 19/2011	R AE0101B	1	Nov 12/2012	R	8	Nov 12/2012
R AB0340A	1	Nov 12/2012	R	2	Nov 12/2012	R	9	Nov 12/2012
R	2	Nov 12/2012	R AE0102A	1	Nov 12/2012	R AE0302A	1	Nov 12/2012
R AB0340B	1	Nov 12/2012	R	2	Nov 12/2012	R	2	Nov 12/2012
AB0373	1	Dec 19/2011	R	3	Nov 12/2012	R	3	Nov 12/2012
R AB0405B	1	Nov 12/2012	R AE0103A	1	Nov 12/2012	R	4	Nov 12/2012
R AB0420A	1	Nov 12/2012	R	2	Nov 12/2012	R	5	Nov 12/2012
R AB0500DL	1	Nov 12/2012	R	3	Nov 12/2012	R	6	Nov 12/2012
R	2	Nov 12/2012	R AE0104A	1	Nov 12/2012	R	7	Nov 12/2012
R AB0536L	1	Nov 12/2012	R	2	Nov 12/2012	R	8	Nov 12/2012
R AB1030A	1	Nov 12/2012	R	3	Nov 12/2012	R	9	Nov 12/2012
R AB1050L	1	Nov 12/2012	R	4	Nov 12/2012	R	10	Nov 12/2012
R	2	Nov 12/2012	R	5	Nov 12/2012	R	11	Nov 12/2012
R AB1050R	1	Nov 12/2012	R	6	Nov 12/2012	R AE0303A	1	Nov 12/2012
R	2	Nov 12/2012	R AE0105A	1	Nov 12/2012	R	2	Nov 12/2012
R AB1080	1	Nov 12/2012	R	2	Nov 12/2012	R	3	Nov 12/2012
R AC0520	1	Nov 12/2012	R AE0201A	1	Nov 12/2012	R	4	Nov 12/2012
R	2	Nov 12/2012	R AE0202A	1	Nov 12/2012	R	5	Nov 12/2012
R AC0538	1	Nov 12/2012	R	2	Nov 12/2012	R	6	Nov 12/2012
R AD0520	1	Nov 12/2012	R	3	Nov 12/2012	R	7	Nov 12/2012
R	2	Nov 12/2012	R AE0301A	1	Nov 12/2012	R	8	Nov 12/2012
R AE0101A	1	Nov 12/2012	R	2	Nov 12/2012	R	9	Nov 12/2012
R	2	Nov 12/2012	R	3	Nov 12/2012	R	10	Nov 12/2012
R	3	Nov 12/2012	R	4	Nov 12/2012	R	11	Nov 12/2012
R	4	Nov 12/2012	R	5	Nov 12/2012	R AE0401A	1	Nov 12/2012

A = Added, R = Revised, D = Deleted, O = Overflow

**SPARE WIRE LIST**

D280A108

**EFFECTIVE PAGES**

Page 1  
Nov 12/2012

91-21-12  
SPARE WIRE LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
AE0401A cont.			R AJ0024	1	Nov 12/2012	R AS0003R	1	Nov 12/2012
R	2	Nov 12/2012	R AJ0046A	1	Nov 12/2012	R AW0258L	1	Nov 12/2012
R	3	Nov 12/2012	R	2	Nov 12/2012	R	2	Nov 12/2012
R	4	Nov 12/2012	R AJ0046B	1	Nov 12/2012	R	3	Nov 12/2012
A	5	Nov 12/2012	R AJ0048A	1	Nov 12/2012	R AW0258R	1	Nov 12/2012
R AE0401D	1	Nov 12/2012	R	2	Nov 12/2012	R	2	Nov 12/2012
R	2	Nov 12/2012	R AL0720D	1	Nov 12/2012	R	3	Nov 12/2012
R	3	Nov 12/2012	R AP0600A	1	Nov 12/2012	R D04499J	1	Nov 12/2012
R	4	Nov 12/2012	R AP0600B	1	Nov 12/2012	R D40020P	1	Nov 12/2012
R AE0402A	1	Nov 12/2012	R	2	Nov 12/2012	R D40026P	1	Nov 12/2012
R AE0502A	1	Nov 12/2012	R	3	Nov 12/2012	R D40038J	1	Nov 12/2012
R	2	Nov 12/2012	R	4	Nov 12/2012	R D40052P	1	Nov 12/2012
R	3	Nov 12/2012	R	5	Nov 12/2012	R D40110J	1	Nov 12/2012
R	4	Nov 12/2012	R AP0900A	1	Nov 12/2012	D40110P	1	May 10/2012
R	5	Nov 12/2012	R	2	Nov 12/2012	R D40112J	1	Nov 12/2012
R	6	Nov 12/2012	R	3	Nov 12/2012	R D40114J	1	Nov 12/2012
R	7	Nov 12/2012	R	4	Nov 12/2012	R D40116J	1	Nov 12/2012
R AE0601A	1	Nov 12/2012	R AP1800A	1	Nov 12/2012	R D40210J	1	Nov 12/2012
R AE0602A	1	Nov 12/2012	R AP1800B	1	Nov 12/2012	R D40214J	1	Nov 12/2012
R	2	Nov 12/2012	R	2	Nov 12/2012	R D40262J	1	Nov 12/2012
R AE0801A	1	Nov 12/2012	R	3	Nov 12/2012	R D40270J	1	Nov 12/2012
R AE0801B	1	Nov 12/2012	R AS0001L	1	Nov 12/2012	R D40272J	1	Nov 12/2012
AE0801C	1	Aug 14/2012	R	2	Nov 12/2012	D40984P	1	May 10/2012
R AJ0004	1	Nov 12/2012	R AS0001R	1	Nov 12/2012	D40990P	1	May 10/2012
AJ0020A	1	Aug 14/2012	R	2	Nov 12/2012	D40994J	1	May 10/2012
R AJ0020B	1	Nov 12/2012	R AS0002L	1	Nov 12/2012	D40994P	1	May 10/2012
R AJ0022	1	Nov 12/2012	R AS0002R	1	Nov 12/2012	D40996J	1	May 10/2012
	2	Aug 14/2012	R AS0003L	1	Nov 12/2012	R D41066P	1	Nov 12/2012

A = Added, R = Revised, D = Deleted, O = Overflow

## SPARE WIRE LIST

D280A108

## EFFECTIVE PAGES

Page 2  
Nov 12/2012

91-21-12  
SPARE WIRE LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
R D41074J	1	Nov 12/2012	R M02587	1	Nov 12/2012			
R D41078J	1	Nov 12/2012	R M02588	1	Nov 12/2012			
R D41082P	1	Nov 12/2012	R M02816	1	Nov 12/2012			
R D41088J	1	Nov 12/2012	R M2195	1	Nov 12/2012			
R D42002J	1	Nov 12/2012	R M2263	1	Nov 12/2012			
R D42004J	1	Nov 12/2012	R N00185	1	Nov 12/2012			
D42004P	1	May 10/2012	R N00186	1	Nov 12/2012			
R D42006J	1	Nov 12/2012	R N00226	1	Nov 12/2012			
D42010J	1	May 10/2012	R P003-07	1	Nov 12/2012			
D42010P	1	May 10/2012	R P005-28	1	Nov 12/2012			
R DM0017	1	Nov 12/2012	R P008-25	1	Nov 12/2012			
R DM0035	1	Nov 12/2012	R P008-26	1	Nov 12/2012			
R L01086	1	Nov 12/2012	R P008-66	1	Nov 12/2012			
R L01223	1	Nov 12/2012	R P008-73	1	Nov 12/2012			
R M00276	1	Nov 12/2012	P008-75	1	Aug 14/2012			
R M00414	1	Nov 12/2012	R P0091	1	Nov 12/2012			
R M00943	1	Nov 12/2012	R P0092	1	Nov 12/2012			
R M01020	1	Nov 12/2012	R P091-00	1	Nov 12/2012			
R M01022	1	Nov 12/2012	R00594	1	Aug 14/2012			
R M01415	1	Nov 12/2012	R UNK	1	Nov 12/2012			
R M01418	1	Nov 12/2012	R	2	Nov 12/2012			
R M01672	1	Nov 12/2012	R	3	Nov 12/2012			
R M01673	1	Nov 12/2012	R	4	Nov 12/2012			
R M01674	1	Nov 12/2012	R	5	Nov 12/2012			
R M02061	1	Nov 12/2012		6	BLANK			
R M02195	1	Nov 12/2012						
R M02263	1	Nov 12/2012						
R M02567	1	Nov 12/2012						

A = Added, R = Revised, D = Deleted, O = Overflow

## SPARE WIRE LIST

D280A108

## EFFECTIVE PAGES

Page 3  
Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
<b>AB0288</b>		<b>03</b>	<b>W2589</b>	<b>NN2</b>	<b>DISCONNECT BRACKET</b>							
D04889P		9		0012	24	PK	TB0261X	B013	1A			YN231-YN501
D04889P		5		2001B	24	Y2	TB0261X	B014	1A			YN231-YN501
D04889P		4		2001R	24	Y2	TB0261X	A014	1A			YN231-YN501
D04889P		8		2001Z			GB00261	ST..	1A			YN231-YN501

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AB0288

Page 1 End

Dec 19/2011



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AB0340A</b>	<b>01</b>	<b>W3058</b>	<b>RN2</b>	<b>DISCONNECT BRACKET-LEFT</b>						
D40054J	5		0284	20 PA	D11070	CAP	Y	M01418		YC051-YD158, YL951-YN260
D40054J	5		0284	20 PA	D14376	CAP	Y	M01418		YN501-YR328
D40054J	6		0285	20 PA	D11070	CAP	Y	M01418		YC051-YD158, YL951-YN260
D40054J	6		0285	20 PA	D14376	CAP	Y	M01418		YN501-YR328
D40054J	8		0286	20 PA	D11070	CAP	Y	M01418		YC051-YD158, YL951-YN260
D40054J	8		0286	20 PA	D14376	CAP	Y	M01418		YN501-YR328
<b>AB0340A</b>	<b>01</b>	<b>W5142</b>	<b>LN1*</b>	<b>DISCONNECT BRACKET-LEFT</b>						
D40054P	5		0054	20 PA	D11416	CAP	Y	P091-00		ALL
D40054P	6		0055	20 PA	D11416	CAP	Y	P091-00		ALL
D40054P	8		0056	20 PA	D11416	CAP	Y	P091-00		ALL
<b>AB0340A</b>	<b>02</b>	<b>W3144</b>	<b>LN2*</b>	<b>DISCONNECT BRACKET-LEFT</b>						
D40216P	7		0021	16 PA	D40220P	21		AP1800A	06	YC051-YC052, YL951-YL999, YR301-YR328
<b>AB0340A</b>	<b>02</b>	<b>W3158</b>	<b>LN1*</b>	<b>DISCONNECT BRACKET-LEFT</b>						
D40216J	4		0101	20 PA	D40108J	1		AB0340A	06	ALL
D40216J	5		0102	20 PA	D40108J	2		AB0340A	06	ALL
<b>AB0340A</b>	<b>03</b>	<b>W3142</b>	<b>LN2</b>	<b>DISCONNECT BRACKET-LEFT</b>						
D40196J	8		0038	20 PA	D10746	CAP	Y	M01673		ALL
D40196J	CAP	Y	0039	20 PA	D10746	CAP	Y	M01673		ALL
<b>AB0340A</b>	<b>04</b>	<b>W3058</b>	<b>RN2</b>	<b>DISCONNECT BRACKET-LEFT</b>						
D40170J	18		0387	20 PA	D11066	CAP	Y	M01418		YC051-YD158, YL951-YN260
D40170J	18		0387	20 PA	D14372	CAP	Y	M01418		YN501-YR328
D40170J	19		0388	20 PA	D11066	CAP	Y	M01418		YC051-YD158, YL951-YN260
D40170J	19		0388	20 PA	D14372	CAP	Y	M01418		YN501-YR328
D40170J	31		0389	20 PA	D11066	CAP	Y	M01418		YC051-YD158, YL951-YN260

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AB0340A

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
<b>AB0340A</b>	<b>04</b>	<b>W3058</b>	<b>RN2</b>	<b>DISCONNECT BRACKET-LEFT (continued)</b>								
D40170J	31		0389	20 PA	D14372	CAP	Y	M01418		YN501-YR328		
<b>AB0340A</b>	<b>05</b>	<b>W3058</b>	<b>RN2</b>	<b>DISCONNECT BRACKET-LEFT</b>								
D40050J	8		0381	20 PA	D40226P	8		AP0600A	05	YC051-YD158, YL951-YR328		
D40050J	9		0382	20 PA	D40226P	9		AP0600A	05	YC051-YD158, YL951-YR328		
D40050J	11		0383	20 PA	D40226P	12		AP0600A	05	YC051-YD158, YL951-YR328		
<b>AB0340A</b>	<b>05</b>	<b>W6242</b>	<b>RN1</b>	<b>DISCONNECT BRACKET-LEFT</b>								
D40050P	8		0059	20 PA	D11452	CAP	Y	P0092		ALL		
D40050P	9		0060	20 PA	D11452	CAP	Y	P0092		ALL		
<b>AB0340A</b>	<b>06</b>	<b>W3158</b>	<b>LN1*</b>	<b>DISCONNECT BRACKET-LEFT</b>								
D40108J	1		0101	20 PA	D40216J	4		AB0340A	02	ALL		
D40108J	2		0102	20 PA	D40216J	5		AB0340A	02	ALL		
D40108J	11		0111	20 PA	D40116P	1		D40116J		ALL		
D40108J	12		0112	20 PA	D40116P	3		D40116J		ALL		
<b>AB0340A</b>	<b>09</b>	<b>W3158</b>	<b>LN1*</b>	<b>DISCONNECT BRACKET-LEFT</b>								
D40102J	3		0203	20 PA	D40110P	2		D40110J		YC051-YN260		
D40102J	4		0204	20 PA	D42002P	2		D42002J		YC051-YN260		
D40102J	12		0212	20 PA	D42006P	2		D42006J		YC051-YD157, YL951-YN260		
D40102J	12		0212	20 PA	D40996P	2		D40996J		YD158-YD170		
D40102J	25		0225	20 PA	D40112P	2		D40112J		YC051-YD157, YL951-YN260		
D40102J	25		0225	20 PA	D42010P	2		D42010J		YD158-YD170		
D40102J	26		0226	20 PA	D42004P	2		D42004J		YC051-YN260		
D40102J	28		0228	20 PA	D40114P	2		D40114J		YC051-YD157, YL951-YN260		
D40102J	28		0228	20 PA	D40994P	2		D40994J		YD158-YD170		

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AB0340A

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
I	AB0340B	07	W4142	LB2*	DISCONNECT BRACKET-RIGHT							
I	D40296J	4		0036	20	PA	D10748	CAP	Y	M01674		YC051-YN260
I	D40296J	4		0036	20	PA	D14812	CAP	Y	M02816		YN501-YR328
I	D40296J	7		0037	20	PA	D10744	CAP	Y	M01672		ALL
I	D40296J	15		0038	20	PA	D10748	CAP	Y	M01674		YC051-YN260
I	D40296J	15		0038	20	PA	D14812	CAP	Y	M02816		YN501-YR328
I	D40296J	CAP	Y	0039	20	PA	D10744	CAP	Y	M01672		ALL
	AB0340B	08	W3583	NN2	DISCONNECT BRACKET-RIGHT							
	D45231J	37		0037	22	PA	D45283J	37		AB0373	03	YD158-YD170
	D45231J	41		2518B	24	OT	D45283J	41		AB0373	03	YD158-YD170
	D45231J	42		2518W	24	OT	D45283J	42		AB0373	03	YD158-YD170
	D45231J	DED		2518Z			D45283J	DED		AB0373	03	YD158-YD170
	AB0340B	08	W5303	NN2	DISCONNECT BRACKET-RIGHT							
	D45231P	36		0012	22	PA	D45279P	A20		AE0801B	07	YD158-YD170
	D45231P	37		0013	22	PA	D45279P	B20		AE0801B	07	YD158-YD170
	D45231P	41		2510B	24	OT	D45279P	A18		AE0801B	07	YD158-YD170
	D45231P	42		2510W	24	OT	D45279P	B18		AE0801B	07	YD158-YD170
	D45231P	DED		2510Z			D45279P	DED		AE0801B	07	YD158-YD170
I	AB0340B	09	W4258	RN1	DISCONNECT BRACKET-RIGHT							
I	D40202J	3		0203	20	PA	D40214P	CAP	Y	D40214J		YC051-YN260
I	D40202J	4		0204	20	PA	D40214P	CAP	Y	D40214J		YC051-YN260
I	D40202J	25		0225	20	PA	D40210P	CAP	Y	D40210J		YC051-YN260
I	D40202J	26		0226	20	PA	D40210P	CAP	Y	D40210J		YC051-YN260

### SPARE WIRE LIST

D280A108

91-21-12

Section AB0340B

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To						
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity	
<b>AB0373</b>	<b>02</b>	<b>W3577</b>	<b>NN2</b>	<b>DISCONNECT BRACKET</b>							
D45287J	6		2502B	22 X2	D43277P	B04		AE0302A	01	YD158-YD170	
D45287J	5		2502R	22 X2	D43277P	A04		AE0302A	01	YD158-YD170	
D45287J	DED		2502Z		D43277P	PERG	1F	AE0302A	01	YD158-YD170	
<b>AB0373</b>	<b>03</b>	<b>W3583</b>	<b>NN2</b>	<b>DISCONNECT BRACKET</b>							
D45283J	37		0037	22 PA	D45231J	37		AB0340B	08	YD158-YD170	
D45283J	41		2518B	24 OT	D45231J	41		AB0340B	08	YD158-YD170	
D45283J	42		2518W	24 OT	D45231J	42		AB0340B	08	YD158-YD170	
D45283J	DED		2518Z		D45231J	DED		AB0340B	08	YD158-YD170	

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AB0373

Page 1 End

Dec 19/2011



## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	From Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith		
I	AB0405B	01	W4170	RA2*	DISCONNECT BRACKET							
I	D40728P	6		2609B	20	PB	D40732P	A10		AE0301A	36	ALL
I	D40728P	7		2609R	20	PB	D40732P	B10		AE0301A	36	ALL
I	AB0405B	01	W6170	RA2*	DISCONNECT BRACKET							
I	D40728J	6		2603B	20	PB	D39926	10		AD0520		ALL
I	D40728J	7		2603R	20	PB	D39926	2		AD0520		ALL
I	D40728J	8		2604B	20	PB	D39926	11		AD0520		ALL
I	D40728J	9		2604R	20	PB	D39926	24		AD0520		ALL
I	D40728J	15		2605B	20	PB	D39926	15		AD0520		ALL
I	D40728J	16		2605R	20	PB	D39926	16		AD0520		ALL
I	AB0405B	02	W4170	RA2*	DISCONNECT BRACKET							
I	D40730P	9		2605B	20	PB	D40732P	A05		AE0301A	36	ALL
I	D40730P	10		2605R	20	PB	D40732P	B05		AE0301A	36	ALL
I	D40730P	11		2606B	20	PB	D40732P	A06		AE0301A	36	ALL
I	D40730P	12		2606R	20	PB	D40732P	B06		AE0301A	36	ALL
I	AB0405B	02	W6172	RA2*	DISCONNECT BRACKET							
I	D40730J	9		2612B	20	PB	D39918	12		AD0520		ALL
I	D40730J	10		2612R	20	PB	D39918	3		AD0520		ALL
I	D40730J	11		2613B	20	PB	D39918	14		AD0520		ALL
I	D40730J	12		2613R	20	PB	D39918	32		AD0520		ALL

### SPARE WIRE LIST

D280A108

91-21-12

Section AB0405B

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
I	AB0420A	01	W3170	LA2*	DISCONNECT BRACKET							
I	D40734P	1		2601B	20	PB	D40126P	A01		AE0202A	27	ALL
I	D40734P	2		2601R	20	PB	D40126P	B01		AE0202A	27	ALL
I	D40734P	3		2602B	20	PB	D40126P	A02		AE0202A	27	ALL
I	D40734P	4		2602R	20	PB	D40126P	B02		AE0202A	27	ALL
I	D40734P	5		2603B	20	PB	D40126P	A03		AE0202A	27	ALL
I	D40734P	6		2603R	20	PB	D40126P	B03		AE0202A	27	ALL
I	AB0420A	01	W5170	SA2*	DISCONNECT BRACKET							
I	D40734J	1		2601B	20	PB	D39925	10		AC0520		ALL
I	D40734J	2		2601R	20	PB	D39925	2		AC0520		ALL
I	D40734J	3		2602B	20	PB	D39925	11		AC0520		ALL
I	D40734J	4		2602R	20	PB	D39925	24		AC0520		ALL
I	D40734J	5		2603B	20	PB	D39925	15		AC0520		ALL
I	D40734J	6		2603R	20	PB	D39925	16		AC0520		ALL
I	AB0420A	02	W3170	LA2*	DISCONNECT BRACKET							
I	D40736P	1		2606B	20	X2	D49994P	A07		AE0301A	14	ALL
I	D40736P	2		2606R	20	X2	D49994P	B06		AE0301A	14	ALL
I	D40736P	S/R		2606Z			D49994P	PERG	1F	AE0301A	14	ALL
I	D40736P	4		2607B	20	X2	D40126P	A11		AE0202A	27	ALL
I	D40736P	5		2607R	20	X2	D40126P	B11		AE0202A	27	ALL
I	D40736P	S/R		2607Z			D40126P	PERG	1F	AE0202A	27	ALL
I	AB0420A	02	W5172	LA2*	DISCONNECT BRACKET							
I	D40736J	1		2604B	20	X2	D39917	12		AC0520		ALL
I	D40736J	2		2604R	20	X2	D39917	3		AC0520		ALL
I	D40736J	S/R		2604Z			D39917	S/R		AC0520		ALL
I	D40736J	4		2605B	20	X2	D39917	14		AC0520		ALL
I	D40736J	5		2605R	20	X2	D39917	32		AC0520		ALL
I	D40736J	S/R		2605Z			D39917	S/R		AC0520		ALL

### SPARE WIRE LIST

D280A108

91-21-12

Section AB0420A

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
I	AB0500DL	05	W5248	LN2*	DISCONNECT BRACKET-LEFT WING							
I	D40500J	1		0499	20	PA	D40584P	A01		AE0402A	02	ALL
I	D40500J	3		0500	20	PA	D40584P	B01		AE0402A	02	ALL
I	AB0500DL	05	W6248	LN2*	DISCONNECT BRACKET-LEFT WING							
I	D40500P	1		0499	20	PA	D00866	CAP	Y	M00276		YC051-YN236, YN501-YR328
I	D40500P	3		0500	20	PA	D00866	CAP	Y	M00276		YC051-YN236, YN501-YR328
I	AB0500DL	06	W5074	SB2	DISCONNECT BRACKET-LEFT WING							
I	D46608P	1		6003	22	PA	D12816	3		M2263		YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
I	D46608P	12		6006	22	CQ	D12818	1		M2263		YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
I	D46608P	9		6009	22	CQ	D12820	1		M02263		YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
I	AB0500DL	06	W5088	NB2	DISCONNECT BRACKET-LEFT WING							
I	D46608J	1		6015	22	PA	D42014P	A05		AE0202A	32	YC053-YD157, YL951-YR314, YR317-YR318, YR320-YR328
I	D46608J	12		6016	22	CQ	D42014P	A01		AE0202A	32	YC053-YD157, YL951-YR314, YR317-YR318, YR320-YR328
I	D46608J	9		6017	22	CQ	D42014P	A03		AE0202A	32	YC053-YD157, YL951-YR314, YR317-YR318, YR320-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AB0500DL

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To			Pos	Effectivity	
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type			Matewith
I	AB0500DL		09	W5526	SA2	DISCONNECT BRACKET-LEFT WING							
I	D40302J		10		5516	20	PA	D43016J	9		AE0104A	22	ALL
I	D40302J		11		5517	20	PA	D43016J	10		AE0104A	22	ALL

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AB0500DL

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith	Pos	Bundle	Sep	Description		To					Effectivity	
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos		
I	AB0536L	01	W5526	SA2	DISCONNECT BRACKET-LEFT AC BAY								
I	D04580P	12		5512	20	PA	D43016J	7		AE0104A	22	ALL	
I	D04580P	13		5513	20	PA	D43016J	8		AE0104A	22	ALL	
I	AB0536L	02	W5104	LA2	DISCONNECT BRACKET-LEFT AC BAY								
	D40056P	18		5520	20	PA	D40244P	B05		AE0401A	29	YC051-YN236, YN501-YR323, YR325-YR328	
	D40056P	19		5521	20	PA	D40244P	B06		AE0401A	29	YC051-YN236, YN501-YR323, YR325-YR328	
	D40056P	16		5522	20	PA	D40246P	A08		AE0202A	01	YC051-YN236, YN501-YR323, YR325-YR328	

### SPARE WIRE LIST

D280A108

91-21-12

Section AB0536L

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To					Pos	Effectivity		
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith					
I	AB1030A		01	W3555	RN2	DISCONNECT BRACKET-AFT PRESSURE BLKHD.										
I	D04245J		9		0009	20	PA	D40125P	B02		AE0602A	11	YL951-YR328			
I	D04245J		10		0010	20	PA	D40125P	A03		AE0602A	11	YL951-YR328			
I	AB1030A		03	W3553	LN2	DISCONNECT BRACKET-AFT PRESSURE BLKHD.										
I	D04227J		9		0009	20	PA	D40121P	B02		AE0602A	12	YL951-YR328			
I	D04227J		10		0010	20	PA	D40121P	A03		AE0602A	12	YL951-YR328			

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AB1030A

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AB1050L</b>	<b>02</b>	<b>W3393</b>	<b>LG2</b>	<b>DISCONNECT BRACKET-SEC 48 L</b>						
D43393J	15		1015	20 VF	D00545	15		M00414		YC053-YR328
D43393J	S/R		1015Z		GD04809	ST..	E			YC053-YR328
D43393J	17		1017	20 VF	D00545	17		M00414		YC053-YR328
D43393J	S/R		1017Z		GD04809	ST..	E			YC053-YR328
D43393J	19		1019	20 VF	D00545	19		M00414		YC053-YR328
D43393J	S/R		1019Z		GD04809	ST..	E			YC053-YR328
D43393J	21		1021	20 VF	D00545	21		M00414		YC053-YR328
D43393J	S/R		1021Z		D00545	S/R		M00414		YC053-YR328
<b>AB1050L</b>	<b>02</b>	<b>W5301</b>	<b>LG2</b>	<b>DISCONNECT BRACKET-SEC 48 L</b>						
D43393P	15		0015	22 PA	D04425P	A05		AE0101A	08	YC053-YR328
D43393P	17		0017	22 PA	D04425P	A07		AE0101A	08	YC053-YR328
D43393P	19		0019	22 PA	D04425P	A09		AE0101A	08	YC053-YR328
D43393P	21		0021	22 PA	D04425P	B01		AE0101A	08	YC053-YR328
D43393P	10		2007B	22 PB	D04425P	B10		AE0101A	08	YC053-YR328
D43393P	9		2007R	22 PB	D04425P	B09		AE0101A	08	YC053-YR328
<b>AB1050L</b>	<b>03</b>	<b>W3377</b>	<b>LA3</b>	<b>DISCONNECT BRACKET-SEC 48 L</b>						
D43397P	46		0010	20 PA	D04079P	B01		AE0101A	32	YC053-YN236, YN501-YR328
D43397P	41		3006B	22 PC	D04079P	B08		AE0101A	32	YC053-YN236, YN501-YR328
D43397P	40		3006R	22 PC	D04079P	B07		AE0101A	32	YC053-YN236, YN501-YR328
D43397P	42		3006Y	22 PC	D04079P	B09		AE0101A	32	YC053-YN236, YN501-YR328
<b>AB1050L</b>	<b>03</b>	<b>W3397</b>	<b>LA3</b>	<b>DISCONNECT BRACKET-SEC 48 L</b>						
D43397J	41		3006B	22 HG	D01681	REF	VP	M01020		YC053-YN236, YN501-YR328
D43397J	40		3006R	22 HG	D01681	REF	VP	M01020		YC053-YN236, YN501-YR328
D43397J	42		3006Y	22 HG	D01681	REF	VP	M01020		YC053-YN236, YN501-YR328
D43397J	S/R		3006Z		D01681			M01020		YC053-YD153
D43397J	S/R		3006Z		GD00949	ST..	E			YD154-YN236, YN501-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AB1050L

Page 1

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith	Pos	Bundle	Sep	Description		To					Effectivity	
	From Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos		
I	AB1050L	04	W3381	LE2	DISCONNECT BRACKET-SEC 48 L								
	D44381P	21		0006	20	PA	D04083P	A02		AE0101A	26	YC053-YD154	
I	D44381P	1		0006	20	PA	D04083P	A02		AE0101A	26	YD155-YR328	
	D44381P	25		0007	20	PA	D04083P	A07		AE0101A	26	YC053-YD154	
I	D44381P	2		0007	20	PA	D04083P	A07		AE0101A	26	YD155-YR328	
I	AB1050L	05	W5381	LA2	DISCONNECT BRACKET-SEC 48 L								
	D45501J	15		2008B	22	VG	D45551P	B02				YC065-YC070	
	D45501J	14		2008R	22	VG	D45551P	A02				YC065-YC070	
	D45501J	S/R		2008Z			D45551P	PERG	1F			YC065-YC070	
	D45501J	17		2009B	20	HF	D45551P	B08				YC065-YC070	
	D45501J	16		2009R	20	HF	D45551P	A08				YC065-YC070	
	D45501J	S/R		2009Z			D45551P	PERG	1F			YC065-YC070	
	D45501P	15		2008B	22	VG	D45551P	B02				YC064	
	D45501P	14		2008R	22	VG	D45551P	A02				YC064	
	D45501P	S/R		2008Z			D45551P	PERG	1F			YC064	
	D45501P	17		2009B	20	HF	D45551P	B08				YC064	
	D45501P	16		2009R	20	HF	D45551P	A08				YC064	
	D45501P	S/R		2009Z			D45551P	PERG	1F			YC064	
	D45501J	13		2008B	22	VG	D45551P	B02				YD151-YD155	
I	D45501J	13		2008B	22	VG	D45551P	B02		AE0101A	36	YD157-YR328	
	D45501J	4		2008R	22	VG	D45551P	A02				YD151-YD155	
I	D45501J	4		2008R	22	VG	D45551P	A02		AE0101A	36	YD157-YR328	
	D45501J	S/R		2008Z			D45551P	PERG	1F			YD151-YD155	
I	D45501J	S/R		2008Z			D45551P	PERG	1F	AE0101A	36	YD157-YR328	
	D45501J	10		2009B	20	HF	D45551P	B09				YD151-YD155	
I	D45501J	10		2009B	20	HF	D45551P	B09		AE0101A	36	YD157-YR328	
	D45501J	2		2009R	20	HF	D45551P	A09				YD151-YD155	
I	D45501J	2		2009R	20	HF	D45551P	A09		AE0101A	36	YD157-YR328	
	D45501J	S/R		2009Z			D45551P	PERG	1F			YD151-YD155	
I	D45501J	S/R		2009Z			D45551P	PERG	1F	AE0101A	36	YD157-YR328	

### SPARE WIRE LIST

D280A108

91-21-12

Section AB1050L

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AB1050R</b>	<b>04</b>	<b>W3379</b>	<b>RB3</b>	<b>DISCONNECT BRACKET-SEC 48 R</b>						
D43399P	2		0002	20 CQ	D40029P	A09		AE0302A	35	YC053-YN236, YN501-YR328
D43399P	50		0022	20 CQ	D04081J	3		AE0104A	03	YC053-YN236, YN501-YR328
D43399P	37		2010B	22 X2	D40029P	B02		AE0302A	35	YC053-YN236, YN501-YR328
D43399P	36		2010R	22 X2	D40029P	B01		AE0302A	35	YC053-YN236, YN501-YR328
D43399P	S/R		2010Z		D40029P	PERG	1F	AE0302A	35	YC053-YN236, YN501-YR328
D43399P	41		3006B	22 PC	D04081J	28		AE0104A	03	YC053-YN236, YN501-YR328
D43399P	40		3006R	22 PC	D04081J	27		AE0104A	03	YC053-YN236, YN501-YR328
D43399P	42		3006Y	22 PC	D04081J	29		AE0104A	03	YC053-YN236, YN501-YR328
D43399P	44		3007B	22 X3	D40029P	B09		AE0302A	35	YC053-YN236, YN501-YR328
D43399P	43		3007R	22 X3	D40029P	B08		AE0302A	35	YC053-YN236, YN501-YR328
D43399P	45		3007Y	22 X3	D40029P	B10		AE0302A	35	YC053-YN236, YN501-YR328
D43399P	S/R		3007Z		D40029P	PERG	1F	AE0302A	35	YC053-YN236, YN501-YR328
<b>AB1050R</b>	<b>06</b>	<b>W5383</b>	<b>RB2</b>	<b>DISCONNECT BRACKET-SEC 48 R</b>						
D45503J	15		2008B	22 VG	D45553J	15		AE0104A	13	YC065-YC070
D45503J	14		2008R	22 VG	D45553J	14		AE0104A	13	YC065-YC070
D45503J	S/R		2008Z		D45553J	S/R		AE0104A	13	YC065-YC070
D45503J	17		2009B	20 HF	D45553J	17		AE0104A	13	YC065-YC070
D45503J	16		2009R	20 HF	D45553J	16		AE0104A	13	YC065-YC070
D45503J	S/R		2009Z		D45553J	S/R		AE0104A	13	YC065-YC070
D45503P	15		2008B	22 VG	D45553J	15		AE0104A	13	YC064
D45503P	14		2008R	22 VG	D45553J	14		AE0104A	13	YC064
D45503P	S/R		2008Z		D45553J	S/R		AE0104A	13	YC064
D45503P	17		2009B	20 HF	D45553J	17		AE0104A	13	YC064
D45503P	16		2009R	20 HF	D45553J	16		AE0104A	13	YC064
D45503P	S/R		2009Z		D45553J	S/R		AE0104A	13	YC064

### SPARE WIRE LIST

D280A108

91-21-12

Section AB1050R

Page 1

Nov 12/2012



From	Matewith	Pos	Bundle	Sep	Description		To					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
AB1050R		06	W5383	RB2	DISCONNECT BRACKET-SEC 48 R (continued)							
D45503J		13		2008B	22	VG	D45553J	13		AE0104A	13	YD151-YR328
D45503J		4		2008R	22	VG	D45553J	4		AE0104A	13	YD151-YR328
D45503J		S/R		2008Z			D45553J	S/R		AE0104A	13	YD151-YR328
D45503J		10		2009B	20	HF	D45553J	10		AE0104A	13	YD151-YR328
D45503J		2		2009R	20	HF	D45553J	2		AE0104A	13	YD151-YR328
D45503J		S/R		2009Z			D45553J	S/R		AE0104A	13	YD151-YR328

## SPARE WIRE LIST

D280A108

91-21-12

Section AB1050R

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
AB1080	03	W3399	RB3	DISCONNECT BRACKET-STA 1080 (SB 27-1253)								
D43389J	11		3006B		22	HG	D01687	REF	VP	M01022		YC053-YN236, YN501-YR328
D43389J	10		3006R		22	HG	D01687	REF	VP	M01022		YC053-YN236, YN501-YR328
D43389J	12		3006Y		22	HG	D01687	REF	VP	M01022		YC053-YN236, YN501-YR328
D43389J	S/R		3006Z				D01687			M01022		YC053-YD153
D43389J	S/R		3006Z				GD00973	ST..	E			YD154-YN236, YN501-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AB1080

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith		Pos	Bundle	Sep	Description		To		Matewith	Pos	Effectivity	
	From		Term	Type	Wire No.	GA	TY	Equip	Term				Type
I	AC0520			W1178	LN2	DISCONNECT BRACKET							
I	D39927		11		2001B	20	HQ	D08056J	13	AW0258L	06	ALL	
I	D39927		24		2001R	20	HQ	D08056J	12	AW0258L	06	ALL	
I	D39927		S/R		2001Z			D08056J	S/R	AW0258L	06	ALL	
I	D39927		10		2002B	20	HQ	D08056J	10	AW0258L	06	ALL	
I	D39927		2		2002R	20	HQ	D08056J	2	AW0258L	06	ALL	
I	D39927		S/R		2002Z			D08056J	S/R	AW0258L	06	ALL	
I	D39927		15		2003B	20	HQ	D08056J	14	AW0258L	06	ALL	
I	D39927		16		2003R	20	HQ	D08056J	4	AW0258L	06	ALL	
I	D39927		S/R		2003Z			D08056J	S/R	AW0258L	06	ALL	
I	AC0520			W1182	SB2	DISCONNECT BRACKET							
I	D39931		2		2001B	20	HQ	D30062	16	AW0258L	05	ALL	
I	D39931		3		2001R	20	HQ	D30062	15	AW0258L	05	ALL	
I	D39931		S/R		2001Z			D30062	S/R	AW0258L	05	ALL	
I	D39931		4		2002B	20	HQ	D30062	18	AW0258L	05	ALL	
I	D39931		5		2002R	20	HQ	D30062	17	AW0258L	05	ALL	
I	D39931		S/R		2002Z			D30062	S/R	AW0258L	05	ALL	
I	AC0520			W1184	SA1	DISCONNECT BRACKET							
I	D39911		6		2004B	20	HQ	D30014	37	AW0258L	04	YC051-YD158, YL951-YR328	
I	D39911		5		2004R	20	HQ	D30014	36	AW0258L	04	YC051-YD158, YL951-YR328	
I	D39911		S/R		2004Z			D30014	S/R	AW0258L	04	YC051-YD158, YL951-YR328	
I	AC0520			W5162	LB2*	DISCONNECT BRACKET							
I	D39921		14		2601B	20	X2	D40130P	A03	AE0202A	25	ALL	
I	D39921		5		2601R	20	X2	D40130P	B03	AE0202A	25	ALL	
I	D39921		S/R		2601Z			D40130P	PERG	1F	AE0202A	25	ALL
I	D39921		31		2609B	20	X2	D40130P	A09	AE0202A	25	ALL	
I	D39921		30		2609R	20	X2	D40130P	B09	AE0202A	25	ALL	
I	D39921		S/R		2609Z			D40130P	PERG	1F	AE0202A	25	ALL
I	AC0520			W5164	LA1*	DISCONNECT BRACKET							
I	D39933		26		2602B	20	X2	D40718P	A05	AE0201A	17	YC051-YN236, YN501-YR328	

### SPARE WIRE LIST

D280A108

91-21-12

Section AC0520

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
AC0520		W5164	LA1*	DISCONNECT BRACKET (continued)								
D39933	25		2602R	20 X2	D40718P	B05		AE0201A	17	YC051-YN236, YN501-YR328		
D39933	S/R		2602Z		D40718P	PERG	1F	AE0201A	17	YC051-YN236, YN501-YR328		
AC0520		W5168	SB2*	DISCONNECT BRACKET								
D39929	2		2601B	20 X2	D40138P	A02		AE0202A	08	ALL		
D39929	3		2601R	20 X2	D40138P	B02		AE0202A	08	ALL		
D39929	S/R		2601Z		D40138P	PERG	1F	AE0202A	08	ALL		
D39929	4		2602B	20 X2	D40138P	A03		AE0202A	08	ALL		
D39929	5		2602R	20 X2	D40138P	B03		AE0202A	08	ALL		
D39929	S/R		2602Z		D40138P	PERG	1F	AE0202A	08	ALL		
AC0520		W5170	SA2*	DISCONNECT BRACKET								
D39925	10		2601B	20 PB	D40734J	1		AB0420A	01	ALL		
D39925	2		2601R	20 PB	D40734J	2		AB0420A	01	ALL		
D39925	11		2602B	20 PB	D40734J	3		AB0420A	01	ALL		
D39925	24		2602R	20 PB	D40734J	4		AB0420A	01	ALL		
D39925	15		2603B	20 PB	D40734J	5		AB0420A	01	ALL		
D39925	16		2603R	20 PB	D40734J	6		AB0420A	01	ALL		
AC0520		W5172	LA2*	DISCONNECT BRACKET								
D39917	12		2604B	20 X2	D40736J	1		AB0420A	02	ALL		
D39917	3		2604R	20 X2	D40736J	2		AB0420A	02	ALL		
D39917	S/R		2604Z		D40736J	S/R		AB0420A	02	ALL		
D39917	14		2605B	20 X2	D40736J	4		AB0420A	02	ALL		
D39917	32		2605R	20 X2	D40736J	5		AB0420A	02	ALL		
D39917	S/R		2605Z		D40736J	S/R		AB0420A	02	ALL		
AC0520		W5564	SN2*	DISCONNECT BRACKET								
D39909	6		2601B	20 X2	D40136P	A01		AE0202A	07	ALL		
D39909	5		2601R	20 X2	D40136P	B01		AE0202A	07	ALL		
D39909	S/R		2601Z		D40136P	PERG	1F	AE0202A	07	ALL		

### SPARE WIRE LIST

D280A108

91-21-12

Section AC0520

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip					
I	AC0538			W5204	NN2	DISCONNECT BRACKET							
I	D13928		17		0002	20	PA	D40332J	2		AE0104A	26	YD160-YR328

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AC0538

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
<b>I</b>	<b>AD0520</b>		<b>W1278</b>	<b>RN2</b>	<b>DISCONNECT BRACKET</b>							
I	D39928	11		2001B	20	HQ	D08156J	13		AW0258R	06	ALL
I	D39928	24		2001R	20	HQ	D08156J	12		AW0258R	06	ALL
I	D39928	S/R		2001Z			D08156J	S/R		AW0258R	06	ALL
I	D39928	10		2002B	20	HQ	D08156J	10		AW0258R	06	ALL
I	D39928	2		2002R	20	HQ	D08156J	2		AW0258R	06	ALL
I	D39928	S/R		2002Z			D08156J	S/R		AW0258R	06	ALL
I	D39928	15		2003B	20	HQ	D08156J	14		AW0258R	06	ALL
I	D39928	16		2003R	20	HQ	D08156J	4		AW0258R	06	ALL
I	D39928	S/R		2003Z			D08156J	S/R		AW0258R	06	ALL
<b>I</b>	<b>AD0520</b>		<b>W1282</b>	<b>SB2*</b>	<b>DISCONNECT BRACKET</b>							
I	D39932	2		2001B	20	HQ	D30162	16		AW0258R	05	ALL
I	D39932	3		2001R	20	HQ	D30162	15		AW0258R	05	ALL
I	D39932	S/R		2001Z			D30162	S/R		AW0258R	05	ALL
I	D39932	4		2002B	20	HQ	D30162	18		AW0258R	05	ALL
I	D39932	5		2002R	20	HQ	D30162	17		AW0258R	05	ALL
I	D39932	S/R		2002Z			D30162	S/R		AW0258R	05	ALL
<b>I</b>	<b>AD0520</b>		<b>W1284</b>	<b>SN1</b>	<b>DISCONNECT BRACKET</b>							
I	D39912	6		2004B	20	HQ	D30114	37		AW0258R	04	ALL
I	D39912	5		2004R	20	HQ	D30114	36		AW0258R	04	ALL
I	D39912	S/R		2004Z			D30114	S/R		AW0258R	04	ALL
I	D39936	26		2001B	20	HQ	D30114	21		AW0258R	04	YC051-YD158, YN231
I	D39936	26		2001B	20	HQ	D30114	30		AW0258R	04	YD160-YL999, YN232-YR328
I	D39936	25		2001R	20	HQ	D30114	20		AW0258R	04	YC051-YD158, YN231
I	D39936	25		2001R	20	HQ	D30114	32		AW0258R	04	YD160-YL999, YN232-YR328
I	D39936	S/R		2001Z			D30114	S/R		AW0258R	04	ALL
<b>I</b>	<b>AD0520</b>		<b>W6162</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET</b>							
I	D39922	14		2611B	20	PB	D40156P	A14		AE0401A	50	YC054-YR328
I	D39922	5		2611R	20	PB	D40156P	B14		AE0401A	50	YC054-YR328
I	D39922	31		2612B	20	PB	D40156P	A15		AE0401A	50	YC054-YR328
I	D39922	30		2612R	20	PB	D40156P	B15		AE0401A	50	YC054-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AD0520

Page 1

Nov 12/2012



	From Matewith	Pos	Bundle	Sep	Description		To					Effectivity	
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos		
	AD0520		W6164	RB1*	DISCONNECT BRACKET								
	D39934	26		2602B	20	PB	D40720P	A09		AE0402A	27	YC051-YN236, YN501-YR328	
	D39934	25		2602R	20	PB	D40720P	B09		AE0402A	27		
	AD0520		W6168	SB2*	DISCONNECT BRACKET								
	D39930	2		2601B	20	VG	D40144P	A01		AE0401A	38	ALL	
	D39930	3		2601R	20	VG	D40144P	B01		AE0401A	38	ALL	
	D39930	S/R		2601Z			D40144P	PERG	1F	AE0401A	38	ALL	
	D39930	4		2602B	20	VG	D40144P	A02		AE0401A	38	ALL	
	D39930	5		2602R	20	VG	D40144P	B02		AE0401A	38	ALL	
	D39930	S/R		2602Z			D40144P	PERG	1F	AE0401A	38	ALL	
	AD0520		W6170	RA2*	DISCONNECT BRACKET								
	D39926	10		2603B	20	PB	D40728J	6		AB0405B	01	ALL	
	D39926	2		2603R	20	PB	D40728J	7		AB0405B	01	ALL	
	D39926	11		2604B	20	PB	D40728J	8		AB0405B	01	ALL	
	D39926	24		2604R	20	PB	D40728J	9		AB0405B	01	ALL	
	D39926	15		2605B	20	PB	D40728J	15		AB0405B	01	ALL	
	D39926	16		2605R	20	PB	D40728J	16		AB0405B	01	ALL	
	AD0520		W6172	RA2*	DISCONNECT BRACKET								
	D39918	12		2612B	20	PB	D40730J	9		AB0405B	02	ALL	
	D39918	3		2612R	20	PB	D40730J	10		AB0405B	02	ALL	
	D39918	14		2613B	20	PB	D40730J	11		AB0405B	02	ALL	
	D39918	32		2613R	20	PB	D40730J	12		AB0405B	02	ALL	
	AD0520		W6564	SN2*	DISCONNECT BRACKET								
	D39910	6		2601B	20	VG	D40158P	A02		AE0401A	42	ALL	
	D39910	5		2601R	20	VG	D40158P	B02		AE0401A	42	ALL	
	D39910	S/R		2601Z			D40158P	PERG	1F	AE0401A	42	ALL	

## SPARE WIRE LIST

D280A108

91-21-12

Section AD0520

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith	Pos	Bundle	Sep	Description		To					Pos	Effectivity	
	From Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith				
I	AE0101A	03	W5111	NA2	DISCONNECT BRACKET - E1-1 SHELF									
	D45133P	A02		0019	22	PA	D45115J	6		AE0102A	02	YC051-YC058		
	D45133P	B02		0020	22	PA	D45115J	7		AE0102A	02	YC051-YC058		
	D45133P	A03		0021	22	PA	D45115J	8		AE0102A	02	YC051-YC058		
I	D45133P	B05		2046B	24	Y2	D45115J	50		AE0102A	02	ALL		
I	D45133P	A05		2046R	24	Y2	D45115J	49		AE0102A	02	ALL		
I	D45133P	PERG	1F	2046Z			D45115J	S/R		AE0102A	02	ALL		
I	D45133P	B06		2047B	24	Y2	D45131P	B03		AE0301A	08	ALL		
I	D45133P	A06		2047R	24	Y2	D45131P	A03		AE0301A	08	ALL		
I	D45133P	PERG	1F	2047Z			D45131P	PERG	1F	AE0301A	08	ALL		
	D45133P	B07		2052B	24	Y2	D45131P	B06		AE0301A	08	YC051-YC052		
	D45133P	A07		2052R	24	Y2	D45131P	A06		AE0301A	08	YC051-YC052		
	D45133P	PERG	1F	2052Z			D45131P	PERG	1F	AE0301A	08	YC051-YC052		
I	AE0101A	04	W5161	LA2	DISCONNECT BRACKET - E1-1 SHELF									
I	D41145P	A04		0035	24	PK	D43145P	B01		AE0301A	15	ALL		
I	D41145P	A03		2511B	22	X2	D43155P	B16		AE0301A	16	ALL		
I	D41145P	A02		2511R	22	X2	D43155P	B15		AE0301A	16	ALL		
I	D41145P	PERG	1F	2511Z			D43155P	PERG	1F	AE0301A	16	ALL		
	D41145P	B02		2531B	22	X2	D43155P	B12		AE0301A	16	YC051-YC058		
	D41145P	B01		2531R	22	X2	D43155P	B11		AE0301A	16	YC051-YC058		
	D41145P	PERG	1F	2531Z			D43155P	PERG	1F	AE0301A	16	YC051-YC058		
I	AE0101A	06	W5461	LA2	DISCONNECT BRACKET - E1-1 SHELF									
I	D42311P	A10		2103B	24	Y2	D42261P	B12		AE0302A	41	ALL		
I	D42311P	A09		2103R	24	Y2	D42261P	B11		AE0302A	41	ALL		
I	D42311P	PERG	1F	2103Z			D42261P	PERG	1F	AE0302A	41	ALL		
I	AE0101A	08	W5301	LG2	DISCONNECT BRACKET - E1-1 SHELF									
	D04425P	A05		0015	22	PA	D00545	15		M00414		YC051-YC052		
I	D04425P	A05		0015	22	PA	D43393P	15		AB1050L	02	YC053-YR328		
	D04425P	A07		0017	22	PA	D00545	17		M00414		YC051-YC052		
I	D04425P	A07		0017	22	PA	D43393P	17		AB1050L	02	YC053-YR328		
	D04425P	A09		0019	22	PA	D00545	19		M00414		YC051-YC052		
I	D04425P	A09		0019	22	PA	D43393P	19		AB1050L	02	YC053-YR328		
	D04425P	B01		0021	22	PA	D00545	21		M00414		YC051-YC052		
I	D04425P	B01		0021	22	PA	D43393P	21		AB1050L	02	YC053-YR328		
I	D04425P	B10		2007B	22	PB	D43393P	10		AB1050L	02	YC053-YR328		
I	D04425P	B09		2007R	22	PB	D43393P	9		AB1050L	02	YC053-YR328		

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0101A

Page 1

Nov 12/2012

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
I	AE0101A	12	W6110	LA2*	DISCONNECT BRACKET - E1-1 SHELF							
I	D40364P	B05		0011	20	PA	D11418	CAP	Y	P0091		ALL
I	D40364P	B06		0012	20	PA	D11418	CAP	Y	P0091		ALL
I	D40364P	A06		0013	20	PA	D11418	CAP	Y	P0091		ALL
I	D40364P	A04		0520	22	PA	D40368P	5		AP0600B	09	ALL
I	D40364P	B03		0521	22	PA	D40368P	6		AP0600B	09	ALL
	AE0101A	13	W0111		DISCONNECT BRACKET - E1-1 SHELF							
	D41811J	A09		0295	22	PA	D41125J	B16		AE0101A	25	YC051-YC052
I	AE0101A	13	W2101	LA2	DISCONNECT BRACKET - E1-1 SHELF							
I	D41811P	A01		0001	20	PA	D41801P	1		AP1800B	03	ALL
I	D41811P	A02		0002	20	PA	D41801P	2		AP1800B	03	ALL
I	D41811P	A03		0003	20	PA	D41801P	3		AP1800B	03	ALL
I	D41811P	A08		0008	22	PA	D41801P	8		AP1800B	03	ALL
I	D41811P	A09		0009	22	PA	D41801P	9		AP1800B	03	ALL
I	D41811P	A10		0010	20	PA	D41801P	10		AP1800B	03	ALL
I	D41811P	B01		0011	20	PA	D41801P	11		AP1800B	03	ALL
I	D41811P	B02		0012	20	PA	D41801P	12		AP1800B	03	ALL
I	D41811P	B03		0013	20	PA	D41801P	13		AP1800B	03	ALL
I	D41811P	B04		0014	20	PA	D41801P	14		AP1800B	03	ALL
I	D41811P	B05		0015	20	PA	D41801P	15		AP1800B	03	ALL
I	AE0101A	17	W5721	LE2	DISCONNECT BRACKET - E1-1 SHELF							
I	D41121P	B16		0026	22	CQ	D41129J	26		AE0104A	18	ALL
I	AE0101A	19	W5111	NA2	DISCONNECT BRACKET - E1-1 SHELF							
I	D45113P	A19		0013	22	PA	D45115J	4		AE0102A	02	YC051-YC058
I	D45113P	B14		2033B	24	Y2	D45111P	B17		AE0301A	07	ALL
I	D45113P	A14		2033R	24	Y2	D45111P	A17		AE0301A	07	ALL
I	D45113P	PERG	1F	2033Z			D45111P	PERG	1F	AE0301A	07	ALL
I	D45113P	B15		2042B	24	Y2	D45115J	40		AE0102A	02	ALL
I	D45113P	A15		2042R	24	Y2	D45115J	39		AE0102A	02	ALL
I	D45113P	PERG	1F	2042Z			D45115J	S/R		AE0102A	02	ALL
I	AE0101A	20	W5161	LA2	DISCONNECT BRACKET - E1-1 SHELF							
I	D41155P	B14		0020	22	PA	D45245J	B08		AE0502A	14	YC051-YD157
I	D41155P	B11		0021	22	PA	D45245J	B09		AE0502A	14	YC051-YC058

## SPARE WIRE LIST

D280A108

91-21-12

Section AE0101A

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
AE0101A	20	W5161	LA2	DISCONNECT BRACKET - E1-1 SHELF (continued)								
D41155P	A17		0040	24 PK	D43145P	A17		AE0301A	15	ALL		
D41155P	B17		0042	22 PA	D45245J	B06		AE0502A	14	YC051-YD157		
D41155P	A06		2503B	24 Y2	D45255J	A06		AE0502A	15	YD157-YR328		
D41155P	A05		2503R	24 Y2	D45255J	A05		AE0502A	15	YD157-YR328		
D41155P	PERG	1F	2503Z		D45255J	PERG	1F	AE0502A	15	YD157-YR328		
AE0101A	21	W5461	LA2	DISCONNECT BRACKET - E1-1 SHELF								
D43211P	B15		0045	24 PK	D42361P	B11		AE0302A	43	ALL		
D43211P	A14		0073	24 PK	D42361P	A14		AE0302A	43	ALL		
D43211P	B13		0074	24 PK	D42361P	B13		AE0302A	43	ALL		
AE0101A	22	W5461	LA2	DISCONNECT BRACKET - E1-1 SHELF								
D46461P	B07		2031B	24 Y2	D44161P	B07		AE0401A	24	YC051-YL959, YN231-YN235		
D46461P	B06		2031R	24 Y2	D44161P	B06		AE0401A	24	YC051-YL959, YN231-YN235		
D46461P	PERG	1F	2031Z		D44161P	PERG	1F	AE0401A	24	YC051-YL959, YN231-YN235		
D46461P	B09		2051B	24 Y2	D43261P	B13		AE0302A	40	YN231-YN235		
D46461P	A09		2051R	24 Y2	D43261P	A13		AE0302A	40	YN231-YN235		
D46461P	PERG	1F	2051Z		D43261P	PERG	1F	AE0302A	40	YN231-YN235		
AE0101A	24	W2175	LA2	DISCONNECT BRACKET - E1-1 SHELF								
D41821P	A06		0006	22 PA	D41803P	6		AP1800B	06	ALL		
D41821P	A08		0008	20 PA	D41803P	8		AP1800B	06	ALL		
D41821P	A09		0009	22 PA	D41803P	9		AP1800B	06	ALL		
D41821P	A10		0010	22 PA	D41803P	10		AP1800B	06	ALL		
D41821P	B02		0012	20 PA	D41803P	12		AP1800B	06	YL951-YR328		
D41821P	B03		0013	20 PA	D41803P	13		AP1800B	06	ALL		
D41821P	B05		0015	20 PA	D41803P	15		AP1800B	06	ALL		
D41821P	B07		0017	20 PA	D41803P	17		AP1800B	06	ALL		
D41821P	G		0024	16 PA	D41803P	24		AP1800B	06	YC051-YC061		
D41821P	G		0024	16 PA	D41803P	CAP Y		AP1800B	06	YC062-YR328		
AE0101A	25	W0111		DISCONNECT BRACKET - E1-1 SHELF								
D41125J	B16		0295	22 PA	D41811J	A09		AE0101A	13	YC051-YC052		

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0101A

Page 3

Nov 12/2012

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
<b>I AE0101A</b>	<b>25</b>	<b>W5719</b>	<b>LA2</b>	<b>DISCONNECT BRACKET - E1-1 SHELF</b>								
D41125P	B07			0030	22	PA	D42111P	B02		AE0402A	01	ALL
D41125P	A12			0033	22	PA	D41509P	40		AE0103A	19	YC051-YD157
D41125P	A13			0035	20	PA	D41509P	35		AE0103A	19	YC051-YD157
D41125P	B13			0036	20	PA	D41509P	36		AE0103A	19	ALL
D41125P	A10			0037	22	PA	D41509P	37		AE0103A	19	YD158-YR328
D41125P	B10			0038	24	PK	D41509P	38		AE0103A	19	ALL
D41125P	A16			0039	20	PA	D41211J	39		AE0102A	01	ALL
D41125P	B16			0041	22	PA	D41211J	41		AE0102A	01	ALL
D41125P	A18			0043	22	PA	D41211J	40		AE0102A	01	ALL
D41125P	B15			0051	22	PA	D41211J	31		AE0102A	01	ALL
D41125P	B02			2004B	24	Y2	D41211J	38		AE0102A	01	YC051-YC052
D41125P	B01			2004R	24	Y2	D41211J	37		AE0102A	01	YC051-YC052
D41125P	PERG	1F		2004Z			D41211J	S/R		AE0102A	01	YC051-YC052
D41125P	A04			2005B	24	Y2	D41509P	46		AE0103A	19	ALL
D41125P	A03			2005R	24	Y2	D41509P	45		AE0103A	19	ALL
D41125P	PERG	1F		2005Z			D41509P			AE0103A	19	ALL
D41125P	B04			2006B	24	Y2	D41509P	50		AE0103A	19	ALL
D41125P	B03			2006R	24	Y2	D41509P	49		AE0103A	19	ALL
D41125P	PERG	1F		2006Z			D41509P			AE0103A	19	ALL
D41125P	A15			2010B	24	Y2	D41509P	44		AE0103A	19	ALL
D41125P	A14			2010R	24	Y2	D41509P	43		AE0103A	19	ALL
D41125P	PERG	1F		2010Z			D41509P	S/R		AE0103A	19	ALL
<b>I AE0101A</b>	<b>26</b>	<b>W3381</b>	<b>LE2</b>	<b>DISCONNECT BRACKET - E1-1 SHELF</b>								
D04083P	A02			0006	20	PA	D44381P	21		AB1050L	04	YC053-YD154
D04083P	A02			0006	20	PA	D44381P	1		AB1050L	04	YD155-YR328
D04083P	A07			0007	20	PA	D44381P	25		AB1050L	04	YC053-YD154
D04083P	A07			0007	20	PA	D44381P	2		AB1050L	04	YD155-YR328
<b>I AE0101A</b>	<b>27</b>	<b>W5367</b>	<b>LC3</b>	<b>DISCONNECT BRACKET - E1-1 SHELF</b>								
D04073P	B02			3013B	22	HG	D01827	REF	VP	M00943		YC051-YN236, YN501-YR328
D04073P	B01			3013R	22	HG	D01827	REF	VP	M00943		YC051-YN236, YN501-YR328
D04073P	B03			3013Y	22	HG	D01827	REF	VP	M00943		YC051-YN236, YN501-YR328
D04073P	PERG	1F		3013Z			D01827	DED		M00943		YC051-YN236, YN501-YR328

**SPARE WIRE LIST**

D280A108

**91-21-12**

Section AE0101A

Page 4

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Pos	Bundle	Sep	Description		To					Effectivity	
	Matewith Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos		
I	AE0101A	31	W5205	SA2	DISCONNECT BRACKET - E1-1 SHELF								
I	D45203P	A06		0006	22	PA	D45201J	6		AE0102A	10	YC051-YD158, YL951-YR328	
I	D45203P	A10		0010	22	PA	D45201J	10		AE0102A	10	YC051-YD158, YL951-YR328	
I	D45203P	A09		0013	22	PA	D45209J	A10		AE0502A	03	YL968-YL999, YN236-YN260	
I	D45203P	B09		0014	22	PA	D45209J	B10		AE0502A	03	YL968-YL999, YN236-YN260	
I	D45203P	B06		2006B	22	X2	D45201J	16		AE0102A	10	YC051-YD158, YL951-YR328	
I	D45203P	B05		2006R	22	X2	D45201J	15		AE0102A	10	YC051-YD158, YL951-YR328	
I	D45203P	PERG	1F	2006Z			D45201J	S/R		AE0102A	10	YC051-YD158, YL951-YR328	
I	AE0101A	32	W3377	LA3	DISCONNECT BRACKET - E1-1 SHELF								
I	D04079P	B01		0010	20	PA	D43397P	46		AB1050L	03	YC053-YN236, YN501-YR328	
I	D04079P	B08		3006B	22	GC	D01681	REF	VP	M01020		YC051-YC052	
I	D04079P	B08		3006B	22	PC	D43397P	41		AB1050L	03	YC053-YN236, YN501-YR328	
I	D04079P	B07		3006R	22	GC	D01681	REF	VP	M01020		YC051-YC052	
I	D04079P	B07		3006R	22	PC	D43397P	40		AB1050L	03	YC053-YN236, YN501-YR328	
I	D04079P	B09		3006Y	22	GC	D01681	REF	VP	M01020		YC051-YC052	
I	D04079P	B09		3006Y	22	PC	D43397P	42		AB1050L	03	YC053-YN236, YN501-YR328	
I	AE0101A	36	W5381	LE2	DISCONNECT BRACKET - E1-1 SHELF								
I	D45551P	B02		2008B	22	VG	D45501J	13		AB1050L	05	YD157-YR328	
I	D45551P	A02		2008R	22	VG	D45501J	4		AB1050L	05	YD157-YR328	
I	D45551P	PERG	1F	2008Z			D45501J	S/R		AB1050L	05	YD157-YR328	
I	D45551P	B09		2009B	20	HF	D45501J	10		AB1050L	05	YD157-YR328	
I	D45551P	A09		2009R	20	HF	D45501J	2		AB1050L	05	YD157-YR328	
I	D45551P	PERG	1F	2009Z			D45501J	S/R		AB1050L	05	YD157-YR328	

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0101A

Page 5 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
I	AE0101B	01	W5463	RB2	DISCONNECT BRACKET - E1-1 SHELF							
I	D41563P	A02		0054	20	PA	D43263P	A11		AE0302A	44	YD157
I	D41563P	A03		0055	20	PA	D43263P	A13		AE0302A	44	YC051-YL959, YN231-YN235
	AE0101B	02	W5160	RB2*	DISCONNECT BRACKET - E1-1 SHELF							
	D40464P	B04		0619	22	PA	D10986	54		M02061		YN231-YN501
I	AE0101B	05	W5723	RB2*	DISCONNECT BRACKET - E1-1 SHELF							
I	D40063P	A01		0151	20	CQ	D40047J	51		AE0104A	08	YC051-YD157
I	AE0101B	08	W5463	RB2	DISCONNECT BRACKET - E1-1 SHELF							
I	D41163P	A09		0010	22	PA	D41463J	3		AE0104A	11	YC051-YD158
I	D41163P	B15		0015	20	PA	D41463J	15		AE0104A	11	YC051-YD155
I	D41163P	B14		0020	22	PA	D41463J	36		AE0104A	11	YD157-YR328
I	D41163P	B12		0046	24	B6	D41463J	30		AE0104A	11	ALL
I	D41163P	A07		2014B	22	X2	D43263P	A08		AE0302A	44	YC051-YD157
I	D41163P	B05		2014R	22	X2	D43263P	B08		AE0302A	44	YC051-YD157
I	D41163P	PERG	1F	2014Z			D43263P	PERG	1F	AE0302A	44	YC051-YD157
I	AE0101B	09	W2383	RB2	DISCONNECT BRACKET - E1-1 SHELF							
I	D46023P	K		0018	16	PA	D46065P	8		AP0600B	15	YL951-YL999, YN501-YR328
I	D46023P	A05		0023	20	PA	D46065P	23		AP0600B	15	ALL
I	AE0101B	10	W5723	RB2*	DISCONNECT BRACKET - E1-1 SHELF							
I	D43317P	A09		0074	20	CQ	D40047J	41		AE0104A	08	YD158-YR328
I	D43317P	A02		0102	20	CQ	D40047J	2		AE0104A	08	ALL
I	D43317P	A03		0103	20	CQ	D40047J	3		AE0104A	08	ALL
I	D43317P	B04		2122B	22	X2	D40047J	22		AE0104A	08	YC051-YC052
I	D43317P	B03		2122R	22	X2	D40047J	21		AE0104A	08	YC051-YC052
I	D43317P	PERG	1F	2122Z			D40047J	S/R		AE0104A	08	YC051-YC052
I	D43317P	B06		2136B	24	Y2	D40047J	43		AE0104A	08	YC051-YC064
I	D43317P	B05		2136R	24	Y2	D40047J	42		AE0104A	08	YC051-YC064
I	D43317P	PERG	1F	2136Z			D40047J	S/R		AE0104A	08	YC051-YC064
I	AE0101B	11	W5163	RB2*	DISCONNECT BRACKET - E1-1 SHELF							
I	D41147P	G		0025	16	PA	D41557J	23		AE0105A	07	YD158-YR328

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0101B

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
<b>AE0101B</b>	<b>11</b>	<b>W5163</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E1-1 SHELF (continued)</b>								
D41147P	A07		0040	24 PK	D43147P	A07		AE0301A	28	ALL		
<b>AE0101B</b>	<b>12</b>	<b>W5163</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E1-1 SHELF</b>								
D41157P	A18		0004	22 PA	D45257J	A15		AE0502A	05	ALL		
D41157P	B05		0035	22 PA	D41557J	4		AE0105A	07	ALL		
D41157P	B20		0039	22 PA	D45257J	A07		AE0502A	05	ALL		
D41157P	A02		2501B	24 Y2	D45257J	A02		AE0502A	05	YC051-YD157, YL951-YR328		
D41157P	A01		2501R	24 Y2	D45257J	A01		AE0502A	05	YC051-YD157, YL951-YR328		
D41157P	PERG	1F	2501Z		D45257J	PERG	1F	AE0502A	05	YC051-YD157, YL951-YR328		
D41157P	B11		2529B	24 Y2	D43147P	A20		AE0301A	28	ALL		
D41157P	B10		2529R	24 Y2	D43147P	A19		AE0301A	28	ALL		
D41157P	PERG	1F	2529Z		D43147P	PERG	1F	AE0301A	28	ALL		
D41157P	B13		2530B	24 Y2	D43147P	A09		AE0301A	28	YC051-YD157		
D41157P	B12		2530R	24 Y2	D43147P	A08		AE0301A	28	YC051-YD157		
D41157P	PERG	1F	2530Z		D43147P	PERG	1F	AE0301A	28	YC051-YD157		
<b>AE0101B</b>	<b>13</b>	<b>W2103</b>	<b>RB2</b>	<b>DISCONNECT BRACKET - E1-1 SHELF</b>								
D46013P	A05		0005	20 PA	D46061P	5		AP0600B	23	YC051-YC059, YC065-YD158, YL951-YR328		
D46013P	A05		0005	20 PA	D46061P	CAP	Y	AP0600B	23	YC060-YC064		
D46013P	A06		0006	20 PA	D46061P	6		AP0600B	23	YC051-YD158, YL951-YR328		
D46013P	A08		0018	20 PA	D46061P	18		AP0600B	23	YC051-YD158, YL951-YR328		
D46013P	A09		0019	20 PA	D46061P	19		AP0600B	23	YC051-YD158, YL951-YR328		

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0101B

Page 2 End

Nov 12/2012



From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
<b>I</b>	<b>AE0102A</b>	<b>01</b>	<b>W5719</b>	<b>LA2</b>	<b>DISCONNECT BRACKET - E1-2 SHELF</b>							
	D41211J	26		0026	24	PK	D41509P	26		AE0103A	19	ALL
	D41211J	27		0027	24	PK	D41509P	27		AE0103A	19	ALL
	D41211J	28		0028	20	PA	D41509P	28		AE0103A	19	ALL
	D41211J	39		0039	20	PA	D41125P	A16		AE0101A	25	ALL
	D41211J	41		0041	22	PA	D41125P	B16		AE0101A	25	ALL
	D41211J	40		0043	22	PA	D41125P	A18		AE0101A	25	ALL
	D41211J	31		0051	22	PA	D41125P	B15		AE0101A	25	ALL
	D41211J	38		2004B	24	Y2	D41125P	B02		AE0101A	25	YC051-YC052
	D41211J	37		2004R	24	Y2	D41125P	B01		AE0101A	25	YC051-YC052
	D41211J	S/R		2004Z			D41125P	PERG	1F	AE0101A	25	YC051-YC052
	D41211J	44		2011B	24	Y2	D41509P	53		AE0103A	19	ALL
	D41211J	43		2011R	24	Y2	D41509P	52		AE0103A	19	ALL
	D41211J	S/R		2011Z			D41509P	S/R		AE0103A	19	ALL
<b>I</b>	<b>AE0102A</b>	<b>02</b>	<b>W5111</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E1-2 SHELF</b>							
	D45115J	4		0013	22	PA	D45113P	A19		AE0101A	19	YC051-YC058
	D45115J	6		0019	22	PA	D45133P	A02		AE0101A	03	YC051-YC058
	D45115J	7		0020	22	PA	D45133P	B02		AE0101A	03	YC051-YC058
	D45115J	8		0021	22	PA	D45133P	A03		AE0101A	03	YC051-YC058
	D45115J	9		0024	22	PA	D45111P	B02		AE0301A	07	ALL
	D45115J	20		2005B	24	Y2	D45111P	B04		AE0301A	07	YC051-YC058
	D45115J	19		2005R	24	Y2	D45111P	A04		AE0301A	07	YC051-YC058
	D45115J	S/R		2005Z			D45111P	PERG	1F	AE0301A	07	YC051-YC058
	D45115J	40		2042B	24	Y2	D45113P	B15		AE0101A	19	ALL
	D45115J	39		2042R	24	Y2	D45113P	A15		AE0101A	19	ALL
	D45115J	S/R		2042Z			D45113P	PERG	1F	AE0101A	19	ALL
	D45115J	50		2046B	24	Y2	D45133P	B05		AE0101A	03	ALL
	D45115J	49		2046R	24	Y2	D45133P	A05		AE0101A	03	ALL
	D45115J	S/R		2046Z			D45133P	PERG	1F	AE0101A	03	ALL
<b>I</b>	<b>AE0102A</b>	<b>03</b>	<b>W2149</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E1-2 SHELF</b>							
	D04029J	23		0023	22	PA	D00263	CAP	Y	P008-25		YC051-YD158, YL951-YR328
	D04029J	27		0027	22	PA	D00303	CAP	Y	P008-25		YC051-YD158, YL951-YR328
	D04029J	34		2005B	24	Y2	D00303	CAP	Y	P008-25		YC051-YD158, YL951-YR328

## SPARE WIRE LIST

D280A108

91-21-12

Section AE0102A

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
<b>AE0102A</b>	<b>03</b>	<b>W2149</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E1-2 SHELF (continued)</b>								
D04029J	33		2005R	24	Y2	D00303	CAP	Y	P008-25		YC051-YD158, YL951-YR328	
D04029J	S/R		2005Z			D00303	S/R		P008-25		YC051-YD158, YL951-YR328	
D04029J	36		2006B	24	Y2	D00263	CAP	Y	P008-25		YC051-YD158, YL951-YR328	
D04029J	35		2006R	24	Y2	D00263	CAP	Y	P008-25		YC051-YD158, YL951-YR328	
D04029J	S/R		2006Z			D00263	S/R		P008-25		YC051-YD158, YL951-YR328	
<b>AE0102A</b>	<b>05</b>	<b>W2205</b>	<b>SN2</b>	<b>DISCONNECT BRACKET - E1-2 SHELF</b>								
D04205J	13		0018	22	PA	D03681	18	VP	N00186		YC051-YD157	
D04205J	11		2004B	24	Y2	D10853	CAP	Y	N00226		YD158, YL951-YR328	
D04205J	10		2004R	24	Y2	D10853	CAP	Y	N00226		YD158, YL951-YR328	
D04205J	S/R		2004Z			D10853	DED		N00226		YD158, YL951-YR328	
D04205J	13		2015B	24	Y2	D10853	CAP	Y	N00226		YD158, YL951-YR328	
D04205J	12		2015R	24	Y2	D10853	CAP	Y	N00226		YD158, YL951-YR328	
D04205J	S/R		2015Z			D10853	DED		N00226		YD158, YL951-YR328	
<b>AE0102A</b>	<b>06</b>	<b>W2651</b>	<b>SA2</b>	<b>DISCONNECT BRACKET - E1-2 SHELF</b>								
D41827J	11		0001	20	PA	D41807P	1		AP1800B	08	ALL	
<b>AE0102A</b>	<b>10</b>	<b>W5205</b>	<b>SA2</b>	<b>DISCONNECT BRACKET - E1-2 SHELF</b>								
D45201J	6		0006	22	PA	D45203P	A06		AE0101A	31	YC051-YD158, YL951-YR328	
D45201J	10		0010	22	PA	D45203P	A10		AE0101A	31	YC051-YD158, YL951-YR328	
D45201J	31		0053	20	CQ	D45207P	A03		AE0302A	14	YC051-YD158, YL951-YR328	
D45201J	16		2006B	22	X2	D45203P	B06		AE0101A	31	YC051-YD158, YL951-YR328	

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0102A

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
<b>AE0102A</b>	<b>10</b>	<b>W5205</b>	<b>SA2</b>	<b>DISCONNECT BRACKET - E1-2 SHELF (continued)</b>								
D45201J	15		2006R	22 X2	D45203P	B05		AE0101A	31	YC051-YD158, YL951-YR328		
D45201J	S/R		2006Z		D45203P	PERG	1F	AE0101A	31	YC051-YD158, YL951-YR328		
D45201J	13		2031B	24 Y2	D45209J	A07		AE0502A	03	YC051-YD158, YL951-YR328		
D45201J	12		2031R	24 Y2	D45209J	A06		AE0502A	03	YC051-YD158, YL951-YR328		
D45201J	S/R		2031Z		D45209J	PERG	1F	AE0502A	03	YC051-YD158, YL951-YR328		
<b>AE0102A</b>	<b>12</b>	<b>W5723</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E1-2 SHELF</b>								
D41213J	13		2004B	24 Y2	D40047J	53		AE0104A	08	YC051-YD157		
D41213J	12		2004R	24 Y2	D40047J	52		AE0104A	08	YC051-YD157		
D41213J	S/R		2004Z		D40047J	S/R		AE0104A	08	YC051-YD157		
D41213J	15		2040B	24 Y2	D40047J	55		AE0104A	08	ALL		
D41213J	14		2040R	24 Y2	D40047J	54		AE0104A	08	ALL		
D41213J	S/R		2040Z		D40047J	S/R		AE0104A	08	ALL		
D41213J	4		2512B	24 Y2	D43306P	B04		AE0303A	05	YD158-YR328		
D41213J	3		2512R	24 Y2	D43306P	A04		AE0303A	05	YD158-YR328		
D41213J	S/R		2512Z		D43306P	PERG	1F	AE0303A	05	YD158-YR328		
<b>AE0102A</b>	<b>13</b>	<b>W5721</b>	<b>LE2</b>	<b>DISCONNECT BRACKET - E1-2 SHELF</b>								
D41127J	23		0023	22 CQ	D41129J	23		AE0104A	18	ALL		
D41127J	13		0053	20 CQ	D41129J	53		AE0104A	18	ALL		
D41127J	14		0054	20 CQ	D41129J	54		AE0104A	18	ALL		
D41127J	15		0055	20 CQ	D41129J	55		AE0104A	18	ALL		

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0102A

Page 3 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith	Pos	Bundle	Sep	Description		To		Term	Type	Matewith	Pos	Effectivity
	Equip	Term	Type	Wire No.	GA	TY	Equip						
I	AE0103A	03	W2661	SB2	DISCONNECT BRACKET - E1-3 SHELF								
I	D46051P	7		0007	18	PA	D46069P	7		AP0600B	20	ALL	
I	D46051P	10		0010	16	PA	D46069P	10		AP0600B	20	ALL	
	AE0103A	05	W0131	NA2	DISCONNECT BRACKET - E1-3 SHELF								
	D41337J	2		0025	22	PA	TB1304Y	CAP	Y			YC051-YC052	
I	AE0103A	05	W3307	NN2	DISCONNECT BRACKET - E1-3 SHELF								
I	D41337P	22		0008	24	PK	D10019	40		M01415		YC051-YN260	
I	D41337P	24		2003B	24	PL	D10019	39		M01415		YC051-YN260	
I	D41337P	23		2003R	24	PL	D10019	38		M01415		YC051-YN260	
	AE0103A	08	W5158	SB2*	DISCONNECT BRACKET - E1-3 SHELF								
	D40488P	7		0034	22	PA	D40884P	29		AJ0020A	02	YD158	
	D40488P	8		0035	22	PA	D40884P	30		AJ0020A	02	YD158	
	D40488P	9		0036	22	PA	D40884P	31		AJ0020A	02	YD158	
I	AE0103A	09	W3307	NN2	DISCONNECT BRACKET - E1-3 SHELF								
I	D41337P	22		0008	24	PK	D14366	40		M01415		YN501-YR328	
I	D41337P	24		2003B	24	PL	D14366	39		M01415		YN501-YR328	
I	D41337P	23		2003R	24	PL	D14366	38		M01415		YN501-YR328	
I	AE0103A	11	W5156	SA2*	DISCONNECT BRACKET - E1-3 SHELF								
I	D40498P	29		0645	20	PA	D40670P	28		AJ0022	04	YL951-YL999, YR301-YR328	
I	AE0103A	14	W5160	RB2*	DISCONNECT BRACKET - E1-3 SHELF								
I	D40466P	27		0656	24	PK	D40470P	A01		AE0302A	37	YC051-YD157, YL951-YR328	
I	D40466P	28		0657	24	PK	D40470P	A06		AE0302A	37	YC051-YD157, YL951-YR328	
I	D40466P	16		0658	20	PA	D40470P	B06		AE0302A	37	YD158	
I	D40466P	47		1001R	22	X5	D40694P	21		AJ0024	07	YC051-YD158, YL951-YR328	
I	D40466P	DED		1001Z			D40694P	DED		AJ0024	07	YC051-YD158, YL951-YR328	
I	D40466P	48		1002R	22	X5	D40694P	22		AJ0024	07	YC051-YD158, YL951-YR328	

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0103A

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
<b>AE0103A</b>	<b>14</b>	<b>W5160</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E1-3 SHELF (continued)</b>								
D40466P	DED		1002Z			D40694P	DED		AJ0024	07	YC051-YD158, YL951-YR328	
D40466P	30		2461B	24	Y2	D40470P	B07		AE0302A	37	YC051-YD157, YL951-YL952, YN231-YR328	
D40466P	29		2461R	24	Y2	D40470P	B06		AE0302A	37	YC051-YD157, YL951-YL952, YN231-YR328	
D40466P	31		2461Z			D40470P	PERG	1F	AE0302A	37	YC051-YD157, YL951-YL952, YN231-YR328	
<b>AE0103A</b>	<b>17</b>	<b>W2651</b>	<b>SA2</b>	<b>DISCONNECT BRACKET - E1-3 SHELF</b>								
D41831P	1		0012	20	PA	D41807P	12		AP1800B	08	ALL	
D41831P	2		0013	20	PA	D41807P	13		AP1800B	08	ALL	
D41831P	7		0019	16	PA	D41807P	6		AP1800B	08	YD158-YR328	
D41831P	6		0029	22	PA	D41807P	29		AP1800B	08	YN231-YN501	
D41831P	9		0031	22	PA	SP02191		S			YN231-YN501	
<b>AE0103A</b>	<b>18</b>	<b>W5189</b>	<b>NA3</b>	<b>DISCONNECT BRACKET - E1-3 SHELF</b>								
D04195P	42		0001	22	PA	D48389P	A01		AE0801C	07	YC051-YC052	
D04195P	42		0001	22	PA	D48389P	A01		AE0801B	06	YC053-YD170	
D04195P	43		0002	22	PA	D48389P	B01		AE0801C	07	YC051-YC052	
D04195P	43		0002	22	PA	D48389P	B01		AE0801B	06	YC053-YD170	
D04195P	55		0073	22	PA	D08123P	B16		AE0401A	21	YL951-YN260, YR301-YR328	
<b>AE0103A</b>	<b>19</b>	<b>W5719</b>	<b>LA2</b>	<b>DISCONNECT BRACKET - E1-3 SHELF</b>								
D41509P	26		0026	24	PK	D41211J	26		AE0102A	01	ALL	
D41509P	27		0027	24	PK	D41211J	27		AE0102A	01	ALL	
D41509P	28		0028	20	PA	D41211J	28		AE0102A	01	ALL	
D41509P	40		0033	22	PA	D41125P	A12		AE0101A	25	YC051-YD157	
D41509P	35		0035	20	PA	D41125P	A13		AE0101A	25	YC051-YD157	
D41509P	36		0036	20	PA	D41125P	B13		AE0101A	25	ALL	
D41509P	37		0037	22	PA	D41125P	A10		AE0101A	25	YD158-YR328	
D41509P	38		0038	24	PK	D41125P	B10		AE0101A	25	ALL	
D41509P	46		2005B	24	Y2	D41125P	A04		AE0101A	25	ALL	
D41509P	45		2005R	24	Y2	D41125P	A03		AE0101A	25	ALL	

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0103A

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
<b>AE0103A</b>	<b>19</b>	<b>W5719</b>	<b>LA2</b>	<b>DISCONNECT BRACKET - E1-3 SHELF (continued)</b>								
D41509P			2005Z		D41125P	PERG	1F	AE0101A	25	ALL		
D41509P	50		2006B	24 Y2	D41125P	B04		AE0101A	25	ALL		
D41509P	49		2006R	24 Y2	D41125P	B03		AE0101A	25	ALL		
D41509P			2006Z		D41125P	PERG	1F	AE0101A	25	ALL		
D41509P	44		2010B	24 Y2	D41125P	A15		AE0101A	25	ALL		
D41509P	43		2010R	24 Y2	D41125P	A14		AE0101A	25	ALL		
D41509P	S/R		2010Z		D41125P	PERG	1F	AE0101A	25	ALL		
D41509P	53		2011B	24 Y2	D41211J	44		AE0102A	01	ALL		
D41509P	52		2011R	24 Y2	D41211J	43		AE0102A	01	ALL		
D41509P	S/R		2011Z		D41211J	S/R		AE0102A	01	ALL		
D41509P			FRAA		D41509P	S/R		AE0103A	19	ALL		
D41509P	S/R		FRAA		D41509P			AE0103A	19	ALL		
D41509P			FRAB		D41509P	47		AE0103A	19	ALL		
D41509P	47		FRAB		D41509P			AE0103A	19	ALL		
D41509P	S/R		FRAC		D41509P			AE0103A	19	ALL		
D41509P			FRAC		D41509P	S/R		AE0103A	19	ALL		
D41509P	51		FRAD		D41509P			AE0103A	19	ALL		
D41509P			FRAD		D41509P	51		AE0103A	19	ALL		
<b>AE0103A</b>	<b>22</b>	<b>W5723</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E1-3 SHELF</b>								
D41131P	35		2511B	24 Y2	D43306P	B03		AE0303A	05	YD158-YR328		
D41131P	34		2511R	24 Y2	D43306P	A03		AE0303A	05	YD158-YR328		
D41131P	36		2511Z		D43306P	PERG	1F	AE0303A	05	YD158-YR328		

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0103A

Page 3 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AE0104A</b>	<b>03</b>	<b>W3379</b>	<b>RB3</b>	<b>DISCONNECT BRACKET - E1-4 SHELF</b>						
D04081J	3		0022	20 CQ	D43399P	50		AB1050R	04	YC053-YN236, YN501-YR328
D04081J	28		3006B	22 GC	D01687	REF	VP	M01022		YC051-YC052
D04081J	28		3006B	22 PC	D43399P	41		AB1050R	04	YC053-YN236, YN501-YR328
D04081J	27		3006R	22 GC	D01687	REF	VP	M01022		YC051-YC052
D04081J	27		3006R	22 PC	D43399P	40		AB1050R	04	YC053-YN236, YN501-YR328
D04081J	29		3006Y	22 GC	D01687	REF	VP	M01022		YC051-YC052
D04081J	29		3006Y	22 PC	D43399P	42		AB1050R	04	YC053-YN236, YN501-YR328
<b>AE0104A</b>	<b>06</b>	<b>W2251</b>	<b>RF2</b>	<b>DISCONNECT BRACKET - E1-4 SHELF</b>						
D04311J	3		0003	22 PA	D04251P	3		AP0900A	23	ALL
D04311J	7		0007	22 CQ	D04251P	7		AP0900A	23	YD157-YR328
D04311J	9		0009	22 CQ	D04251P	9		AP0900A	23	ALL
D04311J	12		0012	20 PA	D04251P	12		AP0900A	23	ALL
D04311J	24		0024	22 CQ	D04251P	24		AP0900A	23	YC051-YD170
D04311J	20		2003B	24 Y2	D04251P	20		AP0900A	23	ALL
D04311J	19		2003R	24 Y2	D04251P	19		AP0900A	23	ALL
D04311J	S/R		2003Z		D04251P	S/R		AP0900A	23	ALL
D04311J	22		2004B	24 Y2	D04251P	22		AP0900A	23	ALL
D04311J	21		2004R	24 Y2	D04251P	21		AP0900A	23	ALL
D04311J	S/R		2004Z		D04251P	S/R		AP0900A	23	ALL
<b>AE0104A</b>	<b>07</b>	<b>W2205</b>	<b>SN2</b>	<b>DISCONNECT BRACKET - E1-4 SHELF</b>						
D40049J	5		0020	22 PA	D03679	5	VP	N00185		YC051-YD158, YL951-YR328
D40049J	6		0021	22 PA	D03679	17	VP	N00185		YC051-YD158, YL951-YR328
D40049J	4		2012B	24 Y2	D10853	CAP	Y	N00226		YD158, YL951-YR328
D40049J	3		2012R	24 Y2	D10853	CAP	Y	N00226		YD158, YL951-YR328
D40049J	S/R		2012Z		D10853	DED		N00226		YD158, YL951-YR328
D40049J	12		2504B	24 Y2	D03681	12	VP	N00186		YC051-YD155
D40049J	11		2504R	24 Y2	D03681	11	VP	N00186		YC051-YD155

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0104A

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description		To		Term	Type	Matewith	Pos	Effectivity
Equip	Term	Type	Wire No.	GA	TY	Equip						
<b>AE0104A</b>	<b>07</b>	<b>W2205</b>	<b>SN2</b>	<b>DISCONNECT BRACKET - E1-4 SHELF (continued)</b>								
D40049J	S/R		2504Z			D03681		DED		N00186		YC051-YD155
<b>AE0104A</b>	<b>08</b>	<b>W5723</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E1-4 SHELF</b>								
D40047J	41		0074	20	CQ	D43317P		A09		AE0101B	10	YD158-YR328
D40047J	2		0102	20	CQ	D43317P		A02		AE0101B	10	ALL
D40047J	3		0103	20	CQ	D43317P		A03		AE0101B	10	ALL
D40047J	51		0151	20	CQ	D40063P		A01		AE0101B	05	YC051-YD157
D40047J	53		2004B	24	Y2	D41213J		13		AE0102A	12	YC051-YD157
D40047J	52		2004R	24	Y2	D41213J		12		AE0102A	12	YC051-YD157
D40047J	S/R		2004Z			D41213J		S/R		AE0102A	12	YC051-YD157
D40047J	55		2040B	24	Y2	D41213J		15		AE0102A	12	ALL
D40047J	54		2040R	24	Y2	D41213J		14		AE0102A	12	ALL
D40047J	S/R		2040Z			D41213J		S/R		AE0102A	12	ALL
D40047J	22		2122B	22	X2	D43317P		B04		AE0101B	10	YC051-YC052
D40047J	21		2122R	22	X2	D43317P		B03		AE0101B	10	YC051-YC052
D40047J	S/R		2122Z			D43317P		PERG	1F	AE0101B	10	YC051-YC052
D40047J	43		2136B	24	Y2	D43317P		B06		AE0101B	10	YC051-YC064
D40047J	42		2136R	24	Y2	D43317P		B05		AE0101B	10	YC051-YC064
D40047J	S/R		2136Z			D43317P		PERG	1F	AE0101B	10	YC051-YC064
<b>AE0104A</b>	<b>09</b>	<b>W2103</b>	<b>RB2</b>	<b>DISCONNECT BRACKET - E1-4 SHELF</b>								
D46011J	12		0012	20	PA	D46061P		12		AP0600B	23	YC051-YD158, YL951-YR328
D46011J	13		0013	20	PA	D46061P		13		AP0600B	23	YC051-YD158, YL951-YR328
D46011J	6		0016	20	PA	D46061P		16		AP0600B	23	YC051-YD158, YL951-YR328
D46011J	7		0017	20	PA	D46061P		17		AP0600B	23	YC051-YD158, YL951-YR328
<b>AE0104A</b>	<b>10</b>	<b>W2383</b>	<b>RB2</b>	<b>DISCONNECT BRACKET - E1-4 SHELF</b>								
D46031J	9		0009	24	PK	D46065P		9		AP0600B	15	ALL
D46031J	8		0024	20	PA	D46065P		24		AP0600B	15	ALL
D46031J	5		0025	20	PA	D46065P		25		AP0600B	15	YC051-YD155
D46031J	6		0026	22	PA	D46065P		26		AP0600B	15	ALL
D46031J	7		0027	22	PA	D46065P		27		AP0600B	15	YC051-YD155

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0104A

Page 2

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
AE0104A	11	W5463	RB2	DISCONNECT BRACKET - E1-4 SHELF								
D41463J	3		0010	22	PA	D41163P	A09		AE0101B	08	YC051-YD158	
D41463J	15		0015	20	PA	D41163P	B15		AE0101B	08	YC051-YD155	
D41463J	36		0020	22	PA	D41163P	B14		AE0101B	08	YD157-YR328	
D41463J	14		0022	22	PA	D45263J	A05		AE0502A	06	ALL	
D41463J	44		0030	24	PK	D42363P	A03		AE0302A	53	ALL	
D41463J	45		0031	24	PK	D42363P	B03		AE0302A	53	ALL	
D41463J	30		0046	24	B6	D41163P	B12		AE0101B	08	ALL	
AE0104A	12	W5121	NB2	DISCONNECT BRACKET - E1-4 SHELF								
D45123J	2		0002	22	PA	D45125J	2		AE0105A	09	YC051-YD157	
D45123J	4		0009	22	PA	D45147P	A01		AE0302A	56	YD158, YL951-YR328	
D45123J	5		0010	22	PA	D45147P	B01		AE0302A	56	YD158, YL951-YR328	
D45123J	2		0011	22	PA	D45127P	A01		AE0302A	46	YD158, YL951-YR328	
D45123J	7		0013	24	PK	D45127P	B03		AE0302A	46	YC051-YD158, YL951-YR328	
D45123J	9		0017	20	PA	D45125J	9		AE0105A	09	YC051-YD158, YL951-YR328	
D45123J	52		0028	22	CQ	D45147P	A06		AE0302A	56	YD158	
D45123J	47		2022B	24	Y2	D45147P	B13		AE0302A	56	YD158, YL951-YR328	
D45123J	46		2022R	24	Y2	D45147P	A13		AE0302A	56	YD158, YL951-YR328	
D45123J	S/R		2022Z			D45147P	PERG	1F	AE0302A	56	YD158, YL951-YR328	
D45123J	49		2023B	24	Y2	D45147P	B14		AE0302A	56	YD158, YL951-YR328	
D45123J	48		2023R	24	Y2	D45147P	A14		AE0302A	56	YD158, YL951-YR328	
D45123J	S/R		2023Z			D45147P	PERG	1F	AE0302A	56	YD158, YL951-YR328	
D45123J	51		2024B	24	Y2	D45147P	B15		AE0302A	56	YD158, YL951-YR328	
D45123J	50		2024R	24	Y2	D45147P	A15		AE0302A	56	YD158, YL951-YR328	

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0104A

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description		To		Term	Type	Matewith	Pos	Effectivity
Equip	Term	Type	Wire No.	GA	TY	Equip						
<b>AE0104A</b>	<b>12</b>	<b>W5121</b>	<b>NB2</b>	<b>DISCONNECT BRACKET - E1-4 SHELF (continued)</b>								
D45123J	S/R		2024Z			D45147P		PERG	1F	AE0302A	56	YD158, YL951-YR328
D45123J	19		2027B	24	Y2	D45121P		B08		AE0301A	32	YC051-YC058
D45123J	18		2027R	24	Y2	D45121P		A08		AE0301A	32	YC051-YC058
D45123J	S/R		2027Z			D45121P		PERG	1F	AE0301A	32	YC051-YC058
<b>AE0104A</b>	<b>13</b>	<b>W5383</b>	<b>RB2</b>	<b>DISCONNECT BRACKET - E1-4 SHELF</b>								
D45553J	15		2008B	22	VG	D45503P				AB1050R	06	YC064
D45553J	15		2008B	22	VG	D45503J				AB1050R	06	YC065-YC070
D45553J	14		2008R	22	VG	D45503P				AB1050R	06	YC064
D45553J	14		2008R	22	VG	D45503J				AB1050R	06	YC065-YC070
D45553J	S/R		2008Z			D45503P		S/R		AB1050R	06	YC064
D45553J	S/R		2008Z			D45503J		S/R		AB1050R	06	YC065-YC070
D45553J	17		2009B	20	HF	D45503P				AB1050R	06	YC064
D45553J	17		2009B	20	HF	D45503J				AB1050R	06	YC065-YC070
D45553J	16		2009R	20	HF	D45503P				AB1050R	06	YC064
D45553J	16		2009R	20	HF	D45503J				AB1050R	06	YC065-YC070
D45553J	S/R		2009Z			D45503P		S/R		AB1050R	06	YC064
D45553J	S/R		2009Z			D45503J		S/R		AB1050R	06	YC065-YC070
D45553J	13		2008B	22	VG	D45503J				AB1050R	06	YD151-YR328
D45553J	4		2008R	22	VG	D45503J				AB1050R	06	YD151-YR328
D45553J	S/R		2008Z			D45503J		S/R		AB1050R	06	YD151-YR328
D45553J	10		2009B	20	HF	D45503J				AB1050R	06	YD151-YR328
D45553J	2		2009R	20	HF	D45503J				AB1050R	06	YD151-YR328
D45553J	S/R		2009Z			D45503J		S/R		AB1050R	06	YD151-YR328
<b>AE0104A</b>	<b>15</b>	<b>W5375</b>	<b>RD3</b>	<b>DISCONNECT BRACKET - E1-4 SHELF</b>								
D04077J	29		0011	20	PA	D42053P		A10		AE0302A	47	YD160-YN236, YN501-YR328
<b>AE0104A</b>	<b>17</b>	<b>W5191</b>	<b>NB3</b>	<b>DISCONNECT BRACKET - E1-4 SHELF</b>								
D04273J	8		0024	22	PA	D04285P		A16		AE0401A	19	YD158-YD170
<b>AE0104A</b>	<b>18</b>	<b>W5721</b>	<b>LE2</b>	<b>DISCONNECT BRACKET - E1-4 SHELF</b>								
D41129J	23		0023	22	CQ	D41127J		23		AE0102A	13	ALL
D41129J	26		0026	22	CQ	D41121P		B16		AE0101A	17	ALL
D41129J	53		0053	20	CQ	D41127J		13		AE0102A	13	ALL

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0104A

Page 4

Nov 12/2012



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
AE0104A	18	W5721	LE2	DISCONNECT BRACKET - E1-4 SHELF (continued)						
D41129J	54		0054	20 CQ	D41127J	14		AE0102A	13	ALL
D41129J	55		0055	20 CQ	D41127J	15		AE0102A	13	ALL
AE0104A	20	W5158	SB2*	DISCONNECT BRACKET - E1-4 SHELF						
D40490J	4		0015	22 PA	D40638P	12		AJ0020B	02	YC067-YL999, YN232-YR328
D40490J	21		0634	20 PA	D40426P	14		AE0302A	28	YD160-YL999, YN232-YR328
AE0104A	22	W5526	SA2	DISCONNECT BRACKET - E1-4 SHELF						
D43016J	7		5512	20 PA	D04580P	12		AB0536L	01	ALL
D43016J	8		5513	20 PA	D04580P	13		AB0536L	01	ALL
D43016J	9		5516	20 PA	D40302J	10		AB0500DL	09	ALL
D43016J	10		5517	20 PA	D40302J	11		AB0500DL	09	ALL
AE0104A	26	W5204	NN2	DISCONNECT BRACKET - E1-4 SHELF						
D40332J	2		0002	20 PA	D13928	17		AC0538		YD160-YR328
AE0104A	27	W5514	SA2	DISCONNECT BRACKET - E1-4 SHELF						
D40826J	7		0502	24 B6	D40824P	28		AP0900A	05	YC051-YD158, YL951-YR328
D40826J	16		0503	24 B6	D40824P	29		AP0900A	05	YC051-YD158, YL951-YR328
D40826J	17		0504	24 B6	D40824P	30		AP0900A	05	YC051-YD158, YL951-YR328
D40826J	18		0505	24 B6	D40824P	31		AP0900A	05	YC051-YD158, YL951-YR328
D40826J	6		5564	20 PA	D40824P	19		AP0900A	05	YC051-YD158, YL951-YR328
D40826J	8		5565	20 PA	D40824P	20		AP0900A	05	YC051-YD158, YL951-YR328
D40826J	10		5568	20 GA	D40822P	23		AP0600B	03	YC051-YD154
D40826J	10		5568	20 PA	D40822P	23		AP0600B	03	YD155-YD157
D40826J	11		5569	20 GA	D40822P	24		AP0600B	03	YC051-YD154
D40826J	11		5569	20 PA	D40822P	24		AP0600B	03	YD155-YD157
D40826J	12		5572	20 PA	D40830P	3		AP1800B	07	YC051-YD158, YL951-YR328

## SPARE WIRE LIST

D280A108

91-21-12

Section AE0104A

Page 5

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
AE0104A	27	W5514	SA2	DISCONNECT BRACKET - E1-4 SHELF (continued)								
D40826J	13		5573		20	PA	D40830P	4		AP1800B	07	YC051-YD158, YL951-YR328
AE0104A	28	W5610	SA2*	DISCONNECT BRACKET - E1-4 SHELF								
D40346J	11		0501		22	PA	D40348P	A02		AE0202A	10	ALL
D40346J	12		0502		22	PA	D40348P	B02		AE0202A	10	ALL
D40346J	13		0503		22	PA	D40348P	A03		AE0202A	10	ALL

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0104A

Page 6 End

Nov 12/2012

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AE0105A</b>	<b>02</b>	<b>W2151</b>	<b>NB2</b>	<b>DISCONNECT BRACKET - E1-5 SHELF</b>						
D04031J	23		0023	22 PA	D00265	CAP	Y	P008-26		YC051-YD158, YL951-YR328
D04031J	27		0027	22 PA	D00305	CAP	Y	P008-26		YC051-YD158, YL951-YR328
D04031J	34		2005B	24 Y2	D00305	CAP	Y	P008-26		YC051-YD158, YL951-YR328
D04031J	33		2005R	24 Y2	D00305	CAP	Y	P008-26		YC051-YD158, YL951-YR328
D04031J	S/R		2005Z		D00305	S/R		P008-26		YC051-YD158, YL951-YR328
D04031J	36		2006B	24 Y2	D00265	CAP	Y	P008-26		YC051-YD158, YL951-YR328
D04031J	35		2006R	24 Y2	D00265	CAP	Y	P008-26		YC051-YD158, YL951-YR328
D04031J	S/R		2006Z		D00265	S/R		P008-26		YC051-YD158, YL951-YR328
<b>AE0105A</b>	<b>03</b>	<b>W5723</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E1-5 SHELF</b>						
D41507J	42		2502B	24 Y2	D43333P	B08		AE0303A	44	YD158-YD170
D41507J	41		2502R	24 Y2	D43333P	A08		AE0303A	44	YD158-YD170
D41507J	S/R		2502Z		D43333P	PERG	1F	AE0303A	44	YD158-YD170
D41507J	44		2503B	24 Y2	D43333P	B10		AE0303A	44	YD158-YR328
D41507J	43		2503R	24 Y2	D43333P	A10		AE0303A	44	YD158-YR328
D41507J	S/R		2503Z		D43333P	PERG	1F	AE0303A	44	YD158-YR328
D41507J	48		2506B	24 Y2	D43333P	B07		AE0303A	44	YD158-YR328
D41507J	47		2506R	24 Y2	D43333P	A07		AE0303A	44	YD158-YR328
D41507J	S/R		2506Z		D43333P	PERG	1F	AE0303A	44	YD158-YR328
<b>AE0105A</b>	<b>07</b>	<b>W5163</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E1-5 SHELF</b>						
D41557J	23		0025	16 PA	D41147P	G		AE0101B	11	YD158-YR328
D41557J	4		0035	22 PA	D41157P	B05		AE0101B	12	ALL
<b>AE0105A</b>	<b>09</b>	<b>W5121</b>	<b>NB2</b>	<b>DISCONNECT BRACKET - E1-5 SHELF</b>						
D45125J	2		0002	22 PA	D45123J	2		AE0104A	12	YC051-YD157
D45125J	9		0017	20 PA	D45123J	9		AE0104A	12	YC051-YD158, YL951-YR328
D45125J	42		2668B	24 Y2	D45127P	B16		AE0302A	46	YD158, YL951-YR328

## SPARE WIRE LIST

D280A108

91-21-12

Section AE0105A

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
AE0105A	09	W5121	NB2	DISCONNECT BRACKET - E1-5 SHELF (continued)								
D45125J	41		2668R		24	Y2	D45127P	A16		AE0302A	46	YD158, YL951-YR328
D45125J	S/R		2668Z				D45127P	PERG	1F	AE0302A	46	YD158, YL951-YR328

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0105A

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AE0201A</b>	<b>07</b>	<b>W5726</b>	<b>AD1</b>	<b>DISCONNECT BRACKET - E2-1 SHELF</b>						
D40254P	F		0577	16 PA	D11438	2		P0091		YN231-YN501
D40254P	G		0578	16 PA	D11438	3		P0091		YN231-YN501
D40254P	H		0579	16 PA	D11438	4		P0091		YN231-YN501
D40254P	A01		0597	22 PA	D11438	7		P0091		YN231-YN501
<b>AE0201A</b>	<b>15</b>	<b>W2138</b>	<b>LA1</b>	<b>DISCONNECT BRACKET - E2-1 SHELF</b>						
D41432P	3		5503	16 HA	D41430P	3		AP0600B	05	ALL
<b>AE0201A</b>	<b>17</b>	<b>W5164</b>	<b>LA1*</b>	<b>DISCONNECT BRACKET - E2-1 SHELF</b>						
D40718P	A05		2602B	20 X2	D39933	26		AC0520		YC051-YN236, YN501-YR328
D40718P	B05		2602R	20 X2	D39933	25		AC0520		YC051-YN236, YN501-YR328
D40718P	PERG	1F	2602Z		D39933	S/R		AC0520		YC051-YN236, YN501-YR328
<b>AE0201A</b>	<b>18</b>	<b>W5612</b>	<b>SN2*</b>	<b>DISCONNECT BRACKET - E2-1 SHELF</b>						
D40358P	A01		0001	20 PA	D40362P	A01		AE0302A	05	ALL
D40358P	B05		2204B	24 Y2	D40352P	28		AP0600B	16	YD154-YR328
D40358P	B04		2204R	24 Y2	D40352P	9		AP0600B	16	YD154-YR328
D40358P	DED		2204Z		D40352P	DED		AP0600B	16	YD154-YR328
D40358P	B08		2207B	22 PB	D40362P	B07		AE0302A	05	YD154-YR328
D40358P	A04		2207R	22 PB	D40362P	A07		AE0302A	05	YD154-YR328
<b>AE0201A</b>	<b>19</b>	<b>W5110</b>	<b>LA2</b>	<b>DISCONNECT BRACKET - E2-1 SHELF</b>						
D40340P	B01		0516	20 PA	D40338P	A10		AE0402A	07	ALL

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0201A

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
AE0202A		01	W5104	LA2	DISCONNECT BRACKET - E2-2 SHELF							
D40246P		A08		5522	20	PA	D40056P	16		AB0536L	02	YC051-YN236, YN501-YR323, YR325-YR328
AE0202A		07	W5564	SN2*	DISCONNECT BRACKET - E2-2 SHELF							
D40136P		A01		2601B	20	X2	D39909	6		AC0520		ALL
D40136P		B01		2601R	20	X2	D39909	5		AC0520		ALL
D40136P		PERG	1F	2601Z			D39909	S/R		AC0520		ALL
AE0202A		08	W5168	SB2*	DISCONNECT BRACKET - E2-2 SHELF							
D40138P		A02		2601B	20	X2	D39929	2		AC0520		ALL
D40138P		B02		2601R	20	X2	D39929	3		AC0520		ALL
D40138P		PERG	1F	2601Z			D39929	S/R		AC0520		ALL
D40138P		A03		2602B	20	X2	D39929	4		AC0520		ALL
D40138P		B03		2602R	20	X2	D39929	5		AC0520		ALL
D40138P		PERG	1F	2602Z			D39929	S/R		AC0520		ALL
AE0202A		10	W5610	SA2*	DISCONNECT BRACKET - E2-2 SHELF							
D40348P		A02		0501	22	PA	D40346J	11		AE0104A	28	ALL
D40348P		B02		0502	22	PA	D40346J	12		AE0104A	28	ALL
D40348P		A03		0503	22	PA	D40346J	13		AE0104A	28	ALL
D40348P		A05		2801B	24	Y2	D40940P	A04		AE0302A	07	YC051-YL959, YN231-YN235
D40348P		B05		2801R	24	Y2	D40940P	B04		AE0302A	07	YC051-YL959, YN231-YN235
D40348P		PERG	1F	2801Z			D40940P	PERG	1F	AE0302A	07	YC051-YL959, YN231-YN235
D40348P		A06		2802B	24	Y2	D40940P	A05		AE0302A	07	YC051-YL959, YN231-YN235
D40348P		B06		2802R	24	Y2	D40940P	B05		AE0302A	07	YC051-YL959, YN231-YN235
D40348P		PERG	1F	2802Z			D40940P	PERG	1F	AE0302A	07	YC051-YL959, YN231-YN235

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0202A

Page 1

Nov 12/2012



	From Matewith	Pos	Bundle	Sep	Description		To					Effectivity	
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos		
I	AE0202A	11	W2104	LA1	DISCONNECT BRACKET - E2-2 SHELF								
I	D40506P	A09		6012	22	CQ	D40504P	12		AP1800A	08	YC053-YD157, YL951-YR314, YR317-YR318, YR320-YR328	
I	AE0202A	24	W5310	LB2*	DISCONNECT BRACKET - E2-2 SHELF								
I	D40450P	A14		0502	22	PA	D40446P	A03		AE0302A	04	YC051-YL954, YN231-YN235	
I	D40450P	A13		2802B	24	Y2	D40446P	A02		AE0302A	04	YC051-YL954, YN231-YN235	
I	D40450P	B13		2802R	24	Y2	D40446P	B02		AE0302A	04	YC051-YL954, YN231-YN235	
I	D40450P	PERG	1F	2802Z			D40446P	PERG	1F	AE0302A	04	YC051-YL954, YN231-YN235	
I	D40450P	B06		5502	24	PK	D40446P	B10		AE0302A	04	ALL	
I	AE0202A	25	W5162	LB2*	DISCONNECT BRACKET - E2-2 SHELF								
I	D40130P	A03		2601B	20	X2	D39921	14		AC0520		ALL	
I	D40130P	B03		2601R	20	X2	D39921	5		AC0520		ALL	
I	D40130P	PERG	1F	2601Z			D39921	S/R		AC0520		ALL	
I	D40130P	A09		2609B	20	X2	D39921	31		AC0520		ALL	
I	D40130P	B09		2609R	20	X2	D39921	30		AC0520		ALL	
I	D40130P	PERG	1F	2609Z			D39921	S/R		AC0520		ALL	
I	AE0202A	26	W6214	LA2*	DISCONNECT BRACKET - E2-2 SHELF								
I	D40380P	B15		5536	20	PA	D40378P	B15		AE0401A	46	YC051-YR323, YR325-YR328	
I	AE0202A	27	W3170	LA2*	DISCONNECT BRACKET - E2-2 SHELF								
I	D40126P	A01		2601B	20	PB	D40734P	1		AB0420A	01	ALL	
I	D40126P	B01		2601R	20	PB	D40734P	2		AB0420A	01	ALL	
I	D40126P	A02		2602B	20	PB	D40734P	3		AB0420A	01	ALL	
I	D40126P	B02		2602R	20	PB	D40734P	4		AB0420A	01	ALL	
I	D40126P	A03		2603B	20	PB	D40734P	5		AB0420A	01	ALL	
I	D40126P	B03		2603R	20	PB	D40734P	6		AB0420A	01	ALL	
I	D40126P	A11		2607B	20	X2	D40736P	4		AB0420A	02	ALL	
I	D40126P	B11		2607R	20	X2	D40736P	5		AB0420A	02	ALL	

**SPARE WIRE LIST**

D280A108

**91-21-12**

Section AE0202A

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
AE0202A	27	W3170	LA2*	DISCONNECT BRACKET - E2-2 SHELF (continued)						
D40126P	PERG	1F	2607Z		D40736P	S/R		AB0420A	02	ALL
AE0202A	28	W5156	SA2*	DISCONNECT BRACKET - E2-2 SHELF						
D40724P	B17		6025R	22 PH	D40670P	20		AJ0022	04	YC051-YD158, YL951-YR328
AE0202A	32	W5088	NB2	DISCONNECT BRACKET - E2-2 SHELF						
D42014P	A05		6015	22 PA	D46608J	1		AB0500DL	06	YC053-YD157, YL951-YR314, YR317-YR318, YR320-YR328
D42014P	A01		6016	22 CQ	D46608J	12		AB0500DL	06	YC053-YD157, YL951-YR314, YR317-YR318, YR320-YR328
D42014P	A03		6017	22 CQ	D46608J	9		AB0500DL	06	YC053-YD157, YL951-YR314, YR317-YR318, YR320-YR328

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0202A

Page 3 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith	Pos	Bundle	Sep	Description		To					Effectivity	
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos		
I	AE0301A	01	W0311	NA2	DISCONNECT BRACKET - E3-1								
	D04271J	A03		0140	20	PA	D40460J	A08		AE0301A	19	YD158-YN260, YR301-YR328	
I	AE0301A	01	W5189	NA3	DISCONNECT BRACKET - E3-1								
	D04271P	A03		0055	22	PA	D40117P	B02		AE0602A	05	YL951-YL999, YR301-YR328	
I	AE0301A	06	W0311	NA2	DISCONNECT BRACKET - E3-1								
	D04267J	A18		2127B	22	X2	D45111J	B14		AE0301A	07	YL963-YL999, YN236-YR328	
	D04267J	A17		2127R	22	X2	D45111J	A14		AE0301A	07	YL963-YL999, YN236-YR328	
	D04267J	PERG	1F	2127Z			D45111J	PERG	1F	AE0301A	07	YL963-YL999, YN236-YR328	
I	AE0301A	06	W2207	NA2	DISCONNECT BRACKET - E3-1								
	D04267P	A13		0003	22	PA	D04207P	13		AP0900A	03	ALL	
	D04267P	A14		0004	22	PA	D04207P	14		AP0900A	03	ALL	
	D04267P	B11		0031	22	PA	D04207P	31		AP0900A	03	ALL	
	D04267P	B12		0032	22	PA	D04207P	32		AP0900A	03	ALL	
	D04267P	B17		0037	22	PA	D04207P	37		AP0900A	03	ALL	
	D04267P	B18		0038	22	PA	D04207P	38		AP0900A	03	ALL	
	D04267P	B19		0040	22	CQ	D04207P	40		AP0900A	03	ALL	
	D04267P	B20		0041	22	CQ	D04207P	41		AP0900A	03	ALL	
	D04267P	A06		2003B	24	Y2	D04207P	6		AP0900A	03	ALL	
	D04267P	A05		2003R	24	Y2	D04207P	5		AP0900A	03	ALL	
	D04267P	PERG	1F	2003Z			D04207P	S/R		AP0900A	03	ALL	
	D04267P	A08		2004B	24	Y2	D04207P	8		AP0900A	03	ALL	
	D04267P	A07		2004R	24	Y2	D04207P	7		AP0900A	03	ALL	
	D04267P	PERG	1F	2004Z			D04207P	S/R		AP0900A	03	ALL	
	D04267P	A16		2008B	24	Y2	D04207P	16		AP0900A	03	ALL	
	D04267P	A15		2008R	24	Y2	D04207P	15		AP0900A	03	ALL	
	D04267P	PERG	1F	2008Z			D04207P	S/R		AP0900A	03	ALL	
	D04267P	A18		2009B	22	X2	D04207P	18		AP0900A	03	YL963-YN235	
	D04267P	A17		2009R	22	X2	D04207P	17		AP0900A	03	YL963-YN235	
	D04267P	PERG	1F	2009Z			D04207P	S/R		AP0900A	03	YL963-YN235	
	D04267P	A20		2010B	24	Y2	D04207P	20		AP0900A	03	ALL	
	D04267P	A19		2010R	24	Y2	D04207P	19		AP0900A	03	ALL	

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0301A

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AE0301A</b>	<b>06</b>	<b>W2207</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-1 (continued)</b>						
D04267P	PERG	1F	2010Z		D04207P	S/R		AP0900A	03	ALL
<b>AE0301A</b>	<b>07</b>	<b>W0311</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-1</b>						
D45111J	B14		2127B	22 X2	D04267J	A18		AE0301A	06	YL963-YL999, YN236-YR328
D45111J	A14		2127R	22 X2	D04267J	A17		AE0301A	06	YL963-YL999, YN236-YR328
D45111J	PERG	1F	2127Z		D04267J	PERG	1F	AE0301A	06	YL963-YL999, YN236-YR328
<b>AE0301A</b>	<b>07</b>	<b>W5111</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-1</b>						
D45111P	B01		0005	22 PA	D45117P	B03		AE0302A	20	ALL
D45111P	B02		0024	22 PA	D45115J	9		AE0102A	02	ALL
D45111P	B04		2005B	24 Y2	D45115J	20		AE0102A	02	YC051-YC058
D45111P	A04		2005R	24 Y2	D45115J	19		AE0102A	02	YC051-YC058
D45111P	PERG	1F	2005Z		D45115J	S/R		AE0102A	02	YC051-YC058
D45111P	B08		2021B	24 Y2	D45117P	B11		AE0302A	20	ALL
D45111P	A08		2021R	24 Y2	D45117P	A11		AE0302A	20	ALL
D45111P	PERG	1F	2021Z		D45117P	PERG	1F	AE0302A	20	ALL
D45111P	CAP	Y	2024B	22 X2	D45117P	B12		AE0302A	20	YC059-YR328
D45111P	CAP	Y	2024R	22 X2	D45117P	A12		AE0302A	20	YC059-YR328
D45111P	DED		2024Z		D45117P	PERG	1F	AE0302A	20	YC059-YR328
D45111P	B14		2030B	22 X2	D45117P	B13		AE0302A	20	YL963-YL999, YN236-YR328
D45111P	A14		2030R	22 X2	D45117P	A13		AE0302A	20	YL963-YL999, YN236-YR328
D45111P	PERG	1F	2030Z		D45117P	PERG	1F	AE0302A	20	YL963-YL999, YN236-YR328
D45111P	B17		2033B	24 Y2	D45113P	B14		AE0101A	19	ALL
D45111P	A17		2033R	24 Y2	D45113P	A14		AE0101A	19	ALL
D45111P	PERG	1F	2033Z		D45113P	PERG	1F	AE0101A	19	ALL
D45111P	B18		2043B	24 Y2	D45117P	B17		AE0302A	20	ALL
D45111P	A18		2043R	24 Y2	D45117P	A17		AE0302A	20	ALL
D45111P	PERG	1F	2043Z		D45117P	PERG	1F	AE0302A	20	ALL
D45111P	B20		2045B	24 Y2	D45137P	B15		AE0302A	19	ALL
D45111P	A20		2045R	24 Y2	D45137P	A15		AE0302A	19	ALL
D45111P	PERG	1F	2045Z		D45137P	PERG	1F	AE0302A	19	ALL
D45111P	B19		2048B	24 Y2	D45137P	B16		AE0302A	19	ALL

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0301A

Page 2

Nov 12/2012

From Matewith From	Pos	Bundle	Sep	Description	To						
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity	
<b>AE0301A</b>	<b>07</b>	<b>W5111</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-1 (continued)</b>							
D45111P	A19		2048R	24 Y2	D45137P	A16		AE0302A	19	ALL	
D45111P	PERG	1F	2048Z		D45137P	PERG	1F	AE0302A	19	ALL	
<b>AE0301A</b>	<b>08</b>	<b>W5111</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-1</b>							
D45131P	B03		2047B	24 Y2	D45133P	B06		AE0101A	03	ALL	
D45131P	A03		2047R	24 Y2	D45133P	A06		AE0101A	03	ALL	
D45131P	PERG	1F	2047Z		D45133P	PERG	1F	AE0101A	03	ALL	
D45131P	B20		2050B	22 X2	D45137P	B18		AE0302A	19	ALL	
D45131P	A20		2050R	22 X2	D45137P	A18		AE0302A	19	ALL	
D45131P	PERG	1F	2050Z		D45137P	PERG	1F	AE0302A	19	ALL	
D45131P	B06		2052B	24 Y2	D45133P	B07		AE0101A	03	YC051-YC052	
D45131P	A06		2052R	24 Y2	D45133P	A07		AE0101A	03	YC051-YC052	
D45131P	PERG	1F	2052Z		D45133P	PERG	1F	AE0101A	03	YC051-YC052	
<b>AE0301A</b>	<b>09</b>	<b>W5111</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-1</b>							
D45151P	B07		2056B	24 Y2	D43305P	B07		AE0303A	20	YN501-YR328	
D45151P	A07		2056R	24 Y2	D43305P	A07		AE0303A	20	YN501-YR328	
D45151P	PERG	1F	2056Z		D43305P	PERG	1F	AE0303A	20	YN501-YR328	
D45151P	B05		2057B	24 Y2	D43305P	B08		AE0303A	20	YD158-YD170	
D45151P	A05		2057R	24 Y2	D43305P	A08		AE0303A	20	YD158-YD170	
D45151P	PERG	1F	2057Z		D43305P	PERG	1F	AE0303A	20	YD158-YD170	
D45151P	B03		2086B	24 Y2	D45137P	B02		AE0302A	19	YD158-YD170	
D45151P	A03		2086R	24 Y2	D45137P	A02		AE0302A	19	YD158-YD170	
D45151P	PERG	1F	2086Z		D45137P	PERG	1F	AE0302A	19	YD158-YD170	
D45151P	B04		2087B	24 Y2	D45137P	B05		AE0302A	19	YD158-YD170	
D45151P	A04		2087R	24 Y2	D45137P	A05		AE0302A	19	YD158-YD170	
D45151P	PERG	1F	2087Z		D45137P	PERG	1F	AE0302A	19	YD158-YD170	
<b>AE0301A</b>	<b>11</b>	<b>W5310</b>	<b>LB2*</b>	<b>DISCONNECT BRACKET - E3-1</b>							
D40448P	B09		6003	24 PK	D40446P	B03		AE0302A	04	YC051-YL954, YN231-YN235	
<b>AE0301A</b>	<b>14</b>	<b>W3170</b>	<b>LA2*</b>	<b>DISCONNECT BRACKET - E3-1</b>							
D49994P	A07		2606B	20 X2	D40736P	1		AB0420A	02	ALL	
D49994P	B06		2606R	20 X2	D40736P	2		AB0420A	02	ALL	
D49994P	PERG	1F	2606Z		D40736P	S/R		AB0420A	02	ALL	

**SPARE WIRE LIST**

D280A108

**91-21-12**

Section AE0301A

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description		To					
	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
<b>AE0301A</b>	<b>15</b>	<b>W0311</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-1</b>							
D43145J	A03		0136	20	PA	D41817J	1		AE0301A	21	YD158-YR328
D43145J	A04		0137	20	PA	D41817J	2		AE0301A	21	YD158-YR328
<b>AE0301A</b>	<b>15</b>	<b>W5161</b>	<b>LA2</b>	<b>DISCONNECT BRACKET - E3-1</b>							
D43145P	A05		0004	20	PA	D45245J	B15		AE0502A	14	ALL
D43145P	A03		0027	20	PA	D45245J	B13		AE0502A	14	ALL
D43145P	A04		0028	20	PA	D45245J	B14		AE0502A	14	ALL
D43145P	B01		0035	24	PK	D41145P	A04		AE0101A	04	ALL
D43145P	A17		0040	24	PK	D41155P	A17		AE0101A	20	ALL
<b>AE0301A</b>	<b>16</b>	<b>W5161</b>	<b>LA2</b>	<b>DISCONNECT BRACKET - E3-1</b>							
D43155P	B16		2511B	22	X2	D41145P	A03		AE0101A	04	ALL
D43155P	B15		2511R	22	X2	D41145P	A02		AE0101A	04	ALL
D43155P	PERG	1F	2511Z			D41145P	PERG	1F	AE0101A	04	ALL
D43155P	B02		2518B	24	Y2	D45255J	B20		AE0502A	15	ALL
D43155P	B01		2518R	24	Y2	D45255J	B19		AE0502A	15	ALL
D43155P	PERG	1F	2518Z			D45255J	PERG	1F	AE0502A	15	ALL
D43155P	B10		2523B	24	Y2	D45265J	B02		AE0502A	16	ALL
D43155P	B09		2523R	24	Y2	D45265J	B01		AE0502A	16	ALL
D43155P	PERG	1F	2523Z			D45265J	PERG	1F	AE0502A	16	ALL
D43155P	B12		2531B	22	X2	D41145P	B02		AE0101A	04	YC051-YC058
D43155P	B11		2531R	22	X2	D41145P	B01		AE0101A	04	YC051-YC058
D43155P	PERG	1F	2531Z			D41145P	PERG	1F	AE0101A	04	YC051-YC058
<b>AE0301A</b>	<b>18</b>	<b>W5205</b>	<b>SA2</b>	<b>DISCONNECT BRACKET - E3-1</b>							
D45205P	A05		0025	20	PA	D45209J	A05		AE0502A	03	YC051-YD158, YL951-YR328
D45205P	B03		2001B	22	X2	D45209J	B03		AE0502A	03	YC051-YD158, YL951-YR328
D45205P	B02		2001R	22	X2	D45209J	B02		AE0502A	03	YC051-YD158, YL951-YR328
D45205P	PERG	1F	2001Z			D45209J	PERG	1F	AE0502A	03	YC051-YD158, YL951-YR328
<b>AE0301A</b>	<b>19</b>	<b>W0311</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-1</b>							
D40460J	A08		0140	20	PA	D04271J	A03		AE0301A	01	YD158-YN260, YR301-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0301A

Page 4

Nov 12/2012

	From Matewith	Pos	Bundle	Sep	Description		To					Effectivity	
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos		
	AE0301A	19	W5156	SA2*	DISCONNECT BRACKET - E3-1								
	D40460P	A08		0646	20	PA	D40670P	28		AJ0022	04	YC067-YD157, YN231-YN501	
	D40460P	B01		0668	22	PA	D40666P	20		AJ0022	03	YC051-YC065, YD158, YL951-YR328	
	D40460P	B01		1001	22	X1	D40666P	20		AJ0022	03	YC067-YD157	
	D40460P	PERG	1F	1001Z			D40666P	19		AJ0022	03	YC067-YD157	
	AE0301A	21	W0311	NA2	DISCONNECT BRACKET - E3-1								
	D41817J	1		0136	20	PA	D43145J	A03		AE0301A	15	YD158-YR328	
	D41817J	2		0137	20	PA	D43145J	A04		AE0301A	15	YD158-YR328	
	AE0301A	21	W2201	LA2	DISCONNECT BRACKET - E3-1								
	D41817P	1		0001	20	PA	D41805P	1		AP1800B	01	ALL	
	D41817P	2		0002	20	PA	D41805P	2		AP1800B	01	ALL	
	D41817P	3		0003	20	PA	D41805P	3		AP1800B	01	ALL	
	D41817P	12		0010	20	PA	D41805P	10		AP1800B	01	ALL	
	D41817P	11		0011	20	PA	D41805P	11		AP1800B	01	ALL	
	D41817P	4		0019	16	PA	D41805P	19		AP1800B	01	ALL	
	D41817P	5		0021	20	PA	D41805P	21		AP1800B	01	ALL	
	AE0301A	22	W2653	SA2	DISCONNECT BRACKET - E3-1								
	D41837P	1		0001	20	PA	D41809P	1		AP1800B	09	ALL	
	D41837P	2		0002	22	PA	D41809P	2		AP1800B	09	ALL	
	D41837P	7		0019	16	PA	D41809P	19		AP1800B	09	ALL	
	D41837P	10		0023	18	PA	D41809P	23		AP1800B	09	ALL	
	AE0301A	23	W2231	RB2	DISCONNECT BRACKET - E3-1								
	D46017P	6		0006	20	PA	D46067P	6		AP0600B	10	YC051-YN236, YN501-YR328	
	D46017P	5		0007	20	PA	D46067P	7		AP0600B	10	YC051-YN236, YN501-YR328	
	D46017P	7		0027	16	PA	D46067P	27		AP0600B	10	YC051-YN236, YN501-YR328	
	D46017P	8		0028	20	PA	D46067P	28		AP0600B	10	YC051-YN236, YN501-YR328	

## SPARE WIRE LIST

D280A108

91-21-12

Section AE0301A

Page 5

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
<b>AE0301A</b>		<b>24</b>	<b>W2169</b>	<b>RB2</b>	<b>DISCONNECT BRACKET - E3-1</b>							
D46035P		1		0001	20	PA	D46063P	1		AP0600B	19	ALL
D46035P		2		0002	22	PA	D46063P	2		AP0600B	19	ALL
D46035P		3		0003	20	PA	D46063P	3		AP0600B	19	ALL
D46035P		9		0009	20	PA	D46063P	9		AP0600B	19	YC067-YR328
D46035P		5		0010	20	PA	D46063P	10		AP0600B	19	YC067-YR328
<b>AE0301A</b>		<b>28</b>	<b>W5163</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E3-1</b>							
D43147P		A01		0021	20	PA	D45247J	A16		AE0502A	04	ALL
D43147P		A02		0022	20	PA	D45247J	A17		AE0502A	04	YC051-YD157
D43147P		A12		0023	20	PA	D45247J	A18		AE0502A	04	YC051-YD157
D43147P		A07		0040	24	PK	D41147P	A07		AE0101B	11	ALL
D43147P		A20		2529B	24	Y2	D41157P	B11		AE0101B	12	ALL
D43147P		A19		2529R	24	Y2	D41157P	B10		AE0101B	12	ALL
D43147P	PERG	1F		2529Z			D41157P	PERG	1F	AE0101B	12	ALL
D43147P	A09			2530B	24	Y2	D41157P	B13		AE0101B	12	YC051-YD157
D43147P	A08			2530R	24	Y2	D41157P	B12		AE0101B	12	YC051-YD157
D43147P	PERG	1F		2530Z			D41157P	PERG	1F	AE0101B	12	YC051-YD157
<b>AE0301A</b>		<b>29</b>	<b>W5163</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E3-1</b>							
D43157P		A20		0013	22	PA	D45247J	A08		AE0502A	04	ALL
D43157P		A09		2508B	24	Y2	D45257J	A10		AE0502A	05	YC051-YD157, YL951-YR328
D43157P		A08		2508R	24	Y2	D45257J	A09		AE0502A	05	YC051-YD157, YL951-YR328
D43157P	PERG	1F		2508Z			D45257J	PERG	1F	AE0502A	05	YC051-YD157, YL951-YR328
D43157P	A11			2509B	24	Y2	D45257J	A12		AE0502A	05	YC051-YD157, YL951-YR328
D43157P	A10			2509R	24	Y2	D45257J	A11		AE0502A	05	YC051-YD157, YL951-YR328
D43157P	PERG	1F		2509Z			D45257J	PERG	1F	AE0502A	05	YC051-YD157, YL951-YR328
<b>AE0301A</b>		<b>31</b>	<b>W2237</b>	<b>NB2</b>	<b>DISCONNECT BRACKET - E3-1</b>							
D04297P		A13		0003	22	PA	D04237P	13		AP0900A	06	ALL
D04297P		A14		0004	22	PA	D04237P	14		AP0900A	06	ALL
D04297P		B09		0029	22	PA	D04237P	29		AP0900A	06	ALL
D04297P		B10		0030	22	PA	D04237P	30		AP0900A	06	ALL

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0301A

Page 6

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To						
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
<b>AE0301A</b>	<b>31</b>	<b>W2237</b>	<b>NB2</b>	<b>DISCONNECT BRACKET - E3-1 (continued)</b>							
D04297P	B11		0031	22	PA	D04237P	31		AP0900A	06	ALL
D04297P	B12		0032	22	PA	D04237P	32		AP0900A	06	ALL
D04297P	B17		0037	22	PA	D04237P	37		AP0900A	06	ALL
D04297P	B18		0038	22	PA	D04237P	38		AP0900A	06	ALL
D04297P	B19		0040	22	CQ	D04237P	40		AP0900A	06	ALL
D04297P	B20		0041	22	CQ	D04237P	41		AP0900A	06	ALL
D04297P	A06		2003B	24	Y2	D04237P	6		AP0900A	06	ALL
D04297P	A05		2003R	24	Y2	D04237P	5		AP0900A	06	ALL
D04297P	PERG	1F	2003Z			D04237P	S/R		AP0900A	06	ALL
D04297P	A08		2004B	24	Y2	D04237P	8		AP0900A	06	ALL
D04297P	A07		2004R	24	Y2	D04237P	7		AP0900A	06	ALL
D04297P	PERG	1F	2004Z			D04237P	S/R		AP0900A	06	ALL
D04297P	A16		2008B	24	Y2	D04237P	16		AP0900A	06	ALL
D04297P	A15		2008R	24	Y2	D04237P	15		AP0900A	06	ALL
D04297P	PERG	1F	2008Z			D04237P	S/R		AP0900A	06	ALL
D04297P	A18		2009B	24	Y2	D04237P	18		AP0900A	06	ALL
D04297P	A17		2009R	24	Y2	D04237P	17		AP0900A	06	ALL
D04297P	PERG	1F	2009Z			D04237P	S/R		AP0900A	06	ALL
D04297P	A20		2010B	24	Y2	D04237P	20		AP0900A	06	ALL
D04297P	A19		2010R	24	Y2	D04237P	19		AP0900A	06	ALL
D04297P	PERG	1F	2010Z			D04237P	S/R		AP0900A	06	ALL
D04297P	B02		2011B	24	Y2	D04237P	22		AP0900A	06	ALL
D04297P	B01		2011R	24	Y2	D04237P	21		AP0900A	06	ALL
D04297P	PERG	1F	2011Z			D04237P	S/R		AP0900A	06	ALL
D04297P	B04		2012B	24	Y2	D04237P	24		AP0900A	06	ALL
D04297P	B03		2012R	24	Y2	D04237P	23		AP0900A	06	ALL
D04297P	PERG	1F	2012Z			D04237P	S/R		AP0900A	06	ALL
<b>AE0301A</b>	<b>32</b>	<b>W5121</b>	<b>NB2</b>	<b>DISCONNECT BRACKET - E3-1</b>							
D45121P	B01		0011	22	PA	D45127P	A01		AE0302A	46	YC051-YD157
D45121P	B08		2027B	24	Y2	D45123J	19		AE0104A	12	YC051-YC058
D45121P	A08		2027R	24	Y2	D45123J	18		AE0104A	12	YC051-YC058
D45121P	PERG	1F	2027Z			D45123J	S/R		AE0104A	12	YC051-YC058
D45121P	B03		2070B	24	Y2	D45147P	B05		AE0302A	56	YD158, YL951-YR328
D45121P	A03		2070R	24	Y2	D45147P	A05		AE0302A	56	YD158, YL951-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0301A

Page 7

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
AE0301A	32	W5121	NB2	DISCONNECT BRACKET - E3-1 (continued)								
D45121P	PERG	1F	2070Z			D45147P	PERG	1F	AE0302A	56	YD158, YL951-YR328	
AE0301A	33	W5121	NB2	DISCONNECT BRACKET - E3-1								
D45141P	B15		2025B	24	Y2	D45127P	B19		AE0302A	46	YD158, YL951-YR328	
D45141P	A15		2025R	24	Y2	D45127P	A19		AE0302A	46	YD158, YL951-YR328	
D45141P	PERG	1F	2025Z			D45127P	PERG	1F	AE0302A	46	YD158, YL951-YR328	
D45141P	B10		2051B	24	Y2	D43323P	B10		AE0303A	42	YD158	
D45141P	A10		2051R	24	Y2	D43323P	A10		AE0303A	42	YD158	
D45141P	PERG	1F	2051Z			D43323P	PERG	1F	AE0303A	42	YD158	
D45141P	B20		2063B	24	Y2	D43323P	B11		AE0303A	42	YD158	
D45141P	A20		2063R	24	Y2	D43323P	A11		AE0303A	42	YD158	
D45141P	PERG	1F	2063Z			D43323P	PERG	1F	AE0303A	42	YD158	
D45141P	B03		2066B	24	Y2	D45147P	B03		AE0302A	56	YD158	
D45141P	A03		2066R	24	Y2	D45147P	A03		AE0302A	56	YD158	
D45141P	PERG	1F	2066Z			D45147P	PERG	1F	AE0302A	56	YD158	
D45141P	B04		2067B	24	Y2	D45147P	B04		AE0302A	56	YD158	
D45141P	A04		2067R	24	Y2	D45147P	A04		AE0302A	56	YD158	
D45141P	PERG	1F	2067Z			D45147P	PERG	1F	AE0302A	56	YD158	
D45141P	B01		2084B	24	Y2	D45147P	B11		AE0302A	56	YD158, YL951-YR328	
D45141P	A01		2084R	24	Y2	D45147P	A11		AE0302A	56	YD158, YL951-YR328	
D45141P	PERG	1F	2084Z			D45147P	PERG	1F	AE0302A	56	YD158, YL951-YR328	
D45141P	B02		2086B	24	Y2	D45147P	B16		AE0302A	56	YD158, YL951-YR328	
D45141P	A02		2086R	24	Y2	D45147P	A16		AE0302A	56	YD158, YL951-YR328	
D45141P	PERG	1F	2086Z			D45147P	PERG	1F	AE0302A	56	YD158, YL951-YR328	

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0301A

Page 8

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To						
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
I	AE0301A		34	W6412	RB2*	DISCONNECT BRACKET - E3-1								
	D40394P		A09		0508	20	PA	D41010P	2		AE0401A	33	YC051-YN236, YN501-YR323, YR325-YR328	
	D40394P		A13		2608B	24	Y2	D40392P	A05		AE0302A	45	YC051-YN236, YN501-YR323, YR325-YR328	
	D40394P		A14		2608R	24	Y2	D40392P	A06		AE0302A	45	YC051-YN236, YN501-YR323, YR325-YR328	
	D40394P		PERG	1F	2608Z			D40392P	PERG	1F	AE0302A	45	YC051-YN236, YN501-YR323, YR325-YR328	
	D40394P		A15		5535	20	PA	D40386P	29		AP0600B	14	YC051-YL999, YR301-YR323, YR325-YR328	
I	AE0301A		36	W4170	RA2*	DISCONNECT BRACKET - E3-1								
I	D40732P		A05		2605B	20	PB	D40730P	9		AB0405B	02	ALL	
I	D40732P		B05		2605R	20	PB	D40730P	10		AB0405B	02	ALL	
I	D40732P		A06		2606B	20	PB	D40730P	11		AB0405B	02	ALL	
I	D40732P		B06		2606R	20	PB	D40730P	12		AB0405B	02	ALL	
I	D40732P		A10		2609B	20	PB	D40728P	6		AB0405B	01	ALL	
I	D40732P		B10		2609R	20	PB	D40728P	7		AB0405B	01	ALL	
	AE0301A		37	W5191	NB3	DISCONNECT BRACKET - E3-1								
	D04277P		B03		2550B	24	M5	D04285P	B14		AE0401A	19	YD158-YD170	
	D04277P		A03		2550R	24	M5	D04285P	A14		AE0401A	19	YD158-YD170	
	D04277P		B04		2550ZI			D04285P	B15		AE0401A	19	YD158-YD170	
	D04277P		PERG	1F	2550ZO			D04285P	PERG	1F	AE0401A	19	YD158-YD170	

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0301A

Page 9 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AE0302A</b>	<b>01</b>	<b>W3577</b>	<b>NN2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>						
D43277P	B04		2502B	22 X2	D45287J	6		AB0373	02	YD158-YD170
D43277P	A04		2502R	22 X2	D45287J	5		AB0373	02	YD158-YD170
D43277P	PERG	1F	2502Z		D45287J	DED		AB0373	02	YD158-YD170
<b>AE0302A</b>	<b>04</b>	<b>W5310</b>	<b>LB2*</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>						
D40446P	A03		0502	22 PA	D40450P	A14		AE0202A	24	YC051-YL954, YN231-YN235
D40446P	A02		2802B	24 Y2	D40450P	A13		AE0202A	24	YC051-YL954, YN231-YN235
D40446P	B02		2802R	24 Y2	D40450P	B13		AE0202A	24	YC051-YL954, YN231-YN235
D40446P	PERG	1F	2802Z		D40450P	PERG	1F	AE0202A	24	YC051-YL954, YN231-YN235
D40446P	B10		5502	24 PK	D40450P	B06		AE0202A	24	ALL
D40446P	B03		6003	24 PK	D40448P	B09		AE0301A	11	YC051-YL954, YN231-YN235
<b>AE0302A</b>	<b>05</b>	<b>W5612</b>	<b>SN2*</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>						
D40362P	A01		0001	20 PA	D40358P	A01		AE0201A	18	ALL
D40362P	A03		0554	24 PK	D40352P	21		AP0600B	16	YL951-YR328
D40362P	A10		0555	22 PA	D40352P	17		AP0600B	16	YD154-YD170, YN231-YN235
D40362P	B07		2207B	22 PB	D40358P	B08		AE0201A	18	YD154-YR328
D40362P	A07		2207R	22 PB	D40358P	A04		AE0201A	18	YD154-YR328
<b>AE0302A</b>	<b>07</b>	<b>W5610</b>	<b>SA2*</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>						
D40940P	A04		2801B	24 Y2	D40348P	A05		AE0202A	10	YC051-YL959, YN231-YN235
D40940P	B04		2801R	24 Y2	D40348P	B05		AE0202A	10	YC051-YL959, YN231-YN235
D40940P	PERG	1F	2801Z		D40348P	PERG	1F	AE0202A	10	YC051-YL959, YN231-YN235
D40940P	A05		2802B	24 Y2	D40348P	A06		AE0202A	10	YC051-YL959, YN231-YN235
D40940P	B05		2802R	24 Y2	D40348P	B06		AE0202A	10	YC051-YL959, YN231-YN235
D40940P	PERG	1F	2802Z		D40348P	PERG	1F	AE0202A	10	YC051-YL959, YN231-YN235

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0302A

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
<b>AE0302A</b>	<b>09</b>	<b>W2805</b>	<b>NN2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>								
D43215P	B04		2503B	24 Y2	D02649	B		M2195		YC056-YD157		
D43215P	B04		2503B	24 Y2	D02649	B		M02195		YD158-YR328		
D43215P	A04		2503R	24 Y2	D02649	A		M2195		YC056-YD157		
D43215P	A04		2503R	24 Y2	D02649	A		M02195		YD158-YR328		
D43215P	PERG	1F	2503Z		D02649			M2195		YC056-YD157		
D43215P	PERG	1F	2503Z		D02649			M02195		YD158-YR328		
<b>AE0302A</b>	<b>14</b>	<b>W5205</b>	<b>SA2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>								
D45207P	A03		0053	20 CQ	D45201J	31		AE0102A	10	YC051-YD158, YL951-YR328		
<b>AE0302A</b>	<b>16</b>	<b>W5156</b>	<b>SA2*</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>								
D40594P	A10		0619	22 PA	D40670P	6		AJ0022	04	YC067-YD157		
D40594P	B10		0648	22 PA	D40642P	12		AJ0020B	07	YC067-YD157		
D40594P	A08		0660	20 CQ	D40666P	9		AJ0022	03	YC051-YD158, YL951-YR328		
D40594P	A02		0671	22 PA	D48114P	B07		AJ0048A	17	YC051-YD158, YL951-YR328		
D40594P	B02		0672	22 PA	D48114P	B08		AJ0048A	17	YC051-YD158, YL951-YR328		
D40594P	B01		0673	22 PA	D48114P	B09		AJ0048A	17	YC051-YD158, YL951-YR328		
D40594P	A01		0674	22 PA	D48114P	B10		AJ0048A	17	YC051-YD158, YL951-YR328		
<b>AE0302A</b>	<b>17</b>	<b>W5111</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>								
D45177P	B05		2058B	24 Y2	D43307P	B10		AE0303A	12	YC051-YD170		
D45177P	A05		2058R	24 Y2	D43307P	A10		AE0303A	12	YC051-YD170		
D45177P	PERG	1F	2058Z		D43307P	PERG	1F	AE0303A	12	YC051-YD170		
D45177P	B06		2059B	24 Y2	D43307P	B09		AE0303A	12	YC051-YD170		
D45177P	A06		2059R	24 Y2	D43307P	A09		AE0303A	12	YC051-YD170		
D45177P	PERG	1F	2059Z		D43307P	PERG	1F	AE0303A	12	YC051-YD170		
D45177P	B09		2072B	24 Y2	D45211J	B13		AE0502A	12	YC051-YD170		
D45177P	A09		2072R	24 Y2	D45211J	A13		AE0502A	12	YC051-YD170		
D45177P	PERG	1F	2072Z		D45211J	PERG	1F	AE0502A	12	YC051-YD170		
D45177P	B04		2075B	24 Y2	D43307P	B08		AE0303A	12	YN231		
D45177P	A04		2075R	24 Y2	D43307P	A08		AE0303A	12	YN231		
D45177P	PERG	1F	2075Z		D43307P	PERG	1F	AE0303A	12	YN231		

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0302A

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
<b>AE0302A</b>	<b>17</b>	<b>W5111</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF (continued)</b>								
D45177P	B08		2127B	24 Y2	D43307P	B19		AE0303A	12	YL951-YL967		
D45177P	A08		2127R	24 Y2	D43307P	A19		AE0303A	12	YL951-YL967		
D45177P	PERG	1F	2127Z		D43307P	PERG	1F	AE0303A	12	YL951-YL967		
<b>AE0302A</b>	<b>18</b>	<b>W0321</b>	<b>NN2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>								
D45157J	A05		0159	20 G5	D40426J	8		AE0302A	28	YC051-YC053		
D45157J	A06		0161	22 PA	D40426J	11		AE0302A	28	YC051-YD170		
D45157J	B05		0192	20 G5	D40426J	7		AE0302A	28	YC051-YC053		
<b>AE0302A</b>	<b>18</b>	<b>W5111</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>								
D45157P	A05		0030	20 CQ	D43307P	B16		AE0303A	12	YC051-YC053, YD158-YR328		
D45157P	B05		0031	20 CQ	D43307P	A17		AE0303A	12	YC051-YC053, YD158-YR328		
D45157P	A06		0032	22 PA	D43307P	B17		AE0303A	12	ALL		
D45157P	A03		0038	22 PA	D43307P	A14		AE0303A	12	YC051-YD170		
D45157P	B03		0039	22 PA	D43307P	B14		AE0303A	12	YC051-YD170		
D45157P	B08		2062B	24 Y2	D43307P	B04		AE0303A	12	YD158-YR328		
D45157P	A08		2062R	24 Y2	D43307P	A04		AE0303A	12	YD158-YR328		
D45157P	PERG	1F	2062Z		D43307P	PERG	1F	AE0303A	12	YD158-YR328		
<b>AE0302A</b>	<b>19</b>	<b>W5111</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>								
D45137P	B15		2045B	24 Y2	D45111P	B20		AE0301A	07	ALL		
D45137P	A15		2045R	24 Y2	D45111P	A20		AE0301A	07	ALL		
D45137P	PERG	1F	2045Z		D45111P	PERG	1F	AE0301A	07	ALL		
D45137P	B16		2048B	24 Y2	D45111P	B19		AE0301A	07	ALL		
D45137P	A16		2048R	24 Y2	D45111P	A19		AE0301A	07	ALL		
D45137P	PERG	1F	2048Z		D45111P	PERG	1F	AE0301A	07	ALL		
D45137P	B18		2050B	22 X2	D45131P	B20		AE0301A	08	ALL		
D45137P	A18		2050R	22 X2	D45131P	A20		AE0301A	08	ALL		
D45137P	PERG	1F	2050Z		D45131P	PERG	1F	AE0301A	08	ALL		
D45137P	B02		2086B	24 Y2	D45151P	B03		AE0301A	09	YD158-YD170		
D45137P	A02		2086R	24 Y2	D45151P	A03		AE0301A	09	YD158-YD170		
D45137P	PERG	1F	2086Z		D45151P	PERG	1F	AE0301A	09	YD158-YD170		
D45137P	B05		2087B	24 Y2	D45151P	B04		AE0301A	09	YD158-YD170		
D45137P	A05		2087R	24 Y2	D45151P	A04		AE0301A	09	YD158-YD170		
D45137P	PERG	1F	2087Z		D45151P	PERG	1F	AE0301A	09	YD158-YD170		

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0302A

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AE0302A</b>	<b>20</b>	<b>W5111</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>						
D45117P	B03		0005	22 PA	D45111P	B01		AE0301A	07	ALL
D45117P	B11		2021B	24 Y2	D45111P	B08		AE0301A	07	ALL
D45117P	A11		2021R	24 Y2	D45111P	A08		AE0301A	07	ALL
D45117P	PERG	1F	2021Z		D45111P	PERG	1F	AE0301A	07	ALL
D45117P	B12		2024B	22 X2	D45111P	CAP	Y	AE0301A	07	YC059-YR328
D45117P	A12		2024R	22 X2	D45111P	CAP	Y	AE0301A	07	YC059-YR328
D45117P	PERG	1F	2024Z		D45111P	DED		AE0301A	07	YC059-YR328
D45117P	B13		2030B	22 X2	D45111P	B14		AE0301A	07	YL963-YL999, YN236-YR328
D45117P	A13		2030R	22 X2	D45111P	A14		AE0301A	07	YL963-YL999, YN236-YR328
D45117P	PERG	1F	2030Z		D45111P	PERG	1F	AE0301A	07	YL963-YL999, YN236-YR328
D45117P	B17		2043B	24 Y2	D45111P	B18		AE0301A	07	ALL
D45117P	A17		2043R	24 Y2	D45111P	A18		AE0301A	07	ALL
D45117P	PERG	1F	2043Z		D45111P	PERG	1F	AE0301A	07	ALL
<b>AE0302A</b>	<b>25</b>	<b>W2231</b>	<b>RB2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>						
D46021P	9		0009	20 PA	D46067P	9		AP0600B	10	YC051-YN236, YN501-YR328
D46021P	1		0010	20 PA	D46067P	10		AP0600B	10	YC051-YN236, YN501-YR328
D46021P	2		0011	20 PA	D46067P	11		AP0600B	10	YC051-YN236, YN501-YR328
D46021P	3		0012	20 PA	D46067P	12		AP0600B	10	YC051-YN236, YN501-YR328
<b>AE0302A</b>	<b>26</b>	<b>W2653</b>	<b>SA2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>						
D41839P	1		0011	20 PA	D41809P	11		AP1800B	09	ALL
D41839P	2		0012	20 PA	D41809P	12		AP1800B	09	ALL
<b>AE0302A</b>	<b>27</b>	<b>W2201</b>	<b>LA2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>						
D41819P	8		0008	20 PA	D41805P	8		AP1800B	01	YC051-YD170
D41819P	8		0008	20 PA	D41805P	8	VP	AP1800B	01	YL951-YL968, YN231-YN235
D41819P	13		0013	20 PA	D41805P	13		AP1800B	01	ALL
D41819P	14		0014	20 PA	D41805P	14		AP1800B	01	YC051-YC060
D41819P	15		0015	14 PA	D41805P	15		AP1800B	01	YC051-YD170

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0302A

Page 4

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
<b>AE0302A</b>	<b>27</b>	<b>W2201</b>	<b>LA2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF (continued)</b>								
D41819P	16		0016	20 PA	D41805P	16		AP1800B	01	ALL		
D41819P	17		0017	20 PA	D41805P	17		AP1800B	01	ALL		
D41819P	18		0018	20 PA	D41805P	18		AP1800B	01	ALL		
<b>AE0302A</b>	<b>28</b>	<b>W0321</b>	<b>NN2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>								
D40426J	8		0159	20 G5	D45157J	A05		AE0302A	18	YC051-YC053		
D40426J	11		0161	22 PA	D45157J	A06		AE0302A	18	YC051-YD170		
D40426J	7		0192	20 G5	D45157J	B05		AE0302A	18	YC051-YC053		
<b>AE0302A</b>	<b>28</b>	<b>W5158</b>	<b>SB2*</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>								
D40426P	8		0545	20 CQ	D40702P	CAP	Y	AJ0024	06	YC051-YC052		
D40426P	8		0545	20 CQ	D40702P	13		AJ0024	06	YC053-YD158		
D40426P	14		0634	20 PA	D40490J	21		AE0104A	20	YD160-YL999, YN232-YR328		
D40426P	7		0682	20 CQ	D40702P	CAP	Y	AJ0024	06	YC051-YC052		
D40426P	7		0682	20 CQ	D40702P	21		AJ0024	06	YC053-YR328		
<b>AE0302A</b>	<b>30</b>	<b>W2169</b>	<b>RB2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>								
D46043P	4		0004	22 PA	D46063P	4		AP0600B	19	ALL		
D46043P	7		0007	22 PA	D46063P	7		AP0600B	19	ALL		
D46043P	8		0008	22 PA	D46063P	8		AP0600B	19	ALL		
D46043P	11		0011	20 PA	D46063P	11		AP0600B	19	YC067-YR328		
D46043P	12		0012	20 CQ	D46063P	12		AP0600B	19	YD157-YR328		
<b>AE0302A</b>	<b>35</b>	<b>W3379</b>	<b>RB3</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>								
D40029P	A09		0002	20 CQ	D43399P	2		AB1050R	04	YC053-YN236, YN501-YR328		
D40029P	B02		2010B	22 X2	D43399P	37		AB1050R	04	YC053-YN236, YN501-YR328		
D40029P	B01		2010R	22 X2	D43399P	36		AB1050R	04	YC053-YN236, YN501-YR328		
D40029P	PERG	1F	2010Z		D43399P	S/R		AB1050R	04	YC053-YN236, YN501-YR328		
D40029P	B09		3007B	22 X3	D43399P	44		AB1050R	04	YC053-YN236, YN501-YR328		
D40029P	B08		3007R	22 X3	D43399P	43		AB1050R	04	YC053-YN236, YN501-YR328		

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0302A

Page 5

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AE0302A</b>	<b>35</b>	<b>W3379</b>	<b>RB3</b>	<b>DISCONNECT BRACKET - E3-2 SHELF (continued)</b>						
D40029P	B10		3007Y	22 X3	D43399P	45		AB1050R	04	YC053-YN236, YN501-YR328
D40029P	PERG	1F	3007Z		D43399P	S/R		AB1050R	04	YC053-YN236, YN501-YR328
<b>AE0302A</b>	<b>37</b>	<b>W5160</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>						
D40470P	A01		0656	24 PK	D40466P	27		AE0103A	14	YC051-YD157, YL951-YR328
D40470P	A06		0657	24 PK	D40466P	28		AE0103A	14	YC051-YD157, YL951-YR328
D40470P	B06		0658	20 PA	D40466P	16		AE0103A	14	YD158
D40470P	B07		2461B	24 Y2	D40466P	30		AE0103A	14	YC051-YD157, YL951-YL952, YN231-YR328
D40470P	B06		2461R	24 Y2	D40466P	29		AE0103A	14	YC051-YD157, YL951-YL952, YN231-YR328
D40470P	PERG	1F	2461Z		D40466P	31		AE0103A	14	YC051-YD157, YL951-YL952, YN231-YR328
<b>AE0302A</b>	<b>40</b>	<b>W5461</b>	<b>LA2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>						
D43261P	B06		0085	22 PA	D45261J	B11		AE0502A	18	YN231-YN235
D43261P	B10		2032B	24 Y2	D45261J	B10		AE0502A	18	YL951-YR328
D43261P	B09		2032R	24 Y2	D45261J	B09		AE0502A	18	YL951-YR328
D43261P	PERG	1F	2032Z		D45261J	PERG	1F	AE0502A	18	YL951-YR328
D43261P	B13		2051B	24 Y2	D46461P	B09		AE0101A	22	YN231-YN235
D43261P	A13		2051R	24 Y2	D46461P	A09		AE0101A	22	YN231-YN235
D43261P	PERG	1F	2051Z		D46461P	PERG	1F	AE0101A	22	YN231-YN235
<b>AE0302A</b>	<b>41</b>	<b>W5461</b>	<b>LA2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>						
D42261P	B10		0059	24 PK	D41561J	B14		AE0502A	17	YD158-YD170
D42261P	B05		0071	24 PK	D41561J	A16		AE0502A	17	YD158-YD170
D42261P	A13		0078	22 PA	D41561J	B16		AE0502A	17	YN231-YN235
D42261P	A06		0086	24 PK	D44161P	A04		AE0401A	24	YL951-YL999
D42261P	B01		2003B	24 Y2	D41561J	B01		AE0502A	17	ALL
D42261P	A01		2003R	24 Y2	D41561J	A01		AE0502A	17	ALL
D42261P	PERG	1F	2003Z		D41561J	PERG	1F	AE0502A	17	ALL

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0302A

Page 6

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
<b>AE0302A</b>	<b>41</b>	<b>W5461</b>	<b>LA2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF (continued)</b>								
D42261P	B15		2011B	24 Y2	D41561J	B15		AE0502A	17	ALL		
D42261P	A15		2011R	24 Y2	D41561J	A15		AE0502A	17	ALL		
D42261P	PERG	1F	2011Z		D41561J	PERG	1F	AE0502A	17	ALL		
D42261P	B02		2012B	24 Y2	D41561J	B02		AE0502A	17	YN231-YN235		
D42261P	A02		2012R	24 Y2	D41561J	A02		AE0502A	17	YN231-YN235		
D42261P	PERG	1F	2012Z		D41561J	PERG	1F	AE0502A	17	YN231-YN235		
D42261P	B20		2028B	22 X2	D45261J	A20		AE0502A	18	YD158-YD170		
D42261P	B19		2028R	22 X2	D45261J	A19		AE0502A	18	YD158-YD170		
D42261P	PERG	1F	2028Z		D45261J	PERG	1F	AE0502A	18	YD158-YD170		
D42261P	B12		2103B	24 Y2	D42311P	A10		AE0101A	06	ALL		
D42261P	B11		2103R	24 Y2	D42311P	A09		AE0101A	06	ALL		
D42261P	PERG	1F	2103Z		D42311P	PERG	1F	AE0101A	06	ALL		
<b>AE0302A</b>	<b>42</b>	<b>W5160</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>								
D40952P	A05		0620	20 PA	D40694P	31		AJ0024	07	YL951-YR328		
<b>AE0302A</b>	<b>43</b>	<b>W5461</b>	<b>LA2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>								
D42361P	B11		0045	24 PK	D43211P	B15		AE0101A	21	ALL		
D42361P	B06		0057	24 PK	D44161P	B04		AE0401A	24	ALL		
D42361P	A06		0058	24 PK	D44161P	A06		AE0401A	24	ALL		
D42361P	A14		0073	24 PK	D43211P	A14		AE0101A	21	ALL		
D42361P	B13		0074	24 PK	D43211P	B13		AE0101A	21	ALL		
D42361P	A20		0083	24 PK	D44161P	A16		AE0401A	24	YN231-YN235		
D42361P	B05		2104B	24 Y2	D44161P	A05		AE0401A	24	YC051-YC058		
D42361P	A12		2104R	24 Y2	D44161P	A04		AE0401A	24	YC051-YC058		
D42361P	PERG	1F	2104Z		D44161P	PERG	1F	AE0401A	24	YC051-YC058		
<b>AE0302A</b>	<b>44</b>	<b>W5463</b>	<b>RB2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>								
D43263P	A11		0054	20 PA	D41563P	A02		AE0101B	01	YD157		
D43263P	A13		0055	20 PA	D41563P	A03		AE0101B	01	YC051-YL959, YN231-YN235		
D43263P	B07		2013B	22 X2	D45263J	B07		AE0502A	06	YC051-YD157		
D43263P	B07		2013B	24 Y2	D45263J	B07		AE0502A	06	YD158-YR328		
D43263P	A07		2013R	22 X2	D45263J	A07		AE0502A	06	YC051-YD157		
D43263P	A07		2013R	24 Y2	D45263J	A07		AE0502A	06	YD158-YR328		
D43263P	PERG	1F	2013Z		D45263J	PERG	1F	AE0502A	06	ALL		
D43263P	A08		2014B	22 X2	D41163P	A07		AE0101B	08	YC051-YD157		
D43263P	B08		2014B	24 Y2	D45263J	B08		AE0502A	06	YD158-YR328		

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0302A

Page 7

Nov 12/2012

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AE0302A</b>	<b>44</b>	<b>W5463</b>	<b>RB2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF (continued)</b>						
D43263P	B08		2014R	22 X2	D41163P	B05		AE0101B	08	YC051-YD157
D43263P	A08		2014R	24 Y2	D45263J	A08		AE0502A	06	YD158-YR328
D43263P	PERG	1F	2014Z		D41163P	PERG	1F	AE0101B	08	YC051-YD157
D43263P	PERG	1F	2014Z		D45263J	PERG	1F	AE0502A	06	YD158-YR328
D43263P	B14		2019B	24 Y2	D45263J	B14		AE0502A	06	YC051-YL959, YN231-YN235
D43263P	A14		2019R	24 Y2	D45263J	A14		AE0502A	06	YC051-YL959, YN231-YN235
D43263P	PERG	1F	2019Z		D45263J	PERG	1F	AE0502A	06	YC051-YL959, YN231-YN235
<b>AE0302A</b>	<b>45</b>	<b>W6412</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>						
D40392P	B18		2001B	24 Y2	D40390P	A06		AE0401A	52	YD158-YN236, YN501-YR323, YR325-YR328
D40392P	B17		2001R	24 Y2	D40390P	A05		AE0401A	52	YD158-YN236, YN501-YR323, YR325-YR328
D40392P	PERG	1F	2001Z		D40390P	PERG	1F	AE0401A	52	YD158-YN236, YN501-YR323, YR325-YR328
D40392P	A05		2608B	24 Y2	D40394P	A13		AE0301A	34	YC051-YN236, YN501-YR323, YR325-YR328
D40392P	A06		2608R	24 Y2	D40394P	A14		AE0301A	34	YC051-YN236, YN501-YR323, YR325-YR328
D40392P	PERG	1F	2608Z		D40394P	PERG	1F	AE0301A	34	YC051-YN236, YN501-YR323, YR325-YR328
D40392P	B03		5504	24 PK	D40390P	B03		AE0401A	52	YC051-YN236, YN501-YR323, YR325-YR328
D40392P	A14		5529	20 PA	D40390P	A17		AE0401A	52	YC051-YN236, YN501-YR323, YR325-YR328
D40392P	B14		5530	20 PA	D40390P	A18		AE0401A	52	YC051-YD157

**SPARE WIRE LIST**

D280A108

**91-21-12**

Section AE0302A

Page 8

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AE0302A</b>	<b>45</b>	<b>W6412</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E3-2 SHELF (continued)</b>						
D40392P	A18		5534	20 PA	D40386P	23		AP0600B	14	YC051-YL999, YR301-YR323, YR325-YR328
D40392P	A16		5548	24 PK	D40390P	B10		AE0401A	52	YC067-YD157
<b>AE0302A</b>	<b>46</b>	<b>W5121</b>	<b>NB2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>						
D45127P	A01		0011	22 PA	D45121P	B01		AE0301A	32	YC051-YD157
D45127P	A01		0011	22 PA	D45123J	2		AE0104A	12	YD158, YL951-YR328
D45127P	B03		0013	24 PK	D45123J	7		AE0104A	12	YC051-YD158, YL951-YR328
D45127P	B19		2025B	24 Y2	D45141P	B15		AE0301A	33	YD158, YL951-YR328
D45127P	A19		2025R	24 Y2	D45141P	A15		AE0301A	33	YD158, YL951-YR328
D45127P	PERG	1F	2025Z		D45141P	PERG	1F	AE0301A	33	YD158, YL951-YR328
D45127P	B16		2668B	24 Y2	D45125J	42		AE0105A	09	YD158, YL951-YR328
D45127P	A16		2668R	24 Y2	D45125J	41		AE0105A	09	YD158, YL951-YR328
D45127P	PERG	1F	2668Z		D45125J	S/R		AE0105A	09	YD158, YL951-YR328
<b>AE0302A</b>	<b>47</b>	<b>W5375</b>	<b>RD3</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>						
D42053P	A10		0011	20 PA	D04077J	29		AE0104A	15	YD160-YN236, YN501-YR328
<b>AE0302A</b>	<b>53</b>	<b>W5463</b>	<b>RB2</b>	<b>DISCONNECT BRACKET - E3-2 SHELF</b>						
D42363P	A03		0030	24 PK	D41463J	44		AE0104A	11	ALL
D42363P	B03		0031	24 PK	D41463J	45		AE0104A	11	ALL
D42363P	A10		2022B	24 Y2	D45263J	A20		AE0502A	06	ALL
D42363P	A09		2022R	24 Y2	D45263J	A19		AE0502A	06	ALL
D42363P	PERG	1F	2022Z		D45263J	PERG	1F	AE0502A	06	ALL

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0302A

Page 9

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
AE0302A	56	W5121	NB2	DISCONNECT BRACKET - E3-2 SHELF						
D45147P	A01		0009	22 PA	D45123J	4		AE0104A	12	YD158, YL951-YR328
D45147P	B01		0010	22 PA	D45123J	5		AE0104A	12	YD158, YL951-YR328
D45147P	A06		0028	22 CQ	D45123J	52		AE0104A	12	YD158
D45147P	B13		2022B	24 Y2	D45123J	47		AE0104A	12	YD158, YL951-YR328
D45147P	A13		2022R	24 Y2	D45123J	46		AE0104A	12	YD158, YL951-YR328
D45147P	PERG	1F	2022Z		D45123J	S/R		AE0104A	12	YD158, YL951-YR328
D45147P	B14		2023B	24 Y2	D45123J	49		AE0104A	12	YD158, YL951-YR328
D45147P	A14		2023R	24 Y2	D45123J	48		AE0104A	12	YD158, YL951-YR328
D45147P	PERG	1F	2023Z		D45123J	S/R		AE0104A	12	YD158, YL951-YR328
D45147P	B15		2024B	24 Y2	D45123J	51		AE0104A	12	YD158, YL951-YR328
D45147P	A15		2024R	24 Y2	D45123J	50		AE0104A	12	YD158, YL951-YR328
D45147P	PERG	1F	2024Z		D45123J	S/R		AE0104A	12	YD158, YL951-YR328
D45147P	B11		2044B	24 Y2	D45213J	B11		AE0502A	11	YC051-YD157
D45147P	A11		2044R	24 Y2	D45213J	A11		AE0502A	11	YC051-YD157
D45147P	PERG	1F	2044Z		D45213J	PERG	1F	AE0502A	11	YC051-YD157
D45147P	B17		2056B	24 Y2	D43323P	B17		AE0303A	42	YD158
D45147P	A17		2056R	24 Y2	D43323P	A17		AE0303A	42	YD158
D45147P	PERG	1F	2056Z		D43323P	PERG	1F	AE0303A	42	YD158
D45147P	B20		2065B	24 Y2	D43323P	B20		AE0303A	42	YD158
D45147P	A20		2065R	24 Y2	D43323P	A20		AE0303A	42	YD158
D45147P	PERG	1F	2065Z		D43323P	PERG	1F	AE0303A	42	YD158
D45147P	B03		2066B	24 Y2	D45141P	B03		AE0301A	33	YD158
D45147P	A03		2066R	24 Y2	D45141P	A03		AE0301A	33	YD158
D45147P	PERG	1F	2066Z		D45141P	PERG	1F	AE0301A	33	YD158
D45147P	B04		2067B	24 Y2	D45141P	B04		AE0301A	33	YD158
D45147P	A04		2067R	24 Y2	D45141P	A04		AE0301A	33	YD158
D45147P	PERG	1F	2067Z		D45141P	PERG	1F	AE0301A	33	YD158

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0302A

Page 10

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AE0302A	56	W5121	NB2	DISCONNECT BRACKET - E3-2 SHELF (continued)							
D45147P	B05		2070B	24	Y2	D45121P	B03		AE0301A	32	YD158, YL951-YR328
D45147P	A05		2070R	24	Y2	D45121P	A03		AE0301A	32	YD158, YL951-YR328
D45147P	PERG	1F	2070Z			D45121P	PERG	1F	AE0301A	32	YD158, YL951-YR328
D45147P	B11		2084B	24	Y2	D45141P	B01		AE0301A	33	YD158, YL951-YR328
D45147P	A11		2084R	24	Y2	D45141P	A01		AE0301A	33	YD158, YL951-YR328
D45147P	PERG	1F	2084Z			D45141P	PERG	1F	AE0301A	33	YD158, YL951-YR328
D45147P	B16		2086B	24	Y2	D45141P	B02		AE0301A	33	YD158, YL951-YR328
D45147P	A16		2086R	24	Y2	D45141P	A02		AE0301A	33	YD158, YL951-YR328
D45147P	PERG	1F	2086Z			D45141P	PERG	1F	AE0301A	33	YD158, YL951-YR328

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0302A

Page 11 End

Nov 12/2012

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
<b>I</b>	<b>AE0303A</b>	<b>05</b>	<b>W5723</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E3-3 SHELF</b>							
	D43306P	B03		2511B	24	Y2	D41131P	35		AE0103A	22	YD158-YR328
	D43306P	A03		2511R	24	Y2	D41131P	34		AE0103A	22	YD158-YR328
	D43306P	PERG	1F	2511Z			D41131P	36		AE0103A	22	YD158-YR328
	D43306P	B04		2512B	24	Y2	D41213J	4		AE0102A	12	YD158-YR328
	D43306P	A04		2512R	24	Y2	D41213J	3		AE0102A	12	YD158-YR328
	D43306P	PERG	1F	2512Z			D41213J	S/R		AE0102A	12	YD158-YR328
<b>I</b>	<b>AE0303A</b>	<b>06</b>	<b>W5103</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-3 SHELF</b>							
	D43359P	A04		0001	22	PA	D40113P	A04		AE0602A	10	YL951-YR328
	D43359P	B06		2504B	24	Y2	D40113P	B06		AE0602A	10	YL951-YN501
	D43359P	A06		2504R	24	Y2	D40113P	A06		AE0602A	10	YL951-YN501
	D43359P	PERG	1F	2504Z			D40113P	PERG	1F	AE0602A	10	YL951-YN501
	D43359P	B07		2505B	24	Y2	D40113P	B07		AE0602A	10	YL951-YR328
	D43359P	A07		2505R	24	Y2	D40113P	A07		AE0602A	10	YL951-YR328
	D43359P	PERG	1F	2505Z			D40113P	PERG	1F	AE0602A	10	YL951-YR328
	D43359P	B08		2506B	24	Y2	D40075P	B07		AE0801A	05	YD158-YD170
	D43359P	A08		2506R	24	Y2	D40075P	A07		AE0801A	05	YD158-YD170
	D43359P	PERG	1F	2506Z			D40075P	PERG	1F	AE0801A	05	YD158-YD170
	D43359P	B09		2507B	24	Y2	D40113P	B09		AE0602A	10	YL951-YR328
	D43359P	A09		2507R	24	Y2	D40113P	A09		AE0602A	10	YL951-YR328
	D43359P	PERG	1F	2507Z			D40113P	PERG	1F	AE0602A	10	YL951-YR328
	D43359P	B10		2508B	24	Y2	D40113P	B10		AE0602A	10	YL951-YN501
	D43359P	B08		2508B	24	Y2	D40113P	B10		AE0602A	10	YR301-YR328
	D43359P	A10		2508R	24	Y2	D40113P	A10		AE0602A	10	YL951-YN501
	D43359P	A08		2508R	24	Y2	D40113P	A10		AE0602A	10	YR301-YR328
	D43359P	PERG	1F	2508Z			D40113P	PERG	1F	AE0602A	10	YL951-YR328
	D43359P	B08		2509B	24	Y2	D40113P	B08		AE0602A	10	YL951-YN501
	D43359P	A08		2509R	24	Y2	D40113P	A08		AE0602A	10	YL951-YN501
	D43359P	PERG	1F	2509Z			D40113P	PERG	1F	AE0602A	10	YL951-YN501
	D43359P	B10		2510B	24	Y2	D40113P	B08		AE0602A	10	YR301-YR328
	D43359P	A10		2510R	24	Y2	D40113P	A08		AE0602A	10	YR301-YR328
	D43359P	PERG	1F	2510Z			D40113P	PERG	1F	AE0602A	10	YR301-YR328
	D43359P	B09		2559B	24	Y2	D40075P	B15		AE0801A	05	YD158-YD170
	D43359P	A09		2559R	24	Y2	D40075P	A15		AE0801A	05	YD158-YD170
	D43359P	PERG	1F	2559Z			D40075P	PERG	1F	AE0801A	05	YD158-YD170
<b>I</b>	<b>AE0303A</b>	<b>10</b>	<b>W5105</b>	<b>NB2</b>	<b>DISCONNECT BRACKET - E3-3 SHELF</b>							
	D43361P	A02		0001	22	PA	D40115P	A02		AE0602A	08	YL951-YR328

**SPARE WIRE LIST**

D280A108

**91-21-12**

Section AE0303A

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
<b>AE0303A</b>	<b>10</b>	<b>W5105</b>	<b>NB2</b>	<b>DISCONNECT BRACKET - E3-3 SHELF (continued)</b>								
D43361P	B10		2502B	24	Y2	D40115P	B05		AE0602A	08	YL951-YL999, YR301-YR328	
D43361P	A10		2502R	24	Y2	D40115P	A05		AE0602A	08	YL951-YL999, YR301-YR328	
D43361P	PERG	1F	2502Z			D40115P	PERG	1F	AE0602A	08	YL951-YL999, YR301-YR328	
D43361P	B07		2503B	24	Y2	D40115P	B04		AE0602A	08	YL951-YL999, YR301-YR328	
D43361P	A07		2503R	24	Y2	D40115P	A04		AE0602A	08	YL951-YL999, YR301-YR328	
D43361P	PERG	1F	2503Z			D40115P	PERG	1F	AE0602A	08	YL951-YL999, YR301-YR328	
D43361P	B04		2504B	24	Y2	D40115P	B06		AE0602A	08	YL951-YR328	
D43361P	A04		2504R	24	Y2	D40115P	A06		AE0602A	08	YL951-YR328	
D43361P	PERG	1F	2504Z			D40115P	PERG	1F	AE0602A	08	YL951-YR328	
D43361P	B05		2505B	24	Y2	D40115P	B07		AE0602A	08	YL951-YR328	
D43361P	A05		2505R	24	Y2	D40115P	A07		AE0602A	08	YL951-YR328	
D43361P	PERG	1F	2505Z			D40115P	PERG	1F	AE0602A	08	YL951-YR328	
D43361P	B08		2507B	24	Y2	D40115P	B08		AE0602A	08	YL951-YR328	
D43361P	A08		2507R	24	Y2	D40115P	A08		AE0602A	08	YL951-YR328	
D43361P	PERG	1F	2507Z			D40115P	PERG	1F	AE0602A	08	YL951-YR328	
D43361P	B09		2508B	24	Y2	D40115P	B09		AE0602A	08	YL951-YR328	
D43361P	A09		2508R	24	Y2	D40115P	A09		AE0602A	08	YL951-YR328	
D43361P	PERG	1F	2508Z			D40115P	PERG	1F	AE0602A	08	YL951-YR328	
D43361P	B06		2509B	24	Y2	D40115P	B10		AE0602A	08	YL951-YR328	
D43361P	A06		2509R	24	Y2	D40115P	A10		AE0602A	08	YL951-YR328	
D43361P	PERG	1F	2509Z			D40115P	PERG	1F	AE0602A	08	YL951-YR328	
D43361P	B07		2534B	24	Y2	D40077P	B08		AE0801A	06	YD158-YD170	
D43361P	A07		2534R	24	Y2	D40077P	A08		AE0801A	06	YD158-YD170	
D43361P	PERG	1F	2534Z			D40077P	PERG	1F	AE0801A	06	YD158-YD170	
D43361P	B10		2539B	24	Y2	D40077P	B14		AE0801A	06	YD158-YD170	
D43361P	A10		2539R	24	Y2	D40077P	A14		AE0801A	06	YD158-YD170	
D43361P	PERG	1F	2539Z			D40077P	PERG	1F	AE0801A	06	YD158-YD170	
<b>AE0303A</b>	<b>12</b>	<b>W0331</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-3 SHELF</b>								
D43307J	B16		0139	20	PA	D43315J	A09		AE0303A	22	YC051-YC053	
D43307J	A17		0140	20	PA	D43315J	A10		AE0303A	22	YC051-YC053	

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0303A

Page 2

Nov 12/2012



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AE0303A</b>	<b>12</b>	<b>W5111</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-3 SHELF</b>						
D43307P	B16		0030	20 CQ	D45157P	A05		AE0302A	18	YC051-YC053, YD158-YR328
D43307P	A17		0031	20 CQ	D45157P	B05		AE0302A	18	YC051-YC053, YD158-YR328
D43307P	B17		0032	22 PA	D45157P	A06		AE0302A	18	ALL
D43307P	A14		0038	22 PA	D45157P	A03		AE0302A	18	YC051-YD170
D43307P	B14		0039	22 PA	D45157P	B03		AE0302A	18	YC051-YD170
D43307P	B10		2058B	24 Y2	D45177P	B05		AE0302A	17	YC051-YD170
D43307P	A10		2058R	24 Y2	D45177P	A05		AE0302A	17	YC051-YD170
D43307P	PERG	1F	2058Z		D45177P	PERG	1F	AE0302A	17	YC051-YD170
D43307P	B09		2059B	24 Y2	D45177P	B06		AE0302A	17	YC051-YD170
D43307P	A09		2059R	24 Y2	D45177P	A06		AE0302A	17	YC051-YD170
D43307P	PERG	1F	2059Z		D45177P	PERG	1F	AE0302A	17	YC051-YD170
D43307P	B04		2062B	24 Y2	D45157P	B08		AE0302A	18	YD158-YR328
D43307P	A04		2062R	24 Y2	D45157P	A08		AE0302A	18	YD158-YR328
D43307P	PERG	1F	2062Z		D45157P	PERG	1F	AE0302A	18	YD158-YR328
D43307P	B08		2075B	24 Y2	D45177P	B04		AE0302A	17	YN231
D43307P	A08		2075R	24 Y2	D45177P	A04		AE0302A	17	YN231
D43307P	PERG	1F	2075Z		D45177P	PERG	1F	AE0302A	17	YN231
D43307P	B19		2127B	24 Y2	D45177P	B08		AE0302A	17	YL951-YL967
D43307P	A19		2127R	24 Y2	D45177P	A08		AE0302A	17	YL951-YL967
D43307P	PERG	1F	2127Z		D45177P	PERG	1F	AE0302A	17	YL951-YL967
<b>AE0303A</b>	<b>13</b>	<b>W5111</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-3 SHELF</b>						
D43321P	B09		2063B	24 Y2	D45211J	B10		AE0502A	12	YC051-YD157
D43321P	B20		2063B	24 Y2	D45211J	B10		AE0502A	12	YD158-YL967, YN231-YN235, YN501-YR328
D43321P	A09		2063R	24 Y2	D45211J	A10		AE0502A	12	YC051-YD157
D43321P	A20		2063R	24 Y2	D45211J	A10		AE0502A	12	YD158-YL967, YN231-YN235, YN501-YR328
D43321P	PERG	1F	2063Z		D45211J	PERG	1F	AE0502A	12	YC051-YL967, YN231-YN235, YN501-YR328
D43321P	B06		2067B	24 Y2	D45211J	B07		AE0502A	12	YD158-YR328
D43321P	A06		2067R	24 Y2	D45211J	A07		AE0502A	12	YD158-YR328
D43321P	PERG	1F	2067Z		D45211J	PERG	1F	AE0502A	12	YD158-YR328

**SPARE WIRE LIST**

D280A108

**91-21-12**

Section AE0303A

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
AE0303A	13	W5111	NA2	DISCONNECT BRACKET - E3-3 SHELF (continued)								
D43321P	B19		2071B	22 X2	D45211J	B19		AE0502A	12	YL951-YR328		
D43321P	A19		2071R	22 X2	D45211J	A19		AE0502A	12	YL951-YR328		
D43321P	PERG	1F	2071Z		D45211J	PERG	1F	AE0502A	12	YL951-YR328		
D43321P	B04		2079B	24 Y2	D45211J	B14		AE0502A	12	YN501-YR328		
D43321P	A04		2079R	24 Y2	D45211J	A14		AE0502A	12	YN501-YR328		
D43321P	PERG	1F	2079Z		D45211J	PERG	1F	AE0502A	12	YN501-YR328		
D43321P	B05		2080B	24 Y2	D45211J	B15		AE0502A	12	YD158-YR328		
D43321P	A05		2080R	24 Y2	D45211J	A15		AE0502A	12	YD158-YR328		
D43321P	PERG	1F	2080Z		D45211J	PERG	1F	AE0502A	12	YD158-YR328		
D43321P	B10		2082B	24 Y2	D45211J	B02		AE0502A	12	YD158-YR328		
D43321P	A10		2082R	24 Y2	D45211J	A02		AE0502A	12	YD158-YR328		
D43321P	PERG	1F	2082Z		D45211J	PERG	1F	AE0502A	12	YD158-YR328		
D43321P	B01		2083B	24 Y2	D45211J	B03		AE0502A	12	YN501-YR328		
D43321P	A01		2083R	24 Y2	D45211J	A03		AE0502A	12	YN501-YR328		
D43321P	PERG	1F	2083Z		D45211J	PERG	1F	AE0502A	12	YN501-YR328		
D43321P	B02		2084B	24 Y2	D45211J	B04		AE0502A	12	YN501-YR328		
D43321P	A02		2084R	24 Y2	D45211J	A04		AE0502A	12	YN501-YR328		
D43321P	PERG	1F	2084Z		D45211J	PERG	1F	AE0502A	12	YN501-YR328		
D43321P	B03		2085B	24 Y2	D45211J	B05		AE0502A	12	YN501-YR328		
D43321P	A03		2085R	24 Y2	D45211J	A05		AE0502A	12	YN501-YR328		
D43321P	PERG	1F	2085Z		D45211J	PERG	1F	AE0502A	12	YN501-YR328		
D43321P	B17		2091B	24 Y2	D45211J	B17		AE0502A	12	YD158-YD170		
D43321P	A17		2091R	24 Y2	D45211J	A17		AE0502A	12	YD158-YD170		
D43321P	PERG	1F	2091Z		D45211J	PERG	1F	AE0502A	12	YD158-YD170		
D43321P	B18		2092B	24 Y2	D45211J	B16		AE0502A	12	YD158-YN260		
D43321P	A18		2092R	24 Y2	D45211J	A16		AE0502A	12	YD158-YN260		
D43321P	PERG	1F	2092Z		D45211J	PERG	1F	AE0502A	12	YD158-YN260		
D43321P	B15		2099B	24 Y2	D45211J	B18		AE0502A	12	YD158-YL967, YN231-YN235, YN501-YR328		
D43321P	A15		2099R	24 Y2	D45211J	A18		AE0502A	12	YD158-YL967, YN231-YN235, YN501-YR328		
D43321P	PERG	1F	2099Z		D45211J	PERG	1F	AE0502A	12	YD158-YL967, YN231-YN235, YN501-YR328		

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0303A

Page 4

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith	Pos	Bundle	Sep	Description		To					Effectivity	
	From Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos		
I	AE0303A	17	W5331	NA2	DISCONNECT BRACKET - E3-3 SHELF								
	D43345P	A20		0030	22	PA	D04115P	A20		AE0401D	13	YL955-YL999, YN236-YN260	
	D43345P	B20		0031	22	PA	D04115P	B20		AE0401D	13	YL955-YL999, YN236-YN260	
I	D43345P	B07		2501B	24	Y2	D04115P	B07		AE0401D	13	YN501-YR328	
I	D43345P	A07		2501R	24	Y2	D04115P	A07		AE0401D	13	YN501-YR328	
I	D43345P	PERG	1F	2501Z			D04115P	PERG	1F	AE0401D	13	YN501-YR328	
	D43345P	B09		2503B	24	Y2	D04115P	B09		AE0401D	13	YD158-YN260	
	D43345P	A09		2503R	24	Y2	D04115P	A09		AE0401D	13	YD158-YN260	
	D43345P	PERG	1F	2503Z			D04115P	PERG	1F	AE0401D	13	YD158-YN260	
	D43345P	B10		2504B	24	Y2	D04115P	B10		AE0401D	13	YD158-YR328	
	D43345P	A10		2504R	24	Y2	D04115P	A10		AE0401D	13	YD158-YR328	
	D43345P	PERG	1F	2504Z			D04115P	PERG	1F	AE0401D	13	YD158-YR328	
	D43345P	B06		2505B	24	Y2	D04115P	B06		AE0401D	13	YD158-YR328	
	D43345P	A06		2505R	24	Y2	D04115P	A06		AE0401D	13	YD158-YR328	
	D43345P	PERG	1F	2505Z			D04115P	PERG	1F	AE0401D	13	YD158-YR328	
	D43345P	B05		2506B	24	Y2	D04115P	B05		AE0401D	13	YD158-YD170, YN501-YR328	
	D43345P	A05		2506R	24	Y2	D04115P	A05		AE0401D	13	YD158-YD170, YN501-YR328	
	D43345P	PERG	1F	2506Z			D04115P	PERG	1F	AE0401D	13	YD158-YD170, YN501-YR328	
I	D43345P	B04		2507B	24	Y2	D04115P	B04		AE0401D	13	YN501-YR328	
I	D43345P	A04		2507R	24	Y2	D04115P	A04		AE0401D	13	YN501-YR328	
I	D43345P	PERG	1F	2507Z			D04115P	PERG	1F	AE0401D	13	YN501-YR328	
I	D43345P	B11		2508B	24	Y2	D04115P	B11		AE0401D	13	YD158-YR328	
I	D43345P	A11		2508R	24	Y2	D04115P	A11		AE0401D	13	YD158-YR328	
I	D43345P	PERG	1F	2508Z			D04115P	PERG	1F	AE0401D	13	YD158-YR328	
I	D43345P	B14		2511B	24	Y2	D04115P	B14		AE0401D	13	YD158-YR328	
I	D43345P	A14		2511R	24	Y2	D04115P	A14		AE0401D	13	YD158-YR328	
I	D43345P	PERG	1F	2511Z			D04115P	PERG	1F	AE0401D	13	YD158-YR328	
I	D43345P	B16		2524B	24	Y2	D04115P	B16		AE0401D	13	YD158-YR328	
I	D43345P	A16		2524R	24	Y2	D04115P	A16		AE0401D	13	YD158-YR328	
I	D43345P	PERG	1F	2524Z			D04115P	PERG	1F	AE0401D	13	YD158-YR328	
	D43345P	B01		2527B	24	Y2	D04115P	B01		AE0401D	13	YD158-YN260	
	D43345P	A01		2527R	24	Y2	D04115P	A01		AE0401D	13	YD158-YN260	
	D43345P	PERG	1F	2527Z			D04115P	PERG	1F	AE0401D	13	YD158-YN260	
	D43345P	B02		2528B	22	X2	D04115P	B02		AE0401D	13	YL951-YN260	

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0303A

Page 5

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
<b>AE0303A</b>	<b>17</b>	<b>W5331</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-3 SHELF (continued)</b>								
D43345P	A02		2528R	22 X2	D04115P	A02		AE0401D	13	YL951-YN260		
D43345P	PERG	1F	2528Z		D04115P	PERG	1F	AE0401D	13	YL951-YN260		
D43345P	B18		2529B	24 Y2	D04115P	B18		AE0401D	13	YL951-YN260		
D43345P	A18		2529R	24 Y2	D04115P	A18		AE0401D	13	YL951-YN260		
D43345P	PERG	1F	2529Z		D04115P	PERG	1F	AE0401D	13	YL951-YN260		
D43345P	B19		2530B	24 Y2	D04115P	B19		AE0401D	13	YL951-YN260		
D43345P	A19		2530R	24 Y2	D04115P	A19		AE0401D	13	YL951-YN260		
D43345P	PERG	1F	2530Z		D04115P	PERG	1F	AE0401D	13	YL951-YN260		
D43345P	B03		2532B	24 Y2	D04115P	B03		AE0401D	13	YD158-YD170, YN501-YR328		
D43345P	A03		2532R	24 Y2	D04115P	A03		AE0401D	13	YN501-YR328		
D43345P	PERG	1F	2532Z		D04115P	PERG	1F	AE0401D	13	YN501-YR328		
D43345P	B04		2563B	24 Y2	D04115P	B04		AE0401D	13	YL955-YL999, YN236-YN260		
D43345P	A04		2563R	24 Y2	D04115P	A04		AE0401D	13	YL955-YL999, YN236-YN260		
D43345P	PERG	1F	2563Z		D04115P	PERG	1F	AE0401D	13	YL955-YL999, YN236-YN260		
D43345P	B05		2564B	24 Y2	D04115P	B05		AE0401D	13	YL955-YL999, YN236-YN260		
D43345P	A05		2564R	24 Y2	D04115P	A05		AE0401D	13	YL955-YL999, YN236-YN260		
D43345P	PERG	1F	2564Z		D04115P	PERG	1F	AE0401D	13	YL955-YL999, YN236-YN260		
<b>AE0303A</b>	<b>18</b>	<b>W5331</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-3 SHELF</b>								
D43347P	A05		0022	24 PK	D04117P	A05		AE0401D	16	YD158-YR328		
D43347P	B05		0023	24 PK	D04117P	B05		AE0401D	16	YD158-YR328		
D43347P	A06		0024	24 PK	D04117P	A06		AE0401D	16	YD158-YR328		
D43347P	B06		0025	24 PK	D04117P	B06		AE0401D	16	YD158-YR328		
D43347P	B10		2516B	24 Y2	D04117P	B10		AE0401D	16	YN501-YR328		
D43347P	A10		2516R	24 Y2	D04117P	A10		AE0401D	16	YN501-YR328		
D43347P	PERG	1F	2516Z		D04117P	PERG	1F	AE0401D	16	YN501-YR328		
D43347P	B14		2520B	24 Y2	D04117P	B14		AE0401D	16	YN501-YR328		
D43347P	A14		2520R	24 Y2	D04117P	A14		AE0401D	16	YN501-YR328		
D43347P	PERG	1F	2520Z		D04117P	PERG	1F	AE0401D	16	YN501-YR328		
D43347P	B15		2521B	24 Y2	D04117P	B15		AE0401D	16	YN501-YR328		
D43347P	A15		2521R	24 Y2	D04117P	A15		AE0401D	16	YN501-YR328		

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0303A

Page 6

Nov 12/2012

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AE0303A</b>	<b>18</b>	<b>W5331</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-3 SHELF (continued)</b>						
D43347P	PERG	1F	2521Z		D04117P	PERG	1F	AE0401D	16	YN501-YR328
D43347P	B16		2522B	24 Y2	D04117P	B16		AE0401D	16	YN501-YR328
D43347P	A16		2522R	24 Y2	D04117P	A16		AE0401D	16	YN501-YR328
D43347P	PERG	1F	2522Z		D04117P	PERG	1F	AE0401D	16	YN501-YR328
D43347P	B20		2561B	24 M5	D04117P	B20		AE0401D	16	YD158-YR328
D43347P	A20		2561R	24 M5	D04117P	A20		AE0401D	16	YD158-YR328
D43347P	A19		2561ZI		D04117P	A19		AE0401D	16	YD158-YR328
D43347P	PERG	1F	2561ZO		D04117P	PERG	1F	AE0401D	16	YD158-YR328
D43347P	B04		2565B	24 Y2	D04117P	B04		AE0401D	16	YL951-YL999, YN236-YN260
D43347P	A04		2565R	24 Y2	D04117P	A04		AE0401D	16	YL951-YL999, YN236-YN260
D43347P	PERG	1F	2565Z		D04117P	PERG	1F	AE0401D	16	YL951-YL999, YN236-YN260
<b>AE0303A</b>	<b>20</b>	<b>W5111</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-3 SHELF</b>						
D43305P	B07		2056B	24 Y2	D45151P	B07		AE0301A	09	YN501-YR328
D43305P	A07		2056R	24 Y2	D45151P	A07		AE0301A	09	YN501-YR328
D43305P	PERG	1F	2056Z		D45151P	PERG	1F	AE0301A	09	YN501-YR328
D43305P	B08		2057B	24 Y2	D45151P	B05		AE0301A	09	YD158-YD170
D43305P	A08		2057R	24 Y2	D45151P	A05		AE0301A	09	YD158-YD170
D43305P	PERG	1F	2057Z		D45151P	PERG	1F	AE0301A	09	YD158-YD170
<b>AE0303A</b>	<b>22</b>	<b>W0331</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-3 SHELF</b>						
D43315J	A09		0139	20 PA	D43307J	B16		AE0303A	12	YC051-YC053
D43315J	A10		0140	20 PA	D43307J	A17		AE0303A	12	YC051-YC053
<b>AE0303A</b>	<b>22</b>	<b>W5189</b>	<b>NA3</b>	<b>DISCONNECT BRACKET - E3-3 SHELF</b>						
D43315P	B10		0017	22 PA	D48389P	B05		AE0801C	07	YC051-YC052
D43315P	B10		0017	22 PA	D48389P	B05		AE0801B	06	YC053-YD157
D43315P	A01		0018	22 PA	D08123P	A17		AE0401A	21	YD158-YD170
D43315P	A02		0019	22 PA	D08123P	B17		AE0401A	21	YD158-YD170
D43315P	A03		0020	22 PA	D08123P	A18		AE0401A	21	YD158-YD170
D43315P	B04		2538B	24 M5	D08123P	B19		AE0401A	21	YD158-YD170
D43315P	A04		2538R	24 M5	D08123P	A19		AE0401A	21	YD158-YD170
D43315P	B03		2538ZI		D08123P	B20		AE0401A	21	YD158-YD170
D43315P	PERG	1F	2538ZO		D08123P	PERG	1F	AE0401A	21	YD158-YD170

## SPARE WIRE LIST

D280A108

91-21-12

Section AE0303A

Page 7

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
<b>AE0303A</b>	<b>23</b>	<b>W2801</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E3-3 SHELF</b>								
D43319P	B08		2503B	24 Y2	P008-00	CAP	Y			YD158-YD170		
D43319P	A08		2503R	24 Y2	P008-00	CAP	Y			YD158-YD170		
D43319P	PERG	1F	2503Z		P008-00					YD158-YD170		
<b>AE0303A</b>	<b>28</b>	<b>W2201</b>	<b>LA2</b>	<b>DISCONNECT BRACKET - E3-3 SHELF</b>								
D43313P	9		0009	20 PA	D41805P	9		AP1800B	01	YC051-YC060		
D43313P	12		0022	22 PA	D41805P	22		AP1800B	01	YC051-YD157		
D43313P	4		0023	16 PA	D41805P	23		AP1800B	01	YC051-YD170, YN501		
D43313P	4		0023	22 PA	D41805P	23		AP1800B	01	YL951-YN260		
D43313P	2		0024	20 PA	D41805P	24		AP1800B	01	YC051-YD170, YN501		
D43313P	2		0024	22 PA	D41805P	24		AP1800B	01	YL951-YN260		
D43313P	5		0025	22 PA	D41805P	25		AP1800B	01	YD158-YN501		
D43313P	6		0026	22 PA	D41805P	26		AP1800B	01	YD158-YR328		
D43313P	7		0027	16 PA	D41805P	27		AP1800B	01	YC051-YD170, YN501		
D43313P	7		0027	22 PA	D41805P	27		AP1800B	01	YL951-YN260		
D43313P	8		0028	20 PA	D41805P	28		AP1800B	01	YC051-YD170		
D43313P	8		0028	22 PA	D41805P	28	VP	AP1800B	01	YL951-YN260		
D43313P	8		0028	20 PA	D41805P	28	VP	AP1800B	01	YN501		
D43313P	3		0030	20 PA	D41805P	20		AP1800B	01	YL968-YL999, YN236-YN260		
<b>AE0303A</b>	<b>29</b>	<b>W2231</b>	<b>RB2</b>	<b>DISCONNECT BRACKET - E3-3 SHELF</b>								
D43309P	7		0019	16 CQ	D46067P	19		AP0600B	10	YD158-YL999, YN501-YR328		
D43309P	7		0019	16 PA	D46067P	19		AP0600B	10	YN231-YN236		
D43309P	1		0021	20 PA	D46067P	21		AP0600B	10	YC051-YL999, YN501		
D43309P	2		0022	20 PA	D46067P	22		AP0600B	10	YC051-YL999, YN501		
D43309P	10		0023	16 PA	D46067P	23		AP0600B	10	YC051-YL999, YN501		
D43309P	5		0025	20 PA	D46067P	25		AP0600B	10	YC051-YL999, YN501		
D43309P	6		0026	20 PA	D46067P	26		AP0600B	10	YC051-YL999, YN501		

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0303A

Page 8

Nov 12/2012

	From Matewith	Pos	Bundle	Sep	Description		To					Pos	Effectivity	
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith				
I	AE0303A	38	W5191	NB3	DISCONNECT BRACKET - E3-3 SHELF									
I	D43331P	A11		0035	22	PA	D04289P	A06		AE0401A	16	YL951-YR328		
I	D43331P	A09		0036	24	B6	D04289P	A01		AE0401A	16	YL951-YR328		
	D43331P	A05		0038	24	G6	D04289P	A06		AE0401A	16	YD158-YD170		
I	D43331P	B12		2548B	24	M5	D04289P	B12		AE0401A	16	YL951-YR328		
I	D43331P	A12		2548R	24	M5	D04289P	A12		AE0401A	16	YL951-YR328		
I	D43331P	A13		2548ZI			D04289P	A13		AE0401A	16	YL951-YR328		
I	D43331P	PERG	1F	2548ZO			D04289P	PERG	1F	AE0401A	16	YL951-YR328		
	D43331P	B10		2551B	24	M5	D04289P	B10		AE0401A	16	YD158-YD170		
	D43331P	A10		2551R	24	M5	D04289P	A10		AE0401A	16	YD158-YD170		
	D43331P	B11		2551ZI			D04289P	B11		AE0401A	16	YD158-YD170		
	D43331P	PERG	1F	2551ZO			D04289P	PERG	1F	AE0401A	16	YD158-YD170		
	AE0303A	42	W5121	NB2	DISCONNECT BRACKET - E3-3 SHELF									
	D43323P	B04		0023	24	PK	D45213J	B02		AE0502A	11	YD158		
	D43323P	B10		2051B	24	Y2	D45141P	B10		AE0301A	33	YD158		
	D43323P	A10		2051R	24	Y2	D45141P	A10		AE0301A	33	YD158		
	D43323P	PERG	1F	2051Z			D45141P	PERG	1F	AE0301A	33	YD158		
	D43323P	B17		2056B	24	Y2	D45147P	B17		AE0302A	56	YD158		
	D43323P	A17		2056R	24	Y2	D45147P	A17		AE0302A	56	YD158		
	D43323P	PERG	1F	2056Z			D45147P	PERG	1F	AE0302A	56	YD158		
	D43323P	B12		2057B	24	Y2	D45213J	B12		AE0502A	11	YD158		
	D43323P	A12		2057R	24	Y2	D45213J	A12		AE0502A	11	YD158		
	D43323P	PERG	1F	2057Z			D45213J	PERG	1F	AE0502A	11	YD158		
	D43323P	B13		2058B	24	Y2	D45213J	B13		AE0502A	11	YD158		
	D43323P	A13		2058R	24	Y2	D45213J	A13		AE0502A	11	YD158		
	D43323P	PERG	1F	2058Z			D45213J	PERG	1F	AE0502A	11	YD158		
	D43323P	B11		2063B	24	Y2	D45141P	B20		AE0301A	33	YD158		
	D43323P	A11		2063R	24	Y2	D45141P	A20		AE0301A	33	YD158		
	D43323P	PERG	1F	2063Z			D45141P	PERG	1F	AE0301A	33	YD158		
	D43323P	B16		2064B	24	Y2	D45213J	B16		AE0502A	11	YD158		
	D43323P	A16		2064R	24	Y2	D45213J	A16		AE0502A	11	YD158		
	D43323P	PERG	1F	2064Z			D45213J	PERG	1F	AE0502A	11	YD158		
	D43323P	B20		2065B	24	Y2	D45147P	B20		AE0302A	56	YD158		
	D43323P	A20		2065R	24	Y2	D45147P	A20		AE0302A	56	YD158		
	D43323P	PERG	1F	2065Z			D45147P	PERG	1F	AE0302A	56	YD158		
I	AE0303A	43	W5335	NB2	DISCONNECT BRACKET - E3-3 SHELF									
I	D43379P	A01		0001	22	PA	D04007P	A01		AE0401D	14	YD158-YR328		

## SPARE WIRE LIST

D280A108

91-21-12

Section AE0303A

Page 9

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
AE0303A	43	W5335	NB2	DISCONNECT BRACKET - E3-3 SHELF (continued)								
D43379P	A02		0003	22 PA	D04007P	A02		AE0401D	14	YD158-YR328		
D43379P	B02		0004	22 PA	D04007P	B02		AE0401D	14	YD158-YR328		
D43379P	B10		2503B	24 Y2	D04007P	B10		AE0401D	14	YD158-YR328		
D43379P	A10		2503R	24 Y2	D04007P	A10		AE0401D	14	YD158-YR328		
D43379P	PERG	1F	2503Z		D04007P	PERG	1F	AE0401D	14	YD158-YR328		
D43379P	B11		2504B	24 Y2	D04009P	B01		AE0401D	15	YN501-YR328		
D43379P	A11		2504R	24 Y2	D04009P	A01		AE0401D	15	YN501-YR328		
D43379P	PERG	1F	2504Z		D04009P	PERG	1F	AE0401D	15	YN501-YR328		
D43379P	B13		2506B	24 Y2	D04009P	B03		AE0401D	15	YN501-YR328		
D43379P	A13		2506R	24 Y2	D04009P	A03		AE0401D	15	YN501-YR328		
D43379P	PERG	1F	2506Z		D04009P	PERG	1F	AE0401D	15	YN501-YR328		
D43379P	B14		2507B	24 Y2	D04009P	B04		AE0401D	15	YN501-YR328		
D43379P	A14		2507R	24 Y2	D04009P	A04		AE0401D	15	YN501-YR328		
D43379P	PERG	1F	2507Z		D04009P	PERG	1F	AE0401D	15	YN501-YR328		
D43379P	B15		2508B	24 Y2	D04009P	B05		AE0401D	15	YN501-YR328		
D43379P	A15		2508R	24 Y2	D04009P	A05		AE0401D	15	YN501-YR328		
D43379P	PERG	1F	2508Z		D04009P	PERG	1F	AE0401D	15	YN501-YR328		
D43379P	B07		2510B	24 Y2	D04007P	B07		AE0401D	14	YD158-YR328		
D43379P	A07		2510R	24 Y2	D04007P	A07		AE0401D	14	YD158-YR328		
D43379P	PERG	1F	2510Z		D04007P	PERG	1F	AE0401D	14	YD158-YR328		
D43379P	B18		2513B	24 Y2	D04009P	B08		AE0401D	15	YL951-YN260		
D43379P	A18		2513R	24 Y2	D04009P	A08		AE0401D	15	YL951-YN260		
D43379P	PERG	1F	2513Z		D04009P	PERG	1F	AE0401D	15	YL951-YN260		
D43379P	B06		2566B	24 M5	D04007P	B06		AE0401D	14	YD158-YR328		
D43379P	A06		2566R	24 M5	D04007P	A06		AE0401D	14	YD158-YR328		
D43379P	A05		2566Z		D04007P	A05		AE0401D	14	YD158-YR328		
D43379P	PERG	1F	2566Z		D04007P	PERG	1F	AE0401D	14	YD158-YR328		
D43379P	B19		2567B	24 Y2	D04009P	B09		AE0401D	15	YN501-YR328		
D43379P	A19		2567R	24 Y2	D04009P	A09		AE0401D	15	YN501-YR328		
D43379P	PERG	1F	2567Z		D04009P	PERG	1F	AE0401D	15	YN501-YR328		
AE0303A	44	W5723	RB2*	DISCONNECT BRACKET - E3-3 SHELF								
D43333P	B08		2502B	24 Y2	D41507J	42		AE0105A	03	YD158-YD170		
D43333P	A08		2502R	24 Y2	D41507J	41		AE0105A	03	YD158-YD170		
D43333P	PERG	1F	2502Z		D41507J	S/R		AE0105A	03	YD158-YD170		
D43333P	B10		2503B	24 Y2	D41507J	44		AE0105A	03	YD158-YR328		
D43333P	A10		2503R	24 Y2	D41507J	43		AE0105A	03	YD158-YR328		
D43333P	PERG	1F	2503Z		D41507J	S/R		AE0105A	03	YD158-YR328		

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0303A

Page 10

Nov 12/2012





From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
AE0303A	44	W5723	RB2*	DISCONNECT BRACKET - E3-3 SHELF (continued)								
D43333P	B07		2506B		24	Y2	D41507J	48		AE0105A	03	YD158-YR328
D43333P	A07		2506R		24	Y2	D41507J	47		AE0105A	03	YD158-YR328
D43333P	PERG	1F	2506Z				D41507J	S/R		AE0105A	03	YD158-YR328

For training purposes only!

## SPARE WIRE LIST

D280A108

91-21-12

Section AE0303A

Page 11 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description		To		Term	Type	Matewith	Pos	Effectivity
Equip	Term	Type	Wire No.	GA	TY	Equip						
<b>AE0401A</b>	<b>13</b>	<b>W6412</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E4-1 SHELF</b>								
D41830P	A06		0029	20	PA	D41832P		7		AP0600B	07	YC067-YL967, YR301-YR323, YR325-YR328
<b>AE0401A</b>	<b>16</b>	<b>W5191</b>	<b>NB3</b>	<b>DISCONNECT BRACKET - E4-1 SHELF</b>								
D04289P	A06		0035	22	PA	D43331P		A11		AE0303A	38	YL951-YR328
D04289P	A01		0036	24	B6	D43331P		A09		AE0303A	38	YL951-YR328
D04289P	A06		0038	24	G6	D43331P		A05		AE0303A	38	YD158-YD170
D04289P	B12		2548B	24	M5	D43331P		B12		AE0303A	38	YL951-YR328
D04289P	A12		2548R	24	M5	D43331P		A12		AE0303A	38	YL951-YR328
D04289P	A13		2548ZI			D43331P		A13		AE0303A	38	YL951-YR328
D04289P	PERG	1F	2548ZO			D43331P		PERG	1F	AE0303A	38	YL951-YR328
D04289P	B10		2551B	24	M5	D43331P		B10		AE0303A	38	YD158-YD170
D04289P	A10		2551R	24	M5	D43331P		A10		AE0303A	38	YD158-YD170
D04289P	B11		2551ZI			D43331P		B11		AE0303A	38	YD158-YD170
D04289P	PERG	1F	2551ZO			D43331P		PERG	1F	AE0303A	38	YD158-YD170
<b>AE0401A</b>	<b>19</b>	<b>W5191</b>	<b>NB3</b>	<b>DISCONNECT BRACKET - E4-1 SHELF</b>								
D04285P	A16		0024	22	PA	D04273J		8		AE0104A	17	YD158-YD170
D04285P	A05		0037	22	CQ	D40119P		B08		AE0602A	07	YL951-YR328
D04285P	B14		2549B	24	M5	D40119P		B07		AE0602A	07	YL951-YR328
D04285P	A14		2549R	24	M5	D40119P		A07		AE0602A	07	YL951-YR328
D04285P	A16		2549ZI			D40119P		A08		AE0602A	07	YL951-YR328
D04285P	PERG	1F	2549ZO			D40119P		PERG	1F	AE0602A	07	YL951-YR328
D04285P	B14		2550B	24	M5	D04277P		B03		AE0301A	37	YD158-YD170
D04285P	A14		2550R	24	M5	D04277P		A03		AE0301A	37	YD158-YD170
D04285P	B15		2550ZI			D04277P		B04		AE0301A	37	YD158-YD170
D04285P	PERG	1F	2550ZO			D04277P		PERG	1F	AE0301A	37	YD158-YD170
<b>AE0401A</b>	<b>21</b>	<b>W5189</b>	<b>NA3</b>	<b>DISCONNECT BRACKET - E4-1 SHELF</b>								
D08123P	A17		0018	22	PA	D43315P		A01		AE0303A	22	YD158-YD170
D08123P	B17		0019	22	PA	D43315P		A02		AE0303A	22	YD158-YD170
D08123P	A18		0020	22	PA	D43315P		A03		AE0303A	22	YD158-YD170
D08123P	B16		0073	22	PA	D04195P		55		AE0103A	18	YL951-YN260, YR301-YR328
D08123P	B19		2538B	24	M5	D43315P		B04		AE0303A	22	YD158-YD170
D08123P	A19		2538R	24	M5	D43315P		A04		AE0303A	22	YD158-YD170
D08123P	B20		2538ZI			D43315P		B03		AE0303A	22	YD158-YD170

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0401A

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To						
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity	
AE0401A	21	W5189	NA3	DISCONNECT BRACKET - E4-1 SHELF (continued)							
D08123P	PERG	1F	2538ZO		D43315P	PERG	1F	AE0303A	22	YD158-YD170	
AE0401A	24	W5461	LA2	DISCONNECT BRACKET - E4-1 SHELF							
D44161P	B04		0057	24 PK	D42361P	B06		AE0302A	43	ALL	
D44161P	A06		0058	24 PK	D42361P	A06		AE0302A	43	ALL	
D44161P	A16		0083	24 PK	D42361P	A20		AE0302A	43	YN231-YN235	
D44161P	A04		0086	24 PK	D42261P	A06		AE0302A	41	YL951-YL999	
D44161P	B11		2018B	24 Y2	D41561J	B11		AE0502A	17	YD158-YR328	
D44161P	A11		2018R	24 Y2	D41561J	A11		AE0502A	17	YD158-YR328	
D44161P	PERG	1F	2018Z		D41561J	PERG	1F	AE0502A	17	YD158-YR328	
D44161P	B13		2029B	24 Y2	D45261J	B15		AE0502A	18	ALL	
D44161P	B12		2029R	24 Y2	D45261J	B14		AE0502A	18	ALL	
D44161P	PERG	1F	2029Z		D45261J	PERG	1F	AE0502A	18	ALL	
D44161P	B17		2030B	24 Y2	D45261J	B17		AE0502A	18	ALL	
D44161P	B16		2030R	24 Y2	D45261J	B16		AE0502A	18	ALL	
D44161P	PERG	1F	2030Z		D45261J	PERG	1F	AE0502A	18	ALL	
D44161P	B07		2031B	24 Y2	D46461P	B07		AE0101A	22	YC051-YL959, YN231-YN235	
D44161P	B06		2031R	24 Y2	D46461P	B06		AE0101A	22	YC051-YL959, YN231-YN235	
D44161P	PERG	1F	2031Z		D46461P	PERG	1F	AE0101A	22	YC051-YL959, YN231-YN235	
D44161P	B02		2046B	22 X2	D41561J	B02		AE0502A	17	YL951-YL999	
D44161P	A02		2046R	22 X2	D41561J	A02		AE0502A	17	YL951-YL999	
D44161P	PERG	1F	2046Z		D41561J	PERG	1F	AE0502A	17	YL951-YL999	
D44161P	A05		2104B	24 Y2	D42361P	B05		AE0302A	43	YC051-YC058	
D44161P	A04		2104R	24 Y2	D42361P	A12		AE0302A	43	YC051-YC058	
D44161P	PERG	1F	2104Z		D42361P	PERG	1F	AE0302A	43	YC051-YC058	
AE0401A	25	W5337	SN2	DISCONNECT BRACKET - E4-1 SHELF							
D04161P	A07		0001	22 PA	D04499P	1		D04499J		YC051-YL954, YN231-YN235	
D04161P	A07		0001	22 PA	D40664	24		DM0035		YL955-YL999, YN236, YN501-YR328	

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0401A

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
<b>AE0401A</b>		<b>29</b>	<b>W5104</b>	<b>LA2</b>	<b>DISCONNECT BRACKET - E4-1 SHELF</b>							
D40244P		B05		5520	20	PA	D40056P	18		AB0536L	02	YC051-YN236, YN501-YR323, YR325-YR328
D40244P		B06		5521	20	PA	D40056P	19		AB0536L	02	YC051-YN236, YN501-YR323, YR325-YR328
<b>AE0401A</b>		<b>31</b>	<b>W6214</b>	<b>LA2*</b>	<b>DISCONNECT BRACKET - E4-1 SHELF</b>							
D40328P		A03		5501	22	PA	D40444P	1		AP0600A	04	YC051-YD157
D40328P		B02		5544	20	PA	D40444P	4		AP0600A	04	YC051-YR323, YR325-YR328
D40328P		B03		5545	20	PA	D40444P	5		AP0600A	04	YC051-YR323, YR325-YR328
<b>AE0401A</b>		<b>32</b>	<b>W2401</b>	<b>LN2</b>	<b>DISCONNECT BRACKET - E4-1 SHELF</b>							
D04721P		B10		0020	24	PK	D00551	T		P008-66		YD158-YN235
D04721P		B10		0020	24	PK	D00551	T		P008-66		YN236-YR328
<b>AE0401A</b>		<b>33</b>	<b>W6412</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E4-1 SHELF</b>							
D41010P		18		0008	20	PA	D40386P	27		AP0600B	14	YC067-YN236, YN501-YR323, YR325-YR328
D41010P		19		0009	20	PA	D40386P	31		AP0600B	14	YC067-YN236, YN501-YR323, YR325-YR328
D41010P		20		0010	20	PA	D40386P	32		AP0600B	14	YC067-YN236, YN501-YR323, YR325-YR328
D41010P		2		0508	20	PA	D40394P	A09		AE0301A	34	YC051-YN236, YN501-YR323, YR325-YR328
<b>AE0401A</b>		<b>38</b>	<b>W6168</b>	<b>SB2*</b>	<b>DISCONNECT BRACKET - E4-1 SHELF</b>							
D40144P		A01		2601B	20	VG	D39930	2		AD0520		ALL
D40144P		B01		2601R	20	VG	D39930	3		AD0520		ALL
D40144P	PERG		1F	2601Z			D39930	S/R		AD0520		ALL
D40144P		A02		2602B	20	VG	D39930	4		AD0520		ALL

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0401A

Page 3

Nov 12/2012

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AE0401A</b>	<b>38</b>	<b>W6168</b>	<b>SB2*</b>	<b>DISCONNECT BRACKET - E4-1 SHELF (continued)</b>						
D40144P	B02		2602R	20 VG	D39930	5		AD0520		ALL
D40144P	PERG	1F	2602Z		D39930	S/R		AD0520		ALL
<b>AE0401A</b>	<b>42</b>	<b>W6564</b>	<b>SN2*</b>	<b>DISCONNECT BRACKET - E4-1 SHELF</b>						
D40158P	A02		2601B	20 VG	D39910	6		AD0520		ALL
D40158P	B02		2601R	20 VG	D39910	5		AD0520		ALL
D40158P	PERG	1F	2601Z		D39910	S/R		AD0520		ALL
<b>AE0401A</b>	<b>46</b>	<b>W6214</b>	<b>LA2*</b>	<b>DISCONNECT BRACKET - E4-1 SHELF</b>						
D40378P	B15		5536	20 PA	D40380P	B15		AE0202A	26	YC051-YR323, YR325-YR328
D40378P	B16		5540	20 PA	D40444P	9		AP0600A	04	YC051-YR323, YR325-YR328
D40378P	B14		5541	20 PA	D40444P	10		AP0600A	04	YC051-YR323, YR325-YR328
<b>AE0401A</b>	<b>50</b>	<b>W6162</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E4-1 SHELF</b>						
D40156P	A14		2611B	20 PB	D39922	14		AD0520		YC054-YR328
D40156P	B14		2611R	20 PB	D39922	5		AD0520		YC054-YR328
D40156P	A15		2612B	20 PB	D39922	31		AD0520		YC054-YR328
D40156P	B15		2612R	20 PB	D39922	30		AD0520		YC054-YR328
<b>AE0401A</b>	<b>51</b>	<b>W2218</b>	<b>RB2</b>	<b>DISCONNECT BRACKET - E4-1 SHELF</b>						
D40542P	B20		8006	20 PA	D40538P	4		AP1800A	05	YC051-YD170, YN501-YR328
<b>AE0401A</b>	<b>52</b>	<b>W6412</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E4-1 SHELF</b>						
D40390P	A06		2001B	24 Y2	D40392P	B18		AE0302A	45	YD158-YN236, YN501-YR323, YR325-YR328
D40390P	A05		2001R	24 Y2	D40392P	B17		AE0302A	45	YD158-YN236, YN501-YR323, YR325-YR328
D40390P	PERG	1F	2001Z		D40392P	PERG	1F	AE0302A	45	YD158-YN236, YN501-YR323, YR325-YR328

## SPARE WIRE LIST

D280A108

91-21-12

Section AE0401A

Page 4

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To						
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity	
<b>AE0401A</b>	<b>52</b>	<b>W6412</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E4-1 SHELF (continued)</b>							
D40390P	B03		5504	24 PK	D40392P	B03		AE0302A	45	YC051-YN236, YN501-YR323, YR325-YR328	
D40390P	A19		5508	22 PA	D40386P	9		AP0600B	14	YC051-YL999, YR301-YR323, YR325-YR328	
D40390P	A17		5529	20 PA	D40392P	A14		AE0302A	45	YC051-YN236, YN501-YR323, YR325-YR328	
D40390P	A18		5530	20 PA	D40392P	B14		AE0302A	45	YC051-YD157	
D40390P	B10		5548	24 PK	D40392P	A16		AE0302A	45	YC067-YD157	
D40390P	B14		6012	22 CQ	D40388P	B07		AE0402A	24	YC051-YD157	

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0401A

Page 5 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
I AE0401D		13	W5331	NA2	DISCONNECT BRACKET - E4-1 SHELF							
D04115P		A20		0030	22	PA	D43345P	A20		AE0303A	17	YL955-YL999, YN236-YN260
D04115P		B20		0031	22	PA	D43345P	B20		AE0303A	17	YL955-YL999, YN236-YN260
I D04115P		B07		2501B	24	Y2	D43345P	B07		AE0303A	17	YN501-YR328
I D04115P		A07		2501R	24	Y2	D43345P	A07		AE0303A	17	YN501-YR328
I D04115P	PERG	1F		2501Z			D43345P	PERG	1F	AE0303A	17	YN501-YR328
D04115P		B09		2503B	24	Y2	D43345P	B09		AE0303A	17	YD158-YN260
D04115P		A09		2503R	24	Y2	D43345P	A09		AE0303A	17	YD158-YN260
D04115P	PERG	1F		2503Z			D43345P	PERG	1F	AE0303A	17	YD158-YN260
I D04115P		B10		2504B	24	Y2	D43345P	B10		AE0303A	17	YD158-YR328
I D04115P		A10		2504R	24	Y2	D43345P	A10		AE0303A	17	YD158-YR328
I D04115P	PERG	1F		2504Z			D43345P	PERG	1F	AE0303A	17	YD158-YR328
I D04115P		B06		2505B	24	Y2	D43345P	B06		AE0303A	17	YD158-YR328
I D04115P		A06		2505R	24	Y2	D43345P	A06		AE0303A	17	YD158-YR328
I D04115P	PERG	1F		2505Z			D43345P	PERG	1F	AE0303A	17	YD158-YR328
I D04115P		B05		2506B	24	Y2	D43345P	B05		AE0303A	17	YD158-YD170, YN501-YR328
D04115P		A05		2506R	24	Y2	D43345P	A05		AE0303A	17	YD158-YD170, YN501-YR328
I D04115P	PERG	1F		2506Z			D43345P	PERG	1F	AE0303A	17	YD158-YD170, YN501-YR328
I D04115P		B04		2507B	24	Y2	D43345P	B04		AE0303A	17	YN501-YR328
I D04115P		A04		2507R	24	Y2	D43345P	A04		AE0303A	17	YN501-YR328
I D04115P	PERG	1F		2507Z			D43345P	PERG	1F	AE0303A	17	YN501-YR328
I D04115P		B11		2508B	24	Y2	D43345P	B11		AE0303A	17	YD158-YR328
I D04115P		A11		2508R	24	Y2	D43345P	A11		AE0303A	17	YD158-YR328
I D04115P	PERG	1F		2508Z			D43345P	PERG	1F	AE0303A	17	YD158-YR328
I D04115P		B14		2511B	24	Y2	D43345P	B14		AE0303A	17	YD158-YR328
I D04115P		A14		2511R	24	Y2	D43345P	A14		AE0303A	17	YD158-YR328
I D04115P	PERG	1F		2511Z			D43345P	PERG	1F	AE0303A	17	YD158-YR328
I D04115P		B16		2524B	24	Y2	D43345P	B16		AE0303A	17	YD158-YR328
I D04115P		A16		2524R	24	Y2	D43345P	A16		AE0303A	17	YD158-YR328
I D04115P	PERG	1F		2524Z			D43345P	PERG	1F	AE0303A	17	YD158-YR328
I D04115P		B01		2527B	24	Y2	D43345P	B01		AE0303A	17	YD158-YN260
I D04115P		A01		2527R	24	Y2	D43345P	A01		AE0303A	17	YD158-YN260
I D04115P	PERG	1F		2527Z			D43345P	PERG	1F	AE0303A	17	YD158-YN260
I D04115P		B02		2528B	22	X2	D43345P	B02		AE0303A	17	YL951-YN260

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0401D

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
<b>AE0401D</b>	<b>13</b>	<b>W5331</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E4-1 SHELF (continued)</b>								
D04115P	A02		2528R	22 X2	D43345P	A02		AE0303A	17	YL951-YN260		
D04115P	PERG	1F	2528Z		D43345P	PERG	1F	AE0303A	17	YL951-YN260		
D04115P	B18		2529B	24 Y2	D43345P	B18		AE0303A	17	YL951-YN260		
D04115P	A18		2529R	24 Y2	D43345P	A18		AE0303A	17	YL951-YN260		
D04115P	PERG	1F	2529Z		D43345P	PERG	1F	AE0303A	17	YL951-YN260		
D04115P	B19		2530B	24 Y2	D43345P	B19		AE0303A	17	YL951-YN260		
D04115P	A19		2530R	24 Y2	D43345P	A19		AE0303A	17	YL951-YN260		
D04115P	PERG	1F	2530Z		D43345P	PERG	1F	AE0303A	17	YL951-YN260		
D04115P	B03		2532B	24 Y2	D43345P	B03		AE0303A	17	YD158-YD170, YN501-YR328		
D04115P	A03		2532R	24 Y2	D43345P	A03		AE0303A	17	YN501-YR328		
D04115P	PERG	1F	2532Z		D43345P	PERG	1F	AE0303A	17	YN501-YR328		
D04115P	B04		2563B	24 Y2	D43345P	B04		AE0303A	17	YL955-YL999, YN236-YN260		
D04115P	A04		2563R	24 Y2	D43345P	A04		AE0303A	17	YL955-YL999, YN236-YN260		
D04115P	PERG	1F	2563Z		D43345P	PERG	1F	AE0303A	17	YL955-YL999, YN236-YN260		
D04115P	B05		2564B	24 Y2	D43345P	B05		AE0303A	17	YL955-YL999, YN236-YN260		
D04115P	A05		2564R	24 Y2	D43345P	A05		AE0303A	17	YL955-YL999, YN236-YN260		
D04115P	PERG	1F	2564Z		D43345P	PERG	1F	AE0303A	17	YL955-YL999, YN236-YN260		
<b>AE0401D</b>	<b>14</b>	<b>W5335</b>	<b>NB2</b>	<b>DISCONNECT BRACKET - E4-1 SHELF</b>								
D04007P	A01		0001	22 PA	D43379P	A01		AE0303A	43	YD158-YR328		
D04007P	A02		0003	22 PA	D43379P	A02		AE0303A	43	YD158-YR328		
D04007P	B02		0004	22 PA	D43379P	B02		AE0303A	43	YD158-YR328		
D04007P	B10		2503B	24 Y2	D43379P	B10		AE0303A	43	YD158-YR328		
D04007P	A10		2503R	24 Y2	D43379P	A10		AE0303A	43	YD158-YR328		
D04007P	PERG	1F	2503Z		D43379P	PERG	1F	AE0303A	43	YD158-YR328		
D04007P	B07		2510B	24 Y2	D43379P	B07		AE0303A	43	YD158-YR328		
D04007P	A07		2510R	24 Y2	D43379P	A07		AE0303A	43	YD158-YR328		
D04007P	PERG	1F	2510Z		D43379P	PERG	1F	AE0303A	43	YD158-YR328		
D04007P	B06		2566B	24 M5	D43379P	B06		AE0303A	43	YD158-YR328		
D04007P	A06		2566R	24 M5	D43379P	A06		AE0303A	43	YD158-YR328		
D04007P	A05		2566ZI		D43379P	A05		AE0303A	43	YD158-YR328		

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0401D

Page 2

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To						
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity	
AE0401D	14	W5335	NB2	DISCONNECT BRACKET - E4-1 SHELF (continued)							
D04007P	PERG	1F	2566ZO		D43379P	PERG	1F	AE0303A	43	YD158-YR328	
AE0401D	15	W5335	NB2	DISCONNECT BRACKET - E4-1 SHELF							
D04009P	B01		2504B	24 Y2	D43379P	B11		AE0303A	43	YN501-YR328	
D04009P	A01		2504R	24 Y2	D43379P	A11		AE0303A	43	YN501-YR328	
D04009P	PERG	1F	2504Z		D43379P	PERG	1F	AE0303A	43	YN501-YR328	
D04009P	B03		2506B	24 Y2	D43379P	B13		AE0303A	43	YN501-YR328	
D04009P	A03		2506R	24 Y2	D43379P	A13		AE0303A	43	YN501-YR328	
D04009P	PERG	1F	2506Z		D43379P	PERG	1F	AE0303A	43	YN501-YR328	
D04009P	B04		2507B	24 Y2	D43379P	B14		AE0303A	43	YN501-YR328	
D04009P	A04		2507R	24 Y2	D43379P	A14		AE0303A	43	YN501-YR328	
D04009P	PERG	1F	2507Z		D43379P	PERG	1F	AE0303A	43	YN501-YR328	
D04009P	B05		2508B	24 Y2	D43379P	B15		AE0303A	43	YN501-YR328	
D04009P	A05		2508R	24 Y2	D43379P	A15		AE0303A	43	YN501-YR328	
D04009P	PERG	1F	2508Z		D43379P	PERG	1F	AE0303A	43	YN501-YR328	
D04009P	B08		2513B	24 Y2	D43379P	B18		AE0303A	43	YL951-YN260	
D04009P	A08		2513R	24 Y2	D43379P	A18		AE0303A	43	YL951-YN260	
D04009P	PERG	1F	2513Z		D43379P	PERG	1F	AE0303A	43	YL951-YN260	
D04009P	B09		2567B	24 Y2	D43379P	B19		AE0303A	43	YN501-YR328	
D04009P	A09		2567R	24 Y2	D43379P	A19		AE0303A	43	YN501-YR328	
D04009P	PERG	1F	2567Z		D43379P	PERG	1F	AE0303A	43	YN501-YR328	
AE0401D	16	W5331	NA2	DISCONNECT BRACKET - E4-1 SHELF							
D04117P	A05		0022	24 PK	D43347P	A05		AE0303A	18	YD158-YR328	
D04117P	B05		0023	24 PK	D43347P	B05		AE0303A	18	YD158-YR328	
D04117P	A06		0024	24 PK	D43347P	A06		AE0303A	18	YD158-YR328	
D04117P	B06		0025	24 PK	D43347P	B06		AE0303A	18	YD158-YR328	
D04117P	B10		2516B	24 Y2	D43347P	B10		AE0303A	18	YN501-YR328	
D04117P	A10		2516R	24 Y2	D43347P	A10		AE0303A	18	YN501-YR328	
D04117P	PERG	1F	2516Z		D43347P	PERG	1F	AE0303A	18	YN501-YR328	
D04117P	B14		2520B	24 Y2	D43347P	B14		AE0303A	18	YN501-YR328	
D04117P	A14		2520R	24 Y2	D43347P	A14		AE0303A	18	YN501-YR328	
D04117P	PERG	1F	2520Z		D43347P	PERG	1F	AE0303A	18	YN501-YR328	
D04117P	B15		2521B	24 Y2	D43347P	B15		AE0303A	18	YN501-YR328	
D04117P	A15		2521R	24 Y2	D43347P	A15		AE0303A	18	YN501-YR328	
D04117P	PERG	1F	2521Z		D43347P	PERG	1F	AE0303A	18	YN501-YR328	
D04117P	B16		2522B	24 Y2	D43347P	B16		AE0303A	18	YN501-YR328	
D04117P	A16		2522R	24 Y2	D43347P	A16		AE0303A	18	YN501-YR328	

## SPARE WIRE LIST

D280A108

91-21-12

Section AE0401D

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
<b>AE0401D</b>	<b>16</b>	<b>W5331</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E4-1 SHELF (continued)</b>								
D04117P	PERG	1F	2522Z			D43347P	PERG	1F	AE0303A	18	YN501-YR328	
D04117P	B20		2561B	24	M5	D43347P	B20		AE0303A	18	YD158-YR328	
D04117P	A20		2561R	24	M5	D43347P	A20		AE0303A	18	YD158-YR328	
D04117P	A19		2561ZI			D43347P	A19		AE0303A	18	YD158-YR328	
D04117P	PERG	1F	2561ZO			D43347P	PERG	1F	AE0303A	18	YD158-YR328	
D04117P	B04		2565B	24	Y2	D43347P	B04		AE0303A	18	YL951-YL999, YN236-YN260	
D04117P	A04		2565R	24	Y2	D43347P	A04		AE0303A	18	YL951-YL999, YN236-YN260	
D04117P	PERG	1F	2565Z			D43347P	PERG	1F	AE0303A	18	YL951-YL999, YN236-YN260	

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0401D

Page 4 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description							
	Equip	Term	Type	Wire No.	GA	TY	To	Equip	Term	Type	Matewith	Pos	Effectivity
I	AE0402A		01	W5719	LA2	DISCONNECT BRACKET - E4-2 SHELF							
I	D42111P		B02		0030	22	PA	D41125P	B07		AE0101A	25	ALL
I	AE0402A		02	W5248	LN2*	DISCONNECT BRACKET - E4-2 SHELF							
I	D40584P		A01		0499	20	PA	D40500J	1		AB0500DL	05	ALL
I	D40584P		B01		0500	20	PA	D40500J	3		AB0500DL	05	ALL
I	AE0402A		07	W5110	LA2	DISCONNECT BRACKET - E4-2 SHELF							
I	D40338P		A10		0516	20	PA	D40340P	B01		AE0201A	19	ALL
I	AE0402A		24	W6412	RB2*	DISCONNECT BRACKET - E4-2 SHELF							
I	D40388P		A16		5533	20	PA	D40386P	24		AP0600B	14	YC051-YL999, YR301-YR323, YR325-YR328
I	D40388P		B07		6012	22	CQ	D40390P	B14		AE0401A	52	YC051-YD157
I	AE0402A		27	W6164	RB1*	DISCONNECT BRACKET - E4-2 SHELF							
I	D40720P		A09		2602B	20	PB	D39934	26		AD0520		YC051-YN236, YN501-YR328
I	D40720P		B09		2602R	20	PB	D39934	25		AD0520		YC051-YN236, YN501-YR328
I	AE0402A		33	W5160	RB2*	DISCONNECT BRACKET - E4-2 SHELF							
I	D40472P		B06		2460B	22	PB	D10988	60		M02061		YC051-YD158, YL951-YR328
I	D40472P		B05		2460R	22	PB	D10988	61		M02061		YC051-YD158, YL951-YR328
I	AE0402A		37	W5160	RB2*	DISCONNECT BRACKET - E4-2 SHELF							
I	D40474P		B02		0530	22	PA	D40694P	16		AJ0024	07	YC051-YD158, YL951-YR328

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0402A

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith	Pos	Bundle	Sep	Description		To					Effectivity	
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos		
I	AE0502A	02	W5615	NN2	DISCONNECT BRACKET - E5-2 SHELF								
	D45001J	B07		2504B	22	X2	D06105P	8		AE0601A	09	YC056-YC057	
	D45001J	A07		2504R	22	X2	D06105P	7		AE0601A	09	YC056-YC057	
	D45001J	PERG	1F	2504Z			D06105P	S/R		AE0601A	09	YC056-YC057	
I	D45001J	B12		2509B	24	Y2	D06105P	16		AE0601A	09	YC051-YD157	
I	D45001J	A12		2509R	24	Y2	D06105P	15		AE0601A	09	YC051-YD157	
I	D45001J	PERG	1F	2509Z			D06105P	S/R		AE0601A	09	YC051-YD157	
I	AE0502A	03	W5205	SA2	DISCONNECT BRACKET - E5-2 SHELF								
	D45209J	A10		0013	22	PA	D45203P	A09		AE0101A	31	YL968-YL999, YN236-YN260	
	D45209J	B10		0014	22	PA	D45203P	B09		AE0101A	31	YL968-YL999, YN236-YN260	
	D45209J	A05		0025	20	PA	D45205P	A05		AE0301A	18	YC051-YD158, YL951-YR328	
	D45209J	B03		2001B	22	X2	D45205P	B03		AE0301A	18	YC051-YD158, YL951-YR328	
	D45209J	B02		2001R	22	X2	D45205P	B02		AE0301A	18	YC051-YD158, YL951-YR328	
	D45209J	PERG	1F	2001Z			D45205P	PERG	1F	AE0301A	18	YC051-YD158, YL951-YR328	
	D45209J	A07		2031B	24	Y2	D45201J	13		AE0102A	10	YC051-YD158, YL951-YR328	
	D45209J	A06		2031R	24	Y2	D45201J	12		AE0102A	10	YC051-YD158, YL951-YR328	
	D45209J	PERG	1F	2031Z			D45201J	S/R		AE0102A	10	YC051-YD158, YL951-YR328	
I	AE0502A	04	W5163	RB2*	DISCONNECT BRACKET - E5-2 SHELF								
I	D45247J	A08		0013	22	PA	D43157P	A20		AE0301A	29	ALL	
I	D45247J	A16		0021	20	PA	D43147P	A01		AE0301A	28	ALL	
I	D45247J	A17		0022	20	PA	D43147P	A02		AE0301A	28	YC051-YD157	
I	D45247J	A18		0023	20	PA	D43147P	A12		AE0301A	28	YC051-YD157	
I	AE0502A	05	W5163	RB2*	DISCONNECT BRACKET - E5-2 SHELF								
I	D45257J	A15		0004	22	PA	D41157P	A18		AE0101B	12	ALL	
I	D45257J	A07		0039	22	PA	D41157P	B20		AE0101B	12	ALL	
I	D45257J	A02		2501B	24	Y2	D41157P	A02		AE0101B	12	YC051-YD157, YL951-YR328	

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0502A

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AE0502A</b>	<b>05</b>	<b>W5163</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - E5-2 SHELF (continued)</b>						
D45257J	A01		2501R	24 Y2	D41157P	A01		AE0101B	12	YC051-YD157, YL951-YR328
D45257J	PERG	1F	2501Z		D41157P	PERG	1F	AE0101B	12	YC051-YD157, YL951-YR328
D45257J	A10		2508B	24 Y2	D43157P	A09		AE0301A	29	YC051-YD157, YL951-YR328
D45257J	A09		2508R	24 Y2	D43157P	A08		AE0301A	29	YC051-YD157, YL951-YR328
D45257J	PERG	1F	2508Z		D43157P	PERG	1F	AE0301A	29	YC051-YD157, YL951-YR328
D45257J	A12		2509B	24 Y2	D43157P	A11		AE0301A	29	YC051-YD157, YL951-YR328
D45257J	A11		2509R	24 Y2	D43157P	A10		AE0301A	29	YC051-YD157, YL951-YR328
D45257J	PERG	1F	2509Z		D43157P	PERG	1F	AE0301A	29	YC051-YD157, YL951-YR328
<b>AE0502A</b>	<b>06</b>	<b>W5463</b>	<b>RB2</b>	<b>DISCONNECT BRACKET - E5-2 SHELF</b>						
D45263J	A05		0022	22 PA	D41463J	14		AE0104A	11	ALL
D45263J	B07		2013B	22 X2	D43263P	B07		AE0302A	44	YC051-YD157
D45263J	B07		2013B	24 Y2	D43263P	B07		AE0302A	44	YD158-YR328
D45263J	A07		2013R	22 X2	D43263P	A07		AE0302A	44	YC051-YD157
D45263J	A07		2013R	24 Y2	D43263P	A07		AE0302A	44	YD158-YR328
D45263J	PERG	1F	2013Z		D43263P	PERG	1F	AE0302A	44	ALL
D45263J	B08		2014B	24 Y2	D43263P	B08		AE0302A	44	YD158-YR328
D45263J	A08		2014R	24 Y2	D43263P	A08		AE0302A	44	YD158-YR328
D45263J	PERG	1F	2014Z		D43263P	PERG	1F	AE0302A	44	YD158-YR328
D45263J	B14		2019B	24 Y2	D43263P	B14		AE0302A	44	YC051-YL959, YN231-YN235
D45263J	A14		2019R	24 Y2	D43263P	A14		AE0302A	44	YC051-YL959, YN231-YN235
D45263J	PERG	1F	2019Z		D43263P	PERG	1F	AE0302A	44	YC051-YL959, YN231-YN235
D45263J	A20		2022B	24 Y2	D42363P	A10		AE0302A	53	ALL
D45263J	A19		2022R	24 Y2	D42363P	A09		AE0302A	53	ALL
D45263J	PERG	1F	2022Z		D42363P	PERG	1F	AE0302A	53	ALL

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0502A

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith	Pos	Bundle	Sep	Description		To					Pos	Effectivity	
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith				
I	AE0502A	07	W2135	RB2	DISCONNECT BRACKET - E5-2 SHELF									
I	D45237J	B20		0034	22	PA	D01817	CAP	Y	P005-28		ALL		
I	AE0502A	11	W5121	NB2	DISCONNECT BRACKET - E5-2 SHELF									
I	D45213J	B02		0023	24	PK	D43323P	B04		AE0303A	42	YD158		
I	D45213J	B11		2044B	24	Y2	D45147P	B11		AE0302A	56	YC051-YD157		
I	D45213J	A11		2044R	24	Y2	D45147P	A11		AE0302A	56	YC051-YD157		
I	D45213J	PERG	1F	2044Z			D45147P	PERG	1F	AE0302A	56	YC051-YD157		
	D45213J	B12		2057B	24	Y2	D43323P	B12		AE0303A	42	YD158		
	D45213J	A12		2057R	24	Y2	D43323P	A12		AE0303A	42	YD158		
	D45213J	PERG	1F	2057Z			D43323P	PERG	1F	AE0303A	42	YD158		
	D45213J	B13		2058B	24	Y2	D43323P	B13		AE0303A	42	YD158		
	D45213J	A13		2058R	24	Y2	D43323P	A13		AE0303A	42	YD158		
	D45213J	PERG	1F	2058Z			D43323P	PERG	1F	AE0303A	42	YD158		
	D45213J	B16		2064B	24	Y2	D43323P	B16		AE0303A	42	YD158		
	D45213J	A16		2064R	24	Y2	D43323P	A16		AE0303A	42	YD158		
	D45213J	PERG	1F	2064Z			D43323P	PERG	1F	AE0303A	42	YD158		
I	AE0502A	12	W5111	NA2	DISCONNECT BRACKET - E5-2 SHELF									
I	D45211J	B10		2063B	24	Y2	D43321P	B09		AE0303A	13	YC051-YD157		
I	D45211J	B10		2063B	24	Y2	D43321P	B20		AE0303A	13	YD158-YL967, YN231-YN235, YN501-YR328		
I	D45211J	A10		2063R	24	Y2	D43321P	A09		AE0303A	13	YC051-YD157		
I	D45211J	A10		2063R	24	Y2	D43321P	A20		AE0303A	13	YD158-YL967, YN231-YN235, YN501-YR328		
I	D45211J	PERG	1F	2063Z			D43321P	PERG	1F	AE0303A	13	YC051-YL967, YN231-YN235, YN501-YR328		
I	D45211J	B07		2067B	24	Y2	D43321P	B06		AE0303A	13	YD158-YR328		
I	D45211J	A07		2067R	24	Y2	D43321P	A06		AE0303A	13	YD158-YR328		
I	D45211J	PERG	1F	2067Z			D43321P	PERG	1F	AE0303A	13	YD158-YR328		
I	D45211J	B19		2071B	22	X2	D43321P	B19		AE0303A	13	YL951-YR328		
I	D45211J	A19		2071R	22	X2	D43321P	A19		AE0303A	13	YL951-YR328		
I	D45211J	PERG	1F	2071Z			D43321P	PERG	1F	AE0303A	13	YL951-YR328		
I	D45211J	B13		2072B	24	Y2	D45177P	B09		AE0302A	17	YC051-YD170		
I	D45211J	A13		2072R	24	Y2	D45177P	A09		AE0302A	17	YC051-YD170		
I	D45211J	PERG	1F	2072Z			D45177P	PERG	1F	AE0302A	17	YC051-YD170		

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0502A

Page 3

Nov 12/2012

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AE0502A</b>	<b>12</b>	<b>W5111</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E5-2 SHELF (continued)</b>						
D45211J	B14		2079B	24 Y2	D43321P	B04		AE0303A	13	YN501-YR328
D45211J	A14		2079R	24 Y2	D43321P	A04		AE0303A	13	YN501-YR328
D45211J	PERG	1F	2079Z		D43321P	PERG	1F	AE0303A	13	YN501-YR328
D45211J	B15		2080B	24 Y2	D43321P	B05		AE0303A	13	YD158-YR328
D45211J	A15		2080R	24 Y2	D43321P	A05		AE0303A	13	YD158-YR328
D45211J	PERG	1F	2080Z		D43321P	PERG	1F	AE0303A	13	YD158-YR328
D45211J	B02		2082B	24 Y2	D43321P	B10		AE0303A	13	YD158-YR328
D45211J	A02		2082R	24 Y2	D43321P	A10		AE0303A	13	YD158-YR328
D45211J	PERG	1F	2082Z		D43321P	PERG	1F	AE0303A	13	YD158-YR328
D45211J	B03		2083B	24 Y2	D43321P	B01		AE0303A	13	YN501-YR328
D45211J	A03		2083R	24 Y2	D43321P	A01		AE0303A	13	YN501-YR328
D45211J	PERG	1F	2083Z		D43321P	PERG	1F	AE0303A	13	YN501-YR328
D45211J	B04		2084B	24 Y2	D43321P	B02		AE0303A	13	YN501-YR328
D45211J	A04		2084R	24 Y2	D43321P	A02		AE0303A	13	YN501-YR328
D45211J	PERG	1F	2084Z		D43321P	PERG	1F	AE0303A	13	YN501-YR328
D45211J	B05		2085B	24 Y2	D43321P	B03		AE0303A	13	YN501-YR328
D45211J	A05		2085R	24 Y2	D43321P	A03		AE0303A	13	YN501-YR328
D45211J	PERG	1F	2085Z		D43321P	PERG	1F	AE0303A	13	YN501-YR328
D45211J	B17		2091B	24 Y2	D43321P	B17		AE0303A	13	YD158-YD170
D45211J	A17		2091R	24 Y2	D43321P	A17		AE0303A	13	YD158-YD170
D45211J	PERG	1F	2091Z		D43321P	PERG	1F	AE0303A	13	YD158-YD170
D45211J	B16		2092B	24 Y2	D43321P	B18		AE0303A	13	YD158-YN260
D45211J	A16		2092R	24 Y2	D43321P	A18		AE0303A	13	YD158-YN260
D45211J	PERG	1F	2092Z		D43321P	PERG	1F	AE0303A	13	YD158-YN260
D45211J	B18		2099B	24 Y2	D43321P	B15		AE0303A	13	YD158-YL967, YN231-YN235, YN501-YR328
D45211J	A18		2099R	24 Y2	D43321P	A15		AE0303A	13	YD158-YL967, YN231-YN235, YN501-YR328
D45211J	PERG	1F	2099Z		D43321P	PERG	1F	AE0303A	13	YD158-YL967, YN231-YN235, YN501-YR328
<b>AE0502A</b>	<b>14</b>	<b>W0521</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E5-2 SHELF</b>						
D45245P	B08		0214	22 PA	D45235P	B11		AE0502A	19	YC051-YD157

## SPARE WIRE LIST

D280A108

91-21-12

Section AE0502A

Page 4

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
I	AE0502A	14	W5161	LA2	DISCONNECT BRACKET - E5-2 SHELF							
I	D45245J	B15		0004	20	PA	D43145P	A05		AE0301A	15	ALL
I	D45245J	B08		0020	22	PA	D41155P	B14		AE0101A	20	YC051-YD157
	D45245J	B09		0021	22	PA	D41155P	B11		AE0101A	20	YC051-YC058
I	D45245J	B13		0027	20	PA	D43145P	A03		AE0301A	15	ALL
I	D45245J	B14		0028	20	PA	D43145P	A04		AE0301A	15	ALL
I	D45245J	B06		0042	22	PA	D41155P	B17		AE0101A	20	YC051-YD157
I	AE0502A	15	W5161	LA2	DISCONNECT BRACKET - E5-2 SHELF							
I	D45255J	A06		2503B	24	Y2	D41155P	A06		AE0101A	20	YD157-YR328
I	D45255J	A05		2503R	24	Y2	D41155P	A05		AE0101A	20	YD157-YR328
I	D45255J	PERG	1F	2503Z			D41155P	PERG	1F	AE0101A	20	YD157-YR328
I	D45255J	B20		2518B	24	Y2	D43155P	B02		AE0301A	16	ALL
I	D45255J	B19		2518R	24	Y2	D43155P	B01		AE0301A	16	ALL
I	D45255J	PERG	1F	2518Z			D43155P	PERG	1F	AE0301A	16	ALL
I	AE0502A	16	W5161	LA2	DISCONNECT BRACKET - E5-2 SHELF							
I	D45265J	B02		2523B	24	Y2	D43155P	B10		AE0301A	16	ALL
I	D45265J	B01		2523R	24	Y2	D43155P	B09		AE0301A	16	ALL
I	D45265J	PERG	1F	2523Z			D43155P	PERG	1F	AE0301A	16	ALL
I	AE0502A	17	W5461	LA2	DISCONNECT BRACKET - E5-2 SHELF							
	D41561J	B14		0059	24	PK	D42261P	B10		AE0302A	41	YD158-YD170
	D41561J	A16		0071	24	PK	D42261P	B05		AE0302A	41	YD158-YD170
	D41561J	B16		0078	22	PA	D42261P	A13		AE0302A	41	YN231-YN235
I	D41561J	B01		2003B	24	Y2	D42261P	B01		AE0302A	41	ALL
I	D41561J	A01		2003R	24	Y2	D42261P	A01		AE0302A	41	ALL
I	D41561J	PERG	1F	2003Z			D42261P	PERG	1F	AE0302A	41	ALL
I	D41561J	B15		2011B	24	Y2	D42261P	B15		AE0302A	41	ALL
I	D41561J	A15		2011R	24	Y2	D42261P	A15		AE0302A	41	ALL
I	D41561J	PERG	1F	2011Z			D42261P	PERG	1F	AE0302A	41	ALL
	D41561J	B02		2012B	24	Y2	D42261P	B02		AE0302A	41	YN231-YN235
	D41561J	A02		2012R	24	Y2	D42261P	A02		AE0302A	41	YN231-YN235
	D41561J	PERG	1F	2012Z			D42261P	PERG	1F	AE0302A	41	YN231-YN235
I	D41561J	B11		2018B	24	Y2	D44161P	B11		AE0401A	24	YD158-YR328
I	D41561J	A11		2018R	24	Y2	D44161P	A11		AE0401A	24	YD158-YR328
I	D41561J	PERG	1F	2018Z			D44161P	PERG	1F	AE0401A	24	YD158-YR328
	D41561J	B02		2046B	22	X2	D44161P	B02		AE0401A	24	YL951-YL999
	D41561J	A02		2046R	22	X2	D44161P	A02		AE0401A	24	YL951-YL999

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0502A

Page 5

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To						
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity	
AE0502A	17	W5461	LA2	DISCONNECT BRACKET - E5-2 SHELF (continued)							
D41561J	PERG	1F	2046Z		D44161P	PERG	1F	AE0401A	24	YL951-YL999	
AE0502A	18	W5461	LA2	DISCONNECT BRACKET - E5-2 SHELF							
D45261J	B11		0085	22 PA	D43261P	B06		AE0302A	40	YN231-YN235	
D45261J	A20		2028B	22 X2	D42261P	B20		AE0302A	41	YD158-YD170	
D45261J	A19		2028R	22 X2	D42261P	B19		AE0302A	41	YD158-YD170	
D45261J	PERG	1F	2028Z		D42261P	PERG	1F	AE0302A	41	YD158-YD170	
D45261J	B15		2029B	24 Y2	D44161P	B13		AE0401A	24	ALL	
D45261J	B14		2029R	24 Y2	D44161P	B12		AE0401A	24	ALL	
D45261J	PERG	1F	2029Z		D44161P	PERG	1F	AE0401A	24	ALL	
D45261J	B17		2030B	24 Y2	D44161P	B17		AE0401A	24	ALL	
D45261J	B16		2030R	24 Y2	D44161P	B16		AE0401A	24	ALL	
D45261J	PERG	1F	2030Z		D44161P	PERG	1F	AE0401A	24	ALL	
D45261J	B10		2032B	24 Y2	D43261P	B10		AE0302A	40	YL951-YR328	
D45261J	B09		2032R	24 Y2	D43261P	B09		AE0302A	40	YL951-YR328	
D45261J	PERG	1F	2032Z		D43261P	PERG	1F	AE0302A	40	YL951-YR328	
AE0502A	19	W0521	NA2	DISCONNECT BRACKET - E5-2 SHELF							
D45235P	B11		0214	22 PA	D45245P	B08		AE0502A	14	YC051-YD157	
AE0502A	19	W2035	NA2	DISCONNECT BRACKET - E5-2 SHELF							
D45235J	B11		0033	22 PA	TB0506X	A013	1A			YC051-YC052	
D45235J	B11		0033	22 PA	TB0506X	A013	%A			YC053-YD157	
AE0502A	21	W2597	NA2	DISCONNECT BRACKET - E5-2 SHELF							
D45225J	B20		0017	22 PA	D40625P	40		AP0600B	13	YD158-YR328	
D45225J	B04		2502B	22 X2	D40625P	12		AP0600B	13	YC059-YD170, YL955-YL999, YN236-YR328	
D45225J	B03		2502R	22 X2	D40625P	11		AP0600B	13	YC059-YD170, YL955-YL999, YN236-YR328	
D45225J	PERG	1F	2502Z		D40625P	S/R		AP0600B	13	YC059-YD170, YL955-YL999, YN236-YR328	
D45225J	A20		2509B	24 Y2	D40625P	7		AP0600B	13	YD158-YR328	
D45225J	A19		2509R	24 Y2	D40625P	6		AP0600B	13	YD158-YR328	

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0502A

Page 6

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
AE0502A	21	W2597	NA2	DISCONNECT BRACKET - E5-2 SHELF (continued)								
D45225J	PERG	1F	2509Z				D40625P	S/R		AP0600B	13	YD158-YR328
D45225J	B14		2513B		22	X2	D40625P	39		AP0600B	13	YD158-YR328
D45225J	B13		2513R		22	X2	D40625P	38		AP0600B	13	YD158-YR328
D45225J	PERG	1F	2513Z				D40625P	S/R		AP0600B	13	YD158-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0502A

Page 7 End

Nov 12/2012



From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
I	AE0601A	08	W3107	LN1	DISCONNECT BRACKET - E6-1 SHELF							
I	D41601P	2		0016	20	PA	D40165P	2		AP0600A	07	YC053-YD157
I	D41601P	3		0017	20	PA	D40165P	3		AP0600A	07	YC053-YD157
I	AE0601A	09	W0613	NN2	DISCONNECT BRACKET - E6-1 SHELF							
I	D06105J	16		2016B	24	Y2	D10857B	CAP	Y			YC051-YD157
I	D06105J	15		2016R	24	Y2	D10857B	CAP	Y			YC051-YD157
I	D06105J	S/R		2016Z			D10857B	DED				YC051-YD157
I	AE0601A	09	W5615	NN2	DISCONNECT BRACKET - E6-1 SHELF							
	D06105P	8		2504B	22	X2	D45001J	B07		AE0502A	02	YC056-YC057
	D06105P	7		2504R	22	X2	D45001J	A07		AE0502A	02	YC056-YC057
	D06105P	S/R		2504Z			D45001J	PERG	1F	AE0502A	02	YC056-YC057
I	D06105P	16		2509B	24	Y2	D45001J	B12		AE0502A	02	YC051-YD157
I	D06105P	15		2509R	24	Y2	D45001J	A12		AE0502A	02	YC051-YD157
I	D06105P	S/R		2509Z			D45001J	PERG	1F	AE0502A	02	YC051-YD157

## SPARE WIRE LIST

D280A108

91-21-12

Section AE0601A

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith	Pos	Bundle	Sep	Description		To						
	From Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
I	AE0602A	05	W5189	NA3	DISCONNECT BRACKET - E6-2 SHELF								
I	D40117P	B02		0055	22	PA	D04271P	A03		AE0301A	01	YL951-YL999, YR301-YR328	
I	AE0602A	07	W5191	NB3	DISCONNECT BRACKET - E6-2 SHELF								
I	D40119P	B08		0037	22	CQ	D04285P	A05		AE0401A	19	YL951-YR328	
I	D40119P	B07		2549B	24	M5	D04285P	B14		AE0401A	19	YL951-YR328	
I	D40119P	A07		2549R	24	M5	D04285P	A14		AE0401A	19	YL951-YR328	
I	D40119P	A08		2549ZI			D04285P	A16		AE0401A	19	YL951-YR328	
I	D40119P	PERG	1F	2549ZO			D04285P	PERG	1F	AE0401A	19	YL951-YR328	
I	AE0602A	08	W5105	NB2	DISCONNECT BRACKET - E6-2 SHELF								
I	D40115P	A02		0001	22	PA	D43361P	A02		AE0303A	10	YL951-YR328	
I	D40115P	B05		2502B	24	Y2	D43361P	B10		AE0303A	10	YL951-YL999, YR301-YR328	
I	D40115P	A05		2502R	24	Y2	D43361P	A10		AE0303A	10	YL951-YL999, YR301-YR328	
I	D40115P	PERG	1F	2502Z			D43361P	PERG	1F	AE0303A	10	YL951-YL999, YR301-YR328	
I	D40115P	B04		2503B	24	Y2	D43361P	B07		AE0303A	10	YL951-YL999, YR301-YR328	
I	D40115P	A04		2503R	24	Y2	D43361P	A07		AE0303A	10	YL951-YL999, YR301-YR328	
I	D40115P	PERG	1F	2503Z			D43361P	PERG	1F	AE0303A	10	YL951-YL999, YR301-YR328	
I	D40115P	B06		2504B	24	Y2	D43361P	B04		AE0303A	10	YL951-YR328	
I	D40115P	A06		2504R	24	Y2	D43361P	A04		AE0303A	10	YL951-YR328	
I	D40115P	PERG	1F	2504Z			D43361P	PERG	1F	AE0303A	10	YL951-YR328	
I	D40115P	B07		2505B	24	Y2	D43361P	B05		AE0303A	10	YL951-YR328	
I	D40115P	A07		2505R	24	Y2	D43361P	A05		AE0303A	10	YL951-YR328	
I	D40115P	PERG	1F	2505Z			D43361P	PERG	1F	AE0303A	10	YL951-YR328	
I	D40115P	B08		2507B	24	Y2	D43361P	B08		AE0303A	10	YL951-YR328	
I	D40115P	A08		2507R	24	Y2	D43361P	A08		AE0303A	10	YL951-YR328	
I	D40115P	PERG	1F	2507Z			D43361P	PERG	1F	AE0303A	10	YL951-YR328	
I	D40115P	B09		2508B	24	Y2	D43361P	B09		AE0303A	10	YL951-YR328	
I	D40115P	A09		2508R	24	Y2	D43361P	A09		AE0303A	10	YL951-YR328	
I	D40115P	PERG	1F	2508Z			D43361P	PERG	1F	AE0303A	10	YL951-YR328	
I	D40115P	B10		2509B	24	Y2	D43361P	B06		AE0303A	10	YL951-YR328	
I	D40115P	A10		2509R	24	Y2	D43361P	A06		AE0303A	10	YL951-YR328	

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0602A

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
AE0602A	08	W5105	NB2	DISCONNECT BRACKET - E6-2 SHELF (continued)						
D40115P	PERG	1F	2509Z		D43361P	PERG	1F	AE0303A	10	YL951-YR328
AE0602A	10	W5103	NA2	DISCONNECT BRACKET - E6-2 SHELF						
D40113P	A04		0001	22 PA	D43359P	A04		AE0303A	06	YL951-YR328
D40113P	B06		2504B	24 Y2	D43359P	B06		AE0303A	06	YL951-YN501
D40113P	A06		2504R	24 Y2	D43359P	A06		AE0303A	06	YL951-YN501
D40113P	PERG	1F	2504Z		D43359P	PERG	1F	AE0303A	06	YL951-YN501
D40113P	B07		2505B	24 Y2	D43359P	B07		AE0303A	06	YL951-YR328
D40113P	A07		2505R	24 Y2	D43359P	A07		AE0303A	06	YL951-YR328
D40113P	PERG	1F	2505Z		D43359P	PERG	1F	AE0303A	06	YL951-YR328
D40113P	B09		2507B	24 Y2	D43359P	B09		AE0303A	06	YL951-YR328
D40113P	A09		2507R	24 Y2	D43359P	A09		AE0303A	06	YL951-YR328
D40113P	PERG	1F	2507Z		D43359P	PERG	1F	AE0303A	06	YL951-YR328
D40113P	B10		2508B	24 Y2	D43359P	B10		AE0303A	06	YL951-YN501
D40113P	B10		2508B	24 Y2	D43359P	B08		AE0303A	06	YR301-YR328
D40113P	A10		2508R	24 Y2	D43359P	A10		AE0303A	06	YL951-YN501
D40113P	A10		2508R	24 Y2	D43359P	A08		AE0303A	06	YR301-YR328
D40113P	PERG	1F	2508Z		D43359P	PERG	1F	AE0303A	06	YL951-YR328
D40113P	B08		2509B	24 Y2	D43359P	B08		AE0303A	06	YL951-YN501
D40113P	A08		2509R	24 Y2	D43359P	A08		AE0303A	06	YL951-YN501
D40113P	PERG	1F	2509Z		D43359P	PERG	1F	AE0303A	06	YL951-YN501
D40113P	B08		2510B	24 Y2	D43359P	B10		AE0303A	06	YR301-YR328
D40113P	A08		2510R	24 Y2	D43359P	A10		AE0303A	06	YR301-YR328
D40113P	PERG	1F	2510Z		D43359P	PERG	1F	AE0303A	06	YR301-YR328
AE0602A	11	W3555	RN2	DISCONNECT BRACKET - E6-2 SHELF						
D40125P	B02		0009	20 PA	D04245J	9		AB1030A	01	YL951-YR328
D40125P	A03		0010	20 PA	D04245J	10		AB1030A	01	YL951-YR328
AE0602A	12	W3553	LN2	DISCONNECT BRACKET - E6-2 SHELF						
D40121P	B02		0009	20 PA	D04227J	9		AB1030A	03	YL951-YR328
D40121P	A03		0010	20 PA	D04227J	10		AB1030A	03	YL951-YR328

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0602A

Page 2 End

Nov 12/2012

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
<b>AE0801A</b>	<b>05</b>	<b>W5103</b>	<b>NA2</b>	<b>DISCONNECT BRACKET - E8-1 SHELF</b>								
D40075P	B07		2506B	24 Y2	D43359P	B08		AE0303A	06	YD158-YD170		
D40075P	A07		2506R	24 Y2	D43359P	A08		AE0303A	06	YD158-YD170		
D40075P	PERG	1F	2506Z		D43359P	PERG	1F	AE0303A	06	YD158-YD170		
D40075P	B15		2559B	24 Y2	D43359P	B09		AE0303A	06	YD158-YD170		
D40075P	A15		2559R	24 Y2	D43359P	A09		AE0303A	06	YD158-YD170		
D40075P	PERG	1F	2559Z		D43359P	PERG	1F	AE0303A	06	YD158-YD170		
<b>AE0801A</b>	<b>06</b>	<b>W5105</b>	<b>NB2</b>	<b>DISCONNECT BRACKET - E8-1 SHELF</b>								
D40077P	B08		2534B	24 Y2	D43361P	B07		AE0303A	10	YD158-YD170		
D40077P	A08		2534R	24 Y2	D43361P	A07		AE0303A	10	YD158-YD170		
D40077P	PERG	1F	2534Z		D43361P	PERG	1F	AE0303A	10	YD158-YD170		
D40077P	B14		2539B	24 Y2	D43361P	B10		AE0303A	10	YD158-YD170		
D40077P	A14		2539R	24 Y2	D43361P	A10		AE0303A	10	YD158-YD170		
D40077P	PERG	1F	2539Z		D43361P	PERG	1F	AE0303A	10	YD158-YD170		
<b>AE0801A</b>	<b>15</b>	<b>W2101</b>	<b>LA2</b>	<b>DISCONNECT BRACKET - E8-1 SHELF</b>								
D40811P	9		0019	20 PA	D41801P	19		AP1800B	03	YC051-YC052		
D40811P	10		0020	20 PA	D41801P	20		AP1800B	03	YC051-YC052		
D40811P	11		0021	20 PA	D41801P	21		AP1800B	03	YC051-YC052		
D40811P	12		0022	20 PA	D41801P	22		AP1800B	03	YC051-YC052		
<b>I AE0801A</b>	<b>19</b>	<b>W2101</b>	<b>LA2</b>	<b>DISCONNECT BRACKET - E8-1 SHELF</b>								
<b>I</b> D40811P	9		0019	20 PA	D41801P	19		AP1800B	03	YC053-YD170		
<b>I</b> D40811P	10		0020	20 PA	D41801P	20		AP1800B	03	YC053-YD170		
<b>I</b> D40811P	11		0021	20 PA	D41801P	21		AP1800B	03	YC053-YD170		
<b>I</b> D40811P	12		0022	20 PA	D41801P	22		AP1800B	03	YC053-YD170		

**SPARE WIRE LIST**

D280A108

**91-21-12**

Section AE0801A

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith	Pos	Bundle	Sep	Description		To					Pos	Effectivity	
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith				
I	AE0801B	06	W0813	NN2	DISCONNECT BRACKET E08-01 SHELF									
I	D48389J	B05		0008	22	PA	D48389J	A01		AE0801B	06	YC053-YD157		
I	D48389J	A01		0008	22	PA	D48389J	B05		AE0801B	06	YC053-YD157		
I	D48389J	A05		0009	22	PA	D48389J	B01		AE0801B	06	YC053-YD170		
I	D48389J	B01		0009	22	PA	D48389J	A05		AE0801B	06	YC053-YD170		
I	AE0801B	06	W5189	NA3	DISCONNECT BRACKET E08-01 SHELF									
I	D48389P	A01		0001	22	PA	D04195P	42		AE0103A	18	YC053-YD170		
I	D48389P	B01		0002	22	PA	D04195P	43		AE0103A	18	YC053-YD170		
I	D48389P	B05		0017	22	PA	D43315P	B10		AE0303A	22	YC053-YD157		
	AE0801B	07	W5303	NN2	DISCONNECT BRACKET E08-01 SHELF									
	D45279P	A20		0012	22	PA	D45231P	36		AB0340B	08	YD158-YD170		
	D45279P	B20		0013	22	PA	D45231P	37		AB0340B	08	YD158-YD170		
	D45279P	A18		2510B	24	OT	D45231P	41		AB0340B	08	YD158-YD170		
	D45279P	B18		2510W	24	OT	D45231P	42		AB0340B	08	YD158-YD170		
	D45279P	DED		2510Z			D45231P	DED		AB0340B	08	YD158-YD170		
I	AE0801B	14	W2103	RB2	DISCONNECT BRACKET E08-01 SHELF									
I	D48323P	1		0031	20	PA	D46061P	31		AP0600B	23	YC053-YD157		
I	D48323P	2		0032	20	PA	D46061P	32		AP0600B	23	YC053-YD157		
I	D48323P	3		0033	20	PA	D46061P	33		AP0600B	23	YC053-YD157		

### SPARE WIRE LIST

D280A108

91-21-12

Section AE0801B

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
<b>AE0801C</b>	<b>07</b>	<b>W0813</b>	<b>NN2</b>	<b>DISCONNECT BRACKET - E8-1 SHELF</b>								
D48389J	B05		0008	22 PA	D48389J	A01		AE0801C	07	YC051-YC052		
D48389J	A01		0008	22 PA	D48389J	B05		AE0801C	07	YC051-YC052		
D48389J	A05		0009	22 PA	D48389J	B01		AE0801C	07	YC051-YC052		
D48389J	B01		0009	22 PA	D48389J	A05		AE0801C	07	YC051-YC052		
<b>AE0801C</b>	<b>07</b>	<b>W5189</b>	<b>NA3</b>	<b>DISCONNECT BRACKET - E8-1 SHELF</b>								
D48389P	A01		0001	22 PA	D04195P	42		AE0103A	18	YC051-YC052		
D48389P	B01		0002	22 PA	D04195P	43		AE0103A	18	YC051-YC052		
D48389P	B05		0017	22 PA	D43315P	B10		AE0303A	22	YC051-YC052		

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AE0801C

Page 1 End

Aug 14/2012





## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip					
I	AJ0004		10	W5160	RB2*	DISCONNECT BRACKET-J4							
I	D40610P		2		0011	20	PA	D46102P	24		AJ0046A	14	YC051-YD158
I	D40610P		9		0012	20	PA	D46102P	25		AJ0046A	14	YC051-YD158

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AJ0004

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description							
Equip	Term	Type	Wire No.	GA	TY	To Equip	Term	Type	Matewith	Pos	Effectivity
AJ0020A	02	W5158	SB2*	DISCONNECT BRACKET-J20-A							
D40884P	29		0034	22	PA	D40488P	7		AE0103A	08	YD158
D40884P	30		0035	22	PA	D40488P	8		AE0103A	08	YD158
D40884P	31		0036	22	PA	D40488P	9		AE0103A	08	YD158

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AJ0020A

Page 1 End

Aug 14/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
I	AJ0020B	02	W5158	SB2*	DISCONNECT BRACKET-J20-B							
I	D40638P	12		0015	22	PA	D40490J	4		AE0104A	20	YC067-YL999, YN232-YR328
I	D40638P	14		0678	22	PA	D48116P	A03		AJ0048A	13	ALL
I	D40638P	2		0680	22	PA	D48116P	B04		AJ0048A	13	ALL
I	AJ0020B	03	W5158	SB2*	DISCONNECT BRACKET-J20-B							
I	D40640P	1		0706	20	PA	D46100P	24		AJ0046B	11	YC067-YL999, YN232-YR328
I	AJ0020B	07	W5156	SA2*	DISCONNECT BRACKET-J20-B							
I	D40642P	12		0648	22	PA	D40594P	B10		AE0302A	16	YC067-YD157

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AJ0020B

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AJ0022</b>	<b>02</b>	<b>W5510</b>	<b>SA2*</b>	<b>DISCONNECT BRACKET-J22</b>						
D40672P	11		5503	24 PK	D48122P	A03		AJ0048A	03	YD160-YR328
D40672P	15		5510	24 PK	D48122P	B09		AJ0048A	03	YD160-YR328
<b>AJ0022</b>	<b>03</b>	<b>W5156</b>	<b>SA2*</b>	<b>DISCONNECT BRACKET-J22</b>						
D40666P	25		0588	24 B6	D48114P	A03		AJ0048A	17	YD158, YL951-YR328
D40666P	30		0594	24 PK	D48112P	A04		AJ0048A	16	YD158, YL951-YR328
D40666P	9		0660	20 CQ	D40594P	A08		AE0302A	16	YC051-YD158, YL951-YR328
D40666P	21		0667	24 PK	D40576P	8		AP1800B	02	YC051-YD158, YL951-YR328
D40666P	20		0668	22 PA	D40460P	B01		AE0301A	19	YC051-YC065, YD158, YL951-YR328
D40666P	20		1001	22 X1	D40460P	B01		AE0301A	19	YC067-YD157
D40666P	19		1001Z		D40460P	PERG	1F	AE0301A	19	YC067-YD157
<b>AJ0022</b>	<b>04</b>	<b>W5156</b>	<b>SA2*</b>	<b>DISCONNECT BRACKET-J22</b>						
D40670P	6		0619	22 PA	D40594P	A10		AE0302A	16	YC067-YD157
D40670P	28		0645	20 PA	D40498P	29		AE0103A	11	YL951-YL999, YR301-YR328
D40670P	28		0646	20 PA	D40460P	A08		AE0301A	19	YC067-YD157, YN231-YN501
D40670P	20		6025R	22 PH	D40724P	B17		AE0202A	28	YC051-YD158, YL951-YR328
<b>AJ0022</b>	<b>06</b>	<b>W5100</b>	<b>SB2*</b>	<b>DISCONNECT BRACKET-J22</b>						
D40668P	8		6001R	22 PH	D40698P	8		AJ0024	03	YC051-YD158, YL951-YR328
D40668P	20		6002R	22 PH	D40698P	20		AJ0024	03	YC051-YD158, YL951-YR328
D40668P	21		6003R	22 PH	D40698P	21		AJ0024	03	YC051-YD158, YL951-YR328
<b>AJ0022</b>	<b>07</b>	<b>W0076</b>	<b>LA2*</b>	<b>DISCONNECT BRACKET-J22</b>						
D40674J	10		0160	22 PA	D11022	D1		R00594		YR317

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AJ0022

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
AJ0022	07	W5506	SB2*		DISCONNECT BRACKET-J22							
D40674P	CAP	Y	6080		22	CQ	TB0801X	A002	1A			YR317

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AJ0022

Page 2 End

Aug 14/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AJ0024</b>	<b>03</b>	<b>W5100</b>	<b>SB2*</b>	<b>DISCONNECT BRACKET-J24</b>						
D40698P	8		6001R	22 PH	D40668P	8		AJ0022	06	YC051-YD158, YL951-YR328
D40698P	20		6002R	22 PH	D40668P	20		AJ0022	06	YC051-YD158, YL951-YR328
D40698P	21		6003R	22 PH	D40668P	21		AJ0022	06	YC051-YD158, YL951-YR328
<b>AJ0024</b>	<b>06</b>	<b>W5158</b>	<b>SB2*</b>	<b>DISCONNECT BRACKET-J24</b>						
D40702P	CAP	Y	0545	20 CQ	D40426P	8		AE0302A	28	YC051-YC052
D40702P	13		0545	20 CQ	D40426P	8		AE0302A	28	YC053-YD158
D40702P	CAP	Y	0682	20 CQ	D40426P	7		AE0302A	28	YC051-YC052
D40702P	21		0682	20 CQ	D40426P	7		AE0302A	28	YC053-YR328
D40702P	23		0694	20 CQ	D40750P	15		AP0600B	02	YD158-YR328
<b>AJ0024</b>	<b>07</b>	<b>W5160</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET-J24</b>						
D40694P	16		0530	22 PA	D40474P	B02		AE0402A	37	YC051-YD158, YL951-YR328
D40694P	13		0588	22 GK	D46122P	13		AJ0046A	16	YC053-YD158, YL951-YR328
D40694P	31		0620	20 PA	D40952P	A05		AE0302A	42	YL951-YR328
D40694P	21		1001R	22 X5	D40466P	47		AE0103A	14	YC051-YD158, YL951-YR328
D40694P	DED		1001Z		D40466P	DED		AE0103A	14	YC051-YD158, YL951-YR328
D40694P	22		1002R	22 X5	D40466P	48		AE0103A	14	YC051-YD158, YL951-YR328
D40694P	DED		1002Z		D40466P	DED		AE0103A	14	YC051-YD158, YL951-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AJ0024

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Equip	Matewith From	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
		Term	Type	Wire No.	GA	TY	Equip					
I	AJ0046A	04	W0066	RN2	DISCONNECT BRACKET - J46A							
I	D46110J	A02		0142	20	G5	D46102J	24		AJ0046A	14	YC051-YD170
I	AJ0046A	04	W6208	RA2	DISCONNECT BRACKET - J46A							
I	D46110P	A07		0595	22	PA	D40820P	4		AP0600B	17	YL955-YL999, YN236-YN260
I	D46110P	A02		0712	20	PA	D40820P	11		AP0600B	17	YC051-YD158
I	AJ0046A	05	W5506	SB2*	DISCONNECT BRACKET - J46A							
I	D46128P	B10		6506	20	PA	D40800P	31		AP0600B	08	YN501-YR328
I	AJ0046A	11	W0066	RN2	DISCONNECT BRACKET - J46A							
I	D46104J	23		0144	16	CQ	D46102J	23		AJ0046A	14	YC051-YD170
I	AJ0046A	13	W0066	RN2	DISCONNECT BRACKET - J46A							
I	D46116J	15		0004	22	PA	D46108J	2		AJ0046A	15	YN231-YN501
I	D46116J	14		0143	20	G5	D46102J	25		AJ0046A	14	YC051-YD158
I	D46116J	10		0212	20	CQ	D46108J	26		AJ0046A	15	YN231-YN501
I	AJ0046A	13	W5156	SA2*	DISCONNECT BRACKET - J46A							
I	D46116P	14		0021	20	PA	D10982	21		M02061		YC051-YD157
I	AJ0046A	14	W0066	RN2	DISCONNECT BRACKET - J46A							
I	D46102J	20		0082	22	PA	D46138J	A04		AJ0046B	02	ALL
I	D46102J	24		0142	20	G5	D46110J	A02		AJ0046A	04	YC051-YD170
I	D46102J	25		0143	20	G5	D46116J	14		AJ0046A	13	YC051-YD158
I	D46102J	23		0144	16	CQ	D46104J	23		AJ0046A	11	YC051-YD170
I	AJ0046A	14	W5160	RB2*	DISCONNECT BRACKET - J46A							
I	D46102P	24		0011	20	PA	D40610P	2		AJ0004	10	YC051-YD158
I	D46102P	25		0012	20	PA	D40610P	9		AJ0004	10	YC051-YD158
I	D46102P	20		0629	22	PA	D10988	54		M02061		YC051-YD158, YL951-YR328
I	AJ0046A	15	W0066	RN2	DISCONNECT BRACKET - J46A							
I	D46108J	2		0004	22	PA	D46116J	15		AJ0046A	13	YN231-YN501
I	D46108J	16		0032	20	CQ	TB0660Y	B009	1A			YN231-YN501

## SPARE WIRE LIST

D280A108

91-21-12

Section AJ0046A

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
<b>AJ0046A</b>	<b>15</b>	<b>W0066</b>	<b>RN2</b>	<b>DISCONNECT BRACKET - J46A (continued)</b>								
D46108J	26		0212	20 CQ	D46116J	10		AJ0046A	13	YN231-YN501		
D46108J	28		0216	20 CQ	D46122J	14		AJ0046A	16	YN231-YN501		
<b>AJ0046A</b>	<b>16</b>	<b>W0066</b>	<b>RN2</b>	<b>DISCONNECT BRACKET - J46A</b>								
D46122J	3		0162	24 PK	D46112J	9		AJ0046B	12	YC051-YC052, YC060-YR328		
D46122J	14		0216	20 CQ	D46108J	28		AJ0046A	15	YN231-YN501		
<b>AJ0046A</b>	<b>16</b>	<b>W5160</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET - J46A</b>								
D46122P	13		0588	22 GK	D40694P	13		AJ0024	07	YC053-YD158, YL951-YR328		

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AJ0046A

Page 2 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith From	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
	Equip	Term	Type	Wire No.	GA	TY	Equip					
I	AJ0046B	02	W0066	RN2	DISCONNECT BRACKET - J46B							
I	D46138J	A04		0082	22	PA	D46102J	20		AJ0046A	14	ALL
I	D46138J	A05		0083	22	PA	D46100J	9		AJ0046B	11	ALL
I	AJ0046B	11	W0066	RN2	DISCONNECT BRACKET - J46B							
I	D46100J	9		0083	22	PA	D46138J	A05		AJ0046B	02	ALL
I	AJ0046B	11	W5158	SB2*	DISCONNECT BRACKET - J46B							
I	D46100P	18		0690	20	CQ	D40750P	4		AP0600B	02	YC067-YR328
I	D46100P	9		0695	22	PA	D40750P	6		AP0600B	02	YC051-YC065
	D46100P	24		0706	20	PA	D40640P	1		AJ0020B	03	YC067-YL999, YN232-YR328
I	AJ0046B	12	W0066	RN2	DISCONNECT BRACKET - J46B							
I	D46112J	9		0162	24	PK	D46122J	3		AJ0046A	16	YC051-YC052, YC060-YR328
	D46112J	9		0162	24	PK	TB0666Y	B001	1A			YC053-YC059

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AJ0046B

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith	Pos	Bundle	Sep	Description		To					Effectivity	
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos		
I	AJ0048A	03	W5510	SA2*	DISCONNECT BRACKET - J48A								
I	D48122P	A03		5503	24	PK	D40672P	11		AJ0022	02	YD160-YR328	
I	D48122P	B09		5510	24	PK	D40672P	15		AJ0022	02	YD160-YR328	
	AJ0048A	06	W0088	LN2	DISCONNECT BRACKET - J48A								
	D40081J	A02		2001B	24	Y2	D40089J	A02		AJ0048A	11	YC051-YC052	
	D40081J	A01		2001R	24	Y2	D40089J	A01		AJ0048A	11	YC051-YC052	
	D40081J	PERG	1F	2001Z			D40089J	PERG	1F	AJ0048A	11	YC051-YC052	
	AJ0048A	11	W0088	LN2	DISCONNECT BRACKET - J48A								
	D40089J	B01		0055	22	PA	D48116J	B04		AJ0048A	13	YC051-YC052	
	D40089J	A02		2001B	24	Y2	D40081J	A02		AJ0048A	06	YC051-YC052	
	D40089J	A01		2001R	24	Y2	D40081J	A01		AJ0048A	06	YC051-YC052	
	D40089J	PERG	1F	2001Z			D40081J	PERG	1F	AJ0048A	06	YC051-YC052	
I	AJ0048A	13	W0088	LN2	DISCONNECT BRACKET - J48A								
I	D48116J	A03		0047	22	PA	D48104J	A07		AJ0048A	20	ALL	
I	D48116J	B04		0055	22	PA	D40089J	B01		AJ0048A	11	YC051-YC052	
I	D48116J	B05		0206	20	PA	D48104J	B06		AJ0048A	20	YN231-YN501	
I	AJ0048A	13	W5158	SB2*	DISCONNECT BRACKET - J48A								
I	D48116P	A03		0678	22	PA	D40638P	14		AJ0020B	02	ALL	
I	D48116P	B04		0680	22	PA	D40638P	2		AJ0020B	02	ALL	
	AJ0048A	16	W0088	LN2	DISCONNECT BRACKET - J48A								
	D48112J	A08		0201	20	PA	D48104J	B03		AJ0048A	20	YN231-YN501	
I	AJ0048A	16	W5156	SA2*	DISCONNECT BRACKET - J48A								
I	D48112P	A04		0594	24	PK	D40666P	30		AJ0022	03	YD158, YL951-YR328	
I	AJ0048A	17	W0088	LN2	DISCONNECT BRACKET - J48A								
I	D48114J	B07		0123	22	G5	D48130J	A05		AJ0048A	23	ALL	
I	D48114J	B08		0124	22	G5	D48130J	A06		AJ0048A	23	ALL	
I	D48114J	B09		0125	22	G5	D48130J	A07		AJ0048A	23	ALL	
I	D48114J	B10		0126	22	G5	D48130J	A08		AJ0048A	23	ALL	

### SPARE WIRE LIST

D280A108

91-21-12

Section AJ0048A

Page 1

Nov 12/2012

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
<b>AJ0048A</b>		<b>17</b>	<b>W5156</b>	<b>SA2*</b>	<b>DISCONNECT BRACKET - J48A</b>							
D48114P		A03		0588	24	B6	D40666P	25		AJ0022	03	YD158, YL951-YR328
D48114P		B07		0671	22	PA	D40594P	A02		AE0302A	16	YC051-YD158, YL951-YR328
D48114P		B08		0672	22	PA	D40594P	B02		AE0302A	16	YC051-YD158, YL951-YR328
D48114P		B09		0673	22	PA	D40594P	B01		AE0302A	16	YC051-YD158, YL951-YR328
D48114P		B10		0674	22	PA	D40594P	A01		AE0302A	16	YC051-YD158, YL951-YR328
<b>AJ0048A</b>		<b>20</b>	<b>W0088</b>	<b>LN2</b>	<b>DISCONNECT BRACKET - J48A</b>							
D48104J		A07		0047	22	PA	D48116J	A03		AJ0048A	13	ALL
D48104J		B03		0201	20	PA	D48112J	A08		AJ0048A	16	YN231-YN501
D48104J		B06		0206	20	PA	D48116J	B05		AJ0048A	13	YN231-YN501
<b>AJ0048A</b>		<b>23</b>	<b>W0088</b>	<b>LN2</b>	<b>DISCONNECT BRACKET - J48A</b>							
D48130J		A05		0123	22	G5	D48114J	B07		AJ0048A	17	ALL
D48130J		A06		0124	22	G5	D48114J	B08		AJ0048A	17	ALL
D48130J		A07		0125	22	G5	D48114J	B09		AJ0048A	17	ALL
D48130J		A08		0126	22	G5	D48114J	B10		AJ0048A	17	ALL

## SPARE WIRE LIST

D280A108

91-21-12

Section AJ0048A

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To					Pos	Effectivity
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith				
I	AL0720D		01	W6124	LA2	DISCONNECT BRACKET-MAIN WHEEL WELL								
I	D46040J		3		0539	22	PA	D40262P	19		D40262J		YC058-YD158	

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AL0720D

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Pos	Bundle	Sep	Description		To					Effectivity	
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos		
I	AP0600A	04	W6214	LA2*	DISCONNECT BRACKET-P5-P6 INTEGRATION								
I	D40444P	1		5501	22	PA	D40328P	A03		AE0401A	31	YC051-YD157	
I	D40444P	9		5540	20	PA	D40378P	B16		AE0401A	46	YC051-YR323, YR325-YR328	
I	D40444P	10		5541	20	PA	D40378P	B14		AE0401A	46	YC051-YR323, YR325-YR328	
I	D40444P	4		5544	20	PA	D40328P	B02		AE0401A	31	YC051-YR323, YR325-YR328	
I	D40444P	5		5545	20	PA	D40328P	B03		AE0401A	31	YC051-YR323, YR325-YR328	
I	AP0600A	05	W3058	RN2	DISCONNECT BRACKET-P5-P6 INTEGRATION								
I	D40226P	CAP	Y	0320	20	PA	GD11106	ST..	1			YD155-YD158, YL951-YR328	
I	D40226P	8		0381	20	PA	D40050J	8		AB0340A	05	YC051-YD158, YL951-YR328	
I	D40226P	9		0382	20	PA	D40050J	9		AB0340A	05	YC051-YD158, YL951-YR328	
I	D40226P	12		0383	20	PA	D40050J	11		AB0340A	05	YC051-YD158, YL951-YR328	
I	AP0600A	07	W3107	LN1	DISCONNECT BRACKET-P5-P6 INTEGRATION								
I	D40165P	2		0016	20	PA	D41601P	2		AE0601A	08	YC053-YD157	
I	D40165P	3		0017	20	PA	D41601P	3		AE0601A	08	YC053-YD157	

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AP0600A

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
I	AP0600B	02	W5158	SB2*	DISCONNECT BRACKET-LOWER P6 PANEL							
I	D40750P	4		0690	20	CQ	D46100P	18		AJ0046B	11	YC067-YR328
I	D40750P	15		0694	20	CQ	D40702P	23		AJ0024	06	YD158-YR328
I	D40750P	6		0695	22	PA	D46100P	9		AJ0046B	11	YC051-YC065
I	D40750P	10		0707	22	PA	TB1808X	A003	%A			YC067-YL999, YR301-YR328
I	AP0600B	03	W5514	SA2	DISCONNECT BRACKET-LOWER P6 PANEL							
I	D40822P	23		5568	20	GA	D40826J	10		AE0104A	27	YC051-YD154
I	D40822P	23		5568	20	PA	D40826J	10		AE0104A	27	YD155-YD157
I	D40822P	24		5569	20	GA	D40826J	11		AE0104A	27	YC051-YD154
I	D40822P	24		5569	20	PA	D40826J	11		AE0104A	27	YD155-YD157
I	AP0600B	05	W2138	LA1	DISCONNECT BRACKET-LOWER P6 PANEL							
I	D41430P	3		5503	16	HA	D41432P	3		AE0201A	15	ALL
I	AP0600B	07	W6412	RB2*	DISCONNECT BRACKET-LOWER P6 PANEL							
I	D41832P	7		0029	20	PA	D41830P	A06		AE0401A	13	YC067-YL967, YR301-YR323, YR325-YR328
I	AP0600B	08	W5506	SB2*	DISCONNECT BRACKET-LOWER P6 PANEL							
I	D40800P	31		6506	20	PA	D46128P	B10		AJ0046A	05	YN501-YR328
I	AP0600B	09	W6110	LA2*	DISCONNECT BRACKET-LOWER P6 PANEL							
I	D40368P	5		0520	22	PA	D40364P	A04		AE0101A	12	ALL
I	D40368P	6		0521	22	PA	D40364P	B03		AE0101A	12	ALL
I	AP0600B	10	W2231	RB2	DISCONNECT BRACKET-LOWER P6 PANEL							
I	D46067P	6		0006	20	PA	D46017P	6		AE0301A	23	YC051-YN236, YN501-YR328
I	D46067P	7		0007	20	PA	D46017P	5		AE0301A	23	YC051-YN236, YN501-YR328
I	D46067P	9		0009	20	PA	D46021P	9		AE0302A	25	YC051-YN236, YN501-YR328
I	D46067P	10		0010	20	PA	D46021P	1		AE0302A	25	YC051-YN236, YN501-YR328

### SPARE WIRE LIST

D280A108

91-21-12

Section AP0600B

Page 1

Nov 12/2012

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AP0600B</b>	<b>10</b>	<b>W2231</b>	<b>RB2</b>	<b>DISCONNECT BRACKET-LOWER P6 PANEL (continued)</b>						
D46067P	11		0011	20 PA	D46021P	2		AE0302A	25	YC051-YN236, YN501-YR328
D46067P	12		0012	20 PA	D46021P	3		AE0302A	25	YC051-YN236, YN501-YR328
D46067P	19		0019	16 CQ	D43309P	7		AE0303A	29	YD158-YL999, YN501-YR328
D46067P	19		0019	16 PA	D43309P	7		AE0303A	29	YN231-YN236
D46067P	21		0021	20 PA	D43309P	1		AE0303A	29	YC051-YL999, YN501
D46067P	22		0022	20 PA	D43309P	2		AE0303A	29	YC051-YL999, YN501
D46067P	23		0023	16 PA	D43309P	10		AE0303A	29	YC051-YL999, YN501
D46067P	25		0025	20 PA	D43309P	5		AE0303A	29	YC051-YL999, YN501
D46067P	26		0026	20 PA	D43309P	6		AE0303A	29	YC051-YL999, YN501
D46067P	27		0027	16 PA	D46017P	7		AE0301A	23	YC051-YN236, YN501-YR328
D46067P	28		0028	20 PA	D46017P	8		AE0301A	23	YC051-YN236, YN501-YR328
<b>AP0600B</b>	<b>11</b>	<b>W2030</b>	<b>SN2</b>	<b>DISCONNECT BRACKET-LOWER P6 PANEL</b>						
D46052P	9		5516	20 PA	D40924P	5		AP0900A	14	ALL
D46052P	11		5522	20 PA	D40924P	3		AP0900A	14	ALL
D46052P	12		5523	20 PA	D40924P	7		AP0900A	14	ALL
D46052P	26		5526	20 PA	D40924P	25		AP0900A	14	ALL
D46052P	27		5527	20 PA	D40924P	26		AP0900A	14	ALL
<b>AP0600B</b>	<b>13</b>	<b>W2597</b>	<b>NA2</b>	<b>DISCONNECT BRACKET-LOWER P6 PANEL</b>						
D40625P	40		0017	22 PA	D45225J	B20		AE0502A	21	YD158-YR328
D40625P	12		2502B	22 X2	D45225J	B04		AE0502A	21	YC059-YD170, YL955-YL999, YN236-YR328
D40625P	11		2502R	22 X2	D45225J	B03		AE0502A	21	YC059-YD170, YL955-YL999, YN236-YR328

## SPARE WIRE LIST

D280A108

91-21-12

Section AP0600B

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
<b>AP0600B</b>	<b>13</b>	<b>W2597</b>	<b>NA2</b>	<b>DISCONNECT BRACKET-LOWER P6 PANEL (continued)</b>								
D40625P	S/R		2502Z			D45225J	PERG	1F	AE0502A	21	YC059-YD170, YL955-YL999, YN236-YR328	
D40625P	7		2509B	24	Y2	D45225J	A20		AE0502A	21	YD158-YR328	
D40625P	6		2509R	24	Y2	D45225J	A19		AE0502A	21	YD158-YR328	
D40625P	S/R		2509Z			D45225J	PERG	1F	AE0502A	21	YD158-YR328	
D40625P	39		2513B	22	X2	D45225J	B14		AE0502A	21	YD158-YR328	
D40625P	38		2513R	22	X2	D45225J	B13		AE0502A	21	YD158-YR328	
D40625P	S/R		2513Z			D45225J	PERG	1F	AE0502A	21	YD158-YR328	
<b>AP0600B</b>	<b>14</b>	<b>W6412</b>	<b>RB2*</b>	<b>DISCONNECT BRACKET-LOWER P6 PANEL</b>								
D40386P	27		0008	20	PA	D41010P	18		AE0401A	33	YC067-YN236, YN501-YR323, YR325-YR328	
D40386P	31		0009	20	PA	D41010P	19		AE0401A	33	YC067-YN236, YN501-YR323, YR325-YR328	
D40386P	32		0010	20	PA	D41010P	20		AE0401A	33	YC067-YN236, YN501-YR323, YR325-YR328	
D40386P	9		5508	22	PA	D40390P	A19		AE0401A	52	YC051-YL999, YR301-YR323, YR325-YR328	
D40386P	24		5533	20	PA	D40388P	A16		AE0402A	24	YC051-YL999, YR301-YR323, YR325-YR328	
D40386P	23		5534	20	PA	D40392P	A18		AE0302A	45	YC051-YL999, YR301-YR323, YR325-YR328	
D40386P	29		5535	20	PA	D40394P	A15		AE0301A	34	YC051-YL999, YR301-YR323, YR325-YR328	
<b>AP0600B</b>	<b>15</b>	<b>W2383</b>	<b>RB2</b>	<b>DISCONNECT BRACKET-LOWER P6 PANEL</b>								
D46065P	9		0009	24	PK	D46031J	9		AE0104A	10	ALL	
D46065P	15		0015	24	PK	D46033P	5		AP0900A	16	ALL	
D46065P	8		0018	16	PA	D46023P	K		AE0101B	09	YL951-YL999, YN501-YR328	

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AP0600B

Page 3

Nov 12/2012



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AP0600B</b>	<b>15</b>	<b>W2383</b>	<b>RB2</b>	<b>DISCONNECT BRACKET-LOWER P6 PANEL (continued)</b>						
D46065P	19		0019	20 PA	D46033P	9		AP0900A	16	ALL
D46065P	23		0023	20 PA	D46023P	A05		AE0101B	09	ALL
D46065P	24		0024	20 PA	D46031J	8		AE0104A	10	ALL
D46065P	25		0025	20 PA	D46031J	5		AE0104A	10	YC051-YD155
D46065P	26		0026	22 PA	D46031J	6		AE0104A	10	ALL
D46065P	27		0027	22 PA	D46031J	7		AE0104A	10	YC051-YD155
D46065P	31		0031	20 PA	D46033P	1		AP0900A	16	ALL
D46065P	32		0032	20 PA	D46033P	2		AP0900A	16	YC051-YD155
<b>AP0600B</b>	<b>16</b>	<b>W5612</b>	<b>SN2*</b>	<b>DISCONNECT BRACKET-LOWER P6 PANEL</b>						
D40352P	21		0554	24 PK	D40362P	A03		AE0302A	05	YL951-YR328
D40352P	17		0555	22 PA	D40362P	A10		AE0302A	05	YD154-YD170, YN231-YN235
D40352P	28		2204B	24 Y2	D40358P	B05		AE0201A	18	YD154-YR328
D40352P	9		2204R	24 Y2	D40358P	B04		AE0201A	18	YD154-YR328
D40352P	DED		2204Z		D40358P	DED		AE0201A	18	YD154-YR328
<b>AP0600B</b>	<b>17</b>	<b>W6208</b>	<b>RA2</b>	<b>DISCONNECT BRACKET-LOWER P6 PANEL</b>						
D40820P	10		0512	16 PA	TB0606V	B013	1			YL951-YR328
D40820P	4		0595	22 PA	D46110P	A07		AJ0046A	04	YL955-YL999, YN236-YN260
D40820P	11		0712	20 PA	D46110P	A02		AJ0046A	04	YC051-YD158
<b>AP0600B</b>	<b>19</b>	<b>W2169</b>	<b>RB2</b>	<b>DISCONNECT BRACKET-LOWER P6 PANEL</b>						
D46063P	1		0001	20 PA	D46035P	1		AE0301A	24	ALL
D46063P	2		0002	22 PA	D46035P	2		AE0301A	24	ALL
D46063P	3		0003	20 PA	D46035P	3		AE0301A	24	ALL
D46063P	4		0004	22 PA	D46043P	4		AE0302A	30	ALL
D46063P	7		0007	22 PA	D46043P	7		AE0302A	30	ALL
D46063P	8		0008	22 PA	D46043P	8		AE0302A	30	ALL
D46063P	9		0009	20 PA	D46035P	9		AE0301A	24	YC067-YR328
D46063P	10		0010	20 PA	D46035P	5		AE0301A	24	YC067-YR328
D46063P	11		0011	20 PA	D46043P	11		AE0302A	30	YC067-YR328
D46063P	12		0012	20 CQ	D46043P	12		AE0302A	30	YD157-YR328
<b>AP0600B</b>	<b>20</b>	<b>W2661</b>	<b>SB2</b>	<b>DISCONNECT BRACKET-LOWER P6 PANEL</b>						
D46069P	7		0007	18 PA	D46051P	7		AE0103A	03	ALL

## SPARE WIRE LIST

D280A108

91-21-12

Section AP0600B

Page 4

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AP0600B</b>	<b>20</b>	<b>W2661</b>	<b>SB2</b>	<b>DISCONNECT BRACKET-LOWER P6 PANEL (continued)</b>						
D46069P	10		0010	16 PA	D46051P	10		AE0103A	03	ALL
<b>AP0600B</b>	<b>22</b>	<b>W6414</b>	<b>RB2</b>	<b>DISCONNECT BRACKET-LOWER P6 PANEL</b>						
D40396P	6		0502	24 PK	D11448	4		P0092		ALL
D40396P	4		5508	18 PA	D11448	33		P0092		YD158-YR328
<b>AP0600B</b>	<b>23</b>	<b>W2103</b>	<b>RB2</b>	<b>DISCONNECT BRACKET-LOWER P6 PANEL</b>						
D46061P	5		0005	20 PA	D46013P	A05		AE0101B	13	YC051-YC059, YC065-YD158, YL951-YR328
D46061P	CAP 6	Y	0005	20 PA	D46013P	A05		AE0101B	13	YC060-YC064
D46061P			0006	20 PA	D46013P	A06		AE0101B	13	YC051-YD158, YL951-YR328
D46061P	12		0012	20 PA	D46011J	12		AE0104A	09	YC051-YD158, YL951-YR328
D46061P	13		0013	20 PA	D46011J	13		AE0104A	09	YC051-YD158, YL951-YR328
D46061P	16		0016	20 PA	D46011J	6		AE0104A	09	YC051-YD158, YL951-YR328
D46061P	17		0017	20 PA	D46011J	7		AE0104A	09	YC051-YD158, YL951-YR328
D46061P	18		0018	20 PA	D46013P	A08		AE0101B	13	YC051-YD158, YL951-YR328
D46061P	19		0019	20 PA	D46013P	A09		AE0101B	13	YC051-YD158, YL951-YR328
D46061P	31		0031	20 PA	D48323P	1		AE0801B	14	YC053-YD157
D46061P	32		0032	20 PA	D48323P	2		AE0801B	14	YC053-YD157
D46061P	33		0033	20 PA	D48323P	3		AE0801B	14	YC053-YD157

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AP0600B

Page 5 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith	Pos	Bundle	Sep	Description		To					Effectivity
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	
	AP0900A	03	W0001	NA2	DISCONNECT BRACKET-P9-FWD INSTR PANEL							
	D04207J	33		0168	22	PA	TB0201Z	A001	1A			YC053-YD158, YL951-YR328
	AP0900A	03	W2207	NA2	DISCONNECT BRACKET-P9-FWD INSTR PANEL							
	D04207P	13		0003	22	PA	D04267P	A13		AE0301A	06	ALL
	D04207P	14		0004	22	PA	D04267P	A14		AE0301A	06	ALL
	D04207P	31		0031	22	PA	D04267P	B11		AE0301A	06	ALL
	D04207P	32		0032	22	PA	D04267P	B12		AE0301A	06	ALL
	D04207P	37		0037	22	PA	D04267P	B17		AE0301A	06	ALL
	D04207P	38		0038	22	PA	D04267P	B18		AE0301A	06	ALL
	D04207P	40		0040	22	CQ	D04267P	B19		AE0301A	06	ALL
	D04207P	41		0041	22	CQ	D04267P	B20		AE0301A	06	ALL
	D04207P	6		2003B	24	Y2	D04267P	A06		AE0301A	06	ALL
	D04207P	5		2003R	24	Y2	D04267P	A05		AE0301A	06	ALL
	D04207P	S/R		2003Z			D04267P	PERG	1F	AE0301A	06	ALL
	D04207P	8		2004B	24	Y2	D04267P	A08		AE0301A	06	ALL
	D04207P	7		2004R	24	Y2	D04267P	A07		AE0301A	06	ALL
	D04207P	S/R		2004Z			D04267P	PERG	1F	AE0301A	06	ALL
	D04207P	16		2008B	24	Y2	D04267P	A16		AE0301A	06	ALL
	D04207P	15		2008R	24	Y2	D04267P	A15		AE0301A	06	ALL
	D04207P	S/R		2008Z			D04267P	PERG	1F	AE0301A	06	ALL
	D04207P	18		2009B	22	X2	D04267P	A18		AE0301A	06	YL963-YN235
	D04207P	17		2009R	22	X2	D04267P	A17		AE0301A	06	YL963-YN235
	D04207P	S/R		2009Z			D04267P	PERG	1F	AE0301A	06	YL963-YN235
	D04207P	20		2010B	24	Y2	D04267P	A20		AE0301A	06	ALL
	D04207P	19		2010R	24	Y2	D04267P	A19		AE0301A	06	ALL
	D04207P	S/R		2010Z			D04267P	PERG	1F	AE0301A	06	ALL
	AP0900A	05	W5514	SA2	DISCONNECT BRACKET-P9-FWD INSTR PANEL							
	D40824P	28		0502	24	B6	D40826J	7		AE0104A	27	YC051-YD158, YL951-YR328
	D40824P	29		0503	24	B6	D40826J	16		AE0104A	27	YC051-YD158, YL951-YR328
	D40824P	30		0504	24	B6	D40826J	17		AE0104A	27	YC051-YD158, YL951-YR328
	D40824P	31		0505	24	B6	D40826J	18		AE0104A	27	YC051-YD158, YL951-YR328

### SPARE WIRE LIST

D280A108

91-21-12

Section AP0900A

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
AP0900A	05	W5514	SA2	DISCONNECT BRACKET-P9-FWD INSTR PANEL (continued)								
D40824P	19		5564	20 PA	D40826J	6		AE0104A	27	YC051-YD158, YL951-YR328		
D40824P	20		5565	20 PA	D40826J	8		AE0104A	27	YC051-YD158, YL951-YR328		
D40824P	32		5570	20 PA	D40830P	1		AP1800B	07	YC051-YD158, YL951-YR328		
D40824P	33		5571	20 PA	D40830P	2		AP1800B	07	YC051-YD158, YL951-YR328		
AP0900A	06	W0003	NB2	DISCONNECT BRACKET-P9-FWD INSTR PANEL								
D04237J	33		0609	22 PA	D01205	CAP	Y	P003-07		YC053-YD158, YL951-YR328		
AP0900A	06	W2237	NB2	DISCONNECT BRACKET-P9-FWD INSTR PANEL								
D04237P	13		0003	22 PA	D04297P	A13		AE0301A	31	ALL		
D04237P	14		0004	22 PA	D04297P	A14		AE0301A	31	ALL		
D04237P	29		0029	22 PA	D04297P	B09		AE0301A	31	ALL		
D04237P	30		0030	22 PA	D04297P	B10		AE0301A	31	ALL		
D04237P	31		0031	22 PA	D04297P	B11		AE0301A	31	ALL		
D04237P	32		0032	22 PA	D04297P	B12		AE0301A	31	ALL		
D04237P	37		0037	22 PA	D04297P	B17		AE0301A	31	ALL		
D04237P	38		0038	22 PA	D04297P	B18		AE0301A	31	ALL		
D04237P	40		0040	22 CQ	D04297P	B19		AE0301A	31	ALL		
D04237P	41		0041	22 CQ	D04297P	B20		AE0301A	31	ALL		
D04237P	6		2003B	24 Y2	D04297P	A06		AE0301A	31	ALL		
D04237P	5		2003R	24 Y2	D04297P	A05		AE0301A	31	ALL		
D04237P	S/R		2003Z		D04297P	PERG	1F	AE0301A	31	ALL		
D04237P	8		2004B	24 Y2	D04297P	A08		AE0301A	31	ALL		
D04237P	7		2004R	24 Y2	D04297P	A07		AE0301A	31	ALL		
D04237P	S/R		2004Z		D04297P	PERG	1F	AE0301A	31	ALL		
D04237P	16		2008B	24 Y2	D04297P	A16		AE0301A	31	ALL		
D04237P	15		2008R	24 Y2	D04297P	A15		AE0301A	31	ALL		
D04237P	S/R		2008Z		D04297P	PERG	1F	AE0301A	31	ALL		
D04237P	18		2009B	24 Y2	D04297P	A18		AE0301A	31	ALL		
D04237P	17		2009R	24 Y2	D04297P	A17		AE0301A	31	ALL		
D04237P	S/R		2009Z		D04297P	PERG	1F	AE0301A	31	ALL		
D04237P	20		2010B	24 Y2	D04297P	A20		AE0301A	31	ALL		
D04237P	19		2010R	24 Y2	D04297P	A19		AE0301A	31	ALL		

### SPARE WIRE LIST

D280A108

91-21-12

Section AP0900A

Page 2

Nov 12/2012

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>AP0900A</b>	<b>06</b>	<b>W2237</b>	<b>NB2</b>	<b>DISCONNECT BRACKET-P9-FWD INSTR PANEL (continued)</b>						
D04237P	S/R		2010Z		D04297P	PERG	1F	AE0301A	31	ALL
D04237P	22		2011B	24 Y2	D04297P	B02		AE0301A	31	ALL
D04237P	21		2011R	24 Y2	D04297P	B01		AE0301A	31	ALL
D04237P	S/R		2011Z		D04297P	PERG	1F	AE0301A	31	ALL
D04237P	24		2012B	24 Y2	D04297P	B04		AE0301A	31	ALL
D04237P	23		2012R	24 Y2	D04297P	B03		AE0301A	31	ALL
D04237P	S/R		2012Z		D04297P	PERG	1F	AE0301A	31	ALL
<b>AP0900A</b>	<b>14</b>	<b>W2030</b>	<b>SN2</b>	<b>DISCONNECT BRACKET-P9-FWD INSTR PANEL</b>						
D40924P	5		5516	20 PA	D46052P	9		AP0600B	11	ALL
D40924P	3		5522	20 PA	D46052P	11		AP0600B	11	ALL
D40924P	7		5523	20 PA	D46052P	12		AP0600B	11	ALL
D40924P	25		5526	20 PA	D46052P	26		AP0600B	11	ALL
D40924P	26		5527	20 PA	D46052P	27		AP0600B	11	ALL
<b>AP0900A</b>	<b>16</b>	<b>W2383</b>	<b>RB2</b>	<b>DISCONNECT BRACKET-P9-FWD INSTR PANEL</b>						
D46033P	5		0015	24 PK	D46065P	15		AP0600B	15	ALL
D46033P	9		0019	20 PA	D46065P	19		AP0600B	15	ALL
D46033P	1		0031	20 PA	D46065P	31		AP0600B	15	ALL
D46033P	2		0032	20 PA	D46065P	32		AP0600B	15	YC051-YD155
D46033P	11		0035	20 PA	SP02141		S			YD158-YD170
<b>AP0900A</b>	<b>17</b>	<b>W2175</b>	<b>LA2</b>	<b>DISCONNECT BRACKET-P9-FWD INSTR PANEL</b>						
D41823P	4		0016	16 PA	D41803P	16		AP1800B	06	ALL
D41823P	7		0018	16 PA	D41803P	18		AP1800B	06	YC051-YD155
D41823P	9		0019	20 PA	D41803P	19		AP1800B	06	ALL
D41823P	10		0020	16 PA	D41803P	20		AP1800B	06	ALL
D41823P	1		0021	20 PA	D41803P	21		AP1800B	06	ALL
D41823P	3		0023	20 PA	D41803P	23		AP1800B	06	ALL
D41823P	5		0025	20 PA	D41803P	25		AP1800B	06	ALL
<b>AP0900A</b>	<b>19</b>	<b>W2651</b>	<b>SA2</b>	<b>DISCONNECT BRACKET-P9-FWD INSTR PANEL</b>						
D41833P	2		0018	20 PA	D41807P	18		AP1800B	08	ALL
D41833P	3		0020	20 PA	D41807P	20		AP1800B	08	ALL
D41833P	5		0021	20 PA	D41807P	21		AP1800B	08	ALL
D41833P	6		0022	20 PA	D41807P	22		AP1800B	08	ALL

## SPARE WIRE LIST

D280A108

91-21-12

Section AP0900A

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
AP0900A	19	W2651	SA2	DISCONNECT BRACKET-P9-FWD INSTR PANEL (continued)								
D41833P	8		0024	20 PA	D41807P	24		AP1800B	08	YL963-YL999, YN236-YR328		
AP0900A	23	W2251	RF2	DISCONNECT BRACKET-P9-FWD INSTR PANEL								
D04251P	3		0003	22 PA	D04311J	3		AE0104A	06	ALL		
D04251P	7		0007	22 CQ	D04311J	7		AE0104A	06	YD157-YR328		
D04251P	9		0009	22 CQ	D04311J	9		AE0104A	06	ALL		
D04251P	12		0012	20 PA	D04311J	12		AE0104A	06	ALL		
D04251P	24		0024	22 CQ	D04311J	24		AE0104A	06	YC051-YD170		
D04251P	20		2003B	24 Y2	D04311J	20		AE0104A	06	ALL		
D04251P	19		2003R	24 Y2	D04311J	19		AE0104A	06	ALL		
D04251P	S/R		2003Z		D04311J	S/R		AE0104A	06	ALL		
D04251P	22		2004B	24 Y2	D04311J	22		AE0104A	06	ALL		
D04251P	21		2004R	24 Y2	D04311J	21		AE0104A	06	ALL		
D04251P	S/R		2004Z		D04311J	S/R		AE0104A	06	ALL		

### SPARE WIRE LIST

D280A108

91-21-12

Section AP0900A

Page 4 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To					
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
I	AP1800A		01	W3150	LN2*	DISCONNECT BRACKET-P5-P18 INTEGRATION							
I	D40198P		1		0901	20	PA	D40270P	2		D40270J	ALL	
I	D40198P		2		0902	20	PA	D40270P	3		D40270J	ALL	
I	D40198P		3		0903	20	PA	D40270P	8		D40270J	ALL	
I	D40198P		4		0904	20	PA	D40270P	9		D40270J	ALL	
I	AP1800A		05	W2218	RB2	DISCONNECT BRACKET-P5-P18 INTEGRATION							
I	D40538P		4		8006	20	PA	D40542P	B20		AE0401A	51 YC051-YD170, YN501-YR328	
I	AP1800A		06	W3144	LN2*	DISCONNECT BRACKET-P5-P18 INTEGRATION							
I	D40220P		13		0013	20	PA	D03738	CAP	Y	M01418	ALL	
I	D40220P		14		0014	20	PA	D03738	CAP	Y	M01418	ALL	
I	D40220P		15		0015	20	PA	D03732	CAP	Y	M01415	ALL	
I	D40220P		16		0016	20	PA	D03732	CAP	Y	M01415	ALL	
I	D40220P		21		0021	16	PA	D40216P	7		AB0340A	02 YC051-YC052, YL951-YL999, YR301-YR328	
I	D40220P		25		0025	20	PA	D03738	CAP	Y	M01418	YC051-YD170	
I	D40220P		26		0026	20	PA	D03732	CAP	Y	M01415	YC051-YD170	
I	AP1800A		07	W4250	RN2*	DISCONNECT BRACKET-P5-P18 INTEGRATION							
I	D40298P		1		0901	20	PA	D40272P	2		D40272J	ALL	
I	D40298P		3		0903	20	PA	D40272P	8		D40272J	ALL	
I	D40298P		4		0904	20	PA	D40272P	9		D40272J	ALL	
I	AP1800A		08	W2104	LA1	DISCONNECT BRACKET-P5-P18 INTEGRATION							
I	D40504P		12		6012	22	CQ	D40506P	A09		AE0202A	11 YC053-YD157, YL951-YR314, YR317-YR318, YR320-YR328	

### SPARE WIRE LIST

D280A108

91-21-12

Section AP1800A

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith	Pos	Bundle	Sep	Description		To						
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
I	AP1800B	01	W2201	LA2	DISCONNECT BRACKET-LOWER P18 PANEL								
I	D41805P	1	VP	0001	20	PA	D41817P	1		AE0301A	21	ALL	
I	D41805P	2		0002	20	PA	D41817P	2		AE0301A	21	ALL	
I	D41805P	3		0003	20	PA	D41817P	3		AE0301A	21	ALL	
I	D41805P	8		0008	20	PA	D41819P	8		AE0302A	27	YC051-YD170	
I	D41805P	8		0008	20	PA	D41819P	8		AE0302A	27	YL951-YL968, YN231-YN235	
I	D41805P	9		0009	20	PA	D43313P	9		AE0303A	28	YC051-YC060	
I	D41805P	10		0010	20	PA	D41817P	12		AE0301A	21	ALL	
I	D41805P	11		0011	20	PA	D41817P	11		AE0301A	21	ALL	
I	D41805P	13		0013	20	PA	D41819P	13		AE0302A	27	ALL	
I	D41805P	14		0014	20	PA	D41819P	14		AE0302A	27	YC051-YC060	
I	D41805P	15		0015	14	PA	D41819P	15		AE0302A	27	YC051-YD170	
I	D41805P	16		0016	20	PA	D41819P	16		AE0302A	27	ALL	
I	D41805P	17		0017	20	PA	D41819P	17		AE0302A	27	ALL	
I	D41805P	18		0018	20	PA	D41819P	18		AE0302A	27	ALL	
I	D41805P	19		0019	16	PA	D41817P	4		AE0301A	21	ALL	
I	D41805P	21		0021	20	PA	D41817P	5		AE0301A	21	ALL	
I	D41805P	22		0022	22	PA	D43313P	12		AE0303A	28	YC051-YD157	
I	D41805P	23		0023	16	PA	D43313P	4		AE0303A	28	YC051-YD170, YN501	
I	D41805P	23		0023	22	PA	D43313P	4		AE0303A	28	YL951-YN260	
I	D41805P	24		0024	20	PA	D43313P	2		AE0303A	28	YC051-YD170, YN501	
I	D41805P	24	0024	22	PA	D43313P	2		AE0303A	28	YL951-YN260		
I	D41805P	25	0025	22	PA	D43313P	5		AE0303A	28	YD158-YN501		
I	D41805P	26	0026	22	PA	D43313P	6		AE0303A	28	YD158-YR328		
I	D41805P	27	0027	16	PA	D43313P	7		AE0303A	28	YC051-YD170, YN501		
I	D41805P	27	0027	22	PA	D43313P	7		AE0303A	28	YL951-YN260		
I	D41805P	28	0028	20	PA	D43313P	8		AE0303A	28	YC051-YD170		
I	D41805P	28	VP	0028	22	PA	D43313P	8		AE0303A	28	YL951-YN260	
I	D41805P	28	VP	0028	20	PA	D43313P	8		AE0303A	28	YN501	
I	D41805P	20	0030	20	PA	D43313P	3		AE0303A	28	YL968-YL999, YN236-YN260		
I	AP1800B	02	W5156	SA2*	DISCONNECT BRACKET-LOWER P18 PANEL								
I	D40576P	8		0667	24	PK	D40666P	21		AJ0022	03	YC051-YD158, YL951-YR328	

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AP1800B

Page 1

Nov 12/2012



From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
<b>I</b>	<b>AP1800B</b>	<b>03</b>	<b>W2101</b>	<b>LA2</b>	<b>DISCONNECT BRACKET-LOWER P18 PANEL</b>							
I	D41801P	1		0001	20	PA	D41811P	A01		AE0101A	13	ALL
I	D41801P	2		0002	20	PA	D41811P	A02		AE0101A	13	ALL
I	D41801P	3		0003	20	PA	D41811P	A03		AE0101A	13	ALL
I	D41801P	8		0008	22	PA	D41811P	A08		AE0101A	13	ALL
I	D41801P	9		0009	22	PA	D41811P	A09		AE0101A	13	ALL
I	D41801P	10		0010	20	PA	D41811P	A10		AE0101A	13	ALL
I	D41801P	11		0011	20	PA	D41811P	B01		AE0101A	13	ALL
I	D41801P	12		0012	20	PA	D41811P	B02		AE0101A	13	ALL
I	D41801P	13		0013	20	PA	D41811P	B03		AE0101A	13	ALL
I	D41801P	14		0014	20	PA	D41811P	B04		AE0101A	13	ALL
I	D41801P	15		0015	20	PA	D41811P	B05		AE0101A	13	ALL
I	D41801P	19		0019	20	PA	D40811P	9		AE0801A	15	YC051-YC052
I	D41801P	19		0019	20	PA	D40811P	9		AE0801A	19	YC053-YD170
I	D41801P	20		0020	20	PA	D40811P	10		AE0801A	15	YC051-YC052
I	D41801P	20		0020	20	PA	D40811P	10		AE0801A	19	YC053-YD170
I	D41801P	21		0021	20	PA	D40811P	11		AE0801A	15	YC051-YC052
I	D41801P	21		0021	20	PA	D40811P	11		AE0801A	19	YC053-YD170
I	D41801P	22		0022	20	PA	D40811P	12		AE0801A	15	YC051-YC052
I	D41801P	22		0022	20	PA	D40811P	12		AE0801A	19	YC053-YD170
<b>I</b>	<b>AP1800B</b>	<b>06</b>	<b>W2175</b>	<b>LA2</b>	<b>DISCONNECT BRACKET-LOWER P18 PANEL</b>							
I	D41803P	6		0006	22	PA	D41821P	A06		AE0101A	24	ALL
I	D41803P	8		0008	20	PA	D41821P	A08		AE0101A	24	ALL
I	D41803P	9		0009	22	PA	D41821P	A09		AE0101A	24	ALL
I	D41803P	10		0010	22	PA	D41821P	A10		AE0101A	24	ALL
I	D41803P	12		0012	20	PA	D41821P	B02		AE0101A	24	YL951-YR328
I	D41803P	13		0013	20	PA	D41821P	B03		AE0101A	24	ALL
I	D41803P	15		0015	20	PA	D41821P	B05		AE0101A	24	ALL
I	D41803P	16		0016	16	PA	D41823P	4		AP0900A	17	ALL
I	D41803P	17		0017	20	PA	D41821P	B07		AE0101A	24	ALL
I	D41803P	18		0018	16	PA	D41823P	7		AP0900A	17	YC051-YD155
I	D41803P	19		0019	20	PA	D41823P	9		AP0900A	17	ALL
I	D41803P	20		0020	16	PA	D41823P	10		AP0900A	17	ALL
I	D41803P	21		0021	20	PA	D41823P	1		AP0900A	17	ALL
I	D41803P	23		0023	20	PA	D41823P	3		AP0900A	17	ALL
I	D41803P	24		0024	16	PA	D41821P	G		AE0101A	24	YC051-YC061
I	D41803P	CAP	Y	0024	16	PA	D41821P	G		AE0101A	24	YC062-YR328
I	D41803P	25		0025	20	PA	D41823P	5		AP0900A	17	ALL

**SPARE WIRE LIST**

D280A108

**91-21-12**

Section AP1800B

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith	Pos	Bundle	Sep	Description			To					
	From Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
I	AP1800B	07	W5514	SA2	DISCONNECT BRACKET-LOWER P18 PANEL								
	D40830P	1		5570	20	PA	D40824P	32		AP0900A	05	YC051-YD158, YL951-YR328	
	D40830P	2		5571	20	PA	D40824P	33		AP0900A	05	YC051-YD158, YL951-YR328	
	D40830P	3		5572	20	PA	D40826J	12		AE0104A	27	YC051-YD158, YL951-YR328	
	D40830P	4		5573	20	PA	D40826J	13		AE0104A	27	YC051-YD158, YL951-YR328	
I	AP1800B	08	W2651	SA2	DISCONNECT BRACKET-LOWER P18 PANEL								
	D41807P	1		0001	20	PA	D41827J	11		AE0102A	06	ALL	
	D41807P	9		0009	22	CQ	SP02186		S			YD158-YR328	
	D41807P	27		0010	20	PA	SP02085		S			YD158-YR328	
	D41807P	12		0012	20	PA	D41831P	1		AE0103A	17	ALL	
	D41807P	13		0013	20	PA	D41831P	2		AE0103A	17	ALL	
	D41807P	18		0018	20	PA	D41833P	2		AP0900A	19	ALL	
	D41807P	6		0019	16	PA	D41831P	7		AE0103A	17	YD158-YR328	
	D41807P	20		0020	20	PA	D41833P	3		AP0900A	19	ALL	
	D41807P	21		0021	20	PA	D41833P	5		AP0900A	19	ALL	
	D41807P	22		0022	20	PA	D41833P	6		AP0900A	19	ALL	
	D41807P	24		0024	20	PA	D41833P	8		AP0900A	19	YL963-YL999, YN236-YR328	
	D41807P	29		0029	22	PA	D41831P	6		AE0103A	17	YN231-YN501	
I	AP1800B	09	W2653	SA2	DISCONNECT BRACKET-LOWER P18 PANEL								
	D41809P	1		0001	20	PA	D41837P	1		AE0301A	22	ALL	
	D41809P	2		0002	22	PA	D41837P	2		AE0301A	22	ALL	
	D41809P	11		0011	20	PA	D41839P	1		AE0302A	26	ALL	
	D41809P	12		0012	20	PA	D41839P	2		AE0302A	26	ALL	
	D41809P	19		0019	16	PA	D41837P	7		AE0301A	22	ALL	
	D41809P	23		0023	18	PA	D41837P	10		AE0301A	22	ALL	

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AP1800B

Page 3 End

Nov 12/2012

	From Matewith	Pos	Bundle	Sep	Description		To					Effectivity	
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos		
I	AS0001L	01	W1168	LB2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)								
	D30260	39		2016B	20	HQ	D30084	31		AW0258L	03	YC056-YC058	
I	D30260	39		2016B	20	E5	D30084	31		AW0258L	03	YC059-YR328	
	D30260	22		2016R	20	HQ	D30084	30		AW0258L	03	YC056-YC058	
I	D30260	22		2016R	20	E5	D30084	30		AW0258L	03	YC059-YR328	
I	D30260	PERB		2016Z			D30084	PERB		AW0258L	03	YC056-YR328	
I	AS0001L	03	W1170	LA2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)								
I	D30212	2		2005B	20	HQ	D08056P	14		AW0258L	06	ALL	
I	D30212	1		2005R	20	HQ	D08056P	4		AW0258L	06	ALL	
I	D30212	S/R		2005Z			D08056P	S/R		AW0258L	06	ALL	
I	AS0001L	04	W1170	LA2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)								
I	D30252	4		2004B	20	HQ	D08056P	13		AW0258L	06	ALL	
I	D30252	3		2004R	20	HQ	D08056P	12		AW0258L	06	ALL	
I	D30252	S/R		2004Z			D08056P	S/R		AW0258L	06	ALL	
I	AS0001L	05	W1166	SB2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)								
I	D30220	2		2001B	20	HQ	D30064	16		AW0258L	05	ALL	
I	D30220	1		2001R	20	HQ	D30064	15		AW0258L	05	ALL	
I	D30220	S/R		2001Z			D30064	S/R		AW0258L	05	ALL	
I	AS0001L	06	W1170	LA2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)								
I	D30228	16		2006B	20	HQ	D08056P	10		AW0258L	06	ALL	
I	D30228	15		2006R	20	HQ	D08056P	2		AW0258L	06	ALL	
I	D30228	S/R		2006Z			D08056P	S/R		AW0258L	06	ALL	
I	AS0001L	07	W1166	SB2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)								
I	D30256	4		2002B	20	HQ	D30064	18		AW0258L	05	ALL	
I	D30256	3		2002R	20	HQ	D30064	17		AW0258L	05	ALL	
I	D30256	S/R		2002Z			D30064	S/R		AW0258L	05	ALL	
I	AS0001L	08	W1168	LB2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)								
	D30204	13		2015B	20	HQ	D30084	14		AW0258L	03	YC056-YC058	
I	D30204	13		2015B	20	E5	D30084	14		AW0258L	03	YC059-YR328	
	D30204	4		2015R	20	HQ	D30084	5		AW0258L	03	YC056-YC058	
I	D30204	4		2015R	20	E5	D30084	5		AW0258L	03	YC059-YR328	
I	D30204	PERB		2015Z			D30084	PERB		AW0258L	03	YC056-YR328	

## SPARE WIRE LIST

D280A108

91-21-12

Section AS0001L

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
AS0001L		09	W1164	SA1	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)							
D30234		26		2005B	20	HQ	D30016	21		AW0258L	04	YC051-YD158, YN231
D30234		26		2005B	20	HQ	D30016	30		AW0258L	04	YD160-YL999, YN232-YR328
D30234		12		2005R	20	HQ	D30016	20		AW0258L	04	YC051-YD158, YN231
D30234		12		2005R	20	HQ	D30016	32		AW0258L	04	YD160-YL999, YN232-YR328
D30234		S/R		2005Z			D30016	S/R		AW0258L	04	ALL
D30234		37		2006B	20	HQ	D30016	37		AW0258L	04	ALL
D30234		20		2006R	20	HQ	D30016	36		AW0258L	04	ALL
D30234		S/R		2006Z			D30016	S/R		AW0258L	04	ALL

### SPARE WIRE LIST

D280A108

91-21-12

Section AS0001L

Page 2 End

Nov 12/2012

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
I AS0001R		01	W1268	RB2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)							
D30460		39		2016B	20	HQ	D30184	31		AW0258R	03	YC056-YC058
D30460		39		2016B	20	E5	D30184	31		AW0258R	03	YC059-YR328
D30460		22		2016R	20	HQ	D30184	30		AW0258R	03	YC056-YC058
D30460		22		2016R	20	E5	D30184	30		AW0258R	03	YC059-YR328
D30460	PERB			2016Z			D30184	PERB		AW0258R	03	YC056-YR328
I AS0001R		03	W1270	RA2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)							
D30412		2		2005B	20	HQ	D08156P	14		AW0258R	06	ALL
D30412		1		2005R	20	HQ	D08156P	4		AW0258R	06	ALL
D30412	S/R			2005Z			D08156P	S/R		AW0258R	06	ALL
I AS0001R		04	W1270	RA2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)							
D30452		4		2004B	20	HQ	D08156P	13		AW0258R	06	ALL
D30452		3		2004R	20	HQ	D08156P	12		AW0258R	06	ALL
D30452	S/R			2004Z			D08156P	S/R		AW0258R	06	ALL
I AS0001R		05	W1266	SB2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)							
D30420		2		2001B	20	HQ	D30164	16		AW0258R	05	ALL
D30420		1		2001R	20	HQ	D30164	15		AW0258R	05	ALL
D30420	S/R			2001Z			D30164	S/R		AW0258R	05	ALL
I AS0001R		06	W1270	RA2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)							
D30428		16		2006B	20	HQ	D08156P	10		AW0258R	06	ALL
D30428		15		2006R	20	HQ	D08156P	2		AW0258R	06	ALL
D30428	S/R			2006Z			D08156P	S/R		AW0258R	06	ALL
I AS0001R		07	W1266	SB2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)							
D30456		4		2002B	20	HQ	D30164	18		AW0258R	05	ALL
D30456		3		2002R	20	HQ	D30164	17		AW0258R	05	ALL
D30456	S/R			2002Z			D30164	S/R		AW0258R	05	ALL
I AS0001R		08	W1268	RB2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)							
D30404		13		2015B	20	HQ	D30184	14		AW0258R	03	YC056-YC058
D30404		13		2015B	20	E5	D30184	14		AW0258R	03	YC059-YR328
D30404		4		2015R	20	HQ	D30184	5		AW0258R	03	YC056-YC058
D30404		4		2015R	20	E5	D30184	5		AW0258R	03	YC059-YR328
D30404	PERB			2015Z			D30184	PERB		AW0258R	03	YC056-YR328

## SPARE WIRE LIST

D280A108

91-21-12

Section AS0001R

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
AS0001R		09	W1264	SN1	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)							
D30434		26		2005B	20	HQ	D30116	21		AW0258R	04	YC051-YD158, YN231
D30434		26		2005B	20	HQ	D30116	30		AW0258R	04	YD160-YL999, YN232-YR328
D30434		12		2005R	20	HQ	D30116	20		AW0258R	04	YC051-YD158, YN231
D30434		12		2005R	20	HQ	D30116	32		AW0258R	04	YD160-YL999, YN232-YR328
D30434		S/R		2005Z			D30116	S/R		AW0258R	04	ALL
D30434		37		2006B	20	HQ	D30116	37		AW0258R	04	ALL
D30434		20		2006R	20	HQ	D30116	36		AW0258R	04	ALL
D30434		S/R		2006Z			D30116	S/R		AW0258R	04	ALL

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AS0001R

Page 2 End

Nov 12/2012



	From	Matewith	Pos	Bundle	Sep	Description		To		Pos	Effectivity		
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type			Matewith	
I	AS0002L		02	W1172	LA2	DISCONNECT BRACKET-T/R LEFT STRUT							
	D30202		11		2014B	20	HQ	D30042	12		AW0258L	02	YC056-YC058
I	D30202		11		2014B	20	E5	D30042	12		AW0258L	02	YC059-YR328
	D30202		2		2014R	20	HQ	D30042	3		AW0258L	02	YC056-YC058
I	D30202		2		2014R	20	E5	D30042	3		AW0258L	02	YC059-YR328
I	D30202	PERB			2014Z			D30042	PERB		AW0258L	02	YC056-YR328

## SPARE WIRE LIST

D280A108

91-21-12

Section AS0002L

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith			
I	AS0002R		02	W1272	RA2	DISCONNECT BRACKET-T/R RIGHT STRUT							
	D30402		11		2014B	20	HQ	D30142	12		AW0258R	02	YC056-YC058
I	D30402		11		2014B	20	E5	D30142	12		AW0258R	02	YC059-YR328
	D30402		2		2014R	20	HQ	D30142	3		AW0258R	02	YC056-YC058
I	D30402		2		2014R	20	E5	D30142	3		AW0258R	02	YC059-YR328
I	D30402	PERB			2014Z			D30142	PERB		AW0258R	02	YC056-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AS0002R

Page 1 End

Nov 12/2012





	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith		
I	AS0003L		02	W1172	LA2	DISCONNECT BRACKET T/R LEFT STRUT							
	D30206		11		2016B	20	HQ	D30042	14		AW0258L	02	YC056-YC058
I	D30206		11		2016B	20	E5	D30042	14		AW0258L	02	YC059-YR328
	D30206		2		2016R	20	HQ	D30042	32		AW0258L	02	YC056-YC058
I	D30206		2		2016R	20	E5	D30042	32		AW0258L	02	YC059-YR328
I	D30206		PERB		2016Z			D30042	PERB		AW0258L	02	YC056-YR328

## SPARE WIRE LIST

D280A108

91-21-12

Section AS0003L

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith			
I	AS0003R		02	W1272	RA2	DISCONNECT BRACKET-T/R RIGHT STRUT							
	D30406		11		2016B	20	HQ	D30142	14		AW0258R	02	YC056-YC058
I	D30406		11		2016B	20	E5	D30142	14		AW0258R	02	YC059-YR328
	D30406		2		2016R	20	HQ	D30142	32		AW0258R	02	YC056-YC058
I	D30406		2		2016R	20	E5	D30142	32		AW0258R	02	YC059-YR328
I	D30406	PERB			2016Z			D30142	PERB		AW0258R	02	YC056-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AS0003R

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith		Pos	Bundle	Sep	Description		To						
From													
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
I	AW0258L	02	W1172	LA2	DISCONNECT BRACKET								
	D30042	12		2014B	20	HQ	D30202	11		AS0002L	02	YC056-YC058	
I	D30042	12		2014B	20	E5	D30202	11		AS0002L	02	YC059-YR328	
	D30042	3		2014R	20	HQ	D30202	2		AS0002L	02	YC056-YC058	
I	D30042	3		2014R	20	E5	D30202	2		AS0002L	02	YC059-YR328	
I	D30042	PERB		2014Z			D30202	PERB		AS0002L	02	YC056-YR328	
	D30042	14		2016B	20	HQ	D30206	11		AS0003L	02	YC056-YC058	
I	D30042	14		2016B	20	E5	D30206	11		AS0003L	02	YC059-YR328	
	D30042	32		2016R	20	HQ	D30206	2		AS0003L	02	YC056-YC058	
I	D30042	32		2016R	20	E5	D30206	2		AS0003L	02	YC059-YR328	
I	D30042	PERB		2016Z			D30206	PERB		AS0003L	02	YC056-YR328	
I	AW0258L	03	W1168	LB2	DISCONNECT BRACKET								
	D30084	14		2015B	20	HQ	D30204	13		AS0001L	08	YC056-YC058	
I	D30084	14		2015B	20	E5	D30204	13		AS0001L	08	YC059-YR328	
	D30084	5		2015R	20	HQ	D30204	4		AS0001L	08	YC056-YC058	
I	D30084	5		2015R	20	E5	D30204	4		AS0001L	08	YC059-YR328	
I	D30084	PERB		2015Z			D30204	PERB		AS0001L	08	YC056-YR328	
	D30084	31		2016B	20	HQ	D30260	39		AS0001L	01	YC056-YC058	
I	D30084	31		2016B	20	E5	D30260	39		AS0001L	01	YC059-YR328	
	D30084	30		2016R	20	HQ	D30260	22		AS0001L	01	YC056-YC058	
I	D30084	30		2016R	20	E5	D30260	22		AS0001L	01	YC059-YR328	
I	D30084	PERB		2016Z			D30260	PERB		AS0001L	01	YC056-YR328	
I	AW0258L	04	W1164	SA1	DISCONNECT BRACKET								
	D30016	21		2005B	20	HQ	D30234	26		AS0001L	09	YC051-YD158, YN231	
	D30016	30		2005B	20	HQ	D30234	26		AS0001L	09	YD160-YL999, YN232-YR328	
	D30016	20		2005R	20	HQ	D30234	12		AS0001L	09	YC051-YD158, YN231	
	D30016	32		2005R	20	HQ	D30234	12		AS0001L	09	YD160-YL999, YN232-YR328	
I	D30016	S/R		2005Z			D30234	S/R		AS0001L	09	ALL	
I	D30016	37		2006B	20	HQ	D30234	37		AS0001L	09	ALL	
I	D30016	36		2006R	20	HQ	D30234	20		AS0001L	09	ALL	
I	D30016	S/R		2006Z			D30234	S/R		AS0001L	09	ALL	

### SPARE WIRE LIST

D280A108

91-21-12

Section AW0258L

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith	Pos	Bundle	Sep	Description		To					Effectivity	
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos		
I	AW0258L	04	W1184	SA1	DISCONNECT BRACKET								
	D30014	21		2001B	20	HQ	D39935	26		DM0017		YC051-YD158, YN231	
	D30014	30		2001B	20	HQ	D39935	26		DM0017		YL951-YL999, YN232-YR328	
	D30014	20		2001R	20	HQ	D39935	25		DM0017		YC051-YD158, YN231	
	D30014	32		2001R	20	HQ	D39935	25		DM0017		YL951-YL999, YN232-YR328	
	D30014	S/R		2001Z			D39935	S/R		DM0017		YC051-YD158, YL951-YR328	
	D30014	37		2004B	20	HQ	D39911	6		AC0520		YC051-YD158, YL951-YR328	
	D30014	36		2004R	20	HQ	D39911	5		AC0520		YC051-YD158, YL951-YR328	
	D30014	S/R		2004Z			D39911	S/R		AC0520		YC051-YD158, YL951-YR328	
I	AW0258L	05	W1166	SB2	DISCONNECT BRACKET								
	D30064	16		2001B	20	HQ	D30220	2		AS0001L	05	ALL	
	D30064	15		2001R	20	HQ	D30220	1		AS0001L	05	ALL	
	D30064	S/R		2001Z			D30220	S/R		AS0001L	05	ALL	
	D30064	18		2002B	20	HQ	D30256	4		AS0001L	07	ALL	
	D30064	17		2002R	20	HQ	D30256	3		AS0001L	07	ALL	
	D30064	S/R		2002Z			D30256	S/R		AS0001L	07	ALL	
I	AW0258L	05	W1182	SB2	DISCONNECT BRACKET								
	D30062	16		2001B	20	HQ	D39931	2		AC0520		ALL	
	D30062	15		2001R	20	HQ	D39931	3		AC0520		ALL	
	D30062	S/R		2001Z			D39931	S/R		AC0520		ALL	
	D30062	18		2002B	20	HQ	D39931	4		AC0520		ALL	
	D30062	17		2002R	20	HQ	D39931	5		AC0520		ALL	
	D30062	S/R		2002Z			D39931	S/R		AC0520		ALL	
I	AW0258L	06	W1170	LA2	DISCONNECT BRACKET								
	D08056P	13		2004B	20	HQ	D30252	4		AS0001L	04	ALL	
	D08056P	12		2004R	20	HQ	D30252	3		AS0001L	04	ALL	
	D08056P	S/R		2004Z			D30252	S/R		AS0001L	04	ALL	
	D08056P	14		2005B	20	HQ	D30212	2		AS0001L	03	ALL	

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AW0258L

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description			To						
Equip	Term	Type	Wire No.	GA	TY		Equip	Term	Type	Matewith	Pos	Effectivity	
<b>AW0258L</b>	<b>06</b>	<b>W1170</b>	<b>LA2</b>	<b>DISCONNECT BRACKET (continued)</b>									
D08056P	4		2005R	20	HQ		D30212	1		AS0001L	03	ALL	
D08056P	S/R		2005Z				D30212	S/R		AS0001L	03	ALL	
D08056P	10		2006B	20	HQ		D30228	16		AS0001L	06	ALL	
D08056P	2		2006R	20	HQ		D30228	15		AS0001L	06	ALL	
D08056P	S/R		2006Z				D30228	S/R		AS0001L	06	ALL	
<b>AW0258L</b>	<b>06</b>	<b>W1178</b>	<b>LN2</b>	<b>DISCONNECT BRACKET</b>									
D08056J	13		2001B	20	HQ		D39927	11		AC0520		ALL	
D08056J	12		2001R	20	HQ		D39927	24		AC0520		ALL	
D08056J	S/R		2001Z				D39927	S/R		AC0520		ALL	
D08056J	10		2002B	20	HQ		D39927	10		AC0520		ALL	
D08056J	2		2002R	20	HQ		D39927	2		AC0520		ALL	
D08056J	S/R		2002Z				D39927	S/R		AC0520		ALL	
D08056J	14		2003B	20	HQ		D39927	15		AC0520		ALL	
D08056J	4		2003R	20	HQ		D39927	16		AC0520		ALL	
D08056J	S/R		2003Z				D39927	S/R		AC0520		ALL	

### SPARE WIRE LIST

D280A108

**91-21-12**

Section AW0258L

Page 3 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
I	AW0258R	02	W1272	RA2	DISCONNECT BRACKET							
I	D30142	12		2014B	20	HQ	D30402	11		AS0002R	02	YC056-YC058
I	D30142	12		2014B	20	E5	D30402	11		AS0002R	02	YC059-YR328
I	D30142	3		2014R	20	HQ	D30402	2		AS0002R	02	YC056-YC058
I	D30142	3		2014R	20	E5	D30402	2		AS0002R	02	YC059-YR328
I	D30142	PERB		2014Z			D30402	PERB		AS0002R	02	YC056-YR328
I	D30142	14		2016B	20	HQ	D30406	11		AS0003R	02	YC056-YC058
I	D30142	14		2016B	20	E5	D30406	11		AS0003R	02	YC059-YR328
I	D30142	32		2016R	20	HQ	D30406	2		AS0003R	02	YC056-YC058
I	D30142	32		2016R	20	E5	D30406	2		AS0003R	02	YC059-YR328
I	D30142	PERB		2016Z			D30406	PERB		AS0003R	02	YC056-YR328
I	AW0258R	03	W1268	RB2	DISCONNECT BRACKET							
I	D30184	14		2015B	20	HQ	D30404	13		AS0001R	08	YC056-YC058
I	D30184	14		2015B	20	E5	D30404	13		AS0001R	08	YC059-YR328
I	D30184	5		2015R	20	HQ	D30404	4		AS0001R	08	YC056-YC058
I	D30184	5		2015R	20	E5	D30404	4		AS0001R	08	YC059-YR328
I	D30184	PERB		2015Z			D30404	PERB		AS0001R	08	YC056-YR328
I	D30184	31		2016B	20	HQ	D30460	39		AS0001R	01	YC056-YC058
I	D30184	31		2016B	20	E5	D30460	39		AS0001R	01	YC059-YR328
I	D30184	30		2016R	20	HQ	D30460	22		AS0001R	01	YC056-YC058
I	D30184	30		2016R	20	E5	D30460	22		AS0001R	01	YC059-YR328
I	D30184	PERB		2016Z			D30460	PERB		AS0001R	01	YC056-YR328
I	AW0258R	04	W1264	SN1	DISCONNECT BRACKET							
I	D30116	21		2005B	20	HQ	D30434	26		AS0001R	09	YC051-YD158, YN231
I	D30116	30		2005B	20	HQ	D30434	26		AS0001R	09	YD160-YL999, YN232-YR328
I	D30116	20		2005R	20	HQ	D30434	12		AS0001R	09	YC051-YD158, YN231
I	D30116	32		2005R	20	HQ	D30434	12		AS0001R	09	YD160-YL999, YN232-YR328
I	D30116	S/R		2005Z			D30434	S/R		AS0001R	09	ALL
I	D30116	37		2006B	20	HQ	D30434	37		AS0001R	09	ALL
I	D30116	36		2006R	20	HQ	D30434	20		AS0001R	09	ALL
I	D30116	S/R		2006Z			D30434	S/R		AS0001R	09	ALL

### SPARE WIRE LIST

D280A108

91-21-12

Section AW0258R

Page 1

Nov 12/2012

	From Matewith	Pos	Bundle	Sep	Description		To					Effectivity	
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos		
I	AW0258R	04	W1284	SN1	DISCONNECT BRACKET								
I	D30114	21		2001B	20	HQ	D39936	26		AD0520		YC051-YD158, YN231	
I	D30114	30		2001B	20	HQ	D39936	26		AD0520		YD160-YL999, YN232-YR328	
I	D30114	20		2001R	20	HQ	D39936	25		AD0520		YC051-YD158, YN231	
I	D30114	32		2001R	20	HQ	D39936	25		AD0520		YD160-YL999, YN232-YR328	
I	D30114	S/R		2001Z			D39936	S/R		AD0520		ALL	
I	D30114	37		2004B	20	HQ	D39912	6		AD0520		ALL	
I	D30114	36		2004R	20	HQ	D39912	5		AD0520		ALL	
I	D30114	S/R		2004Z			D39912	S/R		AD0520		ALL	
I	AW0258R	05	W1266	SB2	DISCONNECT BRACKET								
I	D30164	16		2001B	20	HQ	D30420	2		AS0001R	05	ALL	
I	D30164	15		2001R	20	HQ	D30420	1		AS0001R	05	ALL	
I	D30164	S/R		2001Z			D30420	S/R		AS0001R	05	ALL	
I	D30164	18		2002B	20	HQ	D30456	4		AS0001R	07	ALL	
I	D30164	17		2002R	20	HQ	D30456	3		AS0001R	07	ALL	
I	D30164	S/R		2002Z			D30456	S/R		AS0001R	07	ALL	
I	AW0258R	05	W1282	SB2*	DISCONNECT BRACKET								
I	D30162	16		2001B	20	HQ	D39932	2		AD0520		ALL	
I	D30162	15		2001R	20	HQ	D39932	3		AD0520		ALL	
I	D30162	S/R		2001Z			D39932	S/R		AD0520		ALL	
I	D30162	18		2002B	20	HQ	D39932	4		AD0520		ALL	
I	D30162	17		2002R	20	HQ	D39932	5		AD0520		ALL	
I	D30162	S/R		2002Z			D39932	S/R		AD0520		ALL	
I	AW0258R	06	W1270	RA2	DISCONNECT BRACKET								
I	D08156P	13		2004B	20	HQ	D30452	4		AS0001R	04	ALL	
I	D08156P	12		2004R	20	HQ	D30452	3		AS0001R	04	ALL	
I	D08156P	S/R		2004Z			D30452	S/R		AS0001R	04	ALL	
I	D08156P	14		2005B	20	HQ	D30412	2		AS0001R	03	ALL	
I	D08156P	4		2005R	20	HQ	D30412	1		AS0001R	03	ALL	
I	D08156P	S/R		2005Z			D30412	S/R		AS0001R	03	ALL	
I	D08156P	10		2006B	20	HQ	D30428	16		AS0001R	06	ALL	
I	D08156P	2		2006R	20	HQ	D30428	15		AS0001R	06	ALL	

## SPARE WIRE LIST

D280A108

91-21-12

Section AW0258R

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description	To							
Equip	Term	Type	Wire No.	GA TY	Equip	Term	Type	Matewith	Pos	Effectivity		
AW0258R	06	W1270	RA2	DISCONNECT BRACKET (continued)								
D08156P	S/R		2006Z		D30428	S/R		AS0001R	06	ALL		
AW0258R	06	W1278	RN2	DISCONNECT BRACKET								
D08156J	13		2001B	20 HQ	D39928	11		AD0520		ALL		
D08156J	12		2001R	20 HQ	D39928	24		AD0520		ALL		
D08156J	S/R		2001Z		D39928	S/R		AD0520		ALL		
D08156J	10		2002B	20 HQ	D39928	10		AD0520		ALL		
D08156J	2		2002R	20 HQ	D39928	2		AD0520		ALL		
D08156J	S/R		2002Z		D39928	S/R		AD0520		ALL		
D08156J	14		2003B	20 HQ	D39928	15		AD0520		ALL		
D08156J	4		2003R	20 HQ	D39928	16		AD0520		ALL		
D08156J	S/R		2003Z		D39928	S/R		AD0520		ALL		

### SPARE WIRE LIST

D280A108

91-21-12

Section AW0258R

Page 3 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
I D04499J			W5337	SN2	RECP-P19 PNL							
D04499P	1			0001	22	PA	D04161P	A07		AE0401A	25	YC051-YL954, YN231-YN235

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D04499J

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith			
I	D40020P			W0142	LN2	PLUG-							
I	D40020J	17			0017	22	PA	D03160	5		L01086		YC051-YN260
I	D40020J	18			0018	22	PA	D03160	1		L01086		YC051-YN260

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D40020P

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith		
I	D40026P			W0152	SN2	PLUG-							
I	D40026J		17		0017	22	PA	D10180	5		L01223		ALL
I	D40026J		18		0018	22	PA	D10180	1		L01223		ALL

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D40026P

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith		
I	D40038J			W3146	LN2*	RCPT-							
I	D40038P		CAP	Y	0401	20	PA	D40052J	1		D40052P		YC051-YN260
I	D40038P		CAP	Y	0402	20	PA	D40052J	2		D40052P		YC051-YN260

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D40038J

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith		
I	D40052P			W3146	LN2*	PLUG-							
I	D40052J		1		0401	20	PA	D40038P	CAP	Y	D40038J		YC051-YN260
I	D40052J		2		0402	20	PA	D40038P	CAP	Y	D40038J		YC051-YN260

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D40052P

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To					
	Equip	Term	Type	Wire No.	GA	TY		Equip	Term	Type	Matewith	Pos	Effectivity
I	D40110J			W3158	LN1*	RCPT-							
I	D40110P	2			0203	20	PA	D40102J	3		AB0340A	09	YC051-YN260

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D40110J

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
<b>D40110P</b>			<b>W3146</b>	<b>LN2*</b>	<b>PLUG-</b>							
D40110J	2		0027		18	PA	D40984J	CAP	Y	D40984P		YD158-YD170

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D40110P

Page 1 End

May 10/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
<b>D40112J</b>			<b>W3158</b>	<b>LN1*</b>	<b>RCPT-</b>							
D40112P		2		0225	20	PA	D40102J	25		AB0340A	09	YC051-YD157, YL951-YN260

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D40112J

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
I D40114J			W3158	LN1*	RCPT-							
D40114P	2			0228	20	PA	D40102J	28		AB0340A	09	YC051-YD157, YL951-YN260

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D40114J

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith		
I	D40116J			W3158	LN1*	RCPT-							
I	D40116P		1		0111	20	PA	D40108J	11		AB0340A	06	ALL
I	D40116P		3		0112	20	PA	D40108J	12		AB0340A	06	ALL

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D40116J

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

I	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith		
I	D40210J			W4258	RN1	RCPT-							
I	D40210P		CAP	Y	0225	20	PA	D40202J	25		AB0340B	09	YC051-YN260
I	D40210P		CAP	Y	0226	20	PA	D40202J	26		AB0340B	09	YC051-YN260

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D40210J

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip					
I	D40214J			W4258	RN1	RCPT-							
I	D40214P		CAP	Y	0203	20	PA	D40202J	3		AB0340B	09	YC051-YN260
I	D40214P		CAP	Y	0204	20	PA	D40202J	4		AB0340B	09	YC051-YN260

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D40214J

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To					
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
I	D40262J			W6124	LA2	RCPT-							
I	D40262P		19		0539	22	PA	D46040J	3		AL0720D	01	YC058-YD158

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D40262J

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith		
I	D40270J			W3150	LN2*	RCPT-							
I	D40270P		2		0901	20	PA	D40198P	1		AP1800A	01	ALL
I	D40270P		3		0902	20	PA	D40198P	2		AP1800A	01	ALL
I	D40270P		8		0903	20	PA	D40198P	3		AP1800A	01	ALL
I	D40270P		9		0904	20	PA	D40198P	4		AP1800A	01	ALL

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D40270J

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

I	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith		
I	D40272J			W4250	RN2*	RCPT-							
I	D40272P		2		0901	20	PA	D40298P	1		AP1800A	07	ALL
I	D40272P		8		0903	20	PA	D40298P	3		AP1800A	07	ALL
I	D40272P		9		0904	20	PA	D40298P	4		AP1800A	07	ALL

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D40272J

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
<b>D40984P</b>												
D40984J	CAP	Y	0027	LN2*	18	PA	D40110J	2		D40110P		YD158-YD170

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D40984P

Page 1 End

May 10/2012





## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
<b>D40990P</b>			<b>W4146</b>	<b>LN2*</b>	<b>PLUG-</b>							
D40990J	2		0363		18	PA	D42004J	3		D42004P		YD158-YD170

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D40990P

Page 1 End

May 10/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
<b>D40994J</b>			<b>W3158</b>	<b>LN1*</b>	<b>RCPT-</b>							
D40994P	2		0228		20	PA	D40102J	28		AB0340A	09	YD158-YD170

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D40994J

Page 1 End

May 10/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
<b>D40994P</b>			<b>W3146</b>	<b>LN2*</b>	<b>PLUG-</b>							
D40994J	3		0383		18	PA	D42010J	2		D42010P		YD158-YD170

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D40994P

Page 1 End

May 10/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
<b>D40996J</b>			<b>W3158</b>	<b>LN1*</b>	<b>RCPT-</b>							
D40996P	2		0212		20	PA	D40102J	12		AB0340A	09	YD158-YD170

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D40996J

Page 1 End

May 10/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To					
	Equip	Term	Type	Wire No.	GA	TY		Equip	Term	Type	Matewith	Pos	Effectivity
I	D41066P			W4166	LN2*	PLUG-							
I	D41066J	C			0510	18	PA	D41088P	3		D41088J		YN501-YR328

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D41066P

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith			
I	D41074J			W3058	RN2	RCPT-							
I	D41074P	10			0575	18 PA	D41078P	B		D41078J			YN501-YR328
I	D41074P	11			0576	18 PA	D41078P	CAP	Y	D41078J			YN501-YR328
I	D41074P	12			0577	18 PA	D41078P	CAP	Y	D41078J			YN501-YR328

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D41074J

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

I	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith		
I	D41078J			W3058	RN2	RCPT-							
I	D41078P		B		0575	18	PA	D41074P	10		D41074J		YN501-YR328
I	D41078P		CAP	Y	0576	18	PA	D41074P	11		D41074J		YN501-YR328
I	D41078P		CAP	Y	0577	18	PA	D41074P	12		D41074J		YN501-YR328

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D41078J

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description							Pos	Effectivity
	Equip	Term	Type	Wire No.	GA	TY	To	Equip	Term	Type	Matewith			
I	D41082P			W0142	LN2	PLUG-								
I	D41082J	17		0017	22	PA	D03160	5		L01086			YN501-YR328	
I	D41082J	18		0018	22	PA	D03160	1		L01086			YN501-YR328	

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D41082P

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith		
I	D41088J			W4166	LN2*	RCPT-							
I	D41088P		3		0510	18	PA	D41066J	C		D41066P		YN501-YR328

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D41088J

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To					
	Equip	Term	Type	Wire No.	GA	TY		Equip	Term	Type	Matewith	Pos	Effectivity
I	D42002J			W3158	LN1*	RCPT-							
I	D42002P	2			0204	20	PA	D40102J	4		AB0340A	09	YC051-YN260

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D42002J

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To					
	Equip	Term	Type	Wire No.	GA	TY		Equip	Term	Type	Matewith	Pos	Effectivity
I	D42004J			W3158	LN1*	RCPT-							
I	D42004P	2			0226	20	PA	D40102J	26		AB0340A	09	YC051-YN260

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D42004J

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
<b>D42004P</b>			<b>W4146</b>	<b>LN2*</b>	<b>PLUG-</b>							
D42004J	3		0363		18	PA	D40990J	2		D40990P		YD158-YD170

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D42004P

Page 1 End

May 10/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
I D42006J			W3158	LN1*	RCPT-							
D42006P	2			0212	20	PA	D40102J	12		AB0340A	09	YC051-YD157, YL951-YN260

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D42006J

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
<b>D42010J</b>			<b>W3158</b>	<b>LN1*</b>	<b>RCPT-</b>							
D42010P	2		0225		20	PA	D40102J	25		AB0340A	09	YD158-YD170

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D42010J

Page 1 End

May 10/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
<b>D42010P</b>			<b>W3146</b>	<b>LN2*</b>	<b>PLUG-</b>							
D42010J	2		0383		18	PA	D40994J	3		D40994P		YD158-YD170

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section D42010P

Page 1 End

May 10/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
DM0017			W1184	SA1	CONNECTOR-FEED THROUGH							
D39935		26		2001B	20	HQ	D30014	21		AW0258L	04	YC051-YD158, YN231
D39935		26		2001B	20	HQ	D30014	30		AW0258L	04	YL951-YL999, YN232-YR328
D39935		25		2001R	20	HQ	D30014	20		AW0258L	04	YC051-YD158, YN231
D39935		25		2001R	20	HQ	D30014	32		AW0258L	04	YL951-YL999, YN232-YR328
D39935		S/R		2001Z			D30014	S/R		AW0258L	04	YC051-YD158, YL951-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section DM0017

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
DM0035			W5337	SN2	CONNECTOR-FEED THROUGH							
D40664	24			0001	22	PA	D04161P	A07		AE0401A	25	YL955-YL999, YN236, YN501-YR328

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section DM0035

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To					Pos	Effectivity	
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith				
I	L01086			W0142	LN2	SIGN-EXIT LOCATOR									
I	D03160		5		0017	22	PA	D40020J	17		D40020P		YC051-YN260		
I	D03160		5		0017	22	PA	D41082J	17		D41082P		YN501-YR328		
I	D03160		1		0018	22	PA	D40020J	18		D40020P		YC051-YN260		
I	D03160		1		0018	22	PA	D41082J	18		D41082P		YN501-YR328		

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section L01086

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

I	From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip					
I	L01223			W0152	SN2	SIGN-EXIT LOCATOR							
I	D10180		5		0017	22	PA	D40026J	17		D40026P		ALL
I	D10180		1		0018	22	PA	D40026J	18		D40026P		ALL

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section L01223

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
<b>M00276</b>												
			<b>W6248</b>	<b>LN2*</b>	<b>DETECTOR-AFT OVHT SEC 58</b>							
D00866		CAP	Y	0499	20	PA	D40500P	1		AB0500DL	05	YC051-YN236, YN501-YR328
D00866		CAP	Y	0500	20	PA	D40500P	3		AB0500DL	05	YC051-YN236, YN501-YR328

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section M00276

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To					Pos	Effectivity	
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith				
I	M00414			W3393	LG2	ACTR-MACH TRIM									
I	D00545		15		1015	20	VF	D43393J	15		AB1050L	02	YC053-YR328		
I	D00545		17		1017	20	VF	D43393J	17		AB1050L	02	YC053-YR328		
I	D00545		19		1019	20	VF	D43393J	19		AB1050L	02	YC053-YR328		
I	D00545		21		1021	20	VF	D43393J	21		AB1050L	02	YC053-YR328		
I	D00545		S/R		1021Z			D43393J	S/R		AB1050L	02	YC053-YR328		
	M00414			W5301	LG2	ACTR-MACH TRIM									
	D00545		15		0015	22	PA	D04425P	A05		AE0101A	08	YC051-YC052		
	D00545		17		0017	22	PA	D04425P	A07		AE0101A	08	YC051-YC052		
	D00545		19		0019	22	PA	D04425P	A09		AE0101A	08	YC051-YC052		
	D00545		21		0021	22	PA	D04425P	B01		AE0101A	08	YC051-YC052		

### SPARE WIRE LIST

D280A108

**91-21-12**

Section M00414

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
<b>M00943</b>												
			<b>W5367</b>	<b>LC3</b>	<b>ACTR-HYD A/P (AILERON 'A')</b>							
D01827	REF	VP	3013B		22	HG	D04073P	B02		AE0101A	27	YC051-YN236, YN501-YR328
D01827	REF	VP	3013R		22	HG	D04073P	B01		AE0101A	27	YC051-YN236, YN501-YR328
D01827	REF	VP	3013Y		22	HG	D04073P	B03		AE0101A	27	YC051-YN236, YN501-YR328
D01827	DED		3013Z				D04073P	PERG	1F	AE0101A	27	YC051-YN236, YN501-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section M00943

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
M01020			W3377	LA3	ACTR-HYD A/P (ELEVATOR 'A')							
D01681		REF	VP	3006B	22	GC	D04079P	B08		AE0101A	32	YC051-YC052
D01681		REF	VP	3006R	22	GC	D04079P	B07		AE0101A	32	YC051-YC052
D01681		REF	VP	3006Y	22	GC	D04079P	B09		AE0101A	32	YC051-YC052
I M01020			W3397	LA3	ACTR-HYD A/P (ELEVATOR 'A')							
D01681		REF	VP	3006B	22	HG	D43397J	41		AB1050L	03	YC053-YN236, YN501-YR328
D01681		REF	VP	3006R	22	HG	D43397J	40		AB1050L	03	YC053-YN236, YN501-YR328
D01681		REF	VP	3006Y	22	HG	D43397J	42		AB1050L	03	YC053-YN236, YN501-YR328
D01681				3006Z			D43397J	S/R		AB1050L	03	YC053-YD153

### SPARE WIRE LIST

D280A108

**91-21-12**

Section M01020

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>M01022</b>		<b>W3379</b>	<b>RB3</b>	<b>ACTR-HYD A/P (ELEVATOR 'B')</b>						
D01687	REF	VP	3006B	22 GC	D04081J	28		AE0104A	03	YC051-YC052
D01687	REF	VP	3006R	22 GC	D04081J	27		AE0104A	03	YC051-YC052
D01687	REF	VP	3006Y	22 GC	D04081J	29		AE0104A	03	YC051-YC052
<b>M01022</b>		<b>W3399</b>	<b>RB3</b>	<b>ACTR-HYD A/P (ELEVATOR 'B')</b>						
D01687	REF	VP	3006B	22 HG	D43389J	11		AB1080	03	YC053-YN236, YN501-YR328
D01687	REF	VP	3006R	22 HG	D43389J	10		AB1080	03	YC053-YN236, YN501-YR328
D01687	REF	VP	3006Y	22 HG	D43389J	12		AB1080	03	YC053-YN236, YN501-YR328
D01687			3006Z		D43389J	S/R		AB1080	03	YC053-YD153

### SPARE WIRE LIST

D280A108

**91-21-12**

Section M01022

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To					Effectivity	
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos		
I	M01415			W3144	LN2*	MDL-LAV A (SEE Y004++++)								
I	D03732		CAP	Y	0015	20	PA	D40220P	15		AP1800A	06	ALL	
I	D03732		CAP	Y	0016	20	PA	D40220P	16		AP1800A	06	ALL	
I	D03732		CAP	Y	0026	20	PA	D40220P	26		AP1800A	06	YC051-YD170	
I	M01415			W3307	NN2	MDL-LAV A (SEE Y004++++)								
I	D10019		40		0008	24	PK	D41337P	22		AE0103A	05	YC051-YN260	
I	D10019		39		2003B	24	PL	D41337P	24		AE0103A	05	YC051-YN260	
I	D10019		38		2003R	24	PL	D41337P	23		AE0103A	05	YC051-YN260	
I	D14366		40		0008	24	PK	D41337P	22		AE0103A	09	YN501-YR328	
I	D14366		39		2003B	24	PL	D41337P	24		AE0103A	09	YN501-YR328	
I	D14366		38		2003R	24	PL	D41337P	23		AE0103A	09	YN501-YR328	

### SPARE WIRE LIST

D280A108

**91-21-12**

Section M01415

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
	From						Equip					
	Equip	Term	Type	Wire No.	GA	TY	Equip					
I	M01418		W3058	RN2	AFT-LAV D (SEE Y007+++)							
	D11066	CAP	Y	0387	20	PA	D40170J	18		AB0340A	04	YC051-YD158, YL951-YN260
	D11066	CAP	Y	0388	20	PA	D40170J	19		AB0340A	04	YC051-YD158, YL951-YN260
	D11066	CAP	Y	0389	20	PA	D40170J	31		AB0340A	04	YC051-YD158, YL951-YN260
	D11070	CAP	Y	0284	20	PA	D40054J	5		AB0340A	01	YC051-YD158, YL951-YN260
	D11070	CAP	Y	0285	20	PA	D40054J	6		AB0340A	01	YC051-YD158, YL951-YN260
	D11070	CAP	Y	0286	20	PA	D40054J	8		AB0340A	01	YC051-YD158, YL951-YN260
	D14372	CAP	Y	0387	20	PA	D40170J	18		AB0340A	04	YN501-YR328
	D14372	CAP	Y	0388	20	PA	D40170J	19		AB0340A	04	YN501-YR328
	D14372	CAP	Y	0389	20	PA	D40170J	31		AB0340A	04	YN501-YR328
	D14376	CAP	Y	0284	20	PA	D40054J	5		AB0340A	01	YN501-YR328
	D14376	CAP	Y	0285	20	PA	D40054J	6		AB0340A	01	YN501-YR328
	D14376	CAP	Y	0286	20	PA	D40054J	8		AB0340A	01	YN501-YR328
I	M01418		W3144	LN2*	AFT-LAV D (SEE Y007+++)							
	D03738	CAP	Y	0013	20	PA	D40220P	13		AP1800A	06	ALL
	D03738	CAP	Y	0014	20	PA	D40220P	14		AP1800A	06	ALL
	D03738	CAP	Y	0025	20	PA	D40220P	25		AP1800A	06	YC051-YD170

### SPARE WIRE LIST

D280A108

91-21-12

Section M01418

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith		
I	M01672			W4142	LB2*	BATTERY PACK-EMERGENCY LIGHT							
I	D10744		CAP	Y	0037	20	PA	D40296J	7		AB0340B	07	ALL
I	D10744		CAP	Y	0039	20	PA	D40296J	CAP	Y	AB0340B	07	ALL

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section M01672

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith			
I	M01673			W3142	LN2	BATTERY PACK-EMERGENCY LIGHT							
I	D10746	CAP	Y	0038	20	PA	D40196J	8		AB0340A		03	ALL
I	D10746	CAP	Y	0039	20	PA	D40196J	CAP	Y	AB0340A		03	ALL

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section M01673

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith		
I	M01674			W4142	LB2*	BATTERY PACK-EMERGENCY LIGHT							
I	D10748		CAP	Y	0036	20	PA	D40296J	4		AB0340B	07	YC051-YN260
I	D10748		CAP	Y	0038	20	PA	D40296J	15		AB0340B	07	YC051-YN260

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section M01674

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith			
I	M02061			W5156	SA2*	MDL-PSEU							
I	D10982	21			0021	20	PA	D46116P	14	AJ0046A		13	YC051-YD157
I	M02061			W5158	SB2*	MDL-PSEU							
I	D11140	8			0008	22	PA	TB1808X	B003	1A			YC051-YD158, YN231-YN501
I	M02061			W5160	RB2*	MDL-PSEU							
I	D10986	54			0619	22	PA	D40464P	B04		AE0101B	02	YN231-YN501
I	D10988	38			0038	22	PA	TB1808X	A003	1A			YC051-YD158, YL951-YR328
I	D10988	54			0629	22	PA	D46102P	20		AJ0046A	14	YC051-YD158, YL951-YR328
I	D10988	60			2460B	22	PB	D40472P	B06		AE0402A	33	YC051-YD158, YL951-YR328
I	D10988	61			2460R	22	PB	D40472P	B05		AE0402A	33	YC051-YD158, YL951-YR328

### SPARE WIRE LIST

D280A108

91-21-12

Section M02061

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
<b>I M02195 W2805 NN2 PRINTER-ACMS ARINC 740</b>												
I D02649		B		2503B	24	Y2	D43215P	B04		AE0302A	09	YD158-YR328
I D02649		A		2503R	24	Y2	D43215P	A04		AE0302A	09	YD158-YR328
I D02649				2503Z			D43215P	PERG	1F	AE0302A	09	YD158-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section M02195

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
<b>M02263</b>			<b>W5074</b>	<b>SB2</b>								
D12820		2		6007	20	CQ	GD05066	DC..	E			YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
D12820		3		6008	20	CQ	GD05064	ST..	E			YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
D12820		1		6009	22	CQ	D46608P	9		AB0500DL	06	YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section M02263

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity

I	M02567		W5182	NN2	ISPC - POWER SUPPLY EE BAY							
I	D13908	CAP	Y	0002	20	PA	D13906	CAP	Y	M02588		YL951-YL999, YN232-YR328
I	D13908	CAP	Y	0004	20	PA	D13906	CAP	Y	M02588		YL951-YL999, YN232-YR328
I	M02567		W6182	NN2	ISPC - POWER SUPPLY EE BAY							
I	D13902	CAP	Y	0002	20	PA	D13904	CAP	Y	M02587		YL951-YL999, YN232-YR328
I	D13902	CAP	Y	0004	20	PA	D13904	CAP	Y	M02587		YL951-YL999, YN232-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section M02567

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity

I	M02587		W6182	NN2	PC POWER OUTLET (P6)							
	D13904	CAP	Y	0002	20	PA	D13902	CAP	Y	M02567		YL951-YL999, YN232-YR328
	D13904	CAP	Y	0004	20	PA	D13902	CAP	Y	M02567		YL951-YL999, YN232-YR328

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section M02587

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity

I	M02588		W5182	NN2	PC POWER OUTLET (P18)							
	D13906	CAP	Y	0002	20	PA	D13908	CAP	Y	M02567		YL951-YL999, YN232-YR328
	D13906	CAP	Y	0004	20	PA	D13908	CAP	Y	M02567		YL951-YL999, YN232-YR328

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section M02588

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip					
I	M02816			W4142	LB2*	BATTERY PACK-EMERGENCY LIGHT							
I	D14812		CAP	Y	0036	20	PA	D40296J	4		AB0340B	07	YN501-YR328
I	D14812		CAP	Y	0038	20	PA	D40296J	15		AB0340B	07	YN501-YR328

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section M02816

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
I	M2195		W2805	NN2								
I	D02649	B		2503B	24	Y2	D43215P	B04		AE0302A	09	YC056-YD157
I	D02649	A		2503R	24	Y2	D43215P	A04		AE0302A	09	YC056-YD157
I	D02649			2503Z			D43215P	PERG	1F	AE0302A	09	YC056-YD157

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section M2195

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
<b>M2263</b>			<b>W5074</b>	<b>SB2</b>								
D12816		1		6001	20	PA	GD05062	ST..	E			YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
D12816		2		6002	20	PA	GD05060	DC..	E			YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
D12816		3		6003	22	PA	D46608P	1		AB0500DL	06	YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
D12818		2		6004	20	CQ	GD05066	DC..	E			YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
D12818		3		6005	20	CQ	GD05064	ST..	E			YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
D12818		1		6006	22	CQ	D46608P	12		AB0500DL	06	YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section M2263

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity

I	N00185		W2205	SN2	IND-RADIO MAGNETIC							
	D03679	5	VP	0020	22	PA	D40049J	5		AE0104A	07	YC051-YD158, YL951-YR328
	D03679	17	VP	0021	22	PA	D40049J	6		AE0104A	07	YC051-YD158, YL951-YR328

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section N00185

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description				To			
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
I	N00186			W2205	SN2	IND-STANDBY ATTITUDE							
I	D03681		18	VP	0018	22	PA	D04205J	13		AE0102A	05	YC051-YD157
	D03681		12	VP	2504B	24	Y2	D40049J	12		AE0104A	07	YC051-YD155
	D03681		11	VP	2504R	24	Y2	D40049J	11		AE0104A	07	YC051-YD155
	D03681		DED		2504Z			D40049J	S/R		AE0104A	07	YC051-YD155

### SPARE WIRE LIST

D280A108

**91-21-12**

Section N00186

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
N00226		W2205	SN2	INTEGRATED STANDBY FLIGHT DISPLAY						
D10853	CAP	Y	0002	20 CQ	GD00179	AC..	1A			YD158, YL951-YR328
D10853	CAP	Y	0005	20 CQ	GD00179	AC..	1A			YD158, YL951-YR328
D10853	CAP	Y	0007	22 PA	SP02186		S			YD158, YL951-YR328
D10853	CAP	Y	0008	20 PA	GD00179	DC..	1A			YD158, YL951-YR328
D10853	CAP	Y	0009	20 PA	GD00179	ST..	1A			YD158, YL951-YR328
D10853	CAP	Y	0013	20 PA	GD00179	DC..	1A			YD158, YL951-YR328
D10853	CAP	Y	0014	20 PA	SP02085		S			YD158, YL951-YR328
D10853	CAP	Y	0026	20 PA	GD00179	ST..	1A			YD158, YL951-YR328
D10853	CAP	Y	2004B	24 Y2	D04205J	11		AE0102A	05	YD158, YL951-YR328
D10853	CAP	Y	2004R	24 Y2	D04205J	10		AE0102A	05	YD158, YL951-YR328
D10853	DED		2004Z		D04205J	S/R		AE0102A	05	YD158, YL951-YR328
D10853	CAP	Y	2012B	24 Y2	D40049J	4		AE0104A	07	YD158, YL951-YR328
D10853	CAP	Y	2012R	24 Y2	D40049J	3		AE0104A	07	YD158, YL951-YR328
D10853	DED		2012Z		D40049J	S/R		AE0104A	07	YD158, YL951-YR328
D10853	CAP	Y	2015B	24 Y2	D04205J	13		AE0102A	05	YD158, YL951-YR328
D10853	CAP	Y	2015R	24 Y2	D04205J	12		AE0102A	05	YD158, YL951-YR328
D10853	DED		2015Z		D04205J	S/R		AE0102A	05	YD158, YL951-YR328

### SPARE WIRE LIST

D280A108

91-21-12

Section N00226

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
<b>P003-07</b>												
			<b>W0003</b>	<b>NB2</b>	<b>PNL-GND PROX TEST</b>							
D01205		CAP	Y	0609	22	PA	D04237J	33		AP0900A	06	YC053-YD158, YL951-YR328

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section P003-07

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To					
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
I	P005-28			W2135	RB2	PNL-INSTRUMENT SWITCHING							
I	D01817	CAP	Y	0034	22	PA	D45237J	B20		AE0502A	07	ALL	

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section P005-28

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>P008-25</b>		<b>W2149</b>	<b>NA2</b>	<b>PNL-CAPTAIN VHF NAVIGATION</b>						
D00263	CAP	Y	0023	22 PA	D04029J	23		AE0102A	03	YC051-YD158, YL951-YR328
D00263	CAP	Y	2006B	24 Y2	D04029J	36		AE0102A	03	YC051-YD158, YL951-YR328
D00263	CAP	Y	2006R	24 Y2	D04029J	35		AE0102A	03	YC051-YD158, YL951-YR328
D00263	S/R		2006Z		D04029J	S/R		AE0102A	03	YC051-YD158, YL951-YR328
D00303	CAP	Y	0027	22 PA	D04029J	27		AE0102A	03	YC051-YD158, YL951-YR328
D00303	CAP	Y	2005B	24 Y2	D04029J	34		AE0102A	03	YC051-YD158, YL951-YR328
D00303	CAP	Y	2005R	24 Y2	D04029J	33		AE0102A	03	YC051-YD158, YL951-YR328
D00303	S/R		2005Z		D04029J	S/R		AE0102A	03	YC051-YD158, YL951-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section P008-25

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
<b>P008-26</b>		<b>W2151</b>	<b>NB2</b>	<b>PNL-FIRST OFFICER VHF NAVIGATION</b>						
D00265	CAP	Y	0023	22 PA	D04031J	23		AE0105A	02	YC051-YD158, YL951-YR328
D00265	CAP	Y	2006B	24 Y2	D04031J	36		AE0105A	02	YC051-YD158, YL951-YR328
D00265	CAP	Y	2006R	24 Y2	D04031J	35		AE0105A	02	YC051-YD158, YL951-YR328
D00265	S/R		2006Z		D04031J	S/R		AE0105A	02	YC051-YD158, YL951-YR328
D00305	CAP	Y	0027	22 PA	D04031J	27		AE0105A	02	YC051-YD158, YL951-YR328
D00305	CAP	Y	2005B	24 Y2	D04031J	34		AE0105A	02	YC051-YD158, YL951-YR328
D00305	CAP	Y	2005R	24 Y2	D04031J	33		AE0105A	02	YC051-YD158, YL951-YR328
D00305	S/R		2005Z		D04031J	S/R		AE0105A	02	YC051-YD158, YL951-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section P008-26

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith		
I	P008-66			W2401	LN2	CONTROL PANEL-SELCAL							
	D00551		T		0020	24	PK	D04721P	B10		AE0401A	32	YD158-YN235
I	D00551		T		0020	24	PK	D04721P	B10		AE0401A	32	YN236-YR328

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section P008-66

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To					
	Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
I	P008-73			W2417	NC2	PNL-RADIO TUNING 3							
I	D00549	13		0013	24	PK	SP00081		S			YN501-YR328	

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section P008-73

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
<b>P008-75</b>												
			<b>W2110</b>	<b>SA2</b>	<b>PNL-CARGO SMOKE DET &amp; FIRE SUPPRESSION</b>							
D12760	CAP	Y	6043		22	CQ	TB0801X	A002	1A			YR317

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section P008-75

Page 1 End

Aug 14/2012





## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith		Pos	Bundle	Sep	Description		To					
From												
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
<b>P0091</b>			<b>W5726</b>	<b>AD1</b>								
D11438	2		0577		16	PA	D40254P	F		AE0201A	07	YN231-YN501
D11438	3		0578		16	PA	D40254P	G		AE0201A	07	YN231-YN501
D11438	4		0579		16	PA	D40254P	H		AE0201A	07	YN231-YN501
D11438	7		0597		22	PA	D40254P	A01		AE0201A	07	YN231-YN501
<b>I</b>	<b>P0091</b>		<b>W6110</b>	<b>LA2*</b>								
<b>I</b>	D11418	CAP	Y	0011	20	PA	D40364P	B05		AE0101A	12	ALL
<b>I</b>	D11418	CAP	Y	0012	20	PA	D40364P	B06		AE0101A	12	ALL
<b>I</b>	D11418	CAP	Y	0013	20	PA	D40364P	A06		AE0101A	12	ALL

### SPARE WIRE LIST

D280A108

**91-21-12**

Section P0091

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	From	Matewith	Pos	Bundle	Sep	Description		To				Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith		
I	P0092			W6242	RN1								
I	D11452		CAP	Y	0059	20	PA	D40050P	8		AB0340A	05	ALL
I	D11452		CAP	Y	0060	20	PA	D40050P	9		AB0340A	05	ALL
I	P0092			W6414	RB2								
I	D11448		4		0502	24	PK	D40396P	6		AP0600B	22	ALL
I	D11448		33		5508	18	PA	D40396P	4		AP0600B	22	YD158-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section P0092

Page 1 End

Nov 12/2012



	From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
	Equip		Term	Type	Wire No.	GA	TY	Equip					
I	P091-00			W5142	LN1*	PNL-POWER DISTRIBUTION NO.1							
I	D11416		CAP	Y	0054	20	PA	D40054P	5		AB0340A	01	ALL
I	D11416		CAP	Y	0055	20	PA	D40054P	6		AB0340A	01	ALL
I	D11416		CAP	Y	0056	20	PA	D40054P	8		AB0340A	01	ALL

## SPARE WIRE LIST

D280A108

91-21-12

Section P091-00

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
R00594			W0076	LA2*	RLY-GROUND SENSING AIR/GROUND SYSTEM 1							
D11022	D1			0160	22	PA	D40674J	10		AJ0022	07	YR317
D11022	D2			0161	20	PA	GD00532	DC..	1A			YR317

For training purposes only!

### SPARE WIRE LIST

D280A108

**91-21-12**

Section R00594

Page 1 End

Aug 14/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From Matewith		Pos	Bundle	Sep	Description		To					
From		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
Equip												
UNK			W0001	NA2								
TB0201Z		A001	1A	0168	22	PA	D04207J	33		AP0900A	03	YC053-YD158, YL951-YR328
UNK			W0066	RN2								
TB0660Y		B009	1A	0032	20	CQ	D46108J	16		AJ0046A	15	YN231-YN501
TB0666Y		B001	1A	0162	24	PK	D46112J	9		AJ0046B	12	YC053-YC059
UNK			W0076	LA2*								
GD00532		DC..	1A	0161	20	PA	D11022	D2		R00594		YR317
UNK			W0131	NA2								
TB1304Y		CAP	Y	0025	22	PA	D41337J	2		AE0103A	05	YC051-YC052
UNK			W0443	LA2								
L00728		CAP	Y	0051	20	PA	L00728	CAP	Y			ALL
L00728		CAP	Y	0052	20	PA	L00728	CAP	Y			ALL
S00742		= R1	*	0002K	20	XN	TB0806X	CAP	Y			ALL
S00742		= G1	*	0015RN	20	XN	TB0806X	CAP	Y			ALL
S00742		= G2	*	0016ON	20	XN	TB0806X	CAP	Y			ALL
S00742		= R2	*	0019KV	20	XN	TB0806X	CAP	Y			ALL
TB0806X		CAP	Y	0002K	20	XN	S00742	= R1	*			ALL
TB0806X		CAP	Y	0015RN	20	XN	S00742	= G1	*			ALL
TB0806X		CAP	Y	0016ON	20	XN	S00742	= G2	*			ALL
TB0806X		CAP	Y	0019KV	20	XN	S00742	= R2	*			ALL
UNK			W0445	RB2								
L00729		CAP	Y	0061	20	PA	L00729	CAP	Y			ALL
L00729		CAP	Y	0062	20	PA	L00729	CAP	Y			ALL
S00743		= R1	*	0022K	20	XN	TB0805X	CAP	Y			ALL
S00743		= G1	*	0035RN	20	XN	TB0805X	CAP	Y			ALL
S00743		= G2	*	0036ON	20	XN	TB0805	CAP	Y			ALL
S00743		= R2	*	0039KV	20	XN	TB0805	CAP	Y			ALL
TB0805		CAP	Y	0036ON	20	XN	S00743	= G2	*			ALL
TB0805		CAP	Y	0039KV	20	XN	S00743	= R2	*			ALL
TB0805X		CAP	Y	0022K	20	XN	S00743	= R1	*			ALL
TB0805X		CAP	Y	0035RN	20	XN	S00743	= G1	*			ALL

### SPARE WIRE LIST

D280A108

91-21-12

Section UNK

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
<b>UNK</b>			<b>W0613</b>	<b>NN2</b>								
D10857B		CAP	Y	2016B	24	Y2	D06105J	16		AE0601A	09	YC051-YD157
D10857B		CAP	Y	2016R	24	Y2	D06105J	15		AE0601A	09	YC051-YD157
D10857B		DED		2016Z			D06105J	S/R		AE0601A	09	YC051-YD157
<b>UNK</b>			<b>W2035</b>	<b>NA2</b>								
TB0506X		A013	1A	0033	22	PA	D45235J	B11		AE0502A	19	YC051-YC052
TB0506X		A013	%A	0033	22	PA	D45235J	B11		AE0502A	19	YC053-YD157
<b>UNK</b>			<b>W2104</b>	<b>LA1</b>								
TB0505V		B031	1	5502	18	CQ	TB1806V	B013	1			YC051-YD158
TB1806V		B013	1	5502	18	CQ	TB0505V	B031	1			YC051-YD158
<b>UNK</b>			<b>W2110</b>	<b>SA2</b>								
TB0801X		A002	1A	6043	22	CQ	D12760	CAP	Y	P008-75		YR317
<b>UNK</b>			<b>W2205</b>	<b>SN2</b>								
GD00179		AC..	1A	0002	20	CQ	D10853	CAP	Y	N00226		YD158, YL951-YR328
GD00179		AC..	1A	0005	20	CQ	D10853	CAP	Y	N00226		YD158, YL951-YR328
GD00179		DC..	1A	0008	20	PA	D10853	CAP	Y	N00226		YD158, YL951-YR328
GD00179		ST..	1A	0009	20	PA	D10853	CAP	Y	N00226		YD158, YL951-YR328
GD00179		DC..	1A	0013	20	PA	D10853	CAP	Y	N00226		YD158, YL951-YR328
GD00179		ST..	1A	0026	20	PA	D10853	CAP	Y	N00226		YD158, YL951-YR328
SP02085			S	0014	20	PA	D10853	CAP	Y	N00226		YD158, YL951-YR328
SP02186			S	0007	22	PA	D10853	CAP	Y	N00226		YD158, YL951-YR328
<b>UNK</b>			<b>W2214</b>	<b>RB1</b>								
TB0503V		B031	1	5502	18	PA	TB0606V	A013	1			YC051-YC058
TB0503V		B031	%A	5502	18	PA	TB0606V	A013	1			YL951-YL999, YR301-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section UNK

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
UNK			W2214	RB1	(continued)							
TB0606V		A013	1	5502	18	PA	TB0503V	B031	1			YC051-YC058
TB0606V		A013	1	5502	18	PA	TB0503V	B031	%A			YL951-YL999, YR301-YR328
UNK			W2383	RB2								
SP02141			S	0035	20	PA	D46033P	11		AP0900A	16	YD158-YD170
UNK			W2417	NC2								
SP00081			S	0013	24	PK	D00549	13		P008-73		YN501-YR328
UNK			W2589	NN2								
GB00261	ST..	1A	2001Z				D04889P	8		AB0288	03	YN231-YN501
TB0261X	B013	1A	0012		24	PK	D04889P	9		AB0288	03	YN231-YN501
TB0261X	B014	1A	2001B		24	Y2	D04889P	5		AB0288	03	YN231-YN501
TB0261X	A014	1A	2001R		24	Y2	D04889P	4		AB0288	03	YN231-YN501
UNK			W2651	SA2								
SP02085			S	0010	20	PA	D41807P	27		AP1800B	08	YD158-YR328
SP02186			S	0009	22	CQ	D41807P	9		AP1800B	08	YD158-YR328
SP02191			S	0031	22	PA	D41831P	9		AE0103A	17	YN231-YN501
UNK			W2801	NA2								
P008-00	CAP	Y	2503B		24	Y2	D43319P	B08		AE0303A	23	YD158-YD170
P008-00	CAP	Y	2503R		24	Y2	D43319P	A08		AE0303A	23	YD158-YD170
P008-00			2503Z				D43319P	PERG	1F	AE0303A	23	YD158-YD170
UNK			W3058	RN2								
GD11106	ST..	1	0320		20	PA	D40226P	CAP	Y	AP0600A	05	YD155-YD158, YL951-YR328
UNK			W3393	LG2								
GD04809	ST..	E	1015Z				D43393J	S/R		AB1050L	02	YC053-YR328
GD04809	ST..	E	1017Z				D43393J	S/R		AB1050L	02	YC053-YR328
GD04809	ST..	E	1019Z				D43393J	S/R		AB1050L	02	YC053-YR328

### SPARE WIRE LIST

D280A108

91-21-12

Section UNK

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
<b>UNK</b>			<b>W3397</b>	<b>LA3</b>								
GD00949		ST..	E	3006Z			D43397J	S/R		AB1050L	03	YD154-YN236, YN501-YR328
<b>UNK</b>			<b>W3399</b>	<b>RB3</b>								
GD00973		ST..	E	3006Z			D43389J	S/R		AB1080	03	YD154-YN236, YN501-YR328
<b>UNK</b>			<b>W5074</b>	<b>SB2</b>								
GD05060		DC..	E	6002	20	PA	D12816	2		M2263		YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
GD05062		ST..	E	6001	20	PA	D12816	1		M2263		YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
GD05064		ST..	E	6005	20	CQ	D12818	3		M2263		YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
GD05064		ST..	E	6008	20	CQ	D12820	3		M02263		YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
GD05066		DC..	E	6004	20	CQ	D12818	2		M2263		YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
GD05066		DC..	E	6007	20	CQ	D12820	2		M02263		YC058-YD157, YL951-YR314, YR317-YR318, YR320-YR328
<b>UNK</b>			<b>W5158</b>	<b>SB2*</b>								
TB1808X		B003	1A	0008	22	PA	D11140	8		M02061		YC051-YD158, YN231-YN501
TB1808X		A003	%A	0707	22	PA	D40750P	10		AP0600B	02	YC067-YL999, YR301-YR328

### SPARE WIRE LIST

D280A108

**91-21-12**

Section UNK

Page 4

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To	Term	Type	Matewith	Pos	Effectivity
Equip		Term	Type	Wire No.	GA	TY	Equip					
I UNK			W5160	RB2*								
TB1808X		A003	1A	0038	22	PA	D10988	38		M02061		YC051-YD158, YL951-YR328
UNK			W5381	LA2								
D45551P		B02		2008B	22	VG	D45501P	15		AB1050L	05	YC064
D45551P		B02		2008B	22	VG	D45501J	15		AB1050L	05	YC065-YC070
D45551P		A02		2008R	22	VG	D45501P	14		AB1050L	05	YC064
D45551P		A02		2008R	22	VG	D45501J	14		AB1050L	05	YC065-YC070
D45551P	PERG	1F		2008Z			D45501P	S/R		AB1050L	05	YC064
D45551P	PERG	1F		2008Z			D45501J	S/R		AB1050L	05	YC065-YC070
D45551P	B08			2009B	20	HF	D45501P	17		AB1050L	05	YC064
D45551P	B08			2009B	20	HF	D45501J	17		AB1050L	05	YC065-YC070
D45551P	A08			2009R	20	HF	D45501P	16		AB1050L	05	YC064
D45551P	A08			2009R	20	HF	D45501J	16		AB1050L	05	YC065-YC070
D45551P	PERG	1F		2009Z			D45501P	S/R		AB1050L	05	YC064
D45551P	PERG	1F		2009Z			D45501J	S/R		AB1050L	05	YC065-YC070
D45551P	B02			2008B	22	VG	D45501J	13		AB1050L	05	YD151-YD155
D45551P	A02			2008R	22	VG	D45501J	4		AB1050L	05	YD151-YD155
D45551P	PERG	1F		2008Z			D45501J	S/R		AB1050L	05	YD151-YD155
D45551P	B09			2009B	20	HF	D45501J	10		AB1050L	05	YD151-YD155
D45551P	A09			2009R	20	HF	D45501J	2		AB1050L	05	YD151-YD155
D45551P	PERG	1F		2009Z			D45501J	S/R		AB1050L	05	YD151-YD155
UNK			W5506	SB2*								
TB0801X		A002	1A	6080	22	CQ	D40674P	CAP	Y	AJ0022	07	YR317
I UNK			W6208	RA2								
I TB0606V		B013	1	0512	16	PA	D40820P	10		AP0600B	17	YL951-YR328

### SPARE WIRE LIST

D280A108

91-21-12

Section UNK

Page 5 End

Nov 12/2012