

**91-21-41**

**TERMINAL STRIP LIST**

91-21-41  
TERMINAL STRIP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
EFFECTIVE PAGES			TB0000 cont.			TB0500 cont.		
	1 thru 3	Nov 12/2012	R	13	Nov 12/2012	R	19	Nov 12/2012
	4	BLANK	R TB0100	1	Nov 12/2012	R	20	Nov 12/2012
R T00000	1	Nov 12/2012	R	2	Nov 12/2012	R	21	Nov 12/2012
R	2	Nov 12/2012	R TB0200	1	Nov 12/2012	R	22	Nov 12/2012
R T00100	1	Nov 12/2012	R	2	Nov 12/2012	R	23	Nov 12/2012
R T00200	1	Nov 12/2012	R	3	Nov 12/2012	R	24	Nov 12/2012
R T00300	1	Nov 12/2012	R	4	Nov 12/2012	R TB0600	1	Nov 12/2012
R	2	Nov 12/2012	R TB0300	1	Nov 12/2012	R	2	Nov 12/2012
R T00400	1	Nov 12/2012	R TB0400	1	Nov 12/2012	R	3	Nov 12/2012
R	2	Nov 12/2012	R TB0500	1	Nov 12/2012	R	4	Nov 12/2012
R	3	Nov 12/2012	R	2	Nov 12/2012	R	5	Nov 12/2012
R T00500	1	Nov 12/2012	R	3	Nov 12/2012	R	6	Nov 12/2012
R	2	Nov 12/2012	R	4	Nov 12/2012	R	7	Nov 12/2012
R	3	Nov 12/2012	R	5	Nov 12/2012	R	8	Nov 12/2012
R T03000	1	Nov 12/2012	R	6	Nov 12/2012	R TB0800	1	Nov 12/2012
R TB0000	1	Nov 12/2012	R	7	Nov 12/2012	R	2	Nov 12/2012
R	2	Nov 12/2012	R	8	Nov 12/2012	R	3	Nov 12/2012
R	3	Nov 12/2012	R	9	Nov 12/2012	R	4	Nov 12/2012
R	4	Nov 12/2012	R	10	Nov 12/2012	R	5	Nov 12/2012
R	5	Nov 12/2012	R	11	Nov 12/2012	R	6	Nov 12/2012
R	6	Nov 12/2012	R	12	Nov 12/2012	R	7	Nov 12/2012
R	7	Nov 12/2012	R	13	Nov 12/2012	R	8	Nov 12/2012
R	8	Nov 12/2012	R	14	Nov 12/2012	R	9	Nov 12/2012
R	9	Nov 12/2012	R	15	Nov 12/2012	R	10	Nov 12/2012
R	10	Nov 12/2012	R	16	Nov 12/2012	R	11	Nov 12/2012
R	11	Nov 12/2012	R	17	Nov 12/2012	R	12	Nov 12/2012
R	12	Nov 12/2012	R	18	Nov 12/2012	R TB0900	1	Nov 12/2012

A = Added, R = Revised, D = Deleted, O = Overflow

## TERMINAL STRIP LIST

D280A108

## EFFECTIVE PAGES

Page 1  
Nov 12/2012

91-21-41  
TERMINAL STRIP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
TB0900 cont.			TB1400 cont.			TB3100 cont.		
R	2	Nov 12/2012	R	3	Nov 12/2012	R	10	Nov 12/2012
R TB1000	1	Nov 12/2012	R	4	Nov 12/2012	R	11	Nov 12/2012
R TB1100	1	Nov 12/2012	R	5	Nov 12/2012	R	12	Nov 12/2012
R	2	Nov 12/2012	R	6	Nov 12/2012	R	13	Nov 12/2012
R	3	Nov 12/2012	R TB1500	1	Nov 12/2012	R	14	Nov 12/2012
R	4	Nov 12/2012	R	2	Nov 12/2012	R	15	Nov 12/2012
R	5	Nov 12/2012	R TB1800	1	Nov 12/2012	R	16	Nov 12/2012
R	6	Nov 12/2012	R	2	Nov 12/2012	R	17	Nov 12/2012
R	7	Nov 12/2012	R	3	Nov 12/2012	R TB3200	1	Nov 12/2012
R	8	Nov 12/2012	R	4	Nov 12/2012	R	2	Nov 12/2012
R	9	Nov 12/2012	R	5	Nov 12/2012	R	3	Nov 12/2012
R	10	Nov 12/2012	R TB2100	1	Nov 12/2012	R	4	Nov 12/2012
R	11	Nov 12/2012	R TB2200	1	Nov 12/2012	R	5	Nov 12/2012
R	12	Nov 12/2012	R	2	Nov 12/2012	R	6	Nov 12/2012
R	13	Nov 12/2012	R	3	Nov 12/2012	R	7	Nov 12/2012
R	14	Nov 12/2012	R	4	Nov 12/2012	R	8	Nov 12/2012
R	15	Nov 12/2012	R TB3000	1	Nov 12/2012	R	9	Nov 12/2012
R TB1200	1	Nov 12/2012	R	2	Nov 12/2012	R TB3300	1	Nov 12/2012
R	2	Nov 12/2012	R TB3100	1	Nov 12/2012	R	2	Nov 12/2012
R	3	Nov 12/2012	R	2	Nov 12/2012	R	3	Nov 12/2012
R TB1300	1	Nov 12/2012	R	3	Nov 12/2012	R	4	Nov 12/2012
R	2	Nov 12/2012	R	4	Nov 12/2012	A	5	Nov 12/2012
R	3	Nov 12/2012	R	5	Nov 12/2012	R TB3900	1	Nov 12/2012
R	4	Nov 12/2012	R	6	Nov 12/2012	R	2	Nov 12/2012
R	5	Nov 12/2012	R	7	Nov 12/2012	R TB4100	1	Nov 12/2012
R TB1400	1	Nov 12/2012	R	8	Nov 12/2012	R	2	Nov 12/2012
R	2	Nov 12/2012	R	9	Nov 12/2012	R	3	Nov 12/2012

A = Added, R = Revised, D = Deleted, O = Overflow

## TERMINAL STRIP LIST

D280A108

## EFFECTIVE PAGES

Page 2  
Nov 12/2012

**91-21-41  
TERMINAL STRIP LIST**

Section	Page	Date	Section	Page	Date	Section	Page	Date
TB4100 cont.			R TB5100	1	Nov 12/2012			
R	4	Nov 12/2012	R	2	Nov 12/2012			
R	5	Nov 12/2012	R	3	Nov 12/2012			
R	6	Nov 12/2012	R	4	Nov 12/2012			
R	7	Nov 12/2012	R	5	Nov 12/2012			
R	8	Nov 12/2012	R TB5200	1	Nov 12/2012			
R	9	Nov 12/2012	R TB5400	1	Nov 12/2012			
A	10	Nov 12/2012	R TB5800	1	Nov 12/2012			
R TB4200	1	Nov 12/2012	R TB6100	1	Nov 12/2012			
R	2	Nov 12/2012						
R TB4600	1	Nov 12/2012						
R TB5000	1	Nov 12/2012						
R	2	Nov 12/2012						
R	3	Nov 12/2012						
R	4	Nov 12/2012						
R	5	Nov 12/2012						
R	6	Nov 12/2012						
R	7	Nov 12/2012						
R	8	Nov 12/2012						
R	9	Nov 12/2012						
R	10	Nov 12/2012						
R	11	Nov 12/2012						
R	12	Nov 12/2012						
R	13	Nov 12/2012						
R	14	Nov 12/2012						
R	15	Nov 12/2012						
R	16	Nov 12/2012						
R	17	Nov 12/2012						

A = Added, R = Revised, D = Deleted, O = Overflow

**TERMINAL STRIP LIST**

D280A108

**EFFECTIVE PAGES**Page 3  
Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
T00006		10-60828-15					385/160/R027		ALL
		G	E	W6110	0518	08		24-53-11	ALL
		HV	E	W6210	0530	18		24-53-11	ALL
		LV1	E	W6110	0517	10		24-53-11	ALL
T00010		10-60828-15					386/159/L026		ALL
		G	E	W5030	0505	10		24-53-11	ALL
		HV	E	W5112	0501	20		24-53-11	ALL
		LV1	E	W5030	0504	10		24-53-11	ALL
T00011		10-3257-6					E002-01/ /		ALL
T00012		10-3257-6					E004-02/ /		ALL
T00013		10-3257-6					E004-02/ /		ALL
T00028		BACT44C-0250					J002-00/0/		ALL
T00031		16432					P005-00/ /		ALL
		G	D	W2216	5543	10		33-12-11	YC051-YR323, YR325-YR328
		HV	D	W2216	5542	18		33-12-11	YC051-YR323, YR325-YR328
		LV	D	W2216	5544	10		33-12-11	YC051-YR323, YR325-YR328
T00033		10-60828-9					P006-00/ /		ALL
		G	E	W0044	0074	10		33-12-11	ALL
		HV	E	W0044	0073	10		33-12-11	ALL
		LV1	E	W0044	0075	10		33-12-11	ALL
T00034		10-60828-9					P006-00/ /		ALL
		G	E	W0044	0084	10		33-12-12	ALL
		HV	E	W0044	0083	10		33-12-12	ALL
		LV1	E	W0044	0081	10		33-12-12	ALL
T00036		10-60828-11					P091-00/ /		ALL
T00037		10-60828-11					P092-00/ /		ALL
T00038		10-60828-11					P018-00/ /		ALL
		G	E	W0020	0889	06		24-53-11	ALL
		HV	E	W0020	0891	18		24-53-11	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section T00000

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
T00038		10-60828-11 (continued)					P018-00/ /		ALL
		LV	E	W0020	0892	08		24-53-11	ALL
T00039		16432					P008-50/ /		ALL
T00040		69071111					251/204/R002		ALL
		GND	E	W6206	5522	16		33-11-41	ALL
		HV	E	W6206	5521	16		33-11-41	YC051-YD158
		HV	E	W6206	5531	16		33-11-41	ALL
		LV	E	W6206	5513	14		33-11-41	ALL
		LV	E	W6206	5515	14		33-11-41	ALL
		LV	E	W6206	5516	14		33-11-41	ALL
		LV	E	W6206	5535	14		33-11-41	ALL
T00043		10-60828-10					520/193/L080		ALL
		G	GW	W1662	1002	12		33-42-11	YC051-YD158, YL951-YR328
		HV	GW	W1662	1001	18		33-42-11	YC051-YD158, YL951-YR328
		LV	GW	W1662	1003	12		33-42-11	YC051-YD158, YL951-YR328
T00044		10-60828-10					520/193/R080		ALL
		G	GW	W1664	1002	12		33-42-11	YC051-YD158, YL951-YR328
		HV	GW	W1664	1001	18		33-42-11	YC051-YD158, YL951-YR328
		LV	GW	W1664	1003	12		33-42-11	YC051-YD158, YL951-YR328
T00052		10-60828-15					P006-00/ /		ALL
		G	E	W0040	6204	08		24-53-11	ALL
		HV	E	W0040	6202	20		24-53-11	ALL
		LV1	E	W0040	6203	10		24-53-11	ALL
T00060		6430A					P005-00/ /		ALL
		G	D	W2218	5563	18		33-14-12	ALL
		HV	D	W2218	5562	18		33-14-12	ALL
		LV	D	W2218	5564	18		33-14-12	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section T00000

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	Terminal No.	Fix	Part Number		Type	Bundle	Wire No.	GA	Station / WL / BL		Diagram	Effectivity
			Term						CO			
I	T00184		10-60554-41						678/194/R043			ALL
I	T00185		S271W731-1						725/166/R028			ALL
I	T00185		10-62254-1						725/166/R028			ALL
I	T00195		437-1						P092-00/ /			ALL
I	T00196		437-1						P091-00/ /			ALL

For training purposes only!

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section T00100

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
I T00203		MS27212-1-12					351/155/L015		ALL
I T00205		MS27212-1-6					540/188/L024		ALL
I T00207		PART A-B					227/200/R013		ALL
I T00207	A	MS27212-2-16					227/200/R013		ALL
I T00207	B	MS27212-2-2					227/200/R013		ALL
I T00209		MS27212-1-12					193/210/		ALL
I T00213		MS27212-1-12					P008-00/ /		ALL
I T00234		MS27212-3-1					380/160/R040		ALL
I T00234	A	TS-PARTAT234					E003-01/170/R040		ALL
I T00234	B	TS-PARTBT234					E003-01/170/R040		ALL
I T00236		MS27212-3-2					380/160/R040		ALL
I T00252		MS27212-1-6					260/170/00		ALL
I T00266		MS27212-1-2					220/230/L045		ALL
I T00271		MS27212-2-6					380/159/R040		ALL
I T00272		MS27212-2-6					380/159/R040		ALL
I T00280		MS27212-1-2					220/230/R045		ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section T00200

Page 1 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
T00332		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL
T00335		POATERMBLK					200/ /		ALL
		1	C	W0443	0009O	20		27-41-11	ALL
		2	C	W0443	0012V	20		27-41-11	ALL
		3	C	W0443	0011R	20		27-41-11	ALL
		4	C	W0443	0010KO	20		27-41-11	ALL
T00336		POATERMBLK					200/ /		ALL
		1	C	W0445	0029O	20		27-41-11	ALL
		2	C	W0445	0032V	20		27-41-11	ALL
		3	C	W0445	0031R	20		27-41-11	ALL
		4	C	W0445	0030KO	20		27-41-11	ALL
T00362		10-60828-9					251/204/L001		ALL
		GND	E	W6206	5502	16		33-11-33	ALL
		HV	E	W6206	5501	20		33-11-33	ALL
		LV1	E	W6206	5503	16		33-11-33	ALL
		LV1	E	W6206	5542	20		33-14-11	ALL
T00371		310-14416-01					P006-00/ /		ALL
		GND	D	W0044	0456	20		21-31-25	ALL
		HV	D	W0044	0455	24		21-31-25	ALL
		LV1	D	W0044	0457	24		21-31-25	ALL
T00374		S281A601-12					P091-00/ /		ALL
T00375		S281A601-12					P092-00/ /		ALL
T00376		S281A601-12					P091-00/ /		ALL
T00377		S281A601-12					P091-00/ /		ALL
T00378		S281A601-12					P092-00/ /		ALL
T00389		FT1246					727B/245/R638		YC051-YC064
T00389		FT1348					727B/245/R638		YC065-YR328
T00390		FT1246					727B/245/L638		YC051-YC064
T00390		FT1348					727B/245/L638		YC065-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section T00300

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number		Type	Bundle	Wire No.	GA	Station / WL / BL		Diagram	Effectivity
		Term						CO			
I T00391		10-60828-10						P006-00/ /			ALL
I		G	E	W0040	6207	10				24-53-11	ALL
I		HV	E	W0040	6205	22				24-53-11	ALL
I		LV	E	W0040	6206	12				24-53-11	ALL
I T00392		S283T001-15						/ /			ALL
I T00393		S283T001-15						/ /			ALL
I T00394		S283T001-15						/ /			ALL
I T00395		S283T001-15						/ /			ALL
I T00396		S315N401-4						ENG/ /			ALL
I T00397		S315N401-4						ENG/ /			ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section T00300

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
T00402		MS28034-1					538/299/R010		YN231-YN501
I T00403		41SG265-1					558/160/R042		ALL
I T00404		10008792					391/166/R011		ALL
I T00405		41SG265-1					538/165/L 30		ALL
T00406		398116-1-1					644/158/R012		YN231-YN501
T00407		398116-1-1					644/158/L012		YN231-YN501
I T00408		30136-0106					951/186/R036		ALL
T00416		10-60498-7					534/299/R010		YN231-YN501
T00417		10-60498-4					535/299/R010		YN231-YN501
T00419		10-60498-7					372/195/L055		YN231-YN501
T00420		10-60498-4					371/192/L058		YN231-YN501
I T00421		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL
I T00422		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL
I T00423		S271W731-1					666/181/R014		ALL
I T00423		10-62254-1					666/181/R014		ALL
I T00424		S271W731-1					666/180/L039		ALL
I T00424		10-62254-1					666/180/L039		ALL
I T00427		S256A404-50					443/RSS/L		YC051-YD158
I T00427		S256A404-53					443/RSS/L		YD160-YR328
I T00428		S256A404-50					443/RSS/R		YC051-YD158
I T00428		S256A404-53					443/RSS/R		YD160-YR328
I T00429		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section T00400

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
T00430		627570-1					553/152/L017		YN231-YN501
T00431		627570-1					553/152/R025		YN231-YN501
I T00432		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL
I T00433		S233T913-4					192/204/		YC051-YC065, YN231-YN501
I T00433		S233T913-5					192/204/		YC067-YL999, YR301-YR328
I T00434		10-62247-1					ORSS/208/		ALL
I		= A		W7230	A-AA			28-42-11	YC051-YR323, YR325-YR328
I		= B		W7230	B-BB			28-42-11	YC051-YR323, YR325-YR328
I T00435		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL
I T00436		10-60554-40					679/196/R008		ALL
I T00437		S233T913-4					192/204/		YC051-YC065, YN231-YN501
I T00437		S233T913-5					192/204/		YC067-YL999, YR301-YR328
T00438		617166-1					583/161/L031		YN231-YN501
T00439		617166-1					583/161/R031		YN231-YN501
I T00465		S250N104-4					LWING505/ /		ALL
I T00466		S250N104-4					RWING505/ /		ALL
I T00467		S250N104-4					LELEVPOS/30/		ALL
I T00468		S250N104-4					RELEVPOS/30/		ALL
I T00469		S250N104-4					RUD80.00/ /		ALL
I T00471		10-62091-11					573/154/L030		YC051-YL999, YR301-YR328
I T00472		10-62091-14					500I+7/192/L003		YC051-YL999, YR301-YR328
I T00474		10-62091-11					573/154/R030		YC051-YL999, YR301-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section T00400

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
I T00475		10-62091-14					5002+7/192/R003		YC051-YL999, YR301-YR328
I T00477		10-62091-14					372/196/L057		YC051-YL999, YR301-YR328
I T00478		10-62091-14					372/196/L057		YC051-YL999, YR301-YR328
I T00481		1150002-1					584/162/L032		YC051-YL999, YR301-YR328
I T00482		1150002-1					584/162/R032		YC051-YL999, YR301-YR328
I T00485		MS28034-1					371/194/L058		YC051-YL999, YR301-YR328
I T00488		MS28034-1					573/152/L033		YC051-YL999, YR301-YR328
I T00489		MS28034-1					574/152/R033		YC051-YL999, YR301-YR328
I T00492		65C36032-1					727/187/L020		ALL
I T00493		65C36032-1					727/189/L008		ALL
I T00494		65C36032-1					685/195/L065		ALL
I T00495		65C36032-1					692/192/L065		ALL

For training purposes only!

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section T00400

Page 3 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
I T00504		899-156-612					900/185/L015		ALL
I T00505		899-156-612					900/185/L015		ALL
I T00506		1721F4					870/180/L025		ALL
I T00507		4082740-901					P007-00/ /		YC051-YD158, YL951-YR328
I		BLK		W0104	A-AF			31-62-11	YC051-YD158, YL951-YR328
I		BLU		W0104	A-AB			31-62-11	YC051-YD158, YL951-YR328
I		BRN		W0104	A-AD			31-62-11	YC051-YD158, YL951-YR328
I		GRN		W0104	A-AE			31-62-11	YC051-YD158, YL951-YR328
I		RED		W0104	A-AA			31-62-11	YC051-YD158, YL951-YR328
I		YEL		W0104	A-AC			31-62-11	YC051-YD158, YL951-YR328
I T00508		4082740-901					P007-00/ /		YC051-YD158, YL951-YR328
I		BLK		W0204	A-AF			31-62-21	YC051-YD158, YL951-YR328
I		BLU		W0204	A-AB			31-62-21	YC051-YD158, YL951-YR328
I		BRN		W0204	A-AD			31-62-21	YC051-YD158, YL951-YR328
I		GRN		W0204	A-AE			31-62-21	YC051-YD158, YL951-YR328
I		RED		W0204	A-AA			31-62-21	YC051-YD158, YL951-YR328
I		YEL		W0204	A-AC			31-62-21	YC051-YD158, YL951-YR328
I T00509		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL
I T00511		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL
I T00513		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL
I T00514		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL
I T00515		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL
I T00516		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL
I T00517		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL
I T00518		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL
I T00519		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL
I T00520		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section T00500

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
I T00521		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL
I T00522		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL
I T00523		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL
I T00524		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL
I T00525		S256A404-1					WING LBL/357/		YC051-YD158
I T00525		S256A404-3					WING LBL/357/		YD160-YR328
I T00526		S256A404-1					WING LBL/254/		YC051-YD158
I T00526		S256A404-3					WING LBL/254/		YD160-YR328
I T00527		S256A404-1					WING LBL/164/		YC051-YD158
I T00527		S256A404-3					WING LBL/164/		YD160-YR328
I T00528		S256A404-1					WING LBL/65/		YC051-YD158
I T00528		S256A404-3					WING LBL/65/		YD160-YR328
I T00529		S256A404-1					WING RBL/65/		YC051-YD158
I T00529		S256A404-3					WING RBL/65/		YD160-YR328
I T00530		S256A404-1					WING RBL/164/		YC051-YD158
I T00530		S256A404-3					WING RBL/164/		YD160-YR328
I T00531		S256A404-1					WING RBL/254/		YC051-YD158
I T00531		S256A404-3					WING RBL/254/		YD160-YR328
I T00532		S256A404-1					WING RBL/357/		YC051-YD158
I T00532		S256A404-3					WING RBL/357/		YD160-YR328
I T00533		10-62091-14					500F+7/299/L012		YC051-YL999, YR301-YR328
I T00534		MS28034-1					500F+9/300/L012		YC051-YL999, YR301-YR328
I T00535		MS28034-1					535/299/R012		YC051-YL999, YR301-YR328
I T00536		10-62091-14					537/299/R012		YC051-YL999, YR301-YR328
I T00537		VENDORSUPPLIEDSEEIPCFORP-NINFO					ENG/ /		ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section T00500

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	Terminal No.	Part Number		Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
	Fix	Term						CO		
I	T00538	U-221557-8						214/215/RBL3		ALL
I	T00539	S250N104-4						727+18.0/215/L287		ALL
I	T00540	S250N104-4						727+18.0/215/R287		ALL
I	T00541	S251A303-1						51/ /0000		YC053-YR328
I	T00542	VENDORSUPPLIEDSEEIPCFORP-NINFO						ENG/ /		ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section T00500

Page 3 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
I T03019		65C36032-1					727/187/		YD154-YR328
I T03020		1153174-1					657/161/L066		YL951-YL999, YN232-YR328
T03021		NH16031					340/293/LBL5		YL951-YN260
T03022		NH16031					340/293/0		YL951-YN260
T03023		NH16031					340/293/RBL5		YL951-YN260
I T03028		NH16031					302/290/R015		YN501-YR328
I T03029		NH16031					302/290/R015		YN501-YR328
I T03030		NH16031					302/290/R015		YN501-YR328

For training purposes only!

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section T03000

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0002		MIL-T-81714-5-2					695/140/L18		ALL
TB0002	K	M81714-3-BD1					695/140/L118		ALL
TB0002	L	M81714-3-BB1					695/140/L118		ALL
	K	A001	1	W7134	3201R	18		32-31-11	ALL
	K	A001	1	W7134	A-R			32-31-11	ALL
	L	A003	1	W7134	2201Z			32-41-11	ALL
	L	A003	1	W7134	2211Z			32-41-11	ALL
	K	C001	1	W7134	3201B	18		32-31-11	ALL
	K	C001	1	W7134	A-B			32-31-11	ALL
	K	E001	1	W7134	3201Y	18		32-31-11	ALL
	K	E001	1	W7134	A-Y			32-31-11	ALL
	K	E002	1	W7134	2201R	20		32-41-11	ALL
	K	E002	1	W7134	2211R	18		32-41-11	ALL
	K	G002	1	W7134	2201B	20		32-41-11	ALL
	K	G002	1	W7134	2211B	18		32-41-11	ALL
TB0004		MIL-T-81714-5-2					695/140/L18		ALL
TB0004	K	M81714-3-BD1					695/140/L111		ALL
TB0004	L	M81714-3-BB1					695/140/L111		ALL
	K	A001	1	W7136	3201R	18		32-31-12	ALL
	K	A001	1	W7136	A-R			32-31-12	ALL
	L	A003	1	W7136	2201Z			32-41-11	ALL
	L	A003	1	W7136	2211Z			32-41-11	ALL
	K	C001	1	W7136	3201B	18		32-31-12	ALL
	K	C001	1	W7136	A-B			32-31-12	ALL
	K	E001	1	W7136	3201Y	18		32-31-12	ALL
	K	E001	1	W7136	A-Y			32-31-12	ALL
	K	E002	1	W7136	2201R	20		32-41-11	ALL
	K	E002	1	W7136	2211R	18		32-41-11	ALL
	K	G002	1	W7136	2201B	20		32-41-11	ALL
	K	G002	1	W7136	2211B	18		32-41-11	ALL
TB0006		MIL-T-81714-5-2					695/140/L18		ALL
TB0006	K	M81714-3-BD1					695/140/		ALL
TB0006	L	M81714-3-BB1					695/140/		ALL
	K	A001	1	W8234	3201R	18		32-31-11	ALL
	K	A001	1	W8234	A-R			32-31-11	ALL
	L	A003	1	W8234	2201Z			32-41-11	ALL
	L	A003	1	W8234	2211Z			32-41-11	ALL
	K	C001	1	W8234	3201B	18		32-31-11	ALL
	K	C001	1	W8234	A-B			32-31-11	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0000

Page 1

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
TB0006		MIL-T-81714-5-2 (continued)					695/140/L18		ALL
TB0006	K	M81714-3-BD1 (continued)					695/140/		ALL
TB0006	L	M81714-3-BB1 (continued)					695/140/		ALL
	K	E001	1	W8234	3201Y	18		32-31-11	ALL
	K	E001	1	W8234	A-Y			32-31-11	ALL
	K	E002	1	W8234	2201R	20		32-41-11	ALL
	K	E002	1	W8234	2211R	18		32-41-11	ALL
	K	G002	1	W8234	2201B	20		32-41-11	ALL
	K	G002	1	W8234	2211B	18		32-41-11	ALL
TB0008		MIL-T-81714-5-2					695/140/L18		ALL
TB0008	K	M81714-3-BD1					605/140/R111		ALL
TB0008	L	M81714-3-BB1					605/140/R111		ALL
	K	A001	1	W8236	3201R	18		32-31-12	ALL
	K	A001	1	W8236	A-R			32-31-12	ALL
	L	A003	1	W8236	2201Z			32-41-11	ALL
	L	A003	1	W8236	2211Z			32-41-11	ALL
	K	C001	1	W8236	3201B	18		32-31-12	ALL
	K	C001	1	W8236	A-B			32-31-12	ALL
	K	E001	1	W8236	3201Y	18		32-31-12	ALL
	K	E001	1	W8236	A-Y			32-31-12	ALL
	K	E002	1	W8236	2201R	20		32-41-11	ALL
	K	E002	1	W8236	2211R	18		32-41-11	ALL
	K	G002	1	W8236	2201B	20		32-41-11	ALL
	K	G002	1	W8236	2211B	18		32-41-11	ALL
TB0020		S280W555-506					J020-0B/ /		ALL
TB0020	Y	S280W555-104					J020-0B/ /		ALL
TB0020	Z	S280W555-108					J020-0B/ /		ALL
	Y	A001	1A	W0072	0133	22		21-27-31	ALL
	Y	A001	1A	W0072	0512	24		21-27-31	ALL
	Y	A003	1A	W0072	0512	24		21-27-31	ALL
	Y	A005	1A	W0072	0120	24		21-27-31	ALL
	Y	A005	1A	W0072	0132	24		21-27-31	ALL
	Y	A007	1A	W0072	0178	22		27-62-11	ALL
	Y	A007	1A	W0072	0181	22		27-62-11	ALL
	Y	A007	1A	W0072	0521	22		27-62-11	ALL
	Y	A011	1A	W0072	0051	24		32-31-12	ALL
	Y	A011	1A	W0072	0061	24		32-31-12	ALL
	Y	A011	1A	W0072	0505	24		32-31-12	ALL
	Y	A011	1A	W0072	0506	24		32-31-11	ALL

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0000

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0020		S280W555-506 (continued)					J020-0B/ /		ALL
TB0020	Y	S280W555-104 (continued)					J020-0B/ /		ALL
TB0020	Z	S280W555-108 (continued)					J020-0B/ /		ALL
	Y	A013	1A	W0072	0077	22		27-62-11	ALL
	Y	A013	1A	W0072	0099	22		27-62-11	ALL
	Y	A013	1A	W0072	0504	22		27-62-11	ALL
	Y	A015	1A	W0072	0169	22		27-62-11	ALL
	Y	A015	1A	W0072	0191	22		27-62-11	ALL
	Y	A015	1A	W0072	0519	22		27-62-11	ALL
	Z	A017	1A	W0072	0151	22		27-62-11	ALL
	Z	A017	1A	W0072	0176	22		27-62-11	ALL
	Z	A017	1A	W0072	0192	22		27-62-11	ALL
	Z	A017	1A	W0072	0195	22		27-62-11	ALL
	Z	A017	1A	W0072	0522	22		27-62-11	ALL
	Y	A023	1A	W0072	0201	22		23-31-06	YD154-YN260
	Y	A023	1A	W0072	0201	22		44-21-22	YN501-YR328
	Y	A023	1A	W0072	0203	22		23-31-06	YD154-YN260
	Y	A023	1A	W0072	0203	22		44-21-22	YN501-YR328
	Y	B001	1A	W0072	0113	24		21-27-31	ALL
	Y	B001	1A	W0072	0511	22		21-27-31	ALL
	Y	B003	1A	W0072	0515	24		21-27-31	ALL
	Y	B005	1A	W0072	0514	22		21-27-31	ALL
	Y	B005	1A	W0072	0515	24		21-27-31	ALL
	Y	B007	1A	W0072	0168	22		27-62-11	ALL
	Y	B007	1A	W0072	0186	22		27-62-11	ALL
	Y	B007	1A	W0072	0523	22		27-62-11	ALL
	Y	B009	1A	W0072	0101	24		76-21-21	ALL
	Y	B009	1A	W0072	0103	24		76-21-21	ALL
	Y	B009	1A	W0072	0510	24		76-21-21	ALL
	Y	B011	1A	W0072	0071	24		32-31-12	ALL
	Y	B011	1A	W0072	0081	24		32-31-12	ALL
	Y	B011	1A	W0072	0091	24		32-31-12	ALL
	Y	B011	1A	W0072	0507	24		32-31-12	ALL
	Y	B013	1A	W0072	0152	22		27-62-11	ALL
	Y	B013	1A	W0072	0163	22		27-62-11	ALL
	Y	B013	1A	W0072	0520	22		27-62-11	ALL
	Y	B023	1A	W0072	0202	22		23-31-06	YD154-YN260
	Y	B023	1A	W0072	0202	20		44-21-22	YN501-YR328
	Y	B023	1A	W0072	0208	22		23-31-06	YD154-YN260
	Y	B023	1A	W0072	0208	20		44-21-22	YN501-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0000

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0022		S280W555-506					J022-00/ /		ALL
TB0022	Y	S280W555-104					J022-00/ /		ALL
TB0022	Z	S280W555-108					J022-00/ /		ALL
	Y	A001	1A	W0076	0029	24		73-22-31	YC051-YN236, YN501-YR328
	Y	A001	1A	W0076	0030	24		73-22-31	YC051-YN236, YN501-YR328
	Y	A001	1A	W0076	0122	24		73-22-31	YC051-YN236, YN501-YR328
	Y	A001	1A	W0076	0199	24		73-22-31	YN501-YR328
	Y	A003	1A	W0076	0078	20		34-41-11	YC053-YN236, YN501-YR328
	Y	A003	1A	W0076	0079	20		34-41-11	YC053-YN236, YN501-YR328
	Y	A003	1A	W0076	0080	20		34-41-11	YC053-YN236, YN501-YR328
	Z	A005	1A	W0076	0028	24		73-22-31	YN501-YR328
	Z	A005	1A	W0076	0121	24		73-22-31	YN501-YR328
	Z	A005	1A	W0076	0123	24		73-22-31	YN501-YR328
	Z	A005	1A	W0076	0143	22		23-15-15	YC051-YD157
	Z	A005	1A	W0076	0145	22		23-15-15	YC051-YD157
	Z	A005	1A	W0076	0146	22		23-15-15	YC051-YD157
	Z	A005	1A	W0076	0191	24		73-22-11	YN501-YR328
	Z	A005	1A	W0076	0200	24		73-22-31	YN501-YR328
	Y	A009	1A	W0076	0131	24		76-21-11	YC051-YN236, YN501-YR328
	Y	A009	1A	W0076	0141	24		76-21-11	YC051-YN236, YN501-YR328
	Y	A009	1A	W0076	0515	24		76-21-11	YC051-YN236, YN501-YR328
	Y	A011	1A	W0076	0127	22		31-31-11	YC051-YN236, YN501-YR328
	Y	A011	1A	W0076	0505	22		31-31-11	YC051-YN236, YN501-YR328
	Y	A011	1A	W0076	0510	22		31-31-11	YC051-YN236, YN501-YR328
	Y	A013	1A	W0076	0073	24		21-42-11	YC051-YN236, YN501-YR328
	Y	A013	1A	W0076	0075	24		21-42-11	YC051-YN236, YN501-YR328
	Y	A015	1A	W0076	0075	24		21-42-11	YC051-YN236, YN501-YR328
	Z	A017	1A	W0076	0019	20		52-71-13	YC051-YL999, YR301-YR328
	Y	A017	1A	W0076	0019	20		52-71-13	YN231-YN236, YN501
	Z	A017	1A	W0076	0517	20		52-71-13	YC051-YL999, YR301-YR328
	Y	A017	1A	W0076	0517	20		52-71-13	YN231-YN236, YN501
	Z	A017	1A	W0076	0519	20		52-71-13	YC051-YL999, YR301-YR328
	Y	A021	1A	W0076	0519	20		52-71-13	YC051-YL999, YR301-YR328
	Y	B001	1A	W0076	0139	20		78-34-11	YC051-YN236, YN501-YR328
	Y	B001	1A	W0076	0140	20		78-34-11	YC051-YN236, YN501-YR328
	Y	B001	1A	W0076	0163	20		78-34-11	YC051-YN236, YN501-YR328
	Y	B003	1A	W0076	0005	20		52-71-13	YL951-YL999, YR301-YR328
	Y	B003	1A	W0076	0006	20		52-71-13	YL951-YL999, YR301-YR328
	Y	B003	1A	W0076	0007	20		52-71-13	YL951-YL999, YR301-YR328
	Y	B003	1A	W0076	0523	20		52-71-13	YL951-YL999, YR301-YR328
	Z	B005	1A	W0076	0071	24		32-31-11	YC051-YN236, YN501-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0000

Page 4

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0022		S280W555-506 (continued)					J022-00/ /		ALL
TB0022	Y	S280W555-104 (continued)					J022-00/ /		ALL
TB0022	Z	S280W555-108 (continued)					J022-00/ /		ALL
	Z	B005	1A	W0076	0081	24		32-31-11	YC051-YN236, YN501-YR328
	Z	B005	1A	W0076	0091	24		32-31-11	YC051-YN236, YN501-YR328
	Z	B005	1A	W0076	0101	24		32-31-11	YC051-YN236, YN501-YR328
	Z	B005	1A	W0076	0111	24		32-31-11	YC051-YN236, YN501-YR328
	Z	B005	1A	W0076	0514	24		32-31-11	YC051-YN236, YN501-YR328
	Y	B009	1A	W0076	0136	24		31-31-15	YC051-YN236, YN501-YR328
	Y	B009	1A	W0076	0504	22		31-31-11	YC051-YN236, YN501-YR328
	Y	B009	1A	W0076	0509	22		31-31-11	YC051-YN236, YN501-YR328
	Y	B011	1A	W0076	0113	20		78-34-11	YC051-YN236, YN501-YR328
	Y	B011	1A	W0076	0114	20		78-34-11	YC051-YN236, YN501-YR328
	Y	B011	1A	W0076	0164	20		78-34-11	YC051-YN236, YN501-YR328
	Y	B011	1A	W0076	0272	20		78-34-11	YC051-YN236, YN501-YR328
	Y	B013	1A	W0076	0076	24		21-42-11	YC051-YN236, YN501-YR328
	Y	B015	1A	W0076	0077	24		21-42-11	YC051-YN236, YN501-YR328
	Z	B017	1A	W0076	0009	20		52-71-13	YC051-YL999, YR301-YR328
	Y	B017	1A	W0076	0009	20		52-71-13	YN231-YN236, YN501
	Z	B017	1A	W0076	0500	20		52-71-13	YC051-YL999, YR301-YR328
	Y	B017	1A	W0076	0500	20		52-71-13	YN231-YN236, YN501
	Y	B019	1A	W0076	0005	20		52-71-13	YN231-YN236, YN501
	Y	B019	1A	W0076	0006	20		52-71-13	YN231-YN236, YN501
	Y	B019	1A	W0076	0007	20		52-71-13	YN231-YN236, YN501
	Y	B021	1A	W0076	0518	20		52-71-13	YC051-YL999, YR301-YR328
	Y	B021	1A	W0076	0520	20		52-71-13	YC051-YL999, YR301-YR328
TB0023		S280W555-504					J023-00/ /		YC051-YD170
TB0023		S280W555-506					J023-00/ /		YL951-YR328
TB0023	V	S280W555-203					J023-00/ /		ALL
TB0023	Y	S280W555-104					J023-00/ /		ALL
	Y	A001	1A	W0078	0325	22		35-21-11	ALL
	Y	A001	1A	W0078	0326	22		35-21-11	ALL
	Y	A001	1A	W0078	0327	20		35-21-11	ALL
	Y	A001	1A	W0078	0328	22		35-21-11	ALL
	Y	A003	1A	W0078	0316	22		35-21-11	YC051-YC058
	Y	A003	1A	W0078	0321	22		35-21-11	YC051-YC058
	Y	A003	1A	W0078	0329	22		35-21-11	YC051-YC058
	Y	A003	1A	W0078	0330	22		35-21-11	YC051-YC058
	V	A005	1	W0078	0305	16		35-21-11	ALL
	V	A005	1	W0078	0314	16		35-21-11	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0000

Page 5

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0023		S280W555-504 (continued)					J023-00/ /		YC051-YD170
TB0023		S280W555-506 (continued)					J023-00/ /		YL951-YR328
TB0023	V	S280W555-203 (continued)					J023-00/ /		ALL
TB0023	Y	S280W555-104 (continued)					J023-00/ /		ALL
	V	A005	1	W0078	0323	16		35-21-11	ALL
	V	A007	1	W0078	0303	16		35-21-11	ALL
	V	A007	1	W0078	0307	16		35-21-11	ALL
	V	A007	1	W0078	0320	16		35-21-11	ALL
	Y	A009	1A	W0078	0309	22		35-21-11	ALL
	Y	A009	1A	W0078	0311	22		35-21-11	ALL
	Y	A009	1A	W0078	0312	22		35-21-11	ALL
	Y	A011	1A	W0078	6010	24		76-21-11	ALL
	Y	A011	1A	W0078	6050	24		76-21-11	ALL
	Y	A011	1A	W0078	6051	24		76-21-11	ALL
	Y	B001	1A	W0078	0001	22		35-21-11	ALL
	Y	B001	1A	W0078	0002	22		35-21-11	ALL
	Y	B001	1A	W0078	0231	22		23-31-06	YC051-YN260
	Y	B001	1A	W0078	0231	22		44-21-22	YN501-YR328
	V	B005	1	W0078	0304	16		35-21-11	ALL
	V	B005	1	W0078	0315	16		35-21-11	ALL
	V	B005	1	W0078	0322	16		35-21-11	ALL
	V	B007	1	W0078	0302	16		35-21-11	ALL
	V	B007	1	W0078	0308	16		35-21-11	ALL
	V	B007	1	W0078	0319	16		35-21-11	ALL
	Y	B009	1A	W0078	0310	22		35-21-11	ALL
	Y	B009	1A	W0078	0312	22		35-21-11	ALL
	Y	B009	1A	W0078	0318	22		35-21-11	ALL
	Y	B009	1A	W0078	0324	22		35-21-11	ALL
TB0024		S280W555-504					J024-00/ /		YC051-YD158
TB0024		S280W555-506					J024-00/ /		YD160-YR328
TB0024	B	S280W555-753					J024-00/ /		ALL
TB0024	Y	S280W555-104					J024-00/ /		ALL
TB0024	Z	S280W555-108					J024-00/ /		ALL
	Y	A001	1A	W0080	0011	24		73-22-31	YC051-YD158, YL951-YN260
	Y	A001	1A	W0080	6004	24		73-22-11	YC051-YD158, YL951-YN260
	Y	A001	1A	W0080	6005	24		73-22-31	YC051-YD158, YL951-YN260
	Y	A001	1A	W0080	6006	24		73-22-31	YC051-YD158, YL951-YN260
	Y	A003	1A	W0080	0018	20		52-71-14	YC051-YL999, YR301-YR328
	Y	A003	1D	W0080	6017	18		78-32-61	YN231-YN501
	Y	A003	1D	W0080	6018	18		78-32-61	YN231-YN501

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0000

Page 6

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0024		S280W555-504 (continued)					J024-00/ /		YC051-YD158
TB0024		S280W555-506 (continued)					J024-00/ /		YD160-YR328
TB0024	B	S280W555-753 (continued)					J024-00/ /		ALL
TB0024	Y	S280W555-104 (continued)					J024-00/ /		ALL
TB0024	Z	S280W555-108 (continued)					J024-00/ /		ALL
	Y	A003	1D	W0080	6019	18		78-32-61	YN231-YN501
	Y	A005	1A	W0080	6035	22		78-32-61	YC051-YD158, YL951-YR328
	Y	A005	1D	W0080	6040	18		78-32-61	YC051-YD158, YL951-YR328
	Y	A005	1D	W0080	6041	18		78-32-61	YC051-YD158, YL951-YR328
	Y	A005	1A	W0080	6044	22		78-32-61	YC051-YD158, YL951-YR328
	Y	A007	1A	W0080	6036	22		78-32-61	YL951-YR328
	Y	A007	1A	W0080	6038	22		78-32-61	YL951-YR328
	Y	A007	1A	W0080	6039	22		78-32-61	YL951-YR328
	Y	A007	1A	W0080	6045	22		78-32-61	YC051-YD158
	Y	A007	1D	W0080	6046	18		78-32-61	YC051-YD158
	Y	A007	1D	W0080	6047	18		78-32-61	YC051-YD158
	Y	A009	1D	W0080	6026	18		78-32-61	YC051-YD158, YL951-YR328
	Y	A011	1D	W0080	6029	18		78-32-61	YC051-YD158, YL951-YR328
	Z	A013	1A	W0080	6502	24		31-31-15	YC051-YD158, YL951-YR328
	Z	A013	1A	W0080	6503	24		31-31-15	YC051-YD158, YL951-YR328
	Z	A013	1A	W0080	6506	22		31-31-11	ALL
	Z	A013	1A	W0080	6512	22		31-31-11	YC051-YN236, YN501-YR328
	Z	A013	1A	W0080	6530	22		31-31-11	YC051-YD158, YL951-YR328
	Y	A017	1A	W0080	5607	24		21-43-21	YC060-YC064, YL951-YR328
	Y	A017	1A	W0080	5609	24		21-43-21	YC060-YC064, YL951-YR328
	Y	A019	1A	W0080	5606	24		21-43-21	YC060-YC064, YL951-YR328
	Y	A019	1A	W0080	5612	22		21-27-21	YC060-YC064, YL951-YN236, YN501-YR328
	Z	A021	1A	W0080	5515	24		21-43-21	YC060-YC064, YL951-YR328
	Z	A021	1A	W0080	5555	22		21-25-11	YC060-YC064, YL951-YR328
	Z	A021	1A	W0080	5557	22		21-25-11	YC060-YC064, YL951-YR328
	Z	A021	1A	W0080	5571	24		21-43-21	YC060-YC064, YD160-YR328
	Z	A021	1A	W0080	5572	24		21-43-21	YC060-YC064, YL951-YR328
	Z	A021	1A	W0080	5575	24		21-43-21	YC060-YC064, YL951-YR328
	Y	B001	1A	W0080	6010	24		76-21-21	YC051-YD158, YL951-YR328
	Y	B001	1A	W0080	6011	24		76-21-21	YC051-YD158, YL951-YR328
	Y	B001	1A	W0080	6012	24		76-21-21	YC051-YD158, YL951-YR328
	Y	B003	1A	W0080	0015	20		52-71-14	YC051-YD158, YL951-YL999, YR301-YR328
	Y	B003	1A	W0080	0021	20		52-71-14	YC051-YD158, YL951-YL999, YR301-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0000

Page 7

Nov 12/2012





# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0024		S280W555-504 (continued)					J024-00/ /		YC051-YD158
TB0024		S280W555-506 (continued)					J024-00/ /		YD160-YR328
TB0024	B	S280W555-753 (continued)					J024-00/ /		ALL
TB0024	Y	S280W555-104 (continued)					J024-00/ /		ALL
TB0024	Z	S280W555-108 (continued)					J024-00/ /		ALL
	Y	B005	1A	W0080	0509	22		32-31-12	YC051-YD158, YL951-YR328
	Y	B005	1A	W0080	0511	22		32-31-12	ALL
	Y	B005	1A	W0080	0513	22		32-31-12	YC051-YD158, YL951-YR328
	Y	B007	1A	W0080	6031	20		78-34-21	YC051-YD158
	Y	B007	1A	W0080	6033	20		78-34-21	YC051-YD158
	Y	B007	1A	W0080	6034	20		78-34-21	YC051-YD158
	Y	B007	1A	W0080	6050	20		78-34-21	YC051-YD158
	Y	B007	1D	W0080	6103	18		78-32-61	YL951-YR328
	Y	B009	1D	W0080	6041	18		78-32-61	YC051-YD158, YL951-YR328
	Y	B009	1D	W0080	6042	18		78-32-61	YC051-YD158, YL951-YR328
	Y	B011	1D	W0080	6047	18		78-32-61	YC051-YD158, YL951-YR328
	Y	B011	1D	W0080	6048	18		78-32-61	YC051-YD158, YL951-YR328
	Z	B013	1A	W0080	6508	22		31-31-11	YC051-YN236, YN501-YR328
	Z	B013	1A	W0080	6509	22		31-31-11	YC051-YD158, YL951-YR328
	Z	B013	1A	W0080	6511	22		31-31-11	YC051-YD158, YL951-YR328
	Y	B017	1A	W0080	5610	24		21-43-21	YC060-YC064, YL951-YR328
	Y	B019	1A	W0080	5607	24		21-43-21	YC060-YC064, YL951-YR328
TB0025		S280W555-604					J011-00/ /		ALL
TB0025	V	S280W555-203					J011-00/ /		ALL
TB0025	Y	S280W555-104					J011-00/ /		ALL
	Y	A001	1D	W0122	0001	18		29-25-11	ALL
	Y	A003	1D	W0122	0002	18		29-25-11	ALL
	Y	A005	1D	W0122	0003	18		29-25-11	ALL
	V	A009	1	W0122	0005	22		29-25-11	ALL
	V	A009	1	W0122	0016	22		29-25-11	ALL
	V	A009	1	W0122	0017	22		29-25-11	ALL
	V	A011	1	W0122	0006	18		29-25-11	ALL
	V	A011	1	W0122	0012	18		29-25-11	ALL
	V	A011	1	W0122	0014	18		29-25-11	ALL
	Y	A013	1A	W0122	0022	20		27-31-11	YC058-YR328
	Y	A013	1A	W0122	0023	20		27-31-11	YC058-YR328
	Y	A013	1A	W0122	0026	20		27-31-11	YC058-YR328
	Y	B001	1D	W0122	0012	18		29-25-11	ALL
	Y	B003	1D	W0122	0013	18		29-25-11	ALL
	Y	B005	1D	W0122	0014	18		29-25-11	ALL

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0000

Page 8

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0025		S280W555-604 (continued)					J011-00/ /		ALL
TB0025	V	S280W555-203 (continued)					J011-00/ /		ALL
TB0025	Y	S280W555-104 (continued)					J011-00/ /		ALL
	V	B009	1	W0122	0015	18		29-25-11	ALL
	V	B009	1	W0122	0018	20		29-25-11	ALL
	V	B009	1	W0122	0019	18		29-25-11	ALL
	V	B011	1	W0122	0008	18		29-25-11	ALL
	V	B011	1	W0122	0013	18		29-25-11	ALL
	V	B011	1	W0122	0020	18		29-25-11	ALL
TB0028		S280W555-502					J020-0A/ /		YC067-YR328
TB0028	Y	S280W555-104					J020-0A/ /		ALL
	Y	A001	1A	W0074	0185	20		21-31-22	YC053, YC055, YC067-YR328
	Y	A001	1A	W0074	0186	20		21-31-22	YC053, YC055, YC067-YR328
	Y	A003	1A	W0074	0195	20		21-31-23	YC053, YC055, YC067-YR328
	Y	A003	1A	W0074	0196	20		21-31-23	YC053, YC055, YC067-YR328
	Y	B001	1A	W0074	0006	22		26-16-21	YC053, YC055, YC067-YR328
	Y	B003	1A	W0074	0006	22		26-16-21	YC053, YC055, YC067-YR328
	Y	B003	1A	W0074	0007	22		26-16-21	YC053, YC055, YC067-YR328
TB0030		S280W555-506					J020-0A/ /		ALL
TB0030	V	S280W555-203					J020-0A/ /		YL951-YL999, YR301-YR328
TB0030	Y	S280W555-104					J020-0A/ /		YC060-YC064, YL951-YL999, YR301-YR328
	Y	A001	1A	W0074	0185	20		21-31-22	YC060-YC064
	Y	A001	1A	W0074	0186	20		21-31-22	YC060-YC064
	Y	A003	1A	W0074	0195	20		21-31-23	YC060-YC064
	Y	A003	1A	W0074	0196	20		21-31-23	YC060-YC064
	Y	B001	1A	W0074	0006	22		26-16-21	YC060-YC064
	Y	B003	1A	W0074	0006	22		26-16-21	YC060-YC064
	Y	B003	1A	W0074	0007	22		26-16-21	YC060-YC064
TB0032		S280W555-506					J022-00/ /		ALL
TB0032	V	S280W555-203					J022-00/ /		ALL
TB0032	W	S280W555-206					J022-00/ /		ALL
TB0032	Y	S280W555-104					J022-00/ /		ALL
TB0032	Z	S280W555-108					J022-00/ /		YL951-YR328
	Y	A001	1A	W0076	0205	24		32-41-11	YC051-YN236, YN501-YR328
	Y	A001	1A	W0076	0215	24		32-41-11	YC051-YN236, YN501-YR328
	Y	A001	1A	W0076	0216	24		32-41-11	YC051-YN236, YN501-YR328
	Y	A001	1A	W0076	0217	24		32-41-11	YC051-YN236, YN501-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0000

Page 9

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0032		S280W555-506 (continued)					J022-00/ /		ALL
TB0032	V	S280W555-203 (continued)					J022-00/ /		ALL
TB0032	W	S280W555-206 (continued)					J022-00/ /		ALL
TB0032	Y	S280W555-104 (continued)					J022-00/ /		ALL
TB0032	Z	S280W555-108 (continued)					J022-00/ /		YL951-YR328
	Y	A003	1A	W0076	0051	22		23-22-11	YC051-YN236, YN501-YR328
	Y	A003	1A	W0076	0054	22		23-22-11	YC051-YN236, YN501-YR328
	Y	A003	1A	W0076	0055	22		23-22-11	YC051-YN236, YN501-YR328
	Y	A003	1A	W0076	0056	22		23-22-11	YC051-YN236, YN501-YR328
	Y	A005	1D	W0076	0529	18		78-32-51	YC051-YN236, YN501-YR328
	Y	A007	1D	W0076	0530	18		78-32-51	YC051-YN236, YN501-YR328
	W	A009	1	W0076	0308	22		78-32-51	YC051-YN236, YN501-YR328
	W	A009	1	W0076	0314	22		78-32-51	YC051-YN236, YN501-YR328
	W	A009	1	W0076	0315	18		78-32-51	YC051-YN236, YN501-YR328
	W	A009	1	W0076	0317	18		78-32-51	YC051-YN236, YN501-YR328
	V	A013	1	W0076	0303	22		78-32-51	YC051-YD158
	V	A013	1	W0076	0304	22		78-32-51	YC051-YD158
	V	A013	1	W0076	0305	22		78-32-51	YC051-YD158
	V	A015	1	W0076	0342	22		78-32-51	YL951-YN236, YN501-YR328
	Z	A021	1A	W0076	0048	24		34-49-11	YL951-YN236, YN501-YR328
	Z	A021	1A	W0076	0049	24		34-49-11	YL951-YN236, YN501-YR328
	Z	A021	1A	W0076	0059	24		34-49-11	YL951-YN236, YN501-YR328
	Z	A021	1A	W0076	0060	24		34-49-11	YL951-YN236, YN501-YR328
	Z	A021	1A	W0076	0063	24		34-49-11	YL951-YN236, YN501-YR328
	Z	A021	1A	W0076	0182	24		34-41-11	YL951-YN236, YN501-YR328
	Y	B001	1A	W0076	0202	24		32-41-11	YC051-YN236, YN501-YR328
	Y	B001	1A	W0076	0203	24		32-41-11	YC051-YN236, YN501-YR328
	Y	B001	1A	W0076	0212	24		32-41-11	YC051-YN236, YN501-YR328
	Y	B003	1A	W0076	0028	24		73-22-31	YC051-YN236
	Y	B003	1A	W0076	0121	24		73-22-31	YC051-YN236
	Y	B003	1A	W0076	0123	24		73-22-31	YC051-YN236
	Y	B003	1A	W0076	0191	24		73-22-11	YC051-YN236
	Y	B005	1D	W0076	0311	18		78-32-51	YC051-YN236, YN501-YR328
	Y	B005	1D	W0076	0317	18		78-32-51	YC051-YN236, YN501-YR328
	Y	B007	1D	W0076	0309	18		78-32-51	YC051-YN236, YN501-YR328
	Y	B007	1D	W0076	0313	18		78-32-51	YC051-YN236, YN501-YR328
	W	B009	1	W0076	0307	22		78-32-51	YC051-YN236, YN501-YR328
	W	B009	1	W0076	0309	18		78-32-51	YC051-YN236, YN501-YR328
	W	B009	1	W0076	0316	18		78-32-51	YC051-YN236, YN501-YR328
	V	B013	1	W0076	0153	18		78-32-51	YC051-YN236, YN501-YR328
	V	B013	1	W0076	0156	18		78-32-51	YC051-YN236, YN501-YR328

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0000

Page 10

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0032		S280W555-506 (continued)					J022-00/ /		ALL
TB0032	V	S280W555-203 (continued)					J022-00/ /		ALL
TB0032	W	S280W555-206 (continued)					J022-00/ /		ALL
TB0032	Y	S280W555-104 (continued)					J022-00/ /		ALL
TB0032	Z	S280W555-108 (continued)					J022-00/ /		YL951-YR328
	V	B013	1	W0076	0516	18		78-32-51	YC051-YN236, YN501-YR328
	V	B015	1	W0076	0350	18		78-32-51	YL951-YN236, YN501-YR328
TB0033		S280W555-504					J023-00/ /		YL951-YR328
TB0033	V	S280W555-203					*/*/*		ALL
TB0033	Y	S280W555-104					*/*/*		ALL
TB0033	Z	S280W555-108					*/*/*		ALL
	Z	A013	1A	W0078	0316	22		35-21-11	YC059-YR328
	Z	A013	1A	W0078	0321	22		35-21-11	YC059-YR328
	Z	A013	1A	W0078	0329	22		35-21-11	YC059-YR328
	Z	A013	1A	W0078	0330	22		35-21-11	YC059-YR328
TB0034		S280W555-502					J024-00/ /		YC051-YD158
TB0034		S280W555-504					J024-00/ /		YD160-YR328
TB0034	Y	S280W555-104					J024-00/ /		ALL
	Y	A001	1A	W0080	5533	24		21-27-21	ALL
	Y	A003	1A	W0080	5533	24		21-27-21	ALL
	Y	A003	1A	W0080	5538	24		21-27-21	YC051-YD158, YL951-YR328
	Y	A005	1A	W0080	5508	24		21-27-21	YC051-YC059, YC065-YD158
	Y	A005	1A	W0080	5536	24		21-27-21	ALL
	Y	A007	1A	W0080	0006	20		52-71-14	YN231-YN236, YN501
	Y	A007	1A	W0080	0017	20		52-71-14	YN231-YN501
	Y	A007	1A	W0080	0018	20		52-71-14	YC051-YL999, YR301-YR328
	Y	A007	1A	W0080	0050	20		52-71-14	YC051-YD158, YL951-YL999, YR301-YR328
	Y	A009	1A	W0080	5553	22		21-25-11	YC060-YC064, YL951-YR328
	Y	A009	1A	W0080	5554	22		21-25-11	YC060-YC064, YL951-YR328
	Y	A011	1A	W0080	5560	22		21-25-11	YC060-YC064, YL951-YR328
	Y	A011	1A	W0080	5561	22		21-25-11	YC060-YC064, YL951-YR328
	Y	A013	1A	W0080	5536	24		21-27-21	YC060-YC064, YD160-YR328
	Y	A013	1A	W0080	5563	24		21-27-21	YC060-YC064, YL951-YR328
	Y	A013	1A	W0080	5564	22		21-27-21	YC060-YC064, YL951-YR328
	Y	A015	1A	W0080	5611	24		21-43-21	YC060-YC064, YL951-YN236, YN501-YR328
	Y	B001	1A	W0080	5510	22		21-27-21	YC051-YC059, YC065-YD158

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0000

Page 11

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0034		S280W555-502 (continued)					J024-00/ /		YC051-YD158
TB0034		S280W555-504 (continued)					J024-00/ /		YD160-YR328
TB0034	Y	S280W555-104 (continued)					J024-00/ /		ALL
	Y	B001	1A	W0080	5532	24		21-27-21	YC051-YD158, YL951-YR328
	Y	B001	1A	W0080	5565	22		21-27-21	YC060-YC064, YL951-YR328
	Y	B003	1A	W0080	5534	24		21-27-21	YC051-YD158, YL951-YR328
	Y	B005	1A	W0080	5534	24		21-27-21	YC051-YD158, YL951-YR328
	Y	B005	1A	W0080	5535	24		21-27-21	YC051-YD158, YL951-YR328
	Y	B007	1A	W0080	0005	20		52-71-14	YC051-YD158, YL951-YR328
	Y	B007	1A	W0080	0016	20		52-71-14	YC051-YD158, YL951-YR328
	Y	B009	1A	W0080	5559	22		21-25-11	YC060-YC064, YD160-YR328
	Y	B011	1A	W0080	5562	22		21-25-11	YC060-YC064, YD160-YR328
	Y	B013	1A	W0080	5531	24		21-27-31	YC060-YC064, YL951-YR328
	Y	B013	1A	W0080	5608	24		21-43-21	YC060-YC064, YL951-YR328
	Y	B013	1A	W0080	5609	24		21-43-21	YC060-YC064, YL951-YR328
	Y	B013	1A	W0080	5614	24		21-43-21	YC060-YC064, YL951-YR328
	Y	B015	1A	W0080	5520	24		21-43-21	YC060-YC064, YL951-YR328
	Y	B015	1A	W0080	5610	24		21-43-21	YC060-YC064, YL951-YR328
TB0040	K	M81714-3-DD1					290/181/L015		YC051-YD158, YL951-YR328
	K	A001	1	W5156	2206R	20		32-64-11	YC051-YD158, YL951-YR328
	K	A001	1	W7034	A-R			32-64-11	ALL
	K	A002	1	W5156	2226R	20		32-31-11	YC051-YD158, YL951-YR328
	K	A002	1	W7032	A-R			32-31-11	ALL
	K	A003	1	W5160	2227R	20		32-31-12	YC051-YD158, YL951-YR328
	K	A003	1	W8032	A-R			32-31-12	ALL
	K	C001	1	W5156	2206B	20		32-64-11	YC051-YD158, YL951-YR328
	K	C001	1	W7034	A-B			32-64-11	ALL
	K	C002	1	W5156	2226B	20		32-31-11	YC051-YD158, YL951-YR328
	K	C002	1	W7032	A-B			32-31-11	ALL
	K	C003	1	W5160	2227B	20		32-31-12	YC051-YD158, YL951-YR328
	K	C003	1	W8032	A-B			32-31-12	ALL
	K	E001	1	W5156	0651	18		32-64-11	YC051-YD158, YL951-YR328
	K	E001	1	W7034	A-Y			32-64-11	ALL
	K	E002	1	W5156	0601	18		32-31-11	YC051-YD158, YL951-YR328
	K	E002	1	W7032	A-Y			32-31-11	ALL
	K	E003	1	W5160	0603	18		32-31-12	YC051-YD158, YL951-YR328
	K	E003	1	W8032	A-Y			32-31-12	ALL
	K	G001	1	W5160	0001	16		33-45-11	YC051-YD158
	K	G001	1	W5160	0014	16		33-45-11	YL951-YR328
	K	G001	1	W8144	0001	16		33-45-11	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0000

Page 12

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
<b>TB0040</b>	<b>K</b>	<b>M81714-3-DD1 (continued)</b>					<b>290/181/L015</b>		<b>YC051-YD158, YL951-YR328</b>
	K	G002	1	W5160	0002	16		33-45-11	YC051-YD158, YL951-YR328
	K	G002	1	W8144	0002	16		33-45-11	ALL
<b>TB0042</b>	<b>K</b>	<b>M81714-3-DD1</b>					<b>258/181/L015</b>		<b>YC051-YD158, YL951-YR328</b>
	K	A001	1	W5156	2205R	20		32-64-11	YC051-YD158, YL951-YR328
	K	A001	1	W7036	A-R			32-64-11	ALL
	K	C001	1	W5156	2205B	20		32-64-11	YC051-YD158, YL951-YR328
	K	C001	1	W7036	A-B			32-64-11	ALL
	K	E001	1	W5156	0650	18		32-64-11	YC051-YD158, YL951-YR328
	K	E001	1	W7036	A-Y			32-64-11	ALL
<b>TB0044</b>	<b>K</b>	<b>M81714-3-DD1</b>					<b>287/173/R014</b>		<b>YC051-YD158, YL951-YR328</b>
	K	A001	1	W5160	2213R	18		32-64-12	YC051-YD158, YL951-YR328
	K	A001	1	W8034	A-R			32-64-12	ALL
	K	C001	1	W5160	2213B	18		32-64-12	YC051-YD158, YL951-YR328
	K	C001	1	W8034	A-B			32-64-12	ALL
	K	E001	1	W5160	0505	18		32-64-12	YC051-YD158, YL951-YR328
	K	E001	1	W8034	A-Y			32-64-12	ALL
<b>TB0046</b>	<b>K</b>	<b>M81714-3-DD1</b>					<b>257/181/R014</b>		<b>YC051-YD158, YL951-YR328</b>
	K	A001	1	W5160	2205R	20		32-64-12	YC051-YD158, YL951-YR328
	K	A001	1	W8036	A-R			32-64-12	ALL
	K	C001	1	W5160	2205B	20		32-64-12	YC051-YD158, YL951-YR328
	K	C001	1	W8036	A-B			32-64-12	ALL
	K	E001	1	W5160	0650	18		32-64-12	YC051-YD158, YL951-YR328
	K	E001	1	W8036	A-Y			32-64-12	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0000

Page 13 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0101		S280W555-506					P001-00/ /		ALL
TB0101	Y	S280W555-104					P001-00/ /		ALL
TB0101	Z	S280W555-108					P001-00/ /		ALL
	Y	A001	1A	W0001	2005R	24		31-62-13	YC051-YD158, YL951-YR328
	Y	A001	1A	W0001	2006R	24		31-62-13	YC051-YD158, YL951-YR328
	Y	A001	1A	W0001	2007R	24		31-62-13	YC051-YC052
	Y	A003	1A	W0001	0100	22		22-14-11	YD157-YD158, YL951-YR328
	Y	A003	1A	W0001	0102	22		22-14-11	YD157-YD158, YL951-YR328
	Y	A003	1A	W0003	0600	22		22-14-11	YD157-YD158, YL951-YR328
	Y	A007	1A	W0001	0103	22		34-61-16	YC051-YD158, YL951-YR328
	Y	A007	1A	W0001	0107	22		34-61-16	YC051-YD158, YL951-YR328
	Y	A007	1A	W0001	0111	22		34-61-16	YC051-YD158, YL951-YR328
	Y	A009	1A	W0001	0162	24		34-49-11	YC051-YD158, YL951-YR328
	Y	A009	1A	W0001	0164	24		34-49-11	YC051-YD158, YL951-YR328
	Y	A009	1A	W0003	0627	24		34-49-11	YC051-YD158, YL951-YR328
	Y	A011	1A	W0001	2001R	24		31-62-11	YC051-YD158, YL951-YR328
	Y	A011	1A	W0001	2010R	24		31-62-11	YC051-YD158, YL951-YR328
	Y	A011	1A	W0001	2011R	24		31-62-11	YC051-YD158, YL951-YR328
	Y	A015	1A	W0001	0083	22		22-14-11	YC051-YD158, YL951-YR328
	Y	A015	1A	W0001	0084	22		22-14-11	YC051-YD158, YL951-YR328
	Y	A015	1A	W0001	0092	22		22-14-11	YC051-YD158, YL951-YR328
	Y	A019	1A	W0001	0088	22		22-14-11	YC051-YD158, YL951-YR328
	Y	A019	1A	W0001	0094	22		22-14-11	YC051-YD158, YL951-YR328
	Y	A019	1A	W0001	0095	22		22-14-11	YC051-YD158, YL951-YR328
	Y	A019	1A	W0001	0097	22		22-14-11	YC051-YD158, YL951-YR328
	Z	A021	1A	W0001	0078	22		22-14-11	YC051-YD158, YL951-YR328
	Z	A021	1A	W0001	0079	22		22-14-11	YC051-YD158, YL951-YR328
	Z	A021	1A	W0001	0080	22		22-14-11	YC051-YD158, YL951-YR328
	Z	A021	1A	W0001	0081	22		22-14-11	YC051-YD158, YL951-YR328
	Z	A021	1A	W0001	0082	22		22-14-11	YC051-YD158, YL951-YR328
	Z	A021	1A	W0001	0091	22		22-14-11	YC051-YD158, YL951-YR328
	Y	B001	1A	W0001	2005B	24		31-62-13	YC051-YD158, YL951-YR328
	Y	B001	1A	W0001	2006B	24		31-62-13	YC051-YD158, YL951-YR328
	Y	B001	1A	W0001	2007B	24		31-62-13	YC051-YC052
	Y	B003	1A	W0003	0602	22		34-61-16	YC051-YD158, YL951-YR328
	Y	B003	1A	W0003	0603	22		34-61-16	YC051-YD158, YL951-YR328
	Y	B003	1A	W0003	0605	22		34-61-16	YC051-YD158, YL951-YR328
	Y	B007	1A	W0001	0105	22		34-61-16	YC051-YD158, YL951-YR328
	Y	B007	1A	W0001	0108	22		34-61-16	YC051-YD158, YL951-YR328
	Y	B007	1A	W0001	0110	22		34-61-16	YC051-YD158, YL951-YR328
	Y	B009	1A	W0001	0163	24		34-49-11	YC051-YD158, YL951-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0100

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0101		S280W555-506 (continued)					P001-00/ /		ALL
TB0101	Y	S280W555-104 (continued)					P001-00/ /		ALL
TB0101	Z	S280W555-108 (continued)					P001-00/ /		ALL
	Y	B009	1A	W0001	0165	24		34-49-11	YC051-YD158, YL951-YR328
	Y	B009	1A	W0003	0629	24		34-49-11	YC051-YD158, YL951-YR328
	Y	B011	1A	W0001	2001B	24		31-62-11	YC051-YD158, YL951-YR328
	Y	B011	1A	W0001	2010B	24		31-62-11	YC051-YD158, YL951-YR328
	Y	B011	1A	W0001	2011B	24		31-62-11	YC051-YD158, YL951-YR328
	Y	B015	1A	W0001	0085	22		22-14-11	YC051-YD158, YL951-YR328
	Y	B015	1A	W0001	0086	22		22-14-11	YC051-YD158, YL951-YR328
	Y	B015	1A	W0001	0093	22		22-14-11	YC051-YD158, YL951-YR328
	Y	B019	1A	W0001	1012R	22		26-11-21	YC051-YD158, YL951-YR328
	Y	B019	1A	W0001	1014R	22		26-11-21	YC051-YD158, YL951-YR328
	Y	B019	1A	W0003	1514R	22		26-11-21	YC051-YD158, YL951-YR328
	Z	B021	1A	W0001	1013R	22		26-11-21	YC051-YD158, YL951-YR328
	Z	B021	1A	W0001	1015R	22		26-11-21	YC051-YD158, YL951-YR328
	Z	B021	1A	W0001	1016R	22		26-11-21	YC051-YD158, YL951-YR328
	Z	B021	1A	W0003	1515R	22		26-11-21	YC051-YD158, YL951-YR328
	Z	B021	1A	W0003	1516R	22		26-11-21	YC051-YD158, YL951-YR328
	Y	DED		W0001	1012Z			26-11-21	YC051-YD158, YL951-YR328
	Z	DED		W0001	1013Z			26-11-21	YC051-YD158, YL951-YR328
	Y	DED		W0001	1014Z			26-11-21	YC051-YD158, YL951-YR328
	Z	DED		W0001	1015Z			26-11-21	YC051-YD158, YL951-YR328
	Z	DED		W0001	1016Z			26-11-21	YC051-YD158, YL951-YR328
	Y	DED		W0003	1514Z			26-11-21	YC051-YD158, YL951-YR328
	Z	DED		W0003	1515Z			26-11-21	YC051-YD158, YL951-YR328
	Z	DED		W0003	1516Z			26-11-21	YC051-YD158, YL951-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0100

Page 2 End

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0201		S280W555-506					P002-00/ /		ALL
TB0201	Y	S280W555-104					P002-00/ /		ALL
TB0201	Z	S280W555-108					P002-00/ /		ALL
	Z	A001	1A	W0001	0152	24		32-64-11	YC051-YD158, YL951-YR328
	Z	A001	1A	W0001	0161	22		34-45-11	YC051-YD158, YL951-YR328
	Z	A001	1A	W0001	0168	22		34-41-11	YC051-YC052
	Z	A001	1A	W0001	0168	22		SPARE	YC053-YD158, YL951-YR328
	Z	A001	1A	W0001	0302	24		32-64-11	YC051-YD158, YL951-YR328
	Z	A001	1A	W0001	0328	22		34-41-11	YC053-YD158, YL951-YR328
	Z	A001	1A	W0003	0037	24		31-31-15	YL963-YL999, YN236-YR328
	Z	A001	1A	W0003	0636	22		34-49-11	YC051-YD158, YL951-YR328
	Y	A005	1A	W0001	0304	24		33-25-11	YC051-YD158, YL951-YR328
	Y	A005	1A	W0001	0315	24		33-25-11	YC051-YD158, YL951-YR328
	Y	A005	1A	W0001	0327	22		23-32-12	YC051-YD157
	Y	A009	1A	W0001	0303	24		32-64-11	YL963-YL999, YN236-YR328
	Y	A009	1A	W0001	0363	24		32-64-11	YL963-YL999, YN236-YR328
	Y	A009	1A	W0003	0038	24		31-31-15	YL963-YL999, YN236-YR328
TB0205		S280W555-502					540/188/R025		ALL
TB0205	V	S280W555-203					534/190/R024		ALL
TB0205	W	S280W555-206					540/188/R025		ALL
	W	A001	1	W5337	3501R	24		23-41-11	YC051-YN236, YN501-YR328
	W	A001	1	W5355	3501R	20		23-41-11	ALL
	W	A001	1	W5357	3501R	20		23-41-11	YC051-YD158, YL951-YR323, YR325-YR328
	W	A001	1	W6586	3801R	20		23-41-11	ALL
	W	A001	1	W7359	3501R	20		23-41-11	ALL
	W	A005	1	W5337	3501Y	24		23-41-11	YC051-YN236, YN501-YR328
	W	A005	1	W5355	3501Y	20		23-41-11	ALL
	W	A005	1	W5357	3501Y	20		23-41-11	YC051-YD158, YL951-YR323, YR325-YR328
	W	A005	1	W6586	3801Y	20		23-41-11	ALL
	W	A005	1	W7359	3501Y	20		23-41-11	ALL
	W	A009	1	W5224	0535	18		29-25-11	ALL
	W	A009	1	W6124	0533	18		29-25-11	ALL
	W	A009	1	W6124	0534	18		29-25-11	YC051-YL952, YN231-YN501
	W	A009	1	W6124	0535	18		29-25-11	ALL
	V	A013	1	W5224	0536	18		29-25-11	ALL
	V	A013	1	W6124	0536	18		29-25-11	ALL
	V	A015	1	W5224	0568	18		29-25-11	ALL
	V	A015	1	W6124	0568	18		29-25-11	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0200

Page 1

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0205		S280W555-502 (continued)					540/188/R025		ALL
TB0205	V	S280W555-203 (continued)					534/190/R024		ALL
TB0205	W	S280W555-206 (continued)					540/188/R025		ALL
	W	B001	1	W5337	3501B	24		23-41-11	YC051-YN236, YN501-YR328
	W	B001	1	W5355	3501B	20		23-41-11	ALL
	W	B001	1	W5357	3501B	20		23-41-11	YC051-YD158, YL951-YR323, YR325-YR328
	W	B001	1	W6586	3801B	20		23-41-11	ALL
	W	B001	1	W7359	3501B	20		23-41-11	ALL
	W	B005	1	W5337	3501Z			23-41-11	YC051-YN236, YN501-YR328
	W	B005	1	W5355	3501Z			23-41-11	ALL
	W	B005	1	W5357	3501Z			23-41-11	YC051-YD158, YL951-YR323, YR325-YR328
	W	B005	1	W6586	3801Z			23-41-11	ALL
	W	B005	1	W7359	3501Z			23-41-11	ALL
	W	B009	1	W5566	2601B	20		28-44-11	ALL
	W	B009	1	W6586	2602B	20		28-44-11	ALL
	V	B015	1	W5566	2601R	20		28-44-11	ALL
	V	B015	1	W6586	2602R	20		28-44-11	ALL
TB0261		S280W555-504					261/280/R005		ALL
TB0261	X	S280W555-102					261/280/R005		ALL
TB0261	Y	S280W555-104					261/280/R005		ALL
	X	A001	1A	W2112	2601R	24		73-21-12	YC053-YR328
	X	A001	1A	W5172	2610R	24		73-21-12	ALL
	X	A002	1A	W2104	0515	20		27-53-11	YC051-YD158, YL951-YR328
	X	A002	1A	W6134	0518	20		27-53-11	YC051-YN236, YN501-YR328
	X	A003	1A	W2104	0508	24		29-31-11	YC051-YD158, YL951-YR328
	X	A003	1A	W6134	0525	24		29-31-11	YC051-YN236, YN501-YR328
	X	A004	1A	W2212	0502	22		27-23-11	ALL
	X	A004	1A	W6134	0535	22		27-23-11	YC051-YN236, YN501-YR328
	Y	A005	1A	W2114	0025	20		33-51-12	YC053-YR328
	Y	A005	1A	W2114	A-AP			33-51-12	YC053-YR328
	Y	A007	1A	W2112	6032	24		74-31-11	YC053-YR328
	Y	A007	1A	W2112	6033	24		74-31-11	YC053-YR328
	Y	A007	1A	W5172	2617R	24		74-31-11	ALL
	Y	A009	1A	W2508	6025	20		76-21-11	YC051-YD158, YL951-YR328
	Y	A011	1A	W5170	6009	20		28-21-11	ALL
	Y	A011	1A	W5170	6011	20		28-21-11	ALL
	X	A013	1A	W2112	0524	24		27-31-37	YC053-YR328
	X	A013	1A	W6134	0511	20		27-31-37	YC051-YN236, YN501-YR328

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0200

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0261		S280W555-504 (continued)					261/280/R005		ALL
TB0261	X	S280W555-102 (continued)					261/280/R005		ALL
TB0261	Y	S280W555-104 (continued)					261/280/R005		ALL
	X	A014	1A	W2508	2003R	24		34-61-15	YC051-YD158
	X	A014	1A	W2589	2001R	24		34-61-15	YC051-YD170
	X	A014	1A	W2589	2001R	24		SPARE	YN231-YN501
	X	B001	1A	W2112	2601B	24		73-21-12	YC053-YR328
	X	B001	1A	W5172	2610B	24		73-21-12	ALL
	X	B002	1A	W2104	0516	20		27-53-11	YC051-YD158, YL951-YR328
	X	B002	1A	W6134	0520	20		27-53-11	YC051-YN236, YN501-YR328
	X	B003	1A	W2104	0513	24		29-35-11	YC051-YD158, YL951-YR328
	X	B003	1A	W6134	0526	22		29-35-11	YC051-YN236, YN501-YR328
	X	B004	1A	W2508	6009	20		28-21-11	YC051-YD158, YL951-YR328
	X	B004	1A	W5170	6010	20		28-21-11	ALL
	Y	B005	1A	W2508	6008	20		28-21-11	YC051-YD158, YL951-YR328
	Y	B005	1A	W2508	6015	20		28-21-11	YC051-YD158, YL951-YR328
	Y	B005	1A	W5170	6008	20		28-21-11	ALL
	Y	B007	1A	W2112	6034	24		74-31-11	YC053-YR328
	Y	B007	1A	W2112	6035	24		74-31-11	YC053-YR328
	Y	B007	1A	W5172	2617B	24		74-31-11	ALL
	Y	B009	1A	W2508	6024	20		76-21-11	YC051-YD158, YL951-YR328
	Y	B011	1A	W2508	6007	20		28-21-11	YC051-YD158, YL951-YR328
	X	B013	1A	W2218	0012	24		23-24-11	YC051-YD170
	X	B013	1A	W2589	0012	24		23-24-11	YC051-YD170
	X	B013	1A	W2589	0012	24		SPARE	YN231-YN501
	X	B014	1A	W2508	2003B	24		34-61-15	YC051-YD158
	X	B014	1A	W2589	2001B	24		34-61-15	YC051-YD170
	X	B014	1A	W2589	2001B	24		SPARE	YN231-YN501
TB0262		S280W555-504					264/280/R005		ALL
TB0262	V	S280W555-203					261/280/R007		ALL
TB0262	X	S280W555-102					264/280/R005		ALL
TB0262	Y	S280W555-104					264/280/R005		ALL
	X	A001	1A	W2216	2601R	24		73-21-12	YC051-YR323, YR325-YR328
	X	A001	1A	W6172	2611R	24		73-21-12	ALL
	X	A002	1A	W2212	0520	20		27-23-11	ALL
	X	A002	1A	W5170	0504	20		27-23-11	ALL
	X	A003	1A	W2212	0521	20		27-23-11	ALL
	X	A003	1A	W5170	0505	20		27-23-11	ALL
	X	A004	1A	W2510	6004	20		28-21-11	ALL
	X	A004	1A	W6170	6008	20		28-21-11	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0200

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0262		S280W555-504 (continued)					264/280/R005		ALL
TB0262	V	S280W555-203 (continued)					261/280/R007		ALL
TB0262	X	S280W555-102 (continued)					264/280/R005		ALL
TB0262	Y	S280W555-104 (continued)					264/280/R005		ALL
	Y	A005	1A	W2510	6003	20		28-21-11	ALL
	Y	A005	1A	W2510	6026	20		28-21-11	ALL
	Y	A005	1A	W6170	6006	20		28-21-11	ALL
	Y	A007	1A	W2218	6032	24		74-31-11	ALL
	Y	A007	1A	W2218	6033	24		74-31-11	ALL
	Y	A007	1A	W6172	2614R	24		74-31-11	ALL
	Y	A009	1A	W2510	6018	20		76-21-21	ALL
	Y	A011	1A	W2510	6028	20		28-21-11	ALL
	Y	A011	1A	W6170	6007	20		28-21-11	ALL
	V	A013	1	W2102	5527	18		33-14-12	ALL
	V	A013	1	W2204	5502	18		33-14-12	ALL
	V	A013	1	W2218	5564	18		33-14-12	ALL
	X	B001	1A	W2216	2601B	24		73-21-12	YC051-YR323, YR325-YR328
	X	B001	1A	W6172	2611B	24		73-21-12	ALL
	X	B002	1A	W2112	0521	24		27-23-14	YC053-YR328
	X	B002	1A	W6134	0534	22		27-23-14	YC051-YN236, YN501-YR328
	X	B003	1A	W2212	0511	22		27-23-14	ALL
	X	B003	1A	W5170	0506	22		27-23-14	ALL
	X	B004	1A	W2102	5501	20		30-41-11	YC051-YD158
	X	B004	1A	W2102	5524	20		30-41-11	YD160-YR328
	X	B004	1A	W2112	5553	20		30-41-11	YC053-YR328
	Y	B007	1A	W2218	6034	24		74-31-11	ALL
	Y	B007	1A	W2218	6035	24		74-31-11	ALL
	Y	B007	1A	W6172	2614B	24		74-31-11	ALL
	Y	B009	1A	W2510	6019	20		76-21-21	ALL
	Y	B011	1A	W2510	6002	20		28-21-11	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0200

Page 4 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0301		S280W555-506					P003-00/ /		ALL
TB0301	Y	S280W555-104					P003-00/ /		ALL
TB0301	Z	S280W555-108					P003-00/ /		ALL
	Y	A001	1A	W0003	2505R	24		31-62-23	YC051-YD158, YL951-YR328
	Y	A001	1A	W0003	2506R	24		31-62-23	YC051-YD158, YL951-YR328
	Y	A001	1A	W0003	2507R	24		31-62-23	YC051-YC052
	Y	A011	1A	W0003	2501R	24		31-62-21	YC051-YD158, YL951-YR328
	Y	A011	1A	W0003	2510R	24		31-62-21	YC051-YD158, YL951-YR328
	Y	A011	1A	W0003	2511R	24		31-62-21	YC051-YD158, YL951-YR328
	Y	A015	1A	W0003	0579	22		22-14-11	YC051-YD158, YL951-YR328
	Y	A015	1A	W0003	0580	22		22-14-11	YC051-YD158, YL951-YR328
	Y	A015	1A	W0003	0591	22		22-14-11	YC051-YD158, YL951-YR328
	Y	A019	1A	W0003	0583	22		22-14-11	YC051-YD158, YL951-YR328
	Y	A019	1A	W0003	0590	22		22-14-11	YC051-YD158, YL951-YR328
	Y	A019	1A	W0003	0593	22		22-14-11	YC051-YD158, YL951-YR328
	Z	A021	1A	W0003	0585	22		22-14-11	YC051-YD158, YL951-YR328
	Z	A021	1A	W0003	0586	22		22-14-11	YC051-YD158, YL951-YR328
	Z	A021	1A	W0003	0587	22		22-14-11	YC051-YD158, YL951-YR328
	Z	A021	1A	W0003	0588	22		22-14-11	YC051-YD158, YL951-YR328
	Z	A021	1A	W0003	0589	22		22-14-11	YC051-YD158, YL951-YR328
	Z	A021	1A	W0003	0594	22		22-14-11	YC051-YD158, YL951-YR328
	Y	B001	1A	W0003	2505B	24		31-62-23	YC051-YD158, YL951-YR328
	Y	B001	1A	W0003	2506B	24		31-62-23	YC051-YD158, YL951-YR328
	Y	B001	1A	W0003	2507B	24		31-62-23	YC051-YC052
	Y	B011	1A	W0003	2501B	24		31-62-21	YC051-YD158, YL951-YR328
	Y	B011	1A	W0003	2510B	24		31-62-21	YC051-YD158, YL951-YR328
	Y	B011	1A	W0003	2511B	24		31-62-21	YC051-YD158, YL951-YR328
	Y	B015	1A	W0003	0581	22		22-14-11	YC051-YD158, YL951-YR328
	Y	B015	1A	W0003	0582	22		22-14-11	YC051-YD158, YL951-YR328
	Y	B015	1A	W0003	0592	22		22-14-11	YC051-YD158, YL951-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0300

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	Terminal No.	Fix	Part Number		Type	Bundle	Wire No.	GA	Station / WL / BL		Diagram	Effectivity
			Term						CO			
I	TB0403		S280W555-502						J004-00/ /			ALL
I	TB0403	Y	S280W555-104						J004-00/ /			YD158-YR328
		Y	A003	1A	W0094	0162	22				23-32-14	YD158-YN260
I		Y	A003	1A	W0094	0162	22				44-21-22	YN501-YR328
		Y	B003	1A	W0094	0163	22				23-32-14	YD158-YN260
I		Y	B003	1A	W0094	0163	22				44-21-22	YN501-YR328

For training purposes only!

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0400

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0501		S280W555-608					P005-00/ /		ALL
TB0501	V	S280W555-203					P005-00/ /		ALL
TB0501	X	S280W555-102					250/279/L09		ALL
TB0501	Y	S280W555-104					250/279/L09		ALL
TB0501	Z	S280W555-108					P005-00/ /		ALL
	X			W2114	0019	20		33-44-11	ALL
	X			W2114	1201Z			33-44-11	ALL
	Y	A013	1A	W2508	5531	20		33-18-32	YC051-YD158, YL951-YR328
	Y	A013	1A	W2508	5532	20		33-18-32	YC051-YD158, YL951-YR328
	Y	A013	1A	W2508	5560	20		33-18-35	YC051-YD158, YL951-YR328
	Y	A013	1A	W2508	5592	20		33-18-41	YC051-YD158, YL951-YR328
	Y	A015	1A	W5156	5533	22		31-53-11	YC060-YC064
	Z	A017	1A	W2218	5602	20		33-12-12	YC053-YR328
	Z	A017	1A	W2218	5604	20		33-12-12	YC053-YR328
	Z	A017	1A	W2218	5606	20		33-12-12	YC053-YR328
	Z	A017	1A	W2218	5608	20		33-12-12	YC053-YR328
	Z	A017	1A	W2218	5610	20		33-12-12	YC053-YR328
	Z	A017	1A	W2218	5735	20		33-12-12	YC053-YR328
	Y	A025	1A	W5156	0697	22		31-53-11	YC060-YC064
	V	A029	1	W2218	5601	18		33-12-12	YC053-YR328
	V	A029	1	W2218	5735	20		33-12-12	YC053-YR328
	V	A031	1	W2216	5701	18		33-12-11	YC053-YR323, YR325-YR328
	V	A031	1	W2216	5713	20		33-12-11	YC053-YR323, YR325-YR328
	Z	B005	1A	W2218	5603	20		33-12-12	YC053-YR328
	Z	B005	1A	W2218	5607	20		33-12-12	YC053-YR328
	Z	B005	1A	W2218	5661	20		33-12-12	YC053-YR328
	Z	B005	1A	W2218	5663	20		33-12-12	YC053-YR328
	Z	B005	1A	W2218	5665	20		33-12-12	YC053-YR328
	Z	B005	1A	W2218	5734	20		33-12-12	YC053-YR328
	Y	B013	1A	W2135	0037	22		34-21-21	ALL
	Y	B013	1A	W2135	0038	22		34-21-21	ALL
	Y	B013	1A	W2135	0039	22		34-21-21	ALL
	Y	B015	1A	W5514	5603	22		31-53-11	YC060-YC064
	Z	B017	1A	W2218	5654	20		33-12-12	YC053-YR328
	Z	B017	1A	W2218	5656	20		33-12-12	YC053-YR328
	Z	B017	1A	W2218	5658	20		33-12-12	YC053-YR328
	Z	B017	1A	W2218	5660	20		33-12-12	YC053-YR328
	Z	B017	1A	W2218	5662	20		33-12-12	YC053-YR328
	Z	B017	1A	W2218	5664	20		33-12-12	YC053-YR328
	Z	B017	1A	W2218	5717	20		33-12-12	YC053-YR328
	Z	B017	1A	W2218	5737	20		33-12-12	YC053-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0500

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0501		S280W555-608 (continued)					P005-00/ /		ALL
TB0501	V	S280W555-203 (continued)					P005-00/ /		ALL
TB0501	X	S280W555-102 (continued)					250/279/L09		ALL
TB0501	Y	S280W555-104 (continued)					250/279/L09		ALL
TB0501	Z	S280W555-108 (continued)					P005-00/ /		ALL
	Y	B025	1A	W5156	0698	22		31-53-11	YC060-YC064
	X	B026	1A	W2104	0015	20		33-44-11	YC051-YD158, YL951-YR328
	X	B026	1A	W2114	1201	20		33-44-11	ALL
	V	B029	1	W2218	5651	18		33-12-12	YC053-YR328
	V	B029	1	W2218	5737	20		33-12-12	YC053-YR328
	V	B031	1	W2218	5701	18		33-12-12	YC053-YR328
	V	B031	1	W2218	5736	20		33-12-12	YC053-YR328
TB0502		S280W555-608					P005-00/ /		ALL
TB0502	V	S280W555-203					P005-00/ /		ALL
TB0502	Y	S280W555-104					P005-00/ /		ALL
TB0502	Z	S280W555-108					P005-00/ /		ALL
	Z	A001	1A	W2508	5526	20		33-18-31	YC051-YD158, YL951-YR328
	Z	A001	1A	W2508	5527	20		33-18-31	YC051-YC052
	Z	A001	1A	W2508	5540	20		33-18-33	YC051-YC052
	Z	A001	1A	W2508	5541	20		33-18-33	YC051-YC052
	Z	A001	1A	W2508	5553	20		33-18-34	YC051-YC052
	Z	A001	1A	W2508	5554	20		33-18-35	YC051-YC052
	Z	A001	1A	W2508	5597	20		33-18-42	YC053-YD158, YL951-YR328
	Z	A001	1A	W2508	5641	20		33-18-42	YC053-YD158, YL951-YR328
	Z	A001	1A	W2508	5656	20		33-18-42	YC053-YD158, YL951-YR328
	Z	A001	1A	W2508	5666	20		33-18-42	YC051-YC052
	Z	A001	1A	W2508	5675	20		33-18-31	YC053-YD158, YL951-YR328
	Z	A001	1A	W3327	0029	20		33-18-42	YC051-YC052
	V	A005	1	W2216	5601	18		33-12-11	YC053-YR323, YR325-YR328
	V	A005	1	W2216	5712	20		33-12-11	YC053-YR323, YR325-YR328
	Z	A005	1A	W2508	5723	20		31-52-51	YC051-YC052
	Z	A005	1A	W2508	5724	20		31-52-51	YC051-YC052
	Z	A005	1A	W2508	5727	20		31-52-55	YC051-YC052
	Z	A005	1A	W2508	5730	20		31-52-61	YC051-YC052
	Z	A005	1A	W2508	5733	20		31-52-65	YC051-YC052
	Z	A005	1A	W2508	5736	20		31-52-75	YC051-YC052
	Y	A009	1A	W2508	5547	20		33-18-33	YC053-YD158, YL951-YR328
	Y	A009	1A	W2508	5572	20		33-18-37	YC051-YC052
	Y	A009	1A	W2508	5593	20		33-18-42	YC053-YD158, YL951-YR328
	Y	A009	1A	W2508	5621	20		33-18-42	YC053-YD158, YL951-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0500

Page 2

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0502		S280W555-608 (continued)					P005-00/ /		ALL
TB0502	V	S280W555-203 (continued)					P005-00/ /		ALL
TB0502	Y	S280W555-104 (continued)					P005-00/ /		ALL
TB0502	Z	S280W555-108 (continued)					P005-00/ /		ALL
	Y	A009	1A	W2508	5668	20		33-18-37	YC051-YC052
	Y	A009	1A	W2508	5680	20		33-18-33	YC053-YD158, YL951-YR328
	Y	A011	1A	W2508	5598	20		33-18-42	YC051-YD158, YL951-YR328
	Y	A011	1A	W2508	5599	20		33-18-42	YC051-YD158, YL951-YR328
	Y	A011	1A	W2508	5600	20		33-18-42	YC051-YD158, YL951-YR328
	Y	A011	1A	W2508	5626	20		33-18-42	YC051-YD158, YL951-YR328
	Z	A013	1A	W2508	5542	20		33-18-33	YC051-YC052
	Z	A013	1A	W2508	5545	20		33-18-33	YC051-YC052
	Z	A013	1A	W2508	5546	20		33-18-33	YC051-YC052
	Z	A013	1A	W2508	5547	20		33-18-33	YC051-YC052
	Z	A013	1A	W2508	5593	20		33-18-42	YC051-YC052
	Z	A013	1A	W2508	5621	20		33-18-42	YC051-YC052
	Y	A019	1A	W2218	5655	20		33-12-12	YC051-YD158
	Y	A019	1A	W3327	0013	20		33-12-12	YC051-YD158
	Y	A021	1A	W2112	5501	22		21-27-21	YC053-YR328
	Y	A021	1A	W2112	5503	22		21-27-21	YC053-YR328
	Y	A023	1A	W2508	5556	20		33-18-35	YC051-YD158, YL951-YR328
	Y	A023	1A	W2508	5557	20		33-18-35	YC051-YD158, YL951-YR328
	V	A025	1	W2114	0002	18		33-41-11	ALL
	V	A025	1	W2114	0003	18		33-41-11	ALL
	V	A025	1	W2114	0018	18		33-41-11	ALL
	Y	A029	1A	W2508	5670	20		32-64-21	YC051-YD158, YL951-YR328
	Y	A029	1A	W2508	5674	20		32-64-21	YC051-YD158, YL951-YR328
	Z	B001	1A	W2508	5554	20		33-18-35	YC051-YC052
	Z	B001	1A	W2508	5559	20		33-18-35	YC051-YC052
	Z	B001	1A	W2508	5569	20		33-18-36	YC051-YC052
	Z	B001	1A	W2508	5570	20		33-18-36	YC051-YC052
	Z	B001	1A	W2508	5571	20		33-18-36	YC051-YC052
	Z	B001	1A	W2508	5597	20		33-18-42	YC051-YC052
	Z	B001	1A	W2508	5641	20		33-18-42	YC051-YC052
	Z	B001	1A	W2508	5656	20		33-18-42	YC051-YC052
	Z	B001	1A	W2508	5677	20		31-52-21	YC053-YD158, YL951-YR328
	Z	B001	1A	W2508	5705	20		31-52-21	YC053-YD158, YL951-YR328
	Z	B001	1A	W2508	5730	20		31-52-61	YC053-YD158, YL951-YR328
	Z	B001	1A	W2508	5736	20		31-52-75	YC053-YD158, YL951-YR328
	V	B005	1	W2112	5563	20		33-12-11	YC053-YR328
	V	B005	1	W2216	5651	18		33-12-11	YC053-YR323, YR325-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0500

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0502		S280W555-608 (continued)					P005-00/ /		ALL
TB0502	V	S280W555-203 (continued)					P005-00/ /		ALL
TB0502	Y	S280W555-104 (continued)					P005-00/ /		ALL
TB0502	Z	S280W555-108 (continued)					P005-00/ /		ALL
	V	B005	1	W2216	5714	20		33-12-11	YC053-YR323, YR325-YR328
	Z	B005	1A	W2508	5704	20		31-52-21	YC051-YC052
	Z	B005	1A	W2508	5705	20		31-52-21	YC051-YC052
	Z	B005	1A	W2508	5709	20		31-52-25	YC051-YC052
	Z	B005	1A	W2508	5712	20		31-52-31	YC051-YC052
	Z	B005	1A	W2508	5715	20		31-52-35	YC051-YC052
	Z	B005	1A	W2508	5718	20		31-52-41	YC051-YC052
	Z	B005	1A	W2508	5723	20		31-52-51	YC051-YC052
	Y	B009	1A	W2508	0030	22		21-33-11	YC060-YC064, YL952-YL999, YN232-YR328
	Y	B009	1A	W2508	5506	22		21-33-11	YC060-YC064, YL952-YL999, YN232-YR328
	Y	B009	1A	W2510	0101	22		21-33-11	YC060-YC064, YL952-YL999, YN232-YR328
	Y	B011	1A	W2508	5548	20		33-18-34	YC051-YD158, YL951-YR328
	Y	B011	1A	W2508	5549	20		33-18-34	YC051-YC052
	Y	B011	1A	W2508	5561	20		33-18-35	YC051-YC052
	Y	B011	1A	W2508	5679	20		33-18-34	YC053-YD158, YL951-YR328
	Y	B011	1A	W3327	0012	20		33-18-42	YC051-YD158, YL951-YR328
	Z	B013	1A	W2218	5611	20		33-12-12	YC053-YR328
	Z	B013	1A	W2218	5657	20		33-12-12	YC053-YR328
	Z	B013	1A	W2218	5659	20		33-12-12	YC053-YR328
	Z	B013	1A	W2218	5718	20		33-12-12	YC053-YR328
	Z	B013	1A	W2218	5733	20		33-12-12	YC053-YR328
	Z	B013	1A	W2508	5529	20		33-18-32	YC051-YC052
	Z	B013	1A	W2508	5555	20		33-18-34	YC051-YC052
	Z	B013	1A	W2508	5566	20		33-18-36	YC051-YC052
	Z	B013	1A	W2508	5567	20		33-18-36	YC051-YC052
	Z	B013	1A	W2510	5513	20		33-18-32	YC051-YC052
	Y	B021	1A	W2112	5502	22		21-27-21	YC053-YR328
	Y	B021	1A	W2112	5504	22		21-27-21	YC053-YR328
	Y	B023	1A	W2508	5720	20		31-52-51	YC051-YD158, YL951-YR328
	Y	B023	1A	W2508	5721	20		31-52-51	YC051-YD158, YL951-YR328
	Y	B023	1A	W2508	5728	20		31-52-61	YC051-YD158, YL951-YR328
	Y	B029	1A	W2508	5673	20		32-64-21	YC051-YD158, YL951-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0500

Page 4

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0503		S280W555-608					P005-00/ /		ALL
TB0503	V	S280W555-203					P005-00/ /		ALL
TB0503	X	S280W555-102					P005-00/ /		ALL
TB0503	Y	S280W555-104					251/278/L09		ALL
TB0503	Z	S280W555-108					P005-00/ /		ALL
	Z	A001	1A	W2508	5533	20		33-18-32	YC051-YD158, YL951-YR328
	Z	A001	1A	W2508	5534	20		33-18-32	YC051-YC052
	Z	A001	1A	W2508	5544	20		33-18-33	YC051-YC052
	Z	A001	1A	W2508	5552	20		33-18-34	YC051-YC052
	Z	A001	1A	W2508	5558	20		33-18-35	YC051-YC052
	Z	A001	1A	W2508	5589	20		33-18-41	YC051-YD158, YL951-YR328
	Z	A001	1A	W2508	5590	20		33-18-41	YC051-YD158, YL951-YR328
	Z	A001	1A	W2508	5599	20		33-18-42	YC051-YD158, YL951-YR328
	Z	A001	1A	W2508	5681	20		33-18-32	YC053-YD158, YL951-YR328
	Z	A001	1A	W3327	0029	20		33-18-42	YC054-YD157
	Z	A001	1A	W3327	0031	20		33-18-42	YD158, YL951-YR328
	Y	A007	1A	W2508	5701	20		31-52-21	YC051-YC052
	Y	A007	1A	W2508	5702	20		31-52-21	YC051-YC052
	Y	A007	1A	W2508	5725	20		31-52-55	YC051-YC052
	Y	A007	1A	W2508	5731	20		31-52-65	YC051-YC052
	Z	A009	1A	W2508	5535	20		33-18-33	YC051-YC052
	Z	A009	1A	W2508	5536	20		33-18-33	YC051-YC052
	Z	A009	1A	W2508	5537	20		33-18-33	YC051-YC052
	Z	A009	1A	W2508	5594	20		33-18-42	YC051-YC052
	Z	A009	1A	W2508	5640	20		33-18-42	YC051-YC052
	Z	A009	1A	W2508	5654	20		33-18-42	YC051-YC052
	Z	A009	1A	W2508	5665	20		33-18-42	YC051-YC052
	Y	A025	1A	W2508	5642	20		23-24-11	YC051-YD158, YL951-YR328
	Y	A025	1A	W2589	0016	22		23-24-11	ALL
	Y	A025	1A	W2589	0017	22		23-24-11	ALL
	Z	B001	1A	W2508	5564	20		33-18-36	YC051-YC052
	Z	B001	1A	W2508	5565	20		33-18-36	YC051-YD158, YL951-YR328
	Z	B001	1A	W2508	5576	20		33-18-37	YC051-YC052
	Z	B001	1A	W2508	5587	20		33-18-41	YC051-YD158, YL951-YR328
	Z	B001	1A	W2508	5588	20		33-18-41	YC051-YD158, YL951-YR328
	Z	B001	1A	W2508	5683	20		33-18-36	YC053-YD158, YL951-YR328
	Y	B005	1A	W2035	0059	22		34-61-12	YD158-YR328
	Y	B005	1A	W2218	8005	20		34-61-12	YD158-YR328
	Y	B007	1A	W2035	0014	24		34-21-11	ALL
	Y	B007	1A	W2035	0053	24		34-21-11	ALL
	Y	B007	1A	W2035	0054	24		34-21-11	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0500

Page 5

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0503		S280W555-608 (continued)					P005-00/ /		ALL
TB0503	V	S280W555-203 (continued)					P005-00/ /		ALL
TB0503	X	S280W555-102 (continued)					P005-00/ /		ALL
TB0503	Y	S280W555-104 (continued)					251/278/L09		ALL
TB0503	Z	S280W555-108 (continued)					P005-00/ /		ALL
	V	B031	1	W2212	5505	18		30-42-11	ALL
	V	B031	1	W2214	5501	18		30-42-11	YC051-YD158, YL951-YR328
	V	B031	1	W2214	5502	18		SPARE	YC051-YC058
	V	B031	1	W2214	5502	18		00-000	YC059-YD158
	V	B031	%A	W2214	5502	18		SPARE	YL951-YL999, YR301-YR328
	V	B031	%A	W2214	5502	18		00-000	YN231-YN501
TB0504		S280W555-604					P005-00/ /		ALL
TB0504	P	S280W555-102					P005-00/ /		ALL
TB0504	Q	S280W555-104					P005-00/ /		ALL
TB0504	X	S280W555-102					P005-00/ /		ALL
TB0504	Y	S280W555-104					254/280/R03		ALL
	Y	A001	1A	W2508	5509	24		21-51-11	YC051-YD158, YL951-YL999, YR301-YR328
	Y	A001	1A	W2508	5637	24		21-51-11	YC051-YD158, YL951-YL999, YR301-YR328
	Y	A001	1A	W2508	5638	24		21-51-11	YC051-YD158, YL951-YL999, YR301-YR328
	Y	A003	1A	W2218	5503	24		21-31-11	ALL
	Y	A003	1A	W2218	5504	24		21-31-11	YC051-YD157
	Y	A003	1A	W2218	5505	24		21-31-11	ALL
	Y	A003	1A	W2218	6101	24		21-31-11	YD158-YR328
	Y	A005	1A	W2216	5507	24		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A005	1A	W2216	5507	24		21-61-21	YN231-YN501
	Y	A005	1A	W2216	5508	24		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A005	1A	W2216	5508	24		21-61-21	YN231-YN501
	Y	A005	1A	W2216	5515	24		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A005	1A	W2216	5515	22		21-61-21	YN231-YN501
	Y	A007	1A	W2216	5503	24		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A007	1A	W2216	5503	24		21-61-21	YN231-YN501
	Y	A007	1A	W2216	5505	24		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0500

Page 6

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0504		S280W555-604 (continued)					P005-00/ /		ALL
TB0504	P	S280W555-102 (continued)					P005-00/ /		ALL
TB0504	Q	S280W555-104 (continued)					P005-00/ /		ALL
TB0504	X	S280W555-102 (continued)					P005-00/ /		ALL
TB0504	Y	S280W555-104 (continued)					254/280/R03		ALL
	Y	A007	1A	W2216	5505	24		21-61-21	YN231-YN501
	Y	A007	1A	W2216	5509	24		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A007	1A	W2216	5509	24		21-61-21	YN231-YN501
	Y	A009	1A	W2510	0501	24		24-31-12	ALL
	Y	A009	1A	W2510	0503	24		24-31-12	ALL
	Y	A009	1A	W2510	0506	24		24-31-12	ALL
	Y	A011	1A	W2218	5525	24		21-61-22	YN231-YN501
	Y	A011	1A	W2218	5526	24		21-61-22	YN231-YN501
	Y	A011	1A	W2218	5527	24		21-61-22	YN231-YN501
	X	A013	1A	W2035	0009	24		34-61-17	ALL
	X	A013	1A	W2112	6007	24		34-61-17	YC053-YR328
	X	A014	1A	W2035	0010	24		34-61-17	ALL
	X	A014	1A	W2216	6006	24		34-61-17	YC051-YR323, YR325-YR328
	X	A015	1A	W2114	5511	24		21-61-22	YN231-YN501
	X	A015	1A	W2218	5506	24		21-61-22	YN231-YN501
	X	A016	1A	W2114	5512	24		21-61-22	YN231-YN501
	X	A016	1A	W2218	5507	24		21-61-22	YN231-YN501
	Y	B001	1A	W2218	5554	24		36-21-11	ALL
	Y	B001	1A	W2218	5576	20		36-21-11	ALL
	Y	B001	1A	W2218	5577	20		36-21-11	ALL
	Y	B003	1A	W2510	5501	24		21-51-21	YC051-YL999, YR301-YR328
	Y	B003	1A	W2510	5507	24		21-51-21	YC051-YL999, YR301-YR328
	Y	B003	1A	W2510	5514	24		21-51-21	YC051-YL999, YR301-YR328
	Y	B005	1A	W2508	6006	20		28-21-11	YC051-YD158, YL951-YR328
	Y	B005	1A	W2510	6005	20		28-21-11	ALL
	Y	B005	1A	W2510	6006	20		28-21-11	ALL
	Y	B007	1A	W2216	5528	24		21-51-12	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B007	1A	W2216	5528	24		21-61-21	YN231-YN501
	Y	B007	1A	W2216	5530	24		21-51-12	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B007	1A	W2216	5530	24		21-61-21	YN231-YN501
	Y	B007	1A	W2216	5549	24		21-51-12	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B007	1A	W2218	5528	24		21-61-22	YN231-YN501

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0500

Page 7

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0504		S280W555-604 (continued)					P005-00/ /		ALL
TB0504	P	S280W555-102 (continued)					P005-00/ /		ALL
TB0504	Q	S280W555-104 (continued)					P005-00/ /		ALL
TB0504	X	S280W555-102 (continued)					P005-00/ /		ALL
TB0504	Y	S280W555-104 (continued)					254/280/R03		ALL
	Y	B009	1A	W2216	5521	24		21-61-14	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B009	1A	W2216	5521	24		21-61-21	YN231-YN501
	Y	B009	1A	W2216	5522	24		21-61-14	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B009	1A	W2216	5522	24		21-61-21	YN231-YN501
	Y	B009	1A	W2216	5529	24		21-61-14	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B009	1A	W2216	5529	24		21-61-21	YN231-YN501
	Y	B011	1A	W2114	5510	24		21-61-22	YN231-YN501
	Y	B011	1A	W2218	5514	24		21-51-22	YC051-YL999, YR301-YR328
	Y	B011	1A	W2218	5514	24		21-61-22	YN231-YN501
	Y	B011	1A	W2218	5517	24		21-51-22	YC051-YL999, YR301-YR328
	Y	B011	1A	W2218	5517	24		21-61-22	YN231-YN501
	Y	B011	1A	W2218	5518	24		21-51-22	YC051-YL999, YR301-YR328
	Y	B011	1A	W2218	5518	24		21-61-22	YN231-YN501
	X	B013	1A	W2035	0006	24		34-61-17	ALL
	X	B013	1A	W2216	6003	24		34-61-17	YC051-YR323, YR325-YR328
	X	B014	1A	W2035	0007	24		34-61-17	ALL
	X	B014	1A	W2112	6002	24		34-61-17	YC053-YR328
	X	B015	1A	W2035	0008	24		34-61-17	ALL
	X	B015	1A	W2112	6004	24		34-61-17	YC053-YR328
	X	B016	1A	W2112	0003	20		33-25-11	YC053-YR328
	X	B016	1A	W2218	0021	20		33-25-11	ALL
TB0505		S280W555-608					P005-00/ /		ALL
TB0505	Q	S280W555-104					P005-00/ /		ALL
TB0505	V	S280W555-203					P005-00/ /		ALL
TB0505	Y	S280W555-104					P005-00/ /		ALL
TB0505	Z	S280W555-108					P005-00/ /		YC051-YC052
	Y	A001	1A	W2114	0007	20		33-51-11	ALL
	Y	A001	1A	W2114	0012	20		33-51-11	ALL
	Y	A001	1A	W2114	0013	20		33-51-11	ALL
	Y	A003	1A	W2112	0505	22		24-22-11	YC053-YR328
	Y	A003	1A	W2112	0506	22		24-22-11	YC053-YR328
	Y	A003	1A	W2218	0517	22		24-22-11	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0500

Page 8

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0505		S280W555-608 (continued)					P005-00/ /		ALL
TB0505	Q	S280W555-104 (continued)					P005-00/ /		ALL
TB0505	V	S280W555-203 (continued)					P005-00/ /		ALL
TB0505	Y	S280W555-104 (continued)					P005-00/ /		ALL
TB0505	Z	S280W555-108 (continued)					P005-00/ /		YC051-YC052
	Y	A007	1A	W2112	8014	20		22-23-11	YC053-YR328
	Y	A007	1A	W2112	8015	20		22-23-11	YC053-YR328
	Y	A007	1A	W2112	8016	20		22-23-11	YC053-YR328
	Y	A009	1A	W2508	5579	20		33-18-37	YC051-YD157
	Y	A009	1A	W2508	5581	20		33-18-37	YD158, YL951-YR328
	Y	A009	1A	W2508	5583	20		33-18-37	YC051-YD158, YL951-YR328
	Y	A009	1A	W2508	5584	20		33-18-41	YC051-YD158, YL951-YR328
	Y	A009	1A	W2508	5585	20		33-18-41	YC051-YD158, YL951-YR328
	Y	A011	1A	W2112	5503	22		21-27-21	YC053-YR328
	Y	A013	1A	W2508	5505	24		21-31-11	YC051-YD158, YL951-YR328
	Y	A015	1A	W2112	5517	24		21-31-22	YC053-YR328
	Y	A015	1A	W2112	5519	24		21-31-22	YC053-YR328
	Y	A015	1A	W2112	5521	24		21-31-22	YC053-YR328
	Y	B001	1A	W2114	0014	22		33-51-11	ALL
	Y	B001	1A	W2114	0016	22		33-51-11	ALL
	Y	B001	1A	W2218	0030	22		33-51-11	ALL
	Y	B003	1A	W2114	0015	22		33-51-11	ALL
	Y	B003	1A	W2114	0017	22		33-51-11	ALL
	Y	B003	1A	W2218	0034	22		33-51-11	ALL
	Y	B005	1A	W2508	5707	20		31-52-25	YC051-YC052
	Y	B005	1A	W2508	5708	20		31-52-25	YC051-YC052
	Y	B005	1A	W2508	5717	20		31-52-41	YC051-YC052
	Y	B007	1A	W2218	0002	22		23-42-11	YC051-YD170
	Y	B007	1A	W2218	0006	22		23-43-11	YC051-YD170
	Y	B007	1A	W2218	0010	22		23-43-11	YC051-YD170
	Y	B007	1A	W2218	0011	22		23-42-11	YC051-YD170
	Y	B009	1A	W2508	5578	20		33-18-37	YC051-YD157
	Y	B009	1A	W2508	5580	20		33-18-37	YD158, YL951-YR328
	Y	B009	1A	W2508	5582	20		33-18-37	YC051-YD158, YL951-YR328
	Y	B009	1A	W2508	5586	20		33-18-41	YC051-YD158, YL951-YR328
	Y	B011	1A	W2216	5501	22		21-27-31	YC051-YR323, YR325-YR328
	Y	B011	1A	W2216	5502	22		21-27-31	YC051-YR323, YR325-YR328
	Y	B013	1A	W2112	5510	24		21-31-11	YC053-YR328
	Y	B013	1A	W2508	5504	24		21-31-11	YC051-YD158, YL951-YR328
	Y	B015	1A	W2112	5511	20		21-31-22	YC053-YR328
	Y	B015	1A	W2112	5522	20		21-31-22	YC053-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0500

Page 9

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0505		S280W555-608 (continued)					P005-00/ /		ALL
TB0505	Q	S280W555-104 (continued)					P005-00/ /		ALL
TB0505	V	S280W555-203 (continued)					P005-00/ /		ALL
TB0505	Y	S280W555-104 (continued)					P005-00/ /		ALL
TB0505	Z	S280W555-108 (continued)					P005-00/ /		YC051-YC052
	Y	B015	1A	W2112	5523	20		21-31-22	YC053-YR328
	V	B031	1	W2104	5501	18		30-42-11	YC051-YC063
	V	B031	1	W2104	5502	18		SPARE	YC051-YD158
	V	B031	1	W2104	5505	18		30-42-11	YC051-YC063
TB0506		S280W555-604					P005-00/ /		ALL
TB0506	P	S280W555-102					P005-00/ /		ALL
TB0506	Q	S280W555-104					P005-00/ /		ALL
TB0506	U	S280W555-108					P005-00/ /		ALL
TB0506	X	S280W555-102					255/278/R03		ALL
TB0506	Y	S280W555-104					P005-00/ /		ALL
TB0506	Z	S280W555-108					P005-00/ /		ALL
	Z	A001	1A	W2508	5524	20		33-18-31	YC051-YD158, YL951-YR328
	Z	A001	1A	W2508	5525	20		33-18-31	YC051-YC052
	Z	A001	1A	W2508	5550	20		33-18-34	YC051-YC052
	Z	A001	1A	W2508	5551	20		33-18-34	YC051-YC052
	Z	A001	1A	W2508	5595	20		33-18-42	YC051-YD158, YL951-YR328
	Z	A001	1A	W2508	5601	20		33-18-42	YC051-YD158, YL951-YR328
	Z	A001	1A	W2508	5685	20		33-18-31	YC053-YD158, YL951-YR328
	Y	A005	1A	W2112	5545	24		36-21-11	YC053-YR328
	Y	A005	1A	W2112	5557	20		36-21-11	YC053-YR328
	Y	A005	1A	W2112	5558	20		36-21-11	YC053-YR328
	Y	A009	1A	W2216	5531	24		36-11-11	YN231-YN501
	Y	A009	1A	W2216	5532	24		36-11-11	YN231-YN501
	Y	A009	1A	W2218	5520	24		21-61-13	YC051-YL999, YR301-YR328
	Y	A009	1A	W2218	5521	24		21-61-13	YC051-YL999, YR301-YR328
	Y	A009	1A	W2218	5548	24		36-11-11	YN231-YN501
	Y	A009	1A	W2218	5552	24		21-61-13	YC051-YL999, YR301-YR328
	Y	A011	1A	W2218	5654	20		33-12-12	ALL
	Y	A011	1A	W3327	0007	20		33-12-12	YC051-YD158, YL951-YR328
	X	A013	1A	W2035	0033	22		SPARE	YC051-YC052
	X	A013	%A	W2035	0033	22		SPARE	YC053-YD157
	X	A013	1A	W2035	0033	22		23-42-11	YD158-YR328
	X	A013	1A	W2218	0005	22		23-42-11	ALL
	X	A013	1A	W2218	0056	22		23-42-11	YC051-YD157
	X	A015	1A	W2218	5655	20		33-12-12	YL951-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0500

Page 10

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0506		S280W555-604 (continued)					P005-00/ /		ALL
TB0506	P	S280W555-102 (continued)					P005-00/ /		ALL
TB0506	Q	S280W555-104 (continued)					P005-00/ /		ALL
TB0506	U	S280W555-108 (continued)					P005-00/ /		ALL
TB0506	X	S280W555-102 (continued)					255/278/R03		ALL
TB0506	Y	S280W555-104 (continued)					P005-00/ /		ALL
TB0506	Z	S280W555-108 (continued)					P005-00/ /		ALL
	X	A015	1A	W3327	0013	20		33-12-12	YL951-YR328
	X	A016	1A	W2216	0014	24		52-71-11	YD160-YR323, YR325-YR328
	X	A016	1A	W2218	0067	24		52-71-11	YL951-YR328
	Z	B001	1A	W2508	5535	20		33-18-33	YC053-YD158, YL951-YR328
	Z	B001	1A	W2508	5594	20		33-18-42	YC053-YD158, YL951-YR328
	Z	B001	1A	W2508	5640	20		33-18-42	YC053-YD158, YL951-YR328
	Z	B001	1A	W2508	5654	20		33-18-42	YC053-YD158, YL951-YR328
	Z	B001	1A	W2508	5684	20		33-18-33	YC053-YD158, YL951-YR328
	Y	B005	1A	W2218	0003	22		23-42-11	YD158-YR328
	Y	B005	1A	W2218	0007	22		23-43-11	YD158-YR328
	Y	B005	1A	W2508	0002	22		23-42-11	YD158, YL951-YR328
	Y	B007	1A	W2114	0006	20		33-51-11	ALL
	Y	B007	1A	W2114	0009	20		33-51-11	ALL
	Y	B007	1A	W2114	0010	20		33-51-11	ALL
	Y	B007	1A	W2114	0011	20		33-51-11	ALL
	Y	B011	1A	W2218	0504	22		24-22-21	ALL
	Y	B011	1A	W2218	0505	22		24-22-21	ALL
	Y	B011	1A	W2218	0506	22		24-22-21	ALL
	X	B013	1A	W2218	0045	22		23-42-11	YC051-YD157
	X	B013	1A	W2218	0055	22		23-42-11	YC051-YD157
TB0507		S280W555-604					P005-00/ /		ALL
TB0507	Y	S280W555-104					P005-00/ /		YC053-YR328
TB0507	Z	S280W555-108					P005-00/ /		YC053-YR328
	Z	A001	1A	W2508	5527	20		33-18-31	YC053-YD158, YL951-YR328
	Z	A001	1A	W2508	5540	20		33-18-33	YC053-YD158, YL951-YR328
	Z	A001	1A	W2508	5541	20		33-18-33	YC053-YD158, YL951-YR328
	Z	A001	1A	W2508	5666	20		33-18-42	YC053-YD157
	Z	A001	1A	W2508	5666	20		33-18-37	YD158, YL951-YR328
	Z	A001	1A	W2508	5676	20		33-18-31	YC053-YD158, YL951-YR328
	Y	A005	1A	W2508	5534	20		33-18-32	YC053-YD158, YL951-YR328
	Y	A005	1A	W2508	5544	20		33-18-33	YC053-YD158, YL951-YR328
	Y	A005	1A	W2508	5681	20		33-18-32	YC053-YD158, YL951-YR328

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0500

Page 11

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0507		S280W555-604 (continued)					P005-00/ /		ALL
TB0507	Y	S280W555-104 (continued)					P005-00/ /		YC053-YR328
TB0507	Z	S280W555-108 (continued)					P005-00/ /		YC053-YR328
	Y	A005	1A	W2508	5682	20		33-18-32	YC053-YD158, YL951-YR328
	Y	A007	1A	W2508	5536	20		33-18-33	YC053-YD158, YL951-YR328
	Y	A007	1A	W2508	5537	20		33-18-33	YC053-YD158, YL951-YR328
	Y	A007	1A	W2508	5665	20		33-18-42	YC053-YD157
	Y	A007	1A	W2508	5665	20		33-18-37	YD158, YL951-YR328
	Y	A007	1A	W2508	5684	20		33-18-33	YC053-YD158, YL951-YR328
	Y	A009	1A	W2508	5707	20		31-52-25	YC053-YD158, YL951-YR328
	Y	A009	1A	W2508	5708	20		31-52-25	YC053-YD158, YL951-YR328
	Y	A009	1A	W2508	5717	20		31-52-41	YC053-YD158, YL951-YR328
	Y	A011	1A	W2508	5529	20		33-18-32	YC053-YD158, YL951-YR328
	Y	A011	1A	W2508	5688	20		33-18-32	YC053-YD158, YL951-YR328
	Y	A011	1A	W2510	5513	20		33-18-32	YC053-YR328
	Z	A013	1A	W2216	5702	20		33-12-11	YC053-YR323, YR325-YR328
	Z	A013	1A	W2216	5704	20		33-12-11	YC053-YR323, YR325-YR328
	Z	A013	1A	W2216	5706	20		33-12-11	YC053-YR323, YR325-YR328
	Z	A013	1A	W2216	5708	20		33-12-11	YC053-YR323, YR325-YR328
	Z	A013	1A	W2216	5713	20		33-12-11	YC053-YR323, YR325-YR328
	Z	B001	1A	W2508	5678	20		31-52-21	YC053-YD158, YL951-YR328
	Z	B001	1A	W2508	5709	20		31-52-25	YC053-YD158, YL951-YR328
	Z	B001	1A	W2508	5712	20		31-52-31	YC053-YD158, YL951-YR328
	Z	B001	1A	W2508	5715	20		31-52-35	YC053-YD158, YL951-YR328
	Z	B001	1A	W2508	5718	20		31-52-41	YC053-YD158, YL951-YR328
	Y	B005	1A	W2508	5572	20		33-18-37	YC053-YD158, YL951-YR328
	Y	B005	1A	W2508	5668	20		33-18-37	YC053-YD158, YL951-YR328
	Y	B007	1A	W2508	5542	20		33-18-33	YC053-YD158, YL951-YR328
	Y	B007	1A	W2508	5545	20		33-18-33	YC053-YD158, YL951-YR328
	Y	B007	1A	W2508	5546	20		33-18-33	YC053-YD158, YL951-YR328
	Y	B007	1A	W2508	5680	20		33-18-33	YC053-YD158, YL951-YR328
	Z	B013	1A	W2218	5702	20		33-12-12	YC053-YR328
	Z	B013	1A	W2218	5704	20		33-12-12	YC053-YR328
	Z	B013	1A	W2218	5708	20		33-12-12	YC053-YR328
	Z	B013	1A	W2218	5711	20		33-12-12	YC053-YR328
	Z	B013	1A	W2218	5712	20		33-12-12	YC053-YR328
	Z	B013	1A	W2218	5715	20		33-12-12	YC053-YR328
	Z	B013	1A	W2218	5736	20		33-12-12	YC053-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0500

Page 12

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0508		S280W555-604					P005-00/ /		ALL
TB0508	Y	S280W555-104					P005-00/ /		YC053-YR328
TB0508	Z	S280W555-108					P005-00/ /		YC053-YR328
	Z	A001	1A	W2508	5553	20		33-18-34	YC053-YD158, YL951-YR328
	Z	A001	1A	W2508	5559	20		33-18-35	YC053-YD158, YL951-YR328
	Z	A001	1A	W2508	5569	20		33-18-36	YC053-YD158, YL951-YR328
	Z	A001	1A	W2508	5570	20		33-18-36	YC053-YD158, YL951-YR328
	Z	A001	1A	W2508	5571	20		33-18-36	YC053-YD158, YL951-YR328
	Z	A001	1A	W2508	5675	20		33-18-31	YC053-YD158, YL951-YR328
	Z	A001	1A	W2508	5676	20		33-18-31	YC053-YD158, YL951-YR328
	Y	A005	1A	W2508	5552	20		33-18-34	YC053-YD158, YL951-YR328
	Y	A005	1A	W2508	5558	20		33-18-35	YC053-YD158, YL951-YR328
	Y	A005	1A	W2508	5682	20		33-18-32	YC053-YD158, YL951-YR328
	Y	A007	1A	W2508	5564	20		33-18-36	YC053-YD158, YL951-YR328
	Y	A007	1A	W2508	5576	20		33-18-37	YC053-YD158, YL951-YR328
	Y	A007	1A	W2508	5683	20		33-18-36	YC053-YD158, YL951-YR328
	Y	A009	1A	W2508	5555	20		33-18-34	YC053-YD158, YL951-YR328
	Y	A009	1A	W2508	5566	20		33-18-36	YC053-YD158, YL951-YR328
	Y	A009	1A	W2508	5567	20		33-18-36	YC053-YD158, YL951-YR328
	Y	A009	1A	W2508	5688	20		33-18-32	YC053-YD158, YL951-YR328
	Z	A013	1A	W2216	5602	20		33-12-11	YC053-YR323, YR325-YR328
	Z	A013	1A	W2216	5604	20		33-12-11	YC053-YR323, YR325-YR328
	Z	A013	1A	W2216	5606	20		33-12-11	YC053-YR323, YR325-YR328
	Z	A013	1A	W2216	5608	20		33-12-11	YC053-YR323, YR325-YR328
	Z	A013	1A	W2216	5610	20		33-12-11	YC053-YR323, YR325-YR328
	Z	A013	1A	W2216	5712	20		33-12-11	YC053-YR323, YR325-YR328
	Z	B001	1A	W2508	5677	20		31-52-21	YC053-YD158, YL951-YR328
	Z	B001	1A	W2508	5678	20		31-52-21	YC053-YD158, YL951-YR328
	Z	B001	1A	W2508	5704	20		31-52-21	YC053-YD158, YL951-YR328
	Z	B001	1A	W2508	5724	20		31-52-51	YC053-YD158, YL951-YR328
	Z	B001	1A	W2508	5727	20		31-52-55	YC053-YD158, YL951-YR328
	Z	B001	1A	W2508	5733	20		31-52-65	YC053-YD158, YL951-YR328
	Y	B005	1A	W2508	5549	20		33-18-34	YC053-YD158, YL951-YR328
	Y	B005	1A	W2508	5561	20		33-18-35	YC053-YD158, YL951-YR328
	Y	B005	1A	W2508	5679	20		33-18-34	YC053-YD158, YL951-YR328
	Y	B007	1A	W2508	5701	20		31-52-21	YC053-YD158, YL951-YR328
	Y	B007	1A	W2508	5702	20		31-52-21	YC053-YD158, YL951-YR328
	Y	B007	1A	W2508	5725	20		31-52-55	YC053-YD158, YL951-YR328
	Y	B007	1A	W2508	5731	20		31-52-65	YC053-YD158, YL951-YR328
	Y	B009	1A	W2508	5525	20		33-18-31	YC053-YD158, YL951-YR328
	Y	B009	1A	W2508	5550	20		33-18-34	YC053-YD158, YL951-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0500

Page 13

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0508		S280W555-604 (continued)					P005-00/ /		ALL
TB0508	Y	S280W555-104 (continued)					P005-00/ /		YC053-YR328
TB0508	Z	S280W555-108 (continued)					P005-00/ /		YC053-YR328
	Y	B009	1A	W2508	5551	20		33-18-34	YC053-YD158, YL951-YR328
	Y	B009	1A	W2508	5685	20		33-18-31	YC053-YD158, YL951-YR328
	Z	B013	1A	W2216	5652	20		33-12-11	YC053-YR323, YR325-YR328
	Z	B013	1A	W2216	5654	20		33-12-11	YC053-YR323, YR325-YR328
	Z	B013	1A	W2216	5656	20		33-12-11	YN231-YN501
	Z	B013	1A	W2216	5658	20		33-12-11	YC053-YR323, YR325-YR328
	Z	B013	1A	W2216	5660	20		33-12-11	YN231-YN501
	Z	B013	1A	W2216	5662	20		33-12-11	YC053-YR323, YR325-YR328
	Z	B013	1A	W2216	5664	20		33-12-11	YC053-YR323, YR325-YR328
	Z	B013	1A	W2216	5714	20		33-12-11	YC053-YR323, YR325-YR328
TB0521		S280W601-301					E005-02/ /		ALL
TB0521	Y	S280W555-104					E005-02/ /		ALL
TB0521	Z	S280W555-108					E005-02/ /		ALL
	Y	A003	1A	W0521	2502R	24		34-61-11	ALL
	Y	A003	1A	W0521	2628R	24		34-61-11	ALL
	Y	A003	1A	W0521	2637R	24		34-61-11	ALL
	Y	A003	1A	W0521	2638R	24		34-61-11	ALL
	Z	A005	1A	W0523	2739R	24		34-21-24	ALL
	Z	A005	1A	W0523	2747R	24		34-21-24	ALL
	Z	A005	1A	W0523	2749R	24		34-21-24	ALL
	Z	A005	1A	W0523	2776R	24		34-21-24	ALL
	Z	A005	1A	W0523	2793R	24		34-21-24	ALL
	Z	A005	1A	W0523	2794R	24		34-21-24	ALL
	Y	A009	1A	W0523	2716R	22		34-61-15	YC056-YR328
	Y	A009	1A	W0523	2798R	24		34-61-15	YC056-YR328
	Y	A009	1A	W0523	2799R	24		34-61-15	YC056-YD170, YN501-YR328
	Y	A009	%A	W0523	2799R	24		34-61-15	YL951-YN260
	Y	A011	1A	W0523	2733R	24		34-21-23	ALL
	Y	A011	1A	W0523	2734R	24		34-21-23	ALL
	Y	A011	1A	W0523	2735R	24		34-21-23	ALL
	Y	A011	1A	W0523	2839R	24		34-21-23	YD158-YR328
	Y	A013	1A	W0523	2728R	24		34-21-23	ALL
	Y	A013	1A	W0523	2729R	24		34-21-23	ALL
	Y	A013	1A	W0523	2730R	24		34-21-23	ALL
	Y	A013	1A	W0523	2784R	24		34-58-21	YL951-YR328
	Y	A015	1A	W0523	2707R	24		34-61-14	ALL
	Y	A015	1A	W0523	2712R	24		34-61-14	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0500

Page 14

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0521		S280W601-301 (continued)					E005-02/ /		ALL
TB0521	Y	S280W555-104 (continued)					E005-02/ /		ALL
TB0521	Z	S280W555-108 (continued)					E005-02/ /		ALL
	Y	A015	1A	W0523	2713R	24		34-61-14	ALL
	Y	A015	1A	W0523	2797R	24		34-61-14	YD158-YD170
	Z	A017	1A	W0523	2724R	24		34-21-23	ALL
	Z	A017	1A	W0523	2725R	24		34-21-23	YC051-YC052
	Z	A017	1A	W0523	2726R	24		34-21-23	ALL
	Z	A017	1A	W0523	2727R	24		34-21-23	ALL
	Z	A017	1A	W0523	2732R	24		34-21-23	ALL
	Z	A017	1A	W0523	2736R	24		34-21-23	ALL
	Z	A017	1A	W0523	2737R	24		34-21-23	ALL
	Z	A017	1A	W0523	2772R	24		34-21-23	ALL
	Z	A021	1A	W0523	2740R	24		34-21-24	ALL
	Z	A021	1A	W0523	2742R	24		34-21-24	ALL
	Z	A021	1A	W0523	2743R	24		34-21-24	ALL
	Z	A021	1A	W0523	2745R	24		34-21-24	ALL
	Z	A021	1A	W0523	2793R	24		34-21-24	ALL
	Z	A021	1A	W0523	2820R	24		34-21-24	YC053-YR328
	Y	B003	1A	W0521	2502B	24		34-61-11	ALL
	Y	B003	1A	W0521	2628B	24		34-61-11	ALL
	Y	B003	1A	W0521	2637B	24		34-61-11	ALL
	Y	B003	1A	W0521	2638B	24		34-61-11	ALL
	Z	B005	1A	W0523	2739B	24		34-21-24	ALL
	Z	B005	1A	W0523	2747B	24		34-21-24	ALL
	Z	B005	1A	W0523	2749B	24		34-21-24	ALL
	Z	B005	1A	W0523	2776B	24		34-21-24	ALL
	Z	B005	1A	W0523	2793B	24		34-21-24	ALL
	Z	B005	1A	W0523	2794B	24		34-21-24	ALL
	Y	B009	1A	W0523	2716B	22		34-61-15	YC056-YR328
	Y	B009	1A	W0523	2798B	24		34-61-15	YC056-YR328
	Y	B009	1A	W0523	2799B	24		34-61-15	YC056-YD170, YN501-YR328
	Y	B009	%A	W0523	2799B	24		34-61-15	YL951-YN260
	Y	B011	1A	W0523	2733B	24		34-21-23	ALL
	Y	B011	1A	W0523	2734B	24		34-21-23	ALL
	Y	B011	1A	W0523	2735B	24		34-21-23	ALL
	Y	B011	1A	W0523	2839B	24		34-21-23	YD158-YR328
	Y	B013	1A	W0523	2728B	24		34-21-23	ALL
	Y	B013	1A	W0523	2729B	24		34-21-23	ALL
	Y	B013	1A	W0523	2730B	24		34-21-23	ALL
	Y	B013	1A	W0523	2784B	24		34-58-21	YL951-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0500

Page 15

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0521		S280W601-301 (continued)					E005-02/ /		ALL
TB0521	Y	S280W555-104 (continued)					E005-02/ /		ALL
TB0521	Z	S280W555-108 (continued)					E005-02/ /		ALL
	Y	B015	1A	W0523	2707B	24		34-61-14	ALL
	Y	B015	1A	W0523	2712B	24		34-61-14	ALL
	Y	B015	1A	W0523	2713B	24		34-61-14	ALL
	Y	B015	1A	W0523	2797B	24		34-61-14	YD158-YD170
	Z	B017	1A	W0523	2724B	24		34-21-23	ALL
	Z	B017	1A	W0523	2725B	24		34-21-23	YC051-YC052
	Z	B017	1A	W0523	2726B	24		34-21-23	ALL
	Z	B017	1A	W0523	2727B	24		34-21-23	ALL
	Z	B017	1A	W0523	2732B	24		34-21-23	ALL
	Z	B017	1A	W0523	2736B	24		34-21-23	ALL
	Z	B017	1A	W0523	2737B	24		34-21-23	ALL
	Z	B017	1A	W0523	2772B	24		34-21-23	ALL
	Z	B021	1A	W0523	2740B	24		34-21-24	ALL
	Z	B021	1A	W0523	2742B	24		34-21-24	ALL
	Z	B021	1A	W0523	2743B	24		34-21-24	ALL
	Z	B021	1A	W0523	2745B	24		34-21-24	ALL
	Z	B021	1A	W0523	2793B	24		34-21-24	ALL
	Z	B021	1A	W0523	2820B	24		34-21-24	YC053-YR328
	Y	DED		W0523	2716Z			34-61-15	YC056-YR328
	Z	DED		W0523	2793Z			34-21-24	ALL
	Y	DED		W0523	2839Z			34-21-23	YD158-YD170
TB0522		S280W601-301					E005-02/ /		ALL
TB0522	Y	S280W555-104					E005-02/ /		ALL
TB0522	Z	S280W555-108					E005-02/ /		ALL
	Y	A001	1A	W0523	2714R	22		34-61-15	ALL
	Y	A001	1A	W0523	2715R	22		34-61-15	ALL
	Y	A001	1A	W0523	2770R	22		34-61-15	ALL
	Y	A003	1A	W0523	2764R	24		34-55-21	ALL
	Y	A003	1A	W0523	2765R	24		34-55-21	ALL
	Y	A003	1A	W0523	2771R	24		34-55-21	ALL
	Y	A005	1A	W0523	3601R	22		34-21-22	ALL
	Y	A005	1A	W0523	3602R	22		34-21-22	ALL
	Y	A005	1A	W0523	3603R	22		34-21-22	ALL
	Y	A007	1A	W0523	3601Y	22		34-21-22	ALL
	Y	A007	1A	W0523	3602Y	22		34-21-22	ALL
	Y	A007	1A	W0523	3603Y	22		34-21-22	ALL
	Z	A009	1A	W0521	2608R	24		34-58-11	YC051-YC055

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0500

Page 16

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0522		S280W601-301 (continued)					E005-02/ /		ALL
TB0522	Y	S280W555-104 (continued)					E005-02/ /		ALL
TB0522	Z	S280W555-108 (continued)					E005-02/ /		ALL
	Y	A009	1A	W0521	2608R	24		34-58-11	YC056-YR328
	Z	A009	1A	W0521	2615R	24		34-58-11	YC051-YC055
	Y	A009	1A	W0521	2615R	24		34-58-11	YC056-YR328
	Z	A009	1A	W0521	2616R	24		34-58-11	YC051-YC055
	Y	A009	1A	W0521	2616R	24		34-58-11	YC056-YR328
	Y	A011	1A	W0521	2529R	22		34-61-15	YC056-YR328
	Y	A011	1A	W0521	2648R	24		34-61-15	YC056-YR328
	Y	A011	1A	W0521	2649R	24		34-61-15	YC056-YD170, YN501-YR328
	Y	A011	%A	W0521	2649R	24		34-61-15	YL951-YN260
	Y	A013	1A	W0521	2591R	24		31-22-11	ALL
	Y	A013	1A	W0521	2598R	24		31-22-11	ALL
	Y	A013	1A	W0521	2599R	24		31-22-11	ALL
	Y	A015	1A	W0521	2585R	24		22-31-52	ALL
	Y	A015	1A	W0521	2586R	24		22-31-52	ALL
	Y	A015	1A	W0521	2597R	24		22-31-52	ALL
	Y	A017	1A	W0521	2587R	24		34-55-11	ALL
	Y	A017	1A	W0521	2588R	24		34-55-11	ALL
	Y	A017	1A	W0521	2589R	24		34-55-11	ALL
	Y	A019	1A	W0521	2913R	24		34-61-18	YC059-YR328
	Y	A019	1A	W0521	2914R	24		34-61-18	YC059-YR328
	Y	A019	1A	W0521	2915R	24		34-61-18	YC059-YR328
	Y	A021	1A	W0521	2515R	22		34-61-18	YC051-YC058
	Y	A021	1A	W0521	2565R	22		34-61-18	YC051-YC058
	Y	A021	1A	W0521	2596R	22		34-61-18	YC051-YC058
	Y	A021	1A	W0523	2828R	22		31-32-15	YC059-YR328
	Y	A021	1A	W0523	2829R	22		31-32-15	YC059-YR328
	Y	A021	1A	W0523	2831R	24		34-61-18	YC059-YR328
	Y	A021	1A	W0523	2833R	24		34-61-26	YC059-YR328
	Y	A023	1A	W0521	2685R	24		23-15-12	YC051-YD157
	Y	A023	1A	W0521	2695R	24		23-15-12	YC051-YD157
	Y	A023	1A	W0521	2696R	24		23-15-12	YC051-YD157
	Y	A023	1A	W0521	2699R	24		23-15-12	YC051-YD157
	Y	B001	1A	W0523	2714B	22		34-61-15	ALL
	Y	B001	1A	W0523	2715B	22		34-61-15	ALL
	Y	B001	1A	W0523	2770B	22		34-61-15	ALL
	Y	B003	1A	W0523	2764B	24		34-55-21	ALL
	Y	B003	1A	W0523	2765B	24		34-55-21	ALL
	Y	B003	1A	W0523	2771B	24		34-55-21	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0500

Page 17

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0522		S280W601-301 (continued)					E005-02/ /		ALL
TB0522	Y	S280W555-104 (continued)					E005-02/ /		ALL
TB0522	Z	S280W555-108 (continued)					E005-02/ /		ALL
	Y	B005	1A	W0523	3601B	22		34-21-22	ALL
	Y	B005	1A	W0523	3602B	22		34-21-22	ALL
	Y	B005	1A	W0523	3603B	22		34-21-22	ALL
	Y	B007	1A	W0521	0283	24		22-11-53	YC059-YR328
	Y	B007	1A	W0521	0284	24		22-11-53	YC059-YR328
	Y	B007	1A	W0523	0390	24		22-11-53	YC059-YR328
	Z	B009	1A	W0521	2608B	24		34-58-11	YC051-YC055
	Y	B009	1A	W0521	2608B	24		34-58-11	YC056-YR328
	Z	B009	1A	W0521	2615B	24		34-58-11	YC051-YC055
	Y	B009	1A	W0521	2615B	24		34-58-11	YC056-YR328
	Z	B009	1A	W0521	2616B	24		34-58-11	YC051-YC055
	Y	B009	1A	W0521	2616B	24		34-58-11	YC056-YR328
	Y	B011	1A	W0521	2529B	22		34-61-15	YC056-YR328
	Y	B011	1A	W0521	2648B	24		34-61-15	YC056-YR328
	Y	B011	1A	W0521	2649B	24		34-61-15	YC056-YD170, YN501-YR328
	Y	B011	%A	W0521	2649B	24		34-61-15	YL951-YN260
	Y	B013	1A	W0521	2591B	24		31-22-11	ALL
	Y	B013	1A	W0521	2598B	24		31-22-11	ALL
	Y	B013	1A	W0521	2599B	24		31-22-11	ALL
	Y	B015	1A	W0521	2585B	24		22-31-52	ALL
	Y	B015	1A	W0521	2586B	24		22-31-52	ALL
	Y	B015	1A	W0521	2597B	24		22-31-52	ALL
	Y	B017	1A	W0521	2587B	24		34-55-11	ALL
	Y	B017	1A	W0521	2588B	24		34-55-11	ALL
	Y	B017	1A	W0521	2589B	24		34-55-11	ALL
	Y	B019	1A	W0521	2913B	24		34-61-18	YC059-YR328
	Y	B019	1A	W0521	2914B	24		34-61-18	YC059-YR328
	Y	B019	1A	W0521	2915B	24		34-61-18	YC059-YR328
	Y	B021	1A	W0521	2515B	22		34-61-18	YC051-YC058
	Y	B021	1A	W0521	2565B	22		34-61-18	YC051-YC058
	Y	B021	1A	W0521	2596B	22		34-61-18	YC051-YC058
	Y	B021	1A	W0523	2828B	22		31-32-15	YC059-YR328
	Y	B021	1A	W0523	2829B	22		31-32-15	YC059-YR328
	Y	B021	1A	W0523	2831B	24		34-61-18	YC059-YR328
	Y	B021	1A	W0523	2833B	24		34-61-26	YC059-YR328
	Y	B023	1A	W0521	2685B	24		23-15-12	YC051-YD157
	Y	B023	1A	W0521	2695B	24		23-15-12	YC051-YD157
	Y	B023	1A	W0521	2696B	24		23-15-12	YC051-YD157

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0500

Page 18

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0522		S280W601-301 (continued)					E005-02/ /		ALL
TB0522	Y	S280W555-104 (continued)					E005-02/ /		ALL
TB0522	Z	S280W555-108 (continued)					E005-02/ /		ALL
	Y	B023	1A	W0521	2699B	24		23-15-12	YC051-YD157
TB0523		S280W601-301					E005-02/ /		ALL
TB0523	Y	S280W555-104					E005-02/ /		ALL
TB0523	Z	S280W555-108					E005-02/ /		ALL
	Y	A001	1A	W0521	2510R	24		34-61-14	ALL
	Y	A001	1A	W0521	2513R	24		34-61-14	ALL
	Y	A001	1A	W0521	2528R	24		34-61-14	ALL
	Y	A001	1A	W0521	2594R	24		34-61-14	ALL
	Y	A003	1A	W0521	2541R	24		34-21-13	YC051-YD170
	Y	A003	1A	W0521	2542R	24		34-21-13	YC051-YD170
	Y	A003	1A	W0521	2543R	24		34-21-13	YC051-YD170
	Y	A003	1A	W0521	2901R	24		34-21-13	YC051-YD157
	Y	A003	1A	W0521	2922R	24		34-21-13	YD158-YD170
	Y	A005	1A	W0521	2501R	24		34-61-22	ALL
	Y	A005	1A	W0521	2517R	24		34-61-22	ALL
	Y	A005	1A	W0521	2592R	24		34-61-22	ALL
	Y	A005	1A	W0521	2640R	24		34-61-22	ALL
	Y	A007	1A	W0521	2505R	24		34-61-14	ALL
	Y	A007	1A	W0521	2511R	24		34-61-14	ALL
	Y	A007	1A	W0521	2512R	24		34-61-14	ALL
	Y	A007	1A	W0521	2593R	24		34-61-14	ALL
	Y	A009	1A	W0521	0251	22		34-61-15	YD158-YD170
	Y	A009	1A	W0521	2523R	22		34-61-15	ALL
	Y	A009	1A	W0521	2524R	22		34-61-15	ALL
	Y	A009	1A	W0521	2525R	22		34-61-15	ALL
	Y	A009	1A	W0523	2804R	24		34-61-15	YC051-YD157
	Y	A011	1A	W0521	2526R	22		34-61-15	ALL
	Y	A011	1A	W0521	2530R	22		34-61-15	ALL
	Y	A011	1A	W0521	2595R	22		34-61-15	ALL
	Z	A013	1A	W0521	2509R	24		34-61-14	ALL
	Z	A013	1A	W0521	2518R	24		34-61-14	ALL
	Z	A013	1A	W0521	2519R	24		34-61-14	ALL
	Z	A013	1A	W0521	2520R	22		34-61-14	ALL
	Z	A013	1A	W0521	2521R	24		34-61-14	ALL
	Z	A013	1A	W0521	2522R	24		34-61-14	ALL
	Z	A013	1A	W0521	2647R	24		34-61-14	YD158-YD170
	Z	A017	1A	W0521	2548R	24		34-21-14	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0500

Page 19

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0523		S280W601-301 (continued)					E005-02/ /		ALL
TB0523	Y	S280W555-104 (continued)					E005-02/ /		ALL
TB0523	Z	S280W555-108 (continued)					E005-02/ /		ALL
	Z	A017	1A	W0521	2556R	24		34-21-14	ALL
	Z	A017	1A	W0521	2557R	24		34-21-14	ALL
	Z	A017	1A	W0521	2558R	24		34-21-14	ALL
	Z	A017	1A	W0521	2559R	24		34-21-14	ALL
	Z	A017	1A	W0521	2583R	24		34-21-14	ALL
	Z	A017	1A	W0521	2677R	24		34-21-14	YL951-YR328
	Z	A021	1A	W0521	2549R	24		34-21-14	ALL
	Z	A021	1A	W0521	2550R	24		34-21-14	ALL
	Z	A021	1A	W0521	2551R	24		34-21-14	ALL
	Z	A021	1A	W0521	2554R	24		34-21-14	ALL
	Z	A021	1A	W0521	2583R	24		34-21-14	ALL
	Z	A021	1A	W0521	2604R	24		34-21-14	ALL
	Y	B001	1A	W0521	2510B	24		34-61-14	ALL
	Y	B001	1A	W0521	2513B	24		34-61-14	ALL
	Y	B001	1A	W0521	2528B	24		34-61-14	ALL
	Y	B001	1A	W0521	2594B	24		34-61-14	ALL
	Y	B003	1A	W0521	2541B	24		34-21-13	YC051-YD170
	Y	B003	1A	W0521	2542B	24		34-21-13	YC051-YD170
	Y	B003	1A	W0521	2543B	24		34-21-13	YC051-YD170
	Y	B003	1A	W0521	2901B	24		34-21-13	YC051-YD157
	Y	B003	1A	W0521	2922B	24		34-21-13	YD158-YD170
	Y	B005	1A	W0521	2501B	24		34-61-22	ALL
	Y	B005	1A	W0521	2517B	24		34-61-22	ALL
	Y	B005	1A	W0521	2592B	24		34-61-22	ALL
	Y	B005	1A	W0521	2640B	24		34-61-22	ALL
	Y	B007	1A	W0521	2505B	24		34-61-14	ALL
	Y	B007	1A	W0521	2511B	24		34-61-14	ALL
	Y	B007	1A	W0521	2512B	24		34-61-14	ALL
	Y	B007	1A	W0521	2593B	24		34-61-14	ALL
	Y	B009	1A	W0521	0252	22		34-61-15	YD158-YD170
	Y	B009	1A	W0521	2523B	22		34-61-15	ALL
	Y	B009	1A	W0521	2524B	22		34-61-15	ALL
	Y	B009	1A	W0521	2525B	22		34-61-15	ALL
	Y	B009	1A	W0523	2804B	24		34-61-15	YC051-YD157
	Y	B011	1A	W0521	2526B	22		34-61-15	ALL
	Y	B011	1A	W0521	2530B	22		34-61-15	ALL
	Y	B011	1A	W0521	2595B	22		34-61-15	ALL
	Z	B013	1A	W0521	2509B	24		34-61-14	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0500

Page 20

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0523		S280W601-301 (continued)					E005-02/ /		ALL
TB0523	Y	S280W555-104 (continued)					E005-02/ /		ALL
TB0523	Z	S280W555-108 (continued)					E005-02/ /		ALL
	Z	B013	1A	W0521	2518B	24		34-61-14	ALL
	Z	B013	1A	W0521	2519B	24		34-61-14	ALL
	Z	B013	1A	W0521	2520B	22		34-61-14	ALL
	Z	B013	1A	W0521	2521B	24		34-61-14	ALL
	Z	B013	1A	W0521	2522B	24		34-61-14	ALL
	Z	B013	1A	W0521	2647B	24		34-61-14	YD158-YD170
	Z	B017	1A	W0521	2548B	24		34-21-14	ALL
	Z	B017	1A	W0521	2556B	24		34-21-14	ALL
	Z	B017	1A	W0521	2557B	24		34-21-14	ALL
	Z	B017	1A	W0521	2558B	24		34-21-14	ALL
	Z	B017	1A	W0521	2559B	24		34-21-14	ALL
	Z	B017	1A	W0521	2583B	24		34-21-14	ALL
	Z	B017	1A	W0521	2677B	24		34-21-14	YL951-YR328
	Z	B021	1A	W0521	2549B	24		34-21-14	ALL
	Z	B021	1A	W0521	2550B	24		34-21-14	ALL
	Z	B021	1A	W0521	2551B	24		34-21-14	ALL
	Z	B021	1A	W0521	2554B	24		34-21-14	ALL
	Z	B021	1A	W0521	2583B	24		34-21-14	ALL
	Z	B021	1A	W0521	2604B	24		34-21-14	ALL
	Y	DED		W0521	2541Z			34-21-13	YC065-YD170
	Y	DED		W0521	2542Z			34-21-13	YC059-YD170
	Z	DED		W0521	2583Z			34-21-14	ALL
TB0524		S280W601-301					E005-02/ /		ALL
TB0524	Y	S280W555-104					E005-02/ /		ALL
TB0524	Z	S280W555-108					E005-02/ /		ALL
	Y	A001	1A	W0523	2701R	24		34-61-11	ALL
	Y	A001	1A	W0523	2766R	24		34-61-11	ALL
	Y	A001	1A	W0523	2767R	24		34-61-11	ALL
	Y	A001	1A	W0523	2832R	24		34-61-26	YC059-YR328
	Y	A003	1A	W0521	0251	22		34-61-15	YD158-YD170
	Y	A003	1A	W0521	2650R	24		34-61-15	YD158-YD170
	Y	A003	1A	W0523	2804R	24		34-61-15	YD158-YD170
	Y	A005	1A	W0523	2706R	24		34-61-14	ALL
	Y	A005	1A	W0523	2709R	24		34-61-14	ALL
	Y	A005	1A	W0523	2711R	24		34-61-14	ALL
	Y	A005	1A	W0523	2769R	24		34-61-14	ALL
	Y	A007	1A	W0523	2705R	24		34-61-14	ALL

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0500

Page 21

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0524		S280W601-301 (continued)					E005-02/ /		ALL
TB0524	Y	S280W555-104 (continued)					E005-02/ /		ALL
TB0524	Z	S280W555-108 (continued)					E005-02/ /		ALL
	Y	A007	1A	W0523	2710R	24		34-61-14	ALL
	Y	A007	1A	W0523	2718R	24		34-61-14	ALL
	Y	A007	1A	W0523	2768R	24		34-61-14	ALL
	Y	A009	1A	W0521	2569R	22		28-41-11	ALL
	Y	A009	1A	W0521	2570R	22		28-41-11	ALL
	Y	A009	1A	W0521	2571R	22		28-41-11	ALL
	Y	A011	1A	W0521	2537R	24		34-21-13	ALL
	Y	A011	1A	W0521	2538R	24		34-21-13	ALL
	Y	A011	1A	W0521	2547R	24		34-21-13	ALL
	Y	A011	1A	W0521	2611R	24		34-58-11	YL951-YR328
	Y	A013	1A	W0521	3501R	22		34-21-12	ALL
	Y	A013	1A	W0521	3502R	22		34-21-12	ALL
	Y	A013	1A	W0521	3503R	22		34-21-12	ALL
	Y	A015	1A	W0521	0278	24		34-61-26	YC059-YR328
	Y	A015	1A	W0523	0377	24		34-61-26	YC059-YR328
	Z	A017	1A	W0521	2533R	24		34-21-13	ALL
	Z	A017	1A	W0521	2534R	24		34-21-13	YC051-YC052
	Z	A017	1A	W0521	2535R	24		34-21-13	ALL
	Z	A017	1A	W0521	2536R	24		34-21-13	ALL
	Z	A017	1A	W0521	2540R	24		34-21-13	YD158-YD170
	Z	A017	1A	W0521	2544R	24		34-21-13	ALL
	Z	A017	1A	W0521	2545R	24		34-21-13	ALL
	Z	A017	1A	W0521	2546R	24		34-21-13	ALL
	Z	A017	1A	W0521	2674R	24		34-21-13	YC051-YD157
	Z	A017	1A	W0521	2680R	24		34-21-13	YL951-YR328
	Y	A021	1A	W0521	2631R	24		23-27-13	YC051-YD157
	Y	A021	1A	W0521	2632R	24		23-27-14	YC051-YD157
	Y	A021	1A	W0521	2633R	24		23-27-14	YC051-YD157
	Y	A021	1A	W0521	2678R	24		34-61-15	YD158-YD170
	Y	A021	1A	W0523	2801R	24		34-61-15	YD158-YD170
	Y	A021	1A	W0523	2835R	24		34-61-15	YD158-YD170
	Y	A023	1A	W0523	2786R	24		34-61-14	ALL
	Y	A023	1A	W0523	2795R	24		34-61-14	ALL
	Y	A023	1A	W0523	2796R	24		34-61-21	ALL
	Y	B001	1A	W0523	2701B	24		34-61-11	ALL
	Y	B001	1A	W0523	2766B	24		34-61-11	ALL
	Y	B001	1A	W0523	2767B	24		34-61-11	ALL
	Y	B001	1A	W0523	2832B	24		34-61-26	YC059-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0500

Page 22

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0524		S280W601-301 (continued)					E005-02/ /		ALL
TB0524	Y	S280W555-104 (continued)					E005-02/ /		ALL
TB0524	Z	S280W555-108 (continued)					E005-02/ /		ALL
	Y	B003	1A	W0521	0252	22		34-61-15	YD158-YD170
	Y	B003	1A	W0521	2650B	24		34-61-15	YD158-YD170
	Y	B003	1A	W0523	2804B	24		34-61-15	YD158-YD170
	Y	B005	1A	W0523	2706B	24		34-61-14	ALL
	Y	B005	1A	W0523	2709B	24		34-61-14	ALL
	Y	B005	1A	W0523	2711B	24		34-61-14	ALL
	Y	B005	1A	W0523	2769B	24		34-61-14	ALL
	Y	B007	1A	W0523	2705B	24		34-61-14	ALL
	Y	B007	1A	W0523	2710B	24		34-61-14	ALL
	Y	B007	1A	W0523	2718B	24		34-61-14	ALL
	Y	B007	1A	W0523	2768B	24		34-61-14	ALL
	Y	B009	1A	W0521	2569B	22		28-41-11	ALL
	Y	B009	1A	W0521	2570B	22		28-41-11	ALL
	Y	B009	1A	W0521	2571B	22		28-41-11	ALL
	Y	B011	1A	W0521	2537B	24		34-21-13	ALL
	Y	B011	1A	W0521	2538B	24		34-21-13	ALL
	Y	B011	1A	W0521	2547B	24		34-21-13	ALL
	Y	B011	1A	W0521	2611B	24		34-58-11	YL951-YR328
	Y	B013	1A	W0521	3501B	22		34-21-12	ALL
	Y	B013	1A	W0521	3502B	22		34-21-12	ALL
	Y	B013	1A	W0521	3503B	22		34-21-12	ALL
	Y	B015	1A	W0521	3501Y	22		34-21-12	ALL
	Y	B015	1A	W0521	3502Y	22		34-21-12	ALL
	Y	B015	1A	W0521	3503Y	22		34-21-12	ALL
	Z	B017	1A	W0521	2533B	24		34-21-13	ALL
	Z	B017	1A	W0521	2534B	24		34-21-13	YC051-YC052
	Z	B017	1A	W0521	2535B	24		34-21-13	ALL
	Z	B017	1A	W0521	2536B	24		34-21-13	ALL
	Z	B017	1A	W0521	2540B	24		34-21-13	YD158-YD170
	Z	B017	1A	W0521	2544B	24		34-21-13	ALL
	Z	B017	1A	W0521	2545B	24		34-21-13	ALL
	Z	B017	1A	W0521	2546B	24		34-21-13	ALL
	Z	B017	1A	W0521	2674B	24		34-21-13	YC051-YD157
	Z	B017	1A	W0521	2680B	24		34-21-13	YL951-YR328
	Y	B021	1A	W0521	2631B	24		23-27-13	YC051-YD157
	Y	B021	1A	W0521	2632B	24		23-27-14	YC051-YD157
	Y	B021	1A	W0521	2633B	24		23-27-14	YC051-YD157
	Y	B021	1A	W0521	2678B	24		34-61-15	YD158-YD170

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0500

Page 23

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0524		S280W601-301 (continued)					E005-02/ /		ALL
TB0524	Y	S280W555-104 (continued)					E005-02/ /		ALL
TB0524	Z	S280W555-108 (continued)					E005-02/ /		ALL
	Y	B021	1A	W0523	2801B	24		34-61-15	YD158-YD170
	Y	B021	1A	W0523	2835B	24		34-61-15	YD158-YD170
	Y	B023	1A	W0523	2786B	24		34-61-14	ALL
	Y	B023	1A	W0523	2795B	24		34-61-14	ALL
	Y	B023	1A	W0523	2796B	24		34-61-21	ALL
	Y	DED		W0521	2538Z			34-21-13	YC059-YD170
	Y	DED		W0521	2650Z			34-61-15	YD158-YD170
	Y	DED		W0521	2678Z			34-61-15	YD158-YD170
	Y	DED		W0523	2801Z			34-61-15	YD158-YD170
TB0536		S280W555-602					542/159/L026		YN231-YN501
TB0536	Y	S280W555-104					542/160/L028		YN231-YN501
	Y	A001	1A	W5102	0010	20		21-51-16	YN231-YN236, YN501
	Y	A001	1A	W5102	5568	20		21-51-16	YN231-YN236, YN501
	Y	A003	1A	W5102	5570	20		21-51-16	YN231-YN236, YN501
	Y	B001	1A	W5102	5569	20		21-51-16	YN231-YN236, YN501
	Y	B001	1A	W5102	5571	20		21-51-16	YN231-YN236, YN501
	Y	B003	1A	W5102	0010	20		21-51-16	YN231-YN236, YN501
TB0591		S280W555-602					P059-00/ /		ALL
TB0591	X	S280W555-102					P059-00/ /		ALL
	X	A001	1A	W0737	0026	22		34-61-12	ALL
	X	A001	1A	W0737	0027	22		34-61-12	ALL
	X	A003	1A	W0737	0028	22		34-61-12	ALL
	X	A003	1A	W0737	0029	22		34-61-12	ALL
	X	B001	1A	W0737	0030	22		34-61-12	ALL
	X	B001	1A	W0737	0031	22		34-61-12	ALL
	X	B003	1A	W0737	0032	22		34-61-12	ALL
	X	B003	1A	W0737	0033	22		34-61-12	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0500

Page 24 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0606		S280W555-504					270/176/R027		ALL
TB0606	V	S280W555-203					270/176/R027		ALL
TB0606	X	S280W555-102					270/176/R027		ALL
TB0606	Y	S280W555-104					270/176/R027		ALL
	X	A003	1A	W5514	5557	22		23-42-11	YC051-YD157
	X	A003	1A	W6024	0508	22		23-42-11	YC051-YD157
	X	A004	1A	W2510	6025	22		30-11-11	ALL
	X	A004	1A	W6162	6001	22		30-11-11	YC054-YR328
	Y	A005	1A	W2151	0013	22		34-55-21	YC051-YD158, YL951-YR328
	Y	A005	1A	W2151	0035	22		34-55-21	YC051-YD158, YL951-YR328
	Y	A005	1A	W5158	0515	22		34-55-21	ALL
	Y	A007	1A	W6162	6002	20		78-35-21	YC054-YR328
	Y	A007	1A	W6172	6001	20		78-35-21	ALL
	Y	A007	1A	W6506	6078	20		78-35-21	ALL
	V	A009	1	W5158	2601R	18		78-32-61	ALL
	V	A009	1	W6172	2602R	18		78-32-61	ALL
	V	A011	1	W5158	2602R	18		78-32-61	ALL
	V	A011	1	W6172	2601R	18		78-32-61	ALL
	V	A013	1	W2208	5502	18		30-42-11	YC051-YC061
	V	A013	1	W2214	5502	18		SPARE	YC051-YC058, YL951-YL999, YR301-YR328
	V	A013	1	W2214	5502	18		00-000	YC059-YD158, YN231-YN501
	V	A015	1	W5158	6002	18		78-32-61	ALL
	V	A015	1	W6506	6025	18		78-32-61	ALL
	V	A015	1	W6506	6026	22		78-32-61	ALL
	X	B003	1A	W6024	0512	22		23-43-11	ALL
	X	B003	1A	W6208	5510	22		23-43-11	YC051-YD158, YL951-YR328
	Y	B005	1A	W2216	1301	24		73-21-12	YC051-YR323, YR325-YR328
	Y	B005	1A	W6162	1301	24		73-21-12	YC054-YR328
	Y	B005	1A	W6172	1301	24		73-21-12	ALL
	V	B009	1	W5158	2601B	18		78-32-61	ALL
	V	B009	1	W6172	2602B	18		78-32-61	ALL
	V	B011	1	W5158	2602B	18		78-32-61	ALL
	V	B011	1	W6172	2601B	18		78-32-61	ALL
	V	B013	1	W5160	0001	16		33-45-11	YC051-YD158
	V	B013	1	W6208	0512	16		33-45-11	YC051-YD158
	V	B013	1	W6208	0512	16		SPARE	YL951-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0600

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0608		S280W555-504					J046-00/ /		ALL
TB0608	X	S280W555-102					268/175/R028		ALL
TB0608	Y	S280W555-104					268/175/R028		YL968-YL999, YN236-YR328
TB0608	Z	S280W555-108					268/175/R028		YD158-YR328
	X	A001	1A	W2208	5503	24		30-42-11	YC051-YD158, YL951-YR328
	X	A001	1A	W2218	5574	24		30-42-11	ALL
	X	A002	1A	W5160	0107	20		28-23-11	YD158, YL951-YR328
	X	A002	1A	W5514	5591	20		28-23-11	YD158, YL951-YR328
	X	A004	1A	W5160	0109	20		28-23-11	YD158, YL951-YR328
	X	A004	1A	W5514	5593	20		28-23-11	YD158, YL951-YR328
	Z	A005	1A	W5514	5557	22		23-42-11	YD158, YL951-YR328
	Z	A005	1A	W6024	0202	22		23-43-11	YD158-YR328
	Z	A005	1A	W6024	0203	22		23-42-11	YD158-YR328
	Y	A013	1A	W2218	5809	22		30-31-11	YL968-YL999, YN236-YR328
	Y	A013	1A	W2218	5810	22		30-31-11	YL968-YL999, YN236-YR328
	Y	A015	1A	W2218	5810	22		30-31-11	YL968-YL999, YN236-YR328
	X	B001	1A	W2135	0027	22		34-51-41	ALL
	X	B001	1A	W2151	0015	22		34-51-41	YC051-YD158, YL951-YR328
	X	B002	1A	W5160	0108	20		28-23-11	YD158, YL951-YR328
	X	B002	1A	W5514	5592	20		28-23-11	YD158, YL951-YR328
	X	B003	1A	W5158	0215	22		23-42-11	YL951-YR328
	X	B003	1A	W5514	1002	22		23-42-11	YL951-YR328
	Y	B013	1A	W2237	0005	22		30-31-11	YL968-YL999, YN236-YR328
	Y	B015	1A	W2237	0006	22		30-31-11	YL968-YL999, YN236-YR328
TB0610		S280W555-604					P006-00/ /		YC051-YC064
TB0610		S280W555-606					P006-00/ /		YC065-YR301
TB0610		S280W555-506					P006-00/ /		YR303-YR328
TB0610	X	S280W555-102					P006-00/ /		ALL
TB0610	Y	S280W555-104					P006-00/ /		ALL
	Y	A001	1A	W0044	0262	24		32-42-11	ALL
	Y	A001	1A	W0044	0266	24		32-42-11	ALL
	Y	A003	1A	W0044	0264	24		32-42-11	ALL
	Y	A003	1A	W0044	0269	24		32-42-11	ALL
	X	A009	1A	W0041	0054	22		31-32-15	YL951-YR328
	X	A009	1A	W0044	0765	20		31-32-15	YL951-YR328
	Y	A021	1A	W0041	2504R	22		31-32-15	YR303-YR328
	Y	A021	1A	W0041	2533R	22		31-32-15	YR303-YR328
	Y	A021	1A	W0054	2011R	24		23-42-14	YR303-YR324
	Y	B001	1A	W0044	0268	24		32-42-11	ALL
	Y	B001	1A	W0044	0271	24		32-42-11	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0600

Page 2

Nov 12/2012





# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0610		S280W555-604 (continued)					P006-00/ /		YC051-YC064
TB0610		S280W555-606 (continued)					P006-00/ /		YC065-YR301
TB0610		S280W555-506 (continued)					P006-00/ /		YR303-YR328
TB0610	X	S280W555-102 (continued)					P006-00/ /		ALL
TB0610	Y	S280W555-104 (continued)					P006-00/ /		ALL
	Y	B003	1A	W0044	0270	24		32-42-11	ALL
	Y	B003	1A	W0044	0271	24		32-42-11	ALL
	Y	B021	1A	W0041	2504B	22		31-32-15	YR303-YR328
	Y	B021	1A	W0041	2533B	22		31-32-15	YR303-YR328
	Y	B021	1A	W0054	2011B	24		23-42-14	YR303-YR324
TB0612		S280W555-604					P006-00/ /		ALL
TB0621		S280W601-301					E006-02/ /		ALL
TB0621	Y	S280W555-104					E006-02/ /		YL951-YR328
	Y	A001	1A	W0621	0013	22		23-11-11	YL951-YR328
	Y	A001	1A	W0621	0014	22		23-11-11	YL951-YR328
	Y	A001	1A	W0621	0019	22		23-11-11	YL951-YR328
	Y	A003	1A	W0621	2508R	24		23-12-41	YL951-YR328
	Y	A003	1A	W0621	2511R	24		23-12-41	YL951-YR328
	Y	A003	1A	W0621	2519R	24		23-12-41	YL951-YR328
	Y	A005	1A	W0621	2509R	24		23-12-41	YL951-YR328
	Y	A005	1A	W0621	2510R	24		23-12-41	YL951-YR328
	Y	A005	1A	W0621	2529R	24		23-12-41	YL951-YR328
	Y	B001	1A	W0621	0173	22		23-11-21	YL951-YR328
	Y	B001	1A	W0621	0174	22		23-11-21	YL951-YR328
	Y	B001	1A	W0621	0175	22		23-11-21	YL951-YR328
	Y	B003	1A	W0621	2508B	24		23-12-41	YL951-YR328
	Y	B003	1A	W0621	2511B	24		23-12-41	YL951-YR328
	Y	B003	1A	W0621	2519B	24		23-12-41	YL951-YR328
	Y	B005	1A	W0621	2509B	24		23-12-41	YL951-YR328
	Y	B005	1A	W0621	2510B	24		23-12-41	YL951-YR328
	Y	B005	1A	W0621	2529B	24		23-12-41	YL951-YR328
TB0636		S280W555-602					537/159/R028		YN231-YN501
TB0636	Y	S280W555-104					541/159/R026		YN231-YN501
	Y	A001	1A	W6202	5501	20		21-51-26	YN231-YN501
	Y	A001	1A	W6202	5568	20		21-51-26	YN231-YN501
	Y	A003	1A	W6202	5570	20		21-51-26	YN231-YN501
	Y	B001	1A	W6202	5569	20		21-51-26	YN231-YN501

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0600

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0636		S280W555-602 (continued)					537/159/R028		YN231-YN501
TB0636	Y	S280W555-104 (continued)					541/159/R026		YN231-YN501
	Y	B001	1A	W6202	5571	20		21-51-26	YN231-YN501
	Y	B003	1A	W6202	5501	20		21-51-26	YN231-YN501
TB0660		S280W555-506					J046-00/ /		ALL
TB0660	Y	S280W555-104					J046-00/ /		ALL
TB0660	Z	S280W555-108					J046-00/ /		ALL
	Y	A001	1A	W0066	0001	24		21-25-11	ALL
	Y	A001	1A	W0066	0002	24		21-25-11	ALL
	Y	A001	1A	W0066	0003	24		21-25-11	ALL
	Y	A003	1A	W0066	0019	22		21-33-11	YC051-YD158
	Y	A003	1A	W0066	0020	22		21-33-11	YC051-YD158
	Y	A003	1A	W0066	0028	22		31-31-15	YC051-YD158
	Y	A003	1A	W0066	0358	22		21-33-11	YC060-YC064
	Y	A005	1A	W0066	0011	22		21-27-31	ALL
	Y	A005	1A	W0066	0012	22		21-27-31	ALL
	Y	A005	1A	W0066	0013	22		21-27-31	ALL
	Y	A007	1A	W0066	0044	20		31-52-35	ALL
	Y	A007	1A	W0066	0045	20		31-52-35	ALL
	Y	A007	1A	W0066	0046	20		31-52-35	ALL
	Y	A009	1A	W0066	0021	24		21-43-21	ALL
	Y	A009	1A	W0066	0022	24		21-43-21	ALL
	Y	A009	1A	W0066	0023	24		21-43-21	ALL
	Y	A011	1A	W0066	0033	20		31-52-21	ALL
	Y	A011	1A	W0066	0034	20		31-52-21	ALL
	Y	A011	1A	W0066	0035	20		31-52-21	ALL
	Z	A013	1A	W0066	0030	20		31-52-11	ALL
	Z	A013	1A	W0066	0036	20		31-52-21	ALL
	Z	A013	1A	W0066	0050	20		31-52-45	ALL
	Z	A013	1A	W0066	0060	20		31-52-71	ALL
	Y	A017	1A	W0066	0051	20		31-52-51	ALL
	Y	A017	1A	W0066	0052	20		31-52-51	ALL
	Y	A017	1A	W0066	0053	20		31-52-51	ALL
	Y	A019	1A	W0066	0057	20		31-52-65	ALL
	Y	A019	1A	W0066	0058	20		31-52-65	ALL
	Y	A019	1A	W0066	0059	20		31-52-65	ALL
	Y	A021	1A	W0066	0064	20		31-52-75	ALL
	Y	A021	1A	W0066	0065	20		31-52-75	ALL
	Y	A021	1A	W0066	0066	20		31-52-75	ALL
	Y	A023	1A	W0066	0088	20		28-21-11	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0600

Page 4

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0660		S280W555-506 (continued)					J046-00/ /		ALL
TB0660	Y	S280W555-104 (continued)					J046-00/ /		ALL
TB0660	Z	S280W555-108 (continued)					J046-00/ /		ALL
	Y	A023	1A	W0066	0089	20		28-21-11	ALL
	Y	A023	1A	W0066	0090	20		28-21-11	ALL
	Y	B001	1A	W0066	0017	22		21-33-11	YC051-YC059, YC065-YL951, YN231
	Y	B001	1A	W0066	0018	22		21-33-11	YC051-YC059, YC065-YL951, YN231
	Y	B001	1A	W0066	0068	22		31-53-11	YC051-YC059, YC065-YD158
	Y	B001	1A	W0066	0336	22		31-53-11	YL951, YN231
	Y	B003	1A	W0066	0128	20		32-64-21	ALL
	Y	B003	1A	W0066	0129	20		32-64-21	ALL
	Y	B003	1A	W0066	0130	20		32-64-21	ALL
	Y	B005	1A	W0066	0041	20		31-52-31	ALL
	Y	B005	1A	W0066	0042	20		31-52-31	ALL
	Y	B005	1A	W0066	0043	20		31-52-31	ALL
	Y	B007	1A	W0066	0047	20		31-52-41	ALL
	Y	B007	1A	W0066	0048	20		31-52-41	ALL
	Y	B007	1A	W0066	0049	20		31-52-41	ALL
	Y	B009	1A	W0066	0029	20		31-52-11	ALL
	Y	B009	1A	W0066	0031	20		31-52-75	ALL
	Y	B009	1A	W0066	0032	20		31-52-51	YC051-YL999, YR301-YR328
	Y	B009	1A	W0066	0032	20		SPARE	YN231-YN501
	Y	B009	1A	W0066	0037	20		31-52-25	ALL
	Y	B011	1A	W0066	0038	20		31-52-25	ALL
	Y	B011	1A	W0066	0039	20		31-52-25	ALL
	Y	B011	1A	W0066	0040	20		31-52-25	ALL
	Y	B017	1A	W0066	0054	20		31-52-61	ALL
	Y	B017	1A	W0066	0055	20		31-52-61	ALL
	Y	B017	1A	W0066	0056	20		31-52-61	ALL
	Y	B019	1A	W0066	0061	20		31-52-55	ALL
	Y	B019	1A	W0066	0062	20		31-52-55	ALL
	Y	B019	1A	W0066	0063	20		31-52-55	ALL
	Y	B021	1A	W0066	0072	20		33-18-11	ALL
	Y	B021	1A	W0066	0073	20		33-18-11	ALL
	Y	B021	1A	W0066	0074	20		33-18-11	ALL
	Y	B023	1A	W0066	0131	20		32-64-21	ALL
	Y	B023	1A	W0066	0132	20		32-64-21	ALL
	Y	B023	1A	W0066	0133	20		32-64-21	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0600

Page 5

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0662		S280W555-506					J046-00/ /		ALL
TB0662	Y	S280W555-104					J046-00/ /		ALL
	Y	A001	1A	W0066	0111	24		32-41-11	ALL
	Y	A001	1A	W0066	0112	24		32-41-11	ALL
	Y	A001	1A	W0066	0113	24		32-41-11	ALL
	Y	A003	1A	W0066	0136	20		33-36-11	ALL
	Y	A003	1A	W0066	0137	20		33-36-11	ALL
	Y	A003	1A	W0066	0138	20		33-36-11	ALL
	Y	A005	1A	W0066	0145	20		34-41-11	YC051-YC052
	Y	A005	1A	W0066	0146	20		34-41-11	YC051-YC052
	Y	A005	1A	W0066	0147	20		34-41-11	YC051-YC052
	Y	A007	1A	W0066	0153	22		34-53-31	ALL
	Y	A007	1A	W0066	0154	22		34-53-31	ALL
	Y	A007	1A	W0066	0155	22		34-53-31	ALL
	Y	A011	1A	W0066	0193	24		36-11-11	ALL
	Y	A011	1A	W0066	0194	24		36-11-11	ALL
	Y	A011	1A	W0066	0195	24		36-11-11	ALL
	Y	A019	1A	W0066	0018	22		21-33-11	YC060-YC064, YL952-YL999, YN232-YR328
	Y	A019	1A	W0066	0068	22		31-53-11	YC060-YC064
	Y	A019	1A	W0066	0336	22		31-53-11	YL952-YL999, YN232-YR328
	Y	A021	1A	W0066	0799	22		31-53-11	YL953-YL999, YN233-YR328
	Y	B001	1A	W0066	0118	22		32-44-11	ALL
	Y	B001	1A	W0066	0119	22		32-44-11	ALL
	Y	B001	1A	W0066	0120	22		32-44-11	ALL
	Y	B003	1A	W0066	0139	20		33-36-12	ALL
	Y	B003	1A	W0066	0140	20		33-36-12	ALL
	Y	B003	1A	W0066	0141	20		33-36-12	ALL
	Y	B005	1A	W0066	0205	24		34-53-21	YC051-YC052
	Y	B005	1A	W0066	0206	24		34-53-21	YC051-YC052
	Y	B005	1A	W0066	0207	24		34-53-21	YC051-YC052
	Y	B007	1A	W0066	0156	22		34-53-31	ALL
	Y	B007	1A	W0066	0157	22		34-53-31	ALL
	Y	B007	1A	W0066	0158	22		34-53-31	ALL
	Y	B013	1A	W0066	0076	22		23-34-01	YC060-YN260
	Y	B013	1A	W0066	0110	22		23-34-01	YC060-YN260
	Y	B013	1A	W0066	0117	22		23-34-01	YC060-YN260
	Y	B019	1A	W0066	0017	22		21-33-11	YC060-YC064, YL952-YL999, YN232-YR328
	Y	B019	1A	W0066	0357	22		21-33-11	YC060-YC064, YL952-YL999, YN232-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0600

Page 6

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0662		S280W555-506 (continued)					J046-00/ /		ALL
TB0662	Y	S280W555-104 (continued)					J046-00/ /		ALL
	Y	B021	1A	W0066	0338	22		31-53-11	YL953-YL999, YN233-YR328
TB0664		S280W555-506					J046-00/ /		ALL
TB0664	Y	S280W555-104					J046-00/ /		ALL
TB0664	Z	S280W555-108					J046-00/ /		ALL
	Y			W0066	1004Z			27-62-11	ALL
	Y			W0066	1005Z			27-62-11	ALL
	Y	A001	1A	W0066	0014	22		21-27-31	ALL
	Y	A001	1A	W0066	0015	22		21-27-31	ALL
	Y	A001	1A	W0066	0016	22		21-27-31	ALL
	Y	A003	1A	W0066	0197	24		36-11-11	ALL
	Y	A003	1A	W0066	0198	24		36-11-11	ALL
	Y	A003	1A	W0066	0199	24		36-11-11	ALL
	Y	A005	1A	W0066	0209	20		27-62-11	ALL
	Y	A005	1A	W0066	1004	20		27-62-11	ALL
	Y	A005	1A	W0066	1005	20		27-62-11	ALL
	Y	A007	1A	W0066	1006Z			27-62-11	YC051-YL952, YN231-YN501
	Y	A007	1A	W0066	1008Z			27-62-11	YC051-YL952, YN231-YN501
	Y	A007	1A	W0066	1011	20		27-62-11	YL953-YL999, YR301-YR328
	Y	A013	1A	W0066	0333	20		27-62-11	YL953-YL999, YR301-YR328
	Y	A019	1A	W0066	0336	22		31-53-11	YL951-YR328
	Z	A021	1A	W0066	0019	22		21-33-11	YL951-YR328
	Z	A021	1A	W0066	0020	22		21-33-11	YL951-YR328
	Z	A021	1A	W0066	0028	22		31-31-15	YL951-YR328
	Z	A021	1A	W0066	0340	22		21-33-11	YL951-YR328
	Z	A021	1A	W0066	0341	22		21-33-11	YL951-YR328
	Z	A021	1A	W0066	0358	22		21-33-11	YL952-YL999, YN232-YR328
	Y	B001	1A	W0066	0181	22		27-62-11	ALL
	Y	B001	1A	W0066	0182	22		27-62-11	ALL
	Y	B001	1A	W0066	0183	22		27-62-11	ALL
	Y	B003	1A	W0066	0086	22		27-62-21	YL953-YL999, YR301-YR328
	Y	B003	1A	W0066	0299	22		27-62-21	YL953-YL999, YR301-YR328
	Y	B003	1A	W0066	0305	22		27-62-11	YL953-YL999, YR301-YR328
	Y	B005	1A	W0066	0210	20		27-62-11	ALL
	Y	B005	1A	W0066	0304	22		27-62-11	YL953-YL999, YR301-YR328
	Y	B005	1A	W0066	1006	20		27-62-11	ALL
	Y	B005	1A	W0066	1008	20		27-62-11	ALL
	Y	B007	1A	W0066	1007	20		27-62-11	YL953-YL999, YR301-YR328
	Y	B007	1A	W0066	1007Z			27-62-11	YC051-YL952, YN231-YN501

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0600

Page 7

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0664		S280W555-506 (continued)					J046-00/ /		ALL
TB0664	Y	S280W555-104 (continued)					J046-00/ /		ALL
TB0664	Z	S280W555-108 (continued)					J046-00/ /		ALL
	Y	B007	1A	W0066	1009Z			27-62-11	YC051-YL952, YN231-YN501
	Y	B007	1A	W0066	1010Z			27-62-11	YC051-YL952, YN231-YN501
	Y	B009	1A	W0066	0306	22		27-62-11	YL953-YL999, YR301-YR328
	Y	B009	1A	W0066	1007	20		27-62-11	YC051-YL952, YN231-YN501
	Y	B009	1A	W0066	1009	20		27-62-11	ALL
	Y	B009	1A	W0066	1010	20		27-62-11	ALL
	Y	B009	1A	W0066	1011	20		27-62-11	YL953-YL999, YR301-YR328
	Y	B013	1A	W0066	0305	22		27-62-11	YL953-YL999, YR301-YR328
	Y	B019	1A	W0066	0337	22		31-53-11	YL951-YL952, YN231-YN232
	Y	B019	1A	W0066	0339	22		31-53-11	YL951-YR328
TB0666		S280W555-506					J046-00/ /		ALL
TB0666	Y	S280W555-104					J046-00/ /		ALL
	Y	A001	1A	W0066	0189	20		76-21-21	ALL
	Y	A001	1A	W0066	0190	20		76-21-21	ALL
	Y	A001	1A	W0066	0191	20		76-21-21	ALL
	Y	A001	1A	W0066	0208	20		76-21-21	ALL
	Y	A003	1A	W0066	0242	22		52-71-11	YD158-YR328
	Y	A003	1A	W0066	0243	22		52-71-11	YD158-YR328
	Y	A003	1A	W0066	0245	22		23-32-14	YD158-YN260
	Y	A003	1A	W0066	0245	22		44-21-22	YN501-YR328
	Y	B001	1A	W0066	0162	24		SPARE	YC053-YC059
	Y	B003	1A	W0066	0270	24		21-43-21	YL951-YR328
	Y	B003	1A	W0066	0271	24		21-43-21	YL951-YR328
	Y	B003	1A	W0066	0272	24		21-43-21	YL951-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0600

Page 8 End

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0800		S280W555-606					P010-00/ /		ALL
TB0800	Z	S280W555-108					P08-00/ /		ALL
	Z	A001	1A	W0008	0009	20		33-11-41	ALL
	Z	A001	1A	W0008	0011	20		33-11-41	ALL
	Z	A001	1A	W0008	0013	20		33-11-41	ALL
	Z	A001	1A	W0008	0015	20		33-11-41	ALL
	Z	A001	1A	W0008	0053	20		33-11-41	ALL
	Z	B001	1A	W0008	0010	20		33-11-41	ALL
	Z	B001	1A	W0008	0012	20		33-11-41	ALL
	Z	B001	1A	W0008	0014	20		33-11-41	ALL
	Z	B001	1A	W0008	0039	20		33-11-41	ALL
	Z	B001	1A	W0008	0052	20		33-11-41	ALL
TB0801		S280W555-506					231/208/0		ALL
TB0801	V	S280W555-203					P008-00/ /		ALL
TB0801	W	S280W555-206					P008-00/ /		ALL
TB0801	X	S280W555-102					P008-00/ /		ALL
TB0801	Y	S280W555-104					P008-00/ /		ALL
	X	A001	1A	W5506	2201R	22		24-22-11	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
	X	A001	1A	W5510	2201R	22		24-22-11	ALL
	X	A002	1A	W2110	6043	22		26-23-11	YD158-YD170, YR315-YR316, YR319
	X	A002	1A	W2110	6043	22		SPARE	YR317
	X	A002	1A	W5506	6080	22		26-23-11	YD158, YR315-YR316, YR319
	X	A002	1A	W5506	6080	22		SPARE	YR317
	X	A003	1A	W3319	0008	20		33-18-62	YC051-YD157
	X	A003	1A	W5514	5577	20		33-18-62	YC051-YD157
	W	A005	1	W2110	6032	20		33-11-33	YC053-YR328
	W	A005	1	W2177	0001	20		33-11-33	YC051-YC057
	W	A005	1	W3319	0007	20		33-11-33	YC051-YD158, YL951-YR328
	W	A005	1	W5506	5504	20		33-11-33	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
	W	A005	1	W6206	5511	16		33-11-33	ALL
	V	A009	1	W2267	0005	20		33-11-41	YD160-YL956, YL958-YR328
	V	A009	1	W6206	5521	16		33-11-41	ALL
	V	A011	1	W2889	0008	20		33-11-33	YC053-YR328
	V	A011	1	W6206	5548	16		33-11-33	YC053-YR328
	W	A013	1	W2401	0013	20		33-11-41	YD158-YR328
	W	A013	1	W2417	0037	20		33-11-41	YD158-YR328
	W	A013	1	W2511	0001	20		33-11-41	YC051-YD157

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0800

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0801		S280W555-506 (continued)					231/208/0		ALL
TB0801	V	S280W555-203 (continued)					P008-00/ /		ALL
TB0801	W	S280W555-206 (continued)					P008-00/ /		ALL
TB0801	X	S280W555-102 (continued)					P008-00/ /		ALL
TB0801	Y	S280W555-104 (continued)					P008-00/ /		ALL
	W	A013	1	W6206	5519	16		33-11-41	ALL
	W	A013	1	W6491	2019R	20		33-11-41	YC051-YD158, YL951-YR328
	W	A017	1	W2267	0005	20		33-11-41	YC051-YD157
	W	A017	1	W2805	0005	20		33-11-41	ALL
	W	A017	1	W6206	5518	16		33-11-41	ALL
	W	A017	1	W6206	5533	20		33-11-41	ALL
	W	A021	1	W2151	0050	20		33-11-41	YC051-YD158, YL951-YR328
	W	A021	1	W2405	0001	20		33-11-41	YC051-YD157
	W	A021	1	W2415	0037	20		33-11-41	YD158-YR328
	W	A021	1	W6206	5517	16		33-11-41	ALL
	X	B001	1A	W5506	2201B	22		24-22-11	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
	X	B001	1A	W5510	2201B	22		24-22-11	ALL
	X	B002	1A	W3323	0008	20		33-18-62	YC051-YC052
	X	B002	1A	W5514	5576	20		33-18-62	YC051-YC052
	W	B005	1	W2873	0008	20		33-11-41	ALL
	W	B005	1	W2889	0008	20		33-11-41	YC051-YC052
	W	B005	1	W6206	5536	16		33-11-41	ALL
	W	B005	1	W6208	5505	16		33-11-41	YC051-YD158, YL951-YR328
	V	B009	1	W6206	5509	16		33-11-33	ALL
	V	B009	1	W6206	5512	16		33-11-33	ALL
	V	B009	1	W6206	5528	16		33-11-41	ALL
	V	B011	1	W2177	0001	20		33-11-33	YD158-YN236, YN501-YR328
	V	B011	1	W6206	5503	16		33-11-33	YC051-YC052
	V	B011	1	W6206	5504	16		33-11-33	YC051-YC052
	V	B011	1	W6206	5506	16		33-11-33	YC051-YC052
	V	B011	1	W6206	5545	16		33-11-33	YD158-YR328
	W	B013	1	W2267	0005	20		33-11-41	YD158
	W	B013	1A	W3709	0001	20		33-11-41	YL951-YL968, YN231-YN236, YN501-YR314
	W	B013	1	W3709	0001	20		33-11-41	YL969-YL999, YN237-YN260, YR315-YR328
	W	B013	1	W6206	5520	16		33-11-41	ALL
	W	B013	1	W6208	5501	20		33-11-41	YC051-YD158, YL951-YR328
	W	B013	1	W6208	5503	20		33-11-41	YC051-YD158, YL951-YR328
	W	B017	1	W6206	5503	16		33-11-33	YC053-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0800

Page 2

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0801		S280W555-506 (continued)					231/208/0		ALL
TB0801	V	S280W555-203 (continued)					P008-00/ /		ALL
TB0801	W	S280W555-206 (continued)					P008-00/ /		ALL
TB0801	X	S280W555-102 (continued)					P008-00/ /		ALL
TB0801	Y	S280W555-104 (continued)					P008-00/ /		ALL
	W	B017	1	W6206	5504	16		33-11-33	YC053-YR328
	W	B017	1	W6206	5506	16		33-11-33	YC053-YR328
	W	B017	1	W6206	5543	16		33-11-33	YD158-YR328
	W	B017	1	W6206	5546	16		33-11-33	YC053-YR328
	W	B021	1	W2149	0050	20		33-11-33	YC051-YD158, YL951-YR328
	W	B021	1	W2177	0001	20		33-11-33	YC058-YD157
	W	B021	1	W2265	0005	20		33-11-33	ALL
	W	B021	1	W2403	0001	20		33-11-33	YC051-YD157
	W	B021	1	W2413	0037	20		33-11-33	YD158-YR328
	W	B021	1	W3323	0007	20		33-11-33	ALL
	W	B021	1	W6206	5510	16		33-11-33	ALL
TB0803		S280W555-606					229/209/0		ALL
TB0803	X	S280W555-102					P008-00/ /		ALL
TB0803	Y	S280W555-104					P008-00/ /		ALL
TB0803	Z	S280W555-108					P008-00/ /		ALL
	X	A001	1A	W5514	5514	20		33-18-61	YC051-YD154
	X	A001	1A	W6206	5540	20		33-18-61	YC051-YD154
	X	A002	1A	W5514	5515	20		33-18-61	YC051-YD158, YL951-YR328
	X	A002	1A	W6208	5509	20		33-18-61	YC051-YD158, YL951-YR328
	Z	A005	1A	W2177	0018	20		33-18-61	YC051-YN236, YN501-YR328
	Z	A005	1A	W2889	0010	20		33-18-61	ALL
	Z	A005	1A	W5514	5509	20		33-18-61	YC051-YD158, YL951-YR328
	Z	A005	1A	W6208	5508	20		33-18-61	YC051-YD158, YL951-YR328
	Y	A009	1A	W5514	5586	20		33-18-61	YD155-YD158, YL951-YR328
	Y	A009	1A	W5514	5590	20		33-18-61	YD155-YD158, YL951-YR328
	Y	A009	1A	W6206	5554	20		33-18-61	YD155-YR328
	Y	A011	1A	W6206	0506	20		27-41-11	ALL
	Y	A011	1A	W6208	0519	20		27-41-11	YC051-YD158, YL951-YR328
	Y	A011	1A	W6208	0610	20		27-41-11	YC051-YD158, YL951-YR328
	Y	A011	1A	W6208	0626	20		27-41-11	YC051-YD158, YL951-YR328
	Y	A013	1A	W2401	0015	20		33-18-61	YD158-YR328
	Y	A013	1A	W2873	0010	20		33-18-61	ALL
	Y	A013	1A	W5514	5508	20		33-18-61	YC051-YD154
	Y	A013	1A	W5514	5590	20		33-18-61	YD155-YD158, YL951-YR328
	X	B001	1A	W5514	0045	22		52-51-11	YC051-YD154

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0800

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0803		S280W555-606 (continued)					229/209/0		ALL
TB0803	X	S280W555-102 (continued)					P008-00/ /		ALL
TB0803	Y	S280W555-104 (continued)					P008-00/ /		ALL
TB0803	Z	S280W555-108 (continued)					P008-00/ /		ALL
	X	B001	1A	W6206	0013	22		52-51-11	YC051-YD154
	X	B002	1A	W6172	0511	20		49-62-11	ALL
	X	B002	1A	W6506	0502	20		49-62-11	ALL
	Z	B005	1A	W2177	0021	20		33-18-61	YC051-YN236, YN501-YR328
	Z	B005	1A	W2873	0011	20		33-18-61	ALL
	Z	B005	1A	W2889	0011	20		33-18-61	ALL
	Z	B005	1A	W3319	0032	20		33-18-62	YC051-YC052
	Z	B005	1A	W3323	0032	20		33-18-62	YC051-YC052, YC070-YD157
	Z	B005	1A	W3323	0038	20		33-18-62	YD158-YR328
	Z	B005	1A	W5514	5510	20		33-18-61	YC051-YD158, YL951-YR328
	Z	B005	1A	W5514	5512	20		33-18-61	YC051-YD158, YL951-YR328
	Y	B009	1A	W6206	0507	20		27-41-11	ALL
	Y	B009	1A	W6208	0518	20		27-41-11	YC051-YD158, YL951-YR328
	Y	B009	1A	W6208	0612	20		27-41-11	YC051-YD158, YL951-YR328
	Y	B009	1A	W6208	0625	20		27-41-11	YC051-YD158, YL951-YR328
	Y	B011	1A	W6206	0505	20		27-41-11	ALL
	Y	B011	1A	W6208	0520	20		27-41-11	YC051-YD158, YL951-YR328
	Y	B011	1A	W6208	0609	20		27-41-11	YC051-YD158, YL951-YR328
	Y	B011	1A	W6208	0628	20		27-41-11	YC051-YD158, YL951-YR328
	Y	B013	1A	W6506	6010	20		28-21-11	ALL
	Y	B013	1A	W6506	6011	20		28-21-11	ALL
	Y	B013	1A	W6506	6013	20		28-21-11	ALL
	Y	B015	1A	W2149	0049	20		33-18-61	YC051-YC064, YC067-YC068
	Y	B015	1A	W2151	0049	20		33-18-61	YC051-YD158, YL951-YR328
	Y	B015	1A	W2265	0008	20		33-18-62	YC065, YC070-YR328
	Y	B015	1A	W5514	5511	20		33-18-61	YC051-YD158, YL951-YR328
	Z	B05	1A	W3323	0032	20		33-18-62	YC065
TB0804		S280W555-606					227/209/0		ALL
TB0804	X	S280W555-102					P008-00/ /		ALL
TB0804	Y	S280W555-104					P008-00/ /		ALL
TB0804	Z	S280W555-108					P008-00/ /		ALL
	X	A001	1A	W5506	6005R	20		26-11-31	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
	X	A001	1A	W6506	6002R	20		26-11-31	ALL
	Y	A005	1A	W5514	5535	20		31-52-45	YC051-YD158, YL951-YR328
	Y	A005	1A	W5514	5536	20		31-52-45	YC051-YD158, YL951-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0800

Page 4

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0804		S280W555-606 (continued)					227/209/0		ALL
TB0804	X	S280W555-102 (continued)					P008-00/ /		ALL
TB0804	Y	S280W555-104 (continued)					P008-00/ /		ALL
TB0804	Z	S280W555-108 (continued)					P008-00/ /		ALL
	Y	A005	1A	W6506	5509	20		31-52-45	ALL
	Y	A007	1A	W2110	6030	20		33-18-64	YC053-YR328
	Y	A007	1A	W2413	0036	20		33-18-62	YD158-YR328
	Y	A007	1A	W2803	0015	24		23-29-11	YC051-YC052
	Y	A007	1A	W2803	0016	24		23-29-11	YC051-YC052
	Y	A007	1A	W2803	0017	24		23-29-11	YC051-YC052
	Y	A007	1A	W2803	0019	24		23-29-11	YC051-YC052
	Y	A007	1A	W3323	0008	20		33-18-62	YC053-YR328
	Y	A007	1A	W5514	5576	20		33-18-62	YC053-YD158, YL951-YR328
	Z	A009	1A	W2803	0004	24		23-29-11	YC051-YD157
	Z	A009	1A	W2803	0005	24		23-29-11	YC051-YD157
	Z	A009	1A	W2803	0006	24		23-29-11	YC051-YD157
	Z	A009	1A	W2803	0007	24		23-29-11	YC051-YD157
	Z	A009	1A	W2803	0008	24		23-29-11	YC051-YD157
	Z	A009	1A	W2803	0009	24		23-29-11	YC051-YD157
	Z	A009	1A	W2803	0018	24		23-29-11	YC051-YD157
	X	A015	1A	W5506	6013R	20		76-21-11	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
	X	A015	1A	W5510	6011R	20		76-21-11	ALL
	Z	A017	1A	W2110	6029	20		33-18-64	YC053-YR328
	Z	A017	1A	W2149	0049	20		33-18-61	YC065, YC070-YD158, YL951-YR328
	Z	A017	1A	W2265	0007	20		33-18-62	YC051-YC064, YC067-YC068
	Z	A017	1A	W2267	0007	20		33-18-62	ALL
	Z	A017	1A	W2401	0016	20		33-18-61	YD158-YR328
	Z	A017	1A	W2403	0023	20		33-18-62	YC051-YC064, YC067-YC068
	Z	A017	1A	W2405	0023	20		33-18-62	YC051-YD157
	Z	A017	1A	W2415	0035	20		33-18-62	YD158-YR328
	Z	A017	1A	W2417	0035	20		33-18-62	YD158-YR328
	Z	A017	1A	W2511	0006	20		33-18-62	YC051-YD157
	Z	A017	1A	W5514	5561	20		33-18-62	YC051-YC053
	Z	A017	1A	W5514	5585	20		33-18-62	YC054-YD158, YL951-YR328
	Z	A021	1A	W5506	5506	20		33-18-61	YC051-YD154
	Z	A021	1A	W5506	5506	20		33-18-63	YD155-YD158, YL951-YL968, YN231-YN236, YN501-YR328
	Z	A021	1A	W5506	5509	20		33-18-63	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0800

Page 5

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0804		S280W555-606 (continued)					227/209/0		ALL
TB0804	X	S280W555-102 (continued)					P008-00/ /		ALL
TB0804	Y	S280W555-104 (continued)					P008-00/ /		ALL
TB0804	Z	S280W555-108 (continued)					P008-00/ /		ALL
	Z	A021	1A	W6206	5541	20		33-18-61	YC051-YD154
	Z	A021	1A	W6506	5506	20		33-18-63	ALL
	Z	A021	1A	W6506	5507	20		33-18-63	ALL
	Z	A021	1A	W6506	5508	20		33-18-63	ALL
	X	B001	1A	W5506	6004R	20		26-11-31	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
	X	B001	1A	W6506	6003R	20		26-11-31	ALL
	Y	B005	1A	W2415	0036	20		33-18-62	YD158-YR328
	Y	B005	1A	W2417	0036	20		33-18-62	YD158-YR328
	Y	B005	1A	W3319	0008	20		33-18-62	YD158, YL951-YR328
	Y	B005	1A	W5514	5577	20		33-18-62	YD158, YL951-YR328
	Y	B007	1A	W2803	0015	24		23-29-11	YC053-YD157
	Y	B007	1A	W2803	0016	24		23-29-11	YC053-YD157
	Y	B007	1A	W2803	0017	24		23-29-11	YC053-YD157
	Y	B007	1A	W2803	0019	24		23-29-11	YC053-YD157
	Z	B009	1A	W2803	0010	24		23-29-11	YC051-YD157
	Z	B009	1A	W2803	0011	24		23-29-11	YC051-YD157
	Z	B009	1A	W2803	0012	24		23-29-11	YC051-YD157
	Z	B009	1A	W2803	0013	24		23-29-11	YC051-YD157
	Z	B009	1A	W2803	0014	24		23-29-11	YC051-YD157
	Z	B009	1A	W2803	0018	24		23-29-11	YC051-YD157
	Z	B009	1A	W2803	0019	24		23-29-11	YC051-YD157
	X	B015	1A	W6506	6029R	20		76-21-21	ALL
	X	B015	1A	W6510	6002	20		76-21-21	YC051-YD158, YL951-YR328
	Z	B021	1A	W3319	0032	20		33-18-62	YC054-YD157
	Z	B021	1A	W3319	0033	20		33-18-62	YD158, YL951-YR328
	Z	B021	1A	W3323	0032	20		33-18-62	YC054-YC064, YC067-YC068
	Z	B021	1A	W5514	5561	20		33-18-62	YC054-YD158, YL951-YR328
	Z	B021	1A	W5514	5585	20		33-18-62	YC054-YD158, YL951-YR328
	Z	B021	1A	W6206	5552	20		33-18-61	YD155-YR328
TB0805		S280W555-606					227/205/R015		ALL
TB0805	V	S280W555-203					227/205/R015		ALL
TB0805	X	S280W555-102					227/205/R015		ALL
TB0805	Y	S280W555-104					227/205/R015		ALL
	X	A001	1A	W0445	0031R	20		27-41-11	ALL
	X	A001	1A	W5369	0040	20		27-41-11	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0800

Page 6

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0805		S280W555-606 (continued)					227/205/R015		ALL
TB0805	V	S280W555-203 (continued)					227/205/R015		ALL
TB0805	X	S280W555-102 (continued)					227/205/R015		ALL
TB0805	Y	S280W555-104 (continued)					227/205/R015		ALL
	X	A002	1A	W0445	0021A	20		23-51-21	ALL
	X	A002	1A	W3319	3001Y	24		23-51-21	YC051-YD158, YL951-YR328
	X	A003	1A	W0445	0026KR	20		23-51-21	YC051-YD170
	X	A003	1A	W3319	3001R	24		23-51-21	YC051-YD158
	X	A004	1A	W0445	0030KO	20		27-41-11	ALL
	X	A004	1A	W5369	0042	20		27-41-11	ALL
	V	A005	1	W0445	0033KG	20		33-11-21	ALL
	V	A005	1	W2383	0034	16		33-11-21	ALL
	Y	A009	1A	W0445	0027Y	20		22-11-12	ALL
	Y	A009	1A	W5369	0003	20		22-11-12	ALL
	Y	A009	1A	W5514	5562	20		22-11-12	YC051-YD158, YL951-YR328
	Y	A011	1A	W0445	0026KR	20		23-51-21	YL951-YR328
	Y	A011	1A	W2251	0014	24		23-51-21	YL951-YR328
	Y	A011	1A	W3319	3001R	24		23-51-21	YL951-YR328
	X	A013	1A	W2204	5533	20		33-14-11	ALL
	X	A013	1A	W5369	0044	20		33-14-11	ALL
	X	A016	1A	W0445	0024KA	20		22-14-11	ALL
	X	A016	1A	W5369	0037	20		22-14-11	ALL
	X	B001	1A	W0445	0032V	20		27-41-11	ALL
	X	B001	1A	W5369	0041	20		27-41-11	ALL
	X	B002	1A	W0445	0023KN	20		23-51-21	YC051-YD170
	X	B002	1A	W3319	3001B	24		23-51-21	YC051-YD158
	X	B004	1A	W0445	0029O	20		27-41-11	ALL
	X	B004	1A	W5369	0043	20		27-41-11	ALL
	Y	B009	1A	W0445	0037KB	20		22-11-12	ALL
	Y	B009	1A	W5457	0011	20		22-11-12	ALL
	Y	B009	1A	W5514	5563	20		22-11-12	YC051-YD158, YL951-YR328
	Y	B011	1A	W0445	0023KN	20		23-51-21	YL951-YR328
	Y	B011	1A	W2251	0013	24		23-51-21	YL951-YR328
	Y	B011	1A	W3319	3001B	24		23-51-21	YL951-YR328
	X	B014	1A	W0445	0038N	20		22-11-12	ALL
	X	B014	1A	W5369	0039	20		22-11-12	ALL
	X	B015	1A	W0445	0028G	20		22-11-12	ALL
	X	B015	1A	W5369	0038	20		22-11-12	ALL
	X	B016	1A	W0445	0025B	20		22-14-11	ALL
	X	B016	1A	W5369	0036	20		22-14-11	ALL
	X	CAP	Y	W0445	0022K	20		SPARE	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0800

Page 7

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0805		S280W555-606 (continued)					227/205/R015		ALL
TB0805	V	S280W555-203 (continued)					227/205/R015		ALL
TB0805	X	S280W555-102 (continued)					227/205/R015		ALL
TB0805	Y	S280W555-104 (continued)					227/205/R015		ALL
	X	CAP	Y	W0445	0035RN	20		SPARE	ALL
		CAP	Y	W0445	0036ON	20		SPARE	ALL
		CAP	Y	W0445	0039KV	20		SPARE	ALL
TB0806		S280W555-606					221/204/L004		ALL
TB0806	V	S280W555-203					221/204/L004		ALL
TB0806	X	S280W555-102					221/204/L004		ALL
TB0806	Y	S280W555-104					221/204/L004		ALL
TB0806	Z	S280W555-108					221/204/L004		ALL
	Y	A001	1A	W0443	0001A	20		23-51-11	YL951-YR328
	Y	A001	1A	W3323	3001Y	24		23-51-11	YL951-YR328
	X	A002	1A	W0443	0001A	20		23-51-11	YC051-YD170
	X	A002	1A	W3323	3001Y	24		23-51-11	YC051-YD170
	Y	A003	1A	W0443	0003KN	20		23-51-11	YL951-YR328
	X	A003	1A	W0443	0006KR	20		23-51-11	YC051-YD170
	Y	A003	1A	W2221	0031	24		23-51-11	YL951-YR328
	Y	A003	1A	W3323	3001B	24		23-51-11	YL951-YR328
	X	A003	1A	W3323	3001R	24		23-51-11	YC051-YD170
	V	A005	1	W0443	0013KG	20		33-11-11	ALL
	V	A005	1	W2030	5504	16		33-11-11	ALL
	Y	A009	1A	W0443	0011R	20		27-41-11	ALL
	Y	A009	1A	W5369	0040	20		27-41-11	ALL
	Y	A009	1A	W6208	0517	20		27-41-11	YC051-YD158, YL951-YR328
	Y	A009	1A	W6208	0543	20		27-41-11	YC051-YD158, YL951-YR328
	Y	A011	1A	W0443	0004KA	20		22-14-11	ALL
	Y	A011	1A	W2221	0017	22		22-14-11	ALL
	Y	A011	1A	W5369	0037	20		22-14-11	ALL
	X	A013	1A	W0443	0017KB	20		22-11-12	ALL
	X	A013	1A	W5457	0012	20		22-11-12	ALL
	X	A014	1A	W0443	0018N	20		22-11-12	ALL
	X	A014	1A	W5369	0039	20		22-11-12	ALL
	X	A015	1A	W0443	0008G	20		22-11-12	ALL
	X	A015	1A	W5369	0038	20		22-11-12	ALL
	Z	A017	1A	W0443	0012V	20		27-41-11	ALL
	Z	A017	1A	W5369	0041	20		27-41-11	ALL
	Z	A017	1A	W6206	0502	20		27-41-11	ALL
	Z	A017	1A	W6208	0613	20		27-41-11	YC051-YD158, YL951-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0800

Page 8

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0806		S280W555-606 (continued)					221/204/L004		ALL
TB0806	V	S280W555-203 (continued)					221/204/L004		ALL
TB0806	X	S280W555-102 (continued)					221/204/L004		ALL
TB0806	Y	S280W555-104 (continued)					221/204/L004		ALL
TB0806	Z	S280W555-108 (continued)					221/204/L004		ALL
	Z	A017	1A	W6208	0629	20		27-41-11	YC051-YD158, YL951-YR328
	Z	A021	1A	W0443	0009O	20		27-41-11	ALL
	Z	A021	1A	W5369	0043	20		27-41-11	ALL
	Z	A021	1A	W6206	0504	20		27-41-11	ALL
	Z	A021	1A	W6208	0531	20		27-41-11	YC051-YD158, YL951-YR328
	Z	A021	1A	W6208	0611	20		27-41-11	YC051-YD158, YL951-YR328
	Z	A021	1A	W6208	0627	20		27-41-11	YC051-YD158, YL951-YR328
	Y	B001	1A	W0443	0006KR	20		23-51-11	YL951-YR328
	Y	B001	1A	W2221	0032	24		23-51-11	YL951-YR328
	Y	B001	1A	W3323	3001R	24		23-51-11	YL951-YR328
	X	B002	1A	W0443	0003KN	20		23-51-11	YC051-YD170
	X	B002	1A	W3323	3001B	24		23-51-11	YC051-YD170
	Y	B009	1A	W2102	5533	20		33-14-11	ALL
	Y	B009	1A	W5369	0044	20		33-14-11	ALL
	Y	B009	1A	W6206	5542	20		33-14-11	ALL
	Y	B011	1A	W0443	0005B	20		22-14-11	ALL
	Y	B011	1A	W2221	0007	22		22-14-11	ALL
	Y	B011	1A	W5369	0036	20		22-14-11	ALL
	X	B013	1A	W0443	0007Y	20		22-11-12	ALL
	X	B013	1A	W5369	0004	20		22-11-12	ALL
	Z	B017	1A	W0443	0010KO	20		27-41-11	ALL
	Z	B017	1A	W5369	0042	20		27-41-11	ALL
	Z	B017	1A	W6206	0503	20		27-41-11	ALL
	Z	B017	1A	W6208	0530	20		27-41-11	YC051-YD158, YL951-YR328
	Z	B017	1A	W6208	0608	20		27-41-11	YC051-YD158, YL951-YR328
	Z	B017	1A	W6208	0624	20		27-41-11	YC051-YD158, YL951-YR328
	X	CAP	Y	W0443	0002K	20		SPARE	ALL
	X	CAP	Y	W0443	0015RN	20		SPARE	ALL
	X	CAP	Y	W0443	0016ON	20		SPARE	ALL
	X	CAP	Y	W0443	0019KV	20		SPARE	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0800

Page 9

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0811		S280W555-522					E008-01/ /		YC051-YC052
TB0811		S280W555-516					E008-01/ /		YC053-YD158
TB0811	W	S280W555-206					E008-01/ /		YC051-YD170
TB0811	Y	S280W555-104					E008-01/ /		YC051-YD170
TB0811	Z	S280W555-108					E008-01/ /		YC051-YD170
	Y	A001	1A	W0811	0416	20		23-34-01	YD158-YD170
	W	A001	1	W0813	0010	20		23-34-01	YC051-YD157
	W	A001	1	W0813	0011	20		23-34-01	YC051-YD157
	Y	A001	1A	W0813	0011	20		23-34-01	YD158-YD170
	W	A001	1	W0813	0022	20		23-34-01	YC051-YD157
	Y	A001	1A	W0813	0022	20		23-34-01	YD158-YD170
	W	A001	1	W0813	0027	20		23-34-02	YC051-YD157
	Y	A001	1A	W0813	0030	20		23-34-02	YD158-YD170
	Y	A005	1A	W0813	0015	24		23-34-01	YC051-YD157
	Y	A005	1A	W0813	0017	24		23-34-01	YC051-YD170
	Y	A005	1A	W0813	0033	24		23-34-01	YD158-YD170
	Y	A007	1A	W0813	0017	24		23-34-01	YC051-YD170
	Y	A007	1A	W0813	0019	24		23-34-01	YC051-YD170
	Y	A009	1A	W0813	0019	24		23-34-01	YC051-YD170
	Y	A009	1A	W0813	0020	24		23-34-01	YD158-YD170
	Y	A011	1A	W0813	0032	24		23-34-01	YC051-YC070
	Y	A011	1A	W0813	0034	24		23-34-01	YC051-YC070
	Z	A013	1A	W0813	0010	24		23-34-01	YD158-YD170
	Z	A013	1A	W0813	0032	24		23-34-01	YD151-YD170
	Z	A013	1A	W0813	0034	24		23-34-01	YD151-YD170
	Z	A013	1A	W0813	0044	24		23-34-01	YD151-YD157
	Y	B001	1A	W0813	0008	24		23-34-01	YD158-YD170
	Y	B001	1A	W0813	0010	24		23-34-01	YD158-YD170
	W	B001	1	W0813	0015	24		23-34-01	YC051-YD157
	W	B001	1	W0813	0020	24		23-34-01	YC051-YD157
	W	B001	1	W0813	0025	24		23-34-01	YC051-YD157
	Y	B001	1A	W0813	0025	24		23-34-01	YD158-YD170
	W	B001	1	W0813	0033	24		23-34-01	YC051-YD157
	Y	B005	1A	W0813	0014	24		23-34-01	YC051-YD170
	Y	B007	1A	W0813	0016	24		23-34-01	YC051-YD170
	Y	B009	1A	W0813	0018	24		23-34-01	YC051-YD170
	Y	B011	1A	W0813	0033	24		23-34-01	YC051-YC070
	Z	B013	1A	W0813	0033	24		23-34-01	YD151-YD170

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0800

Page 10

Nov 12/2012





# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.		Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Fix	Term				CO		
I I I I	TB0812		S280W555-510				E008-01/ /		YC051-YC052
	TB0812		S280W555-516				E008-01/ /		YC053-YD170
	TB0812	Y	S280W555-104				E008-01/ /		YC051-YD170
	TB0812	Z	280W555-108				E008-01/ /		YD158-YD170
		Z	A001	1A	W0811	0137	20	23-11-16	YD158-YD170
		Z	A001	1A	W0811	0139	22	23-11-16	YD158-YD170
		Z	A001	1A	W0811	0167	22	23-11-26	YD158-YD170
		Y	A005	1A	W0811	2036R	24	23-11-26	YD158-YD170
		Y	A005	1A	W0811	2531R	24	23-11-16	YD158-YD170
		Y	A005	1A	W0811	2533R	24	23-11-16	YD158-YD170
		Y	A007	1A	W0811	2037R	24	23-11-26	YD158-YD170
		Y	A007	1A	W0811	2039R	24	23-11-26	YD158-YD170
		Y	A007	1A	W0811	2532R	24	23-11-16	YD158-YD170
		Y	A009	1A	W0811	2508R	24	23-12-41	YD158-YD170
		Y	A009	1A	W0811	2511R	24	23-12-41	YD158-YD170
		Y	A009	1A	W0811	2519R	24	23-12-41	YD158-YD170
		Y	A011	1A	W0811	2015R	24	23-12-41	YD158-YD170
		Y	A011	1A	W0811	2509R	24	23-12-41	YD158-YD170
		Y	A011	1A	W0811	2510R	24	23-12-41	YD158-YD170
		Y	A013	1A	W0811	0085	24	31-31-17	YD158-YD170
		Y	A013	1A	W0811	0121	24	23-11-16	YD158-YD170
		Y	A013	1A	W0811	0145	24	23-11-16	YD158-YD170
		Y	A017	1A	W0811	0013	22	23-11-11	YD158-YD170
		Y	A017	1A	W0811	0014	22	23-11-11	YD158-YD170
		Y	A017	1A	W0811	0019	22	23-11-11	YD158-YD170
		Y	A019	1A	W0811	0173	22	23-11-21	YD158-YD170
		Y	A019	1A	W0811	0174	22	23-11-21	YD158-YD170
		Y	A019	1A	W0811	0175	22	23-11-21	YD158-YD170
		Y	A021	1A	W0811	2026R	24	23-27-36	YD158-YD170
		Y	A021	1A	W0811	2029R	24	23-27-36	YD158-YD170
		Y	A021	1A	W0811	2030R	24	23-27-36	YD158-YD170
I I I		Y	A039	1A	W0811	0001	20	23-11-11	YC051-YD157
		Y	A039	1A	W0811	0002	20	23-11-11	YC051-YD157
		Y	A039	1A	W0811	0004	20	23-11-11	YC051-YD157
		Y	B005	1A	W0811	2036B	24	23-11-26	YD158-YD170
		Y	B005	1A	W0811	2531B	24	23-11-16	YD158-YD170
		Y	B005	1A	W0811	2533B	24	23-11-16	YD158-YD170
		Y	B007	1A	W0811	2037B	24	23-11-26	YD158-YD170
		Y	B007	1A	W0811	2039B	24	23-11-26	YD158-YD170
		Y	B007	1A	W0811	2532B	24	23-11-16	YD158-YD170
		Y	B009	1A	W0811	2508B	24	23-12-41	YD158-YD170

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0800

Page 11

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0812		S280W555-510 (continued)					E008-01/ /		YC051-YC052
TB0812		S280W555-516 (continued)					E008-01/ /		YC053-YD170
TB0812	Y	S280W555-104 (continued)					E008-01/ /		YC051-YD170
TB0812	Z	280W555-108 (continued)					E008-01/ /		YD158-YD170
	Y	B009	1A	W0811	2511B	24		23-12-41	YD158-YD170
	Y	B009	1A	W0811	2519B	24		23-12-41	YD158-YD170
	Y	B011	1A	W0811	2015B	24		23-12-41	YD158-YD170
	Y	B011	1A	W0811	2509B	24		23-12-41	YD158-YD170
	Y	B011	1A	W0811	2510B	24		23-12-41	YD158-YD170
	Y	B013	1A	W0811	0086	24		31-31-17	YD158-YD170
	Y	B013	1A	W0811	0122	24		23-11-26	YD158-YD170
	Y	B013	1A	W0811	0144	24		23-11-26	YD158-YD170
	Y	B021	1A	W0811	2026B	24		23-27-36	YD158-YD170
	Y	B021	1A	W0811	2029B	24		23-27-36	YD158-YD170
	Y	B021	1A	W0811	2030B	24		23-27-36	YD158-YD170
	Y	B039	1A	W0811	0013	22		23-11-11	YC051-YD157
	Y	B039	1A	W0811	0014	22		23-11-11	YC051-YD157
	Y	B039	1A	W0811	0019	24		23-29-11	YC051-YD157

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0800

Page 12 End

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0952		S280W555-604					953/305/L003		YL963-YL999, YN236-YR328
TB0952	X	S280W555-102					953/305/L003		YL963-YL999, YN236-YR328
TB0952	Y	S280W555-104					953/305/L003		YL963-YL999, YN236-YR328
	X	A002	1A	W5431	0039	24		23-71-01	YL963-YL999, YN236-YR328
	X	A002	1A	W5431	0043	24		23-71-01	YL963-YL999, YN236-YR328
	X	A003	1A	W5431	0038	24		23-71-01	YL963-YL999, YN236-YR328
	X	A003	1A	W5431	0040	24		23-71-01	YL963-YL999, YN236-YR328
	Y	A005	1A	W5431	0035	24		23-71-01	YL963-YL999, YN236-YR328
	Y	A005	1A	W5431	0043	24		23-71-01	YL963-YL999, YN236-YR328
	Y	A005	1A	W5431	0045	24		23-71-01	YL963-YL999, YN236-YR328
	Y	A007	1A	W5431	0036	22		23-71-01	YL963-YL999, YN236-YR328
	Y	A007	1A	W5431	0046	22		23-71-01	YL963-YL999, YN236-YR328
	Y	A007	1A	W5431	0047	22		23-71-01	YL963-YL999, YN236-YR328
	Y	A009	1A	W3058	0249	22		23-42-15	YN501-YR328
	Y	A011	1A	W3058	0266	22		23-42-15	YN501-YR328
	Y	A013	1A	W3311	0053	22		23-31-01	YR315-YR328
	Y	A015	1A	W3311	0055	22		23-42-12	YR315-YR328
	X	B002	1A	W5431	0039	24		23-71-01	YL963-YL999, YN236-YR328
	X	B002	1A	W5431	0042	24		23-71-01	YL963-YL999, YN236-YR328
	X	B003	1A	W5431	0038	24		23-71-01	YL963-YL999, YN236-YR328
	X	B003	1A	W5431	0041	24		23-71-01	YL963-YL999, YN236-YR328
	Y	B005	1A	W5431	0026	24		23-71-01	YL963-YL999, YN236-YR328
	Y	B005	1A	W5431	0041	24		23-71-01	YL963-YL999, YN236-YR328
	Y	B005	1A	W5431	0042	24		23-71-01	YL963-YL999, YN236-YR328
	Y	B005	1A	W5431	0044	24		23-71-01	YL963-YL999, YN236-YR328
	Y	B007	1A	W5431	0024	24		23-71-01	YL963-YL999, YN236-YR328
	Y	B007	1A	W5431	0025	24		23-71-01	YL963-YL999, YN236-YR328
	Y	B007	1A	W5431	0040	24		23-71-01	YL963-YL999, YN236-YR328
	Y	B009	1A	W3058	0187	22		23-42-15	YN501-YR328
	Y	B011	1A	W3058	0166	22		23-42-15	YN501-YR328
	Y	B013	1A	W3311	0046	22		23-31-01	YR315-YR328
	Y	B013	1A	W3311	0054	22		23-31-01	YR315-YR328
	Y	B015	1A	W3311	0054	22		23-31-01	YR315-YR328
TB0954		S280W555-604					322/296/L003		YN501-YR328
TB0954	Y	S280W555-104					322/296/L003		YN501-YR328
	Y	A001	1A	W3058	0245	22		23-42-14	YN501-YR328
	Y	A003	1A	W3058	0246	22		23-42-14	YN501-YR328
	Y	A013	1A	W3307	0104	22		23-31-01	YR315-YR328
	Y	A015	1A	W3307	0107	22		23-42-12	YR315-YR328
	Y	B001	1A	W3058	0176	22		23-42-14	YN501-YR328

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB0900

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number		Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0954		S280W555-604 (continued)						322/296/L003		YN501-YR328
TB0954	Y	S280W555-104 (continued)						322/296/L003		YN501-YR328
	Y	B003	1A	W3058	0098	22			23-42-14	YN501-YR328
	Y	B013	1A	W3307	0094	22			23-31-01	YR315-YR328
	Y	B013	1A	W3307	0105	22			23-31-01	YR315-YR328
	Y	B015	1A	W3307	0105	22			23-31-01	YR315-YR328

For training purposes only!

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB0900

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1092		S280W555-606					P001-00/ /		ALL
TB1092	V	S280W555-203					P001-00/ /		ALL
TB1092	W	S280W555-206					P001-00/ /		ALL
TB1092	X	S280W555-102					P001-00/ /		ALL
TB1092	Y	S280W555-104					P001-00/ /		ALL
TB1092	Z	S280W555-108					P001-00/ /		ALL
	W	A001	1	W0001	0212	16		33-11-32	YC051-YD158, YL951-YR328
	W	A001	1	W0001	1009	20		33-11-32	YC051-YD158, YL951-YR328
	V	A005	1	W0001	0187	16		33-11-11	YC051-YD158, YL951-YR328
	V	A005	1	W0001	0193	16		33-11-11	YC051-YD158, YL951-YR328
	V	A005	1	W0001	0214	20		33-11-32	YC051-YD158, YL951-YR328
	V	A007	1	W0001	0223	20		33-11-32	YC051-YD158, YL951-YR328
	V	A007	1	W0001	0256	16		33-11-32	YC051-YD158, YL951-YR328
	V	A007	1	W0001	0291	16		33-11-32	YC051-YD158, YL951-YR328
	W	A009	1	W0001	0203	16		33-11-31	YL951-YR328
	W	A009	1	W0001	0324	16		33-11-31	YL951-YR328
	W	A009	1	W0001	0325	20		33-11-31	YL951-YR328
	Y	A017	1A	W0001	0236	20		33-18-21	YC051-YD158, YL951-YR328
	Y	A017	1A	W0001	0239	20		33-18-21	YC051-YD158, YL951-YR328
	Y	A017	1A	W0003	0686	20		33-18-21	YC051-YD158, YL951-YR328
	Y	A017	1A	W0003	0723	20		33-18-22	YC051-YD158, YL951-YR328
	W	A021	1	W0001	0211	16		33-11-32	YC051-YD158, YL951-YR328
	W	A021	1	W0001	0219	20		33-11-32	YC051-YD158, YL951-YR328
	W	A021	1	W0001	0221	20		33-11-32	YC051-YD158, YL951-YR328
	W	B001	1	W0001	0189	16		33-11-11	YC051-YD158, YL951-YR328
	W	B001	1	W0001	0191	16		33-11-11	YC051-YD158, YL951-YR328
	W	B001	1	W0001	0192	16		33-11-11	YC051-YD158, YL951-YR328
	W	B001	1	W0001	0196	20		33-11-11	YC051-YD158, YL951-YR328
	W	B001	1	W0001	0225	20		33-11-11	YC051-YD158, YL951-YR328
	Y	B017	1A	W0001	0241	20		33-18-21	YC051-YD158, YL951-YR328
	Y	B017	1A	W0003	0687	20		33-18-21	YC051-YD158, YL951-YR328
	Y	B017	1A	W0003	0722	20		33-18-22	YC051-YD158, YL951-YR328
	Y	B019	1A	W0001	0262	20		33-14-11	YC051-YD158, YL951-YR328
	Y	B019	1A	W0001	0263	20		33-14-11	YC051-YD158, YL951-YR328
	Y	B019	1A	W0001	0264	20		33-14-11	YC051-YD158, YL951-YR328
	W	B021	1	W0001	0213	16		33-11-32	YC051-YD158, YL951-YR328
	W	B021	1	W0001	0229	20		33-11-32	YC051-YD158, YL951-YR328
	W	B021	1	W0001	0231	20		33-11-32	YC051-YD158, YL951-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB1000

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1101		S280W601-301					E001-01/ /		ALL
TB1101	X	S280W555-102					E001-01/ /		ALL
TB1101	Y	S280W555-104					E001-01/ /		ALL
TB1101	Z	S280W555-108					E001-01/ /		ALL
	Y	A001	1A	W0111	2003R	24		34-33-21	ALL
	Y	A001	1A	W0111	2004R	24		34-33-21	ALL
	Y	A001	1A	W0111	2005R	24		34-33-21	ALL
	Y	A007	1A	W0111	2140R	24		27-28-11	ALL
	Y	A007	1A	W0111	2141R	24		27-28-11	ALL
	Y	A007	1A	W0111	2142R	24		27-28-11	ALL
	Y	A013	1A	W0111	0604	24		27-28-11	ALL
	Y	A013	1A	W0111	0605	24		27-28-11	ALL
	Y	A013	1A	W0111	0606	24		27-28-11	ALL
	Y	B001	1A	W0111	2003B	24		34-33-21	ALL
	Y	B001	1A	W0111	2004B	24		34-33-21	ALL
	Y	B001	1A	W0111	2005B	24		34-33-21	ALL
	Y	B007	1A	W0111	2140B	24		27-28-11	ALL
	Y	B007	1A	W0111	2141B	24		27-28-11	ALL
	Y	B007	1A	W0111	2142B	24		27-28-11	ALL
	Y	B011	1A	W0111	0603	24		27-28-11	ALL
	Y	B011	1A	W0111	0607	24		27-28-11	ALL
	Y	B011	1A	W0111	0608	24		27-28-11	ALL
	Y	B011	1A	W0111	0610	24		27-28-11	ALL
TB1102		S280W601-301					E001-01/ /		ALL
TB1102	X	S280W555-102					E001-01/ /		ALL
TB1102	Y	S280W555-104					E001-01/ /		ALL
TB1102	Z	S280W555-108					E001-01/ /		ALL
	Y	A001	1A	W0111	0450	22		22-13-11	YD157-YR328
	Y	A001	1A	W0111	0452	22		22-13-11	YD157-YR328
	Y	A001	1A	W0111	0453	22		22-13-11	YD157-YR328
	Y	A001	1A	W0111	0454	22		22-13-11	YD157-YD170
	Y	A003	1A	W0111	0475	24		34-49-11	YL956-YL999, YN236-YR328
	Y	A003	1A	W0111	0880	24		34-49-11	YL956-YL999, YN236-YR328
	Y	A005	1A	W0111	1035	20		27-25-11	ALL
	Y	A007	1A	W0111	1032	20		27-25-11	ALL
	Y	A009	1A	W0111	0254	24		34-45-21	ALL
	Y	A009	1A	W0111	0255	24		34-45-21	ALL
	Y	A009	1A	W0111	0256	24		34-45-21	ALL
	Z	A013	1A	W0111	0235	24		34-45-21	YD158-YD170
	Z	A013	1A	W0111	0236	24		34-45-21	YC051-YD157, YL951-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB1100

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1102		S280W601-301 (continued)					E001-01/ /		ALL
TB1102	X	S280W555-102 (continued)					E001-01/ /		ALL
TB1102	Y	S280W555-104 (continued)					E001-01/ /		ALL
TB1102	Z	S280W555-108 (continued)					E001-01/ /		ALL
	Z	A013	1A	W0111	0237	24		34-45-21	YC051-YD157
	Z	A013	1A	W0111	0238	24		34-45-21	ALL
	Z	A013	1A	W0111	0239	24		34-45-21	ALL
	Y	B003	1A	W0111	0642	20		27-53-11	ALL
	Y	B003	1A	W0111	0643	20		27-53-11	ALL
	Y	B003	1A	W0111	0644	20		27-53-11	ALL
	Y	B005	1A	W0111	1036	20		27-25-11	ALL
	Y	B007	1A	W0111	1033	22		27-25-11	YC051-YD153, YD157-YR328
	Y	B007	1A	W0111	1033	20		27-25-11	YD154-YD155
	Y	B007	1A	W0111	1036	20		27-25-11	ALL
	Y	B009	1A	W0111	1029	20		27-25-11	YD154-YD155
	Y	B009	1A	W0111	1031	22		27-25-11	YD154-YD155
	Y	B009	1A	W0111	1033	20		27-25-11	YD154-YD155
TB1103		S280W601-301					E001-01/ /		ALL
TB1103	X	S280W555-102					E001-01/ /		ALL
TB1103	Y	S280W555-104					E001-01/ /		ALL
TB1103	Z	S280W555-108					E001-01/ /		ALL
	X	A001	1A	W0111	0527	24		34-49-11	YL953-YL999, YR301-YR328
	X	A001	1A	W0111	0533	24		34-49-11	YC053-YD170
	X	A002	1A	W0111	0515	24		34-49-11	YC053, YC055
	X	A002	1A	W0111	0525	24		34-49-11	YC053-YN501
	X	A003	1A	W0111	0527	24		34-49-11	YD154-YD170
	Y	A005	1A	W0111	0502	24		34-49-11	YL953-YL999, YR301-YR328
	Y	A005	1A	W0111	0505	24		34-49-11	YC053, YC055
	Y	A005	1A	W0111	0509	24		34-49-11	YC053-YD170
	Y	A005	1A	W0111	0511	24		34-49-11	YC053-YR328
	Y	A005	%A	W0111	0513	24		34-49-11	YC053, YC055
	Y	A005	1A	W0111	0513	24		34-49-11	YC054, YC056-YD153
	Y	A005	1A	W0111	0516	24		34-49-11	YL951-YR328
	Y	A007	1A	W0111	0506	24		34-49-11	YC053-YC064
	Y	A007	1A	W0111	0510	24		34-49-11	YC054, YC056-YC064
	Y	A007	1A	W0111	0512	24		34-49-11	YC053-YC064, YN231-YR328
	Y	A007	1A	W0111	0513	24		34-49-11	YN231-YR308, YR312-YR328
	Y	A007	1A	W0111	0514	24		34-49-11	YC053-YC064, YN231-YR328
	Y	A007	1A	W0111	0526	24		34-49-11	YN231-YR328
	Z	A009	1A	W0111	0506	24		34-49-11	YR301-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB1100

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1103		S280W601-301 (continued)					E001-01/ /		ALL
TB1103	X	S280W555-102 (continued)					E001-01/ /		ALL
TB1103	Y	S280W555-104 (continued)					E001-01/ /		ALL
TB1103	Z	S280W555-108 (continued)					E001-01/ /		ALL
	Z	A009	1A	W0111	0515	24		34-49-11	YC053, YC055
	Z	A009	1A	W0111	0516	24		34-49-11	YC053, YC055
	Z	A009	1A	W0111	0526	24		34-49-11	YC053-YC064
	Z	A009	1A	W0111	0527	24		34-49-11	YL951-YL952, YN231-YN501
	Z	A009	1A	W0111	0528	24		34-49-11	YC053-YN501
	Z	A009	1A	W0111	0529	24		34-49-11	YC053-YN501
	Z	A009	1A	W0111	0530	24		34-49-11	YR301-YR328
	Z	A009	1A	W0111	0531	24		34-49-11	YR301-YR328
	Z	A009	1A	W0111	0532	24		34-49-11	YR301-YR328
	Z	A009	1A	W0111	0533	24		34-49-11	YL951-YN501
	Y	A013	1A	W0111	0472	24		34-49-11	YC053-YR328
	Y	A013	1A	W0111	0509	24		34-49-11	YL951-YR328
	Y	A013	1A	W0111	0510	24		34-49-11	YR309
	Y	A013	1A	W0111	0535	24		34-49-11	YC053-YR328
	X	B001	1A	W0111	0525	24		34-49-11	YR301-YR328
	X	B003	1A	W0111	0516	24		34-49-11	YC053, YC055
	X	B003	1A	W0111	0527	24		34-49-11	YC053-YD153
	Y	B005	1A	W0111	0506	24		34-49-11	YL953-YL999
	Y	B005	1A	W0111	0510	24		34-49-11	YC053, YC055
	Y	B005	1A	W0111	0530	24		34-49-11	YC053-YL999
	Y	B005	1A	W0111	0531	24		34-49-11	YC053-YL999
	Y	B005	1A	W0111	0532	24		34-49-11	YC053-YL999
	Z	B009	1A	W0111	0506	24		34-49-11	YC065-YL952, YN231-YN501
	Z	B009	1A	W0111	0510	24		34-49-11	YC065-YD153
	Z	B009	1A	W0111	0512	24		34-49-11	YC065-YL999
	Z	B009	1A	W0111	0513	24		34-49-11	YD154-YL999, YR309
	Z	B009	1A	W0111	0514	24		34-49-11	YC065-YL999
	Z	B009	1A	W0111	0526	24		34-49-11	YC065-YL999
	Z	B009	1A	W0111	0528	24		34-49-11	YR301-YR328
	Z	B009	1A	W0111	0529	24		34-49-11	YR301-YR328
	Z	B009	1A	W0111	0530	24		34-49-11	YN231-YN501
	Z	B009	1A	W0111	0531	24		34-49-11	YN231-YN501
	Z	B009	1A	W0111	0532	24		34-49-11	YN231-YN501
	Z	B009	1A	W0111	0533	24		34-49-11	YR301-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB1100

Page 3

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1104		S280W601-301					E001-01/ /		ALL
TB1104	X	S280W555-102					E001-01/ /		ALL
TB1104	Y	S280W555-104					E001-01/ /		ALL
TB1104	Z	S280W555-108					E001-01/ /		ALL
	Y	A001	1A	W0111	0001	20		22-11-11	YC051-YD155
	Y	A001	1A	W0111	0002	20		22-11-11	YC051-YD155
	Y	A001	1A	W0111	0003	20		22-11-11	YC051-YD155
	Y	A001	1A	W0111	2038R	22		22-12-31	YD157-YR328
	Y	A001	1A	W0111	2226R	22		22-11-81	YD157-YR328
	Y	A001	1A	W0111	2229R	22		22-12-31	YD157-YR328
	Y	A003	1A	W0111	0430	22		34-51-41	ALL
	Y	A003	1A	W0111	0431	22		34-51-41	ALL
	Y	A003	1A	W0111	0432	22		34-51-41	ALL
	Z	A005	1A	W0111	2088R	24		22-31-52	ALL
	Z	A005	1A	W0111	2089R	24		22-31-52	ALL
	Z	A005	1A	W0111	2090R	24		22-31-52	ALL
	Z	A005	1A	W0111	2091R	24		22-31-52	ALL
	Z	A005	1A	W0111	2092R	24		22-31-52	ALL
	Z	A005	1A	W0111	2093R	24		22-31-52	ALL
	Z	A005	1A	W0111	2094R	24		22-31-52	ALL
	Y	A009	1A	W0111	0436	22		34-51-41	ALL
	Y	A009	1A	W0111	0437	22		34-51-41	ALL
	Y	A009	1A	W0111	0438	22		34-51-41	ALL
	Y	A011	1A	W0111	0003	20		22-11-12	YD157-YR328
	Y	A011	1A	W0111	0041	20		22-11-12	YD157
	Y	A011	1A	W0111	0058	20		22-11-12	YD157-YR328
	Z	A013	1A	W0111	0564	22		34-51-41	ALL
	Z	A013	1A	W0111	0565	22		34-51-41	ALL
	Z	A013	1A	W0111	0566	22		34-51-41	ALL
	Z	A013	1A	W0111	0567	22		34-51-41	ALL
	Y	B001	1A	W0111	2038B	22		22-12-31	YD157-YR328
	Y	B001	1A	W0111	2226B	22		22-11-81	YD157-YR328
	Y	B001	1A	W0111	2229B	22		22-12-31	YD157-YR328
	Z	B005	1A	W0111	2088B	24		22-31-52	ALL
	Z	B005	1A	W0111	2089B	24		22-31-52	ALL
	Z	B005	1A	W0111	2090B	24		22-31-52	ALL
	Z	B005	1A	W0111	2091B	24		22-31-52	ALL
	Z	B005	1A	W0111	2092B	24		22-31-52	ALL
	Z	B005	1A	W0111	2093B	24		22-31-52	ALL
	Z	B005	1A	W0111	2094B	24		22-31-52	ALL
	Y	B009	1A	W0111	0439	22		34-51-41	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB1100

Page 4

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1104		S280W601-301 (continued)					E001-01/ /		ALL
TB1104	X	S280W555-102 (continued)					E001-01/ /		ALL
TB1104	Y	S280W555-104 (continued)					E001-01/ /		ALL
TB1104	Z	S280W555-108 (continued)					E001-01/ /		ALL
	Y	B009	1A	W0111	0440	22		34-51-41	ALL
	Y	B009	1A	W0111	0441	22		34-51-41	ALL
	Z	B013	1A	W0111	0443	22		34-51-41	ALL
	Z	B013	1A	W0111	0561	22		34-51-41	ALL
	Z	B013	1A	W0111	0562	22		34-51-41	ALL
	Y	B017	1A	W0111	0814	22		34-51-41	YL951-YR328
	Y	B017	1A	W0111	0815	22		34-51-41	YL951-YR328
	Y	B017	1A	W0111	0816	22		34-51-41	YL951-YR328
TB1105		S280W601-301					E001-01/ /		ALL
TB1105	W	S280W555-206					E001-01/ /		ALL
TB1105	X	S280W555-102					E001-01/ /		ALL
TB1105	Y	S280W555-104					E001-01/ /		ALL
TB1105	Z	S280W555-108					E001-01/ /		ALL
	Y	A003	1A	W0111	0384	20		34-21-21	ALL
	Y	A003	1A	W0111	0385	20		34-21-21	ALL
	Y	A003	1A	W0111	0386	20		34-21-21	ALL
	W	A005	1	W0111	0353	22		34-21-16	ALL
	W	A005	1	W0111	0387	16		34-21-21	ALL
	W	A005	1	W0111	0388	20		34-21-21	ALL
	W	A005	1	W0111	0389	20		34-21-21	ALL
	Z	A009	1A	W0111	0714	22		27-53-21	ALL
	Z	A009	1A	W0111	1004	24		27-52-11	ALL
	Z	A009	1A	W0111	1006	24		27-52-11	ALL
	Z	A009	1A	W0111	2188R	20		27-52-11	ALL
	Z	A009	1A	W0111	3028R	20		27-52-11	ALL
	Z	A013	1A	W0111	1003	20		27-52-11	ALL
	Z	A013	1A	W0111	2188B	20		27-52-11	ALL
	Z	A013	1A	W0111	2193B	20		27-52-11	ALL
	Z	A013	1A	W0111	3028B	20		27-52-11	ALL
	Y	A017	1A	W0111	2220R	22		31-32-15	YC059-YR328
	Y	A017	1A	W0111	2221R	22		31-32-15	YC059-YR328
	Y	A017	1A	W0111	2222R	22		31-32-15	YC059-YR328
	Y	B001	1A	W0111	0350	22		34-21-16	ALL
	Y	B001	1A	W0111	0351	22		34-21-16	ALL
	Y	B001	1A	W0111	0352	22		34-21-16	ALL
	Z	B009	1A	W0111	0117	22		27-51-11	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB1100

Page 5

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1105		S280W601-301 (continued)					E001-01/ /		ALL
TB1105	W	S280W555-206 (continued)					E001-01/ /		ALL
TB1105	X	S280W555-102 (continued)					E001-01/ /		ALL
TB1105	Y	S280W555-104 (continued)					E001-01/ /		ALL
TB1105	Z	S280W555-108 (continued)					E001-01/ /		ALL
	Z	B009	1A	W0111	0639	22		27-53-21	ALL
	Z	B009	1A	W0111	1005	24		27-52-11	ALL
	Z	B009	1A	W0111	1007	24		27-52-11	ALL
	Z	B009	1A	W0111	2193R	20		27-52-11	ALL
	Z	B009	1A	W0111	3028Y	20		27-52-11	ALL
	Z	B013	1A	W0111	1003Z			27-52-11	ALL
	Z	B013	1A	W0111	1004Z			27-52-11	ALL
	Z	B013	1A	W0111	1005Z			27-52-11	ALL
	Z	B013	1A	W0111	1006Z			27-52-11	ALL
	Z	B013	1A	W0111	1007Z			27-52-11	ALL
	Z	B013	1A	W0111	2188Z			27-52-11	ALL
	Z	B013	1A	W0111	2193Z			27-52-11	ALL
	Z	B013	1A	W0111	3028Z			27-52-11	ALL
	Y	B017	1A	W0111	2220B	22		31-32-15	YC059-YR328
	Y	B017	1A	W0111	2221B	22		31-32-15	YC059-YR328
	Y	B017	1A	W0111	2222B	22		31-32-15	YC059-YR328
TB1106		S280W555-504					E001-01/ /		ALL
TB1106	X	S280W555-102					E001-01/ /		ALL
TB1106	Y	S280W555-104					E001-01/ /		ALL
TB1106	Z	S280W555-108					E001-01/ /		ALL
	Y	A001	1A	W0111	2067R	24		34-45-11	ALL
	Y	A001	1A	W0111	2068R	24		34-45-11	ALL
	Y	A001	1A	W0111	2069R	24		34-45-11	ALL
	Y	A003	1A	W0111	0177	22		22-14-11	ALL
	Y	A003	1A	W0111	0183	22		22-14-11	ALL
	Y	A003	1A	W0111	0184	22		22-14-11	ALL
	Y	A003	1A	W0111	0365	24		31-31-15	ALL
	Y	A005	1A	W0111	0659	24		32-64-21	YC051-YD170, YN231
	Y	A005	1A	W0111	0660	24		27-62-21	YC051-YD170, YN231
	Y	A005	1A	W0111	0746	22		32-64-21	YC051-YD170, YN231
	Y	A007	1A	W0111	0152	20		22-13-11	ALL
	Y	A007	1A	W0111	0160	22		22-13-11	ALL
	Y	A007	1A	W0111	0166	20		22-13-11	ALL
	Y	A009	1A	W0111	0154	20		22-13-11	ALL
	Y	A009	1A	W0111	0162	22		22-13-11	ALL

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB1100

Page 6

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1106		S280W555-504 (continued)					E001-01/ /		ALL
TB1106	X	S280W555-102 (continued)					E001-01/ /		ALL
TB1106	Y	S280W555-104 (continued)					E001-01/ /		ALL
TB1106	Z	S280W555-108 (continued)					E001-01/ /		ALL
	Y	A009	1A	W0111	0168	20		22-13-11	ALL
	Y	A011	1A	W0111	2055R	24		34-33-11	ALL
	Y	A011	1A	W0111	2056R	24		34-33-11	ALL
	Y	A011	1A	W0111	2057R	24		34-33-11	ALL
	Z	A013	1A	W0111	2015R	24		22-11-51	ALL
	Z	A013	1A	W0111	2016R	24		22-11-51	ALL
	Z	A013	1A	W0111	2017R	24		22-11-51	ALL
	Z	A013	1A	W0111	2018R	24		22-11-51	ALL
	Z	A013	1A	W0111	2019R	24		22-11-51	ALL
	Y	B001	1A	W0111	2067B	24		34-45-11	ALL
	Y	B001	1A	W0111	2068B	24		34-45-11	ALL
	Y	B001	1A	W0111	2069B	24		34-45-11	ALL
	Y	B003	1A	W0111	0130	20		22-18-11	ALL
	Y	B003	1A	W0111	0131	22		22-18-11	ALL
	Y	B003	1A	W0111	0132	22		22-18-11	ALL
	Y	B007	1A	W0111	0153	20		22-13-11	ALL
	Y	B007	1A	W0111	0161	22		22-13-11	ALL
	Y	B007	1A	W0111	0167	20		22-13-11	ALL
	Y	B009	1A	W0111	0076	20		22-11-31	YC051-YC052
	Y	B009	1A	W0111	0077	22		22-11-31	YC051-YC052
	Y	B009	1A	W0111	0078	20		22-11-31	YC051-YC052
	Y	B009	1A	W0111	1017	20		22-11-31	YC053-YR328
	Y	B009	1A	W0111	1018	22		22-11-31	YC053-YR328
	Y	B009	1A	W0111	1019	20		22-11-31	YC053-YR328
	Y	B011	1A	W0111	2055B	24		34-33-11	ALL
	Y	B011	1A	W0111	2056B	24		34-33-11	ALL
	Y	B011	1A	W0111	2057B	24		34-33-11	ALL
	Z	B013	1A	W0111	2015B	24		22-11-51	ALL
	Z	B013	1A	W0111	2016B	24		22-11-51	ALL
	Z	B013	1A	W0111	2017B	24		22-11-51	ALL
	Z	B013	1A	W0111	2018B	24		22-11-51	ALL
	Z	B013	1A	W0111	2019B	24		22-11-51	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB1100

Page 7

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1107		S280W555-504					E001-01/ /		ALL
TB1107	X	S280W555-102					E001-01/ /		ALL
TB1107	Y	S280W555-104					E001-01/ /		ALL
TB1107	Z	S280W555-108					E001-01/ /		ALL
	Y	A001	1A	W0111	0149	20		22-13-11	ALL
	Y	A001	1A	W0111	0150	22		22-13-11	ALL
	Y	A001	1A	W0111	0151	22		22-13-11	ALL
	Y	A003	1A	W0111	0050	20		22-11-12	ALL
	Y	A003	1A	W0111	0051	22		22-11-12	ALL
	Y	A003	1A	W0111	0052	20		22-11-12	ALL
	Y	A005	1A	W0111	0012	22		22-11-11	ALL
	Y	A005	1A	W0111	0015	22		22-11-11	ALL
	Y	A005	1A	W0111	0028	20		22-11-11	ALL
	Y	A007	1A	W0111	0047	20		22-11-12	ALL
	Y	A007	1A	W0111	0048	22		22-11-12	ALL
	Y	A007	1A	W0111	0049	20		22-11-12	ALL
	Y	A011	1A	W0111	0164	22		22-13-11	ALL
	Y	A011	1A	W0111	0169	20		22-13-11	ALL
	Y	A011	1A	W0111	0171	20		22-13-11	ALL
	Y	A013	1A	W0111	2042R	22		22-18-11	ALL
	Y	A013	1A	W0111	2043R	22		22-18-11	ALL
	Y	A013	1A	W0111	2044R	22		22-18-11	ALL
	Y	A015	1A	W0111	2008R	22		22-11-31	ALL
	Y	A015	1A	W0111	2009R	22		22-11-31	ALL
	Y	A015	1A	W0111	2010R	22		22-11-31	ALL
	Y	A015	1A	W0111	2011R	22		22-11-31	ALL
	Y	B001	1A	W0111	0146	20		22-13-11	ALL
	Y	B001	1A	W0111	0147	22		22-13-11	ALL
	Y	B001	1A	W0111	0148	22		22-13-11	ALL
	Y	B003	1A	W0111	1012	20		22-12-31	ALL
	Y	B003	1A	W0111	1013	20		22-12-31	ALL
	Y	B003	1A	W0111	1015	22		22-12-31	ALL
	Y	B005	1A	W0111	0011	22		22-11-11	ALL
	Y	B005	1A	W0111	0014	22		22-11-11	ALL
	Y	B005	1A	W0111	0027	20		22-11-11	ALL
	Y	B007	1A	W0111	0013	22		22-11-11	ALL
	Y	B007	1A	W0111	0016	22		22-11-11	ALL
	Y	B007	1A	W0111	0029	20		22-11-11	ALL
	Y	B009	1A	W0111	0194	22		22-14-11	ALL
	Y	B009	1A	W0111	0195	22		22-14-11	ALL
	Y	B009	1A	W0111	0196	22		22-14-11	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB1100

Page 8

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1107		S280W555-504 (continued)					E001-01/ /		ALL
TB1107	X	S280W555-102 (continued)					E001-01/ /		ALL
TB1107	Y	S280W555-104 (continued)					E001-01/ /		ALL
TB1107	Z	S280W555-108 (continued)					E001-01/ /		ALL
	Y	B011	1A	W0111	0165	22		22-13-11	ALL
	Y	B011	1A	W0111	0170	20		22-13-11	ALL
	Y	B011	1A	W0111	0172	20		27-31-11	ALL
	Y	B013	1A	W0111	2042B	22		22-18-11	ALL
	Y	B013	1A	W0111	2043B	22		22-18-11	ALL
	Y	B013	1A	W0111	2044B	22		22-18-11	ALL
	Y	B015	1A	W0111	2008B	22		22-11-31	ALL
	Y	B015	1A	W0111	2009B	22		22-11-31	ALL
	Y	B015	1A	W0111	2010B	22		22-11-31	ALL
	Y	B015	1A	W0111	2011B	22		22-11-31	ALL
	Y	DED		W0111	2008Z			22-11-31	YC051-YC070
	Y	DED		W0111	2009Z			22-11-31	YC051-YC052
	Y	DED		W0111	2010Z			22-11-31	YC051-YC052
	Y	DED		W0111	2011Z			22-11-31	YC051-YC070
	Y	DED		W0111	2042Z			22-18-11	YC051-YC068
	Y	DED		W0111	2043Z			22-18-11	YC051-YC068
	Y	DED		W0111	2044Z			22-18-11	YC051-YC068
TB1108		S280W555-504					E001-01/ /		ALL
TB1108	Y	S280W555-104					E001-01/ /		ALL
TB1108	Z	S280W555-108					E001-01/ /		ALL
	Y	A001	1A	W0111	2075R	24		34-49-11	ALL
	Y	A001	1A	W0111	2076R	24		34-49-11	ALL
	Y	A001	1A	W0111	2077R	24		34-49-11	ALL
	Y	A003	1A	W0111	2064R	24		34-33-11	ALL
	Y	A003	1A	W0111	2065R	24		34-33-11	ALL
	Y	A003	1A	W0111	2066R	24		34-33-11	ALL
	Y	A007	1A	W0111	0390	20		34-21-21	ALL
	Y	A007	1A	W0111	0391	20		34-21-21	ALL
	Y	A007	1A	W0111	0392	20		34-21-21	ALL
	Y	A009	1A	W0111	0141	20		22-13-11	ALL
	Y	A009	1A	W0111	0142	20		22-13-11	ALL
	Y	A009	1A	W0111	0173	20		22-13-11	ALL
	Y	A009	1A	W0111	0174	20		22-13-11	ALL
	Y	A011	1A	W0111	0095	20		22-13-11	ALL
	Y	A011	1A	W0111	0096	20		22-13-11	ALL
	Y	A011	1A	W0111	0720	24		31-31-15	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB1100

Page 9

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1108		S280W555-504 (continued)					E001-01/ /		ALL
TB1108	Y	S280W555-104 (continued)					E001-01/ /		ALL
TB1108	Z	S280W555-108 (continued)					E001-01/ /		ALL
	Z	A013	1A	W0111	0175	20		22-14-11	ALL
	Z	A013	1A	W0111	0179	20		22-14-11	ALL
	Z	A013	1A	W0111	0180	20		22-14-11	ALL
	Z	A013	1A	W0111	0181	20		22-14-11	YC051-YD155
	Z	A013	1A	W0111	0182	22		22-14-11	ALL
	Z	A013	1A	W0111	0778	22		22-14-11	YD157-YR328
	Y	B001	1A	W0111	2075B	24		34-49-11	ALL
	Y	B001	1A	W0111	2076B	24		34-49-11	ALL
	Y	B001	1A	W0111	2077B	24		34-49-11	ALL
	Y	B003	1A	W0111	2064B	24		34-33-11	ALL
	Y	B003	1A	W0111	2065B	24		34-33-11	ALL
	Y	B003	1A	W0111	2066B	24		34-33-11	ALL
	Y	B009	1A	W0111	0099	20		22-14-11	ALL
	Y	B009	1A	W0111	0190	20		22-14-11	ALL
	Y	B009	1A	W0111	0191	22		22-14-11	ALL
	Y	B011	1A	W0111	0097	20		22-13-11	ALL
	Y	B011	1A	W0111	0098	20		22-13-11	ALL
	Y	B011	1A	W0111	0721	24		31-31-15	ALL
TB1109		S280W601-301					E001-01/ /		ALL
TB1109	Y	S280W555-104					E001-01/ /		ALL
TB1109	Z	S280W555-108					E001-01/ /		ALL
	Y	A001	1A	W0111	0186	22		22-14-11	YC051-YD155
	Y	A001	1A	W0111	0197	22		22-14-11	YC051-YD155
	Y	A001	1A	W0111	0198	22		22-14-11	YC051-YD155
	Y	A003	1A	W0111	0370	24		22-31-52	ALL
	Y	A003	1A	W0111	0371	24		22-31-52	ALL
	Y	A003	1A	W0111	0373	24		22-31-52	ALL
	Y	A005	1A	W0111	2051R	24		27-32-12	ALL
	Y	A005	1A	W0111	2052R	24		27-32-12	YC051-YD155
	Y	A005	1A	W0111	2053R	24		27-32-12	ALL
	Y	A005	1A	W0111	2054R	24		27-32-12	ALL
	Y	A007	1A	W0111	2079R	24		22-31-31	ALL
	Y	A007	1A	W0111	2080R	24		22-31-31	ALL
	Y	A007	1A	W0111	2081R	24		22-31-41	ALL
	Z	A009	1A	W0111	2111R	24		34-21-23	ALL
	Z	A009	1A	W0111	2112R	24		34-21-23	YC051-YD155
	Z	A009	1A	W0111	2113R	24		34-21-23	ALL

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB1100

Page 10

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1109		S280W601-301 (continued)					E001-01/ /		ALL
TB1109	Y	S280W555-104 (continued)					E001-01/ /		ALL
TB1109	Z	S280W555-108 (continued)					E001-01/ /		ALL
	Z	A009	1A	W0111	2114R	24		34-21-23	ALL
	Z	A009	1A	W0111	2115R	24		34-21-23	ALL
	Z	A009	1A	W0111	2207R	24		34-21-23	YC053-YR328
	Y	A013	1A	W0111	0426	22		34-51-41	ALL
	Y	A013	1A	W0111	0427	22		34-51-41	ALL
	Y	A013	1A	W0111	0428	22		34-51-41	ALL
	Y	A015	1A	W0111	0187	22		22-14-11	ALL
	Y	A015	1A	W0111	0189	22		22-14-11	ALL
	Y	A015	1A	W0111	0192	22		22-14-11	ALL
	Y	A015	1A	W0111	0193	22		22-14-11	ALL
	Z	A017	1A	W0111	0026	20		22-11-11	ALL
	Z	A017	1A	W0111	0271	22		22-11-11	ALL
	Z	A017	1A	W0111	0273	22		22-11-11	ALL
	Z	A017	1A	W0111	0275	22		22-11-11	ALL
	Z	A017	1A	W0111	0277	22		22-11-11	ALL
	Z	A021	1A	W0111	0053	20		22-11-12	ALL
	Z	A021	1A	W0111	0054	22		22-11-12	ALL
	Z	A021	1A	W0111	0055	20		22-11-12	ALL
	Z	A021	1A	W0111	0056	20		22-11-12	ALL
	Z	A021	1A	W0111	0128	22		27-62-11	ALL
	Y	B003	1A	W0111	0336	22		22-31-51	ALL
	Y	B003	1A	W0111	0337	22		31-31-15	ALL
	Y	B003	1A	W0111	0338	22		22-31-51	ALL
	Y	B005	1A	W0111	2051B	24		27-32-12	ALL
	Y	B005	1A	W0111	2052B	24		27-32-12	YC051-YD155
	Y	B005	1A	W0111	2053B	24		27-32-12	ALL
	Y	B005	1A	W0111	2054B	24		27-32-12	ALL
	Y	B007	1A	W0111	2079B	24		22-31-31	ALL
	Y	B007	1A	W0111	2080B	24		22-31-31	ALL
	Y	B007	1A	W0111	2081B	24		22-31-41	ALL
	Z	B009	1A	W0111	2111B	24		34-21-23	ALL
	Z	B009	1A	W0111	2112B	24		34-21-23	YC051-YD155
	Z	B009	1A	W0111	2113B	24		34-21-23	ALL
	Z	B009	1A	W0111	2114B	24		34-21-23	ALL
	Z	B009	1A	W0111	2115B	24		34-21-23	ALL
	Z	B009	1A	W0111	2207B	24		34-21-23	YC053-YR328
	Y	B013	1A	W0111	0340	22		22-31-51	ALL
	Y	B013	1A	W0111	0341	22		22-31-51	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB1100

Page 11

Nov 12/2012





# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1109		S280W601-301 (continued)					E001-01/ /		ALL
TB1109	Y	S280W555-104 (continued)					E001-01/ /		ALL
TB1109	Z	S280W555-108 (continued)					E001-01/ /		ALL
	Y	B013	1A	W0111	0342	24		31-31-15	ALL
	Y	B015	1A	W0111	0137	20		22-18-11	ALL
	Y	B015	1A	W0111	0138	20		22-18-11	ALL
	Y	B015	1A	W0111	0139	20		22-18-11	ALL
	Z	B017	1A	W0111	0036	20		22-11-12	ALL
	Z	B017	1A	W0111	0038	20		22-11-12	ALL
	Z	B017	1A	W0111	0039	20		22-11-12	ALL
	Z	B017	1A	W0111	0040	20		22-11-12	ALL
	Z	B017	1A	W0111	0041	20		22-11-12	YC051-YD155, YD158-YR328
	Z	B017	1A	W0111	0042	20		22-11-12	ALL
	Z	B017	1A	W0111	0053	20		22-11-12	ALL
TB1110		S280W601-301					E001-01/ /		ALL
TB1110	Y	S280W555-104					E001-01/ /		ALL
TB1110	Z	S280W555-108					E001-01/ /		ALL
	Y	A001	1A	W0111	2061R	24		27-32-22	YC051-YD155
	Y	A001	1A	W0111	2062R	24		27-32-22	YC051-YD155
	Y	A001	1A	W0111	2063R	24		27-32-22	YC051-YD155
	Y	A003	1A	W0111	0534	24		34-49-11	YC053-YR328
	Z	A005	1A	W0111	2024R	24		22-11-51	ALL
	Z	A005	1A	W0111	2025R	24		22-11-51	ALL
	Z	A005	1A	W0111	2026R	24		22-11-51	ALL
	Z	A005	1A	W0111	2027R	24		22-11-51	YC051-YD155
	Z	A005	1A	W0111	2028R	24		22-11-51	ALL
	Z	A005	1A	W0111	2029R	24		22-11-51	ALL
	Z	A005	1A	W0111	2045R	24		22-11-51	YD158-YR328
	Z	A005	1A	W0111	2046R	24		22-11-51	YD158-YR328
	Z	A005	1A	W0111	2230R	24		22-11-51	YD157-YR328
	Z	A009	1A	W0111	2095R	24		34-21-13	ALL
	Z	A009	1A	W0111	2096R	24		34-21-13	YC051-YD155
	Z	A009	1A	W0111	2097R	24		34-21-13	ALL
	Z	A009	1A	W0111	2098R	24		34-21-13	ALL
	Z	A009	1A	W0111	2099R	24		34-21-13	ALL
	Z	A009	1A	W0111	2101R	24		34-21-13	ALL
	Z	A009	1A	W0111	2102R	24		34-21-13	ALL
	Y	A013	1A	W0111	0061	22		22-11-14	ALL
	Y	A013	1A	W0111	0063	24		22-11-14	ALL
	Y	A013	1A	W0111	0064	22		22-11-14	YC051-YD155

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB1100

Page 12

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1110		S280W601-301 (continued)					E001-01/ /		ALL
TB1110	Y	S280W555-104 (continued)					E001-01/ /		ALL
TB1110	Z	S280W555-108 (continued)					E001-01/ /		ALL
	Y	A013	1A	W0111	0065	22		22-11-14	ALL
	Y	A015	1A	W0111	0265	24		34-49-11	YC051-YC052
	Y	A015	1A	W0111	0266	24		34-49-11	ALL
	Y	A015	1A	W0111	0267	24		34-49-11	YC051-YC052
	Y	A015	1A	W0111	0507	24		34-49-11	YC053-YR328
	Y	A015	1A	W0111	0508	24		34-49-11	YC053-YR328
	Y	A015	1A	W0111	0510	24		34-49-11	YD154-YR308, YR312-YR328
	Z	A017	1A	W0111	2020R	24		22-11-51	ALL
	Z	A017	1A	W0111	2021R	24		22-11-51	ALL
	Z	A017	1A	W0111	2022R	24		22-11-51	ALL
	Z	A017	1A	W0111	2023R	24		22-11-51	ALL
	Z	A017	1A	W0111	2059R	24		22-11-51	ALL
	Z	A017	1A	W0111	2171R	24		22-11-51	ALL
	Y	A021	1A	W0111	2104R	24		34-21-14	ALL
	Y	A021	1A	W0111	2105R	24		34-21-14	ALL
	Y	A021	1A	W0111	2106R	24		34-21-14	ALL
	Y	A021	1A	W0111	2107R	24		34-21-14	ALL
	Y	A023	1A	W0111	2117R	24		34-61-14	YC051-YD155
	Y	A023	1A	W0111	2118R	24		34-61-14	YC051-YD155
	Y	A023	1A	W0111	2119R	24		34-61-14	YC051-YD155
	Y	B001	1A	W0111	2061B	24		27-32-22	YC051-YD155
	Y	B001	1A	W0111	2062B	24		27-32-22	YC051-YD155
	Y	B001	1A	W0111	2063B	24		27-32-22	YC051-YD155
	Z	B005	1A	W0111	2024B	24		22-11-51	ALL
	Z	B005	1A	W0111	2025B	24		22-11-51	ALL
	Z	B005	1A	W0111	2026B	24		22-11-51	ALL
	Z	B005	1A	W0111	2027B	24		22-11-51	YC051-YD155
	Z	B005	1A	W0111	2028B	24		22-11-51	ALL
	Z	B005	1A	W0111	2029B	24		22-11-51	ALL
	Z	B005	1A	W0111	2045B	24		22-11-51	YD158-YR328
	Z	B005	1A	W0111	2046B	24		22-11-51	YD158-YR328
	Z	B005	1A	W0111	2230B	24		22-11-51	YD157-YR328
	Z	B009	1A	W0111	2095B	24		34-21-13	ALL
	Z	B009	1A	W0111	2096B	24		34-21-13	YC051-YD155
	Z	B009	1A	W0111	2097B	24		34-21-13	ALL
	Z	B009	1A	W0111	2098B	24		34-21-13	ALL
	Z	B009	1A	W0111	2099B	24		34-21-13	ALL
	Z	B009	1A	W0111	2101B	24		34-21-13	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB1100

Page 13

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1110		S280W601-301 (continued)					E001-01/ /		ALL
TB1110	Y	S280W555-104 (continued)					E001-01/ /		ALL
TB1110	Z	S280W555-108 (continued)					E001-01/ /		ALL
	Z	B009	1A	W0111	2102B	24		34-21-13	ALL
	Y	B013	1A	W0111	0590	22		30-11-11	ALL
	Y	B013	1A	W0111	0591	22		30-11-11	ALL
	Y	B013	1A	W0111	0592	22		30-11-11	ALL
	Y	B015	1A	W0111	0279	24		34-49-11	ALL
	Y	B015	1A	W0111	0280	24		34-49-11	ALL
	Y	B015	1A	W0111	0281	24		34-49-11	ALL
	Z	B017	1A	W0111	2020B	24		22-11-51	ALL
	Z	B017	1A	W0111	2021B	24		22-11-51	ALL
	Z	B017	1A	W0111	2022B	24		22-11-51	ALL
	Z	B017	1A	W0111	2023B	24		22-11-51	ALL
	Z	B017	1A	W0111	2059B	24		22-11-51	ALL
	Z	B017	1A	W0111	2171B	24		22-11-51	ALL
	Y	B021	1A	W0111	2104B	24		34-21-14	ALL
	Y	B021	1A	W0111	2105B	24		34-21-14	ALL
	Y	B021	1A	W0111	2106B	24		34-21-14	ALL
	Y	B021	1A	W0111	2107B	24		34-21-14	ALL
	Y	B023	1A	W0111	2117B	24		34-61-14	YC051-YD155
	Y	B023	1A	W0111	2118B	24		34-61-14	YC051-YD155
	Y	B023	1A	W0111	2119B	24		34-61-14	YC051-YD155
TB1111		S280W555-504					E001-01/ /		YD158-YR328
TB1111	Y	S280W555-104					E001-01/ /		YD158-YR328
TB1111	Z	S280W555-108					E001-01/ /		YD158-YR328
	Y	A001	1A	W0111	2241R	24		21-31-24	YD158-YR328
	Y	A001	1A	W0111	2242R	24		21-31-24	YD158-YR328
	Y	A001	1A	W0111	2255R	24		34-21-14	YD158-YR328
	Y	A003	1A	W0111	2243R	24		21-31-24	YD158-YR328
	Y	A003	1A	W0111	2244R	24		21-31-24	YD158-YR328
	Y	A003	1A	W0111	2254R	24		27-32-12	YD158-YR328
	Y	A005	1A	W0111	2245R	24		21-31-24	YD158-YR328
	Y	A005	1A	W0111	2246R	24		21-31-24	YD158-YR328
	Y	A005	1A	W0111	2256R	24		34-21-24	YD158-YR328
	Y	A007	1A	W0111	2247R	24		21-31-24	YD158-YR328
	Y	A007	1A	W0111	2248R	24		21-31-24	YD158-YR328
	Y	A007	1A	W0111	2253R	24		27-32-22	YD158-YR328
	Y	A009	1A	W0111	0860	24		21-31-24	YD158-YR328
	Y	A009	1A	W0111	0861	24		21-31-24	YD158-YR328

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB1100

Page 14

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1111		S280W555-504 (continued)					E001-01/ /		YD158-YR328
TB1111	Y	S280W555-104 (continued)					E001-01/ /		YD158-YR328
TB1111	Z	S280W555-108 (continued)					E001-01/ /		YD158-YR328
	Y	A009	1A	W0111	0862	24		21-31-24	YD158-YR328
	Y	A011	1A	W0111	0810	24		21-51-21	YD158-YR328
	Y	A011	1A	W0111	0852	24		21-31-24	YD158-YR328
	Y	A011	1A	W0111	0853	24		21-31-24	YD158-YR328
	Y	B001	1A	W0111	2241B	24		21-31-24	YD158-YR328
	Y	B001	1A	W0111	2242B	24		21-31-24	YD158-YR328
	Y	B001	1A	W0111	2255B	24		34-21-14	YD158-YR328
	Y	B003	1A	W0111	2243B	24		21-31-24	YD158-YR328
	Y	B003	1A	W0111	2244B	24		21-31-24	YD158-YR328
	Y	B003	1A	W0111	2254B	24		27-32-12	YD158-YR328
	Y	B005	1A	W0111	2245B	24		21-31-24	YD158-YR328
	Y	B005	1A	W0111	2246B	24		21-31-24	YD158-YR328
	Y	B005	1A	W0111	2256B	24		34-21-24	YD158-YR328
	Y	B007	1A	W0111	2247B	24		21-31-24	YD158-YR328
	Y	B007	1A	W0111	2248B	24		21-31-24	YD158-YR328
	Y	B007	1A	W0111	2253B	24		27-32-22	YD158-YR328
	Y	B009	1A	W0111	0808	20		21-31-23	YD158-YR328
	Y	B009	1A	W0111	0865	20		21-31-23	YD158-YR328
	Y	B009	1A	W0111	0866	20		21-31-23	YD158-YR328
	Y	B009	1A	W0111	0867	20		21-31-23	YD158-YR328
	Y	B011	1A	W0111	0809	24		21-51-11	YD158-YR328
	Y	B011	1A	W0111	0854	24		21-31-24	YD158-YR328
	Y	B011	1A	W0111	0855	24		21-31-24	YD158-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB1100

Page 15 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1201		S280W601-301					E001-02/ /		ALL
TB1201	Y	S280W555-104					E001-02/ /		ALL
TB1201	Z	S280W555-108					E001-02/ /		ALL
	Z	A001	1A	W0121	2014R	24		34-31-11	ALL
	Z	A001	1A	W0121	2015R	24		34-31-11	ALL
	Z	A001	1A	W0121	2016R	24		34-31-11	ALL
	Z	A001	1A	W0121	2017R	24		34-31-11	ALL
	Z	A001	1A	W0121	2018R	24		34-31-11	ALL
	Z	A001	1A	W0121	2020R	24		34-31-11	YC051-YD158, YL951-YR328
	Z	A001	1A	W0121	2021R	24		34-31-11	ALL
	Y	A005	1A	W0121	2023R	24		34-51-11	ALL
	Y	A005	1A	W0121	2024R	24		34-51-11	ALL
	Y	A005	1A	W0121	2025R	24		34-51-11	ALL
	Y	A007	1A	W0121	2020R	24		34-31-11	YL951-YR328
	Y	A007	1A	W0121	2085R	24		34-31-11	YL951-YR328
	Y	A007	1A	W0121	2086R	24		34-31-11	YL951-YR328
	Z	A009	1A	W0121	2026R	24		34-51-11	ALL
	Z	A009	1A	W0121	2027R	24		34-51-11	ALL
	Z	A009	1A	W0121	2028R	24		34-51-11	ALL
	Z	A009	1A	W0121	2029R	24		34-51-11	ALL
	Z	A009	1A	W0121	2030R	24		34-51-11	ALL
	Z	A009	1A	W0121	2031R	24		34-51-11	ALL
	Z	A009	1A	W0121	2032R	24		34-51-11	ALL
	Y	A013	1A	W0121	2036R	24		34-31-11	ALL
	Y	A013	1A	W0121	2037R	24		34-31-11	ALL
	Y	A013	1A	W0121	2038R	24		34-31-11	ALL
	Y	A015	1A	W0121	0039	22		22-11-18	ALL
	Y	A015	1A	W0121	0040	22		22-11-18	ALL
	Y	A015	1A	W0121	0065	22		22-11-18	ALL
	Y	A015	1A	W0121	0066	22		22-11-18	ALL
	Y	A017	1A	W0121	0073	24		34-31-11	YC051-YD170
	Y	A017	1A	W0121	0074	24		34-31-11	ALL
	Y	A017	1A	W0121	0075	24		34-31-11	ALL
	Y	A019	1A	W0121	2059R	24		34-58-11	YC053-YR328
	Y	A019	1A	W0121	2065R	24		34-58-11	YC053-YR328
	Y	A019	1A	W0121	2066R	24		34-58-11	YC053-YR328
	Y	A019	1A	W0121	2515R	22		34-53-11	YD158-YR328
	Z	B001	1A	W0121	2014B	24		34-31-11	ALL
	Z	B001	1A	W0121	2015B	24		34-31-11	ALL
	Z	B001	1A	W0121	2016B	24		34-31-11	ALL
	Z	B001	1A	W0121	2017B	24		34-31-11	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB1200

Page 1

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1201		S280W601-301 (continued)					E001-02/ /		ALL
TB1201	Y	S280W555-104 (continued)					E001-02/ /		ALL
TB1201	Z	S280W555-108 (continued)					E001-02/ /		ALL
	Z	B001	1A	W0121	2018B	24		34-31-11	ALL
	Z	B001	1A	W0121	2020B	24		34-31-11	YC051-YD158, YL951-YR328
	Z	B001	1A	W0121	2021B	24		34-31-11	ALL
	Y	B005	1A	W0121	2023B	24		34-51-11	ALL
	Y	B005	1A	W0121	2024B	24		34-51-11	ALL
	Y	B005	1A	W0121	2025B	24		34-51-11	ALL
	Y	B007	1A	W0121	2020B	24		34-31-11	YL951-YR328
	Y	B007	1A	W0121	2085B	24		34-31-11	YL951-YR328
	Y	B007	1A	W0121	2086B	24		34-31-11	YL951-YR328
	Z	B009	1A	W0121	2026B	24		34-51-11	ALL
	Z	B009	1A	W0121	2027B	24		34-51-11	ALL
	Z	B009	1A	W0121	2028B	24		34-51-11	ALL
	Z	B009	1A	W0121	2029B	24		34-51-11	ALL
	Z	B009	1A	W0121	2030B	24		34-51-11	ALL
	Z	B009	1A	W0121	2031B	24		34-51-11	ALL
	Z	B009	1A	W0121	2032B	24		34-51-11	ALL
	Y	B013	1A	W0121	2036B	24		34-31-11	ALL
	Y	B013	1A	W0121	2037B	24		34-31-11	ALL
	Y	B013	1A	W0121	2038B	24		34-31-11	ALL
	Y	B015	1A	W0121	0054	22		34-51-41	ALL
	Y	B015	1A	W0121	0055	22		34-51-41	ALL
	Y	B015	1A	W0121	0056	22		34-51-41	ALL
	Y	B017	1A	W0121	0030	22		34-51-41	YL951-YR328
	Y	B017	1A	W0121	0086	22		34-51-41	YL951-YR328
	Y	B017	1A	W0121	0087	22		34-51-41	YL951-YR328
	Y	B019	1A	W0121	2059B	24		34-58-11	YC053-YR328
	Y	B019	1A	W0121	2065B	24		34-58-11	YC053-YR328
	Y	B019	1A	W0121	2066B	24		34-58-11	YC053-YR328
	Y	B019	1A	W0121	2515B	22		34-53-11	YD158-YR328
TB1202		S280W601-301					E001-02/ /		ALL
TB1202	Y	S280W555-104					E001-02/ /		ALL
	Y	A001	1A	W0121	0001	20		34-53-11	ALL
	Y	A001	1A	W0121	0002	20		34-53-11	ALL
	Y	A001	1A	W0121	0003	20		34-53-11	ALL
	Y	A003	1A	W0121	0069	24		34-53-11	ALL
	Y	A003	1A	W0121	0070	24		34-53-11	ALL
	Y	A003	1A	W0121	0071	24		34-53-11	ALL

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB1200

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB1202		S280W601-301 (continued)					E001-02/ /		ALL
TB1202	Y	S280W555-104 (continued)					E001-02/ /		ALL
	Y	A017	1A	W0121	2005R	24		34-45-21	YD158-YR328
	Y	A017	1A	W0121	2062R	24		34-45-21	YD158-YR328
	Y	A017	1A	W0121	2064R	24		34-45-21	YD158-YR328
	Y	B001	1A	W0121	0226	24		34-53-11	ALL
	Y	B001	1A	W0121	0227	24		34-53-11	ALL
	Y	B001	1A	W0121	0228	24		34-53-11	ALL
	Y	B017	1A	W0121	2005B	24		34-45-21	YD158-YR328
	Y	B017	1A	W0121	2062B	24		34-45-21	YD158-YR328
	Y	B017	1A	W0121	2064B	24		34-45-21	YD158-YR328
TB1203		S280W601-301					E001-02/ /		ALL
TB1204		S280W601-301					E001-02/ /		ALL
TB1204	Y	S280W555-104					E001-02/ /		ALL
	Y	A001	1A	W0121	2006R	24		34-55-11	ALL
	Y	A001	1A	W0121	2007R	24		34-55-11	ALL
	Y	A001	1A	W0121	2045R	24		34-61-14	ALL
	Y	A001	1A	W0121	2514R	24		34-61-14	YD158-YR328
	Y	A005	1A	W0121	2011R	24		34-55-11	ALL
	Y	A005	1A	W0121	2012R	24		34-55-11	ALL
	Y	A005	1A	W0121	2013R	24		34-55-11	ALL
	Y	A005	1A	W0121	2034R	24		34-55-11	ALL
	Y	B001	1A	W0121	2006B	24		34-55-11	ALL
	Y	B001	1A	W0121	2007B	24		34-55-11	ALL
	Y	B001	1A	W0121	2045B	24		34-61-14	ALL
	Y	B001	1A	W0121	2514B	24		34-61-14	YD158-YR328
	Y	B005	1A	W0121	2011B	24		34-55-11	ALL
	Y	B005	1A	W0121	2012B	24		34-55-11	ALL
	Y	B005	1A	W0121	2013B	24		34-55-11	ALL
	Y	B005	1A	W0121	2034B	24		34-55-11	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB1200

Page 3 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1301		S280W601-301					E001-03/ /		ALL
TB1301	W	S280W555-206					E001-03/ /		ALL
TB1301	Y	S280W555-104					E001-03/ /		ALL
TB1301	Z	S280W555-108					E001-03/ /		ALL
	W	A001	1	W0131	0029	16		23-12-11	YC051-YD157
	W	A001	1	W0131	0030	16		23-12-11	YC051-YD157
	W	A001	1	W0131	0031	16		23-12-11	YC051-YD157
	W	A001	1	W0131	0032	18		23-12-11	YC051-YD157
	W	A001	1	W0131	0125	20		23-12-11	YC051-YD157
	Y	A005	1A	W0131	0036	24		23-12-11	ALL
	Y	A005	1A	W0131	0037	24		23-12-11	ALL
	Y	A005	1A	W0131	0038	24		23-12-11	ALL
TB1302		S280W601-301					E001-03/ /		ALL
TB1302	Y	S280W555-104					E001-03/ /		ALL
TB1302	Z	S280W555-108					E001-03/ /		ALL
	Y	A001	1A	W0131	2003B	24		23-31-01	ALL
	Y	A001	1A	W0131	2009B	24		23-31-02	ALL
	Y	A001	1A	W0131	2024B	24		23-31-01	ALL
	Y	A007	1A	W0131	2001B	24		23-31-01	YC051-YN260
	Y	A007	1A	W0131	2002B	24		23-31-01	YC051-YN260
	Y	A007	1A	W0131	2023B	24		23-31-01	YC051-YN260
	Y	A007	1A	W0131	2025B	24		23-31-01	YL951-YL999
	Z	A009	1A	W0131	0009	24		23-31-02	ALL
	Z	A009	1A	W0131	0010	20		23-31-01	ALL
	Z	A009	1A	W0131	0011	20		23-31-01	ALL
	Z	A009	1A	W0131	0012	20		23-31-01	ALL
	Z	A009	1A	W0131	0013	20		23-31-01	YC051-YC059
	Z	A009	1A	W0131	0146	22		23-34-01	YC051-YC059
	Z	A009	1A	W0131	0149	22		23-31-06	YC051-YN260
	Z	A013	1A	W0131	0021	24		23-31-01	ALL
	Z	A013	1A	W0131	0022	24		23-31-04	ALL
	Z	A013	1A	W0131	0025	22		23-31-06	YD158-YN260
	Z	A013	1A	W0131	0132	22		23-31-06	YC051-YD157
	Z	A013	1A	W0131	0143	24		23-34-01	YC051-YD170
	Z	A013	1A	W0131	0143	22		23-34-01	YL951-YN260
	Z	A013	1A	W0131	0143	22		44-21-22	YN501-YR328
	Z	A017	1A	W0131	2006R	22		23-31-02	ALL
	Z	A017	1A	W0131	2007R	22		23-31-02	ALL
	Z	A017	1A	W0131	2010R	22		23-31-04	ALL
	Z	A017	1A	W0131	2027R	22		44-21-26	YN501-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB1300

Page 1

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1302		S280W601-301 (continued)					E001-03/ /		ALL
TB1302	Y	S280W555-104 (continued)					E001-03/ /		ALL
TB1302	Z	S280W555-108 (continued)					E001-03/ /		ALL
	Z	A017	1A	W0131	2029R	22		44-21-22	YN501-YR328
	Z	A017	1A	W0131	2506R	24		23-34-01	YC051-YD170
	Z	A017	1A	W0131	2506R	22		23-34-01	YL951-YN260
	Z	A021	1A	W0131	2001B	24		23-31-01	YN501-YR328
	Z	A021	1A	W0131	2002B	24		23-31-01	YN501-YR328
	Z	A021	1A	W0131	2023B	24		23-31-01	YN501-YR328
	Z	A021	1A	W0131	2025B	24		23-31-01	YR301-YR328
	Y	B001	1A	W0131	0136	22		23-31-06	YC051-YD157
	Y	B001	1A	W0131	0138	22		23-31-06	YC051-YD157
	Y	B001	1A	W0131	0148	22		23-31-06	YC051-YD157
	Y	B003	1A	W0131	2003R	24		23-31-01	ALL
	Y	B003	1A	W0131	2009R	24		23-31-02	ALL
	Y	B003	1A	W0131	2024R	24		23-31-01	ALL
	Y	B007	1A	W0131	0023	24		23-31-04	YL951-YL999, YR301-YR328
	Y	B007	1A	W0131	0051	24		23-31-04	YL951-YL999, YR301-YR328
	Y	B007	1A	W0131	0052	24		23-31-04	YL951-YL999, YR301-YR328
	Z	B009	1A	W0131	0014	24		23-31-01	ALL
	Z	B009	1A	W0131	0015	24		23-31-01	ALL
	Z	B009	1A	W0131	0020	24		23-31-04	ALL
	Z	B009	1A	W0131	0026	22		23-31-06	YD158-YN260
	Z	B009	1A	W0131	0133	22		23-31-06	YC051-YD157
	Z	B009	1A	W0131	0142	24		23-34-01	YC051-YD170
	Z	B009	1A	W0131	0142	22		23-34-01	YL951-YN260
	Z	B009	1A	W0131	0142	22		44-21-22	YN501-YR328
	Z	B013	1A	W0131	2001R	24		23-31-01	ALL
	Z	B013	1A	W0131	2002R	24		23-31-01	ALL
	Z	B013	1A	W0131	2023R	24		23-31-01	ALL
	Z	B013	1A	W0131	2025R	24		23-31-01	YL951-YL999, YR301-YR328
	Z	B017	1A	W0131	0008	22		23-31-02	YC051-YR313
	Z	B017	1A	W0131	2006B	22		23-31-02	ALL
	Z	B017	1A	W0131	2007B	22		23-31-02	ALL
	Z	B017	1A	W0131	2010B	22		23-31-04	ALL
	Z	B017	1A	W0131	2027B	22		44-21-26	YN501-YR328
	Z	B017	1A	W0131	2029B	22		44-21-22	YN501-YR328
	Z	B017	1A	W0131	2506B	24		23-34-01	YC051-YD170
	Z	B017	1A	W0131	2506B	22		23-34-01	YL951-YN260
	Z	DED		W0131	2506Z			23-34-01	YC051-YN260

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB1300

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1303		S280W601-301					E001-03/ /		ALL
TB1303	Y	S280W555-104					E001-03/ /		ALL
	Y	A003	1A	W0131	0061	24		32-41-11	ALL
	Y	A003	1A	W0131	0093	24		32-41-11	ALL
	Y	A003	1A	W0131	0094	24		32-41-11	ALL
	Y	A005	1A	W0131	3501Y	24		23-42-12	ALL
	Y	A005	1A	W0131	3502Y	24		23-42-12	ALL
	Y	A005	1A	W0131	3503Y	24		23-42-12	ALL
	Y	A005	1A	W0131	3504Y	24		23-42-12	ALL
	Y	A007	1A	W0131	3501B	24		23-42-12	ALL
	Y	A007	1A	W0131	3502B	24		23-42-12	ALL
	Y	A007	1A	W0131	3503B	24		23-42-12	ALL
	Y	A007	1A	W0131	3504B	24		23-42-12	ALL
	Y	A009	1A	W0131	0258	22		23-32-12	YC051-YD157
	Y	B003	1A	W0131	0073	24		32-42-11	ALL
	Y	B003	1A	W0131	0074	24		32-42-11	ALL
	Y	B003	1A	W0131	0119	24		32-42-11	ALL
	Y	B005	1A	W0131	3501Z			23-42-12	ALL
	Y	B005	1A	W0131	3502Z			23-42-12	ALL
	Y	B005	1A	W0131	3503Z			23-42-12	ALL
	Y	B005	1A	W0131	3504Z			23-42-12	ALL
	Y	B007	1A	W0131	3501R	24		23-42-12	ALL
	Y	B007	1A	W0131	3502R	24		23-42-12	ALL
	Y	B007	1A	W0131	3503R	24		23-42-12	ALL
	Y	B007	1A	W0131	3504R	24		23-42-12	ALL
	Y	B009	1A	W0131	0152	22		23-32-12	YC051-YD157
TB1304		S280W601-301					E001-03/ /		ALL
TB1304	Y	S280W555-104					E001-03/ /		ALL
TB1304	Z	S280W555-108					E001-03/ /		ALL
	Y	A001	1A	W0131	0131	22		23-31-06	YC051-YD157
	Y	A003	1A	W0131	0040	22		23-42-12	YC051-YN260
	Y	A003	1A	W0131	0041	22		23-42-12	YC051-YN260
	Y	A003	1A	W0131	0042	22		23-42-12	YC051-YN260
	Y	A003	1A	W0131	0523	22		23-42-12	YR315-YR328
	Y	A003	1A	W0131	0525	22		23-42-12	YR315-YR328
	Y	A003	1A	W0131	0526	22		23-42-12	YR315-YR328
	Z	A005	1A	W0131	0138	22		44-21-22	YN501-YR328
	Z	A005	1A	W0131	0144	22		44-21-22	YN501-YR328
	Y	A005	1A	W0131	0148	22		23-31-06	YC051-YD157
	Y	A005	1A	W0131	0155	24		23-31-06	YC051-YD157

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB1300

Page 3

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB1304		S280W601-301 (continued)					E001-03/ /		ALL
TB1304	Y	S280W555-104 (continued)					E001-03/ /		ALL
TB1304	Z	S280W555-108 (continued)					E001-03/ /		ALL
	Z	A005	1A	W0131	0256	22		23-34-01	YL951-YN260
	Z	A005	1A	W0131	0257	22		23-34-01	YL951-YN260
	Z	A005	1A	W0131	0483	22		44-21-26	YN501-YR328
	Z	A009	1A	W0131	0026	22		23-31-06	YC051-YD157
	Z	A009	1A	W0131	0131	22		23-31-06	YC051-YD157
	Y	A009	1A	W0131	0256	22		44-21-22	YN501-YR328
	Z	A013	1A	W0131	0136	22		23-31-06	YC051-YD157
	Z	A013	1A	W0131	0138	22		23-31-06	YD158-YN260
	Z	A013	1A	W0131	0144	22		44-21-22	YN501-YR328
	Z	A013	1A	W0131	0155	24		23-34-01	YD158-YD170
	Z	A013	1A	W0131	0256	22		23-34-01	YL951-YN260
	Z	A013	1A	W0131	0256	22		44-21-22	YN501-YR328
	Z	A013	1A	W0131	0271	22		23-34-01	YL951-YN260
	Y	A017	1A	W0131	0164	22		23-34-01	YL951-YN260
	Y	A017	1A	W0131	0251	22		23-34-01	YL951-YN260
	Y	A019	1A	W0131	0164	22		44-21-22	YN501-YR328
	Y	A019	1A	W0131	0251	22		23-34-01	YL951-YN260
	Y	A019	1A	W0131	0252	22		23-34-01	YL951-YN260
	Y	A019	1A	W0131	0252	22		44-21-22	YN501-YR328
	Y	A021	1A	W0131	0251	22		44-21-22	YN501-YR328
	Y	A021	1A	W0131	0252	22		23-34-01	YL951-YN260
	Y	A021	1A	W0131	0252	22		44-21-22	YN501-YR328
	Y	A021	1A	W0131	0253	22		23-34-01	YL951-YN260
	Y	B001	1A	W0131	0132	22		23-31-06	YC051-YD157
	Y	B005	1A	W0131	0147	22		23-31-06	YC051-YD157
	Z	B005	1A	W0131	0150	22		44-21-22	YN501-YR328
	Z	B005	1A	W0131	0253	22		23-34-01	YL951-YN260
	Z	B005	1A	W0131	0260	22		44-21-22	YN501-YR328
	Z	B009	1A	W0131	0133	22		23-31-06	YC051-YD157
	Y	B009	1A	W0131	0251	22		44-21-22	YN501-YR328
	Z	B013	1A	W0131	0028	22		23-31-06	YC051-YN260
	Z	B013	1A	W0131	0144	24		23-34-01	YC051-YD170
	Z	B013	1A	W0131	0144	22		23-34-01	YL951-YN260
	Z	B013	1A	W0131	0150	22		23-31-06	YC051-YN260
	Z	B013	1A	W0131	0271	22		44-21-22	YN501-YR328
	Y	B017	1A	W0131	0144	22		23-34-01	YL951-YN260
	Y	B019	1A	W0131	0143	22		23-34-01	YL951-YN260
	Y	B019	1A	W0131	0143	22		44-21-22	YN501-YR328

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB1300

Page 4

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1304		S280W601-301 (continued)					E001-03/ /		ALL
TB1304	Y	S280W555-104 (continued)					E001-03/ /		ALL
TB1304	Z	S280W555-108 (continued)					E001-03/ /		ALL
	Y	B021	1A	W0131	0142	22		23-34-01	YL951-YN260
	Y	B021	1A	W0131	0142	22		44-21-22	YN501-YR328
	Y	CAP	Y	W0131	0025	22		SPARE	YC051-YC052

For training purposes only!

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB1300

Page 5 End

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB1401		S280W601-301					E001-04/ /		ALL
TB1401	Y	S280W555-104					E001-04/ /		ALL
	Y	A001	1A	W0141	0003	20		22-11-11	ALL
	Y	A001	1A	W0141	0010	22		22-11-11	ALL
	Y	A001	1A	W0141	0011	22		22-11-11	ALL
	Y	A003	1A	W0141	0005	20		22-11-11	ALL
	Y	A003	1A	W0141	0014	22		22-11-11	ALL
	Y	A003	1A	W0141	0015	22		22-11-11	ALL
	Y	A005	1A	W0141	0033	20		22-11-12	ALL
	Y	A005	1A	W0141	0035	22		22-11-12	ALL
	Y	A005	1A	W0141	0036	20		22-11-12	ALL
	Y	A009	1A	W0141	0061	22		22-11-18	ALL
	Y	A009	1A	W0141	0062	22		22-11-18	ALL
	Y	A009	1A	W0141	0063	22		22-11-18	ALL
	Y	A009	1A	W0141	0064	22		22-11-18	ALL
	Y	A011	1A	W0141	2010R	22		22-11-31	ALL
	Y	A011	1A	W0141	2012R	22		22-11-31	ALL
	Y	A011	1A	W0141	2013R	22		22-11-31	ALL
	Y	A011	1A	W0141	2014R	22		22-11-31	ALL
	Y	A013	1A	W0141	2017R	24		22-11-51	ALL
	Y	A013	1A	W0141	2018R	24		22-11-51	ALL
	Y	A013	1A	W0141	2019R	24		22-11-51	ALL
	Y	A013	1A	W0141	2024R	24		22-11-51	ALL
	Y	A015	1A	W0141	0090	22		22-12-41	ALL
	Y	A015	1A	W0141	0091	20		22-12-41	ALL
	Y	A015	1A	W0141	0092	20		22-12-41	ALL
	Y	A017	1A	W0141	0106	22		22-14-11	ALL
	Y	A017	1A	W0141	0107	22		22-14-11	ALL
	Y	A017	1A	W0141	0114	22		22-14-11	ALL
	Y	A019	1A	W0141	0118	22		22-18-11	ALL
	Y	A019	1A	W0141	0119	20		22-18-11	ALL
	Y	A019	1A	W0141	0120	22		22-18-11	ALL
	Y	A021	1A	W0141	0720	22		34-51-41	ALL
	Y	A021	1A	W0141	0721	22		34-51-41	ALL
	Y	A021	1A	W0141	0722	22		34-51-41	ALL
	Y	B001	1A	W0141	0004	20		22-11-11	ALL
	Y	B001	1A	W0141	0012	22		22-11-11	ALL
	Y	B001	1A	W0141	0013	22		22-11-11	ALL
	Y	B003	1A	W0141	0051	20		22-11-11	YC051-YD155
	Y	B003	1A	W0141	0052	20		22-11-11	YC051-YD155
	Y	B003	1A	W0141	0053	20		22-11-11	YC051-YD155

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB1400

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1401		S280W601-301 (continued)					E001-04/ /		ALL
TB1401	Y	S280W555-104 (continued)					E001-04/ /		ALL
	Y	B005	1A	W0141	0037	20		22-11-12	ALL
	Y	B005	1A	W0141	0038	22		22-11-12	ALL
	Y	B005	1A	W0141	0039	20		22-11-12	ALL
	Y	B007	1A	W0141	0045	24		22-11-14	ALL
	Y	B007	1A	W0141	0046	22		22-11-14	ALL
	Y	B007	1A	W0141	0047	22		22-11-14	ALL
	Y	B009	1A	W0141	0066	22		22-11-31	ALL
	Y	B009	1A	W0141	0067	22		22-11-31	ALL
	Y	B009	1A	W0141	0068	20		22-11-31	ALL
	Y	B011	1A	W0141	2010B	22		22-11-31	ALL
	Y	B011	1A	W0141	2012B	22		22-11-31	ALL
	Y	B011	1A	W0141	2013B	22		22-11-31	ALL
	Y	B011	1A	W0141	2014B	22		22-11-31	ALL
	Y	B013	1A	W0141	2017B	24		22-11-51	ALL
	Y	B013	1A	W0141	2018B	24		22-11-51	ALL
	Y	B013	1A	W0141	2019B	24		22-11-51	ALL
	Y	B013	1A	W0141	2024B	24		22-11-51	ALL
	Y	B015	1A	W0141	0111	22		22-14-11	ALL
	Y	B015	1A	W0141	0112	22		22-14-11	ALL
	Y	B015	1A	W0141	0117	22		22-14-11	ALL
	Y	B015	1A	W0141	0801	24		31-31-15	ALL
	Y	B017	1A	W0141	0108	20		22-14-11	ALL
	Y	B017	1A	W0141	0109	20		22-14-11	ALL
	Y	B017	1A	W0141	0110	20		22-14-11	YC051-YD155
	Y	B017	1A	W0141	0115	20		22-14-11	ALL
	Y	B019	1A	W0141	0726	22		34-51-41	YL951-YR328
	Y	B019	1A	W0141	0727	22		34-51-41	YL951-YR328
	Y	B019	1A	W0141	0728	22		34-51-41	YL951-YR328
	Y	B021	1A	W0141	0723	22		34-51-41	ALL
	Y	B021	1A	W0141	0724	22		34-51-41	ALL
	Y	B021	1A	W0141	0725	22		34-51-41	ALL
TB1402		S280W601-301					E001-04/ /		ALL
TB1402	Y	S280W555-104					E001-04/ /		ALL
TB1402	Z	S280W555-108					E001-04/ /		ALL
	Z	A001	1A	W0141	0132	22		22-11-11	ALL
	Z	A001	1A	W0141	0134	22		22-11-11	ALL
	Z	A001	1A	W0141	0136	22		22-11-11	ALL
	Z	A001	1A	W0141	0138	22		22-11-11	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB1400

Page 2

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB1402		S280W601-301 (continued)					E001-04/ /		ALL
TB1402	Y	S280W555-104 (continued)					E001-04/ /		ALL
TB1402	Z	S280W555-108 (continued)					E001-04/ /		ALL
	Z	A001	1A	W0141	0140	22		22-11-11	ALL
	Z	A005	1A	W0141	2016R	24		22-11-51	ALL
	Z	A005	1A	W0141	2020R	24		22-11-51	ALL
	Z	A005	1A	W0141	2021R	24		22-11-51	ALL
	Z	A005	1A	W0141	2022R	24		22-11-51	ALL
	Z	A005	1A	W0141	2023R	24		22-11-51	ALL
	Z	A009	1A	W0141	0040	20		22-11-12	ALL
	Z	A009	1A	W0141	0041	20		22-11-12	ALL
	Z	A009	1A	W0141	0042	22		22-11-12	ALL
	Z	A009	1A	W0141	0043	20		22-11-12	ALL
	Z	A009	1A	W0141	0504	22		27-62-11	ALL
	Y	A013	1A	W0141	0024	20		22-11-12	ALL
	Y	A013	1A	W0141	0029	20		22-11-12	ALL
	Y	A013	1A	W0141	0141	20		22-11-12	ALL
	Y	A015	1A	W0141	2034R	22		22-12-41	YD157-YR328
	Y	A015	1A	W0141	2053R	22		22-11-81	YD157-YR328
	Y	A015	1A	W0141	2059R	22		22-12-41	YD157-YR328
	Y	A017	1A	W0141	2045R	24		31-62-21	YC051-YD157
	Y	A017	1A	W0141	2046R	24		31-62-21	YC051-YD157
	Y	A017	1A	W0141	2364R	24		31-62-21	YC051-YD157
	Y	A023	1A	W0141	2048R	22		31-32-15	YC059-YR328
	Y	A023	1A	W0141	2049R	22		31-32-15	YC059-YR328
	Y	A023	1A	W0141	2050R	22		31-32-15	YC059-YR328
	Z	B001	1A	W0141	0023	20		22-11-12	ALL
	Z	B001	1A	W0141	0025	20		22-11-12	ALL
	Z	B001	1A	W0141	0026	20		22-11-12	ALL
	Z	B001	1A	W0141	0027	20		22-11-12	ALL
	Z	B001	1A	W0141	0032	20		22-11-12	ALL
	Z	B001	1A	W0141	0034	20		22-11-12	YC051-YD155
	Z	B001	1A	W0141	0041	20		22-11-12	ALL
	Z	B005	1A	W0141	2016B	24		22-11-51	ALL
	Z	B005	1A	W0141	2020B	24		22-11-51	ALL
	Z	B005	1A	W0141	2021B	24		22-11-51	ALL
	Z	B005	1A	W0141	2022B	24		22-11-51	ALL
	Z	B005	1A	W0141	2023B	24		22-11-51	ALL
	Y	B015	1A	W0141	2034B	22		22-12-41	YD157-YR328
	Y	B015	1A	W0141	2053B	22		22-11-81	YD157-YR328
	Y	B015	1A	W0141	2059B	22		22-12-41	YD157-YR328

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB1400

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1402		S280W601-301 (continued)					E001-04/ /		ALL
TB1402	Y	S280W555-104 (continued)					E001-04/ /		ALL
TB1402	Z	S280W555-108 (continued)					E001-04/ /		ALL
	Y	B017	1A	W0141	2045B	24		31-62-21	YC051-YD157
	Y	B017	1A	W0141	2046B	24		31-62-21	YC051-YD157
	Y	B017	1A	W0141	2364B	24		31-62-21	YC051-YD157
	Y	B023	1A	W0141	2048B	22		31-32-15	YC059-YR328
	Y	B023	1A	W0141	2049B	22		31-32-15	YC059-YR328
	Y	B023	1A	W0141	2050B	22		31-32-15	YC059-YR328
TB1403		S280W601-301					E001-04/ /		ALL
TB1403	Y	S280W555-104					E001-04/ /		ALL
TB1403	Z	S280W555-108					E001-04/ /		ALL
	Y	A001	1A	W0141	2304R	24		34-31-21	ALL
	Y	A001	1A	W0141	2305R	24		34-31-21	ALL
	Y	A001	1A	W0141	2306R	24		34-31-21	ALL
	Y	A003	1A	W0141	2314R	24		34-51-21	ALL
	Y	A003	1A	W0141	2315R	24		34-51-21	ALL
	Y	A003	1A	W0141	2316R	24		34-51-21	ALL
	Y	A007	1A	W0141	2041R	24		34-58-21	YC053-YR328
	Y	A007	1A	W0141	2043R	24		34-58-21	YC053-YR328
	Y	A007	1A	W0141	2044R	24		34-58-21	YC053-YR328
	Y	A007	1A	W0141	2063R	22		34-58-21	YD158-YR328
	Z	A009	1A	W0141	2307R	24		34-31-21	ALL
	Z	A009	1A	W0141	2308R	24		34-31-21	YC051-YC052, YC065-YR328
	Z	A009	1A	W0141	2309R	24		34-31-21	ALL
	Z	A009	1A	W0141	2310R	24		34-31-21	ALL
	Z	A009	1A	W0141	2311R	24		34-31-21	ALL
	Z	A009	1A	W0141	2312R	24		34-31-21	ALL
	Z	A009	1A	W0141	2313R	24		34-31-21	YL951-YR328
	Z	A013	1A	W0141	2319R	24		34-51-21	ALL
	Z	A013	1A	W0141	2320R	24		34-51-21	ALL
	Z	A013	1A	W0141	2321R	24		34-51-21	ALL
	Z	A013	1A	W0141	2322R	24		34-51-21	ALL
	Z	A013	1A	W0141	2323R	24		34-51-21	ALL
	Z	A013	1A	W0141	2324R	24		34-51-21	ALL
	Z	A013	1A	W0141	2325R	24		34-51-21	ALL
	Y	B001	1A	W0141	2304B	24		34-31-21	ALL
	Y	B001	1A	W0141	2305B	24		34-31-21	ALL
	Y	B001	1A	W0141	2306B	24		34-31-21	ALL
	Y	B003	1A	W0141	2314B	24		34-51-21	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB1400

Page 4

Nov 12/2012





# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1403		S280W601-301 (continued)					E001-04/ /		ALL
TB1403	Y	S280W555-104 (continued)					E001-04/ /		ALL
TB1403	Z	S280W555-108 (continued)					E001-04/ /		ALL
	Y	B003	1A	W0141	2315B	24		34-51-21	ALL
	Y	B003	1A	W0141	2316B	24		34-51-21	ALL
	Y	B005	1A	W0141	0142	24		34-31-21	YC051-YD170
	Y	B005	1A	W0141	0143	24		34-31-21	ALL
	Y	B005	1A	W0141	0144	24		34-31-21	ALL
	Y	B007	1A	W0141	2041B	24		34-58-21	YC053-YR328
	Y	B007	1A	W0141	2043B	24		34-58-21	YC053-YR328
	Y	B007	1A	W0141	2044B	24		34-58-21	YC053-YR328
	Y	B007	1A	W0141	2063B	22		34-58-21	YD158-YR328
	Z	B009	1A	W0141	2307B	24		34-31-21	ALL
	Z	B009	1A	W0141	2308B	24		34-31-21	YC051-YC052, YC065-YR328
	Z	B009	1A	W0141	2309B	24		34-31-21	ALL
	Z	B009	1A	W0141	2310B	24		34-31-21	ALL
	Z	B009	1A	W0141	2311B	24		34-31-21	ALL
	Z	B009	1A	W0141	2312B	24		34-31-21	ALL
	Z	B009	1A	W0141	2313B	24		34-31-21	YL951-YR328
	Z	B013	1A	W0141	2319B	24		34-51-21	ALL
	Z	B013	1A	W0141	2320B	24		34-51-21	ALL
	Z	B013	1A	W0141	2321B	24		34-51-21	ALL
	Z	B013	1A	W0141	2322B	24		34-51-21	ALL
	Z	B013	1A	W0141	2323B	24		34-51-21	ALL
	Z	B013	1A	W0141	2324B	24		34-51-21	ALL
	Z	B013	1A	W0141	2325B	24		34-51-21	ALL
TB1404		S280W601-301					E001-04/ /		ALL
TB1404	Y	S280W555-104					E001-04/ /		ALL
	Y	A001	1A	W0141	0401R	22		26-11-21	ALL
	Y	A001	1A	W0141	0402R	22		26-11-21	ALL
	Y	A001	1A	W0141	0405R	22		26-11-21	ALL
	Y	A001	1A	W0141	0428R	22		26-12-11	ALL
	Y	A003	1A	W0141	0406R	22		26-11-21	ALL
	Y	A003	1A	W0141	0407R	22		26-11-21	ALL
	Y	A003	1A	W0141	0426R	22		26-12-11	ALL
	Y	A005	1A	W0141	0159	22		23-15-15	YC053-YD157
	Y	A005	1A	W0141	0162	24		31-62-41	YD158-YR328
	Y	A005	1A	W0141	0901	22		23-22-11	YC053-YR328
	Y	A005	1A	W0141	0902	22		23-22-11	YC053-YR328
	Y	A007	1A	W0141	0158	22		23-15-15	YC053-YD157

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB1400

Page 5

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1404		S280W601-301 (continued)					E001-04/ /		ALL
TB1404	Y	S280W555-104 (continued)					E001-04/ /		ALL
	Y	B001	1A	W0141	0403R	22		26-11-21	ALL
	Y	B001	1A	W0141	0404R	22		26-11-21	ALL
	Y	B001	1A	W0141	0427R	22		26-12-11	ALL
	Y	B003	1A	W0141	0408R	22		26-11-21	ALL
	Y	B003	1A	W0141	0409R	22		26-11-21	ALL
	Y	B003	1A	W0141	0425R	22		26-12-11	ALL
	Y	B005	1A	W0141	0420R	22		26-12-11	ALL
	Y	B005	1A	W0141	0421R	22		26-12-11	ALL
	Y	B005	1A	W0141	0802R	22		31-31-15	ALL
	Y	B007	1A	W0141	0159	22		23-15-15	YC053-YD157
	Y	DED		W0141	0401Z			26-11-21	ALL
	Y	DED		W0141	0402Z			26-11-21	ALL
	Y	DED		W0141	0403Z			26-11-21	ALL
	Y	DED		W0141	0404Z			26-11-21	ALL
	Y	DED		W0141	0405Z			26-11-21	ALL
	Y	DED		W0141	0406Z			26-11-21	ALL
	Y	DED		W0141	0407Z			26-11-21	ALL
	Y	DED		W0141	0408Z			26-11-21	ALL
	Y	DED		W0141	0409Z			26-11-21	ALL
	Y	DED		W0141	0420Z			26-12-11	ALL
	Y	DED		W0141	0421Z			26-12-11	ALL
	Y	DED		W0141	0425Z			26-12-11	ALL
	Y	DED		W0141	0426Z			26-12-11	ALL
	Y	DED		W0141	0427Z			26-12-11	ALL
	Y	DED		W0141	0428Z			26-12-11	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB1400

Page 6 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB1501		S280W601-301					E001-05/ /		ALL
TB1501	Y	S280W555-104					E001-05/ /		ALL
	Y	A001	1A	W0151	2006R	24		34-55-21	ALL
	Y	A001	1A	W0151	2007R	24		34-55-21	ALL
	Y	A001	1A	W0151	2020R	24		34-61-14	ALL
	Y	A001	1A	W0151	2058R	24		34-61-14	YD158-YR328
	Y	A005	1A	W0151	2011R	24		34-55-21	ALL
	Y	A005	1A	W0151	2012R	24		34-55-21	ALL
	Y	A005	1A	W0151	2013R	24		34-55-21	ALL
	Y	A005	1A	W0151	2015R	24		34-55-21	ALL
	Y	B001	1A	W0151	2006B	24		34-55-21	ALL
	Y	B001	1A	W0151	2007B	24		34-55-21	ALL
	Y	B001	1A	W0151	2020B	24		34-61-14	ALL
	Y	B001	1A	W0151	2058B	24		34-61-14	YD158-YR328
	Y	B005	1A	W0151	2011B	24		34-55-21	ALL
	Y	B005	1A	W0151	2012B	24		34-55-21	ALL
	Y	B005	1A	W0151	2013B	24		34-55-21	ALL
	Y	B005	1A	W0151	2015B	24		34-55-21	ALL
TB1502		S280W601-301					E001-05/ /		ALL
TB1503		S280W601-301					E001-05/ /		ALL
TB1504		S280W601-301					E001-05/ /		ALL
TB1504	W	S280W555-206					E001-05/ /		ALL
TB1504	Y	S280W555-104					E001-05/ /		ALL
	Y	A001	1A	W0151	0001	20		34-53-21	ALL
	Y	A001	1A	W0151	0002	20		34-53-21	ALL
	Y	A001	1A	W0151	0003	20		34-53-21	ALL
	Y	A003	1A	W0151	2017R	24		34-21-24	ALL
	Y	A003	1A	W0151	2018R	24		34-21-24	ALL
	Y	A003	1A	W0151	2019R	24		34-21-24	ALL
	W	A005	1	W0151	0031	16		23-12-21	YC051-YD157
	W	A005	1	W0151	0032	16		23-12-21	YC051-YD157
	W	A005	1	W0151	0033	16		23-12-21	YC051-YD157
	W	A005	1	W0151	0034	18		23-12-21	YC051-YD157
	W	A005	1	W0151	0053	18		23-12-21	YC051-YD157
	Y	A011	1A	W0151	2005R	24		34-45-21	YD158-YR328
	Y	A011	1A	W0151	2023R	24		34-45-21	YD158-YR328
	Y	A011	1A	W0151	2024R	24		34-45-21	YD158-YD170
	Y	A011	1A	W0151	2048R	24		34-45-21	YL951-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB1500

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1504		S280W601-301 (continued)					E001-05/ /		ALL
TB1504	W	S280W555-206 (continued)					E001-05/ /		ALL
TB1504	Y	S280W555-104 (continued)					E001-05/ /		ALL
	Y	A013	1A	W0151	0069	24		34-53-21	ALL
	Y	A013	1A	W0151	0070	24		34-53-21	ALL
	Y	A013	1A	W0151	0071	24		34-53-21	ALL
	Y	B001	1A	W0151	0226	24		34-53-21	ALL
	Y	B001	1A	W0151	0227	24		34-53-21	ALL
	Y	B001	1A	W0151	0228	24		34-53-21	ALL
	Y	B003	1A	W0151	2017B	24		34-21-24	ALL
	Y	B003	1A	W0151	2018B	24		34-21-24	ALL
	Y	B003	1A	W0151	2019B	24		34-21-24	ALL
	W	B005	1	W0151	0044	22		34-51-41	YL951-YR328
	W	B005	1	W0151	0074	22		34-51-41	YL951-YR328
	W	B005	1	W0151	0075	22		34-51-41	YL951-YR328
	Y	B011	1A	W0151	2005B	24		34-45-21	YD158-YR328
	Y	B011	1A	W0151	2023B	24		34-45-21	YD158-YR328
	Y	B011	1A	W0151	2024B	24		34-45-21	YD158-YD170
	Y	B011	1A	W0151	2048B	24		34-45-21	YL951-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB1500

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1806		S280W555-504					261/173/L025		ALL
TB1806	V	S280W555-203					261/173/L025		ALL
TB1806	X	S280W555-102					261/173/L025		ALL
TB1806	Y	S280W555-104					261/173/L025		ALL
TB1806	Z	S280W555-108					261/173/L025		YN501-YR328
	X	A005	1A	W2207	2012R	22		28-41-11	ALL
	X	A005	1A	W5562	2601R	22		28-41-11	ALL
	X	A006	1A	W2207	2012B	22		28-41-11	ALL
	X	A006	1A	W5562	2601B	22		28-41-11	ALL
	X	A007	1A	W2207	2011R	22		28-41-11	ALL
	X	A007	1A	W5580	2601R	22		28-41-11	ALL
	X	A008	1A	W2207	2011B	22		28-41-11	ALL
	X	A008	1A	W5580	2601B	22		28-41-11	ALL
	Y	A009	1A	W2177	0007	24		34-53-11	YC051-YC052
	Y	A009	1A	W2177	0037	24		34-53-11	YC051-YC052
	Z	A009	1A	W3307	0007	22		44-21-22	YN501-YR328
	Z	A009	1A	W3307	0083	22		23-42-14	YN501-YR328
	Z	A009	1A	W5506	6501	22		44-21-22	YN501-YR314, YR317-YR318, YR320-YR328
	Z	A009	1A	W5506	6501	22		23-31-06	YR315-YR316, YR319
	Y	A009	1A	W6491	0033	24		34-53-11	YC051-YC052
	V	A013	1	W5303	0006	18		23-32-12	YC051-YD157
	V	A013	1	W5506	6091	18		23-32-12	YC051-YD157
	V	A015	1	W2114	0024	18		33-42-11	ALL
	V	A015	1	W5506	0005	18		33-42-11	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
	Y	B001	1A	W3307	0007	22		23-31-06	YD155-YN260
	Y	B001	1A	W3307	0013	22		23-31-06	YC051-YN260
	Y	B001	1A	W5303	0001	22		23-32-12	YC051-YD157
	Y	B001	1A	W5303	0001	22		23-32-14	YD158-YN260
	Y	B001	1A	W5506	6501	22		23-31-06	YC051-YD158, YL951-YL968, YN231-YN236
	Y	B003	1A	W2363	1026	20		33-18-51	ALL
	Y	B003	1A	W5506	5508	20		33-18-63	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
	Y	B003	1A	W5514	5505	20		33-18-51	YC051-YD158, YL951-YR328
	Y	B003	1A	W5514	5513	20		33-18-61	YC051-YD154
	X	B005	1A	W5506	6088	22		28-41-11	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
	X	B005	1A	W5562	6005	22		28-41-11	ALL
	X	B006	1A	W5303	0007	20		23-32-12	YC051-YD157

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB1800

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1806		S280W555-504 (continued)					261/173/L025		ALL
TB1806	V	S280W555-203 (continued)					261/173/L025		ALL
TB1806	X	S280W555-102 (continued)					261/173/L025		ALL
TB1806	Y	S280W555-104 (continued)					261/173/L025		ALL
TB1806	Z	S280W555-108 (continued)					261/173/L025		YN501-YR328
	X	B006	1A	W5506	6092	20		23-32-12	YC051-YD157
	X	B007	1A	W2102	5507	20		33-17-11	ALL
	X	B007	1A	W2112	5552	20		33-17-11	YC053-YR328
	X	B008	1A	W2108	5503	24		30-42-11	ALL
	X	B008	1A	W2112	5555	24		30-42-11	YC053-YR328
	V	B013	1	W2104	5502	18		SPARE	YC051-YD158
	V	B013	1	W2108	5502	18		30-42-11	YC051-YC061
	V	B015	1	W5506	6043	18		78-32-51	YC051-YD158, YL951-YL968, YN231-YN236, YN501-YR328
	V	B015	1	W5510	6008	18		78-32-51	ALL
	V	B015	1	W5510	6009	22		78-32-51	ALL
TB1808		S280W555-504					261/171/L025		ALL
TB1808	V	S280W555-203					261/171/L025		ALL
TB1808	X	S280W555-102					261/171/L025		ALL
TB1808	Y	S280W555-104					261/171/L025		ALL
	X	A001	1A	W3323	2504R	24		34-41-11	ALL
	X	A001	1A	W6491	2201R	24		34-41-11	YC051-YD158, YL951-YR328
	X	A002	1A	W3323	2504ZI			34-41-11	ALL
	X	A002	1A	W6491	2201ZI			34-41-11	YC051-YD158, YL951-YR328
	X	A003	%A	W5158	0707	22		SPARE	YC067-YL999, YR301-YR328
	X	A003	1A	W5160	0038	22		SPARE	YC051-YD158, YL951-YR328
	X	A004	1A	W2112	0518	20		27-53-12	YC053-YR328
	X	A004	1A	W5160	0515	20		27-53-12	YC051-YD158, YL951-YR328
	V	A005	1	W5172	2602R	18		78-32-51	ALL
	V	A005	1	W5510	2601R	18		78-32-51	ALL
	V	A007	1	W5172	2601R	18		78-32-51	ALL
	V	A007	1	W5510	2602R	18		78-32-51	ALL
	X	A013	1A	W2653	0013	20		23-29-11	YC051-YD157
	X	A013	1A	W2803	0001	20		23-29-11	YC051-YD157
	X	B001	1A	W3323	2504B	24		34-41-11	ALL
	X	B001	1A	W6491	2201B	24		34-41-11	YC051-YD158, YL951-YR328
	X	B002	1A	W2114	8001	22		34-41-11	YC053-YR328
	X	B002	1A	W6491	0005	22		34-41-11	YC053-YD158, YL951-YR328
	X	B003	1A	W5158	0008	22		SPARE	YC051-YD158, YN231-YN501
	X	B003	1A	W5158	0008	22		52-61-11	YL951-YL999, YR301-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB1800

Page 2

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1808		S280W555-504 (continued)					261/171/L025		ALL
TB1808	V	S280W555-203 (continued)					261/171/L025		ALL
TB1808	X	S280W555-102 (continued)					261/171/L025		ALL
TB1808	Y	S280W555-104 (continued)					261/171/L025		ALL
	X	B004	1A	W2112	0517	20		27-53-12	YC053-YR328
	X	B004	1A	W5160	0516	20		27-53-12	YC051-YD158, YL951-YR328
	V	B005	1	W5172	2602B	18		78-32-51	ALL
	V	B005	1	W5510	2601B	18		78-32-51	ALL
	V	B007	1	W5172	2601B	18		78-32-51	ALL
	V	B007	1	W5510	2602B	18		78-32-51	ALL
	Y	B009	1A	W2201	0007	22		31-31-11	ALL
	Y	B009	1A	W2419	0001	22		31-31-11	ALL
	Y	B009	1A	W2419	0002	22		31-31-11	ALL
TB1882		S280W555-510					J048-00/ /		ALL
TB1882	Y	S280W555-104					J048-00/ /		ALL
	Y	A001	1A	W0088	0004	24		21-27-21	ALL
	Y	A001	1A	W0088	0005	24		21-27-21	ALL
	Y	A001	1A	W0088	0006	24		21-27-21	ALL
	Y	A003	1A	W0088	0050	22		34-21-16	ALL
	Y	A003	1A	W0088	0051	22		34-21-16	ALL
	Y	A003	1A	W0088	0052	22		34-21-16	ALL
	Y	A005	1A	W0088	0007	22		21-27-21	ALL
	Y	A005	1A	W0088	0008	22		21-27-21	ALL
	Y	A005	1A	W0088	0009	22		21-27-21	ALL
	Y	A007	1A	W0088	0070	20		78-35-11	ALL
	Y	A007	1A	W0088	0071	20		78-35-11	ALL
	Y	A007	1A	W0088	0072	20		78-35-11	ALL
	Y	A009	1A	W0088	0104R	22		26-21-11	ALL
	Y	A009	1A	W0088	0106R	22		26-21-11	ALL
	Y	A009	1A	W0088	0107R	22		26-21-11	ALL
	Y	A015	1A	W0088	0090R	22		26-21-11	ALL
	Y	A015	1A	W0088	0091R	22		26-21-11	ALL
	Y	A015	1A	W0088	0093R	22		26-21-11	ALL
	Y	A015	1A	W0088	0094R	22		26-21-11	ALL
	Y	A017	1A	W0088	0086R	22		26-21-11	ALL
	Y	A017	1A	W0088	0087R	22		26-21-11	ALL
	Y	A017	1A	W0088	0088R	22		26-21-11	ALL
	Y	A017	1A	W0088	0089R	22		26-21-11	ALL
	Y	A019	1A	W0088	0204	20		52-71-13	ALL
	Y	A019	1A	W0088	0205	20		52-71-13	ALL

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB1800

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1882		S280W555-510 (continued)					J048-00/ /		ALL
TB1882	Y	S280W555-104 (continued)					J048-00/ /		ALL
	Y	A019	1A	W0088	0208	20		52-71-14	ALL
	Y	B001	1A	W0088	0037	22		30-11-11	ALL
	Y	B001	1A	W0088	0038	22		30-11-11	ALL
	Y	B001	1A	W0088	0039	22		30-11-11	ALL
	Y	B001	1A	W0088	0040	22		30-11-11	ALL
	Y	B003	1A	W0088	0067	22		34-55-11	ALL
	Y	B003	1A	W0088	0068	22		34-55-11	ALL
	Y	B003	1A	W0088	0069	22		34-55-11	ALL
	Y	B005	1A	W0088	1001	24		73-21-12	ALL
	Y	B005	1A	W0088	1002	24		73-21-12	ALL
	Y	B005	1A	W0088	1003	24		73-21-12	ALL
	Y	B007	1A	W0088	0162	22		21-27-21	YD160-YR328
	Y	B007	1A	W0088	0163	22		21-27-21	YD160-YR328
	Y	B007	1A	W0088	0164	22		21-27-21	YD160-YR328
	Y	B009	1A	W0088	0105R	22		26-21-11	ALL
	Y	B009	1A	W0088	0108R	22		26-21-11	ALL
	Y	B009	1A	W0088	0109R	22		26-21-11	ALL
	Y	B011	1A	W0088	0078	20		76-21-11	ALL
	Y	B011	1A	W0088	0079	20		76-21-11	ALL
	Y	B011	1A	W0088	0080	20		76-21-11	ALL
	Y	B011	1A	W0088	0081	20		76-21-11	ALL
	Y	B015	1A	W0088	0099R	22		26-21-11	ALL
	Y	B015	1A	W0088	0101R	22		26-21-11	ALL
	Y	B015	1A	W0088	0102R	22		26-21-11	ALL
	Y	B015	1A	W0088	0103R	22		26-21-11	ALL
	Y	B019	1A	W0088	0203	20		52-71-13	ALL
	Y	B019	1A	W0088	0209	20		52-71-14	ALL
	Y	B019	1A	W0088	0210	20		52-71-14	ALL
TB1884		S280W555-510					J048-00/ /		ALL
TB1884	Y	S280W555-104					J048-00/ /		ALL
	Y	A001	1A	W0088	0013	22		21-27-31	ALL
	Y	A001	1A	W0088	0014	22		21-27-31	ALL
	Y	A001	1A	W0088	0015	22		21-27-31	ALL
	Y	A003	1A	W0088	0111R	22		26-21-11	ALL
	Y	A003	1A	W0088	0114R	22		26-21-11	ALL
	Y	A003	1A	W0088	0117R	22		26-21-11	ALL
	Y	A005	1A	W0088	0095R	22		26-21-11	ALL
	Y	A005	1A	W0088	0096R	22		26-21-11	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB1800

Page 4

Nov 12/2012





Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB1884		S280W555-510 (continued)					J048-00/ /		ALL
TB1884	Y	S280W555-104 (continued)					J048-00/ /		ALL
	Y	A005	1A	W0088	0097R	22		26-21-11	ALL
	Y	A005	1A	W0088	0098R	22		26-21-11	ALL
	Y	B003	1A	W0088	0110R	22		26-21-11	ALL
	Y	B003	1A	W0088	0113R	22		26-21-11	ALL
	Y	B003	1A	W0088	0116R	22		26-21-11	ALL
	Y	B005	1A	W0088	0112R	22		26-21-11	ALL
	Y	B005	1A	W0088	0115R	22		26-21-11	ALL
	Y	B005	1A	W0088	0118R	22		26-21-11	ALL

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB1800

Page 5 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB2101		S280W555-516					E002-01/ /		ALL
TB2101	X	S280W555-102					E002-01/ /		ALL
TB2101	Y	S280W555-104					E002-01/ /		ALL
	Y	A001	1A	W0212	0059	22		49-62-11	ALL
	Y	A001	1A	W0212	0060	22		49-62-11	ALL
	Y	A001	1A	W0212	0066	22		24-22-31	ALL
	Y	A003	1A	W0212	2011B	22		24-28-11	ALL
	Y	A003	1A	W0212	2015B	22		49-62-11	YC059-YR328
	Y	A003	1A	W0212	2016B	22		24-28-11	ALL
	Y	A005	1A	W0212	0073	22		28-43-11	YC051-YD157
	Y	A005	1A	W0212	0077	24		31-62-14	YC051-YD157
	Y	A005	1A	W0212	0078	22		28-43-11	YC051-YD157
	Y	A009	1A	W0212	0080	20		49-62-11	ALL
	Y	A009	1A	W0212	0081	20		49-62-11	ALL
	Y	A009	1A	W0212	0083	20		49-62-11	ALL
	Y	A011	1A	W0212	0210	22		28-43-11	YD158-YR328
	X	A057	1A	W0210	5533	22		23-71-01	ALL
	X	A057	1A	W0212	0200	22		23-71-01	ALL
	Y	A061	1A	W0210	2002R	24		30-41-11	ALL
	Y	A061	1A	W0210	2004R	24		30-41-11	ALL
	Y	A061	1A	W0210	2005R	24		30-41-11	ALL
	Y	B001	1A	W0212	2011R	22		24-28-11	ALL
	Y	B001	1A	W0212	2015R	22		49-62-11	YC059-YR328
	Y	B001	1A	W0212	2016R	22		24-28-11	ALL
	Y	B011	1A	W0212	0208	22		28-43-11	YD158-YR328
	Y	B011	1A	W0212	0209	22		28-43-11	YD158-YR328
	X	B057	1A	W0210	5534	22		23-71-01	ALL
	X	B057	1A	W0212	0201	22		23-71-01	ALL
	Y	B061	1A	W0210	2002B	24		30-41-11	ALL
	Y	B061	1A	W0210	2004B	24		30-41-11	ALL
	Y	B061	1A	W0210	2005B	24		30-41-11	ALL
		CAP	Y	W0212	2015B	22		49-62-11	YC051-YC058
		CAP	Y	W0212	2015R	22		49-62-11	YC051-YC058

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB2100

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB2201		S280W555-526					E002-02/ /		ALL
TB2201	Y	S280W555-104					E002-02/ /		ALL
	Y	A001	1A	W0220	0006	24		24-31-11	YC051-YD158, YL951-YR328
	Y	A001	1A	W0220	0118	24		49-41-11	YC051-YD158, YL951-YR328
	Y	A001	1A	W0220	0122	24		49-41-11	YC051-YD158, YL951-YR328
	Y	A003	1A	W0220	1201R	22		26-11-21	YC054, YC056-YC059, YC065
	Y	A003	1A	W0220	1202R	22		26-11-21	YC054, YC056-YC059, YC065
	Y	A003	1A	W0220	1203R	22		26-11-21	YC054, YC056-YC059, YC065
	Y	A005	1A	W0220	0062	24		21-31-24	YC051-YD158, YL951-YR328
	Y	A005	1A	W0220	0063	24		21-31-24	YC051-YD158, YL951-YR328
	Y	A005	1A	W0220	0072	24		21-31-24	YC051-YD158, YL951-YR328
	Y	A009	1A	W0220	0219	20		80-11-11	YC051-YD158, YL951-YR328
	Y	A009	1A	W0220	0220	20		80-11-11	YC051-YD158, YL951-YR328
	Y	A009	1A	W0220	0221	24		49-52-31	YC051-YD158, YL951-YR328
	Y	A011	1A	W0220	0140	24		31-31-15	YC051-YD158, YL951-YR328
	Y	A011	1A	W0220	1018R	22		26-11-11	YC051-YD158, YL951-YR328
	Y	A011	1A	W0220	1019R	22		26-11-11	YC051-YD158, YL951-YR328
	Y	A013	1A	W0220	1034R	22		26-11-21	YC051-YD158, YL951-YR328
	Y	A013	1A	W0220	1035R	22		26-11-21	YC051-YD158, YL951-YR328
	Y	A013	1A	W0220	1121R	20		26-11-31	YC051-YD158, YL951-YR328
	Y	A015	1A	W0220	1101R	20		26-12-11	YC051-YD158, YL951-YR328
	Y	A015	1A	W0220	1118R	22		26-11-31	YC051-YC052
	Y	A015	1A	W0220	1119R	20		26-11-31	YC051-YD158, YL951-YR328
	Y	A015	1A	W0220	1120R	20		26-11-31	YC051-YD158, YL951-YR328
	Y	A015	1A	W0220	1208R	22		26-11-31	YC053-YD158, YL951-YR328
	Y	A017	1A	W0220	2031B	24		73-24-11	YC051-YD158, YL951-YR328
	Y	A017	1A	W0220	2032B	24		73-24-11	YC051-YD158, YL951-YR328
	Y	A017	1A	W0220	2033B	24		73-24-11	YC051-YD158, YL951-YR328
	Y	A019	1A	W0220	2044B	24		73-24-11	YC051-YD158, YL951-YR328
	Y	A019	1A	W0220	2045B	24		73-24-11	YC051-YD158, YL951-YR328
	Y	A019	1A	W0220	2046B	24		73-24-11	YC051-YD158, YL951-YR328
	Y	A021	1A	W0220	0055	24		21-31-22	YC051-YD158, YL951-YR328
	Y	A023	1A	W0220	0055	24		21-31-22	YC051-YD158, YL951-YR328
	Y	A023	1A	W0220	0057	24		21-31-22	YC051-YD158, YL951-YR328
	Y	A025	1A	W0220	0241	20		30-71-11	YC051-YD158, YL951-YR328
	Y	A025	1A	W0220	0242	20		30-71-11	YC051-YD158, YL951-YR328
	Y	A025	1A	W0220	0243	20		30-71-11	YC051-YD158, YL951-YR328
	Y	A025	1A	W0220	0244	20		30-71-11	YC051-YD158, YL951-YR328
	Y	A027	1A	W0220	0257	22		26-16-21	YC053-YD158, YL951-YR328
	Y	A027	1A	W0220	0258	22		26-16-21	YC053-YD158, YL951-YR328
	Y	A027	1A	W0220	0259	22		26-16-21	YC053-YD158, YL951-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB2200

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB2201		S280W555-526 (continued)					E002-02/ /		ALL
TB2201	Y	S280W555-104 (continued)					E002-02/ /		ALL
	Y	A029	1A	W0220	0270	22		26-16-22	YC053-YD158, YL951-YR328
	Y	A029	1A	W0220	0271	22		26-16-22	YC053-YD158, YL951-YR328
	Y	A029	1A	W0220	0272	22		26-16-22	YC053-YD158, YL951-YR328
	Y	A031	1A	W0220	0283	22		26-23-11	YC053-YD157, YL951-YR314, YR317-YR318, YR320-YR328
	Y	A031	1A	W0220	0284	22		26-23-11	YC053-YD157, YL951-YR314, YR317-YR318, YR320-YR328
	Y	A031	1A	W0220	0285	22		26-23-11	YC053-YD157, YL951-YR314, YR317-YR318, YR320-YR328
	Y	A033	1A	W0220	0091	24		36-21-11	YL963-YL999, YN236-YR328
	Y	A033	1A	W0220	0306	24		36-21-11	YL963-YL999, YN236-YR328
	Y	A033	1A	W0220	0308	24		31-35-05	YL963-YL999, YN236-YR328
	Y	A035	1A	W0220	1201R	22		26-11-21	YC053, YC055, YC060-YC064, YC067-YD158, YL951-YR328
	Y	A035	1A	W0220	1202R	22		26-11-21	YC053, YC055, YC060-YC064, YC067-YD158, YL951-YR328
	Y	A037	1A	W0220	0327	22		30-31-12	YL968-YL999, YN236-YR328
	Y	A039	1A	W0220	0326	22		30-31-12	YL968-YL999, YN236-YR328
	Y	A039	1A	W0220	0327	22		30-31-12	YL968-YL999, YN236-YR328
	Y	B001	1A	W0220	0022	20		33-44-12	YC051-YD158, YL951-YR328
	Y	B001	1A	W0220	0023	20		33-44-12	YC051-YD158, YL951-YR328
	Y	B001	1A	W0220	0024	20		33-44-12	YC051-YD158, YL951-YR328
	Y	B001	1A	W0220	0025	20		33-44-12	YC051-YD158, YL951-YR328
	Y	B003	1A	W0220	0047	20		21-31-22	YC051-YD158, YL951-YR328
	Y	B003	1A	W0220	0048	20		21-31-22	YC051-YD158, YL951-YR328
	Y	B003	1A	W0220	0050	20		21-31-22	YC051-YD158, YL951-YR328
	Y	B003	1A	W0220	0316	20		21-31-22	YC053, YC055, YC060-YC064, YC067-YD158, YL951-YR328
	Y	B005	1A	W0220	0064	24		21-31-24	YC051-YD158, YL951-YR328
	Y	B005	1A	W0220	0067	24		21-31-24	YC051-YD158, YL951-YR328
	Y	B005	1A	W0220	0073	24		21-31-24	YC051-YD158, YL951-YR328
	Y	B007	1A	W0220	0084	24		36-11-11	YC051-YD158, YL951-YR328
	Y	B007	1A	W0220	0217	24		80-11-11	YC051-YD158, YL951-YR328
	Y	B007	1A	W0220	0218	24		80-11-11	YC051-YD158, YL951-YR328
	Y	B009	1A	W0220	1204R	22		26-11-21	YC053-YD158, YL951-YR328
	Y	B009	1A	W0220	1205R	22		26-11-21	YC053-YD158, YL951-YR328
	Y	B009	1A	W0220	1206R	22		26-11-21	YC053-YD158, YL951-YR328
	Y	B011	1A	W0220	0139	24		31-31-15	YC051-YD158, YL951-YR328
	Y	B011	1A	W0220	1108R	22		26-11-21	YC051-YD158, YL951-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB2200

Page 2

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB2201		S280W555-526 (continued)					E002-02/ /		ALL
TB2201	Y	S280W555-104 (continued)					E002-02/ /		ALL
	Y	B011	1A	W0220	1109R	22		26-11-21	YC051-YD158, YL951-YR328
	Y	B013	1A	W0220	0141	24		31-31-15	YC051-YD158, YL951-YR328
	Y	B013	1A	W0220	1116R	22		26-11-31	YC051-YD158, YL951-YR328
	Y	B013	1A	W0220	1117R	22		26-11-31	YC051-YD158, YL951-YR328
	Y	B015	1A	W0220	2031R	24		73-24-11	YC051-YD158, YL951-YR328
	Y	B015	1A	W0220	2032R	24		73-24-11	YC051-YD158, YL951-YR328
	Y	B015	1A	W0220	2033R	24		73-24-11	YC051-YD158, YL951-YR328
	Y	B017	1A	W0220	2044R	24		73-24-11	YC051-YD158, YL951-YR328
	Y	B017	1A	W0220	2045R	24		73-24-11	YC051-YD158, YL951-YR328
	Y	B017	1A	W0220	2046R	24		73-24-11	YC051-YD158, YL951-YR328
	Y	B019	1A	W0220	1207R	22		26-11-31	YC053-YD158, YL951-YR328
	Y	B019	1A	W0220	1208R	22		26-11-31	YC053-YD158, YL951-YR328
	Y	B019	1A	W0220	1209R	22		26-11-31	YC053-YD158, YL951-YR328
	Y	B021	1A	W0220	0056	24		21-31-22	YC051-YD158, YL951-YR328
	Y	B023	1A	W0220	0049	24		21-31-23	YC051-YD158, YL951-YR328
	Y	B027	1A	W0220	0260	22		26-16-21	YC053-YD158, YL951-YR328
	Y	B027	1A	W0220	0261	22		26-16-21	YC053-YD158, YL951-YR328
	Y	B027	1A	W0220	0262	22		26-16-21	YC053-YD158, YL951-YR328
	Y	B029	1A	W0220	0273	22		26-16-22	YC053-YD158, YL951-YR328
	Y	B029	1A	W0220	0274	22		26-16-22	YC053-YD158, YL951-YR328
	Y	B029	1A	W0220	0275	22		26-16-22	YC053-YD158, YL951-YR328
	Y	B031	1A	W0220	0291	22		26-23-11	YD158, YR315-YR316, YR319
	Y	B031	1A	W0220	0292	22		26-23-11	YD158, YR315-YR316, YR319
	Y	B031	1A	W0220	0293	22		26-23-11	YD158, YR315-YR316, YR319
	Y	B033	1A	W0220	0090	24		36-21-11	YL963-YL999, YN236-YR328
	Y	B033	1A	W0220	0305	24		36-21-11	YL963-YL999, YN236-YR328
	Y	B033	1A	W0220	0307	24		31-35-05	YL963-YL999, YN236-YR328
	Y	B035	1A	W0220	0317	22		26-16-21	YC053, YC055, YC060-YC064, YC067-YD158, YL951-YR328
	Y	B035	1A	W0220	0318	22		26-16-21	YC053, YC055, YC060-YC064, YC067-YD158, YL951-YR328
	Y	B037	1A	W0220	0328	22		30-31-12	YL968-YL999, YN236-YR328
	Y	B039	1A	W0220	0329	22		30-31-12	YL968-YL999, YN236-YR328
	Y	DED		W0220	1018Z			26-11-11	YC051-YD158, YL951-YR328
	Y	DED		W0220	1019Z			26-11-11	YC051-YD158, YL951-YR328
	Y	DED		W0220	1034Z			26-11-21	YC051-YD158, YL951-YR328
	Y	DED		W0220	1035Z			26-11-21	YC051-YD158, YL951-YR328
	Y	DED		W0220	1101Z			26-12-11	YC051-YD158, YL951-YR328
	Y	DED		W0220	1108Z			26-11-21	YC051-YD158, YL951-YR328

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB2200

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB2201		S280W555-526 (continued)					E002-02/ /		ALL
TB2201	Y	S280W555-104 (continued)					E002-02/ /		ALL
	Y	DED		W0220	1109Z			26-11-21	YC051-YD158, YL951-YR328
	Y	DED		W0220	1116Z			26-11-31	YC051-YD158, YL951-YR328
	Y	DED		W0220	1117Z			26-11-31	YC051-YD158, YL951-YR328
	Y	DED		W0220	1118Z			26-11-31	YC051-YC052
	Y	DED		W0220	1119Z			26-11-31	YC051-YD158, YL951-YR328
	Y	DED		W0220	1120Z			26-11-31	YC051-YD158, YL951-YR328
	Y	DED		W0220	1121Z			26-11-31	YC051-YD158, YL951-YR328
	Y	DED		W0220	1201Z			26-11-21	YC053-YD158, YL951-YR328
	Y	DED		W0220	1202Z			26-11-21	YC053-YD158, YL951-YR328
	Y	DED		W0220	1203Z			26-11-21	YC054, YC056-YC059, YC065
	Y	DED		W0220	1204Z			26-11-21	YC053-YD158, YL951-YR328
	Y	DED		W0220	1205Z			26-11-21	YC053-YD158, YL951-YR328
	Y	DED		W0220	1206Z			26-11-21	YC053-YD158, YL951-YR328
	Y	DED		W0220	1207Z			26-11-31	YC053-YD158, YL951-YR328
	Y	DED		W0220	1208Z			26-11-31	YC053-YD158, YL951-YR328
	Y	DED		W0220	1209Z			26-11-31	YC053-YD158, YL951-YR328
TB2202		MS27212-2-3					396/180/L40		YC051
TB2202		MS27212-2-3					396/180/L040		YC052-YR328
		1	E	W0220	0504	06		24-21-31	YC051-YD158, YL951-YR328
		1	E	W5722	0504	06		24-21-31	ALL
		2	E	W0220	0506	06		24-21-31	YC051-YD158, YL951-YR328
		2	E	W5722	0506	06		24-21-31	ALL
		3	E	W0220	0508	06		24-21-31	YC051-YD158, YL951-YR328
		3	E	W5722	0508	06		24-21-31	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB2200

Page 4 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3092		S280W555-606					P003-00/ /		ALL
TB3092	V	S280W555-203					P003-00/ /		ALL
TB3092	W	S280W555-206					P003-00/ /		ALL
TB3092	X	S280W555-102					P003-00/ /		ALL
TB3092	Y	S280W555-104					P003-00/ /		ALL
TB3092	Z	S280W555-108					P003-00/ /		ALL
	W	A001	1	W0003	0327	20		33-11-21	YL951-YR328
	W	A001	1	W0003	0662	16		33-11-21	YC051-YD158, YL951-YR328
	W	A001	1	W0003	0663	16		33-11-21	YC051-YD158, YL951-YR328
	W	A001	1	W0003	0665	16		33-11-21	YC051-YD158, YL951-YR328
	W	A001	1	W0003	1509	20		33-11-21	YC051-YD158, YL951-YR328
	W	A005	1	W0003	0670	20		33-11-21	YC051-YD158, YL951-YR328
	W	A005	1	W0003	0732	16		33-11-21	YC051-YD158, YL951-YR328
	Y	A009	1A	W0001	0169	24		31-22-11	YC051-YD158, YL951-YR328
	Y	A009	1A	W0003	0637	24		31-22-11	YC051-YD158, YL951-YR328
	Y	A009	1A	W0003	0639	24		31-22-11	YC051-YD158, YL951-YR328
	Y	A011	1A	W0001	0237	20		33-18-21	YC051-YD158, YL951-YR328
	Y	A011	1A	W0001	0246	20		33-18-23	YC051-YD158, YL951-YR328
	Y	A011	1A	W0003	0685	20		33-18-21	YC051-YD158, YL951-YR328
	Y	A011	1A	W0003	0699	20		33-18-24	YC051-YD158, YL951-YR328
	Y	A013	1A	W0003	0696	20		33-18-22	YC051-YD158, YL951-YR328
	Y	A013	1A	W0003	0698	20		33-18-22	YC051-YD158, YL951-YR328
	Y	A013	1A	W0003	0700	20		33-18-24	YC051-YD158, YL951-YR328
	Y	A013	1A	W0003	0723	20		33-18-22	YC051-YD158, YL951-YR328
	Y	A015	1A	W0001	0247	20		33-18-23	YC051-YD158, YL951-YR328
	Y	A015	1A	W0003	0688	20		33-18-23	YC051-YD158, YL951-YR328
	Y	A015	1A	W0003	0704	20		33-18-24	YC051-YD158, YL951-YR328
	Y	A019	1A	W0001	0178	20		31-52-11	YC051-YD158, YL951-YR328
	Y	A019	1A	W0003	0646	20		31-52-11	YC051-YD158, YL951-YR328
	Y	A019	1A	W0003	0653	20		31-52-11	YC051-YD158, YL951-YR328
	Z	A021	1A	W0001	0244	20		33-18-23	YC051-YD158, YL951-YR328
	Z	A021	1A	W0003	0692	20		33-18-22	YC051-YD158, YL951-YR328
	Z	A021	1A	W0003	0702	20		33-18-24	YC051-YD158, YL951-YR328
	Z	A021	1A	W0003	0722	20		33-18-22	YC051-YD158, YL951-YR328
	W	B001	1	W0003	0666	16		33-11-21	YC051-YD158, YL951-YR328
	W	B001	1	W0003	0668	20		33-11-21	YC051-YD158, YL951-YR328
	W	B001	1	W0003	0675	20		33-11-21	YC051-YD158, YL951-YR328
	W	B001	1	W0003	0677	20		33-11-21	YC051-YD158, YL951-YR328
	W	B001	1	W0003	0679	20		33-11-21	YC051-YD158, YL951-YR328
	Y	B009	1A	W0001	0170	24		31-22-11	YC051-YD158, YL951-YR328
	Y	B009	1A	W0003	0638	24		31-22-11	YC051-YD158, YL951-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB3000

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3092		S280W555-606 (continued)					P003-00/ /		ALL
TB3092	V	S280W555-203 (continued)					P003-00/ /		ALL
TB3092	W	S280W555-206 (continued)					P003-00/ /		ALL
TB3092	X	S280W555-102 (continued)					P003-00/ /		ALL
TB3092	Y	S280W555-104 (continued)					P003-00/ /		ALL
TB3092	Z	S280W555-108 (continued)					P003-00/ /		ALL
	Y	B009	1A	W0003	0640	24		31-22-11	YC051-YD158, YL951-YR328
	Y	B015	1A	W0003	0693	20		33-18-22	YC051-YD158, YL951-YR328
	Y	B015	1A	W0003	0694	20		33-18-22	YC051-YD158, YL951-YR328
	Y	B015	1A	W0003	0695	20		33-18-22	YC051-YD158, YL951-YR328
	Y	B017	1A	W0001	0249	20		33-18-51	YC051-YD158, YL951-YR328
	Y	B017	1A	W0003	0705	20		33-18-51	YC051-YD158, YL951-YR328
	Y	B017	1A	W0003	0706	20		33-18-51	YC051-YD158, YL951-YR328
	Y	B019	1A	W0001	0176	20		31-52-11	YC051-YD158, YL951-YR328
	Y	B019	1A	W0003	0645	20		31-52-11	YC051-YD158, YL951-YR328
	Y	B019	1A	W0003	0649	20		31-52-11	YC051-YD158, YL951-YR328
	Z	B021	1A	W0001	0177	20		31-52-11	YC051-YD158, YL951-YR328
	Z	B021	1A	W0001	0180	20		31-52-11	YC051-YD158, YL951-YR328
	Z	B021	1A	W0003	0644	20		31-52-11	YC051-YD158, YL951-YR328
	Z	B021	1A	W0003	0650	20		31-52-11	YC051-YD158, YL951-YR328
	Z	B021	1A	W0003	0651	20		31-52-11	YC051-YD158, YL951-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB3000

Page 2 End

Nov 12/2012





# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3101		S280W555-526					E003-01/ /		ALL
TB3101	Y	S280W555-104					E003-01/ /		ALL
TB3101	Z	S280W555-108					E003-01/ /		ALL
	Y	A001	1A	W0311	2001R	24		31-62-12	ALL
	Y	A001	1A	W0311	2004R	24		31-62-12	ALL
	Y	A001	1A	W0311	2008R	24		31-62-12	ALL
	Y	A003	1A	W0311	2002R	24		31-62-12	ALL
	Y	A003	1A	W0311	2005R	24		31-62-12	ALL
	Y	A003	1A	W0311	2007R	24		31-62-12	ALL
	Y	A005	1A	W0311	2003R	24		31-62-12	ALL
	Y	A005	1A	W0311	2006R	24		31-62-12	ALL
	Y	A005	1A	W0311	2009R	24		31-62-12	ALL
	Y	A007	1A	W0311	2010R	24		31-62-13	ALL
	Y	A007	1A	W0311	2011R	24		31-62-13	ALL
	Y	A007	1A	W0311	2012R	24		31-62-13	ALL
	Z	A009	1A	W0311	2017R	24		31-62-15	ALL
	Z	A009	1A	W0311	2018R	24		31-62-15	ALL
	Z	A009	1A	W0311	2019R	24		31-62-15	ALL
	Z	A009	1A	W0311	2020R	24		31-62-15	ALL
	Z	A009	1A	W0311	2021R	24		31-62-15	ALL
	Z	A009	1A	W0311	2022R	24		31-62-15	ALL
	Y	A015	1A	W0311	2026R	24		31-62-15	ALL
	Y	A015	1A	W0311	2027R	24		31-62-15	ALL
	Y	A015	1A	W0311	2028R	22		31-62-15	ALL
	Y	A015	1A	W0311	2029R	24		31-62-15	ALL
	Z	A017	1A	W0311	2075R	22		34-33-11	ALL
	Z	A017	1A	W0311	2076R	24		34-33-11	ALL
	Z	A017	1A	W0311	2077R	24		34-33-11	ALL
	Z	A017	1A	W0311	2078R	24		34-33-11	ALL
	Z	A017	1A	W0311	2079R	24		34-33-11	ALL
	Z	A017	1A	W0311	2142R	24		34-41-11	YC051-YC052
	Z	A017	1A	W0313	2672R	24		34-41-11	YC053-YR328
	Y	A021	1A	W0311	2081R	22		34-57-11	ALL
	Y	A021	1A	W0311	2082R	24		34-57-11	ALL
	Y	A021	1A	W0311	2083R	24		34-57-11	ALL
	Y	A023	1A	W0311	2085R	24		31-35-02	ALL
	Y	A023	1A	W0311	2086R	24		31-35-02	ALL
	Y	A023	1A	W0311	2087R	24		31-35-02	ALL
	Y	A023	1A	W0311	2155R	24		31-35-02	ALL
	Y	A025	1A	W0311	2093R	24		34-55-11	ALL
	Y	A025	1A	W0311	2094R	24		34-55-11	ALL

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB3100

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3101		S280W555-526 (continued)					E003-01/ /		ALL
TB3101	Y	S280W555-104 (continued)					E003-01/ /		ALL
TB3101	Z	S280W555-108 (continued)					E003-01/ /		ALL
	Y	A025	1A	W0311	2095R	24		34-55-11	ALL
	Y	A027	1A	W0311	2014R	24		31-62-15	ALL
	Y	A027	1A	W0311	2015R	24		31-62-15	ALL
	Y	A027	1A	W0311	2016R	24		31-62-15	ALL
	Z	A029	1A	W0311	2096R	24		34-31-11	ALL
	Z	A029	1A	W0311	2097R	24		34-31-11	ALL
	Z	A029	1A	W0311	2098R	24		34-31-11	ALL
	Z	A029	1A	W0311	2099R	24		34-31-11	ALL
	Z	A029	1A	W0311	2100R	24		34-31-11	ALL
	Y	A033	1A	W0311	2156R	24		27-81-41	ALL
	Y	A033	1A	W0311	2157R	24		27-81-41	ALL
	Y	A033	1A	W0313	2657R	24		27-81-41	ALL
	Y	A035	1A	W0311	2103R	22		34-61-15	ALL
	Y	A035	1A	W0311	2104R	22		34-61-15	ALL
	Y	A035	1A	W0311	2105R	22		34-61-15	ALL
	Y	A037	1A	W0311	2106R	22		34-61-15	ALL
	Y	A037	1A	W0311	2107R	22		34-61-15	ALL
	Y	A037	1A	W0311	2108R	22		34-61-15	ALL
	Y	A039	1A	W0311	2159R	24		23-27-38	YD158-YR328
	Y	A039	1A	W0311	2160R	24		23-27-38	YD158-YR328
	Y	A039	1A	W0311	2161R	24		23-27-38	YD158-YR328
	Y	A041	1A	W0311	2109R	22		34-61-18	YC051-YC058
	Y	A041	1A	W0311	2109R	22		31-32-15	YC059-YR328
	Y	A041	1A	W0311	2110R	22		34-61-18	YC051-YC058
	Y	A041	1A	W0311	2110R	22		31-32-15	YC059-YR328
	Y	A041	1A	W0311	2111R	22		34-61-18	YC051-YC058
	Y	A041	1A	W0311	2112R	22		34-61-18	YC051-YC058
	Y	A041	1A	W0311	2112R	22		31-32-15	YC059-YR328
	Y	A043	1A	W0311	2117R	24		34-21-14	ALL
	Y	A043	1A	W0311	2118R	24		34-21-14	ALL
	Y	A043	1A	W0311	2119R	24		34-21-14	ALL
	Y	A045	1A	W0311	2120R	24		34-21-14	ALL
	Y	A045	1A	W0311	2121R	24		34-21-14	ALL
	Y	A045	1A	W0311	2122R	24		34-21-14	ALL
	Y	A047	1A	W0313	0570	24		31-62-41	YD158-YR328
	Y	A049	1A	W0311	2136R	24		34-45-11	ALL
	Y	A049	1A	W0311	2137R	24		34-45-11	ALL
	Y	A049	1A	W0311	2138R	24		34-45-11	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB3100

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3101		S280W555-526 (continued)					E003-01/ /		ALL
TB3101	Y	S280W555-104 (continued)					E003-01/ /		ALL
TB3101	Z	S280W555-108 (continued)					E003-01/ /		ALL
	Y	A051	1A	W0313	2648R	24		22-11-51	ALL
	Y	A051	1A	W0313	2649R	24		22-11-51	ALL
	Y	A051	1A	W0313	2650R	24		22-11-51	ALL
	Z	A053	1A	W0311	2143W	24		34-41-11	YC051-YC052
	Z	A053	1A	W0311	2144W	24		34-41-11	ALL
	Z	A053	1A	W0313	2644W	24		34-41-11	ALL
	Z	A053	1A	W0313	2671W	24		34-41-11	YC053-YR328
	Z	A057	1A	W0311	2145W	24		34-41-11	ALL
	Z	A057	1A	W0313	2643W	24		34-41-11	ALL
	Z	A057	1A	W0313	2645W	24		34-41-11	ALL
	Y	A061	1A	W0311	0168	22		34-49-11	YC051-YC052
	Y	A061	1A	W0311	0170	22		34-41-11	YC051-YC052
	Y	A061	1A	W0311	0220	24		31-62-41	YD158-YR328
	Y	A063	1A	W0311	0165	22		34-41-11	YC051-YC052
	Y	A065	1A	W0311	0170	22		34-41-11	YC051-YC052
	Y	A067	1A	W0313	2639R	24		34-49-11	ALL
	Y	A067	1A	W0313	2640R	24		34-49-11	ALL
	Y	A067	1A	W0313	2641R	24		34-49-11	ALL
	Y	A069	1A	W0313	2636R	24		34-45-11	ALL
	Y	A069	1A	W0313	2637R	24		34-45-11	ALL
	Y	A069	1A	W0313	2638R	24		34-45-11	ALL
	Y	A071	1A	W0313	2620R	24		34-21-24	ALL
	Y	A071	1A	W0313	2621R	24		34-21-24	ALL
	Y	A071	1A	W0313	2622R	24		34-21-24	ALL
	Y	A073	1A	W0313	2617R	24		34-21-24	ALL
	Y	A073	1A	W0313	2618R	24		34-21-24	ALL
	Y	A073	1A	W0313	2619R	24		34-21-24	ALL
	Y	A075	1A	W0313	2603R	22		34-61-15	ALL
	Y	A075	1A	W0313	2604R	22		34-61-15	ALL
	Y	A075	1A	W0313	2605R	22		34-61-15	ALL
	Y	A077	1A	W0313	2606R	22		34-61-15	ALL
	Y	A077	1A	W0313	2607R	22		34-61-15	ALL
	Y	A077	1A	W0313	2608R	22		34-61-15	ALL
	Z	A081	1A	W0313	2596R	24		34-31-21	ALL
	Z	A081	1A	W0313	2597R	24		34-31-21	ALL
	Z	A081	1A	W0313	2598R	24		34-31-21	ALL
	Z	A081	1A	W0313	2599R	24		34-31-21	ALL
	Z	A081	1A	W0313	2600R	24		34-31-21	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB3100

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3101		S280W555-526 (continued)					E003-01/ /		ALL
TB3101	Y	S280W555-104 (continued)					E003-01/ /		ALL
TB3101	Z	S280W555-108 (continued)					E003-01/ /		ALL
	Y	A085	1A	W0313	2593R	24		34-55-21	ALL
	Y	A085	1A	W0313	2594R	24		34-55-21	ALL
	Y	A085	1A	W0313	2595R	24		34-55-21	ALL
	Y	A087	1A	W0313	2514R	24		31-62-25	ALL
	Y	A087	1A	W0313	2515R	24		31-62-25	ALL
	Y	A087	1A	W0313	2516R	24		31-62-25	ALL
	Y	A089	1A	W0313	2581R	22		34-57-21	ALL
	Y	A089	1A	W0313	2582R	24		34-57-21	ALL
	Y	A089	1A	W0313	2583R	24		34-57-21	ALL
	Y	A091	1A	W0313	2526R	24		31-62-25	ALL
	Y	A091	1A	W0313	2527R	24		31-62-25	ALL
	Y	A091	1A	W0313	2529R	24		31-62-25	ALL
	Y	A091	1A	W0313	2670R	24		31-62-25	YC053-YR328
	Z	A093	1A	W0313	2517R	24		31-62-25	ALL
	Z	A093	1A	W0313	2518R	24		31-62-25	ALL
	Z	A093	1A	W0313	2519R	24		31-62-25	ALL
	Z	A093	1A	W0313	2520R	24		31-62-25	ALL
	Z	A093	1A	W0313	2521R	24		31-62-25	ALL
	Z	A093	1A	W0313	2522R	24		31-62-25	ALL
	Y	A097	1A	W0313	2510R	24		31-62-23	ALL
	Y	A097	1A	W0313	2511R	24		31-62-23	ALL
	Y	A097	1A	W0313	2512R	24		31-62-23	ALL
	Y	A099	1A	W0313	2503R	24		31-62-22	ALL
	Y	A099	1A	W0313	2506R	24		31-62-22	ALL
	Y	A099	1A	W0313	2509R	24		31-62-22	ALL
	Y	A101	1A	W0313	2502R	24		31-62-22	ALL
	Y	A101	1A	W0313	2505R	24		31-62-22	ALL
	Y	A101	1A	W0313	2507R	24		31-62-22	ALL
	Y	A103	1A	W0313	2501R	24		31-62-22	ALL
	Y	A103	1A	W0313	2504R	24		31-62-22	ALL
	Y	A103	1A	W0313	2508R	24		31-62-22	ALL
	Y	B001	1A	W0311	2001B	24		31-62-12	ALL
	Y	B001	1A	W0311	2004B	24		31-62-12	ALL
	Y	B001	1A	W0311	2008B	24		31-62-12	ALL
	Y	B003	1A	W0311	2002B	24		31-62-12	ALL
	Y	B003	1A	W0311	2005B	24		31-62-12	ALL
	Y	B003	1A	W0311	2007B	24		31-62-12	ALL
	Y	B005	1A	W0311	2003B	24		31-62-12	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB3100

Page 4

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB3101		S280W555-526 (continued)					E003-01/ /		ALL
TB3101	Y	S280W555-104 (continued)					E003-01/ /		ALL
TB3101	Z	S280W555-108 (continued)					E003-01/ /		ALL
	Y	B005	1A	W0311	2006B	24		31-62-12	ALL
	Y	B005	1A	W0311	2009B	24		31-62-12	ALL
	Y	B007	1A	W0311	2010B	24		31-62-13	ALL
	Y	B007	1A	W0311	2011B	24		31-62-13	ALL
	Y	B007	1A	W0311	2012B	24		31-62-13	ALL
	Z	B009	1A	W0311	2017B	24		31-62-15	ALL
	Z	B009	1A	W0311	2018B	24		31-62-15	ALL
	Z	B009	1A	W0311	2019B	24		31-62-15	ALL
	Z	B009	1A	W0311	2020B	24		31-62-15	ALL
	Z	B009	1A	W0311	2021B	24		31-62-15	ALL
	Z	B009	1A	W0311	2022B	24		31-62-15	ALL
	Y	B015	1A	W0311	2026B	24		31-62-15	ALL
	Y	B015	1A	W0311	2027B	24		31-62-15	ALL
	Y	B015	1A	W0311	2028B	22		31-62-15	ALL
	Y	B015	1A	W0311	2029B	24		31-62-15	ALL
	Z	B017	1A	W0311	2075B	22		34-33-11	ALL
	Z	B017	1A	W0311	2076B	24		34-33-11	ALL
	Z	B017	1A	W0311	2077B	24		34-33-11	ALL
	Z	B017	1A	W0311	2078B	24		34-33-11	ALL
	Z	B017	1A	W0311	2079B	24		34-33-11	ALL
	Z	B017	1A	W0311	2142B	24		34-41-11	YC051-YC052
	Z	B017	1A	W0313	2672B	24		34-41-11	YC053-YR328
	Y	B021	1A	W0311	2081B	22		34-57-11	ALL
	Y	B021	1A	W0311	2082B	24		34-57-11	ALL
	Y	B021	1A	W0311	2083B	24		34-57-11	ALL
	Y	B023	1A	W0311	2085B	24		31-35-02	ALL
	Y	B023	1A	W0311	2086B	24		31-35-02	ALL
	Y	B023	1A	W0311	2087B	24		31-35-02	ALL
	Y	B023	1A	W0311	2155B	24		31-35-02	ALL
	Y	B025	1A	W0311	2093B	24		34-55-11	ALL
	Y	B025	1A	W0311	2094B	24		34-55-11	ALL
	Y	B025	1A	W0311	2095B	24		34-55-11	ALL
	Y	B027	1A	W0311	2014B	24		31-62-15	ALL
	Y	B027	1A	W0311	2015B	24		31-62-15	ALL
	Y	B027	1A	W0311	2016B	24		31-62-15	ALL
	Z	B029	1A	W0311	2096B	24		34-31-11	ALL
	Z	B029	1A	W0311	2097B	24		34-31-11	ALL
	Z	B029	1A	W0311	2098B	24		34-31-11	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB3100

Page 5

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3101		S280W555-526 (continued)					E003-01/ /		ALL
TB3101	Y	S280W555-104 (continued)					E003-01/ /		ALL
TB3101	Z	S280W555-108 (continued)					E003-01/ /		ALL
	Z	B029	1A	W0311	2099B	24		34-31-11	ALL
	Z	B029	1A	W0311	2100B	24		34-31-11	ALL
	Y	B033	1A	W0311	2156B	24		27-81-41	ALL
	Y	B033	1A	W0311	2157B	24		27-81-41	ALL
	Y	B033	1A	W0313	2657B	24		27-81-41	ALL
	Y	B035	1A	W0311	2103B	22		34-61-15	ALL
	Y	B035	1A	W0311	2104B	22		34-61-15	ALL
	Y	B035	1A	W0311	2105B	22		34-61-15	ALL
	Y	B037	1A	W0311	2106B	22		34-61-15	ALL
	Y	B037	1A	W0311	2107B	22		34-61-15	ALL
	Y	B037	1A	W0311	2108B	22		34-61-15	ALL
	Y	B039	1A	W0311	2159B	24		23-27-38	YD158-YR328
	Y	B039	1A	W0311	2160B	24		23-27-38	YD158-YR328
	Y	B039	1A	W0311	2161B	24		23-27-38	YD158-YR328
	Y	B041	1A	W0311	2109B	22		34-61-18	YC051-YC058
	Y	B041	1A	W0311	2109B	22		31-32-15	YC059-YR328
	Y	B041	1A	W0311	2110B	22		34-61-18	YC051-YC058
	Y	B041	1A	W0311	2110B	22		31-32-15	YC059-YR328
	Y	B041	1A	W0311	2111B	22		34-61-18	YC051-YC058
	Y	B041	1A	W0311	2112B	22		34-61-18	YC051-YC058
	Y	B041	1A	W0311	2112B	22		31-32-15	YC059-YR328
	Y	B043	1A	W0311	2117B	24		34-21-14	ALL
	Y	B043	1A	W0311	2118B	24		34-21-14	ALL
	Y	B043	1A	W0311	2119B	24		34-21-14	ALL
	Y	B045	1A	W0311	2120B	24		34-21-14	ALL
	Y	B045	1A	W0311	2121B	24		34-21-14	ALL
	Y	B045	1A	W0311	2122B	24		34-21-14	ALL
	Y	B047	1A	W0313	0571	24		31-62-41	YD158-YR328
	Y	B049	1A	W0311	2136B	24		34-45-11	ALL
	Y	B049	1A	W0311	2137B	24		34-45-11	ALL
	Y	B049	1A	W0311	2138B	24		34-45-11	ALL
	Y	B051	1A	W0313	2648B	24		22-11-51	ALL
	Y	B051	1A	W0313	2649B	24		22-11-51	ALL
	Y	B051	1A	W0313	2650B	24		22-11-51	ALL
	Z	B053	1A	W0311	2143B	24		34-41-11	YC051-YC052
	Z	B053	1A	W0311	2144B	24		34-41-11	ALL
	Z	B053	1A	W0313	2644B	24		34-41-11	ALL
	Z	B053	1A	W0313	2671B	24		34-41-11	YC053-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB3100

Page 6

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3101		S280W555-526 (continued)					E003-01/ /		ALL
TB3101	Y	S280W555-104 (continued)					E003-01/ /		ALL
TB3101	Z	S280W555-108 (continued)					E003-01/ /		ALL
	Z	B057	1A	W0311	2145B	24		34-41-11	ALL
	Z	B057	1A	W0313	2643B	24		34-41-11	ALL
	Z	B057	1A	W0313	2645B	24		34-41-11	ALL
	Y	B061	1A	W0311	0161	22		34-41-11	YC051-YC052
	Y	B061	1A	W0311	0166	22		34-41-11	YC051-YC052
	Y	B061	1A	W0311	0221	24		31-62-41	YD158-YR328
	Y	B063	1A	W0311	0166	22		34-41-11	YC051-YC052
	Y	B063	1A	W0311	0167	22		34-49-11	YC051-YC052
	Y	B065	1A	W0311	0162	22		34-41-11	YC051-YC052
	Y	B065	1A	W0311	0169	22		34-49-11	YC051-YC052
	Y	B067	1A	W0313	2639B	24		34-49-11	ALL
	Y	B067	1A	W0313	2640B	24		34-49-11	ALL
	Y	B067	1A	W0313	2641B	24		34-49-11	ALL
	Y	B069	1A	W0313	2636B	24		34-45-11	ALL
	Y	B069	1A	W0313	2637B	24		34-45-11	ALL
	Y	B069	1A	W0313	2638B	24		34-45-11	ALL
	Y	B071	1A	W0313	2620B	24		34-21-24	ALL
	Y	B071	1A	W0313	2621B	24		34-21-24	ALL
	Y	B071	1A	W0313	2622B	24		34-21-24	ALL
	Y	B073	1A	W0313	2617B	24		34-21-24	ALL
	Y	B073	1A	W0313	2618B	24		34-21-24	ALL
	Y	B073	1A	W0313	2619B	24		34-21-24	ALL
	Y	B075	1A	W0313	2603B	22		34-61-15	ALL
	Y	B075	1A	W0313	2604B	22		34-61-15	ALL
	Y	B075	1A	W0313	2605B	22		34-61-15	ALL
	Y	B077	1A	W0313	2606B	22		34-61-15	ALL
	Y	B077	1A	W0313	2607B	22		34-61-15	ALL
	Y	B077	1A	W0313	2608B	22		34-61-15	ALL
	Z	B081	1A	W0313	2596B	24		34-31-21	ALL
	Z	B081	1A	W0313	2597B	24		34-31-21	ALL
	Z	B081	1A	W0313	2598B	24		34-31-21	ALL
	Z	B081	1A	W0313	2599B	24		34-31-21	ALL
	Z	B081	1A	W0313	2600B	24		34-31-21	ALL
	Y	B085	1A	W0313	2593B	24		34-55-21	ALL
	Y	B085	1A	W0313	2594B	24		34-55-21	ALL
	Y	B085	1A	W0313	2595B	24		34-55-21	ALL
	Y	B087	1A	W0313	2514B	24		31-62-25	ALL
	Y	B087	1A	W0313	2515B	24		31-62-25	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB3100

Page 7

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3101		S280W555-526 (continued)					E003-01/ /		ALL
TB3101	Y	S280W555-104 (continued)					E003-01/ /		ALL
TB3101	Z	S280W555-108 (continued)					E003-01/ /		ALL
	Y	B087	1A	W0313	2516B	24		31-62-25	ALL
	Y	B089	1A	W0313	2581B	22		34-57-21	ALL
	Y	B089	1A	W0313	2582B	24		34-57-21	ALL
	Y	B089	1A	W0313	2583B	24		34-57-21	ALL
	Y	B091	1A	W0313	2526B	24		31-62-25	ALL
	Y	B091	1A	W0313	2527B	24		31-62-25	ALL
	Y	B091	1A	W0313	2529B	24		31-62-25	ALL
	Y	B091	1A	W0313	2670B	24		31-62-25	YC053-YR328
	Z	B093	1A	W0313	2517B	24		31-62-25	ALL
	Z	B093	1A	W0313	2518B	24		31-62-25	ALL
	Z	B093	1A	W0313	2519B	24		31-62-25	ALL
	Z	B093	1A	W0313	2520B	24		31-62-25	ALL
	Z	B093	1A	W0313	2521B	24		31-62-25	ALL
	Z	B093	1A	W0313	2522B	24		31-62-25	ALL
	Y	B097	1A	W0313	2510B	24		31-62-23	ALL
	Y	B097	1A	W0313	2511B	24		31-62-23	ALL
	Y	B097	1A	W0313	2512B	24		31-62-23	ALL
	Y	B099	1A	W0313	2503B	24		31-62-22	ALL
	Y	B099	1A	W0313	2506B	24		31-62-22	ALL
	Y	B099	1A	W0313	2509B	24		31-62-22	ALL
	Y	B101	1A	W0313	2502B	24		31-62-22	ALL
	Y	B101	1A	W0313	2505B	24		31-62-22	ALL
	Y	B101	1A	W0313	2507B	24		31-62-22	ALL
	Y	B103	1A	W0313	2501B	24		31-62-22	ALL
	Y	B103	1A	W0313	2504B	24		31-62-22	ALL
	Y	B103	1A	W0313	2508B	24		31-62-22	ALL
TB3102		S280W555-526					E003-01/ /		ALL
TB3102	Y	S280W555-104					E003-01/ /		ALL
TB3102	Z	S280W555-108					E003-01/ /		ALL
	Y	A001	1A	W0311	1001	22		31-62-14	ALL
	Y	A001	1A	W0311	1002	22		31-62-14	ALL
	Y	A001	1A	W0311	1003	22		31-62-14	ALL
	Y	A003	1A	W0311	0030	24		74-31-11	ALL
	Y	A003	1A	W0311	0031	24		74-31-11	ALL
	Y	A003	1A	W0311	0032	24		74-31-11	ALL
	Y	A005	1A	W0311	0033	24		74-31-11	ALL
	Y	A005	1A	W0311	0034	24		74-31-11	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB3100

Page 8

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB3102		S280W555-526 (continued)					E003-01/ /		ALL
TB3102	Y	S280W555-104 (continued)					E003-01/ /		ALL
TB3102	Z	S280W555-108 (continued)					E003-01/ /		ALL
	Y	A005	1A	W0311	0035	24		74-31-11	ALL
	Y	A007	1A	W0311	2034R	24		77-31-11	ALL
	Y	A007	1A	W0311	2035R	24		77-31-11	ALL
	Y	A007	1A	W0311	2036R	24		77-31-11	ALL
	Y	A009	1A	W0311	0036	24		76-21-11	ALL
	Y	A009	1A	W0311	0037	24		76-21-11	ALL
	Y	A009	1A	W0311	0038	24		76-21-11	ALL
	Y	A009	1A	W0311	0041	24		76-21-11	ALL
	Y	A011	1A	W0311	0042	24		73-21-31	ALL
	Y	A011	1A	W0311	0047	24		73-21-31	ALL
	Y	A011	1A	W0311	0056	24		73-21-31	ALL
	Y	A013	1A	W0311	0044	24		73-21-31	ALL
	Y	A013	1A	W0311	0049	24		73-21-31	ALL
	Y	A013	1A	W0311	0054	24		73-21-31	ALL
	Y	A015	1A	W0311	0046	24		73-21-31	ALL
	Y	A015	1A	W0311	0051	24		73-21-31	ALL
	Y	A015	1A	W0311	0052	24		73-21-31	ALL
	Y	A017	1A	W0311	0060	24		73-22-11	ALL
	Y	A017	1A	W0311	0061	24		73-22-11	ALL
	Y	A017	1A	W0311	0062	24		73-22-11	ALL
	Y	A019	1A	W0311	0066	24		73-23-11	ALL
	Y	A019	1A	W0311	0069	24		73-23-11	ALL
	Y	A019	1A	W0311	0073	24		73-23-11	ALL
	Y	A021	1A	W0311	0068	24		73-23-11	ALL
	Y	A021	1A	W0311	0071	24		73-23-11	ALL
	Y	A021	1A	W0311	0074	24		73-23-11	ALL
	Y	A023	1A	W0311	0078	24		73-32-11	ALL
	Y	A023	1A	W0311	0079	24		73-32-11	ALL
	Y	A023	1A	W0311	0080	24		73-32-11	ALL
	Y	A025	1A	W0311	0082	24		80-11-11	ALL
	Y	A025	1A	W0311	0084	24		80-11-11	ALL
	Y	A025	1A	W0311	0086	24		80-11-11	ALL
	Y	A027	1A	W0313	2534R	24		34-61-14	YL951-YR328
	Y	A027	1A	W0313	2552R	24		34-61-14	YL951-YR328
	Y	A027	1A	W0313	2563R	24		34-61-14	YL951-YR328
	Z	A029	1A	W0311	0092	24		29-31-11	ALL
	Z	A029	1A	W0311	0101	24		29-31-11	ALL
	Z	A029	1A	W0311	0102	24		29-31-11	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB3100

Page 9

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3102		S280W555-526 (continued)					E003-01/ /		ALL
TB3102	Y	S280W555-104 (continued)					E003-01/ /		ALL
TB3102	Z	S280W555-108 (continued)					E003-01/ /		ALL
	Z	A029	1A	W0311	0103	24		29-31-11	ALL
	Z	A029	1A	W0311	0104	24		29-31-11	ALL
	Y	A033	1A	W0311	0091	24		29-31-11	ALL
	Y	A033	1A	W0311	0099	24		29-31-11	ALL
	Y	A033	1A	W0311	0100	24		29-31-11	ALL
	Y	A035	1A	W0311	2041R	24		73-24-11	ALL
	Y	A035	1A	W0311	2043R	24		73-24-11	ALL
	Y	A035	1A	W0311	2045R	24		73-24-11	ALL
	Y	A037	1A	W0311	2042R	24		73-24-11	ALL
	Y	A037	1A	W0311	2044R	24		73-24-11	ALL
	Y	A037	1A	W0311	2046R	24		73-24-11	ALL
	Y	A039	1A	W0311	2049R	24		73-24-12	ALL
	Y	A039	1A	W0311	2050R	24		73-24-12	ALL
	Y	A039	1A	W0311	2052R	24		73-24-12	ALL
	Y	A039	1A	W0313	2550R	24		73-24-12	ALL
	Y	A041	1A	W0311	2053R	22		28-41-11	ALL
	Y	A041	1A	W0311	2054R	22		28-41-11	ALL
	Y	A041	1A	W0311	2055R	22		28-41-11	ALL
	Y	A043	1A	W0311	2057R	22		28-41-11	ALL
	Y	A043	1A	W0311	2058R	22		28-41-11	ALL
	Y	A043	1A	W0313	2559R	22		28-41-11	ALL
	Y	A045	1A	W0311	2060R	22		28-41-11	ALL
	Y	A045	1A	W0311	2061R	22		28-41-11	ALL
	Y	A045	1A	W0311	2062R	22		28-41-11	ALL
	Y	A047	1A	W0311	2065R	24		77-12-11	ALL
	Y	A047	1A	W0311	2066R	24		77-12-11	ALL
	Y	A047	1A	W0311	2067R	24		77-12-11	ALL
	Y	A047	1A	W0311	2068R	24		77-31-11	ALL
	Y	A049	1A	W0311	2069R	24		77-12-21	ALL
	Y	A049	1A	W0311	2070R	24		77-12-21	ALL
	Y	A049	1A	W0311	2071R	24		77-12-21	ALL
	Y	A049	1A	W0311	2072R	24		77-31-11	ALL
	Y	A051	1A	W0311	0191	24		31-62-14	ALL
	Y	A051	1A	W0311	0192	24		31-62-14	ALL
	Y	A051	1A	W0311	0193	24		31-62-14	ALL
	Z	A053	1A	W0311	2123R	24		79-31-11	ALL
	Z	A053	1A	W0311	2124R	24		79-31-11	ALL
	Z	A053	1A	W0311	2125R	24		79-31-11	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB3100

Page 10

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3102		S280W555-526 (continued)					E003-01/ /		ALL
TB3102	Y	S280W555-104 (continued)					E003-01/ /		ALL
TB3102	Z	S280W555-108 (continued)					E003-01/ /		ALL
	Z	A053	1A	W0311	2126R	24		79-31-11	ALL
	Z	A053	1A	W0311	3001R	24		79-31-11	ALL
	Z	A057	1A	W0311	2037R	22		49-62-11	ALL
	Z	A057	1A	W0311	2038R	22		49-62-11	ALL
	Z	A057	1A	W0311	2039R	22		49-62-11	ALL
	Z	A057	1A	W0311	2040R	22		49-62-11	ALL
	Z	A057	1A	W0311	2162R	22		49-62-11	ALL
	Z	A061	1A	W0313	2623R	24		79-31-11	ALL
	Z	A061	1A	W0313	2624R	24		79-31-11	ALL
	Z	A061	1A	W0313	2625R	24		79-31-11	ALL
	Z	A061	1A	W0313	2626R	24		79-31-11	ALL
	Z	A061	1A	W0313	3501R	24		79-31-11	ALL
	Y	A065	1A	W0313	0515	24		31-62-24	ALL
	Y	A065	1A	W0313	0516	24		31-62-24	ALL
	Y	A065	1A	W0313	0517	24		31-62-24	ALL
	Y	A069	1A	W0313	2565R	24		77-12-11	ALL
	Y	A069	1A	W0313	2566R	24		77-12-11	ALL
	Y	A069	1A	W0313	2567R	24		77-12-11	ALL
	Y	A069	1A	W0313	2568R	24		77-31-21	ALL
	Y	A071	1A	W0313	2569R	24		77-12-21	ALL
	Y	A071	1A	W0313	2570R	24		77-12-21	ALL
	Y	A071	1A	W0313	2571R	24		77-12-21	ALL
	Y	A071	1A	W0313	2572R	24		77-31-21	ALL
	Y	A073	1A	W0311	2051R	24		73-24-12	ALL
	Y	A073	1A	W0313	2549R	24		73-24-12	ALL
	Y	A073	1A	W0313	2551R	24		73-24-12	ALL
	Y	A075	1A	W0313	2542R	24		73-24-21	ALL
	Y	A075	1A	W0313	2544R	24		73-24-21	ALL
	Y	A075	1A	W0313	2546R	24		73-24-21	ALL
	Y	A075	1A	W0313	2548R	24		73-24-21	ALL
	Y	A077	1A	W0313	2541R	24		73-24-21	ALL
	Y	A077	1A	W0313	2543R	24		73-24-21	ALL
	Y	A077	1A	W0313	2545R	24		73-24-21	ALL
	Y	A077	1A	W0313	2547R	24		73-24-21	ALL
	Y	A079	1A	W0313	0591	24		29-31-11	ALL
	Y	A079	1A	W0313	0599	24		29-31-11	ALL
	Y	A079	1A	W0313	0600	24		29-31-11	ALL
	Z	A081	1A	W0313	0592	24		29-31-11	ALL

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB3100

Page 11

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3102		S280W555-526 (continued)					E003-01/ /		ALL
TB3102	Y	S280W555-104 (continued)					E003-01/ /		ALL
TB3102	Z	S280W555-108 (continued)					E003-01/ /		ALL
	Z	A081	1A	W0313	0601	24		29-31-11	ALL
	Z	A081	1A	W0313	0602	24		29-31-11	ALL
	Z	A081	1A	W0313	0603	24		29-31-11	ALL
	Z	A081	1A	W0313	0604	24		29-31-11	ALL
	Y	A085	1A	W0313	0581	24		80-11-11	ALL
	Y	A085	1A	W0313	0583	24		80-11-11	ALL
	Y	A085	1A	W0313	0585	24		80-11-11	ALL
	Y	A087	1A	W0313	0575	24		73-31-11	ALL
	Y	A087	1A	W0313	0576	24		73-31-11	ALL
	Y	A087	1A	W0313	0577	24		73-31-11	ALL
	Y	A089	1A	W0313	0560	24		73-23-11	ALL
	Y	A089	1A	W0313	0563	24		73-23-11	ALL
	Y	A089	1A	W0313	0567	24		73-23-11	ALL
	Y	A091	1A	W0313	0554	24		73-22-11	ALL
	Y	A091	1A	W0313	0555	24		73-22-11	ALL
	Y	A091	1A	W0313	0556	24		73-22-11	ALL
	Y	A093	1A	W0313	0551	24		73-21-12	ALL
	Y	A093	1A	W0313	0552	24		73-21-12	ALL
	Y	A093	1A	W0313	0553	24		73-21-12	ALL
	Y	A095	1A	W0313	0542	24		73-21-31	ALL
	Y	A095	1A	W0313	0547	24		73-21-31	ALL
	Y	A095	1A	W0313	0548	24		73-21-31	ALL
	Y	A097	1A	W0313	0536	24		76-21-21	ALL
	Y	A097	1A	W0313	0537	24		76-21-21	ALL
	Y	A097	1A	W0313	0538	24		76-21-21	ALL
	Y	A097	1A	W0313	0541	24		76-21-21	ALL
	Y	A099	1A	W0313	0539	24		76-21-21	ALL
	Y	A099	1A	W0313	0540	24		76-21-21	ALL
	Y	A099	1A	W0313	0541	24		76-21-21	ALL
	Y	A101	1A	W0313	0530	24		74-31-11	ALL
	Y	A101	1A	W0313	0531	24		74-31-11	ALL
	Y	A101	1A	W0313	0532	24		74-31-11	ALL
	Y	A103	1A	W0313	1501	22		31-62-24	ALL
	Y	A103	1A	W0313	1502	22		31-62-24	ALL
	Y	A103	1A	W0313	1503	22		31-62-24	ALL
	Y	B001	1A	W0311	0012	24		31-62-14	ALL
	Y	B001	1A	W0311	0013	24		31-62-14	ALL
	Y	B001	1A	W0311	0014	24		31-62-14	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB3100

Page 12

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB3102		S280W555-526 (continued)					E003-01/ /		ALL
TB3102	Y	S280W555-104 (continued)					E003-01/ /		ALL
TB3102	Z	S280W555-108 (continued)					E003-01/ /		ALL
	Y	B003	1A	W0311	0027	24		74-31-11	ALL
	Y	B003	1A	W0311	0028	24		74-31-11	ALL
	Y	B003	1A	W0311	0029	24		74-31-11	ALL
	Y	B005	1A	W0311	0015	24		31-62-14	ALL
	Y	B005	1A	W0311	0016	24		31-62-14	ALL
	Y	B005	1A	W0311	0017	24		31-62-14	ALL
	Y	B007	1A	W0311	2034B	24		77-31-11	ALL
	Y	B007	1A	W0311	2035B	24		77-31-11	ALL
	Y	B007	1A	W0311	2036B	24		77-31-11	ALL
	Y	B009	1A	W0311	0039	24		76-21-11	ALL
	Y	B009	1A	W0311	0040	24		76-21-11	ALL
	Y	B009	1A	W0311	0041	24		76-21-11	ALL
	Y	B011	1A	W0311	0043	24		73-21-31	ALL
	Y	B011	1A	W0311	0048	24		73-21-31	ALL
	Y	B011	1A	W0311	0055	24		73-21-31	ALL
	Y	B013	1A	W0311	0045	24		73-21-31	ALL
	Y	B013	1A	W0311	0050	24		73-21-31	ALL
	Y	B013	1A	W0311	0053	24		73-21-31	ALL
	Y	B015	1A	W0311	0057	24		73-21-12	ALL
	Y	B015	1A	W0311	0058	24		73-21-12	ALL
	Y	B015	1A	W0311	0059	24		73-21-12	ALL
	Y	B017	1A	W0311	0063	24		73-22-31	ALL
	Y	B017	1A	W0311	0064	24		73-22-31	ALL
	Y	B017	1A	W0311	0065	24		73-22-31	ALL
	Y	B019	1A	W0311	0067	24		73-23-11	ALL
	Y	B019	1A	W0311	0070	24		73-23-11	ALL
	Y	B019	1A	W0311	0072	24		73-23-11	ALL
	Y	B021	1A	W0311	0075	24		73-31-11	ALL
	Y	B021	1A	W0311	0076	24		73-31-11	ALL
	Y	B021	1A	W0311	0077	24		73-31-11	ALL
	Y	B023	1A	W0311	0081	24		80-11-11	ALL
	Y	B023	1A	W0311	0083	24		80-11-11	ALL
	Y	B023	1A	W0311	0085	24		80-11-11	ALL
	Y	B025	1A	W0311	0087	22		49-62-11	ALL
	Y	B025	1A	W0311	0088	22		49-62-11	ALL
	Y	B025	1A	W0311	0089	22		49-62-11	ALL
	Y	B027	1A	W0313	2534B	24		34-61-14	YL951-YR328
	Y	B027	1A	W0313	2552B	24		34-61-14	YL951-YR328

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB3100

Page 13

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3102		S280W555-526 (continued)					E003-01/ /		ALL
TB3102	Y	S280W555-104 (continued)					E003-01/ /		ALL
TB3102	Z	S280W555-108 (continued)					E003-01/ /		ALL
	Y	B027	1A	W0313	2563B	24		34-61-14	YL951-YR328
	Z	B029	1A	W0311	0090	24		29-31-11	ALL
	Z	B029	1A	W0311	0093	24		29-31-11	ALL
	Z	B029	1A	W0311	0094	24		29-31-11	ALL
	Z	B029	1A	W0311	0095	24		29-31-11	ALL
	Z	B029	1A	W0311	0096	24		29-31-11	ALL
	Z	B029	1A	W0311	0097	24		29-31-11	ALL
	Z	B029	1A	W0311	0098	24		29-31-11	ALL
	Y	B035	1A	W0311	2041B	24		73-24-11	ALL
	Y	B035	1A	W0311	2043B	24		73-24-11	ALL
	Y	B035	1A	W0311	2045B	24		73-24-11	ALL
	Y	B037	1A	W0311	2042B	24		73-24-11	ALL
	Y	B037	1A	W0311	2044B	24		73-24-11	ALL
	Y	B037	1A	W0311	2046B	24		73-24-11	ALL
	Y	B039	1A	W0311	2049B	24		73-24-12	ALL
	Y	B039	1A	W0311	2050B	24		73-24-12	ALL
	Y	B039	1A	W0311	2052B	24		73-24-12	ALL
	Y	B039	1A	W0313	2550B	24		73-24-12	ALL
	Y	B041	1A	W0311	2053B	22		28-41-11	ALL
	Y	B041	1A	W0311	2054B	22		28-41-11	ALL
	Y	B041	1A	W0311	2055B	22		28-41-11	ALL
	Y	B043	1A	W0311	2057B	22		28-41-11	ALL
	Y	B043	1A	W0311	2058B	22		28-41-11	ALL
	Y	B043	1A	W0313	2559B	22		28-41-11	ALL
	Y	B045	1A	W0311	2060B	22		28-41-11	ALL
	Y	B045	1A	W0311	2061B	22		28-41-11	ALL
	Y	B045	1A	W0311	2062B	22		28-41-11	ALL
	Y	B047	1A	W0311	2065B	24		77-12-11	ALL
	Y	B047	1A	W0311	2066B	24		77-12-11	ALL
	Y	B047	1A	W0311	2067B	24		77-12-11	ALL
	Y	B047	1A	W0311	2068B	24		77-31-11	ALL
	Y	B049	1A	W0311	2069B	24		77-12-21	ALL
	Y	B049	1A	W0311	2070B	24		77-12-21	ALL
	Y	B049	1A	W0311	2071B	24		77-12-21	ALL
	Y	B049	1A	W0311	2072B	24		77-31-11	ALL
	Y	B051	1A	W0311	1006	24		79-31-11	ALL
	Y	B051	1A	W0311	1007	24		79-31-11	ALL
	Y	B051	1A	W0311	3001Y	24		79-31-11	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB3100

Page 14

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB3102		S280W555-526 (continued)					E003-01/ /		ALL
TB3102	Y	S280W555-104 (continued)					E003-01/ /		ALL
TB3102	Z	S280W555-108 (continued)					E003-01/ /		ALL
	Z	B053	1A	W0311	1004	24		79-31-11	ALL
	Z	B053	1A	W0311	1005	24		79-31-11	ALL
	Z	B053	1A	W0311	2123B	24		79-31-11	ALL
	Z	B053	1A	W0311	2124B	24		79-31-11	ALL
	Z	B053	1A	W0311	2125B	24		79-31-11	ALL
	Z	B053	1A	W0311	2126B	24		79-31-11	ALL
	Z	B053	1A	W0311	3001B	24		79-31-11	ALL
	Z	B057	1A	W0311	2037B	22		49-62-11	ALL
	Z	B057	1A	W0311	2038B	22		49-62-11	ALL
	Z	B057	1A	W0311	2039B	22		49-62-11	ALL
	Z	B057	1A	W0311	2040B	22		49-62-11	ALL
	Z	B057	1A	W0311	2162B	22		49-62-11	ALL
	Z	B061	1A	W0313	1504	24		79-31-11	ALL
	Z	B061	1A	W0313	1505	24		79-31-11	ALL
	Z	B061	1A	W0313	2623B	24		79-31-11	ALL
	Z	B061	1A	W0313	2624B	24		79-31-11	ALL
	Z	B061	1A	W0313	2625B	24		79-31-11	ALL
	Z	B061	1A	W0313	2626B	24		79-31-11	ALL
	Z	B061	1A	W0313	3501B	24		79-31-11	ALL
	Y	B065	1A	W0313	1506	24		79-31-11	ALL
	Y	B065	1A	W0313	1507	24		79-31-11	ALL
	Y	B065	1A	W0313	3501Y	24		79-31-11	ALL
	Y	B069	1A	W0313	2565B	24		77-12-11	ALL
	Y	B069	1A	W0313	2566B	24		77-12-11	ALL
	Y	B069	1A	W0313	2567B	24		77-12-11	ALL
	Y	B069	1A	W0313	2568B	24		77-31-21	ALL
	Y	B071	1A	W0313	2569B	24		77-12-21	ALL
	Y	B071	1A	W0313	2570B	24		77-12-21	ALL
	Y	B071	1A	W0313	2571B	24		77-12-21	ALL
	Y	B071	1A	W0313	2572B	24		77-31-21	ALL
	Y	B073	1A	W0311	2051B	24		73-24-12	ALL
	Y	B073	1A	W0313	2549B	24		73-24-12	ALL
	Y	B073	1A	W0313	2551B	24		73-24-12	ALL
	Y	B075	1A	W0313	2542B	24		73-24-21	ALL
	Y	B075	1A	W0313	2544B	24		73-24-21	ALL
	Y	B075	1A	W0313	2546B	24		73-24-21	ALL
	Y	B075	1A	W0313	2548B	24		73-24-21	ALL
	Y	B077	1A	W0313	2541B	24		73-24-21	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB3100

Page 15

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3102		S280W555-526 (continued)					E003-01/ /		ALL
TB3102	Y	S280W555-104 (continued)					E003-01/ /		ALL
TB3102	Z	S280W555-108 (continued)					E003-01/ /		ALL
	Y	B077	1A	W0313	2543B	24		73-24-21	ALL
	Y	B077	1A	W0313	2545B	24		73-24-21	ALL
	Y	B077	1A	W0313	2547B	24		73-24-21	ALL
	Y	B079	1A	W0313	0691	24		31-62-24	ALL
	Y	B079	1A	W0313	0692	24		31-62-24	ALL
	Y	B079	1A	W0313	0693	24		31-62-24	ALL
	Z	B081	1A	W0313	0590	24		29-31-11	ALL
	Z	B081	1A	W0313	0593	24		29-31-11	ALL
	Z	B081	1A	W0313	0594	24		29-31-11	ALL
	Z	B081	1A	W0313	0595	24		29-31-11	ALL
	Z	B081	1A	W0313	0596	24		29-31-11	ALL
	Z	B081	1A	W0313	0597	24		29-31-11	ALL
	Z	B081	1A	W0313	0598	24		29-31-11	ALL
	Y	B085	1A	W0313	0582	24		80-11-11	ALL
	Y	B085	1A	W0313	0584	24		80-11-11	ALL
	Y	B085	1A	W0313	0586	24		80-11-11	ALL
	Y	B087	1A	W0313	0578	24		73-32-11	ALL
	Y	B087	1A	W0313	0579	24		73-32-11	ALL
	Y	B087	1A	W0313	0580	24		73-32-11	ALL
	Y	B089	1A	W0313	0562	24		73-23-11	ALL
	Y	B089	1A	W0313	0564	24		73-23-11	ALL
	Y	B089	1A	W0313	0568	24		73-23-11	ALL
	Y	B091	1A	W0313	0561	24		73-23-11	ALL
	Y	B091	1A	W0313	0565	24		73-23-11	ALL
	Y	B091	1A	W0313	0566	24		73-23-11	ALL
	Y	B093	1A	W0313	0557	24		73-22-31	ALL
	Y	B093	1A	W0313	0558	24		73-22-31	ALL
	Y	B093	1A	W0313	0559	24		73-22-31	ALL
	Y	B095	1A	W0313	0543	24		73-21-31	ALL
	Y	B095	1A	W0313	0546	24		73-21-31	ALL
	Y	B095	1A	W0313	0549	24		73-21-31	ALL
	Y	B097	1A	W0313	0544	24		73-21-31	ALL
	Y	B097	1A	W0313	0545	24		73-21-31	ALL
	Y	B097	1A	W0313	0550	24		73-21-31	ALL
	Y	B099	1A	W0313	0533	24		74-31-11	ALL
	Y	B099	1A	W0313	0534	24		74-31-11	ALL
	Y	B099	1A	W0313	0535	24		74-31-11	ALL
	Y	B101	1A	W0313	0527	24		74-31-11	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB3100

Page 16

Nov 12/2012





Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB3102		S280W555-526 (continued)					E003-01/ /		ALL
TB3102	Y	S280W555-104 (continued)					E003-01/ /		ALL
TB3102	Z	S280W555-108 (continued)					E003-01/ /		ALL
	Y	B101	1A	W0313	0528	24		74-31-11	ALL
	Y	B101	1A	W0313	0529	24		74-31-11	ALL
	Y	B103	1A	W0313	0512	24		31-62-24	ALL
	Y	B103	1A	W0313	0513	24		31-62-24	ALL
	Y	B103	1A	W0313	0514	24		31-62-24	ALL

For training purposes only!

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB3100

Page 17 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3201		S280W555-522					E003-2/ /		ALL
TB3201	X	S280W555-102					E003-02/ /		ALL
TB3201	Y	S280W555-104					E003-02/ /		ALL
TB3201	Z	S280W555-108					E003-02/ /		ALL
	X	A001	1A	W0321	0140	22		27-32-11	ALL
	X	A002	1A	W0321	0141	22		27-32-11	ALL
	X	A003	1A	W0321	0142	22		27-32-11	ALL
	X	A003	1A	W0321	0446	22		27-32-11	YC067-YD157
	X	A004	1A	W0321	0143	22		27-32-11	ALL
	X	A004	1A	W0321	0447	22		27-32-11	YC051-YD157, YL953-YL999, YR301-YR328
	X	A005	1A	W0321	0144	22		27-32-11	ALL
	X	A005	1A	W0321	0448	22		27-32-11	YC067-YD157, YL953-YL999, YR301-YR328
	X	A006	1A	W0321	0147	22		27-32-11	YL953-YR328
	X	A007	1A	W0321	0146	22		27-32-11	YC051-YL999, YR301-YR328
	X	A008	1A	W0321	0284	22		27-32-21	YC051-YL999, YR301-YR328
	Y	A009	1A	W0321	0145	22		27-32-11	ALL
	Y	A009	1A	W0321	0146	22		27-32-11	YN231-YN501
	Y	A009	1A	W0321	0147	22		27-32-11	YC051-YL952
	Y	A009	1A	W0321	0148	22		27-32-11	ALL
	Y	A009	1A	W0321	0444	22		27-32-11	YL953-YL999, YR301-YR328
	Y	A011	1A	W0321	0096	22		27-32-11	ALL
	Y	A011	1A	W0321	0376	22		27-32-11	ALL
	Y	A011	1A	W0321	0378	22		27-32-11	ALL
	Y	A013	1A	W0321	0136	24		27-32-11	ALL
	Y	A013	1A	W0321	0137	24		27-32-11	ALL
	Y	A013	1A	W0321	0265	24		27-32-21	ALL
	Y	A015	1A	W0321	0258	22		27-32-21	ALL
	Y	A015	1A	W0321	0277	22		27-32-11	ALL
	Y	A015	1A	W0321	0278	22		27-32-11	ALL
	Y	A017	1A	W0321	2226R	22		22-23-12	YC051-YL959, YN231-YN235
	Y	A017	1A	W0321	3224R	22		22-23-12	YC051-YL959, YN231-YN235
	Y	A017	1A	W0321	3225R	22		22-23-12	YC051-YL959, YN231-YN235
	Y	A019	1A	W0321	0226	20		22-23-12	ALL
	Y	A019	1A	W0321	0229	22		22-23-12	ALL
	Y	A019	1A	W0321	0604	20		22-23-12	ALL
	Z	A021	1A	W0321	2025R	24		27-32-12	ALL
	Z	A021	1A	W0321	2026R	24		27-32-12	ALL
	Z	A021	1A	W0321	2713R	24		27-32-12	ALL
	Z	A021	1A	W0321	2714R	24		27-32-12	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB3200

Page 1

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3201		S280W555-522 (continued)					E003-2/ /		ALL
TB3201	X	S280W555-102 (continued)					E003-02/ /		ALL
TB3201	Y	S280W555-104 (continued)					E003-02/ /		ALL
TB3201	Z	S280W555-108 (continued)					E003-02/ /		ALL
	Z	A021	1A	W0321	2715R	24		27-32-12	ALL
	Z	A021	1A	W0321	2717R	24		27-32-12	ALL
	Z	A025	1A	W0321	2027R	24		27-32-22	ALL
	Z	A025	1A	W0321	2028R	24		27-32-22	ALL
	Z	A025	1A	W0321	2117R	24		27-32-22	YD158-YR328
	Z	A025	1A	W0321	2753R	24		27-32-22	ALL
	Z	A025	1A	W0321	2754R	24		27-32-22	ALL
	Z	A025	1A	W0321	2755R	24		27-32-22	ALL
	Z	A025	1A	W0321	2756R	24		27-32-22	ALL
	Z	A025	1A	W0321	2757R	24		27-32-22	YC051-YD157
	Y	A029	1A	W0321	0321	20		78-34-11	ALL
	Y	A029	1A	W0321	0323	20		78-34-11	ALL
	Y	A029	1A	W0321	0956	20		78-34-11	ALL
	Y	A031	1A	W0321	2017R	24		34-21-14	ALL
	Y	A031	1A	W0321	2029R	24		34-21-14	ALL
	Y	A031	1A	W0321	2030R	24		34-21-14	ALL
	Y	A031	1A	W0321	2056R	24		34-21-14	YC051-YD170
	Y	A033	1A	W0321	0095	22		27-32-11	YC051-YL952, YN231-YN501
	Y	A033	1A	W0321	0273	22		27-32-11	YC051-YL952, YN231-YN501
	Y	A033	1A	W0321	0274	22		27-32-11	YC051-YL952, YN231-YN501
	Y	A033	1A	W0321	0280	22		27-32-11	YC051-YL952, YN231-YN501
	Y	A033	1A	W0321	0531	20		33-25-11	YL953-YL999, YR301-YR328
	Y	A035	1A	W0321	0058	24		31-31-15	YN236-YR328
	Y	A035	1A	W0321	0547	24		31-31-15	YN236-YR328
	Y	A035	1A	W0321	0548	24		31-35-03	YN236-YR328
	Y	A035	1A	W0321	2009R	22		34-61-18	YC051-YC058
	Y	A035	1A	W0321	2009R	22		31-32-15	YC059-YD157
	Y	A035	1A	W0321	2302R	22		34-61-18	YC051-YC058
	Y	A035	1A	W0321	2302R	22		31-32-15	YC059-YD157
	Y	A035	1A	W0321	2303R	22		34-61-18	YC051-YC058
	Y	A035	1A	W0321	2304R	22		34-61-18	YC051-YC058
	Y	A035	1A	W0321	2304R	22		31-32-15	YC059-YD157
	Y	A037	1A	W0321	2184R	24		77-31-11	ALL
	Y	A037	1A	W0321	2185R	24		77-31-11	ALL
	Y	A037	1A	W0321	2186R	24		77-31-11	ALL
	Y	A039	1A	W0321	2016R	24		34-61-14	ALL
	Y	A039	1A	W0321	2018R	24		34-61-14	ALL

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB3200

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3201		S280W555-522 (continued)					E003-2/ /		ALL
TB3201	X	S280W555-102 (continued)					E003-02/ /		ALL
TB3201	Y	S280W555-104 (continued)					E003-02/ /		ALL
TB3201	Z	S280W555-108 (continued)					E003-02/ /		ALL
	Y	A039	1A	W0321	2057R	24		34-61-14	YC051-YC055
	Y	A039	1A	W0321	2167R	24		34-61-14	ALL
	Y	A041	1A	W0321	0101	24		27-21-11	YC051-YD153
	Y	A041	1A	W0321	0359	24		27-21-11	YC051-YD153
	Y	A041	1A	W0321	0373	24		27-21-11	YC051-YD153
	Y	A041	1A	W0321	0533	20		27-62-11	YL953-YL999, YR301-YR328
	Y	A043	1A	W0321	2058R	24		34-21-13	YC051-YD170
	Y	A043	1A	W0321	2165R	24		34-21-13	YC051-YD170
	Y	A043	1A	W0321	2169R	24		34-21-13	YC051-YD170
	Y	A045	1A	W0321	2725R	24		27-81-41	ALL
	Y	A045	1A	W0321	2751R	24		27-81-41	ALL
	Y	A045	1A	W0321	2752R	24		27-81-41	ALL
	Y	A047	1A	W0321	0360	22		27-62-11	ALL
	Y	A047	1A	W0321	0362	22		27-62-11	ALL
	Y	A047	1A	W0321	0369	22		27-62-11	ALL
	Y	A047	1A	W0321	0485	22		27-62-41	YN231-YN501
	Y	A047	1A	W0321	0539	22		27-62-11	YL953-YL999, YR301-YR328
	Y	A047	1A	W0321	0906	22		27-62-41	YC051-YC065
	Z	A049	1A	W0321	2031R	24		31-33-01	ALL
	Z	A049	1A	W0321	2033R	24		31-33-01	ALL
	Z	A049	1A	W0321	2064R	24		31-33-01	ALL
	Z	A049	1A	W0321	2065R	24		31-33-01	ALL
	Z	A049	1A	W0321	2763R	24		23-27-14	YC051-YD157
	Z	A049	1A	W0321	2763R	24		31-33-01	YD158-YR328
	Y	A055	1A	W0321	2032R	24		31-35-02	ALL
	Y	A055	1A	W0321	2034R	24		31-33-01	ALL
	Y	A055	1A	W0321	2035R	24		31-35-02	ALL
	Y	A055	1A	W0321	2036R	24		31-35-02	ALL
	Y	A057	1A	W0321	2222R	24		22-23-12	ALL
	Y	A057	1A	W0321	2228R	24		22-23-12	ALL
	Y	A057	1A	W0321	2709R	24		22-23-12	ALL
	Y	A059	1A	W0321	2221R	24		22-23-12	ALL
	Y	A059	1A	W0321	2225R	24		22-23-12	ALL
	Y	A059	1A	W0321	2719R	24		22-23-12	ALL
	Y	A063	1A	W0321	3001Y	24		31-31-14	ALL
	Y	A063	1A	W0321	3004Y	24		31-31-14	ALL
	Y	A063	1A	W0321	3010Y	22		27-24-11	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB3200

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3201		S280W555-522 (continued)					E003-2/ /		ALL
TB3201	X	S280W555-102 (continued)					E003-02/ /		ALL
TB3201	Y	S280W555-104 (continued)					E003-02/ /		ALL
TB3201	Z	S280W555-108 (continued)					E003-02/ /		ALL
	Z	A065	1A	W0321	0037	22		31-31-14	ALL
	Z	A065	1A	W0321	0038	22		31-31-14	ALL
	Z	A065	1A	W0321	0039	22		31-31-14	ALL
	Z	A065	1A	W0321	0040	22		31-31-14	ALL
	Z	A065	1A	W0321	0132	22		31-31-14	ALL
	Z	A065	1A	W0321	0477	22		31-31-14	YD154-YR328
	Z	A065	1A	W0321	0478	22		31-31-14	YD154-YD158, YL951-YR328
	Z	A069	1A	W0321	0022	22		31-31-14	ALL
	Z	A069	1A	W0321	0023	24		31-31-14	ALL
	Z	A069	1A	W0321	0024	22		31-31-14	ALL
	Z	A069	1A	W0321	0027	22		31-31-14	ALL
	Z	A069	1A	W0321	0132	22		31-31-14	ALL
	Z	A069	1A	W0321	0201	24		31-31-14	ALL
	Z	A069	1A	W0321	0368	24		31-31-14	YC053-YR328
	Z	A069	1A	W0321	1004	24		31-31-14	YC051-YC052
	Z	A073	1A	W0321	0790	24		27-18-11	ALL
	Z	A073	1A	W0321	2049R	24		27-62-14	ALL
	Z	A073	1A	W0321	2050R	24		27-62-14	ALL
	Z	A073	1A	W0321	2051R	24		31-31-14	ALL
	Z	A073	1A	W0321	2052R	24		31-31-14	ALL
	Z	A073	1A	W0321	2702R	24		27-62-37	ALL
	Z	A077	1A	W0321	0024	22		31-31-14	ALL
	Z	A077	1A	W0321	0790	24		27-18-11	ALL
	Z	A077	1A	W0321	2700R	24		27-18-11	ALL
	Z	A077	1A	W0321	2701R	24		27-18-11	ALL
	Z	A077	1A	W0321	2705R	24		27-28-11	ALL
	Z	A077	1A	W0321	2706R	24		27-38-11	ALL
	Z	A077	1A	W0321	2707R	24		27-38-11	ALL
	Z	A077	1A	W0321	2708R	24		27-48-11	ALL
	Y	A081	1A	W0321	2001R	24		31-31-11	ALL
	Y	A081	1A	W0321	2002R	24		31-31-11	ALL
	Y	A081	1A	W0321	2003R	24		31-31-11	ALL
	Y	A083	1A	W0321	2173R	24		34-33-21	ALL
	Y	A083	1A	W0321	2174R	24		34-33-21	ALL
	Y	A083	1A	W0321	2175R	24		34-33-21	ALL
	Z	A085	1A	W0321	2176R	24		34-33-21	ALL
	Z	A085	1A	W0321	2177R	24		34-33-21	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB3200

Page 4

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3201		S280W555-522 (continued)					E003-2/ /		ALL
TB3201	X	S280W555-102 (continued)					E003-02/ /		ALL
TB3201	Y	S280W555-104 (continued)					E003-02/ /		ALL
TB3201	Z	S280W555-108 (continued)					E003-02/ /		ALL
	Z	A085	1A	W0321	2178R	24		34-33-21	ALL
	Z	A085	1A	W0321	2179R	24		34-33-21	ALL
	Z	A085	1A	W0321	2180R	24		34-33-21	ALL
	Z	A085	1A	W0321	2181R	24		34-41-11	ALL
	X	B001	1A	W0321	0267	22		27-32-21	ALL
	X	B002	1A	W0321	0283	22		27-32-21	ALL
	X	B003	1A	W0321	0269	22		27-32-21	ALL
	X	B003	1A	W0321	0462	22		27-32-21	YC067-YD157
	X	B004	1A	W0321	0281	22		27-32-21	ALL
	X	B004	1A	W0321	0463	22		27-32-21	YC051-YD157, YL953-YL999, YR301-YR328
	X	B005	1A	W0321	0282	22		27-32-21	ALL
	X	B005	1A	W0321	0464	22		27-32-21	YC067-YD157, YL953-YR328
	X	B006	1A	W0321	0285	22		27-32-21	YL953-YR328
	X	B007	1A	W0321	0440	22		27-32-11	YL951-YR328
	X	B008	1A	W0321	0465	22		27-32-21	YN231-YN501
	X	B008	1A	W0321	0480	22		27-32-21	YL951-YR328
	Y	B009	1A	W0321	0268	22		27-32-21	ALL
	Y	B009	1A	W0321	0284	22		27-32-21	YN231-YN501
	Y	B009	1A	W0321	0285	22		27-32-21	YC051-YL952
	Y	B009	1A	W0321	0286	20		27-32-21	ALL
	Y	B009	1A	W0321	0488	22		27-32-21	YL953-YL999, YR301-YR328
	Y	B011	1A	W0321	0249	22		27-32-21	ALL
	Y	B011	1A	W0321	0491	22		27-32-21	ALL
	Y	B011	1A	W0321	0492	22		27-32-21	ALL
	Y	B013	1A	W0321	0259	22		27-32-21	ALL
	Y	B013	1A	W0321	0275	22		27-32-11	ALL
	Y	B013	1A	W0321	0276	22		27-32-11	ALL
	Y	B015	1A	W0321	0600	22		22-23-12	ALL
	Y	B015	1A	W0321	0601	22		22-23-12	ALL
	Y	B015	1A	W0321	0602	22		22-23-12	ALL
	Y	B017	1A	W0321	2226B	22		22-23-12	YC051-YL959, YN231-YN235
	Y	B017	1A	W0321	3224B	22		22-23-12	YC051-YL959, YN231-YN235
	Y	B017	1A	W0321	3225B	22		22-23-12	YC051-YL959, YN231-YN235
	Y	B019	1A	W0321	3224Y	22		22-23-12	YC051-YL959, YN231-YN235
	Y	B019	1A	W0321	3225Y	22		22-23-12	YC051-YL959, YN231-YN235
	Z	B021	1A	W0321	2025B	24		27-32-12	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB3200

Page 5

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3201		S280W555-522 (continued)					E003-2/ /		ALL
TB3201	X	S280W555-102 (continued)					E003-02/ /		ALL
TB3201	Y	S280W555-104 (continued)					E003-02/ /		ALL
TB3201	Z	S280W555-108 (continued)					E003-02/ /		ALL
	Z	B021	1A	W0321	2026B	24		27-32-12	ALL
	Z	B021	1A	W0321	2713B	24		27-32-12	ALL
	Z	B021	1A	W0321	2714B	24		27-32-12	ALL
	Z	B021	1A	W0321	2715B	24		27-32-12	ALL
	Z	B021	1A	W0321	2717B	24		27-32-12	ALL
	Z	B025	1A	W0321	2027B	24		27-32-22	ALL
	Z	B025	1A	W0321	2028B	24		27-32-22	ALL
	Z	B025	1A	W0321	2117B	24		27-32-22	YD158-YR328
	Z	B025	1A	W0321	2753B	24		27-32-22	ALL
	Z	B025	1A	W0321	2754B	24		27-32-22	ALL
	Z	B025	1A	W0321	2755B	24		27-32-22	ALL
	Z	B025	1A	W0321	2756B	24		27-32-22	ALL
	Z	B025	1A	W0321	2757B	24		27-32-22	YC051-YD157
	Y	B029	1A	W0321	0308	20		78-34-21	ALL
	Y	B029	1A	W0321	0309	20		78-34-21	ALL
	Y	B029	1A	W0321	0311	20		78-34-21	ALL
	Y	B031	1A	W0321	2017B	24		34-21-14	ALL
	Y	B031	1A	W0321	2029B	24		34-21-14	ALL
	Y	B031	1A	W0321	2030B	24		34-21-14	ALL
	Y	B031	1A	W0321	2056B	24		34-21-14	YC051-YD170
	Y	B033	1A	W0321	0247	22		27-32-21	YC051-YL952, YN231-YN501
	Y	B033	1A	W0321	0248	22		27-32-21	YC051-YL952, YN231-YN501
	Y	B033	1A	W0321	0251	22		27-32-21	YC051-YL952, YN231-YN501
	Y	B033	1A	W0321	0253	22		27-32-21	YC051-YL952, YN231-YN501
	Y	B033	1A	W0321	0532	20		33-25-11	YL953-YL999, YR301-YR328
	Y	B033	1A	W0321	0542	20		27-62-11	YL953-YL999, YR301-YR328
	Y	B035	1A	W0321	2009B	22		34-61-18	YC051-YC058
	Y	B035	1A	W0321	2009B	22		31-32-15	YC059-YD157
	Y	B035	1A	W0321	2302B	22		34-61-18	YC051-YC058
	Y	B035	1A	W0321	2302B	22		31-32-15	YC059-YD157
	Y	B035	1A	W0321	2303B	22		34-61-18	YC051-YC058
	Y	B035	1A	W0321	2304B	22		34-61-18	YC051-YC058
	Y	B035	1A	W0321	2304B	22		31-32-15	YC059-YD157
	Y	B037	1A	W0321	2184B	24		77-31-11	ALL
	Y	B037	1A	W0321	2185B	24		77-31-11	ALL
	Y	B037	1A	W0321	2186B	24		77-31-11	ALL
	Y	B039	1A	W0321	2016B	24		34-61-14	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB3200

Page 6

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3201		S280W555-522 (continued)					E003-2/ /		ALL
TB3201	X	S280W555-102 (continued)					E003-02/ /		ALL
TB3201	Y	S280W555-104 (continued)					E003-02/ /		ALL
TB3201	Z	S280W555-108 (continued)					E003-02/ /		ALL
	Y	B039	1A	W0321	2018B	24		34-61-14	ALL
	Y	B039	1A	W0321	2057B	24		34-61-14	YC051-YC055
	Y	B039	1A	W0321	2167B	24		34-61-14	ALL
	Y	B041	1A	W0321	0102	24		27-21-11	YC051-YD153
	Y	B041	1A	W0321	0358	24		27-21-11	YC051-YD153
	Y	B041	1A	W0321	0374	24		27-21-11	YC051-YD153
	Y	B041	1A	W0321	0542	20		27-62-11	YL953-YL999, YR301-YR328
	Y	B043	1A	W0321	2058B	24		34-21-13	YC051-YD170
	Y	B043	1A	W0321	2165B	24		34-21-13	YC051-YD170
	Y	B043	1A	W0321	2169B	24		34-21-13	YC051-YD170
	Y	B045	1A	W0321	2725B	24		27-81-41	ALL
	Y	B045	1A	W0321	2751B	24		27-81-41	ALL
	Y	B045	1A	W0321	2752B	24		27-81-41	ALL
	Y	B047	1A	W0321	0361	22		27-62-11	ALL
	Y	B047	1A	W0321	0363	22		27-62-11	ALL
	Y	B047	1A	W0321	0370	22		27-62-11	ALL
	Z	B049	1A	W0321	2031B	24		31-33-01	ALL
	Z	B049	1A	W0321	2033B	24		31-33-01	ALL
	Z	B049	1A	W0321	2064B	24		31-33-01	ALL
	Z	B049	1A	W0321	2065B	24		31-33-01	ALL
	Z	B049	1A	W0321	2763B	24		23-27-14	YC051-YD157
	Z	B049	1A	W0321	2763B	24		31-33-01	YD158-YR328
	Y	B055	1A	W0321	2032B	24		31-35-02	ALL
	Y	B055	1A	W0321	2034B	24		31-33-01	ALL
	Y	B055	1A	W0321	2035B	24		31-35-02	ALL
	Y	B055	1A	W0321	2036B	24		31-35-02	ALL
	Y	B057	1A	W0321	2222B	24		22-23-12	ALL
	Y	B057	1A	W0321	2228B	24		22-23-12	ALL
	Y	B057	1A	W0321	2709B	24		22-23-12	ALL
	Y	B059	1A	W0321	2221B	24		22-23-12	ALL
	Y	B059	1A	W0321	2225B	24		22-23-12	ALL
	Y	B059	1A	W0321	2719B	24		22-23-12	ALL
	Y	B061	1A	W0321	3001R	24		31-31-14	ALL
	Y	B061	1A	W0321	3004R	24		31-31-14	ALL
	Y	B061	1A	W0321	3010R	22		27-24-11	ALL
	Y	B063	1A	W0321	3001B	24		31-31-14	ALL
	Y	B063	1A	W0321	3004B	24		31-31-14	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB3200

Page 7

Nov 12/2012





# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3201		S280W555-522 (continued)					E003-2/ /		ALL
TB3201	X	S280W555-102 (continued)					E003-02/ /		ALL
TB3201	Y	S280W555-104 (continued)					E003-02/ /		ALL
TB3201	Z	S280W555-108 (continued)					E003-02/ /		ALL
	Y	B063	1A	W0321	3010B	22		27-24-11	ALL
	Z	B065	1A	W0321	0047	22		31-31-14	ALL
	Z	B065	1A	W0321	0048	22		31-31-14	ALL
	Z	B065	1A	W0321	0049	22		31-31-14	ALL
	Z	B065	1A	W0321	0050	22		31-31-14	ALL
	Z	B065	1A	W0321	0139	22		31-31-14	ALL
	Z	B069	1A	W0321	0025	22		27-24-11	ALL
	Z	B069	1A	W0321	0027	22		31-31-14	ALL
	Z	B069	1A	W0321	0139	22		31-31-14	ALL
	Z	B069	1A	W0321	0605	20		27-24-11	ALL
	Z	B069	1A	W0321	2023R	22		31-31-14	ALL
	Z	B069	1A	W0321	2152R	22		31-31-14	ALL
	Z	B069	1A	W0321	2160R	22		31-31-14	ALL
	Z	B073	1A	W0321	0091	24		27-18-11	ALL
	Z	B073	1A	W0321	0791	24		27-18-11	ALL
	Z	B073	1A	W0321	2049B	24		27-62-14	ALL
	Z	B073	1A	W0321	2050B	24		27-62-14	ALL
	Z	B073	1A	W0321	2051B	24		31-31-14	ALL
	Z	B073	1A	W0321	2052B	24		31-31-14	ALL
	Z	B073	1A	W0321	2702B	24		27-62-37	ALL
	Z	B077	1A	W0321	0791	24		27-18-11	ALL
	Z	B077	1A	W0321	2700B	24		27-18-11	ALL
	Z	B077	1A	W0321	2701B	24		27-18-11	ALL
	Z	B077	1A	W0321	2705B	24		27-28-11	ALL
	Z	B077	1A	W0321	2706B	24		27-38-11	ALL
	Z	B077	1A	W0321	2707B	24		27-38-11	ALL
	Z	B077	1A	W0321	2708B	24		27-48-11	ALL
	Y	B081	1A	W0321	2001B	24		31-31-11	ALL
	Y	B081	1A	W0321	2002B	24		31-31-11	ALL
	Y	B081	1A	W0321	2003B	24		31-31-11	ALL
	Y	B083	1A	W0321	2173B	24		34-33-21	ALL
	Y	B083	1A	W0321	2174B	24		34-33-21	ALL
	Y	B083	1A	W0321	2175B	24		34-33-21	ALL
	Z	B085	1A	W0321	2176B	24		34-33-21	ALL
	Z	B085	1A	W0321	2177B	24		34-33-21	ALL
	Z	B085	1A	W0321	2178B	24		34-33-21	ALL
	Z	B085	1A	W0321	2179B	24		34-33-21	ALL

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB3200

Page 8

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3201		S280W555-522 (continued)					E003-2/ /		ALL
TB3201	X	S280W555-102 (continued)					E003-02/ /		ALL
TB3201	Y	S280W555-104 (continued)					E003-02/ /		ALL
TB3201	Z	S280W555-108 (continued)					E003-02/ /		ALL
	Z	B085	1A	W0321	2180B	24		34-33-21	ALL
	Z	B085	1A	W0321	2181B	24		34-41-11	ALL
	Z	DED		W0321	1004Z			31-31-14	YC051-YC052

For training purposes only!

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB3200

Page 9 End

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3301		S280W555-514					E003-03/ /		ALL
TB3301	V	S280W555-203					E003-03/ /		YC051-YD170
TB3301	Y	S280W555-104					E003-03/ /		ALL
TB3301	Z	S280W555-108					E003-03/ /		YC051-YD170
	Y	A001	1A	W0331	2522R	24		34-61-23	YC051-YD157
	Y	A001	1A	W0331	2540R	24		34-61-23	YC051-YD157
	Y	A001	1A	W0331	2543R	24		34-61-23	YC051-YD157
	Y	A003	1A	W0331	2523R	24		34-61-23	YC051-YD157
	Y	A003	1A	W0331	2541R	24		34-61-23	YC051-YD157
	Y	A003	1A	W0331	2542R	24		34-61-23	YC051-YD157
	Y	A005	1A	W0331	2505R	24		23-27-11	YC051-YD157
	Y	A005	1A	W0331	2506R	24		23-27-11	YC051-YD157
	Y	A005	1A	W0331	2507R	24		23-22-11	YC051-YD157
	Y	A007	1A	W0331	2505Z			23-27-11	YC051-YD157
	Y	A007	1A	W0331	2506Z			23-27-11	YC051-YD157
	Y	A007	1A	W0331	2507Z			23-22-11	YC051-YD157
	Y	A007	1A	W0331	2601R	24		23-27-32	YD158-YR328
	Y	A007	1A	W0331	2602R	24		23-27-32	YD158-YR328
	Y	A007	1A	W0331	2603R	24		23-27-32	YD158-YR328
	Y	A009	1A	W0331	2513Z			23-27-12	YC051-YD157
	Y	A009	1A	W0331	2514Z			23-27-12	YC051-YD157
	Y	A009	1A	W0331	2515Z			23-27-13	YC051-YD157
	Y	A011	1A	W0331	2513R	24		23-27-12	YC051-YD157
	Y	A011	1A	W0331	2514R	24		23-27-12	YC051-YD157
	Y	A011	1A	W0331	2515R	24		23-27-13	YC051-YD157
	Y	A011	1A	W0331	2606R	24		23-27-33	YD158-YN260
	Y	A011	1A	W0331	2608R	24		23-27-33	YD158-YR328
	Y	A011	1A	W0331	2609R	24		23-27-33	YD158-YR328
	Y	A011	1A	W0331	2822R	24		23-27-33	YD158-YR328
	Y	A013	1A	W0331	2519R	24		23-27-13	YC051-YD157
	Y	A013	1A	W0331	2519R	24		23-27-37	YD158-YN260
	Y	A013	1A	W0331	2526R	24		23-27-14	YC051-YD157
	Y	A013	1A	W0331	2527R	24		23-27-14	YC051-YD157
	Y	A013	1A	W0331	2528R	24		23-27-14	YC051-YD157
	Y	A013	1A	W0331	2625R	24		23-27-37	YD158-YN260
	Y	A013	1A	W0331	2736R	24		23-27-37	YD158-YN260
	Y	A015	1A	W0331	2519Z			23-27-13	YC051-YD157
	Y	A015	1A	W0331	2526Z			23-27-14	YC051-YD157
	Y	A015	1A	W0331	2527Z			23-27-14	YC051-YD157
	Y	A015	1A	W0331	2528Z			23-27-14	YC051-YD157
	Y	A015	1A	W0331	2640R	24		34-61-23	YD158-YR328

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB3300

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3301		S280W555-514 (continued)					E003-03/ /		ALL
TB3301	V	S280W555-203 (continued)					E003-03/ /		YC051-YD170
TB3301	Y	S280W555-104 (continued)					E003-03/ /		ALL
TB3301	Z	S280W555-108 (continued)					E003-03/ /		YC051-YD170
	Y	A015	1A	W0331	2641R	24		34-61-23	YD158-YR328
	Y	A015	1A	W0331	2642R	24		34-61-23	YD158-YR328
	Z	A021	1A	W0331	0094	24		23-27-14	YC051-YD157
	Z	A021	1A	W0331	0095	24		23-27-14	YC051-YD157
	Z	A021	1A	W0331	0096	24		23-27-14	YC051-YD157
	Z	A021	1A	W0331	0097	24		23-27-14	YC051-YD157
	Z	A021	1A	W0331	0098	24		23-27-14	YC051-YD157
	Y	A025	1A	W0331	2541R	24		34-61-23	YD158-YR328
	Y	A025	1A	W0331	2542R	24		34-61-23	YD158-YR328
	Y	A025	1A	W0331	2803R	24		34-61-23	YD158-YR328
	Y	A027	1A	W0331	2521R	24		23-27-37	YD158-YR328
	Y	A027	1A	W0331	2621R	24		23-27-37	YD158-YN260
	Y	A027	1A	W0331	2624R	24		23-27-37	YD158-YR328
	Y	A027	1A	W0331	2626R	24		23-27-37	YD158-YR328
	Y	A041	1A	W0330	0303	24		21-51-12	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A041	1A	W0330	0304	24		21-51-12	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A041	1A	W0330	0305	24		21-51-12	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A043	1A	W0330	0392	24		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A043	1A	W0330	0395	24		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A043	1A	W0330	0397	24		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A045	1A	W0330	0378	24		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A045	1A	W0330	0379	24		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A045	1A	W0330	0462	24		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A047	1A	W0330	0411	24		21-61-13	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A047	1A	W0330	0412	24		21-61-13	YC051-YL999, YR301-YR323, YR325-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB3300

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3301		S280W555-514 (continued)					E003-03/ /		ALL
TB3301	V	S280W555-203 (continued)					E003-03/ /		YC051-YD170
TB3301	Y	S280W555-104 (continued)					E003-03/ /		ALL
TB3301	Z	S280W555-108 (continued)					E003-03/ /		YC051-YD170
	Y	A047	1A	W0330	0413	24		21-61-13	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A047	1A	W0330	0414	24		21-61-13	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A049	1A	W0330	0446	24		21-61-14	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A049	1A	W0330	0447	24		21-61-14	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A049	1A	W0330	0448	24		21-61-14	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A049	1A	W0330	0449	24		21-61-14	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A051	1A	W0330	0463	22		21-61-15	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A051	1A	W0330	0464	22		21-61-15	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A051	1A	W0330	0466	22		21-61-15	YC051-YL999, YR301-YR323, YR325-YR328
	Y	A051	1A	W0330	0467	22		21-61-15	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B001	1A	W0331	2522B	24		34-61-23	YC051-YD157
	Y	B001	1A	W0331	2540B	24		34-61-23	YC051-YD157
	Y	B001	1A	W0331	2543B	24		34-61-23	YC051-YD157
	Y	B003	1A	W0331	2523B	24		34-61-23	YC051-YD157
	Y	B003	1A	W0331	2541B	24		34-61-23	YC051-YD157
	Y	B003	1A	W0331	2542B	24		34-61-23	YC051-YD157
	Y	B005	1A	W0331	2505B	24		23-27-11	YC051-YD157
	Y	B005	1A	W0331	2506B	24		23-27-11	YC051-YD157
	Y	B005	1A	W0331	2507B	24		23-22-11	YC051-YD157
	Y	B007	1A	W0331	2601B	24		23-27-32	YD158-YR328
	Y	B007	1A	W0331	2602B	24		23-27-32	YD158-YR328
	Y	B007	1A	W0331	2603B	24		23-27-32	YD158-YR328
	Y	B009	1A	W0331	0058	22		23-27-11	YC051-YD157
	Y	B009	1A	W0331	0059	22		23-27-11	YC051-YD157
	Y	B009	1A	W0331	0060	22		23-27-11	YC051-YD157
	Y	B011	1A	W0331	2513B	24		23-27-12	YC051-YD157
	Y	B011	1A	W0331	2514B	24		23-27-12	YC051-YD157

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB3300

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3301		S280W555-514 (continued)					E003-03/ /		ALL
TB3301	V	S280W555-203 (continued)					E003-03/ /		YC051-YD170
TB3301	Y	S280W555-104 (continued)					E003-03/ /		ALL
TB3301	Z	S280W555-108 (continued)					E003-03/ /		YC051-YD170
	Y	B011	1A	W0331	2515B	24		23-27-13	YC051-YD157
	Y	B011	1A	W0331	2606B	24		23-27-33	YD158-YN260
	Y	B011	1A	W0331	2608B	24		23-27-33	YD158-YR328
	Y	B011	1A	W0331	2609B	24		23-27-33	YD158-YR328
	Y	B011	1A	W0331	2822B	24		23-27-33	YD158-YR328
	Y	B013	1A	W0331	2519B	24		23-27-13	YC051-YD157
	Y	B013	1A	W0331	2519B	24		23-27-37	YD158-YN260
	Y	B013	1A	W0331	2526B	24		23-27-14	YC051-YD157
	Y	B013	1A	W0331	2527B	24		23-27-14	YC051-YD157
	Y	B013	1A	W0331	2528B	24		23-27-14	YC051-YD157
	Y	B013	1A	W0331	2625B	24		23-27-37	YD158-YN260
	Y	B013	1A	W0331	2736B	24		23-27-37	YD158-YN260
	Y	B015	1A	W0331	2640B	24		34-61-23	YD158-YR328
	Y	B015	1A	W0331	2641B	24		34-61-23	YD158-YR328
	Y	B015	1A	W0331	2642B	24		34-61-23	YD158-YR328
	V	B025	1	W0331	0099	16		23-12-31	YC051-YD157
	V	B025	1	W0331	0100	16		23-12-31	YC051-YD157
	V	B025	1	W0331	0101	16		23-12-31	YC051-YD157
	Y	B025	1A	W0331	2541B	24		34-61-23	YD158-YR328
	Y	B025	1A	W0331	2542B	24		34-61-23	YD158-YR328
	Y	B025	1A	W0331	2803B	24		34-61-23	YD158-YR328
	Y	B027	1A	W0331	2521B	24		23-27-37	YD158-YR328
	Y	B027	1A	W0331	2621B	24		23-27-37	YD158-YN260
	Y	B027	1A	W0331	2624B	24		23-27-37	YD158-YR328
	Y	B027	1A	W0331	2626B	24		23-27-37	YD158-YR328
	Y	B041	1A	W0330	0340	24		21-51-22	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B041	1A	W0330	0341	24		21-51-22	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B041	1A	W0330	0342	24		21-51-22	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B043	1A	W0330	0393	24		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B043	1A	W0330	0396	24		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B043	1A	W0330	0398	24		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB3300

Page 4

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3301		S280W555-514 (continued)					E003-03/ /		ALL
TB3301	V	S280W555-203 (continued)					E003-03/ /		YC051-YD170
TB3301	Y	S280W555-104 (continued)					E003-03/ /		ALL
TB3301	Z	S280W555-108 (continued)					E003-03/ /		YC051-YD170
	Y	B045	1A	W0330	0383	24		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B045	1A	W0330	0384	24		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B045	1A	W0330	0385	24		21-61-11	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B045	1A	W0330	0404	24		21-61-12	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B047	1A	W0330	0406	24		21-61-13	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B047	1A	W0330	0416	24		21-61-13	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B047	1A	W0330	0417	24		21-61-13	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B049	1A	W0330	0421	24		21-61-14	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B049	1A	W0330	0451	24		21-61-14	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B049	1A	W0330	0452	24		21-61-14	YC051-YL999, YR301-YR323, YR325-YR328
TB3302		S280W555-514					E003-03/ /		YR301-YR328
TB3302	Y	S280W555-104					E003-03/ /		YD158-YD170
	Y	A043	1A	W0331	2660R	24		34-45-21	YD158-YD170
	Y	A043	1A	W0331	2662R	24		34-45-21	YD158-YD170
	Y	A043	1A	W0331	2703R	24		23-11-16	YD158-YD170
	Y	A045	1A	W0331	2515R	24		23-11-26	YD158-YD170
	Y	A045	1A	W0331	2807R	24		34-45-21	YD158-YD170
	Y	A045	1A	W0331	2808R	24		34-45-21	YD158-YD170
	Y	B043	1A	W0331	2660B	24		34-45-21	YD158-YD170
	Y	B043	1A	W0331	2662B	24		34-45-21	YD158-YD170
	Y	B043	1A	W0331	2703B	24		23-11-16	YD158-YD170
	Y	B045	1A	W0331	2515B	24		23-11-26	YD158-YD170
	Y	B045	1A	W0331	2807B	24		34-45-21	YD158-YD170
	Y	B045	1A	W0331	2808B	24		34-45-21	YD158-YD170

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB3300

Page 5 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3901		S280W555-506					AJ0039/ /		YR301-YR328
TB3901	Y	S280W555-104					AJ0039/ /		YL953-YL999, YR301-YR328
TB3901	Z	S280W555-108					AJ0039/ /		YL953-YL999, YR301-YR328
	Y	A001	1A	W0082	0001	22		27-62-11	YL953-YL999, YR301-YR328
	Y	A001	1A	W0082	0004	22		27-62-11	YL953-YL999, YR301-YR328
	Y	A001	1A	W0082	0028	22		27-62-11	YL953-YL999, YR301-YR328
	Y	A003	1A	W0082	0041	22		27-62-11	YL953-YL999, YR301-YR328
	Y	A003	1A	W0082	0048	22		27-62-11	YL953-YL999, YR301-YR328
	Y	A003	1A	W0082	0056	22		27-62-11	YL953-YL999, YR301-YR328
	Z	A005	1A	W0082	0002	20		27-62-11	YL953-YL999, YR301-YR328
	Z	A005	1A	W0082	0003	22		27-62-11	YL953-YL999, YR301-YR328
	Z	A005	1A	W0082	0005	22		27-62-11	YL953-YL999, YR301-YR328
	Z	A005	1A	W0082	0007	22		27-62-11	YL953-YL999, YR301-YR328
	Z	A005	1A	W0082	0018	22		27-62-11	YL953-YL999, YR301-YR328
	Y	A009	1A	W0082	0042	22		27-62-11	YL953-YL999, YR301-YR328
	Y	A009	1A	W0082	0051	22		27-62-11	YL953-YL999, YR301-YR328
	Y	A009	1A	W0082	0055	22		27-62-11	YL953-YL999, YR301-YR328
	Y	A011	1A	W0082	0029	22		27-62-11	YL953-YL999, YR301-YR328
	Y	A011	1A	W0082	0030	22		27-62-11	YL953-YL999, YR301-YR328
	Y	A011	1A	W0082	0031	22		27-62-11	YL953-YL999, YR301-YR328
	Z	A013	1A	W0082	0023	22		27-62-11	YL953-YL999, YR301-YR328
	Z	A013	1A	W0082	0024	22		27-62-11	YL953-YL999, YR301-YR328
	Z	A013	1A	W0082	0025	22		27-62-11	YL953-YL999, YR301-YR328
	Z	A013	1A	W0082	0027	22		27-62-11	YL953-YL999, YR301-YR328
	Z	A013	1A	W0082	0031	22		27-62-11	YL953-YL999, YR301-YR328
	Z	A013	1A	W0082	0057	22		27-62-11	YL953-YL999, YR301-YR328
	Y	A017	1A	W0082	1001	20		27-62-11	YL953-YL999, YR301-YR328
	Y	A017	1A	W0082	1009	20		27-62-11	YL953-YL999, YR301-YR328
	Y	A017	1A	W0082	1020	20		27-62-11	YL953-YL999, YR301-YR328
	Y	A019	1A	W0082	1005	20		27-62-11	YL953-YL999, YR301-YR328
	Y	A019	1A	W0082	1011	20		27-62-11	YL953-YL999, YR301-YR328
	Y	A019	1A	W0082	1018	20		27-62-11	YL953-YL999, YR301-YR328
	Z	A021	1A	W0082	1010	20		27-62-11	YL953-YL999, YR301-YR328
	Z	A021	1A	W0082	1014	20		27-62-11	YL953-YL999, YR301-YR328
	Z	A021	1A	W0082	1021	20		27-62-11	YL953-YL999, YR301-YR328
	Z	A021	1A	W0082	1025	20		27-62-11	YL953-YL999, YR301-YR328
	Z	A021	1A	W0082	1026	20		27-62-11	YL953-YL999, YR301-YR328
	Y	B001	1A	W0082	0038	22		27-62-11	YL953-YL999, YR301-YR328
	Y	B001	1A	W0082	0039	22		27-62-11	YL953-YL999, YR301-YR328
	Y	B001	1A	W0082	0044	22		27-62-11	YL953-YL999, YR301-YR328
	Y	B003	1A	W0082	0043	22		27-62-11	YL953-YL999, YR301-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB3900

Page 1

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB3901		S280W555-506 (continued)					AJ0039/ /		YR301-YR328
TB3901	Y	S280W555-104 (continued)					AJ0039/ /		YL953-YL999, YR301-YR328
TB3901	Z	S280W555-108 (continued)					AJ0039/ /		YL953-YL999, YR301-YR328
	Y	B003	1A	W0082	0049	22		27-62-11	YL953-YL999, YR301-YR328
	Y	B003	1A	W0082	0050	22		27-62-11	YL953-YL999, YR301-YR328
	Z	B005	1A	W0082	0009	22		27-62-11	YL953-YL999, YR301-YR328
	Z	B005	1A	W0082	0022	22		27-62-11	YL953-YL999, YR301-YR328
	Z	B005	1A	W0082	0040	22		27-62-11	YL953-YL999, YR301-YR328
	Z	B005	1A	W0082	0046	22		27-62-11	YL953-YL999, YR301-YR328
	Z	B005	1A	W0082	0047	22		27-62-11	YL953-YL999, YR301-YR328
	Y	B009	1A	W0082	0026	22		27-62-11	YL953-YL999, YR301-YR328
	Y	B009	1A	W0082	0035	22		27-62-11	YL953-YL999, YR301-YR328
	Y	B009	1A	W0082	0052	22		27-62-11	YL953-YL999, YR301-YR328
	Y	B011	1A	W0082	0013	22		27-62-11	YL953-YL999, YR301-YR328
	Y	B011	1A	W0082	0014	22		27-62-11	YL953-YL999, YR301-YR328
	Y	B011	1A	W0082	0016	22		27-62-11	YL953-YL999, YR301-YR328
	Z	B013	1A	W0082	1012	20		27-62-11	YL953-YL999, YR301-YR328
	Z	B013	1A	W0082	1016	20		27-62-11	YL953-YL999, YR301-YR328
	Z	B013	1A	W0082	1017	20		27-62-11	YL953-YL999, YR301-YR328
	Z	B013	1A	W0082	1019	20		27-62-11	YL953-YL999, YR301-YR328
	Z	B013	1A	W0082	1023	20		27-62-11	YL953-YL999, YR301-YR328
	Y	B017	1A	W0082	1002	20		27-62-11	YL953-YL999, YR301-YR328
	Y	B017	1A	W0082	1013	20		27-62-11	YL953-YL999, YR301-YR328
	Y	B017	1A	W0082	1024	20		27-62-11	YL953-YL999, YR301-YR328
	Y	B019	1A	W0082	1006	20		27-62-11	YL953-YL999, YR301-YR328
	Y	B019	1A	W0082	1015	20		27-62-11	YL953-YL999, YR301-YR328
	Y	B019	1A	W0082	1022	20		27-62-11	YL953-YL999, YR301-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB3900

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB4101		S280W555-522					E004-01/ /		ALL
TB4101	X	S280W555-102					E004-01/ /		ALL
TB4101	Y	S280W555-104					E004-01/ /		ALL
TB4101	Z	S280W555-108					E004-01/ /		ALL
	Y	A001	1A	W0411	2027R	24		23-41-11	ALL
	Y	A001	1A	W0411	3501B	24		23-41-11	ALL
	Y	A001	1A	W0411	3502B	24		23-41-11	ALL
	Y	A003	1A	W0411	2027B	24		23-41-11	ALL
	Y	A003	1A	W0411	3501Y	24		23-41-11	ALL
	Y	A003	1A	W0411	3502Y	24		23-41-11	ALL
	Y	A005	1A	W0411	0038	24		23-31-02	ALL
	Y	A005	1A	W0411	0041	24		23-31-02	ALL
	Y	A005	1A	W0411	0046	24		23-31-04	ALL
	Y	A007	1A	W0411	2020B	22		23-31-04	ALL
	Y	A007	1A	W0411	2021B	22		23-31-04	ALL
	Y	A007	1A	W0411	2022B	22		23-31-04	ALL
	X	A009	1A	W0410	0496	22		23-51-51	ALL
	X	A009	1A	W0411	0031	22		23-51-51	ALL
	X	A011	1A	W0410	0495	24		31-31-17	ALL
	X	A011	1A	W0411	0119	24		31-31-17	ALL
	X	A012	1A	W0410	0241	22		22-14-11	ALL
	X	A012	1A	W0411	0084	22		22-14-11	ALL
	X	A013	1A	W0410	2202R	22		24-41-11	ALL
	X	A013	1A	W0411	2030R	22		24-41-11	ALL
	X	A014	1A	W0410	2201B	22		24-41-11	ALL
	X	A014	1A	W0411	2031B	22		24-41-11	ALL
	X	A016	1A	W0410	0268	22		34-24-15	YD158
	X	A016	1A	W0410	0268	20		34-24-15	YL951-YR328
	X	A016	1A	W0411	0361	22		34-24-15	YD158
	X	A016	1A	W0411	0361	20		34-24-15	YL951-YR328
	Y	A017	1A	W0410	2026B	24		31-22-11	ALL
	Y	A017	1A	W0410	2027B	24		31-22-11	ALL
	Y	A017	1A	W0411	2515B	24		31-22-11	ALL
	Y	A019	1A	W0410	2028B	22		34-45-21	ALL
	Y	A019	1A	W0411	2527B	24		34-45-21	ALL
	Y	A019	1A	W0411	2528B	24		34-45-21	ALL
	Y	A021	1A	W0410	2028ZI			34-45-21	ALL
	Y	A021	1A	W0411	2527ZI			34-45-21	ALL
	Y	A021	1A	W0411	2528ZI			34-45-21	ALL
	Y	A023	1A	W0410	2001B	24		34-21-14	YC051-YD157
	Y	A023	1A	W0410	2018B	24		21-31-24	YC051-YD157

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB4100

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB4101		S280W555-522 (continued)					E004-01/ /		ALL
TB4101	X	S280W555-102 (continued)					E004-01/ /		ALL
TB4101	Y	S280W555-104 (continued)					E004-01/ /		ALL
TB4101	Z	S280W555-108 (continued)					E004-01/ /		ALL
	Y	A023	1A	W0410	2019B	24		21-31-24	YC051-YD157
	X	A025	1A	W0410	0005	22		23-51-51	ALL
	X	A025	1A	W0411	0017	22		23-51-51	ALL
	X	A026	1A	W0410	0006	22		23-51-51	ALL
	X	A026	1A	W0411	0018	22		23-51-51	ALL
	X	A027	1A	W0410	0234	22		23-22-11	ALL
	X	A027	1A	W0411	0053	22		23-22-11	ALL
	X	A028	1A	W0410	0235	22		23-22-11	ALL
	X	A028	1A	W0411	0055	22		23-22-11	ALL
	X	A029	1A	W0410	0007	22		23-51-51	ALL
	X	A029	1A	W0411	0019	22		23-51-51	ALL
	X	A030	1A	W0410	0236	22		23-71-01	ALL
	X	A030	1A	W0411	0048	22		23-71-01	ALL
	Y	A035	1A	W0411	0193	24		23-43-11	YC051-YD157
	Y	A035	1A	W0411	0194	24		23-43-11	YC051-YD157
	Y	A035	1A	W0411	0196	24		23-43-11	YC051-YD157
	Y	A035	1A	W0411	0204	24		23-43-11	YC051-YD157
	Y	A037	1A	W0410	2002B	24		34-21-24	YC051-YD157
	Y	A037	1A	W0410	2022B	24		21-31-24	YC051-YD157
	Y	A037	1A	W0410	2023B	24		21-31-24	YC051-YD157
	Z	A041	1A	W0410	0072	24		21-31-24	YC051-YD157
	Z	A041	1A	W0410	0073	24		21-31-24	YC051-YD157
	Z	A041	1A	W0410	0097	24		21-51-11	ALL
	Z	A041	1A	W0410	0239	24		34-61-17	ALL
	Z	A041	1A	W0410	0244	24		21-51-11	YN231-YN501
	Z	A041	1A	W0410	0252	24		21-51-11	YD158-YR328
	Z	A041	1A	W0410	0258	20		47-30-11	YL951-YR328
	Z	A041	1A	W0410	0311	24		21-51-11	YC051-YL999, YR301-YR328
	Z	A041	1A	W0410	0314	24		21-51-11	YC051-YL999, YR301-YR328
	Z	A045	1A	W0410	0068	24		21-31-24	YC051-YD157
	Z	A045	1A	W0410	0069	24		21-31-24	YC051-YD157
	Z	A045	1A	W0410	0106	24		21-51-21	ALL
	Z	A045	1A	W0410	0107	24		21-51-21	YN231-YN501
	Z	A045	1A	W0410	0240	24		34-61-17	ALL
	Z	A045	1A	W0410	0253	24		21-51-21	YD158-YR328
	Z	A045	1A	W0410	0352	24		21-51-21	YC051-YL999, YR301-YR328
	Z	A045	1A	W0410	0355	24		21-51-21	YC051-YL999, YR301-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB4100

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB4101		S280W555-522 (continued)					E004-01/ /		ALL
TB4101	X	S280W555-102 (continued)					E004-01/ /		ALL
TB4101	Y	S280W555-104 (continued)					E004-01/ /		ALL
TB4101	Z	S280W555-108 (continued)					E004-01/ /		ALL
	Y	A049	1A	W0410	0178	24		21-61-22	YN231-YN501
	Y	A049	1A	W0410	0180	24		21-61-22	YN231-YN501
	Y	A049	1A	W0410	0182	24		21-61-22	YN231-YN501
	Y	A049	1A	W0410	0304	24		21-51-11	YC051-YL999, YR301-YR328
	Y	A049	1A	W0410	0307	24		21-51-11	YC051-YL999, YR301-YR328
	Y	A049	1A	W0410	0349	24		21-51-21	YC051-YL999, YR301-YR328
	Y	A051	1A	W0410	0037	24		73-22-31	ALL
	Y	A051	1A	W0411	0035	24		73-22-31	ALL
	Y	A053	1A	W0410	0038	24		73-22-31	ALL
	Y	A053	1A	W0411	0036	24		73-22-31	ALL
	Y	A055	1A	W0410	0152	24		21-61-21	YN231-YN501
	Y	A055	1A	W0410	0154	24		21-61-21	YN231-YN501
	Y	A055	1A	W0410	0156	24		21-61-21	YN231-YN501
	Y	A055	1A	W0410	0398	24		21-61-11	YC051-YL999, YR301-YR328
	Y	A055	1A	W0410	0406	24		21-61-11	YC051-YL999, YR301-YR328
	Y	A055	1A	W0410	0407	24		21-61-11	YC051-YL999, YR301-YR328
	Y	A057	1A	W0410	2003R	24		27-32-12	YC051-YD157
	Y	A057	1A	W0410	2020R	24		21-31-24	YC051-YD157
	Y	A057	1A	W0410	2021R	24		21-31-24	YC051-YD157
	Y	A059	1A	W0410	0432	24		21-61-14	YC051-YL999, YR301-YR328
	Y	A059	1A	W0410	0434	24		21-61-14	YC051-YL999, YR301-YR328
	Y	A059	1A	W0410	0440	24		21-61-14	YC051-YL999, YR301-YR328
	Y	A061	1A	W0410	0032	24		49-52-31	ALL
	Y	A061	1A	W0410	0089	24		21-51-11	ALL
	Y	A061	1A	W0410	0090	24		21-51-11	ALL
	Y	A061	1A	W0410	0104	24		21-51-21	ALL
	Y	A063	1A	W0410	0036	22		49-52-31	ALL
	Y	A063	1A	W0410	0213	24		36-11-11	ALL
	Y	A063	1A	W0410	0227	24		36-11-11	ALL
	Y	A065	1A	W0410	2004R	24		27-32-22	YC051-YD157
	Y	A065	1A	W0410	2024R	24		21-31-24	YC051-YD157
	Y	A065	1A	W0410	2025R	24		21-31-24	YC051-YD157
	Y	A067	1A	W0410	0146	24		21-51-25	YN231-YN501
	Y	A067	1A	W0410	0272	24		21-51-25	ALL
	Y	A067	1A	W0410	0273	24		21-51-25	ALL
	Y	A067	1A	W0410	0274	24		21-51-25	ALL
	Y	A067	1A	W0410	0383	24		21-51-25	YC051-YL999, YR301-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB4100

Page 3

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB4101		S280W555-522 (continued)					E004-01/ /		ALL
TB4101	X	S280W555-102 (continued)					E004-01/ /		ALL
TB4101	Y	S280W555-104 (continued)					E004-01/ /		ALL
TB4101	Z	S280W555-108 (continued)					E004-01/ /		ALL
	Y	A069	1A	W0410	0034	24		49-52-31	ALL
	Y	A069	1A	W0410	0114	24		21-51-21	YN231-YN501
	Y	A069	1A	W0410	0115	24		21-51-21	ALL
	Y	A069	1A	W0410	0353	24		21-51-21	YC051-YL999, YR301-YR328
	Y	A071	1A	W0410	0018	20		21-31-23	YC053, YC055, YC060-YC064, YC067-YD157
	Y	A071	1A	W0410	0057	20		21-31-23	YC051-YD157
	Y	A071	1A	W0410	0058	20		21-31-23	YC051-YD157
	Y	A071	1A	W0410	0061	20		21-31-23	YC051-YD157
	Y	A073	1A	W0410	0091	24		21-51-11	ALL
	Y	A073	1A	W0410	0092	24		21-51-11	YN231-YN501
	Y	A073	1A	W0410	0095	24		21-51-11	ALL
	Y	A073	1A	W0410	0305	24		21-51-11	YC051-YL999, YR301-YR328
	Y	A075	1A	W0410	0131	24		21-51-15	YN231-YN501
	Y	A075	1A	W0410	0132	24		21-51-15	ALL
	Y	A075	1A	W0410	0133	24		21-51-15	ALL
	Y	A075	1A	W0410	0271	24		21-51-15	ALL
	Y	A075	1A	W0410	0342	24		21-51-15	YC051-YL999, YR301-YR328
	Y	A077	1A	W0410	0110	24		21-51-21	YN231-YN501
	Y	A077	1A	W0410	0112	24		21-51-21	YN231-YN501
	Y	A077	1A	W0410	0118	24		21-51-21	YN231-YN501
	Y	A077	VP	W0411	2533R	24		23-29-11	YC051-YD157
	Y	A077	1A	W0411	2534R	24		23-29-11	YC051-YD157
	Y	A077	1A	W0411	2535R	24		23-29-11	YC051-YD157
	Y	A079	1A	W0410	0207	24		36-11-11	YN231-YN501
	Y	A079	1A	W0410	0218	24		36-11-11	YN231-YN501
	Y	A079	1A	W0410	0219	24		36-11-11	YN231-YN501
	Y	A079	1A	W0411	0066	24		23-22-11	YC051-YD157
	Y	A079	1A	W0411	0121	22		23-29-11	YC051-YD157
	Y	A079	1A	W0411	0122	22		23-29-11	YC051-YD157
	Y	A081	1A	W0410	0254	22		23-43-11	YC051-YD157
	Y	A081	1A	W0410	0255	22		23-42-11	YC051-YD157
	Y	A081	1A	W0411	0199	22		23-42-11	YC051-YD157
	Y	A083	1A	W0410	0230	24		36-21-11	YL963-YL999, YN236-YR328
	Y	A083	1A	W0410	0281	24		31-35-05	YL963-YL999, YN236-YR328
	Y	A083	1A	W0410	0286	24		36-21-11	YL963-YL999, YN236-YR328
	Y	B001	1A	W0411	0071	24		23-41-11	ALL

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB4100

Page 4

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB4101		S280W555-522 (continued)					E004-01/ /		ALL
TB4101	X	S280W555-102 (continued)					E004-01/ /		ALL
TB4101	Y	S280W555-104 (continued)					E004-01/ /		ALL
TB4101	Z	S280W555-108 (continued)					E004-01/ /		ALL
	Y	B001	1A	W0411	3501R	24		23-41-11	ALL
	Y	B001	1A	W0411	3502R	24		23-41-11	ALL
	Y	B003	1A	W0411	0060	24		23-22-11	YD158-YR328
	Y	B003	1A	W0411	0092	24		23-22-11	YD158-YR328
	Y	B003	1A	W0411	0093	24		23-22-11	YD158-YR328
	Y	B003	1A	W0411	0097	22		23-27-11	YC051-YD157
	Y	B003	1A	W0411	0185	22		23-27-11	YC054-YD157
	Y	B003	1A	W0411	0187	22		23-27-11	YC054-YD157
	Y	B003	1A	W0411	0189	22		23-27-11	YC054-YD157
	Y	B003	1A	W0411	0351	22		23-27-11	YC051-YC053
	Y	B005	1A	W0411	0063	24		23-22-11	YC051-YD157
	Y	B005	1A	W0411	0073	22		23-12-11	YC051-YD157
	Y	B005	1A	W0411	0287	22		23-12-11	YC051-YD157
	X	B009	1A	W0410	0497	22		23-51-51	ALL
	X	B009	1A	W0411	0032	22		23-51-51	ALL
	X	B012	1A	W0410	0491	24		31-31-17	YD158-YR328
	X	B012	1A	W0411	0207	24		31-31-17	YD158-YR328
	X	B013	1A	W0410	2202B	22		24-41-11	ALL
	X	B013	1A	W0411	2030B	22		24-41-11	ALL
	X	B014	1A	W0410	2201R	22		24-41-11	ALL
	X	B014	1A	W0411	2031R	22		24-41-11	ALL
	X	B016	1A	W0410	0232	22		34-24-15	YD158-YR328
	X	B016	1A	W0411	0397	22		34-24-15	YD158-YR328
	Y	B017	1A	W0410	2026R	24		31-22-11	ALL
	Y	B017	1A	W0410	2027R	24		31-22-11	ALL
	Y	B017	1A	W0411	2515R	24		31-22-11	ALL
	Y	B019	1A	W0410	2028R	22		34-45-21	ALL
	Y	B019	1A	W0411	2527R	24		34-45-21	ALL
	Y	B019	1A	W0411	2528R	24		34-45-21	ALL
	Y	B021	1A	W0410	2001R	24		34-21-14	YC051-YD157
	Y	B021	1A	W0410	2018R	24		21-31-24	YC051-YD157
	Y	B021	1A	W0410	2019R	24		21-31-24	YC051-YD157
	Y	B023	1A	W0410	0008	22		23-51-51	ALL
	Y	B023	1A	W0411	0020	22		23-51-51	ALL
	Y	B023	1A	W0411	0072	22		23-42-12	YC051-YN260, YR315-YR328
	X	B026	1A	W0410	0233	22		23-22-11	ALL
	X	B026	1A	W0411	0049	22		23-22-11	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB4100

Page 5

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB4101		S280W555-522 (continued)					E004-01/ /		ALL
TB4101	X	S280W555-102 (continued)					E004-01/ /		ALL
TB4101	Y	S280W555-104 (continued)					E004-01/ /		ALL
TB4101	Z	S280W555-108 (continued)					E004-01/ /		ALL
	X	B027	1A	W0410	0264	22		34-21-12	YL951-YR328
	X	B027	1A	W0411	0353	22		34-21-12	YL951-YR328
	X	B029	1A	W0410	0265	22		34-21-22	YL951-YR328
	X	B029	1A	W0411	0352	22		34-21-22	YL951-YR328
	X	B030	1A	W0410	0237	22		23-71-01	ALL
	X	B030	1A	W0411	0052	22		23-71-01	ALL
	Y	B033	1A	W0410	2002R	24		34-21-24	YC051-YD157
	Y	B033	1A	W0410	2022R	24		21-31-24	YC051-YD157
	Y	B033	1A	W0410	2023R	24		21-31-24	YC051-YD157
	Y	B037	1A	W0410	0078	24		21-31-24	YC051-YD157
	Y	B037	1A	W0410	0079	24		21-31-24	YC051-YD157
	Y	B037	1A	W0410	0080	24		21-31-24	YC051-YD157
	Z	B041	1A	W0410	0464	24		21-25-11	YC051-YL999, YR301-YR328
	Z	B041	1A	W0410	0478	24		21-25-11	YC051-YL999, YR301-YR328
	Z	B041	1A	W0410	0479	24		21-25-11	YC051-YL999, YR301-YR328
	Z	B041	1A	W0410	0482	24		21-25-11	YC051-YL999, YR301-YR328
	Z	B041	1A	W0410	0483	24		21-25-11	YC051-YL999, YR301-YR328
	Z	B041	1A	W0410	0484	24		21-25-11	YC051-YL999, YR301-YR328
	Z	B045	1A	W0410	0301	24		21-51-11	YC051-YL999, YR301-YR328
	Z	B045	1A	W0410	0310	24		21-51-11	YC051-YL999, YR301-YR328
	Z	B045	1A	W0410	0350	24		21-51-21	YC051-YL999, YR301-YR328
	Z	B045	1A	W0410	0395	24		21-61-11	YC051-YL999, YR301-YR328
	Z	B045	1A	W0411	0096	22		23-27-11	YC051-YC053
	Y	B049	1A	W0410	0179	24		21-61-22	YN231-YN501
	Y	B049	1A	W0410	0181	24		21-61-22	YN231-YN501
	Y	B049	1A	W0410	0183	24		21-61-22	YN231-YN501
	Y	B049	1A	W0410	0308	24		21-51-11	YC051-YL999, YR301-YR328
	Y	B049	1A	W0410	0343	24		21-51-21	YC051-YL999, YR301-YR328
	Y	B049	1A	W0410	0344	24		21-51-21	YC051-YL999, YR301-YR328
	Y	B051	1A	W0410	0187	24		21-61-22	YN231-YN501
	Y	B051	1A	W0410	0188	24		21-61-22	YN231-YN501
	Y	B051	1A	W0410	0189	24		21-61-22	YN231-YN501
	Y	B051	1A	W0410	0325	24		21-51-14	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B051	1A	W0410	0326	24		21-51-14	YC051-YL999, YR301-YR323, YR325-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB4100

Page 6

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB4101		S280W555-522 (continued)					E004-01/ /		ALL
TB4101	X	S280W555-102 (continued)					E004-01/ /		ALL
TB4101	Y	S280W555-104 (continued)					E004-01/ /		ALL
TB4101	Z	S280W555-108 (continued)					E004-01/ /		ALL
	Y	B051	1A	W0410	0327	24		21-51-14	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B053	1A	W0410	0049	22		21-25-11	YN231-YN501
	Y	B053	1A	W0410	0050	22		21-25-11	YN231-YN501
	Y	B053	1A	W0410	0051	22		21-25-11	YN231-YN501
	Y	B053	1A	W0410	0055	22		21-25-11	YN231-YN501
	Y	B053	1A	W0410	0366	24		21-51-24	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B053	1A	W0410	0367	24		21-51-24	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B053	1A	W0410	0368	24		21-51-24	YC051-YL999, YR301-YR323, YR325-YR328
	Y	B055	1A	W0410	0153	24		21-61-21	YN231-YN501
	Y	B055	1A	W0410	0155	24		21-61-21	YN231-YN501
	Y	B055	1A	W0410	0157	24		21-61-21	YN231-YN501
	Y	B055	1A	W0410	0408	24		21-61-12	YC051-YL999, YR301-YR328
	Y	B055	1A	W0410	0409	24		21-61-12	YC051-YL999, YR301-YR328
	Y	B055	1A	W0410	0412	24		21-61-12	YC051-YL999, YR301-YR328
	Y	B057	1A	W0410	2003B	24		27-32-12	YC051-YD157
	Y	B057	1A	W0410	2020B	24		21-31-24	YC051-YD157
	Y	B057	1A	W0410	2021B	24		21-31-24	YC051-YD157
	Y	B059	1A	W0411	0059	24		23-22-11	YC051-YD157
	Y	B059	1A	W0411	0126	24		23-22-11	YC051-YD157
	Y	B059	1A	W0411	0132	24		23-22-11	YC051-YD157
	Y	B059	1A	W0411	0310	24		23-22-11	YC051-YD157
	Y	B061	1A	W0410	0033	24		49-52-31	ALL
	Y	B061	1A	W0410	0101	24		21-51-11	YN231-YN501
	Y	B061	1A	W0410	0102	24		21-51-11	ALL
	Y	B061	1A	W0410	0313	24		21-51-11	YC051-YL999, YR301-YR328
	Y	B063	1A	W0410	0035	24		49-52-31	ALL
	Y	B063	1A	W0410	0042	20		80-11-11	ALL
	Y	B063	1A	W0410	0044	20		80-11-11	ALL
	Y	B065	1A	W0410	2004B	24		27-32-22	YC051-YD157
	Y	B065	1A	W0410	2024B	24		21-31-24	YC051-YD157
	Y	B065	1A	W0410	2025B	24		21-31-24	YC051-YD157
	Y	B067	1A	W0410	0415	24		21-61-13	YC051-YL999, YR301-YR328
	Y	B067	1A	W0410	0417	24		21-61-13	YC051-YL999, YR301-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB4100

Page 7

Nov 12/2012





# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB4101		S280W555-522 (continued)					E004-01/ /		ALL
TB4101	X	S280W555-102 (continued)					E004-01/ /		ALL
TB4101	Y	S280W555-104 (continued)					E004-01/ /		ALL
TB4101	Z	S280W555-108 (continued)					E004-01/ /		ALL
	Y	B067	1A	W0410	0423	24		21-61-13	YC051-YL999, YR301-YR328
	Y	B069	1A	W0410	0041	24		80-11-11	ALL
	Y	B069	1A	W0410	0045	24		80-11-11	ALL
	Y	B069	1A	W0410	0221	24		36-11-11	YN231-YN501
	Y	B069	1A	W0410	0458	24		36-11-11	YC051-YL999, YR301-YR328
	Y	B071	1A	W0410	0052	22		21-25-11	YN231-YN501
	Y	B071	1A	W0410	0053	22		21-25-11	ALL
	Y	B071	1A	W0410	0054	22		21-25-11	YN231-YN501
	Y	B071	1A	W0410	0476	24		21-25-11	YC051-YL999, YR301-YR328
	Y	B071	1A	W0410	0477	24		21-25-11	YC051-YL999, YR301-YR328
	Y	B071	1A	W0410	0481	24		21-25-11	YC051-YL999, YR301-YR328
	Y	B073	1A	W0410	0096	24		21-51-11	ALL
	Y	B073	1A	W0410	0098	24		21-51-11	YN231-YN501
	Y	B073	1A	W0410	0100	24		21-51-11	ALL
	Y	B073	1A	W0410	0306	24		21-51-11	YC051-YL999, YR301-YR328
	Y	B075	1A	W0410	0465	24		21-25-11	YC051-YL999, YR301-YR328
	Y	B075	1A	W0410	0470	24		21-25-11	YC051-YL999, YR301-YR328
	Y	B075	1A	W0410	0472	24		21-25-11	YC051-YL999, YR301-YR328
	Y	B075	1A	W0410	0475	24		21-25-11	YC051-YL999, YR301-YR328
	Y	B077	1A	W0410	0111	24		21-51-21	YN231-YN501
	Y	B077	1A	W0410	0113	24		21-51-21	YN231-YN501
	Y	B077	1A	W0410	0117	24		21-51-21	YN231-YN501
	Y	B077	VP	W0411	2533B	24		23-29-11	YC051-YD157
	Y	B077	1A	W0411	2534B	24		23-29-11	YC051-YD157
	Y	B077	1A	W0411	2535B	24		23-29-11	YC051-YD157
	Y	B079	1A	W0411	0064	24		23-22-11	YC051-YD157
	Y	B079	1A	W0411	0075	22		23-12-21	YC051-YD157
	Y	B079	1A	W0411	0289	22		23-12-21	YC051-YD157
	Y	B081	1A	W0411	2533ZI			23-29-11	YC051-YD157
	Y	B081	1A	W0411	2534ZI			23-29-11	YC051-YD157
	Y	B081	1A	W0411	2535ZI			23-29-11	YC051-YD157
	Y	B083	1A	W0410	0229	24		36-21-11	YL963-YL999, YN236-YR328
	Y	B083	1A	W0410	0280	24		31-35-05	YL963-YL999, YN236-YR328
	Y	B083	1A	W0410	0284	24		36-21-11	YL963-YL999, YN236-YR328
	Y	CAP	Y	W0411	0120	22		23-29-11	YC051-YD157
		CAP	Y	W0411	0185	22		23-27-11	YC051-YC053
		CAP	Y	W0411	0187	22		23-27-11	YC051-YC053

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB4100

Page 8

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB4101		S280W555-522 (continued)					E004-01/ /		ALL
TB4101	X	S280W555-102 (continued)					E004-01/ /		ALL
TB4101	Y	S280W555-104 (continued)					E004-01/ /		ALL
TB4101	Z	S280W555-108 (continued)					E004-01/ /		ALL
		CAP	Y	W0411	0189	22		23-27-11	YC051-YC053
		CAP	Y	W0411	0351	22		23-27-11	YC054-YD157
	Y	DED		W0411	2027Z			23-41-11	ALL
TB4102		S280W555-606					E004-01/ /		YC051-YL999, YR301-YR328
TB4102	Y	S280W555-104					E004-01/ /		YC051-YL999, YR301-YR328
	Y	A001	1A	W0410	0386	24		21-61-11	YC051-YL999, YR301-YR328
	Y	A003	1A	W0410	0392	24		21-61-11	YC051-YL999, YR301-YR328
	Y	A005	1A	W0410	0391	24		21-61-11	YC051-YL999, YR301-YR328
	Y	A005	1A	W0410	0392	24		21-61-11	YC051-YL999, YR301-YR328
	Y	A007	1A	W0410	0414	24		21-61-13	YC051-YL999, YR301-YR328
	Y	A009	1A	W0410	0421	24		21-61-13	YC051-YL999, YR301-YR328
	Y	A011	1A	W0410	0420	24		21-61-13	YC051-YL999, YR301-YR328
	Y	A011	1A	W0410	0421	24		21-61-13	YC051-YL999, YR301-YR328
	Y	A013	1A	W0410	0431	24		21-61-14	YC051-YL999, YR301-YR328
	Y	A015	1A	W0410	0438	24		21-61-14	YC051-YL999, YR301-YR328
	Y	A017	1A	W0410	0437	24		21-61-14	YC051-YL999, YR301-YR328
	Y	A017	1A	W0410	0438	24		21-61-14	YC051-YL999, YR301-YR328
	Y	A019	1A	W0410	0110	24		21-51-21	YC051-YL999, YR301-YR328
	Y	A019	1A	W0410	0118	24		21-51-21	YC051-YL999, YR301-YR328
	Y	A019	1A	W0410	0347	24		21-51-21	YC051-YL999, YR301-YR328
	Y	A021	1A	W0410	0207	24		36-11-11	YC051-YL999, YR301-YR328
	Y	A021	1A	W0410	0219	24		36-11-11	YC051-YL999, YR301-YR328
	Y	A021	1A	W0410	0456	24		36-11-11	YC051-YL999, YR301-YR328
	Y	B001	1A	W0410	0387	24		21-61-11	YC051-YL999, YR301-YR328
	Y	B001	1A	W0410	0393	24		21-61-11	YC051-YL999, YR301-YR328
	Y	B003	1A	W0410	0385	24		21-61-11	YC051-YL999, YR301-YR328
	Y	B005	1A	W0410	0446	24		21-61-15	YC051-YL999, YR301-YR328
	Y	B005	1A	W0410	0448	24		21-61-15	YC051-YL999, YR301-YR328
	Y	B007	1A	W0410	0416	24		21-61-13	YC051-YL999, YR301-YR328
	Y	B007	1A	W0410	0422	24		21-61-13	YC051-YL999, YR301-YR328
	Y	B009	1A	W0410	0413	24		21-61-13	YC051-YL999, YR301-YR328
	Y	B011	1A	W0410	0446	24		21-61-15	YC051-YL999, YR301-YR328
	Y	B011	1A	W0410	0447	24		21-61-15	YC051-YL999, YR301-YR328
	Y	B013	1A	W0410	0433	24		21-61-14	YC051-YL999, YR301-YR328
	Y	B013	1A	W0410	0439	24		21-61-14	YC051-YL999, YR301-YR328
	Y	B015	1A	W0410	0430	24		21-61-14	YC051-YL999, YR301-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB4100

Page 9

Nov 12/2012



Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB4102		S280W555-606 (continued)					E004-01/ /		YC051-YL999, YR301-YR328
TB4102	Y	S280W555-104 (continued)					E004-01/ /		YC051-YL999, YR301-YR328
	Y	B017	1A	W0410	0447	24		21-61-15	YC051-YL999, YR301-YR328
	Y	B019	1A	W0410	0111	24		21-51-21	YC051-YL999, YR301-YR328
	Y	B019	1A	W0410	0117	24		21-51-21	YC051-YL999, YR301-YR328
	Y	B019	1A	W0410	0348	24		21-51-21	YC051-YL999, YR301-YR328
	Y	B021	1A	W0410	0466	24		21-25-11	YC051-YL999, YR301-YR328
	Y	B021	1A	W0410	0471	24		21-25-11	YC051-YL999, YR301-YR328
	Y	B021	1A	W0410	0474	24		21-25-11	YC051-YL999, YR301-YR328

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB4100

Page 10 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.		Part Number		Type	Bundle	Wire No.	GA	Station / WL / BL		Diagram	Effectivity
	Fix	Term						CO			
TB4201		S280W555-506						E004-02/ /			ALL
TB4201	X	S280W555-102						E004-02/ /			ALL
TB4201	Y	S280W555-104						E004-02/ /			ALL
	Y	A001	1A	W0422	0502	20				27-81-51	ALL
	Y	A001	1A	W0422	0503	20				27-81-51	ALL
	Y	A001	1A	W0422	0504	20				27-81-51	ALL
	Y	A009	1A	W0422	0002	24				27-11-11	YC051-YD153
	Y	A009	1A	W0422	0164	24				27-11-11	YC051-YD153
	Y	A009	1A	W0422	0167	24				27-11-11	YC051-YD153
	Y	A013	1A	W0422	0040	22				27-62-11	ALL
	Y	A013	1A	W0422	0179	22				27-62-11	ALL
	Y	A013	1A	W0422	0180	22				27-62-11	ALL
	Y	A017	1A	W0422	0109	22				24-23-51	ALL
	Y	A017	1A	W0422	0110	22				24-23-51	ALL
	Y	A017	1A	W0422	0111	22				24-23-51	ALL
	Y	A017	1A	W0422	0112	22				24-23-51	ALL
	Y	A019	1A	W0422	0243	22				28-43-11	YD158-YR328
	Y	A021	1A	W0420	2002R	24				30-41-12	ALL
	Y	A021	1A	W0420	2004R	24				30-41-12	ALL
	Y	A021	1A	W0420	2005R	24				30-41-12	ALL
	Y	A023	1A	W0422	2601B	22				28-41-11	ALL
	Y	A023	1A	W0422	2602B	22				28-41-11	ALL
	Y	A023	1A	W0422	2603B	22				28-41-11	ALL
	Y	A025	1A	W0422	2601Z					28-41-11	ALL
	Y	A025	1A	W0422	2602Z					28-41-11	ALL
	Y	A025	1A	W0422	2603Z					28-41-11	ALL
	Y	A029	1A	W0422	0177	20				28-43-11	YC051-YD157
	Y	A029	1A	W0422	0181	24				31-62-24	YC051-YD157
	Y	A029	1A	W0422	0182	22				28-43-11	YC051-YD157
	Y	B001	1A	W0422	0010	20				27-23-11	ALL
	Y	B001	1A	W0422	0012	20				27-23-11	ALL
	Y	B001	1A	W0422	0015	20				27-23-11	ALL
	Y	B005	1A	W0422	0011	20				27-23-11	ALL
	Y	B005	1A	W0422	0013	20				27-23-11	ALL
	Y	B005	1A	W0422	0014	20				27-23-11	ALL
	Y	B009	1A	W0422	0003	24				27-11-11	YC051-YD153
	Y	B009	1A	W0422	0165	24				27-11-11	YC051-YD153
	Y	B009	1A	W0422	0166	24				27-11-11	YC051-YD153
	Y	B019	1A	W0422	0241	22				28-43-11	YD158-YR328
	Y	B019	1A	W0422	0242	22				28-43-11	YD158-YR328
	Y	B021	1A	W0420	2002B	24				30-41-12	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB4200

Page 1

Nov 12/2012



Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB4201		S280W555-506 (continued)					E004-02/ /		ALL
TB4201	X	S280W555-102 (continued)					E004-02/ /		ALL
TB4201	Y	S280W555-104 (continued)					E004-02/ /		ALL
	Y	B021	1A	W0420	2004B	24		30-41-12	ALL
	Y	B021	1A	W0420	2005B	24		30-41-12	ALL
	Y	B023	1A	W0422	2601R	22		28-41-11	ALL
	Y	B023	1A	W0422	2602R	22		28-41-11	ALL
	Y	B023	1A	W0422	2603R	22		28-41-11	ALL

For training purposes only!

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB4200

Page 2 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.		Part Number		Type	Bundle	Wire No.	GA	Station / WL / BL		Diagram	Effectivity
	Fix	Term						CO			
TB4601		S280W555-602						721/204/R035			ALL
TB4601	Y	S280W555-104						721/204/R035			YD160-YR328
	Y	A001	1A	W5204	1005	20			47-30-11		YD160-YR328
	Y	A001	1A	W5204	1007	20			47-30-11		YD160-YR328
	Y	A003	1A	W5204	1005	20			47-30-11		YD160-YR328
	Y	A003	1A	W5204	1006	20			47-30-11		YD160-YR328
	Y	A005	1A	W5204	1001	20			47-30-11		YD160-YR328
	Y	A005	1A	W5204	1006	20			47-30-11		YD160-YR328
	Y	B001	1A	W5204	1002	20			47-30-11		YD160-YR328
	Y	B001	1A	W5204	1008	20			47-30-11		YD160-YR328
	Y	B003	1A	W5204	1003	20			47-30-11		YD160-YR328
	Y	B003	1A	W5204	1009	20			47-30-11		YD160-YR328
	Y	B005	1A	W5204	1004	20			47-30-11		YD160-YR328
	Y	B005	1A	W5204	1010	20			47-30-11		YD160-YR328
	Y	DED		W5204	1005Z				47-30-11		YD160-YR328
	Y	DED		W5204	1006Z				47-30-11		YD160-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB4600

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5001		1032176-1					393P91/169/L032		ALL
		A	H1	W1186	0005	*1		24-21-11	ALL
		B	H1	W1186	0006	*1		24-21-11	ALL
		C	H1	W1186	0007	*1		24-21-11	ALL
TB5002		1032176-1					P091 392/172/L040		ALL
		A	R	W4722	0008	*1		24-21-31	ALL
		A	H	W5722	0504	06		24-21-31	ALL
		B	R	W4722	0009	*1		24-21-31	ALL
		B	H	W5722	0506	06		24-21-31	ALL
		C	R	W4722	0010	*1		24-21-31	ALL
		C	H	W5722	0508	06		24-21-31	ALL
TB5004		1032177-1					393 P091/168/L024		ALL
		A	H	W5028	0001	02		24-23-31	ALL
		B	H	W5028	0002	02		24-23-31	ALL
		C	H	W5028	0003	02		24-23-31	ALL
TB5005		1032176-1					P092 393/170/R028		ALL
		A	H1	W1286	0005	*1		24-21-21	ALL
		B	H1	W1286	0006	*1		24-21-21	ALL
		C	H1	W1286	0007	*1		24-21-21	ALL
TB5006		1032176-1					393/172/R036		ALL
		A	H1	W6026	0001	*1		24-41-11	YC051-YN236, YN501-YR328
		B	H1	W6026	0002	*1		24-41-11	YC051-YN236, YN501-YR328
		C	H1	W6026	0003	*1		24-41-11	YC051-YN236, YN501-YR328
TB5008		1032177-1					393/167/R021		ALL
		A	H	W5028	0001	02		24-23-31	ALL
		B	H	W5028	0002	02		24-23-31	ALL
		C	H	W5028	0003	02		24-23-31	ALL
TB5009		MS27212-2-1					255/261/L031		ALL
TB5010		MS27212-2-6					E002-01/ /		ALL
		1	E	W0210	5525	18		30-41-11	ALL
		2	E	W0210	5526	18		30-41-11	ALL
		3	E	W0210	5527	18		30-41-11	ALL
		4	E	W0210	5528	18		30-41-11	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB5000

Page 1

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5010		MS27212-2-6 (continued)					E002-01/ /		ALL
		5	E	W0210	5529	18		30-41-11	ALL
		DED		W0210	1002Z			30-41-11	ALL
		REF	=	W0210	1002	18		30-41-11	ALL
TB5012		MS27212-2-6					E004-02/ /		ALL
		1	E	W0420	5525	18		30-41-12	ALL
		2	E	W0420	5526	18		30-41-12	ALL
		3	E	W0420	5527	18		30-41-12	ALL
		4	E	W0420	5528	18		30-41-12	ALL
		5	E	W0420	5529	18		30-41-12	ALL
		DED		W0420	1002Z			30-41-12	ALL
		REF	=	W0420	1002	18		30-41-12	ALL
TB5014		MS27212-2-6					E002-01/ /		ALL
		1	E	W0210	5519	20		30-41-11	ALL
		2	E	W0210	5520	20		30-41-11	ALL
		3	E	W0210	5521	20		30-41-11	ALL
		4	E	W0210	5522	20		30-41-11	ALL
		5	E	W0210	5523	20		30-41-11	ALL
		6	E	W0210	5524	20		30-41-11	ALL
		DED		W0210	1001Z			30-41-11	ALL
		REF	=	W0210	1001	20		30-41-11	ALL
TB5016		MS27212-2-6					E004-02/ /		ALL
		1	E	W0420	5519	20		30-41-12	ALL
		2	E	W0420	5520	20		30-41-12	ALL
		3	E	W0420	5521	20		30-41-12	ALL
		4	E	W0420	5522	20		30-41-12	ALL
		5	E	W0420	5523	20		30-41-12	ALL
		6	E	W0420	5524	20		30-41-12	ALL
		DED		W0420	1001Z			30-41-12	ALL
		REF	=	W0420	1001	20		30-41-12	ALL
TB5018		MS25171-1S					226/230/L040		YC051-YD151
TB5018		MS27212-2-1					226/230/L040		ALL
TB5018		MS25171-1S					*/*/*		YD152-YR328
		1	E	W2102	5507	20		33-17-11	ALL
		1	E	W2102	5521	20		33-17-11	ALL

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB5000

Page 2

Nov 12/2012





# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5020		MS25171-1S					226/230/R040		ALL
TB5020		MS27212-2-1					226/230/R040		ALL
		1	E	W2204	5508	20		33-17-11	ALL
		1	E	W2204	5530	20		33-17-11	ALL
TB5060		SEEOTHERPARTS					P006-00/ /		ALL
TB5060	A	MS27212-2-12					P006-00/ /		ALL
TB5060	B	MS27212-2-10					P006-00/ /		ALL
TB5060	C	MS27212-2-10					P006-00/ /		ALL
TB5060	D	MS27212-2-14					P006-00/ /		ALL
TB5060	E	MS27212-2-11					P006-00/ /		ALL
TB5060	F	MS27212-2-12					P006-00/ /		ALL
TB5060	G	MS27212-2-8					P006-00/ /		ALL
TB5060	H	MS27212-2-8					P006-00/ /		ALL
TB5060	I	MS25171-4S					P006-00/ /		YC051-YC057
TB5060	I	MS27212-2-1					P006-00/ /		ALL
TB5060	J	MS27212-2-1					P006-00/ /		ALL
TB5060	J	BACN18H5					P006-00/ /		YC051-YC057
TB5060	J	MS25171-1S					P006-00/ /		YC051-YC057
TB5060	K	MS27212-2-12					P006-00/ /		ALL
TB5060	L	MS27212-2-12					P006-00/ /		YL951-YR328
	F	1	E	W0040	0004	14		24-51-11	YC051-YC059
	F	1	E	W0040	0004	14		24-51-14	YC060-YR328
	E	1	E	W0040	0042	08		24-51-21	YC051-YC059
	G	1	E	W0040	0042	08		24-51-21	YC051-YC059
	E	1	E	W0040	0042	08		24-51-24	YC060-YD158, YL951-YR328
	G	1	E	W0040	0042	08		24-51-24	YC060-YD158, YL951-YR328
	F	1	E	W0040	0045	10		24-51-11	YC051-YC059
	H	1	E	W0040	0045	10		24-51-11	YC051-YC059
	F	1	E	W0040	0045	10		24-51-14	YC060-YR328
	H	1	E	W0040	0045	10		24-51-14	YC060-YR328
	H	1	E	W0040	0200	08		24-51-11	YC051-YC059, YD151-YD158
	H	1	E	W0040	0200	08		24-51-15	YC060-YC070
	K	1	E	W0040	0203	08		24-51-11	YC051-YC059, YD151-YD158
	K	1	E	W0040	0203	08		24-51-15	YC060-YC070, YD160-YR328
	G	1	E	W0040	0206	08		24-51-21	YC051-YC059, YD151-YD158
	G	1	E	W0040	0206	08		24-51-25	YC060-YC070
	L	1	E	W0040	0218	08		24-51-15	YL951-YR328
	C	1	E	W0040	0504	10		24-61-52	ALL
	D	1	E	W0040	6050	12		24-61-32	ALL
	E	1	E	W0040	6113	10		24-51-21	YC051-YC059, YD151-YD157

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB5000

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB5060		SEEOTHERPARTS (continued)					P006-00/ /		ALL
TB5060	A	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	B	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	C	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	D	MS27212-2-14 (continued)					P006-00/ /		ALL
TB5060	E	MS27212-2-11 (continued)					P006-00/ /		ALL
TB5060	F	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	G	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	H	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	I	MS25171-4S (continued)					P006-00/ /		YC051-YC057
TB5060	I	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	BACN18H5 (continued)					P006-00/ /		YC051-YC057
TB5060	J	MS25171-1S (continued)					P006-00/ /		YC051-YC057
TB5060	K	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	L	MS27212-2-12 (continued)					P006-00/ /		YL951-YR328
I	E	1	E	W0040	6113	10		24-51-24	YC060-YC070
I	E	1	E	W0040	6125	08		24-51-21	YC051-YC059, YD151-YD158
I	E	1	E	W0040	6125	08		24-51-24	YC060-YC070, YD160-YR328
I	E	1	E	W0040	6146	10		24-51-21	YD158
I	E	1	E	W0040	6146	10		24-51-24	YD160-YR328
I	D	1	E	W0040	6214	12		24-61-32	ALL
I	C	1	E	W0040	6217	10		24-61-52	ALL
I	K	1	E	W0040	6354	14		24-51-11	YC051-YC059, YD151-YD158
I	K	1	E	W0040	6354	14		24-51-15	YC060-YC070, YD160-YR328
I	D	1	E	W0040	ZZQA	02		24-61-32	ALL
I	F	1	E	W0040	ZZQG	02		24-51-11	YC051-YC059, YD151-YD158
I	F	1	E	W0040	ZZQG	02		24-51-14	YC060-YC070, YD160-YR328
I	E	1	E	W0040	ZZQK	02		24-51-21	YC051-YC059, YD151-YD158
I	E	1	E	W0040	ZZQK	02		24-51-24	YC060-YC070, YD160-YR328
I	K	1	E	W0040	ZZQT	02		24-51-11	YC051-YC059
I	K	1	E	W0040	ZZQT	02		24-51-15	YC060-YR328
I	B	1	E	W0044	0072	10		33-12-11	ALL
I	J	1	E	W0044	0102	20		33-17-11	ALL
I	I	1	E	W0044	0527	08		24-31-12	ALL
I	J	1	E	W0044	A-AH			33-17-11	ALL
I	H	1	E	W2132	0001	08		24-51-11	YC051-YD158
I	H	1	E	W2132	0001	08		24-51-14	YL951-YR328
I	L	1	E	W2132	0005	08		24-51-15	YL951-YR328
I	B	1	E	W2216	5544	10		33-12-11	YC051-YR323, YR325-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB5000

Page 4

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5060		SEEOTHERPARTS (continued)					P006-00/ /		ALL
TB5060	A	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	B	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	C	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	D	MS27212-2-14 (continued)					P006-00/ /		ALL
TB5060	E	MS27212-2-11 (continued)					P006-00/ /		ALL
TB5060	F	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	G	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	H	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	I	MS25171-4S (continued)					P006-00/ /		YC051-YC057
TB5060	I	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	BACN18H5 (continued)					P006-00/ /		YC051-YC057
TB5060	J	MS25171-1S (continued)					P006-00/ /		YC051-YC057
TB5060	K	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	L	MS27212-2-12 (continued)					P006-00/ /		YL951-YR328
I	I	1	E	W2534	0505	08		24-31-12	ALL
I	G	1	E	W6424	0003	08		24-51-21	YC051-YC055, YD151-YD158
I	G	1	E	W6424	0003	08		24-51-24	YC056-YC070, YD160-YR328
I	L	10	E	W0040	0221	08		24-51-25	YL951-YR328
I	C	10	E	W0040	6023	18		24-61-61	YC062-YN236, YN501-YR328
I	F	10	E	W0040	6064	10		24-61-22	ALL
I	D	10	E	W0040	6075	10		24-61-24	YC051-YD157, YL951-YR328
I	D	10	E	W0040	6075	08		24-61-24	YD158-YD170
I	D	10	E	W0040	6083	08		24-61-24	YC051-YL954, YN231-YN235
I	E	10	E	W0040	6093	16		24-61-52	ALL
I	E	10	E	W0040	6094	16		24-61-52	ALL
I	C	10	E	W0040	6106	18		24-61-61	YC062-YL999, YR301-YR328
I	F	10	E	W0040	6176	16		24-61-22	YD158-YR328
I	E	10	E	W0040	6216	10		24-61-52	ALL
I	C	10	E	W0040	6327	18		24-61-61	YC062-YN236, YN501-YR328
I	C	10	E	W0040	6392	18		24-61-61	YN231-YN501
I	D	10	E	W0040	6499	08		24-61-24	YL955-YL999, YN236-YR328
I	F	10	E	W0040	ZZQJ	02		24-61-22	ALL
I	E	10	E	W0040	ZZQN	02		24-61-52	ALL
I	D	10	E	W0040	ZZQQ	02		24-61-24	ALL
I	C	10	E	W0040	ZZQR	02		24-61-61	YC062-YR328
I	K	10	E	W0040	ZZQX	02		24-51-21	YC051-YC059, YD151-YD158
I	K	10	E	W0040	ZZQX	02		24-51-25	YC060-YC070, YD160-YR328
I	B	10	E	W0044	0703	10		49-62-11	ALL

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB5000

Page 5

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB5060		SEEOTHERPARTS (continued)					P006-00/ /		ALL
TB5060	A	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	B	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	C	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	D	MS27212-2-14 (continued)					P006-00/ /		ALL
TB5060	E	MS27212-2-11 (continued)					P006-00/ /		ALL
TB5060	F	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	G	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	H	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	I	MS25171-4S (continued)					P006-00/ /		YC051-YC057
TB5060	I	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	BACN18H5 (continued)					P006-00/ /		YC051-YC057
TB5060	J	MS25171-1S (continued)					P006-00/ /		YC051-YC057
TB5060	K	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	L	MS27212-2-12 (continued)					P006-00/ /		YL951-YR328
	B	10	E	W6172	6003	10		49-62-11	ALL
	L	10	E	W6424	0016	08		24-51-25	YL951-YR328
	K	11	E	W0040	0211	08		24-51-21	YC051-YC059, YD158
	K	11	E	W0040	0211	08		24-51-25	YC060-YD157, YD160-YR328
	L	11	E	W0040	0222	08		24-51-25	YL951-YR328
	E	11	E	W0040	6095	16		24-61-52	ALL
	E	11	E	W0040	6096	12		24-61-52	ALL
	E	11	E	W0040	ZZQN	02		24-61-52	ALL
	K	11	E	W0040	ZZQY	02		24-51-21	YC051-YC059, YD151-YD158
	K	11	E	W0040	ZZQY	02		24-51-25	YC060-YC070, YD160-YR328
	L	11	E	W6424	0017	08		24-51-25	YL951-YR328
	L	12	E	W0040	0223	08		24-51-25	YL951-YR328
	K	12	E	W0040	ZZQY	02		24-51-21	YC051-YC059, YD151-YD158
	K	12	E	W0040	ZZQY	02		24-51-25	YC060-YC070, YD160-YR328
	L	12	E	W6424	0018	08		24-51-25	YL951-YR328
	F	2	E	W0040	0008	14		24-51-11	YC051-YD158
	G	2	E	W0040	0043	08		24-51-21	YC051-YC059
	G	2	E	W0040	0043	08		24-51-24	YC060-YD158, YL951-YR328
	H	2	E	W0040	0046	10		24-51-11	YC051-YC059
	H	2	E	W0040	0046	10		24-51-14	YC060-YR328
	H	2	E	W0040	0201	08		24-51-11	YC051-YC059, YD151-YD158
	H	2	E	W0040	0201	08		24-51-15	YC060-YC070
	G	2	E	W0040	0207	08		24-51-21	YC051-YC059, YD151-YD158
	G	2	E	W0040	0207	08		24-51-25	YC060-YC070

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB5000

Page 6

Nov 12/2012



# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5060		SEEOTHERPARTS (continued)					P006-00/ /		ALL
TB5060	A	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	B	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	C	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	D	MS27212-2-14 (continued)					P006-00/ /		ALL
TB5060	E	MS27212-2-11 (continued)					P006-00/ /		ALL
TB5060	F	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	G	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	H	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	I	MS25171-4S (continued)					P006-00/ /		YC051-YC057
TB5060	I	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	BACN18H5 (continued)					P006-00/ /		YC051-YC057
TB5060	J	MS25171-1S (continued)					P006-00/ /		YC051-YC057
TB5060	K	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	L	MS27212-2-12 (continued)					P006-00/ /		YL951-YR328
I	L	2	E	W0040	0219	08		24-51-15	YL951-YR328
I	C	2	E	W0040	0508	18		24-61-61	YC051-YC061
I	F	2	E	W0040	0509	14		24-51-11	YC051-YC059, YD151-YD157
I	F	2	E	W0040	0509	14		24-51-14	YC060-YC070
I	D	2	E	W0040	6003	18		24-61-32	YC051-YC059
I	D	2	E	W0040	6003	16		24-61-32	YC060-YR328
I	C	2	E	W0040	6023	18		24-61-61	YC051-YC061
I	B	2	E	W0040	6041	16		24-53-11	ALL
I	D	2	E	W0040	6052	12		24-61-32	ALL
I	C	2	E	W0040	6106	18		24-61-61	YC051-YC061
I	E	2	E	W0040	6117	14		24-51-21	YC051-YC059, YD151-YD158
I	E	2	E	W0040	6117	14		24-51-24	YC060-YC070, YD160-YR328
I	E	2	E	W0040	6121	14		24-51-21	YC051-YC059, YD151-YD158
I	E	2	E	W0040	6121	14		24-51-24	YC060-YC070
I	E	2	E	W0040	6130	14		24-51-21	YC051-YC059, YD151-YD158
I	E	2	E	W0040	6130	14		24-51-24	YC060-YC070, YD160-YR328
I	B	2	E	W0040	6203	10		24-53-11	ALL
I	F	2	E	W0040	6238	14		24-51-14	YD160-YR328
I	E	2	E	W0040	6239	14		24-51-24	YD160-YR328
I	F	2	E	W0040	6249	14		24-51-11	YD158
I	F	2	E	W0040	6249	14		24-51-14	YD160-YR328
I	K	2	E	W0040	6423	14		24-51-15	YL951-YL999, YN232-YR328
I	D	2	E	W0040	ZZQA	02		24-61-32	ALL
I	B	2	E	W0040	ZZQD	02		24-53-11	ALL

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB5000

Page 7

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB5060		SEEOTHERPARTS (continued)					P006-00/ /		ALL
TB5060	A	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	B	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	C	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	D	MS27212-2-14 (continued)					P006-00/ /		ALL
TB5060	E	MS27212-2-11 (continued)					P006-00/ /		ALL
TB5060	F	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	G	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	H	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	I	MS25171-4S (continued)					P006-00/ /		YC051-YC057
TB5060	I	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	BACN18H5 (continued)					P006-00/ /		YC051-YC057
TB5060	J	MS25171-1S (continued)					P006-00/ /		YC051-YC057
TB5060	K	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	L	MS27212-2-12 (continued)					P006-00/ /		YL951-YR328
I	F	2	E	W0040	ZZQG	02		24-51-11	YC051-YC059, YD151-YD158
I	F	2	E	W0040	ZZQG	02		24-51-14	YC060-YC070, YD160-YR328
I	E	2	E	W0040	ZZQK	02		24-51-21	YC051-YC059, YD151-YD158
I	E	2	E	W0040	ZZQK	02		24-51-24	YC060-YC070, YD160-YR328
I	K	2	E	W0040	ZZQT	02		24-51-11	YC051-YC059
I	K	2	E	W0040	ZZQT	02		24-51-15	YC060-YR328
I	C	2	E	W0044	6202	18		24-61-61	YC051-YC061
I	H	2	E	W2132	0002	08		24-51-11	YC051-YD158
I	H	2	E	W2132	0002	08		24-51-14	YL951-YR328
I	L	2	E	W2132	0006	08		24-51-15	YL951-YR328
I	G	2	E	W6424	0004	08		24-51-21	YC051-YC055, YD151-YD158
I	G	2	E	W6424	0004	08		24-51-24	YC056-YC070, YD160-YR328
I	F	3	E	W0040	0005	14		24-51-14	YN231-YN501
I	E	3	E	W0040	0043	08		24-51-21	YC051-YC059
I	E	3	E	W0040	0043	08		24-51-24	YC060-YD158, YL951-YR328
I	G	3	E	W0040	0044	08		24-51-21	YC051-YC059
I	G	3	E	W0040	0044	08		24-51-24	YC060-YD158, YL951-YR328
I	F	3	E	W0040	0046	10		24-51-11	YC051-YC059
I	F	3	E	W0040	0046	10		24-51-14	YC060-YR328
I	H	3	E	W0040	0047	10		24-51-11	YC051-YC059
I	H	3	E	W0040	0047	10		24-51-14	YC060-YR328
I	H	3	E	W0040	0202	08		24-51-11	YC051-YC059, YD151-YD158
I	H	3	E	W0040	0202	08		24-51-15	YC060-YC070
I	K	3	E	W0040	0204	08		24-51-11	YC051-YC059, YD151-YD158

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB5000

Page 8

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5060		SEEOTHERPARTS (continued)					P006-00/ /		ALL
TB5060	A	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	B	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	C	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	D	MS27212-2-14 (continued)					P006-00/ /		ALL
TB5060	E	MS27212-2-11 (continued)					P006-00/ /		ALL
TB5060	F	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	G	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	H	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	I	MS25171-4S (continued)					P006-00/ /		YC051-YC057
TB5060	I	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	BACN18H5 (continued)					P006-00/ /		YC051-YC057
TB5060	J	MS25171-1S (continued)					P006-00/ /		YC051-YC057
TB5060	K	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	L	MS27212-2-12 (continued)					P006-00/ /		YL951-YR328
	K	3	E	W0040	0204	08		24-51-15	YC060-YC070, YD160-YR328
	G	3	E	W0040	0208	08		24-51-21	YC051-YC059, YD151-YD158
	G	3	E	W0040	0208	08		24-51-25	YC060-YC070
	L	3	E	W0040	0220	08		24-51-15	YL951-YR328
	C	3	E	W0040	0503	10		24-61-41	ALL
	B	3	E	W0040	0507	10		24-53-11	YC051-YN236, YN501-YR328
	F	3	E	W0040	0512	14		24-51-11	YC051-YC059, YD151-YD158
	F	3	E	W0040	0512	14		24-51-14	YC060-YC070, YD160-YL999, YR301-YR328
	B	3	E	W0040	6040	16		24-53-11	YC051-YN236, YN501-YR328
	B	3	E	W0040	6042	10		24-53-11	YC051-YN236, YN501-YR328
	B	3	E	W0040	6043	16		24-53-11	YC051-YN236, YN501-YR328
	D	3	E	W0040	6087	16		24-61-42	ALL
	E	3	E	W0040	6116	14		24-51-21	YC051-YC059, YD151-YD157
	E	3	E	W0040	6116	14		24-51-24	YC060-YC070
	E	3	E	W0040	6145	14		24-51-21	YD158
	E	3	E	W0040	6145	14		24-51-24	YD160-YR328
	E	3	E	W0040	6154	08		24-51-21	YC051-YC059, YD151-YD158
	E	3	E	W0040	6154	08		24-51-24	YC060-YC070, YD160-YR328
	C	3	E	W0040	6212	10		24-61-41	ALL
	D	3	E	W0040	6215	10		24-61-42	ALL
	E	3	E	W0040	6320	14		24-51-21	YC051-YC052
	K	3	E	W0040	6355	12		24-51-11	YC051-YC059
	K	3	E	W0040	6355	12		24-51-15	YC060-YD157, YR307-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB5000

Page 9

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB5060		SEEOTHERPARTS (continued)					P006-00/ /		ALL
TB5060	A	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	B	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	C	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	D	MS27212-2-14 (continued)					P006-00/ /		ALL
TB5060	E	MS27212-2-11 (continued)					P006-00/ /		ALL
TB5060	F	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	G	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	H	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	I	MS25171-4S (continued)					P006-00/ /		YC051-YC057
TB5060	I	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	BACN18H5 (continued)					P006-00/ /		YC051-YC057
TB5060	J	MS25171-1S (continued)					P006-00/ /		YC051-YC057
TB5060	K	MS27212-2-12 (continued)					P006-00/ /		ALL
I TB5060	L	MS27212-2-12 (continued)					P006-00/ /		YL951-YR328
	K	3	E	W0040	6355	14		24-51-11	YD158
	K	3	E	W0040	6355	14		24-51-15	YD160-YR306
I	B	3	E	W0040	ZZQD	02		24-53-11	ALL
I	F	3	E	W0040	ZZQH	02		24-51-11	YC051-YC059, YD151-YD158
I	F	3	E	W0040	ZZQH	02		24-51-14	YC060-YC070, YD160-YR328
I	E	3	E	W0040	ZZQL	02		24-51-21	YC051-YC059, YD151-YD158
I	E	3	E	W0040	ZZQL	02		24-51-24	YC060-YC070, YD160-YR328
I	K	3	E	W0040	ZZQU	02		24-51-11	YC051-YC059, YD154-YD158
I	K	3	E	W0040	ZZQU	02		24-51-15	YC060-YD153, YD160-YR328
I	H	3	E	W2132	0003	08		24-51-11	YC051-YD158
I	H	3	E	W2132	0003	08		24-51-14	YL951-YR328
I	L	3	E	W2132	0007	08		24-51-15	YL951-YR328
I	G	3	E	W6424	0005	08		24-51-21	YC051-YC055, YD151-YD158
I	G	3	E	W6424	0005	08		24-51-24	YC056-YC070, YD160-YR328
I	F	4	E	W0040	0009	12		24-51-11	YC051-YC059
I	F	4	E	W0040	0009	12		24-51-14	YC060-YL954, YN231-YN235
I	F	4	N	W0040	0009	12		24-51-14	YL955-YL999, YN236-YR328
I	G	4	E	W0040	0039	10		24-51-21	YC051-YC059, YD151-YD158
I	G	4	E	W0040	0039	10		24-51-22	YC060-YC070, YD160-YR328
I	C	4	E	W0040	0502	12		24-61-31	ALL
I	D	4	E	W0040	0505	12		24-53-11	ALL
I	D	4	E	W0040	6047	18		24-53-11	ALL
I	E	4	E	W0040	6120	14		24-51-21	YC051-YC059, YD151-YD158

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB5000

Page 10

Nov 12/2012





## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5060		SEEOTHERPARTS (continued)					P006-00/ /		ALL
TB5060	A	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	B	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	C	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	D	MS27212-2-14 (continued)					P006-00/ /		ALL
TB5060	E	MS27212-2-11 (continued)					P006-00/ /		ALL
TB5060	F	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	G	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	H	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	I	MS25171-4S (continued)					P006-00/ /		YC051-YC057
TB5060	I	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	BACN18H5 (continued)					P006-00/ /		YC051-YC057
TB5060	J	MS25171-1S (continued)					P006-00/ /		YC051-YC057
TB5060	K	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	L	MS27212-2-12 (continued)					P006-00/ /		YL951-YR328
	E	4	E	W0040	6120	14		24-51-24	YC060-YC070, YD160-YL954, YN231-YN235
	E	4	N	W0040	6120	14		24-51-24	YL955-YL999, YN236-YR328
	E	4	E	W0040	6133	14		24-51-21	YC051-YC059
	E	4	E	W0040	6133	14		24-51-24	YC060-YR323, YR325-YR328
	D	4	E	W0040	6206	12		24-53-11	ALL
	C	4	E	W0040	6213	12		24-61-31	ALL
	F	4	E	W0040	ZZQH	02		24-51-11	YC051-YC059, YD151-YD158
	F	4	E	W0040	ZZQH	02		24-51-14	YC060-YC070, YD160-YR328
	E	4	E	W0040	ZZQL	02		24-51-21	YC051-YC059, YD151-YD158
	E	4	E	W0040	ZZQL	02		24-51-24	YC060-YC070, YD160-YR328
	K	4	E	W0040	ZZQU	02		24-51-11	YC051-YC059, YD154-YD158
	K	4	E	W0040	ZZQU	02		24-51-15	YC060-YD153, YD160-YR328
	B	4	E	W0041	0033	20		31-52-71	ALL
	H	4	E	W0044	0039	08		24-34-11	ALL
	B	4	E	W0044	0515	20		31-52-71	ALL
	H	4	E	W2136	0003	08		24-34-11	ALL
	G	4	E	W6424	0006	10		24-51-21	YC051-YC055, YD151-YD158
	G	4	E	W6424	0006	10		24-51-22	YC056-YC070, YD160-YR328
	F	5	E	W0040	0006	14		24-51-14	YN231-YN501
	G	5	E	W0040	0040	10		24-51-21	YC051-YC059, YD151-YD158
	G	5	E	W0040	0040	10		24-51-22	YC060-YC070, YD160-YR328
	E	5	E	W0040	0044	08		24-51-21	YC051-YC059
	E	5	E	W0040	0044	08		24-51-24	YC060-YD158, YL951-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB5000

Page 11

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5060		SEEOTHERPARTS (continued)					P006-00/ /		ALL
TB5060	A	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	B	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	C	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	D	MS27212-2-14 (continued)					P006-00/ /		ALL
TB5060	E	MS27212-2-11 (continued)					P006-00/ /		ALL
TB5060	F	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	G	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	H	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	I	MS25171-4S (continued)					P006-00/ /		YC051-YC057
TB5060	I	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	BACN18H5 (continued)					P006-00/ /		YC051-YC057
TB5060	J	MS25171-1S (continued)					P006-00/ /		YC051-YC057
TB5060	K	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	L	MS27212-2-12 (continued)					P006-00/ /		YL951-YR328
	F	5	E	W0040	0047	10		24-51-11	YC051-YC059
	F	5	E	W0040	0047	10		24-51-14	YC060-YR328
	K	5	E	W0040	0205	08		24-51-11	YC051-YC059, YD151-YD158
	K	5	E	W0040	0205	08		24-51-15	YC060-YC070, YD160-YR328
	D	5	E	W0040	0506	08		24-53-11	ALL
	F	5	E	W0040	0511	14		24-51-11	YC051-YC059, YD151-YD158
	F	5	E	W0040	0511	14		24-51-14	YC060-YC070, YD160-YL999, YR301-YR328
	C	5	E	W0040	6005	18		24-54-11	YC051-YN236, YN501-YR328
	D	5	E	W0040	6039	14		24-53-11	ALL
	C	5	E	W0040	6048	18		24-54-11	YC051-YN236, YN501-YR328
	C	5	E	W0040	6049	16		24-54-11	ALL
	E	5	E	W0040	6114	14		24-51-21	YC051-YC059, YD151-YD157
	E	5	E	W0040	6114	14		24-51-24	YC060-YC070
	E	5	E	W0040	6129	08		24-51-21	YC051-YC059, YD151-YD158
	E	5	E	W0040	6129	08		24-51-24	YC060-YC070, YD160-YR328
	E	5	E	W0040	6144	14		24-51-21	YD158
	E	5	E	W0040	6144	14		24-51-24	YD160-YR328
	K	5	E	W0040	6356	14		24-51-11	YC051-YC059, YD158
	K	5	E	W0040	6356	14		24-51-15	YC060-YD157, YD160-YR328
	F	5	E	W0040	6402	14		24-51-11	YD158
	F	5	E	W0040	6437	14		24-51-14	YD160-YR328
	C	5	E	W0040	ZZQB	02		24-54-11	ALL
	F	5	E	W0040	ZZQI	02		24-51-11	YC051-YC059, YD151-YD158

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB5000

Page 12

Nov 12/2012



Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5060		SEEOTHERPARTS (continued)					P006-00/ /		ALL
TB5060	A	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	B	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	C	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	D	MS27212-2-14 (continued)					P006-00/ /		ALL
TB5060	E	MS27212-2-11 (continued)					P006-00/ /		ALL
TB5060	F	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	G	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	H	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	I	MS25171-4S (continued)					P006-00/ /		YC051-YC057
TB5060	I	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	BACN18H5 (continued)					P006-00/ /		YC051-YC057
TB5060	J	MS25171-1S (continued)					P006-00/ /		YC051-YC057
TB5060	K	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	L	MS27212-2-12 (continued)					P006-00/ /		YL951-YR328
I	F	5	E	W0040	ZZQI	02		24-51-14	YC060-YC070, YD160-YR328
I	E	5	E	W0040	ZZQM	02		24-51-21	YC051-YC059, YD151-YD158
I	E	5	E	W0040	ZZQM	02		24-51-24	YC060-YC070, YD160-YR328
I	H	5	E	W0040	ZZQP	02		24-61-22	ALL
I	K	5	E	W0040	ZZQV	02		24-51-11	YC051-YC059
I	K	5	E	W0040	ZZQV	02		24-51-15	YC060-YR328
I	B	5	E	W0041	0034	20		31-52-71	ALL
I	B	5	E	W0044	0516	20		31-52-71	ALL
I	H	5	E	W2136	0002	10		24-61-22	ALL
I	G	5	E	W6424	0007	10		24-51-21	YC051-YC055, YD151-YD158
I	G	5	E	W6424	0007	10		24-51-22	YC056-YC070, YD160-YR328
I	F	6	E	W0040	0010	14		24-51-11	YC051-YC059
I	F	6	E	W0040	0010	14		24-51-14	YC060-YL954, YN231-YN235
I	F	6	N	W0040	0010	14		24-51-14	YL955-YL999, YN236-YR328
I	G	6	E	W0040	0041	10		24-51-21	YC051-YC059, YD151-YD158
I	G	6	E	W0040	0041	10		24-51-22	YC060-YC070, YD160-YR328
I	H	6	E	W0040	0048	10		24-61-22	ALL
I	C	6	E	W0040	0501	12		24-54-11	ALL
I	H	6	E	W0040	6104	10		24-61-22	YC051-YD158
I	E	6	E	W0040	6118	14		24-51-21	YC051-YC059, YD151-YD157
I	E	6	E	W0040	6118	14		24-51-24	YC060-YC070
I	E	6	E	W0040	6119	12		24-51-21	YC051-YC059, YD151-YD158
I	E	6	E	W0040	6119	12		24-51-24	YC060-YC070, YD160-YL954, YN231-YN235

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB5000

Page 13

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB5060		SEEOTHERPARTS (continued)					P006-00/ /		ALL
TB5060	A	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	B	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	C	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	D	MS27212-2-14 (continued)					P006-00/ /		ALL
TB5060	E	MS27212-2-11 (continued)					P006-00/ /		ALL
TB5060	F	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	G	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	H	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	I	MS25171-4S (continued)					P006-00/ /		YC051-YC057
TB5060	I	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	BACN18H5 (continued)					P006-00/ /		YC051-YC057
TB5060	J	MS25171-1S (continued)					P006-00/ /		YC051-YC057
TB5060	K	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	L	MS27212-2-12 (continued)					P006-00/ /		YL951-YR328
I	E	6	N	W0040	6119	12		24-51-24	YL955-YL999, YN236-YR328
I	E	6	E	W0040	6132	14		24-51-21	YC051-YC059, YD151-YD158
I	E	6	E	W0040	6132	14		24-51-24	YC060-YC070, YD160-YR328
I	D	6	E	W0040	6198	12		24-61-33	ALL
I	C	6	E	W0040	6210	12		24-54-11	ALL
I	D	6	E	W0040	6219	12		24-61-33	ALL
I	E	6	E	W0040	6403	14		24-51-21	YD158
I	K	6	E	W0040	6424	14		24-51-15	YL951-YR328
I	E	6	E	W0040	6438	14		24-51-24	YD160-YR328
I	C	6	E	W0040	ZZQB	02		24-54-11	ALL
I	F	6	E	W0040	ZZQI	02		24-51-11	YC051-YC059, YD151-YD158
I	F	6	E	W0040	ZZQI	02		24-51-14	YC060-YC070, YD160-YR328
I	E	6	E	W0040	ZZQM	02		24-51-21	YC051-YC059, YD151-YD158
I	E	6	E	W0040	ZZQM	02		24-51-24	YC060-YC070, YD160-YR328
I	H	6	E	W0040	ZZQP	02		24-61-22	ALL
I	K	6	E	W0040	ZZQV	02		24-51-11	YC051-YC059
I	K	6	E	W0040	ZZQV	02		24-51-15	YC060-YR328
I	B	6	E	W0041	0035	20		31-52-71	ALL
I	B	6	E	W0044	0517	20		31-52-71	ALL
I	G	6	E	W6424	0008	10		24-51-21	YC051-YC055, YD151-YD158
I	G	6	E	W6424	0008	10		24-51-22	YC056-YC070, YD160-YR328
I	G	7	E	W0040	0025	08		24-61-24	ALL
I	E	7	E	W0040	0039	10		24-51-21	YC051-YC059, YD151-YD158
I	E	7	E	W0040	0039	10		24-51-22	YC060-YC070, YD160-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB5000

Page 14

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5060		SEEOTHERPARTS (continued)					P006-00/ /		ALL
TB5060	A	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	B	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	C	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	D	MS27212-2-14 (continued)					P006-00/ /		ALL
TB5060	E	MS27212-2-11 (continued)					P006-00/ /		ALL
TB5060	F	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	G	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	H	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	I	MS25171-4S (continued)					P006-00/ /		YC051-YC057
TB5060	I	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	BACN18H5 (continued)					P006-00/ /		YC051-YC057
TB5060	J	MS25171-1S (continued)					P006-00/ /		YC051-YC057
TB5060	K	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	L	MS27212-2-12 (continued)					P006-00/ /		YL951-YR328
	K	7	E	W0040	0209	08		24-51-21	YC051-YC059, YD151-YD158
	K	7	E	W0040	0209	08		24-51-25	YC060-YC070, YD160-YR328
	C	7	E	W0040	6088	12		24-61-51	YC051-YN236, YN501-YR328
	C	7	E	W0040	6089	12		24-61-51	YC051-YN236, YN501-YR328
	E	7	E	W0040	6134	12		24-51-21	YC051-YC059, YD151-YD157
	E	7	E	W0040	6134	12		24-51-22	YC060-YC070, YL951-YR328
	E	7	E	W0040	6134	10		24-51-21	YD158
	C	7	E	W0040	6218	12		24-61-51	ALL
	C	7	E	W0040	6515	18		24-61-51	YN501-YR328
	C	7	E	W0040	ZZQE	02		24-61-51	ALL
	K	7	E	W0040	ZZQW	02		24-51-21	YC051-YC059, YD151-YD158
	K	7	E	W0040	ZZQW	02		24-51-25	YC060-YC070, YD160-YR328
	B	7	E	W0041	0032	20		33-18-41	ALL
	B	7	E	W0044	0187	20		33-18-41	ALL
	G	7	E	W6424	0001	08		24-61-24	ALL
	E	8	E	W0040	0040	10		24-51-21	YC051-YC059, YD151-YD158
	E	8	E	W0040	0040	10		24-51-22	YC060-YC070, YD160-YR328
	C	8	E	W0040	0515	18		24-61-51	YC053-YD151
	C	8	E	W0040	0515	12		24-61-51	YD152-YR328
	C	8	E	W0040	6090	12		24-61-51	YC051-YN236, YN501-YR328
	C	8	E	W0040	6101	12		24-61-51	YD158-YN236, YN501-YR328
	C	8	E	W0040	6105	12		24-61-51	YC051-YD157
	E	8	E	W0040	6135	12		24-51-21	YC051-YC059, YD151-YD157
	E	8	E	W0040	6135	12		24-51-22	YC060-YC070, YL951-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB5000

Page 15

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB5060		SEEOTHERPARTS (continued)					P006-00/ /		ALL
TB5060	A	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	B	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	C	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	D	MS27212-2-14 (continued)					P006-00/ /		ALL
TB5060	E	MS27212-2-11 (continued)					P006-00/ /		ALL
TB5060	F	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	G	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	H	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	I	MS25171-4S (continued)					P006-00/ /		YC051-YC057
TB5060	I	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	BACN18H5 (continued)					P006-00/ /		YC051-YC057
TB5060	J	MS25171-1S (continued)					P006-00/ /		YC051-YC057
TB5060	K	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	L	MS27212-2-12 (continued)					P006-00/ /		YL951-YR328
	E	8	E	W0040	6135	10		24-51-21	YD158
	C	8	E	W0040	ZZQE	02		24-61-51	ALL
	K	8	E	W0040	ZZQW	02		24-51-21	YC051-YC059, YD151-YD158
	K	8	E	W0040	ZZQW	02		24-51-25	YC060-YC070, YD160-YR328
	G	8	E	W0044	0026	08		24-32-11	ALL
	B	8	E	W0044	0037	12		24-34-11	ALL
	B	8	E	W2536	0520	12		24-34-11	YC051-YD158, YL951-YN236, YN501-YR328
	G	8	E	W5612	0518	08		24-32-11	ALL
	D	9	E	W0040	0025	08		24-61-24	ALL
	E	9	E	W0040	0041	10		24-51-21	YC051-YC059, YD151-YD158
	E	9	E	W0040	0041	10		24-51-22	YC060-YC070, YD160-YR328
	F	9	E	W0040	0048	10		24-61-22	ALL
	K	9	E	W0040	0210	08		24-51-21	YC051-YC059, YD151-YD158
	K	9	E	W0040	0210	08		24-51-25	YC060-YC070, YD160-YR328
	C	9	E	W0040	0508	18		24-61-61	YC062-YR328
	F	9	E	W0040	6062	10		24-61-22	ALL
	D	9	E	W0040	6074	12		24-61-24	ALL
	D	9	E	W0040	6082	08		24-61-24	ALL
	F	9	E	W0040	6104	10		24-61-22	YD160-YR328
	E	9	E	W0040	6136	12		24-51-21	YC051-YC059, YD151-YD157
	E	9	E	W0040	6136	12		24-51-22	YC060-YC070, YL951-YR328
	E	9	E	W0040	6136	10		24-51-21	YD158
	C	9	E	W0040	6513	18		24-61-61	YN501-YR328

### TERMINAL STRIP LIST

D280A108

91-21-41

Section TB5000

Page 16

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5060		SEEOTHERPARTS (continued)					P006-00/ /		ALL
TB5060	A	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	B	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	C	MS27212-2-10 (continued)					P006-00/ /		ALL
TB5060	D	MS27212-2-14 (continued)					P006-00/ /		ALL
TB5060	E	MS27212-2-11 (continued)					P006-00/ /		ALL
TB5060	F	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	G	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	H	MS27212-2-8 (continued)					P006-00/ /		ALL
TB5060	I	MS25171-4S (continued)					P006-00/ /		YC051-YC057
TB5060	I	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	MS27212-2-1 (continued)					P006-00/ /		ALL
TB5060	J	BACN18H5 (continued)					P006-00/ /		YC051-YC057
TB5060	J	MS25171-1S (continued)					P006-00/ /		YC051-YC057
TB5060	K	MS27212-2-12 (continued)					P006-00/ /		ALL
TB5060	L	MS27212-2-12 (continued)					P006-00/ /		YL951-YR328
	F	9	E	W0040	ZZQJ	02		24-61-22	ALL
	D	9	E	W0040	ZZQQ	02		24-61-24	ALL
	C	9	E	W0040	ZZQR	02		24-61-61	YC062-YR328
	K	9	E	W0040	ZZQX	02		24-51-21	YC051-YC059, YD151-YD158
	K	9	E	W0040	ZZQX	02		24-51-25	YC060-YC070, YD160-YR328
	B	9	E	W0041	0010	20		34-61-18	YC051-YC058
	B	9	E	W0041	0010	20		31-32-15	YC059-YR328
	B	9	E	W0044	0519	20		34-61-18	YC051-YC058
	B	9	E	W0044	0519	20		31-32-15	YC059-YR328
	C	9	E	W0044	6202	18		24-61-61	YC062-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB5000

Page 17 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5180		SEEOTHERPARTS					260/243/L031		ALL
TB5180	A	MS27212-2-1					P018-00/ /		ALL
TB5180	B	MS27212-2-12					P018-00/ /		ALL
TB5180	C	MS27212-2-9					P018-00/ /		ALL
TB5180	D	MS27212-2-10					P018-00/ /		ALL
TB5180	E	MS27212-2-10					P018-00/ /		ALL
TB5180	F	MS27212-2-4					P018-00/ /		YD157-YR328
TB5180	G	MS27212-2-14					P018-00/ /		ALL
	A	1	E	W0018	5501	20		33-17-11	ALL
	E	1	E	W0020	6001	12		24-51-11	YC051-YC059, YD151-YD158
	E	1	E	W0020	6001	12		24-51-13	YC060-YC070, YD160-YR328
	D	1	E	W0020	6020	14		24-61-23	YC051-YD157
	D	1	E	W0020	6020	16		24-61-23	YD158-YL963, YN231-YN235
	D	1	E	W0020	6020	12		24-61-23	YL964-YL999, YN236-YR328
	D	1	E	W0020	6049	16		24-61-23	YC051-YD155
	B	1	E	W0020	6053	16		24-61-41	YC051-YD155
	B	1	E	W0020	6054	10		24-61-41	YC051-YD155
	D	1	E	W0020	6100	12		24-61-23	YC051-YC052
	D	1	E	W0020	6135	10		24-61-23	YC053-YD158
	D	1	E	W0020	6197	10		24-61-23	YD160-YR328
	B	1	E	W0020	6264	10		24-61-41	YL955-YL999, YN236-YR328
	E	1	E	W0020	ZZQC	02		24-51-11	YC051-YC059, YD151-YD158
	E	1	E	W0020	ZZQC	02		24-51-13	YC060-YC070, YD160-YR328
	B	1	E	W0020	ZZQF	02		24-61-41	YD157-YR328
	F	1	E	W0020	ZZQG	02		24-54-11	YD157-YR328
	F	1	E	W0040	0501	12		24-54-11	YD157-YR328
	B	1	E	W0040	0503	10		24-61-41	ALL
	E	1	E	W2134	0501	10		24-51-11	YC051-YD158
	E	1	E	W2134	0501	10		24-51-13	YD160-YR328
	C	1	E	W5122	0543	18		24-52-11	ALL
	D	1	E	W6424	0002	10		24-61-23	ALL
	B	10	E	W0020	6137	18		24-61-51	YC053-YD155
	B	10	E	W0040	0515	18		24-61-51	YC053-YD151
	B	10	E	W0040	0515	12		24-61-51	YD152-YD155
	E	2	E	W0020	6007	16		24-51-11	YC051-YD158
	E	2	E	W0020	6007	16		24-51-13	YD160-YR328
	D	2	E	W0020	6021	12		24-51-21	YC051-YD158
	D	2	E	W0020	6021	12		24-51-23	YD160-YR328
	F	2	E	W0020	6034	14		24-54-11	YD157-YR328
	F	2	E	W0020	6035	18		24-54-11	YD157-YR328
	B	2	E	W0020	6053	16		24-61-41	YD157-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB5100

Page 1

Nov 12/2012





# 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5180		SEEOTHERPARTS (continued)					260/243/L031		ALL
TB5180	A	MS27212-2-1 (continued)					P018-00/ /		ALL
TB5180	B	MS27212-2-12 (continued)					P018-00/ /		ALL
TB5180	C	MS27212-2-9 (continued)					P018-00/ /		ALL
TB5180	D	MS27212-2-10 (continued)					P018-00/ /		ALL
TB5180	E	MS27212-2-10 (continued)					P018-00/ /		ALL
TB5180	F	MS27212-2-4 (continued)					P018-00/ /		YD157-YR328
TB5180	G	MS27212-2-14 (continued)					P018-00/ /		ALL
	B	2	E	W0020	6054	10		24-61-41	YD157-YL954, YN231-YN235
	B	2	E	W0020	6060	16		24-61-52	YC051-YD155
	C	2	E	W0020	6065	18		24-52-11	ALL
	E	2	E	W0020	6102	16		24-51-11	YC051-YC059, YD151-YD158
	E	2	E	W0020	6102	16		24-51-13	YC060-YC070, YD160-YR328
	F	2	E	W0020	6139	18		24-54-11	YD157-YR328
	B	2	E	W0020	6206	16		24-61-41	YD160-YR328
	E	2	E	W0020	ZZQC	02		24-51-11	YC051-YC059, YD151-YD158
	E	2	E	W0020	ZZQC	02		24-51-13	YC060-YC070, YD160-YR328
	B	2	E	W0020	ZZQF	02		24-61-41	YD157-YR328
	F	2	E	W0020	ZZQG	02		24-54-11	YD157-YR328
	B	2	E	W0040	0504	10		24-61-52	YC051-YD155
	C	2	E	W5122	0542	18		24-52-11	ALL
	D	2	E	W6424	0009	10		24-51-21	YC051-YC055, YD151-YD158
	D	2	E	W6424	0009	10		24-51-23	YC056-YC070, YD160-YR328
	E	3	E	W0020	6002	16		24-51-11	YC051-YC058
	E	3	E	W0020	6002	12		24-51-11	YC059, YD151-YD158
	E	3	E	W0020	6002	12		24-51-13	YC060-YC070, YD160-YR328
	D	3	E	W0020	6019	16		24-51-21	YC051-YC059, YD151-YD158
	D	3	E	W0020	6019	16		24-51-23	YC060-YC070, YD160-YR328
	D	3	E	W0020	6022	16		24-51-21	YC051-YD158
	D	3	E	W0020	6022	16		24-51-23	YD160-YR328
	B	3	E	W0020	6034	14		24-54-11	YC051-YD155
	B	3	E	W0020	6035	18		24-54-11	YC051-YD155
	B	3	E	W0020	6060	16		24-61-52	YD157-YR328
	C	3	E	W0020	6090	18		24-52-11	YC051-YN260
	B	3	E	W0020	6139	18		24-54-11	YC051-YD155
	C	3	E	W0020	6273	16		24-52-11	YN501-YR328
	E	3	E	W0020	ZZQD	02		24-51-11	YC051-YC059, YD151-YD158
	E	3	E	W0020	ZZQD	02		24-51-13	YC060-YC070, YD160-YR328
	F	3	E	W0020	ZZQH	02		24-61-51	YD157-YR328
	B	3	E	W0040	0501	12		24-54-11	YC051-YD155

## TERMINAL STRIP LIST

D280A108

91-21-41

Section TB5100

Page 2

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB5180		SEEOTHERPARTS (continued)					260/243/L031		ALL
TB5180	A	MS27212-2-1 (continued)					P018-00/ /		ALL
TB5180	B	MS27212-2-12 (continued)					P018-00/ /		ALL
TB5180	C	MS27212-2-9 (continued)					P018-00/ /		ALL
TB5180	D	MS27212-2-10 (continued)					P018-00/ /		ALL
TB5180	E	MS27212-2-10 (continued)					P018-00/ /		ALL
TB5180	F	MS27212-2-4 (continued)					P018-00/ /		YD157-YR328
TB5180	G	MS27212-2-14 (continued)					P018-00/ /		ALL
	B	3	E	W0040	0504	10		24-61-52	YD157-YR328
	F	3	E	W0040	0515	12		24-61-51	YD157-YR328
	E	3	E	W2134	0502	10		24-51-11	YC051-YD158
	E	3	E	W2134	0502	10		24-51-13	YD160-YR328
	C	3	E	W5122	0541	18		24-52-11	ALL
	D	3	E	W6424	0010	10		24-51-21	YC051-YC055, YD151-YD158
	D	3	E	W6424	0010	10		24-51-23	YC056-YC070, YD160-YR328
	E	4	E	W0020	6008	14		24-51-11	YC051-YC059, YD151-YD158
	E	4	E	W0020	6008	14		24-51-13	YC060-YC070, YD160-YR328
	D	4	E	W0020	6023	16		24-51-21	YC051-YC059, YD151-YD158
	D	4	E	W0020	6023	16		24-51-23	YC060-YC070, YD160-YR328
	B	4	E	W0020	6032	16		24-53-11	YC051-YC053
	B	4	E	W0020	6032	12		24-53-11	YC054-YR328
	C	4	E	W0020	6040	08		24-61-21	ALL
	C	4	E	W0020	6045	08		24-61-21	YC051-YL954, YN231-YN235
	E	4	E	W0020	6103	16		24-51-11	YC051-YC059, YD151-YD158
	E	4	E	W0020	6103	16		24-51-13	YC060-YC070, YD160-YR328
	F	4	E	W0020	6137	18		24-61-51	YD157-YR328
	C	4	E	W0020	6263	08		24-61-21	YL955-YL999, YN236-YR328
	C	4	E	W0020	ZZQB	02		24-61-21	ALL
	E	4	E	W0020	ZZQD	02		24-51-11	YC051-YC059, YD151-YD158
	E	4	E	W0020	ZZQD	02		24-51-13	YC060-YC070, YD160-YR328
	F	4	E	W0020	ZZQH	02		24-61-51	YD157-YR328
	B	4	E	W0040	0507	10		24-53-11	YC051-YN236, YN501-YR328
	C	4	E	W2136	0001	08		24-61-21	ALL
	D	4	E	W6424	0011	10		24-51-21	YC051-YC055, YD151-YD158
	D	4	E	W6424	0011	10		24-51-23	YC056-YC070, YD160-YR328
	E	5	E	W0020	6003	16		24-51-11	YC051-YC058
	E	5	E	W0020	6003	14		24-51-11	YC059, YD151-YD158
	E	5	E	W0020	6003	14		24-51-13	YC060-YC070, YD160-YL959, YN231-YN235
	C	5	E	W0020	6041	10		24-61-21	YC051-YC052

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB5100

Page 3

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5180		SEEOTHERPARTS (continued)					260/243/L031		ALL
TB5180	A	MS27212-2-1 (continued)					P018-00/ /		ALL
TB5180	B	MS27212-2-12 (continued)					P018-00/ /		ALL
TB5180	C	MS27212-2-9 (continued)					P018-00/ /		ALL
TB5180	D	MS27212-2-10 (continued)					P018-00/ /		ALL
TB5180	E	MS27212-2-10 (continued)					P018-00/ /		ALL
TB5180	F	MS27212-2-4 (continued)					P018-00/ /		YD157-YR328
TB5180	G	MS27212-2-14 (continued)					P018-00/ /		ALL
	B	5	E	W0020	6057	18		24-61-61	ALL
	C	5	E	W0020	6096	14		24-61-21	YD158-YR328
	C	5	E	W0020	6127	14		24-61-21	YC053-YD157
	E	5	E	W0020	6147	14		24-51-13	YL963-YL999, YN236-YR328
	C	5	E	W0020	ZZQB	02		24-61-21	ALL
	E	5	E	W0020	ZZQE	02		24-51-11	YC051-YC059, YD151-YD158
	E	5	E	W0020	ZZQE	02		24-51-13	YC060-YC070, YD160-YR328
	B	5	E	W0040	0508	18		24-61-61	ALL
	E	5	E	W2134	0503	10		24-51-11	YC051-YD158
	E	5	E	W2134	0503	10		24-51-13	YD160-YR328
	E	6	E	W0020	6009	10		24-51-11	YC051-YC059, YD151-YD158
	E	6	E	W0020	6009	10		24-51-13	YC060-YC070, YD160-YR328
	B	6	E	W0020	6033	18		24-53-11	ALL
	E	6	E	W0020	6104	16		24-51-11	YC051-YC052, YD158
	E	6	E	W0020	6104	14		24-51-11	YC053-YC059, YD151-YD157
	E	6	E	W0020	6104	14		24-51-13	YC060-YC070
	E	6	E	W0020	6104	16		24-51-13	YD160-YR328
	E	6	E	W0020	ZZQE	02		24-51-11	YC051-YC059, YD151-YD158
	E	6	E	W0020	ZZQE	02		24-51-13	YC060-YC070, YD160-YR328
	B	6	E	W0040	0505	12		24-53-11	ALL
	B	7	E	W0020	0892	08		24-53-11	ALL
	E	7	E	W0020	6016	16		24-51-12	YN231-YN501
	B	7	E	W0020	6028	14		24-53-11	ALL
	E	7	E	W0020	6077	12		24-51-11	YC051-YC059
	E	7	E	W0020	6077	12		24-51-12	YC060-YL999, YR301-YR328
	B	7	E	W0020	ZZQA	02		24-53-11	ALL
	E	7	E	W2134	0504	10		24-51-11	YC051-YD158
	E	7	E	W2134	0504	10		24-51-12	YD160-YR328
	E	8	E	W0020	6017	14		24-51-12	YN231-YN501
	B	8	E	W0020	6027	14		24-53-11	ALL
	E	8	E	W0020	6079	10		24-51-11	YC051-YC059, YD151-YD158

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB5100

Page 4

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5180		SEEOTHERPARTS (continued)					260/243/L031		ALL
TB5180	A	MS27212-2-1 (continued)					P018-00/ /		ALL
TB5180	B	MS27212-2-12 (continued)					P018-00/ /		ALL
TB5180	C	MS27212-2-9 (continued)					P018-00/ /		ALL
TB5180	D	MS27212-2-10 (continued)					P018-00/ /		ALL
TB5180	E	MS27212-2-10 (continued)					P018-00/ /		ALL
TB5180	F	MS27212-2-4 (continued)					P018-00/ /		YD157-YR328
TB5180	G	MS27212-2-14 (continued)					P018-00/ /		ALL
	E	8	E	W0020	6079	10		24-51-12	YC060-YC070, YD160-YL999, YR301-YR328
	B	8	E	W0020	6091	08		24-53-11	YC051-YD157
	B	8	E	W0020	6193	08		24-53-11	YD158-YR328
	B	8	E	W0020	ZZQA	02		24-53-11	ALL
	B	8	E	W0040	0506	08		24-53-11	ALL
	E	8	E	W2134	0505	10		24-51-11	YC051-YD158
	E	8	E	W2134	0505	10		24-51-12	YD160-YR328
	E	9	E	W0020	6018	14		24-51-12	YN231-YN501
	B	9	E	W0020	6037	18		24-61-31	YC051-YD157
	B	9	E	W0020	6038	12		24-61-31	ALL
	E	9	E	W0020	6081	10		24-51-11	YC051-YC059, YD151-YD158
	E	9	E	W0020	6081	10		24-51-12	YC060-YC070, YD160-YL999, YR301-YR328
	B	9	E	W0020	6186	16		24-61-31	YD158-YR328
	B	9	E	W0040	0502	12		24-61-31	ALL
	E	9	E	W2134	0506	10		24-51-11	YC051-YD158
	E	9	E	W2134	0506	10		24-51-12	YD160-YR328

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB5100

Page 5 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	Terminal No.	Part Number		Type	Bundle	Wire No.	GA	Station / WL / BL		Diagram	Effectivity
		Fix	Term					CO			
I	TB5210		MS27212-2-14					E002-01/ /			ALL
I			1	E	W0212	0050	08			24-32-11	ALL
I			1	E	W5036	0502	08			24-32-11	ALL
I	TB5220		SEEOTHERPARTS					E002-02/ /			ALL

For training purposes only!

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB5200

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

	Terminal No.	Part Number		Type	Bundle	Wire No.	GA	Station / WL / BL		Effectivity
		Fix	Term					CO	Diagram	
I	TB5420		MS27212-3-2					387/181/R048		ALL
I			1	P	W0422	0133	08		24-32-11	ALL
I			1	P	W5612	0518	08		24-32-11	ALL
I			2	P	W0422	0126	08		24-32-11	ALL
I			2	P	W5036	0506	08		24-32-11	ALL

For training purposes only!

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB5400

Page 1 End

Nov 12/2012



Terminal No.		Part Number		Type	Bundle	Wire No.	GA	Station / WL / BL		Diagram	Effectivity
	Fix	Term						CO			
<b>TB5801</b>		<b>S280W555-510</b>						<b>374/188/L060</b>			<b>YC051-YL999, YR301-YR328</b>
<b>TB5801</b>	<b>X</b>	<b>S280W555-102</b>						<b>374/188/L060</b>			<b>ALL</b>
	X	A001	1A	W2508	0533	24				24-31-11	YC051-YD158, YL951-YR328
	X	A001	1A	W6210	0514	24				24-31-11	ALL
	X	A002	1A	W2508	0528	24				24-31-11	YC051-YD158, YL951-YR328
	X	A002	1A	W6210	0519	24				24-31-11	ALL
	X	A003	1A	W2508	0531	24				24-31-12	YC051-YD158, YL951-YR328
	X	A003	1A	W5110	0527	24				24-31-12	ALL
	X	B001	1A	W2508	0534	24				24-31-12	YC051-YD158, YL951-YR328
	X	B001	1A	W5110	0529	24				24-31-12	ALL
	X	B002	1A	W2508	0535	24				24-31-12	YC051-YD158, YL951-YR328
	X	B002	1A	W5110	0530	24				24-31-12	ALL

## TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB5800

Page 1 End

Nov 12/2012



## 737-700/800 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB6101	Y	S280W555-104					E006-01/ /		YC051-YD170
TB6101	Z	S280W555-108					E006-01/ /		YC051-YD170
	Z	A021	1A	W0613	0001	20		23-15-11	YC051-YD157
	Z	A021	1A	W0613	0002	20		23-15-11	YC051-YD157
	Z	A021	1A	W0613	0005	20		23-15-11	YC051-YD157
	Z	A021	1A	W0613	0008	20		23-15-11	YC051-YD157
	Z	A021	1A	W0613	0033	20		23-15-11	YC051-YD157
	Y	A025	1A	W0613	0011	24		31-31-17	YC051-YD157
	Y	A025	1A	W0613	0014	24		23-15-12	YC051-YD157
	Y	A025	1A	W0613	0016	24		23-15-12	YC051-YD157
	Y	A029	1A	W0613	2004R	24		23-15-12	YC058-YD157
	Y	A029	1A	W0613	2031R	24		23-15-12	YC058-YD157
	Y	A031	1A	W0613	2004Z			23-15-12	YC058-YD157
	Y	A031	1A	W0613	2031Z			23-15-12	YC058-YD157
	Y	A033	1A	W0613	2005B	24		23-15-12	YC058-YD157
	Y	A033	1A	W0613	2032B	24		23-15-12	YC058-YD157
	Y	A035	1A	W0613	2005Z			23-15-12	YC058-YD157
	Y	A035	1A	W0613	2032Z			23-15-12	YC058-YD157
	Y	B025	1A	W0613	0012	24		31-31-17	YC051-YD157
	Y	B025	1A	W0613	0013	24		23-15-12	YC051-YD157
	Y	B025	1A	W0613	0015	24		23-15-12	YC051-YD157
	Y	B029	1A	W0613	2004B	24		23-15-12	YC058-YD157
	Y	B029	1A	W0613	2031B	24		23-15-12	YC058-YD157
	Y	B033	1A	W0613	2005R	24		23-15-12	YC058-YD157
	Y	B033	1A	W0613	2032R	24		23-15-12	YC058-YD157

### TERMINAL STRIP LIST

D280A108

**91-21-41**

Section TB6100

Page 1 End

Nov 12/2012